

Additional Information

Specifications


Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 451.5 mm x 317.0 mm x 305.5 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	220 W RMS

Design and specifications are subject to change without notice.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

Replacement of battery

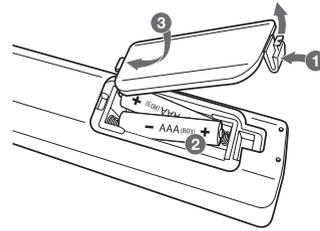

POWER: This unit operates on a mains supply of 200 - 240 V ~, 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



SIMPLE MANUAL

DVD Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

OL45D


HDMI[™]
HIGH-DEFINITION MULTIMEDIA INTERFACE



www.lg.com
Copyright © 2019 LG Electronics Inc. All Rights Reserved.



Front panel

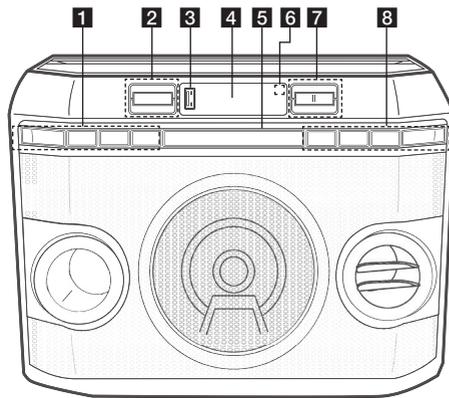

1 (Standby)

Turns the power on or off.

F (Function)

- Selects the function and input source.
- Press and hold to adjust delay time when using PARTY LINK with AUX.

VOL (Volume) -/+

Adjusts speaker volume.

2 MIC (Microphone) ECHO / DEMO

- Selects ECHO mode.
- In power off status, if you press MIC ECHO / DEMO, show demo mode.

VOCAL EFFECTS

Selects various vocal effects mode.

LIGHTING

Selects the lighting mode.

3 USB Port

You can play sound files by connecting the USB device.

4 Display window

5 Disc tray

6 (Remote sensor)

7 (Play/Pause)

Starts or pauses playback.

⏮/⏭ (Skip/Scan)

- Skips backward or forward.
- Scans for a section within a track/file/chapter.
- Selects the radio stations.

⏹ (Stop)

- Stops playback or cancels DELETE function.

8 (Open/Close)

Opens and closes the disc tray.


MIC VOL (Microphone volume) -/+

Adjust microphone volume.

TWIN

Connects two speakers for TWIN mode in WIRELESS PARTY LINK.

Rear panel

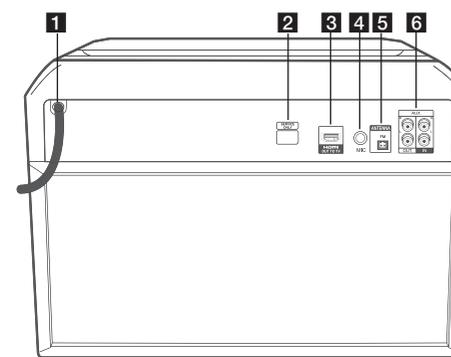

1 Power cord

2 SERVICE ONLY: S/W download connector.

3 HDMI OUT TO TV: Connect to TV.

4 MIC (Microphone) jack

5 ANTENNA (FM)

6 AUX IN (L/R): Connect an auxiliary device.

AUX OUT (L/R): Connect to an input of external device.


1

TV Connection

HDMI Connection :

Connect with the unit and TV using HDMI .

- 1 Connect the unit to the TV using HDMI cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Follow the instructions on the TV screen using remote control.

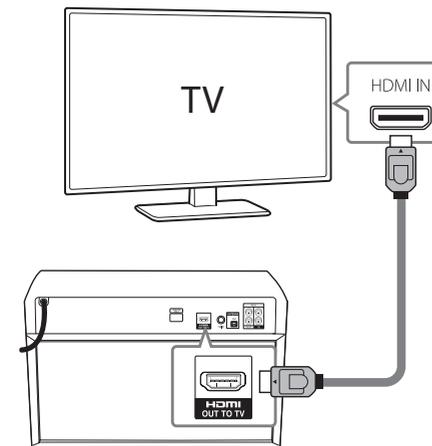

2

Home Menu

Home menu appears on the TV screen. Enjoy various functions on the player.



Home menu only appears on DVD/CD function.

Controller App



Download the **LG XBOOM** App to your device.
(Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>