



SIMPLE MANUAL

Mini Hi-Fi Audio

ENGLISH

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit
<http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL

OL90DK




MFL71040208


1907_Rev01

www.lg.com

 Copyright © 2019-2024 LG Electronics Inc. All Rights Reserved.



Top panel

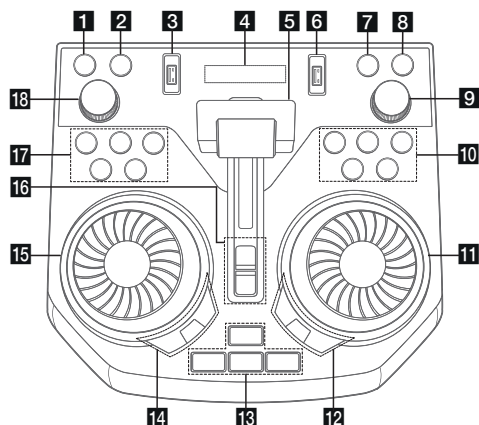 

- 1** (Standby)
Turns the power on or off.
- 2** **DEMO**
In power off status, if you press **DEMO**, show demo mode.
- 3** USB 1 Port
You can play sound files by connecting the USB device.
- 4** Display window
- 5** **PARTY ACCELERATOR** lever
Slide the lever to create a party atmosphere.
- 6** USB 2 Port
You can play sound files by connecting the USB device.
- 7** **F (Function)**
Selects the function and input source.
- 8** **TWIN**
Connects two speakers for TWIN mode in WIRELESS PARTY LINK.
- 9** **MASTER VOL. (Volume) -/+**
Adjusts speaker volume.
- 10** (Skip/Scan)
- Skips backward or forward.
- Scans for a section within a track/file/chapter.
- Selects the radio stations.
 (Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.
 (Stop)
Stops playback or cancels DELETE function.
 (Open/Close)
Opens and closes the disc tray.

- 11** **DJ SCRATCHER / SEARCH & MULTI**
- Turns clockwise or counterclockwise to make scratch sound.
- Searches a folder or a file (USB only).
- 12** **SPECIAL EQ / BASS BLAST (or BASS BLAST+)**
- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.
SEARCH
Moves to folder or file in selection mode (USB only).
OK
Selects a folder when searching a file.
- 13** **PARTY STARTER**
- In power off state, this function turns on the unit with Party Kick Starter sound.
- In power on state, this function mixes the music with Party Kick Starter sound.
CLUB, DRUM, USER (DJ PAD)
Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with "LG XBOOM" app.)
1, 2, 3 (DJ PAD)
Press a desired sound pad.
- 14** **DJ EFFECT**
Selects a desired DJ effect.
USER EQ
Selects the equalizer created by your own.
LIGHTING
Selects the lighting mode.
- 15** **DJ SCRATCHER / LEVEL CONTROL**
- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Adjust DJ EFFECT level.
- Selects the vocal effects.
- Selects the lighting effects.
- 16** **PARTY ACCELERATOR MODE**
Selects PARTY ACCELERATOR MODE.
DJ LOOP
Selects DJ LOOP mode.
(DJ LOOP mode can use during USB playback.)

17 KEY CHANGER (♭ / #)

Changes the key to suit your vocal range.

VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

VOCAL EFFECTS

Selects various vocal effects mode.

 
MIC ECHO

Selects ECHO mode.


18 MIC VOL. (Microphone Volume) -/+

Adjust microphone volume.

Front panel / Rear panel

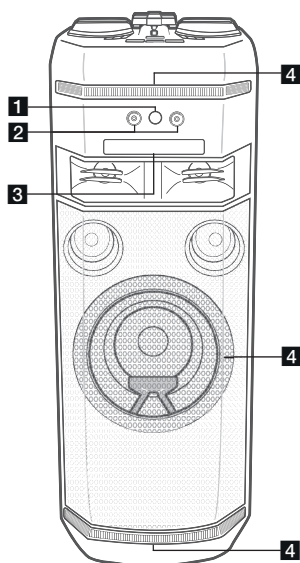

 - 1** **R** (Remote sensor)
- 2** **MIC**(Microphone) 1/2 jack
- 3** Disc tray
- 4** Lighting

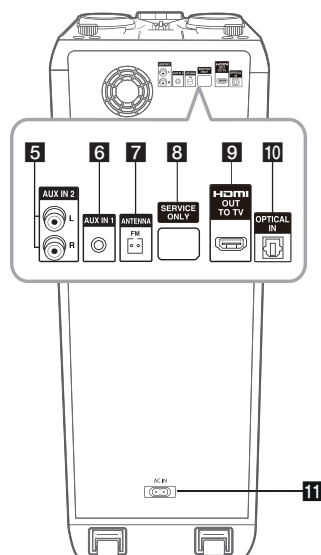

- 5** **AUX IN 2 (L/R)**: Connect an auxiliary device.
- 6** **AUX IN 1**: Connect a portable device.
- 7** **ANTENNA FM**
- 8** **SERVICE ONLY**: S/W download connector
- 9** **HDMI OUT TO TV**: Connect to TV
- 10** **OPTICAL IN**: Connect an optical device.
- 11** **AC IN** socket

 
1

TV Connection

HDMI Connection :

Connect with the Player and TV using HDMI .

- ① Connect the Player to the TV using HDMI cable.
- ② Set the input selector to HDMI on the TV.
- ③ Follow the instructions on the TV screen using remote control.

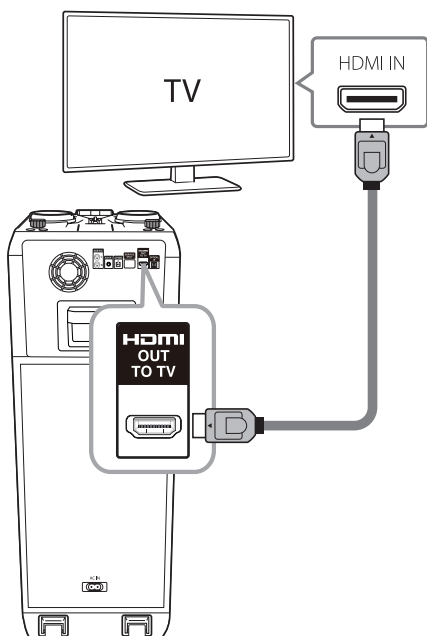

2

Home Menu

Home menu appears on the TV screen. Enjoy various functions on the player.



 
Home menu only appears on DVD/CD function.

Controller App



Download the **LG XBOOM** App to your device.
(Android only)


LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 330.0 mm x 925.0 mm x 360.0 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	1,100 W RMS

Design and specifications are subject to change without notice.

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.


Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds

Replacement of battery

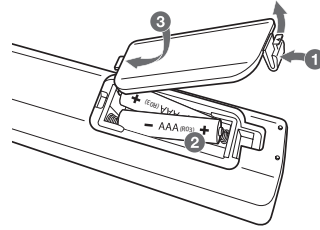

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type Mini Hi-Fi Audio is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.





Российская Федерация

Импортер ООО "ЛГ Электроникс Рус"

Адрес импортера: 143160, Российская Федерация, Московская область, Рузский городской округ, территория Минское шоссе, километр 86-й, дом 9

Адрес производителя : ЛГ Электроникс (Хужоу) Инк.

516006, Китай, пров. Гуандонг, г. Хужоу, Промышленная зона
Жонгкай, Индустриальный парк Хутай, ХуФенг Донг Уи Роуд, 13.

Сделано в Китае

Україна

Організація яка надає післяпродажне обслуговування та ремонт:

ТОВ «ЕКОВІС ІНТЕРНЕШНЛ», Україна, 02002, м. Київ, вул. Євгена Сверстюка, 19
Тел.. 0-800-303-000

Вироблено в : ЛГ Електронікс (Хужоу) Інк.

516006, Китай, пров. Гуандонг, м. Хужоу, Промислова зона Жонгкай,
Індустріальний парк Хутай, ХуФенг Донг Уі Роуд, 13.

Қазақстан Республикасы

Импорттаушы ЖШС "ЭЛ Джи Электроникс Алматы Қазақстан", 050061, Алматы қ., Көкорай көшесі, 2/9

Өндірушінің мекенжайы: LG Electronics(Huizhou) Inc.

516006, Қытай, Гуандонг ауданы, Хужоу қаласы,
Жонгкай өнеркәсіптік аймағы, Хутай Индустриялық саябағы,
ХуФенг Донг Уи Роуд, 13.

Қазақстан Республикасы территориясында тұтынушылардан келіп түскен талаптар мен ұсыныстарды қарайтын және тауарды жөндеу мен техникалық қызмет көрсететін ұжым:

ЖШС «Эл Джи Электроникс Алматы Қазақстан», 050061, Қазақстан Республикасы, Алматы қ., Көкорай көшесі, 2/9. Басқа сервис орталықтары жайында мағлұматты "Тұтынушыға қызмет көрсету орталығына" телефон шалу арқылы білуге болады.

Қытайда жасалған