



SIMPLE MANUAL


WIRELESS SOUND BAR

SH7Q



MFL71894822

2204_Rev01



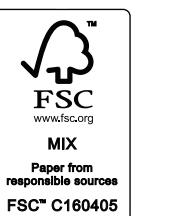


www.lg.com

Copyright © 2023 LG Electronics Inc. All Rights Reserved.



HIGH-DEFINITION MULTIMEDIA INTERFACE

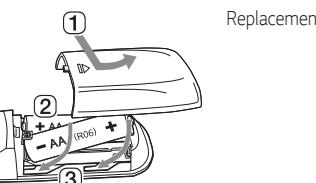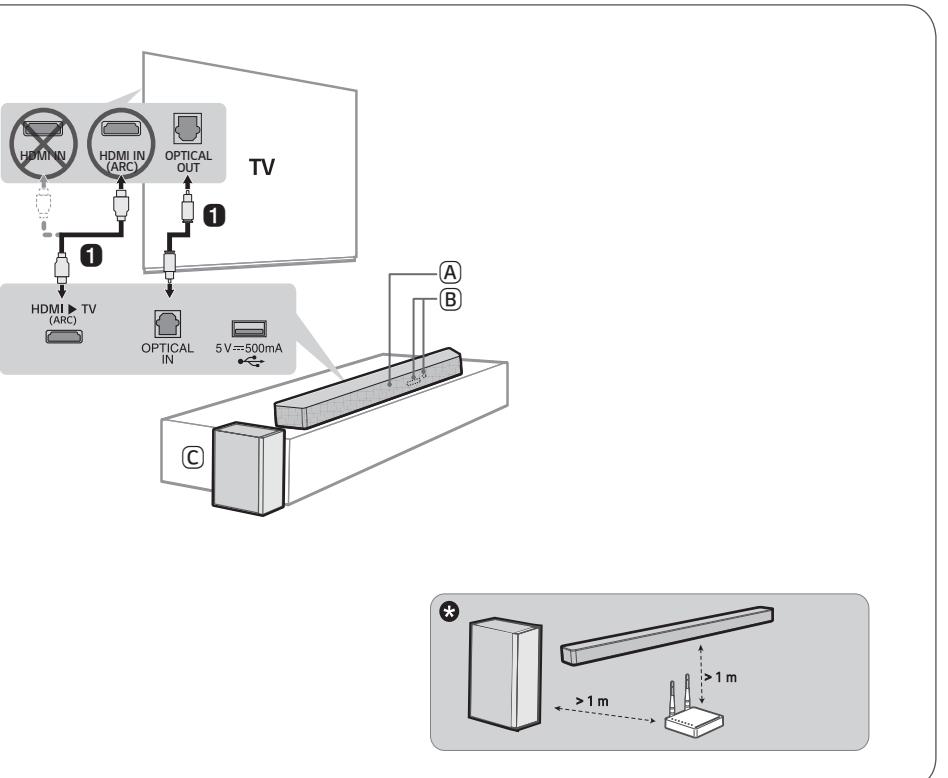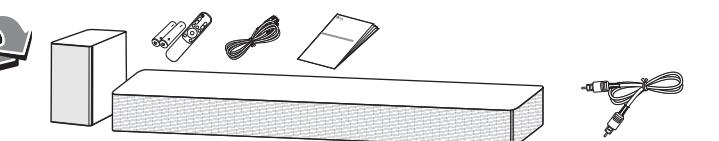

Replacement of Battery

ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



(C) Wireless Subwoofer - Install it close to the sound bar.

(A) Sound bar

(B) Status Display / Remote Control Receiver

1 Connect the sound bar to your TV via an optical cable or an HDMI cable.

2 Connect to power in the following order: wireless subwoofer → sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LED on the wireless subwoofer will light up green.

3 Using the product with your TV

① Press the Function (A) button repeatedly until "OPT/HDMI ARC" appears on the status display.

② On your TV's settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].

③ When the TV is properly connected to the product, "OPT" or "ARC" will appear on the status display with a sound.

4 Connecting the product to your smartphone via Bluetooth

① Tap the Settings (A) button on your smartphone and select Bluetooth. Turn on the Bluetooth function. (Off > On)

② Press the Bluetooth pair (A) button. After a moment, you will see "BT READY" on the status display.

③ Find and tap the product on your smartphone. The product appears as "LG SH7Q (XX)".

④ When the product is connected to your smartphone via Bluetooth, you can see the status display change from "PAIRED" → "Connected Bluetooth device name" → "BT".

5 Connecting to the LG Sound Bar app

① Find and install the LG Sound Bar app on Google Play or App Store from your smartphone.

② You can get more information regarding its use by selecting [Help] in [Setting].



If you see a red LED on the front of the wireless subwoofer, it means that the sound bar is not connected to the subwoofer. If this is the case, connect them in the following order.

① Press the Power (A) button on the sound bar to turn it off.

② Press the PAIRING button on the back of the disconnected wireless subwoofer. Check if LED blinks green.

- If you still see a red LED on the front of the wireless subwoofer press and hold the button on the back of the subwoofer again.

③ Press the Power (A) button on the sound bar to turn it on.

④ When the connection is established, you will see a green LED light on the front of the wireless subwoofer.

* Keep the sound bar the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

* Some speakers may not make sound depend on the input source. Select CINEMA sound mode to listen through all speakers.

• Design and specifications are subject to change without notice.

• Google Play is a trademark of Google LLC.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING:

- TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
- Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION:

- Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

- The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.
- The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.
- For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

For models using an adapter

Only use the AC adapter supplied with this device. Do not use a power supply from another device or another manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty.

For models using a battery

This device is equipped with a portable battery or accumulator. **CAUTION:** Risk of fire or explosion if the battery is replaced by an incorrect type.

For models using a built-in battery

Do not store or transport at pressures lower than 11.6 kPa and at above 15,000 m altitude.

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing (of water or any form of liquid) or ingress of moisture.

ENGLISH

Specification

Power requirements

- Refer to the main label.

Power consumption

- Refer to the main label.

Dimensions (W x H x D): Approx. 1200.0 mm x 97.0 mm x 145.0 mm

Bus Power Supply (USB): 5 V \equiv 500 mA

Amplifier (Total RMS Output power): 800 W RMS

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

Symbols

\sim	Refers to alternating current(AC).
\equiv	Refers to direct current(DC).
\square	Refers to class II equipment.
\oplus	Refers to stand-by.
$ $	Refers to "ON" (power).
\triangle	Refers to dangerous voltage.



RF Radiation Exposure Statement

This equipment shall be installed and used at a minimum distance of 20 cm from the human body.