 
 
 
 
 
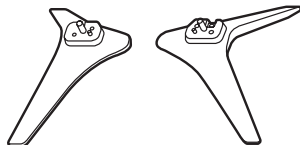 
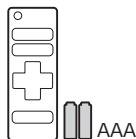 


Quick Start Guide

LED TV
LW340*

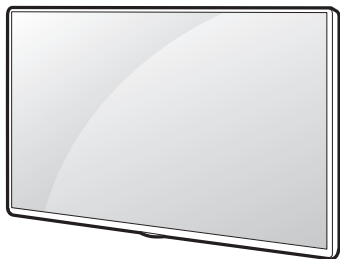

*Images may vary depending on models.

Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

 
 
 
 
 
 
 


www.lg.com



English


- Read **Safety and Reference**.
- For the power supply and power consumption, refer to the label attached to the product.

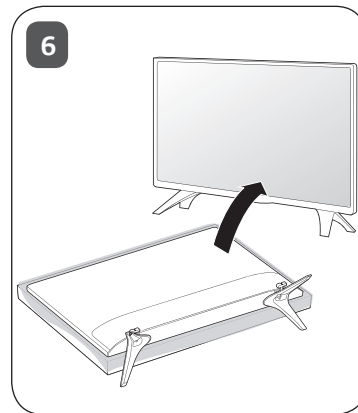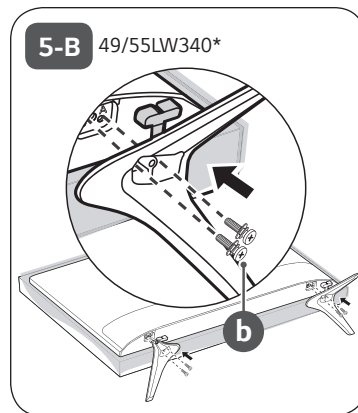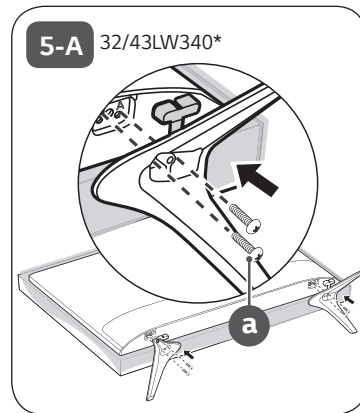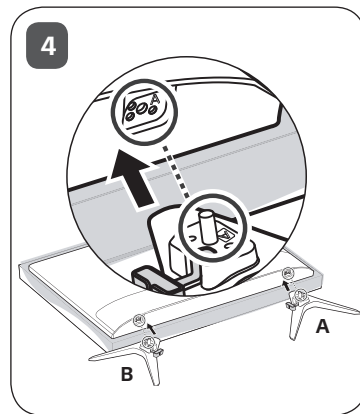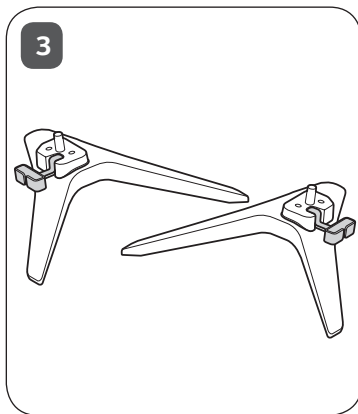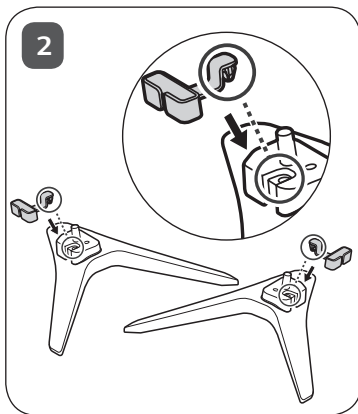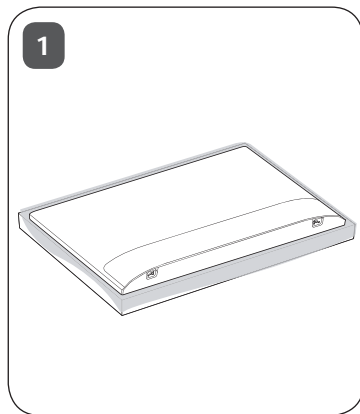


CAUTION

Image shown may differ from your TV.


 
When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

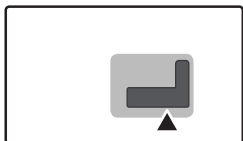


ANTENNA/
CABLE IN

 

HDMI IN

  

USB IN

 

H/P OUT




Satellite IN



NOTE

Image shown may vary depending on model.

 
All connection cables & devices shown in the picture are not included along with the TV set.

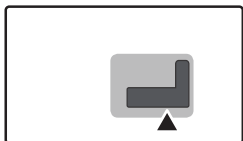

OPTICAL DIGITAL
AUDIO OUT



 
PCMCIA CARD SLOT

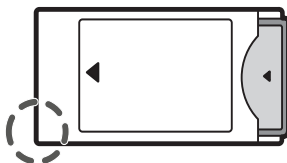


NOTE

Image shown may vary depending on model.

 
All connection cables & devices shown in the picture are not included along with the TV set.

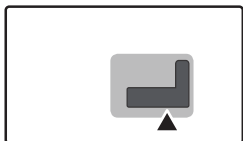

COMPONENT IN

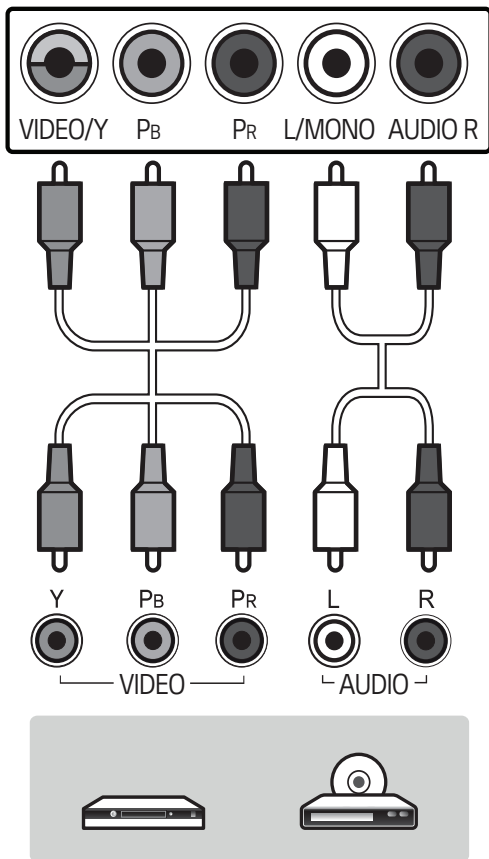 


AV IN

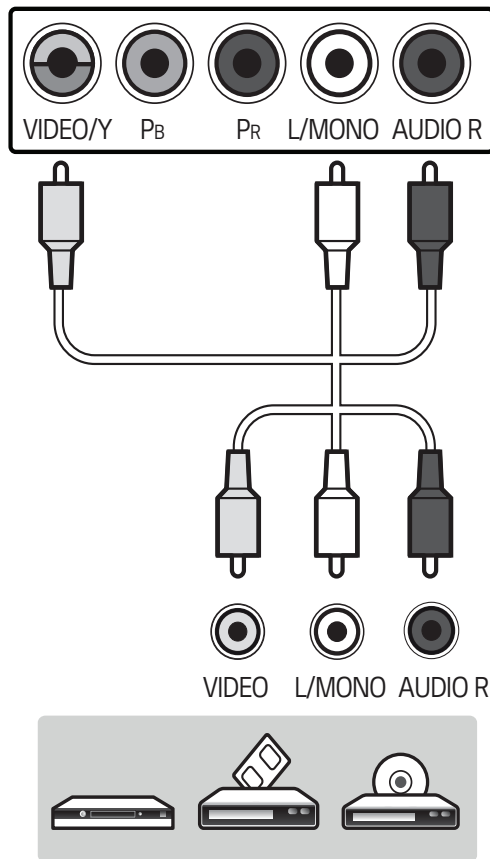 


NOTE

Image shown may vary depending on model.

 
All connection cables & devices shown in the picture are not included along with the TV set.

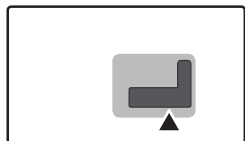

HDMI-DVI IN

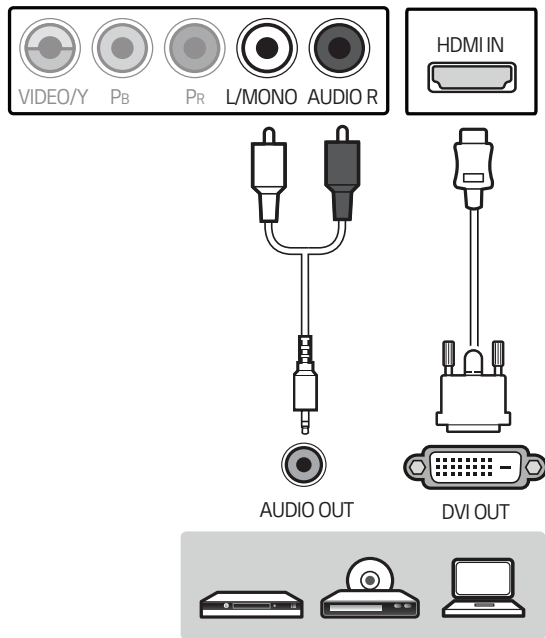 


RGB IN

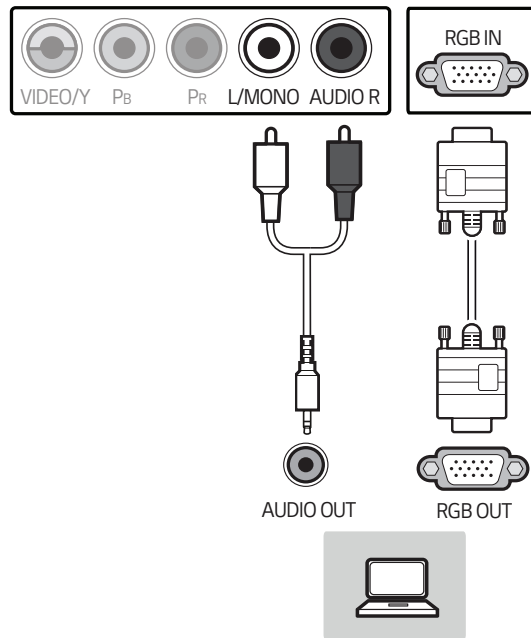  



 
 
NOTE

 
Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included along with the TV set.

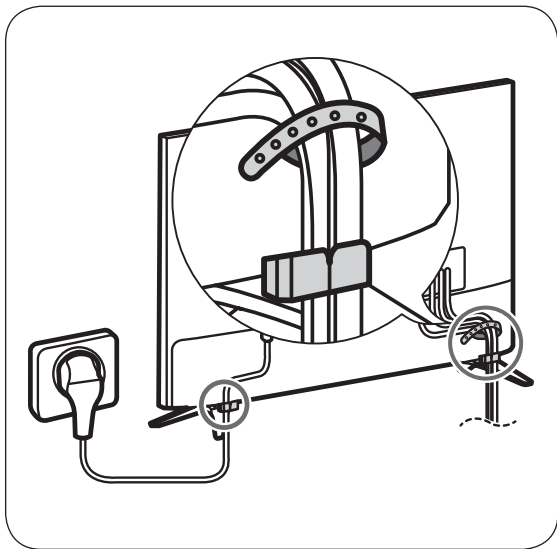

NOTE

  
Image shown may vary depending on model.

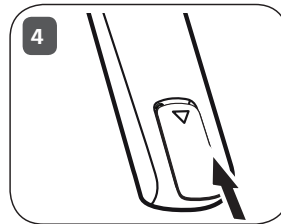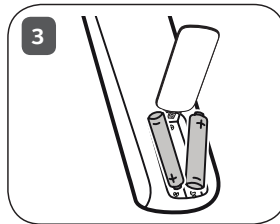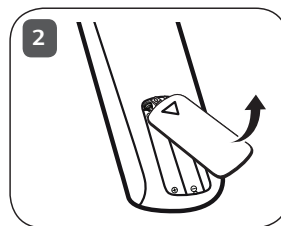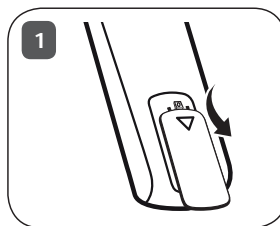

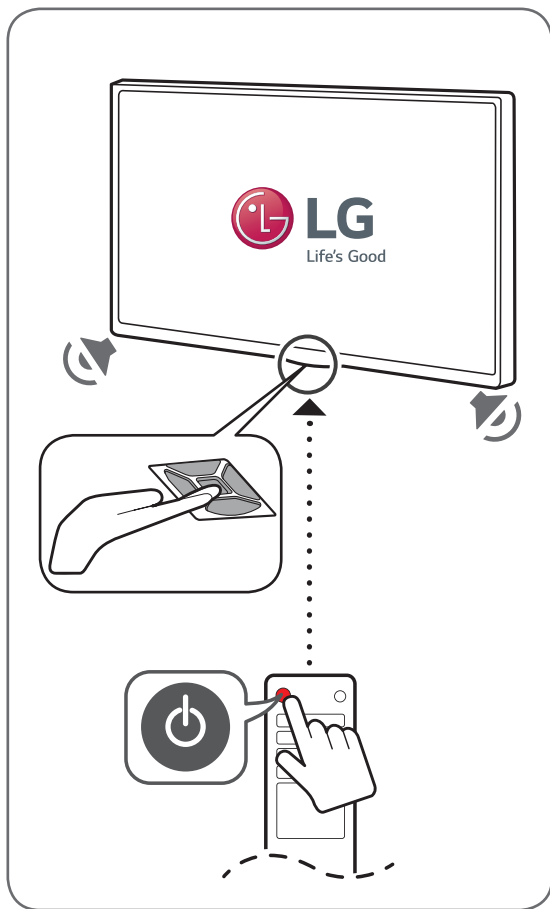

NOTE

 Image shown may vary depending on model.

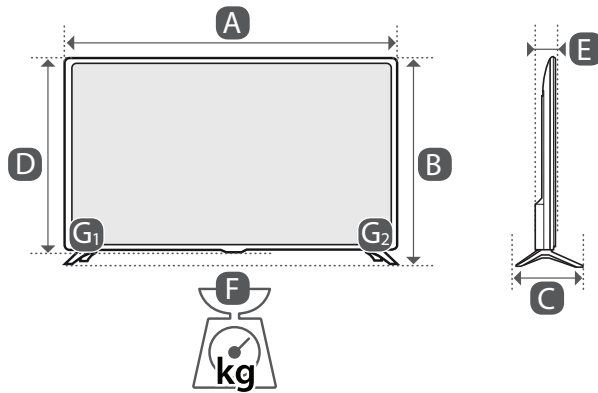

	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	F (kg)	F - (G ₁ + G ₂) (kg)
32LW340C-TA	733	483	170	436	76.3	5.08	4.94
43LW340C-TA	974	620	199	571	79.4	9.45	9.25
49LW340C-TA	1107	702	216	645	79.4	12.1	11.84
55LW340C-TA	1241	775	216	720	63.0	16.6	16.34
Power requirement					AC 100-240 V ~ 50 / 60 Hz		