



SIMPLE MANUAL

# HIGH POWER SPEAKER SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

RL4



MFL71281408

1901\_Rev01

 
ENGLISH	DEUTSCH	FRANÇAIS	NEDERLANDS	ITALIANO	ESPAÑOL	ΕΛΛΗΝΙΚΑ	PORTUGUÊS	MAGYAR
ČESKY	SLOVENČINA	POLSKI	ROMÂNĂ	LATVIEŠŪ	HRVATSKI	SRPSKI	БЪЛГАРСКИ	МАКЕДОНСКИ
SLOVENŠČINA	SHqip	BOSANSKI	SVENSKA	DANSK	NORSK	SUOMI		

[www.lg.com](http://www.lg.com)


Copyright © 2019 LG Electronics Inc. All Rights Reserved.



## Top panel

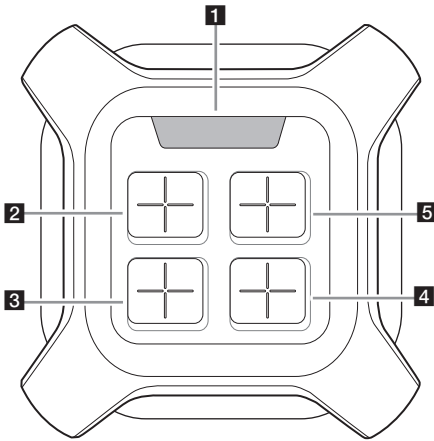

**1** Display window

**2**  (Standby)  
Turns the power on or off.

### LIGHTING

Selects lighting mode.

### TWIN

Connects two speakers for TWIN mode in WIRELESS PARTY LINK.

### SOUND EFFECT / BASS BLAST (or BASS BLAST+)

- Chooses sound impressions.
- Press and hold to select BASS (or BASS+) effect directly.

**3** **AUTO DJ**

Selects the AUTO DJ mode.

### (Play/Pause)

Starts or pauses playback.

### (Skip/Search)

- Skips backward or forward.
- Searches for a section within a file.


**4** **MIC ECHO / DEMO**

- Selects ECHO mode.
- In power off status, if you press **MIC ECHO / DEMO**, show DEMO mode.

### VOCAL EFFECTS

Selects various vocal effects mode.

### KEY CHANGER

Changes the key to suit your vocal range with  (Skip/Search) button.

### VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

**5** **F (Function)**

- Selects the function and input source.
- Press and hold to adjust delay time when using PARTY LINK with AUX

### **MIC** (Microphone) **VOL** (Volume)

Adjusts microphone volume.

### **+/-** (Volume)

Adjusts speaker and microphone volume.

## Controller App



 
Download the **LG XBOOM** App to your device.  
(Android only)

## LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>


## Rear panel

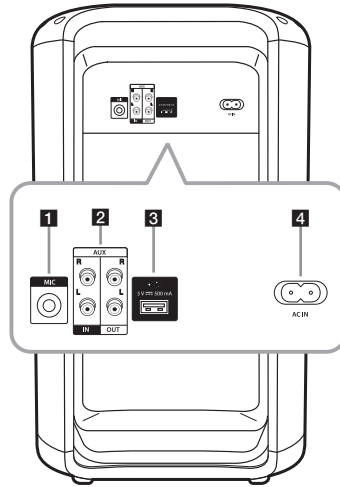


- 1** MIC (Microphone) jack
- 2** AUX IN / OUT (L/R)
- 3** USB port
- 4** AC IN socket

## How to place the unit
 
### Vertical

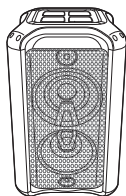


### Horizon

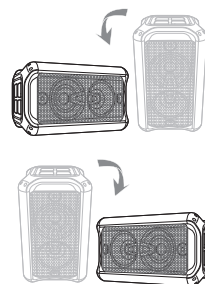 

## Additional Information

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 275 mm X 530 mm X 275 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	150 W RMS

Design and specifications are subject to change without notice.

### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

### How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

### Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type HIGH POWER SPEAKER SYSTEM is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm