


OLED48CX*


Quick Start Guide

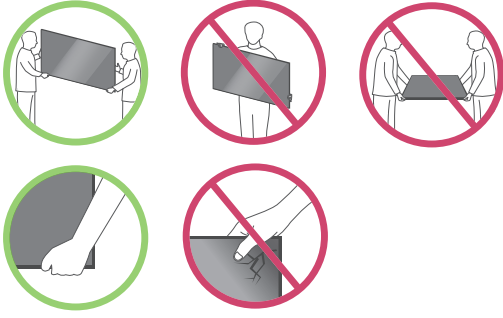



Images shown in manual
may vary depending on model

Unpacking



Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.



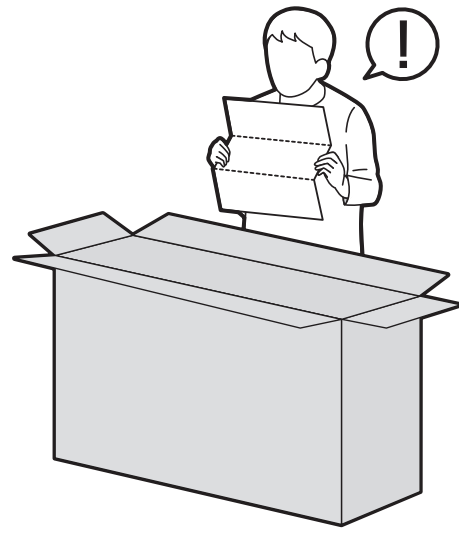


IN002043

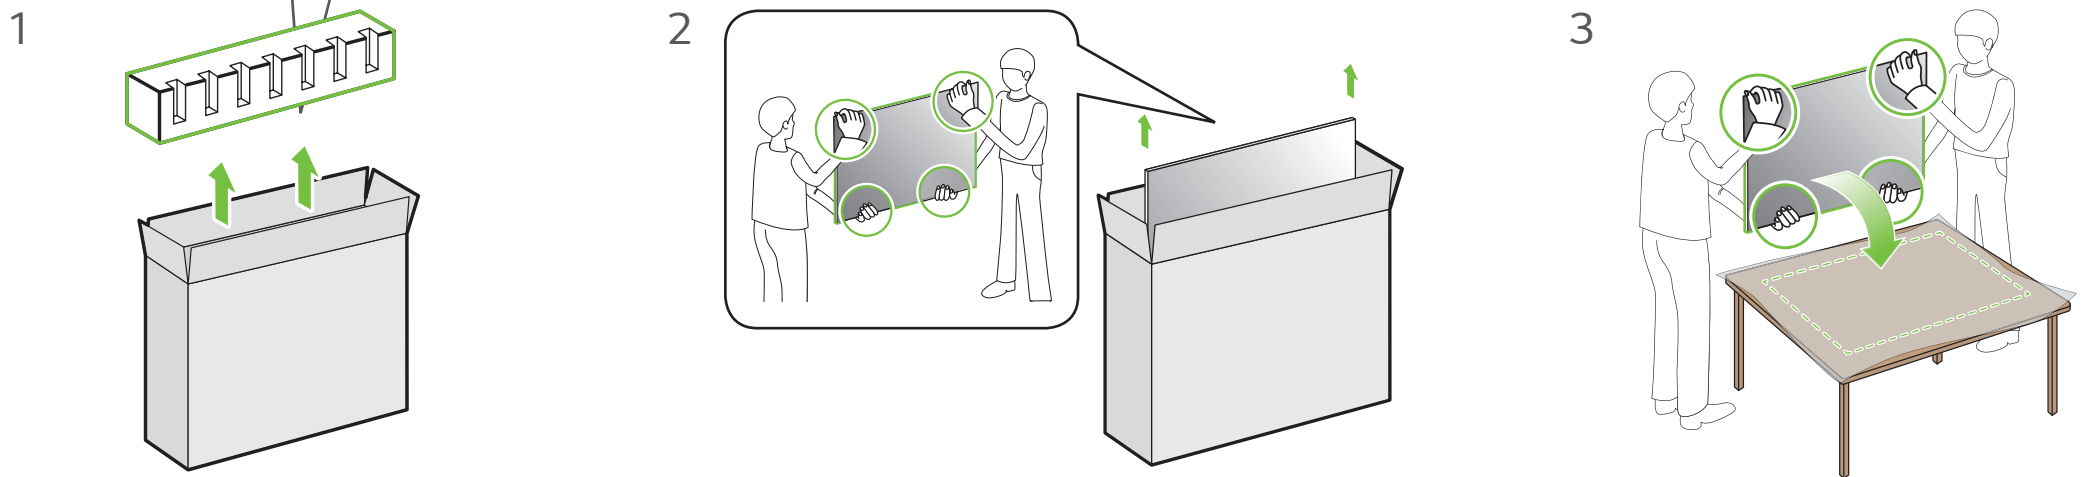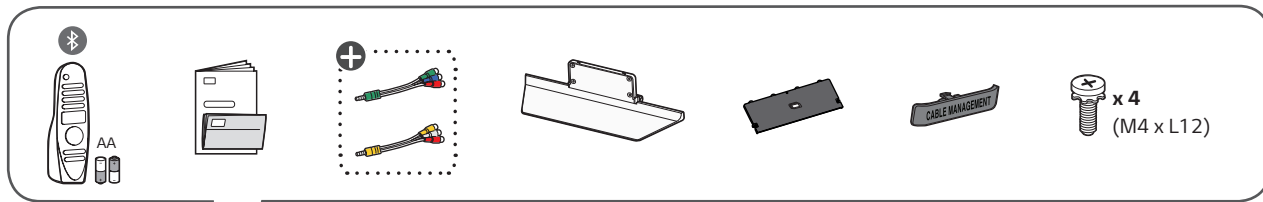

CAUTION
Image shown may differ from your TV
When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

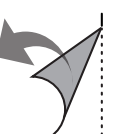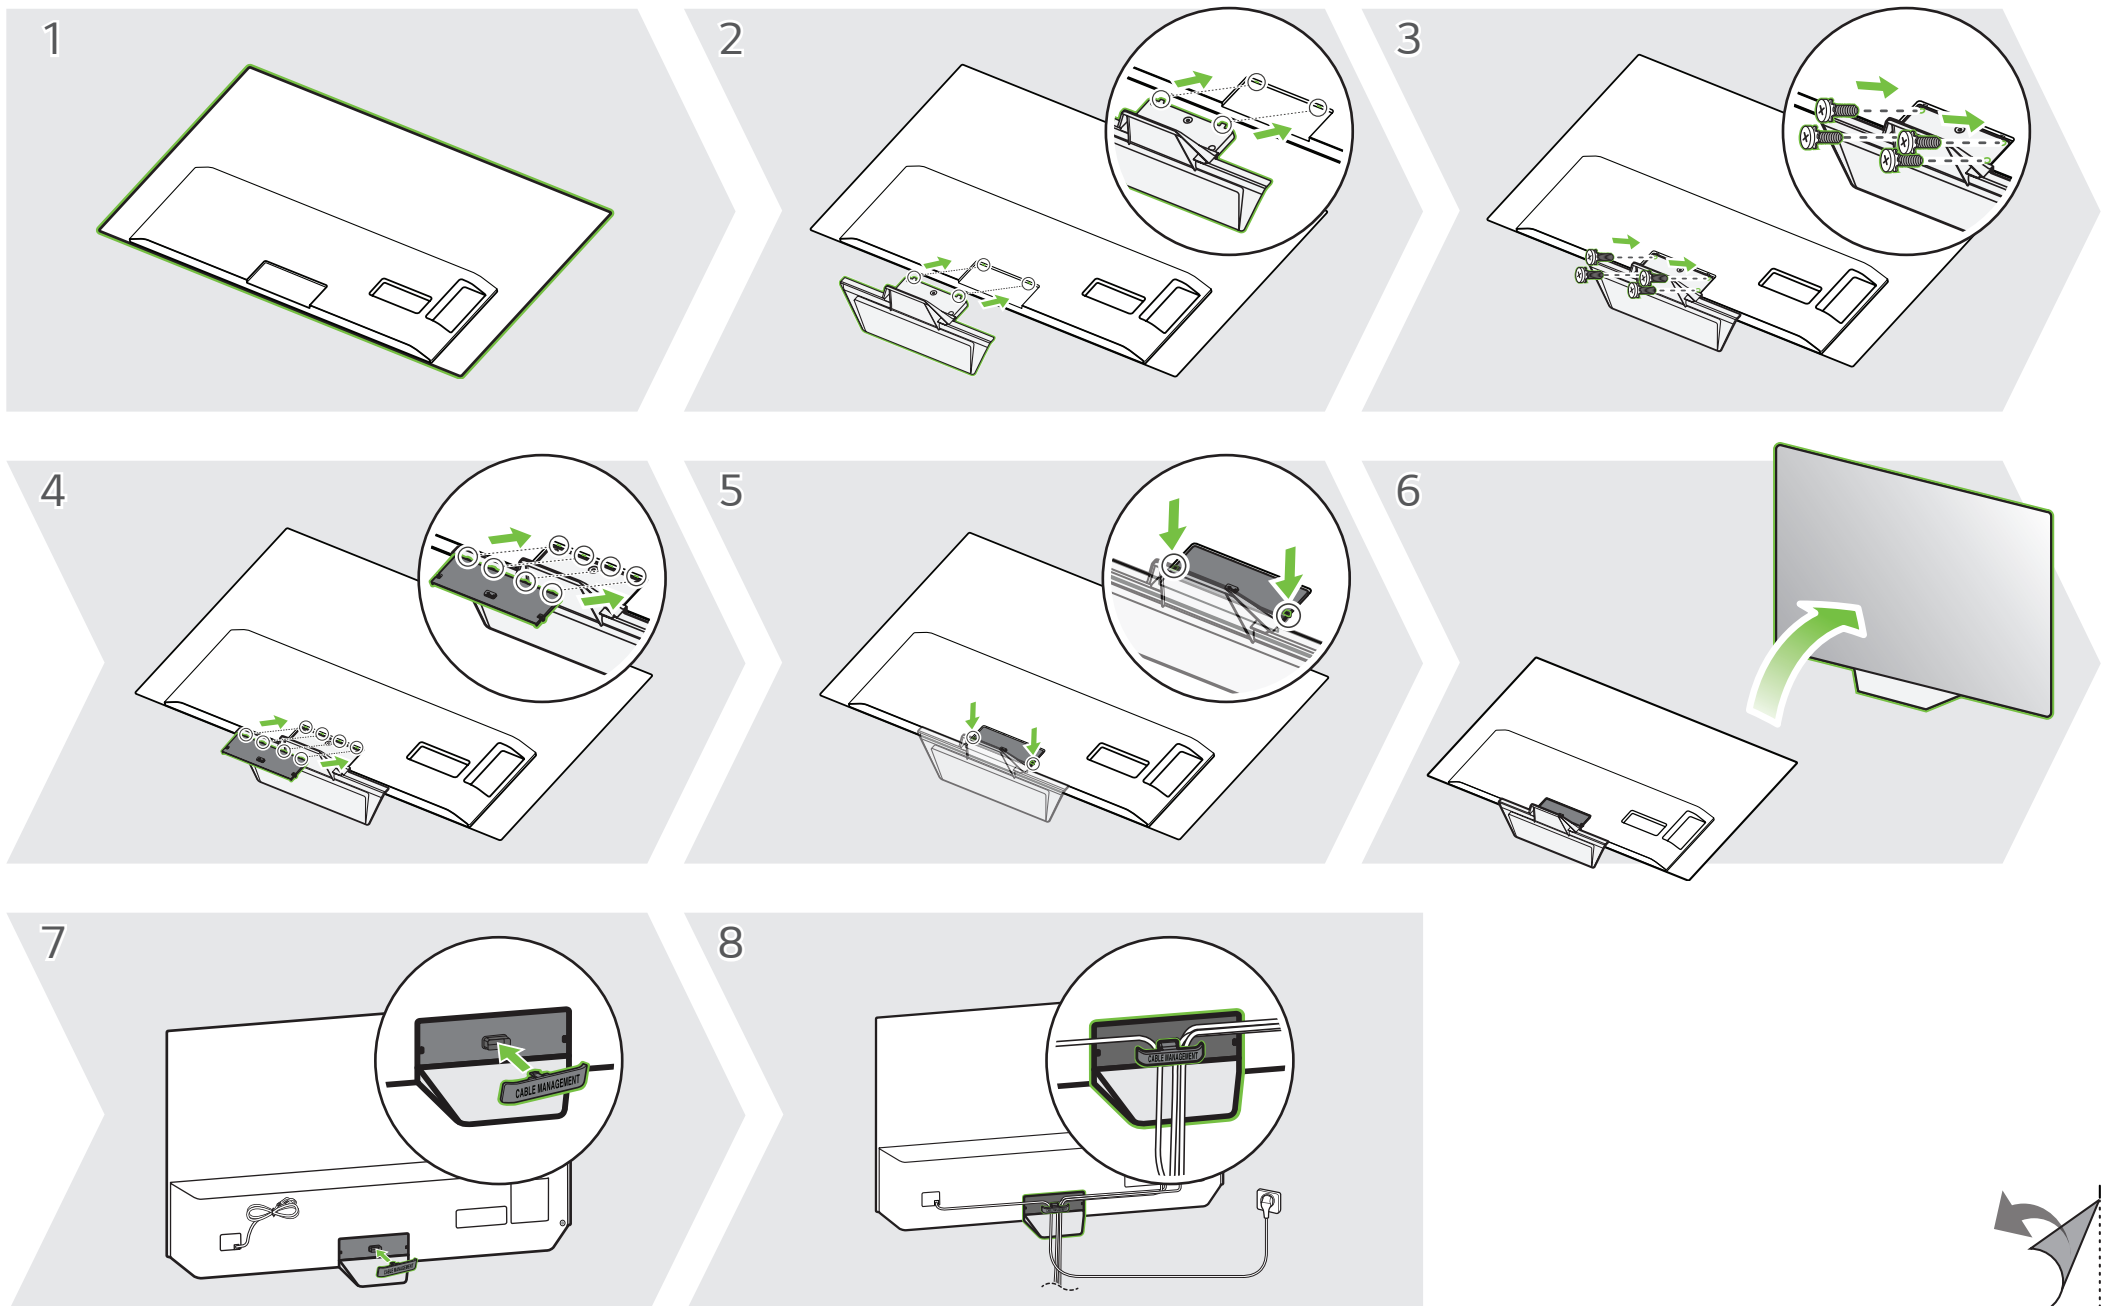

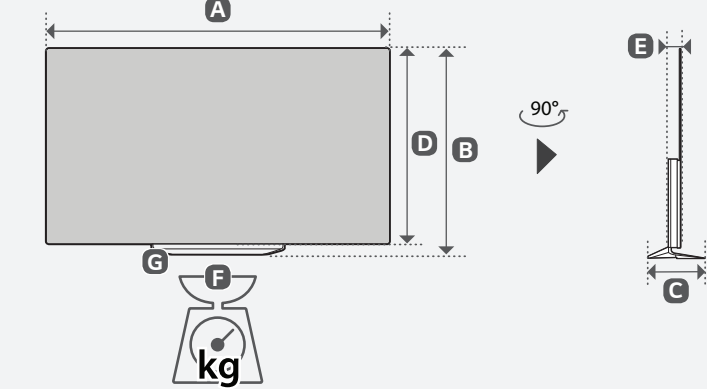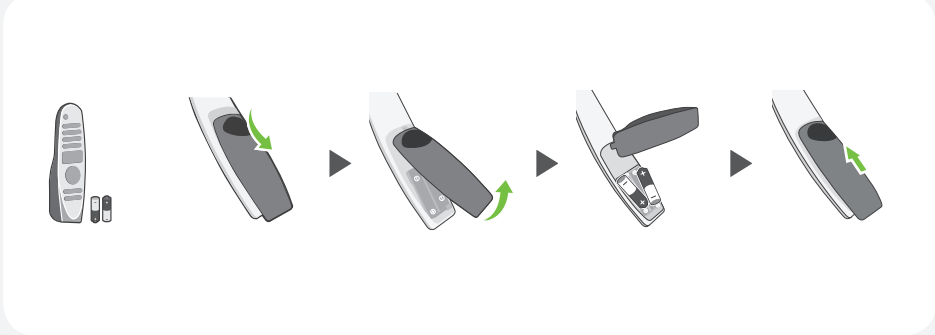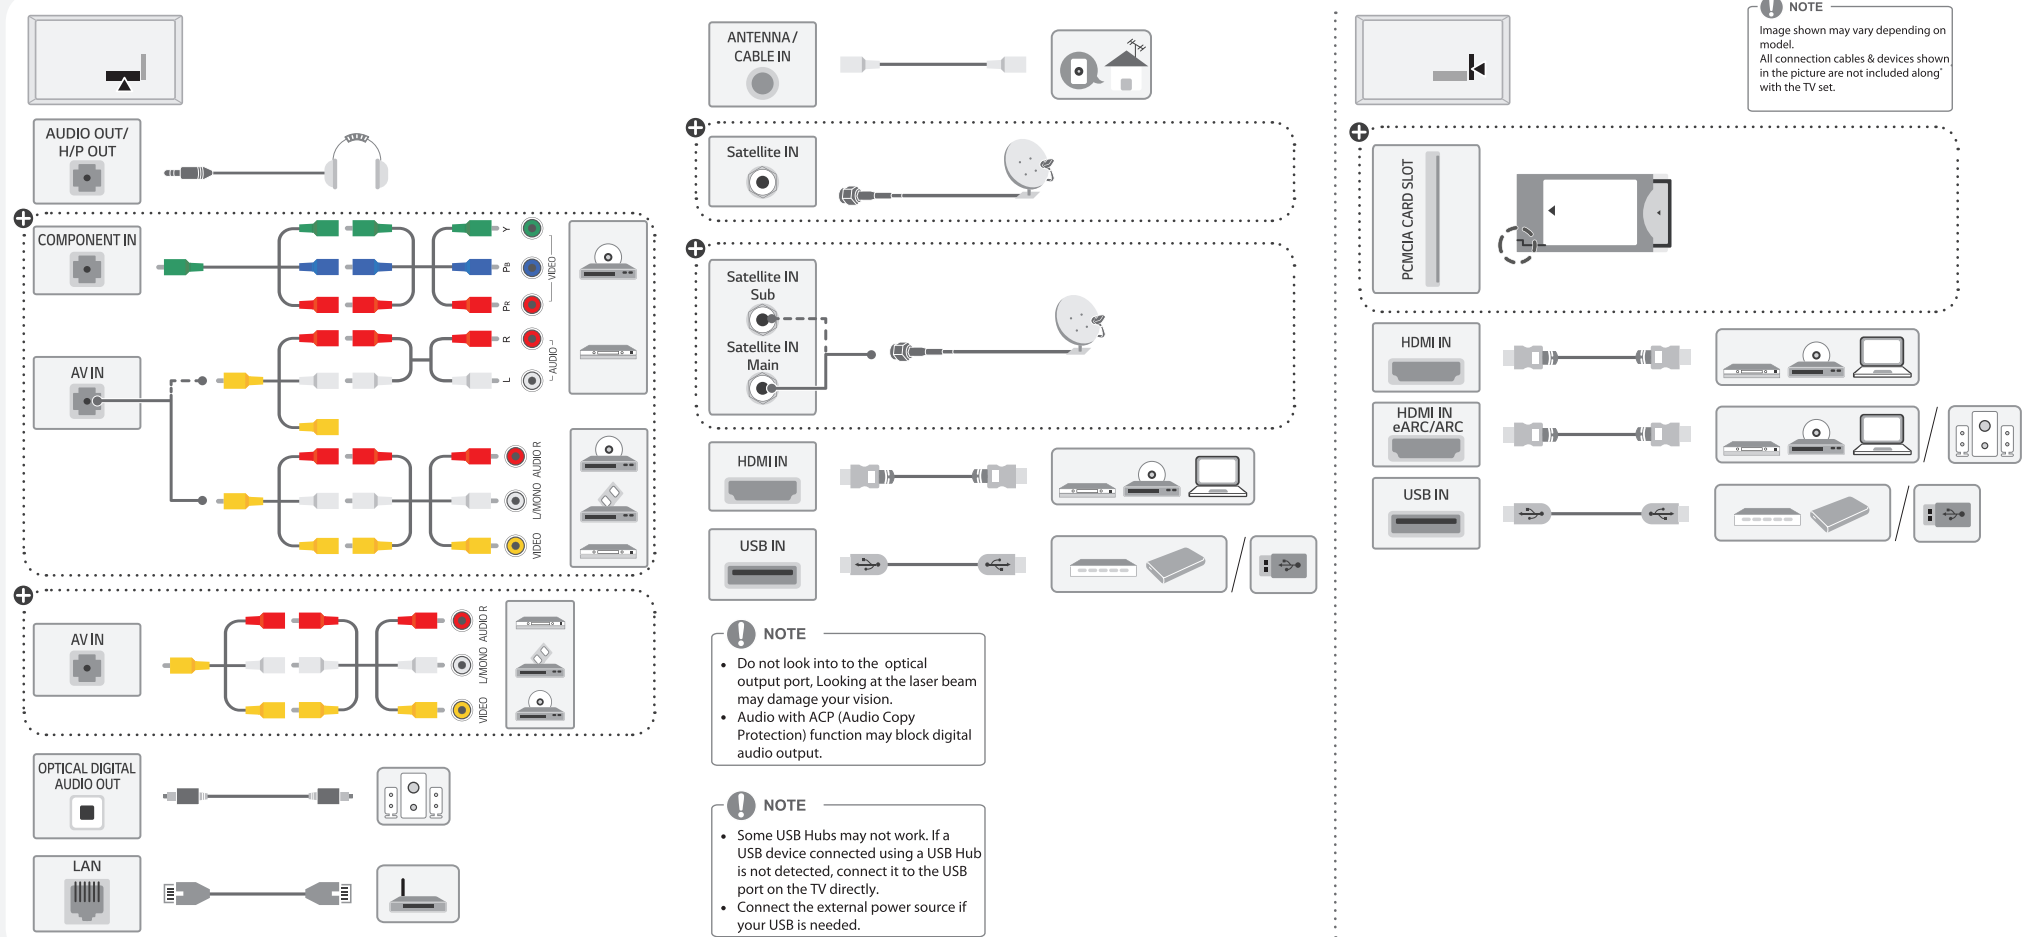

	A	B	C	D	E	F	F-G
	(mm)					(kg)	
OLED48CXPTA	1071	656	246	618	46.9	15.9	14.9
Power requirement				AC 100-240 V ~ 50 / 60 Hz			
				Only India -AC 200-240 V ~ 50 / 60 Hz			



- English**
- Read **Safety and Reference**.
 - For the power supply and power consumption, refer to the label attached to the product.

+ : Depending on model