

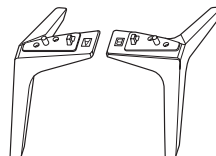


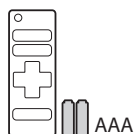

Quick Start Guide

LED TV
LJ54**

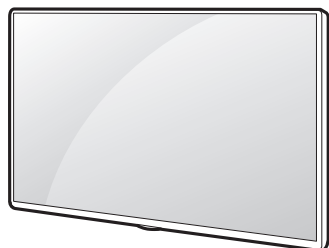

⊕ : Depending on model



www.lg.com

Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.








*Image may vary depending on models

P/No: MFL70265903 (1703-REV00)




English

- Read **Safety and Reference**.
- For the power supply and power consumption, refer to the label attached to the product.

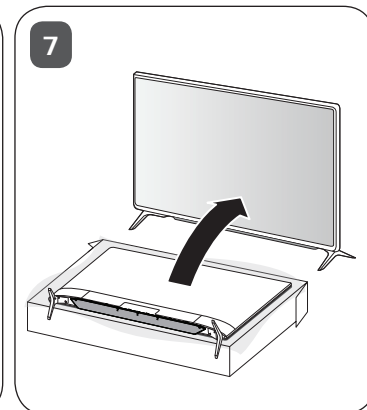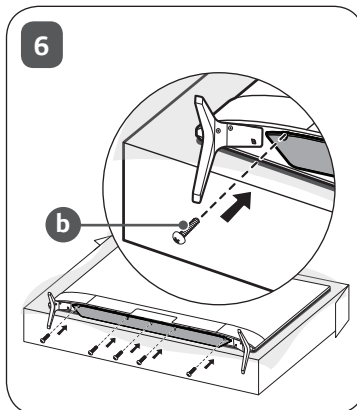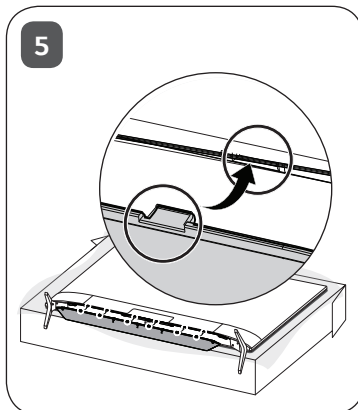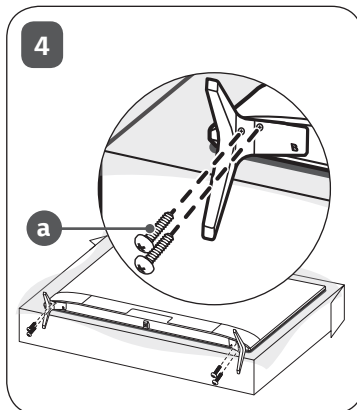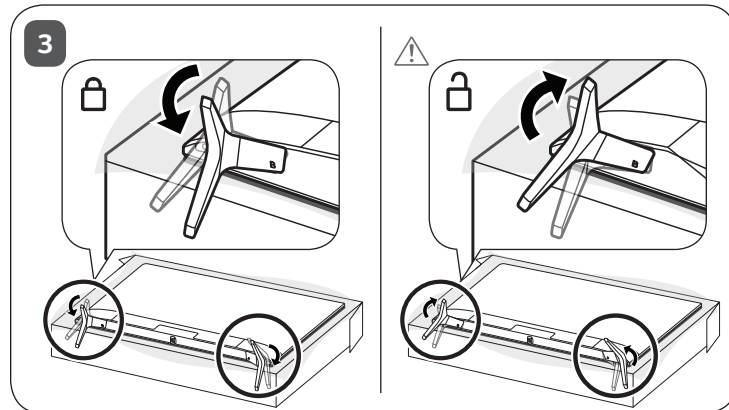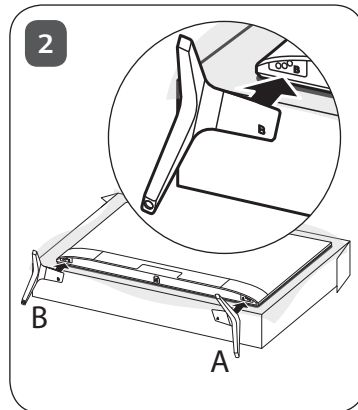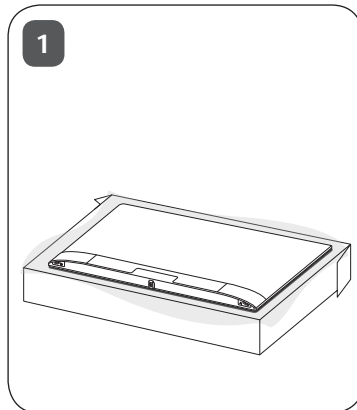



CAUTION
Image shown may differ from your TV.
When attaching the stand to the TV set,
place the screen facing down on a
cushioned table or flat surface to protect
the screen from scratches.

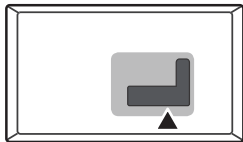

ANTENNA/
CABLE IN



  HDMI IN



USB IN




H/P OUT



NOTE


Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included
along with the TV set.

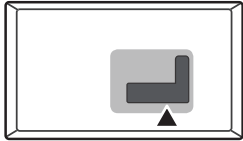

Satellite IN




PCMCIA CARD SLOT

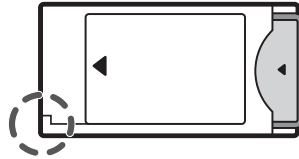


NOTE


Image shown may vary depending on model.

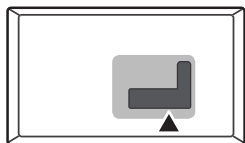

COMPONENT IN






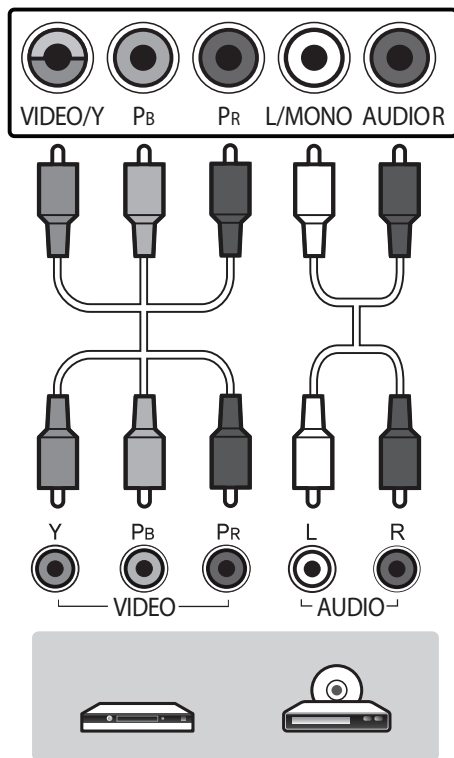


AV IN

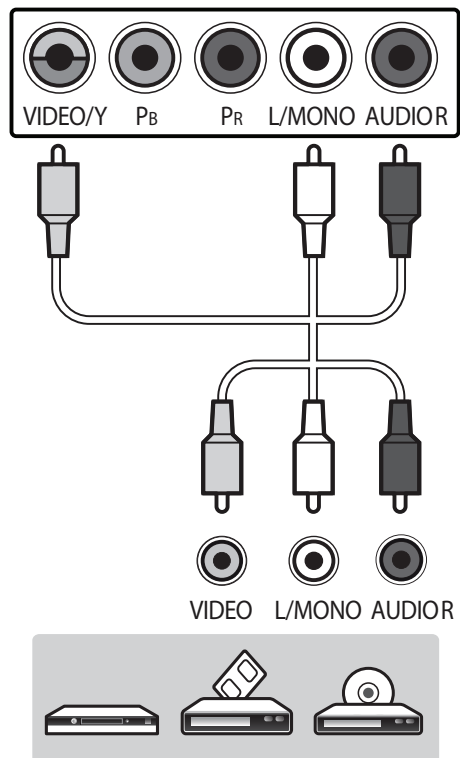


NOTE

 
Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included
along with the TV set.

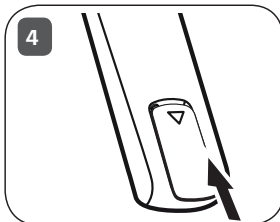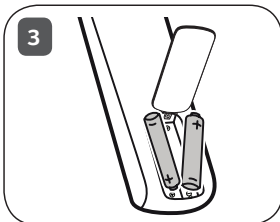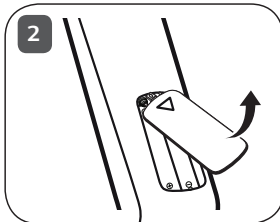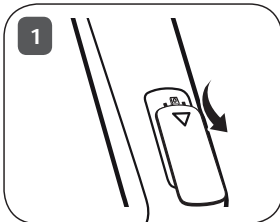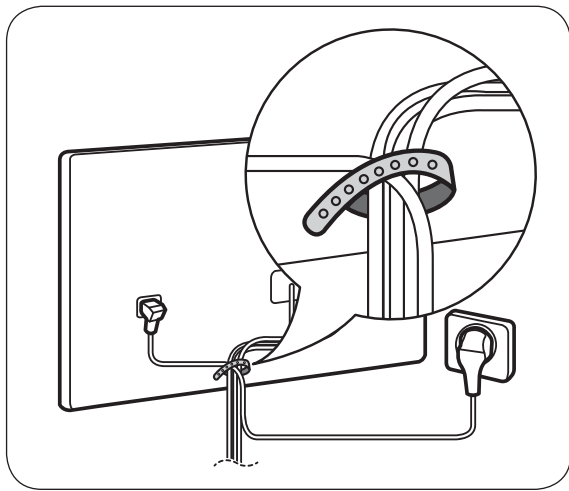

NOTE

Image shown may vary depending on model.

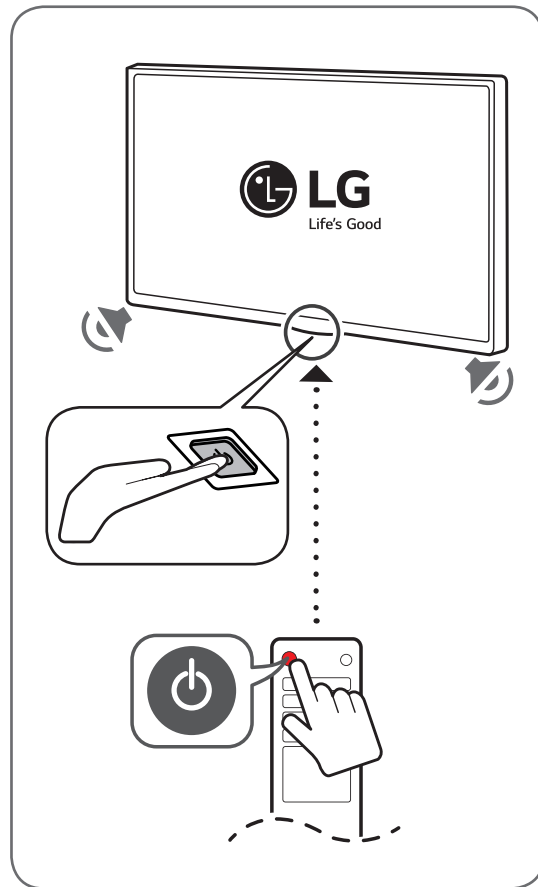

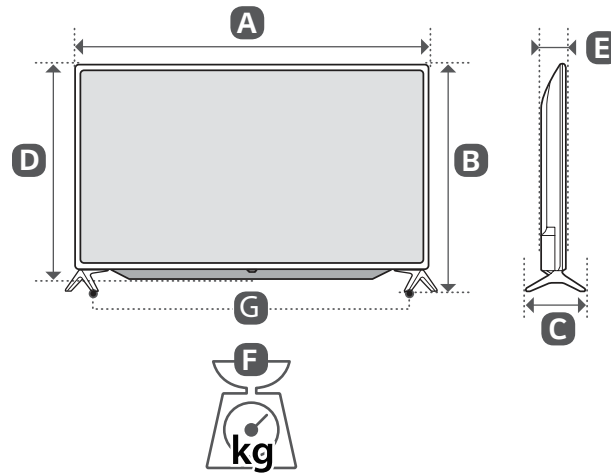

	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	F (kg)	F - G (kg)
43LJ548T-TE	974	625	220	587	90.8	10.3	10.2
Power requirement					AC 100-240 V ~ 50 / 60 Hz		



IN002043