



SIMPLE MANUAL

Mini Hi-Fi

System

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
CJ45



* M F L 6 9 7 1 3 0 5 7 *


www.lg.com

Copyright © 2017 LG Electronics. All Rights Reserved

SLOVENŠČINA	SHQIP	BOSANSKI	SVENSKA	DANSK	NORSK	SUOMI
ČESKÝ	SLOVENŠČINA	POLSKI	ROMÂNĂ	LATVIEŠU	HRVATSKI	SRPSKI
ENGLISH	DEUTSCH	FRANÇAIS	NEDERLANDS	ITALIANO	ESPAÑOL	ΕΛΛΗΝΙΚΑ
						БЪЛГАРСКИ
						МАКЕДОНСКИ
						MAGYAR



Front Panel

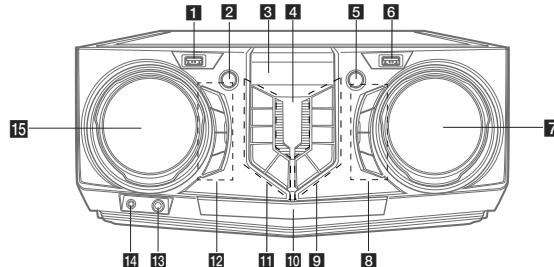

1 **USB 1 Port**
You can play sound files by connecting the USB device.

2 **>Main Power**
Turns the power on or off.

3 **Display window**

4 **IR (Remote sensor)**

5 **WIRELESS LINK**

- Selects MASTER or SLAVE on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.

6 **USB 2 Port**
You can play sound files by connecting the USB device.

7 **VOLUME**
Adjust speaker volume.

8 **MIC (Microphone) +/-**
Adjust microphone volume.

VOICE CANCELLER
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.

ECHO
Selects ECHO mode.

9 **F (Function)**
Selects the function and input source.

- **>|| (Play/Pause)**
 - Starts or pauses playback.
 - Selects stereo/mono.
- **>>I (Skip/Search)**
 - Skips forward.
 - Searches for a section within a track/file.
 - Selects the radio stations.

KEY CHANGER (#/ b)
Changes the key to suit your vocal range.

10 **Disc tray**

11 **USB REC / DEMO**

- Records to USB.
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.

□ (Stop) / RDS

- Stops playback or cancels DELETE function.
- Radio Data System.

I<< (Skip/Search)

- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.

△ (Open/Close)
Opens and closes the disc tray.

AUTO DJ
Selects the AUTO DJ mode.

12 **SOUND EFFECT**
Chooses sound impressions.

REGION EQ / BASS BLAST

- Chooses region equalizer.
- Press and hold to select BASS effect directly.

SEARCH
Moves to folder or file in selection mode.

OK
Selects a folder when searching a file.


13 **MIC (Microphone) jack**

14 **PORT. (Portable) IN jack**

15 **SEARCH**


- Searches a folder or a file.
- Turns clockwise or counterclockwise to control the SOUND EFFECT, REGION EQ mode.

Rear Panel

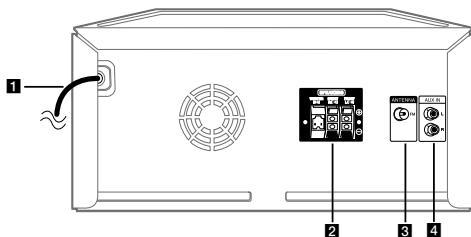

- 1 Power cord
- 2 SPEAKERS connector/terminals
- 3 ANTENNA (FM)
- 4 AUX IN (L/R)
Connect an auxiliary device.

Speaker Connection

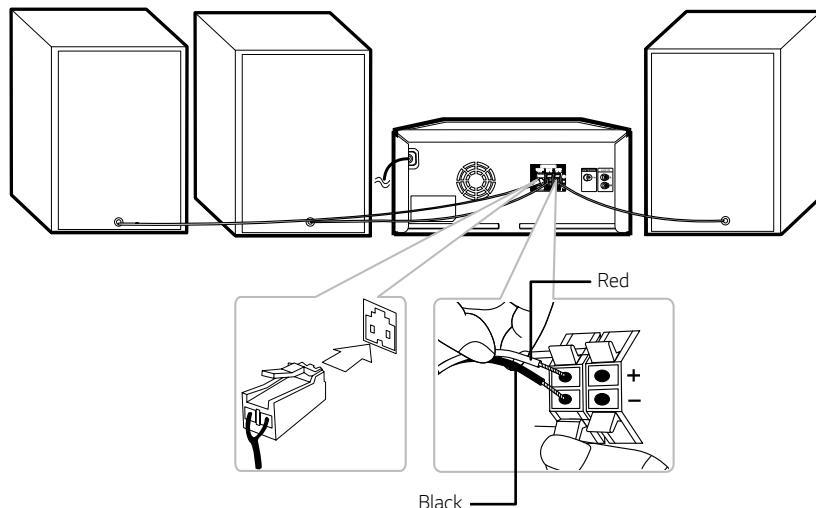

Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

Additional Information

Specifications


Power Requirements	Refer to the main label on the unit.
Power Consumption	Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 350 mm x 163 mm x 251 mm
Bus Power Supply (USB)	5 V \equiv 500 mA
Amplifier (Total RMS output power)	720 W RMS

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

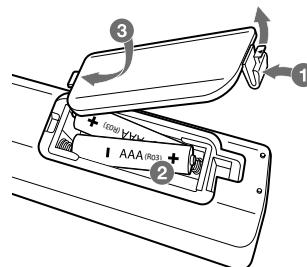

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type Mini Hi-Fi System is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm