



## OWNER'S MANUAL

# Portable Bluetooth Speaker

Please read this manual carefully before operating your set and retain it for future reference.

### MODELS

PJ8 (PJ8, PJC8)

PJ8B (PJ8B, PJC8B)



\* M F L 7 0 3 6 1 2 0 5 \*

[www.lg.com](http://www.lg.com)

Copyright © 2017 LG Electronics Inc. All Rights Reserved.

## Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

**CAUTION:** No naked flame sources, such as lighted candles, should be placed on the apparatus.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

**CAUTION concerning the Power Cord**

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

**NOTICE:** For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

**CAUTION** when using this product in environments of low humidity

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

This device is equipped with a portable battery or accumulator.

**How to Safely remove the batteries or the battery pack from the equipment:** To Remove the old batteries or battery pack, follow the assembly steps in reverse order. To prevent contamination of the environment and bring on possible threat to human and/or animal health, the old batteries or the battery pack must be put in an appropriate container at designated collection points. Do not dispose of batteries or battery pack together with other waste. It is recommended that you use local, free reimbursement systems batteries or battery packs, (may not be available in your area). The batteries or the battery pack should not be exposed to excessive heat such as sunshine, fire or the like.

## Symbols

~	Refers to alternating current (AC).
==	Refers to direct current (DC).
□	Refers to class II equipment.
⊕	Refers to stand-by.
	Refers to "ON" (power).
⚡	Refers to dangerous voltage.

# Table of Contents

## 1 Getting Started

- 2 Safety Information
- 6 Unique features
- 6 Introduction
- 7 Speaker
- 8 Battery charging cradle

## 2 Operating

- 9 Charging the speaker
  - 9 – Charging with the AC adapter
  - 9 – Charging with battery charging cradle
- 10 – Checking the charging status
- 10 – Checking Battery status
- 11 Basic Operations
  - 11 – Using power button
  - 11 – Bluetooth Connection
  - 11 – Bluetooth LED status
- 12 – Simple Operation Guide
- 13 Stereo mode Connection
- 14 Dual Play Connection
- 15 Handsfree Function
- 16 Listening to Music from Your External Device
- 17 Using BLUETOOTH® technology
  - 17 – Listening to music stored on the BLUETOOTH devices
- 19 Multi Pairing
- 20 Other Operation
  - 20 – Resetting
  - 20 – Notice for Auto Power Off

## 3 Troubleshooting

- 21 Troubleshooting

## 4 Appendix

- 22 Trademarks and Licenses
- 22 Handling the Unit
- 23 Specifications

1

2

3

4

## Unique features

### Auto power down

This unit supports to turn off by itself for saving energy consumption. (Page 20)

### Portable In

Listen to music from your portable device. (Smart phone, Notebook, etc..)

### BLUETOOTH®

Listens to music stored on your **Bluetooth** device.

### Stereo mode

You can automatically connect stereo mode. Enjoy the sound in stereo using battery charging cradle.

### Dual Play

You can enjoy the sound in stereo by using two speakers without battery charging cradle.

## Introduction

### Symbol used in this manual

#### ! Note

Indicates special notes and operating features.

#### ! Caution


Indicates cautions for preventing possible damages from abuse.

#### ! Caution


##### Water-proof (IPX7)

This speaker is water-proof according to IPX7. IPX7 is a Water-proof up to 1 meter for 30 minutes. Speaker is water-proof wireless speaker but it can be damaged. Avoid the cases below.

- In stereo mode, do not use devices in water or use them in a humid. Battery charging cradle is not water-proof.
- Do not use unit under water or other liquid.
- When battery is charging, do not expose the unit to water.
- When exposed to water, wipe off it with a soft dry cloth.
- Ports are not water-proof. When you want a water-proof effect, close the port cover securely from left to right as follows.

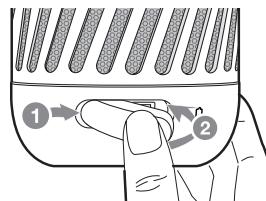

# Speaker

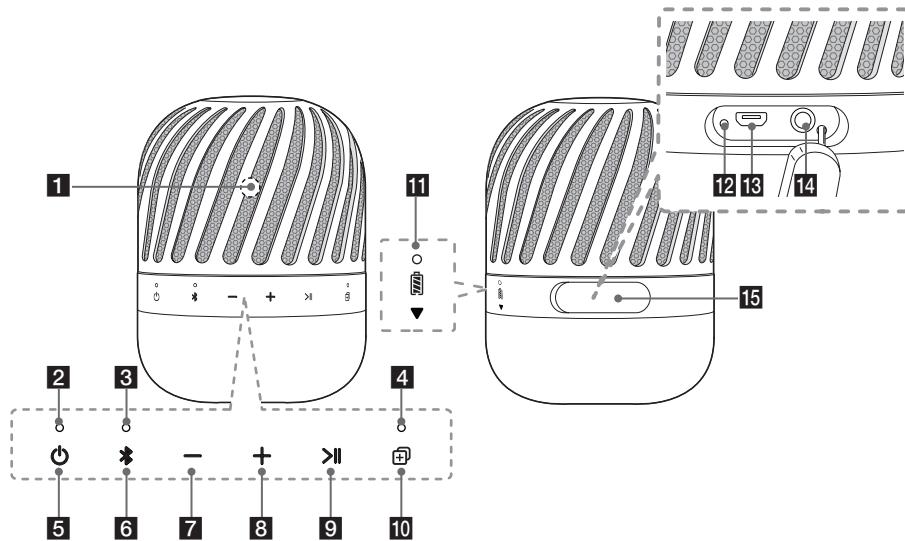

**1** Microphone

**2** Power LED

**3** Bluetooth LED

**4** Dual Play LED

**5**

Turns On / Off : Press it.

**6**

- Adds a **Bluetooth** device for multi pairing.  
(Press and hold )  
- Changes to **Bluetooth** mode in portable mode.  
(Press )  
\* When you connect the portable cable, the function is changed to portable mode.

**7** : Turn down the volume.

**8** : Turn up the volume.

**9**

- Starts, pauses or skip playback on the **Bluetooth** mode. (Page 12)  
- Receives a call on the **Bluetooth** device.  
(Page 15)  
- Mutes the sound on the portable mode.

**10**

Connects two speakers for dual play.  
(Page 14)

**11**

**12** Reset hole

**13** USB port for charging

**14** Portable in connector


Listens to music from your portable device.

**15** Port cover



**Note**  
Because the button of speaker is not touch system, press button to use speaker.

## Battery charging cradle

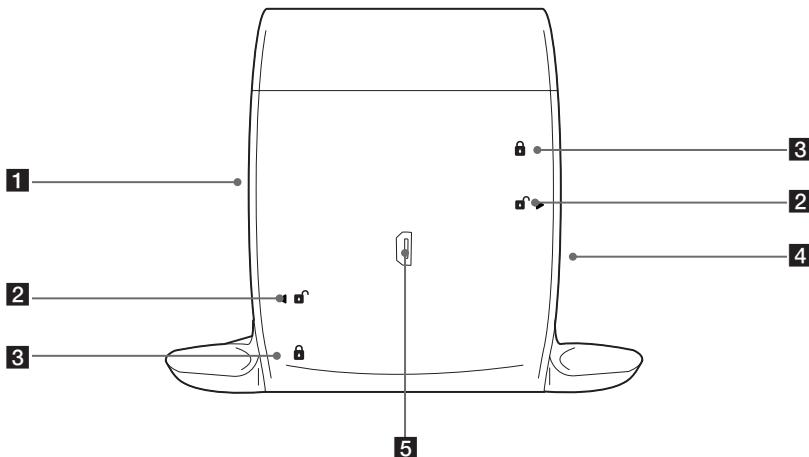

**1** Hole of speaker (R (Right channel))  
Check Secondary speaker and you will connect to battery charging cradle. (Page 13)

**2** Unlock Speaker in Battery charging cradle

**3** Lock Speaker in Battery charging cradle

**4** Hole of speaker (L (Left channel))  
Check Primary speaker and you will connect to battery charging cradle. (Page 13)


**5** USB port for charging

# Charging the speaker

## Charging with the AC adapter

This speaker uses built-in battery. Before using it, charge the battery by connecting the AC Adapter.

1. Connect the supplied USB cable to the AC adapter.
2. Connect the USB cable to USB port of the speaker.
3. Plug the AC adapter into an AC outlet.

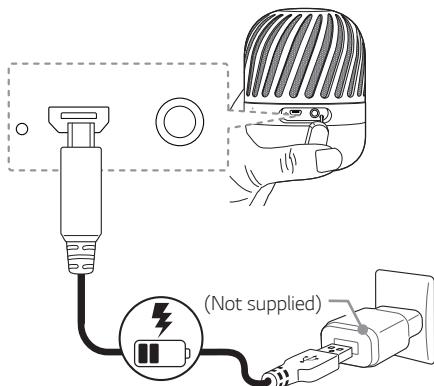

If the battery is fully charged in charging mode, Battery LED is changed from red to green. After 15 seconds, Battery LED turns off.



### Caution


AC adapter is not supplied.

It is recommended that you use the 5 V AC adapter approved by LG Electronics Inc. (1.8 A or more) with this unit because of danger of explosion. If you do not use the recommended adapter, charging is unavailable or charging time may differ.

## Charging with battery charging cradle

You can charge speaker's battery in stereo mode.

1. Connect two speaker and battery charging cradle. Follow the step 1 of "Stereo mode Connection." (page 13).
2. Connect USB port on the back of the battery charging cradle to the AC adapter or external device using USB cable.
3. Battery LED of each speaker turns on. If the battery is fully charged in charging mode, Battery LED is changed from red to green. After 15 seconds, Battery LED turns off.

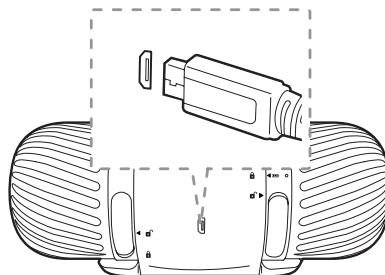

### Caution

- It must be used 5 V AC adapter (1.8 A or more) with Battery charging cradle. If you use the adapter with less than 1.8 A, adapter is overheating or charging is not available.
- When you charge wet speaker with battery charging cradle, it may result in electric shock. Remove moisture with clean wipes.

## Checking the charging status

When speaker's battery is charging, you can check the charging status by Battery LED.

LED	Description
Green  → 	Battery is fully charged.
Red 	Battery is charging.

### Note

- Operating time is approx. 9 hours. (Based on fully charged the battery and continuous playback using 50 % volume level.) It may vary depending on the battery status and operational conditions.
- If you listen to the music while charging, it will take longer to charge.
- When the speaker is not charging by overheating, Battery LED turn on red and amber alternately. And charging is stopped.
- If the Battery LED turns off, the speaker's battery is fully charged.

## Checking Battery status

If the power turned on, you can check the charging status by pressing any button on the speaker or changing function. Then Battery LED light will change depending on battery charging status.


LED	Description	Status
Green 	Battery LED turns on green.	 ≥ 70 %
Amber 	Battery LED turns on amber.	 ≥ 15 %
Red 	Battery LED blinks in red with the sound.	 < 15 %

### Note

- If the speaker is connected your smartphone, you can check the battery status by the smartphone. It may vary from actual battery capacity. (Only iOS devices).
- If battery status is checked in stereo mode, you can check each speaker's battery status.
  - When you press any button on primary speaker, you can check only primary speaker's battery status.
  - When you press any button on secondary speaker, you can check only secondary speaker's battery status.

## Basic Operations


### Using power button

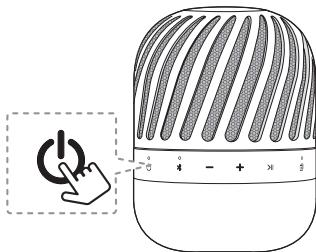

### Power On / Off

Press the  button.


### Bluetooth Connection

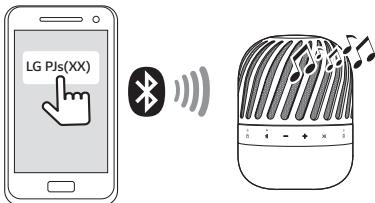

Play the desired music on the **Bluetooth** device. After pairing, you can control playback using the buttons on the unit. (page 12, 17-18)

### Bluetooth LED status

Check the **Bluetooth** LED blinks before connecting **Bluetooth** device.

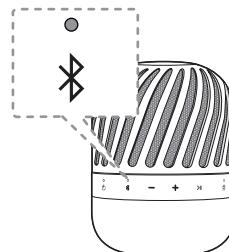

LED	Status	Description
 	Bluetooth LED blinks with the sound.	Searching for <b>Bluetooth</b> device.
 	Bluetooth LED turns on with the sound.	<b>Bluetooth</b> device is connected.

#### Note

Once pairing is performed, it does not need to be done again even if you turn off this unit.

## Simple Operation Guide

Function	How to	Status
Power On	Press the  button.	Power LED turns on with the sound.
Power Off	Press the  button.	Power LED turns off with the sound.
<b>Bluetooth</b> pairing	When <b>Bluetooth</b> LED blinks, select LG PJs (XX) from device list on your <b>Bluetooth</b> device.	<b>Bluetooth</b> LED turns on with the sound.
Play / Pause	Press  .	-
Forward skip	Press  twice.	-
Backward skip	Press  three times.	-
Handsfree	Press  .	Receive and disconnect a call.
Volume control	Press  or  .	When this unit reaches minimum volume or maximum volume, you can hear beep sound.
Dual play	Press and hold the  button for 2 seconds	<p>Dual Play LED turns on with the sound.</p> <p><b>! Note</b></p> <ul style="list-style-type: none"> <li>• In Dual Play mode, the multi pairing connection is not supported. (Page 14)</li> <li>• In stereo mode,  button is not available. (Page 13).</li> </ul>
Multi pairing	Press and hold  for 2 seconds to add another <b>Bluetooth</b> device.	During the search for another device, the <b>Bluetooth</b> LED blinks. After pairing, <b>Bluetooth</b> LED stays in white with the sound.
<b>Bluetooth</b> Initialization	Press and hold  for 7 seconds.	Power and <b>Bluetooth</b> LED blinks 4 times.

## Stereo mode


If you connect two speakers and battery charging cradle, speakers will be automatically connected in stereo mode. And you can enjoy the sound in stereo.




### Caution

In stereo mode, do not use devices in water or use them in a humid. Battery charging cradle is not water-proof.

- 1 Take hold of the battery charging cradle and insert a speaker into the hole of battery charging cradle. 2 And then turn the speaker from to on the back side of the battery charging cradle.

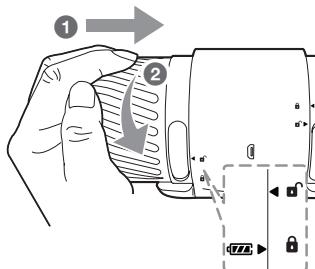

To enjoy stereo mode, attach the other speaker in the same way to the other side.

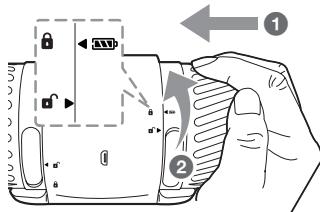

- 2 Press each speaker's button. Then two speakers will be automatically connected in the stereo mode. During connection in stereo mode, Dual play LED blinks.

- 3 When Dual play LED is off with beep sound, stereo mode has completed.
- 4 Check the **Bluetooth** LED on each's speaker.
  - Speaker that **Bluetooth** LED is on or blinking is Primary speaker. It is set to L (Left) channel.
  - Other side speaker that **Bluetooth** LED is off is secondary speaker and set to R (Right) channel.



### Note

The location of Primary speaker might be Left or Right. When Primary speaker is located at the right side of battery charging cradle, it is recommended that you reconnect Primary speaker to left side of battery charging cradle.

- 5 Connect **Bluetooth** device or external device with primary speaker.



### Note

- Secondary speaker will be disabled **Bluetooth** or Portable modes on stereo mode.
- In stereo mode, you can connect only the primary speaker with the **Bluetooth** device or external device.

- 6 Play the desired music on the **Bluetooth** device or external device.



### Note


- If the units fail to connect stereo mode, go to step 1 and try again.
- When you enjoy stereo mode, the multi pairing or Dual play is not supported.
  - Primary speaker connects only one **Bluetooth** device.
- When you remove speaker from battery charging cradle or turn off one speaker, speaker disconnects stereo mode.
- In stereo mode, buttons of two speakers are synchronized. You can adjust playback or volume as two speaker.

## Dual Play Connection

You can enjoy the sound in stereo by using two speakers without battery charging cradle.



1. Press and hold the each speaker's button for 2 seconds. Then the speakers are ready to Dual play mode.

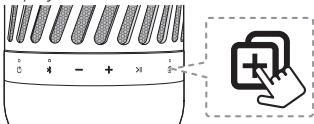

- Beep sound is heard and Dual Play LED will blink white fast.
- 2. If two speakers are connected, blinking Dual Play LEDs will stay white with beep sound.
  - **(A) speaker** : Primary speaker is to set L (left) channel and turns on Dual Play LED and **Bluetooth** LED.
  - **(B) speaker** : Secondary speaker is set to R (Right) channel and turns on Dual Play LED.

### Note

It takes up to 1 minute to connect to dual play.

3. Play the desired music on the **Bluetooth** device or external device.

### Note


- Using Dual play is limited to below model.
  - Available PJ series model : 3, 8, 9
- Primary speaker is decided depending on speaker connection. (Portable>**Bluetooth**)
- If two speakers connections is equal, primary speaker is decided arbitrarily.
- If you are not connected to **Bluetooth** device, primary speaker's **Bluetooth** LED blinks.

### Note

- When you enjoy Dual Play, the multi pairing is not supported.
  - Primary speaker **(A)** connects only one **Bluetooth** device.
- If you want to enjoy Dual play in stereo mode, disconnect speaker from battery charging cradle.
- If you turn the power off and then on again, two speakers need to be reconnection for using dual play mode.
- If the units fail to connect Dual play, go to step 1 and try again.
- When Dual Play connection is on processing, you cannot search the units on other **Bluetooth** devices.
- When you disconnect Dual Play connection, press and hold the buttons for 2 seconds of one of the two speakers again.
- When you enjoy Dual Play, you can adjust the volume of both primary **(A)** and secondary **(B)** speakers at the same time.
- Secondary speaker **(B)** will be disabled **Bluetooth** or Portable modes on Dual play mode.
- To change the **Bluetooth** device in Dual Play mode, press and hold for 2 seconds to disconnect current **Bluetooth** device and connect the desired **Bluetooth** device.
- In Dual Play mode, you can connect only the primary speaker **(A)** with the **Bluetooth** device.
- When you connect **Bluetooth** device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- In Dual Play mode, make the distance between the speakers as close as possible each other.
- Depending on network environment, the Dual Play may not work well.

## Handsfree Function

You can receive incoming call on your **Bluetooth** device to this unit. Connect the unit to a **Bluetooth** device.

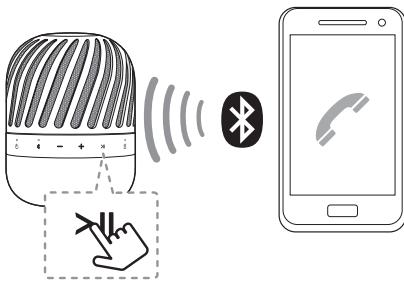

Function	How to
Receive a call.	Press <b>&gt;II</b> .
Reject a call.	Press and hold <b>&gt;II</b>
End the call.	Press <b>&gt;II</b> .

### Note


- Only smartphone is available to use this function.
- To adjust the call volume, press **-**, **+** buttons on the unit.
- In Stereo mode or Dual Play mode, you can receive a call on only primary speaker due to audio howling. (Page 13-14)
- When an incoming call, it might ring the built-in ringtone depending on some of **Bluetooth** device. (ex. iOS devices)
- In multi pairing mode, you can receive only one of the connected devices call on speaker (Page 19)
- If connect the call between multi paired **Bluetooth** device, hands free is working incorrectly. (Page 19)
- If you change portable mode on **Bluetooth** connection status, you can use this function.
- To use this mode, some of **Bluetooth** device needs to be changed to speaker mode on call mode. (ex. iOS devices)

## Listening to Music from Your External Device

The unit can be used to listen to the music from many types of external device.

2

Operating

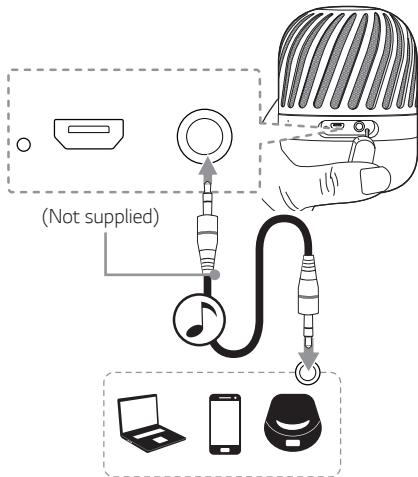

1. Connect the external device to the Portable In connector of the unit.
2. Turn the power on by pressing  button.
3. Turn the external device on and start playing.

### Note

- When you connect the portable cable, the function is changed to portable mode automatically.
- In Portable mode, speaker limits **Bluetooth** connection to prevent unintended **Bluetooth** connection.
- In stereo mode or dual play mode, only the primary speaker can connect external device with portable and play music.

# Using BLUETOOTH® technology

## About BLUETOOTH

**Bluetooth** is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the **Bluetooth** in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

- Available Devices : Smart phone, Notebook, etc.
- Version : 4.2
- Codec : SBC

## BLUETOOTH Profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

## Listening to music stored on the BLUETOOTH devices

### Pairing your unit and BLUETOOTH device

Before you start the pairing procedure, make sure the **Bluetooth** feature is turned on in to your **Bluetooth** device. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

1. Turn on the unit then **Bluetooth** LED blinks with the sound.
2. Operate the **Bluetooth** device and perform the pairing operation. When searching for this unit with the **Bluetooth** device, a list of the devices found may appear in the **Bluetooth** device display depending on the type of **Bluetooth** device. Your unit appears as "LG PJs (xx)".
3. Select "LG PJs (xx)".

#### Note

- XX means the last two digits of **Bluetooth** address. For example, if your unit has a **Bluetooth** address such as 9C:02:98:4A:F7:08, you will see "LG PJs (08)" on your **Bluetooth** device.
- Depending on the **Bluetooth** device type, some device have a different pairing way. Enter the PIN code (0000) as needed.

4. When this unit is successfully connected with your **Bluetooth** device, **Bluetooth** LED will turn on with the sound.
5. Listen to music.

To play a music stored on your **Bluetooth** device, refer to your **Bluetooth** device's user guide.

## Controls connected Bluetooth device

You can control connected **Bluetooth** device from the unit; play, pause, skip.

### ! Note

- Only Android OS and iOS is available to use this function.
- This function may not be supported depending on the **Bluetooth** device, or operated differently.

### ! Note

- When using **Bluetooth** technology, you have to make a connection between the unit and the **Bluetooth** device as close as possible and keep the distance. However you may experience issues in the cases below:
  - There is an obstacle between the unit and the **Bluetooth** device.
  - There is a device using same frequency with **Bluetooth** technology such as a medical equipment, a microwave or a wireless LAN device.
- If **Bluetooth** connection does not work well, go to step 1 of "Pairing your unit and BLUETOOTH device" and try again.
- The sound may be interrupted when the connection interfered by the other electronic wave.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy **Bluetooth** function using Smart phone, Notebook, etc..
- The more distance between the unit and the **Bluetooth** device, the lower the sound quality becomes.
- **Bluetooth** connection will be disconnected when the unit is turned off or the **Bluetooth** device gets too far from the unit.
- When **Bluetooth** connection is disconnected, connect the **Bluetooth** device to the unit again.
- When you connect **Bluetooth** device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- When the unit is not connected, **Bluetooth** LED will blink.

# Multi Pairing

The unit can be connected to two **Bluetooth** devices at the same time.

## Pairing with Two Devices

1. Connect the unit to a **Bluetooth** device.
2. When the **Bluetooth** device and unit are connected, press and hold **¶** button for 2 seconds. Then **Bluetooth** LED blinks with the sound. The unit is changed to multi pairing mode.
3. Select "LG PJs (XX)" from device list on another **Bluetooth** device. Then the speaker is connection with two **Bluetooth** devices.
4. When connection of two **Bluetooth** devices are successful, **Bluetooth** LED will turn on.

### Note

- When you use Dual Play or stereo mode, the multi pairing connection is not supported.
- You can connect this unit with up to 2 **Bluetooth** devices simultaneously same method as above description.
- When speaker is ready to multi pairing mode, you need to connect other **Bluetooth** devices and speaker within a few minutes (ex. 1 minute). Otherwise multi pairing mode will be canceled.
- The multi pairing connection is only supported on Android devices. (Multi pairing connection may not be supported depending on the connected device specifications.)
- Removable/detachable **Bluetooth** device (Ex: Dongle etc.) doesn't support multi pairing.
- Even if this unit connected up to 2 **Bluetooth** devices, you can play and control music by using only one of the connected devices.
- After multi-pairing connection, it takes a little time for the music to be played depending on the **Bluetooth** devices.
- In case of multi-pairing, two Bluetooth device are not supported automatically connection. Only one **Bluetooth** device will be automatically connected speaker. The other device should be connected manually.
- If you get out of **Bluetooth** effective distance without disconnecting **Bluetooth**, it takes a few minutes to connect other **Bluetooth** devices. But after power off and on, you can connect other **Bluetooth** devices without waiting.


## Other Operation

### Resetting

In case that the unit freezes due to malfunction, press the reset hole using an object like a thin pin. Then speaker turns off. Press  button to try turning on speaker again.

2

Operating

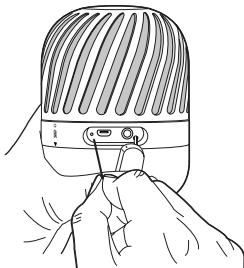

### Notice for Auto Power Off

When the unit is in **Bluetooth** mode without music playback for 15 minutes or in portable input mode without button operation for 6 hours, this unit is turned off automatically.

# Troubleshooting

Problem	Cause & Correction
No Power or power off after 10 seconds.	<ul style="list-style-type: none"> <li>The battery is discharged. Recharge the battery.</li> <li>Connect the unit to the power supply with the AC adapter.</li> </ul>
No sound or sound distortion.	<ul style="list-style-type: none"> <li>The unit or your smart device's volume is set to minimum. Check and adjust the volume of the unit or <b>Bluetooth</b> device's volume.</li> <li>When you use an external device at high volume, the sound quality may be deteriorated. Lower the volume of the devices.</li> <li>If you use the unit for purposes other than listening to music, the sound quality may be lowered or the unit may not work properly.</li> </ul>
<b>Bluetooth</b> pairing does not work well.	<ul style="list-style-type: none"> <li>Switch <b>Bluetooth</b> off and on again on your <b>Bluetooth</b> device, then try pairing again.</li> <li>Be sure your <b>Bluetooth</b> device is on.</li> <li>Remove the obstacle in the path of the <b>Bluetooth</b> device and the unit.</li> <li>Depending on the type of the <b>Bluetooth</b> device or surrounding environment, your device may not be paired with the unit.</li> </ul>
The unit does not operate normally.	<ul style="list-style-type: none"> <li>If the battery was fully discharged, the stored <b>Bluetooth</b> information can be deleted. Previous setting may not be saved when the unit's power is shut off.</li> <li>In case of malfunction, please use the unit in proper place where the temperature or humidity is not so high or low.</li> <li>In case of overload, power and <b>Bluetooth</b> LEDs blink white. Please turn the power off and then on again.</li> </ul>
Stereo mode does not work well.	<ul style="list-style-type: none"> <li>Be sure two speaker is on.</li> <li>Check that speaker is connected to battery charging cradle correctly.</li> </ul>
Above solutions do not work.	<ul style="list-style-type: none"> <li>Press the reset hole on speaker using an object like a thin pin. (Page 20)</li> </ul>

## Trademarks and Licenses



The **Bluetooth®** word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

## Handling the Unit

### When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

### Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

### Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

# Specifications

Each Speaker	
Power requirements	5 V  1.8 A (AC adapter) Built-in rechargeable battery
Power consumption	6 W
Dimensions (W x H x D)	Approx. 83.5 mm X 102.3 mm X 83.5 mm
Operating temperature	5 °C to 35 °C
Operating humidity	5 % to 60 %
Water-proof	IPX7
Inputs	<ul style="list-style-type: none"> <li>PORT. IN : 0.5 Vrms (3.5 mm stereo jack)</li> <li>USB : Micro USB port for charging battery</li> </ul>
Battery	<ul style="list-style-type: none"> <li>Battery capacity : 1500 mAh</li> <li>Operating time : Approx. 9 hours. It may vary depending on the battery status and operational conditions.</li> <li>Charging time : Less than 4 hours (with AC Adapter). It can be varied depending on the conditions of the battery or operation.</li> </ul>

Battery charging cradle	
Power requirements	5 V  1.8 A or more (AC adapter)
Power consumption	9 W
Dimensions (W x H x D)	Approx. 120 mm x 92.3 mm x 90 mm
Operating temperature	5 °C to 35 °C
Operating humidity	5 % to 60 %
Output	USB : Micro USB port for charging battery

- Design and specifications are subject to change without notice.

