



ENGLISH

# SIMPLE MANUAL

# DVD Home Theater System

To view the instructions of advanced features,  
visit <http://www.lg.com> and then download Owner's Manual.  
Some of the content in this manual may differ from your unit.

MODEL  
LHD675



\* M F L 6 8 9 0 3 2 3 1 \*

[www.lg.com](http://www.lg.com)



## Front Panel



- MIC 1/2 ..... Connect a microphone.  
PORT. IN ..... Connect to a Portable device.  
USB Port ..... Connect a USB device.  
△ ..... Disc Tray Open / Close  
➤II ..... Starts / Pauses playback.  
□ ..... Stops playback.  
F ..... Changes the input source or function.  
- / + ..... Adjusts volume.  
∅ / | ..... Power On / Off

## Rear Panel




- SPEAKERS ..... Connect to speakers.  
HDMI OUT TO TV ..... Connect to TV.  
AUX (L/R) INPUT ..... Connect to analogue device.  
VIDEO OUT ..... Connect to TV.  
OPTICAL IN ..... Connect to digital device.  
ANTENNA FM ..... Connect to radio antenna.

## 1

### Speaker Connection

**!** Speaker design and connection method may be different according to models.

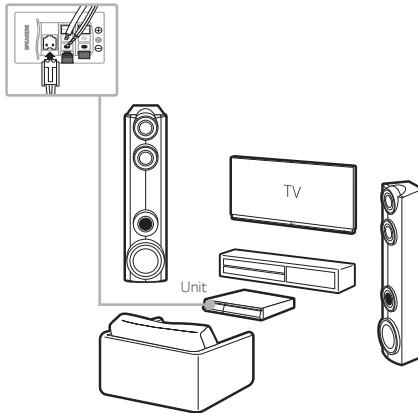

**2****TV Connection****HDMI & Optical Connection**

- ① Connect the Player to the TV using HDMI & Optical cable.
- ② Set the input selector to HDMI on the TV.
- ③ Set up [External Speaker (Optical)] on your TV setting menu.
- ④ Follow the instructions on the TV screen using remote control.

**3****Home Menu**

Home menu appears on the TV screen. Enjoy various functions on the player.

**LG Sound Sync  
(Wireless)**

For more information, download the online owner's manual. <http://www.lg.com>

## Additional Information

### Specification

Power requirements	Refer to main label.
Power consumption	Networked standby : 0.4 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 360 mm x 60.5 mm x 299 mm
Net Weight	Approx. 2.69 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	1,000 W

Design and specifications are subject to change without notice.

### How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

### Replacement of battery

