


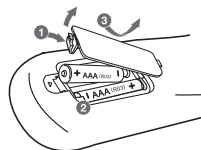 
Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 204.5 mm x 278 mm x 285.5 mm
Net Weight	Approx. 2.7 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	230 W

 
Design and specifications are subject to change without notice.

Replacement of battery



POWER: This unit operates on a mains supply of 200 - 240 V ~, 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

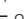Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



SIMPLE MANUAL

DVD MINI
HI-FI SYSTEM

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
DM5360

 


www.lg.com

ENGLISH




Front Panel

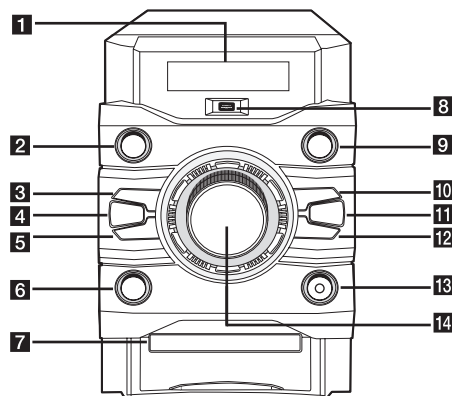

- 1** Display window
- 2** **⏻/I** (Standby/On)
Turns the power on or off.
- 3** **>>I** (Skip/Search)
- Skips to the next track/file/chapter.
- Tunes in the desired radio station.
- 4** **B. BLAST** (Bass Blast)
Press to select BASS effect directly.


- 5** **I<<** (Skip/Search)
- Skips to the previous track/file/chapter.
- Tunes in the desired radio station.
- 6** **MIC VOLUME** (Microphone Volume)
Adjusts Mic volume.
- 7** Disc tray
- 8** USB Port
You can play sound files by connecting the USB device.
- 9** **FUNCTION**
Selects the function and input source.
- 10** **>/II** (Play/Pause)
- Starts or pauses playback.
- Selects Stereo/Mono.
- 11** **REGION EQ**
Chooses region equalizer.
- 12** **△** (Open/Close)
Opens and closes the disc tray.
- 13** **MIC** (Microphone) jack
Connects a microphone.
- 14** **MASTER VOLUME**
Adjusts speaker volume.

 Rear Panel

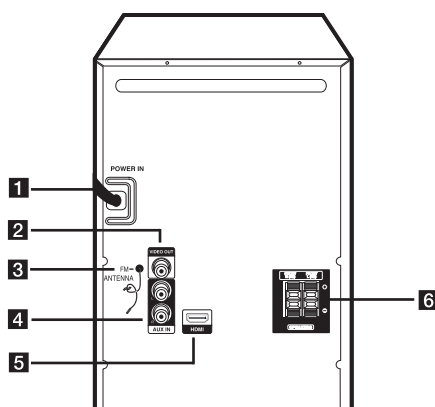

- 1** **POWER IN**
- 2** **VIDEO OUT**
Connects to TV.
- 3** **ANTENNA (FM)**
- 4** **AUX IN (L/R)**
Connects an auxiliary device.
- 5** **HDMI**
Connects to TV.
- 6** **SPEAKERS** Terminal

 Speaker Connection

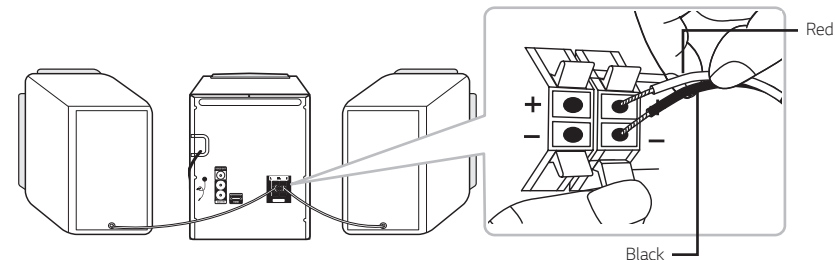


1 TV Connection

Connect with the unit and TV using HDMI.

- 1** Connect the unit to the TV using HDMI cable.
- 2** Set the input selector to HDMI on the TV.
- 3** Follow the instructions on the TV screen using remote control.

2 Home Menu

 Home menu appears on the TV screen. Enjoy various functions on the unit.

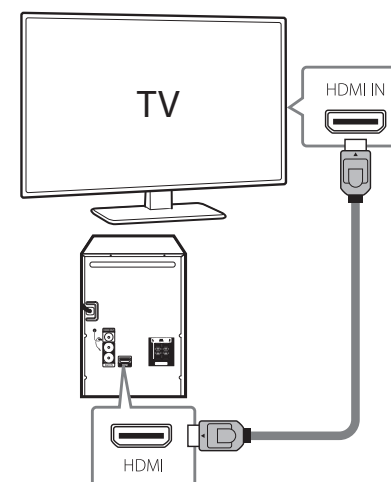

For more information, download the online owner's manual. <http://www.lg.com>