



# SIMPLE MANUAL

## Mini Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
CK99



MFL70920615

 
ENGLISH	ČESKY	SLOVENČINA
DEUTSCH	SLOVENČINA	SHQIP
FRANÇAIS	POLSKI	BOSANSKI
NEDERLANDS	ROMÂNĂ	SVENSKA
ITALIANO	LATVIEŠU	DANSK
ESPAÑOL	HRVATSKI	NORSK
ΕΛΛΗΝΙΚΑ	SRPSKI	SUOMI
PORTUGUÊS	БЪЛГАРСКИ	МАКЕДОНСКИ
MAGYAR		

[www.lg.com](http://www.lg.com)

Copyright © 2018 LG Electronics Inc. All Rights Reserved.  
1807\_Rev02



## Top Panel

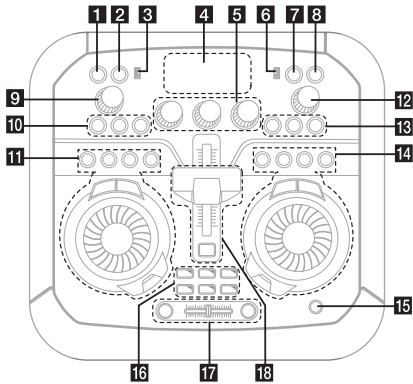

- 1** (Standby)  
Turns the power on or off.
- 2** **USB REC / DEMO**  
- Records to USB 1.  
- To stop Recording, press and hold for 3 seconds.  
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.
- 3** **USB 1 Port**  
You can play sound files by connecting the USB device.
- 4** Display window
- 5** **TEMPO A -/+**  
Adjusts TEMPO in USB 1 function.  
**MASTER VOL. (Volume) -/+**  
Adjusts speaker volume.  
**TEMPO B -/+**  
Adjusts TEMPO in USB 2 function.
- 6** **USB 2 Port**  
You can play sound files by connecting the USB device.
- 7** **F (Function)**  
- Selects the function and input source.  
- Press and hold to select the PARTY LINK.
- 8** **WIRELESS LINK**  
- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.  
- Enable or disable WIRELESS PARTY LINK mode.
- 9** **MIC (Microphone) VOLUME -/+**  
Adjusts microphone volume.
- 10** **VOCAL EFFECTS**  
Selects VOCAL EFFECTS mode.  
**MIC ECHO**  
Selects ECHO mode.  
**VOICE CANCELLER**  
You can reduce the vocal tones during music playback from various input sources.

- 11** **Side 1 / Basic controls (CD / USB 1 / BLUETOOTH / RADIO only)**

(Stop) / **RDS**

- Stops playback or cancels DELETE function.
- Radio Data System

(Skip/Search)

- Skips backward or forward.
- Searches for a section within a track/file.
- Selects the radio stations.

(Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono.

**SEARCH**

Moves to folder or file in selection mode.

**OK**

Selects a folder when searching a file.

**DJ SCRATCH / SEARCH & LEVEL**

- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Searches a folder or a file.
- Adjusts DJ EFFECT level.
- Selects vocal effects.

**USER EQ**

Selects the equalizer created by your own.

**DJ EFFECT**

Selects a desired DJ EFFECT.

**DJ LOOP**

Selects DJ LOOP mode.  
(DJ LOOP mode can use during CD/USB playback.)

- 12** **H/P (Headphone) VOLUME -/+**

Adjusts headphone volume.

- 13** **KEY CHANGER (b/#)**

Changes the key to suit your vocal range.

**H/P (Headphone) MODE**

Press to select a headphone monitor mode.

- 14** **Side 2 / Basic controls (USB 2 only)**

(Stop)

Stops playback or cancels DELETE function.

(Skip/Search)

- Skips backward or forward.
- Searches for a section within a track/file.

(Play/Pause)

Starts or pauses playback.

**SEARCH**

Moves to folder or file in selection mode.

**OK**

Selects a folder when searching a file.

### DJ SCRATCH / SEARCH & MULTI

- Turns clockwise or counterclockwise to make scratch sound.
- Searches a folder or a file.
- Selects the lighting effects.

### DJ LOOP

Selects DJ LOOP mode.  
(DJ LOOP mode can use during USB playback.)

### SPECIAL EQ / BASS BLAST (or BASS BLAST+)

- Chooses special equalizer.
- Press and hold to select BASS BLAST (or BASS BLAST+) effect directly.

### LIGHTING

Selects lighting mode.

### 15 (Open/Close)

Opens and closes the disc tray.

### 16 CLUB, DRUM, USER (DJ PAD)

Selects CLUB, DRUM or USER sound effect to mix.  
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)

### 1, 2, 3, 4, 5, 6 (DJ PAD)

Press a desired sound pad.

### 17 AUTO SYNC

When using MIX, you can synchronize the tempo of audio files being played in USB 1 and USB 2 by pressing **AUTO SYNC**.

### MIX

Mixes audio sound.

### Cross fader

Move the cross fader to adjust the sound volume of mixed sound when using MIXER ON.

 
### 18 PARTY ACCELERATOR lever

Slide the lever to create a party atmosphere.

### PARTY ACCELERATOR MODE


Selects PARTY ACCELERATOR MODE.

## Front Panel

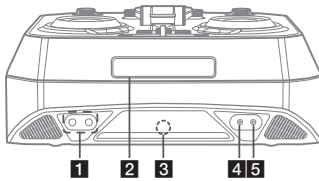


- 1** MIC (Microphone) 1/2 jack
- 2** Disc tray
- 3**  (Remote sensor)
- 4** PORT. (Portable) IN jack
- 5** H/P (Headphone) jack

## Speaker Connection

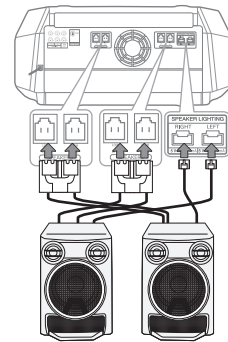 


## Rear Panel

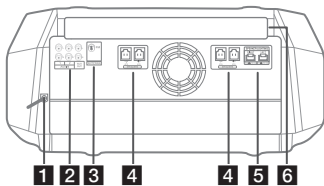 

- 1** Power cord
- 2** AUX IN 1/2 (L/R)
- 3** AUX OUT (L/R)
- 4** ANTENNA (FM)
- 4** SPEAKERS connector
- 5** SPEAKER LIGHTING  
Connect the speaker lighting cables.
- 6** Lighting LED

## Additional Information

 
### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 470 mm x 213 mm x 423 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	5,000 W RMS

Design and specifications are subject to change without notice.

## Additional Information

### Replacement of battery

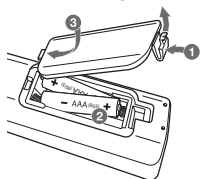

### Caution

- When you use the multiple socket, it is advisable to use 15 A socket. 10 A socket may cause power off due to lack of power supply.
- Do not place objects on the speakers. It may cause the objects to fall and make property damage.
- Install the speakers on a firm surface not to slide. The vibration caused by the strong output can shake and move the speakers.
- Avoid turning up max volume in a small enclosed space. The powerful and intense output of the speakers can shake the ceiling and get the objects in the room falling.
- To protect from hearing damage, keep the sufficient distance from the speaker. The overwhelming sound from the speaker may cause a person's hearing damage.
- Allow more than 20 cm of free space between the main set and the speakers when you install the main set on the ground. High sound pressure from the speakers can make the set tremble to disturb the CD playback.
- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

### Grounding

(Except for devices which are not grounded.) Ensure that you connect the earth ground wire to prevent possible electric shock (i.e. a Audio with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet). If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightning rods, or gas pipes.

### How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

### Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type Mini Hi-Fi System is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm

### Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

### LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>