

Contents

| | | |
|--|-----|-----|
| Introduction | | |
| Introduction | A1 | |
| Connecting the Monitor..... | A2 | |
| Location and Function of Controls | A4 | |
| Control Panel Function | A5 | |
| On Screen Display (OSD) Control Adjustment | A6 | |
| On Screen Display(OSD) Selection and Adjustment | A7 | |
| Video Memory Modes | A11 | |
| Troubleshooting | A12 | |
| Specifications | A13 | |
| Einleitung | | |
| Einleitung | B1 | |
| Anschließen | B2 | |
| Ort und Funktion der Bedienungselemente | B4 | |
| Bedienungselemente der Bildkontrolle..... | B5 | |
| On Screen Display (OSD) Anpassung | B6 | |
| OSD Einstellung und Auswahlssymbole | B7 | |
| Videospeichermodi | B11 | |
| Störungen | B12 | |
| Produktbeschreibung | B13 | |
| Introduction | | |
| Introduction | C1 | |
| Branchement du Moniteur | C2 | |
| Nomenclature et Fonctions | C4 | |
| Fonctions du Panneau de Commande..... | C5 | |
| Réglage des Commandes Affichage Écran..... | C6 | |
| Options de sélection et de Réglage OSD (affichage écran) | C7 | |
| Mise en Mémoire de Modes Vidéo..... | C11 | |
| Quelques Conseils en Cas D'incident | C12 | |
| Spécifications D'entree | C13 | |
| Introduzione | | |
| Introduzione | D1 | |
| Collegamento del Monitor | D2 | |
| Posizione e Funzione dei Conandi di Controllo .. | D4 | |
| Funzione del Pannello di Controllo..... | D5 | |
| Controllo Regolazione On Screen Display (OSD) | | D6 |
| Elementi di Selezione e Regolazione dell'OSD..... | | D7 |
| Modalità di Memoria Video | | D11 |
| In Caso di Problemi | | D12 |
| Specifiche..... | | D13 |
| Introducción | | |
| Introducción | E1 | |
| Conectando el Monitor | E2 | |
| Ubicación y Función de los Controles | E4 | |
| Función del Panel de Control | E5 | |
| Ajuste del Control de Exhibición en Pantalla (OSD) | E6 | |
| Ajuste del OSD y Selección de Elementos | E7 | |
| Modos de Memoria de Video..... | E11 | |
| Sugerencias para Localizar las Fallas | E12 | |
| Especificaciones | E13 | |
| Introdução | | |
| Introdução..... | F1 | |
| Conectando o Monitor | F2 | |
| Posição dos Controles e Descrição | F4 | |
| Funções do Painel de Controle | F5 | |
| Ajuste On Screen Display(OSD) | F6 | |
| Ajustes OSD e Itens de Seleção | F7 | |
| Modos de Memória de Vídeo..... | F11 | |
| Resolvendo Problemas..... | F12 | |
| Especificações | F13 | |
| Inleiding | | |
| Inleiding | N1 | |
| De Monitor Aansluiten | N2 | |
| De plaatsing en de werking van de knoppen..... | N4 | |
| Het bedieningspaneel | N5 | |
| Bediening via het beeldscherm OSD (On Screen Display) | N6 | |
| Kiezen en instellen via het OSD-systeem..... | N7 | |
| Modi voor videogeheugen..... | N11 | |
| Problemen oplossen | N12 | |
| Specificaties | N13 | |

Introduction

Thank you for purchasing a high resolution monitor. It will give you high resolution performance and convenient reliable operation in a variety of video operating modes.

ENGLISH

Features

- The monitor is a 17 inches (16.06 inches viewable) intelligent, microprocessor based monitor compatible with most analog RGB (Red, Green, Blue) display standards, including IBM PC®, PS/2®, Apple®, Macintosh®, Centris®, Quadra®, and Macintosh II family.
- The monitor provides crisp text and vivid color graphics with VGA, SVGA, XGA, and VESA Ergonomic modes (non-interlaced), and most Macintosh compatible color video cards when used with the appropriate adaptor. The monitor's wide compatibility makes it possible to upgrade video cards or software without purchasing a new monitor.
- Digitally controlled auto-scanning is done with the micro-processor for horizontal scan frequencies between 30 and 70kHz, and vertical scan frequencies between 50-160Hz.
- This monitor is capable of producing a maximum horizontal resolution of 1280 dots and a maximum vertical resolution of 1024 lines.
- The microprocessor-based digital controls allow you to adjust conveniently a variety of image controls by using the OSD (On Screen Display).
- On Screen Display(OSD) adjustments in seven languages: English, Deutsch, Français, Español, Italiano, Português, Korean for ease of setup and screen optimization.
- Plug and play capability if supported by your system.
- This monitor has DDC 2B function.**
- Compliant with the following regulated specifications :**
 - EPA ENERGY STAR
 - Swedish MPR II
 - Swedish TCO' 99*



**Applies to 773E only.*

***For detailed information, please refer to the Reference Guide provided .*

- Turn off the equipment and all attached options.
- Carefully set the monitor face-down with the underside facing you.

Installation

1. Align the hooks on the tilt/swivel stand with the matching slots in the base of the monitor.
2. Insert the hooks into slots.
3. Slide the tilt/swivel stand toward the front of the monitor until the latches click into the locked position.

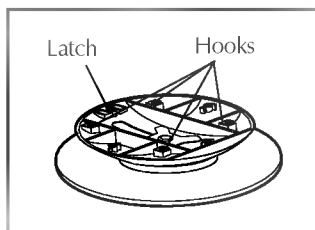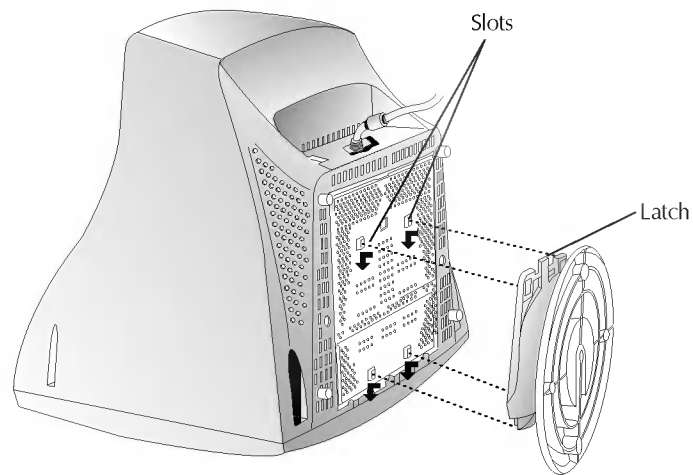


On the back of the monitor are two plug-in connections; one for the AC power cord, and the other for the signal cable from the video card.

- Power off both the monitor and PC.
- Connect the 15 pin VGA connector of the supplied signal cable to the output VGA video connector on the PC and the matching input connector on the rear of the monitor. The connectors will mate only one way. If you cannot attach the cable easily, turn the connector upside down and try again. When mated, tighten the thumbscrews to secure the connection.
- Locate the appropriate MAC to VGA adapter block at your local computer store. This adapter changes the high density 3 row 15 pin VGA connector to the correct 15 pin 2 row connection to mate with your MAC. Attach the other end of the signal cable to the side of the adapter block with 3 rows.


Connect the attached adapter block/signal cable to the video output on your MAC.

- One end of the AC power cord is connected into the AC power connector on the back of the monitor. The other end is plugged into a properly grounded three-prong AC outlet.
- Power on the PC, then the monitor.
- If you see the SELF DIAGNOSTICS message, check the signal cable and connectors.
- After using the system, power off the monitor, then the PC.

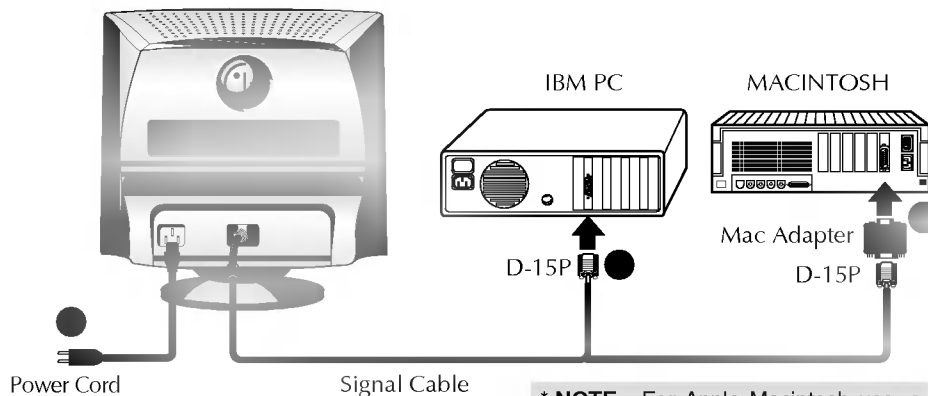


* **NOTE** : For Apple Macintosh use, a separate plug adapter is needed to change the 15 pin high density (3 row) D-sub VGA connector on the supplied cable to a 15 pin 2 row connector.


Front View

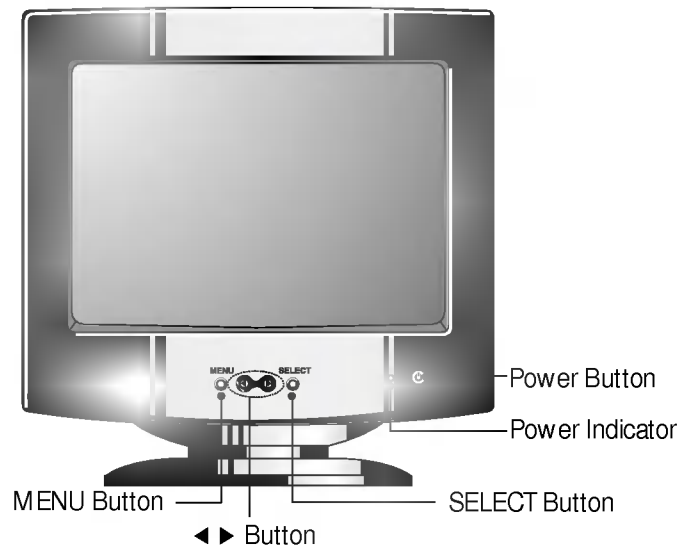



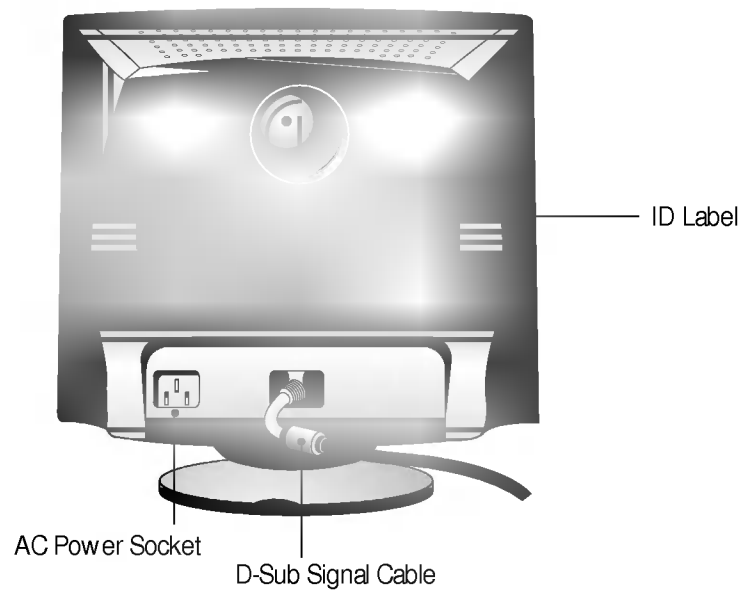


Rear View

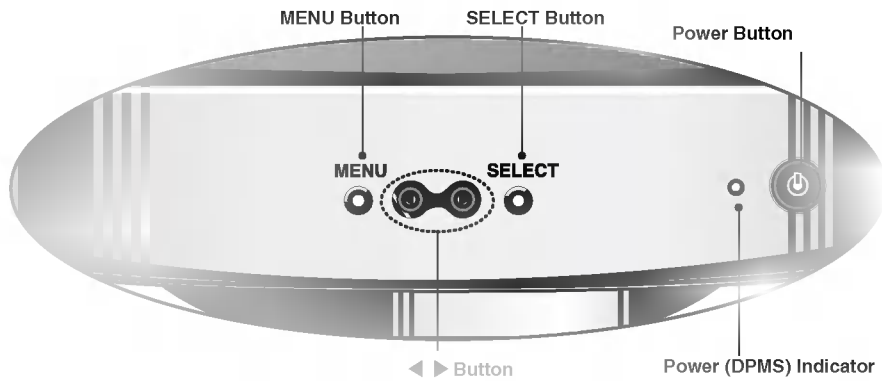

Front Panel Controls



| Control | Function |
|---|---|
|  MENU Button | Use this button to enter or exit the on screen display. |
|  ◀▶ Button | Use these buttons to choose or adjust items in the on screen display. |
|  SELECT Button | Use this button to enter a selection in the on screen display. |
|  Power Button | Use this button to turn the monitor on or off. |
|  Power (DPMS) Indicator | This Indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (stand-by/suspend/power off), this indicator color changes to amber. |




Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system. A quick example is given below to familiarize you with the use of the controls. Following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE



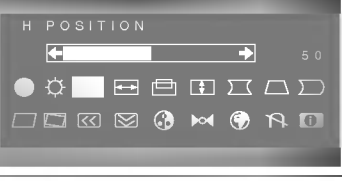

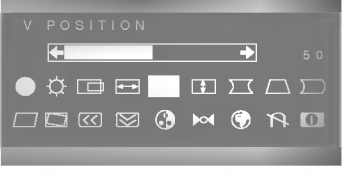
- Allow the monitor to stabilize for at least 30 minutes before making image adjustment.

To make adjustments in the On Screen Display, follow these steps:

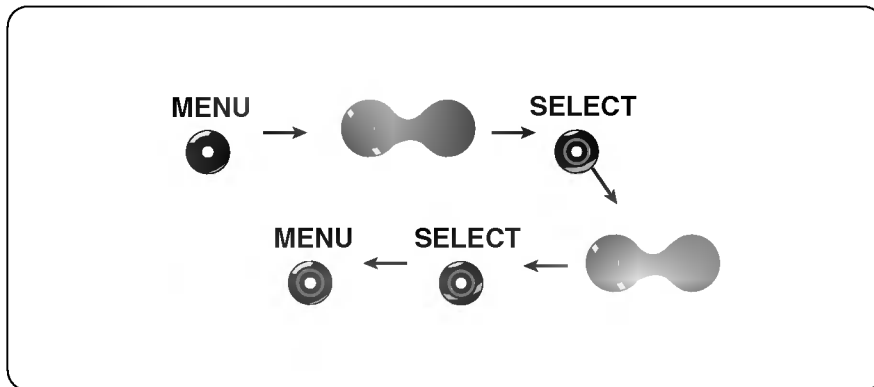


- 1** Press the MENU Button, then the main menu of the OSD appears.
- 2** To access a control, use the ◀ or ▶ Buttons. When the icon you want becomes highlighted, press the SELECT Button.
- 3** Use the ◀ ▶ Buttons to adjust the item to the desired level.
- 4** Accept the changes by pressing the SELECT Button.
- 5** Exit the OSD by pressing the MENU Button.

You were introduced to the procedure of selection and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.
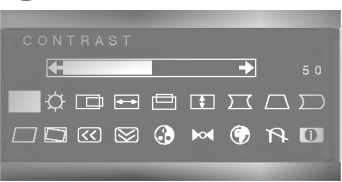
| | |
|---|---|
|  <p>The image shows the OSD menu for CONTRAST. At the top, there is a semi-circle icon and the word "CONTRAST". Below that is a horizontal slider with a double-headed arrow and the number "50" on the right. Underneath the slider are two rows of icons: the first row includes a sun, a monitor, a double-headed arrow, a square, a plus sign, a minus sign, a trapezoid, and a rounded rectangle; the second row includes a monitor, a left arrow, an envelope, a globe, a double-headed arrow, a globe, a right arrow, and a monitor.</p> | <p>Adjust the display to the contrast desired.</p> |
|  <p>The image shows the OSD menu for BRIGHTNESS. At the top, there is a sun icon and the word "BRIGHTNESS". Below that is a horizontal slider with a double-headed arrow and the number "50" on the right. Underneath the slider are two rows of icons: the first row includes a sun, a square, a monitor, a double-headed arrow, a square, a plus sign, a minus sign, a trapezoid, and a rounded rectangle; the second row includes a monitor, a left arrow, an envelope, a globe, a double-headed arrow, a globe, a right arrow, and a monitor.</p> | <p>Used to adjust the brightness of the screen.</p> |
|  <p>The image shows the OSD menu for H POSITION. At the top, there is a monitor icon and the words "H POSITION". Below that is a horizontal slider with a double-headed arrow and the number "50" on the right. Underneath the slider are two rows of icons: the first row includes a sun, a square, a monitor, a double-headed arrow, a square, a plus sign, a minus sign, a trapezoid, and a rounded rectangle; the second row includes a monitor, a left arrow, an envelope, a globe, a double-headed arrow, a globe, a right arrow, and a monitor.</p> | <p>To move picture image left and right. ◀ Moves the screen image left. ▶ Moves the screen image right.</p> |
|  <p>The image shows the OSD menu for H SIZE. At the top, there is a double-headed arrow icon and the words "H SIZE". Below that is a horizontal slider with a double-headed arrow and the number "50" on the right. Underneath the slider are two rows of icons: the first row includes a sun, a square, a monitor, a double-headed arrow, a square, a plus sign, a minus sign, a trapezoid, and a rounded rectangle; the second row includes a monitor, a left arrow, an envelope, a globe, a double-headed arrow, a globe, a right arrow, and a monitor.</p> | <p>To adjust image width. ◀ Decreases the size of the screen image. ▶ Increases the size of the screen image.</p> |
|  <p>The image shows the OSD menu for V POSITION. At the top, there is a monitor icon and the words "V POSITION". Below that is a horizontal slider with a double-headed arrow and the number "50" on the right. Underneath the slider are two rows of icons: the first row includes a sun, a square, a monitor, a double-headed arrow, a square, a plus sign, a minus sign, a trapezoid, and a rounded rectangle; the second row includes a monitor, a left arrow, an envelope, a globe, a double-headed arrow, a globe, a right arrow, and a monitor.</p> | <p>To move image down and up. ◀ Moves the screen image down. ▶ Moves the screen image up.</p> |




V SIZE

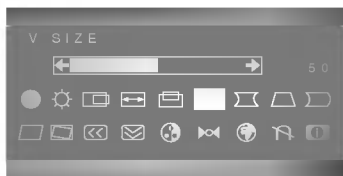

To adjust image height.

- ◀ Decreases the size of the screen image.
- ▶ Increases the size of the screen image.

PINCUSHION

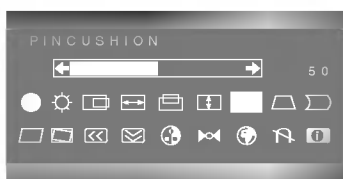

To correct the bowing in and out of the image.

- ◀ Curves the image's edges inwards.
- ▶ Curves the image's edges outwards.


TRAPEZOID



To correct geometric distortion.

- ◀ Makes the screen image narrower at the top.
- ▶ Moves the screen image wider at the top.


PIN BALANCE

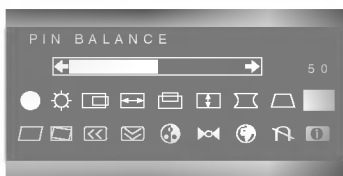

To correct the balance of both sides bowing.

- ◀ Curvature of the sides to the right.
- ▶ Curvature of the sides to the left.


PARALLELOGRAM

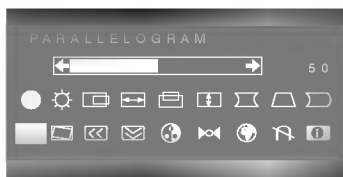

This control adjusts for a skewing of the screen image.

- ◀ Tilts the screen image leftward.
- ▶ Tilts the screen image rightward.

TILT

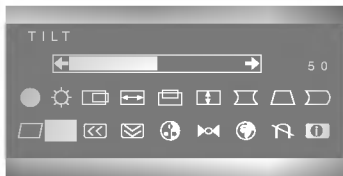

To correct image rotation.


- ◀ Tilts the screen image left.
- ▶ Tilts the screen image right.

◀◀ H MOIRE



Reduce horizontal moire when interference patterns of dark steady wavy lines appear on your screen. The moire adjustments may affect the focus of the screen.

✉ V MOIRE

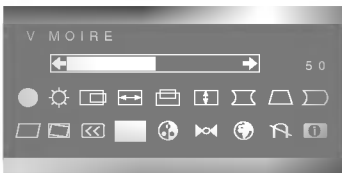



Reduce vertical moire when interference patterns of dark steady wavy lines appear on your screen. The moire adjustments may affect the focus of the screen.

🌐 COLOR



Select the desired color temperature (9300K, 6500K) or select user to set your own color levels(R/G/B).

- **9300** : Slightly bluish white.
- **6500** : Slightly reddish white.
-  : To set your own color levels. Allow for specific adjustments to Red, Green and Blue (R/G/B).
-  : To exit the COLOR OSD.

🔍 RECALL




If the monitor is operating in a factory preset mode, this control will reset the image to the factory preset mode. If you want more information on the Preset Mode, refer to A11 page.

LANGUAGE




To choose the language in which the control names are displayed. OSD Menus are available in seven languages : **English, German, French, Spanish, Italian, Portuguese and Korean.**

DEGAUSS

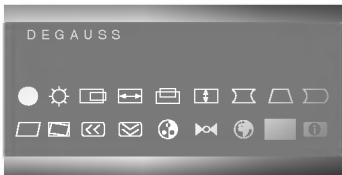

Used to demagnetize the picture to give a more accurate image and color.

INFORMATION

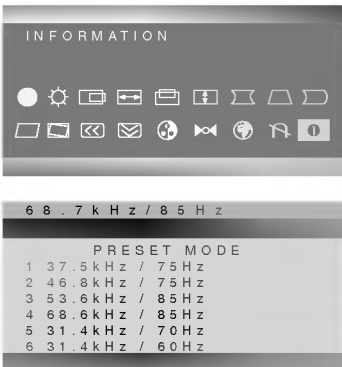

To inform users of preset and user mode data.

Video Memory Modes

The monitor has 36 memory locations for display modes, 11 of which are factory preset to popular video modes.

Display Modes (Resolution)

| | Display Modes (Resolution) | Horizontal Freq.(kHz) | Vertical Freq.(Hz) |
|----|----------------------------|-----------------------|--------------------|
| 1 | VESA 640 x 480 | 37.50 | 75 |
| 2 | VESA 800 x 600 | 46.88 | 75 |
| 3 | VESA 800 x 600 | 53.68 | 85 |
| 4 | VESA 1024 x 768 | 68.677 | 85 |
| 5 | VESA 640 x 400 | 31.47 | 70 |
| 6 | VESA 640 x 480 | 31.47 | 60 |
| 7 | VESA 800 x 600 | 37.88 | 60 |
| 8 | VESA 640 x 480 | 43.27 | 85 |
| 9 | MAC 832 x 624 | 49.75 | 75 |
| 10 | VESA 1024 x 768 | 60.02 | 75 |
| 11 | VESA 1280 x 1024 | 63.98 | 60 |

User Modes

- Modes 12-36 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 12.

If you use up the 25 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 12.

Recalling Display Modes

- When your monitor detects a mode it has seen before, it automatically recalls the image settings you may have made the last time you used that mode.

You may, however, manually force a recall of each of the 11 preset modes by pressing the Recall button. All preset modes are automatically recalled as the monitor senses the incoming signal.

The ability to recall the preset modes is dependent on the signal coming from your PC's video card or system. If this signal does not match any of the factory modes, the monitor automatically sets itself to display the image.

Check the following before calling for service.

SELF DIAGNOSTICS message.

- The signal cable is not connected, or is loose. Check and secure the connection.

OUT OF FREQUENCY message appears.

- The frequency of the signal from the video card is outside the operating range of the monitor.

* Horizontal Frequency : 30-70kHz

* Vertical Frequency : 50-160Hz

Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

The power LED is illuminated amber.

- Display power management mode.
- There is no active signal coming from the PC.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapter configuration.

The image on the SCREEN is not centered, or too small, or not a rectangle shape.

- Image adjustment not been done yet in the current operating mode. Use the MENU, SELECT and ◀ ▶ buttons to set the image to your liking.

The monitor doesn't enter the power saving off mode (Amber).

- Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

An abnormal picture is displayed on the screen. For example, the upper part of the picture may be missing or dark.

- If using certain non-VESA Standard video card, an abnormal picture may be displayed. Try setting it to one of the factory preset modes, or selecting to a resolution and refresh rate within the specification limits of the monitor.

NOTE

- If the power indicator(LED) light is blinking amber, may result in abnormal condition of the monitor.
- Then press a power ON/OFF button on the front panel control and call your service technician for more information.

| | | |
|----------------------------|---|--|
| Picture Tube | 17 inch (16.06 inches view able) | |
| | 90 degree deflection | |
| | 0.27mm dot pitch | |
| | ARAS(Anti-Reflective Anti-Static) coating | |
| Sync Input | Horizontal Freq. | 30 - 70kHz (Automatic) |
| | Vertical Freq. | 50 - 160Hz (Automatic) |
| | Input Form | Separate, TTL, Positive/Negative |
| | Signal Input | 15 pin D-Sub Connector |
| Video Input | Input Form | Separate, RGB Analog, 0.7Vp-p/75 ohm, Positive |
| | Resolution(max) | 1280 x 1024@60Hz |
| Power | Normal | ≤ 74W |
| Consumption | Stand-by/Suspend | ≤ 15W |
| | Power Off | ≤ 5W |
| Dimensions | Width | 40.0 cm / 15.7 inches |
| | Height | 41.0 cm / 16.1 inches |
| | Depth | 43.0 cm / 16.9 inches |
| AC 100-240V 50/60Hz 2.0A | | |
| | Net | 14.6 kg (32.19 lbs) |
| Operating Condition | | |
| | Temperature | 10 °C to 40 °C |
| | Humidity | 10 % to 90 % non-Condensing |
| Storage Condition | | |
| | Temperature | 0 °C to 60 °C |
| | Humidity | 5 % to 90 % non-Condensing |