



INSTALLATION MANUAL

AIR CONDITIONER

Please read this installation manual completely before installing the product. Installation work must be performed in accordance with the national wiring standards by authorized personnel only.

Please retain this installation manual for future reference after reading it thoroughly.

Hydro Kit Wall mounted (medium temperature)
Original instruction



MFL67086721
Rev.02_032026

Copyright © 2025 - 2026 LG Electronics Inc. All Rights Reserved.

www.lg.com

ENGLISH

ITALIANO

ESPAÑOL

FRANÇAIS

DEUTSCH

ΕΛΛΗΝΙΚΑ

ČEŠTINA

NEDERLANDS

POLSKI

LIMBA ROMÂNĂ

TABLE OF CONTENTS

4 SAFETY INSTRUCTIONS

16 INSTALLATION PART

17 GENERAL INFORMATION

- 17 Model Information
- 17 Accessories

20 INSTALLATION

- 20 Transporting the Unit
- 20 Selection of the best location

21 SPECIAL REQUIREMENTS

- 21 Flow chart

25 INSTALLATION OF INDOOR UNIT

- 25 Conditions where Indoor Unit is Installed

28 PIPING AND WIRING FOR INDOOR UNIT

- 28 Water Piping and Water Circuit Connection
- 31 Water pump Capacity
- 31 Pressure Drop
- 33 Typical Installation Example
- 36 Water cycle
- 38 Water Quality
- 38 Frost protection
- 39 Preparation for Piping
- 40 Electrical Wiring
- 41 Wiring Connection
- 44 Connecting Cables

45 ACCESSORIES INSTALLATION

- 45 Before Installation
- 45 Thermostat
- 48 DHW Tank
- 51 DHW Tank Kit
- 52 Solar Thermal Kit
- 53 Dry Contact
- 55 External Controller - Setting up programmable digital input operation
- 56 Remote Temperature Sensor
- 57 How to Install Remote Temperature Sensor
- 58 Solar pump
- 59 Wi-fi Modem
- 60 2Way Valve
- 61 3Way Valve(A)
- 62 Final check

63 SYSTEM SET-UP

- 63 DIP Switch Setting

68 SERVICE SETTING

- 68 How to enter service setting
- 68 Service setting
- 69 Service contact
- 70 Model information
- 71 RMC version Information
- 72 Open source license

73 INSTALLER SETTING

- 73 How to enter installer setting
- 74 Installer setting

90 COMMISSIONING

- 90 Check List before Starting Operation
- 91 Starting Operation
- 92 Starting Operation flow chart
- 92 Airborne Noise Emission
- 93 Decommissioning and Recycling
- 94 Troubleshooting
- 97 Model Designation
- 98 Open Source Software Notice Information

SAFETY INSTRUCTIONS

	Read the precautions in this manual carefully before operating the unit.		This appliance is filled with flammable refrigerant (R32)
	This symbol indicates that the Operation Manual should be read carefully.		This symbol indicates that a service personnel should be handling this equipment with reference to the Installation Manual.

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

 This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

WARNING

Installation

- Compliance with national gas regulations shall be observed.
- Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.
 - There is risk of fire or electric shock.

- For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.
 - There is risk of fire or electric shock.
- Always ground the unit.
 - There is risk of fire or electric shock.
- Install the panel and the cover of control box securely.
 - There is risk of fire or electric shock.
- Always install a dedicated circuit and breaker.
 - Improper wiring or installation may cause fire or electric shock.
- Be cautious when unpacking and installing the product.
 - Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.
- Use the correctly rated breaker or fuse.
 - There is risk of fire or electric.
- Do not modify or extend the power cable.
 - There is risk of fire or electric shock.
- Do not install, remove, or reinstall the unit by yourself (customer).
 - There is risk of fire, electric shock, explosion, or injury.
- For antifreeze, always contact the dealer or an authorized service center.
 - Almost the antifreeze is a toxic product.
- For installation, always contact the dealer or an Authorized Service Center.
 - There is risk of fire, electric shock, explosion, or injury.
- Do not install the unit on a defective installation stand.
 - It may cause injury, accident, or damage to the unit.
- Do not turn on the breaker or power under condition that front panel, cabinet, top cover, control box cover are removed or opened.
 - Otherwise, it may cause fire, electric shock, explosion or death.

- Be sure the installation area does not deteriorate with age.
 - If the base collapses, the unit could fall with it, causing property damage, unit failure, and personal injury.
- Do not install the unit outdoor.
 - It may cause damage to the unit.
- Use a vacuum pump or inert (nitrogen) gas when doing leakage test or purging air. Do not compress air or oxygen and do not use flammable gases.
 - There is the risk of death, injury, fire or explosion.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation. (for R32)
- Ducts connected to an appliance shall not contain an ignition source. (for R32)
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.)
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- This equipment shall be provided with a supply conductor complying with the national regulation.
- Have all electric work done by a licensed electrician according to "Electric Facility Engineering Standard" and "Interior Wire Regulations" and the instructions given in this manual and always use a special circuit.
 - If the power source capacity is inadequate or electric work is performed improperly, electric shock or fire may result.
- Always install a dedicated circuit and breaker.
 - Improper wiring or installation may cause fire or electric shock.
- Keep any required ventilation openings clear of obstruction.
- Mechanical connections shall be accessible for maintenance purposes.

- To prevent the mixing of different types of refrigerants, be sure to check the type of refrigerant used in the outdoor unit.
- When mechanical connectors are reused indoors, sealing parts shall be renewed. (for R32)
- When flared joints are reused indoors, the flare part shall be re-fabricated. (for R32)

Operation

- Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.
 - Moisture may condense and wet or damage furniture.
- Take care to ensure that power cable could not be pulled out or damaged during operation.
 - There is risk of fire or electric shock.
- Do not place anything on the power cable.
 - There is risk of fire or electric shock.
- Do not plug or unplug the power supply plug during operation.
 - There is risk of fire or electric shock.
- Do not touch (operate) the unit with wet hands.
 - There is risk of fire or electric shock.
- Do not place a heater or other appliances near the power cable.
 - There is risk of fire or electric shock.
- Do not allow water to run into electric parts.
 - There is risk of fire, failure of the unit, or electric shock.
- Do not store or use flammable gas or combustibles near the unit.
 - There is risk of fire or failure of unit.
- Do not use the product in a tightly closed space for a long time.
 - Oxygen deficiency could occur.

- When flammable gas leaks, turn off the gas and open a window for ventilation before turning the unit on.
 - There is risk of explosion or fire.
- If strange sounds, or smell or smoke comes from unit, turn the breaker off or disconnect the power supply cable.
 - There is risk of electric shock or fire.
- Stop operation and close the window in storm or hurricane. If possible, remove the unit from the window before the hurricane arrives.
 - There is risk of property damage, failure of unit, or electric shock.
- Do not open the front cover of the unit while operation. (Do not touch the electrostatic filter, if the unit is so equipped.)
 - There is risk of physical injury, electric shock, or unit failure.
- When the unit is soaked (flooded or submerged), contact an Authorized Service Center.
 - There is risk of fire or electric shock.
- Be cautious that water could not enter the product.
 - There is risk of fire, electric shock, or product damage.
- Ventilate the unit from time to time when operating it together with a stove, etc.
 - There is risk of fire or electric shock.
- Turn the main power off when cleaning or maintaining the unit.
 - There is risk of electric shock.
- Take care to ensure that nobody could step on or fall onto the unit.
 - This could result in personal injury and unit damage.
- For installation, always contact the dealer or an Authorized Service Center.
 - There is risk of fire, electric shock, explosion, or injury.
- If the unit is not used for long time, we strongly recommend not to switch off the power supply to the unit.
 - There is risk of water freezing.

- Periodic (more than once/year) cleaning of the dust or salt particles stuck on the heat exchanger by using water.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- Do not pierce or burn refrigerant cycle part.
- Be aware that refrigerants may not contain an odour.

CAUTION

Installation

- Always check for gas (refrigerant) leakage after installation or repair of unit.
 - Low refrigerant levels may cause failure of unit.
- Keep level even when installing the unit.
 - To avoid vibration or water leakage.
- Use two or more people to lift and transport the unit.
 - Avoid personal injury.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry accredited assessment authority, which authorises their competence to handle refrigerants safely in accordance with an industry recognised assessment specification. (for R32)
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- If anyone other than a licensed Professional installs, repairs, or alters LG Electronics Air Conditioning Products, the warranty is voided.
 - All costs associated with repair are then the full responsibility of the owner.
- Do not install the product where it will be exposed to sea wind (salt spray) directly.
 - It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

- Refrigerant tubing shall be protected or enclosed to avoid damage.
- Flexible refrigerant connectors (such as connecting lines between the indoor and outdoor unit) that may be displaced during normal operations shall be protected against mechanical damage.
- The installation of pipe-work shall be kept to a minimum.
- Pipe-work shall be protected from physical damage.
- A brazed, welded, or mechanical connection shall be made before opening the valves to permit refrigerant to flow between the refrigerating system parts.
- Dismantling the unit, treatment of the refrigerant oil and eventual parts should be done in accordance with local and national standards.
- Do not install the unit in potentially explosive atmospheres.

Operation

- Do not lay on the cooled floor for long time when the unit is in cooling operation.
 - This could harm to your health.
- Do not use the unit for special purposes, such as preserving foods, works of art, etc.
 - There is risk of damage or loss of property.
- Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.
 - There is risk of fire, electric shock, or damage to the plastic parts of the unit.
- Do not step on or put anything on the unit.
 - There is risk of personal injury and failure of unit.
- Use a firm stool or ladder when cleaning or maintaining the unit.
 - Be careful and avoid personal injury.

- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants. (for R32)
- Do not unplug the power supply plug of **Hydro Kit** when stopping **Hydro Kit** operation. Always turn **Hydro Kit** off, using the wired remote controller.
 - A plate heat exchanger burst may happen because of disconnection of communication between **Hydro Kit** and the outdoor unit.
- A discharge pipe connected to the pressure-relief device is to be installed in a continuously downward direction and in a frost-free environment.

Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

Cabling

Cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of ageing or continual vibration from sources such as compressors or fans.

Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

Leak detection methods

The following leak detection methods are deemed acceptable for systems containing flammable refrigerants.

Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.

Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

NOTE

Examples of leak detection fluids are

- bubble method
- fluorescent method agents

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to removal and evacuation procedure.

Removal and evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration.

The following procedure shall be adhered to:

- a) safely remove refrigerant following local and national regulations;
- b) purge the circuit with inert gas;
- c) evacuate (optional for A2L);
- d) purge with inert gas (optional for A2L);
- e) open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L).

This process shall be repeated until no refrigerant is within the system (optional for A2L).

When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and that ventilation is available.

Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instruction.
- Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigerating system.

Prior to recharging the system, it shall be pressure tested with the appropriate purging gas.

The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.

Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).

Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.

Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs. The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order.

Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.

Consult manufacturer if in doubt. The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.

Do not mix refrigerants in recovery units and especially not in cylinders. If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.

The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

Connect the water for filling or refilling the heating system as specified by EN 1717/EN 61770 to avoid contamination of drinking water by return flow.

Servicing shall only be performed as recommended by the equipment manufacturer.

INSTALLATION PART

Thank you for choosing LG Electronics Air-to-Water Heat Pump **Hydro Kit**

Before starting installation, please make it sure that all parts are found inside the product box.

INDOOR UNIT BOX

Item	Image
Indoor unit	
Owner's / Installation manual	
Installation Sheet	

GENERAL INFORMATION

With advanced inverter technology, **Hydro Kit** is suitable for applications like under floor heating, and hot water generation. By Interfacing to various accessories user can customize the range of the application.

Model Information

Model name and related information

Model Name			Built-In Electric Heater(kW)	Power Source (Electric Heater)	Power Source (Unit)
Refrigerant	Indoor Unit				
	Phase	Capacity (kW)			
R410A / R32	1Ø	5.6	6 (3+3)	220-240 V~ 50 Hz	220-240 V~ 50 Hz
		7.1			
		9.0			

Accessories

To extend the functionality of **Hydro Kit**, there are various external auxiliary apparatus called as "accessories".

They are classified by "accessories" and "3rd party accessories" according to the manufacturer. Accessories are presented LG Electronics, and 3rd party accessories are presented by related manufacturers.

Accessories supported by LG Electronics

Item	Purpose	Model
DHW Tank Kit	To operate with DHW tank	PHLTA : 1Ø
Remote Air Sensor	To control by air temperature	PQRSTA0
Dry Contact	1 input port, AC 220 - 240V	PDRYCB000 PDRYCB100
	8 input port, For 3rd Party Thermostat	PDRYCB300
	8 input port, For 3rd Party Thermostat (AnalogInput)	PDRYCB320
Solar Thermal Kit	To operate with solar heating system	PHLLA(Limit temperature : 96 °C)
DHW Tank	To generate and store hot water	OSHW-200F : 200 L, Single Heating Coil OSHW-300F : 300 L, Single Heating Coil OSHW-500F : 500 L, Single Heating Coil OSHW-300FD : 300 L, Double Heating Coil
Thermistor for DHW Tank	To control hot water temperature of DHW tank	PHRSTA0
Drain Pan	To prevent drain water drop	PHDPC
Central Controller	Multiple installed products into one central control	
Wi-Fi Modem	To enable remote system operation from smartphone	PWFMDD200
Extension wire	To connect remote controller with Indoor PCB for communication	PZCWRC1
Cover Plate	To relocate remote controller from indoor unit	PDC-HK10
Remote Temperature sensor	-	PQRSTA0
Group Control wire	Cable Assembly for group control (Y-type cable : 0.25m, cable : 9.6m)	PZCWRCG3
Refrigerant Leakage Detector	R410A	PRLDNVS0
	R32	PLDRNV1S
2nd Circuit Thermistor	-	PRSTAT5K10

Accessories supported by 3rd party Companies

Item	Purpose	Specification
Solar Heating System	To generate auxiliary heating energy for water tank	Solar collector
Thermostat	To control by air temperature	Heating-Only type (230 V AC) Cooling/Heating type (230 V AC with Mode selection switch)
Mix Kit	To use mixing circuit	• Mixing valve • Mix pump • Mix Valve Sensor
3 rd Party Controller	To connect external controller using modbus protocol	
3way valve and actuator	(A) : To control water flow for hot water heating or floor heating / To control water flow when installing 3rd party boiler	3 wire, SPDT (Single Pole Double Throw) type, 230 V AC
2way valve and actuator	To control water flow for Fan Coil Unit	2 wire, NO(Normal Open) or NC(Normal Closed) type, 230 V AC
3rd Party ESS	To control the operation mode according to the energy storage state	

INSTALLATION

Transporting the Unit

CAUTION

Be very careful while carrying the unit.

- Do not have only one person carry the unit if it is more than 20 kg (44.1 lbs).
- PP bands are used to pack some products. Do not use them as a mean for transportation because they are dangerous.
- Tear plastic packaging bag and scrap it so that children cannot play with it. Otherwise plastic packaging bag may suffocate children to death.
- When carrying the unit, be sure to support it at 6-points. Carrying and lifting the unit with 4-point support may make it unstable, resulting in a fall.

Selection of the best location

Select space for installing the unit, which will meet the following conditions:

The place where the unit shall be installed inside.

The place shall easily bear a load exceeding four times of the unit weight.

The place where the unit shall be leveled.

The place shall allow easy water drainage.

The place where the unit shall be connected to the outdoor unit.


The place where the unit is not affected by an electrical noise.

The place where there should not be any heat source or steam near the unit.

SPECIAL REQUIREMENTS

Flow chart

For Installation

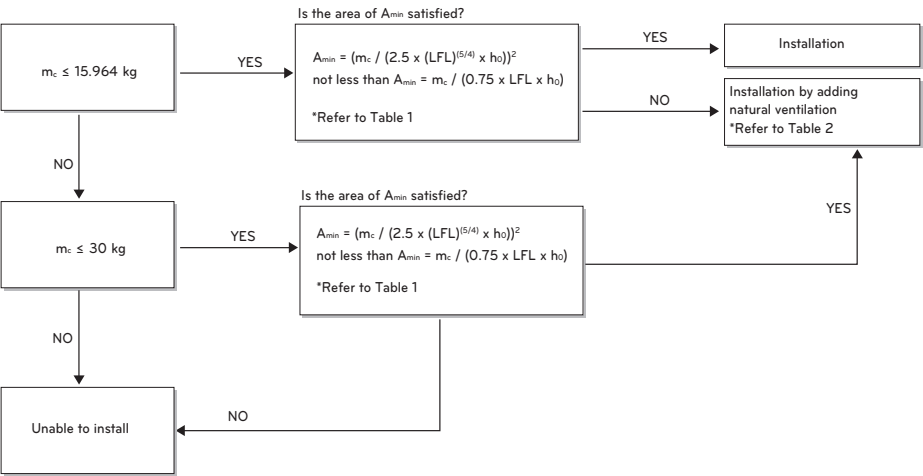

- A_{min} = Minimum installation required area
- m_c = Total amount of refrigerant in the system (kg)
- LFL(Lower Flammability Limit)(kg/m³) = 0.307 kg/m³
- h_o : The Vertical Distance from the floor to the point of Release (m)

Table 1: Minimum installation required area

Total amount of refrigerant in the system (kg)	Minimum installation required area (m ²)
	Wall Mounted (ho : 1.3 m)
1.50	4.08
1.60	4.64
1.80	5.87
2.00	7.25
2.20	8.77
2.40	10.44
2.60	12.26
2.80	14.21
3.00	16.32
3.20	18.56
3.40	20.96
3.60	23.50
3.80	26.18
4.00	29.01
4.20	31.98
4.40	35.10
4.60	38.36
4.80	41.77
5.00	45.32
5.20	49.02
5.40	52.87
5.60	56.85
5.80	60.99
6.00	65.27
6.20	69.69
6.40	74.26
6.60	78.97
6.80	83.83
7.00	88.83
7.20	93.98
7.40	99.28
7.60	104.72
7.80	110.30
8.00	116.03
8.20	121.90
8.40	127.92
8.60	134.09
8.80	140.40
9.00	146.85
9.20	153.45
9.40	160.19
9.60	167.08
9.80	174.12
10.00	181.30
10.20	188.62

Total amount of refrigerant in the system (kg)	Minimum installation required area (m ²)
	Wall Mounted (ho : 1.3 m)
10.40	196.09
10.60	203.70
10.80	211.46
11.00	219.37
11.20	227.42
11.40	235.61
11.60	243.95
11.80	252.44
12.00	261.07
12.20	269.84
12.40	278.76
12.60	287.82
12.80	297.03
13.00	306.39
13.20	315.89
13.40	325.53
13.60	335.32
13.80	345.26
14.00	355.34
14.20	365.56
14.40	375.93
14.60	386.45
14.80	397.11
15.00	407.92
15.20	418.87
15.40	429.96
15.60	441.20
15.80	452.59
15.964 *	462.03
16.00	464.12
16.20	475.79
16.40	487.61
16.60	499.58
16.80	511.69
17.00	523.94
17.20	536.34
17.40	548.89
17.60	561.58
17.80	574.42
18.00	587.40
18.20	600.52
18.40	613.79
18.60	627.21
18.80	640.77
19.00	654.48

* If m>15.964, must add natural ventilation

Total amount of refrigerant in the system (kg)	Minimum installation required area (m ²)
	Wall Mounted (h ₀ : 1.3 m)
19.20	668.33
19.40	682.32
19.60	696.47
19.80	710.75
20.00	725.18
20.20	739.76
20.40	754.48
20.60	769.35
20.80	784.36
21.00	799.51
21.20	814.82
21.40	830.26
21.60	845.85
21.80	861.59
22.00	877.47
22.20	893.50
22.40	909.67
22.60	925.99
22.80	942.45
23.00	959.05
23.20	975.81
23.40	992.70
23.60	1009.74
23.80	1026.93
24.00	1044.26
24.20	1061.74
24.40	1079.36
24.60	1097.13

Total amount of refrigerant in the system (kg)	Minimum installation required area (m ²)
	Wall Mounted (h ₀ : 1.3 m)
24.80	1115.04
25.00	1133.10
25.20	1151.30
25.40	1169.65
25.60	1188.14
25.80	1206.78
26.00	1225.56
26.20	1244.49
26.40	1263.56
26.60	1282.78
26.80	1302.14
27.00	1321.65
27.20	1341.30
27.40	1361.10
27.60	1381.04
27.80	1401.13
28.00	1421.36
28.20	1441.74
28.40	1462.26
28.60	1482.93
28.80	1503.74
29.00	1524.70
29.20	1545.80
29.40	1567.05
29.60	1588.44
29.80	1609.98
30.00	1631.66

Minimum installation required area (m²)

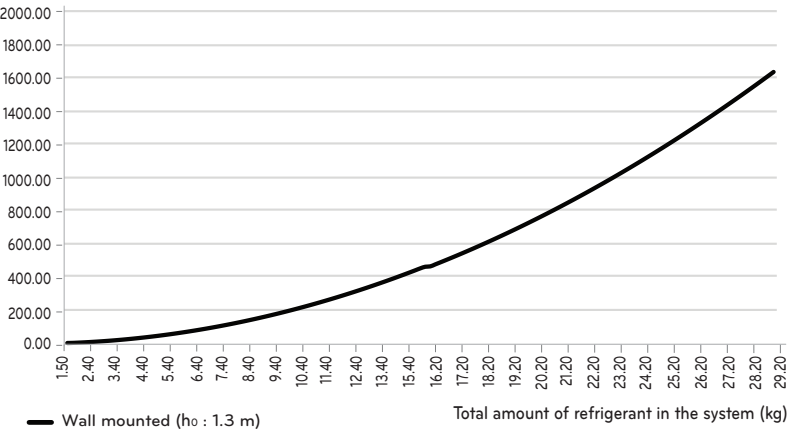



Table 2: Minimum installation required area

For the lower opening:

- It is not an opening to the outside
- The opening cannot be closed
- The opening must be $\geq Anv_{min}$
- The area of any openings above 300 mm from the floor does not count when determining Anv_{min}
- At least 50% of Anv_{min} is less than 200 mm above the floor
- The bottom of the lower opening is ≤ 100 mm from the floor
- The height of the opening is ≥ 20 mm

For the upper opening:

- It is not an opening to the outside
- The opening cannot be closed
- The opening must be $\geq 50\%$ of Anv_{min}
- The bottom of the upper opening must be $\geq 1\,500$ mm above the floor
- The height of the opening is ≥ 20 mm

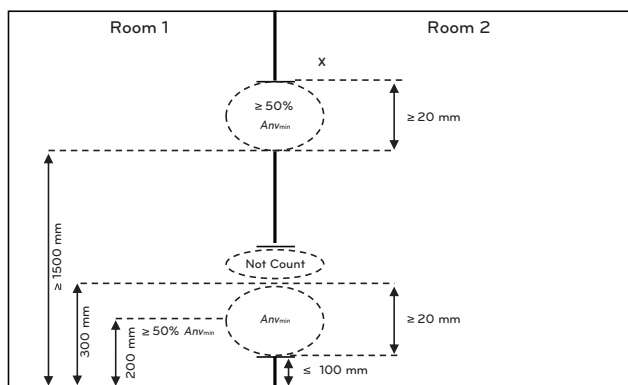Minimum opening area (A_{nv})

$$Anv_{\min} = \frac{m_c - m_{\max}}{LFL \times 104} \times \sqrt{\frac{A}{g \times m_{\max}}} \frac{M}{M - 29}$$

Anv Is the minimum opening for natural ventilation in m².

m_c Is the actual refrigerant charge of refrigerant in the system in kg;

$m_{\max}$ Is the allowable maximum refrigerant charge in the system in kg, calculated according to Equation GG.8 or m^2 , whichever is lower,

LFL Is the lower flammability limit in kg/m³;

A Is the room area in m^2 ;

M Is the molar mass of the refrigerant in kg/kmol;

g Is the gravity acceleration of $9,81 \text{ m/s}^2$;

29 Is the average molar mass of air in kg/kmol.

INSTALLATION OF INDOOR UNIT

The indoor unit of **Hydro Kit** is installed inside where terminal of under floor water pipe cycle and refrigerant pipe from the outdoor unit are accessible at the same time.

In this chapter conditions for installation place is described. In addition, considerations when installing accessories or 3rd party accessories are described, too.

Conditions where Indoor Unit is Installed

Specific conditions are required for installation place such as service space, wall mounting, water pipe length and height, total volume of water, adjusting expansion vessel, and water quality.

General Considerations

Followings are should be considered before the installation of the indoor unit.


- The installation place should be free from outdoor weather conditions such as rain, snow, wind, frost, etc.
- Choose the place where is water-resistant or good drainage.
- Service space should be secured.
- No flammable materials around the indoor unit.
- Mice can not be appeared to prevent entering the indoor unit or attacking wires.
- Do not place anything in front of the indoor unit to ensure air circulation around the indoor unit.
- Do not locate anything under the indoor unit to be free from unexpected water out.
- In case of water pressure increasing to 3 bar, water drainage should be treated when water is drained by safety valve.

Service Space

- Ensure that the spaces indicated by arrows around bottom, side, and top side.
- Ensure that the minimum service space from the product to combustible surfaces.
- Wider spaces are preferred for easy maintenance and piping.
- If minimum service space is not secured, air circulation can be troubled and internal parts of the indoor unit can be damaged by overheating.

NOTE


- The default setting of the product is for heating only. To use the cooling system together, DIP S / W 4 should be turned ON and additional drain pan accessory should be installed.

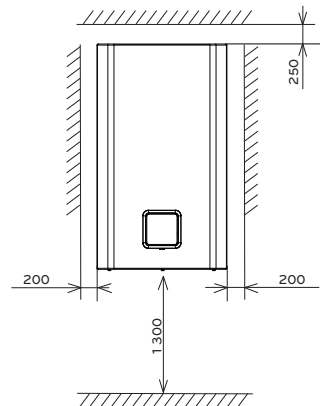

Minimum service space
(unit : mm)

Mounting to Wall

Step 1. Disconnect the remote control case from the front panel and disconnect the remote control cable.

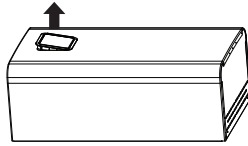
**CAUTION**

After installation is completed, return the remote control to its original state.


NOTE

Use a flat-blade screwdriver or a coin to remove the remote control case.

Step 2. After releasing five screws, detach front cover from the indoor unit. While detaching the front cover, grab the left and right sides of the front cover. Then pull into upward direction.

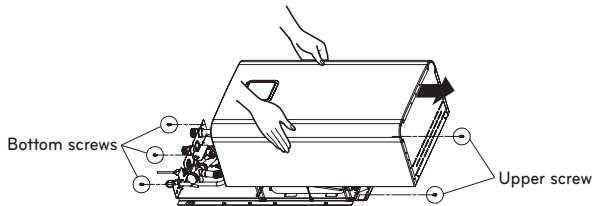


Step 3. Attach "Installation Sheet" to the wall and mark the location of bolts. This sheet helps to find correct location to the bolts.

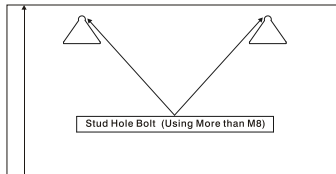**CAUTION**

The sheet should be attached level. If not, the supporting plate and the indoor unit will not be mounted correctly.


Step 4. Detach the Installation sheet. Screw bolts at the hole marks on the wall.
When screwing bolts, use M8 ~ M11 anchor bolts to secure hanging the indoor unit.

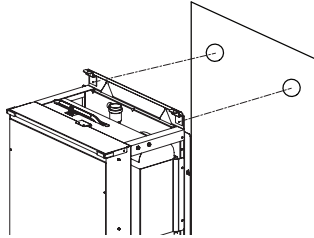

NOTE

Self drilling screw can be used as alternatives of M8 ~ M11 anchor bolts. But M8 ~ M11 anchor bolts are more preferred.

Step 5. Hang the indoor unit at the supporting plate.

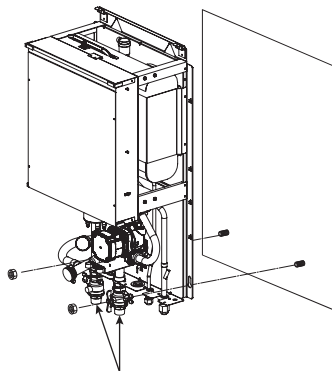

Shut-Off Valve : Field supply

PIPING AND WIRING FOR INDOOR UNIT

Procedures about water piping and electric wiring at the indoor unit are described in this chapter. Water piping and water circuit connection, water charging, pipe insulations will be shown for water piping procedures. For wiring, terminal block connection, connecting with the outdoor unit, electric heater wiring will be introduced. Accessories connection, such as sanitary water tank, thermostat, 3way or 2way valves, etc will be dealt in separated chapter.

Water Piping and Water Circuit Connection



CAUTION

General Considerations

Followings are should be considered before beginning water circuit connection.

- Service space should be secured.
- Water pipes and connections should be cleaned using water.
- Space for installing external water pump should be provided if internal water pump capacity is not enough for installation field.
- Never connect electric power while proceeding water charging.

Water Piping and Water Circuit Connection

Definition of terms are as follow :

- Water piping : Installing pipes where water is flowing inside the pipe.
- Water circuit connecting : Making connection between the product and water pipes or between pipes and pipes. Connecting valves or elbows are, for example, in this category.

While installing water pipes, followings should be considered :

- While inserting or putting water pipes, close the end of the pipe with pipe cap to avoid dust entering.
- When cutting or welding the pipe, always be careful that inner section of the pipe should not be defective. For example, no weldments or no burrs are found inside the pipe.
- Drain piping should be provided in case of water discharge by the operation of the safety valve. This situation can be happened when the internal pressure is over 3.0 bar and water inside the indoor unit will be discharged to drain hose.

While connecting water pipes, followings should be considered.

- Pipe fittings (e.g. L-shape elbow, T-shape tee, diameter reducer, etc) should be tightened strongly to be free from water leakage.
- Connected sections should be leakage-proof treatment by applying tefron tape, rubber bushing, sealant solution, etc.
- Appropriate tools and tooling methods should be applied to prevent mechanical breakage of the connections.
- Operation time of flow control valve(e.g. 3way valve or 2way valve) should be less than 90 seconds.
- Drain hose should be connected with drain piping.

 WARNING**Installing shut-off valve**

- While assembling two shut-off valves, pop sound will be heard when valve is open or close by rotating handles. It is normal condition because the sound is due to leakage of charged nitrogen gas inside the valve. The nitrogen gas is applied to secure quality assurance.
- Before starting water charging, these two shut-off valves should be assembled with water inlet and outlet pipe of the indoor unit.
Shut-off valves : Field Supply

Water condensation on the floor

While cooling operation, it is very important to keep leaving water temperature higher than 16 °C. Otherwise, dew condensation can be occurred on the floor.

If floor is in humid environment, do not set leaving water temperature below 18 °C.

Water condensation on the radiator

While cooling operation, cold water may not flow to the radiator. If cold water enters to the radiator, dew generation on the surface of the radiator can be occurred.

Drainage treatment

While cooling operation, condensed dew can drop down to the bottom of the indoor unit. In this case, prepare drainage treatment (for example, vessel to contain condensed dew) to avoid water drop.

Water Charging

For water charging, please follow below procedures.

Step 1. Open all valves of whole water circuit. Supplied water should be charged not only inside the indoor unit, but also in the under floor water circuit, sanitary water tank circuit, FCU water circuit, and any other water circuits controlled by the product.


Step 2. Connect supply water into drain valve and fill valve.



CAUTION

No water-leakage permitted at the drain and fill valve. Leakage-proof treatment which is described in previous section should be applied.

* The configuration of the valve may vary by model type.

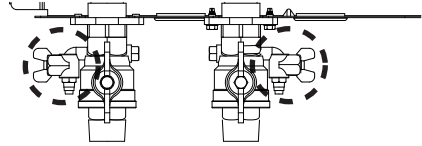

Water Out

Water In

Step 3. Start to supply water. While supplying water, following should be kept.

- Pressure of supplying water should be 2.0 bar approximately.
- For supplying water pressure, time to be taken from 0 bar to 2.0 bar should be more than 1 minute. Sudden water supply can yield water drain through safety valve.
- Fully open the cap of air vent to assure air purging. If air is exist inside the water circuit, then performance degrade, noise at the water pipe, mechanical damage at the surface of electric heater coil.

Step 4. Stop water supplying when the pressure gauge located in front of the control panel indicates 2.0 bar.

Step 5. Close drain valve and fill valve. Then wait for 20~30 seconds to observe water pressure being stabilized.

Step 6. If following conditions are satisfactory, then go to step 7(pipe insulation). Otherwise, go to step 3.

- Pressure gauge indicates 2.0 bar. Note that sometimes pressure in decreased after step 5 due to water charging inside expansion vessel.
- No air purging sound is heard or no water drop are popping out from air vent.

Pipe Insulation

Purpose of water pipe insulation is :

- To prevent heat loss to external environment
- To prevent dew generation on the surface of the pipe in cooling operation

Water pump Capacity

The water pump use variable type which is capable to change flow rate, so it may be required to change default water pump capacity in case of noise by water flow. In most case, however, it is strongly recommended to set capacity as Rated flow-rate.

NOTE

- To secure enough water flow rate, do not set water pump capacity as Minimum. It can lead unexpected flow rate error CH14.


Pressure Drop

NOTE

When installing the product, install additional pump in consideration of the pressure loss and pump performance.
If flow-rate is low, overloading of product can occur.

Capacity [kW]	Rated flow-rate [LPM]	Pump Head [m] (at rated flow-rate)	Product pressure drop [m] (Plate heat exchanger)	Serviceable Head [m]
5.6	15.8	7.5	0.2	7.3
7.1	20.1	7.3	0.3	7.0
9.0	25.9	6.1	0.4	5.7

GRUNDFOS Water Pump : UPM4K GEO 20 – 75 CHBL

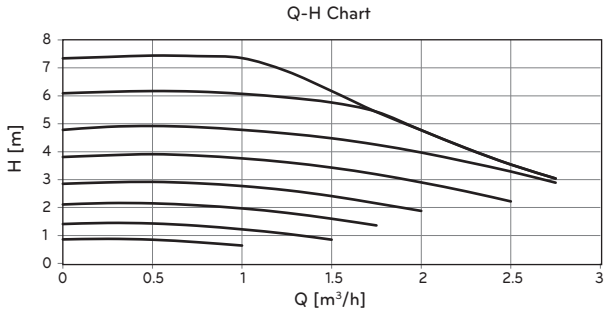

Performance test based on standard ISO 9906 with pre-pressure 2.0bar and liquid temperature 20 °C.



WARNING

Selecting a water flowrate outside the curves can cause damage to or malfunction of the unit.


Typical Installation Example

CAUTION

If **Hydro Kit** is installed with pre-existing boiler, the boiler and **Hydro Kit** should not be operated together. If entering water temperature of **Hydro Kit** is above 50 °C, the system will stop operation to prevent mechanical damage of the product. For detailed electric wiring and water piping, please contact authorized installer.
Some installation scenes are presented for example. As these scenes are conceptual figures, installer should optimize the installation scene according to the installation conditions.

CASE 1: Connecting Heat Emitters for Heating and Cooling

(Under floor loop, Fan Coil Unit, and Radiator)

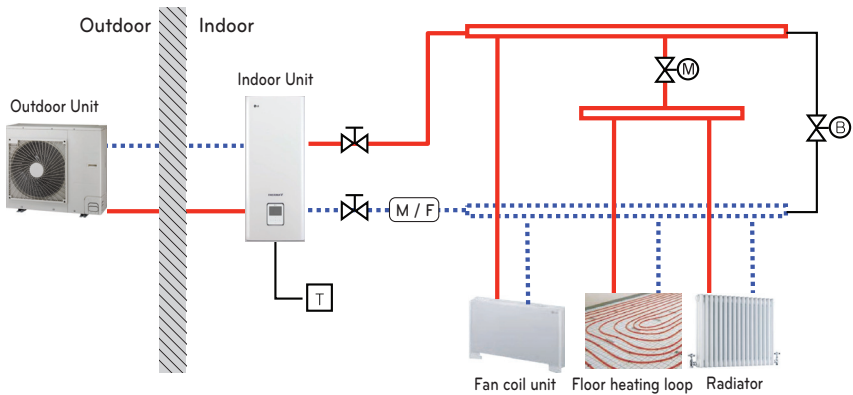

NOTE

- 2way valve
 - It is important to install 2way valve to prevent dew condensation on the floor and radiator while cooling mode.
 - 2way valve should be installed at the supply side of the collector.
- By-pass valve
 - To secure enough water flow rate, by-pass valve should be installed at the collector.
 - By-pass valve should guarantee minimum water flow rate in any case. Minimum water flow rate is described in water pump characteristics curve.

— High Temperature

.... Low Temperature

(M/F) Magnetic Filter (Recommended)



Room Thermostat(Field supply)



2way valve (Field supply)




Shut-off valve(Field supply)




By-pass valve(Field supply)

CASE 2: Connecting DHW Tank

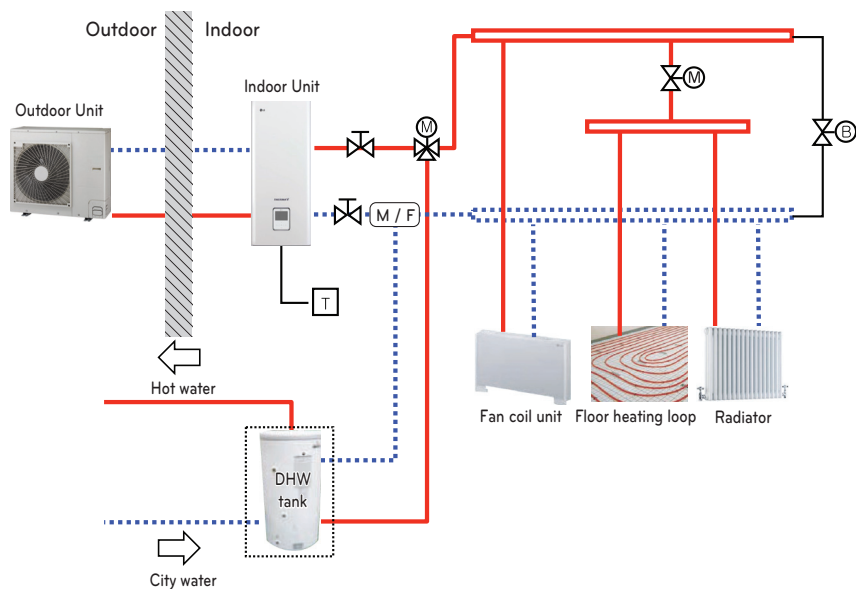


NOTE

- DHW tank
 - It should be equipped with internal electric heater to generate sufficient heat energy in very cold season.
 - DHW : Domestic Hot Water

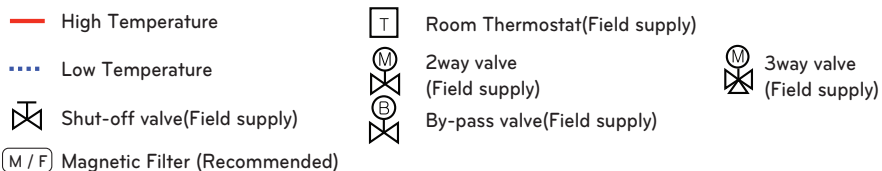

CASE 3: Connecting Solar thermal system

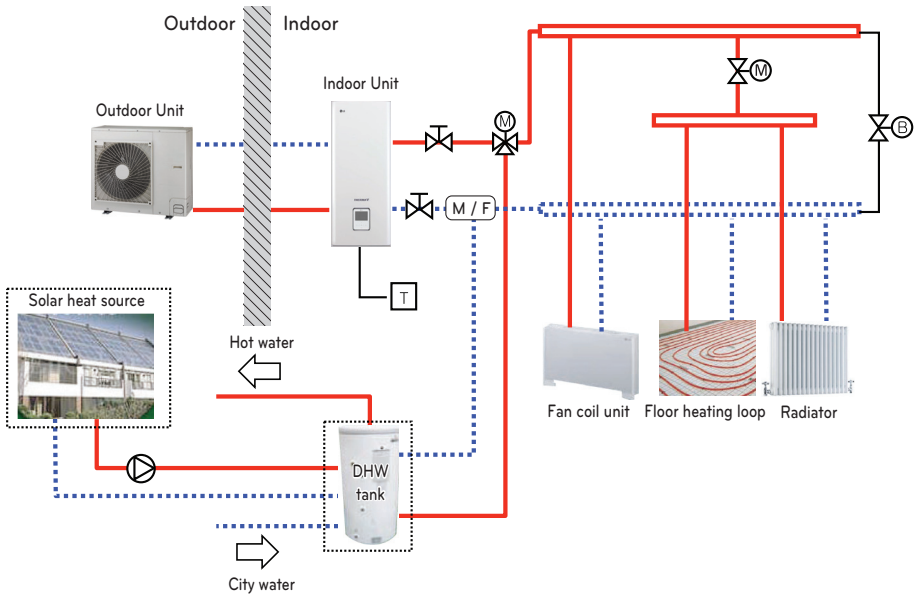

NOTE

- DHW tank
 - It should be equipped with internal electric heater to generate sufficient heat energy in very cold season.
 - DHW : Domestic Hot Water
- Pump
 - Maximum power consumption of pump should be less than 0.25 kW.

— High Temperature

... Low Temperature

⊞ Shut-off valve(Field supply)

(M / F) Magnetic Filter (Recommended)



Room Thermostat(Field supply)



2way valve (Field supply)



By-pass valve(Field supply)




3way valve
(Field supply)



Pump(Field supply)

Water cycle

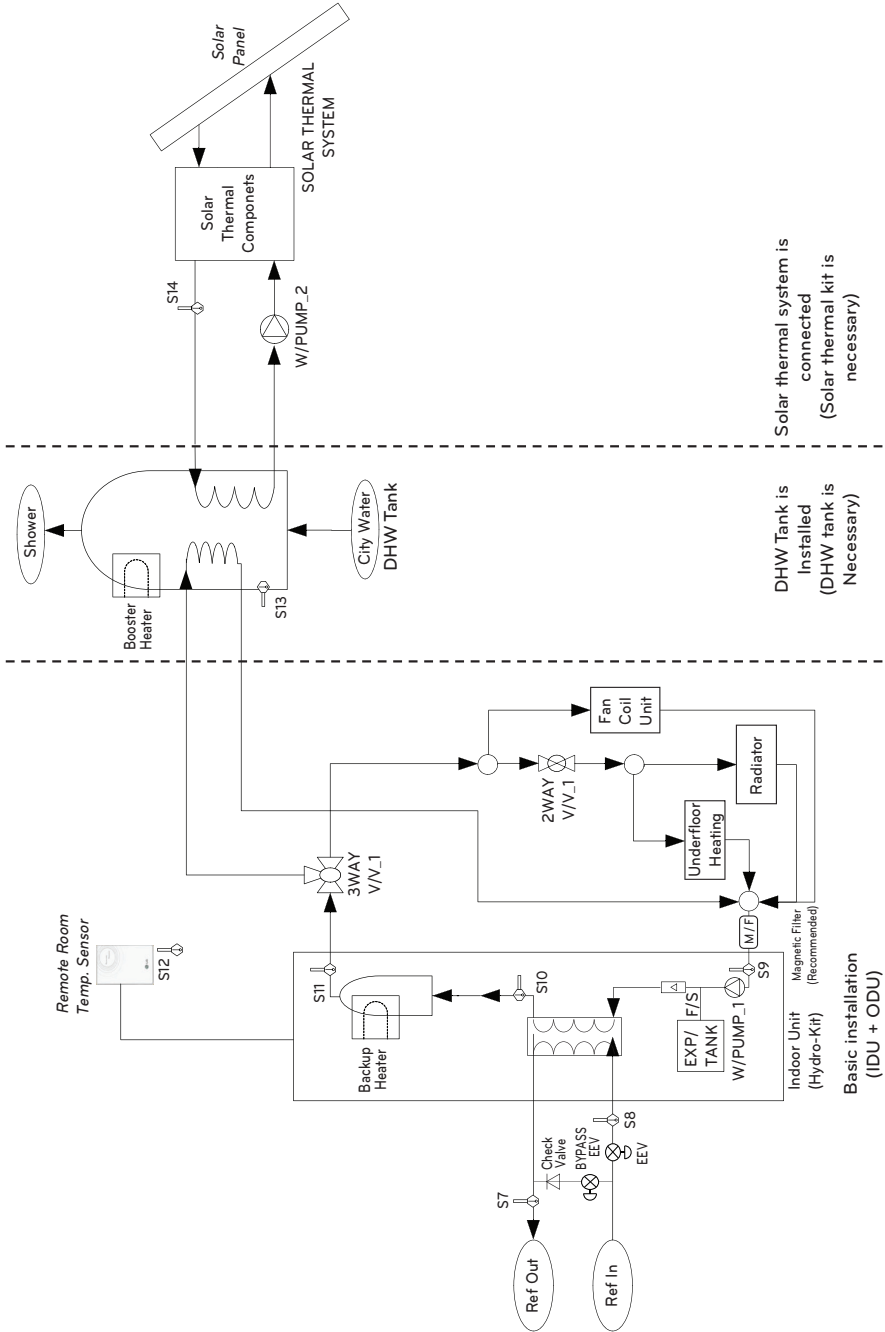

Description

Category	Symbol	Meaning	PCB Connector	Remarks
Indoor Unit	S7	Refrigerant temperature sensor (Gas side)	CN_PIPE_OUT	- Meaning is expressed based on Cooling mode.
	S8	Refrigerant temperature sensor (Liquid side)	CN_PIPE_IN	
	S9	Entering Water temperature sensor	CN_TH3	- S9, S10 and S11 are connected at 6 pin type connector CN_TH3.
	S10	Leaving Water temperature sensor		
	S11	Electric heater outlet temperature sensor		
	F/S	Flow Sensor	CN_F_SENSOR	
	E/HT	Backup Heater	E/Heat(A) : CN_L1, CN_N1, E/Heat(B) : CN_L2, CN_N2 on Heater PCB	- Heating capacity is divided into two level : partial capacity by E/HEAT(A) and full capacity by E/HEAT(A) + E/HEAT(B). - Operating power(230 V AC 50 Hz) of E/HEAT(A) and E/HEAT(B) are supplied by external power source via relay connector and ELB.
	W_PUMP1	Internal Water Pump	CN_MOTOR1 CN_PUMP_A1	- Water Pump is connected at CN_MOTOR1 and CN_PUMP_A1
	EXP/TANK	Expansion Tank	(no connector)	- Absorb volume change of heated water,
	S12	Remote Air temperature sensor	CN_ROOM1	- Optional accessory (sold separately) - Model : PQRSTA0
	CTR/PNL	Control Panel (or 'Remote Controller')	CN_REMO_A	- Pre built-in at indoor unit
Water Heating	2WAY V/V_1	To control water flow for Fan Coil Unit	CN_2WAY_A	- 3 rd party accessory and Field installation (sold separately) - 2 wire NO or NC type 2way valve is supported.
	M / F	Magnetic Filter	(No connector)	- 3 rd party accessory and Field installation (sold separately) - It is strongly recommended to install an additional filter on the heating water circuit.
	W/TANK	DHW Tank	(No connector)	- 3 rd party accessory and Field installation (sold separately) - Generating and storing DHW by Hydro Kit or built-in electric heater
	B/HT	Booster Heater	CN_TANK_HEATER	- 3 rd party accessory and Field installation (usually built-in at W/TANK) - Supplying additional water heating capacity.
	3WAY V/V_1	- Flow control for water which is leaving from indoor unit. - Flow direction switching between underfloor and water tank	CN_3WAY_A	- 3 rd party accessory and Field installation (sold separately) - SPDT type 3way valve is supported.
	CITY WATER	Water to be heated by Indoor unit and B/HT of W/TANK	(no connector)	- Field installation
	SHOWER	Water supplied to end-user	(no connector)	- Field installation
	S13	W/TANK water temperature sensor	CN_TH4	- S13 and S14 are connected at 4 pin type connector CN_TH4. - S13 is a part of DHW tank kit.(Model:PHLTA) - S14 is a part of solar thermal kit (Model:PHLLA)
	S14	Solar-heated water temperature sensor		
Solar Heating	W_PUMP/2	External Water Pump	CN_PUMP_A4	- 3 rd party accessory and Field installation (sold separately) - If water pump of SOLAR THERMAL SYSTEM is incapable of circulation, external water pump can be used.
	SOLAR THERMAL SYSTEM	- This system can include following components : Solar panel, Sensors, Thermostats, Interim heat exchanger, Water pump, etc. - To utilized hot water heated by SOLAR THERMAL SYSTEM, end-user must install Solar-Kit accessory (PHLLA) provided by LG	(no connector)	- 3 rd party accessory and Field installation (sold separately)

Water Quality

Water quality should be complied with EN 98/83 EC Directives.

Detailed water quality condition can be found in EN 98/83 EC Directives.

CAUTION

- If the product is installed at existing hydraulic water loop, it is important to clean hydraulic pipes to remove sludge and scale.
- Installing sludge strainer in the water loop is very important to prevent performance degrade.
- Chemical treatment to prevent rust should be performed by installer.
- It is strongly recommended to install an additional filter on the heating water circuit. Especially to remove metallic particles from the heating piping, it is advised to use a magnetic or cyclone filter, which can remove small particles. Small particles may damage the unit and will NOT be removed by the standard filter of the heat pump system.

Frost protection

In areas of the country where entering water temperatures drop below 0 °C, the water pipe must be protected by using an approved antifreeze solution. Consult your **Hydro Kit** unit supplier for locally approved solutions in your area. Calculate the approximate volume of water in the system. (Except the **Hydro Kit** unit.) And add six liters to this total volume to allow for the water contained in **Hydro Kit** unit.

Antifreeze type	Antifreeze mixing ratio					
	0 °C	-5 °C	-10 °C	-15 °C	-20 °C	-25 °C
Ethylene glycol	0 %	12 %	20 %	30 %	-	-
Propylene glycol	0 %	17 %	25 %	33 %	-	-
Methanol	0 %	6 %	12 %	16 %	24 %	30 %

If you use frost protection function, change DIP switch setting and input the temperature condition in Installation mode of remote controller. Refer to page 109 and 161.

CAUTION



- Use only one of the above antifreeze.
- If a antifreeze is used, pressure drop and capability degradation of the system can be occurred.
- If one of antifreezes is used, corrosion can be occurred. So please add corrosion inhibitor.
- Please check the concentration of the antifreeze periodically to keep same concentration.
- When the antifreeze is used (for installation or operation), take care to ensure that antifreeze must not be touched.
- Ensure to respect all laws and norms of your country about Anti-freeze usage.

Preparation for Piping

- Main cause of gas leakage is defect in flaring work. Carry out correct flaring work in the following procedure.
- Use the de-oxidised copper as piping materials to install.

Step 1. Cut the pipes and the cable.

- Use the accessory piping kit or the pipes purchased locally.
- Measure the distance between the indoor unit and the outdoor unit.
- Cut the pipes a little longer than measured distance.
- Cut the cable 1.5 m longer than the pipe length.

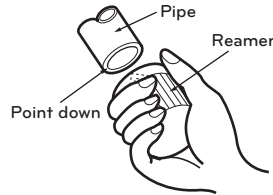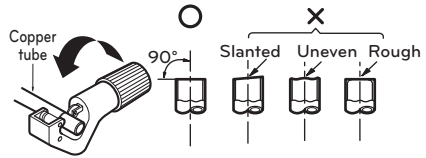


Step 2. Burrs removal

- Completely remove all burrs from the cut cross section of pipe/tube.
- Put the end of the copper tube/pipe to downward direction as you remove burrs in order to avoid to let burrs drop in the tubing.

Step 3. Putting nut on



- Remove flare nuts attached to indoor and outdoor units, then put them on pipe/tube having completed burr removal. (Not possible to put them on after flaring work)

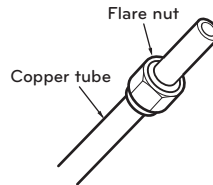

Step 4. Flaring work.

- Carry out flaring work using dedicated flaring tool for R-410A refrigerant as shown below.


Pipe diameter [inch(mm)]	A inch (mm)	
	Wing nut type	Clutch type
1/4 (6.35)	0.04~0.05(1.1~1.3)	0~0.02 (0~0.5)
3/8 (9.52)	0.06~0.07(1.5~1.7)	
1/2 (12.7)	0.06~0.07(1.6~1.8)	
5/8 (15.88)	0.06~0.07(1.6~1.8)	
3/4 (19.05)	0.07~0.08(1.9~2.1)	

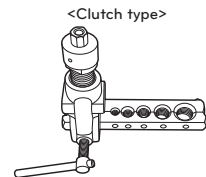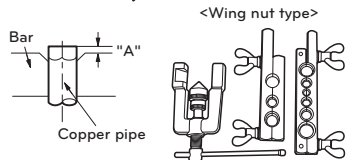

- Firmly hold copper tube in a bar(or die) as indicated dimension in the table above.

Step 5. Check

- Compare the flared work with right figure.
- If flare is seemed to be defective, cut off the flared section and do flaring work again.

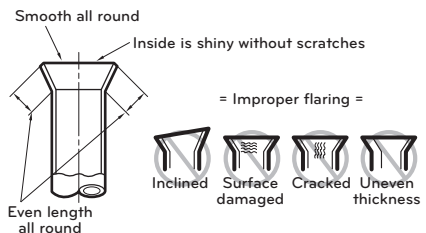

Electrical Wiring

General Consideration


Followings are should be considered before beginning indoor unit wiring.

- Field-supplied electrical components such as power switches, circuit breakers, wires, terminal boxes, etc should be properly chosen with compliance with national electrical legislation or regulation.
- Make it sure that supplied electricity is enough to operate the product including outdoor unit, electric heater, water tank heater, etc. The capacity of fuse also selected according to the power consumption.
- The main electricity supply should be dedicated line. Sharing main electricity supply with other devices such as washing machine or vacuum cleaner is not permitted.
- The installation of a residual current device(RCD) having a rated residual operating current not exceeding 30 mA is advisable.



CAUTION

- Before starting wiring job, the main electricity supply should be turned off until wiring is completed.
- When adjusting or changing wiring, the main electricity supply should be turned off and ground wire should be connected securely.
- Installation place should be free from the attack of wild animal. For example, mice's wire attacking or frog's entering into the indoor unit may cause critical electrical accident.
- All power connections should be protected from dew condensation by thermal insulation.
- All electrical wiring should comply with national or local electrical legislation or regulation.
- The ground should be connected exactly. Do not earth the product to the copper pipe, steel fence at the veranda, city water outlet pipe, or any other conductivity materials.
- Fix all cable using cord clamp tightly. (When cable is not fixed with cord clamp, use additionally supplied cable ties.)

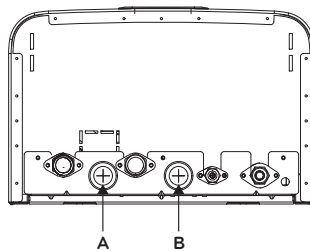

Hole A : for AC line (wire which is connected to the terminal block of the control box)

Hole B : for DC line (wire which is connected to the PCB of the control box)

Wiring Connection


Connect the wires to the terminals on the control board individually according to the outdoor unit connection.

- Ensure that the wire color of the outdoor unit and terminal No. are same as those of the indoor unit respectively.

Terminal Block Information

Symbols used below pictures are as follows :

- L, L1, L2 : Live (230 V AC)
- N : Neutral (230 V AC)
- BR : Brown, WH : White, BL : Blue, BK : Black

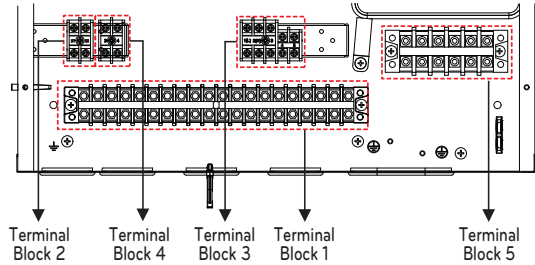

Terminal Block 1 ~ 4

Connection for
3rd Party controller
(5 V DC)

21(A)	22(B)
3 rd PARTY CONTROLLER (5V DC)	

Connection for
Outdoor Unit

3(A)	4(B)
OUTDOOR UNIT	

Connection for thermostat (230 V AC)
Supporting type :
Heating only or Heating/Cooling

23(L)	24(N)	25(L1)	26(L2)	27(L3)
THERMOSTAT (Default : 230V AC)				

1(L)	2(N)	3(L)	4(N)	5(L)	6(N)	7(L)	8(N)	9(L1)	10(L2)	11(N)	12(L1)	13(L2)	14(N)	15(L1)	16(L2)	17(N)	18(1(L))	19(2(N))	20
WATER TANK HEATER		WATER PUMP (C)		WATER PUMP (B)		MIX PUMP		MIX VALVE			3WAY VALVE (A)		2WAY VALVE (A)		POWER SUPPLY 220-240 V, 50 HZ				
Turn on or off booster heater		Energizing Water pump for DHW recirculation		Energizing water pump for solar thermal system		Power supply for 2nd heating kit			Water flow switching between under floor heating and DHW tank heating			opening or closing water flow for FCU cooling		Power supply for Indoor unit					

Terminal Block 5

1(L)	2(N)	3(L)	4(N)	
TO ELB FOR DHW TANK E/HEATER		POWER SUPPLY (1 Ø, 220-240 V, 50 Hz)		

connecting external electric power supply for DHW tank electric heater

connecting external electric power supply for internal electric heater

WARNING

Make sure that the screws of the terminal are free from looseness.

CAUTION


Be sure to test the power line and communication line for incorrect wiring before power is applied.

- If the power line and communication line are swapped over, the product will be damaged.
- Incorrect wiring confirmation test method : Measure the resistance across the power terminals (L,N) using a multi meter.
 - Resistance value of a normal connection: 1 mΩ or more
 - Incorrect wiring resistance value: 500 mΩ or less


Electric Heater Wiring

CAUTION

Power Cable Specification : The power cord connected to the outdoor unit should be complied with IEC 60245 or HD 22.4 S4(Rubber insulated cord, type 60245 IEC 66 or H07RN-F)

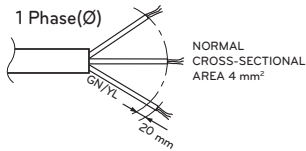

External power supply
(same dedicated power
supply for the indoor
unit and outdoor unit)

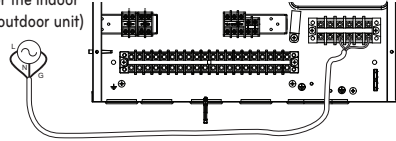

1Ø Electric Heater

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

CAUTION

After the confirmation of the above conditions, prepare the wiring as follows:

1. Use a separate power source only for the air conditioner.
For the method of wiring, follow the circuit diagram on the inner side of control box cover.
2. Install a circuit breaker between power source and the unit.
3. Make sure that wiring screws are fastened. Screw could be loose by vibration during transportation. (If screws are loose, wires could be burnt-out)
4. Check the Specification of power source
5. Make sure the electrical capacity is sufficient.
6. Starting voltage should be maintained above 90 percent of the rated voltage marked on the name plate.
7. Make sure the cable thickness matches the power sources specification.
(Please note the relation between cable length and thickness.)
8. Do not install the earth leakage breaker in a place which is wet or moist.
Water or moisture may cause a short circuit.
9. The following troubles could be caused by voltage drop-down.
 - Vibration of a magnetic switch, damage on the contact point there of, (fuse breaking), disturbance to the normal function of a an overload protection device.
 - Proper starting power is not given to the compressor.
10. Before supplying power to the indoor unit, please check the wiring of the power and communication lines.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Rating of circuit breakers

	The thickness of Minimum wire (mm ²)		Leakage circuit breaker
	Main power wire	Ground wire	
1 Unit	2.5 ~ 6	2.5	< 30 ~ 50 A 100 mA 0.1 S
2 Unit	10 ~ 16	2.5	< 75 ~ 100 A 100 mA 0.1 S
3 Unit	25 ~ 35	4	< 125 ~ 150 A 100 mA 0.1 S
4 Unit	70	6	< 175 ~ 200 A 100 mA 0.1 S

Connecting Cables

Types of the cables

Classification	Types	Cables cross section
Electric Heater Power Cable(H07RN-F)	mm ² x cores	4.0 x 3
Power cable(H07RN-F)	mm ² x cores	2.5 x 3
Communication cable(VCTF-SB)	mm ² x cores	1.0~1.5 x 2

The distance between communication cable and power cable

- If the power cable and communication cable are tied together, system malfunction may occur with electrostatic, electromagnetic combination effect causing the interference signal. If communication cable is connected along with power cable, secure at least 50 mm distance between indoor unit power cable and communication cable.

It is the value with the assumption of the length of the parallel cable as 100 m. If it is longer than 100 m, it shall be calculated again with proportional to the added length.

If the distortion in the waveform of the power still occurs despite securing the distance, increase the distance.

- ※ When several power cables are inserted into the transmission line, or tied together, make sure to consider the following issues.
 - Power cables and communication cable shall not be in the same transmission line.
 - Power cables and communication cable shall not be tied together.



WARNING

- Are all of the indoor units and outdoor units grounded?
- If grounding is not properly done, there is a risk of electric shock. Grounding must be done by a qualified technician.
- Consider the surrounding conditions(surrounding temperature, direct sunlight, rain water, etc.) when wiring the cable.
- The thickness of the power cable is the minimum thickness of metal conductor cable. Use thicker cable considering the voltage drop.

ACCESSORIES INSTALLATION

Hydro Kit can interface to various accessories to extend its functionality and to improve user convenience. In this chapter, specifications about supported 3rd party accessories and how to connect to **Hydro Kit** is introduced.

It is noted that this chapter only deal with 3rd party accessories. For accessories supported by LG Electronics, please refer to installation manual of each accessories.



CAUTION

- Install the drain pan when cooling.
- If not installed, water may form.
- Please refer to separate installation manual when installing drain pan.

Before Installation



WARNING

Followings should be kept before installation

- Main power must be turned off during installing 3rd party accessories.
- 3rd party accessories should be comply with supported specification.
- Proper tools should be chosen for installation.
- Never do installation with wet hands.

Thermostat

Thermostat is generally used to control the product by air temperature. When thermostat is connected to the product, the product operation is controlled by the thermostat.

Installation condition




CAUTION

- USE 220-240 V~ Thermostat
- Some electro-mechanical type thermostat has internal delay time to protect compressor. In that case, mode change can takes time more than user's expectation. Please read thermostat manual carefully if the unit does not response quickly.
- Setting temperature range by thermostat can be different with that of the unit. The heating or cooling set temperature should be chosen within the setting temperature range of the unit.
- It is highly recommended that the thermostat should be installed where space heating is mainly applied.

Following location should be avoid to secure proper operation :

- Height from floor is approximately 1.5 m.
- Thermostat can not be located where the area may be hidden when door is open.
- Thermostat can not be located where external thermal influence may be applied. (such as above heating radiator or open window)

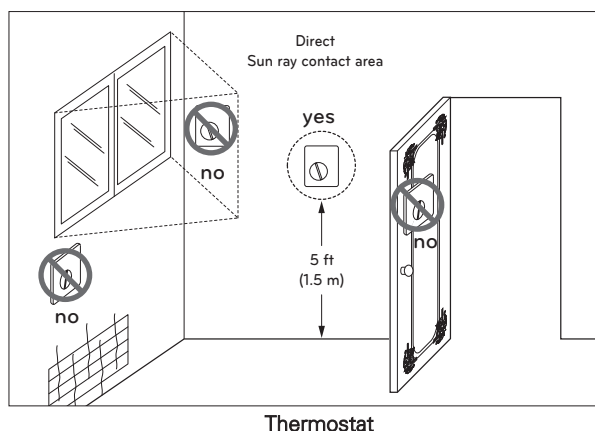

General Information

The Heat Pump supports following thermostats.

Type	Power	Operating Mode	Supported
Mechanical (1)	230 V~	Heating Only (3)	Yes
		Heating / Cooling (4)	
Electrical (2)	230 V~	Heating Only (3)	Yes
		Heating / Cooling (4)	

- (1) There is no electric circuit inside the thermostat and electric power supply to the thermostat is not required.
- (2) Electric circuit such as display, LED, buzzer, etc is included in the thermostat and electric power supply is required.
- (3) Thermostat generates "Heating ON or Heating OFF" signal according to user's heating target temperature.
- (4) Thermostat generates both "Heating ON or Heating OFF" and "Cooling ON or Cooling OFF" signal according to user's heating and cooling target temperature.

CAUTION

Choosing heating / cooling thermostat

- Heating / cooling thermostat must have "Mode Selection" feature to distinguish operation mode.
- Heating / cooling thermostat must be able to assign heating target temperature and cooling target temperature differently.
- If above conditions are not kept, the unit can not operation properly.
- Heating / cooling thermostat must send cooling or heating signal immediately when temperature condition is satisfied. No delay time while sending cooling or heating signal is permitted.


How to wire thermostat

Follow below procedures Step 1 ~ Step 3.

Step 1. Uncover front cover of the unit and open the control box.

Step 2. Identify the power specification of the thermostat. If it is 220-240 V~, go to Step 3.

Step 3. Find terminal block and connect wire as below.

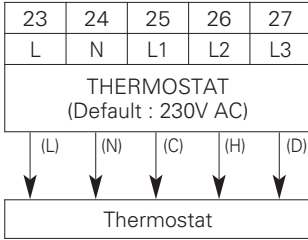

(L) : Live signal from PCB to thermostat

(N) : Neutral signal from PCB to thermostat

(C) : Cooling signal from thermostat to PCB

(H) : Heating signal from thermostat to PCB

(D) : DHW Heating signal from thermostat to PCB



WARNING

Mechanical type thermostat.

Do not connect wire (N) as mechanical type thermostat does not require electric power supply.



CAUTION

Do not connect external electric loads.

Wire (L) and (N) should be used only for operation Electric type thermostat.

Never connect external electric loads such as valves, fan coil units, etc. If connected, Main PCB (Heater) can be seriously damaged.

Final check

- DIP switch setting :
Set DIP switch No. 8 to 'ON'. Otherwise, the unit can not recognize the thermostat.
- Remote Controller :
 - 'Thermostat' text is displayed on the remote controller.
 - Button input is prohibited.


DHW Tank

To establish DHW circuit, 3way valve and DHW tank kit is required. If solar thermal system is pre-installed at the installation field, solar thermal kit is required to interface solar thermal system – to – DHW tank – to – **Hydro Kit**

Installation condition

Installing sanitary water tank requires following considerations :

- Sanitary water tank should be located at the flat place.
- Water quality should be complied with EN 98/83 EC directives.
- As this water tank is sanitary water tank (indirect heat exchange), do not use anti water-freezing treatment like ethylene glycol.
- It is highly recommend to wash out inside of the sanitary water tank after installation. It ensures generating clean hot water.
- Near the sanitary water tank there should be water supply and water drain to easy access and maintenance.
- Set the maximum value of the temperature control device of sanitary tank.

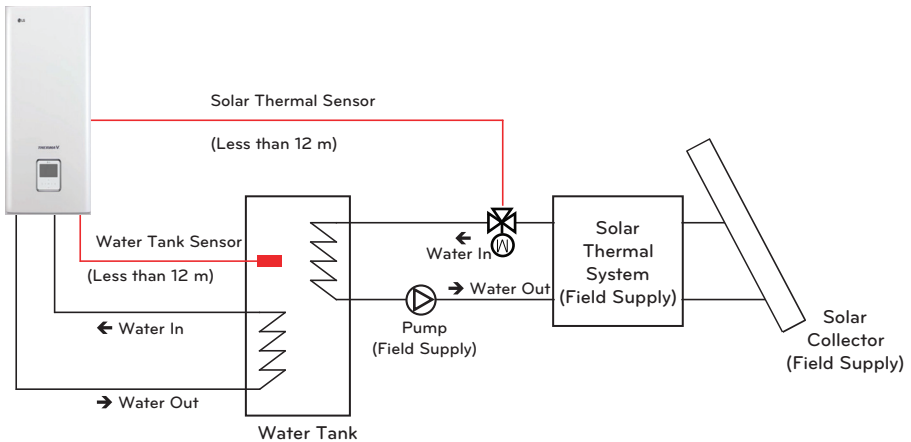

General Information

Hydro Kit supports following 3way valve.

Type	Power	Operating Mode	Supported
SPDT ¹⁾ 3-wire	230 V AC	Selecting Flow A ²⁾ between Flow A and Flow B	Yes
		Selecting Flow B ³⁾ between Flow A and Flow B	Yes

(1) : SPDT = Single Pole Double Throw. Three wires consist of Live1 (for selecting Flow A), Live 2 (for selecting Flow B), and Neutral (for common).

(2) : 'Flow A' means water flow from the unit to under floor water circuit.

(3) : 'Flow B' means water flow from the unit to DHW tank.

! WARNING

Installing recirculation pump

When **Hydro Kit** is used with DHW tank, it is **STRONGLY** recommended to install recirculation pump to prevent flooding out cold water at the end of hot water supply and to stabilize the water temperature inside DHW tank

- The recirculation pump should be operated when DHW demand is not required. Therefore, external time scheduler to determine when the recirculation pump should turn on and turn off is required.

- The operating duration time of the recirculation pump is calculated as follow :


Duration time [minute] = $k \times V \times R$

k : 1.2 ~ 1.5 is recommended. (If distance between pump and tank is far, then choose high number)

V : Volume of sanitary water tank [liter]

R : Water flow rate of pump [liter per minute], which is determined by pump performance curve.

- The pump operating start time should be prior to the sanitary water demand.

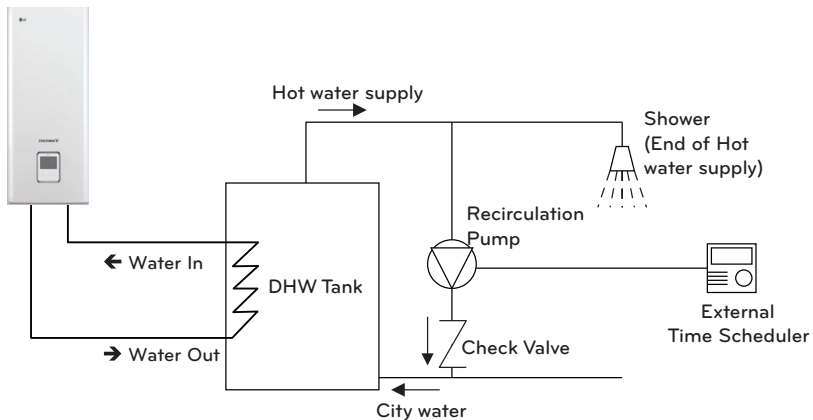

How to Wire DHW Tank Heater

Step 1. Uncover heater cover of the DHW tank. It is located side of the tank.

Step 2. Find terminal block and connect wires as below. Wires are field-supplied item.

(L) : Live signal from PCB to Heater.

(N) : Neutral signal from PCB to Heater.


! WARNING

Wire specification

- Cross-sectional area of the wire should be 6 mm².

Adjusting thermostat temperature

- To guarantee proper operation, it is recommended to set temperature of thermostat to maximum temperature (symbol at the picture).
- 1Ø Electric Heater Model and 3Ø Electric Heater Model are set by same method as below.

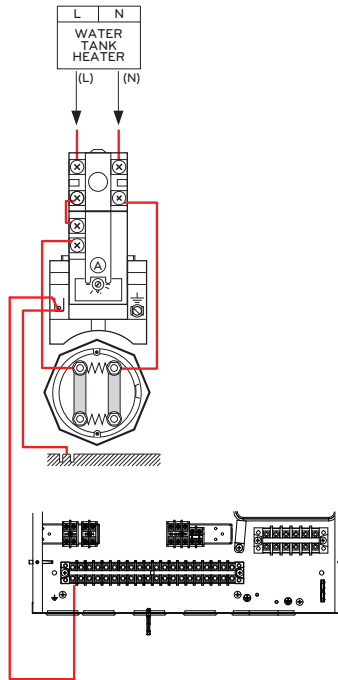


DHW Tank Kit

This product can be used by connecting the DHW tank kit in the field. It can be utilized hot water heated by booster heater in DHW tank.

How to install DHW tank kit


[Parts of DHW Tank Kit]



Tank kit body



Sensor



Multi harness

Temperature sensor for DHW tank is used to control hot water temperature of DHW tank. If sensor will be defective, you can purchase it separately.(Model name : PHRSTA0)

Follow below procedures step 1 ~ step 4.

Step 1. Uncover DHW tank kit and locate it on the wall.

Step 2. Connect Harness(Violet) of Main PCB assembly(TB1(6/7)) to 'CN_TANK_HEATER' of the Main PCB like following fig. 1.

Step 3. Insert DHW tank sensor to 'CN_TH4' (Red) of the Main PCB refer as below.

Step 4. Connect power supply to the DHW tank kit as shown fig. 1.

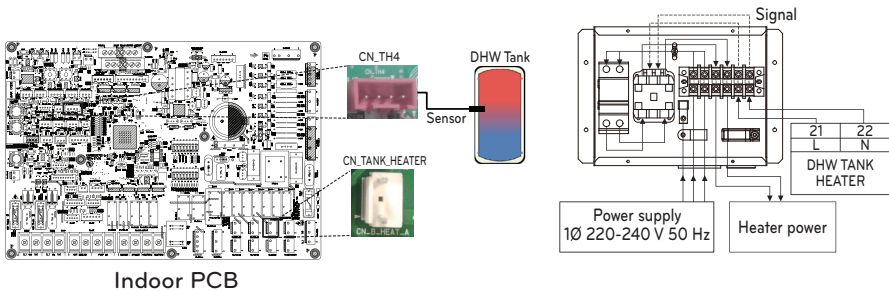


Fig. 1

Solar Thermal Kit


This product can be used by connecting the solar thermal kit in the field. It can be utilized hot water heated by solar thermal system. End-user must be LG **Hydro Kit** solar thermal kit.

How to Install Solar Thermal Kit

[Parts of Solar Thermal Kit]



Holder sensor



Tube Connector



Solar Thermal Sensor
12 m(1 EA)

Follow below procedures step 1 ~ step 4.



Step 1. Install tube connector(it is necessary to reduce or extend diameter of pipe.) the pipe and solar thermal kit.

Step 2. Check if the power of the unit is turned off.

Step 3. Disassemble front panels and distinguish control box(Indoor) of the unit.

Step 4. Insert harness into PCB(CN_TH4) fully and fix the thermal sensor into tube connector as shown below.

※ If the DHW tank sensor is connected, disconnect the sensor from PCB first.

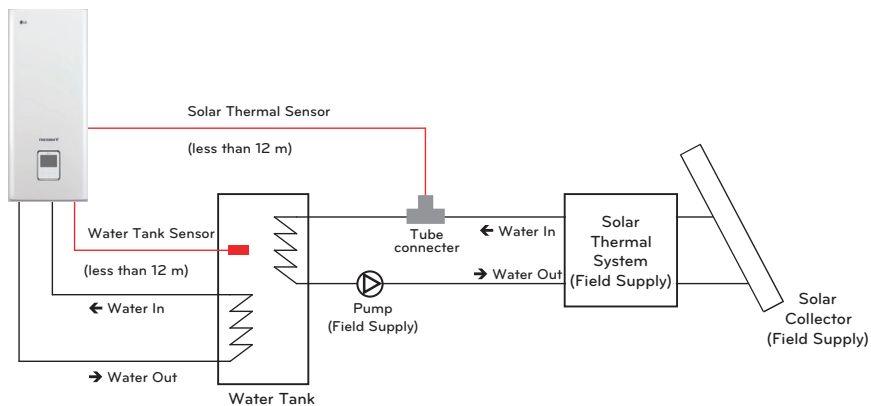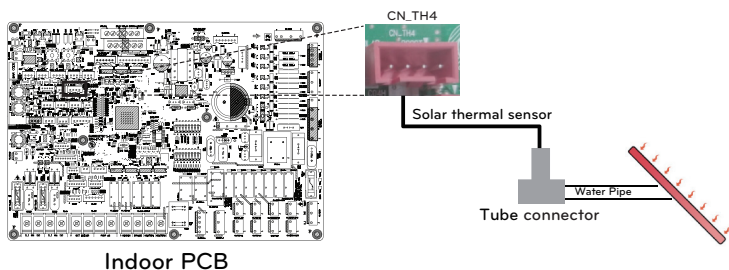

Dry Contact

Dry Contact is a solution for automatic control of HVAC system at the owner's best. In simple words, it's a switch which can be used to turn the unit On/Off after getting the signal from external sources.

How to install dry contact

[Parts of Dry contact]



Dry Contact body



Cable(for connecting with IDU)


Follow below procedures step 1 ~ step 4.

Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and distinguish terminal block in Indoor PCB.

Step 3. Connect cable to the unit PCB(CN_CC) fully.

Step 4. Then, Insert harness to the dry contact PCB(CN_INDOOR) firmly as shown below.

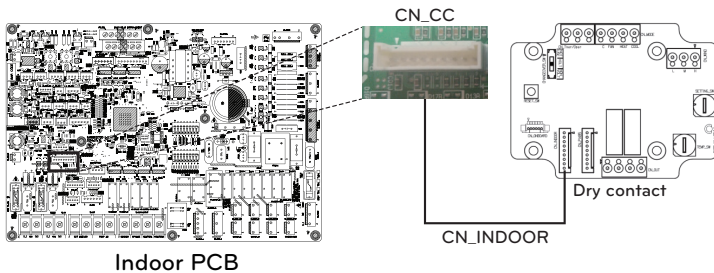


NOTE


- For more information about installing Dry Contact, Please refer installation manual provided with Dry Contact.
- For system set-up, please read chapter 8.(Especially function code No.6)

[Setting of Contact Signal Input]

- For input contact closure only(No power input)

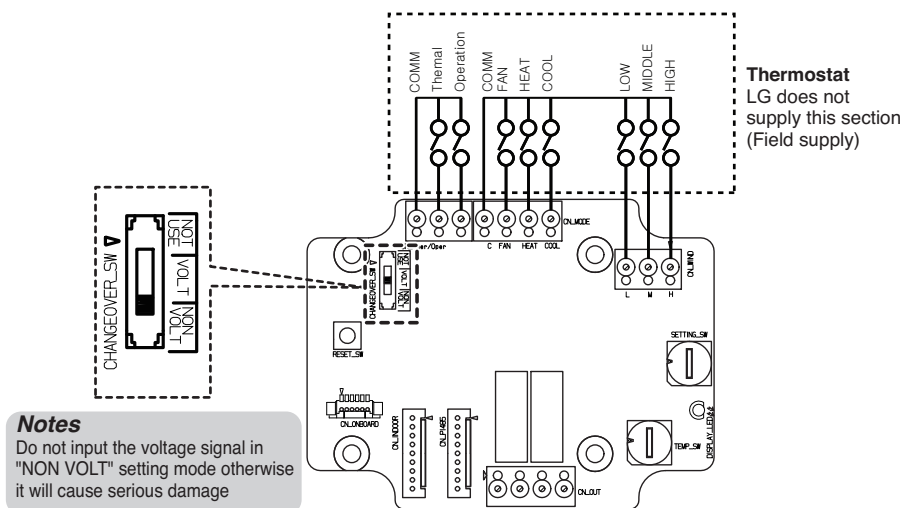

- For input contact voltage : DC 12 V, 24 V~

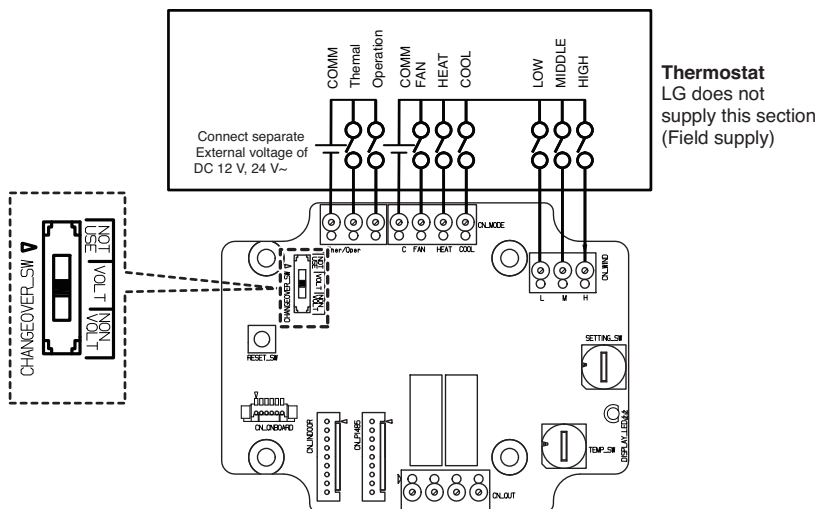

External Controller - Setting up programmable digital input operation

If you require to operate control depending on external digital input(ON/OFF), connect cable to indoor PCB(CN_EXT).



Follow below procedures step 1 ~ step 4.

Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and distinguish control box(Indoor) of the unit

Step 3. Connect the external controller to PCB(CN_EXT) completely.

Step 4. Connect the cable and field installation part.

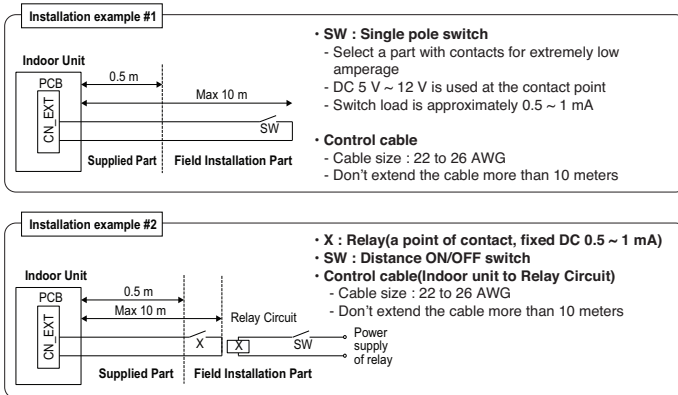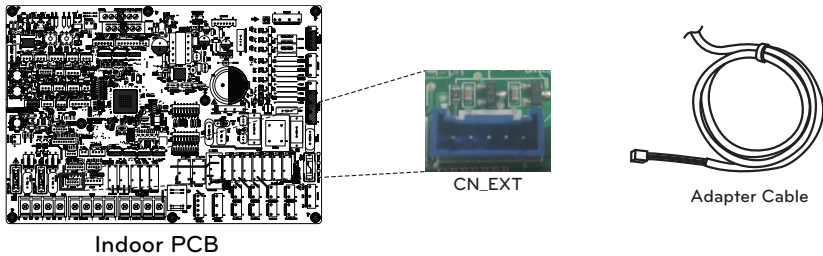

Determining the purpose of CN_EXT

Setting value: 0 ~ 5 step Indoor CN-EXT port setting

- 0: default
- 1: Simple operation on / off
- 2: Dry contact (simple contact)
- 3: Emergency stop only for indoor unit
- 4: Reattachment / absence
- 5: Emergency stop of all indoor units (It can be set only when indoor unit has emergency stop function)

Remote Temperature Sensor


Remote temperature sensor can be installed any place a user wants to detect the temperature.

- The function is not available for some products.


Installation condition

Role and constraint while installation of remote air temperature sensor is very similar to that of thermostat.

- Distance between the unit and the remote air temperature sensor should be less than 15 m due to length of the connection cable of remote air temperature sensor.
- For other constraints, please refer to previous page where constraints about thermostat is described.

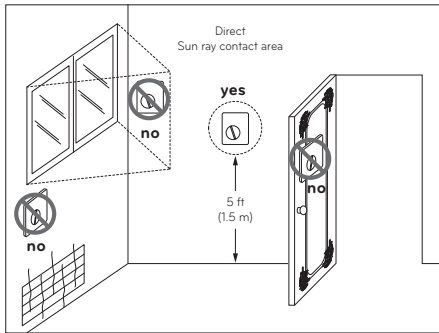

Thermostat

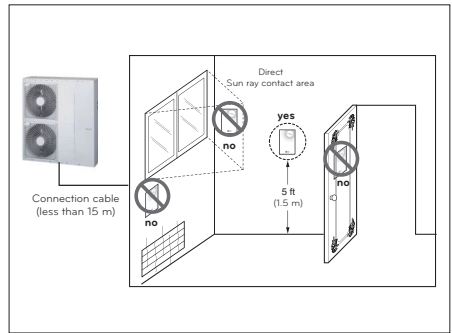

Remote Air Temperature Sensor

How to Install Remote Temperature Sensor

[Parts of Remote Temperature Sensor]



Sensor



Screw(to fix remote sensor)

Follow below procedures step 1 ~ step 6.


Step 1. Decide where the remote temperature sensor is Installed. Then, Determine the location and height of the fixing screws in fig. 1 (Interval between the screws : 60 mm)

Step 2. Check if the power of the unit is turned off.

Step 3. Disassemble front panels and distinguish control box(Indoor) of the unit.


Step 4. Insert temperature sensor into PCB(CN_ROOM1) and fix the sensor firmly in fig. 2.

Step 5. The Connection wire does not matter if you change the color of the wire because of nonpolar.

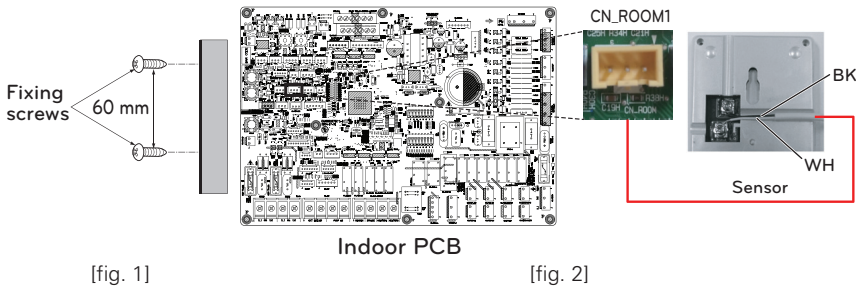

Step 6. Integrate the remote temperature sensor with the screws as the order of arrows.

Fixing the Remote Sensor

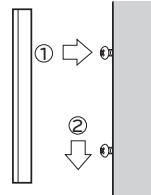

CAUTION

- Choose the place where the average temperature can be measured for the unit operates.
- Avoid direct sunlight.
- Choose the place where the cooling/heating devices do not affect the remote sensor.
- Choose the place where the outlet of the cooling fan do not affect the remote sensor.
- Choose the place where the remote sensor isn't affected when door is open.

NOTE

- For more information about installing Remote Temperature Sensor, Please refer installation manual provided with Remote Temperature Sensor.
- For system set-up, please read chapter 8. (Especially function code No.3)

Solar pump

Solar pump can be required to energize water flow when solar thermal system is installed.

How to install solar pump

Follow below procedures step 1 ~ step 4.


Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and distinguish control box(Indoor) of the unit.

Step 3. Check if the harness(Black) is inserted fully to the indoor unit PCB (CN_PUMP_A4).

Step 4. Connect the external pump to terminal block 1(5/6).


※ It is possible to un-use solar pump depending on installation environment.

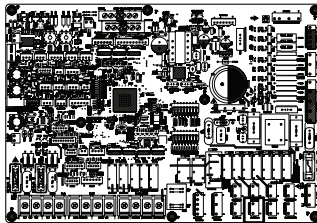

Indoor PCB



CN_PUMP_A4

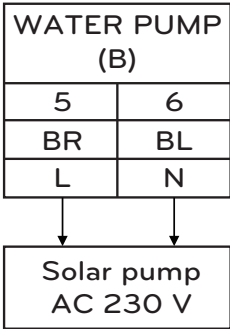

Wi-fi Modem


Wi-fi modem enables remote system operation from smartphone. Available functions include selection of on/off, operation mode, DHW heating, temperature setup and weekly scheduling etc.

How to install Wi-fi Modem


[Parts of Wi-fi modem]



Wi-fi modem body



USB Cable



Extension Cable

Follow below procedures step 1 ~ step 5.


Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and distinguish control box(Indoor) of the unit.

Step 3. Connect the USB cable to the indoor unit PCB (CN_Wi-Fi ; Blue) until it clicks into place.

Step 4. Connect the Wi-Fi modem to the USB cable fully.

Step 5. Refer to the image below to install the Wi-Fi modem in the marked position.

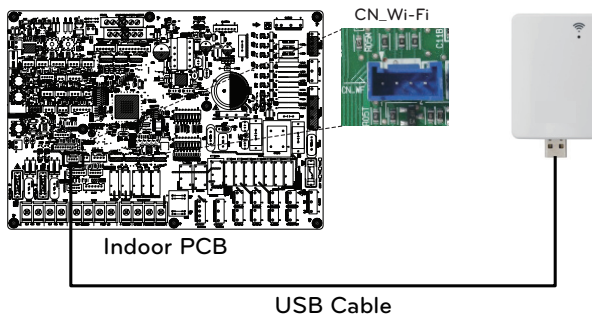

2Way Valve

2way valve is required to control water flow while cooling operation. Role of 2way valve is to cut off water flow into under floor loop in cooling mode when fan coil unit is equipped for cooling operation.

General Information

Hydro Kit supports following 2way valve.

Type	Power	Operating Mode	Supported
NO 2-wire ¹⁾	230 V AC	Valve Closing	Yes
		Valve Opening	
NC 2-wire ²⁾	230 V AC	Valve Opening	Yes
		Valve Closing	

(1) : Normal Open type. When electric power is NOT supplied, the valve is open. (When electric power is supplied, the valve is closed.)


(2) : Normal Closed type. When electric power is NOT supplied, the valve is closed. (When electric power is supplied, the valve is open.)

How to Wire 2Way Valve

Follow below procedures Step 1 ~ Step 2.

Step 1. Uncover front cover of the unit.

Step 2. Find terminal block and connect wire as below.

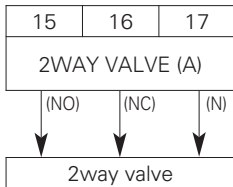

(NO) : Live signal (for Normal Open type) from PCB to 2way valve.

(NC) : Live signal (for Normal Closed type) from PCB to 2way valve.

(N) : Neutral signal from PCB to 2way valve.



CAUTION

Dew Condensation

- Wrong wiring can yield dew condensation on the floor. If radiator is connected at the under floor water loop, dew condensation can be occurred on the surface of the radiator.



WARNING

Wiring

- Normal Open type should be connected to wire (NO) and wire (N) for valve opening in cooling mode.
- Normal closed type should be connected to wire (NC) and wire (N) for valve closing in cooling mode.

Final Check

- Flow direction :
 - Water should not flow into under floor loop in cooling mode.
 - To verify the flow direction, check temperature at the water inlet of the under floor loop.
 - If correctly wired, this temperatures should not be approached to 6 °C in cooling mode.

3Way Valve(A)

3Way Valve(A) is required to operate DHW water tank. Role of 3way valve is flow switching between under floor heating loop and water tank heating loop. Plus, it is required to operate 3rd party boiler.

General Information

Hydro Kit supports following 3way valve.

Type	Power	Operating Mode	Supported
SPDT ¹⁾ 3-wire	220-240 V~	Selecting Flow A ²⁾ between Flow A and Flow B	Yes
		Selecting Flow B ³⁾ between Flow A and Flow B	Yes

(1) : SPDT = Single Pole Double Throw. Three wires consist of Live1 (for selecting Flow A), Live 2 (for selecting Flow B), and Neutral (for common).

(2) : Flow A means 'water flow from the unit to under floor water circuit.'


(3) : Flow B means 'water flow from the unit to DHW water tank.'

How to wire 3way valve(A)

Follow below procedures Step 1 ~ Step 2.

Step 1. Uncover front cover of the unit.

Step 2. Find terminal block and connect wire as below.

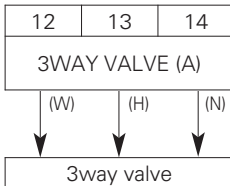

WARNING

- 3way valve should select water tank loop when electric power is supplied to wire (W) and wire (N).
- 3way valve should select under floor loop when electric power is supplied to wire (U) and wire (N).

(W) : Live signal (Water tank heating) from PCB to 3way valve

(U) : Live signal (Under floor heating) from PCB to 3way valve

(N) : Neutral signal from PCB to 3way valve

Final check

No.	Check point	Description
1	Connection of Water Inlet/Outlet	- Check if the shut-off valves should be assembled with Water inlet and outlet pipe of the unit - Check the location of the water inlet/outlet water pipe
2	Hydraulic pressure	- Check the pressure of supplying water by using pressure gauge inside the unit - Pressure of Supplying water should be Under 3.0 bar approximately
3	Water pump capacity	- To secure enough water flow rate, do not set water pump capacity as Minimum. - It can lead unexpected flow rate error CH14.
4	Transmission line and power source wiring	- Check if Transmission line and power source wiring are separated from each other. - If it is not, electronic noise may occur from the power source.
5	The power cord specifications	- Check the power cord specifications
6	3Way Valve	- Water should flow from Water outlet of the unit to sanitary tank Water inlet when sanitary tank heating is selected. - To verify the flow direction, Make sure that the water outlet temperature of the unit and water inlet temperature of sanitary Water tank are similar
7	2Way Valve	- Water should not flow into under floor loop in cooling mode. - To verify the flow direction, check temperature at the water inlet of the under floor loop. - If correctly wired, this temperatures should not be approached to 6 °C in cooling mode.
8	Air Vent	- Air-vent must be located highest level of Water pipe system - It should be installed at the point which is easy to service. - It takes some times to remove air in the water system if air purge is not performed sufficiently it may occur CH14 error.

SYSTEM SET-UP

As **Hydro Kit** is designed to satisfy various installation environment, it is important to set up system correctly. If not configured correctly, improper operation or degrade of performance can be expected.

DIP Switch Setting





CAUTION

Turn off electric power supply before setting DIP switch

- Whenever adjusting DIP switch, turn off electric power supply to avoid electric shock.

General Information

Indoor PCB

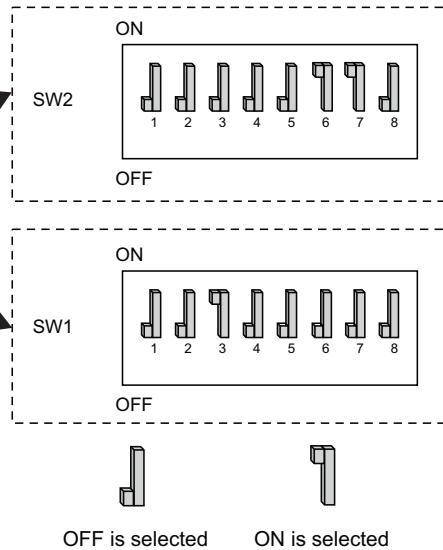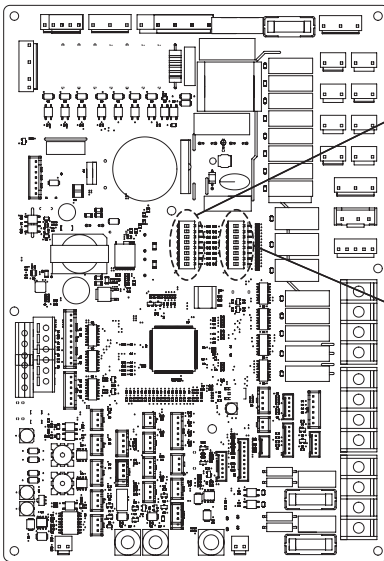

DIP Switch Information

Option Switch 2

Description	Setting		Default
Group control	 1	As Master	 1
	 1	As Slave	
Accessory installation information	 2	 3	 2  3
	 2	 3	
	 2	 3	
Cycle	 4	Heating Only	 4
	 4	Heating & Cooling	
Selecting Backup heater capacity	 6	 7	 6  7
	 6	 7	
	 6	 7	
	 6	 7	
Thermostat installation information	 8	Thermostat is NOT installed	 8
	 8	Thermostat is installed	

Option Switch 1

Description	Setting		Default
MODBUS	 1	As Master (LG extension modules)	 1
	 1	As Slave (3rd party controller)	
MODBUS Function	 2	REGINE	 2
	 2	Unified Open Protocol	
Antifreeze	 8	Antifreeze mode not use	 8
	 8	Antifreeze mode *	

※ Only the switch in the table has a function. Others have no function.

* Possibility to allow colder water temperature by setting.
Bridge at CN_ANTI_SW must be dis-connected to enable setting.

NOTE

Emergency Operation• **Definition of terms**

- Trouble : a problem which can stop system operation, and can be resumed temporally under limited operation without certificated professional's assist.
- Error : problem which can stop system operation, and can be resumed ONLY after certificated professional's check.
- Emergency mode : temporary heating operation while system met Trouble.

• **Objective of introducing 'Trouble'**

- Not like air conditioning product, **Hydro kit** is generally operation in whole winter season without any system stopping.
- If system found some problem, which is not critical to system operating for yielding heating energy, the system can temporarily continue in emergency mode operation with end user's decision.

• **Classified Trouble**

- Trouble is classified two levels according to the seriousness of the problem : Slight Trouble and Heavy trouble
- Slight Trouble : a problem is found inside the unit. In most case, this trouble is concerned with sensor problems. The outdoor unit is operating under emergency mode operation condition which is configured by DIP switch No. 4 of the unit PCB.
- Heavy trouble : a problem is found inside the outdoor unit. As the outdoor unit has problem, the emergency mode operation is performed by electric heater located in the unit.
- Option Trouble : a problem is found for option operation such as water tank heating. In this trouble, the troubled option is assumed as if it is not installed at the system.

• **When the Hydro kit has any trouble,**

- (1) If there is not a function to judge possibility of operation : Once an error occurs mainly in indoor unit, **Hydro Kit** stops. On the other hand, remote controller allows the product to activate On/ Off operation. (On : emergency operation)
 - Slight / Heavy trouble : Heating Operable only
 - Critical trouble : Full stop
 - Treatment priority : Critical>Heavy>Slight
- (2) If there is a function to judge possibility of operation :

Depending on the status of slight / heavy / critical trouble, pop-up phrase is guided separately on display.

 - Slight trouble : Heating/Cooling Operable
 - Heavy trouble : Heating Operable only
 - Critical trouble : Service center request

Hydro Kit operates when user pressed OK button on pop-up window.

NOTE**• Duplicated trouble : Option trouble with slight or heavy trouble**

- If option trouble is occurred with slight (or heavy) trouble at the same time, the system puts higher priority to slight (or heavy) trouble and operates as if slight (or heavy) trouble is occurred.
- Therefore, sometimes DHW heating can be impossible in emergency operation mode. When DHW is not warming up while emergency operation, please check if DHW sensor and related wiring are all Ok.

• Emergency operation is not automatically restarted after main electricity power is reset.


- In normal condition, the product operating information is restored and automatically restarted after main electricity power is reset.
- But in emergency operation, automatic re-start is prohibited to protect the product.
- Therefore, user must restart the product after power reset when emergency operation has been running.

SERVICE SETTING

How to enter service setting

To enter the menu displayed at the bottom, you need to enter the service setting menu as follows.

- In the menu screen, press [←,→(left/right)] button to select the setting category, and press [OK] button to move to the setting list.
- In the setting list, select the service setting category, and press [OK] button to move to the service setting list.

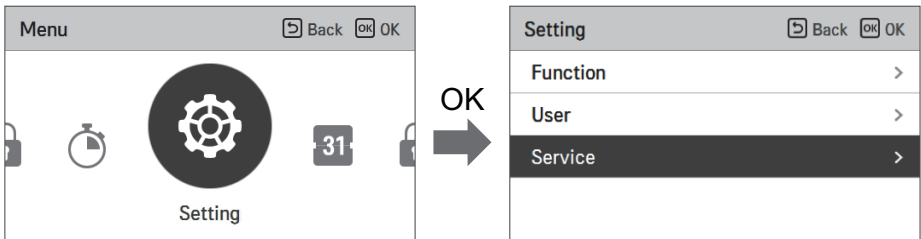

Service setting

- You can set the product service functions.
- Some functions may not be displayed/operated in some product types.

Menu	Description
Service contact	Check and input the service center phone number that you can call when there is service issue.
Model information	View product and capacity information
RMC Version Information	Check the remote controller model name and software version.
Open Source License	View the remote controller's open source license.

Model information

Check product and capacity information to which the remote controller is connected.

- In the service setting list, select model information category, and press [OK] button to move to the detail screen.
- The unit capacity
 - $1 \text{ kWh} = 1 \text{ kBtu} \times 0.29307$
 - kWh is the result calculated based on Btu, There may be a small difference between calculated and actual capacity.
 - Ex) If the unit capacity is 18 kBtu, it is displayed as 5 kWh.

Service	Back	OK
Service Contact		>
Model Information		>
RMC Version Information		>
Open Source License		>



Model Information	Back
Indoor Unit MED-TEMPERATURE(MASTER)	
Outdoor Unit Multi-V	
Capacity 9kW (30 kBtu/h)	

RMC version Information

View the remote controller software version.

- In the service setting list, select the RMC version information and press [OK] button to move to the detail screen

Service

Back

OK

Service Contact>

Model Information>

RMC Version Information>

Open Source License>

OK

RMC Version Information

Back

Indoor Unit I Main : SAA43794506(5112)
EEPROM : SAA39124226(4E9C)

Outdoor Unit I -

SW Version I 3.07.3a(Master)

Open source license

View the remote controller's open source license.

- In the service setting list, select the open source license category, and press [OK] button to move to the detail screen.

Service	Back OK
Service Contact	>
Model Information	>
RMC Version Information	>
Open Source License	>



OK

Open Source License

Back

LGE Open Source Software Notice

Product Type	HVAC WIRED REMOTE CONTR
Model Number/Range	RS3 Wired Remote Controller

1/401

Those products identified by the Product Type and Model Range above from LG Electronics, Inc. ("LGE") contain the open source software detailed below. Please refer to the


INSTALLER SETTING

How to enter installer setting

CAUTION

The installer setting mode is the mode to set the remote controller's detail function. If the installer setting mode is incorrectly set, it may cause product failure, user's injury, or property damage. It must be set by the installation specialist with the installation license, and if it is installed or changed without installation license, all problems caused will be the responsibility of the installer, and may void the LG warranty.

- In the menu screen, press [←,→(left/right)] button to select the setting category, and press [^ (up)] button for 3 seconds to enter the password input screen for the installer setting.
- Input the password and press [OK] button to move to the installer setting list.

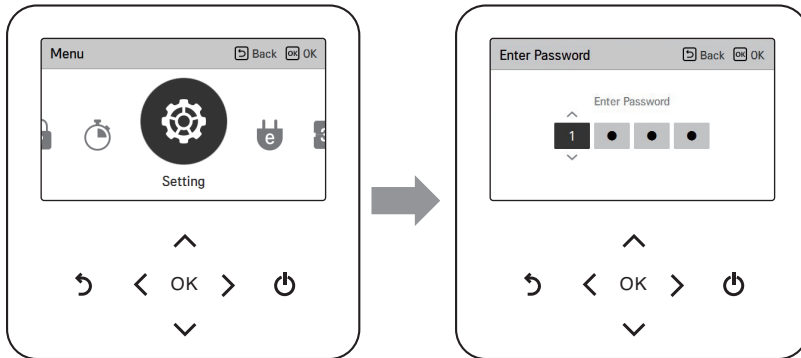

※ Installer setting password

Main screen → menu → setting → service → RMC version information → SW Version

Example) SW version : 1.00.1 a

In the above case, the password is 1001.

NOTE

Some categories of the installer setting menu may not be available depending on the product function or the menu name may be different.

Installer setting

- You can set the product user functions.
- Some functions may not be displayed/operated in some product types.

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
CONFIGURATION	Control method	-	Control method	Definition which target the Inverter should follow. - Water: Water inlet or outlet setpoint defines pressure target for compressor - Air: Room air setpoint defines pressure target for compressor (not recommended)	Air/Water	-	Water
			Digital input	With this setting a Digital input can be linked to a Circuit 1. Consequently, the signal will be used as thermo-on/off command for Circuit 1.	CN-CC / CN-THMO / CN-EXT	-	CN-THMO
	Select room devices	Circuit 1	Room air sensor option	In case of Air- control method, either a Room sensor or the Remote controller can be used to sense the Room air temp. The device must be installed in a Reference room of Circuit 1.	Room sensor/Remote controller	-	Room sensor
			Digital input	With this setting a Digital input can be linked to a Circuit 2. Consequently, the signal will be used as thermo-on/off command for Circuit 2.	CN-CC / CN-THMO / CN-EXT	-	CN-THMO
	Mixing circuit	Circuit 2	Room air sensor option	In case of Air- control method, either a Room sensor or the Remote controller can be used to sense the Room air temp. The device must be installed in a Reference room of Circuit 2.	Room sensor/Remote controller	-	Room sensor
			Mixing circuit	Additional mixing circuit is enabled using sensor CN-MIX-OUT and 3rd-party mixer. In case of 'Heating only', the Mixing valve is closed and the Mix pump is off during Cooling operation.	Not use/Heat & Cool / Heating only	-	Not use
		-	Valve closing time	Set operating time of 3rd-party mixer motor (full open → full close)	60...999	sec	240
			Backup heater for DHW	Defines if Backup heater is used for re-heating the DHW. To use this function the backup heater must be installed and configured by DIP switch! If the DHW boost heater inside of the tank is configured too, both heaters will run in parallel!	Use / Not use	-	Not use

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
CONFIGURATION	-	-	External pump	Setting if External pump is used and for what purpose. - Use: Pump operates in parallel to Main pump - Heat & Cool: Pump operates in parallel to Main pump despite DHW heating - Circuit 1: Pump is installed within Radiator circuit	Not use/Use/Heat&Cool/Circuit1	-	Not use
	-	-	Boiler output	Setting whether 3rd-party boiler is connected to TB_BOILER and enabled below Bivalent point. - Remark: The boiler won't be controlled actively. Only it is released and must operate according its own controls. - Heat & DHW: The boiler is used for Space heating and DHW. - Heating only: The boiler is used for Space heating only. The heat pump is heating the DHW year-round.	Not use/Heat & DHW/Heating only	-	Not use
	-	-	DHW boost heater	If an electric boost heater is installed in the DHW tank, choose 'Installed'.	-	-	Installed
	-	-	RMC master/slave	If additional RMC is used to be placed inside Reference room, this setting must be changed to 'Slave'. The RMC that becomes 'Master' will show all setting options. The 'Slave' will show the complete User menu, but a limited Installer menu. Room air temp. measured by Slave will be used as reference for 'Air' and 'Air+ Water' control.	Master/Slave		Master
	-	-	LG Therma V configuration	Read data' will read configuration file from SD-Card. File name must be 'RS3_AWHP_DATA' in root directory! 'Save data' will save configuration file to SD-Card (e.g. for using at other site)	Read Data/Save Data	-	-

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
GENERAL	-	Forced pump operation	Forced pump operation	If function is activated, the internal pump will run at set interval to prevent stucking of pump when unit is out of operation for long time.	Use/Not Use	-	Use
			Oper. Cycle	Interval of "anti-stuck function"	20...180	min	20
			Oper. Time	Running time of "anti-stuck function"	1...10	min	10
	-	Pump preun/overrun	Pump preun	Time how long pump will operate, before compressor starts.	1...10	min	1
			Pump overrun	Time how long pump will operate, after compressor stopped.	1...10	min	1
	Water flow control	-	Control Method	Different options to control the integrated circulation pump (Main pump): - Pump capacity: Fixed setting for pump capacity (0-100%) is applied. - Fixed flow rate: Fixed setting for flow rate in l/min is applied. - Fixed ΔT : Fixed setting for temperature difference between inlet and outlet	Pump capacity/Fixed flow rate/Fixed ΔT	-	Pump Capacity
				The pump capacity is fixed at the set value if control method 'Pump capacity' is chosen.	10..100	%	100
				The target flow rate can be set individually for each operation mode, if control method 'Fixed flow rate' is chosen.	8..26	l/min	
		Fixed flow rate	Fixed flow rate (Heat)	The target temperature gap between inlet and outlet can be individually set for each operation mode, if control method 'Fixed ΔT ' is chosen.	8..26	l/min	
			Fixed flow rate (Cool)		8..26	l/min	
			Fixed flow rate (DHW)		8..26	l/min	
		Fixed ΔT	Fixed ΔT (Heat)		5...13	K	5
			Fixed ΔT (Cool)		5...13	K	5
			Fixed ΔT (DHW)		5...13	K	5

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
CIRCUIT1	Basic settings	Main pump operation	Main pump operation	Time setting = Main circulation pump is turned on and off according to set On/Off times. Continuous operation = Main circulation pump is running continuously during heating (cooling) period. Only in summertime it is turned off.	Time operation setting/Continuous		
			On time	Setting defines duration of Main pump operation to sense reference temp. from Circuit 1. Value should be adjusted based on length of pipework.	1..60	min	5
		Hysteresis water temp.	Off time	Setting defines interval between Main pump operations, while Thermo-off. Value should be adjusted based on building insulation standard.	1..60	min	15
			Hysteresis water temp (TH on)	Settings define the hysteresis applied to water temp. control of Circuit 1	-9.0..0.0	K	2.0
			Hysteresis water temp (TH off)		0.0..4.0	K	2.0
		Hysteresis room air	Hysteresis room air (TH on)	Settings define the hysteresis applied to room air temp. control of Circuit 1	-3.0..0.0	K	-0.5
			Hysteresis room air (TH off)		0.0..4.0	K	1.5
	Room Heating	Air heating set temp.	Air setting range (Min)	The User's setting range of room air target temperature in HEAT mode can be limited	16..22	°C	16
			Air setting range (Max)		24..30	°C	30
		Water heating set temp.	Water setting range (Min)	The User's setting range of water target temperature in HEAT mode can be limited	15 ~ 34	°C	15
			Water setting range (Max)		35 ~ 50	°C	50
	Room Cooling	Air cooling set temp.	Air setting range (Min)	The User's setting range of room air target temperature in COOL mode can be limited	16..22	°C	16
			Air setting range (Max)		24..30	°C	30
		Water cooling set temp.	Water setting range (Min)	The User's setting range of water target temperature in COOL mode can be limited	5..20	°C	5
			Water setting range (Max)		22..27	°C	27

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
Auto Mode		-	Mode	Definition if weather-dependency (Auto mode) is applied to heating and cooling or heating only.	Heating only / Heating & Cooling	-	Heating only
			Outdoor 1, Heat	Setting the outdoor temperature ranges for heating and cooling in Auto mode.	-25 ~ 35	°C	-10
			Outdoor 2, Heat		-25 ~ 35	°C	18
			Outdoor 3, Cool		10 ~ 46	°C	30
	Seasonal auto temp	Outdoor temperatures	Outdoor 4, Cool		10 ~ 46	°C	40
			Air 1, Heat (Circuit 1)		16 ~ 30	°C	21
			Air 2, Heat (Circuit 1)		16 ~ 30	°C	19
			Air 3, Cool (Circuit 1)		18 ~ 30	°C	21
			Air 4, Cool (Circuit 1)		18 ~ 30	°C	19
		Target temperatures	Water 1, Heat (Circuit 1)	Graphic setting of targets for Water / Indoor air temperature in Heating / Cooling operation for Circuit 1/2.	15 ~ 50	°C	50
			Water 2, Heat (Circuit 1)		15 ~ 50	°C	40
			Water 3, Cool (Circuit 1)		5 ~ 27	°C	12
			Water 4, Cool (Circuit 1)		5 ~ 27	°C	10

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
Auto Mode	Seasonal auto temp	Target temperatures	Air 1, Heat (Circuit 2)		16...30	°C	21
			Air 2, Heat (Circuit 2)		16...30	°C	19
			Air 3, Cool (Circuit 2)		18...30	°C	21
			Air 4, Cool (Circuit 2)		18...30	°C	19
			Water 1, Heat (Circuit 2)	Graphic setting of targets for Water / Indoor air temperature in Heating / Cooling operation for Circuit 1/2.	15 ~ 50	°C	50
			Water 2, Heat (Circuit 2)		15 ~ 50	°C	40
			Water 3, Cool (Circuit 2)		5 ~ 27	°C	12
			Water 4, Cool (Circuit 2)		5 ~ 27	°C	10

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
Domestic Hot Water	DHW temp. settings	DHW set temp range	DHW set temp. range (Min)	Limitation of setting range (DHW temp. target that User can set)	30~60	°C	30
		-	DHW set temp. range (Max)		50~80	°C	50
		-	Compressor cycle limit temp	This is the max. DHW temp. that that can be reached by using compressor cycle only (without using electrical heater). It also depends on effectiveness of heat transfer from heat pump to DHW tank (size of coil, sensor positioning).	40...50	°C	50
		-	DHW hysteresis	Temperature gap between DHW target temp. (by User) and DHW temperature when re-heating starts. Example: Target temp. = 48°C DHW hysteresis = 5 K → DHW heating starts at 43°C	1...30	K	5
	Thermal disinfection 1	-	Disinfection active	Activation/Deactivation of anti-legionella operation. Electric heater must be connected and activated to perform this function.	Not use/Use	-	Not use
		-	Weekday	Weekday and time at which the anti-legionella function is executed.	Sun/Mon/Tue./Wed/Thu/Fri/Sat	-	Fri
		-	Start time		0~23	hh:-	23:00
	Thermal disinfection 2	-	Max. Temp.	Target temp. for thermal disinfection cycle.	60~80	°C	70
		-	Duration	Duration how long disinfection target temp. is kept. After time has elapsed, target is reduced to normal setpoint.	5~60	min	10
		-	Forced end time	After this time has elapsed, thermal disinfection will stop - even is disinfection temp. is not reached.	1~12	hrs	1
	DHW/heating duration	-	Active time	Duration how long DHW heating continues	5...95	min	30
		-	Stop time	Duration how long DHW heating is interrupted (if DHW target is not reached in one cycle)	0...600	min	30

Top menu	Sub Menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
DOMESTIC HOT WATER	DHW electric re- heating	-	DHW heater usage	- Use: DHW will be re-heated electrically if the heat pump cycle does not reach the target temp. within time setting. - Use disinfection: Electric re-heating is only used for anti-legionella operation and in case of emergency. - Use emergency: Electrical heater is only used in case of emergency. If settings 'Use disinfect' or 'Use emergency' is chosen, the DHW temp. setting range is limited!	Use always / Use disinfection / Use emergency	-	Use disinfection
			DHW heater delay time	After time has elapsed, the DHW boost heater is released.	10 / 20 / 30 / 40 / 50 / 60 / 90 / 120 / 1440	min	30
			Enable re- circulation	Definition if DHW/recirculation pump is connected or not. If it is used, a Schedule in the main menu becomes available to set the time frames for operating the pump.	Use / Not use	-	Not use
	DHW re-circulation	-	On	Definition of recirculation pump cycling pattern during release schedule. By default, the pump operates every twenty minutes for 10 minutes (only during the set Schedule!)	5 ~ 60	min	10
			Off		5 ~ 60	min	20
SOLAR THERMAL SYSTEM	Solar collector operating range	-	Min.	Solar cycle will not start before collector has reached this temp.	5 ~ 50	°C	10
			Max.	Solar cycle will not start if collector exceeds this temp.	60 ~ 200	°C	135
	Solar tank temp. Limit	-	Max.	Solar cycle will not start, if DHW tank has reached its maximum temp.	20 ~ 90	°C	80

Top menu	Sub Menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
SOLAR THERMAL SYSTEM	-	Solarthermal ΔT	Temp On	Delta temp. between Solar collector and DHW tank must be reached before solar pump starts. Example: Actual DHW temp. = 45 °C, Temp On = 8 K → Solar cycle start, if collector exceeds 53 °C	3 ~ 40	K	8
			Temp Off	Delta temp. between Solar collector and DHW tank must be undercut before solar cycle stops. Example: Actual DHW temp. = 45°C, Temp Off = 2K → Solar cycle stops, if collector undercuts 47°C	1 ~ 20	K	2
		-	Renewable DHW heating	The electrical DHW boost heater can be disabled, while solar cycle is in operation.	Enable / Disable	-	Enable
			Control	Frequent activation of solar pump can be activated/deactivated. This function is recommended only if there are random shadows (tree, chimney...) covering the collector sensor. If solar cycle is out of operation, solar pump will start after this time has elapsed, in order to check the available solar temp. Duration should be as long as necessary, but as short as possible. If collector is cold, heat will be wasted "to the roof"!	On / Off	-	Off
	Solar circuit flushing	-	Start Hour	Within this time frame the Solar flushing function is enabled. Flushing is only reasonable during daytime.	0 ~ 23	hh:--	6:00
		-	Start Minute		0 ~ 59	--mm	
		-	End Hour		0 ~ 23	hh:--	18:00
		-	End Minute		0 ~ 59	--mm	
	-	Solar pump flush setting	Oper. Time	Duration how long the solar pump operates to flush the circuit	1 ~ 10	-	1
			Oper. Cycle	Duration until next flushing starts	30 ~ 120	-	60
			Solar pump test run	'Start' will activate the solar pump for 1 hour. During this period, the pump will be turned on and off intermittently to purge air from the cycle.	Start / Stop	-	-

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
Service	-	-	Pump test run	The pump test run is to test run by operating the water pump for 1 hour.	Test Run	-	-
	Actuator test	Pump test	A1 Main pump		On / Off	-	-
			A2 External pump		On / Off	-	-
			A3 Mix pump		On / Off	-	-
			A4 Solar pump		On / Off	-	-
			A15 DHW Recirculation pump		On / Off	-	-
	Valve test		A5 DHW 3-way-valve	In this Service menu, the actuators like pumps and valves can be activated to check for correct operation during commissioning.	DHW / Space	-	-
			A6/7 Mixing valve		Open / Close	-	-
			A12 Cooling 2-way-valve		Open / Close	-	-
			S9 Refrigerant gas		-	°C	-
	Monitoring	Sensor value	S10 Refrigerant liquid	In this Service menu, all sensor values are displayed to easily recognize if all values are reasonable.	-	°C	-
			S11 Entering water		-	°C	-
			S12 Leaving water		-	°C	-
			S13 Backup heater outlet		-	°C	-
			S14 DHW tank		-	°C	-
			S15 Solar collector		-	°C	-
			S16 Solar tank		-	°C	-
			S17 Water flow sensor		-	°C	-

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
Service	Monitoring	Sensor value	S18 Mixing circuit	In this Service menu, all sensor values are displayed to easily recognize if all values are reasonable.	-	°C	-
			S19 Water pressure		-	°C	-
			S21 Room temp. Direct circuit		-	°C	-
			S22 Room temp. Mixing circuit		-	°C	-
		Input status	SG1	In this Service menu, the status of all physical inputs are listed up	0/1	-	-
			SG2		0/1	-	-
			CN-EXT		0/1	-	-
			Antifreeze shortkey		0/1	-	-
		Output status	Thermostat (Heating)		0/1	-	-
			Thermostat (Cooling)		0/1	-	-
			Thermostat (DHW)		0/1	-	-
			A1 Main pump	In this Service menu, the status of all physical outputs are listed up	0/1	-	-
		Output status	A2 External pump		0/1	-	-
			A3 Mix pump		0/1	-	-
			A4 Solar pump		0/1	-	-
			A5 DHW 3-way-valve		DHW / Space	-	-
			A6 Mixing valve (Open)		0/1	-	-
			A7 Mixing valve (Close)		0/1	-	-
			A8 Backup heater (Step 1)		0/1	-	-

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
Service	Monitoring	Output status	A9 Backup heater (Step 2)	In this Service menu, the status of all physical outputs are listed up	0 / 1	-	-
			A10 DHW Boost heater		0 / 1	-	-
			A11 External boiler		0 / 1	-	-
			A12 Cooling 2-way-valve		0 / 1	-	-
			A15 DHW Recirculation pump		0 / 1	-	-
	Runtimes	-	Backup heater (Step 1)	The total runtimes are of main components re displayed. The information can be used to identify cause of excessive energy consumption or abnormal cycling of compressor.	-	h	-
			Backup heater (Step 2)		-	h	-
			Boost heater		-	h	-
			Main pump		-	h	-
			Solar pump		-	h	-
	Runtimes reset	-	Backup heater Reset	In this menu, runtimes can be reset.	Reset	-	-
			Boost Heater Reset		Reset	-	-
			Pump operation time		Reset	-	-
			Solar pump Reset		Reset	-	-

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
Connectivity	Dry contact	-	Dry Contact Mode	- Manual: Unit must be turned-on by RMC after release by Dry contact - Auto: Unit will automatically start (return to previous operation) after release by D/C	Auto/Manual	-	Auto
		-	CN_CC	- Auto: Unit will recognize connected D/C after power-on - Not installed: D/C is not installed - Installed: D/C is installed and unit always checks its state Additionally, check setting for 'Dry contact mode'!	D/C Automatic/ D/C Not Installed / D/C Installed	-	D/C Automatic
		-	Central control address(HEX)	Address setting if LG Central controller is connected	0-F/D-F	hexadec.	00
		-	CN_EXT	- Not use: CN_EXT is not used - Simple operation: open= Operation off closed= Operation On - Simple dry contact: open= unit locked closed= lock released, operation on/off depends on setting 'Dry contact mode' - Single emergency stop: open= unit locked closed= lock released	Not use/ Simple Operation/ Simple dry contact / Single emergency stop / All emergency stop	-	Not use
		-	Mode	Boiler can be activated either manually (by User setting) or automatically (below certain outdoor temp.)	Auto/Manual	-	Manual
		3rd party boiler	Temp.	Boiler will be activated, if outdoor temp. undercuts this value. Heat pump will stop.	-25...25	°C	-7
			Hysteresis	Boiler will be de-activated and heat pump re-activated, if outdoor temp. exceeds temp. setting plus hysteresis. Example: 'Temp.' = 7°C, 'Hysteresis' = 4K → Boiler is enabled at -7°C and disabled at -3°C outdoor temp.	2...10	K	4
	-						

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
Connectivity	Energy state	Energy state definition	Signal type	External devices such as Home Energy Management Systems can be used to influence the operation of the heat pump. Either two 230V inputs are used to collect the status or Modbus is used (for instance when connected to LG ESS).	Not use/230V inputs/Modbus	-	Not use
			Energy state 5	Setting whether Energy state 5 is used or not.	Not use/Use		
			ES5: Heat temp.	Definition how much Heating target temp. shall increase when ES5 is applied.	0...30	K	5
			ES5: Cool temp.	Definition how much Cooling target temp. shall decrease when ES5 is applied.	0...-30	K	-5
			ES5: DHW temp.	Definition how much DHW target temp. shall increase when ES5 is applied.	0...50	K	30
			Energy state 6	Setting whether Energy state 6 is used or not.	Not use/Use		
			ES6: Heat temp.	Definition how much Heating target temp. shall increase when ES6 is applied.	0...30	K	2
			ES6: Cool temp.	Definition how much Cooling target temp. shall decrease when ES6 is applied.	0...-30	K	-2
			ES6: DHW temp.	Definition how much DHW target temp. shall increase when ES6 is applied.	0...50	K	10

Top menu	Sub menu	Collective menu	Setting	Explanation	Setting option	Unit	Default
Connectivity	Energy state	Energy state definition	Energy state 7	Setting whether Energy state 7 is used or not.	Not use/Use		
			ES7: Heat temp.	Definition how much Heating target temp. shall increase when ES7 is applied.	0...30	K	-2
			ES7: Cool temp.	Definition how much Cooling target temp. shall decrease when ES7 is applied.	0...30	K	2
			ES7: DHW temp.	Definition how much DHW target temp. shall increase when ES7 is applied.	0...50	K	0
			Energy state 8	Setting whether Energy state 8 is used or not.	Not use/Use		
			ES8: Heat temp.	Definition how much Heating target temp. shall increase when ES8 is applied.	0...30	K	-5
			ES8: Cool temp.	Definition how much Cooling target temp. shall decrease when ES8 is applied.	0...30	K	5
			ES8: DHW temp.	Definition how much DHW target temp. shall increase when ES8 is applied.	0...50	K	0
	Digital inputs assignment	State 3 (0:1)	Definition of Energy state 3: - 3 = Cooling/no effect, Heating/Target +2K, DHW/Target +5K - 4 = Cooling/no effect, Heating/no effect, DHW/Target=80°C - 5-8 = according setting 'Energy state definition'	3...8	-	3	
		State 4 (1:1)	Definition of Energy state 4: - 3 = Cooling/no effect, Heating/Target +2K, DHW/Target +5K - 4 = Cooling/no effect, Heating/no effect, DHW/Target=80°C - 5-8 = according setting 'Energy state definition'	3...8	-	4	
		Thermostat control type	Setting what type of thermostat is connected	Heat&Cool / / DHW only	-	Heat&Cool	

COMMISSIONING

If everything is going well until now, it is time to start the operation and to take advantages of **Hydro Kit**.

Before starting operation, pre-check points are described in this chapter. Some comments about maintenance and how to do troubleshooting are presented.

Check List before Starting Operation



CAUTION

Turn off the power before changing wiring or handling product.

No	Category	Item	Check Point
1	Electricity	Field wiring	• All switches having contacts for different poles should be wired tightly according to regional or national legislation. • Only qualified person can proceed wiring. • Wiring and local-supplied electric parts should be complied with European and regional regulations. • Wiring should be following the wiring diagram supplied with the product.
2		Protective devices	• Install ELB (earth leakage breaker) with 30 mA. • ELB inside the control box of the unit should be turned on before starting operation.
3		Earth wiring	• Earth should be connected. Do not earth to gas or city water pipe, metallic section of a building, surge absorber, etc.
4		Power supply	• Use dedicated power line.
5		Terminal block wiring	• Connections on the terminal block (inside the control box of the unit) should be tightened.
6	Water	Charged water pressure	• After water charging, the pressure gauge (in front of the unit) should indicate 2.0~2.5 bar. Do not exceed 3.0 bar.
7		Air purge	• During water charging, air should be taken out through the hole of the air purge. • If water does not splash out when the tip (at the top of the hole) is pressed, then air purging is not completed yet. If well purged, the water will splash out like fountain. • Be careful when testing air purge. Splashed water may make your dress wet.
8		Shut-off valve	• Two shut-off valves (located at the end of water inlet pipe and water outlet pipe of the unit) should be open.
9		By-pass valve	• By-pass valve should be installed and adjusted to secure enough water flow rate. If water flow rate is low, flow switch error (CH14) can be occurred.
10	Product Installation	Hang to the wall	• As the unit is hung on the wall, vibration or noise can be heard if the unit is not fixed tightly. • If the unit is not fixed tightly, it can fall down during operation.
11		Parts inspection	• There should be no apparently damaged parts inside the unit.
12		Refrigerant leakage	• Refrigerant leakage degrades the performance. If leakage found, contact qualified LG air conditioning installation person.
13		Drainage treatment	• While cooling operation, condensed dew can drop down to the bottom of the unit. In this case, prepare drainage treatment (for example, vessel to contain condensed dew) to avoid water drop.

To assure best performance of **Hydro Kit**, it is required to perform periodical check and maintenance. It is recommended to proceed following check list for once a year.



CAUTION

Turn off the power before proceeding maintenance.


No	Category	Item	Check Point
1	Water	Water pressure	• In normal state, the pressure gauge (in front of the unit) should indicate 2.0~2.5 bar. • If the pressure is less than 0.3 bar, please recharge the water.
2		Strainer (Water filter)	• Close the shut-off valves and disassemble strainer. Then wash the strainer to make it clean. • While disassembling the strainer, be careful for water flood out.
3		Safety valve	• Open the switch of the safety valve and check if water is flood out through the drain hose. • After checking, close the safety valve.
4	Electricity	Terminal block wiring	• Look and inspect if there is loosen or defected connection on the terminal block.

Starting Operation

Check before Starting Operation

1	Check to see whether there is any refrigerant leakage, and check whether the power or transmission cable is connected properly.
2	Confirm that 500 V megger shows 2.0 MΩ or more between power supply terminal block and ground. Do not operate in the case of 2.0 MΩ or less. NOTE: Never carry out mega ohm check over terminal control board. Otherwise the control board may break. Immediately after mounting the unit or after leaving it turned off for an extended length of time, the resistance of the insulation between the power supply terminal board and the ground may decrease to approx. 2.0 MΩ as a result of refrigerant accumulation in the internal compressor. If the insulation resistance is less than 2.0 MΩ, turn on the main power supply.
3	When the power is applied for the first time, operate the product after preheating for 2 hours. To protect the unit by increasing the oil temperature of the compressor.

Starting Operation flow chart

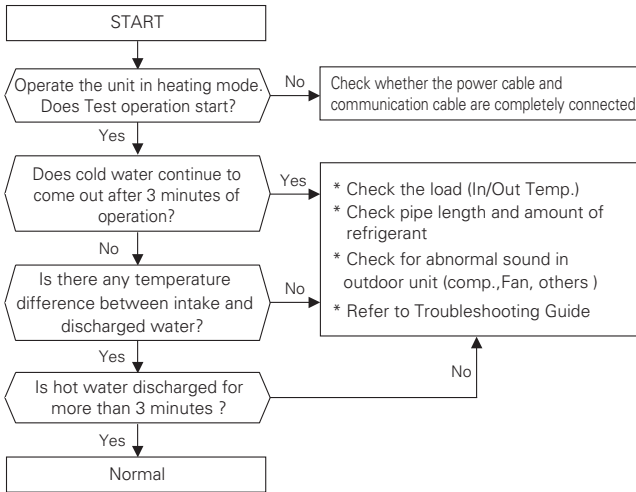

Airborne Noise Emission

The A-weighted sound pressure emitted by this product is below 70 dB.

** The noise level can vary depending on the site.

The figures quoted are emission level and are not necessarily safe working levels.

Whilst there is a correlation between the emission and exposure levels, this cannot be used reliably to determine whether or not further precautions are required.

Factor that influence the actual level of exposure of the workforce include the characteristics of the work room and the other sources of noise, i.e. the number of equipment and other adjacent processes and the length of time for which an operator exposed to the noise.

Also, the permissible exposure level can vary from country to country.

This information, however, will enable the user of the equipment to make a better evaluation of the hazard and risk.

Decommissioning and Recycling

- Sort the packaging according to cardboard, wood and foil and dispose of it in appropriate containers.
- After the lifespan of the device ends it has to be disposed of in accordance with the legislation on waste electrical and electronic devices in force.

Extraction of Refrigerant

The indoor unit has to be connected to the outdoor unit holding the HFC refrigerant R32 which is a fluorinated greenhouse gas covered in the Kyoto protocol. You have to prevent leakage of the gas into the atmosphere. During a maintenance procedure or removal of the device, make sure that the gas is removed in accordance with the current regulations for the use of substances harmful to the ozone and fluorinated greenhouse gases.

Troubleshooting

If **Hydro Kit** operates not properly or it does not start operation, please check following list.



CAUTION

Turn off the power before proceeding troubleshooting.

Troubleshooting for Problem while Operation

No	Problem	Reason	Solution
1	Heating or Cooling is not satisfactory.	Setting target temperature is not proper.	- Set target temperature correctly. - Check if temperature is water-based or air-based. See 'Remote sensor active' and 'Temp. sensor selection' in Chapter6.
		Charged water is not enough.	Check pressure gage and charge more water until pressure gage is indication 2~2.5 Bar
		Water flow rate is low.	- Check if strainer gathers too much particles. If so, strainer should be cleaned. - Check if pressure gauge indicates above 4 Bar - Check if water pipe is getting closed due to stacked particles or lime.
2	Although electric power supply is OK (remote controller displays information), the unit does not start working.	Water inlet temperature is too high.	If water inlet temperature is above 57 °C, the unit does not operated for the sake of system protection
		Water inlet temperature is too low.	- If water inlet temperature is below 5 °C in cooling operation, the unit does not operated for the sake of system protection. Wait while unit warms up the water inlet temperature. - If water inlet temperature is below 15 °C in heating operation, the unit does not operated for the sake of system protection. Wait while unit warms up to 18 °C the water inlet temperature. - If you are not using the back up heater accessory (HA**1M E1), increase the water temperature with the external heat source (heater, boiler). If the problem persists, contact your dealer. - If you want to use the screed drying function, be sure to purchase and install back up heater accessories (HA**1M E1).
3	Water pump noise.	Air purging is not completely finished.	- Open the cap of air purge and charge more water until pressure gage is indicating 2~2.5 Bar - If water does not splash out when the tip(at the top of the hole) is pressed, then air purging is not completed yet. If well purged, the water will splash out like fountain.
		Water pressure is low.	- Check if pressure gage indicates above 0.3 Bar. - Check if the expansion tank and pressure gauge operates well.
4	Water is flood out through drain hose.	Too much water is charged.	Flood out water by opening the switch of the safety valve until pressure gage is indicating 2~2.5 Bar.
		Expansion tank is damaged.	Replace the expansion tank
5	DHW is not hot.	Thermal protector of water tank heater is activated.	Open the side panel of the DHW tank and push the reset button of the thermal protector. (for more detail information, please refer to installation manual of DHW tank.
		DHW Heating is disabled.	Select DHW Heating Operation and identify if icon is displayed on the remote controller.

Troubleshooting for Error Code

Error Code	Description	Main Reasons
01*	Problem in Remote Room Air sensor	Remote air temperature sensor of MainPCB(indoor) is open or short.
02**	Problem in Refrigerant (Inlet side) sensor	Refrigerant inlet pipe temperature sensor of indoor unit is open or short
03****	Communication error between indoor unit and wired remote	Communication between wired remote controller and indoor unit is not possible.
05**	Communication error between Main PCB(Indoor) and Main	There is no communication between the Main PCB(Indoor) and the Main PCB(Outdoor cycle).
06**	Problem in Refrigerant pipe sensor (Outlet side)	Refrigerant outlet pipe temperature sensor of indoor unit is open or short.
08***	Problem in Water Tank sensor	Domestic hot water tank temperature sensor of indoor unit is open or short.
09****	PCB Program (EEPROM) Fault	The optional EEPROM is loosely inserted in or disconnected from the Main PCB(Indoor)
13***	Problem in Solar-thermal sensor	Solar pipe temperature sensor of indoor unit is open or short.
14****	Problem in Flow rate	Low flow detection during pump operation
15****	Overheating of water pipe	The temperature of the water pipe has exceeded a certain temperature.
16****	Problems in sensors	An error code 17,18,19 error has occurred at the same time
17*	Problem in Water-inlet sensor	Water inlet pipe temperature sensor of indoor unit is open or short.
18*	Problem in Water-inlet sensor	Water outlet pipe temperature sensor of indoor unit is open or short.
19*	Problem in Elec/Heater Wateroutlet sensor	Electric backup heater outlet temperature sensor of indoor unit is open or short.
231*	Problem in Water Pressure	Water Pressure Sensor of indoor unit is
232****	Problem in Flow Sensor	Flow Sensor of indoor unit is damaged.

Notice of error code**- Slight Trouble(S-Trouble) : ***

A trouble is occurred with temperature sensor of indoor unit. (sensing fail)
Emergency operation(heating) is possible with heat pump and electric heater.

- Heavy Trouble(H-Trouble) : **

A trouble is occurred with cycle and system can not be operated
Emergency operation(heating) is possible with electric heater ONLY.

- Other Trouble(O-Trouble) : ***

A trouble is occurred with optional function. (e.g. DHW tank sensor, Solar thermal sensor)
Emergency operation(heating) is possible with heat pump and electric heater.
In case of CH13, Heat pump operation does not stop.


- Error : ****

A serious fail was found and system can not be used before repair it.

**CAUTION****Precaution in service or check.**

Even after stopping the operation of product, it takes some time to discharge the remaining electricity of the electrolytic capacitor that was charged early. Before conducting a checking or repairing job, pull out the plug out of the outlet and make sure that the lamp on the control board outdoor unit is off.

Model Designation

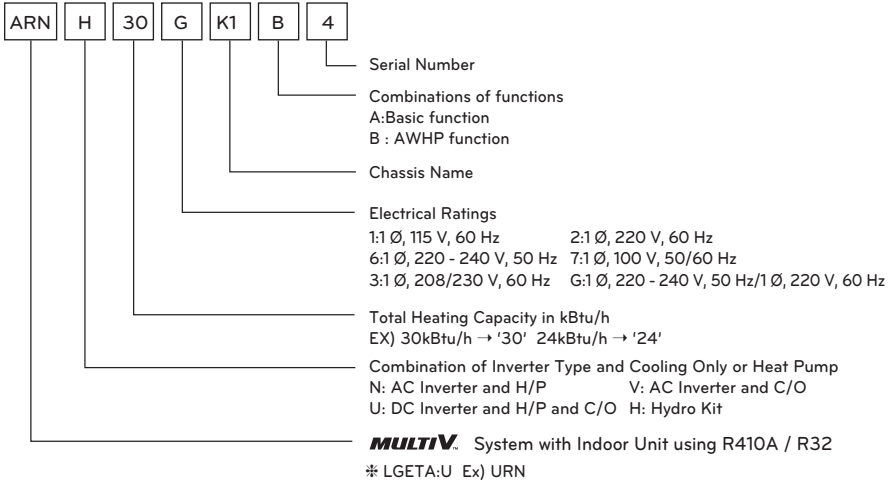

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source code licenses, that is contained in this product, Please visit <https://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notice are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three(3) years from the date on which you purchased the product.



Manufacturer :

LG Electronics Inc.

84, Wanam-ro, Seongsan-gu, Changwon-si, Gyeongsangnam-do, KOREA

UK Importer : LG Electronics U.K. Ltd

Velocity 2, Brooklands Drive, Weybridge, KT13 0SL

Eco design requirement

- The information for Eco design is available on the following free access website.
<https://www.lg.com/global/support/cedoc/cedoc>