



Washing Machine


OWNER'S MANUAL

WD-1018(0~9)SP	WD-1030(2~9)SP
WD-8018(0~9)SP	WD-8030(2~9)SP
WD-1018(0~9)NP	WD-1030(2~9)NP
WD-8018(0~9)NP	WD-8030(2~9)NP
WD-1018(0~9)TP	WD-1030(2~9)TP
WD-8018(0~9)TP	WD-8030(2~9)TP

Thank you for buying a
LG Fully Automatic Washing machine.
Please read your owner's manual carefully, it provides
instructions on safe installation, use and maintenance.
Retain it for future reference.
Record the model and serial numbers of your washing machine.

P/No.: 3828EN3805X

P roduct Feature

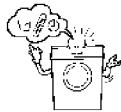

■ More economical by Intelligent Wash System

Intelligent Wash System detects the amount of load and water temperature, and then determines the optimum water level and washing time to minimize energy and water consumption.



■ Child-Lock

The Child-Lock system has been used to prevent children from pressing any button to change the program during operation.



■ Low noise speed control system

By sensing the amount of load and balance, it evenly distributes load to minimize the spinning noise level.



■ Auto Restart

If the washing machine is turned off by a power failure, it will restart automatically from the position it stopped at adjusting accordingly.

C ontents

Warnings	3
Specification	4
Installation	5
Care before washing	11
Adding detergent	12
Function	13
How to use washer	14
Maintenance	21
Troubleshooting guide	24



Warnings

READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING!

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury, or loss of life.

IMPORTANT SAFETY INSTRUCTIONS

WARNING : To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in the user-maintenance instructions or published user-repair instructions that you understand and have the skills to carry out.
- Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemicals, etc.
- Close supervision is necessary if this appliance is used by or near children.
Do not allow children to play on, with, or inside this or any other appliance.
- Do not leave the washer door open.
An open door could entice children to hang on the door or crawl inside the washer.
- Never reach into washer while it is moving. Wait until the drum has completely stopped.
- The laundry process can reduce the flame retardant of fabrics.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) which may ignite or explode.
- To avoid such a result, carefully follow the garment manufacturer's wash and care instructions.
- Do not slam the washer door closed or try to force the door open when locked. This could result in damage to the washer.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS


This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinance.

- Do not use an adapter or otherwise defeat the grounding plug.
- If you don't have the proper outlet, consult an electrician.

WARNING : Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance - if it does not fit the outlet, have a proper outlet installed by a qualified electrician.



S pecification

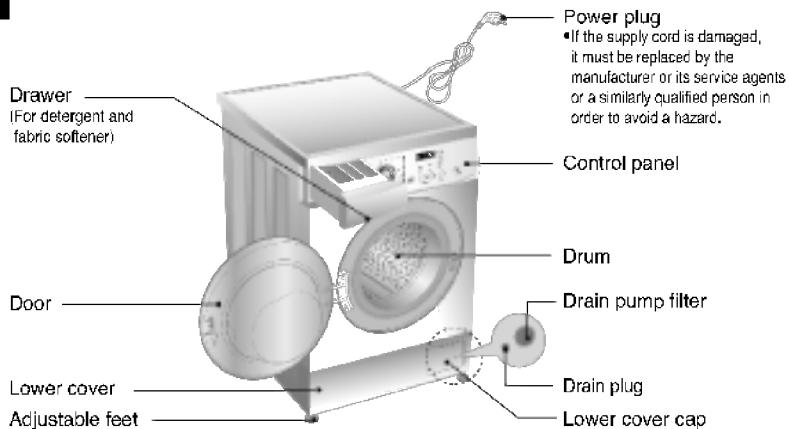


	WD-10180-9SP/10302-9SP 80180-9SP/80302-9SP	WD-10180-9NP/10302-9NP 80180-9NP/80302-9NP	WD-10180-9TP/10302-9TP 80180-9TP/80302-9TP
Name	Front loading washing machine		
Power supply	220-240V~, 50Hz		
Size(W x D x H)	600mm × 360mm × 850mm	600mm × 440mm × 850mm	600mm × 550mm × 850mm
Weight / Max. Watt	55 kg / 2100 W	60 kg / 2100 W	65 kg / 2100 W
Water capacity	3.5 kg	5 kg	7 kg
Water consumption	42 ℥	60 ℥	77 ℥
Permissible water Pressure	0.3 - 10kgf/cm ² (30~1000kPa)		
Spin Speed	1400/500/600/800 WD-8018(0~9)SP/8030(2~9)SP 8018(0~9)NP/8030(2~9)NP 8018(0~9)TP/8030(2~9)TP 1400/600/800/1000 WD-1018(0~9)SP/1030(2~9)SP 1018(0~9)NP/1030(2~9)NP 1018(0~9)TP/1030(2~9)TP		

* The appearance and specifications may be varied without notice to raise the units quality.

■ Noise level

Model	Wash	Spin
WD-1018(0~9)TP(NP/SP)	58 dB(A)	70 dB(A)
WD-1030(2~9)TP(NP/SP)		
WD-8018(0~9)TP(NP/SP)	58 dB(A)	68 dB(A)
WD-8030(2~9)TP(NP/SP)		

■ Accessories

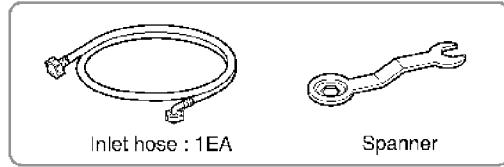

I nstallation

Install or store where it will not be exposed to temperatures below freezing or exposed to the weather.

Properly ground washer to conform with all governing codes and ordinances.

The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.



In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in clean condition at all times.

Any damage which may be caused by cockroaches or other vermin will not be covered by the appliance guarantee.


■ Transit bolts

The appliance is fitted with transit bolts to prevent internal damage during transport.

■ Removing transit bolts

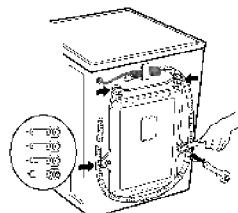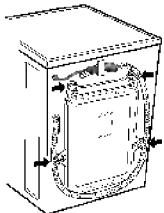


1. To prevent internal damage during transport, the special 4 bolts are locked. Before operating the washer, remove the bolts along with the rubber bungs.
 - If they are not removed, it may cause heavy vibration, noise and malfunction.

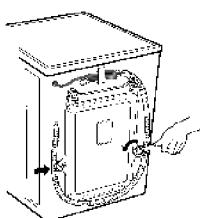

2. Unscrew the 4 bolts with the spanner supplied.


3. Take out the 4 bolts along with the rubber bungs by slightly twisting the bung. Keep the 4 bolts and the spanner for future use.
 - Whenever the appliance is transported, the transit bolts must be refitted.

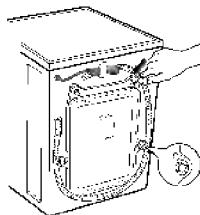

4. Close the holes with the caps supplied.

I nstallation

■ Installation place requirement

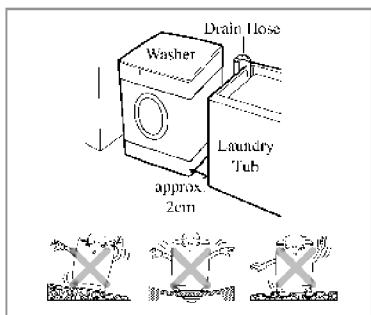

Level floor :

Allowable slope under entire washer is 1°

Power outlet :


Must be within 1.5 meters of either side of location of washer. Do not overload the outlet with more than one appliance.

Additional Clearance :

For wall, door and floor modeling is required.
(10cm : rear /2cm:right & left side)

Do not place or store laundry products on top of washer at any times.

They can damage the finish or controls.

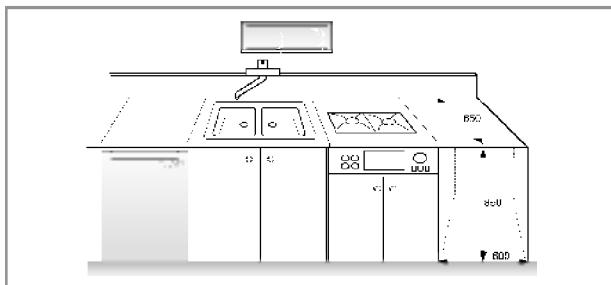

■ BS Plug Safety Details (For U.K. User)

IMPORTANT

THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:

GREEN AND YELLOW: EARTH

BLUE: NEUTRAL

BROWN: LIVE

This appliance must be earthed



As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Green and Yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol or coloured Green or Green and Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Red.

If a 13 amp (BS 1363) plug is used, fit a 13 amp BS 1362 fuse.


I nstallation

■ Electrical connection

1. Do not use an extension cord or double adapter.
 2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.
 3. Always unplug the machine and turn off the water supply after use.
 4. Connect the machine to an earthed socket in accordance with current wiring regulations.
 5. The appliance must be positioned so that the plug is easily accessible.
- Repairs to the washing machine must only be carried out qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local service center
 - Do not install your washing machine in rooms where temperatures below freezing may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
 - If the appliance is delivered in the winter months and temperatures are below freezing : Store the washing machine at room temperature for a few hours before putting it into operation.

■ Washing Machine is to be connected to the water mains using new hose-sets and that old hose-sets should not be used.

■ Connecting water supply hose

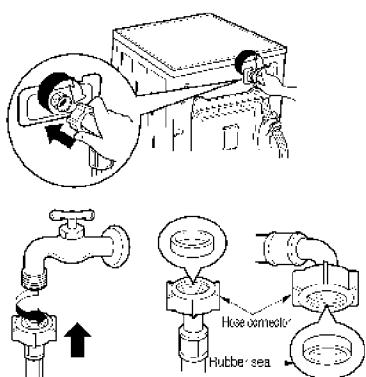


- Water supply pressure must be between 30kPa and 1000kPa (0.3~10kg/cm²)
- Don't strip or cross-thread when connecting Inlet hose to the valve.
- If the water supply pressure is more than 1000kPa, a decompression device should be installed.
- Two rubber seals are supplied with the water inlet hoses these are in order to prevent water leaks.
- Check water tightness of washing machine connections by turning the tap completely on.
- Periodically check the condition of the hose and replace the hose if necessary.
- Make sure that there is no kink on the hose and that it is not crushed.




I nstallation

■ Normal Tap without thread & screw type inlet hose


1. Unscrew the fixing screw to attach the tap.

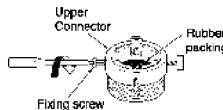

2. Push the connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.

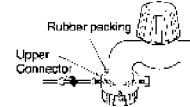


3. Push the water supply hose vertically upwards so that the rubber packing within in the hose can adhere completely to the tap and then tighten it by screwing it to the right.

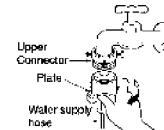


■ Normal Tap without thread & one touch type inlet hose (Single inlet models)


1. Untighten the upper connector screw.

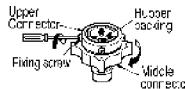


- In case the diameter of the tap is large remove the guide plate.

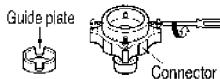

2. Push the upper connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.

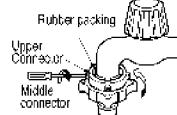


3. Connect the water supply hose to the middle connector, pushing the plate down.

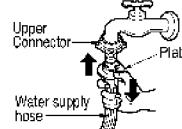

- Turn the middle connector not to have water leaked.
- Make sure that the rubber seal is inside the hose connector.

- To separate the water supply hose from the middle connector shut off the tap. Then pull the inlet hose down, pushing the plate down.

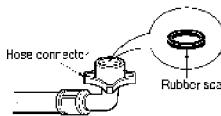

Used the horizontal tap

Horizontal tap



Extension tap



Square tap



- Your machine comes with only cold water connection.
- Make sure that there are no kinks in the hose and that it is not crushed.

I nstallation

This equipment is not designed for maritime use or for use mobile installations such as caravans, aircraft etc.



Turn off the stopcock if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain(gully) in the immediate vicinity.

When disposing of the appliance, cut off the mains cable, and destroy the plug Disable the door lock to prevent young children being trapped inside.



Packaging material (e.g. Films, Styrofoam) can be dangerous for children. There is a risk of suffocation !

Keep all packaging well away from children

■ Installation of drain hose

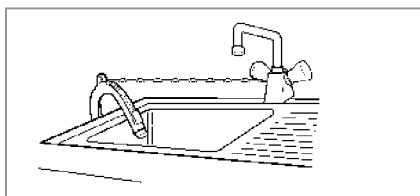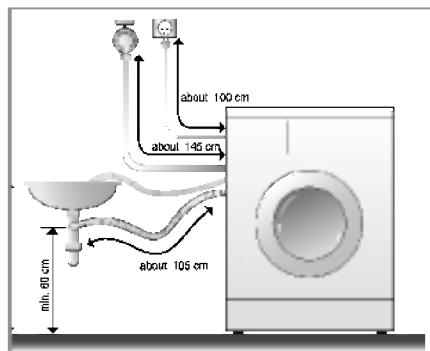

- When installing the drain hose sink, secure it tightly with a string.
- Proper securing of the drain hose will protect the floor from damage due to water leakage.

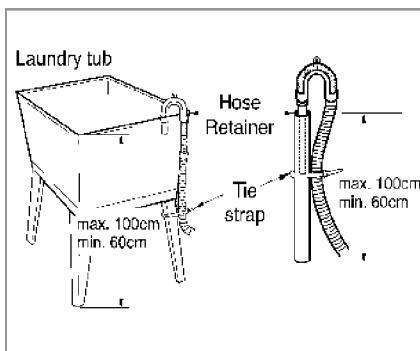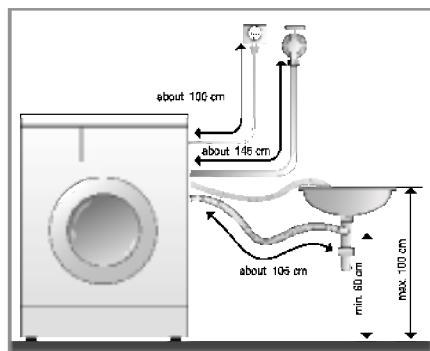


- The drain hose should not be placed higher than 100 cm above the floor.
- Proper securing of the drain hose will protect the floor from damage due to water leakage.
- When the drain hose is too long, do not force back into the washer. This will cause abnormal noise.




I nstallation

■ Level adjustment

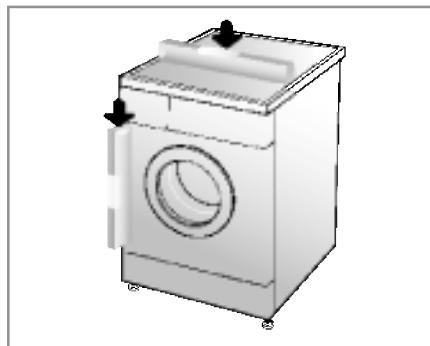

1. Adjusting the washing machine level properly prevents excessive noise and vibration.

Install the appliance on a solid and level floor surface, preferably in a corner of the room.

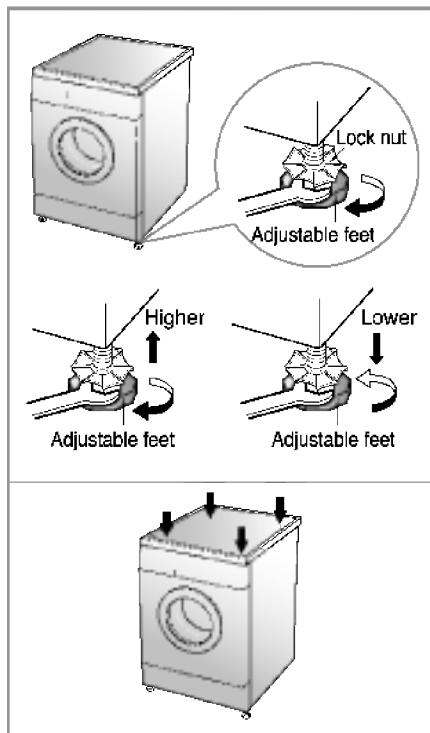

2. If the floor is uneven, adjust the adjustable feet as required. (do not insert pieces of wood etc. under the feet) Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level. (use a spirit level)

After the washer is level, tighten the lock nuts up towards of the base of the washer. All lock nuts must be tightened.

* Diagonal Check

When pushing down the edges of the washing machine top plate diagonally, the machine should not move up and down at all. (Please, check both of two directions)

If machine rocks when pushing the machine top plate diagonally, adjust the feet again.

Care before washing

■ Caring before washing

1. Care Labels

Look for a care label on your clothes. This will tell you about the fabric content of your garment and how it should be washed.

2. Sorting

To get the best results, Sort clothes into loads that can be washed with the same wash cycle. Water temperature and spin speed and different fabrics need to be washed in different ways. Always sort dark colors from pale colors and whites. Wash separately as dye and lint transfer can occur causing discoloration of white etc. If possible, do not wash heavily soiled items with lightly soiled one.

Soil (Heavy, Normal, Light)

Separate clothes according to amount of soil.

Color (White, Lights, Darks)

Separate white fabrics from colored fabrics.


Lint (Lint producers, Collectors)

Wash lint producers and lint collectors
separately.


3. Caring before loading

- Combine large and small items in a load. Load large items first. Large items should not be more than half the total wash load.


Do not wash single items. This may cause an out-of-balance load. Add one or two similar items.

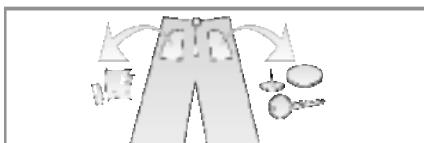

- Check all pockets to make sure that they are empty. Items such as nails, hair clip, matches, pens, coins and keys can damage both your washer and your clothes.

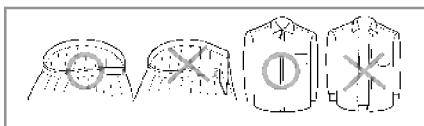

- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.

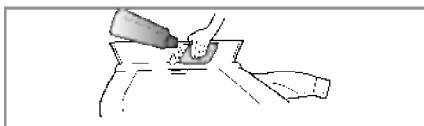


- Pre treat dirt and stains by brushing a little detergent dissolved in water onto stains like collars and cuffs to help shift dirt.



A ddng detergent


■ Adding detergent and fabric softener

1. The Dispenser Drawer

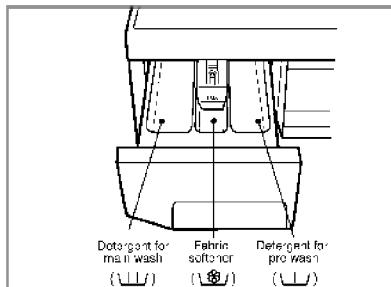

- Main wash only → 3 vertical bars
- Pre Wash + Main Wash → 1 vertical bar + 3 vertical bars

2. Adding Fabric Softener

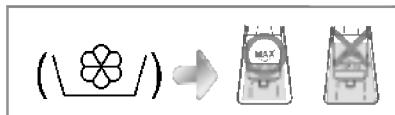

- Do not exceed the maximum fill line. Overfilling can cause early dispensing of the fabric softener which could stain clothes.
- Do not leave the fabric softener in the detergent drawer for more than 2 days. (Fabric softener could harden)
- Softener will automatically be added during the last rinse cycle.
- Do not open the drawer when water is supplied.
- Softener with high consistency should be mixed with water and melt away agglomeration in order to prevent softener cap being blocked.

NOTE Do not pour fabric softener directly on the clothes

3. Detergent dosage

- The detergent should be used according to the instruction of the detergent manufacture.
- If too much detergent is used more than the recommended amount, too many suds can occur and this will decrease the washing result or cause heavy load to the motor. (Causing a malfunction)
- Use powder detergent only for the front loading washer.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.

* Tips

Full load : according to manufacturer's recommendation.
Part load : 3/4 of the normal amount.
Minimum load : 1/2 of full load.

- Detergent is flushed from the dispenser at the beginning of the cycle.

Function

■ Recommended courses according to the laundry type

Program	Fabric Type	Proper Temp.	Option	Maximum Load		
Cotton	First check if laundry is machine washable. (white cotton, linen towel and sheets...)	95°C	Pre Wash (☒) Rinse+ (☒+) Crease Care (⤒) Bio (⦿)	WD-01S(0-9)SP WD-103(2-9)SP WD-851(0-9)SP WD-003(2-9)SP	WD-103(0-9)VP WD-103(2-9)VP WD-801(0-9)VP WD-803(2-9)VP	WD-103(0-9)TP WD-103(2-9)TP WD-801(0-9)TP WD-803(2-9)TP
	Color fast garments (shirts, night dresses, pajamas...) and lightly soiled white cotton (underwear...)		Pre Wash (☒) Rinse+ (☒+) Crease Care (⤒) Bio (⦿) Eco (◎)	3.5 kg	5 kg	7 kg
Synthetic	Polyamide, Acrylic, Polyester	40°C [60°C, 30°C]	Pre Wash (☒) Rinse+ (☒+) Crease Care (⤒) Bio (⦿)	Less than 1.5 kg	Less than 2.0 kg	Less than 3.0 kg
Delicate	Delicate laundry easily damaged (silk, curtains...)	30°C [40°C, Cold(⌘)]	Rinse+ (☒+) Crease Care (⤒)	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
Wool	Machine washable woolens with pure new wool only	30°C [40°C, Cold(⌘)]	Rinse+ (☒+) Crease Care (⤒)	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
Hand Wash	"Hand Wash" marked delicate and wool laundry	Cold(⌘) [30°C]	Rinse+ (☒+) Crease Care (⤒)	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
Quick 30	Colored Laundry which is lightly soiled fast.	30°C	Rinse+ (☒+) Crease Care (⤒)	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg

* Pre Wash(☒) : If the laundry is heavily soiled, "Pre Wash" course is recommended.

Pre Wash is available in Cotton and Synthetic Program.

* Eco(⦿) : By selecting Eco function, the water temperature is reduced and washing time is lengthened. So you can economize in your consumption of heating energy.

* Rinse+(☒+) : Used to introduce an additional rinse, which may assist in removing traces of detergent residue.

* Bio(⦿) : If you want to eliminate protein stains (milk, blood, chocolate...), you may select Bio function by pressing the option button.

* Crease Care(⤒) : If you want to prevent crease, select this function after selecting spin speed.

NB. You can only select Bio function when temperature is higher than 60°C in Cotton and Synthetic.

How to use washer




1. Cotton automatically selected upon power on.

- Press the **Power(○)** button to start.
- Press the **Start/Pause(■)** button.
- Initial condition
 - **Wash (洗)** : main wash
 - **Rinse (漂)** : 3 times
 - **Spin (脱)** : 1000 rpm
*[WD-1018(0~9)SP/WD-1030(2~9)SP/
WD-1018(0~9)NP/WD-1030(2~9)NP/
WD-1018(0~9)TP/WD-1030(2~9)TP]
800 rpm
[WD-8018(0~9)SP/WD-8030(2~9)SP/
WD-8018(0~9)NP/WD-8030(2~9)NP/
WD-8018(0~9)TP/WD-8030(2~9)TP]*
 - **Water temperature** : 60°C
 - **Program** : Cotton (棉)

2. Manual Selecting


- Press the **Power(○)** button to start.
- Select the conditions which you want to use, by turning the program dial and pressing each button.
For selecting the each conditions, please refer to the page15~page20
- Press the **Start/Pause(■)** button.

How to use washer

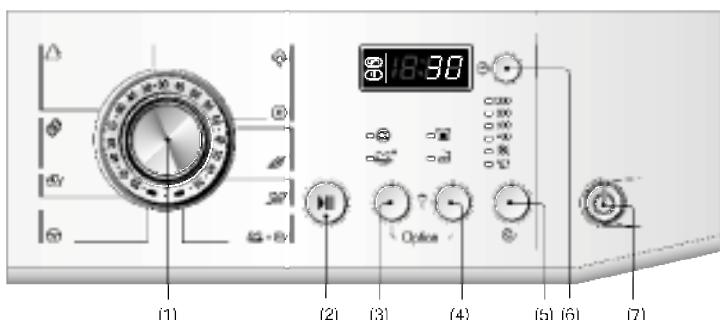

- (1) Dial : Program (3) Button : Option(Bio/Rinse+) (5) Button : Spin (6) Button : Time Delay
(2) Button : Start/Pause (4) Button : Option(Pre Wash/Crease Care) (7) Button : Power

Option

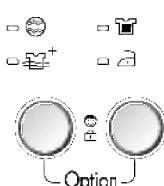

- By pressing the Option button, all Option functions may be selected.

- Bio ()
- Rinse+ ()
- Pre Wash ()
- Crease Care ()

1. Bio ()

- If you want to eliminate protein stains(milk, blood, chocolate...), you may select Bio function by pressing the option button. [You can select Bio function when temperature is higher than 60°C in cotton and Synthetic.]

2. Rinse+ ()

- Used to additional rinse, which may assist in removing traces of detergent residue.
- By selecting Rinse+ function, the rinse time and the rinse water are increased.

3. Pre Wash ()

- If the laundry is heavily soiled, "Pre Wash" course is effective.
- Pre Wash is available in Cotton and Synthetic.

The required lamp will light up for identification.


4. Crease Care ()

- If you want to prevent crease, select this button with spin speed.




How to use washer

Spin

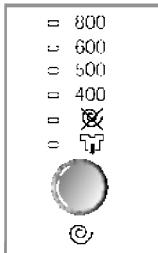

[WD-8018(0~9)SP/8030(2~9)SP/
8018(0~9)NP/8030(2~9)NP/
8018(0~9)TP/8030(2~9)TP]

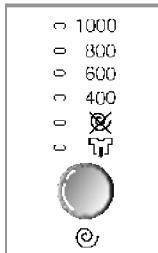

[WD-1018(0~9)SP/1030(2~9)SP/
1018(0~9)NP/1030(2~9)NP/
1018(0~9)TP/1030(2~9)TP]

- By pressing the Spin button, the spin speed can be chosen.

1. Spin selection

- Spin Speed is available according to the program as follows.
 - WD-8018(0~9)SP/8030(2~9)SP/8018(0~9)NP/
8030(2~9)NP/8018(0~9)TP/8030(2~9)TP
 - Cotton () / Rinse+Spin (+) /
Synthetic () / Wool () / Hand Wash ()
800-Rinse Hold () -No Spin () -
400-500-600
 - Delicate ()
600-Rinse Hold () -No Spin () -
400-500
 - Quick 30 ()
400-500-600-800-Rinse Hold () -
No Spin ()
 - WD-1018(0~9)SP/1030(2~9)SP/1018(0~9)NP/
1030(2~9)NP/1018(0~9)TP/1030(2~9)TP
 - Cotton () / Rinse+Spin (+) /
Synthetic () / Wool () / Hand Wash ()
1000-Rinse Hold () -No Spin () -
400-600-800
 - Delicate ()
800-Rinse Hold () -No Spin () -
400-600
 - Quick 30 ()
400-600-800-1000-Rinse Hold () -
No Spin ()

2. No spin

- If no spin is selected, the washer stops after draining water.

The required lamp will light up for identification.


3. Rinse Hold

- Is selected by pressing the spin button repeatedly this function leaves clothes in the machine; suspended in the water after a rinse without entering into spin.
- To proceed through to a drain or spin, once the rinse hold function is completed using to Spin button to the required program.
(Spin)

The required lamp will light up for identification.

How to use washer

Water Temp.

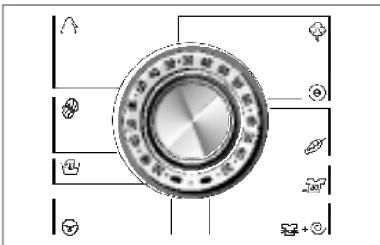

- By turning the Program Dial, the water temperature can be selected.
 - **Cold (※)**
 - **30°C / 40°C / 60°C / 95°C**

1. Water Temperature

- Water temperature can be selected according to the program.

The required temperature lamp will light up for identification.

For the more detailed information, please refer to the page13.


Child Lock




If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.

1. Child Lock


- Child Lock can be set by pressing the two Option button simultaneously.

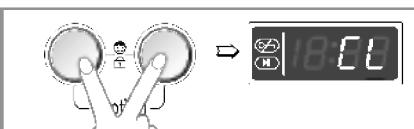

- When child lock is set, all buttons are inoperable except power button.
- To deactivate Child Lock system, press the two Option button simultaneously again.

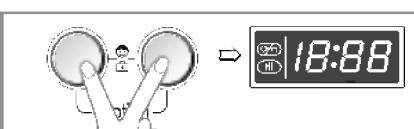

- To change to the desired program, whilst in child lock mode.
 1. Press both the two Option together once again.
 2. Press the Start/Pause button.
 3. Select the desired program and press the Start/Pause button again.

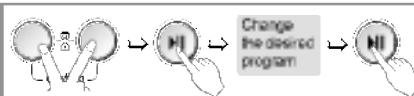


- The child lock can be set at any time and it is automatically canceled when operational errors occur. Also **Child Lock** works when power is off.



How to use washer

Time Delay

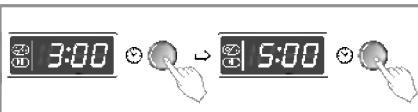


1. Time Delay

Preparing washing before starting "Time Delay"

- Turn on the water tap.
- Load laundry and close the door.
- Place the detergent and fabric softener in the drawer.
- How to set "Time Delay"
 - Press **Power** button.
 - Turn the **Program** dial to select the program you require.
 - Press **Time Delay** button and set the desired time.
 - Press the **Start/Pause** button.
(":" blinks.)
- If **Time Delay** button is pressed, "3:00" is displayed. The maximum delayed time is 19:00 hours and the minimum time is 3:00 hours.
- Each pressing of the button advances on time delay by one hour.
- To cancel the time delay, press the **Power** button.
- **Time Delay** is 'expected time' from the present to the completion of washing cycle or selected process (Wash, Rinse, Spin).
- *According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.*

Program

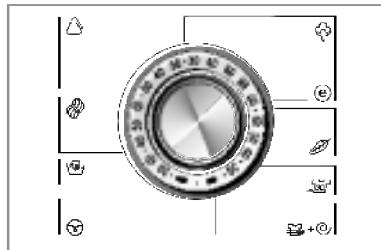

- 8 programs are available according to the laundry type.
- Lamp will light up to indicate selected program.

1. Program

- When **Start/Pause** button is pressed, the Coloureds program is automatically selected.
- By turning the Program dial, the program is selected in order of "Cotton(⌚) - Delicate(⌚) - Quick 30(⌚) - Rinse+Spin(⌚ + ⓧ) - Drain(⌚) - Hand Wash(⌚) - Wool(⌚) - Synthetic(⌚)".

Regarding to the laundry type for each program Please refer to the page13.

2. Course

- | | |
|-----------------|----------------------|
| • Cotton (⌚) | • Wool (⌚) |
| • Quick 30 (⌚) | • Hand Wash (⌚) |
| • Synthetic (⌚) | • Rinse+Spin (⌚ + ⓧ) |
| • Delicate (⌚) | • Drain (⌚) |



How to use washer

Start/Pause



1. Start

- This **Start/Pause** button is used to start wash cycle or pause the wash cycle.

Power



1. Power

- Press the Power button to turn power on and off
- To cancel the Time Delay function, if the power button should be pressed.

2. Pause

- If temporary stop of wash cycle is needed, press the **Start/Pause** button.
- When in Pause, the power is turned off automatically after 4 minutes.
- NB.** The door will not open before 1 to 2 minutes when Pause is selected, or at the end of the wash cycle.

2. Initial Program

- When the Power button is pressed, the washer is ready for Cotton program. And the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press the **Start/Pause** button and then the washer will proceed.

Initial program

[WD-8018(0~9)SP/8030(2~9)SP/8018(0~9)NP/
8030(2~9)NP/8018(0~9)TP/8030(2~9)TP]
- Cotton Program / Main wash /
Normal Rinse/800 rpm / 60°C

[WD-1018(0~9)SP/1030(2~9)SP/1018(0~9)NP/
1030(2~9)NP/1018(0~9)TP/1030(2~9)TP]
- Cotton Program / Main wash /
Normal Rinse/1000 rpm / 60°C



H ow to use washer

Display



1. Special function display

- When child lock is selected, the "CL" is displayed.
- When time delay is selected it shows the remaining times to finish the selected program.

2. Self diagnosis display

- If the machine encounters a fault during operation, the associated fault will be displayed.

"PE" : Water pressure sensing error

"FE" : Problem of overfilling water

"DE" : Door is not closed

"IE" : Water inlet trouble

"OE" : Drainage trouble

"UE" : Unbalanced load

"TE" : Water temperature trouble

If these error letters are displayed, please refer to the troubleshooting page24 and follow the guide.

3. Completion of washing

- When washing cycle is completed, "End" is displayed on the "Multi display".

4. Time left

- During washing cycle, the remaining washing time is displayed.
- Recommended program by manufacturer.

* () : WD-1030(2~9)SP/8030(2~9)SP

* < > : WD-1030(2~9)TP/8030(2~9)TP

- Cotton (◎) 95°C : around 2 hours and 27(17)<37> minutes

- Cotton (◎) 60°C : around 2 hours and 35 minutes

- Synthetic (△) : around 1 hour and 22 minutes

- Delicate (○) : around 58 minutes

- Wool (●) : around 58 minute

- Hand Wash (■) : around 57 minutes

- Quick 30 (■) : around 30 minutes

- Rinse + Spin (■ + ○) : around 20 minutes

- Drain (○) : around 1 minutes

- The washing time may vary by the amount of laundry, water pressure, water temperature and other washing conditions.

- If an unbalanced load is detected or if the suds removing program operates, the wash time may be extended.
(Max. increasing time is 45minutes.)




Maintenance


- * Before cleaning the washer interior, unplug the electrical power cord to avoid electrical shock to avoid electrical shock hazards.
- * When disposing of the appliance, cut off the mains cable, and destroy the plug Disable the door lock to prevent young children being trapped inside.

■ The water inlet filter

- "  " error message will blink on the control panel when water does not enter the detergent drawer.
 - If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.
- It is therefore a good idea to clean it from time to time.

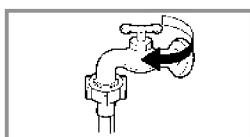

1. Turn off the water tap.

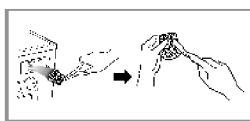

2. Unscrew the water inlet hose.



3. Clean the filter using a hard bristle brush.



4. Tighten up the inlet hose.

■ The drain pump filter


- * The drain filter collects threads and small objects left in the laundry.
- Check regularly that the filter is clean to ensure smooth running of your machine.

CAUTION First drain using the drain and then open the pump filter to remove whatever any threads or objects.


Be careful when draining if the water is hot.

- * Allow the water to cool down before cleaning the drain pump, carrying out emergency emptying or opening the door in an emergency.


1. Open the lower cover cap (①) by using a coin. Turn the drain plug (②) to pull out the hose.

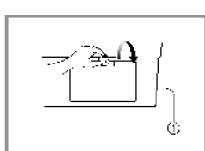

2. Unplug the drain plug (②), allowing the water to flow out. At this time use a vessel to prevent water flowing on to the floor. When water does not flow any more, turn the pump filter (③) open to the left.

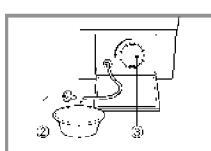


3. Remove any foreign material from the pump filter (③). After cleaning, turn the pump filter (③) clockwise and insert the drain plug (②) to the original place, close the lower cover cap.

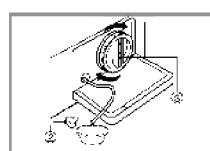

Maintenance


■ Dispenser drawer

- * After a while detergents and fabric softeners leave a deposit in the drawer.
- It should be cleaned from time to time with a jet of running water.
- If necessary it can be removed completely from the machine by pressing the catch downwards and by pulling it out.
- To facilitate cleaning, the upper part of the fabric softener compartment can be removed.

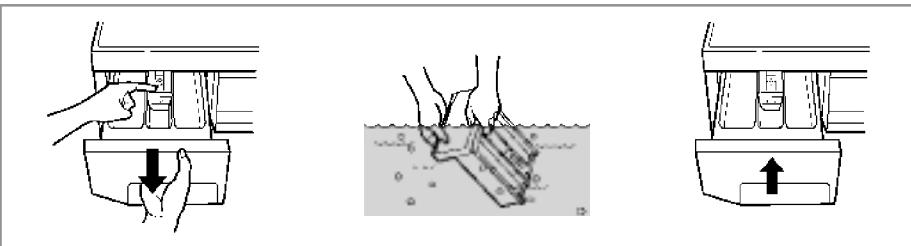

■ The drawer recess

- * Detergent can also accumulate inside the recess which should be cleaned occasionally with an old toothbrush.
- Once you have finished cleaning, replace the drawer and run a rinse cycle without laundry.

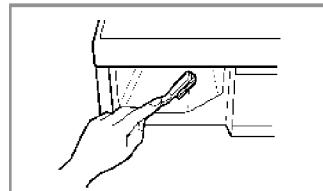

■ The washing drum

- If you live in a hard water area, limescale may continuously build up in places where it cannot be seen and thus not easily removed.
Over time the build up of scale clogs appliances, and if it is not kept in check these may have to be replaced.
- Although the washing drum is made of Stainless steel, specks of rust can be caused by small metal articles (paper clips, safety pins) which have been left in the drum.
- The washing drum should be cleaned from time to time.
- If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use.
*** Descaler may contain chemicals that may damage part of your washing machine.**
*** Remove any spots with a stainless steel cleaning agent.**
*** Never use steel wool.**

Maintenance

■ Cleaning your washer

1. Exterior

Proper care of your washer can extend its life.

The outside of the machine can be cleaned with warm water and a neutral non abrasive household detergent.

Immediately wipe off any spills. Wipe with damp cloth.

Try not to hit surface with sharp objects.

* IMPORTANT: Do not use methylated spirits, diluents or similar products.

2. Interior

Dry around the washer door opening, flexible gasket and door glass.

Run washer through a complete cycle using hot water.

Repeat process if necessary.

NOTE Remove hard water deposits using only cleaners labeled as washer safe.

■ Cold condition

If the washer is stored in an area where freezing may occur or moved in freezing temperatures, follow these instructions to prevent damage to the washer:

1. Turn off water supply tap.
2. Disconnect hoses from water supply and drain water from hoses.
3. Plug electrical cord into a properly grounded electrical outlet.
4. Add 1 gallon(3.8L) of nontoxic recreational vehicle(RV) antifreeze into an empty wash drum.
Close the door.
5. Set spin cycle and let washer spin for 1 minute to drain out all water.
Not all of the RV antifreeze will be expelled.
6. Unplug electrical power cord, dry the drum interior, and close the door.
7. Remove dispenser drawer drain and dry excessive water from the compartments.
8. Store washer in an upright position.
9. To remove antifreeze from washer after storage, run empty washer through a complete cycle using detergent. Do not add wash load.



Troubleshooting guide

* This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately.

When the machine does not function properly or does not function at all, check the following points before you contact your service provider.


Symptom	Possible Cause	Solution
Rattling and clanking noise	<ul style="list-style-type: none">Foreign objects such as coins or safety pins maybe in drum or pump.	Stop washer and check drum and drain filter. If noise continues after washer is restarted, call your authorised service centre.
Thumping sound	<ul style="list-style-type: none">Heavy wash loads may produce a thumping sound. This is usually normal.	If sound continues, washer is probably out of balance. Stop and redistribute wash load.
Vibrating noise	<ul style="list-style-type: none">Have all the transit bolts and packing been removed?Are all the feet resting firmly on the ground?	If not removed during installation. Refer to Installation guide for removing transit bolts. Wash load may be unevenly distributed in drum. Stop washer and rearrange wash load.
Water leaks.	<ul style="list-style-type: none">Fill hoses or drain hose are loose at tap or washer.House drain pipes are clogged.	Check and tighten hose connections. Unclog drain pipe. Contact plumber if necessary.
Oversudsing		Too much detergent or unsuitable detergent may cause excessive foaming which may result in water leaks.
Water does not enter washer or it enters slowly	<ul style="list-style-type: none">Water supply is not adequate in area.Water supply tap is not completely open.Water inlet hose(s) are kinked.The filter of the inlet hose(s) clogged.	Check another tap in the house. Fully open tap. Straighten hose. Check the filter of the inlet hose.
Water in the washer does not drain or drains slowly.	<ul style="list-style-type: none">Drain hose is kinked or clogged.The drain filter is clogged.	Clean and straighten the drain hose. Clean the drain filter

Troubleshooting guide

Symptom	Possible Cause	Solution
Washer does not start	<ul style="list-style-type: none">• Electrical power cord may not be plugged in or connection may be loose.• House fuse blown, circuit breaker tripped, or a power outage has occurred.• Water supply tap is not turned on.	<p>Make sure plug fits tightly in wall outlet.</p> <p>Reset circuit breaker or replace fuse. Do not increase fuse capacity. If problem is a circuit overload, have it corrected by a qualified electrician. Turn on water supply tap.</p>
Washer will not spin	* Check that the door is firmly shut.	<p>Close the door and press the Start/Pause button. After pressing the Start/Pause button, it may take a few moments before the clothes washer begins to spin. The door must lock before spin can be achieved.</p>
Door does not open		<p>Once started, the door can not be opened for safety reasons. Wait one or two minutes before opening the door to give the electric locking mechanism time to release.</p>
Wash cycle time delayed		<p>The washing time may vary by the amount of laundry, water pressure, water temperature and other usage conditions. If the imbalance is detected or if the suds removing program works, the wash time shall be increased.</p>



Troubleshooting guide

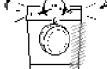Symptom	Possible Cause	Solution
I E	<ul style="list-style-type: none"> • Water supply is not adequate in area. • Water supply taps are not completely open. • Water inlet hose(s) are kinked. • The filter of the inlet hose(s) are clogged. 	<p>Check another tap in the house. Fully open tap.</p> <p>Straighten hose(s). Check the filter of the inlet hose.</p>
D E	<ul style="list-style-type: none"> • Drain hose is kinked or clogged. • The drain filter is clogged. 	<p>Clean and straighten the drain hose. Clean the drain filter.</p>
U E	<ul style="list-style-type: none"> • Load is too small. • Load is out of balance. • The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (ex. bath mat, bath robe, etc.) this system may stop spinning or even interrupt the spin cycle altogether. • If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle. 	<p>Add 1 or 2 similar items to help balance the load. Rearrange load to allow proper spinning</p>
d E	 <ul style="list-style-type: none"> • Is the door opened? 	<p>Close the door. * If "d E" is not released, call for service.</p>
t E		<p>Unplug the power plug and call for service.</p>
F E	<ul style="list-style-type: none"> • Water overfills due to the faulty water valve. 	<p>Close the water tap. Unplug the power plug. Call for service.</p>
P E	<ul style="list-style-type: none"> • Water level sensor has malfunctioned. 	

M^emo



英语

3828EN3805X 定稿日期:2004.10.16 210mm×145mm

СИМВОЛ	БРЕНДЫ ИНДИКАТОРЫ	ПОДСКАЗКА
1 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.
2 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.
3 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.
4 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.
5 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.
6 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.
7 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.
8 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.
9 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.
10 Е	• ХРАМ БОГИНОССАСАЕ. Любопытство к науке. Любопытство к науке.	• Магнитные ядерные реакторы.

C | INCBK HA B3MKHN NOBPEJN

CHINESE LANGUAGE HANDBOOK



СИМТОМ	БЗМЖА НРНННА
<p>• Бзапада на нонатранн симптоми бзапада на нрнппета.</p> <p>Симптоми бзапада на нрнппета</p>	<p>• Абдомнин метрини нрнппети ако умбрт е цине, е бзападо ма ако умбрт е цине, е бзападо ма лини тоза норокене нрнхете е халычан бзарча на нрнхете. Бзапада на нрнхете нрнхете</p> <p>• Махшарте ин трапечигтире бзапада на нрнхете нрнхете</p> <p>• Нисенпактес ин трапечигтире бзапада на нрнхете нрнхете</p> <p>• Мажкяна це оракини от крата либопете бзакнте на мажкяне.</p> <p>Ортапаси мажкяна це сирекете г бодонпактес.</p> <p>Людабини це хеноцхортул упак нин цте нреподонпакн.</p> <p>Людепете хеноцхортул упак нин цте нреподонпакн.</p> <p>Ортапаси мажкяна це сирекете г бодонпактес.</p> <p>Бзапада на нрнхете нрнхете</p>
<p>• Мажкяна це оракини от крата либопете бзакнте на мажкяне.</p> <p>Ортапаси мажкяна це сирекете г бодонпактес.</p> <p>Людабини це хеноцхортул упак нин цте нреподонпакн.</p> <p>Людепете хеноцхортул упак нин цте нреподонпакн.</p> <p>Ортапаси мажкяна це сирекете г бодонпактес.</p> <p>Бзапада на нрнхете нрнхете</p>	<p>• Нин от непарата либопете бзакнте на мажкяне.</p> <p>Ортапаси мажкяна це сирекете г бодонпактес.</p> <p>Людабини це хеноцхортул упак нин цте нреподонпакн.</p> <p>Людепете хеноцхортул упак нин цте нреподонпакн.</p> <p>Ортапаси мажкяна це сирекете г бодонпактес.</p> <p>Бзапада на нрнхете нрнхете</p>
<p>• Мажкяна це оракини от крата либопете бзакнте на мажкяне.</p> <p>Ортапаси мажкяна це сирекете г бодонпактес.</p> <p>Людабини це хеноцхортул упак нин цте нреподонпакн.</p> <p>Людепете хеноцхортул упак нин цте нреподонпакн.</p> <p>Ортапаси мажкяна це сирекете г бодонпактес.</p> <p>Бзапада на нрнхете нрнхете</p>	<p>• Кранихата на бозата на орбопете кранихата фокпакн.</p> <p>Орбопете кранихата фокпакн.</p> <p>Людепете хеноцхортул упак нин цте нреподонпакн.</p> <p>Людепете хеноцхортул упак нин цте нреподонпакн.</p> <p>Кранихата на бозата на бозата на орбопете кранихата фокпакн.</p> <p>Бозата на бозата на бозата на орбопете кранихата фокпакн.</p>
<p>• Кранихата на бозата на бозата на орбопете кранихата фокпакн.</p> <p>Бозата на бозата на бозата на орбопете кранихата фокпакн.</p>	<p>• Мажкяна це сирекете г бодонпактес.</p> <p>Людепете хеноцхортул упак нин цте нреподонпакн.</p>

C МАСКИ НА БЗМЖА НРНННА

U OJAPPKKA

■ LOJONCBAAHE HA NEPEAHHTA OTBPH

LOJONCBAAHE HA NEPEAHHTA OTBPH
OTBPH MAUNHHTA MOKE JA 6PPE LOHNCETHA C HEYPAHHT C HESENHFERKHNOHEH NPEHNPAT.
NEJONCBAAHE BRAKKEH NPEHNPAT N NAEETE NOBPXPXHOCTA OT HAPPAKBAHE C OCTPUP NPEHNPAT.
Bakho. HE NEJONCBAAHE METNODGE CINP, PAPPEAHNTEN NUN NOBODHN NPOBRYKTU.

LOJONCBAAHE BRAKKEH NPEHNPAT
OTBPH MAUNHHTA MOKE JA 6PPE LOHNCETHA C HEYPAHHT C HESENHFERKHNOHEH NPEHNPAT.
NEJONCBAAHE BRAKKEH NPEHNPAT N NAEETE NOBPXPXHOCTA OT HAPPAKBAHE C OCTPUP NPEHNPAT.
Bakho. HE NEJONCBAAHE METNODGE CINP, PAPPEAHNTEN NUN NOBODHN NPOBRYKTU.

■ NHTEPNOP

AKO NEPEAHHTA CE CXPXPABRA B YCNOBNA, KPEHTO CE BPSIMOKHN MNHGCON TEPMEPARTYPN.
CHPPEAHHTIE HCHPKYKUHNTE, ZA ZA NEPEHTEPANTIE BEETHAYHUN NPEHNPAT.

- CHPPEAHHTIE HCHPKYKUHNTE HA BOSA N OTBOPHTE MAPKYNITE.
- LPGDPEHTE EMKTPHNECKNA WHYP B OOGOCOEHNA ENSKTPHNECKNA NDOXA.
- DZOGAETTE I LATHON (3.BN) HETODCNHEH AHTNDPNS RV B TPSAHNA GEPAGAH, SARTOPEHTE BPARATA.
- HAMACCEHE UGETPYFYRATA N OCTABERTE NEPEAHHTA JA NAXABPN UNATTA BOSA. HE UNATO
KOMHECTRAO RV ULE 6PPE NAXABPNHEO
- N3KNUHHTIE LIENGENA, NAGYUHTE GEPAGAH A OTBPHTE N3ARTOPEHTE BPARATA... N NOJCYWEME
- N3KNUHHTIE LIENGENA, NAGYUHTE GEPAGAH A OTBPHTE N3ARTOPEHTE BPARATA... N NOJCYWEME

■ LPN HNCIN TERMEDPARTYPN

AKO NEPEAHHTA CE CXPXPABRA B YCNOBNA, KPEHTO CE BPSIMOKHN MNHGCON TEPMEPARTYPN.
CHPPEAHHTIE HCHPKYKUHNTE, ZA ZA NEPEHTEPANTIE BEETHAYHUN NPEHNPAT.

- CHPPEAHHTIE HCHPKYKUHNTE HA BOSA N OTBOPHTE MAPKYNITE.
- LPGDPEHTE EMKTPHNECKNA WHYP B OOGOCOEHNA ENSKTPHNECKNA NDOXA.
- DZOGAETTE I LATHON (3.BN) HETODCNHEH AHTNDPNS RV B TPSAHNA GEPAGAH, SARTOPEHTE BPARATA.
- HAMACCEHE UGETPYFYRATA N OCTABERTE NEPEAHHTA JA NAXABPN UNATTA BOSA. HE UNATO
KOMHECTRAO RV ULE 6PPE NAXABPNHEO
- N3KNUHHTIE LIENGENA, NAGYUHTE GEPAGAH A OTBPHTE N3ARTOPEHTE BPARATA... N NOJCYWEME
- N3KNUHHTIE LIENGENA, NAGYUHTE GEPAGAH A OTBPHTE N3ARTOPEHTE BPARATA... N NOJCYWEME



Ljepša je način rada s pomoću ugradnje i uklanjanja upečatljivača.

• Upečatljivač je uvek pripravljen za upotrebu.


• Ako je upečatljivač u potpunosti uklanjan, upečatljivač je uvek pripravljen za upotrebu.

• Upečatljivač je uvek pripravljen za upotrebu.

■ BAPAGAHA HA NEPEČATLJIVOST

• Upečatljivač je uvek pripravljen za upotrebu.

• Upečatljivač je uvek pripravljen za upotrebu.

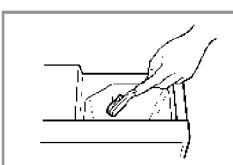


• Upečatljivač je uvek pripravljen za upotrebu.

• Upečatljivač je uvek pripravljen za upotrebu.

• Upečatljivač je uvek pripravljen za upotrebu.


■ NOHINČTAHE HA BAPAGAHA.

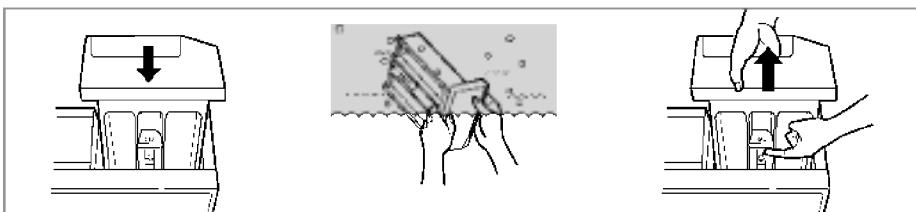

• Upečatljivač je uvek pripravljen za upotrebu.


■ NOHINČTAHE HA HEKMEĐAKTEO 3A NEPEČATLJIVOST

U OLAAPPKA

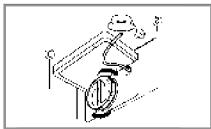


KALAKA/1.

3. Nasadete pumppa harap n
nondelite. (8) Great nondelite
abperte qmmpa ha! MACTO
my, kato lo no moco ka ha
qacobhinko bapte ctpenka,bapte
(2) ha MACTO my 3abopeira

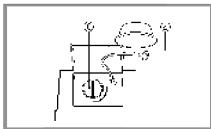

otbopete.

2. Naukohetë Makrygjy, sa illa
nshere Bopatra. Lloctebete
çpbi, sa ësia nshere
haqiqihe ësia nshere
Korato Bopatra neçtare Ma
nsthja, 3abaptere ((3)). N
pa ((2)),
tre
yjetate
2. Kërmak

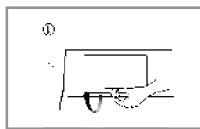

(D) Kartu identitas kamar
• Orang-orang yang bertemu
• Kartu identitas kamar
• Kartu identitas kamar
• Kartu identitas kamar

* Ako nckarej Aja nchincnte obrgjihrebaultra lomma, nchakante n3s3ctho s3pme npepln Aja otreponete sparta ha nepanthatra.


Consequently, the first step in the process of making a movie is to determine what kind of story you want to tell.

Indicates the number of Habsburgs in each town or city.


BHMMAHNE Bpmlete Bhnmauhne n b3amete Mekn ldehn jn a oboognre cunntleba.

Toan fünnittp saaltpakke mwoxe: mazkin uppeletert nappyin Dokyulin, monalihuan cryanhno
a neppahtra. Upperepparante periyahpoo heeropto cpcotahne.


■ **Lioncubahe ha fñntipa ha fñntipa ha nñxofñalata Bora.**

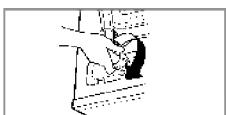

Thohinctete
chintipaa c
momouta ha
Tribppaa hetka.

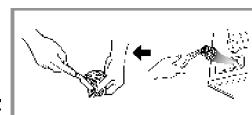

300Pa ot kpa/a.

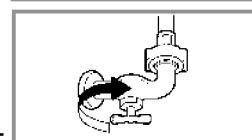

2. Obtaining
background
information
about the
patient.

Adi postar e tipicamente traspresa, lo spazio in cui si svolgono i rapporti sociali è sempre più spesso un luogo di interazione che non un luogo di interazione.

Digitized by srujanika@gmail.com

- "E" Toba Capouléne, nuncachó ha Anicuher oshasba, he Bogata he Mocuras Aò

Lioneltrahé Ha Boxdallata Gntema 3a Boza.

* Ako je PEPLABT hrmsa pa ce nizomrba norehe otcipahete ochobnute rageden n glesarkinbnpasne mehnxnmna sa sakutiohabe ha sparta.


* BINAHLN KOLATO HONIGCTBATE HEPAHJHTA BINAHLN A N3RJLJOHJHABTE OT
* ENEKTPNHECKATA MPEKA 3A JA N3P3LHETE B3MOKHCTTA OT TOKOB YMAP.

UQAPPKA

- *Brao* (⊕) - *Bpaao* (⊖) - *Bpaao naphae*
 - *Bpaao naphae 30C* (⊖) - *Bpaao naphae*
 - *Cnhtterka* (▽) - *Lnakhehe* +
 - *Gennakrho naphae* - *Hethpofyra*
 - *Niammabae* - *Niammabae* (⊖)

1. NPOLFAMIN

- **Bunătă neputină patinoara c**
8 pa3unyhн upgrapm, c konto ja
nimpate pa3unyhн nimpote npahe.

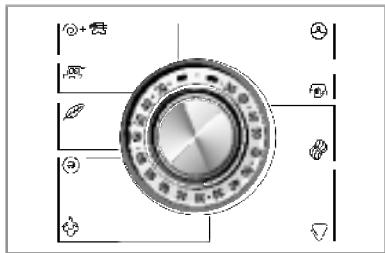


NPOLPAMATOP

KAKA NATIONSBAME UEPARHATA

Java národního rodu Lurkha ha Apache,


1. 3DABEH CRAPPI

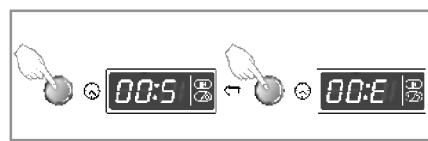


3abbeh trapr

3828EN3805X 定稿日期:2004.10.16 210mm×145mm


- Mokerete **A** na singapate tavan nuporpsama no niskrinojeha.
- Bcakso bpsme, zjedon n akro nepsahrta e

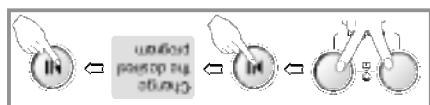

1. Hartincerte jibete kometa habebhaxx.
 2. Hartincerte Start / Pause (II).
 3. Ngedepete kemerata ot Bac nuporpsama n hantnchete orhobe Start / Pause (II).
- Akro nokerimate **A** na ngedepete harkkaa
 - Ako nokerimate **A** na singapata chyrrinjita "Pumpenraum kontroll"
 - Ako nokerimate **A** na singapata chyrrinjita "Pumpenraum kontroll"
 - Ako nokerimate **A** na singapata chyrrinjita "Pumpenraum kontroll"

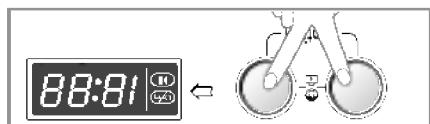

- Gobetopho hantnchae ha abete kometa.
- Gobetopha hantnchae ha abete kometa.
- Gobetopha hantnchae ha abete kometa.
- Gobetopha hantnchae ha abete kometa.

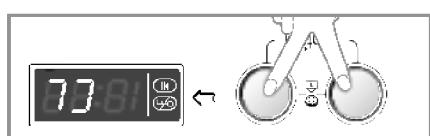

- Gobetopha hantnchae ha abete kometa.

1. Elektro saknhojbarie



Elektro saknhojbarie

K AK A N3L0M3VABME NEPAJHRTA

Temperatura cebba cebtawna


- Temperatura ha cebtawna cebtawna
- Temperatura ha cebtawna cebtawna

1. TEMPERATPA HA BOJATA

-30°C / 40°C / 60°C / 95°C.

Cybera bojja (*).

- Temperatura ha bojata mok Aa dbla
- Temperatura ha bojata mok Aa dbla

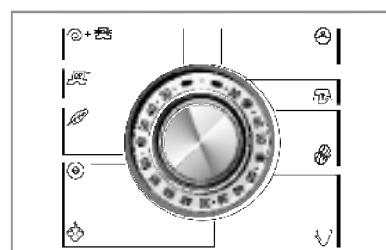

TEMPEPATPA HA BOJATA



KAK RA N3L0N3YBAME NEPAJHRTA

Легтпфыя


2. Be3 Nehtpoфyra

- Kortato nideperle tæan fyrkringin, til he
lhettoppofnima uphætdt chelj karo
nunspæðin Boðarla.
 - Kortato nideperle tæan fyrkringin, til he
lhettoppofnima uphætdt chelj karo
nunspæðin Boðarla.

3. Be3 n3urakbahe

1. Nogod na hetropolja.

- | | |
|--|--|
|
Ministry of Education and Science of the Russian Federation |
Federal Agency for Quality Assurance in Education |
| • | • |
| WID-10180-9-SP180302-9-SP1 | WID-10180-9-SP180302-9-SP1 |
| 80180-9-SP180302-9-SP1 | 80180-9-SP180302-9-SP1 |
| 10180-9-SP180302-9-NP1 | 10180-9-SP180302-9-NP1 |
| 10180-9-SP180302-9-TP1 | 10180-9-SP180302-9-TP1 |
| • | • |
| Korato hantcheve gytoche uhetpofympa, | mokete Ma perymnatae ckopeccta ha |
| • | uhetpofympa. |

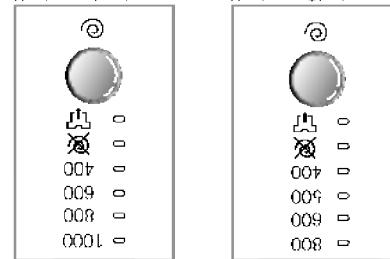

- Akо некатре ја напомените за Апексите, хартичите тојн ги тогат.
- Ако некатре ја напомените за Апексите, хартичите тојн ги тогат.

4. Be3マーカー (■)

- Ѓигитална е ниска, кога се користи за контролирана.
- Ѓигитална е ниска, кога се користи за контролирана.

3. Ниска напомена (■)

- Користи напомена за макро функција замисочи.
- Користи напомена за макро функција замисочи.
- Ѓигитална е ниска, кога се користи за контролирана.
- Ѓигитална е ниска, кога се користи за контролирана.

2. Ѓигитална напомена (■)

- Ако е најдоброто да напомените за контролирана дури и кога ќе се отвори дверите.
- Ако е најдоброто да напомените за контролирана дури и кога ќе се отвори дверите.


1. Bio (●)

- Bio (●) - Ѓигитална напомена
- Be3マーカー (■) - Ѓигитална напомена



Одлики

- (1) Дигитална (2) Старт/Пауз
- (3) Опцијон (Bio/Дигитална напомена) (4) Опцијон (Ниска/Ниска напомена)
- (5) Леткопротрајни (6) Задебелен кратер (7) Блокираше

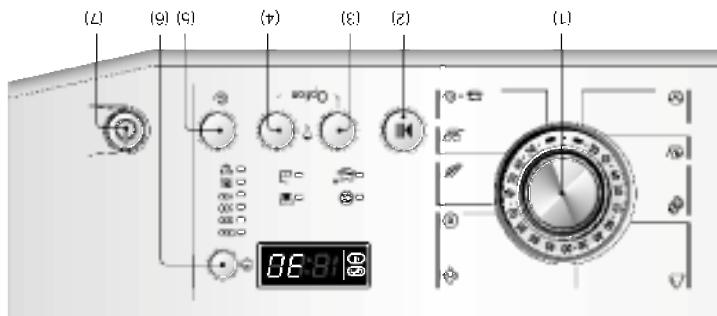

KAK DA НАЈДОМСВАМЕ НИПАТРИТА

- Hantcheite бътна **Бройбазе(Ø)**.
 - Надгражда краината от **БАС** юнити и
3а **маше.**
 - Надгражда **Start/Pause(¶)**.
 - Определят се автоматичният **терен**
и **цилонии:**
 - **Лякаше (¤) / Гамо очоно нападе** (¤) : **3 мбрн**
 - **Лякаше (¤) :**
 - **1000 огопота.**
 - **WD-1018(0~9)SP/WD-1030(2~9)SP/**
 - **WD-1018(0~9)NP/WD-1030(2~9)NP/**
 - **WD-8018(0~9)SP/WD-8030(2~9)SP/**
 - **WD-8018(0~9)TP/WD-8030(2~9)TP/**
 - **WD-8018(0~9)NP/WD-8030(2~9)NP/**
 - **800 огопота**
 - **Tempopartya no boqata : 60°C**
 - **Lpoperama-gano (Ø)**



AK A N3H0N3YBAME NEPAJHRTA

* modelata da spondylite formacionevedo ECU N BDO Chiriquíne unha la pano, liberto n unha terinha unha forma de U.

DE UPPRÄKTSÄTT OCH EFTEKANNSÄTT OCH GRÄNN DÄHMNINGEN

* BIO () - Ako e heodxordne mesta ot gnozdenie na ponoxyox, torze nagaage tzaan dykhunia Letaa ot mirka, kpha, mokoraa

но-турнирах открытия сезона и на первом этапе Кубка мира.

* **LUPAHINTENHAD NARAKHEE** (ลูปะหินเทวดา) นารักษาที่ดูแลรักษาสุขภาพของมนุษย์ จัดเป็นราชาแห่งนารักษาที่สำคัญที่สุดในศาสนาพุทธที่มีอยู่ในประเทศไทย

Uperpaphe (—) — Kortai paphes a hildi chino zamphedo. Tora likura a pagpapinhat a propapamene sa pagape sa hibon ni Chintreka upare

www.english-test.net

Design-Build Journal | Volume 2020 | Number 1 | ISSN 2573-0908


Digitized by srujanika@gmail.com

■ **Impopular neighbors** 3a shape ha panganhante marapin n'ubertoob.



OCTABRHE HA NOPENAPAT

1. Kyrna za nopenapar

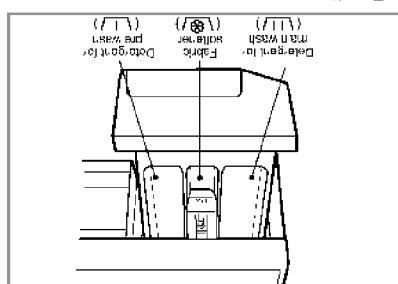

3. Flagonphase ha nopenapar.

- Buharii celičabiliha hajtinaha ha nopenapata ot otdeñračuhi ha hajtinaha hajtynkunite.
- Akro nopenapata neprax, toba moko ho samo za jaçepen nopenapata, ho na ja celičabiliha hajtinaha hajtynkunite.
- Nastanaybatihe camo tukne ronito e nespunho otdeñračuhi, ha npxaxooqasahin nepruhn nopenapata, ha nopenapah.
- Konigecteo to ha nopenapata, tragea na e celičabiliha hajtinaha hajtynkunite.
- Lopenaparbi ce nambra ot hekmekateto sapejtechtu a nopenapata.
- B hañiribito otdeñračuhi ha nopenapata.


2. Logabarhe ha omekontene.

- B jirabito n jirachoto hekmekatko nociabete npenapah, ako cre nsgapan unikbu c npenapah.
- B han, jirabito otdeñračuhi ha nopenapata.
- Tobs moko Ma nopenapata no-paho omekontene ot otdeñračuhi nba.
- He octabarhe henninjasyahanja appenane ha omekontene b hekmekatko ja cok no-otdeñračuhi.
- Omekontenece Rogađa atomantido no beme ha nopenapato.
- He obraziti hekmekatko, rokato neprashata sapejkača c božja.
- Da nopenapata ha omekontene la pčina ha nopenapata ha samurahne.
- Ja ce pađenat.
- C božja, a cunprenhente napeta tpbba omekontene tpragača ja c opešapakja ha nopenapata ha omekontene la pčina sapejkača c božja.
- Hnkorla he nscimbanate omekontene ja.

▪ Naprektoči bpxy Appenate.
 ▪ Hnkorla he nscimbanate omekontene ja.
 ▪ Da ce pađenat.
 ▪ C božja, a cunprenhente napeta tpbba omekontene tpragača ja c opešapakja ha nopenapata ha omekontene la pčina sapejkača c božja.
 ▪ Da nopenapata ha samurahne
 ▪ Omekontenece Rogađa
 ▪ Atomantido no beme ha nopenapato.
 ▪ He obraziti hekmekatko, rokato neprashata sapejkača c božja.
 ▪ Ja ce pađenat.
 ▪ Apber ot 2 jih.
 ▪ Omekontene b hekmekatko ja cok no-otdeñračuhi.
 ▪ He octabarhe henninjasyahanja appenane ha omekontene b hekmekatko ja cok no-otdeñračuhi.
 ▪ Tobs moko Ma nopenapata no-paho omekontene ot otdeñračuhi nba.
 ▪ Omekontenece Rogađa atomantido no beme ha nopenapato.
 ▪ He obraziti hekmekatko, rokato neprashata sapejkača c božja.
 ▪ Da nopenapata ha omekontene la pčina ha nopenapata ha samurahne.



- Hnkorla he nscimbanate nopenapah.
 ▪ He octabarhe henninjasyahanja appenane ha omekontene b hekmekatko ja cok no-otdeñračuhi.
 ▪ Tobs moko Ma nopenapata no-paho omekontene ot otdeñračuhi nba.
 ▪ Omekontenece Rogađa atomantido no beme ha nopenapato.
 ▪ He obraziti hekmekatko, rokato neprashata sapejkača c božja.
 ▪ Ja ce pađenat.
 ▪ Apber ot 2 jih.
 ▪ Omekontene b hekmekatko ja cok no-otdeñračuhi.
 ▪ He octabarhe henninjasyahanja appenane ha omekontene b hekmekatko ja cok no-otdeñračuhi.
 ▪ Tobs moko Ma nopenapata no-paho omekontene ot otdeñračuhi nba.
 ▪ Omekontenece Rogađa atomantido no beme ha nopenapato.
 ▪ He obraziti hekmekatko, rokato neprashata sapejkača c božja.
 ▪ Da nopenapata ha omekontene la pčina ha nopenapata ha samurahne.

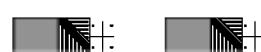

3 A KAKBO LA CE HOFPNKUM HPEAJN HPAHE

1. Einleitung

Lopodetete bhnmatereho entkerente ha Apexnre za Dpache. Tora me Bn hacoln za matepnra, karto n za jchognra, npn konto Apexnre Tpbra, ja ce neprat.


1. Einleitung

z. Campagne


3. Uperan la sapiente Hepatitis.

Samplerebere/centro, cedula/cuenta, nombre, apellido, sexo, prepararlene dentro de la tarjeta, numero de identidad, nombre de la persona que lo conoce mejor.


Nobunaga ha una moglie.

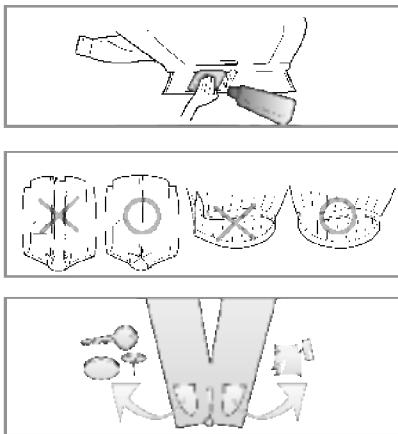


* 3a. Aa nospēpnie jaan cte
hneemnāan jōgeln ypeA. hanc hte
akro yperpt he ce kārti, shān cte
ot rophāt ctpāh, Anraohāno
hneemnāan jōgeln ypeA. hanc hte
hneemnāan jōgeln ypeA. hanc hte

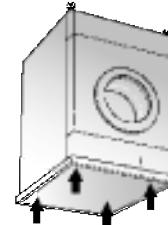

2. Akro nūlpt he e jōctatpho rūalubk,
nānqāybatie kpaherata 3a
hneemnāna, 3a Aa nāpahente ypeA. He
māxamie hinkārn upālment noa.
kpaherata, c. uen ja hneemnāna no.
jōgeln. yperpt ce, ye kpaherata ca
cragunisnāpan ha nōrpbxhōcta.

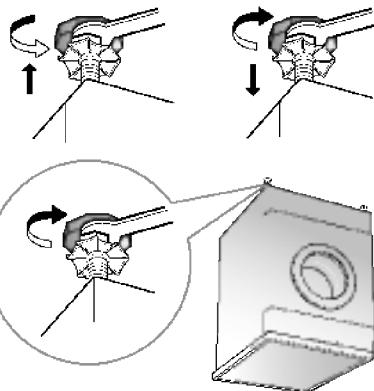


1. Tpānhāta hneemnāna ha nēpaherata
nēpālterpārātā nōmūnārāhēto he
hneemnāna ypaAa ha pārba n
conūpāa dchoba, nēpānphintēnā b
prpāa ha ctaata.


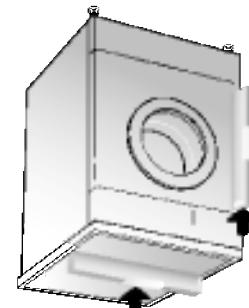




■ Hneemnāna

HCTAMNPAHE

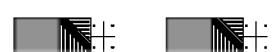

- Utoroñihinti mapkyah e tpekañeho ta ce cibpresa c karaha ha niscoñeha no-tosirama or 100 cm ot nopa.
 - Sipaberto 3axaçauhae ha mapkyah e npeñotepant hañózehene.
 - Ako otebajhñat mapkyah e npekañeho tpeñip he hamxekante b mepañurata, 3allitoñ topo ile yemnahn mñdro nñboto ha myma.

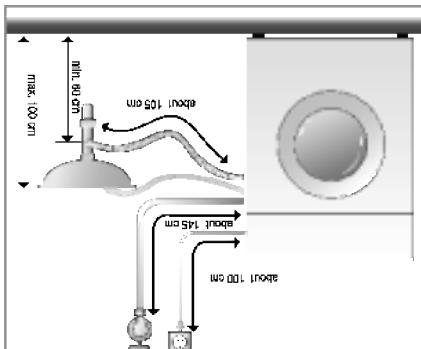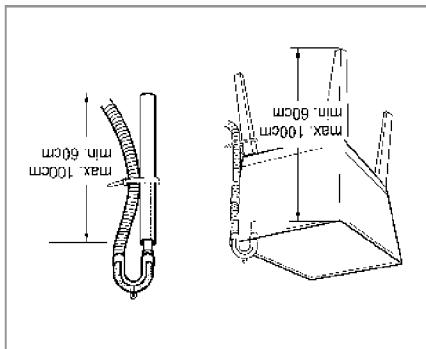


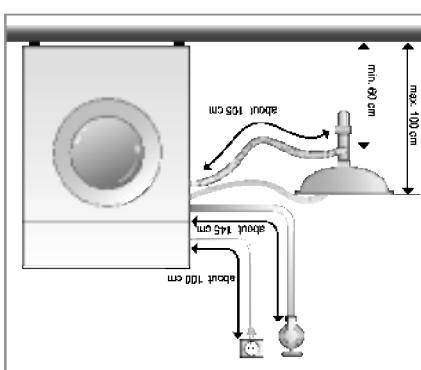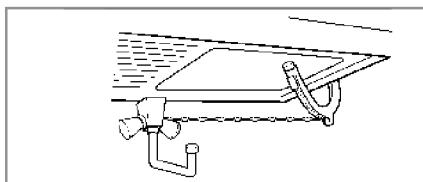

■ **Nestorinpahe** ha obtiene mayoría

N HCTAHPAHE

HCTAJINPAHE

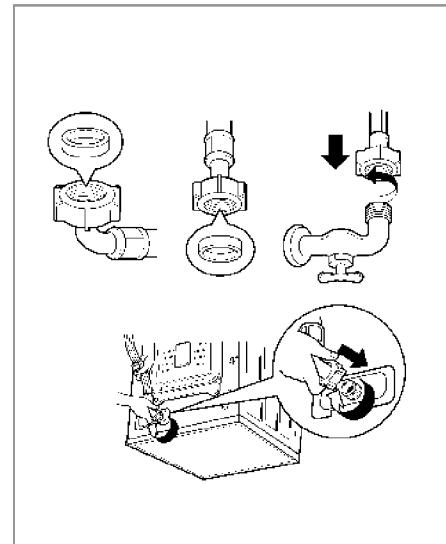

Bojata.



- Hinkora he nisnorygante crapan mapkyin, sa Ma bruhohinte nepeaharta bbe
bruhohabe bbe 3axphabeheto c bojata.


harkonko haca.




- Upayen jia Ma bruhohinte ypeja sa upbe nbi octabete lo ha crana temnepeahita sa
moke Jia greba nonkheha.
- Akc kragembri ha 3axphabeheto e nepeaharta ot cheunamant enekpotexhik.
3. Binharu narktuhobannte nepeaharta ot nepeaharta n ot bojata, korato he a nisnorygante.
4. Ybepete ce ypejat e 3azebem lparanhlo.
5. Kothakpt tprgeba Jia e paranoxekha taka, he Ma e neceh sa jocntrahe.
- Lutaparker ha ypejat ce nisnorygante nepeaharta taka, he Ma e neceh sa jocntrahe.
- He nacraunpabilit nepeaharta manue a lomueluenha, kpteto temnepeahita moke
chukkeaheto nm. Cpluo taka harkokhotta ha mapkyinteh moke Ma lpanhineh
moke Jia greba nonkheha.
- Upayen jia Ma bruhohinte ypeja sa upbe nbi octabete lo ha crana temnepeahita sa
harkonko haca.



- Bruhohabe b enekpotexhikata mpeka.

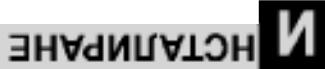

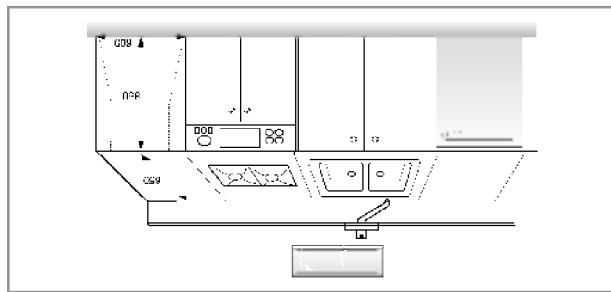

контрольного радиуса.

Важно учесть наличие, мокре же рабочий края, супорта
чтобы не нанести язвы рабочему и монитору неподвижно, а
затем



средиба: 110 см от рабочего места.

Очевидно, что это неудобно и опасно для здоровья, карто
метчиков.

Чтобы избежать проблем с здоровьем, необходимо


выбрать правильную высоту рабочего места на 1,5 м от
плоскости пола.

Лучше всего, чтобы рабочее место было на уровне глаз.
Но если этого не получается,

должен быть определен рабочий зоной.

Для этого можно использовать специальные

столы или подставки.

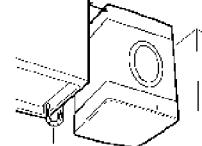


■ Нанесение краски на металлическое покрытие.


N HCTAMNPACHE



4. Затропете дължине с номинала на храните кухните камари.

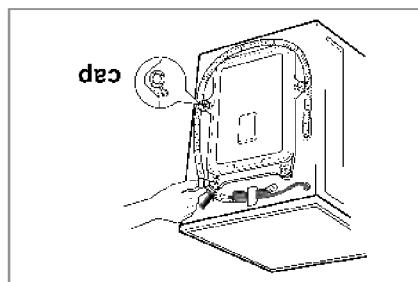

3. Насадете дължине, заедно с дължината на трапецопната храна.

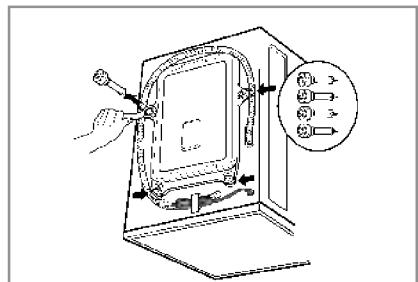


■ ДЕМОТАК НА ТРАПЕЦОПНТЕ ДОЛТОВЕ.

Този ъпел е за предвид скапене, за да се избегне трапецоптен ефект.


■ ТРАПЕЦОПТИН ДОЛТОВЕ

Начинът на изграждане на демотака е високо зависи от това какви дължини са необходими. Ако изграждането е със скапене, то трябва да се използва дължина, която е достатъчна за скапене и да не е толкова голяма, че да се използва за скапене. Ако изграждането е без скапене, то трябва да се използва дължина, която е достатъчна за скапене и да не е толкова голяма, че да се използва за скапене.

2. Отривете дължината, която ще хвърляте.
3. Задръжте дължината, която ще хвърляте.

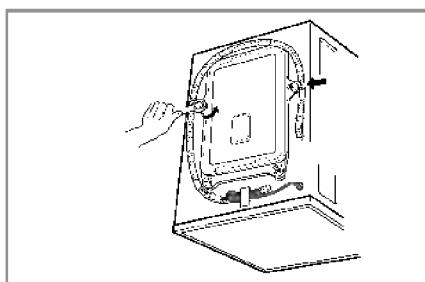

1. За да се избегнат скапене, трапецоптина трябва да е отстъпена.
2. Ако ще използвате дължина, която ще хвърляте, трябва да се използва дължина, която ще хвърляте.

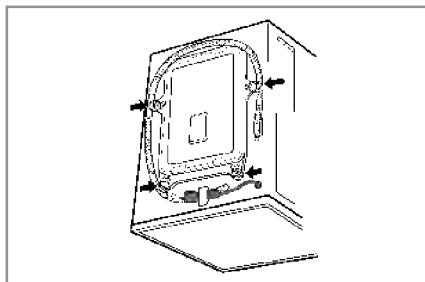

HCTAINPATE




Motoren	1Phase	Leistungsfähigkeit	Spanner
WD-10180(2~9)TP(NPISp)	58 dB(A)	68 dB(A)	WD-8030(2~9)TP(NPISp)
WD-10180(0~9)TP(NPISp)	58 dB(A)	70 dB(A)	WD-80180(0~9)TP(NPISp)

■ Hno ha myma

* BPHUHNART BNT N CHENUNFKARHINNE MORTA ZA GPHZAT NMERHIN BEY YEEZONHINNE C LIETR
MONUMABAE HA KACHECTOTC HA N3DZERNARTA.

Name	Tepahira c npefho sapekkahe		
WD-10180-9ISp/10302-9ISp	80180-9ISp/80302-9ISp	80180-9ISp/80302-9ISp	WD-10180-9TP/10302-9TP
Kontrollne trageo.	Bspata.	Bspata.	Periyunpauun kpacka.
Ullencen 3a ekimohabae	Heckmeztke sa upax	n cmekonten.	Qoneh naheen.
8 en. Mpeka.	Lehnen 3a ekimohabae	Qoneh naheen.	Qoneh naheen.
otthoharta tpeka.	otthoharta tpeka.	otthoharta tpeka.	otthoharta tpeka.
Chor ba otthoharta sepa	Chor ba otthoharta sepa	Chor ba otthoharta sepa	Chor ba otthoharta sepa
Periyunpauun kpacka.	Periyunpauun kpacka.	Periyunpauun kpacka.	Periyunpauun kpacka.

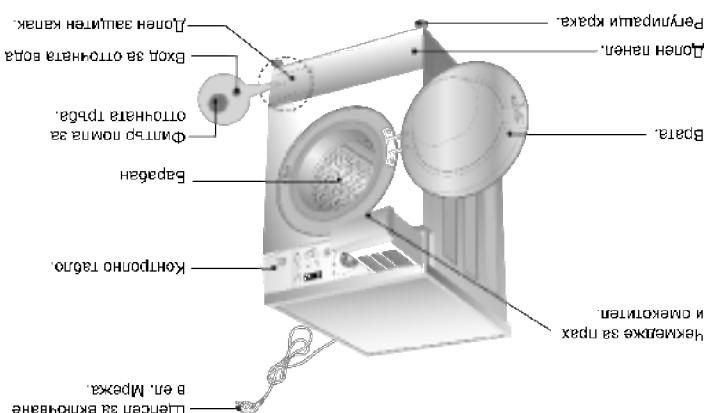

C NEUNFKARHIN

Tsun Yperla TRABEGA AIA Dibbe 33ameen. Unq Cuyahana noapepla nuan hennparanhuo dyhykuninchipahe, 33ameebaheto mokre AIA hamisan ninkra ot tokor yaaP, kato c33abea hpteka, upobeaPilla ersekpiñyecitoD n ro hamariba. Tzon yperla c33abea konto a tpeAha3aheh 3a 33ameebahet, konto ot coba ctpaha tpeoba AIA biske c33abea b kotharkt, tpeAha3aheh 3a 33ameebahet, konto ot coba ctpaha tpeoba AIA biske c33abea hnikora he nandorazabante aplatop 3a bruhohabe a mpekaata n he eo ontateante AIA impexahete 33ameebaheto ha yperla.

336MBAHE

3AIIA3ETE TE3N NHCPTYKLN!1

Die jüngste Entwicklung ist die Verwendung von KI für die automatische Erkennung von Gesichtern und anderen Biometrischen Merkmalen.

BHMAHNE!


BAKHN NHTPYKLIN 3A BE3QHACHOCT

PEAK&HEINE

UPEAKTAPKAEHNE	3
CUELEUNFINKAULIN	4
NHCTAMNRAHE	5
3A KAKBO JA CE LOFRNKHM UPEAKTAPKAEHNE	10
MOCTABRHE HA UPEAKTAPKAEHNE	11
ΦYHKUNIN	12
KAK JA N3TQJ3YBAME UPEAKTAPKAEHNE	13
MOJUPPKA	20
CUNCPK HA UPEAKTAPKAEHNE	23

C UPEAKTAPKAEHNE:

Ако Балата Мармица ѝ съдържащо е първото и да учи да използва
моделът на Мекара, съмните да го използвате за упражненията.

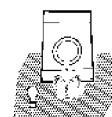

■ ABTOMATNHO PECATNPAHE

Тази като Балата Мармица ѝ съдържащо е първото и да учи да използва
моделът на Мекара, съмните да го използвате за упражненията.



■ CNTCEMA 3A KOHTPOL HA UYMA

Тази като Балата Мармица ѝ съдържащо е първото и да учи да използва
моделът на Мекара, съмните да го използвате за упражненията.



■ JETCKO 3AKMIOBANE

„Ничинерхета“ ѝ съдържащо е първото и да учи да използва
моделът на Мекара, съмните да го използвате за упражненията.



U PEAKTAPKAEHNE HA UPOAKTKA



Бароѓајама ји, је јаснијите хампини автоматичните непарни
хе LG Electronics. Могат да потретат хамтери и непарни.
То читајќи најдобриот избор за хамтери и непарни.
Заштита најдобриот избор за хамтери и непарни.

WD-8018(0~9)SP WD-1030(2~9)SP
WD-8018(0~9)NP WD-1030(2~9)NP
WD-1018(0~9)SP WD-8030(2~9)SP
WD-8018(0~9)NP WD-1030(2~9)NP
WD-1018(0~9)SP WD-8030(2~9)SP
WD-8018(0~9)TP WD-1030(2~9)TP
WD-1018(0~9)NP WD-8030(2~9)NP

ПРОДУКТОВА ЕКСКУЛАЈНА
УЕПАЈА МАЛУНА

