



User Guide



LG | EXTRAVERT™ 2

User Guide

MFL68240201 (1.1)

Guía del Usuario



This booklet is made from 98% post-consumer recycled paper. This booklet is printed with soy ink. Printed in Mexico.

*Copyright©2014 LG Electronics, Inc. All rights reserved.
LG and the LG logo are registered trademarks of LG Corp.
All other trademarks are the property of their respective
owners.*

*Copyright©2014 LG Electronics, Inc. Todos los derechos
reservados. LG y el logotipo de LG son marcas registradas de
LG Corp. Todas las demás marcas registradas son propiedad
de sus respectivos dueños.*

Table of Contents	1
-------------------	---

Phone Overview	5
----------------	---

Quick Glance of the Touch Screen and How to Use It	9
--	---

Getting Started with Your Phone	10
---------------------------------	----

Turning the Phone On and Off	10
------------------------------	----

Turning the Phone On	10
----------------------	----

Turning the Phone Off	10
-----------------------	----

The Battery	10
-------------	----

Installing the Battery	10
------------------------	----

Removing the Battery	10
----------------------	----

Charging the Battery	11
----------------------	----

Charging with USB	11
-------------------	----

How to Install a microSD™ Card	12
--------------------------------	----

How to Remove a microSD™ Card	12
-------------------------------	----

Battery Temperature Protection	13
--------------------------------	----

Battery Charge Level	13
----------------------	----

Signal Strength	13
-----------------	----

Screen Icons	13
--------------	----

Making Calls	13
--------------	----

Correcting Dialing Mistakes	14
-----------------------------	----

Redialing Calls	14
-----------------	----

Receiving Calls	14
-----------------	----

Shortcuts Menu	15
----------------	----

Entering and Editing Information	17
----------------------------------	----

Menu Overview	18
---------------	----

Menu Access	21
-------------	----

Shortcuts Menu on the Touch Screen	22
------------------------------------	----

Shortcuts Menu	22
----------------	----

Quick Access to Convenient Features	23
-------------------------------------	----

Restrictions	23
--------------	----

Quick Volume Adjustment	23
-------------------------	----

Vibrate Mode	23
--------------	----

Call Waiting	23
--------------	----

Voice Commands	24
----------------	----

Contacts in Your Phone's Memory	25
---------------------------------	----

Storing New Contacts	25
----------------------	----

Changing Contact Entries	25
--------------------------	----

Speed Dials	25
-------------	----

Storing a Number with Pauses	26
------------------------------	----

Deleting	26
----------	----

Contacts	27
----------	----

1. New Contacts	27
-----------------	----

2. Contacts List	27
------------------	----

3. Backup Assistant	28
---------------------	----

4. Groups	28
-----------	----

5. Speed Dials	28
----------------	----

Table of Contents

6. In Case of Emergency (ICE).....	29
Recent Calls.....	30
1. Missed.....	30
2. Received.....	30
3. Dialed.....	31
4. All.....	31
5. View Timers.....	32
My Verizon.....	32
Tools.....	33
1. Voice Commands.....	33
1.1 Call <Name or Number>.....	33
1.2 Send Msg to <Name or Number or Group>.....	33
1.3 Go to <Menu>.....	33
1.4 Check <Item>.....	33
1.5 Contacts <Name>.....	34
1.6 Redial.....	34
1.7 Play.....	34
1.8 My Verizon.....	34
1.9 Help.....	34
2. Notepad.....	34
Managing Notes.....	34
3. Calendar.....	35
4. Alarm Clock.....	35
5. Stopwatch.....	36
6. World Clock.....	36
7. Calculator.....	37
8. Ez Tip Calculator.....	37
9. Eco-Calculator.....	38
10. USB Mass Storage.....	38
Settings.....	40
1. Bluetooth Menu.....	40
Add New Device.....	41
My Phone Name.....	42
Discovery Mode.....	42
My Device Info.....	43
Supported Profiles.....	43
2. Sounds Settings.....	43
2.1 Master Volume.....	43
2.2 Ringtones.....	44
2.3 Caller ID Readout.....	44
2.4 Emergency Tone.....	44
2.5 Alert Vibrate.....	44
2.6 Alert Reminder.....	45
2.7 Button Sounds.....	45
2.8 Service Alerts.....	45
2.9 Menu Readout.....	46
2.10 Digit Dial Readout.....	46
2.11 Mono Sound.....	46
3. Display Settings.....	46
3.1 Wallpaper.....	46
3.2 Banner.....	47
3.2.1 Personal Banner.....	47
3.2.2 ERI Banner.....	47
3.3 Lockscreen Type.....	47
3.4 Main Menu Setting.....	47
3.4.1 Position Menu Items.....	48
3.4.2 Replace Menu Items.....	48
3.4.3 Reset Menu Settings.....	48
3.5 Brightness.....	48
3.6 Notification Light.....	49

3.7 Display Backlight	49
3.8 Keypad Backlight	49
3.9 Charging Screen	49
3.10 Display Themes	50
3.11 Fonts	50
3.12 Dial Fonts	50
3.13 Menu Font Size	50
3.14 Clock Format	51
3.15 Favorite Bin	51
3.16 Invert Color	51
4. Touch Settings	51
5. Phone Settings	52
5.1 Set Qwerty Shortcut	52
5.2 Voice Commands	52
5.3 Language	53
5.4 Location	53
5.5 Current Country	53
5.6 Security	54
5.6.1 Edit Codes	54
5.6.2 Security Unlock	54
5.6.3 Restrictions	54
5.6.4 Reset Default	55
5.6.5 Restore Phone	55
5.7 System Select	56
5.8 NAM Select	56
5.9 Data Roaming Access	56
6. Call Settings	56
6.1 Answer Options	57
6.2 End Call Options	57
6.3 Ignore With Message	57
6.4 Call Forwarding	57
6.5 Show Dialpad	58
6.6 Auto Retry	58

6.7 TTY Mode	58
Connecting TTY Equipment and a Telephone	59
6.8 One Touch Dial	59
6.9 Voice Privacy	60
6.10 DTMF Tones	60
6.11 Assisted Dialing	60
7. USB Mode	61
8. Memory	61
8.1 Save Options	61
8.2 Phone Memory	61
8.3 Card Memory	62
9. Phone Info	62
9.1 My Number	62
9.2 SW/HW Version	62
9.3 Icon Glossary	63
9.4 Software Update	63

Mobile Email 64

Messaging 65

1. New Message	65
2. Messages	65
3. Drafts	67
4. Voicemail	68
5. Mobile Email	68
6. Social Networks	69
7. Erase Options	69
8. Quick Text Options	69
9. Settings	70

Table of Contents

Internet 72

Media Center 73

1. Music & Tones 73

1.1 Shop Ringtones 73

1.2 Shop Ringback Tones 73

1.3 My Ringtones 74

1.4 My Music 74

1.5 My Sounds 76

2. Picture & Video 76

2.1 Shop Pictures 77

2.2 My Pictures 77

2.3 My Videos 77

2.4 Take Picture 78

2.5 Record Video 79

3. Games 80

4. Internet 80

5. Browse & Download 80

6. My Place 81

7. Extras 81

Apps/ Calendar 82

My Music/ Alarm Clock 83

My Pictures 84

**Important
Safety Precautions** 85

Safety 88

**Consumer Information About Radio
Frequency Emissions** 90

Consumer Information on SAR 94

**FCC Hearing-Aid Compatibility
(HAC) Regulations for Wireless
Devices** 95

Caution:

Avoid potential hearing loss. 97

TIA Safety Information 98

Safety Information 101

FDA Consumer Update 106

Driving 114

10 Driver Safety Tips 114

**LIMITED WARRANTY
STATEMENT** 117

Technical Details 121

Glossary 122



Terminology 122

Acronyms and Abbreviations 122

Index 124



NOTE

The Send, Voice Commands/Back, Power/End Keys are not illuminated when the display is off. Press the Lock Key , or Power/End Key  to illuminate the display and keys. To unlock the screen, swipe your finger across the screen in any direction.

- 1. Earpiece** Lets you hear the caller.
- 2. Shortcuts Key** Allows quick access to a customizable Shortcuts Menu.
- 3. Quick Keys** The Quick Keys provide easy access to Messages, the Dialpad, the Main Menu, and the Contact List which easily activate with the touch of your fingertip.
- 4. Send Key** Use to answer incoming calls and to place calls from the Dialpad. From Standby mode, pressing this key will open the All calls list of your Recent Calls menu.
- 5. Back/Voice Commands Key** Backs out of menus, one level at a time. While in Standby mode, use for quick access to Voice Commands or press and hold to access Voice Recorder mode.
- 6. Headset Jack** Allows you to plug in an optional accessory.
- 7. Touch Screen** Displays incoming calls, messages and status icons as well as a wide variety of content you select to view.
- 8. Power/End Key** Use to turn the power on/off and to end a call. Also returns to Standby mode.

Phone Overview



- 9. Camera Lens** Used for taking pictures. Keep it clean for optimal photo quality.
- 10. Speaker** Sound comes from the rear speaker.
- 11. Volume Keys** Use to adjust the Master Volume in Standby mode* and the Earpiece Volume during a call.
- 12. microSD** Allows you to insert a microSD card.
- 13. Charging/USB Port** Connects the phone to the battery charger, or other compatible accessories.
- 14. Lock Key** Press to lock the touch screen and keys.

- 15. Camera/Video Key** Press for quick access to the Camera function. Press and hold for quick access to the Video function.






* Standby mode is when the phone is waiting for input from you. No menu is displayed and the phone isn't performing any action. It's the starting point for all of the instruction steps.

Using the QWERTY Keyboard





Your phone features a slide-out QWERTY keyboard, specifically designed for easy and comfortable text entry. The QWERTY keyboard uses the same layout as the keyboard on your computer, but has several added features and options to make text entry easier.



To enter text with the QWERTY keyboard

1. In a text entry screen, slide open the QWERTY keyboard.
(The display automatically adjusts to landscape mode.)
 2. Use your thumbs to enter text.
 - To change capitalization, press the **Shift/Messaging Key** .
 - To enter an alternate character on a key, press the **Function/Favorites Key** , then press the key with the alternate character. The next key press resumes normal character entry. To lock in alternate character entry, press the **Function/Favorites Key**  twice.
- NOTE**
To quickly enter ".com", press the **Function/Favorites Key** , then press .
- To access Favorites from standby mode, slide open the QWERTY keyboard and press the **Function/Favorites Key** .


Directional Key Shortcuts on the QWERTY keyboard

- **Up Key**  Opens the Browser.
- **Down Key**  Allows you quick access to your notifications and to change the ringer volume.
- **Right Key**  Allows you to access the Favorites Home screen pane where you can add up to 12 media files for quick access.
- **Left Key**  Allows you quick access to the Messaging Home screen pane.

Quick Glance of the Touch Screen and How to Use It

Quick Keys



- For optimal performance, make sure your hands are clean and dry. Remove moisture from the surface of your hands. Don't use the Quick Keys in a humid environment.
- The touch screen is sensitive to your light touch. You don't need to press it forcefully to use it. Protect your phone from severe impact to prevent the touch screen sensors from becoming damaged from harsh use.
- Use the tip of your finger to touch the center of a Quick Key. If you touch off-center, it may activate the nearby function instead.
- The touch feedback level can be adjusted to your preference. See page 51.
- When both the LCD screen and backlight are off, all keys are deactivated. Press the Lock Key () to turn on the screen and slide the screen up to unlock it.
- The Proximity Sensor protects against accidental key presses


during phone calls by locking the screen.

- Keep metal and other conductive materials away from the surface of the touch screen because contact may cause electronic interference.

How to Unlock the Screen



Press the Lock Key at the top of the phone to turn the screen on.

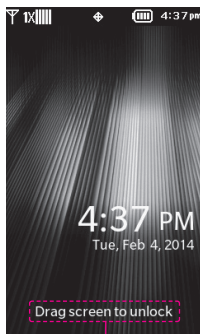


Swipe your finger across the screen in any direction to unlock.


Getting Started with Your Phone

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to an external power source if the battery level is low.
2. Press the **Power/End Key**  for a few seconds until the LCD screen turns on.

Turning the Phone Off

1. Swipe your finger across the screen in any direction to unlock.
2. Press and hold the **Power/End Key**  until the LCD screen turns off.

The Battery

NOTE It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. The battery charge level is shown at the top right corner of the LCD screen.

Installing the Battery

Use the fingertip cutout at the bottom of the phone to lift and remove the battery cover.



Align the battery contacts with the phone terminals at the top of the battery compartment. Gently push down on the battery until it clicks into place. Place the battery cover over the battery compartment and press it downward until it clicks into place.

Removing the Battery

Turn the phone off and use the fingertip cutout at the bottom of the phone to lift and remove the battery cover. Use the fingertip cutout near the bottom of the battery compartment to lift the battery out.



Charging the Battery

Your phone comes with a charger adapter and a USB cable which connect together to charge your phone. To charge your phone:

NOTICE

Please use only an approved charging accessory to charge your LG phone. Improper handling of the Charging/USB Port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

NOTE

Using the phone with only the adapter may cause abrupt resets. Use the phone with the battery installed.

1. Connect the USB cable into the charger adapter, as shown below.



Charger adapter

2. Plug the USB cable (as shown in the next image) into the Charging/USB Port and the charger adapter into an electrical outlet.



NOTICE

Please make sure that the 'B' side is facing up before inserting a charger or USB cable into the Charging/USB Port of your phone.

The charge time varies depending upon the battery level.

Charging with USB


You can use your computer to charge your phone. To be able to charge with the USB cable, you may need to have the necessary USB driver installed on your PC first. Connect one end of the USB cable to the Charging/USB Port on your phone and the other end to a bus-powered USB port on your PC.

NOTE Low-powered USB ports are not supported, such as the USB port on your keyboard or bus-powered USB hub.

Getting Started with Your Phone

NOTE If the phone is about to reset, a warning message will appear on the Home screen.

How to Install a microSD™ Card

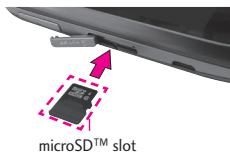

1. Use the fingertip cutout to uncover the microSD slot. It is located on the left side of the phone.




2. Insert the microSD™ card (purchased separately) with the label side facing up. Gently push it in until it clicks into place.

NOTE Please note that if you insert the card in the wrong direction, it may damage your phone or your card.

How to Remove a microSD™ Card

1. Remove the back cover and gently push the card inward, this will release the exposed edge of the microSD™ card to eject it.
2. Remove the microSD™ card from the slot and replace the cover.

NOTE

- Do not attempt to remove the microSD™ card while reading or writing to the card.
- Users wishing to transfer or download music onto a microSD™ card inserted into this phone (through MTP Sync) should format the microSD™ card on this phone before using it (with the phone unlocked, touch the **Menu Key**  > **Settings** > **Memory** > **Card Memory** > **Format**). Warning: Formatting the microSD™ card will erase all contents on the card. In the event the microSD™ card is used on this phone without first formatting it, the phone will display "License acquisition failed" during MTP Sync. Song files downloaded or otherwise purchased from third party providers and stored on a microSD™ card inserted into this device may be protected or encrypted by such provider and may not be playable on this device.

Battery Temperature Protection

Though extremely rare, if the battery becomes overheated, the phone will automatically turn off. When you turn the phone back on, a message pops up alerting you that the phone was powered off for your safety.

Battery Charge Level



You can find the battery charge level at the top right corner of the LCD screen. When the charge level becomes low, the battery sensor sounds a warning tone, blinks the battery icon, and displays a warning message. As the charge level approaches empty, the phone automatically switches off without saving any current tasks.

Signal Strength


Call quality depends on the signal strength in your area. You can tell how much signal strength you have by the number of bars next to the signal strength icon: the more bars, the stronger the signal. If you're having problems with signal quality, move to an open area or, when inside a building, try moving near a window.



Screen Icons





When the phone is on, the LCD screen displays the phone's status icons. To view what they mean:

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Info**.
4. Touch **Icon Glossary**.
5. Touch a category of icons from the list to display its status icons.





Making Calls

1. Swipe your finger across the screen in any direction to unlock.
2. Touch the **Phone Key**  to display the dialpad. Enter the phone number you want to call.



NOTE You can search your Contact List  or Recent Calls  and select a number to call instead of manually dialing.


3. Press the **Send Key**  or touch the **Call Key**  to place the call.
4. Press the **Power/End Key**  or touch the **End Key**  to end the call.

Correcting Dialing Mistakes




If you make a mistake while dialing a number, touch the **Back/ Voice Commands Key**  once or touch  on the dialing keypad to erase the last digit entered. You can also hold the **Back/ Voice Commands Key**  down or touch and hold  on the dialing keypad to delete all digits.


Redialing Calls

With the touch screen unlocked, press the **Send Key**  once to view a list of all of your recent calls. The last 270 calls (90 Received, 90 Missed and 90 Dialed) are stored in the call history list. Touch the **Dial Key**  next to any of the entries to place a call to that number.





You can also press the **Send Key**  twice to redial the last number you dialed, received or missed in the call history.

Receiving Calls

1. Answer the touch screen by dragging  up, or press the **Send Key** .
2. Press the **Power/End Key**  to end the call.

NOTE To ignore the incoming call, press the **Power/End Key**  twice to immediately end the call. Or, you can touch **IGNORE**. You can also send text messages by touching **TEXT**.




There are several ways of answering a call, depending on your selected Answer Options:




- **Slide Out:** Sliding the QWERTY keyboard out answers the call and turns the speaker on.
- **Any Key:** Press the **Send Key**  or, with the phone unlocked, press any other key except the **Power/End Key** , **Volume Keys**  and the **Camera Key** .
- **Auto with Handsfree:** The call automatically connects when connected to a handsfree device.

Shortcuts Menu

The Shortcuts Menu allows instant access to menus and phone features with the quick touch of your fingertip. To use the Shortcuts Menu:

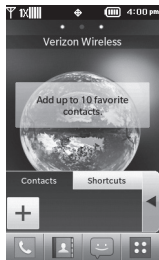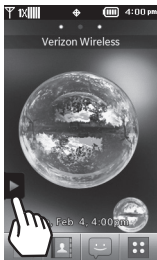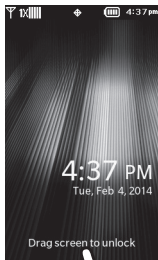1. Swipe your finger across the screen in any direction to unlock.



2. Touch the **Shortcuts Menu icon** on the Home screen or press the **Function Key** .
3. To close the Shortcuts Menu, press the **Power/End Key**  or the **Function/Favorites Key** .

Quick Keys

Contact list: Displays your Contact List.

Messaging: Displays the Main Menu.




Phone: Displays the dialpad so you can make a call. Dial manually using the numeric keys or easily from your Recent Calls, Contacts, or Voice Dial menus.

Menu: Displays the Main Menu.

Shortcuts Menu

When you touch the **Phone Key**  the following dialpad is displayed:

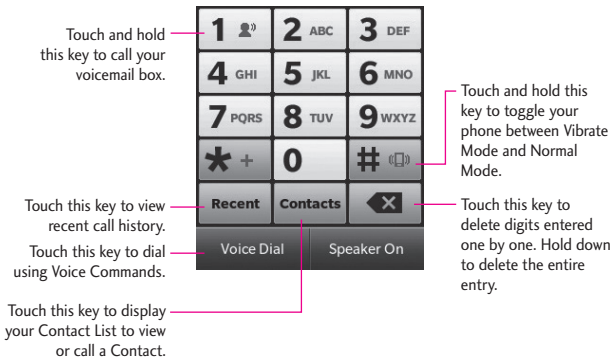

To view other Home screen panes



Slide your finger left or right across the Home screen. If you slide your finger left, you could access and edit Favorites. If you slide your finger right, you can access Messaging.



Text Input

You can enter information using the touch screen keypad. There are special key functions to help you with text entry.




Text Input While Composing a Text Message


1. Swipe your finger across the screen in any direction to unlock.
2. Touch the **Messaging Key** .
3. Touch .
4. Touch the **Text** field to begin entering text. A touch keypad will pop up.

5. Touch **More** to access the following options:

**Insert Quick Text/
Add Contact# / Email/
Copy Text / Language**

Entering text with the on-screen keyboard

To enter text using the on-screen keyboard, you must tap each key according to the position of the letter. For example, if you want to enter 'dog' you must tap  once,  three times, and  once.

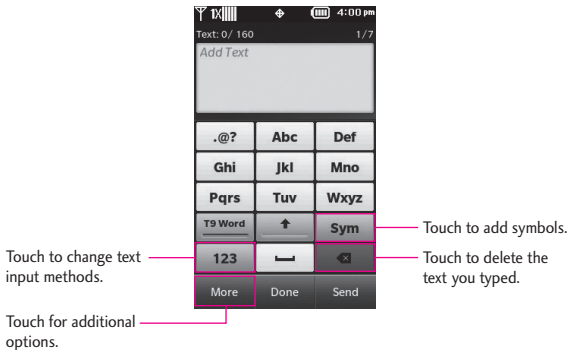

Menu Overview



My Verizon



Tools

1. Voice Commands
2. Notepad
3. Calendar
4. Alarm Clock
5. Stopwatch
6. World Clock
7. Calculator
8. Ez Tip Calculator
9. Eco-Calculator
10. USB Mass Storage



Settings

- Airplane Mode
- Bluetooth
- Music Only Mode

1. Bluetooth Menu

2. Sounds Settings

1. Master Volume
2. Ringtones
3. Caller ID Readout
4. Emergency Tone
5. Alert Vibrate
6. Alert Reminder
7. Button Sounds
8. Service Alerts
9. Menu Readout
10. Digit Dial Readout
11. Mono Sound

3. Display Settings

1. Wallpaper
2. Banner
3. Lockscreen Type
4. Main Menu Setting
5. Brightness
6. Display Backlight
7. Keypad Backlight
8. Charging Screen
9. Display Themes
10. Fonts
11. Dial Fonts
12. Menu Font Size
13. Clock Format
14. Favorite Bin
15. Invert Color

4. Touch Settings

1. Vibrate Type
2. Vibrate Level
3. Vibrate Feedback
4. Audio Feedback

5. Phone Settings

1. Set Qwerty Shortcut
2. Voice Commands
3. Language
4. Location
5. Current Country
6. Security
7. System Select
8. NAM Select
9. Data Roaming Access

6. Call Settings

1. Answer Options
2. End Call Options
3. Ignore With Message
4. Call Forwarding
5. Show Dialpad
6. Auto Retry
7. TTY Mode
8. One Touch Dial
9. Voice Privacy
10. DTMF Tones
11. Assisted Dialing

7. USB Mode

8. Memory

1. Save Options
2. Phone Memory
3. Card Memory

9. Phone Info

1. My Number
2. SW/HW Version
3. Icon Glossary
4. Software Update



Mobile Email



Messaging

1. New Message

2. Messages

3. Drafts

4. Voicemail

5. Mobile Email

6. Social Networks



Internet



Media Center

1. Music & Tones

- 1.1 Shop Ringtones
- 1.2 Shop Ringback Tones
- 1.3 My Ringtones
- 1.4 My Music
- 1.5 My Sounds

2. Picture & Video

- 2.1 Shop Pictures
- 2.2 My Pictures
- 2.3 My Videos

Menu Overview

- 2.4 Take Picture
- 2.5 Record Video

3. Games

4. Internet

5. Browse & Download

6. My Place

7. Extras



Apps



Calendar



My Music

1. All Songs
 2. Playlists
 3. Artists
 4. Genres
 5. Albums
 6. Manage My Music
 1. Erase
 2. Move to Card*
 3. Move to Phone*
- Airplane Mode
 - Music Only Mode





My Pictures




Alarm Clock

* Move to Card and Move to Phone is displayed only when the microSD card is inserted.

Menu Access

The **Menu Key**  provides access to the phone's main menu. To access the main menu, swipe your finger across the screen in any direction to unlock. Touch the **Menu Key**  at the bottom of the screen to open the main menu.


The main menu is displayed as shown below. Touch any of the menu icons with your fingertip to open that menu.

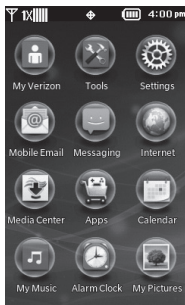

Shortcuts Menu on the Touch Screen

Shortcuts Menu

The Shortcuts Menu allows quick, direct access to several frequently used features from the touch screen. Up to 8 different shortcuts can be set. To access the Shortcuts Menu, unlock the touch screen, then touch the **Shortcuts Menu icon** along the left side of the screen. Then touch the **Shortcuts** tab. By default, the shortcuts below are provided, but you can customize them to your preferences.

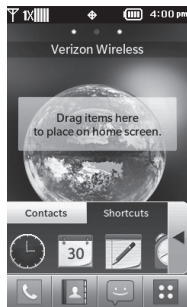

Clock Widget



Calendar Widget



Memo Widget



Alarm Widget



New Message



Memory Widget





My Pictures



Add/Remove

Restrictions

Sets your phone to require a 4 digit password in order to use the phone.

To set Lock Mode while on the standby screen, touch  **Menu** >  **Settings** > **Phone Settings** > **Security** > enter the **Phone Lock Code**. Touch **Security Unlock** to toggle the setting between **ON** and **OFF**. The next time you wake your phone's screen, you will need to enter the phone lock code.

NOTE The default phone lock code is the last 4-digits of your phone number.


Quick Volume Adjustment



Quickly adjust the Master Volume and Earpiece Volume by pressing the upper Volume Key to increase and lower Volume Key to decrease.


NOTE The Earpiece Volume can only be adjusted by the Volume Keys during a call.


NOTE To turn sounds off, unlock the phone, press the lower Volume Key to select All Sounds Off. Press and hold the upper Volume Key to return to Normal Mode.

Vibrate Mode

Sets the phone to vibrate instead of ring ( is displayed on the Notification bar).

To set Vibrate Mode, touch the **Phone Key**  to display the dialpad, then touch and hold the **Pound Key** .

To return to Normal Mode, touch and hold the **Pound Key**  again.

NOTE From the QWERTY keyboard, press and hold  to set Vibrate Mode. You can also press the lower Volume Key to set Vibrate Only.


Call Waiting

During a call, one beep indicates that you have another incoming call.

Ignoring Call Waiting


If you don't want to answer an incoming call, touch **IGNORE** on the touch screen. The Call Waiting beep stops and the call goes to your voicemail, if available.

Answering Call Waiting

1. While on a call, press the **Send Key**  to automatically put


Quick Access to Convenient Features

the first call on hold and answer the new call.


2. Press the **Send Key**  again, to put the second call on hold and return to the first caller.

Voice Commands

Voice Commands allow you to do things by verbal command (e.g., make calls, check Voicemail, etc.).


1. With the touch screen unlocked, press the **Back/ Voice Commands Key**  once (an extended press activates the Voice Recorder feature instead).


OR

From the Home screen, touch the **Menu Key**  > **Tools** > **Voice Commands**.

2. Follow the prompts to use your voice command(s).

CLR Key Activation



By default, the **Back/ Voice Commands Key**  on the external keypad activates the Voice Commands feature. To deactivate, change the CLR Key Activation setting to Off.

To change this setting, touch the **Menu Key**  > **Settings** > **Phone Settings** > **Voice Commands**. Then touch **CLR Key Activation** to switch it to **OFF**.


NOTE Voice Commands can also be started with the designated key on your Bluetooth® device. Please check the manual of the Bluetooth® device for further instructions.

Contacts in Your Phone's Memory

Storing New Contacts

1. Swipe your finger across the screen in any direction to unlock.
2. Touch the **Contacts Key** .
3. Touch **New Contact** .
4. Touch an information field and use the keypad to enter the necessary information. Then touch **Done**. Do this for each field you want to enter.
5. When all fields are complete, touch **Save**.

OR


1. Swipe your finger across the screen in any direction to unlock.
2. Touch the **Phone Key**  to display the dialpad.
3. Use the dialpad to enter the phone number and touch **Save**.
4. Touch **Add New Contact/ Update Existing**.

NOTE If you choose Update Existing, you will need to choose the contact whose information you want to change. Then touch **Mobile 1/ Home/ Business/ Mobile 2/ Fax**.

5. Touch **Mobile 1/ Home/ Business/ Mobile 2/ Fax**.


6. Enter information into the remaining fields, as necessary, and touch **Save** to save.

Changing Contact Entries

1. Swipe your finger across the screen in any direction to unlock.
2. Touch the **Contacts Key** .
3. Touch the contact you want to customize.
4. Touch **Edit**, touch and edit the fields you want to change then touch **Done**.
5. Touch **Save** when you finish editing the contact to save the entry.

Speed Dials

Allows you to set up your Speed Dials.

1. Swipe your finger across the screen in any direction to unlock.
2. Touch the **Contacts Key** , then touch the desired contact.
3. Touch **Edit**, then scroll down and touch **Speed Dials**.


NOTE If you have more than 1 number assigned to a contact, you must first select the desired number and then choose the speed dial entry.

Contacts in Your Phone's Memory

4. Touch an unassigned Speed Dial number.
5. Touch **Yes** to confirm.
6. Touch **Save** to save your updates to the contact entry.


Storing a Number with Pauses

Pauses allow you to enter additional series of numbers to access automated systems such as Voicemail or credit billing numbers. Pause types are:

- **Wait (W)** The phone stops dialing until you touch **Release** to advance to the next number.
 - **2-Sec Pause (P)** The phone waits two seconds before sending the next string of digits automatically.
1. Swipe your finger across the screen in any direction to unlock.
 2. Touch the **Phone Key** .
 3. Use the dialpad to enter the number, then touch **More**.
 4. Touch **2 sec pause** or **Wait** and enter the additional numbers.
 5. Touch **Save**, then complete the contact entry as necessary.

Deleting

Deleting a Contact Entry


1. Swipe your finger across the screen in any direction to unlock.
2. Touch the **Contacts Key** .
3. Touch the contact you want to delete.
4. Touch **Erase**.
5. Touch **Yes**.

Contacts


The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory.

1. New Contacts

Allows you to add a new contact.

1. Swipe your finger across the screen in any direction to unlock.
2. Touch the **Contacts Key** .
3. Touch **New Contact**.
4. Touch an information field and use the keypad to enter the necessary information. Then touch **Done**. Do this for each field you want to enter.
5. When all fields are complete, touch **Save**.

OR

1. Swipe your finger across the screen in any direction to unlock.
2. Touch the **Phone Key**  to display the dialpad.
3. Use the dialpad to enter the phone number and touch **Save**.


4. Touch Add New Contact/ Update Existing.

NOTE If you choose Update Existing, you will need to choose the contact whose information you want to change. Then touch **Mobile 1/ Home/ Business/ Mobile 2/ Fax**.

5. Touch **Mobile 1/ Home/ Business/ Mobile 2/ Fax**.
6. Enter information into the remaining fields, as necessary, and touch **Save** to save.

2. Contacts List

Allows you to view your Contacts List.

1. Swipe your finger across the screen in any direction to unlock and touch the **Contacts Key** .
2. Touch a contacts entry.
3. The following options are available.
 - Touch **Erase** to erase the contact.
 - Touch **Edit** to edit the contact.
 - Touch the phone number to dial the contact.


- Touch **Send Message** to send the contact a text or picture message.
- Touch **Send Name Card** to send the contact your name card.

NOTE If you have saved a speed dial to an entry, **Speed Dials** appears as the last option for the contact entry.

3. Backup Assistant

Backup Assistant safeguards your mobile phone's address book by automatically saving a copy of the names, phone numbers, and email addresses stored in your phone.


NOTE To use the Backup Assistant service, you are required to activate the service from your phone.

1. Swipe your finger across the screen in any direction to unlock and touch the **Contacts Key** .
2. Touch **More**.
3. Touch **Backup Assistant**.
4. Follow the instructions to download the application.

4. Groups


Allows you to view your grouped contacts, add a new group, change

the name of a group, delete a group, or send a message to everyone in the selected group.

1. Swipe your finger across the screen in any direction to unlock and touch the **Contacts Key** .
2. Touch **More**.
3. Touch **Groups**. Then select the desired group (**Business/ Colleagues/ Family/ Friends/ School**).
 - Touch **New Group** to add a new group to the list.
 - Touch **More** for the following options: **Remove Contacts/ Send Message/ Rename Group/ Erase Group**.

5. Speed Dials


Allows you to view and manage your list of Speed Dials for numbers entered in your Contacts.

1. Swipe your finger across the screen in any direction to unlock and touch the **Contacts Key** .
2. Touch **More** and then **Speed Dials**.
3. Touch an unassigned Speed Dial position.


4. Touch the contact you wish to assign a Speed Dial to.
5. Touch the contact number you want to assign (if applicable), then touch Yes.
5. Enter the information that would be helpful in an emergency (e.g., your medical record number), then touch **SAVE**.

6. In Case of Emergency (ICE)

This menu allows you to store names, phone numbers and other information, which could be helpful in case of an emergency.

1. Swipe your finger across the screen in any direction to unlock and touch the **Contacts Key** .
2. Touch **In Case of Emergency** at the top of the screen.
3. Touch **Add Contact**.
4. Select the Contact you desire.

Entering Your ICE Personal Info



1. Swipe your finger across the screen in any direction to unlock and touch the **Contacts Key** .
2. Touch **In Case of Emergency**.
3. Touch **Personal Info**.
4. Touch **New Note**.

Recent Calls

The Recent Calls Menu is a list of the last phone numbers or contact entries for calls you missed, received, or dialed. It's continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

1. Missed

Allows you to view the list of missed calls; up to 90 entries.



1. Swipe your finger across the screen in any direction to unlock and press the **Send Key** .
2. Touch .
3. Touch a missed call entry to view information about the call. The following options are available:
 - Touch **Call** to place a call to the number.
 - Touch **Send Message** to send a message.
 - Touch **Save to Contacts** to save the number into your Contact List.

- Touch **More** for the following options:

Save to Contacts (Contact info) / Erase/ Lock(Unlock)/ View Timers

2. Received



Allows you to view the list of received calls; up to 90 entries.

1. Swipe your finger across the screen in any direction to unlock and press the **Send Key** .
2. Touch .
3. Touch a received call entry to view the information about the call. The following options are available:
 - Touch **Call** to place a call to the number.
 - Touch **Message** to send a message.
 - Touch **Save to Contacts** to save the number into your Contact List.
 - Touch **More** for the following options:

Save to Contacts (Contact info) / Erase/ Lock(Unlock)/ View Timers

3. Dialed


Allows you to view the list of dialed calls; up to 90 entries.

1. Swipe your finger across the screen in any direction to unlock and press the **Send Key** .
2. Touch .
3. Touch a dialed call entry to view information about the call. The following options are available:
 - Touch **Call** to place a call to the number.
 - Touch **Send Message** to send a message.
 - Touch **Save to Contacts** to save the number into your Contact List.
 - Touch **More** for the following options:

Save to Contacts (Contact info) / Erase/ Lock(Unlock)/ View Timers

4. All


Allows you to view the list of all calls; up to 270 entries.

1. Swipe your finger across the screen in any direction to unlock and press the **Send Key** .
2. Touch a call entry to view information about the call. The following options are available:
 - Touch **Call** to place a call to the number.
 - Touch **Send Message** to send a message.
 - Touch **Save to Contacts** to save the number into your Contact List.
 - Touch **More** for the following options:

Save to Contacts (Contact info) / Erase/ Lock(Unlock)/ View Timers

5. View Timers

Allows you to view the duration of the different call types. Also allows you to view data counters.

1. Swipe your finger across the screen in any direction to unlock and press the **Send Key** .
2. Touch **More** and then **View Timers**.
3. Touch **Reset** next to an option to reset it. The timers and counters available are:



Last Call/ All Calls/ Received Calls/ Dialed Calls/ Roaming Calls/ Transmit Data/ Received Data/ Total Data/ Last Reset/ Lifetime Calls/ Lifetime Data Counter

4. To reset all of the recorded timers at once, touch **Reset All**.

NOTE Not all Timers can be reset.



My Verizon

Check your subscription information ranging from your payment plan to your software upgrade or other available service.


1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **My Verizon** .

Tools

1. Voice Commands

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Tools** .
3. Touch **Voice Commands**.

OR

From the Home screen, press the **Voice Commands/Back Key** .

4. Touch **Settings** to set **Confirm Choices/ Sensitivity/ Adapt Voice/ Prompts/ CLR Key Activation/ Info**.
5. Touch **Info** and select an option to learn more about it.

1.1 Call <Name or Number>

Say "Call" and then call someone simply by saying the phone number or name. Please speak clearly and exactly as in your Contact list. When you have more than one contact number, you can state the name and number type of the contact (for example, 'Call John Work').

1.2 Send Msg to <Name or Number or Group>

Say "Send Message" and the voice command will prompt you for the contact name, number or group. It will automatically start a message. If you say a full sentence command, such as "Send Message to Bob", it will automatically start a text message without asking for the message type. When using the "Send Message" command, speak clearly and say the number, group name, or name exactly as it is entered in your Contact List.

1.3 Go to <Menu>

The "Go to" command allows you to access a menu within the phone (for example, "Go to Calendar"). If no menu option is stated, a list of options will be provided.

1.4 Check <Item>

The "Check" command allows you to check out a wide range of items, such as: Phone Status, Voicemail, Messages, Missed Calls, Time, Signal strength, Battery Level, Volume, Balance, Minutes, Payment, and My Number.

1.5 Contacts <Name>

You can look up names in your Contacts (for example, say "Contacts John"). Once a contact's info is read out, you will be prompted for the following options:

Call/ Read out/ Create New/ Modify/ Erase

1.6 Redial

Allows you to automatically redial the last number called.

1.7 Play

Allows you to play songs saved in the phone.

1.8 My Verizon



The "My Verizon" command provides you with direct access to your Verizon Wireless account information.

1.9 Help

Provides a general guideline to using Voice Commands.

2. Notepad

Allows you to add, read, edit, and erase notes to yourself.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Tools** .
3. Touch **Notepad**.
4. Touch **New** to write a new note.

NOTE If no notes have been created, you will be notified with a pop-up and prompted to create a new one. Touch **Yes** to write a new note.


5. Type the note, then touch **Done**.

A confirmation message displays briefly, then displays your list of notes.

Managing Notes

1. Access Notepad.
2. To erase a note, touch it to open it. Then touch **More** > Erase.

OR

You can simply touch  to delete the note and then touch **Yes** to confirm.



OR

To add a note touch **NEW**.

To delete all notes, touch **More** and then **Erase All**.

3. Calendar

Allows you to store and access your agenda(s). Simply store your appointments in your Calendar and your phone will alert you with a reminder.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Tools** .
3. Touch **Calendar**.


Shortcut

Touch the **Menu Key**  > **Calendar** .

4. Touch the day you wish to edit.
5. Touch **Add New Event**.
6. Enter your schedule information including:


- Subject
- Start Date
- Start Time
- End Date
- End Time
- Recurrence
- Alert Tone
- Vibrate
- Alert Time
- Reminder

7. Touch **Save** to save the event.
8. Touch **More** for following options:
 - Monthly View
 - Weekly View
 - Go to Date
 - Search
 - Send to Bluetooth
 - Send to Message
 - Copy Event
 - Erase All Old
 - Erase All

9. To delete the event, touch  and then touch **Yes** to confirm.
10. To view a calendar event, touch the date of the event, then touch the event.
11. To edit an event, touch the event, then touch **Edit** and make your changes. Touch **Save** when finished.

4. Alarm Clock

Allows you to set up to ten alarms. At the alarm time, any set alarm will sound and/or vibrate the tone of your choice (depending on your sound settings), and a notification message will be displayed on your screen.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

2. Touch **Tools** .

3. Touch **Alarm Clock**.


4. Touch **Add**.

NOTE If no alarms have been created, you will be notified with a pop-up and prompted to create a new one. Touch Yes to set an alarm.

5. Touch the **Set Time** field to set the alarm time.

6. Touch the **Repeat** field to set the recurrence for the alarm. Available options are:

**Once/ Daily/ Mon-Fri/
Weekends/ Select Days**

7. Touch the **Ringtone** field to set the sound that plays when the alarm notification sounds. Touch **Play**  to listen to the tone. Touch the sound to select.


8. Touch **Save** to save the alarm.

9. To edit an alarm, touch the alarm and make your changes. Then touch **Save**.

10. To delete an alarm, touch the alarm and touch **Erase**.

5. Stopwatch

Allows you to use the Stopwatch function of the phone.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

2. Touch **Tools** .

3. Touch **Stopwatch**.


4. Touch **Start** to start and touch **Stop** to stop.

- You can use the Lap function by touching **Lap** to record up to 99 laps and lap times.

5. Touch **Reset** to reset the Stopwatch.



6. World Clock

Allows you to determine the current time in another time zone or country.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

2. Touch **Tools** .



3. Touch **World Clock**.


4. Press  and  on the touch screen or QWERTY keyboard to select other continents.

5. Touch **Select** and choose a city.
6. Touch **More** for the following options:
 - **Set DST** Allows you to set Daylight Savings Time.
 - **Cities** Allows you to choose a city from the list.
7. Touch **Save** to save the city.

7. Calculator



Allows you to perform mathematical calculations.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Tools** .
3. Touch **Calculator**.
4. Enter the desired data.
 - Touch the keypad to enter numbers.
 - Touch **.** to enter decimals.
 - Touch the corresponding touch keys to enter functions (+, -, x, ÷).
 - Touch **AC** to clear the entry.

- Touch **C** to delete the last character entered.
- Touch  to select from more advanced functions.
- Touch **=** to complete an equation.



8. Ez Tip Calculator

Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number of people paying.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Tools** .
3. Touch **Ez Tip Calculator**.
4. Enter the variable fields (**Total Bill**, **Tip(%)**, **Split**).
5. The **Tip(\$)** and **Each** fields will be automatically calculated.
6. Touch **Reset** for another calculation.

9. Eco-Calculator

Allows you to keep track of your walking and cycling distances. The amount of CO₂ that is decreased by walking and cycling is displayed for you to see.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Tools** .
3. Touch **Eco-Calculator**.
4. Touch the **Walking** or **Cycling** fields to edit the hours and miles.



NOTE The decreasing CO₂ amount is automatically updated when you enter the hour or mile amounts.

5. Touch **Settings** to set the following settings.
 - **Mode** Allows you to switch the Eco-Calculator home screen animation to **Person** or **Tree**. Depending on what information you entered last (Walking or Cycling) an animation will appear. The number of trees in the animation is calculated depending on the amount of CO₂ decreased.

- **Character** Allows you to change the character to **Man**, **Woman**, or **Man & Woman**. This option is unavailable when **Tree** is set as the Mode.
- **Unit** Allows you to change the unit amount to **Hour** or **Mile**.
- **My Car** Allows you to select the type of fuel your car uses and the Fuel Efficiency (mpg) of your car to measure the amount of CO₂ discharged.

10. USB Mass Storage

Allows you to select the PC connection mode for your device.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Connect a USB cable to the **Charger/USB Port** on your device. Make sure you have a microSD card installed.
3. Touch **Tools** .
4. Touch **USB Mass Storage**.
5. Your device will connect to the PC and your PC will prompt you with a list of actions to execute.

6. Select **Open folder to view files** on your PC to view the files on your microSD card, copy to the PC, and vice versa.
7. To exit USB Mass Storage mode, touch **Exit** on the screen, then safely unplug the phone from the PC.

Settings



Airplane Mode

Turns off all wireless communications. This feature allows you to use the phone when radio transmission is restricted. When in Airplane Mode, services using the Location On functionality will not function completely.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch the **Airplane Mode** button to alternate between **ON** and **OFF**.



Bluetooth

This option allows you to turn the Bluetooth function on and off.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch the **Bluetooth** button to alternate between **ON** and **OFF**.

Music Only Mode

Music Only mode allows you to listen exclusively to your music (as you do with MP3 players). Set Music Only mode to On if you don't want your listening enjoyment to be interrupted by calls.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch the **Music Only Mode** button to alternate between **ON** and **OFF**.

1. Bluetooth Menu

Your phone is compatible with devices that support the Bluetooth Headset, Handsfree, Stereo, Phonebook Access, Object Push*, and File Transfer. You may create and store 20 pairings within the your phone and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).



NOTE Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

NOTE Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology. Your phone does not support all Bluetooth® OBEX Profiles. *Contact Name Cards, Calendar events and other non-protected data.

Add New Device









Pairing is the process that allows the phone to locate, establish, and register 1-to-1 connection with the target device.

For pairing with a new Bluetooth® device

1. Follow the Bluetooth® accessory instructions to set the device to pairing mode.
2. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
3. Touch **Settings** .
4. Touch **Bluetooth Menu**.
5. Touch **Add New Device**.
6. Touch **Yes** if prompted to turn on Bluetooth. When prompted to place the device you are connecting to in discoverable mode, touch **Next**.
7. The device will appear on the screen. Once it has been located, touch the device.
8. Touch **Pair Device**. The phone may ask you for the passcode. Consult the Bluetooth® accessory instructions for the appropriate passcode (typically "0000" - 4 zeroes). Enter the passcode or verify that the passcodes match.
9. Once pairing is successful, touch either **Always Ask** or **Always Connect** (except audio devices).
10. Once connected, you will see the device listed in the phone's Bluetooth Menu. If your search fails to find any pairing device, or you want to search again, touch **Search For Devices** to try again.



Icon Reference in Adding New Device

When the Bluetooth® wireless connection is created and paired devices are found, the following icons are displayed.

	When an audio device is found by your phone.
	When a PC is found by your phone.
	When a PDA is found by your phone.
	When another phone device is found by your phone.
	When a printer is found by your phone.
	When other undefined devices are found by your phone.
	When a keyboard is found by your phone.
	When a car is found by your phone.



My Phone Name

Allows you to view and edit your device name.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Bluetooth Menu**.
4. Touch **Settings**.
5. Touch **My Phone Name**.
6. Delete the existing name and enter your personalized name.
7. Touch **Done** to save the new name.



Discovery Mode

Allows you to set whether your device is able to be searched by other Bluetooth® devices in the area.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Bluetooth Menu**.
4. Touch **Settings**.
5. Touch **Discovery Mode** to alternate between **ON** and **OFF**.



My Device Info


Allows you to view your device's Bluetooth® information.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Bluetooth Menu**.
4. Touch **Settings**.
5. Touch **My Device Info**.

Supported Profiles

Allows you to see profiles that your phone can support.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Bluetooth Menu**.
4. Touch **Settings**.
5. Touch **Supported Profiles**.




NOTE If you want to view your options for a device already in your paired list, touch the name of the device in the list to connect. For a list of pairing options to choose from, touch the **Settings icon** .

2. Sounds Settings

Provides options to customize the phone's sounds.



2.1 Master Volume

Allows you to set Master Volume settings.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Master Volume**.
5. Press the Volume Keys or touch the volume bars to adjust the Master Volume.
6. Touch  to listen to the volume level.
7. Touch **Set** to save the setting.



2.2 Ringtones

Allows you to set ringtones for various features.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Ringtones**.
5. Select a ringtone for **Incoming Call, TXT Message, Media Message, Voicemail, and Missed Call**.

2.3 Caller ID Readout



Allows you to set if you want the device to read out Caller ID information.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Caller ID Readout**.
5. Touch a setting.

Ring Only/ Caller ID + Ring/
Name Repeat



2.4 Emergency Tone

Allows you to set Emergency tone settings.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Emergency Tone**.
5. Touch a setting.
Off/ Alert/ Vibrate



2.5 Alert Vibrate

Allows you to set the vibration settings for alerts.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Alert Vibrate**.
5. Touch **Incoming Call, TXT Message, Media Message, Voicemail, and Missed Call** to alternate between **ON** and **OFF**.




2.6 Alert Reminder

Allows you to set reminders for alerts from various features.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Alert Reminder**.
5. Select an option for **TXT Message, Media Message, Voicemail, and Missed Call**.



2.7 Button Sounds

Allows you to set the volume level for the touch keys (buttons).

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Button Sounds**.
5. Press the Volume Keys or touch the volume bars to adjust the settings, then touch **Set**  to save the setting.

2.8 Service Alerts

Allows you to set alerts for any of the service features available.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Service Alerts**.
5. Touch an alert option to toggle the setting **ON** and **OFF**.

ERI Alerts you to the network status of your current cellular service.

Minute Beep Alerts you 10 seconds before the end of every minute during a call.



Call Connect Alerts you when the call is connected.

Charge Complete Alerts you when the battery is completely charged.

Software Update Alerts you when there is an updated version of software available.



2.9 Menu Readout

Allows the phone to read menus out loud.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Menu Readout** to toggle the setting between **ON** and **OFF**.



2.10 Digit Dial Readout

Allows the phone to read the digits you dial out loud.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Digit Dial Readout** to toggle the setting between **ON** and **OFF**.

2.11 Mono Sound

Allows the phone to convert stereo sound to mono sound and send the sound output to both sides of earphones.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Sounds Settings**.
4. Touch **Mono Sound** to toggle the setting between **ON** and **OFF**.

3. Display Settings

Provides options to customize the phone's display screen.

3.1 Wallpaper

Allows you to choose the kind of background to be displayed on the phone. The possibilities are endless, but Fun Animations, in particular, provide you with animated screens for your background wallpaper.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Wallpaper**.

5. Touch **Lock Screen** or **Home Screen**. Then touch **My Pictures** or **Fun Animations**.
6. Touch your choice, then touch **Set**.

3.2 Banner



Allows you to enter text to display on the screen.

3.2.1 Personal Banner

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Banner**.
5. Touch **Personal Banner**.
6. Enter the banner text and touch **Save**. Up to 23 characters are allowed.

3.2.2 ERI Banner



If you use ERI Service, ERI Text is shown on the sub banner.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .

3. Touch **Display Settings**.
4. Touch **Banner**.
5. Touch **ERI Banner** to toggle the setting between **ON** and **OFF**.



3.3 Lockscreen Type

Allows you to select the type of lockscreen you want to use for your phone.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Lockscreen Type**.
5. Select **Drag screen to unlock**, **Slide up to unlock**, or **Swipe here to unlock**.

3.4 Main Menu Setting



Allows you to set, rearrange, or replace the main menus or reset the main menu settings.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.

4. Touch Main Menu Setting.



3.4.1 Position Menu Items

Allows you to position the menu items on the main menu.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Main Menu Setting**.
5. Touch **Position Menu Items**.
6. Drag the items to the new position. Touch **Save** when complete.

3.4.2 Replace Menu Items



You can move around and replace the position of items from the Menu screen.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Main Menu Setting**.
5. Touch **Replace Menu Items**.

6. Touch the item that you want to replace. Then select the item you want to replace it with and touch **Save**.



3.4.3 Reset Menu Settings

Allows you to reset the main menu.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Main Menu Setting**.
5. Touch **Reset Menu Settings**.
6. Touch **Yes** to reset the main menu items.

3.5 Brightness



Allows you to adjust the screen's brightness level.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Brightness**.
5. Press the Volume Keys or touch the volume bars to adjust the

settings, then touch **Set** to save the setting.



3.6 Notification Light

Allows you to choose which notifications display the notification light.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Notification Light**.
5. Touch the desired options to toggle the setting between **ON** and **OFF**.

3.7 Display Backlight



Allows you to set the duration for the backlight to stay on.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Display Backlight**.
5. Touch a setting.

30 Seconds/ 45 Seconds/
1 Minute/ 1 1/2 Minutes/
2 Minutes



3.8 Keypad Backlight

Allows you to set the duration for the backlight on the keypad to stay on.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Keypad Backlight**.
5. Touch a Backlight setting.
7 Seconds / 15 Seconds /
30 Seconds / Always Off

3.9 Charging Screen

Allows you to set a screensaver for the LCD to prevent others from seeing your personal phone information while it's charging.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.

4. Touch Charging Screen.

5. Touch a setting.

No Image/ Desk Clock/
Calendar

3.10 Display Themes

Allows you to choose between different themes for the phone's menus.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

2. Touch **Settings** .

3. Touch **Display Settings**.

4. Touch **Display Themes**.

5. Touch a setting.

Bubble / Modern / Spotlight

NOTE The default Display Theme is set as **Bubble**.

3.11 Fonts

Allows you to set menu fonts.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

2. Touch **Settings** .

3. Touch **Display Settings**.

4. Touch **Fonts**.

5. Touch a setting.

VZW Font/ LG Secret/ LG Joy

3.12 Dial Fonts

Allows you to set the dial font size. This setting is helpful for those who need the text to display a little bit larger.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

2. Touch **Settings** .

3. Touch **Display Settings**.

4. Touch **Dial Font**.

5. Touch a setting.

Normal/ Large

3.13 Menu Font Size

Allows you to set the menu font size.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

2. Touch **Settings** .

3. Touch **Display Settings**.



4. Touch **Menu Font Size**.

5. Touch a setting.

Normal/ Small/ Large

3.14 Clock Format


Allows you to set the type of clock to display on the LCD screen.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Clock Format**.
5. Touch a setting.

Normal/ Analog/ Digital 12/
Large Digital 12/ Digital 24/
Large Digital 24/ Dual/ Off

NOTE On the Home screen, you can touch and drag the clock to a different location on the touch screen.

3.15 Favorite Bin

Displays or hides the **Shortcuts Menu** icon () on the Home screen.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .



3. Touch **Display Settings**.

4. Touch **Favorite Bin** to toggle the setting between **ON** and **OFF**.

NOTE On the Home screen, you can change the vertical placement of the **Shortcut Bin Key** by touching and dragging it.



3.16 Invert Color

Allows you to invert the color theme.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Display Settings**.
4. Touch **Invert Color** to toggle the setting between **ON** and **OFF**.

4. Touch Settings

Allows you to customize the settings for your phone's touch screen.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Touch Settings**.

4. The following options are available to customize the Touch Settings:

Vibrate Type Short / Double / Long

Vibrate Level Low/Medium/High

Vibrate Feedback ON/ OFF



Audio Feedback Click / Woodblock / Beep / Off

5. Phone Settings

The Phone Settings Menu allows you to designate specific settings to customize how you use your phone.

5.1 Set Qwerty Shortcut



Allows you to set Qwerty shortcuts for the Home screen.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Set Qwerty Shortcut**.
5. Touch a setting.

Off/ Search Contact/ New Message/ New Note

5.2 Voice Commands

Allows you to set Voice Command settings.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Voice Commands** and use the following options to configure Voice Command:

Confirm Choices Automatic/ Always Confirm/ Never Confirm

Sensitivity More Sensitive/ Automatic/ Less Sensitive

Adapt Voice Train Digits/ Train Words

Prompts

Mode: (Prompts/Readout + Alerts/Readout/Tones Only)

Audio Playback:

(Speakerphone/ Earpiece)



Timeout: (5 seconds/
10 seconds)

CLR Key Activation ON/ OFF

Info Confirm Choices/
Sensitivity/ Adapt Voice/
Prompts/ CLR Key Activation

5.3 Language


Allows you to change the language feature according to your preference.


1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Language**.
5. Touch a setting.

English/ Español/ Simplified
Chinese/ Korean

5.4 Location

Allows you to turn the Location function on your phone on or off. If set to On, location-based services are able to access your GPS (Global Positioning System) satellite-assisted location information.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Location**.
5. Touch a setting.



Location On/ E911 Only

NOTES

- GPS satellite signals are not always received by the phone under bad atmospheric and environmental conditions, indoors, etc.
- When the Location Lock setting is activated in the Security Menu, the lock code is required to enter the Location menu. The lock code is the same 4 digits you use as your device lock code; by default it is the last 4 digits of your phone number.
- When in Airplane Mode, services supporting Location On functionality will not function completely.

5.5 Current Country



The Current Country menu allows you to change the **phone settings** to reflect the country where you are currently located.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Current Country**.

5. Touch a desired country.



5.6 Security

The Security menu allows you to secure the phone electronically.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Security**.
5. Enter the four-digit lock code. By default, the lock code is the last 4 digits of your mobile phone number if it is set. The lock code is the last 4 digits of your MEID if your mobile phone number is not set.

5.6.1 Edit Codes



Allows you to enter a new four-digit lock code.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Security**.

5. Enter the four-digit lock code.
6. Touch **Edit Codes**.
7. Touch **Phone Only** or **Calls & Services**, then enter your new lock code. Enter it again to confirm it.


5.6.2 Security Unlock


Allows you to require entering the four-digit lock code when unlocking the screen.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Security**.
5. Enter the four-digit lock code.
6. Touch **Security Unlock** to alternate the setting between **ON** and **OFF**.

5.6.3 Restrictions

Allows you to set separate restrictions for Location Setting, Calls, and Messages.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Security**.
5. Enter the four-digit lock code.
6. Touch **Restrictions**.
7. Enter the four-digit lock code.
8. Touch a Restrictions submenu, then the setting.

Location Setting Lock Setting/
Unlock Setting

Incoming Calls Allow All/
Contacts Only/ Block All



Outgoing Calls Allow All/
Contacts Only/ Block All

Incoming Messages Allow All/
Block All

Outgoing Messages Allow All/
Block All

5.6.4 Reset Default



Allows you to reset your phone to the factory default settings.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .

3. Touch **Phone Settings**.
4. Touch **Security**.
5. Enter the four-digit lock code.
6. Touch **Reset Default**.
7. After reading the warning message, touch **OK**.
8. Touch **Revert**.



5.6.5 Restore Phone

Allows you to erase all user data and contact information you've entered in the phone's memory so it's as if it just left the factory.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Security**.
5. Enter the four-digit lock code.
6. Touch **Restore Phone**.
7. After reading the warning message, touch **Yes**.
8. Read the programming information and touch **OK**. Then enter the four-digit lock code.

5.7 System Select

Allows you to set up the phone management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **System Select**.
5. Touch a setting.

Home Only: You can make/receive calls in your home network only.

Automatic (A/B): You can make/receive calls in either your home or roam network. Roaming rates may apply when not in the home service area.



5.8 NAM Select

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **NAM Select**.
5. Touch a setting.
NAM1/ NAM2

5.9 Data Roaming Access

Allows you to use data connections when you are roaming.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Settings**.
4. Touch **Data Roaming Access**.
5. Touch a setting.
**Deny data roaming access/
Allow access only for this trip /
Allow access for all trips**

6. Call Settings

The **Call Settings** Menu allows you to designate how the phone handles both incoming and outgoing calls.

6.1 Answer Options

Allows you to determine how the phone will answer an incoming call.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **Answer Options**.
5. Touch the setting(s) you want.

Slide Out/ Any Key/ Auto with Handsfree

6. Touch **Done**.

6.2 End Call Options



Allows you to determine how the phone will end a call.


1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **End Call Options**.
5. Touch a setting.

Close Slide/ End Key Only

6.3 Ignore With Message



You can ignore a phone call and send a text message by touching **TEXT**. This menu allows you to manage the available messages.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **Ignore With Message**.

- Touch  to delete a message.
- Touch **New** to add a new message.
- Touch an existing message to edit it.

6.4 Call Forwarding

Allows you to forward calls to another phone number.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **Call Forwarding**.



5. Touch a setting.

Forward Call/ Cancel Forwarding

6. If you choose Forward Call, you will have to enter the number you wish to forward your calls to. Then touch **Forward**. A call will be made to activate the function.

6.5 Show Dialpad

This options allows you to choose when a dialpad should be displayed when a call is placed.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **Show Dialpad**.
5. Touch the setting(s) you want.



**Voicemail/Toll-Free/ All Calls/
Customized Number**

6. Touch **Set**.

6.6 Auto Retry

Allows you to set the length of time the phone waits before



automatically redialing a number when the attempted call fails.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **Auto Retry**.
5. Touch a setting.

**Off/ 10 seconds/ 30 seconds/
60 seconds**

6.7 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **TTY Mode**, read the warning, then touch **OK**.

5. Touch a setting.

TTY Full:

- Users who cannot talk and hear can send and receive a text message through TTY equipment.

TTY + Talk:

- Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

TTY + Hear:

- Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

TTY Off:

- Users communicate without TTY equipment.

Connecting TTY Equipment and a Telephone



1. Connect the TTY terminal to the phone using a TTY cable. (Use the headset jack to connect to the phone.)

NOTE The first time you use TTY mode, a pop-up saying "Enabling TTY will disable headset audio." will be displayed on the screen. Touch **OK**.

2. Enter the phone's **Call Settings** menu and set the desired TTY mode.
3. After setting a TTY mode, check the phone's LCD screen for the TTY icon.
4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver end displays on the TTY equipment display.

6.8 One Touch Dial



Allows you to initiate a speed dial call by touching and holding the speed dial digit on the dialpad. If set to Off, designated Speed Dial numbers will not function.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.

4. Touch **One Touch Dial** to toggle the setting between **ON** and **OFF**.



6.9 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls. CDMA technology already offers inherent voice privacy. Check with your service provider for availability.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **Voice Privacy** to toggle the setting between **ON** and **OFF**.

6.10 DTMF Tones

Allows you to set the DTMF tone length.




1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **DTMF Tones**.

5. Touch a setting.

Normal/ Long

6.11 Assisted Dialing



Allows easy dialing of international calls while roaming in another country. If set to On, Assisted Dialing is displayed in calling screen.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Call Settings**.
4. Touch **Assisted Dialing**.
5. Touch **Assisted Dialing** to toggle the setting between **ON** and **OFF**.
6. Touch **Reference Country** and scroll through the list to find the country you want.
7. Touch  next to the selected country to edit and save the Country Code, IDD Prefix (International Direct Dial), NDD Prefix, Area/City Code and National Number Length (Length of Phone Number), then touch **Save** to set.

NOTE For example: A device in China is trying to reach a U.S. number, 201-555-5555 (Reference Country is U.S.A.) replace "+" code with IDD prefix for China. User Enters: +1-201-555-5555, Assisted Dialing: 00-1-201-555-5555

7. USB Mode

Allows you to set up how your phone behaves when a USB connection is made.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **USB Mode**.
4. Touch a setting.

Mass Storage/ Modem Mode/ Ask On Plug



NOTE If the option is set to Ask On Plug, you are asked to confirm whenever the connection is made.

8. Memory

Allows you to set the location where you want to save files. Also allows you to check your internal phone memory as well as the microSD™ external memory.


8.1 Save Options

Allows you to select which memory (phone or memory card) to use to save your files.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Memory**.
4. Touch **Save Options**.
5. Touch **Pictures/ Videos/ Sounds/ Ringtones**.
6. Touch **Phone Memory/ Card Memory**.

8.2 Phone Memory



Shows the memory usage information for the phone and lists the files, by type.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Memory**.
4. Touch **Phone Memory**.
5. Touch **Memory Usage/ My Pictures/ My Videos/**

My Ringtones/ My Music/
My Sounds/ My Contacts/
Move All To Card.



8.3 Card Memory

Shows the memory usage information for the memory card and lists the files, by type.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Memory**.
4. Touch **Card Memory**.
5. Touch **Memory Usage/ My Pictures/ My Videos/ My Ringtones/ My Music/ My Sounds/My Contacts/ Move All To Phone**.



9. Phone Info

Allows you to view the information specific to your phone and software.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Info**.



9.1 My Number

Allows you to view your phone number.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Info**.
4. Touch **My Number**.



9.2 SW/HW Version

Allows you to view the versions of various applications such as SW, PRL, ERI, Browser, Media Center, AVR, EMS, MMS, Bluetooth, MSUI, HW, MEID, OTADM, Operating System, and Warranty Date Code.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Info**.
4. Touch **SW/HW Version**.



9.3 Icon Glossary

Allows you to view all the icons and their meanings.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Info**.
4. Touch **Icon Glossary**.
5. Touch the subcategory to view the icons available.



9.4 Software Update

This feature gives your device the ability to upgrade to the latest software and keeps it operating with the latest features, all without having to visit a Verizon Wireless Communications Store for the upgrade.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Settings** .
3. Touch **Phone Info**.
4. Touch **Software Update**.

5. Touch **Status** to see the status of a download or update and see information on the last successful update. If updates have not yet been performed, status information will be unavailable. Touch **Check New** to check for new software.

Mobile Email

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Mobile Email** .
3. Follow the on-screen instructions to log into your account.

NOTE You may need to download and set up the Mobile Email program before using it for the first time.

Messaging



Depending on the content and size of your messages, the phone can store up to 500 messages (including a max. of 300 text messages, 100 emergency alerts and 100 multimedia messages in the Inbox). Content stored in the message may be limited by phone model and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

Shortcut

Simply touch the Messages Key  from the Home screen.

New Message Alert

Your phone will alert you when you have new messages in the following ways:

- The phone displays a message on the screen.
- The message icon  is displayed on the Notification bar. In the case of a high priority message,  is displayed.

1. New Message



Allows you to send messages (Text, Picture, Video, Voice, Notepad, Name Card and Location).

Each message can have multiple destination addresses and can contain various items of information. These are dependent upon the type of message you want to send.



2. Messages

When your phone receives a message, you are alerted by:

- A notification message on the screen.
- An alert tone and/or vibration, depending on your volume settings.

If you don't respond to the notification within a few minutes, the notification message disappears and the New Message icon  is displayed on the Notification bar instead ( indicates a high priority message). You can choose to view your messages by the time received (sorted into Inbox and Sent folders) or by Contact (all messages in one folder sorted by address).



To change the message settings:

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Messaging** .
3. Touch **More**.
4. Touch **Settings** to access following settings:

Message View/ Language/
Text Entry Settings/ Auto Save
Sent/ Auto Erase Inbox/ TXT
Auto View/ TXT Auto Scroll/
Media Message Auto Receive/
Voicemail #/ Callback #/
Signature/ Delivery Receipt/
Message Font Size/ Public
Alerts/ TXT-Media Msg
Notification/ Reply Option

NOTE Please note that menu instructions in this guide may vary if changing the Message View option.

Viewing Your Messages















1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Messaging** .
3. Touch **Messages** (or **Inbox**, depending on your Messages View configuration).
4. Touch a message conversation, then touch a message entry.
5. Options available for a received message:
 - **REPLY** to reply to the message.
 - **ERASE** to erase the message.
 - Touch **More** for the following options.










Text : Forward/ Reply With
Copy/ Save as Quick Text/
Lock (Unlock)/ Mark as
Unread/ Add To Contacts/
Extract Address/ Move to
Vault/ Message Info

Picture/ Video/ Voice :
Play Again (with sound/with
multiple slides)/
Reply with Copy/ Forward/
Save Picture (with Picture)/
Save Video (with Video)/
Save As Ringtone (with sound)/

Save Sound (with sound)/
Save as Quick Text/
Lock(Unlock)/ Add to
Contact/ Extract Address/
Move to Vault/ Message Info/
Mark as Unread



Message Icon Reference

-  New Text Message
-  Text Message Read
-  New Media Message
-  New Media Message Received
-  New Media Message Unread
-  Media Message Read
-  Message Delivered
-  Message Failed
-  Pending Message
-  Message Sent
-  New Webmail
-  Webmail Read
-  Multiple Messages Delivered
-  Multiple Messages Failed

-  Multiple Messages Delivery Incomplete
-  Multiple Pending Messages
-  Multiple Messages Sent
-  Text Message Draft
-  Media Message Draft
-  Namecard
-  High Priority
-  Lock
-  Unlock

3. Drafts

Your phone allows you to save Drafts of messages. When Drafts are saved, they are saved in the Drafts folder.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Messaging** .
3. Touch **Drafts**.
4. Touch a message entry.
5. The following options are available:

- Touch **Send** to send the message.
- Touch **More** for the following additional options

Text: Add Recipient/Save As Draft/Priority Level

Picture: Add Recipient/Preview/Save As Draft/Add Slide/Remove Picture/Remove Subject/Priority Level

Message Icon Reference



 Text Message Draft

 Media Message Draft


4. Voicemail

Allows you to view the number of new voice messages recorded in the Voicemail box. Once you exceed the storage limit, old messages may be overwritten. When you receive a new voice message, your phone will alert you.

Checking Your Voicemail Box



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Messaging** .
3. Touch **Voicemail**.

4. The following options are available:

- Touch **CLEAR** to clear the Voicemail counter.
- Press the **Send Key**  or touch **CALL** to listen to the message(s).

5. Mobile Email



Allows you to send and receive email easily from your phone. Don't miss an important email. Thanks to Mobile Email, you can get your emails on your phone, while you're on the go. Mobile Email works with many providers, including Yahoo!, AOL, Verizon.net and more.


1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Messaging** .
3. Touch **Mobile Email**.

Please note that you may need to download and set up the Mobile Email before using them for the first time.

6. Social Networks

Social Networks allows you to easily update your social networking accounts, providing access to Facebook, Twitter, and more*. Check with your service provider for details.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Messaging** .
3. Touch **Social Networks**.
4. Select the social network provider option to complete your update.

NOTE For more information, access 'Help' for each social networking option. (Messaging > Social Networks > .

*Social Networks Options

Facebook

Status Updates: Sends a text message to Facebook that updates your status, from your phone. Please note that you first need to visit <http://facebook.com>, and follow the instructions to register your phone.

Picture Upload: Uploads a picture to Facebook from your phone. You need to first activate at <http://facebook.com> and register your phone.



Twitter

To update Twitter from your phone, first activate your phone. Visit support. <http://twitter.com> for more information.

NOTE Normal messaging charges will apply.

7. Erase Options



Allows you to erase all messages at once.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Messaging** .
3. Touch **More**.
4. Select **Erase All Messages**.

NOTE Message View setting (Time or Contact), affects the Erase Message submenu names, but nonetheless they function the same.

8. Quick Text Options



Allows you to manage your Quick Text entries.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Messaging** .
3. Touch **More**.

4. Touch **Quick Text**.
5. Touch a message to view its content and edit it. Touch **Done** to save it.
6. Touch **New** to create a new Quick Text. Enter the desired text and touch **Done**.

9. Settings

Allows you to configure settings for your messages.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Messaging** .
3. Touch **More** and **Settings**.

Message Settings Sub-Menu Descriptions

1. Message View

Select **Time** to display messages chronologically in Inbox and Sent folders. Select **Contact** to sort all messages chronologically by contact in one message folder.

2. Language

Select English, Español, Simplified Chinese or Korean to be your default language.

3. Text Entry Settings

Allows you to activate/deactivate **Word Correction** and **Word Prediction**.

4. Auto Save Sent

Select **On** to automatically save your Sent messages.

Select **Off** if you don't want to save them.

Select **Prompt** to be asked whenever a new message is sent.

5. Auto Erase Inbox

Select **On** to automatically delete read messages when you exceed the storage limit.

6. TXT Auto View

Select **ON** to automatically display message content on the screen. Select **On + Readout** to automatically display content and read it aloud. Select **Off** for more security and privacy by requiring the message to be opened to view it.

7. TXT Auto Scroll

Select **ON** to automatically scroll text down while viewing messages.

8. Media Message Auto Receive

Select **ON** to automatically receive Media Messages as opposed to having to accept them.

9. Voicemail

Allows you to manually enter the access number for Voicemail Service. This number should be only used when a VMS (Voicemail Service) access number is not provided by the network.

10. Callback

Select **ON** to automatically send a designated callback number with your messages. You can also edit this number.

11. Signature

Allows you to create and edit your signature to send it out with all of your outgoing messages.

12. Delivery Receipt

When set to **ON**, the phone will indicate Sent messages as having been successfully delivered.

13. Message Font Size

Select to display the received messages in Small, Normal or Large font.

14. Public Alerts

Set your configuration for receiving public alerts.

The following settings are available:

Extreme Alert/ Severe Alert/
AMBER Alerts/ Alert Reminder/
Alert Vibrate.

15. TXT-Media Msg Notification

Set your configuration for the pop-up notifying you of switching the message type. Please list the TXT-Media Msg sub menu info.

The following settings are available:

TXT > Media Message/ Media >
TXT Message.



16. Reply Option

Select 'Group Conversation' to automatically send to the group on supported device. Select 'Individual Message' to automatically send to one person.

Internet

Allows you to access news, sports, weather, and email from your Verizon Wireless device.

Accessibility and selections within this feature are dependent upon your service provider. For specific information on Internet access through your phone, contact your service provider.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Internet** .

Media Center



Media Center gives you customizable service right on your wireless device that lets you get ringtones, play games, surf the web, get up-to-the-minute information and more. Visit verizonwireless.com/getitnow to view all of the applications available for your wireless device.

NOTE The touch screen automatically accommodates incoming calls while you are playing music, browsing the net. The touch screen unlocks for you to answer the call, and if you answer the call, it pauses the player/feature until you end the call.

1. Music & Tones



Listen to your music, and personalize your phone with ringtones. A wide variety of choices are available to you, such as current hits, pop, hip-hop, and more.

Access and Options

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .

3. Touch **Music & Tones**.

1.1 Shop Ringtones

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Music & Tones**.
4. Touch **Shop Ringtones**.



If there is no application downloaded, it will directly access a server to browse for an application.

OR

If there are applications downloaded, touch **Get New Applications** to browse for and download new applications.

1.2 Shop Ringback Tones




NOTE This option only appears when you have downloaded the V CAST Tones application.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Music & Tones**.

4. Touch **Shop Ringback Tones** to execute VCAST Tones application.

1.3 My Ringtones

Allows you to set a ringtone or download a new one.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Music & Tones**.
4. Touch **My Ringtones**. From the ringtone list, you are allowed to look at the **Current ringtone** and **Change to** list. **Current ringtone** will change if you select a ringtone from the **Change to** list.
5. Touch a ringtone to select it.
NOTE Touch  to play the ringtone.
6. In the **Set As** menu, choose from the following options:
 - **Ringtone**: Set as a Ringtone for incoming calls.
 - **Contact ID**: Allows you to set the ringtone to notify you when a specific contact is calling you.

- **Alert Sounds**: Allows you to set the ringtone to notify for All Messages, TXT Message, Media Message, or Voicemail.



1.4 My Music

The your phone allows you to store and to listen to music right from your phone.


NOTE Storage availability depends on the size of each file as well as memory allocation of other applications.

SHORTCUT

Touch the **Menu Key**  and then touch **My Music** .

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Music & Tones**.
4. Touch **My Music**.
5. Touch one of the following sub-menus:
 - All Songs/ Playlists/ Artists/ Genres/ Albums/ Manage My Music**
6. Touch the name of the song you want to hear to start the music player.

Music Player Controls

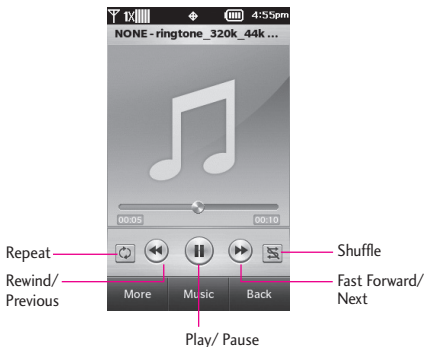

Playing Your Music

It's easy to find and play the music you've stored in your phone and memory card.

All Songs

Allows you to view all of your songs alphabetically. Touch a song to play it.

Playlists

Allows you to view and play your songs by playlist. It is also possible to create playlists on your phone and playlists can be managed (add and delete songs) from where they were created.

Creating a playlist

1. To create a playlist, touch **Create New**, enter a name for your playlist, then touch **Done**.
2. After entering the name, touch the playlist to open it.
3. Touch **More** and then **Add Songs**.
4. Touch the songs you want to add, or touch **Mark All**, then touch **Done**.

Artists

Allows you to view and play your songs grouped by artist.

Genres

Allows you to view and play songs grouped by genre.

Albums

Allows you to view and play songs grouped by album.

Manage My Music

Allows you to manage your music files. (Erase/ *Move to Card/ *Move to Phone)

* Move to Card and Move to Phone is displayed only when the microSD card is inserted.

Airplane Mode ON/OFF

Music Only Mode ON/OFF



Controlling the Music Player

While listening to your music, use the following to control the Music Player:

Volume Keys Allows you to control the volume.

1.5 My Sounds

Allows you to select saved sounds or to record a new sound.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Music & Tones**.

4. Touch **My Sounds**.

5. Touch **More** and then **Record New** or touch a sound file to listen to it.

The following options are available for pre-loaded sounds:



Set As/ Send/ Send via Email/ File Info/ Set As Favorite

The following options are available for user-recorded sounds:



Set As/ Send/ Send via Email/ Erase/ Rename/ Move/ Lock/ Erase All/ File Info/ Set As Favorite

2. Picture & Video

View, take, and share your digital pictures right from your phone.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Picture & Video**.
4. Touch a submenu.

2.1 Shop Pictures

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Picture & Video**.
4. Touch **Shop Pictures**.



If there is no application downloaded, it will directly access a server to browse for an application.



OR

If there are applications downloaded, touch **Get New Applications** to browse for and download new applications.

2.2 My Pictures

Allows you to view pictures stored in the phone.

Shortcut Swipe your finger across the screen in any direction to unlock and touch the **Menu Key**  then touch **My Pictures** .

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Picture & Video**.

4. Touch **My Pictures**.

5. Touch **More** for the options below:

Send/ Camera/ Shop Pictures/ (Move To Card/ Move To Phone)/ Add Slideshow/ Lock/ Erase/ Erase All

6. Touch your desired picture.

The following options are available when viewing a picture:



- Touch **Send** to send a picture by message, via Email, or Bluetooth, and social networks.
- Touch **Set As** to set as **Wallpaper** or **Picture ID**.
- Touch **More** for the options below:

(Move To Card/ Move To Phone)/ (Lock)/ Erase/ Camera/ Shop Pictures/ File Info/ Set As Favorite

NOTE Options in the bracket will only appear when the microSD card is inserted.

2.3 My Videos

Allows you to view your saved videos.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Picture & Video**.
4. Touch **My Videos**.
5. Touch **More** for the options below:

Send/ Camera/ (Move To Card / Move To Phone)/ (Lock)/ Erase/ Erase All

The following options are available when viewing a video:

- Touch **Send** to send the video as **Video Message**, **Send via Email**, or **Send via Bluetooth**.
- Touch **Erase** to erase the video file.
- Touch **More** for the options below:

(Move to Card/ Move To Phone)/ (Lock)/ Camera/ File Info/ Set As Favorite.

NOTE Options in the bracket will only appear when a microSD card is inserted.


2.4 Take Picture




Take pictures straight from your phone.

Tips

- To take a clear picture, set the proper brightness level and zoom before taking the picture. Zoom is not available at the highest picture resolution.
- Avoid jolting the camera.
- Wipe the camera lens with a soft cloth.

Shortcuts

Press the Camera Key () from the Home screen to open the Camera function.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
 2. Touch **Media Center** .
 3. Touch **Picture & Video**.
 4. Touch **Take Picture**.
 5. Touch the screen to set camera options.
- Select  to customize the following options.

White Balance Auto/ Sunny/ Cloudy/ Fluorescent/ Glow

Self Timer Off/ 3 Seconds/ 5 Seconds/ 10 Seconds

Night Mode ON/ OFF

Shutter Sound Shutter/ Silent/
Say Cheeze/ Ready!123





Resolution 1600X1200/
1280X960/ 640X480/
320X240

Color Effects Normal/
Negative/ Aqua/ Sepia/
Black&White


Save Option Internal/ External

Restore Factory Setting

Auto Save ON/ OFF



- Touch  to preview the pictures stored on your phone.
 - Touch  to switch to video mode.
 - Drag  up or down to control the brightness.
 - Touch  to take the picture.
6. Touch **Erase** to erase it or **Save** to save the picture to My Pictures. Touch **Send** to send a picture message. You can also touch **Set As** to choose between Wallpaper and Picture ID.

2.5 Record Video

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .

SHORTCUT

Press and hold the Camera Key  to access the camcorder function.

2. Touch **Media Center** .
3. Touch **Picture & Video**.
4. Touch **Record Video**.
5. Touch  for following Video camera options:

White Balance Auto/ Sunny/
Cloudy/ Fluorescent/ Glow

Video Quality High/ Medium/
Low

Recording Time For Send/
For Save

Color Effects Normal/
Negative/ Aqua/ Sepia/
Black&White






Save Option Internal/ External

Shutter Sound Shutter/ Silent

Restore Factory Setting



Resolution 176X144/ 320X240

Auto Save ON/ OFF



- Touch  to preview the videos stored on your phone.
 - Touch  to change to camera mode.
 - Drag  up or down to control the brightness.
6. Press  to begin recording.
 7. When you stop recording, you are allowed to **Erase, Save and Send** the recorded file.
 8. Touch  to preview the file.

3. Games


Allows you to access downloaded games and purchase your favorite games.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Games**.
4. Touch the game you want to play or touch **Get New Applications** to browse for and download new games.

4. Internet




1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Internet**.

SHORTCUT

To access a shortcut to the Internet, slide open the QWERTY keyboard and press the up Directional Key .



5. Browse & Download

Allows you to browse and access your applications, view information about them, and download new applications.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Browse & Download**.
4. Touch the application you want to run, touch  to view information about the application, or touch **Get New Applications** to browse for and download new applications.

6. My Place

Allows you to make a list of your favorite locations.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **My Place**.

7. Extras

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Media Center** .
3. Touch **Extras**.

Apps

Allows you to manage your downloaded and preloaded applications.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Apps** .
3. Select an application to access or touch **Get New Applications** to browse for and download new applications.

Backup Assistant

Backup Assistant safeguards your mobile phone's address book and automatically saves a copy of the names, phone numbers, and email addresses stored in your phone. See page 28 for additional details.

Mobile Email



Mobile Email is an application downloadable from the Apps menu. Don't miss an important email. Thanks to Mobile Email, you can get your emails on your phone while you're on the go.

Mobile Email works with many providers, including Yahoo!, AOL, Verizon.net and others.

Additional fees may apply.

Calendar

Allows you to manage your calendar events.



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Calendar** .

Please refer to the Calendar section on page 35 for further information.

My Music

Allows you to store and to listen to music right from your phone.

Access and Options



1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **My Music** .
3. Select the type of lists from **All Songs, Playlists, Artists, Genres** and **Albums**. Touch the music you want to listen.

The following options are also available.

- You can decide how to save the music by touching **Manage My Music**. Then select **Erase**, ***Move to Card** or ***Move to Phone**.
* Move to Card and Move to Phone is displayed only when the microSD card is inserted.
- Select **ON** or **OFF** for **Airplane Mode** or **Music Only Mode**.



About Music Only Mode

Music Only mode allows you to listen exclusively to your music (as you do with MP3 players). Set Music Only mode to On if you don't want your listening enjoyment to be interrupted by calls.

1. Touch the **Menu Key**  and then **My Music**.
2. Scroll down and touch  to activate Music Only Mode.



Alarm Clock

Allows you to manage your alarms.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **Alarm Clock** .
3. When the pop-up appears, touch **Yes**.
4. You can **Set Time**, set **Repeat** and select **Ringtone** by touching the respective icon.
5. Touch **Save**.

My Pictures

Allows you to view and manage your pictures.

1. Swipe your finger across the screen in any direction to unlock and touch the **Menu Key** .
2. Touch **My Pictures** .

NOTE You can go back to Camera mode or Add Slideshow by touching **More**.

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

Warning Violation of the instructions may cause serious injury or death.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Call (800) 243-0000 for more information.

Wash hands after handling.



- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



- Never place your phone in a microwave oven as it will cause the battery to explode.



- Do not dispose of your battery by fire or with hazardous or flammable materials.
- When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



- Do not use the phone in areas where its use is prohibited. (For example: aircraft)



- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



- Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



- Do not use your phone in high explosive areas as the phone may generate sparks.

Important Safety Precautions



- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause electric shock or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
- Store the battery out of reach of children.



- Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



- Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



- An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation
- Use and store your phone in temperatures between 0°C/32°F and 45°C/113°F, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

HAC

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.59 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components may not be used. Avoid the use of accessories that cannot maintain 0.59 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Caution

Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.19 statement

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Part 15.21 statement

Changes or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Consumer Information About Radio Frequency Emissions

Your wireless phone, which contains a radio transmitter and receiver, emits radio frequency energy during use. The following consumer information addresses commonly asked questions about the health effects of wireless phones.

Are wireless phones safe?

Scientific research on the subject of wireless phones and radio frequency (“RF”) energy has been conducted worldwide for many years, and continues. In the United States, the Food and Drug Administration (“FDA”) and the Federal Communications Commission (“FCC”) set policies and procedures for wireless phones. The FDA issued a website publication on health issues related to cell phone usage where it states, “The scientific community at large ... believes that the weight of scientific evidence does not

show an association between exposure to radiofrequency (RF) from cell phones and adverse health outcomes. Still the scientific community does recommend conducting additional research to address gaps in knowledge. That research is being conducted around the world and FDA continues to monitor developments in this field. You can access the joint FDA/FCC website at <http://www.fda.gov> (under “c” in the subject index, select Cell Phones > Research). You can also contact the FDA toll-free at (888) 463-6332 or (888) INFO-FDA. In June 2000, the FDA entered into a cooperative research and development agreement through which additional scientific research is being conducted. The FCC issued its own website publication stating that “there is no scientific evidence that proves that wireless phone usage can lead to cancer or a variety of other problems, including headaches, dizziness or memory loss.” This publication is available at <http://www.fcc.gov/cgb/cellular.html> or through the FCC at (888) 225-5322 or (888) CALL-FCC.

What does “SAR” mean?

In 1996, the FCC, working with the FDA, the U.S. Environmental Protection Agency, and other agencies, established RF exposure safety guidelines for wireless phones in the United States. Before a wireless phone model is available for sale to the public, it must be tested by the manufacturer and certified to the FCC that it does not exceed limits established by the FCC.

One of these limits is expressed as a Specific Absorption Rate, or “SAR.” SAR is a measure of the rate of absorption of RF energy in the body. Tests for SAR are conducted with the phone transmitting at its highest power level in all tested frequency bands. Since 1996, the FCC has required that the SAR of handheld wireless phones not exceed 1.6 watts per kilogram, averaged over one gram of tissue.

Although the SAR is determined at the highest power level, the actual SAR value of a wireless phone while operating can be less than the reported SAR value. This is because the SAR value may vary from call to call, depending on factors such as proximity to a cell site, the proximity of the phone

to the body while in use, and the use of hands-free devices. For more information about SARs, see the FCC’s OET Bulletins 56 and 65 at http://www.fcc.gov/Bureaus/Engineering_Technology/Documents/bulletins or visit the Cellular Telecommunications Industry Association website at http://www.ctia.org/consumer_info/index.cfm/AID/10371. You may also wish to contact the manufacturer of your phone.

Can I minimize my RF exposure?

If you are concerned about RF, there are several simple steps you can take to minimize your RF exposure. You can, of course, reduce your talk time. You can place more distance between your body and the source of the RF, as the exposure level drops off dramatically with distance. The FDA/FCC website states that “hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then

that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit." Also, if you use your wireless phone while in a car, you can use a phone with an antenna on the outside of the vehicle. You should also read and follow your wireless phone manufacturer's instructions for the safe operation of your phone.

Do wireless phones pose any special risks to children?

The FDA/FCC website states that "the scientific evidence does not show a danger to users of wireless communication devices, including children." The FDA/FCC website further states that "some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all". For example, the Stewart Report from the United Kingdom ["UK"] made such a recommendation in December 2000. In this report a group of independent experts noted that no evidence exists that

using a cell phone causes brain tumors or other ill effects. [The UK's] recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists. A copy of the UK's leaflet is available at <http://www.dh.gov.uk> (search "mobile"), or you can write to: NRPB, Chilton, Didcot, Oxon OX11 0RQ, United Kingdom. Copies of the UK's annual reports on mobile phones and RF are available online at www.iegmp.org.uk and <http://www.hpa.org.uk/radiation/> (search "mobile"). Parents who wish to reduce their children's RF exposure may choose to restrict their children's wireless phone use.

Where can I get further information about RF emissions?

For further information, see the following additional resources (websites current as of April 2005):

U.S. Food and Drug Administration

FDA Consumer magazine
November-December 2000
Telephone: (888) INFO-FDA

<http://www.fda.gov> (Under “c” in the subject index, select Cell Phones > Research.)

U.S. Federal Communications Commission

445 12th Street, S.W.

Washington, D.C. 20554

Telephone: (888) 225-5322

<http://www.fcc.gov/oet/rfsafety>

Independent Expert Group on Mobile Phones

<http://www.iegmp.org.uk>

Royal Society of Canada Expert Panels on Potential Health Risks of Radio Frequency Fields from Wireless Telecommunication Devices

283 Sparks Street

Ottawa, Ontario K1R 7X9

Canada

Telephone: (613) 991-6990

http://www.rsc.ca/index.php?page=Expert_Panels_RF&Lang_id=120

World Health Organization

Avenue Appia 20 1211 Geneva 27

Switzerland

Telephone: 011 41 22 791 21 11

<http://www.who.int/mediacentre/factsheets/fs193/en/>

International Commission on Non-Ionizing Radiation Protection

c/o Bundesamt für Strahlenschutz

Ingolstaedter Landstr. 1

85764 Oberschleissheim

Germany

Telephone: 011 49 1888 333 2156

<http://www.icnirp.de>

American National Standards Institute

1819 L Street, N.W., 6th Floor
Washington, D.C. 20036

Telephone: (202) 293-8020

<http://www.ansi.org>

National Council on Radiation Protection and Measurements

7910 Woodmont Avenue, Suite 800

Bethesda, MD 20814-3095

Telephone: (301) 657-2652

<http://www.ncrponline.org>

Engineering in Medicine and Biology Society, Committee on Man and Radiation (COMAR) of the Institute of Electrical and Electronics Engineers

<http://ewh.ieee.org/soc/embs/comar/>

Consumer Information on SAR

(Specific Absorption Rate)

This model phone meets the government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of

all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body)

as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.16 W/kg and when worn on the body, as described in this user guide, is 1.30 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID ZNFVN280. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining

noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.


The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are

likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/ higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you're talking over the cell phone, it's recommended you'd turn the BT (Bluetooth) mode off for HAC.

For information about hearing aids and digital wireless phones

Wireless Phones and Hearing Aid Accessibility

<http://www.accesswireless.org/hearingaid/>

FCC Hearing Aid Compatibility and Volume Control

http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html

Caution: **Avoid potential hearing loss.**

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in

your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from

their pacemaker when the phone is turned ON;

- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations

posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed

and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage.

Caution

Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard. Such conditions may present the risk of fire or explosion.
- Only use the battery with a charging system that has been approved and qualified with the system per IEEE-Std-1725-2006. Use of an unqualified and non-approved battery or charger may present a

risk of fire, explosion, leakage, or other hazard.

- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been approved and qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified and non-approved battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone, battery or exposing the phone or battery to a liquid. If the phone or battery is dropped, especially on a hard surface, or is exposed to a liquid or comes into contact with a sharp object take it to a service center for inspection.
- At least, one of the Authentication methods may be

implemented. (e.g. H/W, S/W, Mechanical, Hologram, etc.)

- Improper battery use may result in a fire, explosion or other hazard.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Please read the user guide of proper installation and removal of the battery.

- Please read the manual of specified charger about charging method.
- Do not damage the power cord by bending, twisting, or heating. Do not use the plug if it is loose as it may cause electric shock or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty. When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire. If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Recharge the battery after long periods of non-use to maximize battery life. Battery life will vary due to usage pattern and environmental conditions.
- Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.
- Charging temperature range is regulated between 32°F (0°C) and 113°F (45°C). Do not charge the battery out of recommended temperature range. Charging out of recommended range might cause the generating heat or serious damage of battery. And also, it might cause the deterioration of battery's characteristics and cycle life.
- Do not use or leave the battery under the blazing sun or in heated car by sunshine. The battery may generate heat, smoke or flame. And also, it might cause the deterioration of battery's characteristics or cycle life.
- The battery pack has protection circuit to avoid the danger. Do not use nearby the place where generates static electricity more than 100V which gives damage

to the protection circuit. If the protection circuit were broken, the battery would generate smoke, rupture or flame.

- When there is rust on the battery or if it gives off a bad or unusual odor the first time you use it, do not use the equipment and bring the battery to the shop where it was purchased.
- In case younger children use the battery, their parents should teach them how to use batteries according to the manual with care.
- If the skin or cloth is smeared with liquid from the battery, wash with fresh water. It may cause the skin inflammation. Remove and do not use the battery.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone and risk of overheating, fire or explosion may occur.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire. Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and - terminals of the battery (metal strips on the battery)

upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.

- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone and may cause an explosion. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag or contact with sharp objects including animal bites may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth or animal's mouth may cause serious injury including a fire or explosion.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of

- the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water, liquid, or expose to high humidity. If this happens, turn it off immediately and remove the battery. Immediately, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC

relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone

is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-

causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the

scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and

Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak

Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques”, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a

few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the

measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI)

of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the

interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones (<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-ionizing Radiation Protection (<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)

National Radiological Protection Board (UK) (<http://www.hpa.org.uk/radiation/>)

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to

- memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
 3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
 4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
 5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
 6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
 7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and

driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number,

as you would want others to do for you.

10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free

of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.

- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts

LIMITED WARRANTY STATEMENT

which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

(9) Products operated outside published maximum ratings.

(10) Products used or obtained in a rental program.

(11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that is covered under this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE,

IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following

telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets, P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

7.11 Warranty Laws

The following laws govern warranties that arise in retail sales of consumer goods:

- The California Song-Beverly Consumer Warranty Act [CC §§1790 et seq],
- The California Uniform Commercial Code, Division Two [Com C §§2101 et seq], and
- The federal Magnuson-Moss Warranty Federal Trade Commission Improvement Act [15 USC §§2301 et seq; 16 CFR Parts 701 – 703]. A typical Magnuson-Moss Act warranty is a written promise that the product is free of defects or a written promise to refund, repair, or replace defective goods. [See 15 USC §2301 (6).] Remedies include damages for failing to honor a written warranty or service contract or for violating disclosure provisions. [See 15 USC §2310(d).] Except for some labeling and disclosure requirements, the federal Act does not preempt state law. [See 15 USC §2311.]

The Consumer Warranty Act does not affect the rights and obligations of parties under the state Uniform Commercial Code, except the provisions of the Act prevail over provisions of the Commercial Code when they conflict. [CC §1790.3.]

For purposes of small claims actions, this course will focus on rights and duties under the state laws.

The device is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: Cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft/ softer handoff, hard handoff, and dynamic RF power control

technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95.

The table on the following page lists some major CDMA standards.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS-651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>
All referred licence terms, disclaimers and notices are available for download with the source code.

Terminology

EZ Tip Calculator

Feature for easy bill calculation using the total cost, tip, and number of people as variables.

Advanced Voice Recognition

Feature that allows you to perform a wide range of verbal commands by training the phone to recognize your individual speech patterns.

Bluetooth® wireless technology

Technology used to allow mobile phones, computers, and other personal devices to be easily coordinated and interconnected using a short-range wireless connection.

Media Center

Feature that accesses the Internet to provide the ability to access and even download a wide variety of software, information, and more right on your LG Verizon Wireless phone.

Acronyms and Abbreviations

DTMF

Dual-Tone Multi Frequency (or “touch-tone”) is a method used to communicate keys pressed on the phone. Pressing a key generates two simultaneous tones, one for the row and one for the column to determine which key was pressed.

ERI

Enhanced Roaming Indicator is a feature to indicate whether a mobile phone is on its home system, a partner network, or a roaming network. Many phones indicate home vs. roaming as an icon, but ERI capable phones can clearly indicate third “partner network” status.

GPS

Global Positioning System is a system of satellites, computers, and receivers able to determine the latitude and longitude of a specific receiver on Earth. Position is calculated using time and distance.

IS 2000

Type of digital signaling. It's the second generation of CDMA digital cellular, an extension of IS-95.

Differences between signaling types have to do with pilot signal and links to provide more traffic channels, and control protocols.

NAM

Number Assignment Module is how the phone stores the phone number and its electronic serial number.

SSL

Secure Sockets Layer Protocol used to encrypt data sent over the air.

TTY

Teletypewriter. An electromechanical typewriter that either transmits or receives messages coded in electrical signals. A phone with TTY support is able to translate typed characters to voice or translate voice into characters to display on the TTY.

Index

Numbers

10 Driver Safety Tips 114

A

Acronyms and Abbreviations
122

Alarm Clock 35, 83

All 31

Avoid potential hearing
loss. 97

B

Backup Assistant 28

Battery Charge Level 13

Battery Temperature
Protection 13

Bluetooth Menu 40

Browse & Download 80

C

Calculator 37

Calendar 35

Call <Name or Number> 33

Call Settings 56

Call Waiting 23

Changing Contact Entries 25

Charging the Battery 11

Charging with USB 11

Check <Item> 33

Consumer Information About
Radio Frequency Emissions
90

Consumer Information on
SAR 94

Contacts 27

Contacts List 27

Contacts <Name> 34

D

Deleting 26

Dialed 31

Display Settings 46

Drafts 67

Driving 114

E

Eco-Calculator 38

Erase Options 69

Extras 81

Ez Tip Calculator 37

F

FCC Hearing-Aid Compatibility
(HAC) Regulations for
Wireless Devices 95
FDA Consumer Update 106

G

Games 80

Go to <Menu> 33

Groups 28

H

Help 34

How to Install a microSD™
Card 12

How to Remove a microSD™
Card 12

I

In Case of Emergency
(ICE) 29

Internet 80

M

Making Calls 13

Media Center 73

Memory 61

Messages 65

Messaging 65

Missed 30

Mobile Email 64, 68

Music & Tones 73

My Music 83

My Pictures 84

My Place 81

My Verizon 32, 34

N

New Contacts 27

New Message 65

Notepad 34

P

Phone Info 62

Phone Settings 52

Picture & Video 76

Play 34

Q

Quick Glance of the Touch
Screen and How to Use It 9

Quick Keys 9

Quick Text Options 69

Quick Volume Adjustment 23

R

Received 30

Receiving Calls 14

Recent Calls 30

Redial 34

Redialing Calls 14
Restrictions 23

S

Safety Information 101
Screen Icons 13
Send Msg to <Name or
Number or Group> 33
Settings 40, 70
Shortcuts Menu 15, 22
Signal Strength 13
Social Networks 69
Sounds Settings 43
Speed Dials 25, 28
Stopwatch 36
Storing a Number with
Pauses 26
Storing New Contacts 25

T

Table of Contents 1
Terminology 122
Text Input 17
The Battery 10
TIA Safety Information 98
Tools 33
Touch Settings 51
Turning the Phone On and
Off 10

U

USB Mass Storage 38
USB Mode 61
Using the QWERTY
Keyboard 7

V

Vibrate Mode 23
View Timers 32
Voice Commands 24, 33
Voicemail 68

W

World Clock 36