



LG

Highlander
Ceiling Cassette
Air Conditioner
OWNER'S MANUAL

Dear Owner,
Thank you for installing LG Air Conditioner.
Your best choice guarantees you a great
performance and service to make your life
comfortable & pleasant.

IMPORTANT

- Please read this owner's manual carefully and thoroughly before installing and operating your room air conditioner.
- Please retain this owner's manual for future reference after reading it thoroughly.



P/No.-MFL62865704

TABLE OF CONTENTS

Safety Precautions.....	3
Prior to Operation	8
Introduction	9
Electrical Safety	10
Operating Instructions.....	11
Maintenance and Service	66



FOR YOUR RECORDS

Write the model and serial numbers here:

Model #

Serial #

You can find them on a label on the side of each unit.

Dealer's Name

Date Purchased

- Staple your receipt to this page in the event you need it to prove date of purchase or for warranty issues.



READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of

Troubleshooting Tips first, you may not need to call for service at all.



PRECAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.



Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

WARNING

This symbol indicates the possibility of death or serious injury.

CAUTION

This symbol indicates the possibility of injury or damage.

- Meanings of symbols used in this manual are as shown below.


	Be sure not to do.
	Be sure to follow the instruction.

WARNING

■ Installation


Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.

- There is risk of fire or electric shock.

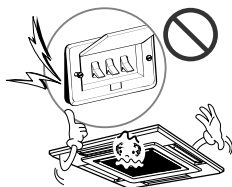


For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.

- Do not disassemble or repair the product. There is risk of fire or electric shock.

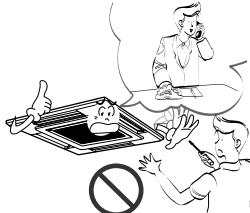


Always ground the product.

- There is risk of fire or electric shock.

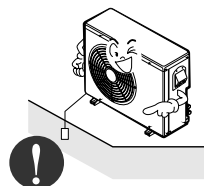

Install the panel and the cover of control box securely.

- There is risk of fire or electric shock.

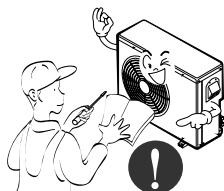

Always install a dedicated circuit and breaker.

- Improper wiring or installation may cause fire or electric shock




Use the correctly rated breaker or fuse.

- There is risk of fire or electric shock.



Do not modify or extend the power cable.

- There is risk of fire or electric shock.

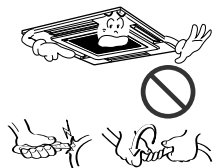

Do not install, remove, or re-install the unit by yourself (customer).

- There is risk of fire, electric shock, explosion, or injury.



Be cautious when unpacking and installing the product.

- Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.




For installation, always contact the dealer or an Authorized Service Center.

- There is risk of fire, electric shock, explosion, or injury.




Do not install the product on a defective installation stand.

- It may cause injury, accident, or damage to the product.

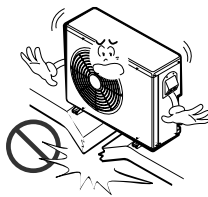

Be sure the installation area does not deteriorate with age.

- If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.

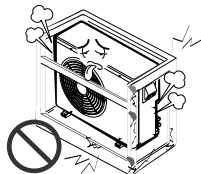

■ Operation


Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.

- Moisture may condense and wet or damage furniture.




Take care to ensure that power cable could not be pulled out or damaged during operation.

- There is risk of fire or electric shock.

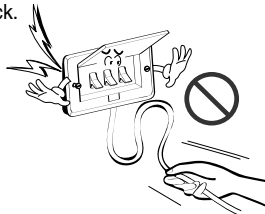


Do not place anything on the power cable.

- There is risk of fire or electric shock.

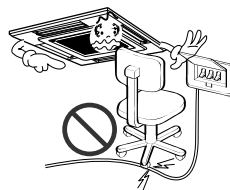

Do not plug or unplug the power supply plug during operation.

- There is risk of fire or electric shock.

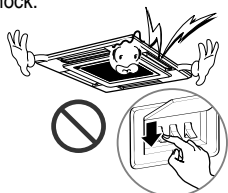


Do not touch (operate) the product with wet hands.

- There is risk of fire or electrical shock.




Do not place a heater or other appliances near the power cable.

- There is risk of fire and electric shock.

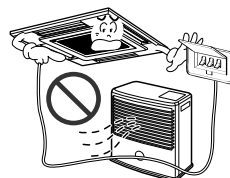

Do not allow water to run into electric parts.

- It may cause There is risk of fire, failure of the product, or electric shock.

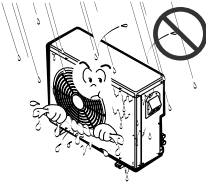


Do not store or use flammable gas or combustibles near the product.

- There is risk of fire or failure of product.




Do not use the product in a tightly closed space for a long time.

- Oxygen deficiency could occur.

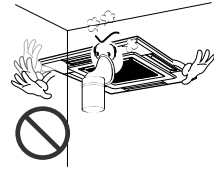

When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.

- Do not use the telephone or turn switches on or off. There is risk of explosion or fire

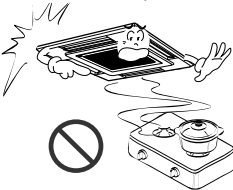


If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable.

- There is risk of electric shock or fire.



Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.

- There is risk of property damage, failure of product, or electric shock.

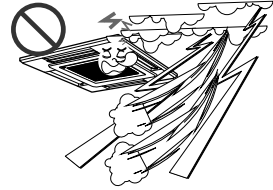

Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)

- There is risk of physical injury, electric shock, or product failure.




When the product is soaked (flooded or submerged), contact an Authorized Service Center.

- There is risk of fire or electric shock.




Be cautious that water could not enter the product.

- There is risk of fire, electric shock, or product damage.

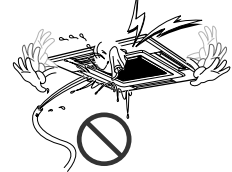


Ventilate the product from time to time when operating it together with a stove, etc.

- There is risk of fire or electric shock.

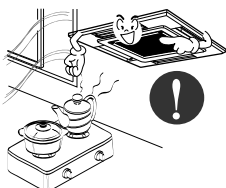


Turn the main power off when cleaning or maintaining the product.

- There is risk of electric shock.

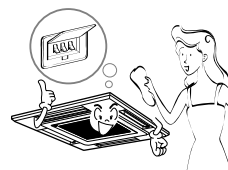

When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.

- There is risk of product damage or failure, or unintended operation.

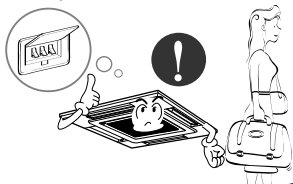

Take care to ensure that nobody could step on or fall onto the outdoor unit.

- This could result in personal injury and product damage.




CAUTION

■ Installation


Always check for gas (refrigerant) leakage after installation or repair of product.

- Low refrigerant levels may cause failure of product.

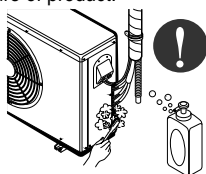


Install the drain hose to ensure that water is drained away properly.

- A bad connection may cause water leakage.

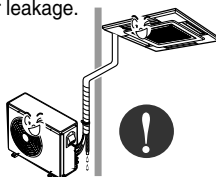

Keep level even when installing the product.

- To avoid vibration or water leakage.

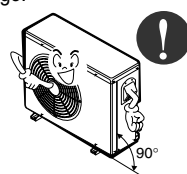


Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.

- It may cause a problem for your neighbors.




Use two or more people to lift and transport the product.

- Avoid personal injury.

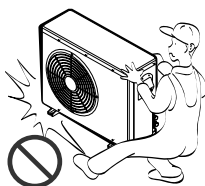

Do not install the product where it will be exposed to sea wind (salt spray) directly.

- It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

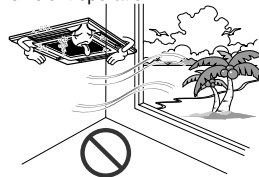

■ Operation


Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.)

- This could harm to your health.




Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.

- There is risk of damage or loss of property.

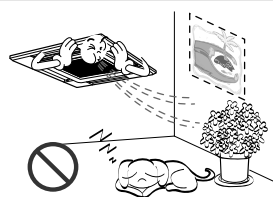


Do not block the inlet or outlet of air flow.

- It may cause product failure.

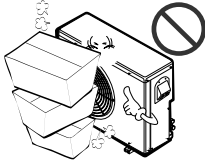


Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.

- There is risk of fire, electric shock, or damage to the plastic parts of the product.

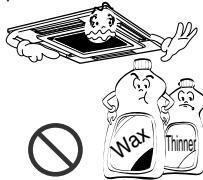

Do not touch the metal parts of the product when removing the air filter. They are very sharp!

- There is risk of personal injury.

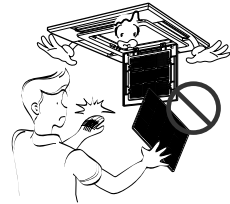


Do not step on or put anything on the product. (outdoor units)

- There is risk of personal injury and failure of product.




Always insert the filter securely. Clean the filter every two weeks or more often if necessary.

- A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

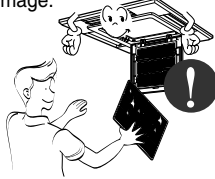


Do not insert hands or other objects through the air inlet or outlet while the product is operated.

- There are sharp and moving parts that could cause personal injury.

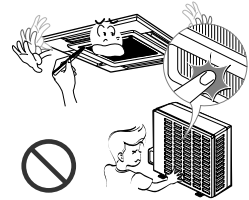


Do not drink the water drained from the product.

- It is not sanitary and could cause serious health issues.

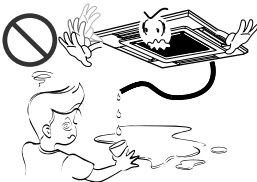


Use a firm stool or ladder when cleaning or maintaining the product.

- Be careful and avoid personal injury.

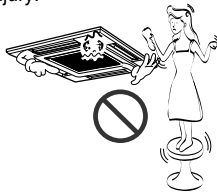


Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries.

- There is risk of fire or explosion

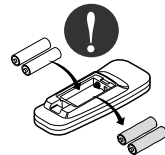

Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire.

- They may burn or explode.

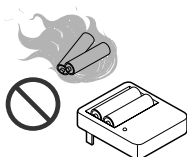

If the liquid from the batteries gets onto your skin or clothes, wash it well with clean water. Do not use the remote if the batteries have leaked.

- The chemicals in batteries could cause burns or other health hazards.



Prior to Operation

Preparing for operation

1. Contact an installation specialist for installation.
2. Plug in the power plug properly.
3. Use a dedicated circuit.
4. Do not use an extension cord.
5. Do not start/stop operation by plugging/unplugging the power cord.
6. If the cord/plug is damaged, replace it with only an authorized replacement part.

Usage

1. Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
2. Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
3. Do not use this air conditioner for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

Cleaning and maintenance

1. Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
2. Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
3. When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a possibility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.

Service

For repair and maintenance, contact your authorized service dealer.

Introduction

Symbols used in this Manual



This symbol alerts you to the risk of electric shock.



This symbol alerts you to hazards that could cause harm to the air conditioner.


NOTICE

This symbol indicates special notes.

Features



WARNING: This appliance should be installed in accordance with national wiring regulations. This guide acts as a guide to help to explain product features.

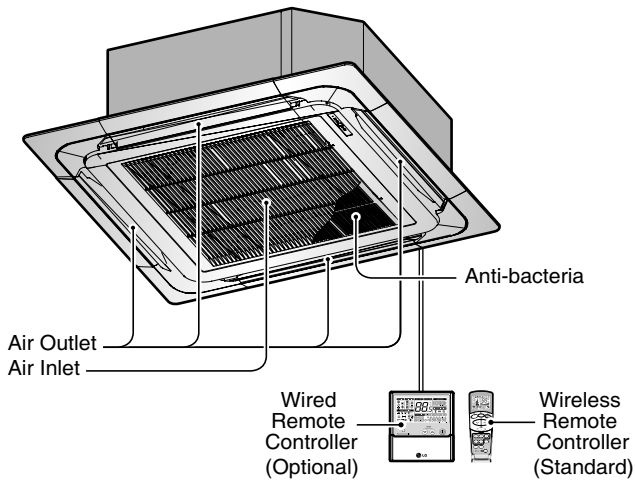


Electrical Safety



WARNING: This appliance must be properly grounded.

To minimize the risk of electric shock, you must always plug into a grounded outlet.

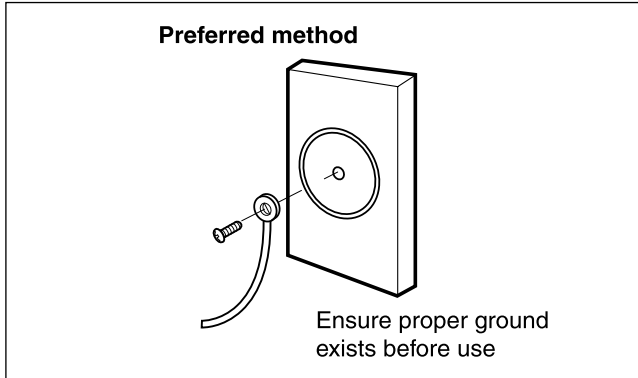

WARNING: Do not cut or remove the grounding prong from the power wire.



WARNING: Attaching the adapter ground terminal to the wall receptacle cover screw does not ground the appliance unless the cover screw is metal and not insulated, and the wall receptacle is grounded through the house wiring.



WARNING: If you have any doubt whether the air conditioner is properly grounded, have the wall receptacle and circuit checked by a qualified electrician.

Disposal of your old appliance (as per e-waste Rules)



1. When this crossed out wheeled bin symbol is depicted on the product and its operator's manual, it means the product is covered by the e-waste Management and Handling Rules, 2011 and are meant to be recycled, dismantled, refurbished or disposed off.

2. Dos

- The product is required to be handed over only to the authorized recycler for disposal.
- Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.

Don't

- The product should not be opened by the user himself/herself, but only by authorized service personnel.
 - The product is not meant for re-sale to any unauthorized agencies/scrap dealer/kabariwala.
 - The product is not meant for mixing into household waste stream.
 - Do not keep any replaced spare part(s) from the product in exposed area.
3. Any disposal through unauthorized agencies/person will attract action under Environment (Protection) Act 1986.
4. Hazards of improper handling or accidental breakage

- If batteries are disposed incorrectly, it can greatly harm the environment. The chemical by-products are hazardous to humans, plants and animals. If thrown in fire, they can cause blast and release toxic gases which may be harmful for health.
 - The refrigerant (R-22) used can be combustible at low pressure. The potential health effects of over exposure is dizziness, headache and heart irregularities.
5. To locate a nearest collection centre or call for pick-up (limited area only) for disposal of this appliance, please contact Toll Free No. **1800-180-9999** for details. All collection centre and pick up facilities are done by third parties with **LG Electronics India Pvt. Ltd.** merely as a facilitator.

For more detailed information, please visit: <http://www.lge.com/in>

अपने पुराने उपकरण का निपटारा (ई-अपशिष्ट नियम के अनुसार)



१. जब इस काटे गये पहिये वाले बिन का चिह्न किसी उपकरण और इसके ओपरेटर की पुस्तिका के साथ संलग्न होता है तो इसका मतलब है कि इसे "ई-अपशिष्ट" (इलेक्ट्रॉनिक कचरा) नियम २०११ के अन्तर्गत सम्भलित किया गया है, और इसे नवीनीकरण, विघटन और निपटारण के लिए बनाया गया है।

२. करें-

क- उपकरण को सिर्फ अधिकृत पुनः नवीनीकरणकर्ता को ही निपटारण करने हेतु हस्तांतरित करें।

ख- जब उपकरण कार्यरत न हो इसे अलग क्षेत्र में रखें ताकि उपकरण से होने वाली दुर्घटनाओं से बचा जा सके।

ना करें-

क- इस उपकरण को स्वयं/बुद्ध नहीं खोलना चाहिए। उपकरण को केवल अधिकृत अधिकारी के द्वारा ही खोला जाना चाहिए।

ख- इस उपकरण को पुनः किसी भी कबाड़ीवाला/भंगार वाला/अनाधिकृत संस्था को न दें।

ग- इस उपकरण को किसी घरेलू अपशिष्ट सामान के साथ निपटारण न करें।

घ- उपकरण के बदले हुए या आंशिक पुराने को खुले क्षेत्र में न रखें।

३. यदि किसी अनाधिकृत विभाग या व्यक्ति के द्वारा निपटारण किया जाता है तो यह पर्यावरण (सुस्था) धारा १९८८ के अन्तर्गत आता है।

४. दुर्घटनाग्रस्त दूध/दूध तथा अत्यधिक रक्त-रक्तव से बचे।

क- यदि बैटरियों का निपटारण अशुद्ध रूप से कर रहे हैं, तो यह वातावरण को बहुत नुकसान पहुँचा सकता है। रसायनिक उपकरण खतरनाक होते हैं। जो रसायन और वायु बैटरियों में पाए जाते हैं, इस मिश्रण में मिलाने पर यह मनुष्यों, पौधों और पशुओं के लिए खतरनाक हो सकती है। यदि इसे आग में फेंकते हैं तो ये विस्फोट कर सकती हैं और ये जहरीली नौसें दे सकता है जो स्वास्थ्य के लिए हानिकारक हैं।


ख- रेफ्रिजरेट (R-22) कम दबाव पर दहनशील हो सकती है तथा इससे स्वास्थ्य पर दुष्प्रभाव पड़ सकता है जैसे चक्कर आना, सिर दर्द और हृदय गति रुकना।

५. उपरोक्त पदार्थों के निपटारण के लिए नजदीकी निपटारण संस्थान (संकीर्ण क्षेत्र) में कौल करें। अधिक जानकारी के लिए हमारे टोल फ्री नंबर **१८०० १८० ९९९९** पर कौल करें। सभी संग्रहण केन्द्र व पिक-अप की सुविधाएं थर्ड-पार्टी से जो **"LG Electronics India Pvt. Ltd."** को अपनी सेवाएं प्रदान कर रही हैं, से कराए।

अधिक जानकारी के लिए देखें वेबसाइट: <http://www.lge.com/in>

Operating Instructions


Indoor Unit, Outdoor Unit

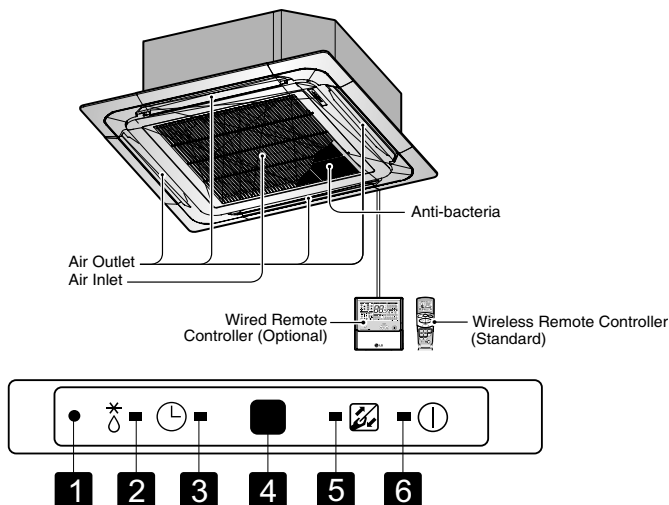

Operation Indication Lamps

- 1** Forced Operation : Operation procedures when remote control can't be used.
- 2** Defrost Mode : Lights up during defrost mode or hot start operation.
(heat pump model only)
- 3** Timer : Lights up during timer operation.
- 4** Signal Receptor : Receives the signal from remote control (signal receiving sound:
two short beeps and one long beep)
- 5** Filter Sign : Lights up after 2400 hours from the time of first operation.
- 6** On/Off : Lights up during system operation.


Outdoor Unit

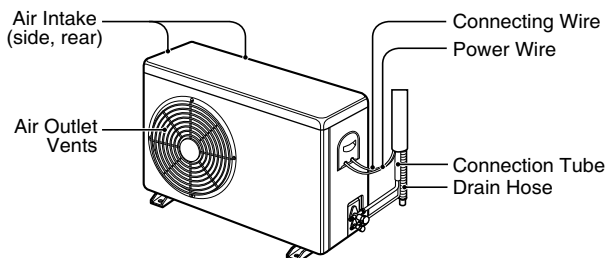

Heat pump model: Cassette Type Air Conditioner for cooling and heating
Cooling model: Cassette Type Air Conditioner for cooling

Remote Control Preparation

HOW TO MOUNT ONTO A WALL

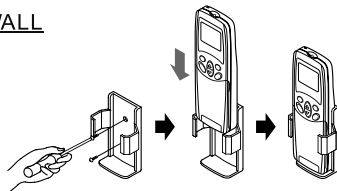

HOW TO INSERT BATTERIES

1. Remove the battery cover from the remote controller.

- Slide the cover according to the arrow direction.

2. Insert the two batteries.

- Be sure that the (+) and (-) directions are correct.
- Be sure that both batteries are new.

3. Re-attach the cover.

- Slide it back into position.



- Do not use rechargeable batteries, such batteries differ from standard dry cells in shape, dimensions, and performance.

- Remove the batteries from the remote controller if the air conditioner is not going to be used for some long time.


Wireless Remote Controller (Standard)

This air-conditioner is equipped with wireless remote controller basically. But if you want to be available with wired remote controller, you pay for it.


The controls will look like the following.

Controls

Type A

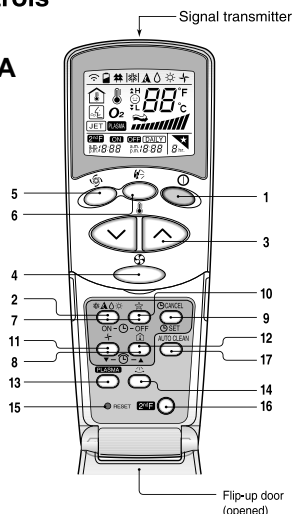

Type B

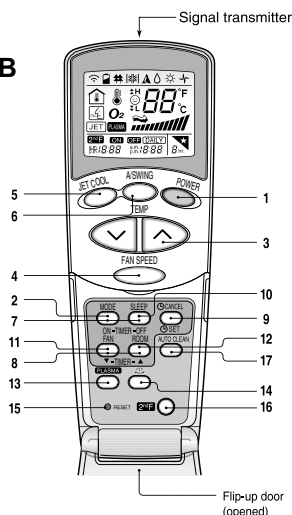

1. START/STOP BUTTON

Operation starts when this button is pressed and stops when the button is pressed again.



2. OPERATION MODE SELECTION BUTTON

Used to select the operation mode.



3. ROOM TEMPERATURE SETTING BUTTONS

Used to select the room temperature.



4. INDOOR FAN SPEED SELECTOR

Used to select fan speed in four steps low, medium, high and CHAOS.



5. JET COOL

Used to start or stop the speed cooling.(speed cooling operates super high fan speed in cooling mode.)



6. CHAOS SWING BUTTON

Used to stop or start louver movement and set the desired up/down airflow direction.



7. ON/OFF TIMER BUTTONS

Used to set the time of starting and stopping operation.

8. TIME SETTING BUTTONS

Used to adjust the time.

9. TIMER SET/CANCEL BUTTON

Used to set the timer when the desired time is obtained and to cancel the Timer operation.

10. SLEEP MODE AUTO BUTTON

Used to set Sleep Mode Auto operation.

11. AIR CIRCULATION BUTTON

Used to circulate the room air without cooling or heating.

12. ROOM TEMPERATURE CHECKING BUTTON

Used to check the room temperature.

13. PLASMA(OPTIONAL)

Used to start or stop the plasma-purification function.

14. HORIZONTAL AIRFLOW DIRECTION CONTROL BUTTON (OPTIONAL)

Used to set the desired horizontal airflow direction.

15. RESET BUTTON

Used prior to resetting time.

16. 2nd F Button

Used prior to using modes printed in blue at the bottom of buttons.

17. AUTO CLEAN (OPTIONAL)

Used to set Auto Clean mode.




* Your unit shall have either Type A or Type B Remote Control.

CAUTION: of handling the Remote Controller

- Aim at the signal receiver on the wired remote controller so as to operate.
- The remote control signal can be received at a distance of up to about 7m.
- Be sure that there are no obstructions between the remote controller and the signal receptor.
- Do not drop or throw the remote controller.
- Do not place the remote controller in a location exposed to direct sunlight, or near the heating unit, or any other heat source.


Operation Mode

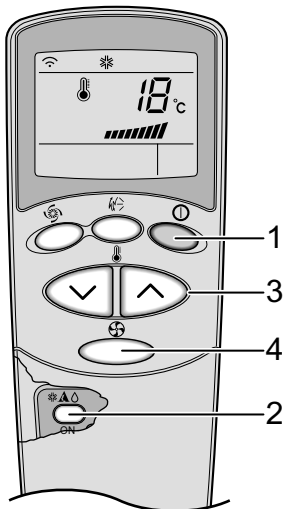


- 1 Press the START/STOP BUTTON to turn the unit on.
The unit will respond with a beep.




- 2 Open the door of the remote controller and press the operation mode button. Each time the button is pressed, the operation mode is shifted in the direction of the arrow.

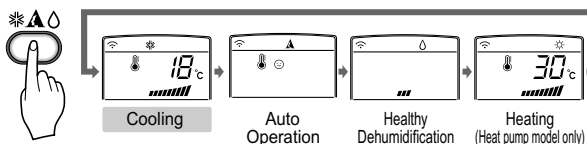

- 3 For cooling or heating operation set the desired indoor temperature by pressing the ROOM TEMPERATURE SETTING BUTTONS.
For cooling the temperature can be set within 18 C~30 C and for heating the temperature range is 16 C~30 C.



- 4 Set the fan speed with the remote controller. You can select the fan speed in four steps-low, medium, high and CHAOS by pressing the INDOOR FAN SPEED SELECTOR BUTTON. Each time the button is pressed, the fan speed mode is shifted.

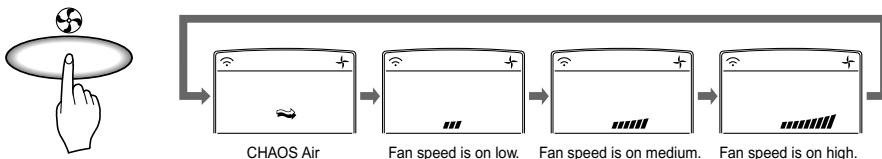


Natural wind by the CHAOS logic

For fresher feeling, press the INDOOR FAN SPEED SELECTOR BUTTON select and set to CHAOS mode.
In this mode, the wind blows like a natural breeze by automatically changing fan speed according to the CHAOS logic.

* Your unit shall have either Type A or Type B Remote Control.

Healthy Dehumidification Operation

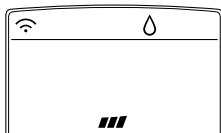

Healthy
Dehumidification




During Healthy Dehumidification Operation

- If you select the dehumidification mode on the OPERATION MODE SELECTION BUTTON, the product starts to run the dehumidification function. It automatically sets the room temperature and airflow volume to the best condition for dehumidification, based on the sensed current room temperature.
- In this case, however, the setting temperature is not displayed on the remote controller and you are not able to control the room temperature either.
- During the healthy dehumidification function, the airflow volume is automatically set according to the optimization algorithm responding to the current room temperature status, so that the room condition is kept healthy and comfortable even in the very humid season.

To run the healthy dehumidification mode follow steps 1, and 2 and 4 (See operation mode)

Auto Operation

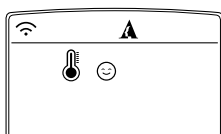

Auto

In this operation mode the actual setting temperature and the fan speed are automatically set by the electronic control logic based on the current room temperature. If you feel hot or cold press the temperature setting buttons respectively for more cooling or heating effect.

NOTE : You cannot set the actual setting temperature and the indoor fan speed in this operation mode. But you can use the Chaos swing in this operation.

If the system is not operating as desired, switch manually to another mode.

To run the auto operation follow steps 1, and 2. (See operation mode)

Setting the Time operation

Time can be set only when you have pressed the Reset button. If you have just replaced the batteries, the Reset button should be pressed to reset the time. Press the Start/Stop button.

Press 2nd F button and check if 2nd F icon is on.



Press the Time Setting buttons until the desired time is set.




Press the Timer SET button.

Note: Check the indicator for A.M. and P.M.



* Your unit shall have either Type A or Type B Remote Control.

Jet Cool/Heat Operation

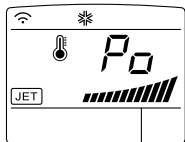

Jet cool function can be used to cool the room quickly in hot summer. When this function is turned on, the air conditioner runs in cooling operation mode with super high fan speed and 18 C setting temperature for fast and effective cooling.

You can activate this operation by pressing the JET COOL BUTTON.


To change from jet cool mode to high fan speed cooling mode, press the JET COOL BUTTON or INDOOR FAN SPEED SELECTOR BUTTON or the ROOM TEMPERATURE SETTING BUTTON again.



NOTE

- Jet cool function cannot be activated during heating or auto changeover operations.
- In case of Inverter, Art Cool and Art Cool Wide(non-Deluxe) model, you can use jet heat function by pressing JET COOL BUTTON for heating operation.
- Art Cool and Art Cool Wide models close the side discharges during jet cool/heat operation, for strong cooling and heating.

PLASMA Purification Operation (Optional)

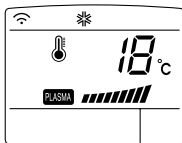

Plasma filter is a technology developed by LG to get rid of microscopic contaminants in the intake air by generating a plasma of high charge electrons. This plasma kills and destroys the contaminants completely to provide clean and hygienic air.

Plasma purification can be started by pressing the PLASMA BUTTON on the remote controller. Repressing it will deactivate the operation.


NOTE

This feature can be used in any operation mode and any fan speed can be used while plasma filter is functioning.



* Your unit shall have either Type A or Type B Remote Control.

Wide LCD Wired Remote Controller (Optional)

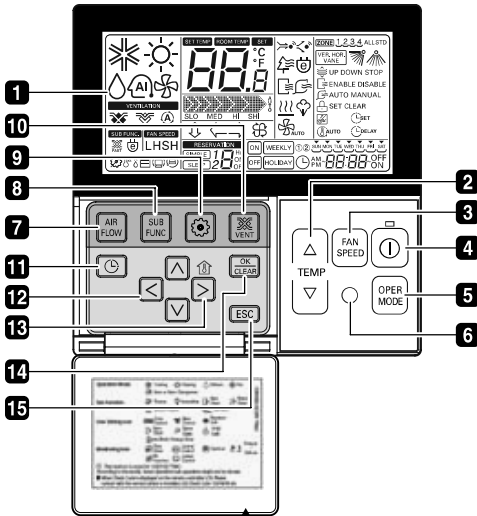

Please attach the inform label inside of the door.
Please choose proper language depend on your country.

- 1 OPERATION INDICATION SCREEN**
- 2 SET TEMPERATURE BUTTON**
- 3 FAN SPEED BUTTON**
- 4 ON/OFF BUTTON**
- 5 OPERATION MODE SELECTION BUTTON**
- 6 WIRELESS REMOTE CONTROLLER RECEIVER**
 - Some products don't receive the wireless signals.
- 7 AIR FLOW BUTTON**
- 8 SUBFUNCTION BUTTON**
- 9 FUNCTION SETTING BUTTON**
- 10 VENTILATION BUTTON**
- 11 RESERVATION**
- 12 UP,DOWN,LEFT,RIGHT BUTTON**
 - To check the indoor temperature, press button.
- 13 ROOM TEMPERATURE BUTTON**
- 14 SETTING/CANCEL BUTTON**
- 15 EXIT BUTTON**

* Some functions may not be operated and displayed depending on the product type.


Accessory



Connection Cable
(1EA, 10m)



Screw
(4 EA)




Owner's / Installation
manual



Inform label
(8EA-8Languages)

Part Description

Name and Function of Remote Controller

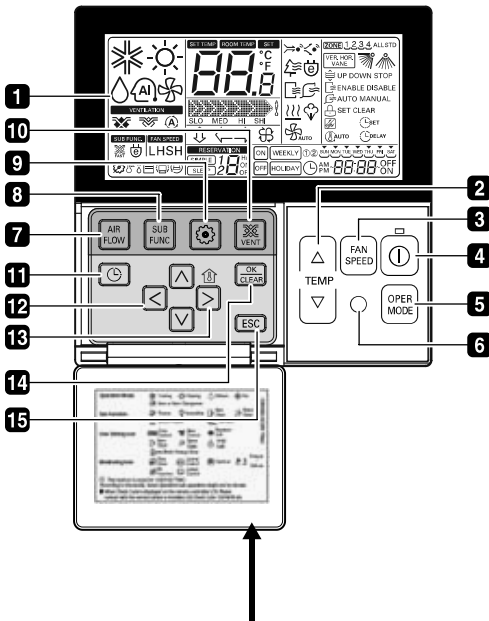

Please attach the inform label inside of the door.
Please choose proper language depend on your country.

- 1 OPERATION INDICATION SCREEN**
- 2 SET TEMPERATURE BUTTON**
- 3 FAN SPEED BUTTON**
- 4 ON/OFF BUTTON**
- 5 OPERATION MODE SELECTION BUTTON**
- 6 WIRELESS REMOTE CONTROLLER RECEIVER**
 - Some products don't receive the wireless signals.
- 7 AIR FLOW BUTTON**
- 8 SUBFUNCTION BUTTON**
- 9 FUNCTION SETTING BUTTON**
- 10 VENTILATION BUTTON**
- 11 RESERVATION**
- 12 UP,DOWN,LEFT,RIGHT BUTTON**
 - To check the indoor temperature, press button.
- 13 ROOM TEMPERATURE BUTTON**
- 14 SETTING/CANCEL BUTTON**
- 15 EXIT BUTTON**

* Some functions may not be operated and displayed depending on the product type.


Accessory



Connection Cable
(1EA, 10m)



Screw
(4 EA)



Owner's / Installation
manual




Inform label
(8EA-8Languages)

Installation instruction

1. Please fix tightly using provided screw after placing remote controller setup board on the place where you like to setup.

- Please set it up not to bend because poor setup could take place if setup board bends.
- Please set up remote controller board fit to the reclamation box if there is a reclamation box.

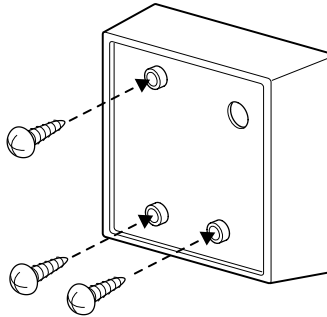

2. Can set up Wired remote controller cable into three directions.


- Setup direction: the surface of wall reclamation, upper, right
- If setting up remote controller cable into upper and right side, please set up after removing remote controller cable guide groove.

* Remove guide groove with long nose.

① Reclamation to the surface of the wall

② Upper part guide groove


③ Right part guide groove

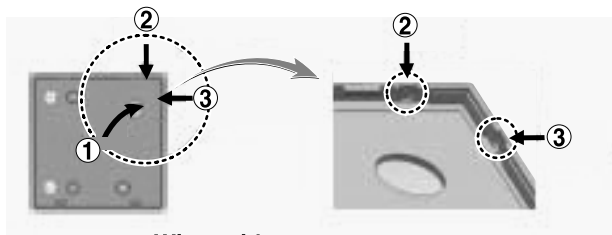

<Wire guide grooves>


3. Please fix remote controller upper part into the setup board attached to the surface of the wall, as the picture below, and then, connect with setup board by pressing lower part.

- Please connect not to make a gap at the remote controller and setup board's upper and lower, right and left part.

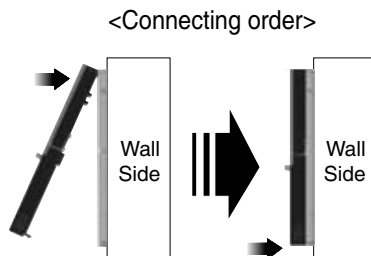


When separating remote controller from setup board, as the picture below, after inserting into the lower separating hole using screw driver and then, spinning clockwise, remote controller is separated.

- There are two separating holes. Please individually separate one at a time.
- Please be careful not to damage the inside components when separating.

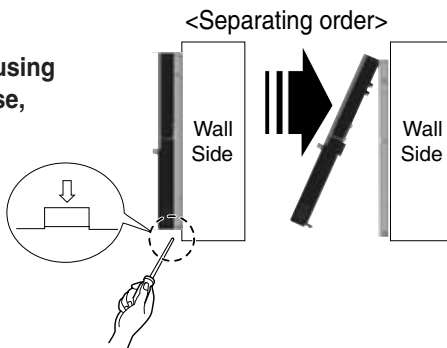

4. Please connect indoor unit and remote controller using connection cable.

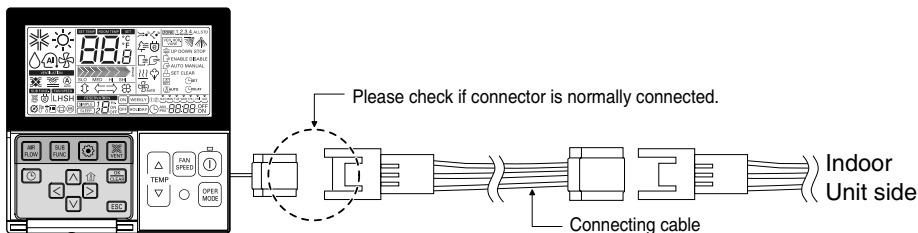

5. Please use extension cable if the distance between wired remote controller and indoor unit is more than 10m.

⚠ CAUTION

When installing the wired remote controller, do not bury it in the wall.

(It can cause damage in the temperature sensor.)

Do not install the cable to be 50m or above.


(It can cause communication error.)

- When installing the extension cable, check the connecting direction of the connector of the remote controller side and the product side for correct installation.
- If you install the extension cable in the opposite direction, the connector will not be connected.
- Specification of extension cable: 2547 1007 22# 2 core 3 shield 5 or above.

Group control


1. When installing more than 2 units of air conditioner to one wired remote controller, please connect as the right figure.

- If it is not event communication indoor unit, set the unit as slave.
- Check for event communication through the product manual.

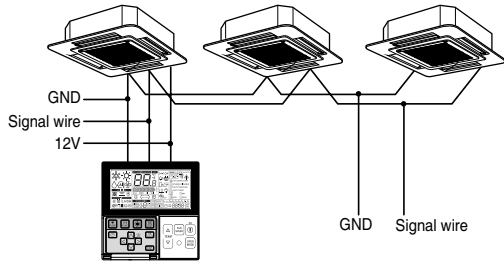


When controlling multiple indoor units with event communication function with one remote controller, you must change the master/slave setting from the indoor unit.

- Indoor units, the master/slave configuration of the product after completion of indoor unit power ?OFF? and then ?ON? the power after 1 minutes elapsed sign up.
- For ceiling type cassette and duct product group, change the switch setting of the indoor PCB.



#3 switch OFF: Master
(Factory default setting)



#3 switch ON: Slave


- For wall-mount type and stand type product, change the master/slave setting with the wireless remote controller. (Refer to wireless remote controller manual for detail)

※ When installing 2 remote controllers to one indoor unit with event communication function, set the master/slave of the remote controller. (Refer to remote controller master/slave selection)

When controlling the group, some functions excluding basic operation setting, fan level Min/Mid/Max, remote controller lock setting and time setting may be limited.

2. When installing more than 2 wired remote controllers to one air conditioner, please connect as the right picture.

- When installing more than 2 units of wired remote controller to one air conditioner, set one wired remote controller as master and the others all as slaves, as shown in the right picture.
- You cannot control the group as shown in the right for some products.
- Refer to the product manual for more detail.

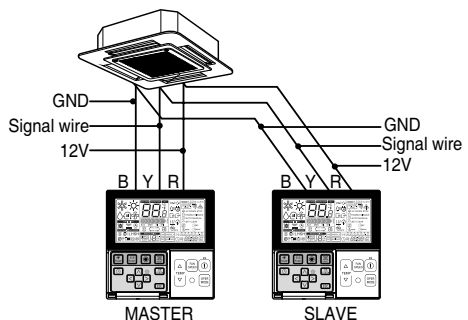

<When simultaneously connecting 2 sets of wired remote controller>


- When controlling in groups, set the master/slave of the remote controller. Refer to Installer setting section on how to set master/slave for more detail.

Installer Setting -How to enter installer setting mode

⚠ CAUTION

Installer setting mode is to set the detail function of the remote controller.

If the installer setting mode is not set correctly, it can cause problems to the product, user injury or property damage. This must be set by an certificated installer, and any installation or change that is carried out by a non-certificated person should be responsible for the results. In this case, free service cannot be provided .

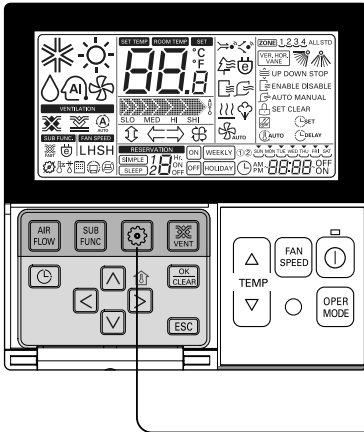

1 If pressing  button long for 3 seconds, it enters into remote controller setter setup mode.

- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.

2 When you enter the setting mode initially, Function code is displayed on the bottom of the LCD screen.

01:01


Function Code Value

- Some categories of the menu may not be displayed according to the function of the product, or the menu name may be different.

Owner's instruction

Standard Operation - Standard Cooling

It cools the room by comfortable and clean wind.

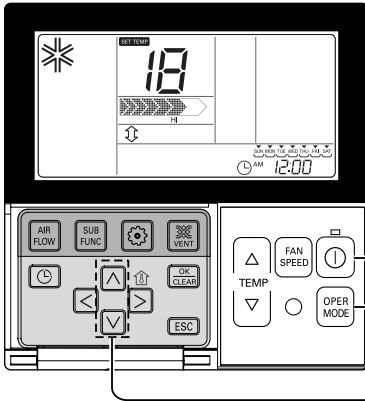

1 Press  button to turn on the indoor.



2 Press  button to select Cooling operation mode.




3 Adjust the desired temperature by pressing   buttons. Press  button to check the Room temperature.
When setting the desired temperature higher than room temperature, only ventilation wind is blow out instead of cooling wind.



* Setting Temp Range : 18°C~30°C (64°F~86°F)

Standard Operation - Power Cooling

It makes the room cool using pleasant and fresh air quickly

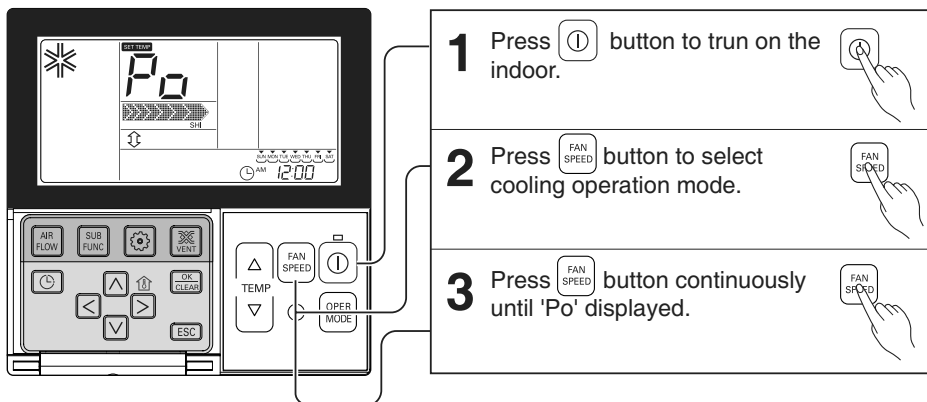


What is Power Cooling?

- Desired temperature: Po (actually 18°C)
 - Wind flow: power wind
 - Wind direction: fix to air-cooling position
- It make room temperature drop fast by running

* Partial product has no power air-cooling function.


Standard Operation - Heating Mode

It supplies warm wind to the indoor

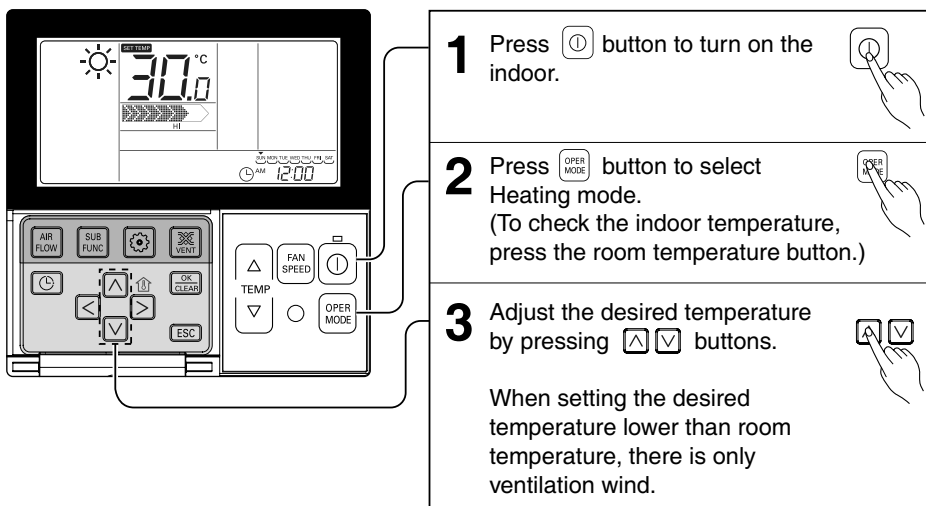

- Heating drive only operates at the cooling and heating model.
- Heating doesn't operate at cooling exclusive model.

Standard Operation - Auto Operation Mode

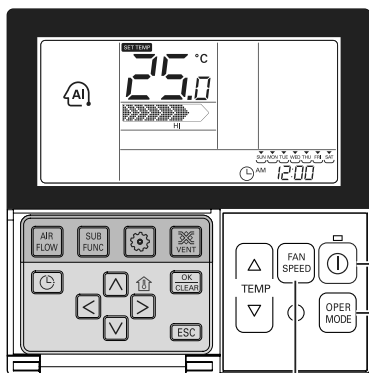

1 Press  button to turn on the indoor.




2 Press  button to select Artificial intelligence Mode.



3 You can adjust the temperature as the picture on the right for cooling and heating model.




4 For the case of cooling exclusive, as the picture on the right, you can adjust the temperature from hot to cold, from "-2" to "2" based on "00".

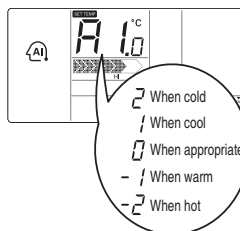

During operating Auto Operation mode :

- We can use the FAN SPEED button
- We can change manually to other operation mode.

Standard Operation - Temperature Setting/Room Temperature Check

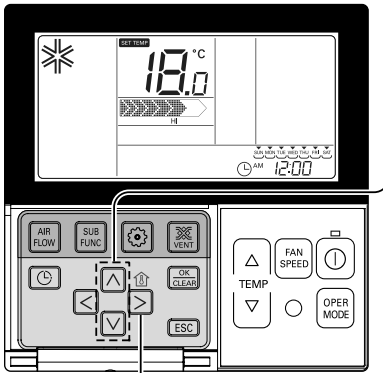

Temperature Setting

- 1 We can simply adjust the desired temperature.
 - Press the buttons to adjust the desired temperature.
 - : Increase 1°C or 2°F per one time pressing
 - : Decrease 1°C or 2°F per one time pressing

- Room temp: Indicate the current room temperature.
- Set temp: Indicate the temperature that user want to set.

* Depend on what kind of controller, the desired temperature can be adjusted at 0.5°C or 1°F.

Cooling operation:

- The cooling mode doesn't work if desired temperature is higher than room temperature Please lower the desired temperature.

Heating operation:


- The heating mode doesn't work if desired temperature is lower than room temperature Please increase the desired temperature.

Room Temperature Check

- 1 Whenever press button, the room temperature will be displayed within 5 seconds.
After 5 seconds, it turns to display the desired temperature.
Because of location of remote controller, the real room temperature and the this displayed value can be different

- For air-cooling drive, from 18°C to 30°C, and for heating drive, from 16°C to 30°C, you can select desired temperature.
- 5°C is proper for the difference between room and outside temperature.

Standard Operation - Airflow Setting

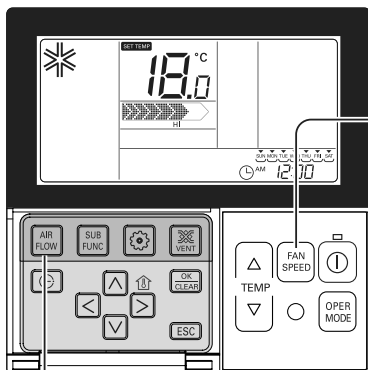


Wind powerfulness : You can simply adjust desired wind powerfulness.

- 1** Please setup desired wind powerfulness by wind powerfulness button.
 - Every time you press wind powerfulness, you can select the wind flow in order of 'feeble→ weak→ weak medium ? medium→ medium strong→ strong ? power → automatic'.
 - The menu item might not be partially selected according to product function.
 - Please refer to product manual for product's detailed function.




Wind direction : You can simply adjust desired wind direction.

- 1** Please set desired wind direction by pressing  button. You can select wind direction of (comfortable wind → Up/Down and Right/Left → Right/Left → Up/Down) by pressing  button. Partial item of wind directions might not be selected according to product function. Please refer to product manual for product's detailed function.



Sub function - Direct Wind / Indirect Wind

It is the function to directly or indirectly control wind direction by body perception sensor.

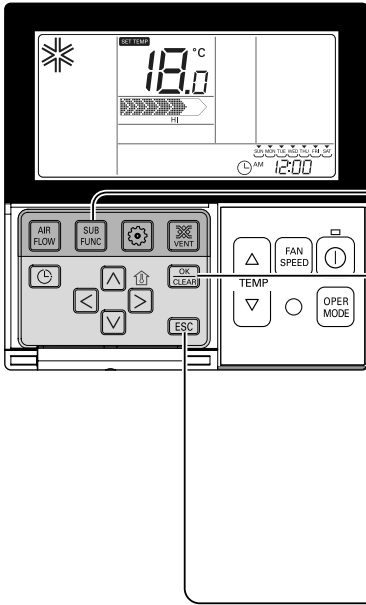

The method to setup direct/indirect wind

- 1** Please press **SUB FUNC** button.



- 2** The icon of direct/indirect wind blinks on the display, and then, if pressing **OK/CLEAN** button, direct/indirect wind icon is fixed and the function is setup.




direct wind



indirect wind

- 3** If pressing **ESC** button, it gets out of setup mode.



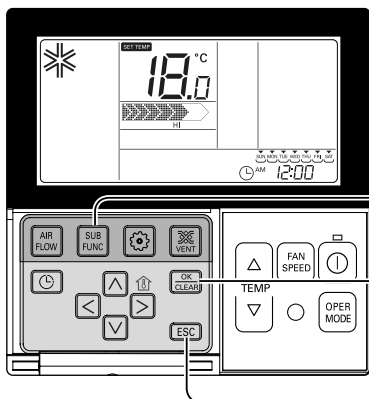

The method to cancel direct/indirect wind

1 Please press **SUB FUNC** button.



2 The icon of direct/indirect wind blinks on the display, and then, if pressing **OK/CLEAR** button, direct/indirect wind icon is removed and the function is cancelled.




3 If pressing **ESC** button, it gets out of setup mode.




* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.

* When exiting without pressing set button, the manipulated value is not reflected.



direct wind




indirect wind

- Direct/indirect wind function is additional function and it might not be indicated or operated at the partial product.
- Direct/indirect wind function is possible only when product is running.

Sub function - Plasma Purification

Only products with humidifying function can use this.

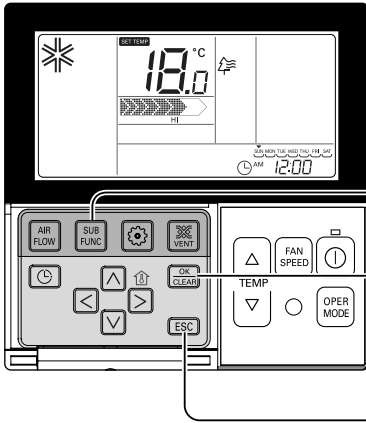

The method to setup cleaning air


- 1 Repeat pressing **SUB FUNC** button until icon flash.
- 2 Operate or cancel Plasma Purification function by pressing **OK/CLEAN** button.
(icon appears/disappears on **SUB FUNCTION** display part up to selection)
- 3 After setting, press **ESC** button to exit.

- * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
- * When exiting without pressing set button, the manipulated value is not reflected.

- Cleaning air function is additional function and it might not be indicated or operated at the partial product.
- Cleaning air function is possible only when product is running.
- If you want independent cleaning air drive, please setup cleaning air by pressing additional drive button at ventilation drive.

Sub function - Humidifier

Only products with humidifying function can use this.

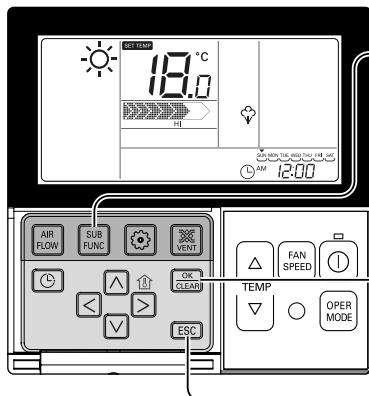

The diagram shows the control panel of a ceiling cassette air conditioner. It features a digital display at the top showing '18.0 °C' and a sun icon. Below the display are several buttons: 'AIR FLOW', 'SUB FUNC', 'MODE', and 'VENT'. There are also directional arrows and an 'OK/CLEAR' button. To the right of the panel, there are three numbered steps with corresponding button presses:


- 1** Repeatedly pressing **SUB FUNC** button until  icon flash.  
- 2** Turn on/off HUMIDIFIER by pressing **OK/CLEAR** button (The  icon will be displayed in case of SETTING option and disappear in reverse case .)  
- 3** Press **ESC** button to exit.  
 * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
 * When exiting without pressing set button, the manipulated value is not

- Humidification function might not be operated at the partial product.

Sub function - Electric Heater

It is a function to strengthen the heating ability by turning on the electric heater during the heating operation.

It can only be set during heating operation.

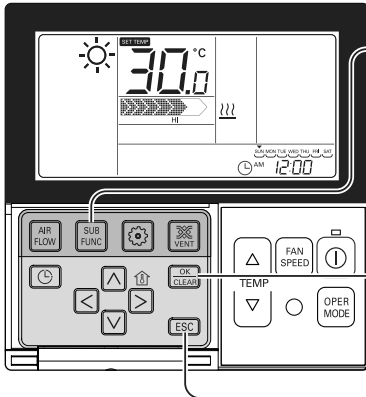

1 Repeatedly pressing **[SUB FUNC]** button until **!!!** icon flash.



2 Turn on/off ELECTRIC HEATER by pressing **[OK CLEAR]** button (the **!!!** icon will be displayed in case of SETTING option and disappear in reverse case .)



3 Press **[ESC]** button to exit.

✱ After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.


✱ When exiting without pressing set button, the manipulated value is not reflected.



- Heater function is additional function and it might not be operated at the partial product.
- The indoor unit product with Aux-Heater function set automatically displays (0) icon during the heating operation.

Sub function - Energy-Saving Cooling Operation

Power saving air-cooling function is the function to improve use's comfortableness and power saving capacity by adjusting desired temperature while running air-cooling

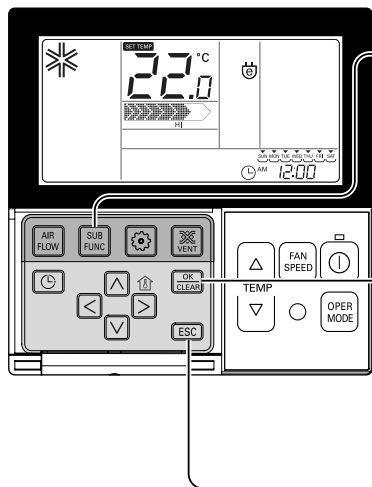

1 Repeatedly pressing **SUB FUNC** button until  icon flash.

2 Operate or cancel Energy-Saving function by pressing **OK CLEAR** button.

(To cancel power saving function, you move to power saving menu by pressing **SUB FUNC** button, and then if pressing **OK CLEAR** button, power saving icon disappears and the function is cancelled.)

3 Press **ESC** button to exit.


* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.

* When exiting without pressing set button, the manipulated value is not reflected.

- Power saving function is possible to setup only when running air-cooling.
- Power saving function might not be operated at the partial product.

Sub function - Robot Cleaning Manual Setup


Robot cleaning function is the function for cleaner attached to the product to automatically clean the filter when using air-conditioner for the specific period of time.

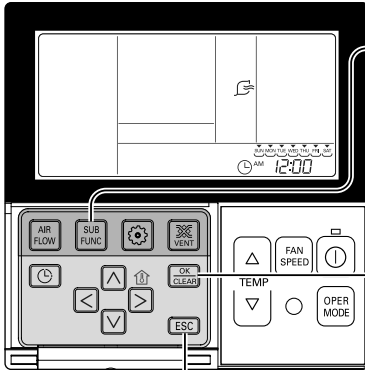

- 1** Repeatedly pressing **SUB FUNC** button until  icon flash.
 
- 2** Turn on/off Smart Clean function by pressing **OK CLEAR** button.
 
 - * When the cleaning is finished, the smart cleaning display disappears automatically.
 - * To cancel robot cleaning manual setup function, you move to power saving menu by pressing **SUB FUNC** button, and then if pressing **OK CLEAR** button, "robot cleaning" icon disappears and the function is cancelled.
- 3** After setting, press **ESC** button to exit.
 
 - * Robot cleaning manual setup function might not be operated at the partial product.
 - * When exiting without pressing set button, the manipulated value is not reflected.

Function setting - Child Lock

It is the function to use preventing children or others from careless using.

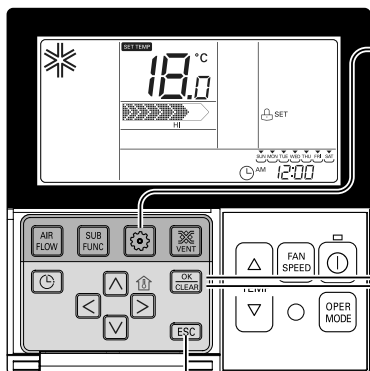


- 1 Press button repeatedly until the is flashing.
- 2 If moving to 'setup' icon area by using , 'setup' icon blinks, and child lock function is setup if pressing button at that time.
- 3 When cancelling lock function, if moving to 'cancel' icon by pressing button and then, pressing , child lock function is cancelled.
- 4 Press button to exit.
 - * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
 - * When exiting without pressing set button, the manipulated value is not reflected.

Function setting - Robot Cleaning Automatic Setup

Robot cleaning function is the function of cleaner attached to the product to automatically clean filter when using air-conditioner for the specific period of time.

Set manual or automatic mode of smart cleaning.

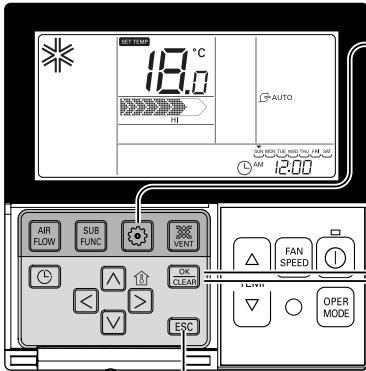


- 1** Press button repeatedly until the is flashing.




- 2** When the flashing, press button to set/clear this function.



Set state : Enable Auto Smart Clean function

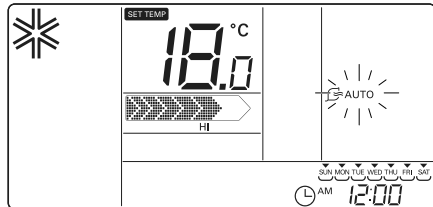

Clear state : Disable Auto Smart Clean function

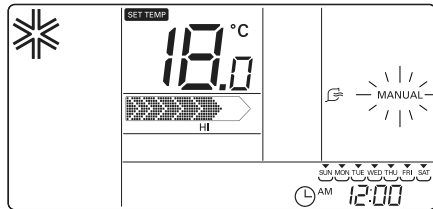

- 3** When returning to manual robot cleaning, manual function is cancelled if moving to 'manual' icon by pressing Right/Left button and then, pressing .


- 4** Press button to exit.
- * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
 - * When exiting without pressing set button, the manipulated value is not reflected.



- Robot cleaning function is an additional function of the product and might not be operated at the partial product.

Function setting - Filter Sign Clear

This function is to clear the indicator of indoor filter cleaning.

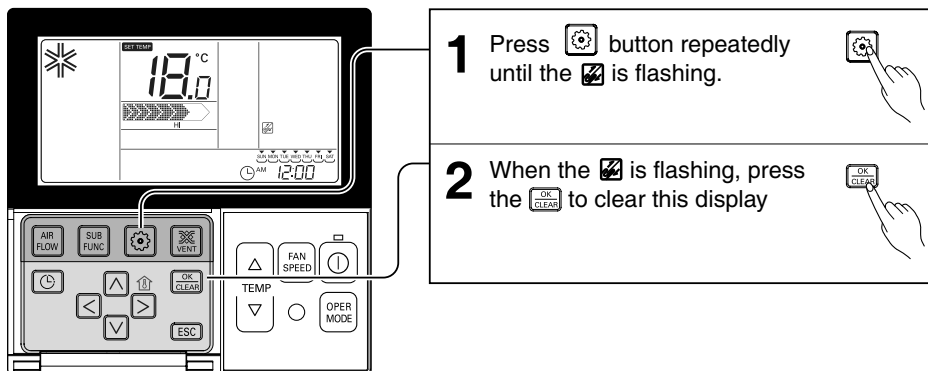


- When filter is covered by dust, it will reduce cooling/heating efficiency and accumulate more electric power. Therefore, do clean the filter whenever cleaning time is expired.

* Filter cleaning indication is automatically cancelled without the separate cancellation after certain period of time.

Function setting - Elevation Grill

This function is to move the indoor filter up/down for cleaning filter.

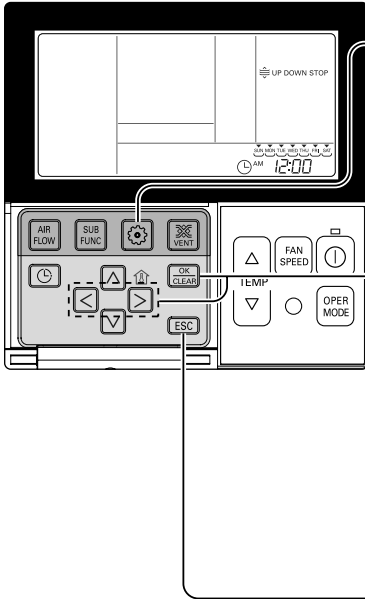


- 1** Press button
 Repeat pressing button until icon flash.
- 2** Move to descent using button and press button will display descent icon and the up/down grill will descent.
- 3** When up/down grill descends to the desired position, move to stop icon using button and press button to stop up/down grill.
- 4** When filter cleaning is finished, fix the filter to the up/down grill, move to ascent icon using button, and press button to ascent up/down grill.
- 5** Press button to exit.
 * After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
 * When exiting without pressing set button, the manipulated value is not reflected.

- Elevation grill function only operates in the indoor unit with the elevation grill.

Function setting - Vane Angle Control

This function is to adjust angle at which airflow is blow out.

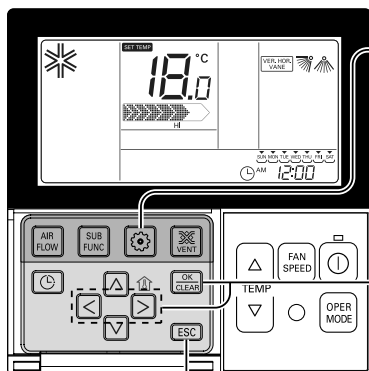

1 Repeat pressing  button until  icon flash.



2 Press   button to select active vane :
1 / 2 / 3 / 4 / All / Standard

Select Vane number using   buttons.

* Vane number : No. 1, 2., 3, 4, all, or standard

- Selected vane is in operation.
- Please verify the operating vane.
- To set the angle of all the vanes, select 'all'.
- To set as the factory default settings, select 'standard'.

3 Select wind angle using   button, and press .

- The boundary of wind angle settings can be changed to 5 levels or 6 levels according to the product.
- When selecting 'standard' for Vane number, the wind angle does not move.

4 Set the wind angles for the remaining vanes as the same as above.

* There are products with vanes with no. 1 and no. 2 only according to the product types.

5 Press  button to exit.

- * After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
- * When exiting without pressing set button, the manipulated value is not reflected.



6 Press  button to complete and active the setting process.
(Airflow direction function will be released whenever setting vane angle)




7 Press  button to exit or system will automatically release without any input after 25 seconds.



Function Setting - Change Temp

Change temperature is the function to setup air-cooling and heating drive automatically changeable according to the temperature at artificial intelligence drive mode.

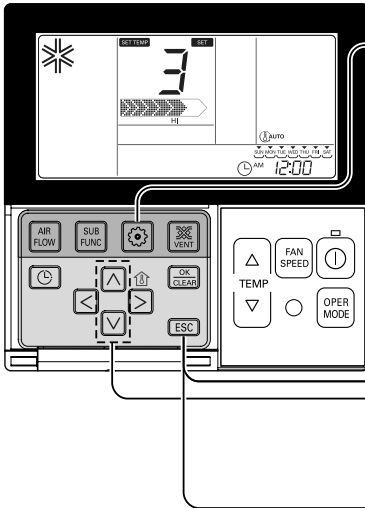


- 1** Repeat pressing  button until  icon flash.



- 2** Press   button to change.
* Converting temp value : 1~7

1 → **3**



- 3** Press  button to complete and active the setting process.


3



- 4** Press  button to exit or system will automatically release without any input after 25 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.



Function setting - Changing Current Time

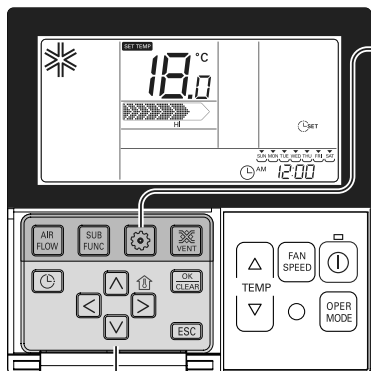

- 1** Please press function setup button. If pressing function setup button repeatedly, it moves to time setup menu. 'Time setup' icon is indicated at that time and date blinks at current time indication area.



Ex) Changing Current Time as
'Monday / AM 10:20'.


- 2** Press key to adjust the current day.



- 3** Press key to move to AM/ PM setting mode (the 'AM/ PM' segment will flash).



- 4** Setting AM/ PM value by pressing button.




- 5** Press button to move to 'Hour' setting mode. (the 'Hour' segment will flash)



- 6** Setting Hour value by pressing button.



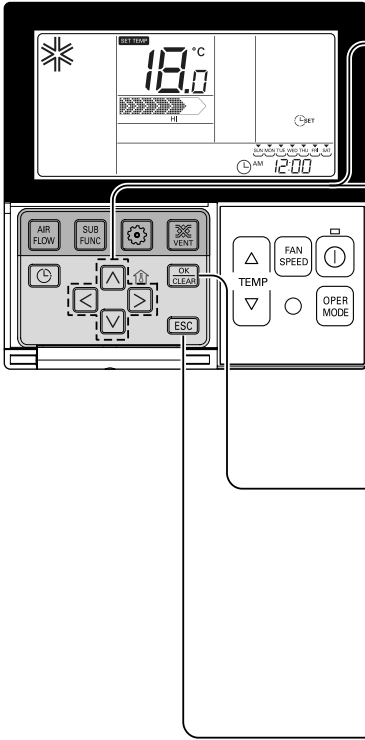

- 7** Press button to move to 'Minute' setting mode. (the 'Minute' segment will flash)



- 8** Setting Minute value by pressing button.



- 9** Press button to finish.




- 10** In the process, press button to release and exit from setting mode.
(In case of exit with incomplete information, it will return to the previous setting)

✱ When exiting without pressing set button, the manipulated value is not reflected.



Function setting - Auto Cleaning

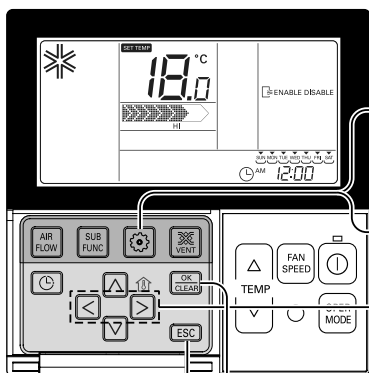


The method to setup Automatic Drying


- 1** Please press button.



- 2** Move to automatic drying menu by pressing button twice. 'Automatic Drying' icon will be displayed and the current status, 'DISABLE' will blink.

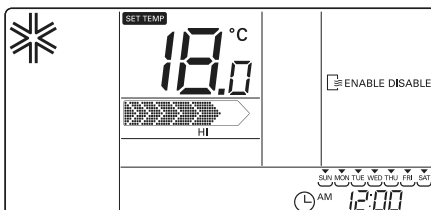

- 3** If moving to 'ABLE' icon area by using button, 'ABLE' icon blinks, and automatic dry function is setup if pressing button at that time.

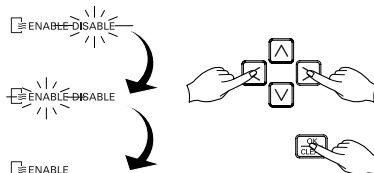

- 4** When returning to automatic dry no use, automatic dry function is cancelled if moving to 'DISABLE' icon by pressing button and then, pressing button.


- 5** If pressing button, it gets out of setup mode.

- * After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
- * When exiting without pressing set button, the manipulated value is not reflected.

• Automatic dry function might not be operated at the partial product.

Programming - Simple Reservation

You can set the reservation conveniently in the units of 1 hour from 1 hour to 7 hours.

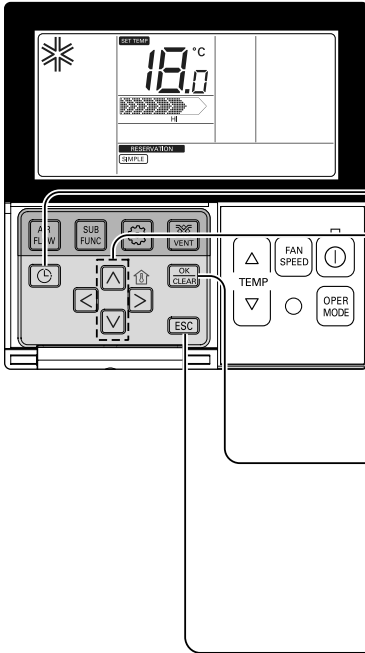


- 1** Press button to enter the Programming mode.
(the **SIMPLE** segment flashing)



Ex) Setting Simple Reservation time as '3'.

- 2** Press button to adjust reservation time.

1 → **3**

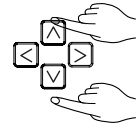

- 3** Press button to finish setting.

3




- 4** Press button to exit.
 * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
 * When exiting without pressing set button, the manipulated value is not reflected.

* When simple reservation setup, product automatically runs or stops after the time that is set.

Programming - Sleep Reservation

Sleep reservation is the function of air-conditioner to run and stop after certain period of time at sleep mode before sleep. When connected to a ventilation product and set the sleep reservation, when it goes to the sleep mode, after the set time has elapsed.

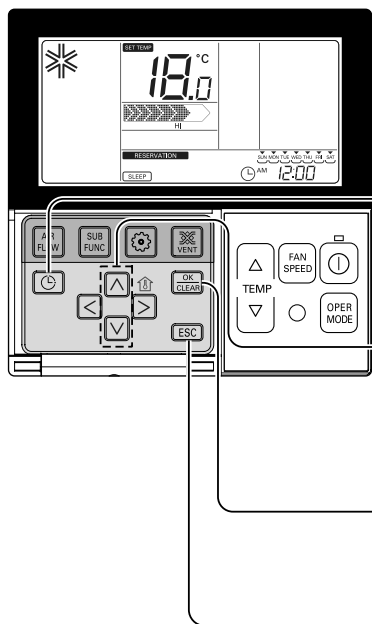

- 1 Press button to enter the Programming mode.
Ex) Setting Sleep Reservation time as '3'.
- 2 Repeat pressing button to enter the SLEEP reservation setting mode.
(segment flashing)
- 3 Press button to adjust reservation time.
The SLEEP reservation time is from 1 to 7 hours.
- 4 Press button to finish setting.
Whenever reservation is done.
- 5 Press button to exit.
* After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.
- If reservation is setup, 'sleep' indication shows up at the lower part of LCD screen.
- 6 If finishing sleep reservation setup, air-conditioner product operates sleep drive and stops after the time that is set.


⚠ CAUTION

Please reserve proper time at sleeping. (Too much air-cooling is not good for your health.)

- Because it automatically adjusts desired temperature for comfortable air-cooling at sleep drive, there could be difference between remote controller's desired temperature and air-conditioner body's desired temperature.
- Sleep reservation operates as off reservation for the product whose temperature adjustment isn't controlled by unit of 0.5°C.

Programming - ON Reservation

Automatically turned On at reserved time that you set.

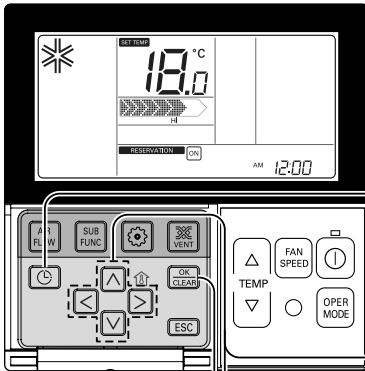

1 Press button.

Ex) Setting ON Reservation
Time as 'AM 10:20'.



2 Repeat pressing button to
enter the ON reservation
setting mode.
(segment flashing)




3 Press button to adjust AM/ PM
setting.

^{AM} 12:00




4 Press button to Hour setting
mode. When the Hour icon flash, please
setting time.
The setting range is within 1~12.

^{AM} 12:00




^{AM} 10:00



5 Press button to shift to Minute
setting mode. When the Minute icon
flash, please setting minute the setting
range is within 00~59.

^{AM} 10:00




^{AM} 10:20



6 Press button to finish setting.

^{AM} 10:20



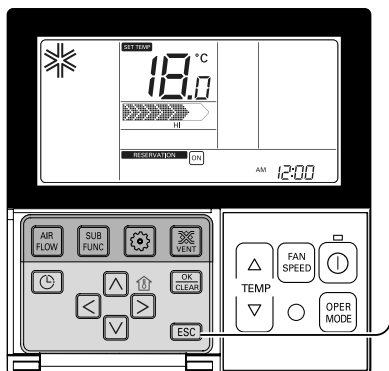


7 Press **[ESC]** button to exit.

- * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
- * When exiting without pressing set button, the manipulated value is not reflected.
 - If reservation is set, 'turned on' indication shows up at the lower part of LCD screen, and air-conditioner product runs at the time that is set.
 - If reservation is cancelled, 'turned on' indication disappears.

Programming - OFF Reservation

Automatically turned Off at reserved time that you set.

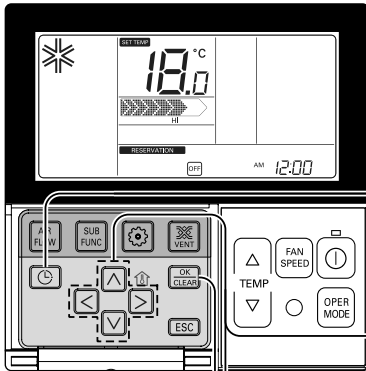

1 Press button.

Ex) Setting OFF Reservation
Time as 'AM 10:20'.




2 Repeatedly pressing button
to enter the OFF reservation
setting mode.
(segment flashing)




3 Press button to adjust AM/ PM
setting.

AM 12:00




4 Press button to shift to Hour
setting mode. When the Hour icon flash,
please setting time.
The setting range is within 1~12.

AM 12:00




AM 10:00




5 Press button to shift to Minute
setting mode. When the Minute icon
flash, please setting minute the setting
range is within 00~59.

AM 10:00




AM 10:20



6 Press button to finish setting.

AM 10:20



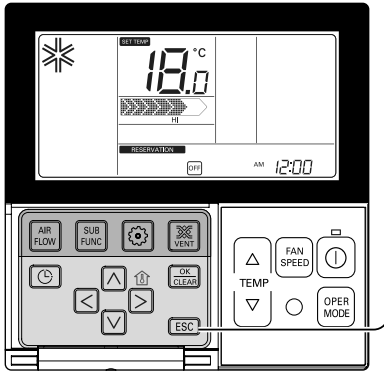

- 7** Press **ESC** button to exit.
- * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
 - * When exiting without pressing set button, the manipulated value is not reflected.
 - If reservation is set, 'turned off' indication shows up at the lower part of LCD screen, and air-conditioner product runs at the time that is set.
 - If reservation is cancelled, 'turned off' indication disappears.


Programming : Weekly Reservation

You can set the daily reservation in weekly unit.


Weekly reservation keeps operating until before you cancel it once you setup

- 1** Please move to reservation setup mode by pressing reservation button.
 ※ You can setup two weekly reservations for one day, and up to fourteen reservations for a week.
 For example, to setup (Tuesday morning 11:30 turned on ~ afternoon 12:30 turned off), you setup in order below.


- 2** Please move to 'weekly' by repeatedly pressing reservation button. 'Weekly' blinks at this time.




- 3** Please select weekly reservation ① or weekly reservation ② by using Δ ∇ button.
 ※ You can setup two reservations, weekly reservation 1 and weekly reservation 2, for a day.

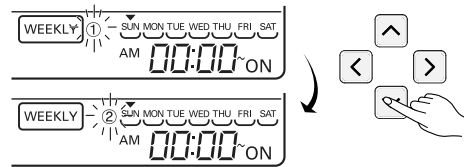


- 4** Please move to 'date' setup part by using $\leftarrow$ $\rightarrow$ button. If 'date' indication blinks, please setup date. You can setup date from Monday to Sunday.

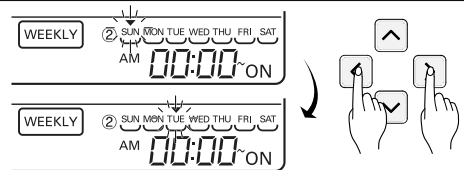

- 5** Please move to 'AM/PM' setup part of turning on by using Δ ∇ button.

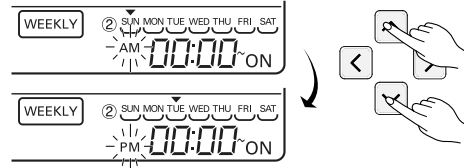

- 6** Please move to 'hour' setup part of turning on by using $\leftarrow$ $\rightarrow$ button.
 - It is the part to setup the time at which air-conditioner is turned on.

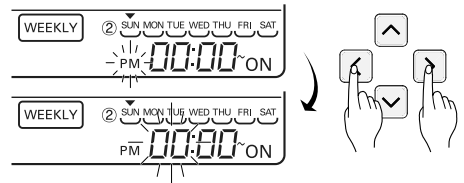


- 7** Please change time by using Δ ∇ button.
 - You can setup hour 0~12.


- 8** Please move to 'minute' setup part of turning on by using $\rightarrow$ button.

- 9** If 'minute' indication blinks, please setup 'minute' by using Δ ∇ button


- 10** Please move to 'AM/PM' setup part of turning off by using  button.
- AM/PM setup is identical with turning on time setup.

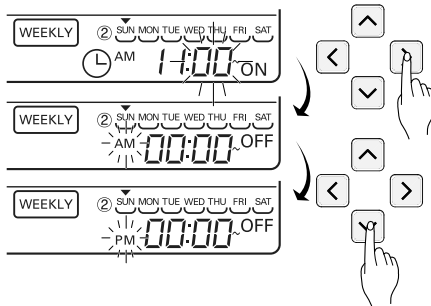

- 11** Please move to 'hour' setup part of turning off by using Right button.
- It is the part to reserve the time at which air-conditioner is turned off.
- If 'hour' indication blinks, please setup 'hour'.

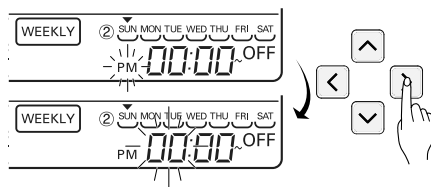


※ Please setup 'hour' and 'minute' identically with the method to setup turning on time.

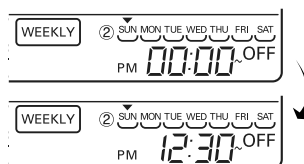

- 12** If finishing weekly reservation setup, please press setup/cancellation button. Weekly reservation setup for the day that you set is finished.


- 13** If you setup with the method identical with above by selecting the day that you'd like to setup, it operates weekly reservation.
If you setup both turning on reservation time and turning off reservation time identically, it doesn't operate reservation drive.

Weekly reservation explanation

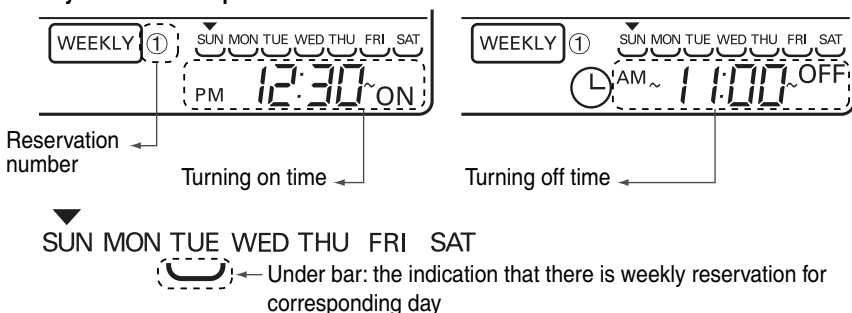

Programming : Holiday Reservation

It automatically stops at reserved day that you set.

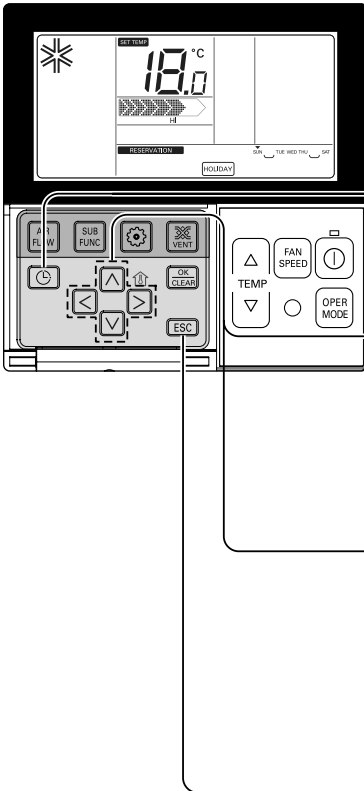


- 1** Please press button.
It enters into reservation
setup mode.



- 2** Please move to 'holiday' by repeatedly
pressing button.



- 3** Please move to 'date' that
you want to setup holiday
by using button.



- 4** Please appoint or cancel holiday by using
 or button.
For example, when you setup
Monday/Friday to holiday
- 'Monday', 'Friday' letter disappears.




- 5** Please press button if finishing
holiday setup.

✳ If it comes to appointed holiday, air-
conditioner automatically stops.
Once you setup holiday appointment,
until before you cancel holiday setup,
air-conditioner automatically stops
within one hour even though you run
air-conditioner.

Owner's instruction

Function setting – 3 Compressor Selection

It is the function for adjusting the number of running outdoor Units linked a indoor unit.

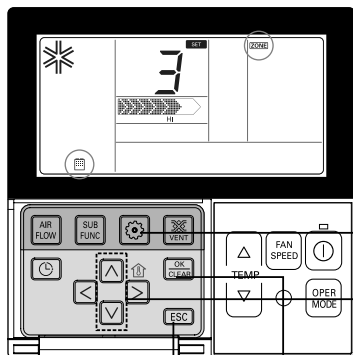


- 1 Repeat Pressing  Button until **[ZONE]** Icon and  Icon ON



- 2 Press button to change.

* Converting comp value : 1~3

1 → **3**



- 3 Press  button to complete and active the setting process

3





- 4 Press  button to exit or system will automatically release without any input after 25 seconds.

* When exiting without pressing set button, the manipulated value is not reflected.




Ventilation Product User Manual - Interlinked Air conditioner and Ventilation

1. Control using remote controller where air conditioner indoor unit and the ventilation product is installed at the same time.

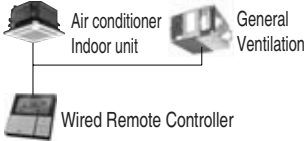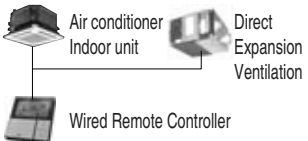	Single Operation	Interlinked Operation
General Ventilation	(General Ventilation Single Operation)  General Ventilation Wired Remote Controller	(General Ventilation Interlinked Operation)  Air conditioner Indoor unit General Ventilation Wired Remote Controller
Direct Expansion Ventilation	(Direct Expansion Ventilation Single Operation)  Direct Expansion Ventilation Wired Remote Controller	(Direct Expansion Ventilation Interlinked Operation)  Air conditioner Indoor unit Direct Expansion Ventilation Wired Remote Controller

* Connecting wires is the same as air conditioner user manual. (Refer to page about Group control)

2. Press 'Ventilation' button on the wired remote controller and enter Ventilation control mode to check the operation of ventilation product.

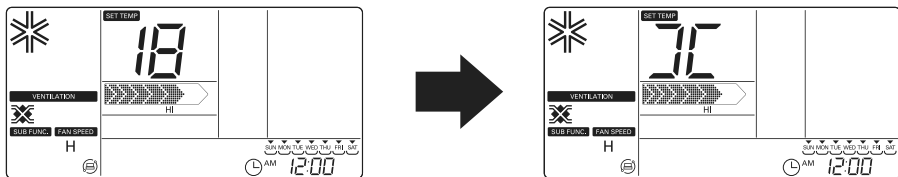


3. To convert back to air conditioner mode, press 'Ventilation' button at the ventilation mode.

- If no button pressed for 15 seconds or more at ventilation mode, it automatically converts back to air conditioner mode.
- Ventilation product represent general ventilation product and direct expansion ventilation product.

Ventilation Product User Manual - Interlinked operation with general ventilation

It is used when air conditioner is interlinked with ventilation product.

It is a function that cools and refreshes indoor air using the ventilation product at the same time operating the air conditioning function.

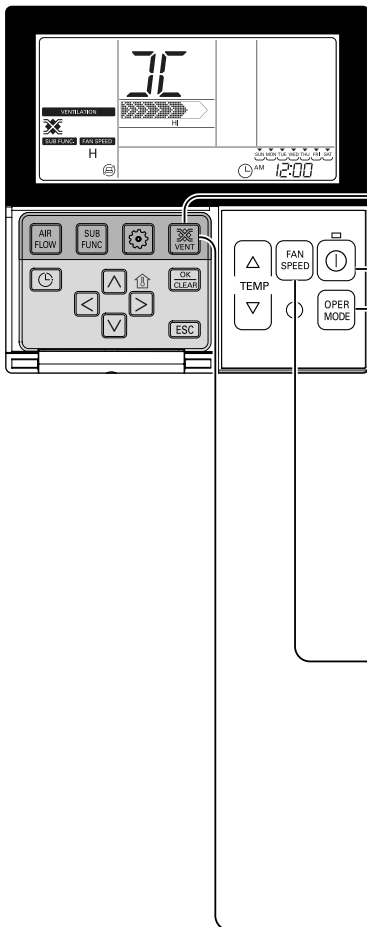

Ventilation interlinked operation

- 1** Press  button on the remote controller control panel.

- It is only used when air conditioner and general ventilation is interlinked. ('Interlinked operation' displayed on the remote controller display)


- 2** Pressing 'Start/Stop' button at ventilation mode will start ventilation.
- 3** Pressing  button will change the ventilation operation mode. Pressing operation selection button will change the mode in the order of 'Heat exchange → normal → automatic'

※ It only displays on the remote controller display when it is in ventilation mode, and it displays the desired temperature when it returns to air condition mode.


- 4** Pressing  button in general ventilation mode will change airflow speed. Pressing airflow speed button will change the mode in the order of 'weak → strong → extra strong'.


If CO2 sensor is installed, it can select from 'weak → strong → very strong → automatic'.


- 5** Changing back to air conditioner mode

 - 1) Automatic Conversion : when no button is pressed for 15 seconds or longer, it automatically converts back to air conditioner mode.
 - 2) Manual Conversion : Pressing  button in ventilation mode will manually convert.

Manual Conversion - Pressing 'Ventilation' button in ventilation mode will manually convert

It is a function to cool and refresh the indoor air using general ventilation product..

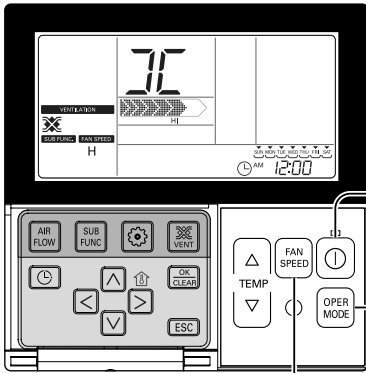

Ventilation single operation

- 1** Press  button on the remote controller.



- 2** Pressing  button will change the ventilation mode.



Ventilation mode	Remote Controller Display	Contents
Heat exchange		Circulate indoor air without loss of heat
Normal		Directly circulate indoor air without going through heat exchanger
Automatic		Circulate indoor air with automatically comparing indoor and outdoor air


- 3** Pressing  button will change the strength of the wind

- Pressing the button can select from 'weak → strong → very strong'.
- If CO2 sensor is installed, it can select from 'weak → strong → very strong → automatic'.



Ventilation Product User Manual - Interlinked Operation with Direct Expansion Ventilation

It can only be used when the air conditioner is interlinked with direct expansion ventilation product.

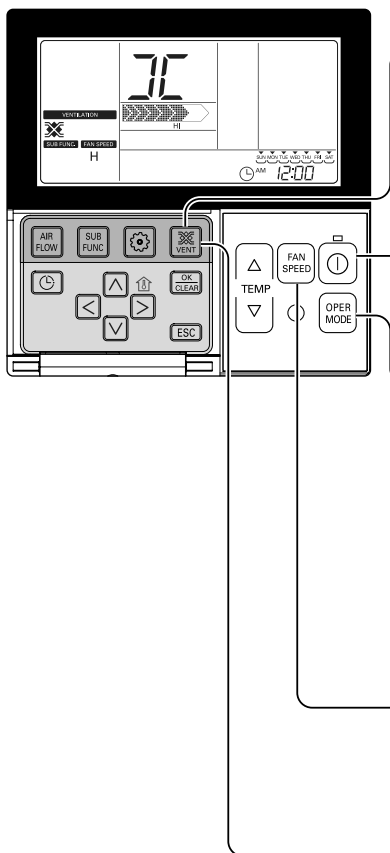

Interlinked Operation with Direct Expansion Ventilation

1 Press  button on the remote controller.
- It is used only when air conditioner and the ventilation product are interlinked. ('Interlinked operation' displayed on the remote controller display)



2 Pressing  button in ventilation mode starts ventilation.



3 Pressing  button in ventilation mode will change the ventilation mode.
- Every time the button is pressed, it changes from 'Heat exchange → normal → automatic'.
※ The display on the remote controller displays only when it is in ventilation mode, and when it converts to air conditioner mode, it displays the desired temperature.




4 Pressing  button in ventilation mode changes the strength of wind.
- Pressing the button can select from 'weak → strong → very strong'.



5 Changing back to air conditioner mode
1) Automatic Conversion : when no button is pressed for 15 seconds or longer, it automatically converts back to air conditioner mode.
2) Manual Conversion : Pressing  button in ventilation mode will manually convert.


Ventilation Product User Manual - Single Operation with Direct Expansion Ventilation

Pressing It performs ventilation operation with cooling or heating at the same time using the heat exchanger inside the direct expansion type ventilation product.

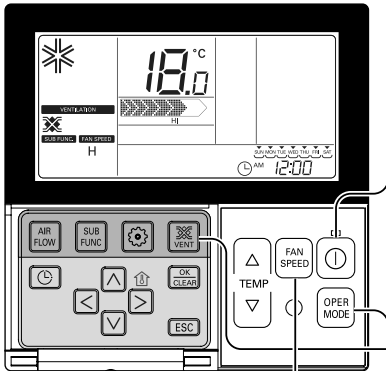

Direct expansion type ventilation single operation

- 1** button on the remote controller. It displays as the figure right side in the direct expansion type ventilation single operation.

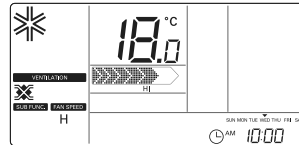

- 2** Pressing button will change the ventilation mode. Pressing the button converts from 'heat exchange → normal → automatic'.



Ventilation mode	Remote Controller Display	Contents
Heat exchange		Circulate indoor air without loss of heat
Normal		Directly circulate indoor air without going through heat exchanger
Automatic		Circulate indoor air with automatically comparing indoor and outdoor air

* The 88 segment display above is only displayed when it is in direct expansion type ventilation single operation and the air conditioner is stopped.

- 3** Pressing button will change operation mode.
- Pressing the button will convert from 'cooling → heating → automatic → stop'.





- 4** Pressing button in ventilation mode changes the strength of wind.
- Pressing the button can select from 'weak → strong → very strong'.
* Cooling/heating operation selection and the desired temperature can be adjusted in direct expansion type ventilation single operation.
* Refer to the basic operation - temperature adjustment for changing desired temperature.



Ventilation Product Additional Operations - Fast / Power Saving


It is a function to operate ventilation function more efficiently through the ventilation additional functions, fast / power saving settings.

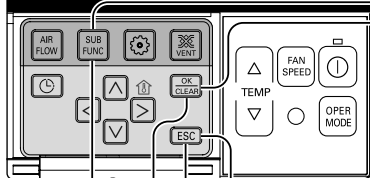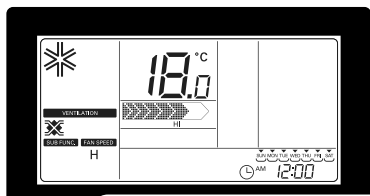

Fast : ventilates fast

- 1 Press **SUB FUNC** button in ventilation mode.
- It converts in the order of 'fast → power saving' in ventilation mode.

- 2 'Fast' is blinking on the display, and pressing **OK/CLEAR** button will stabilize 'fast' icon, and the function is set.

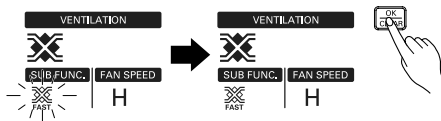


- 3 Pressing **ESC** button will exit the settings.



Power Saving : efficiently ventilates and performs power savings.

- 1 Press **SUB FUNC** button in ventilation mode.
- It converts in the order of 'fast → power saving' in ventilation mode.

- 2 'Power Saving' is blinking on the display, and pressing **OK/CLEAR** button will stabilize 'Power Saving' icon, and the function is set.




- 3 Pressing **ESC** button will exit the settings.




- * General ventilation and direct expansion ventilation have the same additional functions.
- * Ventilation/Heater/Humidifier additional function settings are the same as air conditioner.

Ventilation Product Function Settings

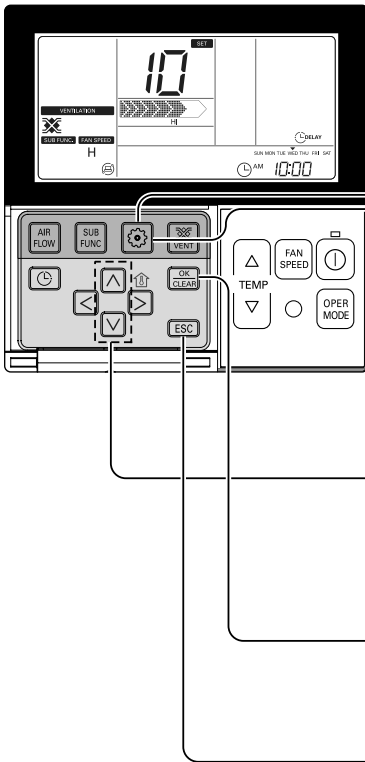


Delay Time : It operates after delay time in ventilation operation.


1 Press Settings button.



2 Pressing button repeatedly will move to the delay time menu.
Then delay time icon is displayed, and the

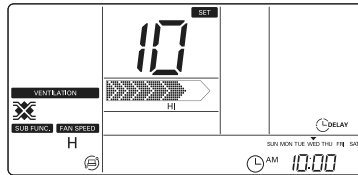

3 Pressing button will change the delay time settings.
* Boundary of delay time settings : 00 ~ 60 minutes (in the units of 1 minute)



4 When the desired delay time is displayed, press button to finish the settings.



5 Press button when the setting is finished.




* If no button input for 1 minute after the setting, it exits the settings mode automatically.

* When exiting without pressing set button, the manipulated value is not reflected.

Lock, Filter Cleaning, Time Setting, Converting Temperature

- * Refer to 'Function Settings - Lock Settings' part for lock function.
- * Refer to 'Function Settings - Filter Cleaning Display Release' part for Filter Cleaning function.
- * Refer to 'Function Settings - Time Settings' part for Time Setting function.
- * Refer to 'Function Settings - Temperature Conversion' part for Temperature Conversion function.

Ventilation Product Reservations Settings

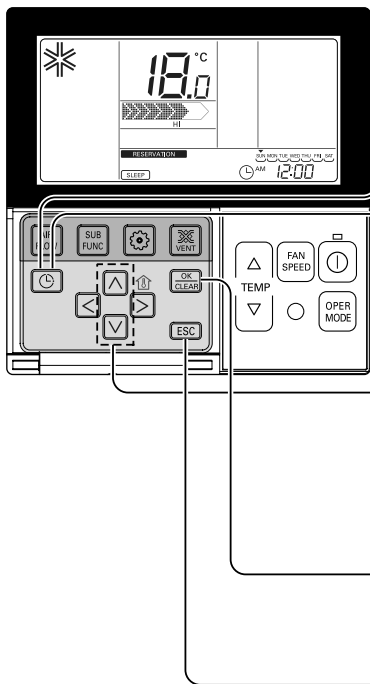

Sleep Reservations : Sets to operate ventilation lightly during the sleep.



- 1** Press button to enter the reservation settings mode.



- 2** Press button again to move to Sleep. 'Sleep' icon blinks and the reservation time is displayed.



- 3** Use button to set the reservation time. Reservation time can be set between 1 ~ 12 hours.




- 4** When Sleep reservation setting is finished, press button.



- 5** Pressing button will exit the settings mode.



- * If no button input for 60 seconds after the setting, it exits the settings mode automatically.
- * When exiting without pressing set button, the manipulated value is not reflected.
- When the reservation is set, 'Sleep' is displayed at the bottom of LCD screen.



- When the reservation is cancelled, 'Sleep' mark disappears.

- 6** When the sleep reservation setting is finished, it operates lightly for the set time.


Simple, ON, OFF, Weekdays, Holidays Reservations

* Please refer to the Reservation Settings part of the air conditioner for Simple, ON, OFF, Weekdays, Holidays Reservations

Ventilation Product Installer Setting Functions - Entering Method

⚠ CAUTION


- Installer setting mode is a mode to set the detail functions of the remote controller.
- When the installer settings are not set properly, it may cause the fault of the product, injury to the user, or damage to the property.
- It must be set by a certified technician, and when it is installed without certified technician or changed discretionally, all of the problems are the responsibilities of the installer, and we do not provide service free of charge.

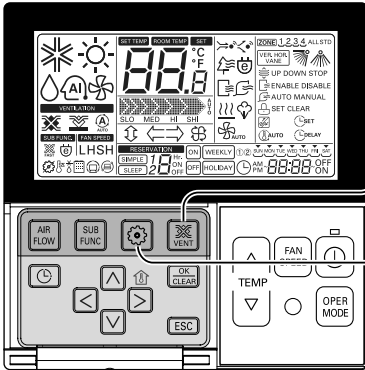

1 Press  button to enter ventilation mode.

2 Pressing  button down for more than 3 seconds will enter the settings mode.
- Pressing once shortly will enter the user settings mode. You must press down for more than 3 seconds.

3 When you enter the installer settings mode, the data value that can be set is displayed at the lower right corner of LCD screen.

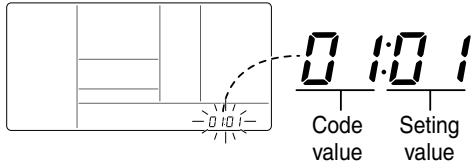

- Some categories of the menu may not be displayed according to the function of the product, or the menu name may be different.


Simple, ON, OFF, Weekdays, Holidays Reservations

* Please refer to the Reservation Settings part of the air conditioner for Simple, ON, OFF, Weekdays, Holidays Reservations


Different mode drive

Different mode drive is a phenomenon taking place when indoor units' drive mode is different in the case that a few indoor units are set up at one AHU.


(Different mode drive doesn't show up at cooling exclusive model.)

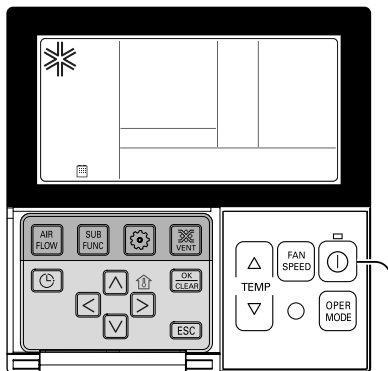

- 1 While a few indoor units are running air-cooling at one AHU, it doesn't operate heating drive if one indoor unit operates heating drive.

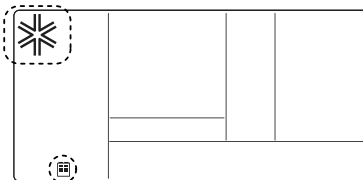

- 2 While a few indoor units are running heating at one AHU, it doesn't run if one indoor unit runs cooling or humidity removal. It is the indication that it is operating heating drive at AHU.

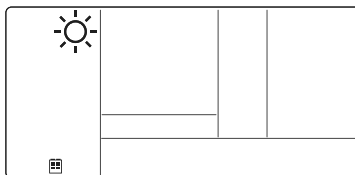

- 3 If pressing  button, indoor unit automatically runs at the mode that different indoor units are running after about 5 seconds and operates.



Checkups before reporting breakdown

Please first check the items below for product's defects before consulting to service center.

Symptoms	Check-up	Management
It has no power on.	• Is air-conditioner's power on?	• Please check up circuit breaker. • Please check up wire remote controller's setup condition.
	• Are air-conditioner and remote controller properly connected with cable?	• Please connect air-conditioner and remote controller cable.
	• Is cable connection correct?	• Please check again referring to setup method at the manual.
It doesn't operate reservation drive.	• Did you correctly setup time?	• Please set up current time correctly.
	• Did you correctly make a reservation?	• Please set up again referring to the manual.
It doesn't release cool wind.	• Is desired temperature setup lower than current temperature?	• Please set up desired temperature lower than current temperature.
Air-conditioner automatically runs or stops.	• Isn't reservation drive setup?	• Please cancel reservation drive.
Error is indicated on remote controller indication window.	• Does remote controller indication window indicate 'CH03'?	• Please check again wire remote controller's setup condition. • Please check again connection condition of air-conditioner and remote controller cable.

Maintenance and Service

CAUTION Before performing any maintenance, turn off the main power to the system.

Indoor Unit

Grille, Case and Remote Control

□ Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTICE

Supply power must be disconnected before cleaning the indoor unit.


Air Filters

The air filters behind the front grille should be checked and cleaned once every 2 weeks or more often if necessary.



■ Never use any of the followings:

- Water hotter than 40°C.
Could cause deformation and/or discoloration.
- Volatile substances.
Could damage the surfaces of the air conditioner.

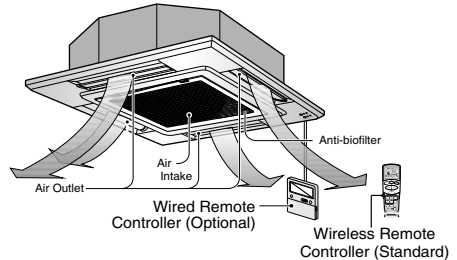

1 Remove the Air filters.

- ✱ Take hold of the tab and pull slightly forward to remove the filter.



CAUTION: When the air filter is to be removed, do not touch the metal parts of the indoor unit.
It may cause an injury.

2 Clean dirt from the air filter using a vacuum cleaner or washing with water.

- ㄱ If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
- ㄴ If hot water (50°C or more) is used, it may be deformed.

3 After washing with water, dry well in the shade.

Do not expose the air filter to direct sunlight or heat from a fire when drying it.


4 Install the air filter.

Outdoor Unit

The heat exchanger coils and panel vents of the outdoor unit should be checked regularly. If clogged with dirt or soot, the heat exchanger and panel vents may be professionally steam cleaned.

NOTICE

Dirty or clogged coils will reduce the operating efficiency of the system and cause higher operating costs.

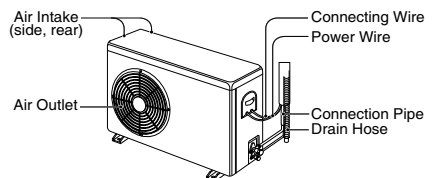

When the air conditioner is not going to be used for a long time.

When air conditioner is not going to be used for a long time.

1. Operate the air conditioner at the following settings for 2 to 3 hours.

- Type of operation: Fan operation mode.
- This will dry out the internal mechanisms.

2. Turn off the breaker.



CAUTION Turn off the circuit breaker when the air conditioner is not going to be used for a long time. Dirt may collect and may cause a fire.

Helpful information

The air filters and your electric bill.

If the air filters become clogged with dust, the cooling capacity will drop, and 6% of the electricity used to operate the air conditioner will be wasted.

When the air conditioner is to be used again.

1. Clean the air filter and install it in the indoor unit.
2. Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.
3. Check that the ground wire is connected correctly. It may be connect to the indoor unit side.

Operation Tips

Do not overcool the room.

This is not good for your health and wastes electricity.

Keep blinds or curtains closed.

Do not let direct sunshine enter the room when the air conditioner is in operation.

Keep the room temperature uniform.

Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.

Make sure that the doors and windows are shut tight.

Avoid opening doors and windows as much as possible to keep the cool air in the room.

Clean the air filter regularly.

Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.

Ventilate the room occasionally.

Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the fault persists, please contact your dealer or service center.

Case	Explanation	See page
The air conditioner does not operate.	• Have you made a mistake in timer operation?	13~28
	• Has the fuse blown or has the circuit breaker been tripped?	-
The room has a peculiar odor.	• Check that this is not a damp smell exuded by the walls, carpet, furniture, or cloth items in the room.	-
It seems that condensation is leaking from the air conditioner.	• Condensation occurs when the airflow from the air conditioner cools the warm room air.	-
Air conditioner does not operate for about 3 minutes when restarted.	• This is the protector of the mechanism. • Wait about three minutes and operation will begin.	-
Does not cool or heat effectively.	• Is the air filter dirty? See air filter cleaning instructions.	24
	• The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down.	-
	• Has the temperature been set incorrectly?	22
	• Are the indoor unit's air inlet or outlet vents obstructed?	-
The air conditioner operation is noisy.	• For a noise that sounds like water flowing. -This is the sound of freon flowing inside the air conditioner unit.	-
	• For a noise that sounds like the compressed air releasing into atmosphere. -This is the sound of the dehumidifying water being processed inside the air conditioning unit.	-
Remote control display is faint, or no display at all.	• Are the batteries depleted? • Are the batteries inserted in the opposite (+) and (-) directions?	-
Crack sound is heard.	• This sound is generated by the expansion/constriction of the front panel, etc. due to changes of temperature.	-
Filter sign lamp (LED) is ON.	• Cleaning the filter, press the Timer button and ◀ button of wired remote controller at the same time for 3 sec.	-



Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the fault persists, please contact your dealer or service center.

Case	Explanation	See page
The air conditioner does not operate.	• Have you made a mistake in timer operation?	21
	• Has the fuse blown or has the circuit breaker been tripped?	
The room has a peculiar odor.	• Check that this is not a damp smell exuded by the walls, carpet, furniture, or cloth items in the room.	-
It seems that condensation is leaking from the air conditioner.	• Condensation occurs when the airflow from the air conditioner cools the warm room air.	-
Air conditioner does not operate for about 3 minutes when restarted.	• This is the protector of the mechanism.	-
Does not cool or heat effectively.	• Is the air filter dirty? See air filter cleaning instructions.	33
	• The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down.	
	• Has the temperature been set incorrectly?	15
	• Are the indoor unit's air inlet or outlet vents obstructed?	
The air conditioner operation is noisy.	• For a noise that sounds like water flowing. -This is the sound of freon flowing inside the air conditioner unit.	-
	• For a noise that sounds like the compressed air releasing into atmosphere. -This is the sound of the dehumidifying water being processed inside the air conditioning unit.	
Remote control display is faint, or no display at all.	• Are the batteries depleted?	-
Crack sound is heard.	• Are the batteries inserted in the opposite (+) and (-) directions?	-
	• This sound is generated by the expansion/constriction of the front panel, etc. due to changes of temperature.	
Filter sign lamp (LED) is ON.	• Cleaning the filter, press the Timer button and ► button of wired remote controller at the same time for 3 sec.	-

When the air conditioner is not going to be used for a long time.

When air conditioner is not going to be used for a long time.

1. Operate the air conditioner at the following settings for 2 to 3 hours.
 - Type of operation: Fan operation mode.
 - This will dry out the internal mechanisms.

2. Turn off the breaker.

 **CAUTION** Turn off the circuit breaker when the air conditioner is not going to be used for a long time. Dirt may collect and may cause a fire.

Helpful information

The air filters and your electric bill.
If the air filters become clogged with dust, the cooling capacity will drop, and 6% of the electricity used to operate the air conditioner will be wasted.

When the air conditioner is to be used again.

1. Clean the air filter and install it in the indoor unit.

2. Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.

3. Check that the ground wire is connected correctly. It may be connect to the indoor unit side.

Operation Tips

Do not overcool the room.

This is not good for your health and wastes electricity.

Keep blinds or curtains closed.

Do not let direct sunshine enter the room when the air conditioner is in operation.

Keep the room temperature uniform.

Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.

Make sure that the doors and windows are shut tight.

Avoid opening doors and windows as much as possible to keep the cool air in the room.

Clean the air filter regularly.
Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.

Ventilate the room occasionally.

Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

Maintenance and Service

CAUTION Before performing any maintenance, turn off the main power to the system.

Indoor Unit

Grille, Case and Remote Controller


- Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTICE

Supply power must be disconnected before cleaning the indoor unit.

Air Filters

The air filters behind the front grille should be checked and cleaned once every 2 weeks or more often if necessary.

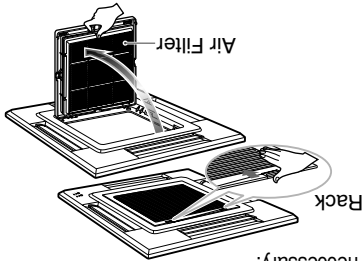

Never use any of the followings:

- Water hotter than 40°C.
- Could cause deformation and/or discoloration.
- Volatile substances. Could damage the surfaces of the air conditioner.



1 Remove the Air filters.

Take hold of the tab and pull slightly forward to remove the filter.

CAUTION: When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.




2 Clean dirt from the air filter using a vacuum cleaner or washing with water.

If dirt is conspicuous, wash with a neutral detergent in lukewarm water. If hot water (50°C or more) is used, it may be deformed.

3 After washing with water, dry well in the shade.

Do not expose the air filter to direct sunlight or heat from a fire when drying it.

4 Install the air filter.

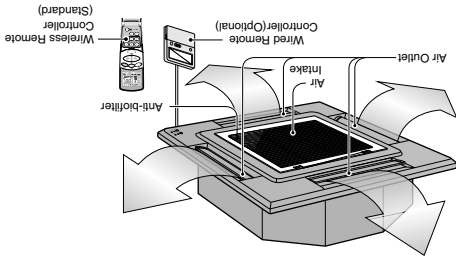


Outdoor Unit

Dirty or clogged coils will reduce the operating efficiency of the system and cause higher operating costs.

NOTICE

The heat exchanger coils and panel vents of the outdoor unit should be checked regularly. If clogged with dirt or soot, the heat exchanger and panel vents may be professionally steam cleaned.

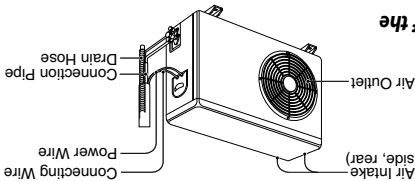

Installation guide at the seaside




CAUTION:


1. Air conditioners should not be installed in areas where corrosive gases, such as acid or alkaline gas, are produced.
2. Do not install the product where it could be exposed to sea wind (salty wind) directly. It can result corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient performance.
3. If outdoor unit is installed close to the seaside, it should avoid direct exposure to the sea wind. Otherwise it needs additional anticorrosion treatment on the heat exchanger.

Selecting the location(Outdoor Unit)

- 1) If the outdoor unit is to be installed close to the seaside, direct exposure to the sea wind should be avoided. Install the outdoor unit on the opposite side of the sea wind direction.

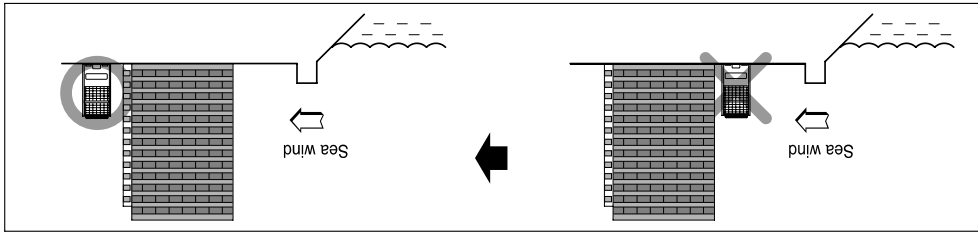



- 2) In case, to install the outdoor unit on the seaside, set up a windbreak not to be exposed to the sea wind.

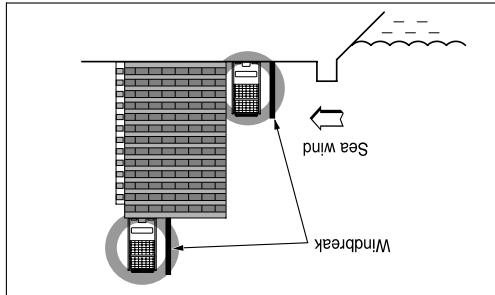

- 3) Select a well-drained place.

1. If you can't meet above guide line in the seaside installation, please contact LG Electronics for the additional anticorrosion treatment.
2. Periodic (more than once/year) cleaning of the dust or salt particles stuck on the heat exchanger by using water.

- 3) Evaluation of the performance
1. Measure the temperature of the intake and discharge air;
 2. Ensure the difference between the intake temperature and the discharge one is more than 8°C (Cooling) or reversely (Heating).

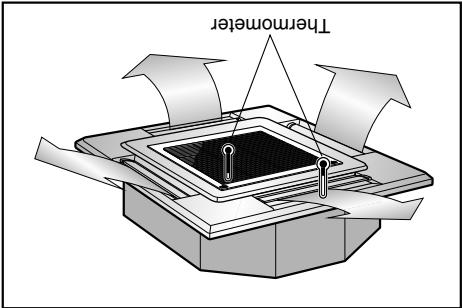

After the confirmation of the above conditions, prepare the wiring as follows:

- 1) Never fail to have an individual power specialized for the air conditioner. As for the method of wiring, be guided by the circuit diagram pasted on the inside of control box cover.
- 2) Provide a circuit breaker switch between power source and the unit.
- 3) The screw which fasten the wiring in the casing of electrical fittings are liable to come loose from vibrations to which the unit is subjected during the course of transportation. Check them and make sure that they are all tightly fastened. (If they are loose, it could give rise to burn-out of the wires.)
- 4) Specification of power source
- 5) Confirm that electrical capacity is sufficient.
- 6) Be sure that the starting voltage is maintained at more than 90 percent of the rated voltage marked on the name plate.
- 7) Confirm that the cable thickness is as specified in the power sources specification. (Particularly note the relation between cable length and thickness.)
- 8) Never fail to equip a leakage breaker where it is wet or moist.
- 9) The following troubles would be caused by voltage drop-down.
 - Vibration of a magnetic switch, damage on the contact point thereof, fuse breaking, disturbance to the normal function of a overload protection device.
 - Proper starting power is not given to the compressor.

HAND OVER

Teach the customer the operation and maintenance procedures, using the operation manual (air filter cleaning, temperature control, etc.).

Test running

3. Once the desired vacuum is created. Disconnect the vacuum pump and open the liquid side valve stem by turning it to counter-clockwise direction with service wrench.
4. Open completely the gas side valve by turning to counter-clockwise with service valve wrench.
5. Remove slowly the charge hose connected to the gas side service port (to release the pressure).
6. Replace back the flare nut and its bonnet on the gas side service port. Fasten the flare nut with adjustable wrench to prevent any leakage from the system.
7. Fasten back the valve cap on both gas and liquid side service valves.

1) PRECAUTIONS IN TEST RUN

- The initial power supply must provide at least 90% of the rated voltage.

CAUTION:



For test run, carry out the cooling operation firstly even during heating season. If heating operation is carried out firstly, it leads to the trouble of compressor. Then attention must be paid. Carry out the test run more than 5 minutes without fail.

(Test run will be cancelled 18 minutes later automatically)

- The test run is started by pressing the room temperature checking button and down timer button for 3 seconds at the same time.
- To cancel the test run, press any button.

CHECK THE FOLLOWING ITEMS WHEN INSTALLATION IS COMPLETED

- After completing work, be sure to measure and record trial run properties, and store measured data, etc.
- Measuring items are room temperature, outside temperature, suction temperature, blow out temperature, wind velocity, wind volume, voltage, current, presence of abnormal vibration and noise, operating pressure, piping temperature, compressive pressure.
- As to the structure and appearance, check following items.

- ☐ Is the circulation of air adequate?
- ☐ Is the draining smooth?
- ☐ Is the heat insulation complete
- ☐ (refrigerant and drain piping)?
- ☐ Is there any leakage of refrigerant?
- ☐ Is the remote controller switch operated?
- ☐ Is there any faulty wiring?
- ☐ Are not terminal screws loosened?

M4.....118N-cm(12kgf-cm) M5.....196N-cm(20kgf-cm) M6.....245N-cm(25kgf-cm) M8.....588N-cm(60kgf-cm)

2) Connection of power supply

1. Connect the power supply cord to the independent power supply.
- Circuit breaker is required.
2. Operate the unit for 15 minutes or more.


CAUTION:

To avoid nitrogen entering the refrigerant system in a liquid state, the top of the cylinder must be higher than its bottom when you pressurize the system. Usually, the cylinder is used in a vertical standing position.

7. Check for leakage with Liquid soap solution. Do the leakage test at all joints of tubing (indoor and outdoor) and on the service valve (both gas and liquid side).


Soap water method


1. Remove the caps from the 2-way and 3-way valves.
2. Remove the service-port cap from the 3-way valve.
3. To open the 2-way valve turn the valve stem counterclockwise approximately 90°, wait for about 2~3 sec, and close it.
4. Apply a soap water or a liquid neutral detergent on the indoor unit connection or outdoor unit connections by a soft brush to check for leakage of the connecting points of the piping.
5. If bubbles come out, the pipes have leakage

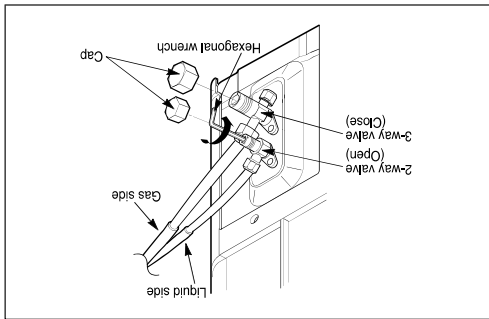

Evacuation

1. If the system is found free from all leakages, relieve the nitrogen pressure by loosening the charge hose connector at nitrogen cylinder. Disconnect the hose from cylinder when pressure reaches to normal state.
2. Evacuation: Connect the charge hose end to the vacuum pump and evacuate the connecting of the and indoor unit. Check that the "Lo" knob of manifold is open. Run the vacuum pump. Confirm the "Lo" knob of the manifold valve is open. Then, run the vacuum pump. The operation time for evacuation varies with tubing length and capacity of the pump.
- The degree of vacuum should be under 0.8 Torr.
- When the desired vacuum is reached, close the "Lo" knob of the manifold valve and stop the vacuum pump.

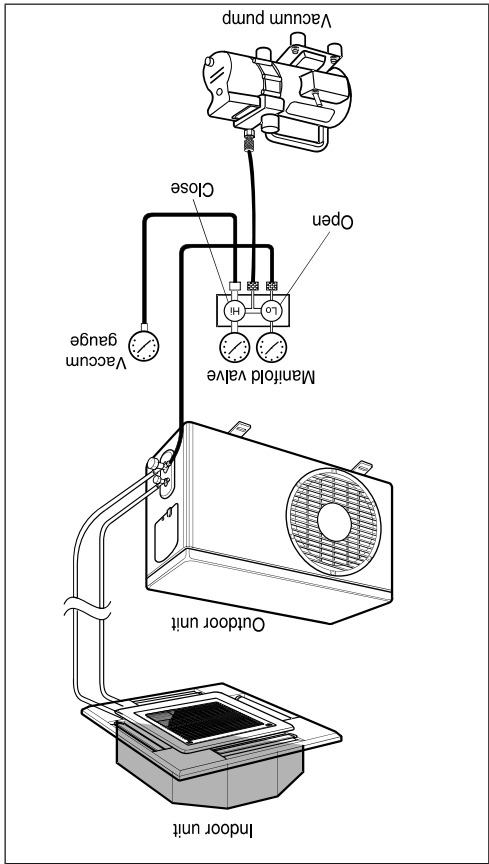

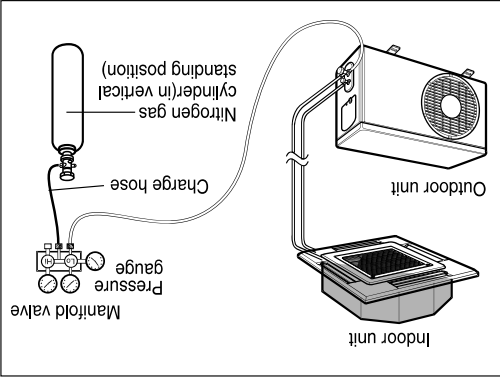

- CAUTION:**  Be sure to use a manifold valve for air purging. If it is not available, use a stop valve for this purpose. The "Hi" knob of the manifold valve must always be kept close.
- And connect the Nitrogen cylinder to the service port with charge hoses to the manifold gauge.
 - Pressurize the system to no more than 150 P.S.I.G with dry nitrogen gas. Close the nitrogen cylinder valve when it shows reading of 150 P.S.I.G.

- Check that both liquid and gas pipe between indoor and outdoor have been properly connected.
 - Remove the service valve cap from both the gas and liquid side on the outdoor unit.
 - Confirm that both the liquid and gas side valve are set to the closed position.
 - Connect the manifold valve (with pressure gauge) to the gas pipe side.
- Air purging with vacuum pump**

- Pressure in the system rises.
 - Operating current rises.
 - Cooling (or heating) efficiency drops.
 - Moisture in the refrigerant circuit may freeze and block capillary tubing.
 - Water may lead to corrosion of parts in the refrigeration system.
- Therefore, after evacuating the system, take a leak test for the piping and tubing between the indoor and outdoor unit.


The air and moisture remaining in the refrigerant system have undesirable effects as indicated below.

Air purging

Air Purging


- Tape the Piping and Connecting cable from bottom to top.
- Form the piping gathered by taping along the exterior wall, and make the trap prevent water from entering into the room.
- Fix the piping onto the wall by saddle or equivalent.

In case of the Outdoor Unit being installed above position of the Indoor Unit.

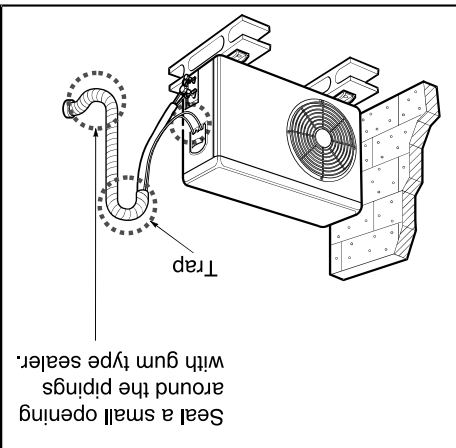

HEAT INSULATION

1. Use the heat insulation material for the refrigerant piping which has an excellent heat-resistance (over 120°C).
2. Precautions in high humidity circumstance:
This air conditioner has been tested according to the "KS Standard Conditions with Mist" and confirmed that there is not any default. However, if it is operated for a long time in high humid atmosphere (dew point temperature: more than 23°C), water drops are liable to fall. In this case, add heat insulation material according to the following procedure:
 - Heat insulation material to be prepared... Adiabatic EPDM or NBR with thickness 10 to 20mm.
 - Stick EPDM or NBR on all air conditioners that are located in ceiling atmosphere.
 - In addition to the normal heat insulation (thickness: more than 8mm) for refrigerant piping (gas piping: thick piping) and drain piping, add further 10mm to 30mm thickness material.

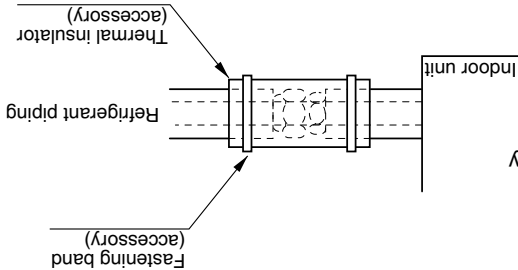



FORM THE PIPINGS

1. Wrap the connecting portion of indoor unit with the insulation material and secure it with two Plastic Bands. (for the right pipings)
 - If you want to connect an additional drain hose, the end of the drain-outlet should keep distance from the ground. (Do not dip it into the water, and fix it on the wall to avoid swinging in the wind.)

In case of the Outdoor unit being installed below position of the Indoor unit.


2. Tape the PIPINGS, drain hose and Connecting Cable from bottom to top.
3. Form the pipings gathered by taping along the exterior wall and fix it onto the wall by saddle or equivalent.

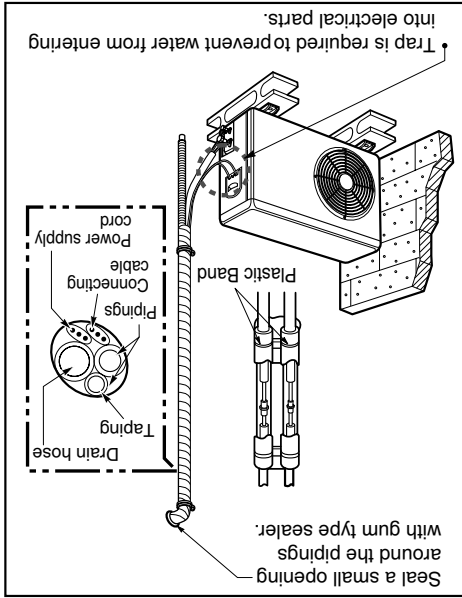

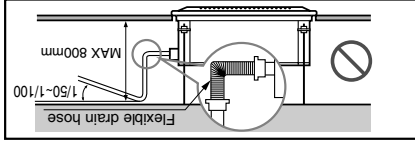

CAUTION: The supplied flexible drain hose should not be curved, neither screwed. The curved or screwed hose may cause a leakage of water.


- Connect the main drain pipe to the exterior and leave it provisionally until the test comes to an end.
- Feed water to the flexible drain hose and check the piping for leakage.
- Be sure to check the drain pump for normal operating and noise when electrical wiring is complete.
- When the test is complete, connect the flexible drain hose to the drain port on the indoor unit.

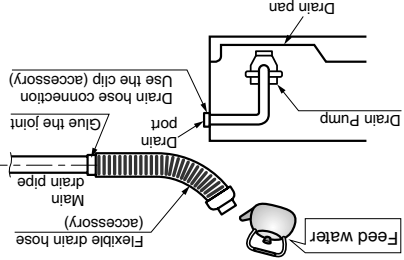

The air conditioner uses a drain pump to drain water. Use the following procedure to test the drain pump operation:


Drain test

Heat insulation material: Polyethylene foam with thickness more than 8 mm.

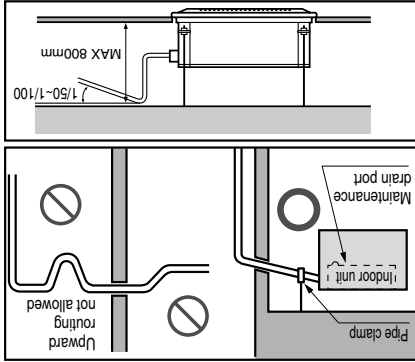


- Drain piping must have down-slope (1/50 to 1/100); be sure not to provide up-and-down slope to prevent reversal flow.
- During drain piping connection, be careful not to exert extra force on the drain port on the indoor unit.
- The outside diameter of the drain connection on the indoor unit is 32mm.
- Piping material: Polyvinyl chloride pipe VP-25 and pipe fittings
- Be sure to execute heat insulation on the drain piping.

Indoor Unit Drain Piping

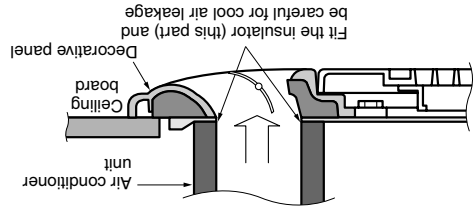


Good example

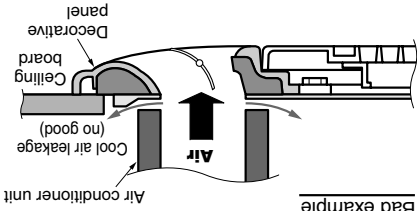


Bad example

CAUTION: Install certainly the decorative panel. Cool air leakage causes sweating. Water drops fall.


5. Fit the corner covers.

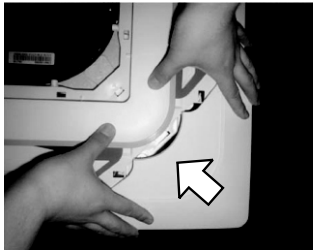

6. Open two screws of control panel cover.

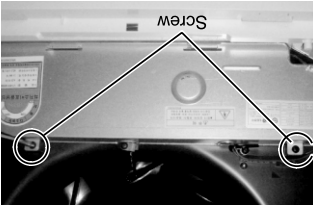


7. Connect one display connector and two vane control connectors of front panel to indoor unit PCB.
The position marking on PCB is as:
Display connector : CN-DISP
Vane control connector: CN-VANE 1,2

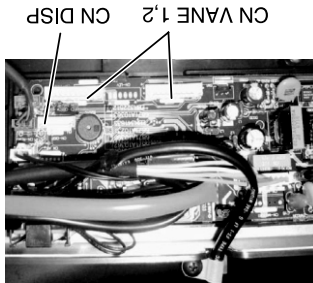


8. Close the cover for control box.



9. Fit the link on the panel as shown in picture. (The link is included in the front panel unit box.)

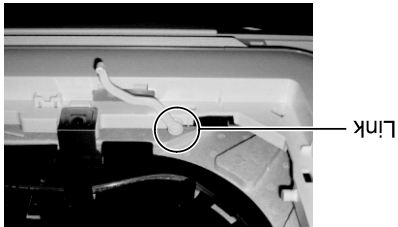


10. Attach the other side of link on the filter guide of inlet grille. Install the air inlet grille and filter on the panel.

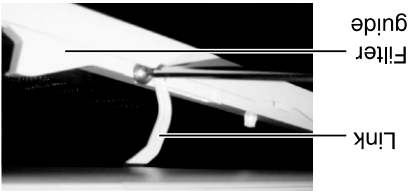

Installation of Decorative Panel

The decorative panel has its installation direction. Before installing the decorative panel, always remove the paper template.

1. Remove the packing and take out air inlet grille from front panel.

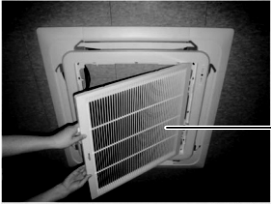


Front grille

2. Remove the Corner covers of the panel.



Corner cover


3. Fit the panel on the unit by inserting hooks as shown in picture.

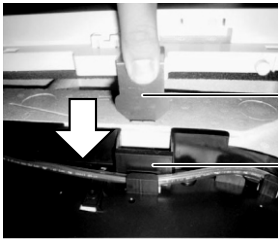

Hook clip

Hook

4. Insert two screws on diagonal corners of panel. Do not tighten the bolts completely. (The fixing screws are included in the indoor unit box.) Check the alignment of panel with the ceiling. Height can be adjusted using hanging bolts as shown in picture. Insert the other two screws and tighten all screws completely.

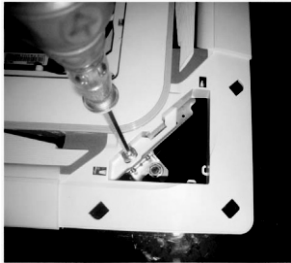

Piping Connection

1. Form the piping according to its routing. Avoid bending and bending back the same piping point more than three times. (This will result in hardening the pipe.)
2. After deforming the piping, align centers of the union fitting of the indoor unit and the piping, and tighten them firmly with wrenches.
3. Connect pipe to the service valve or ball valve which is located below the outdoor unit.
4. After completing the piping connection, be sure to check if there is gas leakage in indoor and outdoor connection.



Vacuum drying

After completing the piping connection, execute vacuum drying for the connecting piping and the indoor unit.
The vacuum drying must be carried out using the service ports of both the liquid and gas side valves.

Grade	Liquid side piping	Ø6.35mm Ø12.7mm Ø6.35mm Ø15.88mm Ø9.52mm Ø15.88mm Ø19.05mm
-------	--------------------	--

CAUTION: Use two wrenches and tighten with regular torque.

Flare nut fastening torque	
Ø6.35mm	1.8~2.5 kgf·m
Ø9.52mm	3.4~4.2 kgf·m
Ø12.7mm	5.5~6.6 kgf·m
Ø15.88mm	6.3~8.2 kgf·m
Ø19.05mm	9.9~12.1 kgf·m

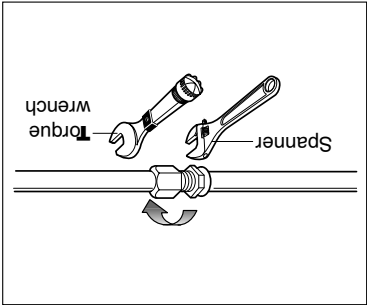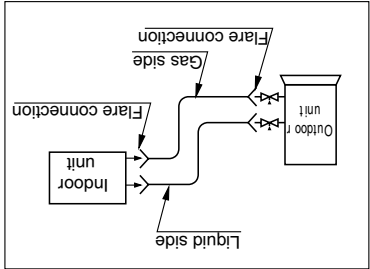

Connecting Pipes to the Indoor Unit

• Preparation of Piping

Main cause of gas leakage is defect in flaring work. Carry out correct flaring work in the following procedure.

1) Cut the pipes and the cable.

- Use the accessory piping kit or the pipes purchased locally.

- Measure the distance between the indoor and the outdoor unit.

- Cut the pipes a little longer than measured distance.

- Cut the cable 1.5m longer than the pipe length.

2) Burrs removal

- Completely remove all burrs from the cut cross section of pipe/tube.

- Put the end of the copper tube/pipe to downward direction as you remove burrs in order to avoid to let burrs drop in the tubing.

3) Putting nut on

- Remove flare nuts attached to indoor and outdoor units, than put them on pipe/tube having completed burr removal.

- (Not possible to put them on after flaring work)

4) Flaring work

- Carry out flaring work using flaring tool as shown below.







Outside diameter		A	
mm	inch	mm	inch
Ø6.35	1/4	1.1~1.3	1.9~2.1
Ø9.52	3/8	1.5~1.7	1.6~1.8
Ø12.7	1/2	1.6~1.8	1.6~1.8
Ø15.88	5/8	1.6~1.8	1.6~1.8
Ø19.05	3/4	1.9~2.1	1.9~2.1

Firmly hold copper tube in a bar(or die) as indicated dimension in the table above.

5) Check


- Compare the flared work with figure below.
- If flare is noted to be defective, cut off the flared section and do flaring work again.

- If the piping and the drain hose are in common direction bundle the piping and the drain hose together by wrapping them with vinyl tape.

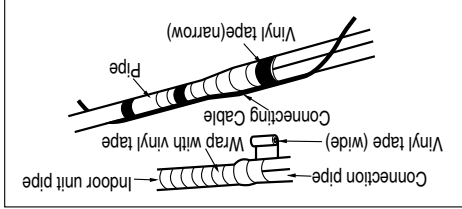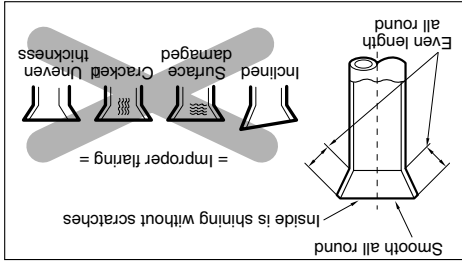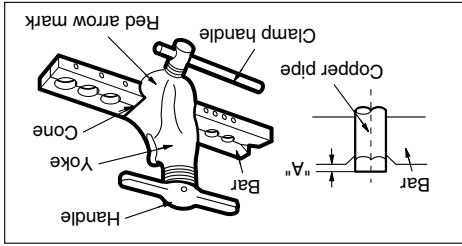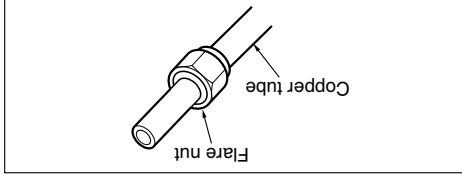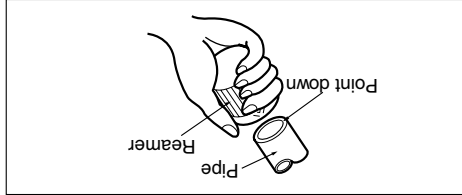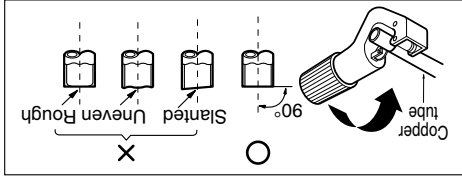


ELECTRICAL WIRING

1. All wiring must comply with LOCAL REGULATIONS.
2. Select a power source that is capable of supplying the current required by the air conditioner.
3. Feed the power source to the unit via a distribution switch board designed for this purpose.
4. The terminal screws inside the control box may be loose due to vibration during transport.
- Check the screws for loose connection.
- (Running the air conditioner with loose connection can overload and damage electrical components.)
5. Always ground the air conditioner with a grounding wire and connector to meet the LOCAL REGULATION

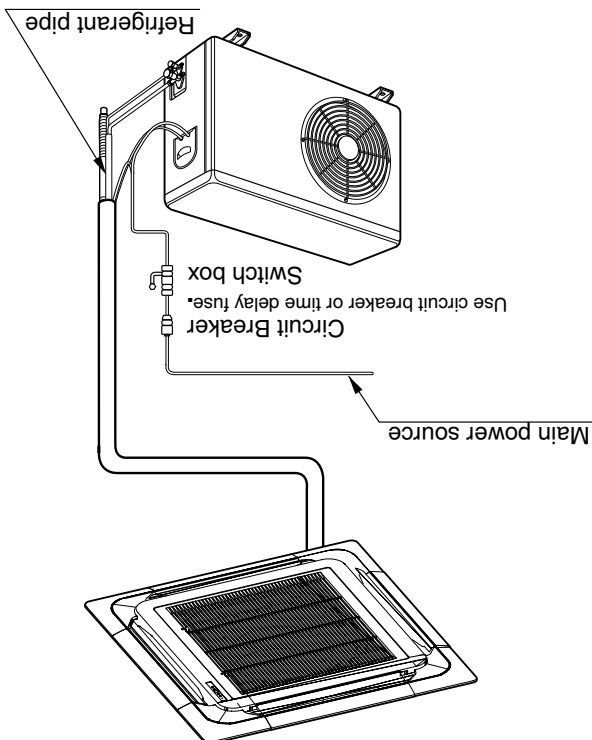


CONNECTING THE CABLE TO OUTDOOR UNIT

1. Remove the Cover control from the unit by loosening a screw. Connect the wires to the terminals on the control board individually as following.
2. Secure the cable onto the control board with the holder (clamping).
3. Refix the cover control to the original position with the screw. Use a recognized circuit breaker between the power source and the unit.
4. a disconnecting device to adequately disconnect all supply lines must be fitted.

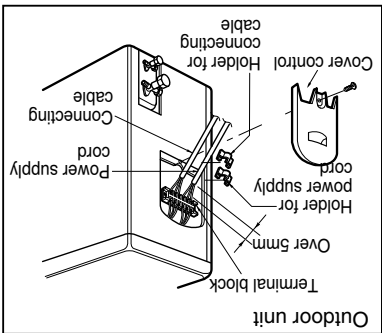


Circuit Breaker (A)	Grade		
	18k	24k	36k
	20	25	30
	10	15	20

Outdoor Wiring Diagram for LT-C368NLF0/LT-C368NLF1 (3 tr)

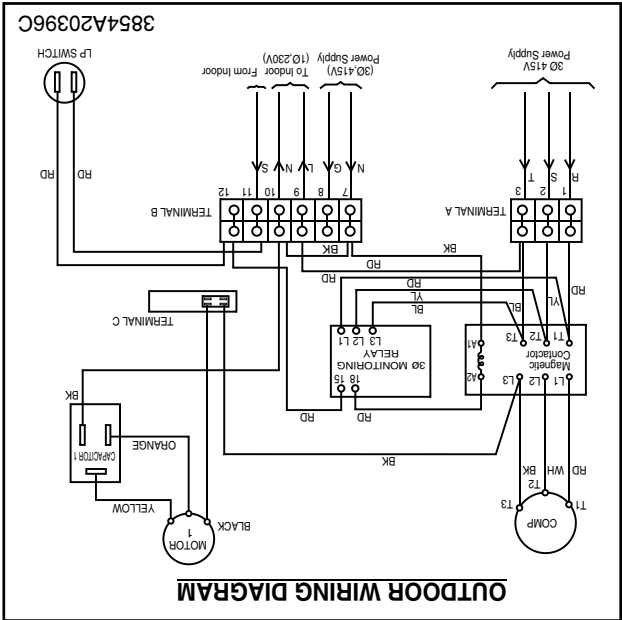


Outdoor Wiring Diagram for LT-C488MLF0 /TL-C488MLF1 (4 tr)

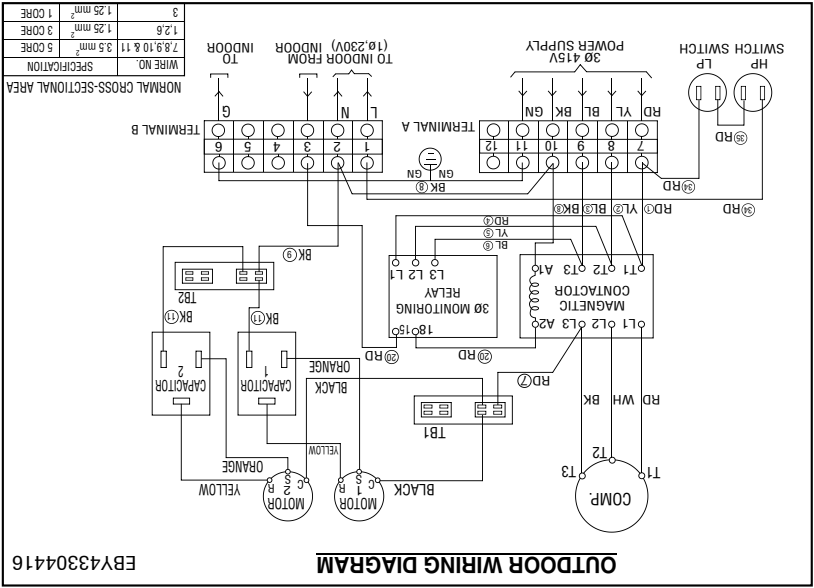


Wiring Diagram

Indoor Diagram for all models LT-C186PLF0 (1.5tr), LT-C246PLF0 (2 tr), LT-C368NLF0/LT-C368NLF1(3 tr), LT-C488MLF0 / LT-C488MLF1(4 tr)

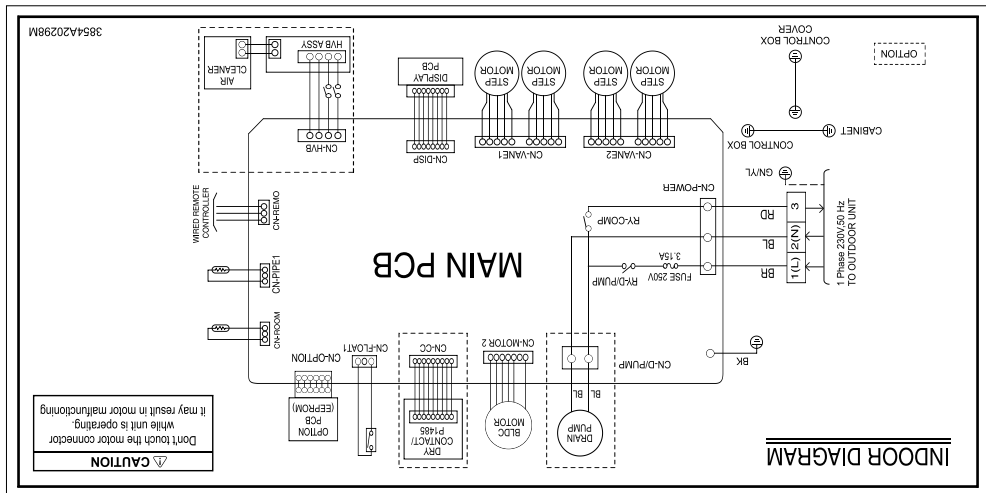


Outdoor Wiring Diagram for LT-C186PLF0 (1.5 tr) & LT-C246PLF0 (2 tr)

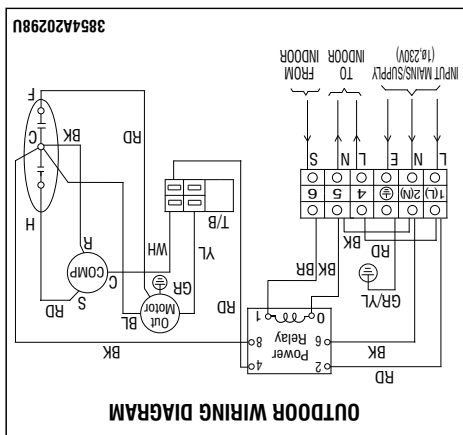

WARNING: Make sure that the screws of the terminal are free from looseness.




Connect wires of the same gauge to both sides




Wiring Connection

- Open the control box cover and connect the Remote controller cord and Indoor power wires.

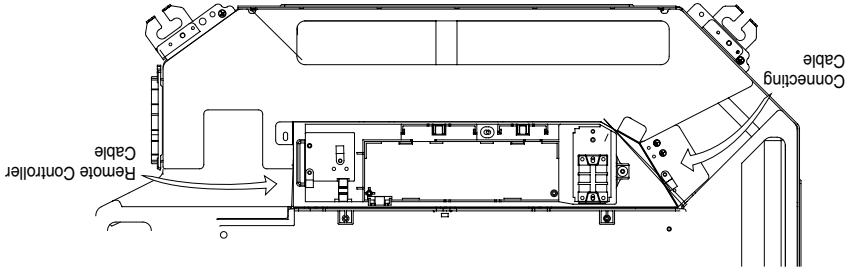


1 Phase
18k/24k



3 Phase
36k




3 Phase
48k

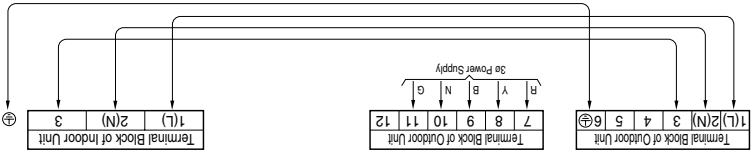


CAUTION

The power cord connected to the outdoor unit should be complied with the IS approved makers.

Capacity	1 Phase
18k/24k	2.5mm ²

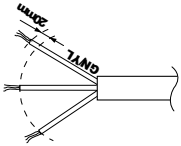


Capacity	3 Phase
36k	2.5mm ²
48k	3.5mm ²

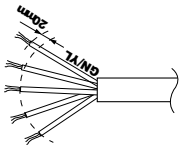

The connecting cable connected to the indoor and outdoor unit should be complied with the IS approved makers

CROSS-SECTIONAL
NORMAL

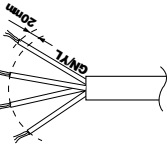


Capacity	1 Phase
18k/24k/36k	0.75mm ²
48k	1.25mm ²

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

Wide LCD Wired Remote Control Installation (Optional)


1. Disassemble the remote controller from the installation board.
- Use the driver as shown in the right picture and insert it into the hole with the arrow. And then you pull the driver in the front direction, the remote controller will be separated.

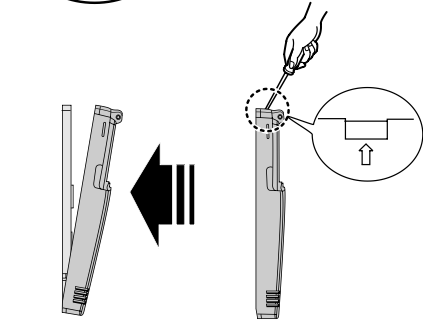


2. Connect the remote controller cable to the wired remote controller installation board as shown in the right picture.

12V	SIG	GND
Red wire	Yellow wire	Black wire


※ The remote controller cable is connected as factory default.

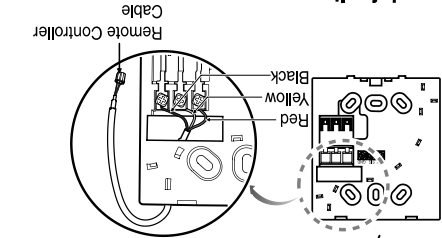

3. After fixing the cable to the guide slot, attach the wired remote controller installation board at the desired location.
- Before fixing the remote controller cable to the guide slot, remove any clogged part of the case in the direction to install before the installation.

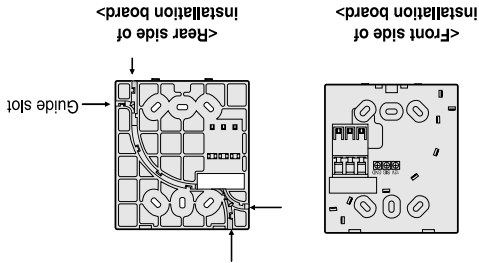



4. After locating the wired remote controller installation board at the desired location, screw the unit firmly. (When there is a buried box, install the wired remote controller board to fit the buried box.)

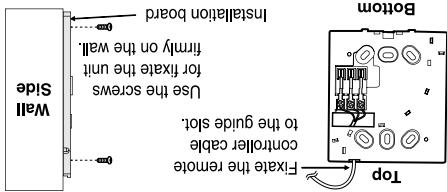

- Use the screw provided.

5. After fixing the top part of the remote controller to the installation board as shown in beside picture, press the bottom part to assemble the controller to it's board.

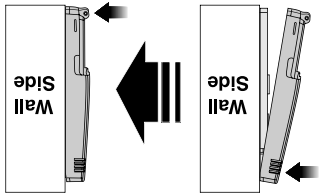


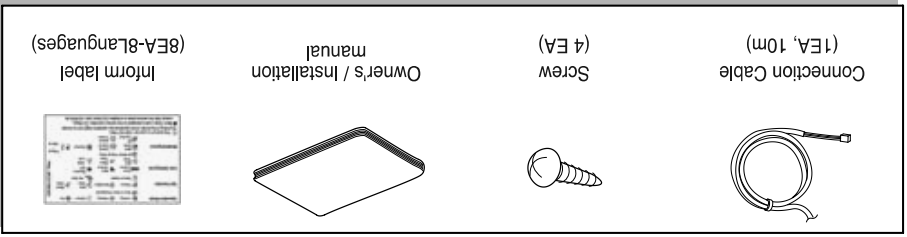

Accessory

* Some functions may not be operated and displayed depending on the product type.

- 1 OPERATION INDICATION SCREEN
 - 2 SET TEMPERATURE BUTTON
 - 3 FAN SPEED BUTTON
 - 4 ON/OFF BUTTON
 - 5 OPERATION MODE SELECTION BUTTON
 - 6 WIRELESS REMOTE CONTROLLER RECEIVER
 - 7 AIR FLOW BUTTON
 - 8 SUBFUNCTION BUTTON
 - 9 FUNCTION SETTING BUTTON
 - 10 VENTILATION BUTTON
 - 11 RESERVATION
 - 12 UP,DOWN,LEFT,RIGHT BUTTON
 - 13 ROOM TEMPERATURE BUTTON
 - 14 SETTING/CANCEL BUTTON
 - 15 EXIT BUTTON
- To check the indoor temperature, press button.
- Some products don't receive the wireless signals.

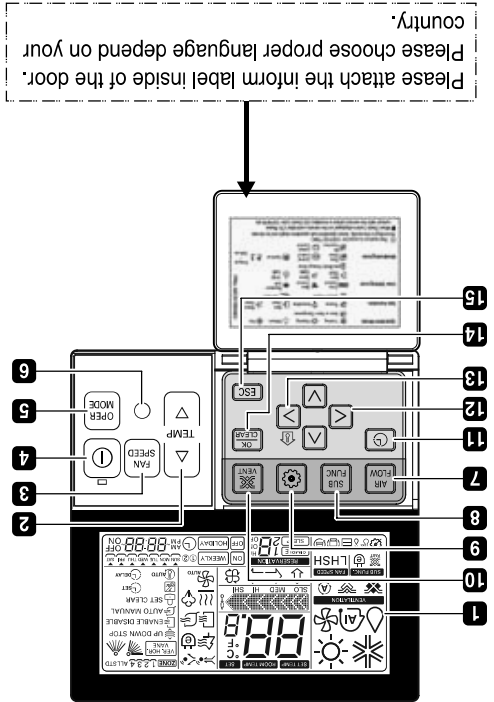


Wide LCD Wired Remote Controller (Optional)

Wireless Remote Controller (Standard)

This air-conditioner is equipped with wireless remote controller basically. But if you want to be available with wired remote controller, you pay for it.

The controls will look like the following.

Controls

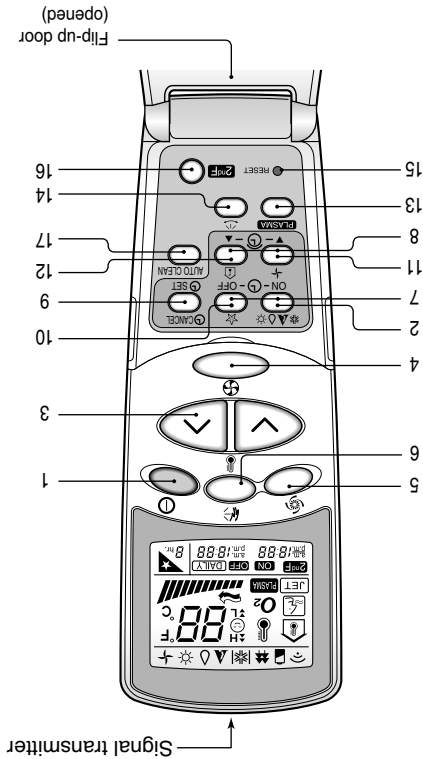


Note : For detailed operation instructions please refer to Owner's Manual.

CAUTION: of handling the Remote Controller

- Aim at the signal receiver on the wired remote controller so as to operate.
- The remote control signal can be received at a distance of up to about 7m.
- Be sure that there are no obstructions between the remote controller and the signal receptor.
- Do not drop or throw the remote controller.
- Do not place the remote controller in a location exposed to direct sunlight, or near the heating unit, or any other heat source.

- 1. START/STOP BUTTON**
Operation starts when this button is pressed and stops when the button is pressed again.
- 2. OPERATION MODE SELECTION BUTTON**
Used to select the operation mode.
- 3. ROOM TEMPERATURE SETTING BUTTONS**
Used to select the room temperature.
- 4. INDOOR FAN SPEED SELECTOR**
Used to select fan speed in four steps, low, medium, high and CHAOS.
- 5. JET COOL**
Used to start or stop the speed cooling.(speed cooling operates super high fan speed in cooling mode.)
- 6. CHAOS SWING BUTTON**
Used to stop or start louver movement and set the desired up/down airflow direction.
- 7. ON/OFF TIMER BUTTONS**
Used to set the time of starting and stopping operation.
- 8. TIME SETTING BUTTONS**
Used to adjust the time.
- 9. TIMER SET/CANCEL BUTTON**
Used to set the timer when the desired time is obtained and to cancel the Timer operation.
- 10. SLEEP MODE AUTO BUTTON**
Used to set Sleep Mode Auto operation.
- 11. AIR CIRCULATION BUTTON**
Used to circulate the room air without cooling or heating.
- 12. ROOM TEMPERATURE CHECKING BUTTON**
Used to check the room temperature.
- 13. NEO PLASMA(OPTIONAL)**
Used to start or stop the plasma-purification function.
- 14. HORIZONTAL AIRFLOW DIRECTION CONTROL BUTTON (OPTIONAL)**
Used to set the desired horizontal airflow direction.
- 15. RESET BUTTON**
Used prior to resetting time.
- 16. 2nd F Button**
Used prior to using modes printed in blue at the bottom of buttons.
- 17. AUTO CLEAN (OPTIONAL)**
Used to set Auto Clean mode.


The Indoor Unit Installation

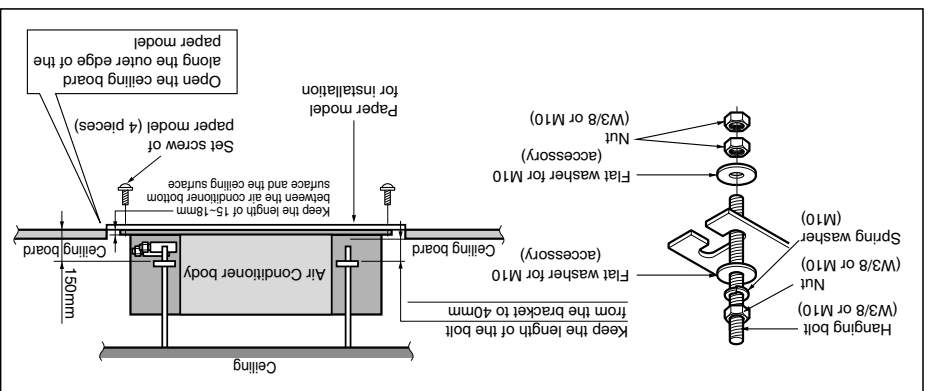

CAUTION: Tighten the nut and bolt to prevent unit falling.

• The following parts is option.

- ① Hanging Bolt - W 3/8 or M10
- ② Nut - W 3/8 or M10
- ③ Spring Washer - M10
- ④ Plate Washer - M10

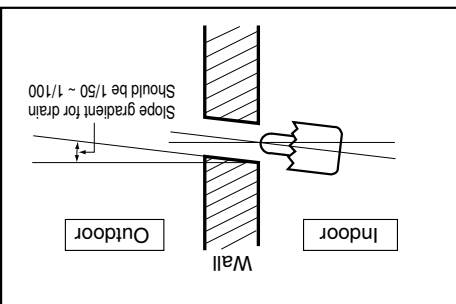

- Drill the piping hole on the wall slightly tilted to the outdoor side using a $\varnothing 70$ hole-core drill.

Remote Controller Installation

- Although the room temperature sensor is in the indoor unit, the remote controller should be installed in such places away from direct sunlight and high humidity.

Installation of the remote controller




- Select places that are not splashed with water.
- Select control position after receiving customer approval.
- The room temperature sensor is built in the indoor unit.
- This remote controller equipped with liquid crystal display. If this position is higher or lower, display is difficult to see. (The standard height is 1.2 ~ 1.5m high)

Routing of the remote controller cord

- Keep the remote controller cord away from the refrigerant piping and the drain piping.
- To protect the remote controller cord from electrical noise, place the cord at least 5cm away from other power cables (audio equipment, television set, etc.)
- If the remote controller cord is secured to the wall, provide a trap at the top of the cord to prevent water droplets from running.

Ceiling opening dimensions and hanging bolt location

- The dimensions of the paper model for installing are the same as those of the ceiling opening dimensions.

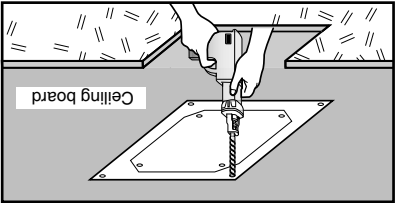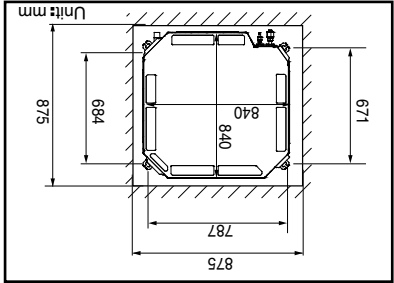

CAUTION:

- Select and mark the position for fixing bolts and piping hole.
- Decide the position for fixing bolts slightly tilted to the drain direction after considering the direction of drain hose.
- Drill the hole for anchor bolt on the ceiling.
- The hole size for four anchor bolts is $\varnothing 14.5\text{mm}$ & 40mm depth.

- This air-conditioner uses a drain pump.
- Horizontally install the unit using a level gauge.
- During the installation, care should be taken not to damage electric wires.


NOTICE

- Thoroughly study the following installation locations:

1. In such places as restaurants and kitchens, considerable amount of oil steam and flour adhere to the turbo fan, the fin of the heat exchanger and the drain pump, resulting in heat exchange reduction, spraying, dispersing of water drops, drain pump malfunction, etc.

In these cases, take the following actions:

- Make sure that the ventilation fan for smoke-collecting hood on a cooking table has sufficient capacity so that it draws oily steam which should not flow into the suction of the air conditioner.
- Make enough distance from a cooking room to install the air conditioner in such a place where it may not suck in oily steam.

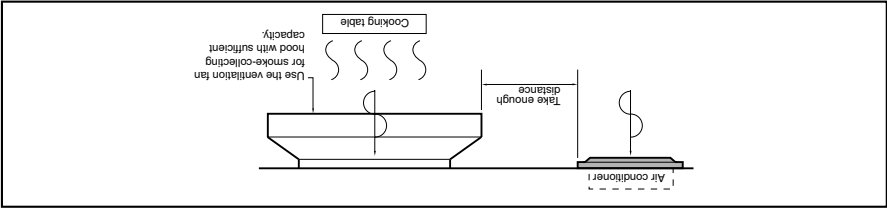


2. Avoid installing air conditioner in such circumstances where cutting oil mist or iron powder is in suspension in factories, etc.
3. Avoid places where inflammable gas is generated, flows in, is stored or vented.
4. Avoid places where sulfurous acid gas or corrosive gas is generated.
5. Avoid places near high frequency generators.

F). Outdoor Unit best location & piping.


The heat exchanger coils and panel vents of the outdoor unit should be checked regularly. If clogged with dirt or soot, the heat exchanger and panel vents may be professionally steam cleaned.

Note:
Dirty or clogged coils will reduce the operating efficiency of the system and cause higher operating costs.

Outdoor Unit

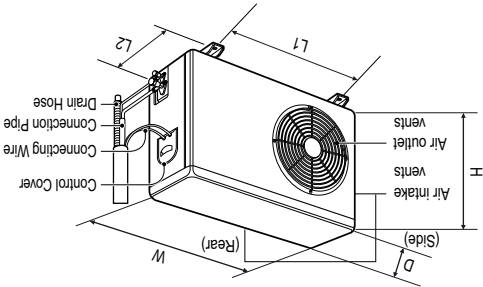

Indoor Unit

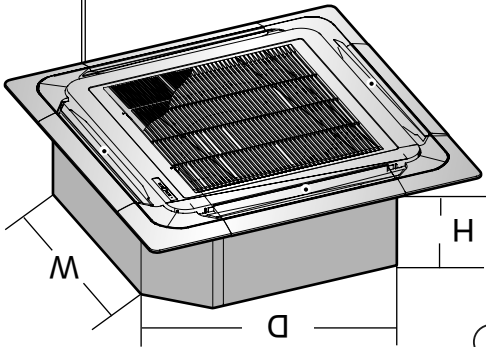


Wired Remote Controller (Optional)

Wireless Remote Controller (Standard)

Model	Capacity	Indoor Dimension		Outdoor Dimension	
LT-C186PLF0	1.5 tr	840	840	204	800
LT-C246PLF0	2 tr	840	840	204	800
LT-C368NLF0	3 tr	840	840	246	870
LT-C488MLF0	4 tr	840	840	288	906
LT-C488MLF1	4 tr	840	840	288	899
					355
					400
					1135
					506
					390

3) Piping length and the elevation

Model	Pipe Size mm(inch)		Length A(m)		Elevation B(m)		*Additional refrigerant (g/m)
	Gas	Liquid	Standard	Max.	Standard	Max.	
LT-C186PLF0	12.7 (1/2")	6.35(1/4")	7.5	30	5	15	25
LT-C246PLF0	15.88 (5/8")	6.35(1/4")	7.5	30	5	15	25
LT-C368NLF0/ LT-C368NLF1	15.88 (5/8")	9.52(3/8")	7.5	30	5	15	30
LT-C488MLF0/ LT-C488MLF1	19.05(3/4")	9.52(3/8")	7.5	30	5	15	35

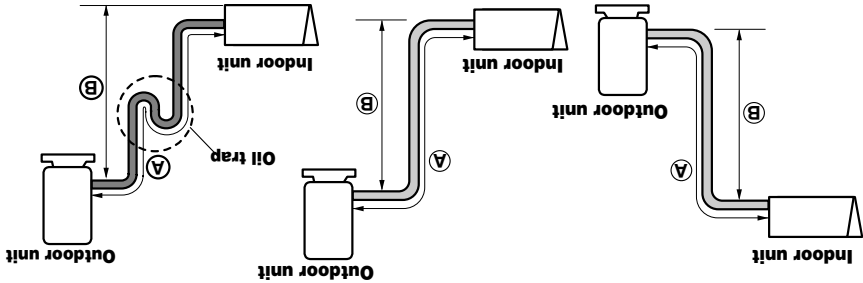

If piping length is more than 10m



CAUTION:

- Rated performance for refrigerant line length of:7.5m
- Capacity is based on standard length and maximum allowance length is on the basis of reliability.
- Improper refrigerant charge may result in abnormal cycle.
- Oil trap should be installed every 10 meters.

Model Weight

Model	Capacity	Weight(kg)	
		Indoor(Front panel)	Outdoor
LT-C186PLF0	1.5 Ton	20	42.00
LT-C246PLF0	2.0 Ton	20	46.00
LT-C368NLF0/LT-C368NLF1	3.0 Ton	23.3	60.00
LT-C488MLF0/LT-C488MLF1	4.0 Ton	25.6	92.00

Installation of Indoor, Outdoor Unit



Selection of the best location

1) Indoor unit

- There should not be any heat source or steam near the unit.
- There should not be any obstacles to prevent the air circulation.
- A place where air circulation in the room will be good.
- A place where drainage can be easily obtained.
- A place where noise prevention is taken into consideration.
- Do not install the unit near the door way.
- Ensure the spaces indicated by arrows from the wall, ceiling, or other obstacles.
- The indoor unit must keep the maintenance space.





2) Outdoor unit

- If an awning is built over the unit to prevent direct sunlight or rain exposure, be careful that heat radiation from the condenser is not restricted.
- There should not be any animals or plants which could be affected by arrows from the wall, ceiling, fence or other obstacles.
- Ensure the spaces indicated by arrows from

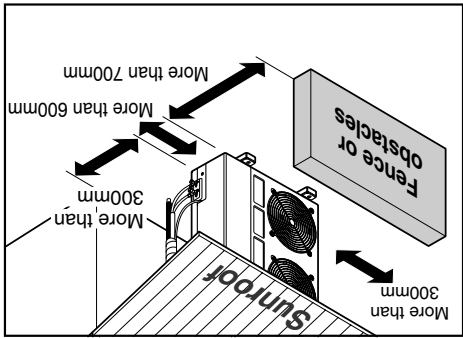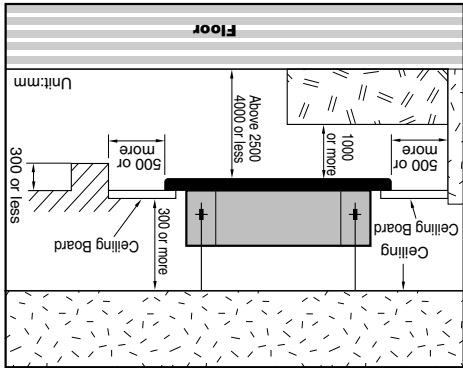

Installation

Installation Tools

Figure	Name	Figure	Name
	Screw driver		Hexagonal wrench
	Electric drill		Measuring tape, Knife
	Hole core drill		Gas-leak detector
	Spanner		Thermometer, Horizontal meter
	Torque wrench		Flaring tool set

Introduction

Symbols used in this Manual



This symbol alerts you to the risk of electric shock.




This symbol alerts you to hazards that may cause harm to the air conditioner.

NOTICE


This symbol indicates special notes.

Features

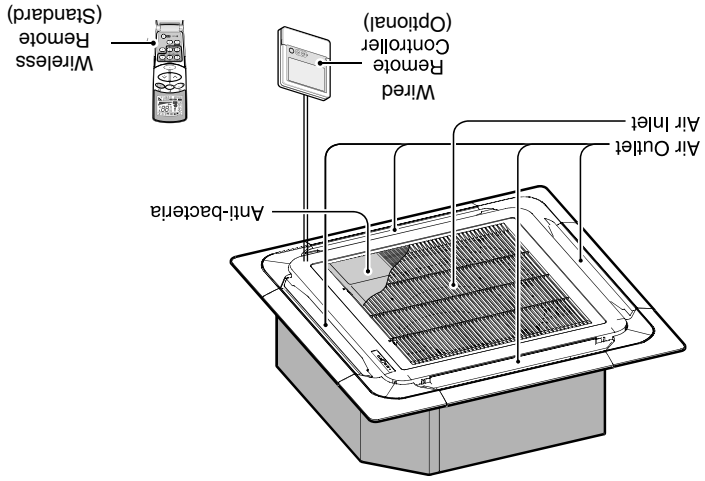


Do not block the inlet or outlet of air flow.

• It may cause product failure.

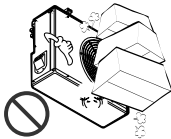


Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.

• There is risk of fire, electric shock, or damage to the plastic parts of the product.

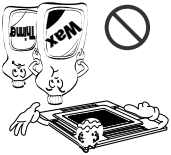

Do not touch the metal parts of the product when removing the air filter. They are very sharp!

• There is risk of personal injury.

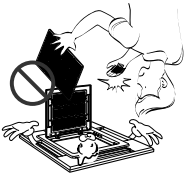


Do not step on or put anything on the product. (outdoor units)

• There is risk of personal injury and failure of product.




Always insert the filter securely. Clean the filter every two weeks or more often if necessary.

• A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

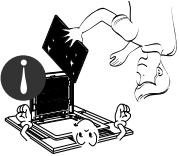

Do not insert hands or other objects through the air inlet or outlet while the product is operated.

• There are sharp and moving parts that could cause personal injury.

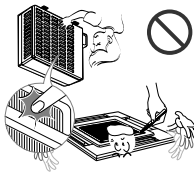

Do not drink the water drained from the product.

• It is not sanitary and could cause serious health issues.




Use a firm stool or ladder when cleaning or maintaining the product.

• Be careful and avoid personal injury.




Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries.

• There is risk of fire or explosion

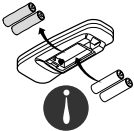


Do not recharge or disassemble the batteries.

• They may burn or explode.

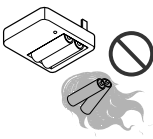


If the liquid from the batteries gets onto your skin or clothes, wash it well with clean water. Do not use the remote if the batteries have leaked.

• The chemicals in batteries could cause burns or other health hazards.

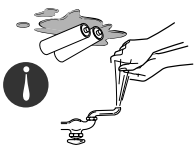




- When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.
- There is risk of product damage or failure, or unintended operation.
- This could result in personal injury and product damage.

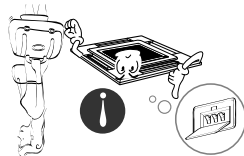



CAUTION

Installation

- Always check for gas (refrigerant) leakage after installation or repair of product.
- Low refrigerant levels may cause failure of product.
- A bad connection may cause water leakage.
- To avoid vibration or water leakage.

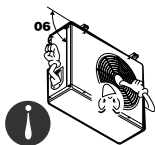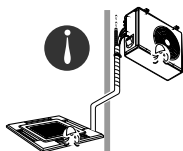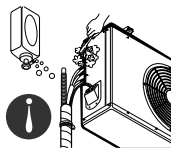

- Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.
- It may cause a problem for your neighbors.

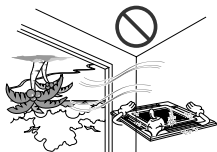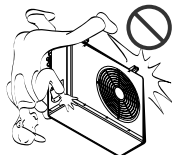


- Use two or more people to lift and transport the product.
- Avoid personal injury.


- Do not install the product where it will be exposed to sea wind (salt spray) directly.
- It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

Operation

- Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.)
- This could harm to your health.

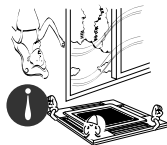

- Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.
- There is risk of damage or loss of property.

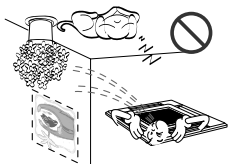

Do not use the product in a tightly closed space for a long time.



- Oxygen deficiency could occur.

Stop operation and close the window in the storm or hurricane. If possible, remove the product from the window before the hurricane arrives.




- There is risk of property damage, failure of product, or electric shock.

Be cautious that water could not enter the product.




- There is risk of fire, electric shock, or product damage.

Do not store or use flammable gas or combustibles near the product.

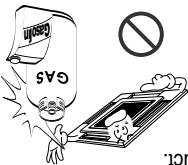

- There is risk of fire or failure of product.

If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable.

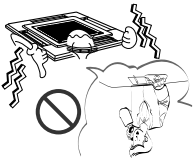


- There is risk of electric shock or fire.

Do not allow water to run into electric parts.



- It may cause failure of the product, or electric shock.

When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.

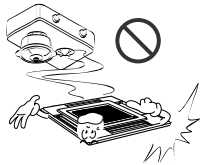


- Do not use the telephone or turn switches on or off.

Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)




- There is risk of physical injury, electric shock, or product failure.

Ventilate the product from time to time when operating it together with a stove, etc.

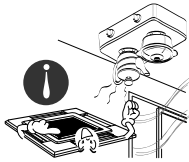

- There is risk of fire or electric shock.


Turn the main power off when cleaning or maintaining the product.

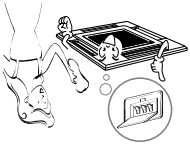

- There is risk of electric shock.

Do not modify or extend the power cable.

• There is risk of fire or electric shock.

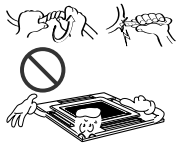

Do not install, remove, or re-install the unit by yourself (customer).

• There is risk of fire, electric shock, explosion, or injury.



Be cautious when unpacking and installing the product.

• Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.



For installation, always contact the dealer or an Authorized Service Center.

• There is risk of fire, electric shock, explosion, or injury.




Do not install the product on a defective installation stand.

• It may cause injury, accident, or damage to the product.



Be sure the installation area does not deteriorate with age.

• If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.

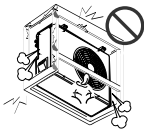


• Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.

• Moisture may condense and wet or damage furniture.




• Take care to ensure that power cable could not be pulled out or damaged during operation.

• There is risk of fire or electric shock.

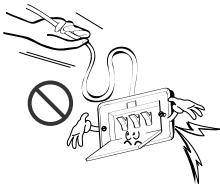


Do not place anything on the power cable.

• There is risk of fire or electric shock.

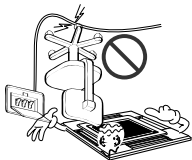

Do not plug or unplug the power supply plug during the operation.

• There is risk of fire or electric shock.

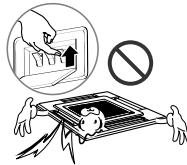


Do not touch(operate) the product with wet hands.

• There is risk of fire or electrical shock.



Do not place a heater or other appliances near the power cable.

• There is risk of fire and electric shock.

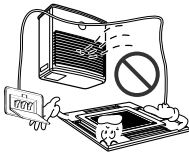

Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

■ Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.


WARNING This symbol indicates the possibility of death or serious injury.	CAUTION This symbol indicates the possibility of injury or damage.
--	---

■ Meanings of symbols used in this manual are as shown below.

Be sure not to do.	
Be sure to follow the instruction.	

WARNING

■ Installation

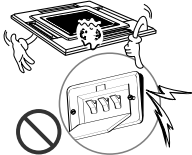


Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.

• There is risk of fire or electric shock.




Do not disassemble or repair the product. There is risk of fire or electric shock.

For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.

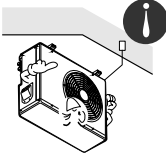


Always ground the product.

• There is risk of fire or electric shock.

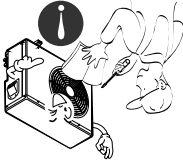


Install the panel and the cover of control box securely.

• There is risk of fire or electric shock.

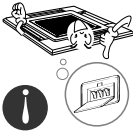

Always install a dedicated circuit and breaker.

• Improper wiring or installation may cause fire or electric shock.



Use the correctly rated breaker or fuse.

• There is risk of fire or electric shock.

Installation Requirements	Required Parts	Required Tools
---------------------------	----------------	----------------

Safety Precautions	3	☐ Connecting cable	☐ Horizontal meter
Introduction	8	☐ Pipes: Gas side	☐ Screw driver
		☐ Liquid side	☐ Electric drill
Symbols used in this Manual	8	☐ Hanging Bolt	☐ Hole core drill (ø70mm)
Features.....	8	☐ Insulated drain hose	☐ Flaring Tools set
Installation	9	☐ Additional Drain hose (inner Dia.....32mm)	☐ Torque Wrenches
Installation Tools	9		☐ Hexagonal Wrench (4mm, 5mm)
Installation of Indoor, Outdoor Unit	10		☐ Gas-leak detector
Wireless Remote Controller (Standard)	15		☐ Owner's Manual
Operation Instructions	15		☐ Installation Manual
Wired Remote Controller (Optional)	16		☐ Thermometer
Operation Instructions	16		
Electrical Wiring	18		
Air Purging	28		
Installation Guide at Sea Site	32		
Maintenance & Services	33		



Highlander *Ceiling Cassette* *Air Conditioner* **INSTALLATION MANUAL**

LG

IMPORTANT

- Please read this installation manual completely before installing the product.
- When the power cord is damaged, replacement work shall be performed by authorized personnel only.
- Installation work must be performed in accordance with the national wiring standards by authorized personnel only.
- Please retain this installation manual for future reference after reading it thoroughly.

P/No.-MFL62865704