



www.lg.com

Copyright © 2023 LG Electronics Inc.
All Rights Reserved. 版權所有。

LED 電視*

用戶手冊

安全及參考

* LG LED 電視配備具有 LED 背光的 LCD 螢幕。

請於操作產品前仔細閱讀本手冊並
將其保留以供未來參考之用。

產品的型號和序號位在產品的背面和其中一個側
邊。請記下下列資料，以備需要服務時使用。

型號

序號



* M F L 7 1 9 4 6 4 7 2 2 3 0 1 R E V 0 0 *

閱讀本手冊前

- 請於操作電視前仔細閱讀本手冊並將其保留以供未來參考之用。
- 在網站上，您可以下載手冊，包括安裝，使用，疑難排解，規格，授權等，以及在電腦或流動裝置上檢視其內容。
- 使用指南：有關此電視的詳情，請參閱產品隨附的使用指南。（視型號而定）
 - 若要開啓使用指南 (ⓘ) → [(ⓘ)] → [支持] → [使用指南]

選購配件

- 另購項目可因改善品質而隨時變更或修改，恕不另行通知。如要購買這些項目，請聯絡經銷商。這些裝置僅配合某些型號使用。
- 型號名稱或設計可因產品功能升級，製造商或有關政策而有所改變。
- 神奇遙控器：
 - 檢查您的電視型號是否支援無線模組規格中的 Bluetooth，以確定它能否與神奇遙控器搭配使用。
- 用來連接天線和外部裝置的纜線必須另購。

注意

- 本手冊的產品規格或內容或會因產品功能升級而隨時變更，恕不另行通知。
- 產品隨附的部件視乎型號而可能有所不同。
- 插圖可能與實際情況有差異。

警告! 安全指示



注意

觸電的風險
請勿開啓



注意：為減低觸電風險，請勿移除蓋板（或背板）。當中並無用戶可自行維修的組件。請向合資格維修人員諮詢相關維修安排。



此標誌用作提醒使用者，產品的機殼內有非絕緣保護的「危險電壓」，相關電壓的強度足以構成觸電風險。



此標誌用作提醒使用者，電器附帶的相關產品說明，已列出重要操作及保養（維修）指示。

警告：為減低火災或觸電風險，請勿將本產品置於雨中或潮濕環境中。

- 為防止火災蔓延，請隨時保持本產品遠離蠟燭或其他有明火的物品。
- 請勿將電視及遙控器放置於下列環境：
 - 勿讓產品直接暴曬在陽光下。
 - 高濕度範圍，例如浴室。
 - 發熱源附近例如煮食爐及其他發熱裝置。
 - 輕易暴露於蒸氣或油煙如廚房工作範圍或放濕器附近。
 - 暴露於雨水或當風位置。
 - 讓液體滴入或潑灑到裝置，並且勿在裝置上方（例如裝置上方的架子上）放置裝有液體的物體（例如花瓶，杯子等）。
- 靠近如汽油或蠟燭等易燃物，或將電視置於空調直吹處。
- 請勿安裝在灰塵過多的位置。
否則，可能造成火災，觸電，燃燒/爆炸，故障或產品變形。
- 通風
 - 請將電視安裝在通風良好的位置。請勿安裝在狹窄的空間（例如書架）。
 - 請勿將產品安裝於地毯或軟墊上。
 - 裝置插入時勿讓衣物或其他材料擋住或蓋住產品。
- 小心勿觸碰通風口。長時間觀看電視時，通風口可能會產生高溫。

- 保護電源線以防止受到物理性如扭曲，折彎，緊夾，受到門的擠壓或踩踏或機件受損。請加倍留意插頭，牆上插座以及裝置的電線出口。
- 連接電源線時，請勿搬動電視。
- 請勿使用受損或鬆脫的電源線。
- 拔除電源線時，請確實握住插頭。不要拉扯電源線來拔除電視電源。
- 請勿在同一交流電源插座上連接過多裝置，因為這可能導致火災或觸電。
- 切斷裝置主電源
 - 電源插頭與裝置中斷連接。如有緊急情況，電源插頭必須保持隨時可用。
- 切勿讓孩童攀爬於電視上。否則將導致電視翻倒並引致嚴重受傷。
- 室外天線接地（可能依國家/地區而異）：
 - 如果安裝了室外天線，請遵循下列注意事項。室外天線系統不應設置於接近高壓電電線或其他路燈照明或電源電路之處，或可能接觸此類輸電線或電路之處，否則可能導致人員傷亡。
- 切勿在雷擊或閃電時碰觸本裝置或天線。將可能導致觸電。
- 確保電源線安全地連接到電視和牆上插座，若未安全連接，插頭和插座可能損壞，並且在極端情況下可能引發火災。
- 請勿將金屬或易燃物體插入產品。若有異物掉入產品內，請拔除電源線，並聯絡服務中心。
- 插頭插上時，請勿觸碰電源線末端。將可能導致觸電。
- 如發生任何下列情況，即時切斷產品電源並聯絡當地服務中心。
 - 產品曾受損毀。
 - 若有水或其他物質滲入產品（像是 AC 轉接器，電源線或電視）。
 - 若聞到電視發出煙霧或其他臭味。
 - 出現雷擊或閃電時，或者長時間不使用產品時。
 除非拔除電源線，否則即使用遙控器或按鈕關閉電視，AC 電源仍會保持接通狀態。
- 請勿在電視附近使用高電壓的電子設備（例如：滅蚊機）。這可能引起產品故障。
- 未經 LG Electronics 書面授權，請勿嘗試以任何方式修改本產品。可導致火災或觸電。如需服務或維修，請洽詢您當地的客戶服務中心。未經授權的修改可能會讓使用者失去操作本產品的權力。
- 請僅使用經授權的附件 / LG Electronics 所認可的配件。否則，可能導致火災，觸電或產品無法正常運作。
- 切勿拆開 AC 適配器或電源線。可能導致火災或觸電。
- 請小心處理適配器避免掉落或被撞擊。遭到撞擊可能會對產品造成損害。
- 為降低發生火災或觸電的風險，請勿用濕手碰觸電視。若電源插頭潮濕或佈滿灰塵，請將插頭完全擦乾或擦去灰塵。
- 電池
 - 將附件（電池等）存放在安全的位置並遠離兒童。
 - 請避免短路，拆卸或讓電池過熱。請勿用火焚化電池。電池不應暴露於高溫的地方。
 - 注意：如果更換的電池類型不正確，會有引發火災或爆炸的風險。
- 移動
 - 搬動時，確定已關閉產品電源，拔出插頭，並取下所有纜線。可能需要兩個或更多人搬運較大型的電視。請勿按壓設備屏幕或在電視屏幕上施力壓力。否則，可能導致產品損壞，造成危險或傷害。
- 請將包裝防潮材料或乙烯基包裝物料放置在兒童無法觸及的地方。
- 勿撞擊產品或讓任何物體掉入產品內部，也不要讓任何物體掉落到螢幕上。
- 請勿以手或指甲，鉛筆或鋼筆等尖銳物件用力按壓屏幕，或使其刮花。可能會使螢幕損壞。
- 清潔
 - 清潔時，請拔除電源線並以乾軟布輕拭，以避免刮傷。請勿直接在電視上噴水或其他液體。請勿使用會對產品及其屏幕造成損壞的化學品，例如玻璃清潔劑，空氣清新劑，殺蟲劑，潤滑劑，汽車或工業用蠟劑，磨光劑，稀釋劑，苯，酒精等。否則，可能導致觸電或產品損壞。

安裝

抬起與移動電視

不論任何類型及大小，抬起或移動電視時，請閱讀下文，確保安全搬運，以防電視刮花或受損。

- 建議以包裝箱或連同電視原有的包裝材料移動電視。
- 移動或抬起電視前，中斷電源線和所有纜線的連接。
- 當握住電視時螢幕應面向外側以避免損壞。
- 握穩電視的頂部和底部。確保不要握住透明部分，喇叭或喇叭排孔區域。
- 大型電視需最少二人共同運送。
- 搬運電視時，請勿搖動或令電視受過度震動。
- 搬運電視時，保持電視直立，切勿轉向電視的側面，或向左方或右方傾斜電視。
- 請勿過份用力，否則可能導致外框底座屈曲 / 折彎，會損壞螢幕。
- 操作電視時，請勿損壞凸起的按鈕。



- 避免時常點按畫面，否則會導致畫面受損。
- 將底座安裝至電視組合時，電視螢幕應面向下方並放於附有軟墊的枱面或平面上以避免螢幕磨損。

安裝到桌面

- 1 將電視機抬起並擺放在桌子上，保持機身豎直。
 - 與牆壁保留最少 10 厘米空間以保持空氣流通。
- 2 將電源線連接至牆上電源插座。



- 在組裝產品時，請勿於螺絲零件處使用油或潤滑劑等外來物質。（這樣可能會導致產品損壞。）
- 請勿使用任何未經批准部件，以確保安全和產品壽命。
- 因使用未經批准物品而造成的任何損壞或傷害並不包括在保修範圍內。
- 如將電視安裝於底座上，請採取措施以預防產品翻倒。否則，將可能導致電視翻倒並引致受傷。
- 組裝支架時，確認所有提供的螺絲均已安裝。如果螺絲未完全鎖緊，產品可能會傾斜或翻倒，造成損壞。過度用力鎖緊螺絲，可能會因螺絲接頭磨損而導致脫落。

將電視固定到牆上

- 1 在電視背面插入並擰緊環首螺栓或固定片和螺栓。
 - 如果在環首螺栓位置中插入了螺栓，請先將這些螺栓取出。
- 2 用螺栓將固定片安裝到牆上。將掛牆架的位置對準電視背面的環形螺栓。
- 3 以堅固繩索將環形螺栓及掛牆架連接。確保繩索與平面保持水平。
 - 使用堅固平臺或矮櫃以穩固承托電視。
 - 掛牆架，螺栓及繩索需另行購買。您可從本地經銷商取得其他配件。

安裝到牆上

將選購的掛牆架小心安裝在電視後方，再將掛牆架安裝在與地面垂直的堅固牆壁上。將電視安裝在其他建築物料時，請聯絡合資格的人員。LG 建議應由合資格的專業安裝人員進行掛牆安裝。建議使用 LG 提供的掛牆架。LG 掛牆架容易與連接的纜線一起移動。如不使用 LG 掛牆架，請使用能將裝置穩固於牆上並有足夠空間連接外部裝置的掛牆架。建議安裝固定的掛牆架之前先連接所有纜線。



- 將電視安裝於掛牆架前需反方向轉動底座以將之移除。
 - 如需螺絲和掛牆架的詳細資訊，請參閱其購買的資訊。
 - 如希望將產品安裝於牆上，請於產品背面安裝 VESA 標準掛牆介面（選購配件）。於安裝套件以使用掛牆架（選購配件）時請注意固定以防墜落。
 - 將電視以掛牆方式安裝時，務必避免使用電視背面的電源線和訊號線懸掛。
 - 如牆壁會暴露於油或油霧，請勿在上面安裝此產品。此舉可能會損壞產品，並導致產品掉落。
- 安裝掛牆架時，建議使用膠帶蓋住支架孔，以防灰塵和昆蟲跑進去。（視型號而定）

天線/纜線


使用 RF 線（75 Ω）將電視連接至牆壁天線插座。

- 如使用兩部電視以上，使用訊號分線器。
- 如畫面品質惡劣，正確安裝訊號放大器以改善圖像品質。
- 如有連接天線，但畫面品質惡劣，嘗試以正確方向重新對準天線。
- 天線及轉換器並不提供。
- 由於相關標準尚未確認，此電視不能直接接收超高清（3840 x 2160 像素）廣播。（視型號而定）

啓動電視

開啓電視

只需使用按鈕，即可輕鬆操作電視功能。

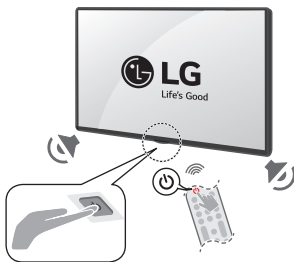

開機（按一下）
關機¹⁾（按住）
選單控制（按下²⁾）
選單選擇（按下³⁾）

注意

- 如電視從廠商運出後首次開啓，電視初始化可能需時數分鐘。
- 您電視的 OSD（螢幕顯示）可能與此手冊中顯示的內容略有不同。
- 裝置必須在容易接近插座的位置。有些裝置沒有開啓 / 關閉按鈕，需要拔除電源線才能關閉。

- 1) 所有操作中的應用程式將會關閉，令正在進行的所有錄影將會停止。（視乎銷售國家而定）
- 2) 您可以在電視開啓時按下按鈕，以存取及調整選單。
- 3) 當您存取調整選單時便可使用這功能。

連接

將不同的外置裝置連接至電視，並切換輸入模式以選取外置裝置。有關外置裝置連接的詳情，請參閱個別裝置隨附的手冊。

HDMI

- 連接 HDMI 纜線時，產品和外部裝置應先關閉並將電源線拔除。
- 支援的 HDMI 音訊格式（視型號而定）：
 - True HD (48 kHz) ,
 - Dolby Digital / Dolby Digital Plus (32 kHz / 44.1 kHz / 48 kHz) ,
 - PCM (32 kHz / 44.1 kHz / 48 kHz / 96 kHz / 192 kHz) ,
 - DTS (44.1 kHz / 48 kHz / 88.2 kHz / 96 kHz) ,
 - DTS-HD (44.1 kHz / 48 kHz / 88.2 kHz / 96 kHz / 176.4 kHz / 192 kHz)

✔ 注意

- 如果連接到輸入的設備也支援 HDMI Deep Color，您的圖像會更清晰。不過，如果設備不支援，可能無法正常運作。如出現此情況，請將電視的 [HDMI Deep Color] 設定為關閉。（視型號而定）
- [⊙] → [⊙] → [一般] → [外部裝置] → [HDMI 設定] → [HDMI Deep Color]（視機型而定）
- 使用附有 HDMI 標誌的獲認證的纜線。
- 如您並非使用獲認證的纜線，可能無法於螢幕顯示畫面，或發生連接錯誤。
- 建議的 HDMI 線類型
 - 超高速 HDMI®/TM 線（3 米或以下）

USB

某些 USB 集線器可能不能運作。如連接至 USB 集線器的 USB 裝置未能被探測，可直接將裝置連接至於電視上的 USB 端口。（視型號而定）

✔ 注意

- 為了獲得最好的連接效果，HDMI 纜線和 USB 裝置接頭厚度應少於 10 毫米，寬度應少於 18 毫米。如果 USB 纜線或 USB 記憶卡與您的電視的 USB 端口尺寸不符，請使用支援 USB 2.0 的延長線。（視型號而定）

IR 發射器

使用 IR 發送器控制機頂盒（纜線/衛星/IP/OTT），藍光/DVD 播放機，Soundbar，遊戲主機等等。（視乎銷售國家而定）（視機型而定）

✔ 注意

- 將 IR 發送器纜線連接到電視的 IR 發送器連接埠。
- 使用通用控制設置控制裝置。
- 使用隨附的 3M 膠帶保護 IR 發射器。

外部裝置

可用的外置裝置為：Blu-ray 播放器，HD 接收器，DVD 播放器，VCR，音效系統，USB 儲存裝置，電腦，遊戲裝置及其他外置裝置。

✔ 注意

- 外置裝置連接視乎型號而有所不同。
- 於電腦模式，可能產生由解像度，垂直格式，對比度或亮度引致的雜音。如出現雜訊，將電腦輸出變更爲其他解像度或將刷新率變更爲其他頻率，或於 [影像] 功能表中調整亮度和對比度，直至影像變爲清晰。
- 於電腦模式，部份解像度設定可能未能正常運作，視乎顯示卡而定。
- 如您在電腦上播放 Ultra HD 內容，視乎電腦性能，視訊或音訊可能會間歇性中斷。（視型號而定）
- 連線至有線 LAN 時，請使用 CAT 7 高速網際網路傳輸線。（僅限提供 LAN 連接埠時。）

規格

- 能源標籤上標明的每年能源消耗是根據 IEC 62087 及香港能源效益標籤計劃（EELS）來計算。
- 實際的能源消耗取決於使用環境（觀看的內容，電視設定等）而定。

電源要求	AC 100 – 240 V~ 50/60 Hz
------	--------------------------

廣播規格		
	數碼訊號	類比訊號
電視制式	DTMB	PAL D/K, PAL I, NTSC-M
節目範圍	DTMB : 21~69	PAL D/K : VHF/UHF 1~69, CATV 1~47 PAL I : VHF/UHF 1~69, CATV 1~47 NTSC-M : VHF/UHF 2~78, CATV 1~71
外置天線阻抗	75 Ω	

- 部份8K輸入/編碼格式可能不支援。或需要額外的設備才能支援部份8K格式。8K影像倍線及增強會因原始內容而有所不同（視型號而定）。

環境條件			
操作溫度	0 °C 至 40 °C	儲存溫度	-20 °C 至 60 °C
操作濕度	低於 80 %	儲存濕度	低於 85 %

掛牆安裝的情況	
傾斜角度	0° 至 15°

* 此規格僅適用於具有可調整的掛牆角度的產品。

- 如需有關電源供應和耗電量的詳細資訊，請參閱附貼在產品上的標籤。
 - 耗電量的測量標準以 IEC 62087 或每個國家／地區的能源法規為依據。
 - * 某些型號的標籤是貼在外部裝置連接端子外蓋內側。
 - * 依各型號或國家／地區的規定，標籤上不一定會載明標準耗電量。

產品資訊

(只限 65/75QNED86*, 86QNED81*)

無線 LAN 模組 (LGSBWAC95) 規格	
無線 LAN (IEEE 802.11a/b/g/n/ac)	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	19 dBm
5150 至 5725 MHz	18 dBm
5725 至 5850 MHz	13.5 dBm

Bluetooth	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	9 dBm

由於每個國家的波段頻道有所不同，用戶無法更改或調整操作頻率。本產品配置之頻率為區域頻率表內。為用戶着想，建議本裝置安裝及使用時，應最少離用戶身體 20 厘米。

(只限 50/55/65/75QNED81*, 50QNED80*)

無線 LAN 模組 (LGSBWAC97) 規格	
無線 LAN (IEEE 802.11a/b/g/n/ac)	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	19 dBm
5150 至 5725 MHz	18 dBm
5725 至 5850 MHz	13.5 dBm

Bluetooth	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	9 dBm

由於每個國家的波段頻道有所不同，用戶無法更改或調整操作頻率。本產品配置之頻率為區域頻率表內。為用戶着想，建議本裝置安裝及使用時，應最少離用戶身體 20 厘米。

(只限 QNED75*)

無線 LAN 模組 (LGSBWAC03) 規格	
無線 LAN (IEEE 802.11a/b/g/n/ac)	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	18.5 dBm
5150 至 5725 MHz	19.5 dBm
5725 至 5850 MHz	11.5 dBm

Bluetooth	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	9 dBm

由於每個國家的波段頻道有所不同，用戶無法更改或調整操作頻率。本產品配置之頻率為區域頻率表內。為用戶着想，建議本裝置安裝及使用時，應最少離用戶身體 20 厘米。

(只限 43/50/55/65/75UR91*, 75UR90*, 43/50/55/65UR80*)

無線 LAN 模組 (LGSBWAC23) 規格	
無線 LAN (IEEE 802.11a/b/g/n/ac)	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	16 dBm
5150 至 5725 MHz	16 dBm
5725 至 5850 MHz	16 dBm

Bluetooth	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	8 dBm

由於每個國家的波段頻道有所不同，用戶無法更改或調整操作頻率。本產品配置之頻率為區域頻率表內。為用戶着想，建議本裝置安裝及使用時，應最少離用戶身體 20 厘米。

(只限 70UR80*)

無線 LAN 模組 (LGSBWAC02) 規格	
無線 LAN (IEEE 802.11a/b/g/n/ac)	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	17 dBm
5150 至 5350 MHz	19 dBm
5725 至 5850 MHz	10.5 dBm
Bluetooth	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	8.5 dBm

由於每個國家的波段頻道有所不同，用戶無法更改或調整操作頻率。本產品配置之頻率為區域頻率表內。為用戶着想，建議本裝置安裝及使用時，應最少離用戶身體 20 厘米。

注意：開放來源程式碼軟件

欲獲得 GPL、LGPL、MPL 及其他有義務公開包含本產品內容原始程式授權的源代碼，及存取所有提及授權條款、版權聲明及其他相關文件，請瀏覽 <https://opensource.lge.com>。

LG Electronics 也可應您要求，在由您支付相關費用（如媒體成本、運費及處理費）的條件下以 CD-ROM 方式提供開放原始程式碼，如有需要請寄送電子郵件至 opensource@lge.com。

該產品最後一次出貨的三年內，任何收到此資訊的人可享此優惠。

授權

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

QUICKSET®
(僅限支援神奇遙控器的型號)

HEC Advance™
Covered by patents at patentlist.accessadvance.com

疑難排解

在 TV / HDMI 輸入中，在遙控器上按  按鈕三次即可在螢幕上顯示機型名稱和序號。

無法使用遙控器控制電視。	- 請檢查產品上的遙控器感應器，然後再試一次。 - 請檢查產品和遙控器之間是否有任何障礙物。 - 請檢查電池是否仍可使用，且已正確安裝（ 對 ,  對 ）。
沒有畫面顯示或沒有聲音。	- 請檢查產品是否已開機。 - 請檢查電線是否已連接至牆上插頭。 - 請連接其他產品，確認牆上插頭是否有問題。
電視突然關機。	- 檢查電源控制設定。電源供應可能中斷。 - 檢查自動關閉功能是否在設定相關的時間啟動。 - 自動關閉功能可能已運作。此產品配備了自動關閉功能，會在遙控器未使用時間達 15 分鐘，即這段時間內無任何輸入訊息時，便會自動關閉。
連接到電腦（HDMI）時，未偵測到任何訊號。	- 使用遙控器關閉/開啓電視。 - 重新連接 HDMI 纜線。 - 在開啓電視的情況下重新啟動電腦。
異常顯示情況	- 如接觸產品時感覺冰冷，於開啓時可能出現「跳線」情況。此為正常情況，產品並無異常。 - 本螢幕是擁有數百萬像素的先進產品。微細黑點及/或高亮彩色光點（紅色，藍或綠色）可能以每百萬分一單位出現於顯示屏幕上。此並不代表非正常運作及並不影響產品之性能及其可靠性。此現象亦會於第三方產品出現並不接受更換或退款。 - 於不同位置（左/右/上/下方）觀看時可能感受到螢幕不同亮度及顏色顯示。此現象的出現乃顯示螢幕的特性。此與產品性能無關，並其運作正常。 - 避免長時間接觸或以手指，握緊螢幕。否則，可能在螢幕上產生暫時的失真效應。 - 長時間顯示靜態圖像可能會引致殘像。請避免長時間在電視螢幕顯示固定畫面。
產生聲音	「咔嚓」斷裂雜音：於觀看或關閉電視時出現的斷裂雜聲乃因溫度與濕度而導致塑料的熱收縮所產生。此等雜聲於遇熱膨脹之產品較為常見。 - 電路嗡嗡聲/螢幕訊噪：低水平雜音乃由高速切換電路以產生大量電流令產品運作時發出。其因應產品會有所不同。雜音之產生並不影響產品的性能及可靠性。



- 清潔本產品時，切勿讓任何液體或異物滲入螢幕的上方或左右兩側的間隙。（視型號而定）
- 確保擰乾布上多餘的水分及清潔劑。
- 切勿直接在電視螢幕上噴水或清潔劑。
- 請只在乾布上噴上適度的水或清潔劑以擦拭螢幕。

法規

警告！（穩定性危害）

因為電視機可能會掉落並導致嚴重個人傷害及傷亡。只要採下列預防工作便可避免傷害事故發生（特別是兒童傷害）：

- 一律使用電視機製造商建議的櫃子或支架或安裝方法。
- 一律選用可安全支撐電視機的家具。
- 一律確保電視機不會懸在支撐家具的邊沿。
- 一律告訴兒童爬上家具觸碰電視機或其控制器的危險性。
- 一律將連接電視的電源線和電纜佈置整齊，以免出現絆倒、拉扯或抓住情況。
- 切勿將電視機置於搖晃不穩的位置。
- 切勿將電視機置放在家具高處（如櫥櫃或書架），除非以適當的支撐物固定家具和電視機。
- 切勿在電視機和支撐家具之間夾置布料或其他材料。
- 切勿在電視機上或在支撐電視機的家具上擺放可能誘使兒童攀爬的物品，例如玩具和遙控器。

無論是要電視機繼續放置原位或改放到其他地方，請務必採用上述建議。

符號

	AC 代表交流電。		代表待機。
	DC 代表直流電。		代表「開啓」（電源）。
	代表第二級設備。		代表危險電壓。



www.lg.com

Copyright © 2023 LG Electronics Inc.
All Rights Reserved.

ENGLISH

LED TV*

OWNER'S MANUAL

Safety and Reference

* LG LED TV applies LCD screen with LED backlights.

Please read this manual carefully
before operating your set and retain it
for future reference.

The model and serial number of the product are
located on the back and on one side of the product.
Record them below in case you ever need service.

Model _____

Serial No. _____

Before reading this manual

- Read this manual thoroughly before operating your TV, and keep it for future reference.
- On the website you can download the manual including installation, using, troubleshooting, specifications, license etc and view its contents on your PC or mobile device.
- **User Guide:** For more information about this TV, read the USER GUIDE embedded in the product. (Depending on model)
 - To open the USER GUIDE (ⓘ) → [(ⓘ)] → [Support] → [User Guide]

Separate Purchase

- Separate purchase items can be changed or modified for quality improvement without any notification. Contact your dealer to buy these items. These devices only work with certain models.
- The model name or design may be changed depending on the upgrade of product functions, manufacturer's circumstances or policies.
- Magic Remote Control :
Check whether your TV model supports Bluetooth in the Wireless Module Specification to verify whether it can be used with the Magic Remote.
- A cable to connect antennas and external devices must be purchased separately.

Note

- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- The items supplied with your product may vary depending on the model.
- Image shown may differ from your TV.

Warning! Safety instructions



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.
- **Do not place the TV and/or remote control in the following environments:**
 - Keep the product away from direct sunlight.
 - An area with high humidity such as a bathroom.
 - Near any heat source such as stoves and other devices that produce heat.
 - Near kitchen counters or humidifiers where they can easily be exposed to steam or oil.
 - An area exposed to rain or wind.
 - Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
- Near flammable objects such as gasoline or candles, or expose the TV to direct air conditioning.
- Do not install in excessively dusty places.
Otherwise, this may result in fire, electric shock, combustion/explosion, malfunction or product deformation.
- **Ventilation**
 - Install your TV where there is proper ventilation. Do not install in a confined space such as a bookcase.
 - Do not install the product on a carpet or cushion.
 - Do not block or cover the product with cloth or other materials while unit is plugged in.
- Take care not to touch the ventilation openings. When watching the TV for a long period, the ventilation openings may become hot.

- Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.
- Do not move the TV whilst the Power cord is plugged in.
- Do not use a damaged or loosely fitting power cord.
- Be sure to grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the TV.
- Do not connect too many devices to the same AC power outlet as this could result in fire or electric shock.
- **Disconnecting the Device from the Main Power**
 - The power plug is the disconnecting device. In case of an emergency, the power plug must remain readily accessible.
- Do not let your children climb or cling onto the TV. Otherwise, the TV may fall over, which may cause serious injury.
- **Outdoor Antenna Grounding** (Can differ by country):
 - If an outdoor antenna is installed, follow the precautions below.
An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits as death or serious injury can occur.
- Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.
- Make sure the power cord is connected securely to the TV and wall socket if not secured damage to the Plug and socket may occur and in extreme cases a fire may break out.
- Do not insert metallic or inflammable objects into the product. If a foreign object is dropped into the product, unplug the power cord and contact the customer service.
- Do not touch the end of the power cord while it is plugged in. You may be electrocuted.
- **If any of the following occur, unplug the product immediately and contact your local customer service.**
 - The product has been damaged.
 - If water or another substance enters the product (like an AC adapter, power cord, or TV).
 - If you smell smoke or other odors coming from the TV.
 - When lightning storms or when unused for long periods of time.

Even the TV is turned off by remote control or button, AC power source is connected to the unit if not unplugged in.
- Do not use high voltage electrical equipment near the TV (e.g., a bug zapper). This may result in product malfunction.
- Do not attempt to modify this product in any way without written authorization from LG Electronics. Accidental fire or electric shock can occur. Contact your local customer service for service or repair. Unauthorized modification could void the user's authority to operate this product.
- Use only an authorized attachments / accessories approved by LG Electronics. Otherwise, this may result in fire, electric shock, malfunction, or product damage.
- Never disassemble the AC adapter or power cord. This may result in fire or electric shock.
- Handle the adapter carefully to avoid dropping or striking it. An impact could damage the adapter.
- To reduce the risk of fire or electrical shock, do not touch the TV with wet hands. If the power cord prongs are wet or covered with dust, dry the power plug completely or wipe dust off.
- **Batteries**
 - Store the accessories (battery, etc.) in a safe location out of the reach of children.
 - Do not short circuit, disassemble, or allow the batteries to overheat. Do not dispose of batteries in a fire. Batteries should not be exposed to excessive heat.
 - Caution: Risk of fire or explosion if the battery is replaced by an incorrect type.
- **Moving**
 - When moving, make sure the product is turned off, unplugged, and all cables have been removed. It may take 2 or more people to carry larger TVs. Do not press or put stress on the front panel of the TV. Otherwise, this may result in product damage, fire hazard or injury.
- Keep the packing anti-moisture material or vinyl packing out of the reach of children.
- Do not allow an impact shock, any objects to fall into the product, and do not drop anything onto the screen.
- Do not press strongly upon the panel with a hand or a sharp object such as a nail, pencil, or pen, or make a scratch on it. It may cause damage to screen.
- **Cleaning**
 - When cleaning, unplug the power cord and wipe gently with a soft/dry cloth. Do not spray water or other liquids directly on the TV. Do not clean your TV with chemicals including glass cleaner, any type of air freshener, insecticide, lubricants, wax (car, industrial), abrasive, thinner, benzene, alcohol etc., which can damage the product and/or its panel. Otherwise, this may result in electric shock or product damage.

Installation

Lifting and moving the TV

Please note the following advice to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.

- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to avoid damage.
- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.
- When transporting a large TV, there should be at least 2 people.
- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.
- Do not apply excessive pressure to cause flexing / bending of frame chassis as it may damage screen.
- When handling the TV, be careful not to damage the protruding buttons.



- Avoid touching the screen at all times, as this may result in damage to the screen.
- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

Mounting on the Table

- 1 Lift and tilt the TV into its upright position on a table.
 - Leave a 10 cm (minimum) space from the wall for proper ventilation.
- 2 Connect the power cord to a wall outlet.



- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Do not use any unapproved items to ensure the safety and product life span.
- Any damage or injuries caused by using unapproved items are not covered by the warranty.
- If you install the TV on a stand, you need to take actions to prevent the product from overturning. Otherwise, the product may fall over, which may cause injury.
- When assembling the stand, ensure that all of the provided screws are attached. If the screws are not fully tightened, the product may tilt or tip over, resulting in damage. Tightening the screws with excessive force may cause them to come off due to abrasion of the screw joint.

Securing TV to the Wall

- 1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.
 - If there are bolts inserted at the eye-bolts position, remove the bolts first.
 - 2 Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV.
 - 3 Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface.
- Use a platform or cabinet that is strong and large enough to support the TV securely.
 - Brackets, bolts and ropes are not provided. You can obtain additional accessories from your local dealer.

Mounting to the Wall

Attach an optional wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor. When you attach the TV to other building materials, please contact qualified personnel. LG recommends that wall mounting be performed by a qualified professional installer. We recommend the use of LG's wall mount bracket. LG's wall mount bracket is easy to move with cables connected. When you do not use LG's wall mount bracket, please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. It is advised to connect all the cables before installing fixed wall mounts.



- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- For more information of screws and wall mount bracket, refer to the Separate purchase.
- If you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product. When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop.
- When mounting a TV on the wall, make sure not to install the TV by hanging the power and signal cables on the back of the TV.
- Do not install this product on a wall if it could be exposed to oil or oil mist. This may damage the product and cause it to fall.

When installing the wall mounting bracket, it is recommended to cover the stand hole using tape, in order to prevent the influx of dust and insects. (Depending on model)

Antenna/Cable


Connect the TV to a wall antenna socket with an RF cable (75 Ω).

- Use a signal splitter to use more than 2 TVs.
- If the image quality is poor, install a signal amplifier properly to improve the image quality.
- If the image quality is poor with an antenna connected, try to realign the antenna in the correct direction.
- An antenna cable and converter are not supplied.
- This TV cannot receive ULTRA HD (3840 x 2160 pixels) broadcasts directly because the related standards have not been confirmed. (Depending on model)

Starting TV

Turning on the TV

You can simply operate the TV functions, using the button.

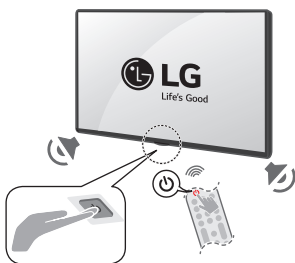

Power On (Press)
Power Off¹⁾ (Press and Hold)
Menu Control (Press²⁾)
Menu Selection (Press and Hold³⁾)

✔ Note

- If the TV is turned on for the first time after it was shipped from the factory, initialization of the TV may take a few minutes.
- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.
- The device must be easily accessed to a location outlet near the access. Some devices are not made by turning on / off button, turning off the device and unplugging the power cord.

- 1) All running apps will close, and any recording in progress will stop. (Depending on country)
- 2) You can access and adjust the menu by pressing the button when TV is on.
- 3) You can use the function when you access menu control.

Connections

Connect various external devices to the TV and switch input modes to select an external device. For more information of external device's connection, refer to the manual provided with each device.

HDMI

- When connecting the HDMI cable, the product and external devices should be turned off and unplugged.
- Supported HDMI Audio format (Depending on model):
True HD (48 kHz),
Dolby Digital / Dolby Digital Plus (32 kHz / 44.1 kHz / 48 kHz),
PCM (32 kHz / 44.1 kHz / 48 kHz / 96 kHz / 192 kHz),
DTS (44.1 kHz / 48 kHz / 88.2 kHz / 96 kHz),
DTS-HD (44.1 kHz / 48 kHz / 88.2 kHz / 96 kHz / 176.4 kHz / 192 kHz)

✔ Note

- If the device connected to Input Port also supports HDMI Deep Colour, your picture may be clearer. However, if the device doesn't support it, it may not work properly. In that case, change the TV's [HDMI Deep Colour] setting to off. (Depending on model)
-  →  → [General] → [External Devices] → [HDMI Settings] → [HDMI Deep Colour] (Depending on model)
- Use a certified cable with the HDMI logo attached.
- If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI Cable Types
 - Ultra High Speed HDMI[®]/TM cable (3 m or less)

USB

Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly. (Depending on model)

✔ Note

- For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. Use an extension cable that supports USB 2.0 if the USB cable or USB memory stick does not fit into your TV's USB port. (Depending on model)

IR Blaster

Control the set-top box (cable/satellite/IP/OTT), Blu-ray/DVD player, soundbar, game consoles, etc., using the IR Blaster. (Depending on country) (Depending on model)

✔ Note

- Connect the IR Blaster cable to the TV's IR Blaster port.
- Use universal control settings to control the device.
- Secure the IR Blaster with the 3M tape provided.

External Devices

Available external devices are: Blu-ray player, HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, gaming devices, and other external devices.

✔ Note

- The external device connection may differ from the model.
- In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the [Picture] menu until the picture is clear.
- In PC mode, some resolution settings may not work properly depending on the graphics card.
- If Ultra HD content is played on your PC, video or audio may become disrupted intermittently depending on your PC's performance. (Depending on model)
- When connecting to a wired LAN, use a CAT 7 cable with high-speed Internet transmission. (Only when LAN port is provided.)

Specifications

- The annual energy consumption indicated on the energy label is measured in accordance with IEC 62087 and the Hong Kong Energy Efficiency Labelling Scheme (EELS).
- The actual energy consumption depends on the usage environment (the content watched, TV settings, etc.).

Power requirement	AC 100-240 V~ 50/60 Hz
--------------------------	------------------------

Broadcasting Specifications		
	Digital TV	Analogue TV
Television system	DTMB	PAL D/K, PAL I, NTSC-M
Programme coverage	DTMB: 21~69	PAL D/K: VHF/UHF 1~69, CATV 1~47 PAL I: VHF/UHF 1~69, CATV 1~47 NTSC-M: VHF/UHF 2~78, CATV 1~71
External antenna impedance	75 Ω	

- Certain 8K input/decoding standards may not be supported. An additional device may be necessary to support certain 8K standards. Upscaled and enhanced 8K images will vary depending upon the source content (Depending upon model).

Environment Condition			
Operating Temperature	0 °C to 40 °C	Storage Temperature	-20 °C to 60 °C
Operating Humidity	Less than 80 %	Storage Humidity	Less than 85 %

Conditions for Wall Mount Installation	
Tilt Angle	0° - 15°

* This specification applies only to products with an adjustable wall mount angle.

- For information of the power supply and power consumption, refer to the label attached to the product.
 - The typical power consumption is measured in accordance with IEC 62087 or each country's energy regulations.
 - * On some models, the label is inside the external device connection terminal cover.
 - * Depending on the model or country, the typical power consumption may not be on label.

Product Information

(Only 65/75QNED86*, 86QNED81*)

Wireless module(LGSBWAC95)Specifications	
Wireless LAN (IEEE 802.11a/b/g/n/ac)	
Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	19 dBm
5,150 to 5,725 MHz	18 dBm
5,725 to 5,850 MHz	13.5 dBm
Bluetooth	
Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	9 dBm

As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

(Only 65/55/65/75QNED81*, 50QNED80*)

Wireless module(LGSBWAC97)Specifications	
Wireless LAN (IEEE 802.11a/b/g/n/ac)	
Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	19 dBm
5,150 to 5,725 MHz	18 dBm
5,725 to 5,850 MHz	13.5 dBm
Bluetooth	
Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	9 dBm

As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

(Only QNED75*)

Wireless module(LGSBWAC03)Specifications	
Wireless LAN (IEEE 802.11a/b/g/n/ac)	
Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	18.5 dBm
5,150 to 5,725 MHz	19.5 dBm
5,725 to 5,850 MHz	11.5 dBm
Bluetooth	
Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	9 dBm

As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

(Only 43/50/55/65/75UR91*, 75UR90*, 43/50/55/65UR80*)

Wireless module(LGSBWAC23)Specifications	
Wireless LAN (IEEE 802.11a/b/g/n/ac)	
Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	16 dBm
5,150 to 5,725 MHz	16 dBm
5,725 to 5,850 MHz	16 dBm
Bluetooth	
Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	8 dBm

As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

(Only 70UR80*)

Wireless module(LGSBWAC02)Specifications

Wireless LAN (IEEE 802.11a/b/g/n/ac)

Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	17 dBm
5,150 to 5,350 MHz	19 dBm
5,725 to 5,850 MHz	10.5 dBm

Bluetooth

Frequency range	Output Power (Max.)
2,400 to 2,483.5 MHz	8.5 dBm

As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

Licenses

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

QUICKSET®
(Magic Remote supported models only)

HEVC Advance™
Covered by patents at patentlist.accessadvance.com

Troubleshooting

In TV / HDMI input, press the  button on the remote control three times to display the model name and serial number on the screen.

Cannot control the TV with the remote control.	• Check the remote control sensor on the product and try again. • Check if there is any obstacle between the product and the remote control. • Check if the batteries are still working and properly installed (⊕ to ⊕, ⊖ to ⊖).
No image display and no sound is produced.	• Check if the product is turned on. • Check if the power cord is connected to a wall outlet. • Check if there is a problem in the wall outlet by connecting other products.
The TV turns off suddenly.	• Check the power control settings. The power supply may be interrupted. • Check if the auto-off function is activated on the settings related time. • The auto-off function may have worked. This product is equipped with an auto-off function that automatically turns off the power if the remote control is not used for 15 minutes without an input signal.
When connecting to the PC (HDMI), no signal is detected.	• Turn the TV off/on using the remote control. • Reconnect the HDMI cable. • Restart the PC with the TV on.
Abnormal Display	• If the product feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with product. • This panel is an advanced product that contains millions of pixels. You may see tiny black dots and/or brightly coloured dots (red, blue or green) at a size of 1 ppm on the panel. This does not indicate a malfunction and does not affect the performance and reliability of the product. This phenomenon also occurs in third-party products and is not subject to exchange or refund. • You may find different brightness and colour of the panel depending on your viewing position(left/right/top/down). This phenomenon occurs due to the characteristic of the panel. It is not related with the product performance, and it is not malfunction. • Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effects on the screen. • Displaying a still image for a prolonged period of time may cause image sticking. Avoid displaying a fixed image on the TV screen for a long period of time.
Generated Sound	• "Cracking" noise: A cracking noise that occurs when watching or turning off the TV is generated by plastic thermal contraction due to temperature and humidity. This noise is common for products where thermal deformation is required. • Electrical circuit humming/panel buzzing: A low level noise is generated from a high-speed switching circuit, which supplies a large amount of current to operate a product. It varies depending on the product. This generated sound does not affect the performance and reliability of the product.



- When cleaning the product, be careful not to allow any liquid or foreign objects to enter the gap between the upper, left or right side of the panel and the guide panel. (Depending on model)
- Make sure to wring any excess water or cleaner from the cloth.
- Do not spray water or cleaner directly onto the TV screen.
- Make sure to spray just enough of water or cleaner onto a dry cloth to wipe the screen.

Regulatory

WARNING! (STABILITY HAZARD)

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

Symbols

	Refers to alternating current (AC).
	Refers to direct current (DC).
	Refers to class II equipment.

	Refers to stand-by.
	Refers to "ON" (power).
	Refers to dangerous voltage.

