



ENGLISH

ITALIANO

ESPAÑOL

FRANCAIS

DEUTSCH

OWNER'S MANUAL

# AIR CONDITIONER

Please read this manual carefully before operating your set and retain it for future reference.

VENTILATOR

Original Instruction



3828A20468P  
Rev.02\_021919

[www.lg.com](http://www.lg.com)

Copyright © 2011 - 2019 LG Electronics Inc. All Rights Reserved.

# TABLE OF CONTENTS

## 3 SAFETY PRECAUTIONS

---

## 6 PRIOR TO OPERATION

---

- 6 Preparing for operation
- 6 Usage
- 6 Cleaning and maintenance
- 6 Service

## 7 INTRODUCTION

---

- 7 Symbols used in this Manual
- 7 Features

## 10 OPERATING INSTRUCTIONS (ACCESSORY)

---

- 10 LCD Remote Controller (PQRCVSL0 / PQRCVSL0QW)
- 11 Method to Operate and Select Air Volume – Interlinked Operation with Ventilation.
- 12 Method to Operate and Select Air Volume –Ventilation Single Operation
- 13 Fast/Energy saving ventilation mode

## 14 CHARACTERISTICS

---

- 14 Ventilation via Total Heat Exchanger
- 14 Normal Ventilation

## 15 MAINTENANCE AND SERVICE

---

- 15 Handling and Cleaning
- 19 Method to Clean and Replace Each Part
- 20 Assembly and Check after Maintenance

## 21 CHECK ITEM PRIOR TO NOTIFY A FAILURE

---

# Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

**⚠ WARNING** This symbol indicates the possibility of death or serious injury.

**⚠ CAUTION** This symbol indicates the possibility of injury or damage.

- Meanings of symbols used in this manual are as shown below.

	<b>Be sure not to do.</b>
	<b>Be sure to follow the instruction.</b>

## ⚠ WARNING

### Installation

- Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.
  - There is risk of fire or electric shock.
- For electrical work, contact the dealer, seller, a qualified electrician, or an authorized service center.
  - Do not disassemble or repair the product. There is risk of fire or electric shock.
- Always ground the product.
  - There is risk of fire or electric shock.
- Install the panel and the cover of control box securely.
  - There is risk of fire or electric shock.
- Always install a dedicated circuit and breaker.
  - Improper wiring or installation may cause fire or electric shock
- Use the correctly rated breaker or fuse.
  - There is risk of fire or electric shock.
- Do not modify or extend the power cable.
  - There is risk of fire or electric shock.
- Do not install, remove, or re-install the unit by yourself (customer).
  - There is risk of fire, electric shock, explosion, or injury.
- Be cautious when unpacking and installing the product.
  - Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.
- For installation, always contact the dealer or an authorized service center.
  - There is risk of fire, electric shock, explosion, or injury.
- Do not install the product on a defective installation stand.
  - It may cause injury, accident, or damage to the product.
- Do not let the ventilator run for a long time when the humidity is very high and a door or a window is left open.
  - Moisture may condense and wet or damage furniture.
- For re-installation of the installed product, always contact the dealer or an authorized service center.
  - There is risk of fire, electric shock, explosion or injury.

- Do not open the maintenance cover of the main body during operation.
  - Otherwise, it may cause electrical shock.
- Use the outdoor air suction hole with the net installed to ensure that birds could not come in.
  - Remove estrange things like the bird's nest. Otherwise, it may cause scarcity of indoor oxygen.
- Install the air intake where polluted air can not be directly sucked in.
  - It may cause various accidents, including suffocation, due to the suction of harmful gasses(CO, etc.)
- Install the product a place that can support its weight.
  - Otherwise, it may cause accident due to falling of the product.
- Precautions must be taken to avoid the back-flow of gases into the room from the open flue of gas or other fuel-burning appliances.

## **Operation**

- Take care to ensure that power cable could not be pulled out or damaged during operation.
  - There is risk of fire or electric shock.
- Do not place anything on the power cable.
  - There is risk of fire or electric shock.
- Do not touch(operate) the product with wet hands.
  - There is risk of fire or electrical shock.
- Do not place a heater or other appliances near the power cable.
  - There is risk of fire and electric shock.
- Do not allow water to run into electric parts.
  - It may cause There is risk of fire, failure of the product, or electric shock.
- Do not store or use flammable gas or combustibles near the product.
  - There is risk of fire or failure of product.
- When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.
  - Do not use the telephone or turn switches on or off.
    - There is risk of explosion or fire
- If strange sounds, or small or smoke comes from product. Turn the breaker off
  - There is risk of electric shock or fire.
- Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.
  - There is risk of property damage, failure of product, or electric shock.
- When the product is soaked (flooded or submerged), contact an authorized service center.
  - There is risk of fire or electric shock.
- Be cautious that water could not enter the product.
  - There is risk of fire, electric shock, or product damage.
- Turn the breaker off when cleaning or maintaining the product.
  - There is risk of electric shock.
- Don't touch a dedicated circuit or breaker with wet hands.
  - There is risk of electric shock.
- Use a firm stool or ladder when cleaning or maintaining the roduct.
  - Be careful and avoid personal injury.

**⚠ CAUTION****Installation**

- Use two or more people to lift and transport the product.
  - Avoid personal injury.
- Do not install the product where it will be exposed to sea wind (salt spray) directly.
  - It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.
- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.
- The air conditioner should be used only for the applications for which it has been designed : the indoor unit is not suitable to be installed in areas used for laundry.

**Operation**

- Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.)
  - This could harm to your health.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer ventilator, not a precision refrigeration system.
  - There is risk of damage or loss of property.
- Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.
  - There is risk of fire, electric shock, or damage to the plastic parts of the product.
- Do not step on or put anything on the product. (outdoor units)
  - There is risk of personal injury and failure of product.
- Use a firm stool or ladder when cleaning or maintaining the product.
  - Be careful and avoid personal injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - Children should be supervised to ensure that they do not play with the appliance.

## Prior to operation

### *Preparing for operation*

1. Contact an installation specialist for installation.
2. Plug in the power plug properly.
3. Use a dedicated circuit.
4. Do not use an extension cord.
5. Do not start/stop operation by plugging/unplugging the power cord.
6. If the cord/plug is damaged, replace it with only an authorized replacement part.

### *Usage*

1. Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
2. Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
3. Do not use this ventilator for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

### *Cleaning and maintenance*

1. Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
2. Do not use water to clean inside the ventilator. Exposure to water can destroy the insulation, leading to possible electric shock.
3. When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a possibility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.
4. Ensure that the fan is switched off from the supply mains before removing the guard.

### *Service*

For repair and maintenance, contact your authorized service dealer.

# Introduction

## Symbols used in this Manual



This symbol alerts you to the risk of electric shock.



This symbol alerts you to hazards that could cause harm to the ventilator.

### NOTICE

This symbol indicates special notes.

## Features


### ! WARNING

This appliance should be installed in accordance with national wiring regulations. This guide acts as a guide to help to explain product features.

### ! WARNING

Indoor Unit ground wires are required for preventing electrical shock accident during current leakage, Communication disorder by noise effect and motor current leakage (without connection to pipe).

Models: LZ-H025GBA2 / LZ-H025GBA3

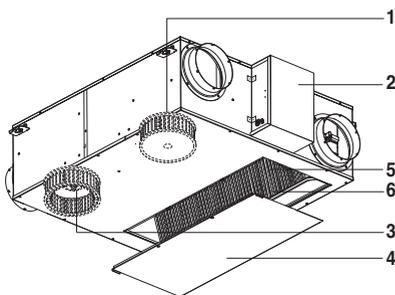

#### 1. Blower for Supply Air


A blower for sucking outside air.

#### 2. Control Box

#### 3. Blower for Exhaust Air

A blower for draining polluted air outside.

#### 4. Maintenance cover

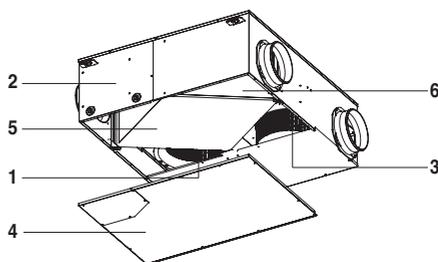

#### 5. Total Heat Exchanger



Exchanges temperature and moisture between air supply air and exhaust air.

#### 6. Air Filter

Prevents clogging of the Total heat exchanger due to dust.

\* The figure of Total Heat Exchanger can be different by the product model.

**Models: LZ-H035GBA2 / LZ-H035GBA3**

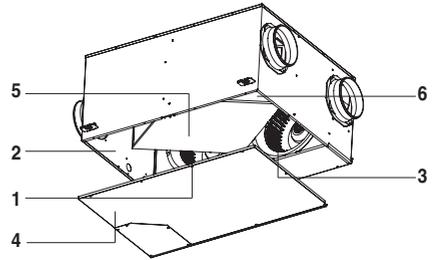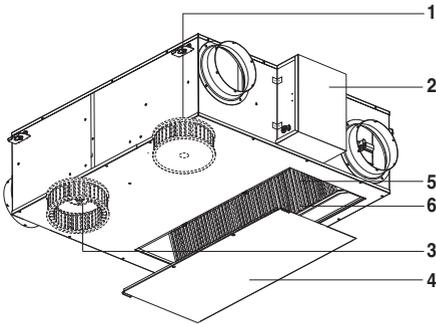

**1. Blower for Supply Air**

A blower for sucking outside air.

**2. Control Box**

**3. Blower for Exhaust Air**

A blower for draining polluted air outside.

**4. Maintenance cover**

**5. Total Heat Exchanger**


Exchanges temperature and moisture between air supply air and exhaust air.

**6. Air Filter**

Prevents clogging of the Total heat exchanger due to dust.

※ The figure of Total heat Exchanger can be different by the Product Model.

**Models: LZ-H050GBA2**

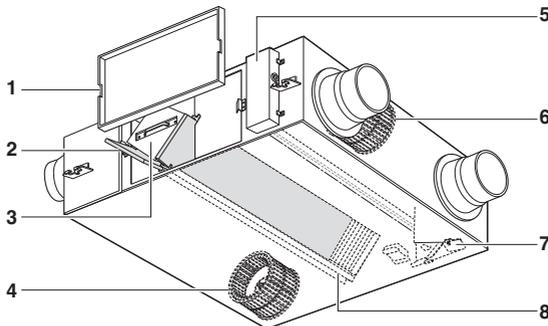

**1. Maintenance Cover**

**2. Air Filter**

It prevents dust from clogging in Total Heat Exchanger.

**3. Total Heat Exchanger**

It changes temperature and humidity between Supplying Air and exhausted air.

**4. Blower for Exhaust Air**

It is a fan for discharging the contaminated air to outdoor.

**5. Control box**

**6. Blower for Supply Air**

It is a fan for inhaling exterior air into an indoor space.


**7. Damper plate(board)**

It converts exchanging mode between total heat ventilation and general ventilation.

**8. Total Heat Exchanger holder**

It is used in guiding for the installation of Total Heat Exchanger.

※ The figure of Total heat Exchanger can be different by the Product Model.

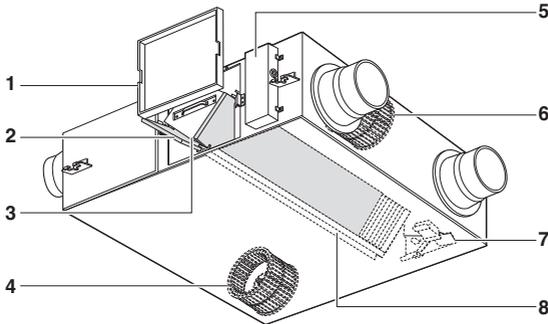**Models: LZ-H080GBA2 / LZ-H100GBA2****1. Maintenance Cover****2. Air Filter**

It prevents dust from clogging in Total Heat Exchanger.

**3. Total Heat Exchanger**

It changes temperature and humidity between Supplying Air and exhausted air.

**4. Blower for Exhaust Air**

It is a fan for discharging the contaminated air to outdoor.

**5. Control box****6. Blower for Supply Air**

It is a fan for inhaling exterior air into an indoor space.


**7. Damper plate(board)**

It converts exchanging mode between total heat ventilation and general ventilation.

**8. Total Heat Exchanger holder**

It is used in guiding for the installation of Total Heat Exchanger.

\* The form of Total Heat Exchanger varies according to models.

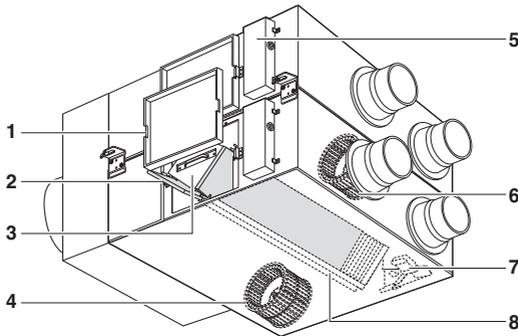**Models: LZ-H150GBA2 / LZ-H200GBA2****1. Maintenance Cover****2. Air Filter**

It prevents dust from clogging in Total Heat Exchanger.

**3. Total Heat Exchanger**

It changes temperature and humidity between Supplying Air and exhausted air.

**4. Blower for Exhaust Air**

It is a fan for discharging the contaminated air to outdoor.

**5. Control box****6. Blower for Supply Air**

It is a fan for inhaling exterior air into an indoor space.

**7. Damper plate(board)**

It converts exchanging mode between total heat ventilation and general ventilation.


**8. Total Heat Exchanger holder**

It is used in guiding for the installation of Total Heat Exchanger.

\* The form of Total Heat Exchanger varies according to models.

# Operating Instructions (Accessory)

## LCD Remote Controller (PQRCVSL0 / PQRCVSL0QW)

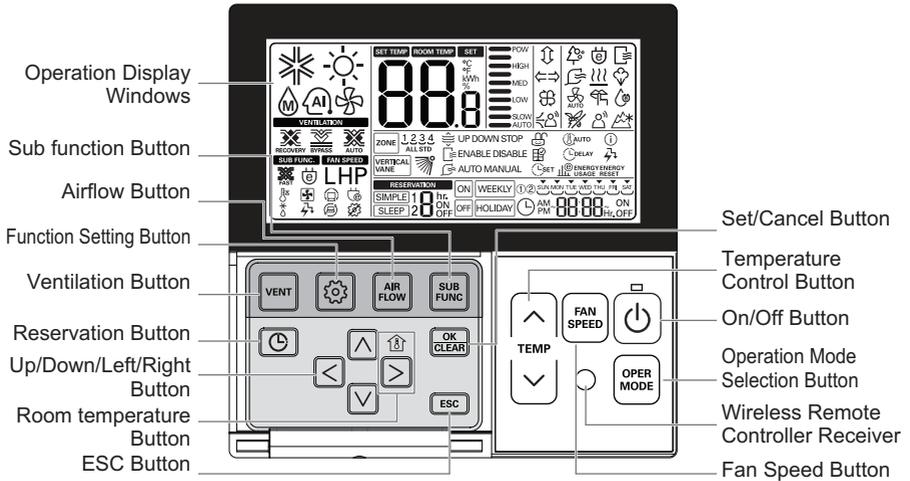

**Operation Display Windows :** Displays the status of operation and settings

**Ventilation Button :** For interlocking operations of air-conditioner and ventilator

**Function Setting Button :** To select the additional operations function

**Airflow Button :** To select the airflows

**Sub function Button :** To select the additional operations function

**Reservation Button :** To program the schedule

**Up/Down/Left/Right Button :** To change the settings in the menu

**Room temperature Button :** To check the indoor temperature

**ESC Button :** To exit from the menu

**Set/Cancel Button :** To save the settings in the menu

**Temperature Control Button :** To change the desired temperature

**Fan Speed Button :** To select the fan speed

**On/Off Button :** To turn on/off with a remote controller


**Mode Selection Button :** To select the operating mode

**Wireless Remote Controller Receiver**

※ Some functions may not be operated and displayed depending on the product type.


## Method to Operate and Select Air Volume – Interlinked Operation with Ventilation.

It can be used only when the air conditioner and the ventilator are interlocked. This function is to cool off the air in the room using a ventilator while air conditioner function is operating.

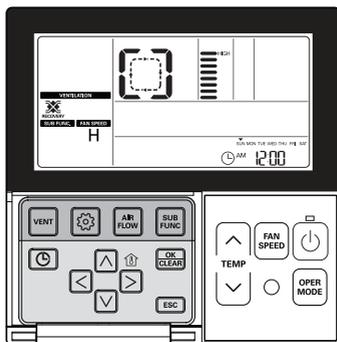

Press  button on the remote controller.

- It can be used only when the air conditioner and the general ventilator are interlocked.

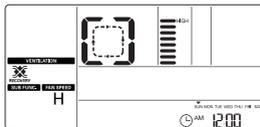

Press  button in the Vent mode to run the ventilator.

Press  button in the Vent mode to change the ventilation operation mode.

- Each time you press the button the mode will change in the order of Heat exchange → normal → auto.

※ It only displays on the remote controller display when it is in ventilation mode, and it displays the desired temperature when it returns to air condition mode.

Press  button in the Vent mode to change the fan speed.

- Each time you press the button the fan speed is selected in the order of low → high → power.

- If a CO<sub>2</sub> sensor is installed, you can select the fan speed in the order of low → high → power → auto.


### How to convert to air conditioner mode

- 1) Auto conversion: if no button is selected for more than 15 seconds in the vent mode, the system will convert to air conditioner mode automatically.
- 2) Manual conversion: press the  button in the vent mode to convert manually.



## Fast/Energy saving ventilation mode

This function is to facilitate the ventilation function more efficiently by setting quick/energy-saving mode in the additional functions of ventilator.

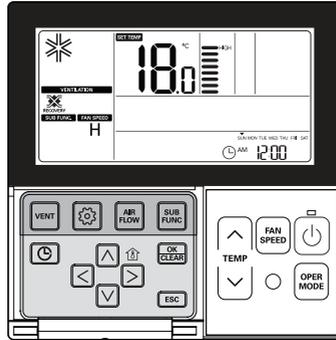

### Fast

It ventilates quickly.

Press **SUB FUNC** button in the Vent mode.

- The additional vent mode converts Fast → Energy-saving sequentially.

Press **OK CLEAR** button when the  icon blinks on the display screen.



Press **ESC** button to exit.

### Energy Saving

It performs Energy-saving function while ventilating efficiently.

Press **SUB FUNC** in the Vent mode.

The additional vent mode converts Fast → Energy-saving sequentially.

Press **OK CLEAR** button when the Energy-saving icon blinks on the display screen.



Press **ESC** button to exit.


- \* The additional mode of general ventilation and direct expansion ventilation is identical.
- \* The additional mode settings for air cleaner/heater/humidifier are as the same as the air conditioner.

# Characteristics

## Ventilation via Total Heat Exchanger

**Exhausts indoor air via the Total Heat Exchanger outdoor.**


- The outdoor air heat exchanged is supplied to indoor. Operate the ventilator in the **Ventilation via Total heat exchanger** in summer/winter when cool/heat operation is done.

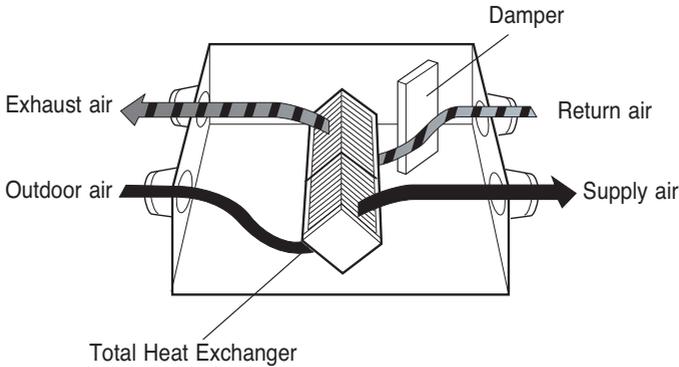

## Normal Ventilation

**Exhausts the polluted indoor-air directly without via the Total Heat Exchanger.**

- Operate the ventilator in the **Normal Ventilation** in spring/autumn when the Total heat exchanger is not required.

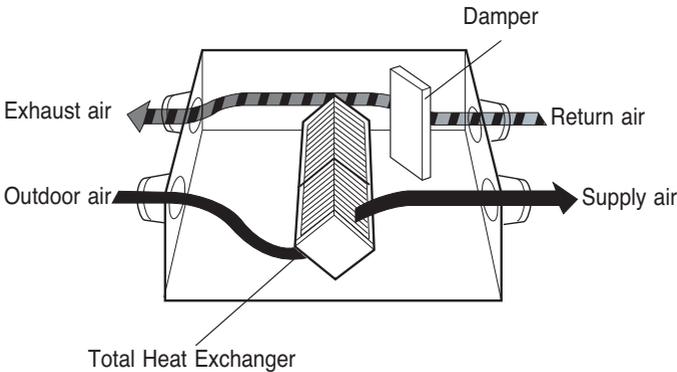

### **⚠ CAUTION**

In case of high outdoor pollution degree like yellow sand please pause the ventilator.

# Maintenance and Service

## Handling and Cleaning

To prevent function of the ventilator deteriorating, clean dust adhered to the air filter and total heat exchanger regularly.

### Cleaning Cycle

- Air filter: More than once every 6 months.
- Total heat exchanger: More than once every 2 years (Cleaning cycle may increase according to pollution degree.)

### Method to take each part out

**Model: LZ-H025GBA2 / LZ-H035GBA2**

#### 1. Remove the maintenance cover.

Put the hands inside of the ceiling from the maintenance cover, and pull the maintenance cover up. (Looser the hinge and detach the maintenance cover.)


#### 2. Take the air filter out.

Take the air filter with each contained to the left/right downside of the Total heat exchanger.

\* If it adheres to the ceiling in reverse, it is equal to the left/right topside of the Total heat exchanger.

### ⚠ CAUTION

Take care to ensure that you could not damage when taking the air filter out since there is a sharp part on it.

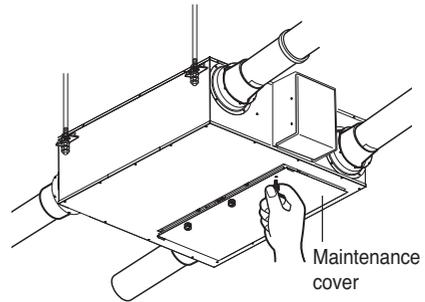

#### 3. Take the Total heat exchanger out.


Catch the handle and then take the Total heat exchanger out from the main body. (2 units)

### ⚠ WARNING

Turn the breaker off when cleaning the product.

### ⚠ CAUTION

Gloves should be worn when doing the maintenance work.

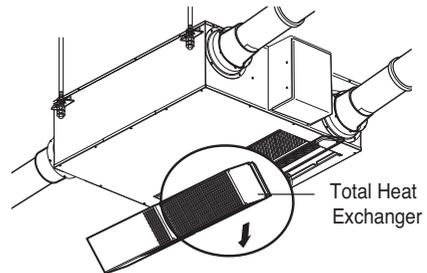

**Models : LZ-H025GBA3 / LZ-H035GBA3**

**1. Remove the maintenance cover.**

Put the hands inside of the ceiling from the maintenance cover, and pull the maintenance cover up. (Looser the hinge and detach the maintenance cover.)


**2. Take the air filter out.**

Take the air filter with each contained to the left/right downside of the Total heat exchanger.

\* If it adheres to the ceiling in reverse, it is equal to the left/right topside of the Total heat exchanger.

**⚠ CAUTION**

Take care to ensure that you could not damage when taking the air filter out since there is a sharp part on it.

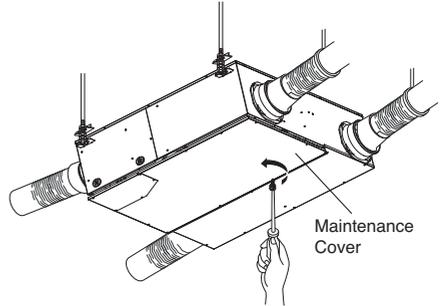

**3. Take the Total heat exchanger out.**


Catch the handle and then take the Total heat exchanger out from the main body.

**⚠ WARNING**

Turn the breaker off when cleaning the product.


**⚠ CAUTION**

Gloves should be worn when doing the maintenance work.

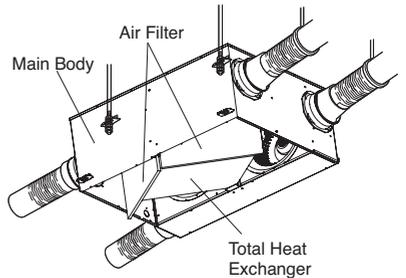


**Model: LZ-H050GBA2 / LZ-H080GBA2 / LZ-H100GBA2****1. Remove the maintenance cover.**

Loosen a screw on the maintenance cover.  
Put the hands inside of the ceiling from the maintenance cover, and pull the maintenance cover up. (Loosen the hinge and detach the maintenance cover.)

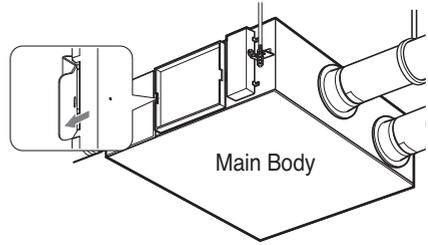**2. Take the air filter out.**

Take the air filter with each contained to the left/right downside of the Total heat exchanger.  
\* If it adheres to the ceiling in reverse, it is equal to the left/right topside of the Total heat exchanger.

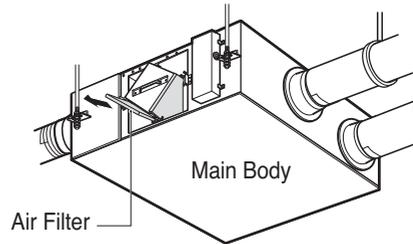**⚠ CAUTION**

Take care to ensure that you could not damage when taking the air filter out since there is a sharp part on it.

**3. Take the Total heat exchanger out.**


Catch the handle and then take the Total heat exchanger out from the main body. (2 units)

**⚠ WARNING**

Turn the breaker off when cleaning the product.

**⚠ CAUTION**

Gloves should be worn when doing the maintenance work.

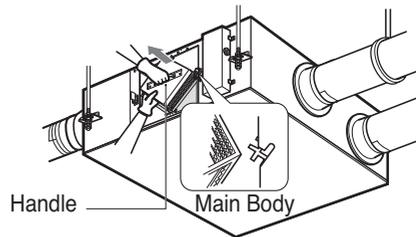

**Model: LZ-H150GBA2 / LZ-H200GBA2**

**1. Remove the maintenance cover.**

Loosen a screw on the maintenance cover.

Put the hands inside of the ceiling from the maintenance cover, and pull the maintenance cover up. (Looser the hinge and detach the maintenance cover.)


**2. Take the air filter out.**

Take the air filter with each contained to the left/right downside of the total heat exchanger.

\* If it adheres to the ceiling in reverse, it is equal to the left/right topside of the total heat exchanger.

**⚠ CAUTION**

Take care to ensure that you could not damage when taking the air filter out since there is a sharp part on it.

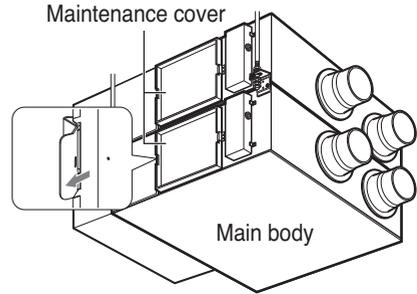

**3. Take the Total heat exchanger out.**


Catch the handle and then take the Total heat exchanger out from the main body. (2 units)

**⚠ WARNING**

Turn the breaker off when cleaning the product.

**⚠ CAUTION**

Gloves should be worn when doing the maintenance work.

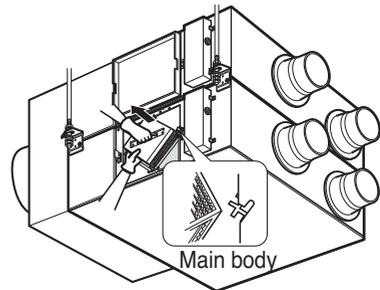


## Method to Clean and Replace Each Part

### 1. Cleaning of Air Filter

Clean once every 6 months.


- Clean dirt from the air filter using a vacuum cleaner or washing with water.  
(if dirt is conspicuous, wash with a neutral detergent in lukewarm water)
- After washing with water, dry well in the shade.  
(Do not expose the air filter to direct sunlight or heat from a fire when drying it)
- If the air filter is damaged, purchase it from the service center or professional agent.

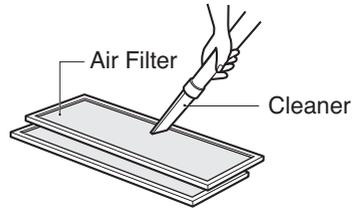

### 2. Cleaning of Total Heat Exchanger

Suck dusts adhered to the surface of the Total heat exchanger with a cleaner.

- Use the cleaner that attached to brush at its nozzle, and use a soft brush.
- Do not use a hard nozzle on the cleaner.  
(Otherwise, surface of the Total heat exchanger may be damaged.)
- Never wash the Total heat exchanger with water.
- Replacement expenses are for a consideration after 2 years from the purchasing date.
- Expenses are for a consideration when you will contact the service center even within 2 years from the purchasing date.
- For service, always contact the dealer or an Authorized Service Center.

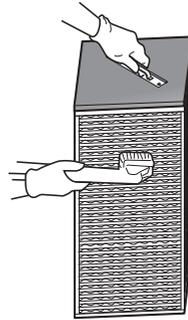

**Air Filter**




**Total Heat Exchanger**

# Assembly and Check after Maintenance

## 1. Assembly of Total heat exchanger


Securely put the corner parts (4 parts) of the Total heat exchanger into the holder for assembly and slide them into the inside of the main body.

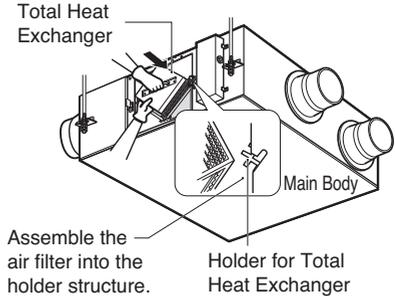

## 2. Assembly of air filter


Assemble the air filter into the holder structure of the Total heat exchanger.

- Take care to ensure that surface of the Total heat exchanger could not be damaged.
- Dusts adhered to the Total heat exchanger may cause deterioration of Air volume.

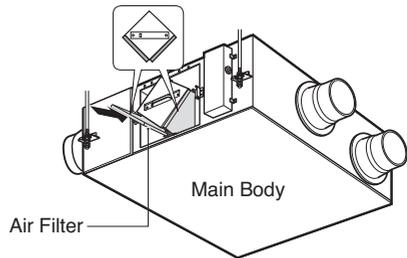

## 3. Assembly of maintenance cover

Fix the cover to the right hinge and fix it to the left side. (A nameplate is adhered toward the reading direction).  
Tighten a screw on the maintenance cover.

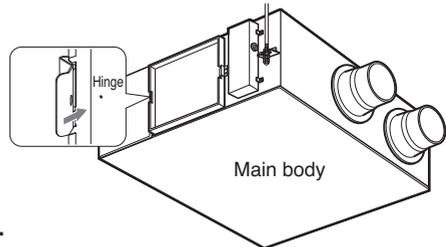

### **⚠ WARNING**

Turn the breaker off when cleaning the product.

### **⚠ CAUTION**

Gloves should be worn when doing the maintenance work.

## Check Item prior to notify a failure

Symptom	Check Item	Counter-measure
The Product doesn't work	Is power not supplied?	Supply Power
The Product doesn't work through you press the 'ON' switch	Is Air Filter, Total heat exchanger clogged severely?	Follow cleaning and changing method.
	Is the Indoor temperature less than -10 °C or more than 45 °C?	It's standby mode for protecting Total Heat Exchanger.
Even though you change the fan speed, the operation mode doesn't change and it changes to 'Auto or Low'	Is the Indoor temperature less than -10 °C or more than 45 °C?	It's operation mode to protect Total Heat Exchanger.



