

INSTALLATION MANUAL

AIR CONDITIONER

Please read this installation manual completely before installing the product. Installation work must be performed in accordance with the national wiring standards by authorized personnel only.

Please retain this installation manual for future reference after reading it thoroughly.

MULTI V™ IV



P/NO : MFL68460404

<http://www.lghvac.com>
www.lg.com

Copyright © 2016 - 2018 LG Electronics Inc. All Rights Reserved.

TIPS FOR SAVING ENERGY

Here are some tips that will help you minimize the power consumption when you use the air conditioner. You can use your air conditioner more efficiently by referring to the instructions below:

- Do not cool excessively indoors. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, in a short period of time.
- Open windows regularly for ventilation as the indoor air quality may deteriorate if the air conditioner is used for many hours.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or weaken the cooling / dehumidifying functions.

For your records

Staple your receipt to this page in case you need it to prove the date of purchase or for warranty purposes. Write the model number and the serial number here:

Model number : _____

Serial number : _____

You can find them on a label on the side of each unit.

Dealer's name : _____

Date of purchase : _____

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product

WARNING

It can result in serious injury or death when the directions are ignored

CAUTION

It can result in minor injury or product damage when the directions are ignored

WARNING

- Installation or repairs made by unqualified persons can result in hazards to you and others. Installation of all field wiring and components **MUST** conform with local building codes or, in the absence of local codes, with the National Electrical Code 70 and the National Building Construction and Safety Code or Canadian Electrical code and National Building Code of Canada.
- The information contained in the manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments.
- Failure to carefully read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.

Installation

- Have all electric work done by a licensed electrician according to "Electric Facility Engineering Standard" and "Interior Wire Regulations" and the instructions given in this manual and always use a special circuit.
 - If the power source capacity is inadequate or electric work is performed improperly, electric shock or fire may result.
- Ask the dealer or an authorized technician to install the air conditioner.
 - Improper installation by the user may result in water leakage, electric shock, or fire.
- Always ground the product.
 - There is risk of fire or electric shock.
- Always install a dedicated circuit and breaker.
 - Improper wiring or installation may cause fire or electric shock.
- For re-installation of the installed product, always contact a dealer or an Authorized Service Center.
 - There is risk of fire, electric shock, explosion, or injury.
- Do not install, remove, or re-install the unit by yourself (customer).
 - There is risk of fire, electric shock, explosion, or injury.
- Do not store or use flammable gas or combustibles near the air conditioner.
 - There is risk of fire or failure of product.
- Use the correctly rated breaker or fuse.
 - There is risk of fire or electric shock.
- Prepare for strong wind or earthquake and install the unit at the specified place.
 - Improper installation may cause the unit to topple and result in injury.
- Do not install the product on a defective installation stand.
 - It may cause injury, accident, or damage to the product.

4 IMPORTANT SAFETY INSTRUCTIONS

- Use a vacuum pump or Inert(nitrogen) gas when doing leakage test or air purge. Do not compress air or Oxygen and do not use Flammable gases. Otherwise, it may cause fire or explosion.
 - There is the risk of death, injury, fire or explosion.
- When installing and moving the air conditioner to another site, do not charge it with a different refrigerant from the refrigerant specified on the unit.
 - If a different refrigerant or air is mixed with the original refrigerant, the refrigerant cycle may malfunction and the unit may be damaged.
- Do not reconstruct to change the settings of the protection devices.
 - If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by LGE are used, fire or explosion may result.
- Ventilate before operating air conditioner when gas leaked out.
 - It may cause explosion, fire, and burn.
- Securely install the cover of control box and the panel.
 - If the cover and panel are not installed securely, dust or water may enter the outdoor unit and fire or electric shock may result.
- If the air conditioner is installed in a small room, measures must be taken to prevent the refrigerant concentration from exceeding the safety limit when the refrigerant leaks.
 - Consult the dealer regarding the appropriate measures to prevent the safety limit from being exceeded. Should the refrigerant leak and cause the safety limit to be exceeded, hazards due to lack of oxygen in the room could result.

Operation

- Do not damage or use an unspecified power cord.
 - There is risk of fire, electric shock, explosion, or injury.
- Use a dedicated outlet for this appliance.
 - There is risk of fire or electrical shock.
- Be cautious that water could not enter the product.
 - There is risk of fire, electric shock, or product damage.
- Do not touch the power switch with wet hands.
 - There is risk of fire, electric shock, explosion, or injury.
- When the product is soaked (flooded or submerged), contact an Authorized Service Center.
 - There is risk of fire or electric shock.
- Be cautious not to touch the sharp edges when installing.
 - It may cause injury.
- Take care to ensure that nobody could step on or fall onto the outdoor unit.
 - This could result in personal injury and product damage.
- Do not open the inlet grille of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)
 - There is risk of physical injury, electric shock, or product failure.

 **CAUTION****Installation**

- Always check for gas (refrigerant) leakage after installation or repair of product.
 - Low refrigerant levels may cause failure of product.
- Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.
 - It may cause a problem for your neighbors.
- Keep level even when installing the product.
 - To avoid vibration or water leakage.
- Do not install the unit where combustible gas may leak.
 - If the gas leaks and accumulates around the unit, an explosion may result.
- Use power cables of sufficient current carrying capacity and rating.
 - Cables that are too small may leak, generate heat, and cause a fire.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.
 - There is risk of damage or loss of property.
- Keep the unit away from children. The heat exchanger is very sharp.
 - It can cause the injury, such as cutting the finger. Also the damaged fin may result in degradation of capacity.
- When installing the unit in a hospital, communication station, or similar place, provide sufficient protection against noise.
 - The inverter equipment, private power generator, high-frequency medical equipment, or radio communication equipment may cause the air conditioner to operate erroneously, or fail to operate. On the other hand, the air conditioner may affect such equipment by creating noise that disturbs medical treatment or image broadcasting.
- Do not install the product where it is exposed to sea wind (salt spray) directly.
 - It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

Operation

- Do not use the air conditioner in special environments.
 - Oil, steam, sulfuric smoke, etc. can significantly reduce the performance of the air conditioner or damage its parts.
- Do not block the inlet or outlet.
 - It may cause failure of appliance or accident.
- Make the connections securely so that the outside force of the cable may not be applied to the terminals.
 - Inadequate connection and fastening may generate heat and cause a fire.
- Be sure the installation area does not deteriorate with age.
 - If the base collapses, the air conditioner could fall with it, causing property damage, product failure, or personal injury.
- Install and insulate the drain hose to ensure that water is drained away properly based on the installation manual.
 - A bad connection may cause water leakage.
- Be very careful about product transportation.
 - Only one person should not carry the product if it weighs more than 20kg(44lbs).
 - Some products use PP bands for packaging. Do not use any PP bands for a means of transportation. It is dangerous.
 - Do not touch the heat exchanger fins. Doing so may cut your fingers.
 - When transporting the outdoor unit, suspending it at the specified positions on the unit base. Also support the outdoor unit at four points so that it cannot slip sideways.

- Safely dispose of the packing materials.
 - Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.
 - Tear apart and throw away plastic packaging bags so that children may not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.
- Turn on the power at least 6 hours before starting operation.
 - Starting operation immediately after turning on the main power switch can result in severe damage to internal parts. Keep the power switch turned on during the operational season.
- Do not touch any of the refrigerant piping during and after operation.
 - It can cause a burn or frostbite.
- Do not operate the air conditioner with the panels or guards removed.
 - Rotating, hot, or high-voltage parts can cause injuries.
- Do not directly turn off the main power switch after stopping operation.
 - Wait at least 5 minutes before turning off the main power switch. Otherwise it may result in water leakage or other problems.
- Auto-addressing should be done in condition of connecting the power of all indoor and outdoor units. Auto-addressing should also be done in case of changing the indoor unit PCB.
- Use a firm stool or ladder when cleaning or maintaining the air conditioner.
 - Be careful and avoid personal injury.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is plugged in.
 - There are sharp and moving parts that could cause personal injury.

TABLE OF CONTENTS

2 TIPS FOR SAVING ENERGY

3 IMPORTANT SAFETY INSTRUCTIONS

8 INSTALLATION PROCESS

9 OUTDOOR UNITS INFORMATION

17 ALTERNATIVE REFRIGERANT R410A

18 SELECT THE BEST LOCATION

19 INSTALLATION SPACE

19 Individual Installation

21 LIFTING METHOD

22 INSTALLATION

22 The location of the Anchor bolts

23 Foundation for Installation

24 Preparation of Piping

27 Plumbing materials and storage methods

29 REFRIGERANT PIPING INSTALLATION

29 Precautions on Pipe connection / Valve operation

30 PIPE CONNECTIONS BETWEEN INDOOR AND OUTDOOR UNIT

30 Preparation Work

31 Pipe Drawing Out during Single / Series connection

33 Refrigerant piping system

46 Refrigerant charging

47 Distribution Method

48 Branch pipe Fitting

52 Leak Test and Vacuum drying

54 Vacuum Mode

55 Thermal insulation of refrigerant piping

56 ELECTRICAL WIRING

56 Caution

58 Control box and connecting position of wiring

59 Communication and Power Cables

60 Wiring of main power supply and equipment capacity

61 Field Wiring(3Ø, 208/230V)

67 Field Wiring(3Ø, 460V)

76 Checking the setting of outdoor units

77 Automatic Addressing

80 Group Number setting

81 Cool & Heat selector

82 Static pressure compensation mode

83 Night Low Noise Function

84 Overall defrost mode

85 Setting the ODU address

86 Snow removal & rapid defrost

87 Target pressure adjusting

88 Self-Diagnosis Function

91 CAUTION FOR REFRIGERANT LEAK


91 Introduction

91 Checking procedure of limiting concentration

93 INSTALLATION GUIDE AT THE SEASIDE

94 OUTDOOR UNIT (ODU) INSTALLATION DETAILS FOR (3) FOAM SCREW PROTECTOR PADS

INSTALLATION PROCESS

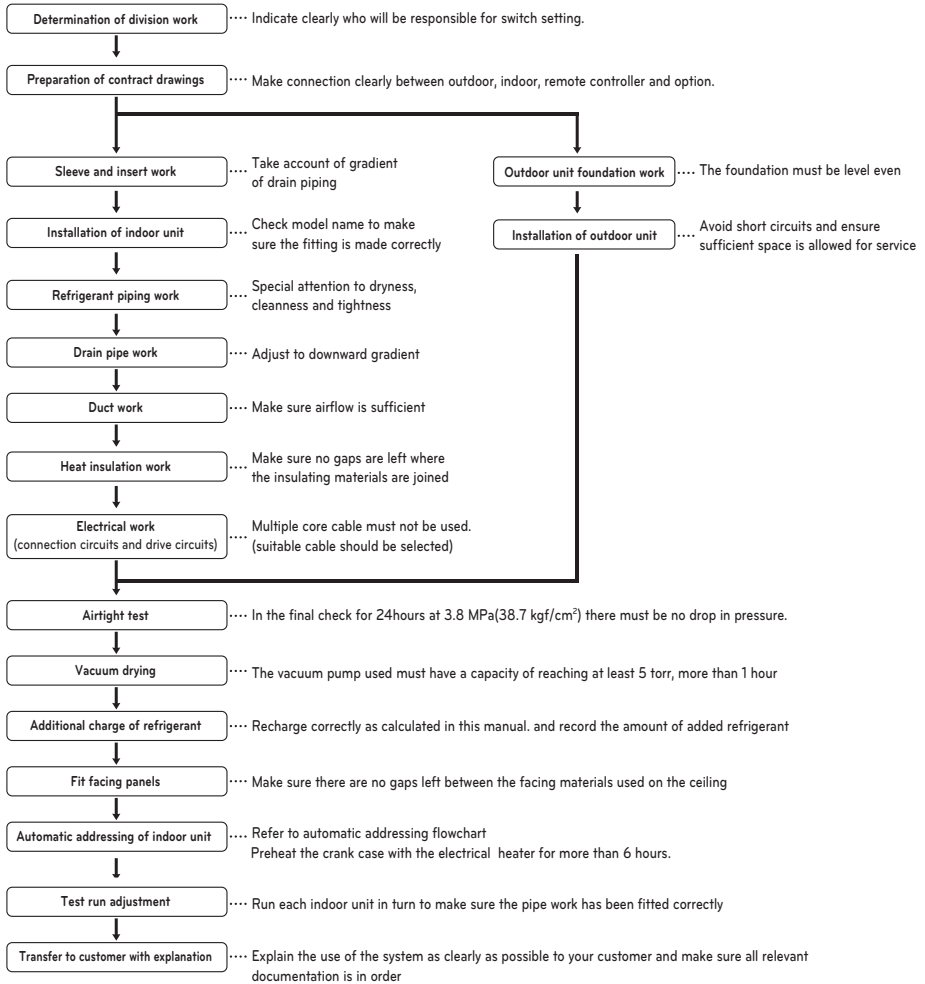

⚠ CAUTION

- The above list indicates the order in which the individual work operations are normally carried out but this order may be varied where local conditions warrants such change.
- The wall thickness of the piping should comply with the relevant local and national regulations for the designed pressure 3.8Mpa(551.1psi).
- Since R410A is a mixed refrigerant, the required additional refrigerant must be charged in its liquid state.(If the refrigerant is charged in its gaseous state, its composition changes and the system will not work properly.)

OUTDOOR UNITS INFORMATION

! CAUTION

Combination Ratio

Outdoor Number	Connection Capacity
Single outdoor units	130%
Double outdoor units	130%
Triple outdoor units	130%

Notes : * We can guarantee the operation only within 130% Combination.
 If you want to connect more than 130% combination, please contact us and discuss the requirement like below.

- If the operation of indoor unit is more than 130%, the airflow is operated as low in the all indoor units.
- The number of () means the number of Max. connectable indoor units, when the connected capacity of indoor units is in the table above.

Model Name : ARUN*BTE4**

Power Supply Outdoor Unit (3Ø, 208/230V, 60Hz)

Chassis			UX2	UX3	UX3
HP			8	10	12
Ton			6	8	10
Model Name		Combination Unit	ARUN072BTE4	ARUN096BTE4	ARUN121BTE4
		Independent Unit			
Refrigerant	Refrigerant name		R410A	R410A	R410A
	Control		EEV	EEV	EEV
Number of maximum connectable indoor units			13	16	20
Net Weight		kg	(195 × 1)	(245 × 1)	(245 × 1)
		lbs	(430 × 1)	(540 × 1)	(540 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	9.52(3/8)	9.52(3/8)	12.7(1/2)
	Low Pressure Gas Pipes	mm(inch)	19.05(3/4)	22.2(7/8)	28.58(1 1/8)

Chassis			UX3	UX3
HP			14	18
Ton			12	14
Model Name		Combination Unit	ARUN144BTE4	ARUN168BTE4
		Independent Unit		
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			23	29
Net Weight		kg	(285 × 1)	(285 × 1)
		lbs	(628 × 1)	(628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	12.7(1/2)	15.88(5/8)
	Low Pressure Gas Pipes	mm(inch)	28.58(1 1/8)	28.58(1 1/8)

Chassis			UX2+UX3	UX2+UX3
HP			20	22
Ton			16	18
Model Name		Combination Unit	ARUN192BTE4	ARUN216BTE4
		Independent Unit	ARUN121BTE4	ARUN144BTE4
			ARUN072BTE4	ARUN072BTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			32	35
Net Weight		kg	(195 × 1) + (245 × 1)	(195 × 1) + (285 × 1)
		lbs	(430 × 1) + (540 × 1)	(430 × 1) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	15.88(5/8)	15.88(5/8)
	Low Pressure Gas Pipes	mm(inch)	28.58(1 1/8)	28.58(1 1/8)

Chassis			UX3+UX3	UX3+UX3
HP			24	26
Ton			20	22
Model Name		Combination Unit	ARUN240BTE4	ARUN264BTE4
		Independent Unit	ARUN144BTE4	ARUN144BTE4
			ARUN096BTE4	ARUN121BTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			39	42
Net Weight		kg	(245 × 1) + (285 × 1)	(245 × 1) + (285 × 1)
		lbs	(540 × 1) + (628 × 1)	(540 × 1) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	15.88(5/8)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	34.9(1 3/8)	34.9(1 3/8)

Chassis			UX3+UX3	UX2+UX3+UX3
HP			28	32
Ton			24	26
Model Name		Combination Unit	ARUN288BTE4	ARUN312BTE4
		Independent Unit	ARUN144BTE4	ARUN144BTE4
			ARUN144BTE4	ARUN096BTE4
				ARUN072BTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			45	52
Net Weight		kg	(285 × 2)	(195 × 1) + (245 × 1) + (285 × 1)
		lbs	(628 × 2)	(430 × 1) + (540 × 1) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	34.9(1 3/8)	34.9(1 3/8)

Chassis			UX3+UX3	UX3+UX3+UX3
HP			32	34
Ton			26	28
Model Name		Combination Unit	ARUN313BTE4	ARUN336BTE4
		Independent Unit	ARUN168BTE4	ARUN144BTE4
			ARUN144BTE4	ARUN096BTE4
				ARUN096BTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			52	55
Net Weight		kg	(285 × 2)	(245 × 2) + (285 × 1)
		lbs	(628 × 2)	(540 × 2) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	34.9(1 3/8)	34.9(1 3/8)

Chassis			UX3+UX3	UX3+UX3+UX3
HP			34	36
Ton			28	30
Model Name		Combination Unit	ARUN337BTE4	ARUN360BTE4
		Independent Unit	ARUN168BTE4	ARUN144BTE4
			ARUN168BTE4	ARUN121BTE4
				ARUN096BTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			55	58
Net Weight		kg	(285 × 2)	(245 × 2) + (285 × 1)
		lbs	(628 × 2)	(540 × 2) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	34.9(1 3/8)	41.3(1 5/8)

Chassis			UX3	UX3+UX3+UX3
HP			14	38
Ton			12	32
Model Name		Combination Unit	ARUN145BTE4	ARUN384BTE4
		Independent Unit	Combination only (Not for 1Unit)	ARUN096BTE4
				ARUN145BTE4
				ARUN145BTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			23	61
Net Weight		kg	(305 × 1)	(245 × 1) + (305 × 2)
		lbs	(672 × 1)	(540 × 1) + (672 × 2)
Pipe Connections	Liquid Pipes	mm(inch)	15.88(5/8)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	28.58(1 1/8)	41.3(1 5/8)

Chassis			UX3+UX3+UX3	UX3+UX3+UX3
HP			40	42
Ton			34	36
Model Name		Combination Unit	ARUN408BTE4	ARUN432BTE4
		Independent Unit	ARUN121BTE4	ARUN145BTE4
			ARUN145BTE4	ARUN145BTE4
			ARUN145BTE4	ARUN145BTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			64	64
Net Weight		kg	(245 x 1) + (305 x 2)	(305 x 3)
		lbs	(540 x 1) + (672 x 2)	(672 x 3)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	41.3(1 5/8)	41.3(1 5/8)

Chassis			UX3	UX3+UX3+UX3
HP			18	46
Ton			14	38
Model Name		Combination Unit	ARUN169BTE4	ARUN456BTE4
		Independent Unit	Combination only (Not for 1Unit)	ARUN169BTE4
				ARUN145BTE4 ARUN145BTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			29	64
Net Weight		kg	(305 x 1)	(305 x 3)
		lbs	(672 x 1)	(672 x 3)
Pipe Connections	Liquid Pipes	mm(inch)	15.88(5/8)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	28.58(1 1/8)	41.3(1 5/8)

Chassis			UX3+UX3+UX3	UX3+UX3+UX3
HP			48	50
Ton			40	42
Model Name		Combination Unit	ARUN480BTE4	ARUN504BTE4
		Independent Unit	ARUN169BTE4	ARUN169BTE4
			ARUN169BTE4	ARUN169BTE4
			ARUN145BTE4	ARUN169BTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			64	64
Net Weight		kg	(305 x 3)	(305 x 3)
		lbs	(672 x 3)	(672 x 3)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	41.3(1 5/8)	41.3(1 5/8)

Model Name : ARUN*DTE4**
Power Supply Outdoor Unit (3Ø, 460V, 60Hz)

Chassis			UX2	UX3	UX3
HP			8	10	12
Ton			6	8	10
Model Name		Combination Unit	ARUN072DTE4	ARUN096DTE4	ARUN121DTE4
		Independent Unit			
Refrigerant	Refrigerant name		R410A	R410A	R410A
	Control		EEV	EEV	EEV
Number of maximum connectable indoor units			13	16	20
Net Weight		kg	(195 × 1)	(245 × 1)	(245 × 1)
		lbs	(430 × 1)	(540 × 1)	(540 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	9.52(3/8)	9.52(3/8)	12.7(1/2)
	Low Pressure Gas Pipes	mm(inch)	19.05(3/4)	22.2(7/8)	28.58(1 1/8)

Chassis			UX3	UX3
HP			14	18
Ton			12	14
Model Name		Combination Unit	ARUN144DTE4	ARUN168DTE4
		Independent Unit		
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			23	29
Net Weight		kg	(285 × 1)	(285 × 1)
		lbs	(628 × 1)	(628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	12.7(1/2)	15.88(5/8)
	Low Pressure Gas Pipes	mm(inch)	28.58(1 1/8)	28.58(1 1/8)

Chassis			UX2+UX3	UX2+UX3
HP			20	22
Ton			16	18
Model Name	Combination Unit		ARUN192DTE4	ARUN216DTE4
			ARUN121DTE4	ARUN144DTE4
	Independent Unit		ARUN072DTE4	ARUN072DTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			32	35
Net Weight		kg	(195 × 1) + (245 × 1)	(195 × 1) + (285 × 1)
		lbs	(430 × 1) + (540 × 1)	(430 × 1) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	15.88(5/8)	15.88(5/8)
	Low Pressure Gas Pipes	mm(inch)	28.58(1 1/8)	28.58(1 1/8)

Chassis			UX3+UX3	UX3+UX3
HP			24	26
Ton			20	22
Model Name	Combination Unit		ARUN240DTE4	ARUN264DTE4
			ARUN144DTE4	ARUN144DTE4
	Independent Unit		ARUN096DTE4	ARUN121DTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			39	42
Net Weight		kg	(245 × 1) + (285 × 1)	(245 × 1) + (285 × 1)
		lbs	(540 × 1) + (628 × 1)	(540 × 1) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	15.88(5/8)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	34.9(1 3/8)	34.9(1 3/8)

Chassis			UX3+UX3	UX2+UX3+UX3
HP			28	32
Ton			24	26
Model Name	Combination Unit		ARUN288DTE4	ARUN312DTE4
			ARUN144DTE4	ARUN144DTE4
	Independent Unit		ARUN144DTE4	ARUN096DTE4
			ARUN072DTE4	
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			45	52
Net Weight		kg	(285 × 2)	(195 × 1) + (245 × 1) + (285 × 1)
		lbs	(628 × 2)	(430 × 1) + (540 × 1) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	34.9(1 3/8)	34.9(1 3/8)

Chassis			UX3+UX3	UX3+UX3+UX3
HP			32	34
Ton			26	28
Model Name		Combination Unit	ARUN313DTE4	ARUN336DTE4
		Independent Unit	ARUN168DTE4	ARUN144DTE4
			ARUN144DTE4	ARUN096DTE4
				ARUN096DTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			52	55
Net Weight		kg	(285 × 2)	(245 × 2) + (285 × 1)
		lbs	(628 × 2)	(540 × 2) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	34.9(1 3/8)	34.9(1 3/8)

Chassis			UX3+UX3	UX3+UX3+UX3
HP			34	36
Ton			28	30
Model Name		Combination Unit	ARUN337DTE4	ARUN360DTE4
		Independent Unit	ARUN168DTE4	ARUN144DTE4
			ARUN168DTE4	ARUN121DTE4
				ARUN096DTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			55	58
Net Weight		kg	(285 × 2)	(245 × 2) + (285 × 1)
		lbs	(628 × 2)	(540 × 2) + (628 × 1)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	34.9(1 3/8)	41.3(1 5/8)

Chassis			UX3	UX3+UX3+UX3
HP			14	38
Ton			12	32
Model Name		Combination Unit	ARUN145DTE4	ARUN384DTE4
		Independent Unit	Combination only (Not for 1Unit)	ARUN096DTE4
				ARUN145DTE4
				ARUN145DTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			23	61
Net Weight		kg	(285 × 1)	(245 × 1) + (285 × 2)
		lbs	(628 × 1)	(540 × 1) + (628 × 2)
Pipe Connections	Liquid Pipes	mm(inch)	15.88(5/8)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	28.58(1 1/8)	41.3(1 5/8)

Chassis			UX3+UX3+UX3	UX3+UX3+UX3
HP			40	42
Ton			34	36
Model Name		Combination Unit	ARUN408DTE4	ARUN432DTE4
		Independent Unit	ARUN121DTE4	ARUN145DTE4
			ARUN145DTE4	ARUN145DTE4
			ARUN145DTE4	ARUN145DTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			64	64
Net Weight		kg	(245 x 1) + (285 x 2)	(285 x 3)
		lbs	(540 x 1) + (628 x 2)	(628 x 3)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	41.3(1 5/8)	41.3(1 5/8)

Chassis			UX3	UX3+UX3+UX3
HP			18	46
Ton			14	38
Model Name		Combination Unit	ARUN169DTE4	ARUN456DTE4
		Independent Unit	Combination only (Not for 1Unit)	ARUN169DTE4
				ARUN145DTE4
				ARUN145DTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			29	64
Net Weight		kg	(285 x 1)	(285 x 3)
		lbs	(628 x 1)	(628 x 3)
Pipe Connections	Liquid Pipes	mm(inch)	15.88(5/8)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	28.58(1 1/8)	41.3(1 5/8)

Chassis			UX3+UX3+UX3	UX3+UX3+UX3
HP			48	50
Ton			40	42
Model Name		Combination Unit	ARUN480DTE4	ARUN504DTE4
		Independent Unit	ARUN169DTE4	ARUN169DTE4
			ARUN169DTE4	ARUN169DTE4
			ARUN145DTE4	ARUN169DTE4
Refrigerant	Refrigerant name		R410A	R410A
	Control		EEV	EEV
Number of maximum connectable indoor units			64	64
Net Weight		kg	(285 x 3)	(285 x 3)
		lbs	(628 x 3)	(628 x 3)
Pipe Connections	Liquid Pipes	mm(inch)	19.05(3/4)	19.05(3/4)
	Low Pressure Gas Pipes	mm(inch)	41.3(1 5/8)	41.3(1 5/8)

ALTERNATIVE REFRIGERANT R410A

The refrigerant R410A has the property of higher operating pressure in comparison with R22. Therefore, all materials have the characteristics of higher resisting pressure than R22 ones and this characteristic should be also considered during the installation.

R410A is an azeotrope of R32 and R125 mixed at 50:50, so the ozone depletion potential (ODP) of R410A is 0.



CAUTION

- The wall thickness of the piping should comply with the relevant local and national regulations for the designed pressure 3.8Mpa(551.1psi).
- Since R410A is a mixed refrigerant, the required additional refrigerant must be charged in its liquid state.
If the refrigerant is charged in its gaseous state, its composition changes and the system will not work properly.
- Do not place the refrigerant container under the direct rays of the sun to prevent it from exploding.
- For high-pressure refrigerant, any unapproved pipe must not be used.
- Do not heat pipes more than necessary to prevent them from softening.
- Be careful not to install wrongly to minimize economic loss because it is expensive in comparison with R22.

SELECT THE BEST LOCATION









Select space for installing outdoor unit, which will meet the following conditions:

- No direct thermal radiation from other heat sources
- No possibility of annoying neighbors by noise from unit
- No exposition to strong wind
- With strength which bears weight of unit
- Note that drain flows out of unit when heating
- With space for air passage and service work shown next
- Because of the possibility of fire, do not install unit to the space where generation, inflow, stagnation, and leakage of combustible gas is expected.
- Avoid unit installation in a place where acidic solution and spray (sulfur) are often used.
- Do not use unit under any special environment where oil, steam and sulfuric gas exist.
- It is recommended to fence round the outdoor unit in order to prevent any person or animal from accessing the outdoor unit.
- If installation site is area of heavy snowfall, then the following directions should be observed.
 - Make the foundation as high as possible.
 - Fit a snow protection hood.
- Select installation location considering following conditions to avoid bad condition when additionally performing defrost operation.
 - Install the outdoor unit at a place well ventilated and having a lot of sunshine in case of installing the product at a place With a high humidity in winter (near beach, coast, lake, etc.) (Ex : Rooftop where there is always sunshine.)

INSTALLATION SPACE

Individual Installation

During the installation of the unit, consider service, inlet, and outlet and acquire the minimum space as shown in the figures below.

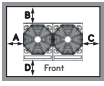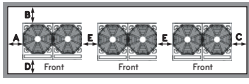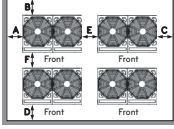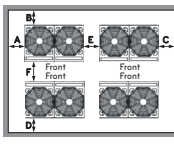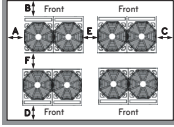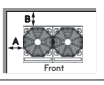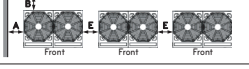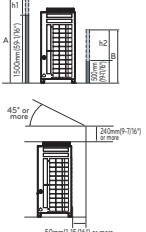Category	Installation Space	Case 1 (10mm ≤ Side Space ≤ 49mm)	Case 2 (Side Space ≥ 49mm)
4 sides are walls		A ≥ 10(13/32") B ≥ 300(11-13/16") C ≥ 10(13/32") D ≥ 500(19-11/16")	A ≥ 50(1-31/32") B ≥ 100(3-15/16") C ≥ 50(1-31/32") D ≥ 500(19-11/16")
		A ≥ 10(13/32") B ≥ 300(11-13/16") C ≥ 10(13/32") D ≥ 500(19-11/16") E ≥ 20(25/32")	A ≥ 50(1-31/32") B ≥ 100(3-15/16") C ≥ 50(1-31/32") D ≥ 500(19-11/16") E ≥ 100(3-15/16")
		A ≥ 10(13/32") B ≥ 300(11-13/16") C ≥ 10(13/32") D ≥ 500(19-11/16") E ≥ 20(25/32") F ≥ 600(23-5/8")	A ≥ 50(1-31/32") B ≥ 100(3-15/16") C ≥ 50(1-31/32") D ≥ 500(19-11/16") E ≥ 100(3-15/16") F ≥ 500(19-11/16")
		A ≥ 10(13/32") B ≥ 300(11-13/16") C ≥ 10(13/32") D ≥ 300(11-13/16") E ≥ 20(25/32") F ≥ 500(19-11/16")	A ≥ 50(1-31/32") B ≥ 100(3-15/16") C ≥ 50(1-31/32") D ≥ 100(3-15/16") E ≥ 100(3-15/16") F ≥ 500(19-11/16")
		A ≥ 10(13/32") B ≥ 500(19-11/16") C ≥ 10(13/32") D ≥ 500(19-11/16") E ≥ 20(25/32") F ≥ 900(35-7/16")	A ≥ 50(1-31/32") B ≥ 500(19-11/16") C ≥ 50(1-31/32") D ≥ 500(19-11/16") E ≥ 100(3-15/16") F ≥ 600(23-5/8")
	Only 2 sides are walls		A ≥ 10(13/32") B ≥ 300(11-13/16")
		A ≥ 200(7-7/8") B ≥ 300(11-13/16") E ≥ 400(15-3/4")	
Limitations on the height of the wall (Refer to 4 side walls)		<ul style="list-style-type: none"> • The height of the wall on the front side must be 1500mm(59-1/16") or less. • The height of the wall on the inlet side must be 500mm(19-11/16") or less. • There is no limit to the wall on the side. • If the height of the walls on the front and the side are higher than the limit, there must be additional space on the front and the side. <ul style="list-style-type: none"> - Additional Space on the front side by 1/2 of h1. - Additional Space on the inlet side by 1/2 of h2 - h1 = A(Actual height) - 1500mm(59-1/16") - h2 = B(Actual height) - 500mm(19-11/16") 	


Seasonal wind and cautions in winter

- Sufficient measures are required in a snow area or severe cold area in winter so that product can be operated well.
- Get ready for seasonal wind or snow in winter even in other areas.
- Install a suction and discharge duct not to let in snow or rain.
- Install the outdoor unit not to come in contact with snow directly. If snow piles up and freezes on the air suction hole, the system may malfunction. If it is installed at snowy area, attach the hood to the system.
- Install the outdoor unit at the higher installation console by 50cm(1.64ft) than the average snowfall (annual average snowfall) if it is installed at the area with much snowfall.
- Where snow accumulated on the upper part of the Outdoor Unit by more than 10cm(0.33ft), always remove snow for operation.

- The height of H frame must be more than 2 times the snowfall and its width shall not exceed the width of the product. (If width of the frame is wider than that of the product, snow may accumulate)
- Don't install the suction hole and discharge hole of the Outdoor Unit facing the seasonal wind.

LIFTING METHOD

- When carrying the suspended, unit pass the ropes under the unit and use the two suspension points each at the front and rear.
- Always lift the unit with ropes attached at four points so that impact is not applied to the unit.
- Attach the ropes to the unit at an angle of 40° or less.

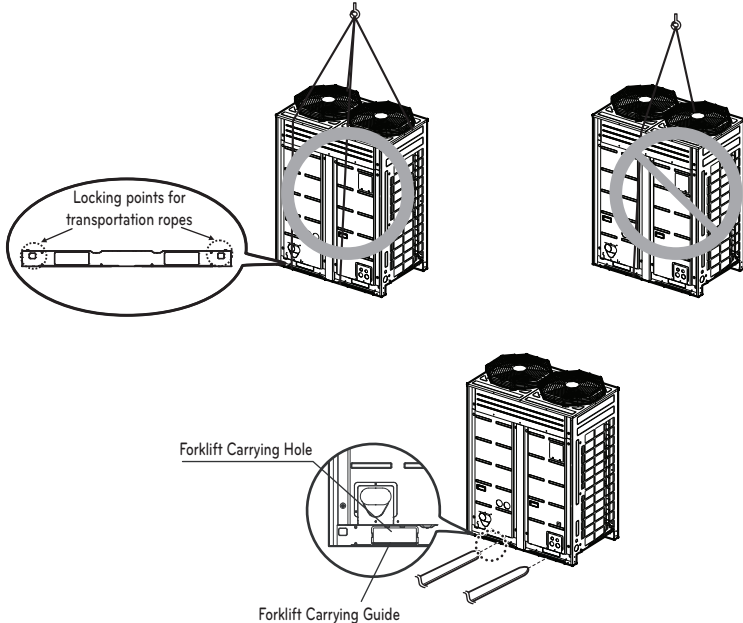


! CAUTION

Be very careful while carrying the product.


- Do not have only one person carry product if it is more than 20 kg(44lbs).
- PP bands are used to pack some products. Do not use them as a mean for transportation because they are dangerous.
- Do not touch heat exchanger fins with your bare hands. Otherwise you may get a cut in your hands.
- Tear plastic packaging bag and scrap it so that children cannot play with it. Otherwise plastic packaging bag may suffocate children to death.
- When carrying in Outdoor Unit, be sure to support it at four points. Carrying in and lifting with 3-point support may make Outdoor Unit unstable, resulting in a fall.
- Use 2 belts of at least 8m(26.2ft) long.
- Place extra cloth or boards in the locations where the casing comes in contact with the sling to prevent damage.
- Hoist the unit making sure it is being lifted at its center of gravity.

INSTALLATION

- Install at places where it can endure the weight and vibration/noise of the outdoor unit.
- The outdoor unit supports at the bottom shall have width of at least 100mm(3-15/16 inch) under the Unit's legs before being fixed.
- The outdoor unit supports should have minimum height of 200mm(7-7/8 inch).
- Anchor bolt must be inserted at least 75mm(2-15/16 inch).

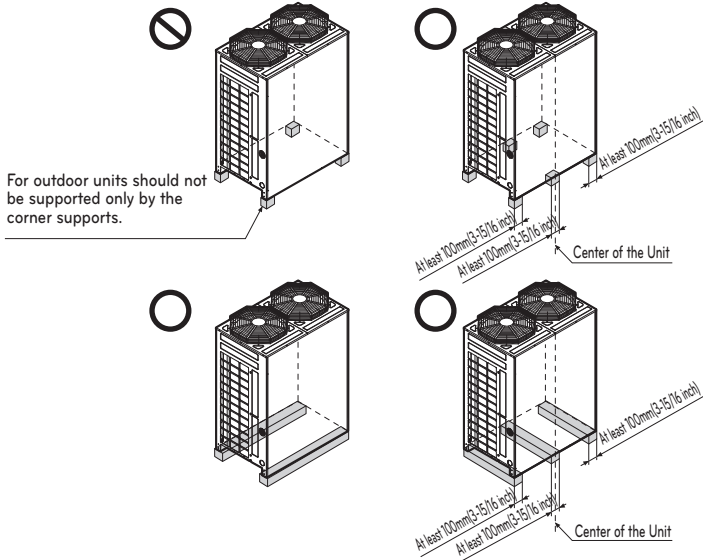




The location of the Anchor bolts

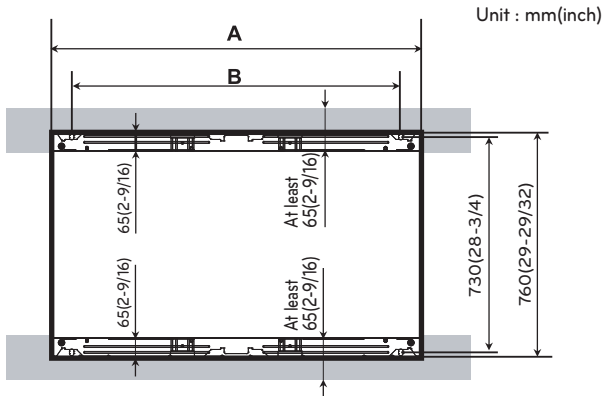

Chassis	Outdoor Unit Capacity		A [mm(inch)]	B [mm(inch)]
	Ton	HP		
UX2	6Ton	8 HP	920(36-7/32)	792(31-3/16)
UX3	8~14Ton	10~14,18HP	1240(48-13/16)	1102(42-3/8)

Foundation for Installation

- Fix the unit tightly with bolts as shown below so that unit will not fall down due to earthquake or gust.
- Use the H-beam support as a base support
- Noise and vibration may occur from the floor or wall since vibration is transferred through the installation part depending on installation status. Thus, use anti-vibration materials (cushion pad) fully (The base pad shall be more than 200mm(7.87inch)).

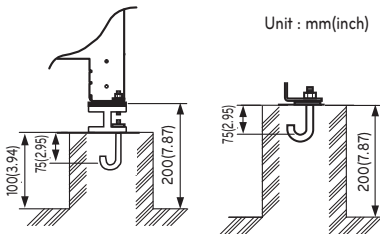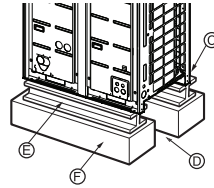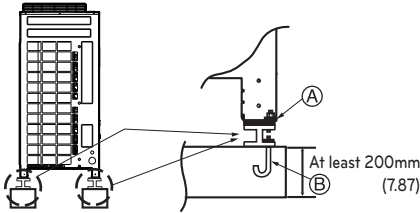



- Ⓐ The corner part must be fixed firmly. Otherwise, the support for the installation may be bent.
- Ⓑ Get and use M10 Anchor bolt.
- Ⓒ Put Cushion Pad between the outdoor unit and ground support for the vibration protection in wide area.
- Ⓓ Space for pipes and wiring (Pipes and wirings for bottom side)
- Ⓔ H-beam support
- Ⓕ Concrete support

! WARNING

- Install where it can sufficiently support the weight of the outdoor unit. If the support strength is not enough, the outdoor unit may drop and hurt people.
- Install where the outdoor unit may not fall in strong wind or earthquake. If there is a fault in the supporting conditions, the outdoor unit may fall and hurt people.
- Please take extra cautions on the supporting strength of the ground, water outlet treatment (treatment of the water flowing out of the outdoor unit in operation), and the passages of the pipe and wiring, when making the ground support.
- Do not use tube or pipe for water outlet in the Base pan. Use drainage instead for water outlet. The tube or pipe may freeze and the water may not be drained.

! CAUTION

- Be sure to remove the Pallet (Wood Support) of the bottom side of the outdoor unit Base Pan before fixing the bolt. It may cause the unstable state of the outdoor settlement, and may cause freezing of the heat exchanger resulting in abnormal operations.
- Be sure to remove the Pallet (Wood Support) of the bottom side of the outdoor unit before welding. Not removing Pallet (Wood Support) causes hazard of fire during welding.

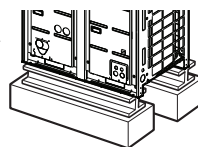


Pallet (Wood Support)
- Remove before Installation

Preparation of Piping

Main cause of gas leakage is defect in flaring work. Carry out correct flaring work in the following procedure.


Cut the pipes and the cable

- Use the accessory piping kit or the pipes purchased locally.
- Measure the distance between the indoor and the outdoor unit.
- Cut the pipes a little longer than measured distance.
- Cut the cable 1.5m(4.92ft) longer than the pipe length.

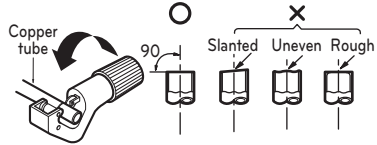

Burrs removal

- Completely remove all burrs from the cut cross section of pipe/tube.
- Put the end of the copper tube/pipe to downward direction as you remove burrs in order to avoid to let burrs drop in the tubing.

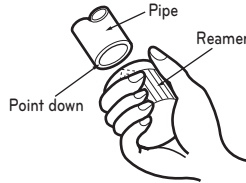


Flaring work


- Carry out flaring work using flaring tool as shown below.

Pipe diameter Inch (mm)	A inch (mm)	
	Wing nut type	Clutch type
Ø1/4 (Ø6.35)	0.04~0.07 (1.1~1.8)	0~0.02 (0~0.5)
Ø3/8 (Ø9.52)		
Ø1/2 (Ø12.7)		
Ø5/8 (Ø15.88)		

Firmly hold copper tube in a bar(or die) as indicated dimension in the table above.

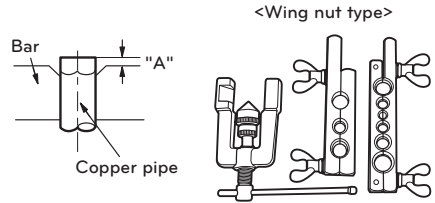


<Clutch type>

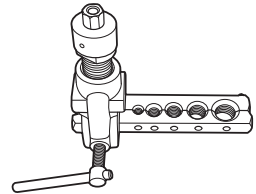

Check

- Compare the flared work with figure below.
- If flare is noted to be defective, cut off the flared section and do flaring work again.

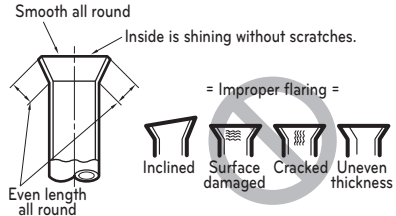

Flare shape and flare nut tightening torque


Precautions when connecting pipes

- See the following table for flare part machining dimensions.
- When connecting the flare nuts, apply refrigerant oil to the inside and outside of the flares and turn them three or four times at first. (Use ester oil or ether oil.)
- See the following table for tightening torque.(Applying too much torque may cause the flares to crack.)
- After all the piping has been connected, use nitrogen to perform a gas leak check.

Pipe size [mm(inch)]	Tightening Torque[N·m(lbs-ft)]	A [mm(inch)]	flare shape
Ø9.52(3/8)	38±4(28±3.0)	12.8(0.5)~13.2(0.52)	
Ø12.7(1/2)	55±6(41±4.4)	16.2(0.64)~16.6(0.65)	
Ø15.88(5/8)	75±7(55±5.2)	19.3(0.76)~19.7(0.78)	

CAUTION

- Always use a charge hose for service port connection.
- After tightening the cap, check that no refrigerant leaks are present.
- When loosening a flare nut, always use two wrenches in combination, When connecting the piping, always use a spanner and torque wrench in combination to tighten the flare nut.
- When connecting a flare nut, coat the flare(inner and outer faces) with oil for R410A(PVE) and hand tighten the nut 3 to 4 turns as the initial tightening.

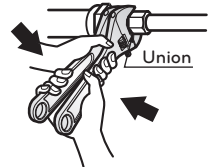

Opening shutoff valve

- 1 Remove the cap and turn the valve counter clockwise with the hexagon wrench.
- 2 Turn it until the shaft stops.
Do not apply excessive force to the shutoff valve. Doing so may break the valve body, as the valve is not a backseat type. Always use the special tool.
- 3 Make sure to tighten the cap securely.


Closing shutoff valve

- 1 Remove the cap and turn the valve clockwise with the hexagon wrench.
- 2 Securely tighten the valve until the shaft contacts the main body seal.
- 3 Make sure to tighten the cap securely.
* For the tightening torque, refer to the table on the below.

Tightening torque


Shut off valve size [mm(inch)]	Tightening torque N·m(lbs·ft) (Turn clockwise to close)						
	Shaft(valve body)			Cap (Valve lid)	Service port	Flare nut	Gas line piping attached to unit
	Closed	Opened	Hexagonal				
Ø6.35(1/4)	6.0 ±0.6 (4.4±0.4)	5.0 ±0.5 (3.7±0.4)	4mm (0.16inch)	17.6±2.0 (13.0±1.5)	12.7±2 (9.4±1.5)	16±2(12±1.5)	-
Ø9.52(3/8)						38±4(28±3.0)	
Ø12.7(1/2)	10.0 ±1.0 (7.4±0.7)					20.0±2.0 (14.8±1.5)	
Ø15.88(5/8)	12.0 ±1.2 (8.9±0.9)		25.0±2.5 (18.4±1.8)	75±7 (55±5.1)			
Ø19.05(3/4)	14.0 ±1.4 (10.3±1.0)			110±10 (81.1±7.4)			
Ø22.2(7/8)	30.0 ±3.0		8mm (0.31inch)	-		25±3.0 (18.5±2.2)	
Ø25.4(1.0)	(22.1±2.2)	-		-			

- 1 Use the heat insulation material for the refrigerant piping which has an excellent heat-resistance (over 248°F).
- 2 Precautions in high humidity circumstance:
This air conditioner has been tested according to the "ISO Conditions with Mist" and confirmed that there is not any default. However, if it is operated for a long time in high humid atmosphere (dew point temperature: more than 73.4°F), water drops are liable to fall. In this case, add heat insulation material according to the following procedure:
 - Heat insulation material to be prepared... EPDM (Ethylene Propylene Diene Meth-ylene)-over 248°F the heat-resistance temperature.
 - Add the insulation over 10mm(0.39 inch) thickness at high humidity environment.

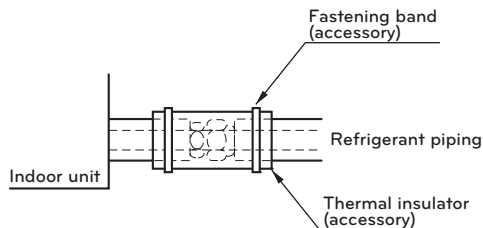




Plumbing materials and storage methods

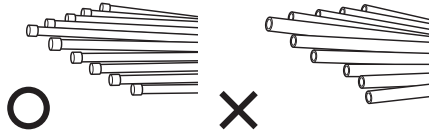Pipe must be able to obtain the specified thickness and should be used with low impurities. Also when handling storage, pipe must be careful to prevent a fracture, deformity and wound. Should not be mixed with contaminations such as dust, moisture.

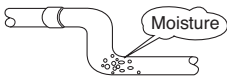

Refrigerant piping on three principles

	Drying	Cleanliness	Airtight
	Should be no moisture inside	No dust inside.	There is no refrigerant leakage
Items			
Cause failure	<ul style="list-style-type: none"> - Significant hydrolysis of refrigerant oil - Degradation of refrigerant oil - Poor insulation of the compressor - Do not cold and warm - Clogging of EEV, Capillary 	<ul style="list-style-type: none"> - Degradation of refrigerant oil - Poor insulation of the compressor - Do not cold and warm - Clogging of EEV, Capillary 	<ul style="list-style-type: none"> - Gas shortages - Degradation of refrigerant oil - Poor insulation of the compressor - Do not cold and warm
Countermeasure	<ul style="list-style-type: none"> - No moisture in the pipe - Until the connection is completed, the plumbing pipe entrance should be strictly controlled. - Stop plumbing at rainy day. - Pipe entrance should be taken side or bottom. - When removal burr after cutting pipe, pipe entrance should be taken down. - Pipe entrance should be fitted cap when pass through the walls. 	<ul style="list-style-type: none"> - No dust in the pipe. - Until the connection is completed, the plumbing pipe entrance should be strictly controlled. - Pipe entrance should be taken side or bottom. - When removal burr after cutting pipe, pipe entrance should be taken down. - Pipe entrance should be fitted cap when pass through the walls. 	<ul style="list-style-type: none"> - Airtightness test should be. - Brazing operations to comply with standards. - Flare to comply with standards. - Flange connections to comply with standards.

Nitrogen substitution method


Welding, as when heating without nitrogen substitution a large amount of the oxide film is formed on the internal piping.

The oxide film is caused by clogging EEV, Capillary, oil hole of accumulator and suction hole of oil pump in compressor.

It prevents normal operation of the compressor.

In order to avoid this problem, Welding should be done after replacing air by nitrogen gas.

When welding plumbing pipe, the work is required.

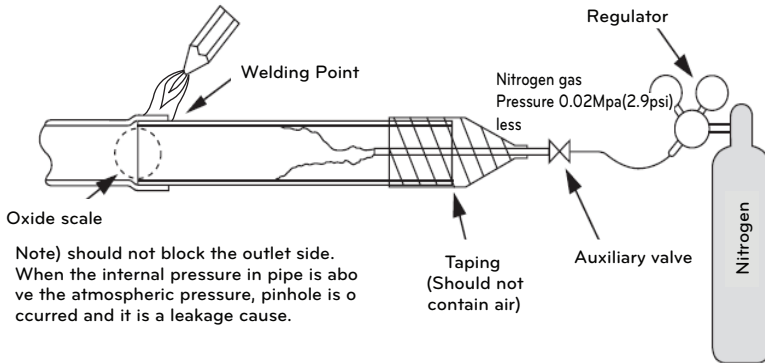

⚠ CAUTION


- 1 Always use the nitrogen.(not use oxygen, carbon dioxide, and a Chevron gas):
Please use the following nitrogen pressure 0.02Mpa(2.9psi)
Oxygen – Promotes oxidative degradation of refrigerant oil.
Because it is flammable, it is strictly prohibited to use
Carbon dioxide – Degrade the drying characteristics of gas
Chevron Gas – Toxic gas occurs when exposed to direct flame.
- 2 Always use a pressure reducing valve.
3. Please do not use commercially available antioxidant.
The residual material seems to be the oxide scale is observed.
In fact, due to the organic acids generated by oxidation of the alcohol contained in the anti-oxidants, ants nest corrosion occurs. (causes of organic acid alcohol + copper + water + temperature)

REFRIGERANT PIPING INSTALLATION

Precautions on Pipe connection / Valve operation

Pipe connection is done by connecting from the end of the pipe to the branching pipes, and the refrigerant pipe coming out of the outdoor unit is divided at the end to connect to each indoor unit. Flare connection for the indoor unit, and welding connection for the outdoor pipe and the branching parts.

- Use hexagonal wrench to open/close the valve.

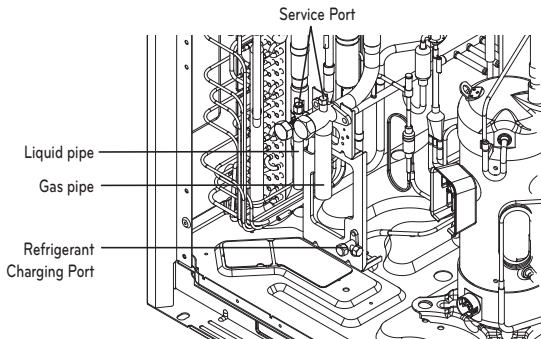

! WARNING


- Always careful not to leak the refrigerant during welding.
- The refrigerant generates poisonous gas harmful to human body if combusted.
- Do not perform welding in a closed space.
- Be sure to close the cap of the service port to prevent gas leakage after the work.

! CAUTION

Please block the pipe knock outs of the front and side panels after installing the pipes. (Animals or foreign objects may be brought in to damage wires.)


PIPE CONNECTIONS BETWEEN INDOOR AND OUTDOOR UNIT

- Pipe connections can be done on the front side or on the side according to the installation environments.
- Be sure to let $0.2\text{kgf/cm}^2(0.284\text{lbs/in}^2)$ Nitrogen flow in the pipe when welding.
- If Nitrogen was not flown during welding, many oxidized membranes may form inside the pipe and disturb the normal operations of valves and condensers.

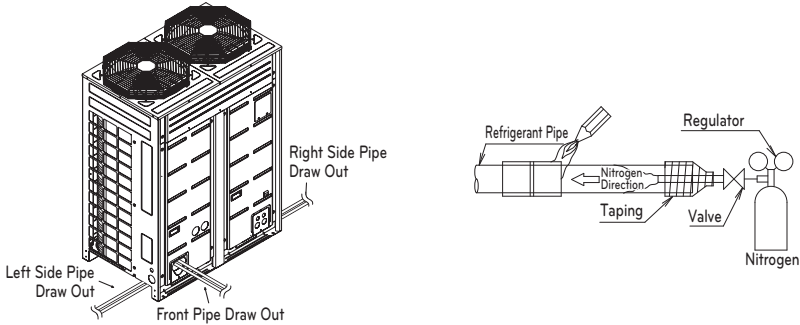

Preparation Work

- Use Knock Outs of Base Pan of the outdoor unit for Left/Right or Bottom pipe drawing outs.

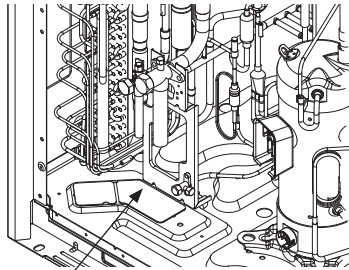


Removal Area for Liquid/Gas pipe bottom side connections.

⚠ CAUTION

- Do not give damage to the pipe/base during the Knock Out work.
- Proceed to pipe work after removing burr after Knock Out work.
- Perform sleeve work to prevent damage to the wire when connecting wires using knock Outs.

Remove leakage prevention cap


- Remove the leakage prevention cap attached to the outdoor unit service valve before pipe work.
- Proceed the leakage prevention cap removal as follows:
 - Verify whether the liquid/gas pipes are locked.
 - Extract remaining refrigerant or air inside using the service port.
 - Remove the leakage prevention cap

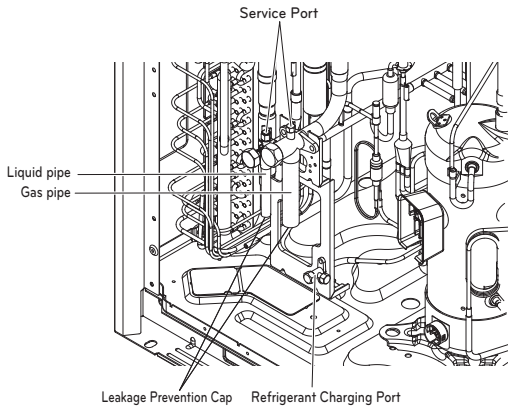

Pipe Drawing Out during Single / Series connection


Method of drawing out pipes on the front side

- Proceed with the pipe work as shown in the below figure for front side pipe drawing out.

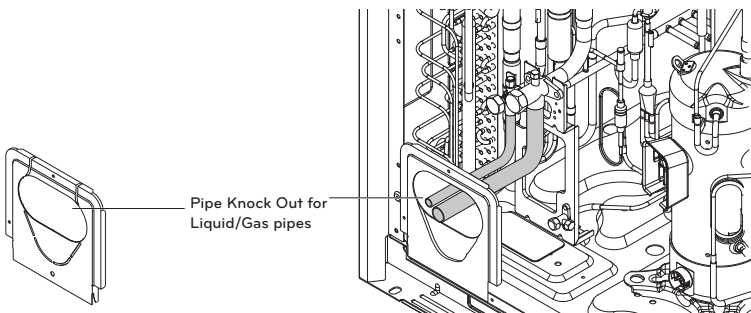

Method of drawing out pipes on the bottom side

- Drawing out common pipe through side panel

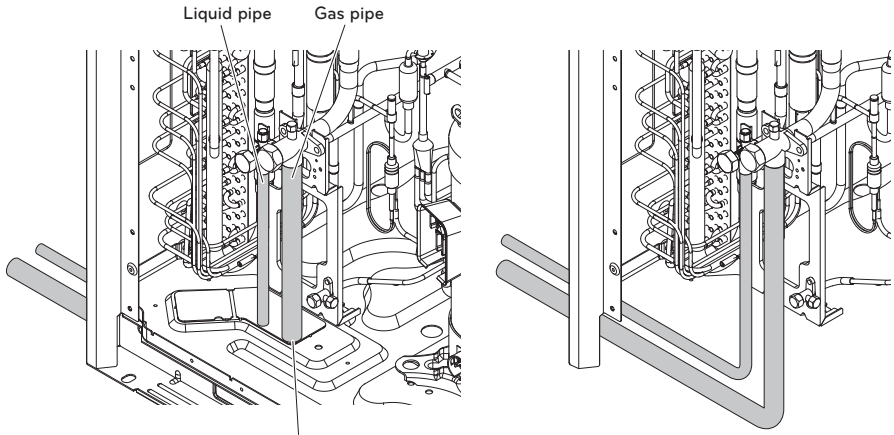

Remove only liquid/gas pipe Knock out


Refrigerant piping system

Y branch method

1 Outdoor Units

Example : 5 Indoor Units connected


- Ⓐ : Outdoor Unit
- Ⓑ : 1st branch (Y branch)
- Ⓒ : Indoor Units

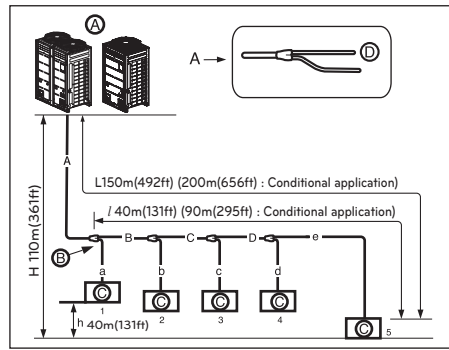

2 Outdoor Units

Example : 5 Indoor Units connected

- Ⓐ : Outdoor Unit
- Ⓑ : 1st branch (Y branch)
- Ⓒ : Indoor Units
- Ⓓ : Downward Indoor Unit
- Ⓔ : Connection branch pipe between Outdoor units: ARCNN21

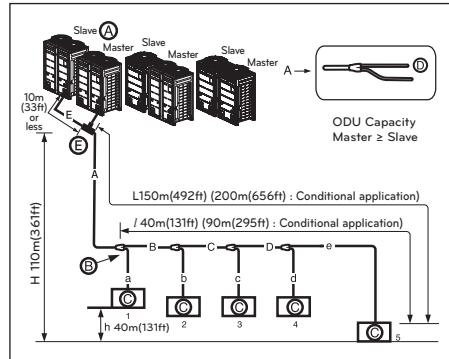

Piping length from outdoor branch to outdoor unit $\leq 10\text{m}(33\text{ft})$, equivalent length : max $13\text{m}(43\text{ft})$ (for 14Ton or more)

Additional Application


To satisfy below condition to make $40\text{m}(131\text{ft}) \sim 90\text{m}(295\text{ft})$ of pipe length after first branch.

- Diameter of pipes between first branch and the last branch should be increased by one step, except pipe diameter B,C,D is same as Diameter A
 $\varnothing 1/4(6.35\text{mm}) \rightarrow \varnothing 3/8(9.52\text{mm}) \rightarrow \varnothing 1/2(12.7\text{mm}) \rightarrow \varnothing 5/8(15.88\text{mm}) \rightarrow \varnothing 3/4(19.05\text{mm}) \rightarrow \varnothing 7/8(22.2\text{mm}) \rightarrow \varnothing 1(25.4\text{mm})^* \rightarrow \varnothing 1-1/8(28.58\text{mm}) \rightarrow \varnothing 1-1/4(31.8\text{mm})^* \rightarrow \varnothing 1-3/8(34.9\text{mm}) \rightarrow \varnothing 1-1/2(38.1\text{mm})^* \rightarrow \varnothing 1-5/8(41.3\text{mm})$
 * : It is not necessary to size up.
 * : If the step up size is not available, you can not select the next higher size available.
- While calculating whole refrigerant pipe length, pipe B,C,D length should be calculated twice.
 $A+B \times 2 + C \times 2 + D \times 2 + a + b + c + d + e \leq 1000\text{m}(3281\text{ft})$
- Length of pipe from each indoor unit to the closest branch (a,b,c,d,e) $\leq 40\text{m}(131\text{ft})$
- [Length of pipe from outdoor unit to the farthest indoor unit 5 (A+B+C+D+e)]
 - [Length of pipe from outdoor unit to the closest indoor unit 1 (A+a)] $\leq 40\text{m}(131\text{ft})$

3 Outdoor Units

Example : 5 Indoor Units connected

- Ⓐ : Outdoor Unit
- Ⓑ : 1st branch (Y branch)
- Ⓒ : Indoor Units
- Ⓓ : Downward Indoor Unit
- Ⓔ : Connection branch pipe between Outdoor units: ARCNN31
- Ⓕ : Connection branch pipe between Outdoor units: ARCNN21

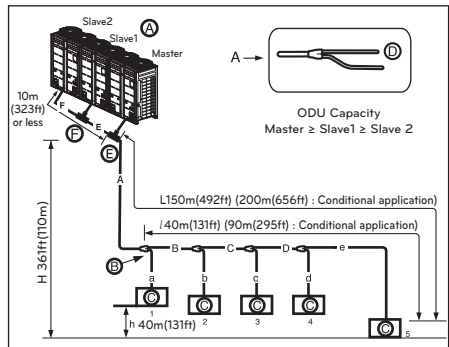

Piping length from outdoor branch to outdoor unit $\leq 10\text{m}$ (33ft), equivalent length : max. 13m(43ft)(for 12ton(14HP) or more)

Additional Application

To satisfy below condition to make 131ft(40m) ~ 295ft(90m) of pipe length after first branch.

- Diameter of pipes between first branch and the last branch should be increased by one step, except pipe diameter B,C,D is same as Diameter A
 $\varnothing 1/4(6.35\text{mm}) \rightarrow \varnothing 3/8(9.52\text{mm}) \rightarrow \varnothing 1/2(12.7\text{mm}) \rightarrow \varnothing 5/8(15.88\text{mm}) \rightarrow \varnothing 3/4(19.05\text{mm}) \rightarrow \varnothing 7/8(22.2\text{mm}) \rightarrow \varnothing 1(25.4)^* \rightarrow \varnothing 1-1/8(28.58\text{mm}) \rightarrow \varnothing 1-1/4(31.8\text{mm})^* \rightarrow \varnothing 1-3/8(34.9\text{mm}) \rightarrow \varnothing 1-1/2(38.1\text{mm})^* \rightarrow \varnothing 1-5/8(41.3\text{mm})$
 * : It is not necessary to size up.
 * : If the step up size is not available, you can not select the next higher size available.
- While calculating whole refrigerant pipe length, pipe B,C,D length should be calculated twice.
 $A+B \times 2+C \times 2+D \times 2+a+b+c+d+e \leq 1000\text{m}(3281\text{ft})$
- Length of pipe from each indoor unit to the closest branch (a,b,c,d,e) $\leq 40\text{m}(131\text{ft})$
- [Length of pipe from outdoor unit to the farthest indoor unit 5 (A+B+C+D+e)]
 - [Length of pipe from outdoor unit to the closest indoor unit 1 (A+a)] $\leq 40\text{m}(131\text{ft})$

Refrigerant pipe diameter from branch to branch (B,C,D)

Downward Indoor Unit total capacity [kW(Btu/h)]	Liquid pipe [mm(inch)]	Gas pipe [mm(inch)]
≤ 5.6(19,100)	Ø6.35(1/4)	Ø12.7(1/2)
< 16.0(54,600)	Ø9.52(3/8)	Ø15.88(5/8)
≤ 22.4(76,400)	Ø9.52(3/8)	Ø19.05(3/4)
< 33.6(114,700)	Ø9.52(3/8)	Ø22.2(7/8)
< 50.4(172,000)	Ø12.7(1/2)	Ø28.58(1-1/8)
< 67.2(229,400)	Ø15.88(5/8)	Ø28.58(1-1/8)
< 72.8(248,500)	Ø15.88(5/8)	Ø34.9(1-3/8)
< 100.8(344,000)	Ø19.05(3/4)	Ø34.9(1-3/8)
< 173.6(592,500)	Ø19.05(3/4)	Ø41.3(1-5/8)

Total pipe length = A+B+C+D+a+b+c+d+e ≤ 1000m(3281ft)

L	Longest pipe length	Equivalent pipe length
	A+B+C+D+e ≤ 150m(492ft)[200m(656ft)**]	*A+B+C+D+e ≤ 175m(574ft)[225m(738ft)**]
l	Longest pipe length after 1st branch	
	B+C+D+e ≤ 40m(131ft)[90m(295ft)**]	
H	Difference in height(Outdoor Unit ↔ Indoor Unit)	
	H ≤ 110m(361ft)	
h	Difference in height (Indoor Unit ↔ Indoor Unit)	
	h ≤ 40m(131ft)	
h1	Difference in height (Outdoor Unit ↔ Outdoor Unit)	
	h1 ≤ 5m(16.4ft)	

- * : Assume equivalent piping length of Y branch to be 0.5m(1.6ft), that of header to be 1m(3.3ft), calculation purpose.
- ** : To apply Conditional Application

! WARNING

When the any one (or both) of below conditions are satisfied, the diameter of main pipe (A) must be increased according to below table.

- The equivalent length between outdoor unit and the farthest indoor unit is 90m(295ft) or more (Liquid and Gas pipes are increased)
- The level difference (Outdoor unit ↔ Indoor unit) is 50m(164ft) or more (Only liquid pipe is increased)

Refrigerant pipe diameter from outdoor unit to first branch. (A)

Upward Outdoor unit total capacity		Standard Pipe Diameter		Increased Pipe Diameter			
				When pipe length is 90m(295ft) or more from ODU to 1st branch		When level difference is 50m(164ft) or more	
Ton	HP	Liquid pipe [mm(inch)]	Gas pipe [mm(inch)]	Liquid pipe [mm(inch)]	Gas pipe [mm(inch)]	Liquid pipe [mm(inch)]	Gas pipe [mm(inch)]
6	8	∅ 9.52(3/8)	∅ 19.05(3/4)	∅ 12.7(1/2)	∅ 22.2(7/8)	∅ 12.7(1/2)	not increased
8	10	∅ 9.52(3/8)	∅ 22.2(7/8)	∅ 12.7(1/2)	∅ 25.4(1)	∅ 12.7(1/2)	not increased
10~12	12~14	∅ 12.7(1/2)	∅ 28.58(1-1/8)	∅ 15.88(5/8)	not increased	∅ 15.88(5/8)	not increased
*12, **14, *14, **18, 14~18	18~22	∅ 15.88(5/8)	∅ 28.58(1-1/8)	∅ 19.05(3/4)	∅ 31.8(1-1/4)	∅ 19.05(3/4)	not increased
20	24	∅ 15.88(5/8)	∅ 34.9(1-3/8)	∅ 19.05(3/4)	not increased	∅ 19.05(3/4)	not increased
22~28	26~34	∅ 19.05(3/4)	∅ 34.9(1-3/8)	∅ 22.2(7/8)	∅ 38.1(1-1/2)	∅ 22.2(7/8)	not increased
32~36	38~42	∅ 19.05(3/4)	∅ 41.3(1-5/8)	∅ 22.2(7/8)	not increased	∅ 22.2(7/8)	not increased
38~42	46~50	∅ 19.05(3/4)	∅ 41.3(1-5/8)	∅ 22.2(7/8)	not increased	∅ 22.2(7/8)	not increased


- * : ARUN145*TE4(14HP, 12Ton), ** : ARUN169*TE4(18HP, 14Ton)
- If the step up size is not available, you can not select the next higher size available.

Header Method

1 Outdoor Unit

Example : 6 Indoor Units connected


- Ⓐ : Outdoor Unit
- Ⓑ : 1st branch
- Ⓒ : Indoor Units
- Ⓓ : Sealed piping

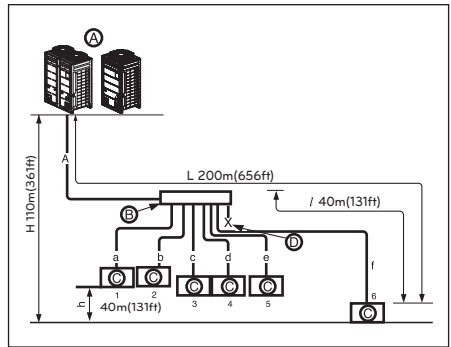

2 Outdoor Units

Example : 6 Indoor Units connected


- Ⓐ : Outdoor Unit
- Ⓑ : Header branch
- Ⓒ : Indoor Units
- Ⓓ : Sealing
- Ⓔ : Connection branch pipe between Outdoor units: ARCNN21

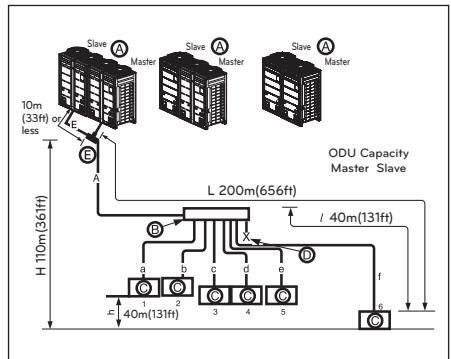

3 Outdoor Units

Example : 6 Indoor Units connected

- Ⓐ : Outdoor Unit
- Ⓑ : Header branch
- Ⓒ : Indoor Units
- Ⓓ : Sealing
- Ⓔ : Connection branch pipe between Outdoor units: ARCNN31
- Ⓕ : Connection branch pipe between Outdoor units: ARCNN21

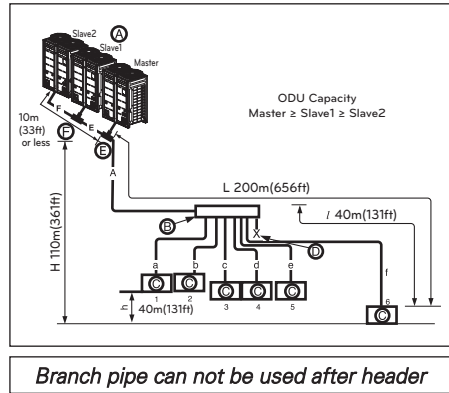

Total pipe length = A+a+b+c+d+e+f ≤ 1000m(3281ft)

L	Longest pipe length	*Equivalent pipe length
	$A+f \leq 200\text{m}(656\text{ft})$	$A+f \leq 225\text{m}(738\text{ft})$
l	Longest pipe length after 1st branch	
	$f \leq 40\text{m}(131\text{ft})$	
H	Difference in height (Outdoor Unit ↔ Indoor Unit)	
	$H \leq 110\text{m}(361\text{ft})$	
h	Difference in height (Indoor Unit ↔ Indoor Unit)	
	$h \leq 40\text{m}(131\text{ft})$	
h1	Difference in height (Outdoor Unit ↔ Outdoor Unit)	
	$h1 \leq 5\text{m}(16\text{ft})$	

! WARNING

Pipe length after header branching (a~f)

It is recommended that difference in length of the pipes connected to the Indoor Units is minimized. Performance difference between Indoor Units may occur.


- * : Assume equivalent piping length of Y branch to be 0.5m(1.64ft), that of header to be 1m(3.28ft), calculation purpose.
- Indoor Unit should be installed at lower position than the header.
- Piping length from outdoor branch to outdoor unit \leq 10m(32.8ft), equivalent length : max 13m(511.8ft)(for 16Ton(20HP) or more)

Combination of Y branch/header method

1 Outdoor Units

Example : 5 Indoor Units connected

- Ⓐ : Outdoor Unit
- Ⓑ : 1st branch (Y branch)
- Ⓒ : Y branch
- Ⓓ : Indoor Unit
- Ⓔ : Header
- Ⓕ : Sealed piping

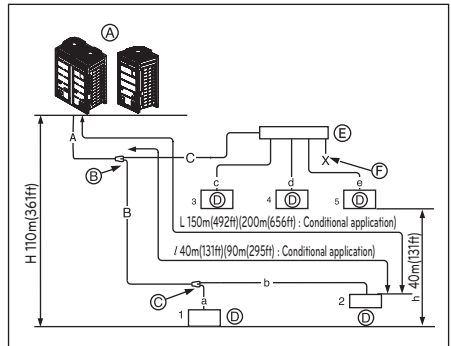


Branch pipe can not be used after header

2 Outdoor Units

Example : 5 Indoor Units connected

- Ⓐ : Outdoor Unit
- Ⓑ : 1st branch
- Ⓒ : Y branch
- Ⓓ : Indoor Unit
- Ⓔ : Connection branch pipe between Outdoor units: ARCNN21
- Ⓕ : Header
- Ⓖ : Sealed piping

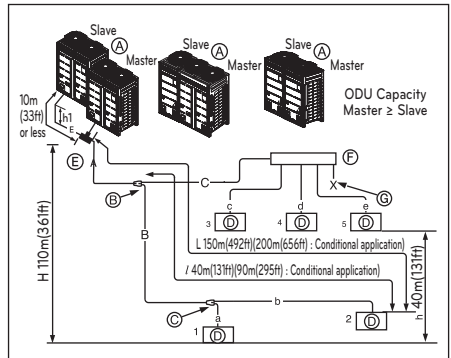


Branch pipe can not be used after header

3 Outdoor Units

Example : 5 Indoor Units connected

- Ⓐ : Outdoor Unit
- Ⓑ : 1st branch(Y branch)
- Ⓒ : Y branch
- Ⓓ : Indoor Unit
- Ⓔ : Connection branch pipe between Outdoor units: ARCNN31
- Ⓕ : Connection branch pipe between Outdoor units: ARCNN21
- Ⓖ : Header
- Ⓗ : Sealing

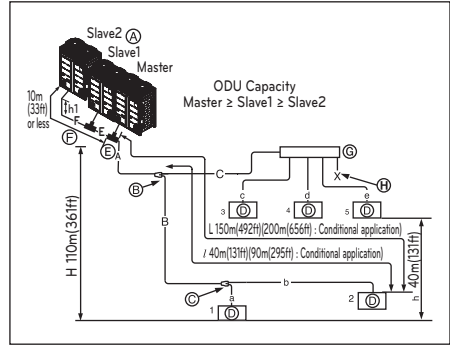

Branch pipe can not be used after header

Refrigerant pipe diameter from branch to branch (B,C)

Downward Indoor Unit total capacity [kW(Btu/h)]	Liquid pipe [mm(inch)]	Gas pipe [mm(inch)]
≤ 5.6(19,100)	Ø6.35(1/4)	Ø12.7(1/2)
< 16.0(54,600)	Ø9.52(3/8)	Ø15.88(5/8)
≤ 22.4(76,400)	Ø9.52(3/8)	Ø19.05(3/4)
< 33.6(114,700)	Ø9.52(3/8)	Ø22.2(7/8)
< 50.4(172,000)	Ø12.7(1/2)	Ø28.58(1-1/8)
< 67.2(229,400)	Ø15.88(5/8)	Ø28.58(1-1/8)
< 72.8(248,500)	Ø15.88(5/8)	Ø34.9(1-3/8)
< 100.8(344,000)	Ø19.05(3/4)	Ø34.9(1-3/8)
< 173.6(592,500)	Ø19.05(3/4)	Ø41.3(1-5/8)

Total pipe length = A+B+C+a+b+c+d+e ≤ 1000m(3281ft)

L	Longest pipe length	*Equivalent pipe length
	A+B+b ≤ 150m(492ft)[200m(656ft)**]	A+B+b ≤ 175m(574ft)[225m(738ft)**]
l	Longest pipe length after 1st branch	
	B+b ≤ 40m(131ft)[90m(295ft)**]	
H	Difference in height (Outdoor Unit ↔ Indoor Unit)	
	H ≤ 110m(361ft)	
h	Difference in height (Indoor Unit ↔ Indoor Unit)	
	h ≤ 40m(131ft)	
h1	Difference in height (Outdoor Unit ↔ Outdoor Unit)	
	h1 ≤ 5m(16ft)	

- * : Assume equivalent piping length of Y branch to be 0.5m(1.64ft), that of header to be 1m(3.28ft), calculation purpose.
- ** : To apply Conditional Application
- Indoor Unit should be installed at lower position than the header.

! WARNING

- It is recommended that difference of piping length for pipes connected to the Indoor Unit is minimized. Performance difference between Indoor Units may occur.
- When the any one (or both) of below conditions are satisfied, the diameter of main pipe (A) must be increased according to below table.
 - The equivalent length between outdoor unit and the farthest indoor unit is 90m(295ft) or more (Liquid and Gas pipes are increased)
 - The level difference (Outdoor unit ↔ Indoor unit) is 50m(164ft) or more (Only liquid pipe is increased)

Refrigerant pipe diameter from outdoor unit to first branch. (A)

Upward Outdoor unit total capacity		Standard Pipe Diameter		Increased Pipe Diameter			
				When pipe length is 90m or more from ODU to 1st branch		When level difference is 50m or more	
Ton	HP	Liquid pipe [mm(inch)]	Gas pipe [mm(inch)]	Liquid pipe [mm(inch)]	Gas pipe [mm(inch)]	Liquid pipe [mm(inch)]	Gas pipe [mm(inch)]
6	8	Ø 9.52(3/8)	Ø 19.05(3/4)	Ø 12.7(1/2)	Ø 22.2(7/8)	Ø 12.7(1/2)	not increased
8	10	Ø 9.52(3/8)	Ø 22.2(7/8)	Ø 12.7(1/2)	Ø 25.4(1)	Ø 12.7(1/2)	not increased
10 ~ 12	12 ~ 14	Ø 12.7(1/2)	Ø 28.58(1-1/8)	Ø 15.88(5/8)	not increased	Ø 15.88(5/8)	not increased
*12, ** 14, 14~18	*14, ** 18, 18~22	Ø 15.88(5/8)	Ø 28.58(1-1/8)	Ø 19.05(3/4)	Ø 31.8(1-1/4)	Ø 19.05(3/4)	not increased
20	24	Ø 15.88(5/8)	Ø 34.9(1-3/8)	Ø 19.05(3/4)	not increased	Ø 19.05(3/4)	not increased
22 ~ 28	26 ~ 34	Ø 19.05(3/4)	Ø 34.9(1-3/8)	Ø 22.2(7/8)	Ø 38.1(1-1/2)	Ø 22.2(7/8)	not increased
32 ~ 36	38 ~ 42	Ø 19.05(3/4)	Ø 41.3(1-5/8)	Ø 22.2(7/8)	not increased	Ø 22.2(7/8)	not increased
38 ~ 42	46 ~ 50	Ø 19.05(3/4)	Ø 41.3(1-5/8)	Ø 22.2(7/8)	not increased	Ø 22.2(7/8)	not increased

- * : ARUN145*TE4(14HP, 12Ton), ** : ARUN169*TE4(18HP, 14Ton)
- If the step up size is not available, you can not select the next higher size available.

Outdoor unit Connection

! WARNING

- In case of pipe diameter B connected after first branch is bigger than the main pipe diameter A, B should be of the same size with A.

Ex) In case indoor unit combination ratio ratio 130% is connected to 24HP(70kW) outdoor unit.

- 1) Outdoor unit main pipe diameter A : Ø34.9(1-3/8, gas pipe), Ø15.88(5/8, liquid pipe)
- 2) Pipe diameter B after first branch according to 130% indoor unit combination(91kW) : Ø34.9(1-3/8, gas pipe), Ø19.05(3/4, liquid pipe)

Therefore, pipe diameter B connected after first branch would be Ø34.9(1-3/8, gas pipe) / Ø15.88(5/8, liquid pipe) which is same with main pipe diameter.

[Example]

Instead of using indoor unit total capacity, use outdoor unit model name in order to choose main pipe diameter by downward.

Do not let the connection pipe from branch to branch exceed the main pipe diameter chosen by outdoor unit model name.

EX) Where connecting the indoor units to the 24HP(70kW) outdoor unit to 130% of its system capacity (91kW) and branching 7k Btu/h(2.2kW) indoor unit at the 1st branch
Main pipe diameter (24HP outdoor unit) outdoor unit): Ø28.58(1-1/8, Gas pipe) Ø15.88(5/8, Liquid pipe)

Pipe diameter between 1st and 2nd branch (88.5kW indoor units) : Ø34.9(1-3/8, Gas pipe) Ø19.05(3/4, Liquid pipe) in conformity with downward indoor units.

Since the main pipe diameter of 24HP(20Ton) outdoor unit is Ø28.58(1-1/8, Gas pipe) and Ø15.88(5/8, Liquid pipe), Ø28.58 (1-1/8, Gas pipe) and Ø15.88(5/8, Liquid pipe) is used as the main pipe and the connection pipe between 1st and 2nd branch.


Indoor Unit Connection

Indoor Unit connecting pipe from branch (a,b,c,d,e,f)

Indoor Unit capacity [kW(Btu/h)]	Liquid pipe [mm(inch)]	Gas pipe [mm(inch)]
≤ 5.6(19,100)	Ø6.35(1/4)	Ø12.7(1/2)
< 16.0(54,600)	Ø9.52(3/8)	Ø15.88(5/8)
< 22.4(76,400)	Ø9.52(3/8)	Ø19.05(3/4)

! CAUTION


- Bending radius should be at least twice the diameter of the pipe.
- Bend pipe after 500mm(1.64ft) or more from branch(or header).
Do not bend U type.
It may cause Performance unsatisfactory or noise.

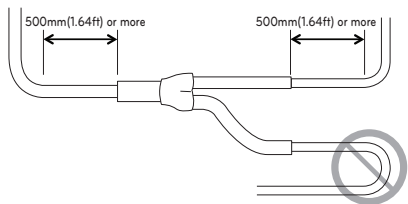


Pipe Connection Method/Precautions for Series connections between Outdoor units

- Separate Y branch joints are needed for series connections between outdoor units.
- Please refer to the below connection examples to install pipe connections between outdoor units.


Pipe connection between outdoor units (General Case)

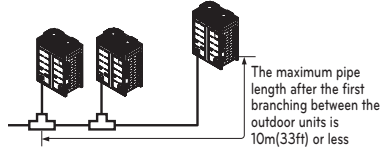

Pipes between outdoor units are 2m(6.6ft) or less

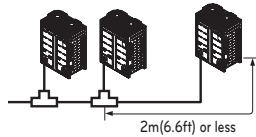


Pipes between outdoor units are 2m(6.6ft) or longer

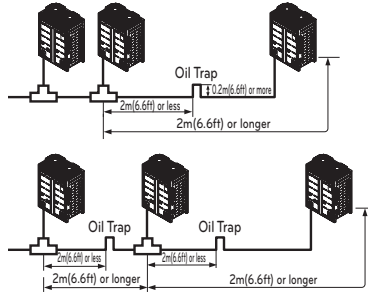


- If the distance between the outdoor units becomes more than 2m, apply Oil Traps between the gas pipes.
- If the outdoor unit is located lower than the main pipe, apply Oil Trap.

Examples of Wrong Pipe Connections


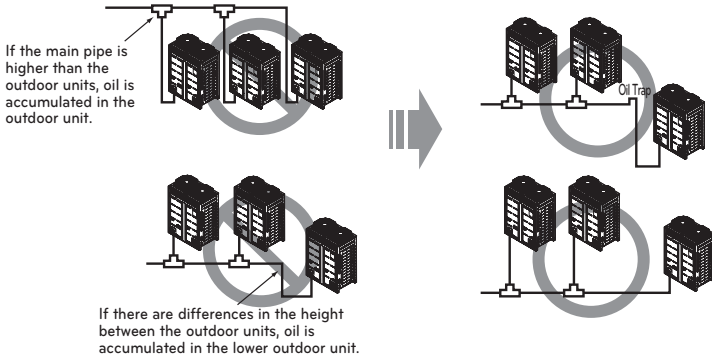


- The pipes between the outdoor units must maintain horizontal levelness or give an inclination to prevent a back flow toward the slave outdoor unit. Otherwise, the unit may not operate properly.



(Example 1)

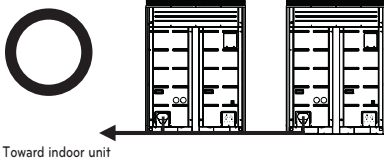

(Example 2)

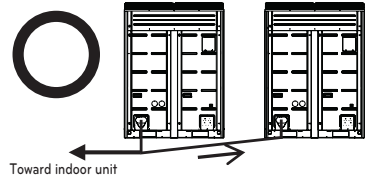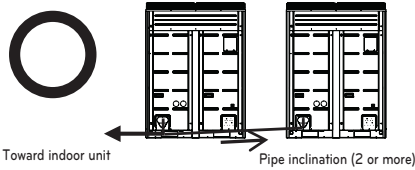


(Example 3)

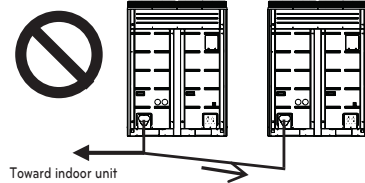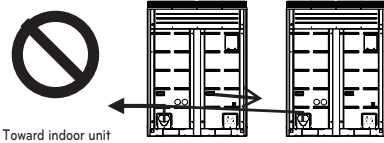


- Apply Oil Trap as shown below when the length of the pipe between the outdoor units is more than 2m(6.6ft). Otherwise, the unit may not operate properly.

(Example 1)

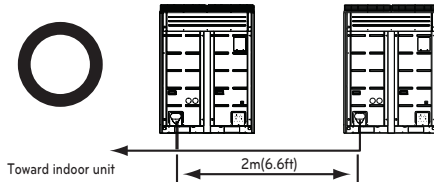


(Example 2)

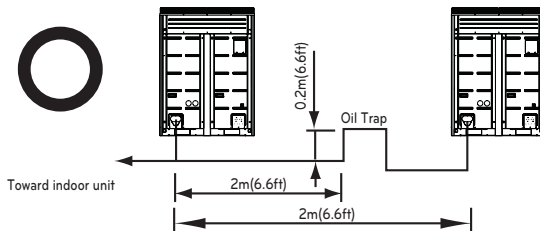


44 PIPE CONNECTIONS BETWEEN INDOOR AND OUTDOOR UNIT

- When connecting the pipes between the outdoor units, the accumulation of oil in the slave outdoor unit should be avoided. Otherwise, the unit may not operate properly.


(Example 1)

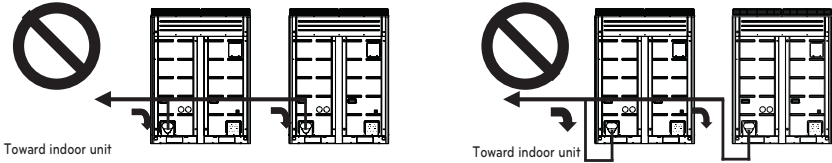

(Example 2)

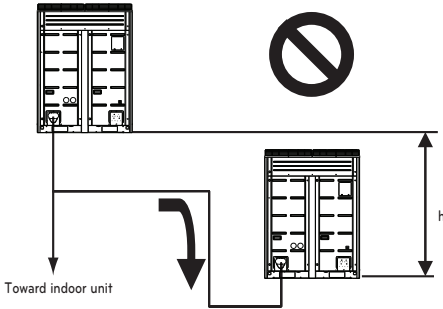

(Example 3)

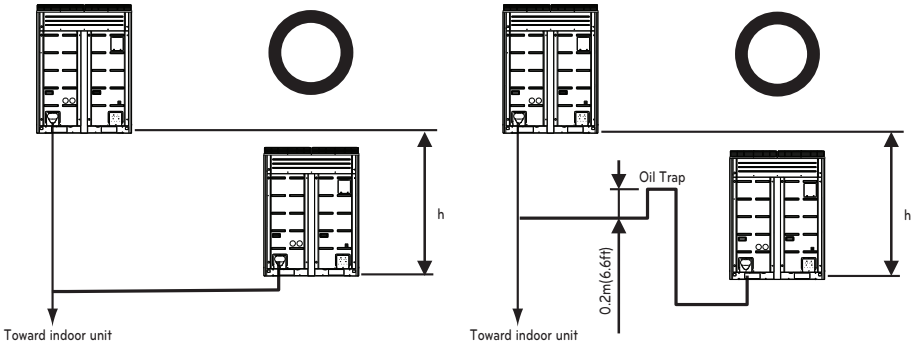

* The level difference between two outdoor units, h is allowed up to 5m(16.4ft).

The amount of Refrigerant

The calculation of the additional charge should take into account the length of pipe and CF(correction Factor) value of indoor unit.

Additional charge(kg)	=	Total liquid pipe : Ø25.4 mm (1.0 inch)	x 0.480 kg/m (0.323 lbs/ft)
	+	Total liquid pipe : Ø22.2 mm (7/8 inch)	x 0.354 kg/m (0.238 lbs/ft)
	+	Total liquid pipe : Ø19.05 mm (3/4 inch)	x 0.266 kg/m (0.179 lbs/ft)
	+	Total liquid pipe : Ø15.88 mm (5/8 inch)	x 0.173 kg/m (0.116 lbs/ft)
	+	Total liquid pipe : Ø12.7 mm (1/2inch)	x 0.118 kg/m (0.079 lbs/ft)
	+	Total liquid pipe : Ø9.52 mm (3/8inch)	x 0.061 kg/m (0.041 lbs/ft)
	+	Total liquid pipe : Ø6.35 mm (1/4 inch)	x 0.022 kg/m (0.015 lbs/ft)
	+	CF value of indoor unit	

Amount refrigerant of Indoor units
 Example) 4Way Ceiling Cassette 14.5kW -1ea, Ceiling concealed Duct 7.3kW-2ea,
 Wall Mounted 2.3kW-4ea
 $CF = 0.64 \times 1 + 0.26 \times 2 + 0.24 \times 4 = 2.12\text{kg}(4.67\text{lbs})$

Attach the additional refrigerant table of IDU.

! CAUTION
 Use only 2-series of indoor unit. Ex) ARNU***2/A


! WARNING

- Regulation for refrigerant leakage
: the amount of refrigerant leakage should satisfy the following equation for human safety.

$$\frac{\text{Total amount of refrigerant in the system}}{\text{Volume of the room at which Indoor Unit of the least capacity is installed}} \leq 0.44\text{kg/m}^3(0.028\text{lbs/ft}^3)$$

If the above equation can not be satisfied, then follow the following steps.


- Selection of air conditioning system: select one of the next
 - Installation of effective opening part
 - Reconfirmation of Outdoor Unit capacity and piping length
 - Reduction of the amount of refrigerant
 - Installation of 2 or more security device (alarm for gas leakage)
- Change Indoor Unit type
: installation position should be over 2m(6.56ft) from the floor (Wall mounted type → Cassette type)
- Adoption of ventilation system
: choose ordinary ventilation system or building ventilation system
- Limitation in piping work
: Prepare for earthquake and thermal stress

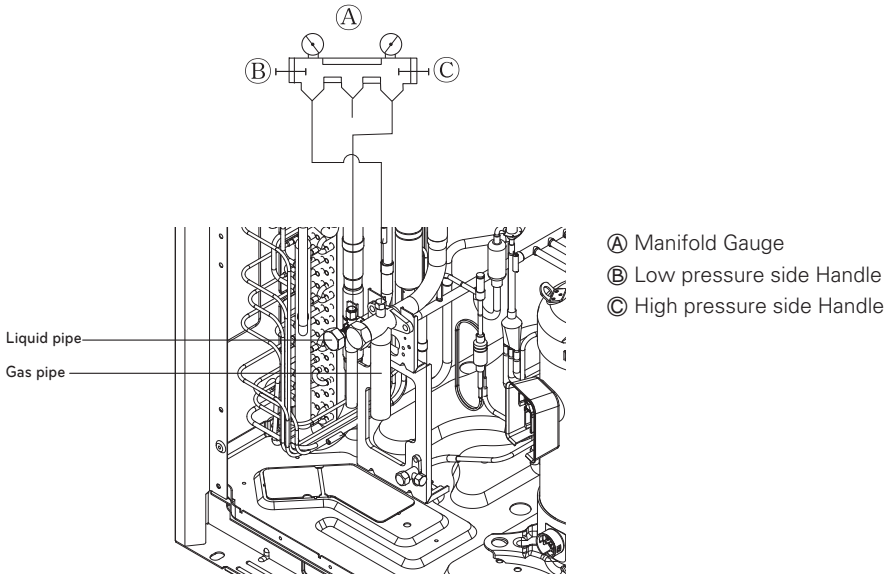Refrigerant charging**! WARNING**

- Pipe to be vacuumed : gas pipe, liquid pipe
- If the refrigerant amount is not exact, it may not operate properly.
- If additionally bottled refrigerant amount is over 10%, condenser burst or insufficient indoor unit performance may be caused.
- The total amount of refrigerant can be added up to 15%.


Distribution Method

Horizontal Distribution

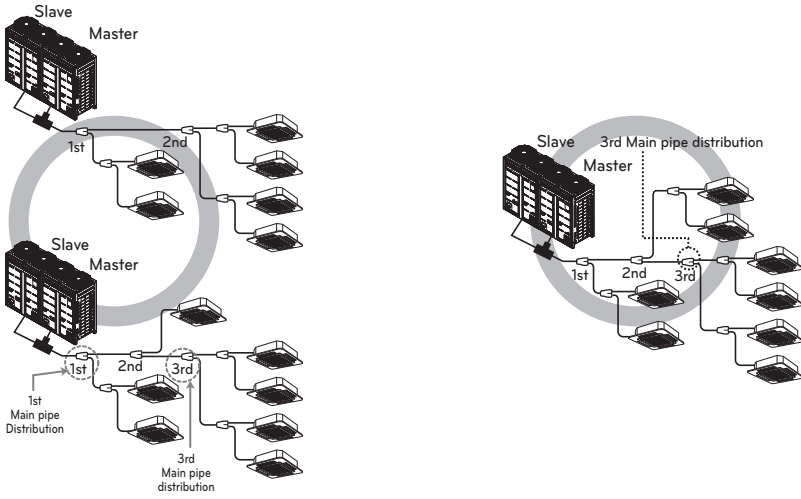


Vertical Distribution

- Ensure that the branch pipes are attached vertically.

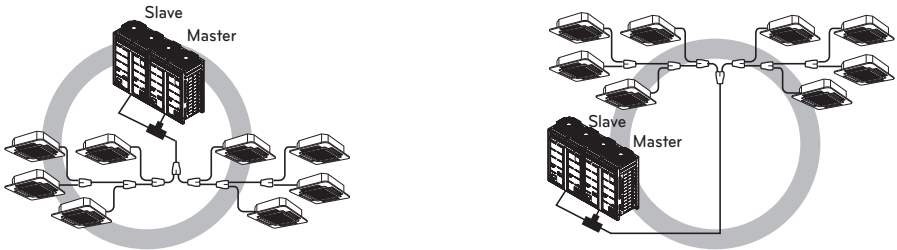


The others

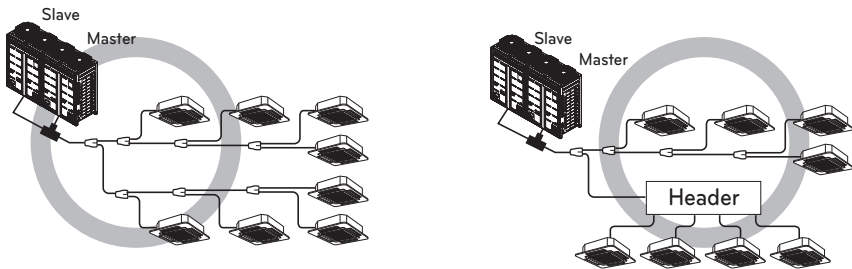


Branch pipe Fitting


Y branch




- Ensure that the branch pipes are attached horizontally or vertically (see the diagram below.)

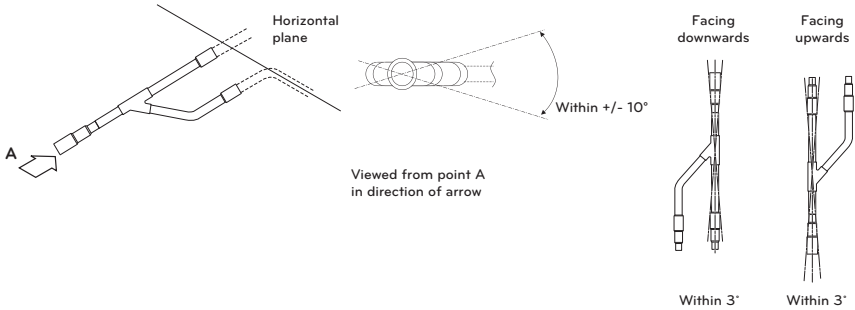


- There is no limitation on the joint mounting configuration.
- If the diameter of the refrigerant piping selected by the procedures described is different from the size of the joint, the connecting section should be cut with a pipe cutter.
- Branch pipe should be insulated with the insulator in each kit.

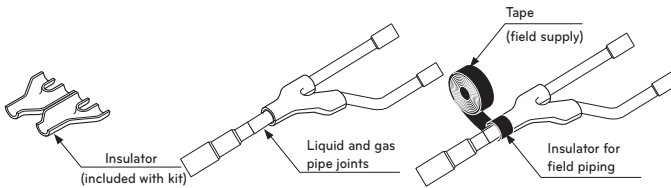

Header

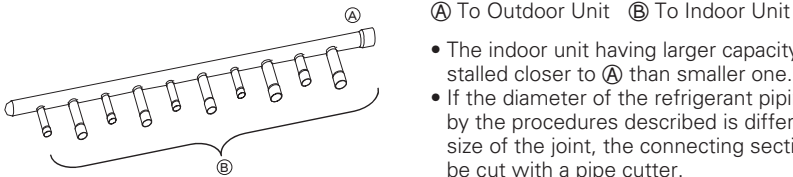


- The indoor unit having larger capacity must be installed closer to A than smaller one.
- If the diameter of the refrigerant piping selected by the procedures described is different from the size of the joint, the connecting section should be cut with a pipe cutter.

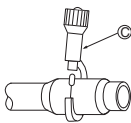


- Pipe cutter
- When the number of pipes to be connected is smaller than the number of header branches, install a cap to the unconnected branches.


- When the number of indoor units to be connected to the branch pipes is less than the number of branch pipes available for connection then cap pipes should be fitted to the surplus branches.

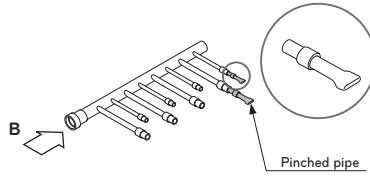


- Fit branch pipe lie in a horizontal plane.




- Header should be insulated with the insulator in each kit.

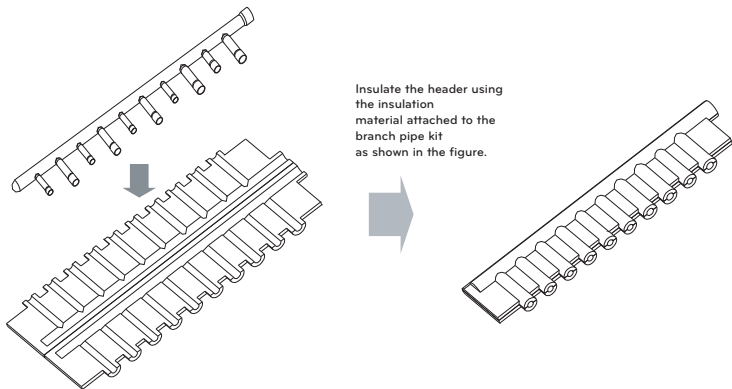

- Joints between branch and pipe should be sealed with the tape included in each kit.

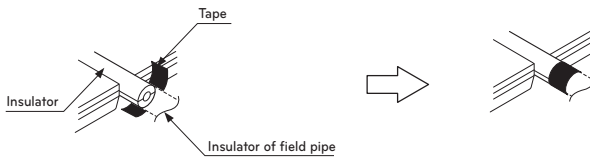
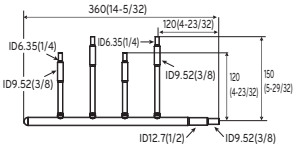
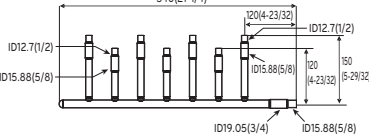
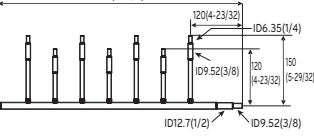
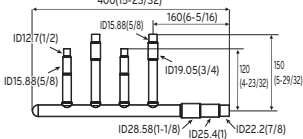
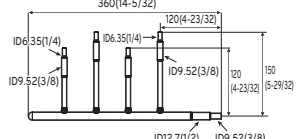

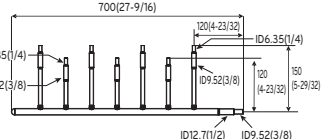
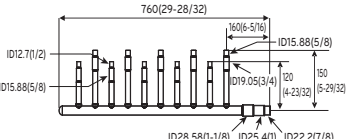
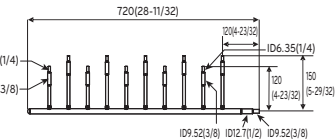
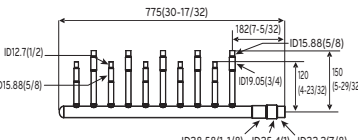
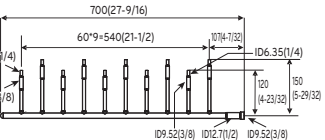


- Any cap pipe should be insulated using the insulator provided with each kit and then taped as described above.



Header

[Unit:mm(inch)]


Models	Gas pipe	Liquid pipe
4 branch ARBL054		
7 branch ARBL057		
4 branch ARBL104		
7 branch ARBL107		
10 branch ARBL1010		
10 branch ARBL2010		

Leak Test and Vacuum drying

Leak test

Leak test should be made by pressurizing nitrogen gas to 3.8 MPa(551.1psi). If the pressure does not drop for 24 hours, the system passes the test. If the pressure drops, check where the nitrogen leaks. For the test method, refer to the following figure. (Make a test with the service valves closed. Be also sure to pressurize liquid pipe, gas pipe and high/low pressure common pipe)

The test result can be judged good if the pressure has not be reduced after leaving for about one day after completion of nitrogen gas pressurization.

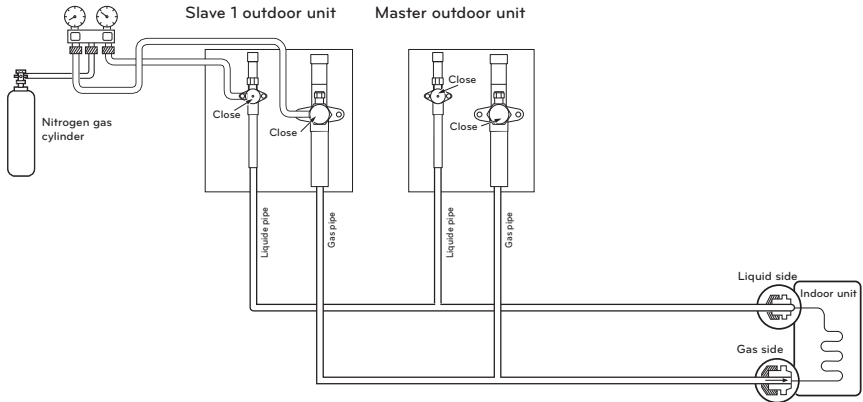

WARNING

Use a vacuum pump or Inert(nitrogen) gas when doing leakage test or air purge. Do not compress air or Oxygen and do not use Flammable gases. Otherwise, it may cause fire or explosion.

- There is the risk of death, injury, fire or explosion.

NOTE

If the ambient temperature differs between the time when pressure is applied and when the pressure drop is checked, apply the following correction factor

There is a pressure change of approximately 0.01Mpa(1.5psi) for each 33.8°F of temperature difference.

Correction = (Temp. at the time of pressurization – Temp. at the time of check) X 0.1

For example: Temperature at the time of pressurization 3.8MPa(551psi) is 80.6°F

24 hour later : 3.73MPa(541psi), 68°F

In this case the pressure drop of 0.07MPa(10psi) is because of temperature drop

And hence there is no leakage in pipe occurred.

CAUTION

To prevent the nitrogen from entering the refrigeration system in the liquid state, the top of the cylinder must be at higher position than the bottom when you pressurize the system.


Usually the cylinder is used in a vertical standing position.

Vacuum

Vacuum drying should be made from the service port provided on the outdoor unit's service valve to the vacuum pump commonly used for liquid pipe, gas pipe and high/low pressure common pipe. (Make Vacuum from liquid pipe, gas pipe and high/low pressure common pipe with the service valve closed.)

* Never perform air purging using refrigerant.

- Vacuum drying: Use a vacuum pump that can evacuate to -100.7kPa (-14.6psi, 5Torr, -755mmHg).
- Evacuate the system from the liquid and gas pipes with a vacuum pump for over 2 hrs and bring the system to -100.7kPa(-14.6psi). After maintaining system under that condition for over 1 hr, confirm the vacuum gauge rises. The system may contain moisture or leak.
- Following should be executed if there is a possibility of moisture remaining inside the pipe. (Rainwater may enter the pipe during work in the rainy season or over a long period of time) After evacuating the system for 2 hrs, give pressure to the system to 0.05MPa(7.3psi)(vacuum break) with nitrogen gas and then evacuate it again with the vacuum pump for 1hr to -100.7kPa(-14.6psi)(vacuum drying). If the system cannot be evacuated to -100.7kPa(-14.6psi) within 2 hrs, repeat the steps of vacuum break and its drying. Finally, check if the vacuum gauge does not rise or not, after maintaining the system in vacuum for 1 hr.

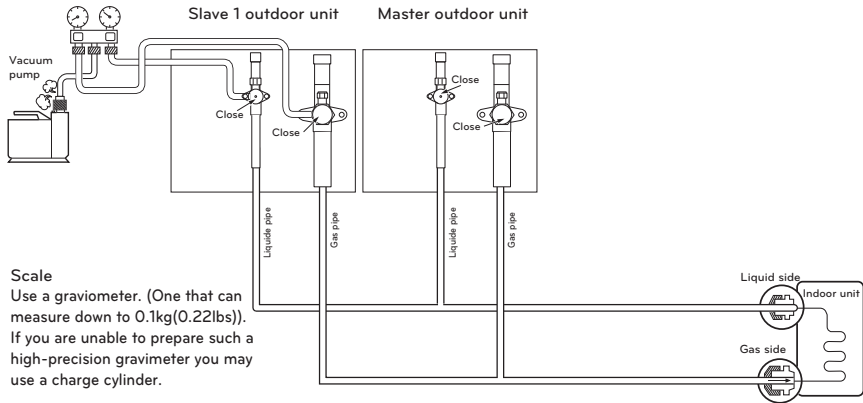

Scale
Use a gravimeter. (One that can measure down to 0.1kg(0.22lbs)). If you are unable to prepare such a high-precision gravimeter you may use a charge cylinder.

! WARNING

Use a vacuum pump or Inert(nitrogen) gas when doing leakage test or air purge. Do not compress air or Oxygen and do not use Flammable gases. Otherwise, it may cause fire or explosion.

- There is the risk of death, injury, fire or explosion.

! NOTE

Always add an appropriate amount of refrigerant. (For the refrigerant additional charge) Too much or too little refrigerant will cause trouble.

To use the Vacuum Mode

(If the Vacuum mode is set, all valves of Indoor units and Outdoor units will be opened.)

! WARNING




When installing and moving the air conditioner to another site, recharge after perfect evacuation.

- If a different refrigerant or air is mixed with the original refrigerant, the refrigerant cycle may malfunction and the unit may be damaged.

Vacuum Mode

This function is used for creating vacuum in the system after compressor replacement, ODU parts replacement or IDU addition/replacement.

Vacuum mode setting method

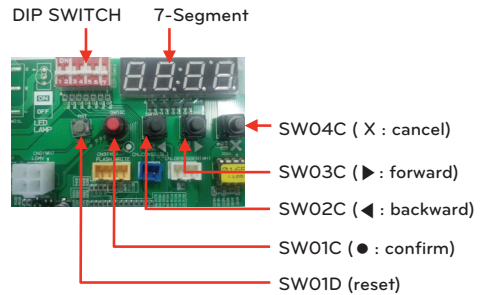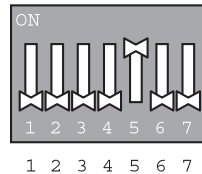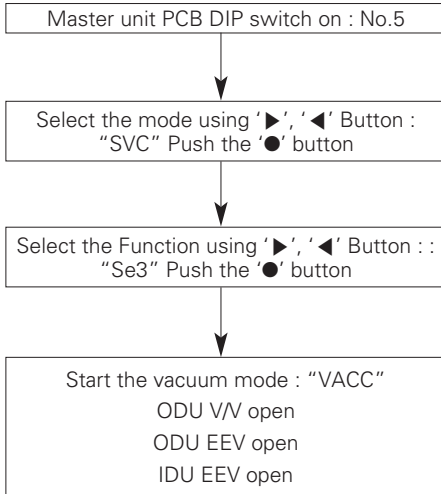

Vacuum mode off method


Dip switch off and push the reset button on Master unit PCB

CAUTION

ODU operation stops during vacuum mode. Compressor can't operate.

Thermal insulation of refrigerant piping

Be sure to give insulation work to refrigerant piping by covering liquid pipe and gas pipe separately with enough thickness heat-resistant polyethylene, so that no gap is observed in the joint between indoor unit and insulating material, and insulating materials themselves. When insulation work is insufficient, there is a possibility of condensation drip, etc. Pay special attention to insulation work to ceiling plenum.

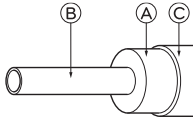

- Ⓐ Heat insulation material
- Ⓑ Pipe
- Ⓒ Outer covering (Wind the connection part and cutting part of heat insulation material with a finishing tape.)

Heat insulation material	Adhesive + Heat - resistant polyethylene foam + Adhesive tape	
Outer covering	Indoor	Vinyl tape
	Floor exposed	Water-proof hemp cloth + Bronze asphalt
	Outdoor	Water-proof hemp cloth + Zinc plate + Oily paint


! NOTE

When using polyethylene cover as covering material, asphalt roofing shall not be required.


Bad example	<ul style="list-style-type: none"> • Do not insulate gas or low pressure pipe and liquid or high pressure pipe together. <ul style="list-style-type: none"> Ⓐ Liquid pipe Ⓑ Gas pipe Ⓒ Power cables Ⓓ Finishing tape Ⓔ Insulating material Ⓕ Communication cables 	<ul style="list-style-type: none"> • Be sure to fully insulate connecting portion. <p>Ⓐ These parts are not insulated.</p>
Good example	<ul style="list-style-type: none"> Ⓐ Liquid pipe Ⓑ Gas pipe Ⓒ Power cables Ⓓ Communication cables Ⓔ Insulating material <p>Power cables Communication cables</p> <p>Separation</p>	

Penetrations


Inner wall (concealed)




Outer wall

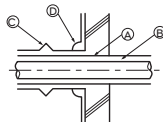


Outer wall (exposed)

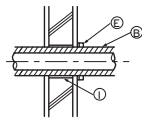


Floor (fireproofing)

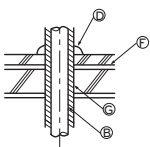

Roof pipe shaft

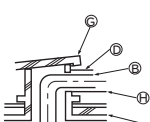

Penetrating portion on fire limit and boundary wall

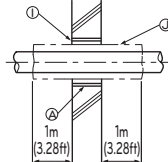

- Ⓐ Sleeve
- Ⓑ Heat insulating material
- Ⓒ Lagging
- Ⓓ Caulking material
- Ⓔ Band
- Ⓕ Waterproofing layer
- Ⓖ Sleeve with edge
- Ⓗ Lagging material
- Ⓘ Mortar or other incombustible caulking
- Ⓢ Incombustible heat insulation material

When filling a gap with mortar, cover the penetration part with steel plate so that the insulation material will not be caved in. For this part, use incombustible materials for both insulation and covering. (Vinyl covering should not be used.)

ELECTRICAL WIRING

Caution

- Follow ordinance of your governmental organization for technical standard related to electrical equipment, wiring regulations and guidance of each electric power company.

! WARNING


Be sure to have authorized electrical engineers do the electric work using special circuits in accordance with regulations and this installation manual. If power supply circuit has a lack of capacity or electric work deficiency, it may cause an electric shock or fire.

- Install the Outdoor Unit communication cable away from the power source wiring so that it is not affected by electric noise from the power source. (Do not run it through the same conduit.)
- Be sure to provide designated grounding work to Outdoor Unit.


! CAUTION

Be sure to correct the outdoor unit to earth. Do not connect ground wire to any gas pipe, liquid pipe, lightning rod or telephone earth line. If earth is incomplete, it may cause an electric shock.


- Give some allowance to wiring for electrical part box of Indoor and Outdoor Units, because the box is sometimes removed at the time of service work.
- Never connect the main power source to terminal block of communication cable. If connected, electrical parts will be burnt out.
- Use 2-core shield cable for communication cable. (O mark in the figure below) If communication cable of different systems are wired with the same multiple-core cable, the resultant poor transmitting and receiving will cause erroneous operations. (⊗ mark in the figure below)
- Only the communication cable specified should be connected to the terminal block for Outdoor Unit communication.

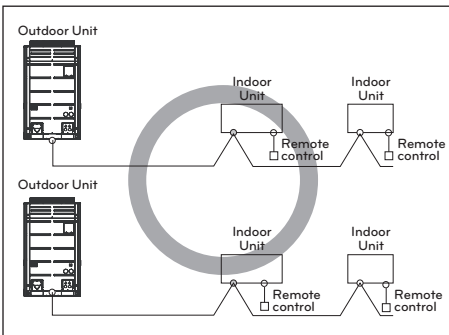


2-Core Shield Cable

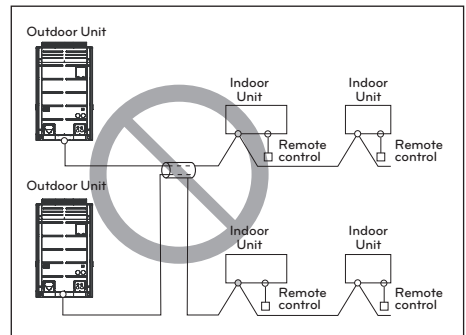

Multi-Core Cable

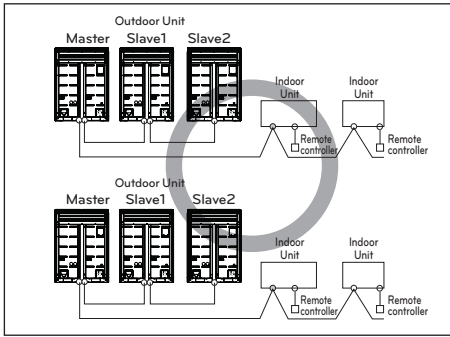

2-Core Shield Cable

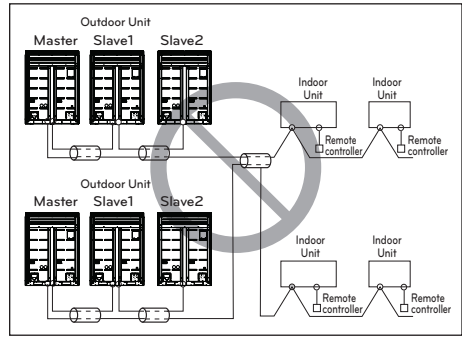


Multi-Core Cable

! CAUTION

- Use the 2-core shield cables for communication cables. Never use them together with power cables.
- The conductive shielding layer of cable should be grounded to the metal part of both units.
- Never use multi-core cable
- As this unit is equipped with an inverter, to install a phase leading capacitor not only will deteriorate power factor improvement effect, but also may cause capacitor abnormal heating. Therefore, never install a phase leading capacitor.
- Make sure that the power unbalance ratio is not greater than 2%. If it is greater the units lifespan will be reduced.


Precautions when laying power and ground wiring

Use round pressure terminals for connections to the power terminal block.
When laying ground wiring, you must use round pressure terminals.



When none are available, follow the instructions below.


- Do not connect wiring of different thicknesses to the power terminal block. (Slack in the power wiring may cause abnormal heat.)
- When connecting cable which is the same thickness, do as shown in the figure below.

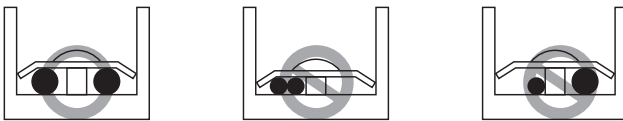

- For wiring, use the designated power cable and connect firmly, then secure to prevent outside pressure being exerted on the terminal block.
- Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will strip the head and make proper tightening impossible.
- Over-tightening the terminal screws may break them.

Control box and connecting position of wiring


- Remove all of the screws at front panel and remove the panel by pulling it forward.
- Connect communication cable between main and sub outdoor unit through the terminal block.
- Connect communication cables between outdoor unit and indoor units through the terminal block.
- When the central control system is connected to the outdoor unit, a dedicated PCB must be connected between them.
- When connecting communication cable between outdoor unit and indoor units with shielded cable, connect the shield ground to the earth screw.

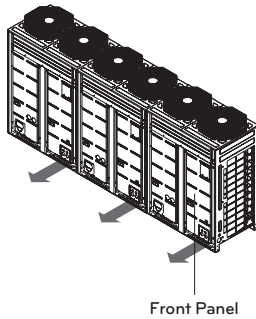

! WARNING

- The temperature sensor for outdoor air should not be exposed to direct sunlight.
- Provide an appropriate cover to intercept direct sunlight.

[Heat pump]

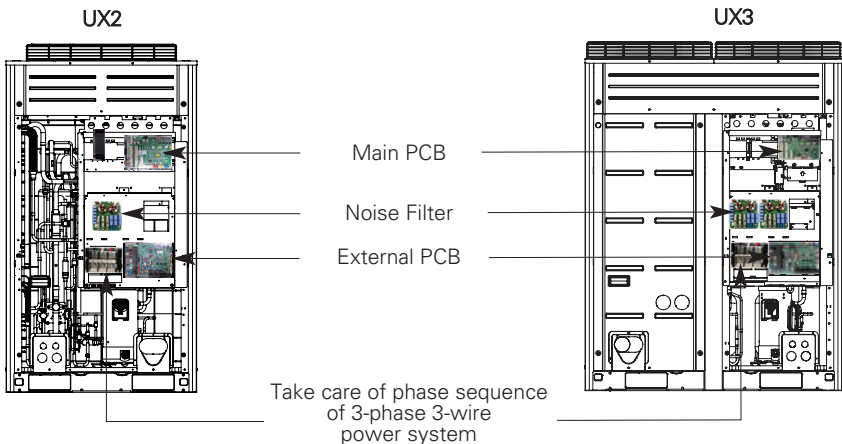

Communication and Power Cables

Communication cable

- Types : shielding cable
- Cross section : $1.0\sim 1.5\text{mm}^2$ ($1.55\times 10^{-3}\sim 2.32\times 10^{-3}$ in²)
- Maximum allowable temperature: 140°F
- Maximum allowable cable length: under 1,000m(3,281ft)

Remote control cable

- Types : 3-core cable

Central control cable

Product type	Cable type	Diameter
ACP&AC Manager	2-core cable (Shielding cable)	$1.0\sim 1.5\text{mm}^2$ ($1.55\times 10^{-3}\sim 2.32\times 10^{-3}$ in ²)
AC Smart	2-core cable (Shielding cable)	$1.0\sim 1.5\text{mm}^2$ ($1.55\times 10^{-3}\sim 2.32\times 10^{-3}$ in ²)
Simple central controller	4-core cable (Shielding cable)	$1.0\sim 1.5\text{mm}^2$ ($1.55\times 10^{-3}\sim 2.32\times 10^{-3}$ in ²)

Separation of communication and power cables

- If communication and power cables are run alongside each other then there is a strong likelihood of operational faults developing due to interference in the signal wiring caused by electrostatic and electromagnetic coupling.

The tables below indicates our recommendation as to appropriate spacing of communication and power cables where these are to be run side by side

Current capacity of power cable	Spacing	
100V or more	10A	300m(11-13/16 inch)
	50A	500m(19-11/16 inch)
	100A	1,000m(39-3/8 inch)
	Exceed 100A	1,500m(59-1/16 inch)

NOTE

- The figures are based on assumed length of parallel cabling up to 100m(328ft). For length in excess of 100m(328ft) the figures will have to be recalculated in direct proportion to the additional length of cable involved.
- If the power supply waveform continues to exhibit some distortion the recommended spacing in the table should be increased.
 - If the cable are laid inside conduits then the following point must also be taken into account when grouping various cable together for introduction into the conduits
 - Power cable(including power supply to air conditioner) and communication cables must not be laid inside the same
 - In the same way, when grouping the power wires and communication cables should not be bunched together.

CAUTION

If apparatus is not properly earthed then there is always a risk of electric shocks, the earthing of the apparatus must be carried out by a qualified person.

Wiring of main power supply and equipment capacity

- Use a separate power supply for the Outdoor Unit and Indoor Unit.
- Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
- The cable size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker taking into account the line voltage drops. Make sure the power-supply voltage does not drop more than 10%.
- Specific wiring requirements should adhere to the wiring regulations of the region.
- Power supply cords of parts of appliances for outdoor use should not be lighter than polychloroprene sheathed flexible cord.
- Don't install an individual switch or electrical outlet to disconnect each of indoor unit separately from the power supply.

WARNING

- Follow ordinance of your governmental organization for technical standard related to electrical equipment, wiring regulations and guidance of each electric power company.
- Make sure to use specified cables for connections so that no external force is imparted to terminal connections. If connections are not fixed firmly, it may cause heating or fire.
- Make sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.

CAUTION


- Some installation site may require attachment of an earth leakage breaker. If no earth leakage breaker is installed, it may cause an electric shock.
- Do not use anything other than breaker and fuse with correct capacity. Using fuse and wire or copper wire with too large capacity may cause a malfunction of unit or fire.

Field Wiring(3Ø, 208/230V)

60Hz

Example Connection of Communication Cable

- 1 Outdoor Unit - 3Ø, 208/230V

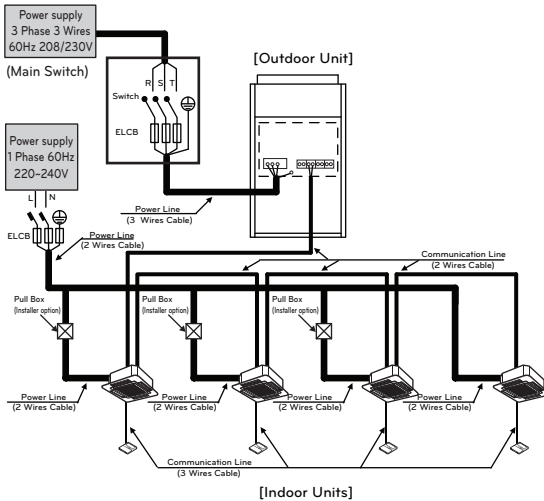


⚠ WARNING

- Indoor Unit ground Lines are required for preventing electrical shock accident during current leakage, Communication disorder by noise effect and motor current leakage (without connection to pipe).
- Don't install an individual switch or electrical outlet to disconnect each of indoor unit separately from the power supply.
- Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
- If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
Running the product in reversed phase may break the compressor and other parts.

[Heat Pump]

Between Indoor and Master Outdoor unit

⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	
SODU. B	SODU. A	IDU. B	IDU. A	CEN. B	CEN. A	DRY1	DRY2	GND	12V	Master Outdoor Unit
⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	

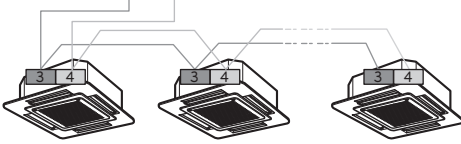


! NOTE


- Field Wiring diagram is to be used as a guideline only. Wiring should comply with applicable local and national codes
- ELCB must have function to prevent electrical short and over current at the same time .
- Use copper wires only.
- Unit must be grounded in compliance with the applicable local and national codes.
- ELCB and fuse/breaker must install to the power line

• 2 Outdoor Units - 3 ϕ , 208/230V

- Do not install the power source connected in series between the units.

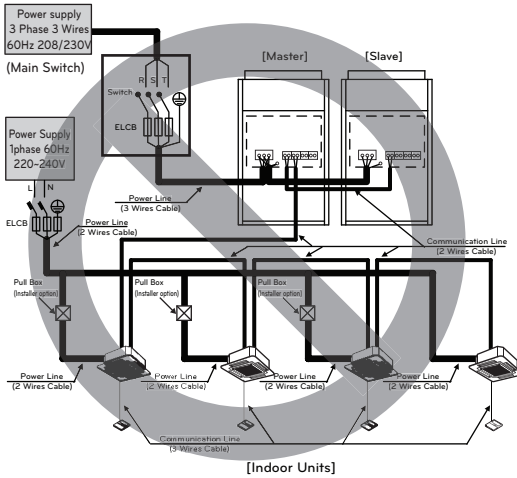

- Be sure that the power source is supplied to Each outdoor unit individually.

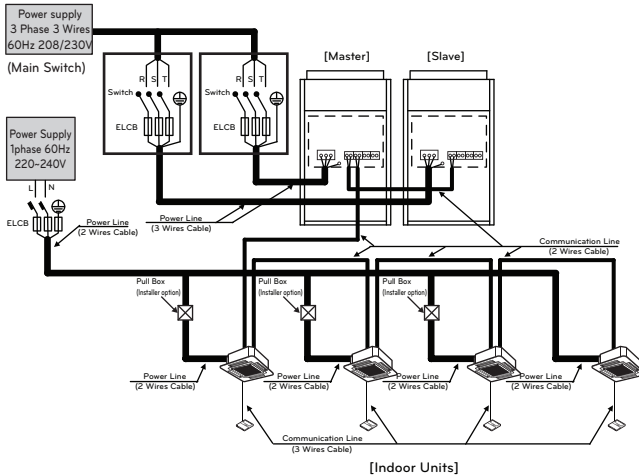

! NOTE


- Field Wiring diagram is to be used as a guideline only. Wiring should comply with applicable local and national codes
- ELCB must have function to prevent electrical short and over current at the same time .
- Use copper wires only.
- Unit must be grounded in compliance with the applicable local and national codes.
- ELCB and fuse/breaker must install to the power line

⚠ WARNING

- Indoor Unit ground Lines are required for preventing electrical shock accident during current leakage, Communication disorder by noise effect and motor current leakage (without connection to pipe).
- Don't install an individual switch or electrical outlet to disconnect each of indoor unit separately from the power supply.
- Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
- If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
Running the product in reversed phase may break the compressor and other parts.

[Heat Pump]


Between Indoor and Master Outdoor unit

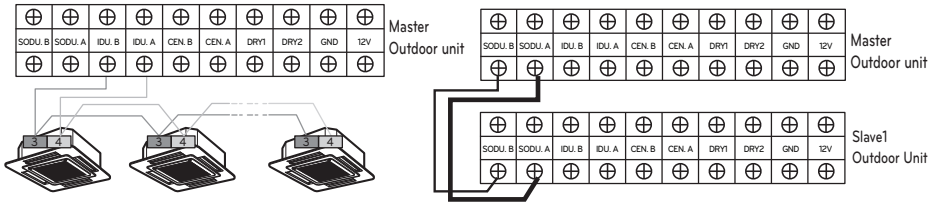


- It is not the point to make ground connection.
- Make sure that terminal number of master and slave outdoor units are matched.(A-A,B-B)

- 3 Outdoor Units - 3Ø, 208/230V

- Do not install the power source connected in series between the units.

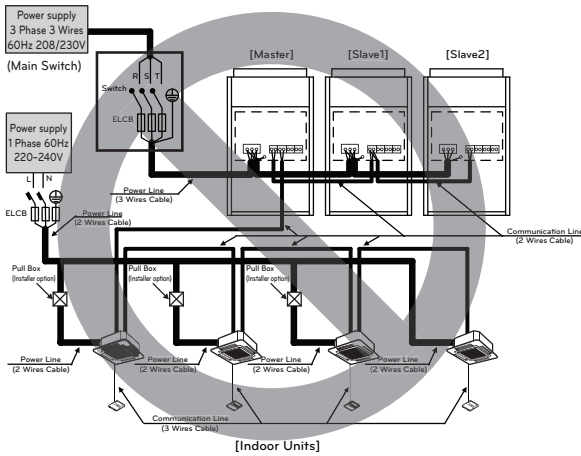

- Be sure that the power source is supplied to Each outdoor unit individually.

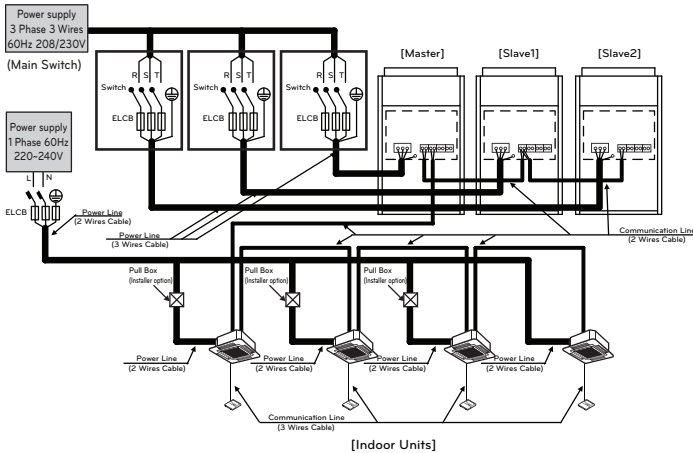

NOTE


- Field Wiring diagram is to be used as a guideline only. Wiring should comply with applicable local and national codes
- ELCB must have function to prevent electrical short and over current at the same time .
- Use copper wires only.
- Unit must be grounded in compliance with the applicable local and national codes.
- ELCB and fuse/breaker must install to the power line

! WARNING

- Indoor Unit ground Lines are required for preventing electrical shock accident during current leakage, Communication disorder by noise effect and motor current leakage (without connection to pipe).
- Don't install an individual switch or electrical outlet to disconnect each of indoor unit separately from the power supply.
- Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
- If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
Running the product in reversed phase may break the compressor and other parts.

[Heat Pump]

Between Indoor and Master Outdoor unit

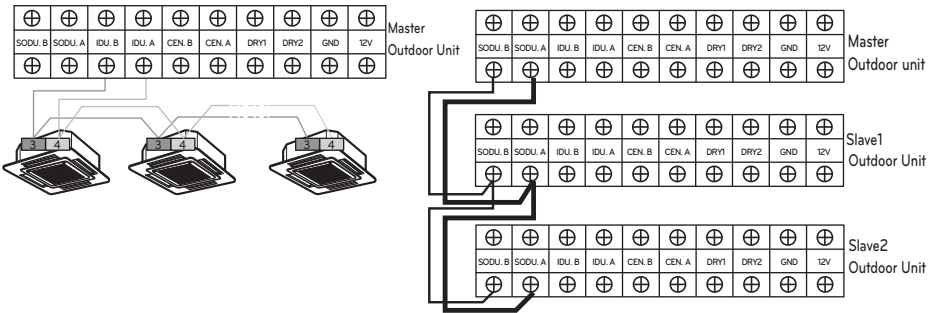


- It is not the point to make ground connection.
- Make sure that terminal number of master and slave outdoor units are matched.(A-A,B-B)

Field Wiring(3Ø, 460V)

60Hz

Example Connection of Communication Cable

- 1 Outdoor Unit - 3Ø, 460V

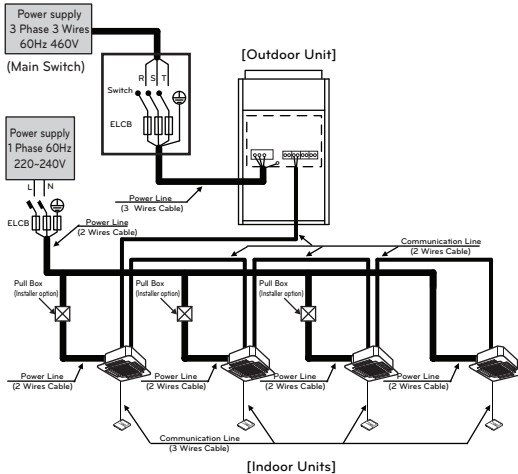


! WARNING

- Indoor Unit ground Lines are required for preventing electrical shock accident during current leakage, Communication disorder by noise effect and motor current leakage (without connection to pipe).
- Don't install an individual switch or electrical outlet to disconnect each of indoor unit separately from the power supply.
- Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
- If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
Running the product in reversed phase may break the compressor and other parts.

[Heat Pump]

Between Indoor and Master Outdoor unit

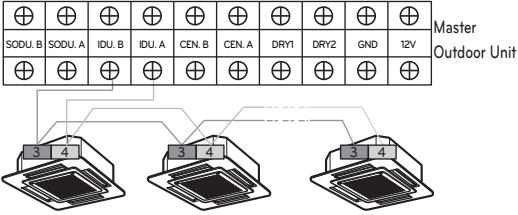


! NOTE


- Field Wiring diagram is to be used as a guideline only. Wiring should comply with applicable local and national codes
- ELCB must have function to prevent electrical short and over current at the same time .
- Use copper wires only.
- Unit must be grounded in compliance with the applicable local and national codes.
- ELCB and fuse/breaker must install to the power line

• 2 Outdoor Units - 3Ø, 460V

- When the power source is connected in series between the units.

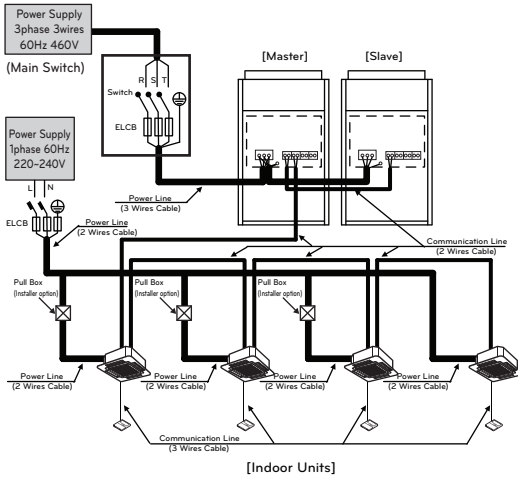

- Be sure that the power source is supplied to Each outdoor unit individually.

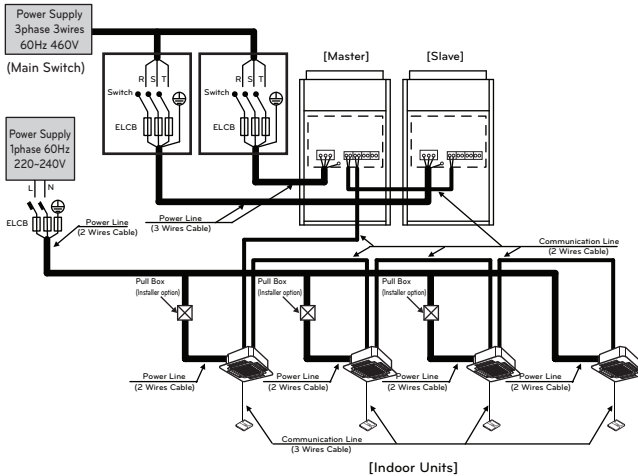

NOTE


- Field Wiring diagram is to be used as a guideline only. Wiring should comply with applicable local and national codes
- ELCB must have function to prevent electrical short and over current at the same time .
- Use copper wires only.
- Unit must be grounded in compliance with the applicable local and national codes.
- ELCB and fuse/breaker must install to the power line

! WARNING

- Indoor Unit ground Lines are required for preventing electrical shock accident during current leakage, Communication disorder by noise effect and motor current leakage (without connection to pipe).
- Don't install an individual switch or electrical outlet to disconnect each of indoor unit separately from the power supply.
- Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
- If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
Running the product in reversed phase may break the compressor and other parts.

[Heat Pump]


Between Indoor and Master Outdoor unit

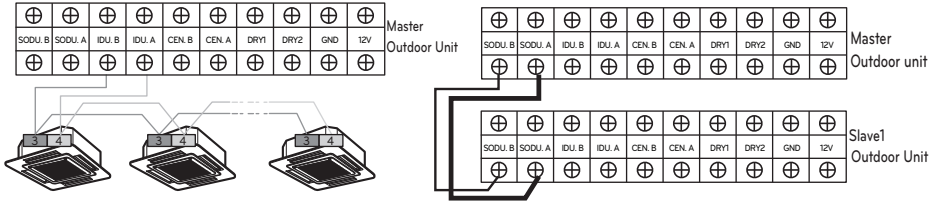


- It is not the point to make ground connection.
- Make sure that terminal number of master and slave outdoor units are matched.(A-A,B-B)

- 3 Outdoor Units - 3Ø, 460V

- When the power source is connected in series between the units.

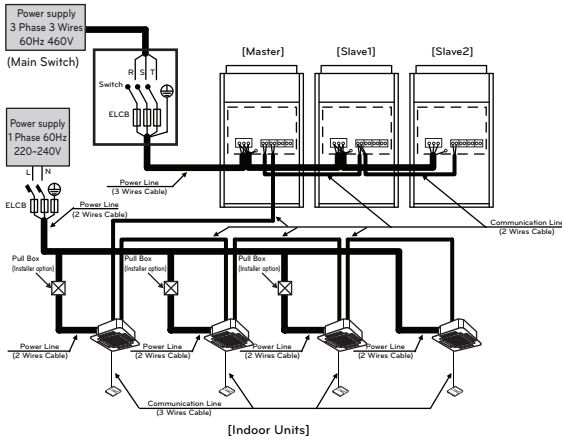

- Be sure that the power source is supplied to Each outdoor unit individually.

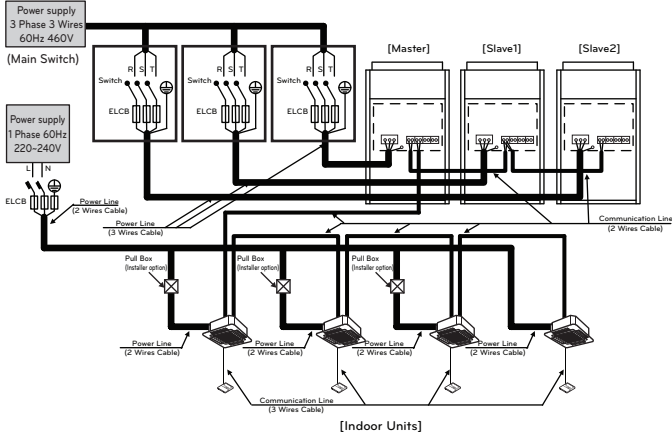

NOTE


- Field Wiring diagram is to be used as a guideline only. Wiring should comply with applicable local and national codes
- ELCB must have function to prevent electrical short and over current at the same time .
- Use copper wires only.
- Unit must be grounded in compliance with the applicable local and national codes.
- ELCB and fuse/breaker must install to the power line

! WARNING

- Indoor Unit ground Lines are required for preventing electrical shock accident during current leakage, Communication disorder by noise effect and motor current leakage (without connection to pipe).
- Don't install an individual switch or electrical outlet to disconnect each of indoor unit separately from the power supply.
- Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
- If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
Running the product in reversed phase may break the compressor and other parts.

[Heat Pump]


Between Indoor and Master Outdoor unit

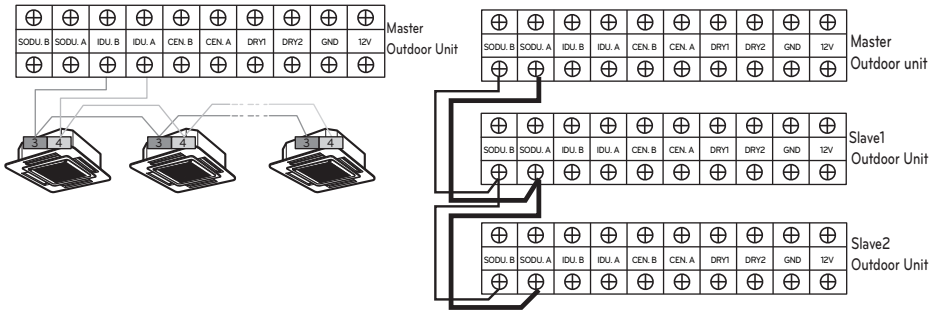

- It is not the point to make ground connection.
- Make sure that terminal number of master and slave outdoor units are matched.(A-A,B-B)


- Example Connection of Transmission Cable [BUS type]

- Connection of transmission cable must be installed like below figure between indoor unit to outdoor unit.

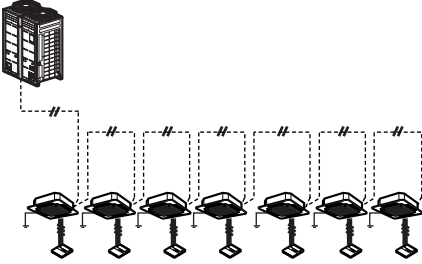

[STAR type]



- Abnormal operation can be caused by communication defect, when connection of transmission cable is installed like below figure (STAR type).

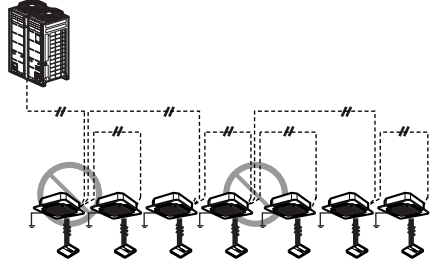

Example) Connection of power and communication cable (UX2)



Left Side

Right Side

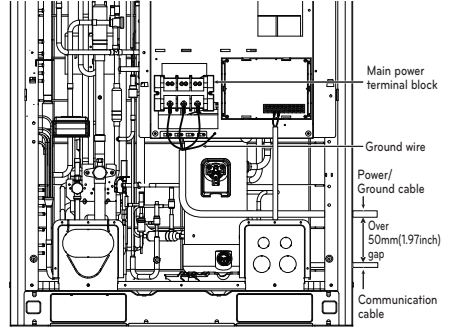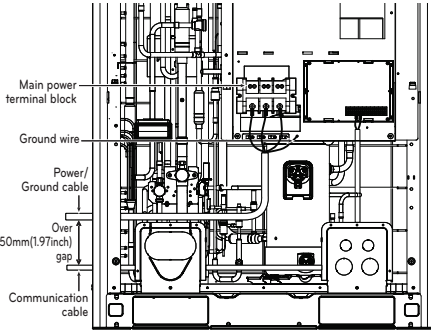



Front Side 1

Front Side 2

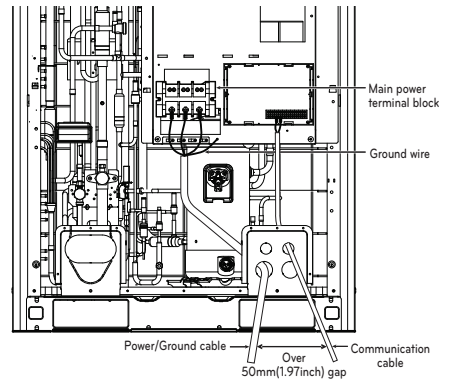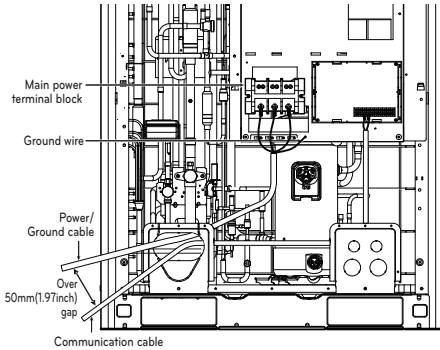

Main Power Connection


Communication Connection

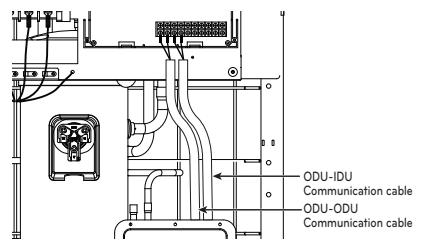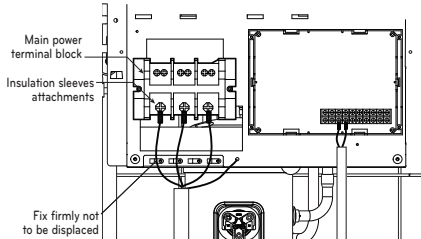

CAUTION

It should be wiring power cables or communication cables to avoid interference with the oil level sensor. Otherwise, That oil level sensor would be operated abnormally.

Example) Connection of power and communication cable (UX3)

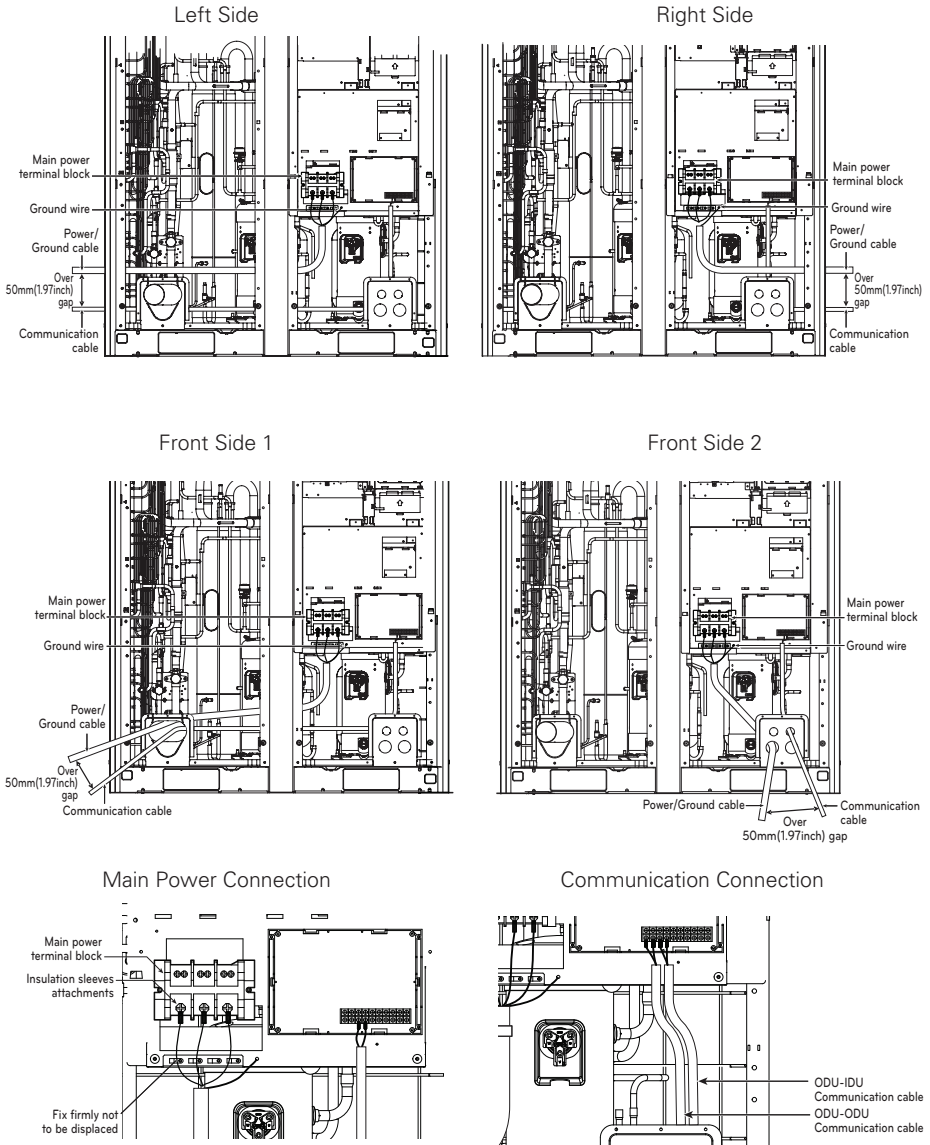**CAUTION**

It should be wiring power cables or communication cables to avoid interference with the oil level sensor. Otherwise, That oil level sensor would be operated abnormally.

Checking the setting of outdoor units

Checking according to dip switch setting

- You can check the setting values of the Master outdoor unit from the 7 segment LED.
The dip switch setting should be changed when the power is OFF.

Checking the initial display

The number is sequentially appeared at the 7 segment in 5 seconds after applying the power.
This number represents the setting condition. (For example, represents R410A 36HP)


• Initial display order

Order	No	Mean
①	8~18	Master model capacity (HP)
②	8~14	Slave 1 model capacity (HP)
③	8~14	Slave 2 model capacity (HP)
④	8~36	Total capacity (HP)
⑤	1	Cooling Only
	2	Heat Pump
	3	Heat Recovery
⑥	38	380V model
	46	460V model
	22	220V model
⑦	1	Full function
	2	Core function


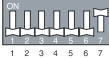
• Example) ARUN360DTE4

①	②	③	④	⑤	⑥	⑦
14	12	10	36	2	46	1

• Master Unit



• Slave Unit


Dip switch setting	ODU Setting
	Slave 1
	Slave 2

Automatic Addressing

The address of indoor units would be set by Automatic Addressing

- Wait for 3 minutes after supplying power.
(Master and Slave outdoor units, indoor units)
- Press RED button of the outdoor units for 5 seconds. (SW01C)
- A "88" is indicated on 7-segment LED of the outdoor unit PCB.
- For completing addressing, 2~7 minutes are required depending on numbers of connected indoor units
- Numbers of connected indoor units whose addressing is completed are indicated for 30 seconds on 7-segment LED of the outdoor unit PCB
- After completing addressing, address of each indoor unit is indicated on the wired remote control display window. (CH01, CH02, CH03,, CH06 : Indicated as numbers of connected indoor units)


[Heat Pump (MAIN PCB)]

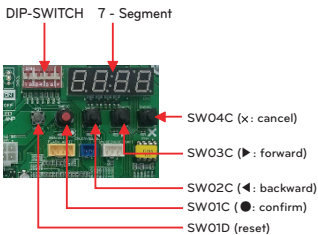

! CAUTION


- In replacement of the indoor unit PCB, always perform Automatic addressing setting again (At that time, please check about using Independent power module to any indoor unit.)
- If power supply is not applied to the indoor unit, operation error occur.
- Automatic Addressing is only possible on the master Unit.
- Automatic Addressing has to be performed after 3 minutes to improve communication.

The Procedure of Automatic Addressing

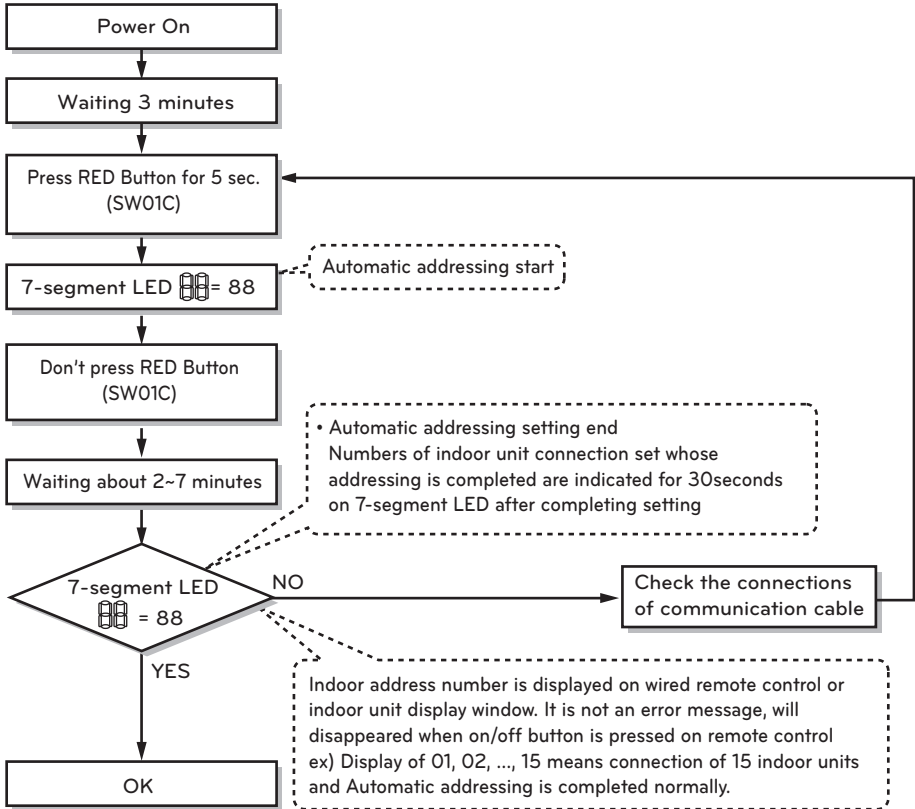

Setting the function

Select the mode/function/option/value using '▶', '◀' Button and confirm that using the '●' button after dip switch No.5 is turned on.

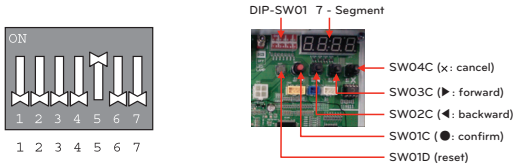

MODE		FUNCTION		OPTION		VALUE		ACTION		remarks	
content	Display1	content	Display2	content	Display3	content	Display4	implement	Display5		
In- stalla- tion	Func	Cool & Heat Selector	F _{n1}	oFF	op1~op2	selected the option	-	-	change the set value	blank	save in EEPROM
		Static pressure compensation	F _{n2}	oFF	op1~op5	selected the option	-	-	change the set value	blank	save in EEPROM
		Night low noise	F _{n3}	oFF	op1~op9	selected the option	-	-	change the set value	blank	save in EEPROM
		Overall defrost	F _{n4}	on	oFF	selected the option	-	-	change the set value	blank	save in EEPROM
		ODU address	F _{n5}	-	-	0~255	set the value	change the set value	blank	save in EEPROM	
		Snow removal & rapid defrost	F _{nb}	oFF	op1~op3	selected the option	-	-	change the set value	blank	save in EEPROM
		Target pressure adjusting	F _{nB}	op1~op2	selected the option	-	-	change the set value	blank	save in EEPROM	


* Functions save in EEPROM will be kept continuously, though the system power was reset.

Group Number setting

Group Number setting for Indoor Units

- Confirm the power of whole system(Indoor Unit, Outdoor Unit) is OFF, otherwise turn off.
- The communication cables connected to CEN.A and CEN.B terminal should be connected to central control of Outdoor Unit with care for their polarity (A-A, B-B).
- Turn the whole system on.
- Set the group and Indoor Unit number with a wired remote control.
- To control several sets of Indoor Units into a group, set the group ID from 0 to F for this purpose.

Outdoor Units (External PCB)

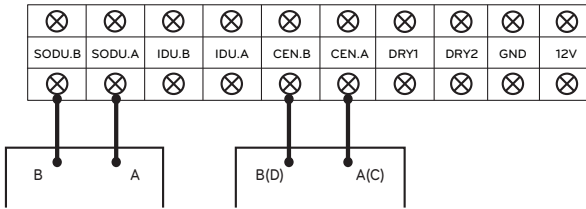

Example) Group number setting

1 E
 Group Indoor unit

1st number indicate the group number


2nd number point out indoor unit number

Group recognizing the central controller
No.0 group (00~0F)
No.1 group (10~1F)
No.2 group (20~2F)
No.3 group (30~3F)
No.4 group (40~4F)
No.5 group (50~5F)
No.6 group (60~6F)
No.7 group (70~7F)
No.8 group (80~8F)
No.9 group (90~9F)
No. A group (A0~AF)
No. B group (B0~BF)
No. C group (C0~CF)
No. D group (D0~DF)
No. E group (E0~EF)
No. F group (F0~FF)

TEST RUN

Cool & Heat selector


mode setting method

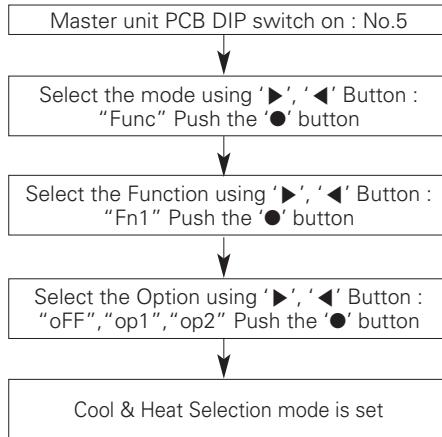

Function setting

Switch control		Function		
Switch(Phase)	Switch(Bottom)	oFF	op1(mode)	op2(mode)
Right	Left	Not operate	Cooling	Cooling
Right	Right	Not operate	Heating	Heating
Left	-	Not operate	Fan mode	Off

Left side | Right side

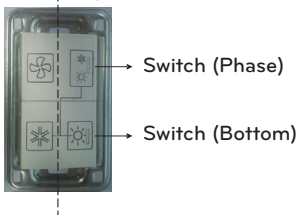


! CAUTION

- Ask an authorized technician to setting a function.
- If do not use a function, set an off-mode.
- If use a function, first install a Cool & Heat selector.

Static pressure compensation mode

This function secures the air flow rate of ODU, in case static pressure has been applied like using duct at fan discharge of ODU.

Static pressure compensation mode setting method

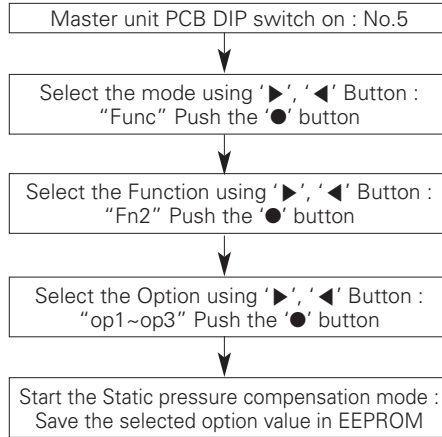

FAN Maximum RPM of each step (220V Model)

Capacity		8HP(6Ton)	10~14HP,18HP(8~14Ton)
Max. RPM	Standard	850	1050
	op1	870	1080
	op2	890	1110
	op3	900	1120


FAN Maximum RPM of each step (460V Model)

Capacity		8HP(6Ton)	10~14HP,18HP(8~14Ton)
Max. RPM	Standard	730	950
	op1	760	1020
	op2	780	1050
	op3	800	1130

Night Low Noise Function

In cooling mode, this function makes the ODU fan operate at low RPM to reduce the fan noise of ODU at night which has low cooling load.

Night low noise function setting method

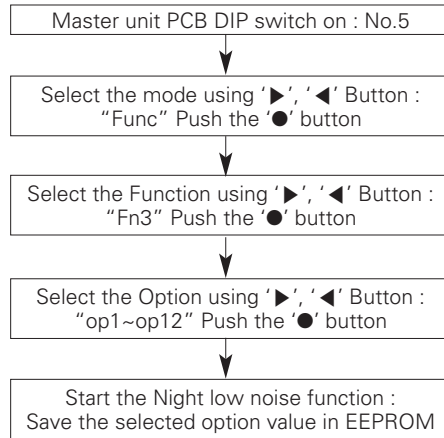

Time Settings

Step	Judgment Time(Hr)	Operation Time(Hr)
op1	8	9
op2	6.5	10.5
op3	5	12
op4	8	9
op5	6.5	10.5
op6	5	12
op7	8	9
op8	6.5	10
op9	5	12
op10	Continuous operation	
op11	Continuous operation	
op12	Continuous operation	

Noise


	Capacity	
	8HP(6Ton)	10~14HP, 18HP(8~14Ton)
Step	Noise(dB)	
op1~op3, op10	55	59
op4~op6, op11	52	56
op7~op9, op12	49	53

! CAUTION

- Request installer to set the function during installation.
- If ODU RPM changes, cooling capacity may go down.

Overall defrost mode

mode setting method

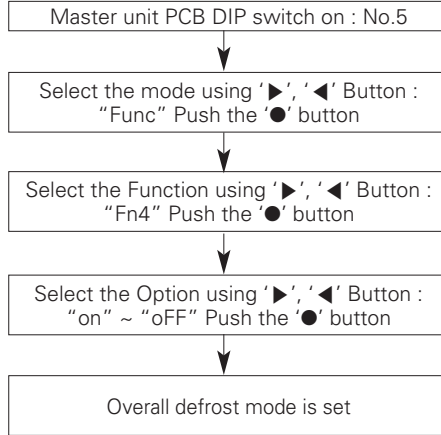

mode setting

- on: Operate overall defrost
- off: Operate partial defrost




CAUTION

- Ask an authorized technician to setting a function.

Setting the ODU address

mode setting method

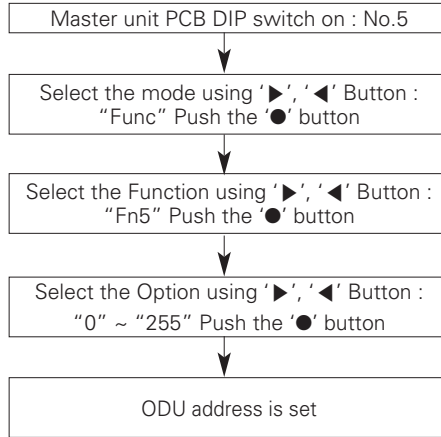


CAUTION

- Ask an authorized technician to setting a function.
- If use a function, first install a Central controller.

Snow removal & rapid defrost

mode setting method

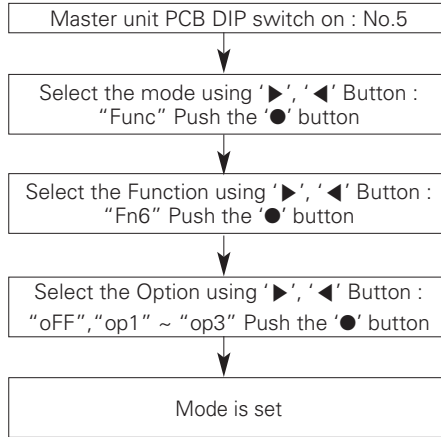

mode setting


setting	Mode
oFF	Not setting
op1	Snow removal mode
op2	Rapid defrost mode
op3	Snow removal mode. + Rapid defrost mode.

⚠ CAUTION

- Ask an authorized technician to setting a function.
- If do not use a function, set an off-mode.

Target pressure adjusting

mode setting method

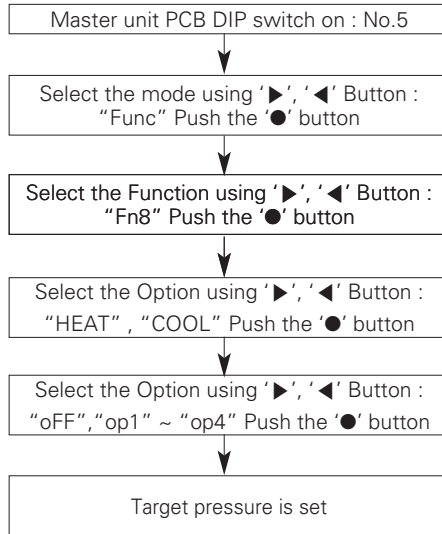

Setting

mode	Purpose		Condensing temperature variation	Evaporating temperature variation
	"Heat"	"Cool"		
op1	Increase capacity	Increase capacity	-3°C(26.6°F)	+2°C(35.6°F)
op2	Decrease power consumption	Increase capacity	-1.5°C(29.3°F)	-2°C(28.4°F)
op3	Decrease power consumption	Decrease power consumption	+2.5°C(36.5°F)	-4°C(24.8°F)
op4	Decrease power consumption	Decrease power consumption	-4.5°C(23.9°F)	-6°C(21.2°F)



CAUTION

- Ask an authorized technician to setting a function.
- If do not use a function, set an off-mode.
- Change a power consumption or capacity.

Self-Diagnosis Function

Error Indicator

- This function indicates types of failure in self-diagnosis and occurrence of failure for air condition.
- Error mark is displayed on display window of indoor units and wired remote controller, and 7-segment LED of outdoor unit control board as shown in the table.
- If more than two troubles occur simultaneously, lower number of error code is first displayed.
- After error occurrence, if error is released, error LED is also released simultaneously.

Error Display

1st,2nd,3rd LED of 7-segment indicates error number, 4th LED indicates unit number.

(* = 1:Master, 2:Slave 1, 3:Slave2)



* Refer to the DX-Ventilation manual for DX-Ventilation error code.

	Display	Title	Cause of Error
Indoor unit related error	0 1 -	Air temperature sensor of indoor unit	Air temperature sensor of indoor unit is open or short
	0 2 -	Inlet pipe temperature sensor of indoor unit	Inlet pipe temperature sensor of indoor unit is open or short
	0 3 -	Communication error : wired remote controller ↔ indoor unit	Failing to receive wired remote controller signal in indoor unit PCB
	0 4 -	Drain pump	Malfunction of drain pump
	0 5 -	Communication error : outdoor unit ↔ indoor unit	Failing to receive outdoor unit signal in indoor unit PCB
	0 6 -	Outlet pipe temperature sensor of indoor unit	Outlet pipe temperature sensor of indoor unit is open or short
	0 9 -	Indoor EEPROM Error	In case when the serial number marked on EEPROM of Indoor unit is 0 or FFFFFF
	1 0 -	Poor fan motor operation	Disconnecting the fan motor connector / Failure of indoor fan motor lock
	1 7 -	Inlet Air temperature sensor of FAU	Air temperature sensor of indoor unit is open or short
Outdoor unit related error	2 1 *	Master Outdoor Unit Inverter Compressor IPM Fault	Master Outdoor Unit Inverter Compressor Drive IPM Fault
	2 2 *	Inverter Board Input Over Current(RMS) of Master Outdoor Unit	Master Outdoor Unit Inverter Board Input Current excess (RMS)
	2 3 *	Master Outdoor Unit Inverter Compressor DC link Low Voltage	DC charging is not performed at Master Outdoor Unit after starting relay turn on.
	2 4 *	Master Outdoor Unit High Pressure Switch	System is turned off by Master Outdoor Unit high pressure switch
	2 5 *	Master Outdoor Unit Input Voltage High/Low Voltage	Master Outdoor Unit input voltage is over 289V or below 173V(ARUN***BTE4) Master Outdoor Unit input voltage is over 506V or below 414V(ARUN***DTE4)
	2 6 *	Master Outdoor Unit Inverter Compressor Start Failure	The First Start Failure by Master Outdoor Unit Inverter Compressor Abnormality
	2 9 *	Master Outdoor Unit Inverter Compressor Over Current	Master Outdoor Unit Inverter Compressor Fault OR Drive Fault
	3 2 *	Master Outdoor Unit Inverter Compressor1 High Discharge Temperature	Master Outdoor Unit Inverter Compressor1 High Discharge Temperature
	3 3 *	Master Outdoor Unit Inverter Compressor2 High Discharge Temperature	Master Outdoor Unit Inverter Compressor2 High Discharge Temperature

Display	Title	Cause of Error
3 4 *	High Pressure of Master Outdoor Unit	High Pressure of Master Outdoor Unit
3 5 *	Low Pressure of Master Outdoor Unit	Low Pressure of Master Outdoor Unit
3 6 *	Master Outdoor Unit Low Compression Ratio Limited	Master Outdoor Unit Low Compression Ratio Limited
4 0 *	Master Outdoor Unit Inverter Compressor CT Sensor Fault	Master Outdoor Unit Inverter Compressor CT Sensor open or short
4 1 *	Master Outdoor Unit Inverter Compressor1 Discharge Temperature Sensor Fault	Master Outdoor Unit Inverter Compressor Discharge Temperature Sensor open or short
4 2 *	Master Outdoor Unit Low Pressure Sensor Fault	Master Outdoor Unit Low Pressure Sensor open or short
4 3 *	Master Outdoor Unit High Pressure Sensor Fault	Master Outdoor Unit High Pressure Sensor open or short
4 4 *	Master Outdoor Unit Air Temperature Sensor Fault	Master Outdoor Unit Air Temperature Sensor open or short
4 5 *	Master Outdoor Unit Heat Exchanger Temperature Sensor (Front side) Fault	Master Outdoor Unit Heat Exchanger Temperature Sensor(Front side) open or short
4 6 *	Master Outdoor Unit Suction Temperature Sensor Fault	Master Outdoor Unit Suction Temperature Sensor open or short
4 7 *	Master Outdoor Unit Inverter Compressor2 Discharge Temperature Sensor Fault	Master Outdoor Unit Inverter Compressor2 Discharge Temperature Sensor open or short
4 9 *	Master Outdoor Unit Faulty IPM Temperature Sensor	Master Outdoor Unit IPM Temperature Sensor short/open
5 0 *	Omitting connection of R, S, T power of Master Outdoor Unit	Omitting connection of Master outdoor unit
5 1 *	Excessive capacity of indoor units	Excessive connection of indoor units compared to capacity of Outdoor Unit
5 2 *	Communication error : inverter PCB → Main PCB	Failing to receive inverter signal at main PCB of Master Outdoor Unit
5 3 *	Communication error : indoor unit → Main PCB of Outdoor Unit	Failing to receive indoor unit signal at main PCB of Outdoor Unit .
5 7 *	Communication error : Main PCB → inverter PCB	Failing to receive signal main PCB at inverter PCB of Master Outdoor Unit
5 9 *	Mixing Installation of Sub Outdoor Unit	Mixing Installation of Old Sub Outdoor Unit and New Slave Outdoor Unit
6 0 *	Inverter PCB EEPROM Error of Master Outdoor Unit	Access Error of Inverter PCB of Master Outdoor Unit
6 2 *	Master Outdoor Unit Inverter Heatsink High Temperature	System is turned off by Master Outdoor Unit Inverter Heatsink High Temperature
6 5 *	Master Outdoor Unit Inverter Heatsink Temperature Sensor Fault	Master Outdoor Unit Inverter Heatsink Temperature Sensor open or short
6 7 *	Master Outdoor Unit Fan Lock	Restriction of Master Outdoor Unit
7 1 *	Converter CT Sensor Error of Master Outdoor Unit	Converter CT Sensor open or short of Master Outdoor Unit
7 5 *	Master Outdoor Unit Fan CT Sensor Error	Master Outdoor Unit Fan CT Sensor open or short
7 6 *	Master Outdoor Unit Fan DC Link High Voltage Error	Master Outdoor Unit Fan DC Link High Voltage Error
7 7 *	Master Outdoor Unit Fan Over Current Error	Master Outdoor Unit Fan Current is over 5A
7 9 *	Master Outdoor Unit Fan Start Failure Error	Master Outdoor Unit Fan First Position Sensing Failure
8 6 *	Master Outdoor Unit Main PCB EEPROM Error	Communication Fail Between Master Outdoor Unit Main MICOM and EEPROM or omitting EEPROM
8 7 *	Master Outdoor Unit Fan PCB EEPROM Error	Communication Fail Between Master Outdoor Unit Fan MICOM and EEPROM or omitting EEPROM

Outdoor unit related error

Display				Title	Cause of Error
Outdoor unit related error	1	0	4 *	Communication Error Between Master Outdoor Unit and Other Outdoor Unit	Failing to receive Slave Unit signal at main PCB of Master Outdoor Unit
	1	0	5 *	Master Outdoor Unit Fan PCB Communication Error	Failing to receive fan signal at main PCB of Master unit.
	1	0	6 *	Master Outdoor Unit FAN IPM Fault Error	Instant Over Current at Master Outdoor Unit Fan IPM
	1	0	7 *	Master Outdoor Unit Fan DC Link Low Voltage Error	Master Outdoor Unit Fan DC Link Input Voltage is under 380V
	1	1	3 *	Master Outdoor Unit Liquid pipe Temperature Sensor Error	Liquid pipe temperature sensor of Master Outdoor Unit is open or short
	1	1	4 *	Master Outdoor Unit Subcooling Inlet Temperature Sensor Error	Master Outdoor Unit Subcooling Inlet Temperature Sensor Error
	1	1	5 *	Master Outdoor Unit Subcooling Outlet Temperature Sensor Error	Master Outdoor Unit Subcooling Outlet Temperature Sensor Error
	1	1	6 *	Master Outdoor Unit Oil Level Sensor Error	Oil Level Sensor of Master Outdoor Unit is open or short
	1	4	5 *	Master outdoor unit Main Board - External Board communication Error	Master outdoor unit Main Board - External Board communication Error
	1	5	1 *	Failure of operation mode conversion at Master Outdoor Unit	Failure of operation mode conversion at Master Outdoor Unit
	1	5	3 *	Master Outdoor Unit Heat Exchanger Temperature Sensor (upper part) Fault	Master Outdoor Unit Heat Exchanger Temperature Sensor (upper part) Fault
	1	5	4 *	Master Outdoor Unit Heat Exchanger Temperature Sensor (lower part) Fault	Master Outdoor Unit Heat Exchanger Temperature Sensor(lower part) open or short
	1	8	2 *	Master outdoor unit External Board Main-Sub Micom communication Error	Master Outdoor Unit Main Board Main-Sub Micom communication failed
	1	9	3 *	Master Outdoor Unit Fan Heatsink High Temperature	System is turned off by Master Outdoor Unit Fan Heatsink High Temperature
1	9	4 *	Master Outdoor Unit Fan Heatsink Temperature Sensor Fault	Master Outdoor Unit Fan Heatsink Temperature Sensor open or short	

CAUTION FOR REFRIGERANT LEAK

The installer and system specialist shall secure safety against leakage according to local regulations or standards.

The following standards may be applicable if local regulations are not available.


Introduction

Though the R410A refrigerant is harmless and incombustible itself, the room to equip the air conditioner should be large to such an extent that the refrigerant gas will not exceed the limiting concentration even if the refrigerant gas leaks in the room.

Limiting concentration

Limiting concentration is the limit of Freon gas concentration where immediate measures can be taken without hurting human body when refrigerant leaks in the air. The limiting concentration shall be described in the unit of Kg/m^3 (lbs/ft^3) (Freon gas weight per unit air volume) for facilitating calculation.

Limiting concentration: 0.44kg/m^3 (0.028lbs/ft^3) (R410A)

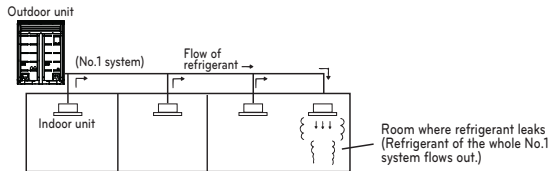

Checking procedure of limiting concentration

Check limiting concentration along following steps and take appropriate measure depending on the situation.

Calculate amount of all the replenished refrigerant [kg(lbs)] per each refrigerant system.

Amount of replenished refrigerant per one outdoor unit system + Amount of additional replenished refrigerant = Total amount of replenished refrigerant in refrigerant facility [kg(lbs)]

Amount of replenished refrigerant at factory shipment


Amount of additionally replenished refrigerant depending on piping length or piping diameter at customer

Note : In case one refrigerant facility is divided into 2 or more refrigerant systems and each system is independent, amount of replenished refrigerant of each system shall be adopted.


Calculate minimum room capacity

Calculate room capacity by regarding a portion as one room or the smaller room.


- Without partition

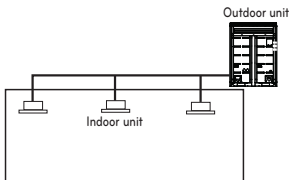

- With partition and with opening which serve as passage of air to adjoining room

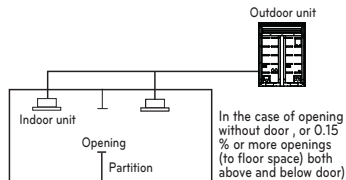

- With partition and without opening which serve as passage of air to adjoining room

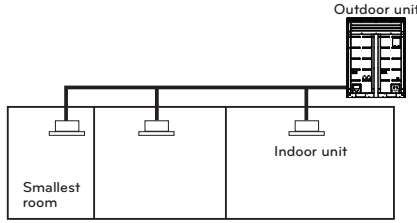

Calculate refrigerant concentration


$$\frac{\text{Total amount of replenished refrigerant in refrigerant facility [kg(lbs)]}}{\text{Capacity of smallest room where indoor unit is installed [m}^3\text{(ft}^3\text{)]}} = \text{Refrigerant concentration [Kg/m}^3\text{(lbs/ft}^3\text{)] (R410A)}$$

In case the result of calculation exceeds the limiting concentration, perform the same calculations by shifting to the second smallest, and the third smallest rooms until at last the result is below the limiting concentration.

In case the concentration exceeds the limit

When the concentration exceeds the limit, change original plan or take one of the countermeasures shown below:

- Countermeasure 1
Provide opening for ventilation.
Provide 0.15% or more opening to floor space both above and below door, or provide opening without door.
- Countermeasure 2
Provide gas leak alarm linked with mechanical ventilator.
Reducing the outdoor refrigerant qty.

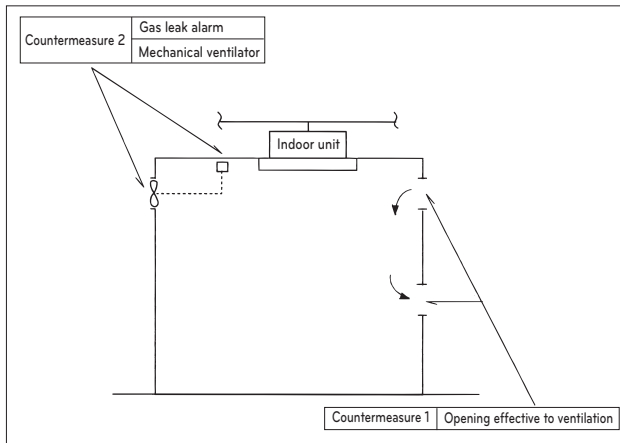

Pay a special attention to the place, such as a basement, etc. where refrigerant can stay, since refrigerant is heavier than air.


INSTALLATION GUIDE AT THE SEASIDE

! CAUTION


- Air conditioners should not be installed in areas where corrosive gases, such as acid or alkaline gas, are produced.
- Do not install the product where it could be exposed to sea wind (salty wind) directly. It can result corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient performance.
- If outdoor unit is installed close to the seaside, it should avoid direct exposure to the sea wind. Otherwise it needs additional anticorrosion treatment on the heat exchanger.

Selecting the location(Outdoor Unit)

If the outdoor unit is to be installed close to the seaside, direct exposure to the sea wind should be avoided. Install the outdoor unit on the opposite side of the sea wind direction.

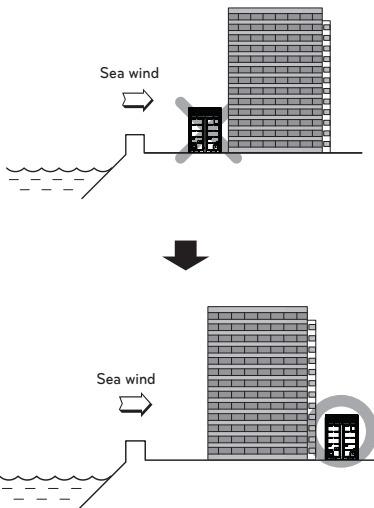

In case, to install the outdoor unit on the seaside, set up a windbreak not to be exposed to the sea wind.

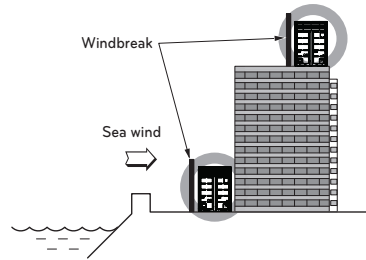

- It should be strong enough like concrete to prevent the sea wind from the sea.
- The height and width should be more than 150% of the outdoor unit.
- It should be keep more than 70 cm (2.3ft) of space between outdoor unit and the windbreak for easy air flow.

Select a well-drained place.

- Periodic (more than once/year) cleaning of the dust or salt particles stuck on the heat exchanger by using water

OUTDOOR UNIT (ODU) INSTALLATION DETAILS FOR (3) FOAM SCREW PROTECTOR PADS.

Place (1) foam pad at the bottom of the unit between the casing and the coil in each of the following locations:

- Right side (toward front side of ODU) and securely in place to protect the heat exchanger coil from the sharp screw points.
- Left side (toward front side of ODU) and securely in place to protect the heat exchanger coil from the sharp screw points.
- Back side (center of ODU) and securely in place to protect the heat exchanger coil from the sharp screw points. Note: take caution as screw locations are not easily visible.



Right



Left



Back

Important:

The (3) pads must be securely in place to protect the heat exchanger coil from the sharp screw points during a seismic event.

Use OSHPD Seismic Certification Preapproval (OSP)

- (1) OSP Label for ODU > OSP-0386-10 for LG Model No.: ARU*nnn*TE4
- (3) foam screw protector pads w/ adhesive backing
- This installation detail

Please do not discard this kit before following this instruction during the installation of the ODU(s).