



INSTALLATION MANUAL

AIR CONDITIONER

Please read this installation manual completely before installing the product.
Installation work must be performed in accordance with the national wiring standards by
authorized personnel only.
Please retain this installation manual for future reference after reading it thoroughly.

Applied(AHU)
AHU CONTROLLER
Original instruction



MFL69940001
Rev.09_081826

Copyright © 2017 - 2026 LG Electronics Inc. All Rights Reserved.

www.lg.com

ENGLISH

ITALIANO

ESPAÑOL

FRANÇAIS

DEUTSCH

PORTUGUÊS

中文

SAFETY INSTRUCTIONS

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

 This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

 WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

 CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

 WARNING

- Installation or repairs made by unqualified persons can result in hazards to you and others.
- The information contained in the manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments.
- Failure to carefully read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.

Installation

- For installation of the product, always contact the service center or a professional installation agency.
 - Otherwise, it may cause fire, electrical shock, explosion or injury.
- Securely attach the electrical part cover to AHU Comm. Kit.
 - If the electric part cover of AHU Comm. Kit is not attached securely, it could result in a fire or electric shock due to dust, water, etc.

- Do not keep or use flammable gases or combustibles near the equipment.
 - Otherwise, it may cause a fire or the failure of product.
- Do not install, remove or reinstall the unit by yourself.
 - Otherwise, it may cause a fire, electrical shock, explosion or injury.
- Do not disassemble or repair the product randomly.
 - It will cause a fire or electrical shock.
- Do not install the product in a place where there is the concern of falling down.
 - Otherwise, it may result in personal injury.
- Use caution when unpacking and installing.
 - Sharp edges may cause injury.
- Always ground the product.
 - There is risk of fire or electric shock.
- Do not install the product on a non-parallel or defective installation stand.
 - It may cause injury, accident, or damage to the product.

Operation

- Keep flames away.
 - Otherwise, may occur a fire.
- Do not use the power cord near the heating tools.
 - Otherwise, it may cause a fire and electrical shock.
- Do not allow water to run into electrical parts.
 - Otherwise, it may cause the failure of machine or electrical shock.
- Be cautious that water could not enter the product.
 - Otherwise, it may cause a fire electrical shock or product damage.
- Do not place a heavy object on the power cord.
 - Otherwise, it may cause a fire or electrical shock.
- When the product is submerged into water, always contact the service center.
 - Otherwise, it may cause a fire or electrical shock.
- The Ingress Protection Marking given in this manual as IP20 restricts installation location, LG Electronics is not responsible for installation locations non-compliant to IP20.

CAUTION

Installation

- Do not install the product in direct sunlight.
- If anyone other than a licensed professional installs, repairs, or alters LG Electronics air conditioning products, the warranty is voided.
 - All costs associated with repair are then the full responsibility of the owner.
- Do not insert a drain hose in drain or soil pipe.
 - Bad smells can occur and it results in a corrosion of a heat exchanger or pipe.
- Do not install the unit in potentially explosive atmospheres.
- (Australia only) This product must be installed by a professional installer.
- After the installation of the product in the customer premises, fully remove all product packaging (including any expanded or moulded plastic packaging materials) and recycle or dispose of such packaging responsibly. Do not dispose any expanded plastic packaging in the household bin.

Operation

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Appliances not accessible to the general public.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

TABLE OF CONTENTS

2 SAFETY INSTRUCTIONS

6 INSTALLATION LAYOUT

7 TECHNICAL SPECIFICATION

8 CONTROLLER MODULE

9 COMMUNICATION KIT

9 Mechanical installation

11 THERMISTORS INSTALLATION

12 SOLUTION OVERVIEW

12 Special Requirements for R32 AHU

14 Minimum continuous circulation airflow rate

15 Minimum total area

16 Determining Total Refrigerant Charge (mc) based on Coil Configuration

17 Floor Area Determination Criteria for Safety Compliance

18 Continuous circulation airflow

18 Mechanical Ventilation

22 RETURN AIR TEMPERATURE CONTROL (PAHCMR000)

22 DIP SW

36 DISCHARGE AIR TEMPERATURE CONTROL (PAHCMS000)

36 Main Module DIP SW

50 EXTERNAL CONNECTION DIAGRAM

50 Return air temperature control

54 BMS PROTOCOL


54 BACnet points of PAHCMR000 (Return air temperature control)

78 CONNECTION & SETTING GUIDE

81 COMMUNICATION MODULE & EEV KIT CONNECTION GUIDE

83 COMMKIT ERRORCODE

INSTALLATION LAYOUT

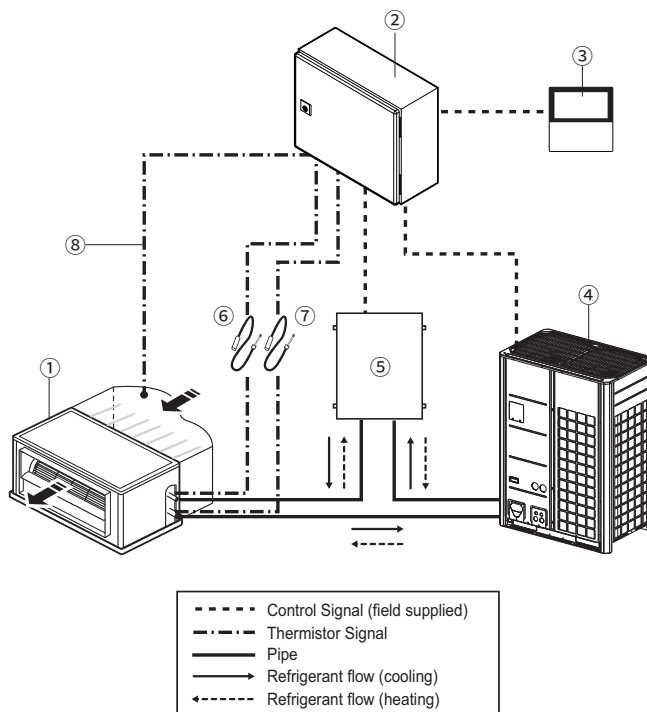

No.	Item	Specification
①	AHU(Air Handling Unit)	Local supply
②	AHU Communication kit	PAHCMS000/PAHCMR000
③	Remote controller	LG wired remote controller(Optional)
④	Outdoor unit	MULTI V
⑤	EEV Kit	PRLK048A0/PRLK096A0/PRLK396A0/PRLK594A0
⑥	Pipe in(Liquid) thermistor	Sensor : Ø 5(NTC 5 kΩ) length : 5 m, Cable color : Black
⑦	Pipe out(Gas) thermistor	Sensor : Ø 7(NTC 5 kΩ) length : 5 m, Cable color : Red
⑧	Room(Return) thermistor	Sensor : NTC 10 kΩ length : 5 m, Cable color : Black

TECHNICAL SPECIFICATION

1. COMMUNICATION KIT

Model			PAHCMR000	PAHCMS000
Application			Return air temperature control	Discharge(supply) air temperature control
Dimensions	Width	mm	300	380
	Depth	mm	155	155
	Height	mm	300	300
Net Weight		kg	6.2	7.46
Casing	Color		RAL 7035	RAL 7035
	Material		Steel	Steel
	Certification Degree of Protection		IP 66 (EN 60529)	IP 66 (EN 60529)
			UL 508 Type 4 / NEMA 4	UL 508 Type 4 / NEMA 4
			IK 08 (EN 50102)	IK 08 (EN 50102)
Power Supply	Voltage	V	220-240	220-240
	Frequency	Hz	50/60	50/60
	Phase	Ø	1	1
Current	Rated	A	0.1	0.1
Composition	Controller		Communication Module : 1 EA	Main Module : 1 EA Communication Module : 1 EA
	Terminal Block	Power Supply	Screw type (L / N, Ring type)	Screw type (L / N, Ring type)
		Communication	Spring push type (Pin type, JOBN153)	Spring push type (Pin type,JOBN153)
	Temp. Sensor	Air (Room)	Q'ty : 1 EA (Pin type, 5m, Black)	Q'ty : 1 EA (Pin type, 5m, Black)
	Key		EA	1
	Installation Manual		EA	1
Product Environment Operation Range	Ambient Temperature		- 20 ~ 65 °C DB	- 20 ~ 65 °C DB
	Humidity		0 ~ 98 %	0 ~ 98 %

2. CONTROLLER MODULE


Model			PAHCM000	PAHCMC000
Application			Main module	Communication module
Dimensions	Width	mm	162	108
	Depth	mm	61	61
	Height	mm	90	90
Power Supply	Voltage	V	DC 12 V	DC 12 V
Product Environment Operation Range	Ambient Temperature		- 20 ~ 65 °C DB	- 20 ~ 65 °C DB
	Humidity		0 ~ 98 %	0 ~ 98 %

NOTE

- Maximum connectable PAHCMR000(Communication Module) to Discharge air temperature control(PAHCMS000) AHU Communication Kit is less or equal than 3, i.e. 'PAHCMS000 x 1 + PAHCMR000 x 3 system' can control 4 circuits of the DX coil.

CONTROLLER MODULE

Unit(mm)

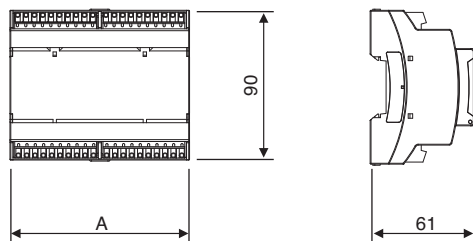

Model	Size (mm)	Remark
	A	
PAHCMM000 ¹⁾	162	Main module
PAHCMC000 ²⁾	108	Communication module

1) PAHCMM000 Model refer for Main module.

2) PAHCMC000 Model refer for Communication module.

⚠ CAUTION


- This model requires DC12 V ~ external power supply. (Select an insulating transformer that complies with IEC61558-2-6 and NEC Class 2.)
- Please check the Product operation range below.
- The Ingress Protection Marking given in this manual as IP20 restricts installation location, LG Electronics is not responsible for installation locations non-compliant to IP20.

Power supply		DC 12 V
Product operation range	Ambient Temperature	-20 ~ 65 °C DB
	Humidity	0 ~ 98 %


COMMUNICATION KIT

Mechanical installation

- 1 Open the door using the key.

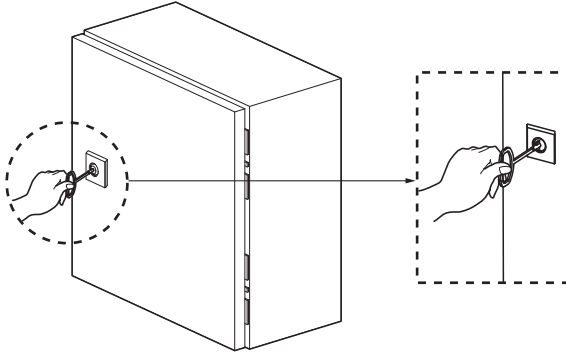


- 2 Drill 4 holes on correct position and fix the Communication Kit box securely with 4 screws (Field supply) through the holes $\varnothing 9$ mm(11/32 inch).

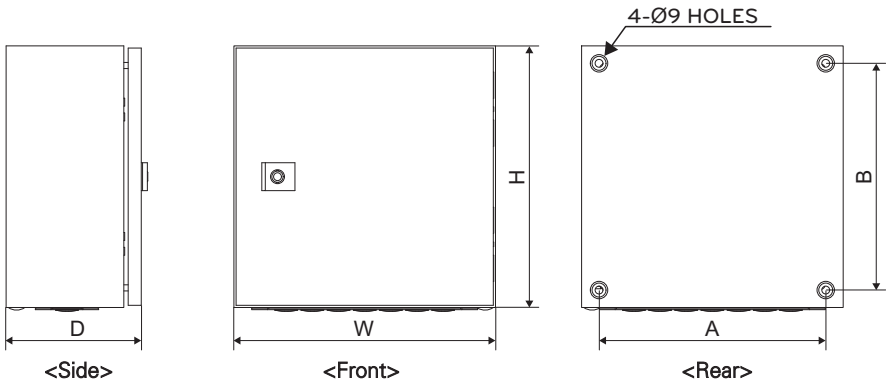

Model	Size (mm)				
	W	D	H	A	B
PAHCMR000	300	155	300	260	260
PAHCMS000	380	155	300	340	260

Connection of the wires

- 1 For connection to outdoor unit and to controller (Field supply) :
Pull the wires inside through the cable gland and close the nut firmly in order to ensure a good pull relieve and water protection.
- 2 The wires require an additional pull-relief. Strap the wire with the support tie wrap.

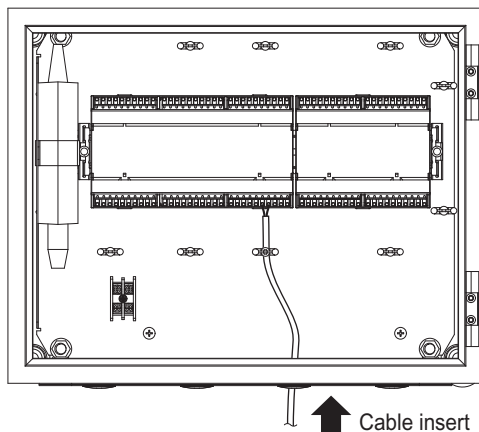

- 3 For the wired remote controller wire and outdoor unit communication wire, use the Pin type (JOB153) to connect to the terminal block.



Pin type (JOB153)

⚠ CAUTION

- All field supplied parts and materials and electric works must be conform to local codes.
- Use copper wire only.
- All wiring must be performed by an authorized electrician.
- A main switch or other means for disconnection, having a contact separation in all poles, must be incorporated in the fixed wiring in accordance to relevant local and national legislation.
- Refer to the installation manual attached to the outdoor unit for the size of power supply electric wire connected to the outdoor unit, the capacity of the circuit breaker and switch, wiring and wiring instructions.

THERMISTORS INSTALLATION


Pipe thermistors Installation

Location of the pipe thermistors

A correct installation of the thermistors is required to ensure a good operation :

- 1 Pipe_In
: Install the thermistor behind the distributor on the coldest pass the heat exchanger (contact your heat exchanger dealer).
- 2 Pipe_Out
: Install the thermistor at the outlet of the heat exchanger as close as possible to the heat exchanger.


Evaluation must be done to check if the evaporator is protected against freeze-up. Execute test operation and check for freeze up.

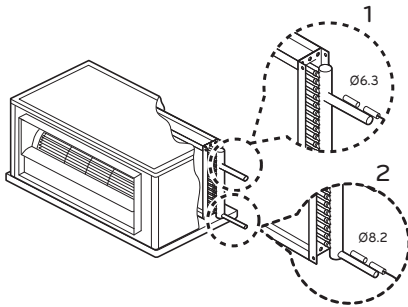


(Air handling unit)

INSTRUCTION

- To prevent condensation from accumulating on the bottom of the pipe sensor, install the sensor by lifting it up as shown below.

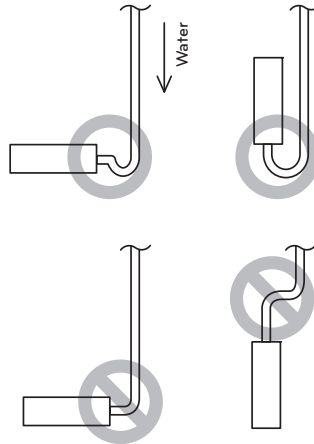

- In order to detect the temperature of the pipe well, install the sensing part so that it can be attached to the pipe well as shown below.

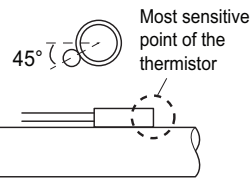


SOLUTION OVERVIEW

Special Requirements for R32 AHU

Determine required safety measures for Air Handling Unit with R32 Refrigerant


If the system operates with R32 refrigerant, extra safety compliance is mandatory due to the mild flammability of the refrigerant (IEC 60335-2-40:2018). Adherence to strict limits concerning the total refrigerant charge and/or the floor area of the served space is required.

Overview : Flow chart

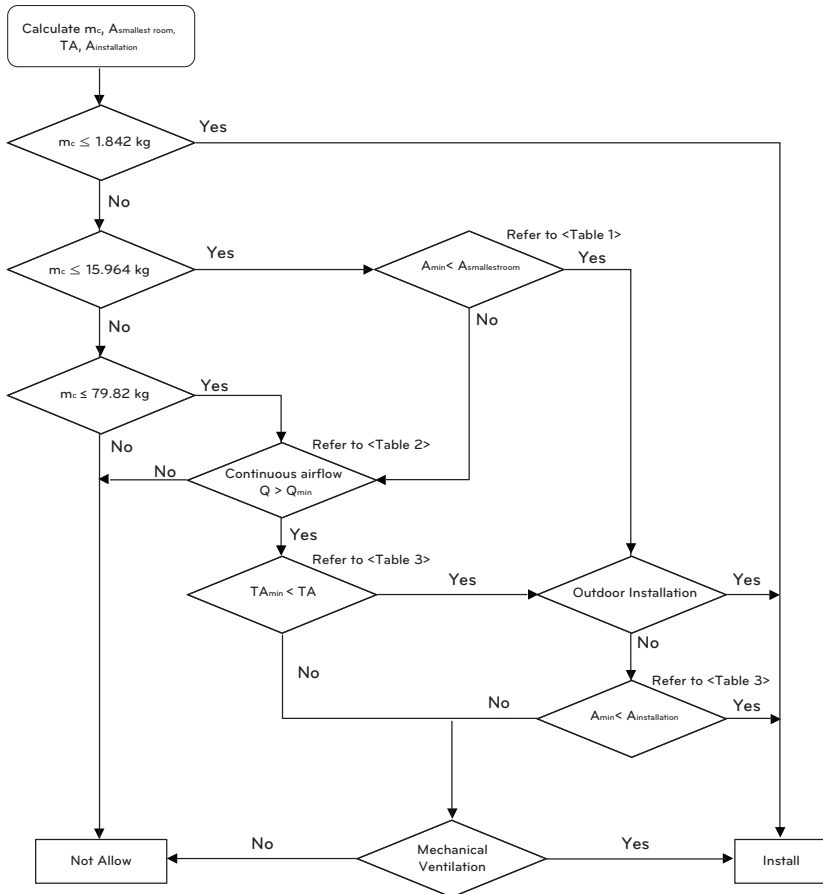

m_c	Total amount of refrigerant charge
A_{min}	Required minimum room area
$A_{smallest\ room}$	Floor area of the smallest room served by AHU
Q_{min}	Minimum required Continuous circulation airflow rate
TA	Total air-conditioned room served by AHU
$A_{installation}$	Floor area of AHU installation (if AHU installed indoor)

■ Minimum floor area with total charge of refrigerant m_c under 15.964 kg

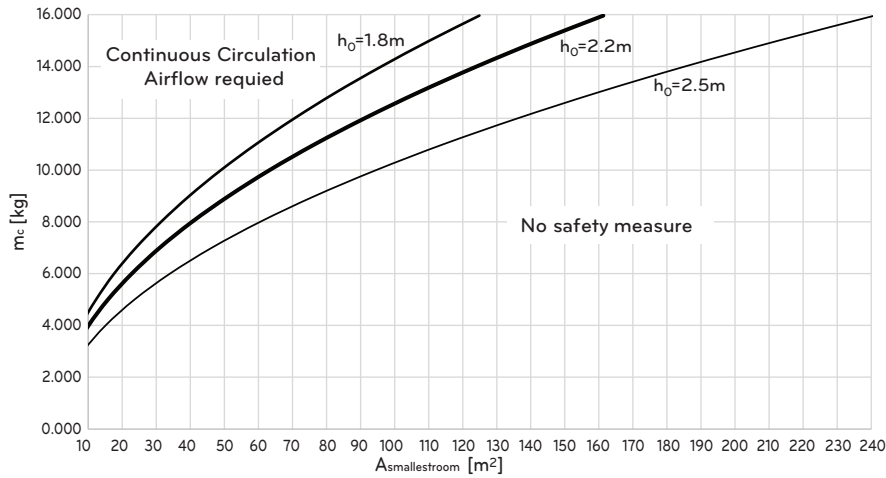


$$A_{smallest\ room} = (m_c / (2.5 \times (LFL)^{(5/4)} \times h_o))^2$$

<Table 1>

m_c [kg]	$A_{smallest_room}$ [m²]		
	$h_o = 1.8\ m$	$h_o = 2.2\ m$	$h_o = 2.5\ m$
1.843	3.2	2.2	1.7
2	3.8	2.5	2.0
3	8.5	5.7	4.4
4	15.1	10.1	7.8
5	23.6	15.8	12.3
6	34.0	22.8	17.6
7	46.3	31.0	24.0
8	60.5	40.5	31.4
9	76.6	51.3	39.7
10	94.6	63.3	49.0
11	114.4	76.6	59.3
12	136.2	91.2	70.6
13	159.8	107.0	82.8
14	185.3	124.1	96.1
15	212.8	142.4	110.3
15.964	241.0	161.3	124.9

Minimum continuous circulation airflow rate

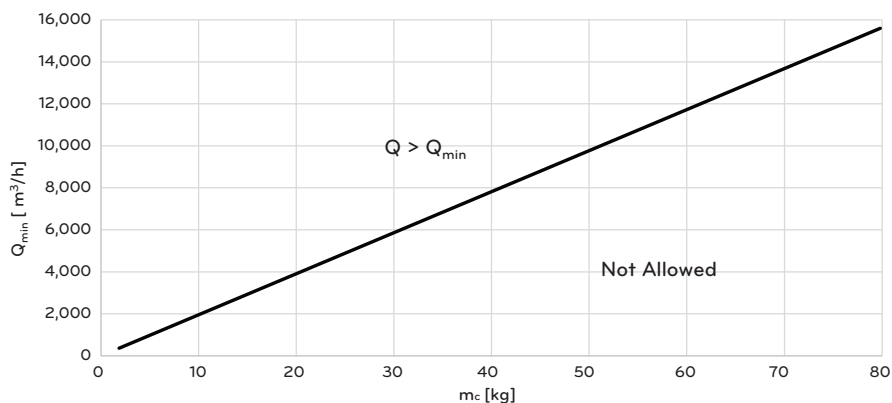


$$Q_{min} = 60 \times m_c / LFL$$

<Table 2>

m_c [kg]	Q_{min} [m³/h]	m_c [kg]	Q_{min} [m³/h]	m_c [kg]	Q_{min} [m³/h]
1.843	360.2	28	5472.3	55	10749.2
2	390.9	29	5667.8	56	10944.6
3	586.3	30	5863.2	57	11140.1
4	781.8	31	6058.6	58	11335.5
5	977.2	32	6254.1	59	11530.9
6	1172.6	33	6449.5	60	11726.4
7	1368.1	34	6645.0	61	11921.8
8	1563.5	35	6840.4	62	12117.3
9	1759.0	36	7035.8	63	12312.7
10	1954.4	37	7231.3	64	12508.1
11	2149.8	38	7426.7	65	12703.6
12	2345.3	39	7622.1	66	12899
13	2540.7	40	7817.6	67	13094.5
14	2736.2	41	8013.0	68	13289.9
15	2931.6	42	8208.5	69	13485.3
16	3127.0	43	8403.9	70	13680.8
17	3322.5	44	8599.3	71	13876.2
18	3517.9	45	8794.8	72	14071.7
19	3713.4	46	8990.2	73	14267.1
20	3908.8	47	9185.7	74	14462.5
21	4104.2	48	9381.1	75	14658.0
22	4299.7	49	9576.5	76	14853.4
23	4495.1	50	9772.0	77	15048.9
24	4690.6	51	9967.4	78	15244.3
25	4886.0	52	10162.9	79	15439.7
26	5081.4	53	10358.3	79.82	15600
27	5276.9	54	10553.7		


Minimum total area

Minimum total area served by AHU

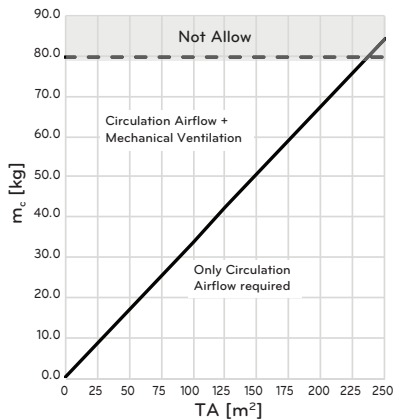

$m_c = 0.5 \times LFL \times H \times TA$

Minimum area for AHU installation

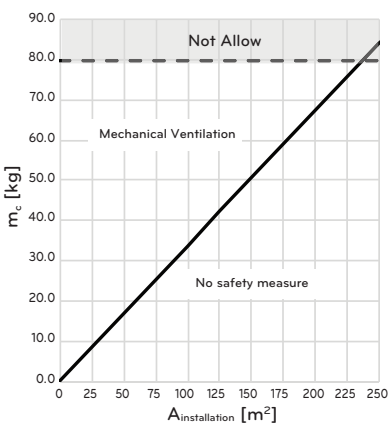

$m_c = 0.5 \times LFL \times H \times A_{\text{installation}}$

<Table 3>

m_c [kg]	$TA[m^2]/A_{\text{installation}}[m^2]$	m_c [kg]	$TA[m^2]/A_{\text{installation}}[m^2]$	m_c [kg]	$TA[m^2]/A_{\text{installation}}[m^2]$
1.843	5.5	28	82.9	55	162.9
2	5.9	29	85.9	56	165.8
3	8.9	30	88.8	57	168.8
4	11.8	31	91.8	58	171.8
5	14.8	32	94.8	59	174.7
6	17.8	33	97.7	60	177.7
7	20.7	34	100.7	61	180.6
8	23.7	35	103.6	62	183.6
9	26.7	36	106.6	63	186.6
10	29.6	37	109.6	64	189.5
11	32.6	38	112.5	65	192.5
12	35.5	39	115.5	66	195.4
13	38.5	40	118.4	67	198.4
14	41.5	41	121.4	68	201.4
15	44.4	42	124.4	69	204.3
16	47.4	43	127.3	70	207.3
17	50.3	44	130.3	71	210.2
18	53.3	45	133.3	72	213.2
19	56.3	46	136.2	73	216.2
20	59.2	47	139.2	74	219.1
21	62.2	48	142.1	75	222.1
22	65.1	49	145.1	76	225.1
23	68.1	50	148.1	77	228.0
24	71.1	51	151.0	78	231.0
25	74.0	52	154.0	79	233.9
26	77.0	53	156.9	79.82	236.4
27	80.0	54	159.9		

Determining Total Refrigerant Charge (m_c) based on Coil Configuration

The total refrigerant charge (m_c) of the system must be determined based on the coil configuration inside the AHU (single coil or multiple coil) and the independence of the connected outdoor unit systems.

Case 1: Single Coil System

When a single coil is installed in the indoor unit and connected to one outdoor unit system, the total amount of refrigerant charged into that specific system represents the total refrigerant charge (m_c).

Example:

If the refrigerant charge of the outdoor unit system is 18 kg, the total refrigerant charge is applied as $m_c=18$ kg.


Case 2: Multiple Coil System

When multiple coils are independently arranged within a single indoor unit and connected to separate, independent outdoor unit systems (independent refrigerant cycles), the maximum refrigerant charge among the individual connected systems must be applied as the total refrigerant charge (m_c).


Example:

If System 1 (7 kg) and System 2 (6 kg) are connected to independent coils respectively, the larger value from System 1 is taken, and the total refrigerant charge is applied as $m_c=7$ kg.

< Case 1: Single Coil >

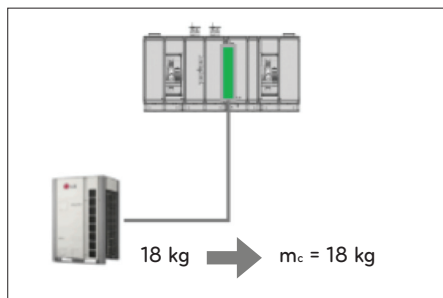

< Case 2: Multiple Coil >

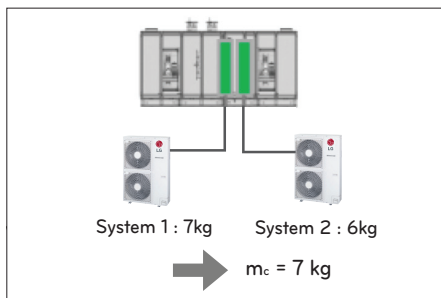

Floor Area Determination Criteria for Safety Compliance

To evaluate safety compliance (such as minimum floor area requirements) for the R32 refrigerant system, the floor areas of the AHU installation room and each served indoor space must be defined and calculated as follow.

Refer to the example diagram below to ensure compliance when designing the system.

- AHU Installation Area ($A_{\text{installation}}$):


The actual floor area of the room where the AHU unit itself is.

- Smallest Room Area ($A_{\text{smallest room}}$):

The smallest among all the individual air-conditioned spaces served by the AHU.

- Total Air-Conditioned Room Area (TA):

The cumulative floor area of all indoor spaces conditioned by the single AHU system.

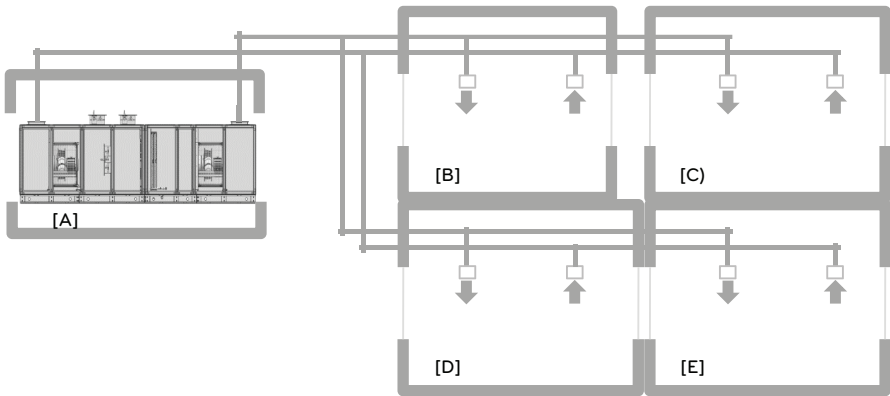

A: AHU installation area ($A_{\text{installation}}$)

B,C,D,E: Air-conditioned room area through AHU

B: Smallest room Area ($A_{\text{smallest room}}$)

Total air-conditioned room area (TA): Sum of Area B + C + D + E

Continuous circulation airflow

If the system requires additional R32 safety measures, a continuous circulation airflow shall be adopted. Continuous circulation airflow refers to the uninterrupted operation of the Air Handling Unit fan designed to mitigate safety risks. Since R32 refrigerant is heavier than air, this continuous airflow forces the air to mix, safely dispersing any localized refrigerant accumulation below the Lower Flammability Limit(LFL).

When continuous circulation airflow is used as a safety measure, the system shall operate continuously, except during short periods required for maintenance or service.
The airflow shall be continuously monitored.

If the airflow rate falls below the minimum required airflow rate (Q_{min}), the following actions shall be initiated within 10 seconds:

- Generate a visual and audible warning indicating insufficient airflow.
- Upon refrigerant leak detection, disable compressor operation.

The minimum airflow (Q_{min}) shall be determined using the following formula:

$$Q_{min} = 60 \times m_c / LFL$$

Mechanical Ventilation

Mechanical ventilation may be applied as a safety measure for the entire installation room where appliances using A2L refrigerants are installed. The mechanical ventilation system shall be designed to dilute and discharge leaked refrigerant from the installation space to outside and prevent refrigerant accumulation within occupied area.

The mechanical ventilation safety function may be configured using Continuous operation of the mechanical ventilation system.

Continuous Operation of mechanical ventilation system

When mechanical ventilation is used as a safety measure, the system shall operate continuously, except during short periods required for maintenance or service.

The ventilation airflow shall be continuously monitored. If the airflow rate falls below the minimum required airflow rate ($Q_{min, mech}$), the following actions shall be initiated within 10 seconds:

- Generate a visual and audible warning indicating insufficient airflow.
- Upon refrigerant leak detection, disable compressor operation.

NOTE

The compressor may continue to operate only if it is demonstrated that continued operation will reduce the refrigerant leak rate or limit the total amount of refrigerant released into the indoor space.

Installation Requirements of mechanical ventilation system

- The mechanical ventilation system shall be designed to ensure effective airflow distribution throughout the entire installation room.
- Inlet and outlet locations, airflow paths, and ventilation capacity shall be selected to minimize refrigerant accumulation in occupied zones.
- The minimum required airflow rate ($Q_{\min, \text{mech}}$) shall be determined according to the refrigerant charge, room volume, and the calculation method specified in the Performance Requirements section.
- The airflow shall be calculated using of the formula below. Losses caused by ducts or other components in the air stream shall be considered.

$$Q_{\min, \text{mech}} = \frac{m_c - m_{\max}}{4 \times \text{LFL}} \times 2 \times 60$$

$$m_{\max} = 0.5 \times 0.307 \times H \times A$$

NOTE

When calculation $m_{\max}$, the room area A shall be considered as the area the mechanical ventilation is installed.

- Ventilation openings and duct configurations shall comply with applicable regional regulations and standards (e.g EN IEC 60335-2-40).
- Mechanical ventilation shall be made to the outdoor or the indoor space where the room volume is larger than the minimum room volume calculated using the following formula:

$$V = 4 \times m_c / \text{LFL}$$

* Where V is the minimum room volume in m^3 .

- For the opening of mechanical ventilation, the lower edge of the opening of the mechanical ventilation shall not be more than 100 mm above the floor. The air extraction openings shall be located at sufficient distance from the air intake openings to prevent re-circulation to the space.

Example:

Case 1-1 ($m_c < 15.694$ kg)

- Total refrigerant charge (m_c): 8 kg
- Total air-conditioned room area (TA): 100 m²
- Smallest room area ($A_{\text{smallest room}}$): 50 m²
- Installation height (h_0): 2.2 m
- AHU Outdoor installation

- m_c 8kg < 15.964 kg
- $A_{\text{smallest room}}$ 50 m² > A_{min} 40.5 m²

* According to <Tabel 1>, no additional safety measure required

Case 1-2 ($m_c < 15.964$ kg, small room)


- Total refrigerant charge (m_c): 8 kg
- Total air-conditioned room area (TA): 100 m²
- Smallest room area ($A_{\text{smallest room}}$): 30 m²
- Installation height (h_0): 2.2 m
- AHU Outdoor installation

- m_c 8kg < 15.964 kg
- $A_{\text{smallest room}}$ 30 m² < A_{min} 40.5 m²
- TA 100 m² > TA_{min} 23.7 m²


* According to <Table 1> and <Table 3> only continuous circulation air flow required.

* Continuous circulation air flow rate shall be operated above $Q_{\text{min}} = 1,563.5$ m³/h, refer to <Table 2>


< Minimum area with total charge of refrigerant m_c under 15.964 kg >

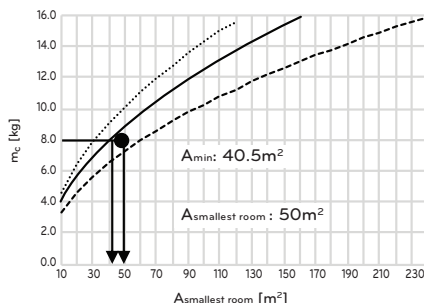


< Minimum area with total charge of refrigerant m_c under 15.967 kg >

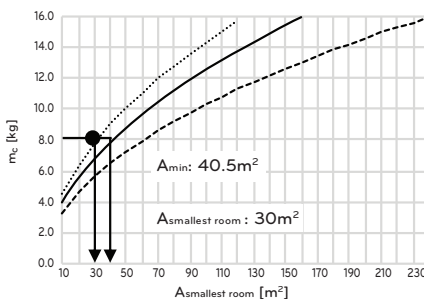

< Minimum continuous circulation airflow rate >

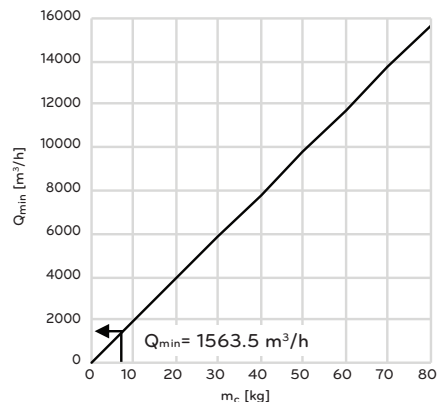

< Minimum total air-conditioned area served by AHU >

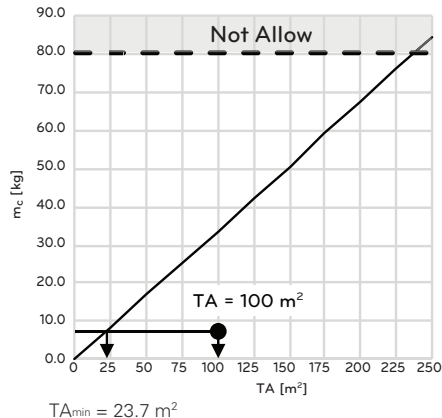


Case 2-1 ($m_c > 15.964$ kg, enough space TA)

- Total refrigerant charge (m_c): 40 kg
- Total air-conditioned room area (TA): 150 m²
- Smallest room area ($A_{\text{smallest room}}$): 50 m²
- Installation height (h_0): 2.2 m
- AHU Outdoor installation


- m_c 40kg > 15.964 kg
- TA 150 m² > 118.4 m²

- * According to <Table 1> and <Table 3> only continuous circulation air flow required.
- * Continuous circulation air flow rate is above $Q_{\min} = 7817.6$ m³/h, refer to <Table 2>

< Minimum required continuous circulation airflow rate >

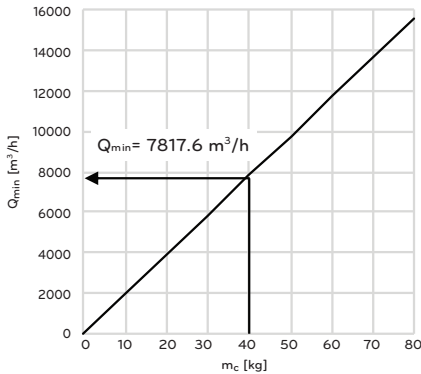

< Minimum total area served by AHU >

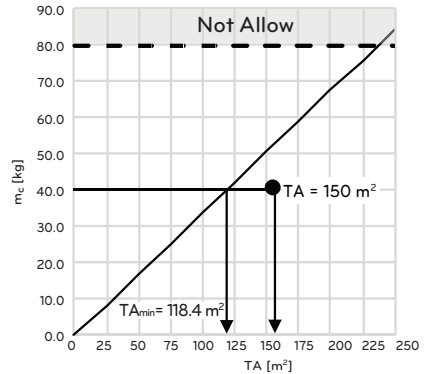


Case 2-2 ($m_c > 15.964$ kg, AHU indoor install)

- Total refrigerant charge (m_c): 40 kg
- Total air-conditioned room area (TA): 150 m²
- Smallest room area ($A_{\text{smallest room}}$): 50 m²
- Installation height (h_0): 2.2 m
- AHU indoor installation ($A_{\text{installation}}$): 100 m²

- m_c 40 kg > 15.964 kg
- TA 150 m² > 118.4 m²
- $A_{\text{installation}}$ 100 m² < $A_{\min}$ 118.4 m²

- * Continuous circulation air flow and mechanical ventilation required
- * Continuous circulation air flow rate is above $Q_{\min} = 7817.6$ m³/h

< Minimum area for AHU installation >

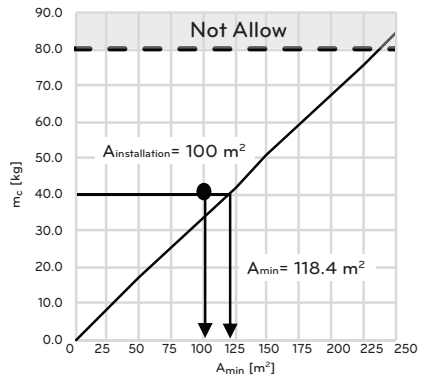


Mechanical ventilation at the AHU installation area :

$$Q_{\min, \text{mech}} = \frac{40 - 33.77}{4 \times 0.307} \times 2 \times 60 = 608.8 \text{ m}^3/\text{h}$$


$$V = 521.2 \text{ m}^3$$

RETURN AIR TEMPERATURE CONTROL (PAHCMR000)

DIP SW

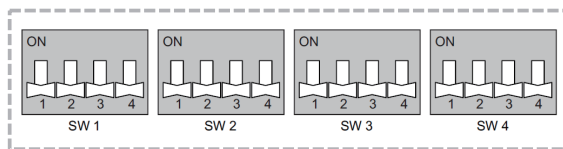

The default setting of all DIP switch is set "off"

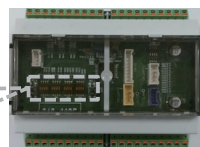

<Communication Module>

■ Table of SW1~SW3

SW name	No	Item	Setting		Note
SW1	1	ODU Type	ON	Single Comm.	Using Single Split outdoor unit
			OFF	MULTI V Comm.	Using MULTI V outdoor unit
	2	Control Type	ON	Communication	Controlled by DDC Modbus or LG remote controllers & central controllers
			OFF	Contact signal	Controlled by DDC through Contact signal (LG Central controller can only monitor status)
	3	DO Type	ON	Fan Speed	DO1 : High, DO2 : Middle, DO3 : Low (DO changes according to fan speed setting value)
			OFF	Status	DO1 : ON/OFF, DO2 : Defrost, DO3 : Alarm
	4	Fan Speed (available when SW1-3 'ON')	ON	Fixed	The fan will always be running as set fan speed except defrost. (During defrost, the fan speed will change as low fan speed.)
			OFF	Change	The fan speed will be changed according to TH on/off For more detail please check 'Digital Output – Fan Speed'
SW2	1	Room thermistor sensor reference setting	ON	Remote control / Indoor unit / 2TH	Control according to value of remote control installer setting no.4 (refer to the remote control manual)
			OFF	Indoor unit	-
	2	Reserved	-	-	-
	3/4	UI Setting	OFF/OFF	UI Setting #1	UI1 : Operation ON/OFF, UI2 : Heating/Cooling UI3 : Forced Thermal ON/OFF UI4 : Target air temperature
			OFF/ON	UI Setting #2	UI1 : Operation ON/OFF, UI2 : Cooling only/OFF UI3 : Heating only/OFF, UI4 : Forced Thermal ON/OFF
			ON/OFF	UI Setting #3	UI1: Operation On/Off, UI2: Heating/Cooling UI3/UI4 : Thermal on/off with fan speed
			ON/ON	UI Setting #4	UI1 : Operation On/Off, UI2 : Heating/Cooling UI3 : Emergency Stop

UI Setting #1 may vary depending on the DIP SW_FLASH configuration. (See page 21)

SW name	No	Item	Setting		Note
SW3	1	Group Master/Slave (Return Air only)	ON	Slave mode	Please see "Multiple module installation guide In the PDB" for more detail
			OFF	Master mode	Master mode is default for single AHU Controller installation. Please see "Multiple module installation guide In the PDB" for more detail
	2/3	Operation mode setting	OFF/OFF	Heat Pump	Cooling or Heating operation mode is available
			OFF/ON	Heating Only	Operation mode is Heating only (Heating / Fan)
			ON/OFF	Cooling Only	Operation mode is Cooling only (Cooling / Fan)
			ON/ON	Reserved	-
	4	Reserved	-	-	-
SW4	1~4	Capacity Index Setting	-	-	According to ODU Type, you can setup the capacity index of MULTI V or Single Split

NOTE

- Do not change the reserved switch(It may malfunction).
- To use the group control, length of group control cable is max 50 m.


■ Table of SW4 (Capacity Index Setting)

No	SW4 DIP switch	Capacity [kBtu/hr]		Capacity [kW]	
		MULTI V	Single	MULTI V	Single
1		12	5	3.5	1.5
2		15	7	4.5	2.1
3		18	9	5.6	2.5
4		24	12	7.1	3.5
5		28	15	8.2	4.2
6		36	18	10.6	5.0
7		42	24	12.3	7.1
8		48	30	14.1	8.0
9		54	36	15.8	10.0
10		76	42	22.4	12.5
11		96	48	28.0	14.0
12		115	60	33.6	15.0
13		134	70	39.2	19.0
14		153	85	44.8	23.0
15		172	Reserved	50.4	Reserved
16		192	Reserved	56.0	Reserved

NOTE

If connecting expansion valve's capacity is bigger than 192 kBtu/h, set DIP switches 1, 2, 3, and 4 to ON.

Electric Wiring Work (PAHCMR000)

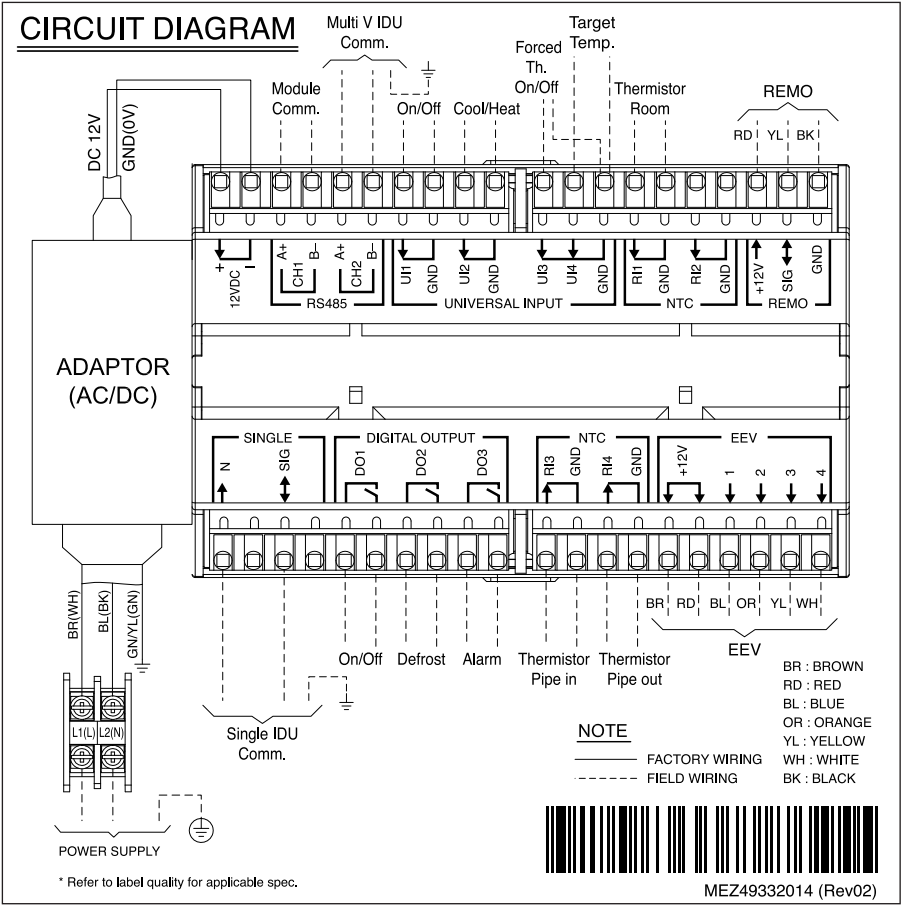

Electric specification of port**■ RS485/SINGLE Communication port**

Name	Port	Contents	Electrical Spec.	Function
Module Comm.	RS485 CH1	DDC(Modbus) Comm.	Max 500 m, 2C x (1.0~1.5) mm ² (shield wire)	Communication with DDC or Main module of PAHCMS000 model through Modbus protocol
MULTI V IDU Comm.	RS485 CH2	MULTI V IDU Comm.	Max 1 km, 2C x (1.0~1.5) mm ² (shield wire)	Communication with MULTI V Outdoor unit
Single IDU Comm.	SINGLE N/SIG	Single IDU Comm.	Max 75 m, 2C x (1.0~1.5) mm ² (shield wire)	Communication with Single Split Outdoor unit

- Communications distance may vary depending on the environment.

■ NTC Thermistor

Name	Port	Contents	Electrical Spec.	Function
Thermistor Room	NTC RI1/G	Room (Return) air thermistor	NTC 10 k Ω , 5 m	Return air temperature sensor
Thermistor Pipe in	NTC RI3/G	Pipe in (Liquid) thermistor	NTC 5 k Ω , 5 m	Inlet pipe (Liquid) Temp. sensor
Thermistor Pipe out	NTC RI4/G	Pipe out (Gas) thermistor	NTC 5 k Ω , 5 m	Outlet pipe (Gas) Temp. sensor

■ Universal Input – UI Setting #1

'UI setting #1' is available when DIP SW1-2 is OFF and both of DIP SW 2-3 and SW 2-4 are OFF



Note : DIP SW 1-2 is for contact signal control


Name	Port	Value		Electrical Spec.	Function									
		Short	Open											
ON / OFF	UI1 (DI)	ON	OFF	Non voltage	ON/OFF operation control									
Cool / Heat	UI2 (DI)	Heating	Cooling	Non voltage	Heating/Cooling Operation Control if operation mode (DIP SW 3-2, 3-3) is set to cooling only mode, UI2 “Short” status will work as fan mode. if operation mode (DIP SW 3-2, 3-3) is set to heating only mode, UI2 “Open” status will work as fan mode.									
Forced Thermal ON / OFF	UI3 (DI)	Thermal ON	Thermal OFF	Non voltage	When UI3(Target temp.) is less than 1.5 V, Target temp. and Room temp. is fixed like below table									
					<table><tr><th>Mode UI3 status</th><th>Cooling mode</th><th>Heating mode</th></tr><tr><td>Thermal ON</td><td>Target temp. = 16 °C Room temp. = 30 °C</td><td>Target temp. = 30 °C Room temp. = 16 °C</td></tr><tr><td>Thermal OFF</td><td>Target temp. = 30 °C Room temp. = 16 °C</td><td>Target temp. = 16 °C Room temp. = 30 °C</td></tr></table>	Mode UI3 status	Cooling mode	Heating mode	Thermal ON	Target temp. = 16 °C Room temp. = 30 °C	Target temp. = 30 °C Room temp. = 16 °C	Thermal OFF	Target temp. = 30 °C Room temp. = 16 °C	Target temp. = 16 °C Room temp. = 30 °C
					Mode UI3 status	Cooling mode	Heating mode							
					Thermal ON	Target temp. = 16 °C Room temp. = 30 °C	Target temp. = 30 °C Room temp. = 16 °C							
Thermal OFF	Target temp. = 30 °C Room temp. = 16 °C	Target temp. = 16 °C Room temp. = 30 °C												
Target Temp.	UI4 (AI)	Voltage (V)		Electrical Spec.	Cooling Mode [°C]	Heating Mode [°C]								
		1.5		DC 0~10 V	UI3 short : 16 °C, UI3 open : 30 °C									
		2.0			UI3 short : 30 °C, UI3 open : 16 °C									
		2.5			16									
		3.0			17									
		3.5			18									
		4.0			19									
		4.5			20									
		5.0			21									
		5.5			22									
		6.0			23									
		6.5			24									
		7.0			25									
		7.5			26									
		8.0			27									
		8.5			28									
		9.0 ≤			29									
		30												

NOTE

Maintain previous value when getting intermediate value to UI4

■ Universal Input – UI Setting #2

'UI setting #2' is available when DIP SW1-2 is OFF, DIP SW 2-3 is OFF and SW 2-4 is ON.

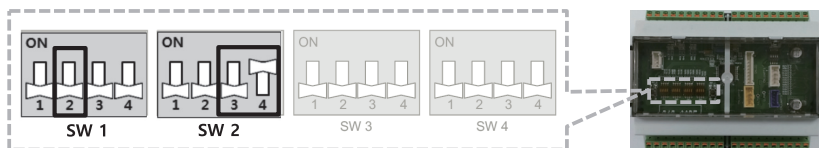

Note : DIP SW 1-2 is for contact signal control.


Name	Port	Value		Electrical Spec.	Function									
		Short	Open											
ON / OFF	UI1 (DI)	ON	OFF	Non voltage	ON/OFF operation control									
Forced Th. ON / OFF	UI4 (DI)	Thermal ON	Thermal OFF	Non voltage	<table><tr><th>Mode UI 4 status</th><th>Cooling mode</th><th>Heating mode</th></tr><tr><td>Thermal ON</td><td>Target Temp. = 16 °C Room Temp. = 30 °C</td><td>Target Temp. = 30 °C Room Temp. = 16 °C</td></tr><tr><td>Thermal OFF</td><td>Target Temp. = 30 °C Room Temp. = 16 °C</td><td>Target Temp. = 16 °C Room Temp. = 30 °C</td></tr></table>	Mode UI 4 status	Cooling mode	Heating mode	Thermal ON	Target Temp. = 16 °C Room Temp. = 30 °C	Target Temp. = 30 °C Room Temp. = 16 °C	Thermal OFF	Target Temp. = 30 °C Room Temp. = 16 °C	Target Temp. = 16 °C Room Temp. = 30 °C
					Mode UI 4 status	Cooling mode	Heating mode							
					Thermal ON	Target Temp. = 16 °C Room Temp. = 30 °C	Target Temp. = 30 °C Room Temp. = 16 °C							
Thermal OFF	Target Temp. = 30 °C Room Temp. = 16 °C	Target Temp. = 16 °C Room Temp. = 30 °C												

Operation Mode Setting

Mode	Status		Electrical Spec.	Function
	UI3	UI4		
Cooling	Short	Open	Non voltage	Cooling mode operation control
Heating	Open	Short	Non voltage	Heating mode operation control
Fan	Open	Open	Non voltage	Fan mode operation control
	Short	Short	Non voltage	

■ Universal Input – UI Setting #3

‘UI setting #3’ is available when DIP SW1-2 is OFF, DIP SW 2-3 is ON and SW 2-4 is OFF.

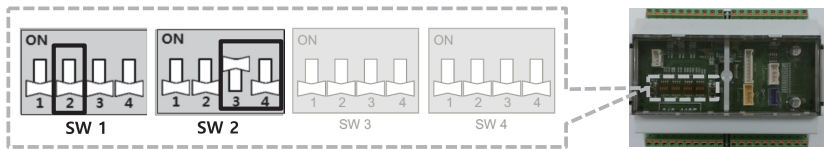

Note : DIP SW 1-2 is for contact signal control


Name	Port	Value		Electrical Spec.	Function		
		Short	Open				
ON / OFF	UI1 (DI)	ON	OFF	Non voltage	ON/OFF operation control		
Cool / Heat	UI2 (DI)	Heating	Cooling	Non voltage	Heating/Cooling Operation Control. If operation mode (DIP SW 3-2, 3-3) is not set to cooling only mode, UI2 "Heating" status will work as heating mode, otherwise it will work as cooling mode. If operation mode (DIP SW 3-2, 3-3) is not set to heating only mode, UI2 "Cooling" status will work as cooling mode, otherwise it will work as heating mode.		
Thermal ON/OFF with Fan Speed	UI3, UI4(DI)	-	-	Non voltage	Air Volume Settings		
					UI3 UI4	ON	OFF
					ON	Th. ON High	Th. ON Low
					OFF	Th. ON Middle	Th. OFF Low

Forced Th. ON/OFF with Fan Speed Setting

Mode	Status		Electrical Spec.	Function	
	UI3	UI4		Cooling mode	Heating mode
Forced Th. ON/OFF with Fan Speed	Open	Open	Non voltage	Target Temp. = 30 °C Room Temp. = 16 °C Fan Speed Low	Target Temp. = 16 °C Room Temp. = 30 °C Fan Speed Off
	Open	Short	Non voltage	Target Temp. = 16 °C Room Temp. = 30 °C Fan Speed Low	Target Temp. = 30 °C Room Temp. = 16 °C Fan Speed Low
	Short	Open	Non voltage	Target Temp. = 16 °C Room Temp. = 30 °C Fan Speed Middle	Target Temp. = 30 °C Room Temp. = 16 °C Fan Speed Middle
	Short	Short	Non voltage	Target Temp. = 16 °C Room Temp. = 30 °C Fan Speed High	Target Temp. = 30 °C Room Temp. = 16 °C Fan Speed High

■ Universal Input – UI Setting #4


'UI setting #4' is available when DIP SW1-2 is OFF, DIP SW 2-3 is ON and SW 2-4 is ON.

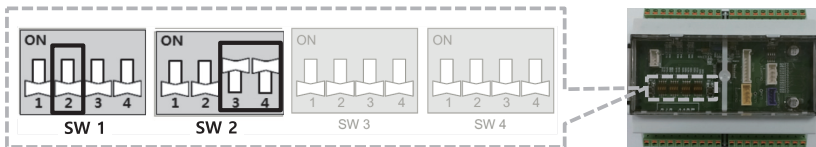

Note : DIP SW 1-2 is for contact signal control

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
ON / OFF	UI1 (DI)	ON	OFF	Non voltage	ON/OFF operation control
Cool / Heat	UI2 (DI)	Heating	Cooling	Non voltage	Heating/Cooling Operation Control. If operation mode (DIP SW 3-2, 3-3) is not set to cooling only mode, UI2 "Heating" status will work as heating mode, otherwise it will work as cooling mode. If operation mode (DIP SW 3-2, 3-3) is not set to heating only mode, UI2 "Cooling" status will work as cooling mode, otherwise it will work as heating mode.
Emergency Stop	UI3 (DI)	ON	OFF	Non voltage	Emergency Stop

DIP SW_FLASH

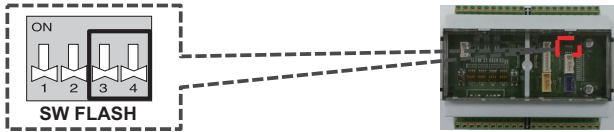

The default setting of all DIP switch is set “off”.

■ Table of DIP SW_FLASH


SW name	No	Item	Setting	Note
SW_FLASH	1	-	-	Onboarding Port
	2	-	-	Onboarding Port
	3,4	UI Setting #1	OFF/OFF	AHU Comm. Kit (R410A) UI1 : Operation ON/OFF UI2 : Heating/Cooling UI3 : Forced Thermal ON/OFF UI4 : Target air temperature
			OFF/ON	AHU Comm. Kit (R410A) UI1 : Operation ON/OFF UI2 : Heating/Cooling UI3 : Forced Thermal ON/OFF UI4 : Target air temperature
			ON/OFF	AHU Comm. Kit (R32) UI1: Operation ON/OFF UI2: Heating/Cooling UI3: Thermal ON/OFF UI4: 3rd Party refrigerant sensor
			ON/ON	AHU Comm. Kit (R32) UI1: Operation ON/OFF UI2: Heating/Cooling UI3: Target air temperature UI4: 3rd Party refrigerant sensor

NOTE

Do not change the reserved switch(It may malfunction).


■ Digital Output – Status

‘Status Output’ is available when DIP SW1-3 is OFF.

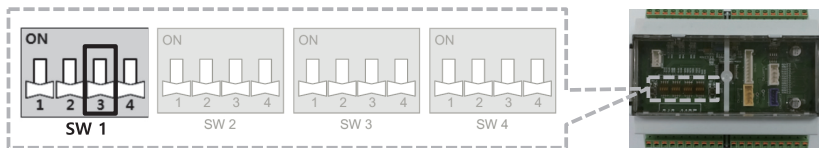

• DIP SW_FLASH

‘Set AHU Comm. Kit(R32)’ is when DIP SW_FLASH 3 is OFF.

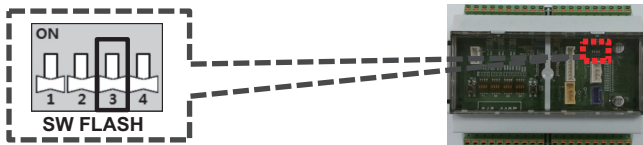

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
ON / OFF	DO1	ON	OFF	24 V AC / 1 A 30 V DC / 1 A	Operation ON/OFF Status
Defrost	DO2	Defrost	Normal		ODU Defrost Status (Only total defrost mode)
Alarm	DO3	Error	Normal		Error output status

• DIP SW_FLASH


‘Set AHU Comm. Kit(R32)’ is when DIP SW_FLASH 3 is ON.



Name	Port	Value		Electrical Spec.	Function
		Short	Open		
Leakage	DO1	Detection	OFF	24 V AC / 1 A 30 V DC / 1 A	Refrigerant leakage detecting When DIP SW_FLASH 3 is ON.
Defrost	DO2	Defrost	Normal		ODU Defrost Status (Only total defrost mode)
Alarm	DO3	Error	Normal		Error output status

■ Digital Output – Fan Speed (Fixed)


‘Fan Speed Output (Fixed)’ is available when DIP SW1-3 is ON and DIPSW1-4 is ON.

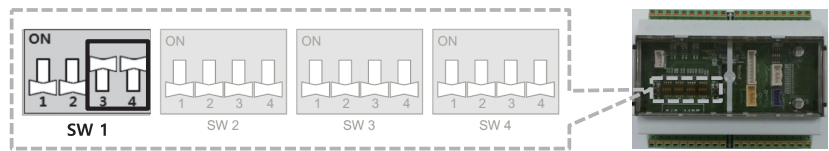

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
Fan_High	DO1	High	Operation OFF	24 V AC / 1 A 30 V DC / 1 A	The fan will always be running as set fan speed except defrost. During defrost, the fan speed will change as low fan speed.
Fan_Mid	DO2	Mid			
Fan_Low	DO3	Low			

■ Digital Output – Fan Speed (Change)

'Fan Speed Output (Change)' is available when DIP SW1-3 is ON and DIP SW1-4 is OFF.

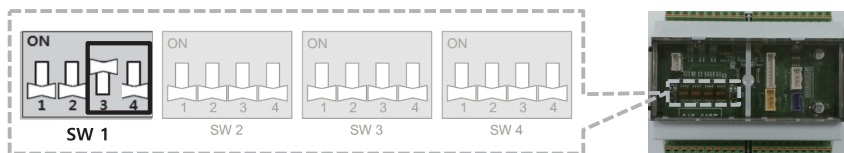

● Cooling or Heating – TH ON

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
Fan_High	DO1	High	-	24 V AC / 1 A 30 V DC / 1 A	DO ports output fan speed signal according to setting value
Fan_Mid	DO2	Mid			
Fan_Low	DO3	Low			

● Cooling – TH OFF

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
Fan_High	DO1	-	TH OFF	24 V AC / 1 A 30 V DC / 1 A	DO 1,2 is 'Open', DO 3(Low) is 'short'.
Fan_Mid	DO2	-	TH OFF		
Fan_Low	DO3	TH OFF	-		

● Heating – TH OFF or defrost

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
Fan_High	DO1	-	TH OFF	24 V AC / 1 A 30 V DC / 1 A	1) During defrost, All DOs are 'Open'. 2) The fan speed will be changed according to TH on/off. In cooling mode, - The fan speed will be running as low fan during TH off. - The fan speed will be running as set fan speed during TH on. In heating mode, - The fan speed will be stopped during TH off temperature setting. - The fan will be running for 20 s during TH OFF. - The fan speed will be running as set fan speed during TH on with pipe temp.
Fan_Mid	DO2	-	TH OFF		
Fan_Low	DO3	-	TH OFF		



■ Remote Controller

Name	Port	Item	Electrical Spec.	Function
REMO	+12 V SIG/GND	Wired Remote Controller	Max 50 m	Communication with Wired Remote Controller

■ EEV

Name	Port	Item	Electrical Spec.	Function
EEV	12 V DC/1/2/3/4	EEV Control	Max 5 m	EEV Control

■ LED Display

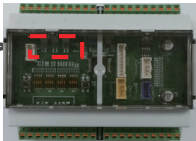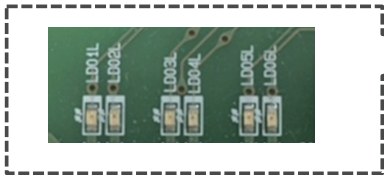


<Communication Module>

Name	Port	Function
LD01L	LED1	Modbus Comm. Tx
LD02L	LED2	Modbus Comm. Rx
LD03L	LED3	Inner Comm. Tx
LD04L	LED4	Inner Comm. Rx
LD05L	LED5	ODU Comm. (Repeat ON/OFF when communicating with ODU)
LD06L	LED6	Error Status (Repeat ON/OFF when error occurs)

DISCHARGE AIR TEMPERATURE CONTROL (PAHCMS000)

Main Module DIP SW

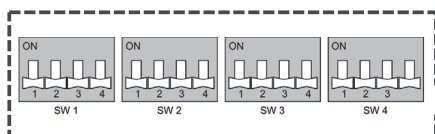

The default setting of all DIP switch is set "off"



<Main Module>

<Communication Module>


■ Table of SW1~SW4

SW name	No	Item	Setting		Note
SW1	1	Control Type	ON	Communication	Controlled by DDC through Modbus or LG central controller
			OFF	Contact signal	Controlled by DDC through Contact signal LG Central controller can only monitor status
	2	Discharge Temp. Control Type	ON	Stand alone	LG remote controllers & central controllers or DDC(Modbus) can control discharge air temperature by using LG discharge temperature sensor
			OFF	Manual by DDC	DDC(Contact Signal or Modbus) can control discharge air temperature by ODU capacity control referring to field supplied discharge temperature
	3	Defrost Operation Type ¹⁾	ON	Normal	In case of multiple outdoor units, Defrost operation can be operated simultaneously
			OFF	Sequential Start up	In case of multiple outdoor units, the outdoor unit is sequentially started at intervals of 10 minutes
	4	LG Central Communication Type (CH3 of Main Module)	ON	Modbus	Modbus communication between main module and LG central controller (control/monitoring possible)
			OFF	LGAP AHU	LGAP AHU communication between main module and LG central controller (monitoring only)
SW2	1	ODU Capacity Control	ON	ODU Capacity Setting #2	ODU capacity control #2
			OFF	ODU Capacity Setting #1	ODU capacity control #1
	2	Reserved	-	-	-
	3	Reserved	-	-	-
SW3	1	Reserved	-	-	-
	2	Reserved	-	-	-
	3	Reserved	-	-	-
	4	Reserved	-	-	-
SW4	1	Emergency Stop ²⁾	ON	Setting #2	System stops when the circuit(DI3-GND) is 'open'
			OFF	Setting #1	System stops when the circuit(DI3-GND) is 'short'
	3	Reserved	-	-	-
	4	Reserved	-	-	-

NOTE

- 1) Function of defrost operation type can be applied only to MULTI V outdoor units.
- 2) Emergency Stop function is working regardless 'Control Type' setting (DIP Switch SW1-2)

Communication Module DIP SW

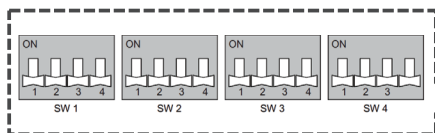

The default setting of all DIP switch is set "off".

<Main Module>

<Communication Module>

■ Table of SW1~SW3


SW name	No	Item	Setting		Note
SW1	1	ODU Type	ON	Single Comm.	Using Single Split outdoor unit
			OFF	MULTI V Comm.	Using MULTI V outdoor unit
	2	Control Type	ON	Communication	Controlled by DDC Modbus or LG remote controllers & central controllers (It must be 'ON', when comm. module is connected with Main Module.)
			OFF	Contact signal	Not used
	3	DO Type	ON	Fan Speed	Not used
			OFF	Status	Not used
	4	Fan Speed (TH. ON/OFF)	ON	Fixed	Not used
			OFF	Change	Not used
SW2	1	Reserved	-	-	-
	2	Reserved	-	-	-
	3/4	UI Setting	OFF/OFF	UI Setting #1	Not used
			OFF/ON	UI Setting #2	Not used
			ON/OFF	-	-
			ON/ON	-	-
SW3	1	Master/Slave	ON	Slave mode	Not used
			OFF	Master mode	Master is default
	2/3	Operation mode setting	OFF/OFF	Heat Pump	Cooling or Heating operation mode is available.
			OFF/ON	Heating Only	Operation mode is Heating only (Heating/Fan).
			ON/OFF	Cooling Only	Operation mode is Cooling only (Cooling/Fan).
			ON/ON	Reserved	-
	4	Reserved	-	-	-
SW4	1~4	Capacity Index Setting	-	-	According to ODU Type, you can setup the capacity index of MULTI V or Single Split. Please refer to 'Table of SW4' in Return Air Temperature Control (PAHCMR000).

NOTE


- Do not change the reserved switch(It may malfunction).
- UI Setting #1 may vary depending on the DIP SW_FLASH configuration. (See page 47page)

Electric Wiring Work (PAHCMS000)

Circuit diagram

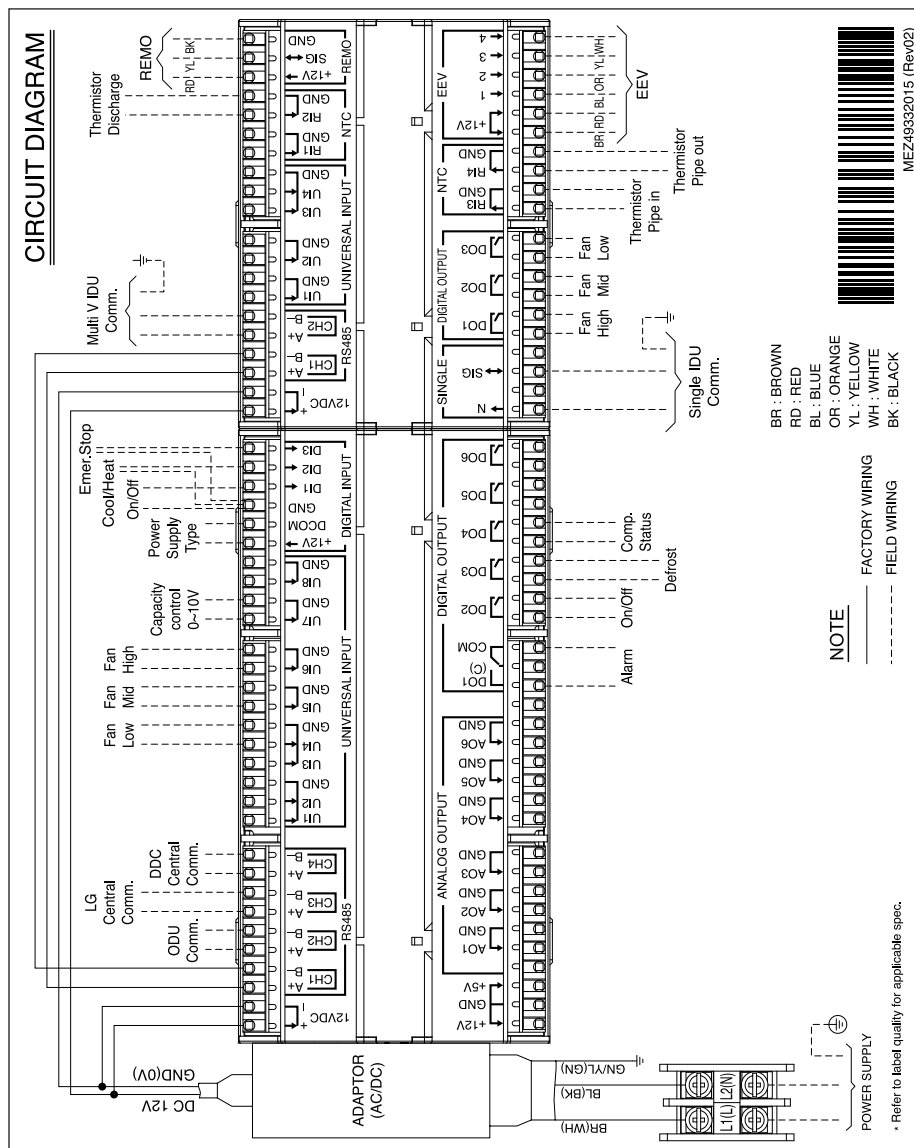


CAUTION

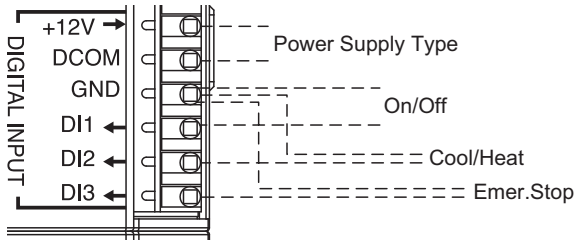


Please check the electrical specification of digital output (DO) of DDC whether 12 V DC or Non-voltage for 'DI Control'.

According to the power supply type of DO, please make wirings as below.

Internal Power Source (Non-Voltage)

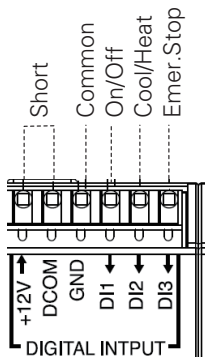

External Power Source (12 V DC)

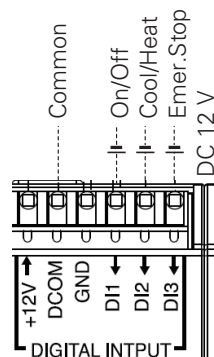

For detail wiring, please see "Digital Input - Internal power source", and Digital Input - External Power Source (12 V DC)" in the PDB.

Main Module _ Electric specification of port

■ RS485 Communication port

Name	Port	Item	Electrical Spec.	Function
ODU Comm.	RS485 CH2	ODU Comm. (CEN A/B or INT A/B)	Max 1km, 2C x (1.0~1.5) mm ² (shield wire)	Communication with MULTI V/Single split ODU for ODU Capacity control
LG Central Comm.	RS485 CH3	LG Central Comm.	Max 500 m, 2C x (1.0~1.5) mm ² (shield wire)	Communication with LG central controller through LGAP AHU Protocol
DDC Central Comm.	RS485 CH4	DDC(Modbus) Central Comm.	Max 500 m, 2C x (1.0~1.5) mm ² (shield wire)	Communication with DDC central controller through Modbus protocol

NOTE

Single PI485 Gateway(PMNFP14A1) is sold separately.
Communication distance may vary depending on the environment.

■ Universal Input

Digital Input

*UI is available when DIP SW1-1 is OFF.

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
Fan_Low	UI4	Low	STOP	Non voltage	Fan Speed Setting Input
Fan_Mid	UI5	Mid	STOP	Non voltage	
Fan_High	UI6	High	STOP	Non voltage	

Analog Input

Name	Port	Value	Electrical Spec.	Function
Capacity Control 0 ~ 10 V	UI7 (AI)	0 ~ 10 V Input	DC 0 ~ 10 V	ODU Capacity control input (0 ~ 10V) * When Temp. Control Type is 'Manual by DDC' (SW 1-2 : OFF), below UI7 Table setting is available.

NOTE

Please refer to the 'UI7(Analog Input) – ODU Capacity Control' of this manual.

Digital Input - Internal Power Source (Non-voltage)

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
ON/OFF	DI1 - GND	ON	OFF	Non voltage	Operation ON/OFF
Cool/Heat	DI2 - GND	Heating	Cooling	Non voltage	Operation Mode
Emer. Stop	DI3 - GND	Emergency Stop	Normal	Non voltage	Emergency Stop Input (Priority operation)
DI Control	+12 V-DCOM	Internal Power Source	External Power Source	Non voltage	Use internal power source for DI +12 V-DCOM should be "Short".

Digital Input - External Power Source (12 V DC)

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
ON/OFF	DI1 - DCOM	ON	OFF	12 V DC	Operation ON/OFF
Cool/Heat	DI2 - DCOM	Heating	Cooling	12 V DC	Operation Mode
Emer. Stop	DI3 - DCOM	Emergency Stop	Normal	12 V DC	Emergency Stop Input (Priority operation)
DI Control	+12 V-DCOM	Internal Power Source	External Power Source	Non voltage	Use external power source for DI +12 V-DCOM should be "Open"



NOTE

- D1, D2 are available when DIP SW1-1 is OFF.
- DI3(Emergency Stop Fuction) is available regardless of 'Control Type' setting.

**CAUTION**

Please check the electrical specification of digital output (DO) of DDC controller whether 12 V DC or non-voltage for 'DI Control'. According to the electrical spec. of DO of DDC controller, 'DI Control' should be set. If the wrong setting is made, DI does not work properly.

■ Digital Output (Relay C contact)


Name	Port	Value	Electrical Spec.	Function
Alarm	DO1	- Normal Status  A B COM - Error Status  A B COM	24 V AC / 1 A 30 V DC / 1 A	Output normal or error status (Relay C Contact) - A Contact Normal status : open Error status : short - B Contact Normal status : short Error status : open

■ Digital Output

Name	Port	Value		Electrical Spec.	Function
		Short	Open		
ON/OFF	DO2	ON	OFF	24 V AC / 1 A 30 V DC / 1 A	Operation ON/OFF status
Defrost	DO3	Defrost	Normal		ODU Defrost status
Comp. Status	DO4	ON	OFF		Compressor operation ON/OFF status
Reserved	DO5	-	-		-
Reserved	DO6	-	-		-

■ UI7(Analog Input) – ODU Capacity Control #1

'ODU Capacity Control #1' is available when DIP SW2-1 is OFF, each Master ODU will have a different operating ratio according to following tables.

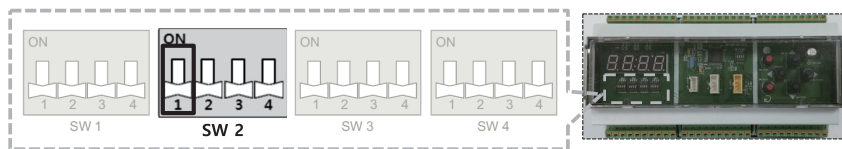

<Main Module>

<1 System >

Voltage (V)	ODU Capacity Range (%)	Estimated Eva. Temp. (Te, °C)	Estimated Cond. Temp. (Tc, °C)
0.0	Operation OFF	-	-
4.0	40	14.0	33.5
4.5	40	14.0	33.5
5.0	50	12.0	36.5
5.5	50	12.0	36.5
6.0	60	10.5	39.0
6.5	60	10.5	39.0
7.0	70	9.0	41.5
7.5	70	9.0	41.5
8.0	80	8.0	44.0
8.5	80	8.0	44.0
9.0	90	7.0	46.5
9.5	90	7.0	46.5
10.0	100	6.0	49.0

<2 System>

Voltage [V]	Total Capacity ratio [%]	Each ODU's capacity ratio [%]	
		ODU Master#1	ODU Master#2
0	0	Operation OFF	
2.0	20.0	40	0
2.5	25.0	50	0
3.0	30.0	60	0
3.5	35.0	70	0
4.0	40.0	40	40
4.5	45.0	40	50
5.0	50.0	50	50
5.5	55.0	50	60
6.0	60.0	60	60
6.5	65.0	60	70
7.0	70.0	70	70
7.5	75.0	70	80
8.0	80.0	80	80
8.5	85.0	80	90
9.0	90.0	90	90
9.5	95.0	90	100
10.0	100.0	100	100

NOTE

- Based on 7.5 m piping length condition, According to piping length evaporating/condensing temperature will be increasing/decreasing.
- ODU Capacity ratios mentioned in the table above are not exact.
- 'Evaporative temperature / Condenser temperature' may vary depending on system operating frequency, pressure option setting and piping installation conditions.
- Single Split ODU is only supporting <1 system> table.



CAUTION

The actual temperature at the evaporator may vary by pressure drop. Please contact a local sale person to design an AHU heat exchanger.

■ UI7(Analog Input) – ODU Capacity Control #1

<3 System>

Voltage [V]	Total Capacity ratio [%]	Each ODU's capacity ratio [%]		
		ODU Master#1	ODU Master#2	ODU Master#3
0	0.0	Operation OFF		
2.0	26.7	40	0	40
2.5	30.0	50	0	40
3.0	33.3	60	0	40
3.5	36.7	70	0	40
4.0	40.0	40	40	40
4.5	46.7	40	50	50
5.0	50.0	50	50	50
5.5	56.7	50	60	60
6.0	60.0	60	60	60
6.5	66.7	60	70	70
7.0	70.0	70	70	70
7.5	76.7	70	80	80
8.0	80.0	80	80	80
8.5	86.7	80	90	90
9.0	90.0	90	90	90
9.5	96.7	90	100	100
10.0	100.0	100	100	100

<4 System>

Voltage [V]	Total Capacity ratio [%]	Each ODU's capacity ratio [%]			
		ODU Master#1	ODU Master#2	ODU Master#3	ODU Master#4
0	0.0	Operation OFF			
2.0	20.0	40	0	40	0
2.5	22.5	50	0	40	0
3.0	25.0	60	0	40	0
3.5	27.5	70	0	40	0
4.0	40.0	40	40	40	40
4.5	47.5	40	50	50	50
5.0	50.0	50	50	50	50
5.5	57.5	50	60	60	60
6.0	60.0	60	60	60	60
6.5	67.5	60	70	70	70
7.0	70.0	70	70	70	70
7.5	77.5	70	80	80	80
8.0	80.0	80	80	80	80
8.5	87.5	80	90	90	90
9.0	90.0	90	90	90	90
9.5	97.5	90	100	100	100
10.0	100.0	100	100	100	100

NOTE

- ODU Capacity ratios mentioned in the table above are not exact.
- 'Evaporative temperature / Condenser temperature' may vary depending on system operating frequency, pressure option setting and piping installation conditions.
- Single Split ODU is only supporting <1 system> table.




CAUTION

Actual temperature at evaporator may varies by pressure drop. Please contact local sale person to design AHU heat exchanger.

■ UI7(Analog Input) – ODU Capacity Control #2

‘ODU Capacity Control #2’ is available when DIP SW2-1 is ON, each Master ODU will have the same operating ratio according to following tables.

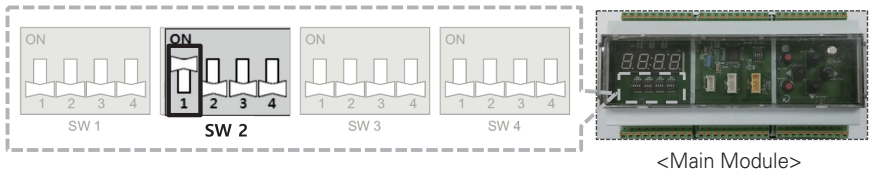

Voltage (V)	ODU Capacity Range (%)	Estimated Eva. Temp. (Te,°C)	Estimated Cond. Temp. (Tc,°C)
0.0	Operation OFF	-	-
1.0	100	6.0	49.0
2.0	90	7.0	46.5
3.0	80	8.0	44.0
4.0	70	9.0	41.5
5.0	60	10.5	39.0
6.0	50	12.0	36.5
7.0	45	13.0	35.3
8.0	40	14.0	33.5
9.0	Operation OFF	-	-
10.0	Operation OFF	-	-

NOTE

- Based on 7.5 m piping length condition, According to piping length evaporating/condensing temperature will be increasing/decreasing.
- ODU Capacity ratios mentioned in the table above are not exact.
- ‘Evaporative temperature / Condenser temperature’ may vary depending on system operating frequency, pressure option setting and piping installation conditions.



CAUTION

Actual temperature at evaporator may varies by pressure drop. Please contact local sale person to design AHU heat exchanger.

Communication Module _ Electric specification of port**■ RS485 Communication port**

Name	Port	Item	Electrical Spec.	Function
MULTI V IDU Comm.	RS485 CH2	MULTI V Comm. (IDU A/B)	Max 1km, 2C x (1.0~1.5) mm ² (shield wire)	Communication with MULTI V Outdoor unit
Single IDU Comm.	SINGLE N/SIG	Single split Comm. (IDU A/B)	Max 75 m, 2C x (1.0~1.5) mm ² (shield wire)	Communication with Single Split Outdoor unit

■ NTC Thermistor

Name	Port	Item	Electrical Spec.	Function
Thermistor Discharge	NTC RI2/G	Discharge air Thermistor	NTC 10 k Ω , 5 m	Discharge Air temperature sensor
Thermistor Pipe in	NTC RI3/G	Pipe in (Liquid) Thermistor	NTC 5 k Ω , 5 m	Inlet pipe (Liquid) Temp. sensor
Thermistor Pipe out	NTC RI4/G	Pipe out (Gas) Thermistor	NTC 5 k Ω , 5 m	Outlet pipe (Gas) Temp. sensor

■ Remote Controller

Name	Port	Item	Electrical Spec.	Function
REMO	+12 V SIG/GND	Wire Remote Controller	Max 50 m	Communication with Wired Remote Controller


■ EEV

Name	Port	Item	Electrical Spec.	Function
EEV	12 V DC/1/2/3/4	EEV Control	Max 5 m	EEV Control

NOTE

When a communication module (or PAHCMR000) is connected to the main module of PAHCMS000, DO and UI in communication module are not used.

DIP SW_FLASH

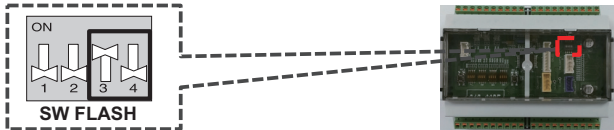

The default setting of all DIP switch is set “off”.

■ Table of DIP SW_FLASH

SW name	No	Item	Setting	Note
SW_FLASH	1	-	-	Not Used
	2	-	-	Not Used
	3	UI Setting #1	ON	AHU Comm. Kit (R32) UI4: 3rd Party refrigerant sensor
	4	-	-	Not Used


■ Digital Output (Relay C contact)

Name	Port	Value	Electrical Spec.	Function
Alarm	DO1	- Normal Status  A B COM - Error Status  A B COM	24 V AC / 1 A 30 V DC / 1 A	Output normal or error status (Relay C Contact) - A Contact Normal status : open Error status : short - B Contact Normal status : short Error status : open

■ Main Module Address Setting



7- Segment

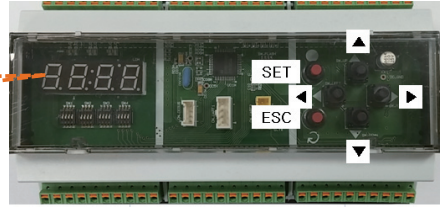

<Main Module>

An address for the main module is needed when PAHCMS000 is connected to LG central controller or DDC by Modbus.

The address of main module can be set within '1~247 in decimal number'. In this case, the address of the main module should be the same as the Modbus address in LG central controller or DDC.

◆ Setting Method

- Press 'Set' button(red)
- Select 'Addr' in 7- Segment using ▲ ▼ button and then press 'Set' button
- Press 'ESC' button to exit

! CAUTION

Note that LG central controller are using hexadecimal number. Please check the address of main module is matching to the address of LG central controller or DDC when using Modbus protocol. Otherwise, PAHCMS000 will not operate properly.


ex) The address of main module '13' (decimal number)

→ The address of LG central controller should be '0D' (Hexadecimal number).

■ Modbus RTU Configuration Procedure


Modbus RTU communication parameters can be configured directly through the AHU Communication Kit Main Module, allowing communication settings to be matched with various BMS/DDC requirements.

Access Modbus Configuration Menu

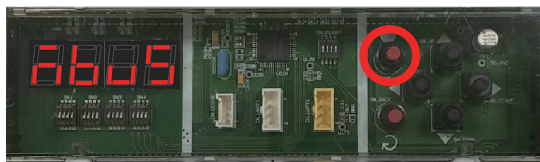


- 1) Press the SW_CONF(●) button, then use the ▲ / ▼ buttons.
- 2) 'MbuS' is displayed on the display.
- 3) Press the SW_CONF(●) button, then use the Up/Down buttons to select:
- 4) Available options : Baud Rate/ Parity/ Stop Bit

Baud Rate Configuration

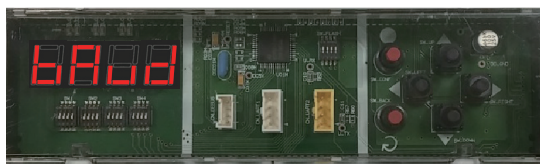


- 1) Display : bAud
- 2) Options : - 960: 9600 bps(default)
- 1920: 19200 bps
- 3840: 38400 bps

Parity Configuration

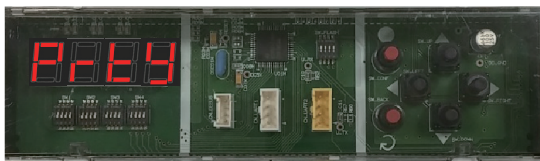

- 1) Display : "PrtY"
- 2) Options : - none : None Parity(default)
- EVEn : Even parity
- odd : Odd parity

Stop Bit Configuration

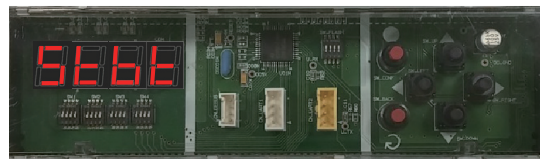


- 1) Display : "Stbt"
- 2) Options : - 1 : 1 stop bit (default)
- 2 : 2 stop bits

EXTERNAL CONNECTION DIAGRAM

Return air temperature control


Example 1) MULTI V + EEV Kit + LG Control/DDC (Modbus RTU)

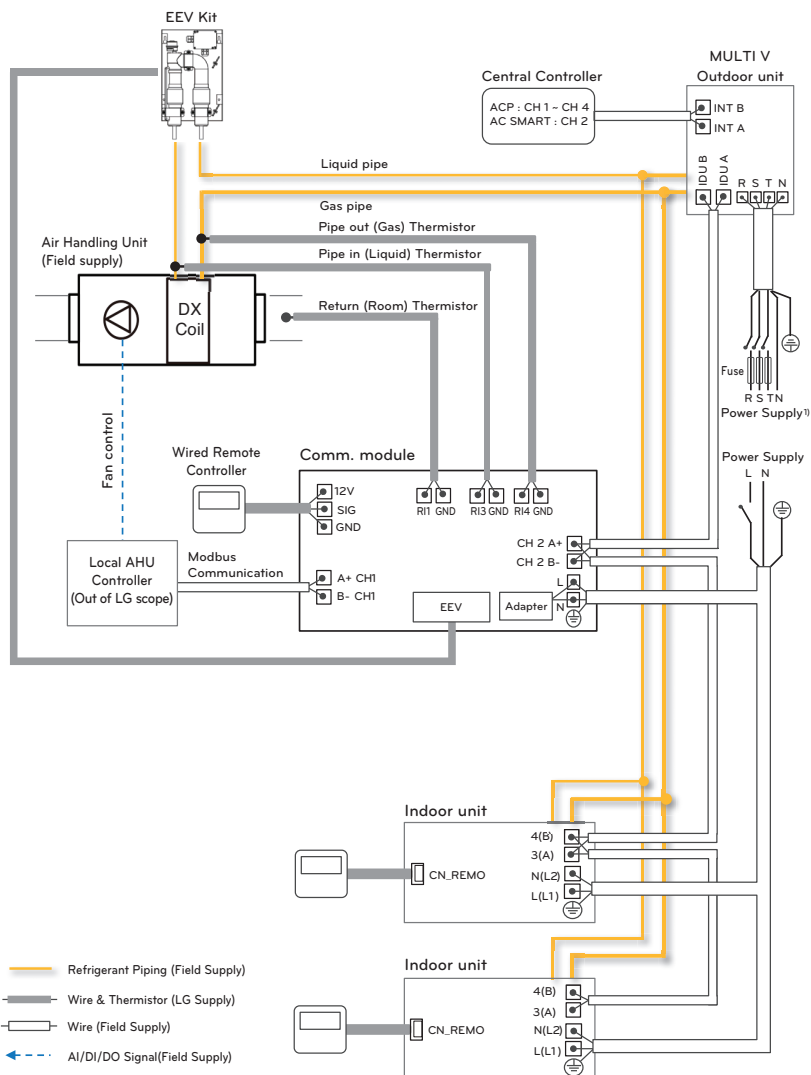

NOTE

- The type of power supply of outdoor unit can vary depending on the outdoor model.
- Please make wiring between LG controller and outdoor unit with the same polarity.
- LG controller can be optionally applied with DDC.

Example 2) Single Split + LG Control/DDC (Modbus RTU)

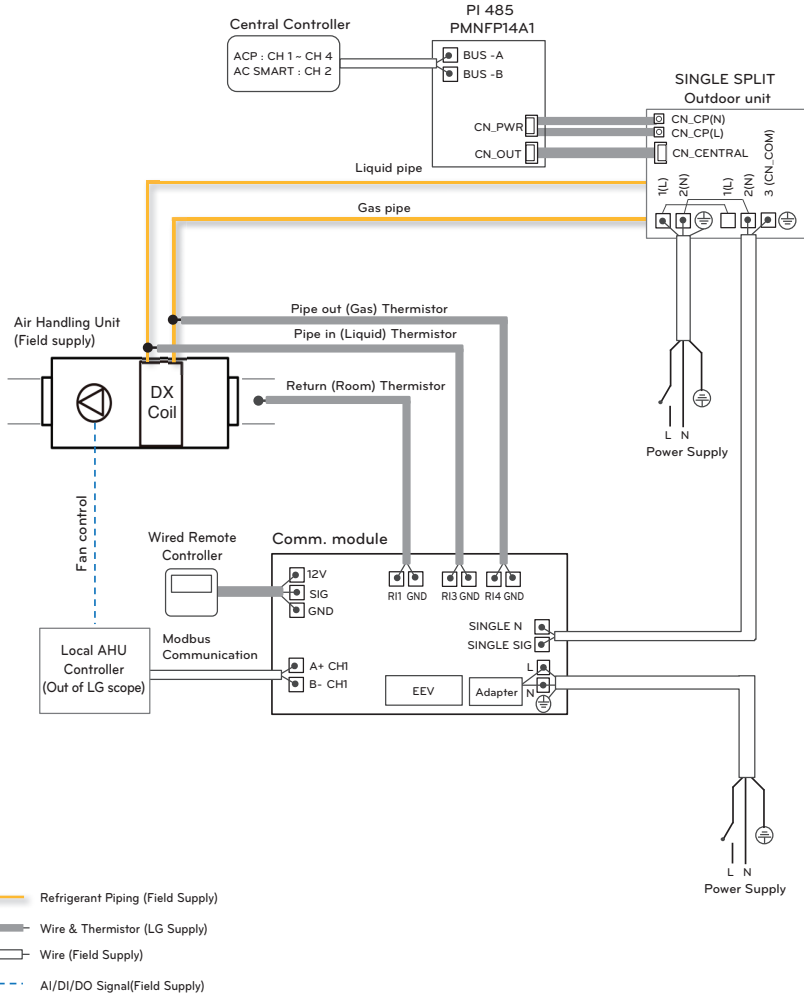


NOTE

- The type of power supply of outdoor unit can vary depending on the outdoor model.
- Please make wiring between LG controller and outdoor unit with the same polarity.
- LG controller can be optionally applied with DDC.

Discharge air temperature control


Example 1) MULTI V + EEV + LG Control/DDC (Modbus RTU)

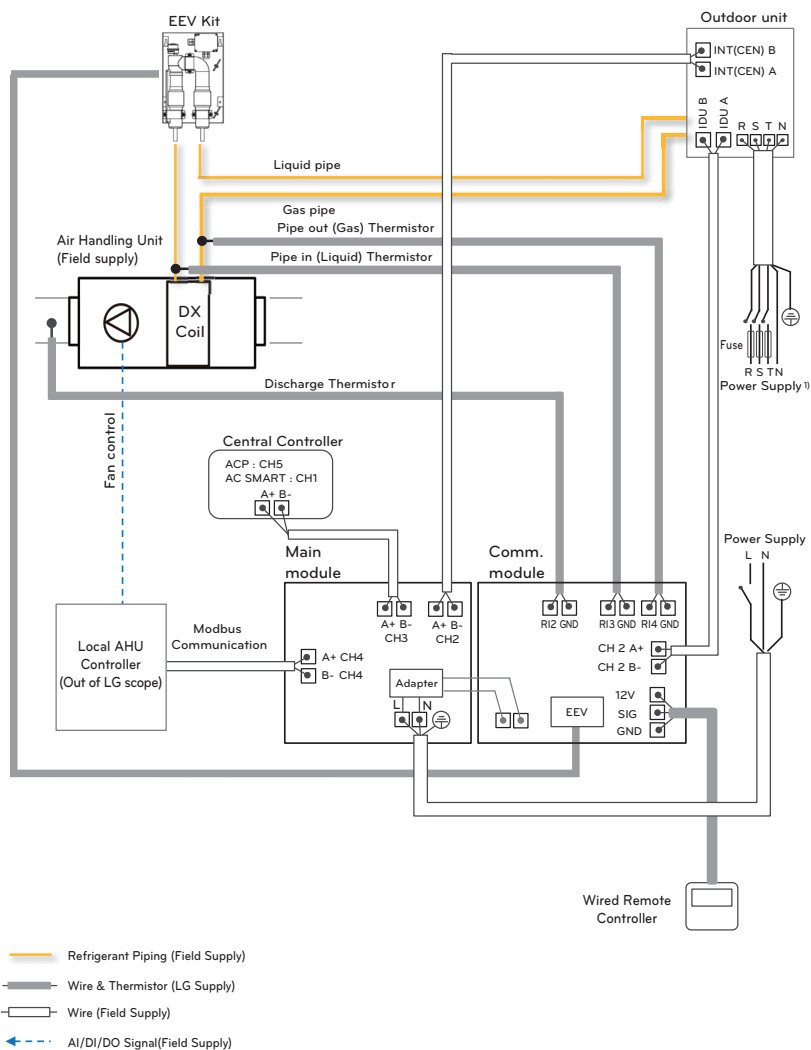

NOTE

- The type of power supply of outdoor unit can vary depending on the outdoor model.
- Please make wiring between LG controller and outdoor unit with the same polarity.
- LG controller can be optionally applied with DDC.

Example 2) Single Split + LG Control/DDC (Modbus RTU)

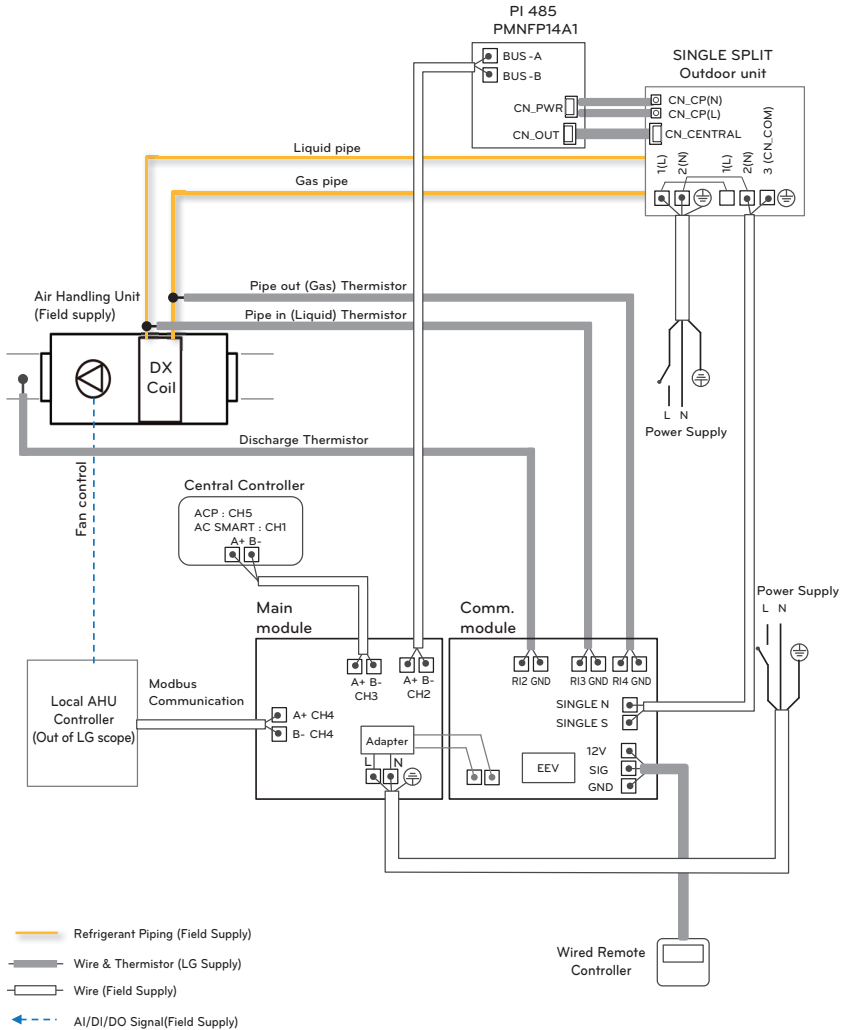

NOTE

- The type of power supply of outdoor unit can vary depending on the outdoor model.
- Please make wiring between LG controller and outdoor unit with the same polarity.
- LG controller can be optionally applied with DDC.

BMS PROTOCOL

BACnet points of PAHCMR000 (Return air temperature control)

■ AHU Control / Monitor point

No.	Name	Object Name (XX : Unit Address Number)	Object Type	Unit					
				Inactive	Active				
				TEXT-0	TEXT-1	TEXT-2	TEXT-3	TEXT-4	TEXT-5
1	ON/OFF (Setting)	ac_StartStopCommand_XX	BO	Stop(0)	Start(1)				
2	ON/OFF (Status)	ac_StartStopStatus_XX	BI	Stop(0)	Start(1)				
3	Lock (Setting)	ac_LockCommand_XX	BO	Permit(0)	Prohibit(1)				
4	Lock (Status)	ac_LockStatus_XX	BI	Permit(0)	Prohibit(1)				
5	Operation Mode (Setting)	ac_AirConModeCommand_XX	MO		Cool(1)		Fan(3)		Heat(5)
6	Operation Mode (Status)	ac_AirConModeStatus_XX	MI		Cool(1)		Fan(3)		Heat(5)
7	Fan Speed (Setting) ¹⁾	ac_FanSpeedCommand_XX	MO		Low(1)	Middle(2)	High(3)		
8	Fan Speed (Status) ¹⁾	ac_FanSpeedStatus_XX	MI		Low(1)	Middle(2)	High(3)		
9	Set Room Temperature	ac_SetRoomTemp_XX	AV	°C(16~30 °C)					
10	Room Temperature	ac_RoomTemp_XX	AI	°C(-99~99 °C)					
11	Alarm	ac_Alarm_XX	BI	Normal(0)	Abnormal(1)				
12	Error Code	ac_MalfunctionCode_XX	AI	0~255 (Refer to the LG Error code list)					
13	Set Temperature (Status)	ac_SetTempStatus_XX	AI	°C(16~30 °C)					
14	Set Upper Temperature (Setting)	ac_TempRangeUpperLimitCommand_XX	AV	°C(16~30 °C)					
15	Set Lower Temperature (Setting)	ac_TempRangeLowerLimitCommand_XX	AV	°C(16~30 °C)					
16	Set Upper Temperature (Status)	ac_TempRangeUpperLimitStatus_XX	AI	°C(16~30 °C)					
17	Set Lower Temperature (Status)	ac_TempRangeLowerLimitStatus_XX	AI	°C(16~30 °C)					
18	Mode Lock (Setting)	ac_ModeLockCommand_XX	BO	Permit(0)	Prohibit(1)				
19	Mode Lock (Status)	ac_ModeLockStatus_XX	BI	Permit(0)	Prohibit(1)				
20	Fan Lock (Setting)	ac_FanLockCommand_XX	BO	Permit(0)	Prohibit(1)				
21	Fan Lock (Status)	ac_FanLockStatus_XX	BI	Permit(0)	Prohibit(1)				
22	Thermal Status (Status)	ac_ThermoStatus_XX	BI	OFF(0)	ON(1)				

NOTE

- ACP BACnet gateway is required for BACnet protocol.
- In case of PAHCMS000, BACnet protocol is not supported.
- For more details, refer to the manual of control product.
 - For fan speed control, it is necessary to set DIP SW 1-3 'ON'.

■ Outdoor unit Monitor point

No.	Name	Object Name (XX : Unit Address Number)	Object Type	Unit					
				Inactive TEXT-0	Active				
					TEXT-1	TEXT-2	TEXT-3	TEXT-4	TEXT-5
1	Compressor Operation Status	outdoor_CompOperStatus_XX	BI	Stop(0)	Run(1)				
2	Inverter Fan 1 frequency	outdoor_InverterFanFreq_XX	AI	-					
3	High Pressure	outdoor_HighPressure_XX	AI	-					
4	Low Pressure	outdoor_LowPressure_XX	AI	-					
5	Suction Temperature	outdoor_SuctionTemp_XX	AI	°C					
6	Liquid Pipe Temperature	outdoor_LiquidPipeTemp_XX	AI	°C					
7	Heat Exchanger Temperature	outdoor_HexTemp_XX	AI	°C					
8	Outdoor EEV	outdoor_OutdoorEEV_XX	AI	-					
9	Subcool EEV	outdoor_SubCoolEEV_XX	AI	-					
10	Hot Gas Valve	outdoor_HotGasValue_XX	BI	Stop(0)	Run(1)				
11	Inverter Discharge Temperature	outdoor_InverterDischargeTemp_XX	AI	°C					
12	Outdoor Temperature	outdoor_OutdoorTemp_XX	AI	°C					
13	Operation Mode	outdoor_OperationMode_XX	MI		STOP(1)	COOL(2)	HEAT(3)		

NOTE

- ACP BACnet gateway is required for BACnet protocol.
- In case of PAHCMS000, BACnet protocol is not supported.
- For more details, refer to the manual of control product.

■ AHU Control/Monitor point

NOTE

- ACP Lonworks gateway is required for Lonworks protocol.
- In case of PAHCMS000, Lonworks protocol is not supported.
- For more details, refer to the manual of control product.
 - For fan speed control, it is necessary to set DIP SW 1-3 'ON'.

Modbus points of PAHCMR000 (Return air temperature control)

Function Code

Code	Description	Register
0x01	Read Coils	00001~00008
0x02	Read Discrete inputs	10001~10008
0x03	Read Holding Registers	40001~40010
0x04	Read Input Registers	30001~30008
0x05	Write Single Coil	00001~00008
0x06	Write Single Holding Register	40001~40010

Memory Map

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
00001	Operating ON / OFF	●	-	-	-	●	-	0: OFF / 1: ON
00002	Reserved	-	-	-	-	-	-	-
00003	All Button Lock	●	-	-	-	●	-	0: Unlock / 1: Lock
00004	Mode Lock	●	-	-	-	●	-	0: Unlock / 1: Lock
00005	Fan Speed Lock	●	-	-	-	●	-	0: Unlock / 1: Lock
00006	Target Temp. Lock	●	-	-	-	●	-	0: Unlock / 1: Lock
00007	Error	●	-	-	-	-	-	0: Normal / 1: Error
00008	Reserved	-	-	-	-	-	-	-
10001	Comp Status	-	●	-	-	-	-	0: OFF / 1: ON
10002	Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10003	Oil Return	-	●	-	-	-	-	0: Normal / 1: Oil Return
10004	Reserved	-	-	-	-	-	-	-
10005	Reserved	-	-	-	-	-	-	-
10006	Reserved	-	-	-	-	-	-	-
10007	Reserved	-	-	-	-	-	-	-
10008	Reserved	-	-	-	-	-	-	-
30001	Error Code	-	-	-	●	-	-	0~255
30002	RA Temp.	-	-	-	●	-	-	-50.0 °C~100.0 °C (x10)
30003	Reserved	-	-	-	-	-	-	-
30004	Pipe In Temp.	-	-	-	●	-	-	-50.0 °C~100.0 °C (x10)
30005	Pipe Out Temp.	-	-	-	●	-	-	-50.0 °C~100.0 °C (x10)
30006	Capacity	-	-	-	●	-	-	0~255 [kBtu]
30007	Reserved	-	-	-	-	-	-	-
30008	Reserved	-	-	-	-	-	-	-
40001	Operation Mode	-	-	●	-	-	●	0: Cooling / 2: Fan / 4: Heating
40002	Fan Speed	-	-	●	-	-	●	1: Low / 2: Middle / 3: High
40003	Target Temp.	-	-	●	-	-	●	-10.0 °C~100.0 °C (x10)
40004	Target Temp. Upper Range	-	-	●	-	-	●	16.0 °C~30.0 °C (x10, 1 °C)
40005	Target Temp. Lower Range	-	-	●	-	-	●	16.0 °C~30.0 °C (x10, 1 °C)
40006	Reserved	-	-	-	-	-	-	-
40007	Reserved	-	-	-	-	-	-	-
40008	Reserved	-	-	-	-	-	-	-
40009	Reserved	-	-	-	-	-	-	-
40010	Reserved	-	-	-	-	-	-	-

NOTE

- Configuration is that the baud rate is 9600bps, parity is none and stop bit is 1.
- To change the slave address, please see Chapter8. Main module Address Setting).

Modbus points of PAHCMR000 (Return air temperature control)

Function Code

Code	Description	Register
0x01	Read Coils	00001~00008
0x02	Read Discrete inputs	10001~10030
0x03	Read Holding Registers	40001~40010
0x04	Read Input Registers	30001~30016
0x05	Write Single Coil	00001~00008
0x06	Write Single Holding Register	40001~40028

Memory Map

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
00001	Operating ON / OFF	●	-	-	-	●	-	0: OFF / 1: ON
00002	Reserved	-	-	-	-	-	-	-
00003	Reserved	-	-	-	-	-	-	-
00004	Reserved	-	-	-	-	-	-	-
00005	Reserved	-	-	-	-	-	-	-
00006	Reserved	-	-	-	-	-	-	-
00007	Reserved	-	-	-	-	-	-	-
00008	Reserved	-	-	-	-	-	-	-
10001	Error Status	-	●	-	-	-	-	0: Normal / 1: Error
10002	Operation Status	-	●	-	-	-	-	0: OFF / 1: ON
10003	Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10004	Reserved	-	-	-	-	-	-	-
10005	Reserved	-	-	-	-	-	-	-
10006	Reserved	-	-	-	-	-	-	-
10007	Reserved	-	-	-	-	-	-	-
10008	Reserved	-	-	-	-	-	-	-
10009	Reserved	-	-	-	-	-	-	-
10010	Reserved	-	-	-	-	-	-	-
10011	ODU#1 Operation Status	-	●	-	-	-	-	0: OFF / 1: ON
10012	ODU#1 Comp. Status	-	●	-	-	-	-	0: OFF / 1: ON
10013	ODU#1 Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10014	ODU#1 Error Status	-	●	-	-	-	-	0: Normal / 1: Error
10015	ODU#2 Operation Status	-	●	-	-	-	-	0: OFF / 1: ON
10016	ODU#2 Comp. Status	-	●	-	-	-	-	0: OFF / 1: ON
10017	ODU#2 Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10018	ODU#2 Error Status	-	●	-	-	-	-	0: Normal / 1: Error
10019	ODU#3 Operation Status	-	●	-	-	-	-	0: OFF / 1: ON
10020	ODU#3 Comp. Status	-	●	-	-	-	-	0: OFF / 1: ON
10021	ODU#3 Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10022	ODU#3 Error Status	-	●	-	-	-	-	0: Normal / 1: Error
10023	ODU#4 Operation Status	-	●	-	-	-	-	0: OFF / 1: ON
10024	ODU#4 Comp. Status	-	●	-	-	-	-	0: OFF / 1: ON
10025	ODU#4 Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10026	ODU#4 Error Status	-	●	-	-	-	-	0: Normal / 1: Error

Memory Map

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
10027	Reserved	-	-	-	-	-	-	-
10028	Reserved	-	-	-	-	-	-	-
10029	Reserved	-	-	-	-	-	-	-
10030	Reserved	-	-	-	-	-	-	-
30001	Error Code	-	-	-	●	-	-	1xxxx ²⁾
30002	Reserved	-	-	-	-	-	-	-
30003	Reserved	-	-	-	-	-	-	-
30004	Reserved	-	-	-	-	-	-	-
30005	Reserved	-	-	-	-	-	-	-
30006	Reserved	-	-	-	-	-	-	-
30007	Reserved	-	-	-	-	-	-	-
30008	Reserved	-	-	-	-	-	-	-
30009	Reserved	-	-	-	-	-	-	-
30010	Reserved	-	-	-	-	-	-	-
30011	RA Temp.	-	-	-	●	-	-	-50.0 °C~100.0 °C (x10)
30012	Reserved	-	-	-	-	-	-	-
30013	SA Temp.	-	-	-	●	-	-	-50.0 °C~100.0 °C (x10)
30014	Reserved	-	-	-	-	-	-	-
30015	Reserved	-	-	-	-	-	-	-
30016	Reserved	-	-	-	-	-	-	-
40001	Operation Mode	-	-	●	-	-	●	0: Cooling / 2: Fan / 4: Heating
40002	Capacity ¹⁾	-	-	●	-	-	●	0, 2.0V~10V (x10, 0.5V)
40003	Cooling Target Temp.	-	-	●	-	-	●	16.0 °C~30.0 °C (x10, 1 °C)
40004	Heating Target Temp.	-	-	●	-	-	●	16.0 °C~30.0 °C (x10, 1 °C)
40005	Reserved	-	-	-	-	-	-	-
40006	Reserved	-	-	-	-	-	-	-
40007	Reserved	-	-	-	-	-	-	-
40008	Reserved	-	-	-	-	-	-	-
40009	Reserved	-	-	-	-	-	-	-
40010	Reserved	-	-	-	-	-	-	-
40028	Fan Speed	-	-	●	-	-	●	1 : Low / 2 : Middle / 3 : High

NOTE

- Regarding capacity ratio, you can refer to the Capacity setting table of UI7(0~10V) of PAHCMS000.

- Error Code : 1 x xxx



Modbus points of PAHCMS000

Function Code

Code	Description	Register
0x01	Read Coils	00001~00008
0x02	Read Discrete inputs	10001~10030
0x03	Read Holding Registers	40001~40010
0x04	Read Input Registers	30001~30016
0x05	Write Single Coil	00001~00008
0x06	Write Single Holding Register	40001~40028

Memory Map

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
00001	Operating On / Off	●	-	-	-	●	-	0: Off / 1: On
10001	Error Status	-	●	-	-	-	-	0: Normal / 1: Error
10002	Operation Status	-	●	-	-	-	-	0: Off / 1: On
10003	Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10011	ODU#1 Operation Status	-	●	-	-	-	-	0: Off / 1: On
10012	ODU#1 Comp. Status	-	●	-	-	-	-	0: Off / 1: On
10013	ODU#1 Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10014	ODU#1 Error Status	-	●	-	-	-	-	0: Normal / 1: Error
10015	ODU#2 Operation Status	-	●	-	-	-	-	0: Off / 1: On
10016	ODU#2 Comp. Status	-	●	-	-	-	-	0: Off / 1: On
10017	ODU#2 Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10018	ODU#2 Error Status	-	●	-	-	-	-	0: Normal / 1: Error
10019	ODU#3 Operation Status	-	●	-	-	-	-	0: Off / 1: On
10020	ODU#3 Comp. Status	-	●	-	-	-	-	0: Off / 1: On
10021	ODU#3 Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10022	ODU#3 Error Status	-	●	-	-	-	-	0: Normal / 1: Error
10023	ODU#4 Operation Status	-	●	-	-	-	-	0: Off / 1: On
10024	ODU#4 Comp. Status	-	●	-	-	-	-	0: Off / 1: On
10025	ODU#4 Defrost Status	-	●	-	-	-	-	0: Normal / 1: Defrost
10026	ODU#4 Error Status	-	●	-	-	-	-	0: Normal / 1: Error
30001	Error Code	-	-	-	●	-	-	1xxxx ²⁾
30011	RA Temp.	-	-	-	●	-	-	[°C ×10], Range: -50.0 ~ 100.0
30013	SA Temp.	-	-	-	●	-	-	[°C ×10], Range: -50.0 ~ 100.0
30031	AHU DX Coil#1 Pipe In Temp.	-	-	-	●	-	-	[°C ×10], Range: -195.0 ~ 1200.0
30032	AHU DX Coil#1 Pipe Out Temp.	-	-	-	●	-	-	[°C ×10], Range: -195.0 ~ 1200.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
30033	AHU DX Coil#1 EEV pulse	-	-	-	•	-	-	[pulse], Range: 0 ~ 1350
30034	AHU DX Coil#2 Pipe In Temp.	-	-	-	•	-	-	[°C ×10], Range: -195.0 ~ 1200.0
30035	AHU DX Coil#2 Pipe Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -195.0 ~ 1200.0
30036	AHU DX Coil#2 EEV pulse	-	-	-	•	-	-	[pulse], Range: 0 ~ 1350
30037	AHU DX Coil#3 Pipe In Temp.	-	-	-	•	-	-	[°C ×10], Range: -195.0 ~ 1200.0
30038	AHU DX Coil#3 Pipe Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -195.0 ~ 1200.0
30039	AHU DX Coil#3 EEV pulse	-	-	-	•	-	-	[pulse], Range: 0 ~ 1350
30040	AHU DX Coil#4 Pipe In Temp.	-	-	-	•	-	-	[°C ×10], Range: -195.0 ~ 1200.0
30041	AHU DX Coil#4 Pipe Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -195.0 ~ 1200.0
30042	AHU DX Coil#4 EEV pulse	-	-	-	•	-	-	[pulse], Range: 0 ~ 1350
38001	ODU#1 Master Cycle & Valve Information	-	-	-	•	-	-	Bit 9 (inverter1 preheat, 0: Off / 1: On) Bit 10 (inverter2 preheat, 0: Off / 1: On) Bit 12 (oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13 (oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38005	ODU#1 Master High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38006	ODU#1 Master Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38010	ODU#1 Master Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38011	ODU#1 Master Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38013	ODU#1 Master Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38015	ODU#1 Master Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38016	ODU#1 Master Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38017	ODU#1 Master Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38018	ODU#1 Master Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38019	ODU#1 Master Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38020	ODU#1 Master SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38022	ODU#1 Master VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38023	ODU#1 Master VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38024	ODU#1 Master Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38025	ODU#1 Master Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
38028	ODU#1 Master Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38029	ODU#1 Master Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38030	ODU#1 Master HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38031	ODU#1 Master Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38032	ODU#1 Master Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38033	ODU#1 Master SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38034	ODU#1 Master SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38035	ODU#1 Master Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38051	ODU#1 Master Instant energy consumption(High)	-	-	-	•	-	-	[W] ^{(5), (6)}
38052	ODU#1 Master Instant energy consumption(Low)	-	-	-	•	-	-	
38053	ODU#1 Master Accumulated energy consumption(High)	-	-	-	•	-	-	[Wh] ^{(5), (6)}
38054	ODU#1 Master Accumulated energy consumption(Low)	-	-	-	•	-	-	
38060	ODU#1 Master Product/Refrigerant Type	-	-	-	•	-	-	[Multi V] 2: R410A / 3: R32 [Single CAC] 10(R410A or R32)
38061	ODU#1 Master Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38062	ODU#1 Master Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38101	ODU#1 Slave1 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38105	ODU#1 Slave1 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38106	ODU#1 Slave1 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38110	ODU#1 Slave1 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38111	ODU#1 Slave1 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38113	ODU#1 Slave1 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38115	ODU#1 Slave1 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38116	ODU#1 Slave1 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38117	ODU#1 Slave1 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38118	ODU#1 Slave1 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38119	ODU#1 Slave1 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38120	ODU#1 Slave1 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38122	ODU#1 Slave1 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38123	ODU#1 Slave1 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38124	ODU#1 Slave1 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38133	ODU#1 Slave1 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38134	ODU#1 Slave1 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38135	ODU#1 Slave1 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38161	ODU#1 Slave1 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38162	ODU#1 Slave1 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38201	ODU#1 Slave2 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38205	ODU#1 Slave2 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38206	ODU#1 Slave2 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38210	ODU#1 Slave2 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38211	ODU#1 Slave2 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38213	ODU#1 Slave2 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38215	ODU#1 Slave2 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38216	ODU#1 Slave2 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38217	ODU#1 Slave2 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38218	ODU#1 Slave2 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38219	ODU#1 Slave2 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38220	ODU#1 Slave2 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38222	ODU#1 Slave2 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38223	ODU#1 Slave2 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38224	ODU#1 Slave2 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38225	ODU#1 Slave2 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
38228	ODU#1 Slave2 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38229	ODU#1 Slave2 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38230	ODU#1 Slave2 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38231	ODU#1 Slave2 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38232	ODU#1 Slave2 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38233	ODU#1 Slave2 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38234	ODU#1 Slave2 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38235	ODU#1 Slave2 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38261	ODU#1 Slave2 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38262	ODU#1 Slave2 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38301	ODU#1 Slave3 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38305	ODU#1 Slave3 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38306	ODU#1 Slave3 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38310	ODU#1 Slave3 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38311	ODU#1 Slave3 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38313	ODU#1 Slave3 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38315	ODU#1 Slave3 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38316	ODU#1 Slave3 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38317	ODU#1 Slave3 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38318	ODU#1 Slave3 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38319	ODU#1 Slave3 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38320	ODU#1 Slave3 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38322	ODU#1 Slave3 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38323	ODU#1 Slave3 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38324	ODU#1 Slave3 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38325	ODU#1 Slave3 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
38328	ODU#1 Slave3 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38329	ODU#1 Slave3 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38330	ODU#1 Slave3 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38331	ODU#1 Slave3 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38332	ODU#1 Slave3 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38333	ODU#1 Slave3 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38334	ODU#1 Slave3 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38335	ODU#1 Slave3 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38361	ODU#1 Slave3 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38362	ODU#1 Slave3 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38401	ODU#2 Master Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38405	ODU#2 Master High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38406	ODU#2 Master Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38410	ODU#2 Master Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38411	ODU#2 Master Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38413	ODU#2 Master Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38415	ODU#2 Master Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38416	ODU#2 Master Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38417	ODU#2 Master Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38418	ODU#2 Master Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38419	ODU#2 Master Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38420	ODU#2 Master SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38422	ODU#2 Master VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38423	ODU#2 Master VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38424	ODU#2 Master Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38425	ODU#2 Master Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
38428	ODU#2 Master Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38429	ODU#2 Master Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38430	ODU#2 Master HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38431	ODU#2 Master Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38432	ODU#2 Master Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38433	ODU#2 Master SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38434	ODU#2 Master SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38435	ODU#2 Master Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38451	ODU#2 Master Instant energy consumption(High)	-	-	-	•	-	-	[W] ^{[5], [6]}
38452	ODU#2 Master Instant energy consumption(Low)	-	-	-	•	-	-	
38453	ODU#2 Master Accumulated energy consumption(High)	-	-	-	•	-	-	[Wh] ^{[5], [6]}
38454	ODU#2 Master Accumulated energy consumption(Low)	-	-	-	•	-	-	
38460	ODU#2 Master refrigerant Type	-	-	-	•	-	-	[Multi V] 2: R410A / 3: R32 [Single CAC] 10(R410A or R32)
38461	ODU#2 Master Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38462	ODU#2 Master Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38501	ODU#2 Slave1 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38505	ODU#2 Slave1 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38506	ODU#2 Slave1 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38510	ODU#2 Slave1 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38511	ODU#2 Slave1 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38513	ODU#2 Slave1 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38515	ODU#2 Slave1 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38516	ODU#2 Slave1 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38517	ODU#2 Slave1 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38518	ODU#2 Slave1 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38519	ODU#2 Slave1 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38520	ODU#2 Slave1 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38522	ODU#2 Slave1 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38523	ODU#2 Slave1 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38524	ODU#2 Slave1 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38525	ODU#2 Slave1 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38528	ODU#2 Slave1 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38529	ODU#2 Slave1 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38530	ODU#2 Slave1 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38531	ODU#2 Slave1 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38532	ODU#2 Slave1 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38533	ODU#2 Slave1 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38534	ODU#2 Slave1 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38535	ODU#2 Slave1 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38561	ODU#2 Slave1 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38562	ODU#2 Slave1 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38601	ODU#2 Slave2 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38605	ODU#2 Slave2 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38606	ODU#2 Slave2 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38610	ODU#2 Slave2 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38611	ODU#2 Slave2 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38613	ODU#2 Slave2 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38615	ODU#2 Slave2 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38616	ODU#2 Slave2 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38617	ODU#2 Slave2 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38618	ODU#2 Slave2 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38619	ODU#2 Slave2 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38620	ODU#2 Slave2 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38622	ODU#2 Slave2 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38623	ODU#2 Slave2 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38624	ODU#2 Slave2 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38625	ODU#2 Slave2 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
38628	ODU#2 Slave2 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38629	ODU#2 Slave2 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38630	ODU#2 Slave2 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38631	ODU#2 Slave2 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38632	ODU#2 Slave2 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38633	ODU#2 Slave2 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38634	ODU#2 Slave2 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38635	ODU#2 Slave2 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38661	ODU#2 Slave2 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38662	ODU#2 Slave2 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38701	ODU#2 Slave3 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38705	ODU#2 Slave3 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38706	ODU#2 Slave3 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38710	ODU#2 Slave3 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38711	ODU#2 Slave3 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38713	ODU#2 Slave3 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38715	ODU#2 Slave3 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38716	ODU#2 Slave3 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38717	ODU#2 Slave3 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38718	ODU#2 Slave3 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38719	ODU#2 Slave3 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38720	ODU#2 Slave3 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38722	ODU#2 Slave3 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38723	ODU#2 Slave3 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38724	ODU#2 Slave3 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38725	ODU#2 Slave3 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
38728	ODU#2 Slave3 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38729	ODU#2 Slave3 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38730	ODU#2 Slave3 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38731	ODU#2 Slave3 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38732	ODU#2 Slave3 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38733	ODU#2 Slave3 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38734	ODU#2 Slave3 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38735	ODU#2 Slave3 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38761	ODU#2 Slave3 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38762	ODU#2 Slave3 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38801	ODU#3 Master Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38805	ODU#3 Master High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38806	ODU#3 Master Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38810	ODU#3 Master Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38811	ODU#3 Master Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38813	ODU#3 Master Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38815	ODU#3 Master Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38816	ODU#3 Master Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38817	ODU#3 Master Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38818	ODU#3 Master Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38819	ODU#3 Master Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38820	ODU#3 Master SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38822	ODU#3 Master VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38823	ODU#3 Master VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38824	ODU#3 Master Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38825	ODU#3 Master Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
38828	ODU#3 Master Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38829	ODU#3 Master Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38830	ODU#3 Master HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38831	ODU#3 Master Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38832	ODU#3 Master Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38833	ODU#3 Master SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38834	ODU#3 Master SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38835	ODU#3 Master Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38851	ODU#3 Master Instant energy consumption(High)	-	-	-	•	-	-	[W] ^{[5], [6]}
38852	ODU#3 Master Instant energy consumption(Low)	-	-	-	•	-	-	
38853	ODU#3 Master Accumulated energy consumption(High)	-	-	-	•	-	-	[Wh] ^{[5], [6]}
38854	ODU#3 Master Accumulated energy consumption(Low)	-	-	-	•	-	-	
38860	ODU#3 Master refrigerant Type	-	-	-	•	-	-	[Multi V] 2: R410A / 3: R32 [Single CAC] 10(R410A or R32)
38861	ODU#3 Master Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38862	ODU#3 Master Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38901	ODU#3 Slave1 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
38905	ODU#3 Slave1 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
38906	ODU#3 Slave1 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
38910	ODU#3 Slave1 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
38911	ODU#3 Slave1 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
38913	ODU#3 Slave1 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38915	ODU#3 Slave1 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
38916	ODU#3 Slave1 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38917	ODU#3 Slave1 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
38918	ODU#3 Slave1 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38919	ODU#3 Slave1 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38920	ODU#3 Slave1 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38922	ODU#3 Slave1 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
38923	ODU#3 Slave1 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
38924	ODU#3 Slave1 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38925	ODU#3 Slave1 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
38928	ODU#3 Slave1 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38929	ODU#3 Slave1 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
38930	ODU#3 Slave1 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38931	ODU#3 Slave1 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38932	ODU#3 Slave1 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38933	ODU#3 Slave1 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38934	ODU#3 Slave1 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38935	ODU#3 Slave1 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
38961	ODU#3 Slave1 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
38962	ODU#3 Slave1 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39001	ODU#3 Slave2 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
39005	ODU#3 Slave2 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
39006	ODU#3 Slave2 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
39010	ODU#3 Slave2 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
39011	ODU#3 Slave2 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
39013	ODU#3 Slave2 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39015	ODU#3 Slave2 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39016	ODU#3 Slave2 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39017	ODU#3 Slave2 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39018	ODU#3 Slave2 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39019	ODU#3 Slave2 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39020	ODU#3 Slave2 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39022	ODU#3 Slave2 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39023	ODU#3 Slave2 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39024	ODU#3 Slave2 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39025	ODU#3 Slave2 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
39028	ODU#3 Slave2 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39029	ODU#3 Slave2 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39030	ODU#3 Slave2 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39031	ODU#3 Slave2 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39032	ODU#3 Slave2 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39033	ODU#3 Slave2 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39034	ODU#3 Slave2 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39035	ODU#3 Slave2 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39061	ODU#3 Slave2 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39062	ODU#3 Slave2 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39101	ODU#3 Slave3 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
39105	ODU#3 Slave3 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
39106	ODU#3 Slave3 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
39110	ODU#3 Slave3 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
39111	ODU#3 Slave3 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
39113	ODU#3 Slave3 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39115	ODU#3 Slave3 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39116	ODU#3 Slave3 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39117	ODU#3 Slave3 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39118	ODU#3 Slave3 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39119	ODU#3 Slave3 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39120	ODU#3 Slave3 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39122	ODU#3 Slave3 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39123	ODU#3 Slave3 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39124	ODU#3 Slave3 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39125	ODU#3 Slave3 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
39128	ODU#3 Slave3 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39129	ODU#3 Slave3 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39130	ODU#3 Slave3 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39131	ODU#3 Slave3 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39132	ODU#3 Slave3 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39133	ODU#3 Slave3 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39134	ODU#3 Slave3 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39135	ODU#3 Slave3 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39161	ODU#3 Slave3 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39162	ODU#3 Slave3 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39201	ODU#4 Master Cycle & Valve Information	-	-	-	•	-	-	Bit 9 (inverter1 preheat, 0: Off / 1: On) Bit 10 (inverter2 preheat, 0: Off / 1: On) Bit 12 (oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13 (oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15 (defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
39205	ODU#4 Master High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
39206	ODU#4 Master Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
39210	ODU#4 Master Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
39211	ODU#4 Master Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
39213	ODU#4 Master Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39215	ODU#4 Master Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39216	ODU#4 Master Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39217	ODU#4 Master Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39218	ODU#4 Master Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39219	ODU#4 Master Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39220	ODU#4 Master SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39222	ODU#4 Master VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39223	ODU#4 Master VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39224	ODU#4 Master Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39225	ODU#4 Master Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
39228	ODU#4 Master Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39229	ODU#4 Master Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39230	ODU#4 Master HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39231	ODU#4 Master Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39232	ODU#4 Master Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39233	ODU#4 Master SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39234	ODU#4 Master SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39235	ODU#4 Master Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39251	ODU#4 Master Instant energy consumption(High)	-	-	-	•	-	-	[W] ^{[5], [6]}
39252	ODU#4 Master Instant energy consumption(Low)	-	-	-	•	-	-	
39253	ODU#4 Master Accumulated energy consumption(High)	-	-	-	•	-	-	[Wh] ^{[5], [6]}
39254	ODU#4 Master Accumulated energy consumption(Low)	-	-	-	•	-	-	
39260	ODU#4 Master refrigerant Type	-	-	-	•	-	-	[Multi V] 2: R410A / 3: R32 [Single CAC] 10(R410A or R32)
39261	ODU#4 Master Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39262	ODU#4 Master Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39301	ODU#4 Slave1 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
39305	ODU#4 Slave1 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
39306	ODU#4 Slave1 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
39310	ODU#4 Slave1 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
39311	ODU#4 Slave1 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
39313	ODU#4 Slave1 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39315	ODU#4 Slave1 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
39316	ODU#4 Slave1 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39317	ODU#4 Slave1 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39318	ODU#4 Slave1 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39319	ODU#4 Slave1 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39320	ODU#4 Slave1 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39322	ODU#4 Slave1 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39323	ODU#4 Slave1 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39324	ODU#4 Slave1 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39325	ODU#4 Slave1 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
39328	ODU#4 Slave1 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39329	ODU#4 Slave1 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39330	ODU#4 Slave1 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39331	ODU#4 Slave1 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39332	ODU#4 Slave1 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39333	ODU#4 Slave1 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39334	ODU#4 Slave1 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39335	ODU#4 Slave1 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39361	ODU#4 Slave1 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39362	ODU#4 Slave1 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39401	ODU#4 Slave2 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
39405	ODU#4 Slave2 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
39406	ODU#4 Slave2 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
39410	ODU#4 Slave2 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
39411	ODU#4 Slave2 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
39413	ODU#4 Slave2 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39415	ODU#4 Slave2 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
39416	ODU#4 Slave2 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39417	ODU#4 Slave2 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39418	ODU#4 Slave2 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39419	ODU#4 Slave2 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39420	ODU#4 Slave2 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39422	ODU#4 Slave2 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39423	ODU#4 Slave2 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39424	ODU#4 Slave2 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39425	ODU#4 Slave2 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
39428	ODU#4 Slave2 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39429	ODU#4 Slave2 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39430	ODU#4 Slave2 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39431	ODU#4 Slave2 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39432	ODU#4 Slave2 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39433	ODU#4 Slave2 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39434	ODU#4 Slave2 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39435	ODU#4 Slave2 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39461	ODU#4 Slave2 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39462	ODU#4 Slave2 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39501	ODU#4 Slave3 Cycle & Valve Information	-	-	-	•	-	-	Bit 9(inverter1 preheat, 0: Off / 1: On) Bit 10(inverter2 preheat, 0: Off / 1: On) Bit 12(oil sensor, 0: Not Detect Oil / 1: Detect Oil) Bit 13(oil sensor2, 0: Not Detect Oil / 1: Detect Oil) Bit 15(defrost, 0: Off / 1: On) * Bit numbering: Bit0 = LSB
39505	ODU#4 Slave3 High Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 7500
39506	ODU#4 Slave3 Low Pressure Trace	-	-	-	•	-	-	[kPa], Range: 0 ~ 3000
39510	ODU#4 Slave3 Superheating Trace	-	-	-	•	-	-	[°C ×10], Range: -150.7 ~ 249.5
39511	ODU#4 Slave3 Supercooling Trace	-	-	-	•	-	-	[°C ×10], Range: -267.9 ~ 177.4
39513	ODU#4 Slave3 Inverter1 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39515	ODU#4 Slave3 Inverter2 Frequency Trace	-	-	-	•	-	-	[Hz], Range: 0 ~ 255
39516	ODU#4 Slave3 Fan1 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550
39517	ODU#4 Slave3 Fan2 RPM Trace	-	-	-	•	-	-	[rpm], Range: 0 ~ 2550

Register	Description	Function Code						Value explanation
		1	2	3	4	5	6	
39518	ODU#4 Slave3 Main EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39519	ODU#4 Slave3 Sub EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39520	ODU#4 Slave3 SC EEV	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39522	ODU#4 Slave3 VI EEV1	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39523	ODU#4 Slave3 VI EEV2	-	-	-	•	-	-	[pulse], Range: 0 ~ 2040
39524	ODU#4 Slave3 Air Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39525	ODU#4 Slave3 Suction Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 200.0
39528	ODU#4 Slave3 Inverter1 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39529	ODU#4 Slave3 Inverter2 Discharge Temp.	-	-	-	•	-	-	[°C ×10], Range: -180.0 ~ 300.0
39530	ODU#4 Slave3 HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39531	ODU#4 Slave3 Upper HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39532	ODU#4 Slave3 Lower HEX Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39533	ODU#4 Slave3 SC In Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39534	ODU#4 Slave3 SC Out Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39535	ODU#4 Slave3 Liquid Temp.	-	-	-	•	-	-	[°C ×10], Range: -100.0 ~ 220.0
39561	ODU#4 Slave3 Inverter1 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
39562	ODU#4 Slave3 Inverter2 Backup	-	-	-	•	-	-	0: Not Used / 1: Used
40001	Operation Mode	-	-	•	-	-	•	0: Cooling / 2: Fan / 4: Heating
40002	Capacity ¹⁾	-	-	•	-	-	•	0: Operation Off, 20~100: 2.0~10.0V (x10, Step 5)
40003	Cooling Target Temp.	-	-	•	-	-	•	[16~30 °C (x10), 1 °C Step] ³⁾ , [12~50 °C (x10), 1 °C Step] ⁴⁾
40004	Heating Target Temp.	-	-	•	-	-	•	[16~30 °C (x10), 1 °C Step] ³⁾ , [12~50 °C (x10), 1 °C Step] ⁴⁾
40028	Fan Speed	-	-	•	-	-	•	1: Low / 2: Middle / 3: High

NOTE


- 1) Regarding capacity ratio, you can refer to the Capacity setting table of UI7(0~10V) of PAHCMS000
- 2) Error Code : 1 x yyy (x : Module Number , yyy : Error Code)
- 3) In case of connecting a wired remote controller standard II, this range of target temperature can be set.
- 4) In case of connecting a wired remote controller standard III, this range of target temperature can be set.
- 5) For the availability and use of this feature, please check with your regional sales office.
Total energy consumption = (High) value * 65536 + (Low) value (Data Type: UINT24)
- 6) The calculated power consumption is an estimation, the accuracy cannot be guaranteed.
- 7) Range indicates the valid data representation range.

CONNECTION & SETTING GUIDE

Fan & Alarm interlock guide

1 Return air temperature controller

If DO Type setting(SW 1-3) set as 'Status', fan operating signal can be interfaced with operation status signal at 'DO 1' in 'DIGITAL OUTPUT'

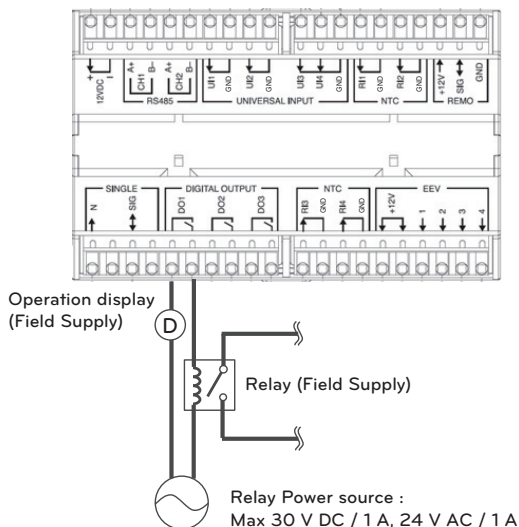


NOTE

The fan is kept 'ON' during operation, If you want to turn off the fan during TH off or defrost or control by fan speed, please refer to DIP switch setting SW1-3&SW1-4 of Comm. module.

2 Discharge air temperature controller


Fan operating signal can be interfaced with operation status signal at 'DO 2' in 'DIGITAL OUTPUT' of main module.

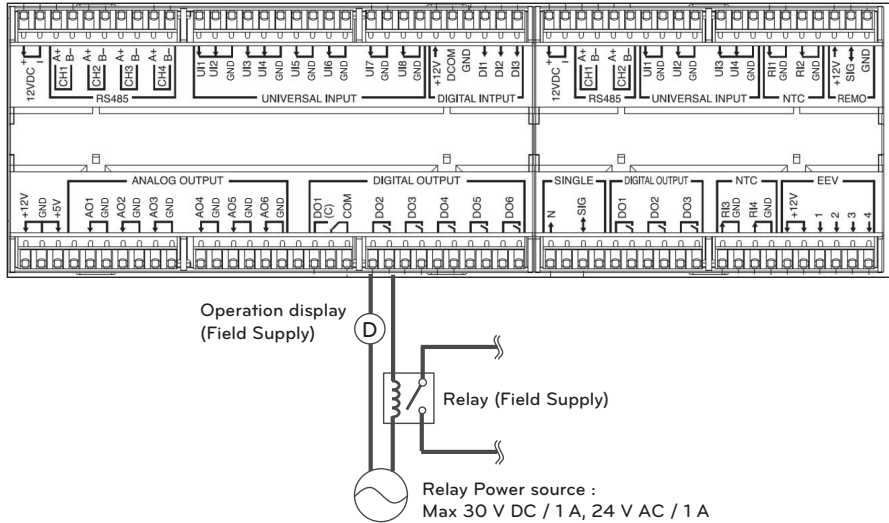

NOTE

The fan is kept 'ON' during operation, If you want to control the fan according to defrost status and fan speed, please interlock defrost signal output(Main Module DO 3) and fan speed signal output (Communication module DO 1 ~ 3).

Address setting guide(Remote controller & Central control)

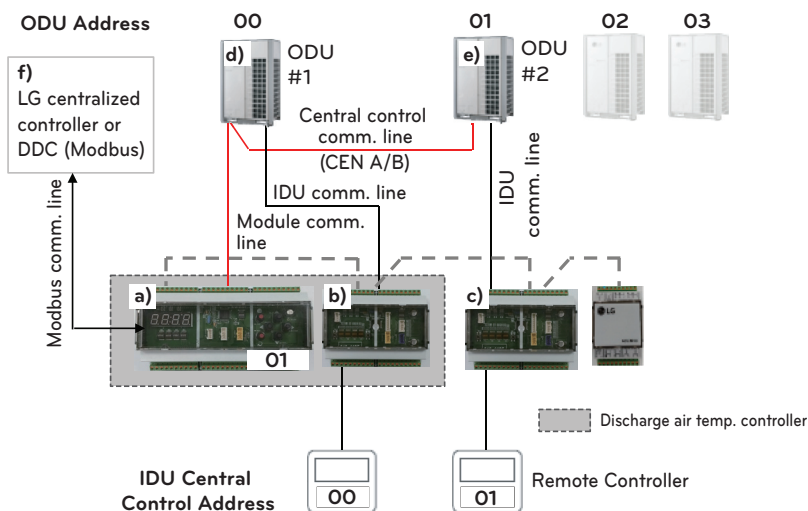

No	Contents	Address setting		Note
		Address	Method	
a)	Main module	01	By tact switch of Main module	For the Modbus communication - Please see "Main Module Address Setting"
b)	Communication module	00 (Fixed)	By remote controller	Please go to "Address Setting" of installer setting - Function code 02
c)	RA temp. controller	01 (Fixed)		
d)	Outdoor unit #1	00 (Fixed)	By tact switch of outdoor unit	The address of outdoor unit should be same as communication Module of PAHCMS000
e)	Outdoor unit #2	01 (Fixed)		
f)	LG central controller of DDC	1	By central controller's installation function	It should be matched with Main module's address


NOTE

- Remote controller should be connected to PAHCMS000 and remote controller connected to PAHCMR000 unit can only monitor status.
- LG Central controller addressing for discharge air temp. controller should be set as the same address of the main module's address.
- Address of Comm. module of PAHCMS000 (Central control address) must be set to '00'. The address for additional PAHCMR000 must be set with an order increasing by 1. Also ODU address must be the same as the paired AHU controller.
- All PAHCMR000 units need to be set as Master mode.
- Once Main module is turned on, It finds ODU from the ODU address 00→01→02→03 and finds Communication module from the IDU central controller address 00→01→02→03 and finds EEV module and then indicates total number of module. (Comm. module + EEV module)

COMMUNICATION MODULE & EEV KIT CONNECTION GUIDE

- 1 Open the EEV Kit terminal box cover (A).
- 2 Check the marked color label and connect the cable using the driver (+).
 - Example) Model PRLK594A0
 - * Electrical connection method of PRLK396A0 is the same as PRLK048 / PRLK096.

(Correct wiring)

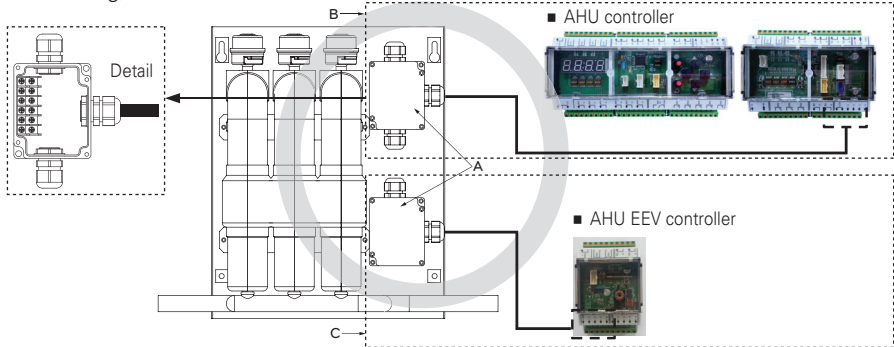


A: Terminal box cover
B: Electrical connection #1
C: Electrical connection #2

! WARNING

- Please connect one controller with one terminal block of EEV Kit. Failure to do so may result in component damage or fire. (Refer to correct wiring.)

(Incorrect wiring)


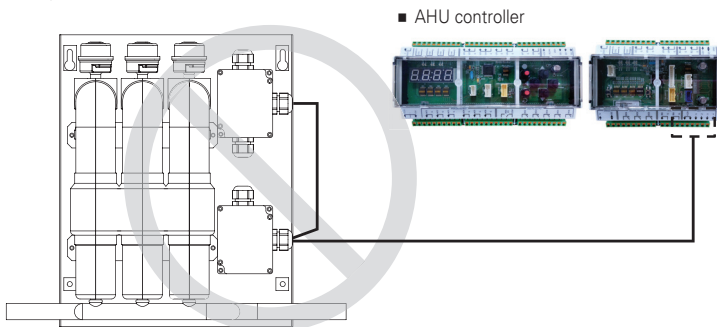


! WARNING



- Do not connect to the AHU Controller directly after wiring two terminal blocks together inside of the EEV Kit.

- 3 Use the screwdriver (+) to connect the EEV wires to the terminal block (D) according to the displayed instructions.

■ B: Electrical connection #1

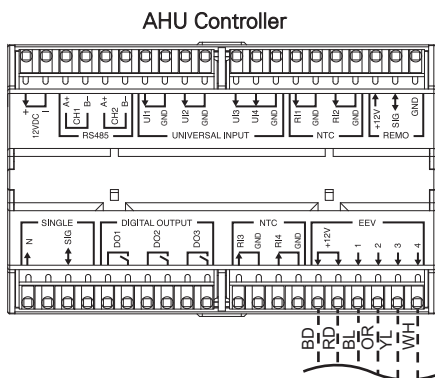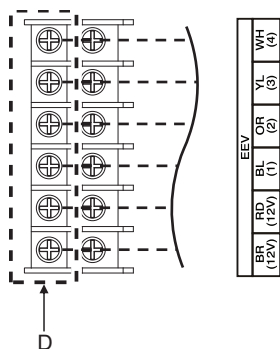

■ C: Electrical connection #2

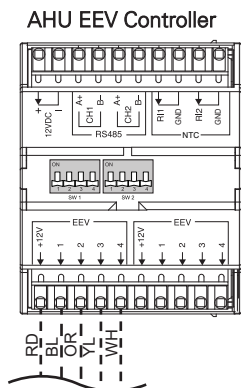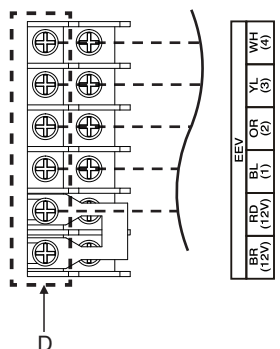

Note

BR : Brown
RD : Red
BL : Blue
OR : Orange
YL : Yellow
WH : White
---- : Field Wiring

! WARNING

- Before installation, check the color on the label and connect it to the terminal block.
- It may result in malfunction.
- Use a ring type terminal (P4) to connect to the terminal block.

COMMKIT ERRORCODE

■ AHU CommKit ErrorCode List

Sub classification of errors	Error item	Error code	Location name	Remark
CH11xxx	Comm Module #1 Alarm	CH11501	Comm Module #1 Communication Error	Communication Error between the Main Module and Comm Module #1
		CH11511	EEV Module #1 Communication Error	Communication Error between the Main Module and EEV Module #1
		CH11001	Ventilation Temperature Sensor Error (Resistance Type)	The ventilation temperature sensor is disconnected or short-circuited.
		CH11002	Inlet Pipe Temperature Sensor Error (Resistance Type)	The inlet pipe temperature sensor is disconnected or short-circuited.
		CH11003	Remote Control Communication Defect	If the communication between the Comm Module #1 and the remote control is not established smoothly
		CH1006	Outlet Pipe Temperature Sensor Error (Resistance Type)	The outlet pipe temperature sensor is disconnected or short-circuited.
		CH1xxx	Outdoor Unit #1 Error	Refer to the outdoor unit (LGAP) error.
		Others	Reserved	Reserved
CH12xxx	Comm Module #2 Alarm	CH12501	Comm Module #2 Communication Error	Communication Error between the Main Module and Comm Module #2
		CH12511	EEV Module #2 Communication Error	Communication Error between the Main Module and EEV Module #2
		CH12001	Ventilation Temperature Sensor Error (Resistance Type)	The ventilation temperature sensor is disconnected or short-circuited.
		CH12002	Inlet Pipe Temperature Sensor Error (Resistance Type)	The inlet pipe temperature sensor is disconnected or short-circuited.
		CH12003	Remote Control Communication Defect	If the communication between the Comm Module #2 and the remote control is not established smoothly
		CH12006	Outlet Pipe Temperature Sensor Error (Resistance Type)	The outlet pipe temperature sensor is disconnected or short-circuited.
		CH12xxx	Outdoor Unit #2 Error	Refer to the outdoor unit (LGAP) error.
		Others	Reserved	Reserved



Manufacturer :
LG Electronics Inc 84,
Wanam-ro, Seongsan-gu, Changwon-si, Gyeongsangnam-do, KOREA

UK Importer :
LG Electronics U.K. Ltd
Velocity 2, Brooklands Drive, Weybridge, KT13 0SL