



KM710 使用手冊

繁體中文
簡體中文
ENGLISH

KM710

LG ELECTRONICS INC.

MMBB0294306 (1.1) W

CE 0168

www.lgmobile.com

Bluetooth QD ID B013750



此手冊中的部份內容可能會因
手機軟件或服務供應商而有所
不同。

KM710 使用手冊

恭喜您買了 LG 先進輕巧的 KM710 手機，
本手機專為利用最新的數字流動通訊科技而
設計。

Gracenote® 終止使用者授權協議

版本 20061005

此應用程式及設備包括由加利福尼亞、Emeryville 的 Gracenote, Inc.(“Gracenote”)所提供的軟體。Gracenote (the「Gracenote Software」)所提供的軟體使此應用程式可辨認光碟及/或檔案並從在線伺服器或內建數據庫中獲取音樂相關的資訊，包括名稱、演出者、曲目及標題資訊(「Gracenote 數據」)(共同地，「Gracenote 伺服器」)並執行其他功能。您僅可將 Gracenote 數據用於此應用程式及設備本身的終端使用者功能。

您同意將以個人目的使用 Gracenote 數據、Gracenote 軟體、及 Gracenote 伺服器，絕無任何商業目的。您同意不會指定、複製、傳輸或傳送 Gracenote 軟體或任何 Gracenote 數據至任何第三方。您同意不會使用或利用 GRACENOTE 數據、GRACENOTE 軟體或 GRACENOTE 伺服器，除非在此獲得明確許可。

您同意您使用 Gracenote 數據、Gracenote 軟體及 Gracenote 伺服器的非專一授權將在您違反以上限制時終止。如果您的授權終止，您同意停止任何及所有對於 Gracenote 數據、Gracenote 軟體及 Gracenote 伺服器的使用。Gracenote 保留對於 Gracenote 數據、Gracenote 軟體及 Gracenote 伺服器的所有權力，包括全部所有權。在任何情況下，Gracenote 都無需為您所提供的資訊向您支付款項。

您同意 Gracenote, Inc. 使用其本身的名字，增強其在此協議中針對您的權力。

Gracenote 伺服器使用特殊的識別項，為統計目的追蹤請求。

隨機指定的數字識別項的目的為允許 Gracenote 伺服器技數請求，而不會了解有關您的任何資訊。若要了解更多資訊，請檢閱 Gracenote 伺服器的 Gracenote 隱私政策。

Gracenote 軟體及 Gracenote 數據的每個項目 授權予您。不論來自 Gracenote 伺服器的任何 Gracenote 數據的準確性如何，Gracenote 不會承擔任何責成或作出任何保證(不論是明示或隱含的)。Gracenote 保留從 Gracenote 伺服器或要進行更改的數據類目中刪除數據的權利，只要 Gracenote 理由充足即可。並沒有提供 Gracenote 軟件或 Gracenote 伺服器零錯誤的保證。也沒有提供 Gracenote 軟件或 Gracenote 伺服器的功能不會受干擾的保證。Gracenote 沒有義務為您提供 Gracenote 未來或會提供的新增強的或附加數據類型或分類，並可隨時終止服務。

GRACENOTE 不承諾任何明示或隱含的保用、包括但不限於，隱含的購買保用、符合某個特定目的、標題、及無違反。GRACENOTE 並不保證使用 GRACENOTE 軟體或任何 GRACENOTE 伺服器將獲得結果。GRACENOTE 在任何情況下，都不為偶發性或後果性損壞或任何利益損失或收入損失負責。

© Gracenote 2006

設定 01

備用屏幕 02

基本功能 03

自製功能 04

管理功能 05

網絡功能 06

設定 07

配件 08

內容

01 設定

了解您的手機.....	9
安裝智能咭和電池.....	11
記憶咭.....	13
功能總覽.....	14

02 備用屏幕

您的備用屏幕.....	15
狀態列.....	15
導航輪盤和觸控板.....	16
主功能表.....	16

03 基本功能

通話.....	17
撥打電話.....	17
透過通訊錄撥打電話.....	17
接聽來電和拒接來電.....	17
通話中選項.....	18
快速撥號.....	19
檢視通話記錄.....	19
使用來電轉接.....	20
使用通話限制.....	20
變更通話設定.....	21

通訊錄.....	22
搜尋通訊錄.....	22
新增通訊錄.....	22
通訊錄選項.....	22
新增通訊錄至群組.....	23
重新命名群組.....	23
新增圖片至通訊錄.....	24
將通訊錄複製到智能咭.....	24
刪除所有通訊錄.....	24
檢視資訊.....	24
訊息.....	25
訊息.....	25
發送訊息.....	25
輸入文字.....	25
訊息資料夾.....	26
管理訊息.....	26
使用範本.....	27
變更文字訊息設定.....	27
變更多媒體訊息設定.....	28
變更其他設定.....	28

04 自製功能

相機.....	29
快速拍照.....	29
拍攝照片後.....	29
使用工具列選項.....	29
變更圖片大小.....	30
檢視已儲存照片.....	30
將照片設為牆紙或來電相片.....	30
視像攝錄機.....	31
拍攝影片.....	31
錄製影片後.....	31
使用工具列選項.....	31
觀看已儲存影片.....	32
檢視影片時調節音量.....	32
我的檔案.....	33
圖像.....	33
圖像選項功能表.....	33
發送照片.....	33
管理圖像.....	34
刪除圖像.....	34
刪除多個圖像.....	34
建立幻燈片放映.....	34
聲音.....	34
使用聲音.....	35
影片.....	35
觀看影片.....	35

在暫停影片時使用選項.....	35
發送錄像片段.....	35
使用影片選項功能表.....	36
其他.....	36
遊戲及應用程式.....	36
玩遊戲.....	36
使用遊戲選項功能表.....	36
外置記憶體.....	36
將手機用作大型儲存裝置.....	37
傳送檔案至手機.....	37
多媒體.....	38
音樂.....	38
將音樂傳送至手機.....	38
播放歌曲.....	39
播放音樂時使用選項.....	39
建立播放列表.....	39
播放我的播放列表.....	39
編輯播放列表.....	40
刪除播放列表.....	40
使用收音機.....	41
搜尋電台.....	41
重設頻道.....	41
收聽電台.....	41
語音備忘錄.....	42
發送錄音.....	42
Muvee.....	42

內容

05 管理功能

記事簿/工具	43
新增事件至日曆	43
編輯日曆事件	43
共用日曆事件	43
新增備忘錄	44
新增項目至待辦事項列表	44
設定鬧鐘	44
使用計算機	45
使用秒錶	45
轉換單位	45
新增城市至世界時間	45
使用智能咭服務	45

06 網絡功能

網絡功能	46
存取網絡	46
新增並存取書籤	46
儲存網頁	47
存取已儲存的頁面	47
檢視瀏覽器記錄	47
變更網頁瀏覽器設定	47

07 設定

設定	48
個人化情景模式	48
變更屏幕設定	48
變更電話設定	49
變更連接設定	49
使用藍芽發送和接收檔案	50
同其他藍芽裝置配對	51
使用藍芽耳機	51
變更安全設定	51

08 配件

配件	52
網絡服務	53
技術數據	53
標準	53
環境溫度	53
安全及有效使用的指引	55

了解您的手機

關閉/電源鍵

結束或拒接通話。
開啓 / 關閉手機。
按一下可返回
備用屏幕。

清除鍵

每按一下就刪除一
個字元。使用此鍵
回到前一個畫面。

主屏幕

導航輪盤

- 備用模式

 訊息

 通訊錄列表


 情景模式

 最愛

- 功能表：導覽功
能表

通話鍵

撥打電話號碼及接聽來電。

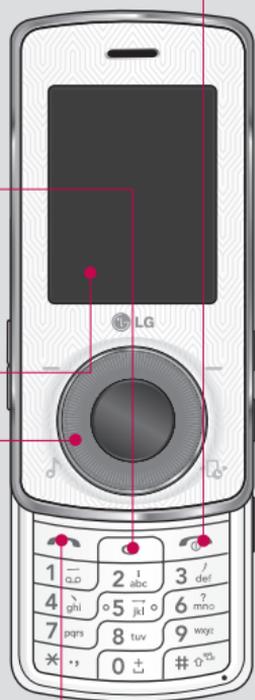

音量鍵

充電器、USB線、免提
耳機插孔



相機鍵

01

02

03

04


05

06

07

08

了解您的手機

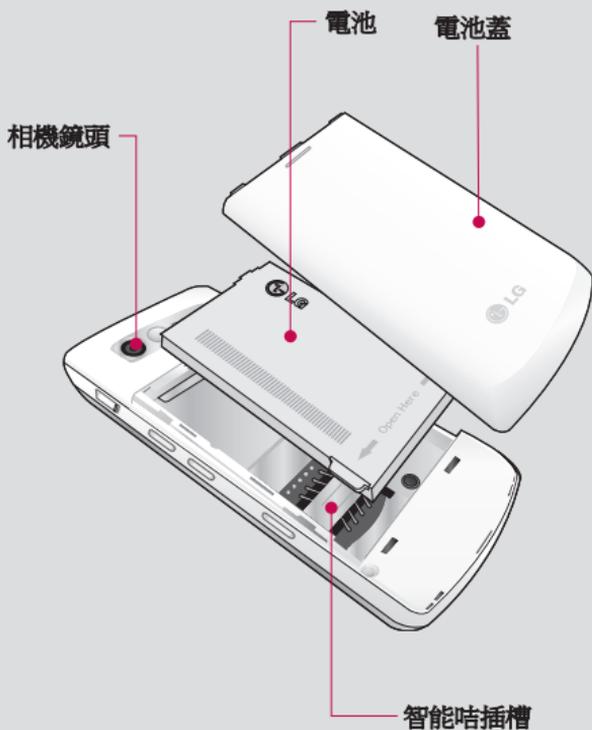

安裝智能咭和電池



1 移除電池蓋

推動手機底部的電池蓋並取下。


警告：請勿使用指甲取出電池。

警告：手機開機時，不要取下電池，因為這樣會損壞手機。



2 取出電池。

抬起電池的側邊緣，小心將其從電池格中取出。

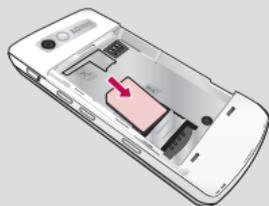

3 安裝智能咭

將智能咭滑入智能咭插槽。請確保智能咭上的金屬接觸區面向下方。要取下智能咭，請向相反方向輕輕拉出。

01

02

03

04


05

06

07

08

安裝智能咕和電池

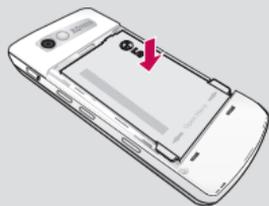


4 安裝電池

將電池頂部插入電池格上方邊緣。請確保電池觸點對準手機觸點。將電池的底部壓入定位。



5 合上電池蓋

向手機頂部滑入電池蓋，直到卡緊為止。

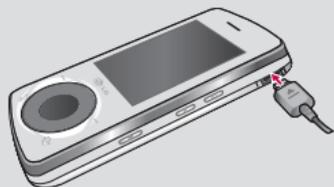

6 為手機充電

推動 KM710 側面的充電器插槽蓋。插入充電器並插入電源插座。為您的 KM710 手機充電，直至屏幕上顯示「電池已滿」訊息。

記憶咭

安裝記憶咭

使用記憶咭，擴展手機可使用的記憶體空間。

插入記憶咭時，將其滑入側邊的插槽，直到卡緊為止，並確保金屬接觸區面向上方(如圖示)。



01

02

03

04

05

06

07

08

功能總覽



遊戲及應用功能

- 1 遊戲
- 2 應用程式
- 3 網絡設定



通話記錄

- 1 所有通話
- 2 未接來電
- 3 已撥通話
- 4 已接來電
- 5 通話時間
- 6 通話費用
- 7 數據資訊



記事簿

- 1 日曆
- 2 備忘錄
- 3 待辦事項



多媒體

- 1 相機
- 2 視像攝錄機
- 3 Muvee
- 4 FM 收音機
- 5 語音備忘錄



訊息

- 1 新訊息
- 2 收件匣
- 3 電郵信箱
- 4 藍芽訊息
- 5 草稿
- 6 寄件匣
- 7 已發送
- 8 收聽留言信箱
- 9 資訊廣播
- 0 常用範本
- * 設定



我的檔案

- 1 圖像
- 2 聲音
- 3 影片
- 4 其他
- 5 遊戲及應用功能



情景模式

- 1 標準
- 2 靜音
- 3 震動
- 4 戶外
- 5 耳機



通訊錄

- 1 搜尋
- 2 新增通訊錄
- 3 快速撥號
- 4 群組
- 5 複製全部
- 6 刪除全部
- 7 設定
- 8 資訊



工具

- 1 鬧鐘
- 2 計算機
- 3 貼士計算機
- 4 秒錶
- 5 單位轉換器
- 6 世界時間



瀏覽器

- 1 主頁
- 2 Google
- 3 書籤
- 4 輸入網址
- 5 記錄
- 6 已儲存網頁
- 7 設定
- 8 資訊



MP3 播放器

- 1 所有歌曲
- 2 我的播放列表
- 3 演出者
- 4 影集
- 5 類型
- 6 隨機播放全部音樂



設定

- 1 日期及時間
- 2 語言
- 3 顯示
- 4 捷徑
- 5 觸控板
- 6 連接
- 7 通話
- 8 安全
- 9 飛航模式
- 0 省電模式
- * 恢復原廠設定
- # 記憶體狀態

您的備用屏幕

狀態列

狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池電量等情況，亦告訴您藍芽是否已啟動。

下表說明可能在狀態列中看到的圖示的含義。

圖示	說明
	網絡訊號強度（列數會有變化）
	無網絡訊號
	電池電量
	電池已耗盡
	新文字訊息
	新語音訊息
	訊息收件匣已滿
	新文字+語音訊息
	鬧鐘已設定

圖示	說明
	正在使用震動情景模式
	正在使用標準情景模式
	正在使用戶外情景模式
	正在使用靜音情景模式
	正在使用耳機情景模式
	通話線路已轉接
	可使用 GPRS
	可使用 EDGE
	漫遊
	已選擇飛航模式
	藍芽

01

02

03

04

05

06

07

08

您的備用屏幕



導航輪盤和觸控板

您可以使用導航輪盤更輕鬆地選擇功能表和功能。從主功能表，選擇設定，然後選擇觸控板。您可從此處開啓或關閉震動，然後選擇觸控板靈敏度。

主功能表

主功能表提供十二個功能表選項。

- 1 選擇功能表。
- 2 按導航輪盤或滾動導航輪盤選擇所需的**功能表**選項。
- 3 選定所需的**選項**後，按OK開啓。

通話

撥打電話

- 1 使用鍵盤輸入號碼。
要刪除數字，請按 **C**。
- 2 按  鍵開始通話。
- 3 要結束通話，請按  鍵。

提示！ 若要在撥打國際電話時輸入 +，請按住 **0**。

透過通訊錄撥打電話

- 1 按  鍵，開啓通訊錄。
- 2 使用鍵盤輸入要通話聯絡人的首個字母。例如 Office，請按三次 **6**。
- 3 選擇通訊錄及其不同的電話號碼，請使用  和  。
- 4 按  鍵開始通話。

接聽來電和拒接來電

手機響鈴後，按  鍵接聽來電。
當電話鈴聲響起，開啓手機或按下相機按鍵，然後選擇**靜音**以靜音鈴聲。如果在開會時忘記將情景模式變更為「靜音」，此功能將十分有用。
按  鍵拒接來電。

提示！ 您可變更手機上的設定，從而採用不同的方式接聽來電。按  或 ，然後選擇  及 **通話**。選擇**接聽模式**，並從**推開滑蓋**、**按任意鍵**或**按發送鍵**中選擇。

01

02

03

04

05


06

07

08

通話

通話中選項

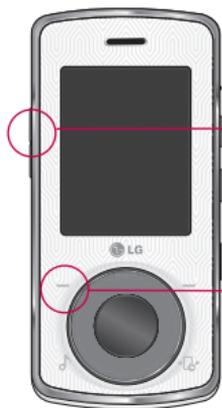

調節通話音量

要在通話中調節音量大小，可按手機左側的音量鍵。

選項 - 從通話選項列表中進行選擇，包括通訊錄和**訊息**，這樣您就可以在通話中查看訊息並新增通訊錄。

快速撥號

您可為常撥聯絡人指定一個快速撥號號碼。

- 1 按  或 ，然後選擇 。
- 2 選擇**快速撥號**。
- 3 您的語音信箱設定至快速撥號 1。您無法變更。使用  和  按鍵，並按  選擇**指定**，選擇通訊錄的號碼。
- 4 通訊錄將開啓。選擇要指定到此號碼的聯絡人，使用  和  鍵，然後選擇**確定**。

要撥打快速撥號號碼，請按住指定的號碼，直到電話號碼在屏幕上。手機將自動撥出，而沒有必要按 。

檢視通話記錄

按  或  並選擇  以檢視以下選項：

所有通話 - 檢視所有已撥、已接和未接來電的完整列表。

未接來電 - 檢視所有未接來電的列表。

已撥通話 - 檢視所有已撥出通話的列表。

已接來電 - 檢視所有已接聽來電的列表。

通話時間 - 檢視通話時間詳情。

提示！ 從任何通話記錄，選擇「選項」和刪除以刪除所選或全部記錄項目。

提示！ 使用  和 ，選擇任何單個通話項目，檢視通話的日期、時間和通話時間。要檢視通話時間，請選擇「選項」和**檢視**。

通話

使用來電轉接

- 1 按  或 ，選擇 ，然後選擇 **通話**。
- 2 選擇**來電轉接**。
- 3 可選擇所有語音通話、線路繁忙時、無人接聽時、無網絡或關機時、所有數據通話或所有傳真通話。
- 4 選擇**啟用**並選擇是否轉到其他號碼或最愛號碼。
- 5 輸入您的轉接號碼，或選擇搜尋瀏覽您的通訊錄。

備註：轉接電話需要收費。請聯絡網絡供應商，了解詳情。

提示！ 要關閉所有通話轉接，請從**來電轉接**功能表中選擇**取消全部**。

使用通話限制

- 1 按  或 ，選擇  並選擇**通話**。
- 2 選擇**通話限制**。
- 3 選擇以下七個選項中的其中一個：
 - 所有撥出通話**
 - 國際撥號**
 - 撥打本地以外的國際通話**
 - 所有來電**
 - 國際漫遊時來電**
 - 取消所有限制通話**
 - 更改密碼**
- 4 選擇**啟用**並輸入通話限制密碼。請向您的網絡商查詢這項服務。

提示！ 從**安全**功能表中選擇**固定撥號號碼**，開啓並編譯可從此手機呼叫的號碼列表。您需要從您的網絡商處得到一個 PIN2 碼。啓用後，僅固定撥號列表中包含的號碼可從手機呼叫。

變更通話設定

1 按  或 ，選擇  並選擇**通話**。

2 您可從此處修改以下選項的設定：

來電轉接 - 選擇是否轉接您的通話。

通話限制 - 選擇您想要何時限制通話。

接聽模式 - 選擇是使用推開滑蓋、按任意鍵或按發送鍵來接聽來電。

發送我的號碼 - 選擇撥出通話時，是否顯示您的號碼。

來電等候 - 有來電等候時，手機會提示您。

分鐘提示 - 選擇**開啓**後，您便可在通話時聽到分鐘提示音。

自動重撥 - 選擇**開啓**或**關閉**。

關閉用戶群組 - 可選擇**預設**、**開啓**或**關閉**。

選擇線路 - 可選擇線路1或線路2。
(需網絡供應商和智能咭支援)

傳送DTMF - 選擇**開啓**或**關閉**。

通訊錄

搜尋通訊錄

按  或 ，選擇  並選擇 **搜尋**。

或者，使用輕微更快捷的方法...

- 1 在備用螢幕上，按 。
- 2 輸入要通話聯絡人的首個字母。
- 3 選擇通訊錄中其不同的電話號碼，請使用  和 。

新增通訊錄

- 1 按  或 ，選擇 ，然後選擇 **新增通訊錄**。
- 2 選擇在**手機**或**智能咭**上儲存新聯絡人。
- 3 輸入您所擁有的所有資訊，然後選擇**儲存**。

或者，使用輕微更快捷的方法...

- 1 從備用屏幕中輸入要儲存的號碼，並選擇**選項**，然後選擇儲存到新通訊錄。
- 2 根據以上操作，輸入相關資訊，然後選擇**儲存**。

備註：當要儲存聯絡人電郵地址時，請按  輸入符號，並按  和 ，直到您看到 @。

通訊錄選項

您可在檢視通訊錄時進行多項操作。以下是存取和使用選項功能表的方式：

- 1 開啟您要使用的聯絡人。參閱以上的**搜尋聯絡人**。
- 2 按  開啟選項列表。
在此處您可以：

檢視 - 您可檢視名稱和號碼。

編輯 - 變更任何聯絡人的詳細資料。

撥號 - 您可撥號給聯絡人。

新訊息 - 您可選擇文字和多媒體。

發送方式 - 以名片方式向他人發送聯絡人的詳細資料。選擇以**文字訊息**、**多媒體訊息**，通過**藍芽**或使用**電郵發送**。

透過藍芽發送所有通訊錄 - 您可以透過藍芽發送所有通訊錄。

刪除 - 刪除聯絡人。確定後，選擇「確定」或按 。

新增通訊錄 - 新增聯絡人。

多方刪除 - 您可以多方刪除。

複製到智能咭/手機 - 選擇複製到智能咭/手機 (視乎通訊錄位置)

新增通訊錄至群組

您可將聯絡人分類至群組中，例如，將工作同事和家庭成員分開。手機上存在很多已設定好的群組，包括家庭、朋友、同事和貴賓。

- 1 按  或 ，選擇  並選擇群組。
- 2 選擇要在其中新增聯絡人的群組，並選擇**新增成員**。
- 3 您的通訊錄將開啓。選擇要將其新增至群組中的任何聯絡人，並依次選擇**選項**、**全部標記**（或僅按 ）及**完成**。

提示！ 您可為群組指定鈴聲或圖示。選擇要為其指定鈴聲或圖示的群組，並選擇「選項」及所需的項目。

重新命名群組

您可重新命名任何群組，以符合您的生活方式要求。

- 1 按  或 ，選擇  並選擇**群組**。
- 2 選擇要重新命名的群組。
- 3 選擇「選項」，再選取**重新命名**，並輸入您的新群組名稱。
- 4 選擇**儲存**。

注意：您只能將聯絡人指定到群組中，或將圖片新增至已儲存在手機（不是智能咭）記憶體中的聯絡人。

通訊錄

新增圖片至通訊錄

您可變更通訊錄中聯絡人的外觀，使其包含圖片。

- 1 按  或 ，選擇  並選擇**設定**。
- 2 選擇**檢視選項**，並選擇**附圖片**。
- 3 然後返回通訊錄，並選取要將照片新增至其中的聯絡人。
- 4 選擇「選項」，然後選擇**編輯**。
- 5 向下按至相片部分。
選擇「選項」，並選擇**新圖片**。
您的相機取景器將開啓，這樣，您可拍攝聯絡人圖片。或者您可以從**圖像**檔案中選擇圖片。

將通訊錄複製到智能咭

您可選擇在手機和智能咭之間複製聯絡人。

- 1 按  或 ，選擇  和**複製全部**。
- 2 選擇從**智能咭至手機**或**手機至智能咭**複製聯絡人。
- 3 選擇保留原始號碼，或刪除原始號碼。

刪除所有通訊錄

- 1 按  或 ，選擇  並選擇**刪除全部**。
- 2 選擇從**智能咭**或**手機**中刪除聯絡人。
- 3 選擇是然後確定。

檢視資訊

按  或 ，選擇  並選擇**資訊**。

從這裡您可以檢視**服務撥號號碼**，您的**個人號碼**及**我的名片**。

提示！ 如果您尚未建立名片，**我的名片** 屏幕將為您提供建立名片的選項。選擇**新增**，並輸入要為任何聯絡人提供的詳情。選擇**儲存**。

訊息

訊息

KM710 手機集文字訊息、多媒體訊息、電郵和藍芽訊息於簡單易用的功能表中。只需要按下  或  並選擇 .

發送訊息

快速開始發送文字訊息的方法是，按  從備用屏幕中並直接進入以下步驟4。或者：

- 1 按  或 ，選擇 ，然後選擇**新訊息**。
- 2 選擇發送**文字、多媒體、電郵或藍芽訊息**。
- 3 新訊息將開啓。
- 4 使用 T9 模式或 Abc 模式輸入訊息內容。
參閱**輸入文字**，了解如何在不同的文字輸入模式間切換。
- 5 選擇「選項」並選取**插入**以新增圖像、動畫、聲音、符號、文字範本、表情圖示或名稱和號碼。
- 6 選擇「選項」並選取**發送至**或僅按下 .
- 7 輸入電話號碼，或選擇「選項」並選取**通訊錄**以開啓您的通訊錄列表。您可以選擇多個聯絡人。
- 8 選擇「選項」並選取**發送**或僅按下 .

輸入文字

有兩種方法輸入文字：
T9 模式、Abc 模式。

要開啓 T9 模式，開始新訊息，請選擇「選項」，並選擇**設定 T9**和**開啓**。開啓 T9 後，透過按 ，您可在 T9 模式、Abc 模式和數字之間切換。(編寫語言會影響輸入文字)。

T9 模式

T9 模式使用內置字典，識別根據按按鍵順序寫入的單字。只需點按與要輸入字母關聯的數字按鍵，字典便可識別要輸入的單字。例如，按 8、3、5、3、7、4、6、6、3 可得到「telephone」。

如果所需的單字沒有出現，請選擇「選項」並選擇**新 T9 文字**。使用 Abc 模式輸入單字，而且您的單字或名稱將新增到字典中。

Abc 模式

在 Abc 模式下，您必須重複按按鍵，才能輸入字母。例如，要寫入「hello」，請按 4 兩次、3 兩次、5 三次、5 又三次，然後按 6 三次。

 **警告：** 您將按收件者每則文字訊息 160 字元計費。

01

02

03

04

05

06

07

08

訊息

訊息資料夾

按  或 ，選擇 。由於各資料夾的名稱相當清楚，您可輕鬆辨識用於 KM710 的資料夾結構。

收件匣 - 收到的所有訊息將置於您的收件匣中。您可從此處進行回覆、轉寄等操作，詳情請見管理訊息。

電郵信箱 - 包含您的所有電郵訊息。

藍芽訊息 - 藍芽訊息資料夾包含藍芽訊息資料夾。

草稿 - 若不夠時間完成訊息，您可將寫完的部份儲存於此處。

寄件匣 - 這裡是發送中的訊息之臨時存放資料夾。

已發送 - 所有已發送的訊息將置於您的已發送資料夾中。

資訊廣播 - 從網絡商接收到的所有資訊廣播和更新。

常用範本 - 已編寫好的有用訊息列表，以便快速回覆。

透過選擇**收聽留言信箱**，您亦可從此處存取留言；透過選擇**設定**，您可存取訊息設定。

管理訊息

您可使用收件匣來管理您的訊息。

1 按下  或 ，依次選擇  和**收件匣**。

2 選擇「選項」然後選擇：

檢視 - 檢視所選訊息。

刪除 - 刪除所選訊息。

回覆 - 回覆所選訊息。

轉寄 - 將所選訊息發送給他人。

回撥電話 - 向您的寄件者致電。

儲存號碼 - 您可選擇新增通訊錄或更新通訊錄。

資訊 - 檢視訊息的詳情，例如，訊息發送時間。

多方刪除 - 刪除所選訊息。

刪除全部已讀訊息 - 所有已開啓的訊息將被刪除。

刪除全部 - 您可選擇是否刪除全部訊息。

看到**無足夠空間儲存智能咭訊息**這則訊息時，請從收件匣中刪除部份訊息。

看到**無足夠空間儲存訊息**這則訊息時，您可透過刪除訊息或已儲存的檔案來釋放空間。

使用範本

您可為經常發送的文字和多媒體訊息建立範本。手機上已存有部份範本，您可根據需要對其進行編輯。

- 1 按下  或 ，依次選擇  和常用範本。
- 2 選擇**文字範本**或**多媒體範本**。然後，您可選擇**選項**並選擇**編輯**以變更現有範本，或選擇「**選項**」新增**新範本**或**刪除**範本。
- 3 要發送範本，請選擇要發送的範本，並選擇「**選項**」及**發送方式**。
- 4 選擇如何發送範本，透過文字訊息、多媒體、藍芽訊息或電郵。
- 5 選擇「**選項**」和發送至（或僅按 ）。

變更文字訊息設定

您的 KM710 已預先定義訊息設定，以便您可立即發送訊息。

如要變更設定，請參閱下方說明以了解詳情。

按  或 ，選擇 ，然後選擇**設定**和**文字訊息**。您可對以下各項進行變更：

訊息類型 - 將文字轉換為語音、傳真、傳呼、X.400、電郵或ERMES。

有效期 - 選擇訊息要在訊息中心中保留多久。

發送報告 - 選擇是否要就已發送的訊息接收確認訊息。

回覆收費 - 選擇是否為訊息收件者回覆支付費用。

訊息中心號碼 - 為您的訊息中心輸入詳細資料。

字元編碼 - 選擇字元的編碼方式。這將影響到您的訊息大小，進而影響數據費用。

訊息

變更多媒體訊息設定

您的 KM710 已預先定義訊息設定，以便您可立即發送訊息。

如要變更設定，請參閱下方說明以了解詳情。

按  或 ，選擇 ，然後選擇**設定**和**多媒體訊息**。

您可對以下各項進行變更：

主題- 多媒體訊息中包括主題欄位。

投影片播放時間- 選擇投影片在屏幕上的顯示時間。

發送時間- 選擇發送每條訊息的間隔時間。

重要性- 選擇多媒體訊息的優先等級。

有效期- 選擇訊息要在訊息中心中保留多久。

發送報告- 選擇是否要求或允許發送報告。

讀取報告- 選擇是否要求或允許讀取回覆。

自動下載- 選擇自動或手動下載多媒體訊息，具體取決於您是身在本地網路還是漫遊網絡。

網絡設定- 為發送多媒體訊息選擇網絡商特定的網絡設定檔。

允許訊息類型- 選擇允許接收多媒體訊息的寄件者類型。

變更其他設定

按  或 ，選擇 ，再依次選擇**設定**及以下選項：

電郵- 設定您的電郵帳號、選擇您的接入點及擷取間隔，及添加簽名。

留言信箱號碼- 您的留言號碼儲存於此處。聯絡網絡商，了解他們提供服務的更多詳情。

服務訊息- 您可在此處關閉服務訊息，這意味著收到訊息後，訊息不會被直接出現在手機中，而僅在您檢查是否有新訊息時才會出現在手機中。

資訊廣播- 檢視從網絡商接收到的所有資訊廣播和更新。

相機

快速拍照

- 1 長按手機右側的  鍵，相機的取景器會顯示在屏幕上。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 按下  或按手機右側的  鍵，拍攝照片。

拍攝照片後

拍攝的照片會顯示在屏幕上。圖像的名稱會顯示在屏幕的底部。

選擇右側的一個子功能表，您可在其中拍攝新照片，將圖像設為**牆紙**或**來電相片**，查看相簿中的其他照片，或以多媒體訊息、藍芽方式或電郵方式發送照片。若要返回相機，請按住 **C**。

使用工具列選項

選擇「選項」後，手機會在取景器屏幕的底部顯示一個新的選項工具列。

解像度 - 請參閱第 30 頁的變更圖片大小。

質量 - 在**標準**、**細緻**和**特細緻**之間選擇。質量越細緻，圖片便越清晰，但佔用的檔案空間會增大。從而在記憶體中儲存的照片會相應減少。

快門提示音 - 從三種快門聲音中選擇一種。

儲存到 - 您可儲存到手機或外置記憶體。

恢復原廠設定 - 選擇是將手機重設至原始相機設定。

在取景器屏幕下，按下  或  將會向您顯示以下子功能表。

自拍時計 - 延遲計時器讓您設定按拍攝按鈕後的延遲時間。可供選擇的選項為：**3 秒**、**5 秒**或**10 秒**。當您要加入拍攝的群組照片中時，此選項十分有效。

繼續拍攝 - 此功能可讓您選擇拍攝模式。連拍模式尤適用於拍攝移動物體或體育賽事。

白平衡 - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從以下選項中選擇：**自動**、**夜間模式**、**日光**、**白熱光**、**陰天**或**日光燈**。

色彩效果 - 從以下四種選項中選擇：**關閉**（標準/色彩）、**深褐色**、**黑白**（黑色和白色）或**底片**。

EV - 此功能可讓您調整曝光值。

01

02

03

04

05

06

07

08

相機

變更圖片大小

變更照片大小，以節省記憶體空間。像素越高，檔案大小越大，從而佔據的記憶體空間便越多。若要使手機儲存更多的照片，請變更圖片像素，以縮小檔案大小。

- 1 選擇**選項**，並從工具列上**選擇解像度**。
- 2 從以下五個選項中選擇像素值：
(320X240、640X480、1280X960、1600X1200、2048X1536。)
- 3 選擇要使用的大小並選擇**確定**。設定功能表將自動關閉，返回上一頁。

檢視已儲存照片

- 1 您可從相機模式和備用屏幕中存取已儲存的照片。從取景器，您只需要選擇**影集**。從備用屏幕，您應按下  或 ，然後選擇**我的檔案**和**圖像**。
- 2 圖庫將顯示於屏幕上。
- 3 使用輪盤選擇要檢視的相片，並選擇「**選項**」、**檢視**或僅按  予以放大。

將照片設為牆紙或來電相片

將圖像設定為特定顯示。從圖庫，使用  和  選擇圖像，並選擇「**選項**」和**設為**後將所選圖像用作牆紙或來電相片。

注意：來電相片 僅能新增至儲存至手機（而不是智能咭）的通訊錄。

視像攝錄機

拍攝影片

- 1 按  或 ，然後依次選擇  和視像攝錄機。
- 2 橫向手機，將鏡頭對準拍攝對象。
- 3 按一下  或按手機右側的  鍵，開始錄製。
- 4 **REC** 將顯示在取景器的下方，計時器將顯示拍攝影片的長度。
- 5 要暫停影片，請選擇暫停，選擇繼續以繼續。
- 6 選擇停止即停止錄製。

錄製影片後

已錄製的影片會顯示在屏幕上。圖像的名稱會顯示在屏幕的底部。選擇一個子功能表，您可在其中錄製新影片，播放影片，或透過多媒體訊息、藍芽或電郵方式發送影片，或查看專輯中的其他影片。

使用工具列選項

選擇「選項」後，手機會在取景器屏幕的底部顯示一個新的選項工具列。使用輪盤瀏覽選項。

解像度 - 若要使手機儲存更多的影片，請變更像素數目，以縮小檔案大小。在兩個影片選項間選擇：320 x 240 或 176 x 144。

質量 - 在**標準**、**細緻**和**特細緻**之間選擇。質量越細緻，則視像越清晰，佔用的檔案空間就會增加。從而使手機記憶體中儲存的視像數目減少。

儲存到 - 您可儲存到手機或外置記憶體。

恢復原廠設定 - 選擇將手機重設至原始相機設定。在取景器下是將手機重設至原始相機設定。在取景器屏幕下，按下  或  將會向您顯示以下子功能表，以便更詳細地了解視像攝錄機設定。

視像模式 - 要錄製一個將透過多媒體訊息發送的影片，請選擇多媒體訊息。

白平衡 - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從以下選項中選擇：**自動**、**日光**、**白熱光**、**陰天**、**日光燈**或**夜間模式**。

01

02

03

04

05

06

07

08

視像攝錄機

色彩效果 - 從以下四種選項中：**關閉**（標準/色彩）、**深褐色**、**黑白**（黑色和白色）或**底片**。
EV - 此功能可讓您調整曝光值。

提示！ 設定功能表疊加在取景器上。當變更影片色彩或質量的要素時，您將能夠在設定功能表後的預覽中查看到取景器變更。

觀看已儲存影片

- 1 您可從視像攝錄機模式或備用屏幕中存取已儲存的影片。從取景器，您只需要選擇影集。從備用屏幕，您應按下  或 ，然後選擇**我的檔案**和**影片**。
- 2 檔案將顯示於屏幕上。
- 3 使用  和  選擇要檢視的影片，然後選擇「選項」和**播放**或僅按  觀看影片。

檢視影片時調節音量

要在播放影片時調節影片聲音的音量，使用手機左側的音量鍵即可。

我的檔案

您可將任何多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片和遊戲。您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。所有的多媒體檔案將儲存在我的檔案中。要存取我的檔案，請按下  或 ，然後按  以開啓儲存所有多媒體檔案的資料夾列表。

圖像

圖像包括預載至手機上的預設圖像資料夾和透過手機相機拍攝的圖像。

圖像選項功能表

圖像中可用的**選項**取決於選取的圖像類型。所有選項將可用於手機相機上拍攝的圖片。僅**檢視**、**設為桌布**、**檔案資料**、**幻燈片播放**、**排序方式**和**列表/縮圖檢視**選項可用於預設圖像。

在**圖像**資料夾中，選擇「**選項**」顯示您的選項列表。

檢視 - 檢視選定的圖像。

刪除 - 刪除選定的圖像。

設為 - 將圖像設為牆紙或來電相片。

發送方式 - 透過多媒體訊息、藍芽或電郵，發送所選圖像給朋友。

注意：透過多媒體訊息發送前，圖像可能需要重新調整大小。

檔案 - 編輯圖像，重新命名、製作動

畫或檢視所選圖像的資訊（名稱、大小、日期、圖像大小和版權）。如果您已插入外置記憶咭，則會顯示兩個附加選項：**移動至外置記憶體**和**複製至外置記憶體**。

透過藍芽列印 - 透過藍芽列印圖像檔案。

幻燈片播放 - 參閱第 34 頁的建立幻燈片放映。

新資料夾 - 在主要圖像資料夾內建立新資料夾。

標記/取消標記 - 您可標記或取消標記。

刪除全部 - 刪除圖像資料夾中的所有照片。

排序方式 - 按日期、類型或名稱，安排圖像。

列表/縮圖檢視 - 變更檢視照片的方式。

發送照片

- 1 按下  或 ，然後選擇 。
- 2 選擇**圖像**。
- 3 選擇照片，並選擇「**選項**」。
- 4 選擇**發送方式**，然後從**多媒體訊息**、**藍芽**或**電郵**中選擇。
- 5 若選擇**多媒體訊息**或**電郵**，則照片會附加至訊息中，您亦可正常編寫和發送訊息。若選擇藍芽，手機會提示您開啓藍芽，並搜尋要向其發送圖片的裝置。

01

02

03

04

05

06

07

08

我的檔案

管理圖像

- 1 按下  或 ，然後選擇 。
- 2 選擇**圖像**。
- 3 依次選擇「選項」和**排序方式**。
- 4 從**日期**、**類型**或**名稱**中選擇。

刪除圖像

- 1 按  或 ，然後選擇 。
- 2 選擇**圖像**。
- 3 選擇圖像，然後選擇「選項」。
- 4 選擇**刪除**。

刪除多個圖像

- 1 按下  或 ，然後選擇 。
- 2 選擇**圖像**。
- 3 選擇「選項」，然後依次選擇**標記/取消標記及刪除**。
- 4 各圖像旁將會顯示一個方塊。選擇圖像，然後依次選擇「選項」和**標記全部**或僅按  標記圖像。要取消標記圖像，請依次選擇「選項」和**取消全部標記**或僅按  以便勾號從方塊中消失。
- 5 一旦您已標記所有合適的方塊，請選擇**完成**並確認要刪除全部已標記的圖像。

建立幻燈片放映

如果要查看手機上的所有圖像，或瀏覽您擁有的內容，則可建立幻燈片播放，這樣就省去逐一開啓、關閉圖像的麻煩。

- 1 按下  或 ，然後選擇 。
- 2 選擇**圖像**。
- 3 選擇要開始幻燈片放映的照片，並選擇「選項」。
- 4 選擇**幻燈片播放**，即可開始放映。
- 5 選擇「選項」、**暫停**以暫停幻燈片放映，選擇**結束**結束幻燈片放映，並返回到圖像資料夾。

幻燈片放映期間選擇「選項」可顯示更多選項：

設定重複 - 決定是否要重複放映幻燈片。

聲音

此**聲音**資料夾包含**預設聲音**和您的錄音。您可在此處管理、發送或將聲音設定為鈴聲。

使用聲音

- 1 按下  或 ，然後選擇 。
- 2 選擇**聲音**。
- 3 選擇**預設聲音**或從語音錄製檔案列表中選擇。
- 4 選擇聲音，並依次選擇「**選項**」和**播放**或僅按  以收聽聲音。
- 5 選擇「**選項**」和**設為**並從**鈴聲、來電鈴聲和訊息提示音**中選擇。

影片

此**影片**資料夾會顯示您在手機上錄製的影片列表。

觀看影片

- 1 按下  或 ，然後選擇 。
- 2 選擇**影片**。
- 3 選擇影片，並選擇「**選項**」和**播放**或僅按 。

在暫停影片時使用選項

選擇「**選項**」後，播放影片將處於暫停模式，且您可從以下選項中選擇：**刪除** - 刪除影片。

發送方式 - 透過多媒體訊息、藍芽或電郵方式發送影片。

檔案 - 重新命名影片或檢視相關資訊（名稱、大小、日期、類型、播放和版權）。

橫向檢視 - 變更檢視影片的方式。

發送錄像片段

- 1 使用輪盤，選擇影片。
- 2 選擇「**選項**」和**發送方式**，然後從**多媒體訊息、藍芽**或**電郵**中選擇。
- 3 若選擇**多媒體訊息**或**電郵**，則影片片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇**藍芽**，手機會提示您開啓藍芽，並搜尋要向其發送影片的裝置。

注意：透過多媒體訊息發送前，影片可能需要重新調整大小。部份影片太大，無法透過多媒體訊息發送，在這種情況下，請選擇其他發送選項。

我的檔案

使用影片選項功能表

在影片資料夾中，選擇「選項」顯示您的選項列表。

播放 - 觀看選定影片。

刪除 - 刪除選定的影片。

發送方式 - 透過多媒體訊息、藍芽或電郵方式發送影片。

檔案 - 編輯或重新命名影片，或檢視資訊（名稱、大小、日期、類型、播放和版權）。

新資料夾 - 在主要影片資料夾內建立新資料夾。

標記/取消標記 - 選擇刪除多個影片。

刪除全部 - 刪除影片資料夾中的所有片段。

排序方式 - 按日期、類型或名稱，安排影片。

列表/縮圖檢視 - 變更檢視影片的方式。

其他

此**其他**資料夾用於儲存圖片、聲音、影片、遊戲或應用程式以外的檔案。可能會發現，從電腦將檔案傳送到手機時，這些檔案將出現於**其他**資料夾。

遊戲及應用程式

KM710 手機提供有預載遊戲，可讓您在休閒時娛樂。如果您選擇下載任何其他遊戲或應用程式，下載的遊戲或應用程式將儲存在此資料夾中。

玩遊戲

- 1 按下  或 ，然後選擇 。
- 2 選擇**遊戲及應用功能**。
- 3 選擇選定的遊戲，並依次選擇「選項」和**播放**或僅按 。

使用遊戲選項功能表

在遊戲資料夾中，選擇「選項」顯示以下選項列表。

播放 - 選擇此選項開始玩遊戲。

資訊 - 檢視檔案的名稱、版本、廠商、數據大小和網域。

外置記憶體

若插入記憶咭，則將顯示為我的檔案中的一個資料夾。外置記憶體資料夾將分為另外四個資料夾：圖像、聲音、影片和其他。每個資料夾將包含此類型的所有檔案，這些檔案儲存至記憶咭中，而不是手機上。

將手機用作大型儲存裝置

KM710 手機可用作大型儲存裝置，如同 USB 記憶棒。此功能非常適合將檔案從電腦移至手機。插入記憶咭後，以大型儲存裝置連接時，它將顯示為電腦上的兩個磁碟機。手機記憶體和外置記憶體。

- 1 按下  或 ，依次選擇  和 **連接**。
- 2 選擇 **USB 連接模式**。
- 3 選擇大容量儲存並選擇**確定**。
- 4 將 USB 線較小的一端插入至 KM710 手機邊緣的 USB 插孔。將較大的一端插入電腦的 USB 連接埠。
- 5 卸除式磁碟資料夾將自動開啓，如果您已插入記憶咭，則顯示兩個資料夾，顯示手機或記憶咭上的所有資料夾。
- 6 將圖像、影片、音樂或其他拖放至相應的資料夾中。
- 7 按一下桌面工具列中的**安全移除硬體**圖示，安全移除您的手機。
- 8 若要存取檔案，例如一幅圖像，按下  或 ，然後依次選擇 、**外置記憶體** 及 **圖像**。此檔案中將包含剛剛傳送的所有圖像。

傳送檔案到手機

您亦可以使用藍芽，將檔案從電腦傳送至手機。

- 1 確保您的手機與電腦均已開啓藍芽，並已被對方偵測到。
- 2 使用電腦，透過藍芽發送檔案。
- 3 發送檔案後，在手機上選擇**是**，確認接收。
- 4 檔案將儲存至合適的資料夾，具體取決於檔案的類型。例如，圖片將儲存至**圖像**資料夾中，音樂將儲存至**聲音**資料夾中。如果手機無法確認檔案類型，檔案將被儲存至**其他**資料夾中。

注意：使用藍芽發送的檔案將被儲存至手機記憶體中。

多媒體

音樂

LG KM710 具有內置的 MP3 播放器，這樣，您可播放所有喜愛的音樂。

 音樂辨識技術及相關數據由 Gracenote® 提供。

Gracenote 是提供音樂辨識技術及相關內容的產業標準。要了解更多資訊，請瀏覽 www.gracenote.com。

來自 Gracenote, Inc. 的 CD 及音樂相關數據，版權所有 © 2000-2006

Gracenote。Gracenote 軟體，版權所有 © 2000-2006 Gracenote。此產品及服務或可多次用於以下美國地區：#5,987,525；#6,061,680；#6,154,773；#6,161,132；#6,230,192；#6,230,207；#6,240,459；#6,330,593，及其他其他已授權或正等待的地區。某些服務是根據 Open Globe, Inc. for U.S. Patent: #6,304,523 授權而提供的。

Gracenote 及 CDDB 是 Gracenote 的註冊商標。Gracenote 標誌及標誌類型以及「由 Gracenote 提供」標誌是 Gracenote 的註冊商標。

要存取 MP3 播放器，請按下  或  並選擇 。從此處您可存取：**所有歌曲** - 包含手機上具有的所有歌曲。

我的播放列表 - 包含已建立的任何播放列表及 **On the go**。您可以根據以下多種特性選擇特定音樂：**演出者、專輯、類型及隨機播放全部音樂**。

提示！ 您可以存取 MP3 播放器，通過前面的 MP3 快捷鍵 。使用  鍵，您可以直接進入播放列表。

將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或 USB 傳輸。

接收藍芽傳送：

- 1 確保兩個裝置均開啓藍芽，且彼此可看見對方。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 發送檔案後，在手機上選擇**是**，確認接收。
- 4 檔案應顯示在 **MP3 播放器 > 所有曲目**。

提示！ 如果您要使用 USB 線為 KM710 充電，且沒有 USB 大容量儲存或音樂同步的動畫訊息，請選擇數據服務模式。在此模式下，僅當 KM710 手機與電腦進行數據交換時，您才能看到數據服務模式的動畫訊息。

播放歌曲

- 1 按下  或 ，然後選擇 。
- 2 選擇**所有歌曲**，然後選擇要播放的歌曲。按下 。
- 3 按下  暫停歌曲。
- 4 按下  跳至下一首歌曲。
- 5 按下  跳至上一首歌曲。
- 6 選擇「選項」和**最小化**以隱藏音樂播放器，這樣，您可在播放音樂的同時，繼續按正常方式使用手機。
- 7 選擇返回，回到音樂功能表。

播放音樂時使用選項

選擇「選項」並從以下選項中選擇：

最小化

自然聲音

新增到播放列表

透過藍芽收聽

設為

等級

資訊

設定 - 變更音樂設定。

提示！ 要在收聽音樂時更改音量大小，使用手機側面的音量鍵即可。

建立播放列表

透過從**所有歌曲**資料夾中選擇一系列歌曲，您可建立自己的播放列表。

- 1 按下  或  並選擇 。
- 2 選擇**我的播放列表**。
- 3 選擇**新播放列表**，輸入播放列表名稱並選擇**儲存**。
- 4 **所有歌曲**資料夾將顯示。選擇要將其納入至播放列表的歌曲，按  選擇所有歌曲；勾號將顯示在這些歌曲的旁邊。如果您意外新增不想要的歌曲，可先選取該歌曲，然後再次按  取消勾選。
- 5 選擇完成以儲存播放列表。

播放我的播放列表

- 1 按下  或  並選擇 。
- 2 選擇**我的播放列表**。
- 3 選擇要播放的播放列表，並選擇**檢視**，然後按 。

多媒體

編輯播放列表

您可能需要不時新增歌曲，或從播放列表中刪除歌曲。

您亦可能要組織您的播放列表。當要執行此操作時，可編輯您的播放列表。

- 1 按下  或  並選擇 。
- 2 選擇**我的播放列表**。
- 3 選擇要編輯的播放列表，並選擇**檢視**，然後選擇「選項」。

新增 - 使用此選項，您可新增播放列表中的歌曲。

移除 - 從播放列表中移除歌曲。

搜尋 - 可搜尋列表的歌曲。

上移 / 下移 - 將歌曲在列表中上下移動，以變更播放順序。

設定 - 可變更設定。

發送方式 - 可選擇多媒體訊息、藍芽或電郵。

移除全部 - 從播放列表中移除所有歌曲。

資訊 - 檢視播放列表資訊。

刪除播放列表

- 1 按下  或 ，然後選擇 。
- 2 選擇**我的播放列表**。
- 3 選擇要刪除的播放列表，並選擇「選項」。
- 4 選擇**移除**。

注意：

DRM（數碼權限管理）

由於數碼權限管理 (DRM) 系統的存在，從互聯網下載或透過多媒體訊息接收到的部分媒體項目可能具有一個存取時使用的「購買權限」功能表。您可從擁有內容權限的網站獲取購買權限的密鑰。

音樂版權受國際公約及國內版權法的保護。需要取得授權或許才可以複製或複製音樂。在部份國家，國家法禁止私人複製受版權保護的材料。請檢查適用國家關於使用此類材料的國家法律。

在 MP3 播放器上播放 MP3 音樂時，按 MP3 快捷鍵後，可使用備用屏幕。在備用屏幕中，您可以在使用其他功能的同時播放 MP3。

使用收音機

LG KM710 手機具有 FM 收音機功能，以便您可在外出時收聽喜歡的電台節目。

注意：您需要插入耳機才可收聽收音機。將耳機插入耳機插孔（與插入充電器的插孔相同）。

搜尋電台

透過手動或自動搜尋電台頻道，從而將其儲存至手機中。這些節目將儲存至特定頻道編號，如此一來，您就不需要重新搜尋。手機中可儲存 12 個頻道。

自動調諧：

- 1 按下  或 ，然後選擇 。
- 2 選擇 **FM 收音機**。
- 3 選擇**自動調頻**，然後選擇**是**。
- 4 每次找到電台後，KM710 會詢問您是否儲存找到的電台。如果要儲存此頻道，請選擇**是**，否則，選擇**否**。選擇儲存的任何電台將自動分配到手機中的頻道號中。

手動調諧：

- 1 按下  或 ，然後選擇 。
- 2 選擇 **FM 收音機**。
- 3 選擇要儲存電台的頻道號，並選擇**編輯頻道**。

- 4 要進入電台，您可使用輪盤搜尋頻率，或使用鍵盤輸入頻率。

- 5 選擇確定以**儲存**。

注意：使用與手動調諧電台時相同的**編輯頻道**功能，您還可以編輯已儲存至頻道號中的電台。

提示！ 如要改善收音機的接收效果，您可延長作為收音機天線的耳機線。

重設頻道

- 1 按下  或 ，然後選擇 。
- 2 選擇 **FM 收音機**。
- 3 選擇「選項」和**重設頻道**。選擇**是**確認重設。每個頻道將返回至開始 87.5Mhz 頻率。

收聽電台

- 1 按下  或 ，然後選擇。
- 2 選擇 **FM 收音機**。
- 3 選擇要收聽電台的頻道號。

多媒體

語音備忘錄

使用**語音備忘錄**錄製語音備忘錄或其他聲音。

- 1 按下  或 ，然後選擇 。
- 2 選擇**語音備忘錄**。
- 3 按下  開始錄製。
- 4 選擇**暫停**暫停錄音。
- 5 選擇**停止**結束錄音。
- 6 依次選擇「選項」和 **播放**收聽錄音。

注意：您可收聽所有已儲存的錄音，只需選擇**專輯**。

發送錄音

- 1 完成錄音後，您可選擇「選項」。
- 2 選擇**發送方式**，然後從**多媒體訊息**、**藍芽**或**電郵**中選擇。若選擇**訊息**或**電郵**，則錄製會新增至訊息，且您可按正常方式進行編寫和發送。若選擇**藍芽**，則系統會提示您開啓藍芽。

提示！ 如果計劃以訊息方式發送錄影，開始錄製前，請選擇「選項」並選擇**錄製模式**。選擇**多媒體訊息**。這可確保錄影適合訊息。

Muvee

此功能表是一種功能，透過將聲音和圖像與各種效果混合在一起，從而製作出新內容，且圖像會自動隨音樂播放和變換。這些內容檔案將儲存在**我的檔案**中。

- 1 按  或 ，然後選擇 。
- 2 選擇 **Muvee**。
- 3 選擇一種 Muvee 式樣，然後選擇要混合加入的圖像。

記事簿 / 工具

新增事件至日曆

- 1 從備用屏幕，按下  或 ，並依次選擇  和日曆。
- 2 選擇要將事件新增至的日期。您可以使用輪盤選擇所需日期或選擇「選項」。

注意：將事件儲存至日曆後，您需要選擇「選項」再選擇**轉到日期**，才可以輸入日期並設定事件。

- 3 依次選擇「選項」和**新日程表**並輸入事件的開始時間和結束時間。
- 4 向下按，並為事件輸入**主題**。
- 5 再次向下按，並選擇是否要為事件設定**鬧鐘**。向左或向右按，查看可用選項。您可設定鬧鐘在事件的開始時間響鈴，或事件開始前設定的時間期間響鈴，以便提醒您事件即將發生。
- 6 再次向下按，選擇事件是一次、**每日**、**每星期**、**每月**或**每年**重複。如果事件重複，則亦可向下按，為事件何時將完全停止輸入**到期時間**。
- 7 選擇**儲存**，則事件將儲存至日曆中。方形游標將標記儲存有日程表的日子。

編輯日曆事件

- 1 從備用屏幕，按下  或 ，並依次選擇  和日曆。
- 2 選擇「選項」並選擇**所有日程表**，查看所有事件列表。選擇要編輯的事件，並選擇「選項」和**檢視**或僅按 。或者，在日曆中選擇事件日期，並選擇「選項」和**檢視**或僅按 。
- 3 選擇「選項」和**編輯**或僅按  並選擇要變更的事件詳情。作出修改，並選擇**儲存**以儲存已編輯的事件。

注意：選擇並檢視事件，然後選擇「選項」和**刪除**，便可以從日曆中刪除事件。

共用日曆事件

- 1 從備用屏幕，按下  或 ，並依次選擇  和日曆。
- 2 選擇要分享的事件並選擇「選項」。
- 3 選擇**發送方式**並從**文字訊息**、**多媒體訊息**、**藍芽**或**電郵**中選擇。

01

02

03

04

05

06

07

08

記事簿 / 工具

新增備忘錄

- 1 從備用屏幕，按下  或 ，並依次選擇  和**備忘錄**。
- 2 選擇新增並輸入您的備忘錄。
- 3 選擇「選項」和**儲存**或僅按 。
- 4 下次開啓**備忘錄**應用程式時，備忘錄將會顯示在屏幕上。

提示！ 您可以編輯現有備忘錄。選擇要編輯的備忘錄，並依次選擇「選項」和**編輯**。

新增項目至待辦事項列表

- 1 從備用屏幕，按下  或  並選擇 ，然後選擇**待辦事項**。
- 2 選擇新增並鍵入新增待辦事項的到期日、備註、重要性和狀態。（使用選項，您可參考日曆選擇日期）
- 3 選擇「選項」，**儲存**。
- 4 您的待辦事項列表會顯示在屏幕上，透過從選項中選擇一項，您可檢視、新增、刪除並執行多種操作。

設定鬧鐘

- 1 從備用屏幕，按下  或 ，並選擇  和**鬧鐘**。
- 2 選擇**新增**。
- 3 向下按，並輸入想要鬧鐘響鈴的時間。
- 4 選擇鬧鐘的響鈴方式：**一次、每天、星期一至星期五、星期一至星期六、星期六至星期日**或選擇**工作日**。
- 5 向下按，選擇鬧鐘鈴聲。選擇「選項」和**聲音**以選擇新鈴聲。
- 6 向下按，為鬧鐘輸入名稱。
- 7 選擇**儲存**。

注意： 您最多可設定 5 個鬧鐘。手機關機時，鬧鐘亦能響鈴。

使用計算機

- 1 從備用屏幕，按下  或 ，並依次選擇  和**計算機**。
- 2 點按數字鍵，輸入數字。
- 3 對於簡單計算，請選擇所需的功能 (+, -, x, /)，然後選擇 =。
- 4 對於更複雜的計算，請選擇**函數**以選擇相應的指令。
- 5 選擇清除清除屏幕，開始新的計算。

使用秒錶

- 1 從備用屏幕，按下  或 ，並依次選擇  和**秒錶**。
- 2 選擇**開始**開始使用計時器。
- 3 如果要記錄圈數，請選擇**重複**。
- 4 選擇**停止**，結束計時器。
- 5 選擇**繼續**，在上次停止的時刻處重新啟動秒錶或選擇**恢復原廠設定**重新開始計時。

轉換單位

- 1 從備用屏幕，按下  或 ，並依次選擇  和**單位轉換器**。
- 2 選擇是否要轉換**貨幣、面積、長度、重量、溫度、體積**或**速度**。

- 3 從要輸入的**量度單位**中選擇。左右按，選擇單位，然後向下按，輸入單位數量。
- 4 向下按單位換算方塊，並選擇要轉換至的單位量度。轉換將自動顯示在以下的行中。

新增城市至世界時間

- 1 從備用屏幕，按下  或 ，並依次選擇  和**世界時間**。
- 2 選擇「選項」並選擇**更改時間地區**，然後選擇一個城市。
- 3 從選項中選擇**新城市**，並往列表中新增更多的城市。

使用智能咭服務

此功能取決於智能咭和網絡服務。

如果智能咭支援 SAT（即智能咭應用程式工具集）服務，本功能表將出現智能咭上儲存之網絡商服務名稱。

網絡功能

透過瀏覽器，您便可隨時了解到最新的新聞、天氣預報、體育賽事或交通消息等資訊。另外，瀏覽器還可讓您下載到最新的音樂、鈴聲、待機圖片及遊戲。

存取網絡

- 1 從備用屏幕，按下  或 ，然後依次選擇  和確定。
- 2 要直接存取瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**，並輸入所需的 URL。

注意：連接至此服務和下載內容，需另行收費。請向網絡供應商諮詢收費詳情。

新增並存取書籤

爲了方便快捷存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 從備用屏幕，按下  或 ，然後依次選擇  和確定。
- 2 選擇**書籤**。書籤列表顯示在屏幕上。
- 3 要新增書籤，請選擇「選項」，並選擇**新書籤**。依次輸入書籤標題和網址。
- 4 選擇**儲存**。此時，書籤將顯示於書籤列表中。
- 5 要存取書籤，只需要轉到所需的書籤，並選擇「選項」和**連接**或僅按 。您將會連接到書籤標記的頁面。

儲存網頁

- 1 按照以上所述操作，存取所需的網頁。
- 2 選擇「選項」並按**儲存**，並選擇**此頁面**。
- 3 選擇**確定**。

提示！

此功能亦讓您編輯已儲存網頁標題，保護或取消保護屏幕備忘錄並刪除已儲存頁面。

存取已儲存的網頁

- 1 從備用屏幕，按下  或 ，然後依次選擇  和**確定**。
- 2 選擇**已儲存網頁**。
- 3 選擇所需的網頁及「選項」和**連接**或僅按 。

檢視瀏覽器記錄

- 1 從備用屏幕，按下  或 ，然後依次選擇  和**確定**。
- 2 選擇**記錄**並選擇**確定**。
- 3 最近存取的網頁標題列表會顯示。要存取其中一個網頁，請選擇所需的網頁並選擇「選項」和**連接**，或僅按 。

變更網頁瀏覽器設定

- 1 從備用屏幕，按下  或 ，選擇 。選擇**設定**。
- 2 您可選擇在瀏覽互聯網時，手機處理、顯示和使用資訊的方式。您可在以下選項中修改設定：**網絡設定**、**檢視模式**、**暫存記憶**、**網頁瀏覽記錄**、**安全認證**、**顯示圖像**、**Java 指令碼**和**記憶體使用**。
- 3 變更設定後，選擇**確定**。

設定

在此資料夾內，您可調整各項設定，以便讓此 KM710 彰顯您的個性。

注意：有關通話設定的詳情，請參閱第 21 頁。

個人化情景模式

您可以從備用屏幕快速變更您的情景模式。只需要按下  並選擇 ，然後選擇要啓用的情景模式。從以下選項中選擇：

標準
靜音
震動
戶外
耳機

使用設定功能表，您便可個人化每種情景模式設定。

- 1 按下  或 ，然後選擇 。
- 2 對於**靜音**和**震動**情景模式，您不可調整。對於其他情景模式，您可變更列表中可用的所有聲音和提示選項，其中包括通話提示類型、鈴聲和鈴聲音量、訊息提示類型等（詳情請檢視您的手機）。

變更屏幕設定

- 1 按下  或 ，然後選擇 。
- 2 選擇**顯示**並從以下選項中選擇：
 - 牆紙** - 選擇出現在屏幕顯示上的牆紙。
 - 時鐘** - 選擇出現於屏幕顯示上的時鐘風格。
 - 螢幕保護程式** - 變更顯示項目和顯示時間。
 - 背景燈時計** - 選擇背景燈的維持時間。
 - 亮度** - 調校屏幕的亮度。
 - 功能導向捷徑** - 變更備用屏幕捷徑。
 - 主題** - 快速變更屏幕的整個外觀。
 - 字型大小** - 從以下選項中選擇字型大小：小、標準或大。
 - 功能表風格** - 在格子檢視與輪盤檢視之間變換功能表檢視。
 - 撥號模式** - 調整輸入手機號碼時的字型樣式。
 - 備用歡迎辭** - 選擇後，將訊息新增至備用屏幕中。
 - 網絡名稱** - 選擇開啓或關閉網絡名稱。

注意：背景燈開啓時間越長，耗費的電量就越多，這樣，手機充電將更頻繁。

變更電話設定

您可隨意變更 KM710，以便以最適合於您的方式使用。

按下  或 ，然後選擇 。從以下列表中選擇：

日期及時間 - 調整您的日期和時間設定，或選擇旅行時自動更新時間。

語言 - 變更 KM710 顯示屏的語言。

顯示 - 變更屏幕設定。

捷徑 - 可編輯捷徑。

觸控板 - 可變更其設定。

連接 - 參閱變更連接設定，了解更多資訊。

通話 - 參閱第 21 頁的變更通話設定，了解更多資訊。

安全 - 參閱第 51 頁的「變更安全設定」，了解更多資訊。

飛航模式 - 切換飛航模式：**開啓**或**關閉**。開啓飛航模式後，您將無法撥打電話，連接到互聯網，發送訊息或使用藍芽。

省電模式 - 從以下選項中選擇設定省電選項：**關閉**、**只有夜間**或**永遠開啓**。

恢復原廠設定 - 將所有設定重設為原廠定義。

記憶體狀態 - 查看 KM710 記憶體的現狀（共用、預留和智能咭）。

變更連接設定

您的網絡商已經為您設定連接設定，因而，您可以立即享用您的新手機。若要變更任何設定，請使用此功能表。

按下  或 ，然後選擇 。選擇**連接**。您可從以下選項中選擇：

藍芽 - 設定 KM710 手機，以便使用藍芽。您可修改是否向其他裝置顯示您的手機，或搜尋配對的裝置。

網絡 - 您的 KM710 會自動連接至您的首選網絡。使用此功能表可變更這些設定。您亦可以使用此功能表來附加 GPRS 並新增接入點。

USB 連接模式 - 選擇**數據服務**並透過 LG PC Suite 軟件同步您的 KM710，藉此複製您手機中的檔案。若您已插入記憶咭，選擇**大容量儲存**，可將手機用作 USB 記憶棒。連接電腦，並將檔案拖放至 KM710 可移除裝置資料夾。參閱第 37 頁了解更多詳情。

01

02

03

04

05

06

07

08

設定

使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為不需要USB線，且連接方便快捷。您亦可連接藍芽到手機，以接聽來電。

開始同藍芽分享檔案前，您需要將您的裝置同其他藍芽裝置配對起來。有關配對裝置的更多詳情，請參閱**同其他藍芽裝置配對**。

要開啓藍芽，請執行以下操作：

- 1 按下  或 ，然後選擇 。
選擇**連接**，然後選擇**藍芽**。
- 2 選擇**藍芽開啓 / 關閉**並選擇**開啓**。
- 3 選擇**關閉**關閉藍芽。

發送檔案：

- 1 開啓要發送的檔案，通常為照片、影片或音樂檔案。
- 2 選擇「選項」並選擇**發送方式**，然後選擇**藍芽**。
- 3 如果尚未啓用，選擇**是**開啓藍芽。
- 4 KM710 手機將自動搜尋範圍內其他已啓動藍芽的裝置。
- 5 選擇要將檔案發送至的裝置並選擇**發送**。
- 6 您的檔案將會送出。

接收檔案：

- 1 接收檔案前，藍芽必須均設定為**開啓**和**顯示**。參閱**變更藍芽設定**，了解更多詳情。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。選擇**是**接收檔案。

提示！ 留意進度列，確保檔案已發送。

變更藍芽設定：

- 1 按下  或 ，然後選擇 。
選擇**連接**，然後選擇**藍芽**。
- 2 選擇**藍芽設定**變更以下設定：
顯示我的手機 - 選擇向其他裝置**顯示**或**隱藏**您的裝置。
我的姓名 - 為您的 KM710 輸入名稱。
我的藍芽位址 - 變更您的藍芽位址。
主要儲存空間 - 您可儲存到手機或記憶咭。(需插入記憶咭)。

同其他藍芽裝置配對

透過將 KM710 手機同其他裝置配對起來，您可設定一個密碼保護連接。這意味著配對會更安全。

- 1 檢視藍芽是否為**開啓**和**顯示**。您可在**藍芽設定**功能表中變更您的裝置的可見性，透過選擇**顯示我的手機**，然後選擇**顯示**。
- 2 從藍芽功能表中選擇**裝置列表**，然後選擇**新增**。
- 3 您的 KM710 手機將搜尋裝置。完成搜尋後，**配對**和**重新整理**將顯示在屏幕上。
- 4 選擇要配對的裝置，並選擇**配對**，然後輸入密碼，並選擇**確定**。
- 5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的密碼。
- 6 密碼保護藍芽連接已準備就緒。

使用藍芽耳機

- 1 檢查藍芽是否為**開啓**和**顯示**。
- 2 遵循隨手機附帶的說明，將手機置於配對模式中並配對裝置。
- 3 選擇**是**以**立即連接**。KM710 手機將自動切換到耳機情景模式。

變更安全設定

變更安全設定，保護 KM710 和手機中重要資訊的安全性。

按下  或 ，然後選擇 。選擇**安全**，然後從以下列表中選擇：

PIN 碼請求 - 選擇開啓手機時，需要輸入密碼。

自動按鍵鎖 - 選擇按鍵自動鎖定的持續時間。

手機鎖 - 在以下狀態下選擇安全密碼鎖定您的手機：**關閉**、**在開機時**、**智能咭更換**或**立即**。

固定撥號號碼 - 選擇可從此手機呼叫的號碼列表。

更改密碼 - 變更您的**安全密碼**、**PIN 碼**或**PIN2 碼**。

配件

以下配件隨 KM710 手機一併提供。

充電器



USB線及光碟

在 KM710 和電腦間建立連接並進行同步




電池



使用手冊

了解更多 KM710。

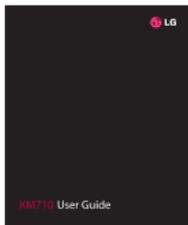

立體聲耳機



外置記憶體



備注

- 只可用原裝LG 配件。
- 不使用原裝LG 配件，保用可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商查詢更多詳情。

網絡服務

在此手冊所述之無線電話認可用於 GSM 900、DCS 1800 和 PCS1900 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

技術數據

標準

產品名稱：KM710

系統：GSM 900 / DCS 1800 / PCS 1900

環境溫度

最高：+55°C（放電），
+45°C（充電）

最低：-10°C

01

02

03

04

05

06

07

08

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM710

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.6.1

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Vekwuzoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

02. FEB. 2008

Signature of representative

安全與有效使用準則

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。本手機型號 KM710 已為遵守無線電波暴露的應用安全要求而設計。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.376 W/Kg (10g)，攜帶於身上時則為 0.734 W/Kg (10g)。
- 採用了電氣與電子工程師學會 (IEEE) 建議 SAR 限制 (即平均一 (1) 克組織 1.6 W/Kg) 的國家/地區居民的 SAR 數據資訊 (如美國、加拿大、澳洲及臺灣)。

產品護理及維修

警告

僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他類型的電池、充電器及配件，可能使手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 請遠離電視、收音機或電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面 (請勿使用如苯、稀釋劑或酒精等溶劑)。
- 切勿在柔軟家具上為手機充電。

安全與有效使用準則

- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

有效手機操作 電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，請使用免提聽筒套件。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。

- RF 能量可能會影響車內某些電子設備，例如立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。

- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。



视话机软件或服务提供商而定，
本手册中的部分内容可能与您的
手机有所不同。

KM710 用户手册

恭喜您购买此款功能先进、外观小巧的 LG KM710 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

Gracenote® 最终用户许可协议

版本：20061005

本应用程序或设备含 Gracenote, Inc. (美国加州 Emeryville 市) 软件 (以下简称 Gracenote)。透过 Gracenote 公司的软件 (以下简称 Gracenote 软件)，本应用程序可在网上从在线服务器或嵌入式数据库 (以下统称 Gracenote 服务器) 进行光盘和/或文件识别并取得与音乐相关的信息，其中包括名称、艺术家/演出者、曲目和歌名信息 (以下简称 Gracenote 数据)，并使用其它功能。您可使用 Gracenote 数据，但条件是：只能通过本应用程序或设备专设的最终用户功能进行使用。

您同意，您使用 Gracenote 数据、Gracenote 软件和 Gracenote 服务器仅为您个人用途，并非商业用途。您同意不将 Gracenote 软件或任何 Gracenote 数据转让、复制、让与或传送给任何第三方。您同意，除本文明确允许的功能外，您将不擅自使用或利用 Gracenote 数据、Gracenote 软件或 Gracenote 服务器。

您同意，如果您违反这些限制规定，您的非专属许可证，即使用 Gracenote 数据、Gracenote 软件和 Gracenote 服务器的许可证将就此终止。如果您的许可证被终止，您同意立即停止使用任何和所有 Gracenote 数据、Gracenote 软件和 Gracenote 服务器。Gracenote 保留其在 Gracenote 数据、Gracenote 软件以及 Gracenote 服务器的所有权利，其中包括各项所有权。对于您所提供的信息，Gracenote 在任何情况下都无义务向您支付任何款项。

您同意，如果您违反本协议规定，Gracenote, Inc. 可依据本协议所赋予的权利，直接以其名义行使其权利。

为统计目的，Gracenote 服务使用独特的标识符跟踪各项查询。这种随机指定的数字标识符的目的，是使 Gracenote 服务能够在不涉及您任何个人信息的情况下统计查询的次数。有关详情，请见 Gracenote 服务网页中的 Gracenote Privacy Policy (隐私权政策)。

Gracernote 软件以及 Gracernote 数据的每一项，均以“现有状态”特许您使用。对于来自 Gracernote 服务器中的任何 Gracernote 数据的准确性，Gracernote 不做任何陈述，亦不承担任何明示或默示担保。Gracernote 有权（并保留此项权利）从 Gracernote 服务器删除数据，或根据 Gracernote 认为有充分理由之任何原因更改数据类别。Gracernote 不担保 Gracernote 软件或 Gracernote 服务器无错误，亦不担保 Gracernote 软件或 Gracernote 服务器的运作不出现中断。Gracernote 无义务向您提供新强化的或附加的数据类型或类别（即使 Gracernote 将来可能会提供），并可自主随时停止各项服务。

Gracernote 不承担任何明示或默示担保，其中包括（但不限于）对销路、某特定目的之适用性、所有权和不侵权之默示担保。对于您使用 Gracernote 软件或任何 Gracernote 服务器是否能取得任何结果，Gracernote 不做任何担保。在任何情况下，对于任何后果性损失或附带损失，或任何利润损失或收入损失，Gracernote 均不承担赔偿责任。

© Gracernote 2006

设置 01

待机屏幕 02

基本功能 03

高级功能 04

管理功能 05

网络 06

设置 07

配件 08

内容

01 设置

开始了解您的手机.....	9
安装 SIM 卡和电池.....	11
储存卡.....	13
菜单地图.....	14

02 待机屏幕

待机屏幕.....	15
状态栏.....	15
转盘导航键和触摸键盘.....	16
主菜单.....	16

03 基本功能

呼叫.....	17
拨打电话或视频电话.....	17
从电话簿拨打电话.....	17
接听和拒绝电话.....	17
通话选项.....	18
快速拨号.....	19
查看通话记录.....	19
使用呼叫转接.....	20
使用呼叫阻截.....	20
更改呼叫设置.....	21

电话本.....	22
搜索联系人.....	22
添加新联系人.....	22
联系人选项.....	22
将联系人添加到群组.....	23
重命名群组.....	23
为联系人添加图片.....	24
将电话簿复制到 SIM 卡.....	24
删除所有联系人.....	24
查看资料.....	24
信息.....	25
信息.....	25
发送信息.....	25
输入文本.....	25
信息文件夹.....	26
管理信息.....	26
使用模板.....	27
更改文本信息设置.....	27
更改多媒体信息设置.....	28
更改其它设置.....	28

04 高级功能

照相机..... 29

快速拍照..... 29

拍照后..... 29

使用工具栏选项..... 29

更改图像大小..... 30

查看保存的照片..... 30

将照片设为墙纸或图像编号... 30

录影机..... 31

快速摄像..... 31

拍摄视频后..... 31

使用工具栏选项..... 31

观看保存的视频..... 32

观看视频时调节音量..... 32

我的文档..... 33

图像..... 33

图像选项菜单..... 33

发送照片..... 34

管理图像..... 34

删除图像..... 34

删除多个图像..... 34

创建幻灯片..... 35

声音..... 35

使用声音..... 35

视频..... 35

观看视频..... 35

暂停视频时使用选项..... 35

发送视频剪辑..... 36

使用视频选项菜单..... 36

其它..... 36

游戏马应用程序..... 36

玩游戏..... 36

使用游戏选项菜单..... 37

外部储存卡..... 37

将手机用作批量储存器..... 37

将文件传输到手机..... 37

多媒体..... 38

音乐..... 38

将音乐传输到手机..... 39

播放歌曲..... 39

播放音乐时使用选项..... 39

创建播放列表..... 39

播放播放列表..... 40

编辑播放列表..... 40

删除播放列表..... 40

使用收音机..... 41

搜索电台..... 41

重新设置频道..... 41

收听收音机..... 41

语音备忘录..... 42

发送录音..... 42

Muvvee..... 42

内容

05 管理功能

公文包/工具.....	43
将事件添加到日程表中.....	43
编辑日程表事件.....	43
共享日程表事件.....	44
添加备忘录.....	44
向任务列表添加事件.....	44
设置闹钟.....	44
使用计算器.....	45
使用秒表.....	45
换算单位.....	45
向世界时间添加城市.....	45
使用 SIM 卡服务.....	45

06 网络

网络.....	46
访问网页.....	46
添加并访问书签.....	46
保存页面.....	47
访问已保存的页面.....	47
查看浏览器历史记录.....	47
更改网络浏览器设置.....	47

07 设置

设置.....	48
个性化情景模式.....	48
更改显示设置.....	48
更改手机设置.....	49
更改连接设置.....	49
使用蓝牙发送和接收文件.....	50
与其它蓝牙设备配对.....	51
使用蓝牙耳机.....	51
更改保安设置.....	51

08 配件

配件.....	52
网络服务.....	53
技术参数.....	53
常规.....	53
外部环境.....	53

关于安全有效使用手机的准则... 55

开始了解您的手机

结束/电源键



挂断或拒接来电。
开机/关机。
按一次返回
待机屏幕。

清除键



每按一下删除一个
字符。使用此键返
回上一屏幕。

主屏

导航转盘

- 待机模式时:



信息



联系人列表



设置文件




收藏夹

- 菜单时: 在菜单
里导航

通话键



拨打电话号码并接听来电。

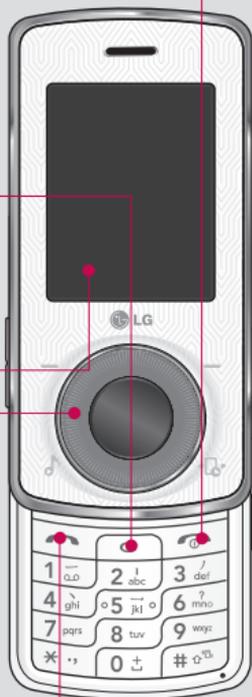

充电器、数据线、
免提连接器

音量



拍摄按钮

01

02

03

04


05

06


07

08

开始了解您的手机

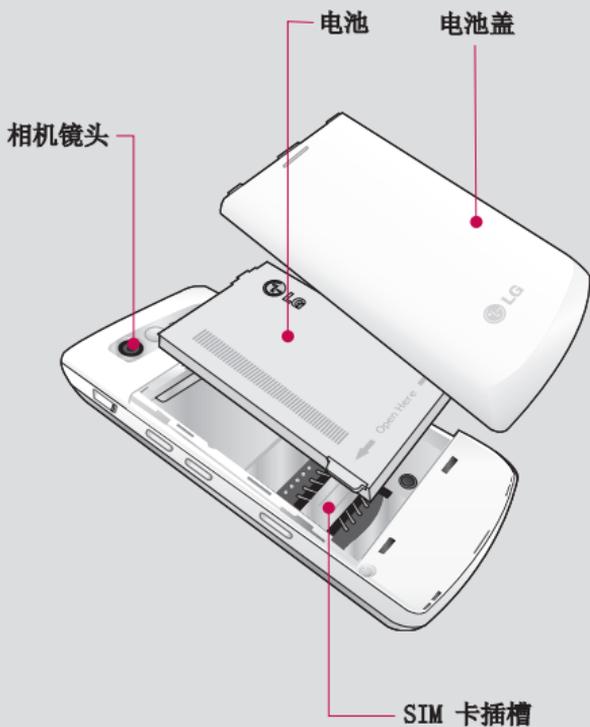

安装 SIM 卡和电池

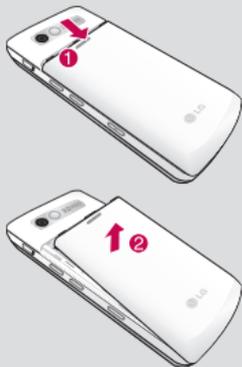

1 卸下电池盖

将电池盖沿手机底部滑动，卸下电池盖。


警告： 不要使用指甲取出电池。

警告： 手机开机时，不要取出电池，这可能会损坏手机。



2 卸下电池

抬起电池顶端，小心将电池从电池室取出。

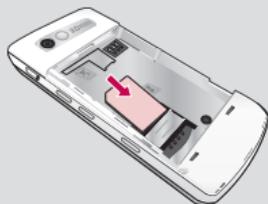

3 安装 SIM 卡

将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 SIM 卡，沿相反的方向轻推。

01

02

03

04


05

06

07

08

安装 SIM 卡和电池

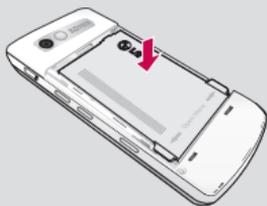


4 安装电池

先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底端，直至电池卡入到位。



5 合上电池盖

将电池盖沿手机顶部滑动，直到卡入到位。

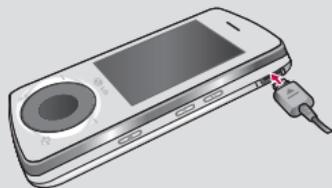

6 充电


滑开 KM710 侧面的充电器插槽盖。插入充电器并插入电流插座。只有屏幕上显示“已完全充电”信息，KM710 充电才完成。

储存卡

安装储存卡

使用储存卡，可以扩展手机的可用储存空间。

要插入储存卡，请将储存卡滑入插槽顶部，直到卡入到位，确保金色接触区域面朝上。

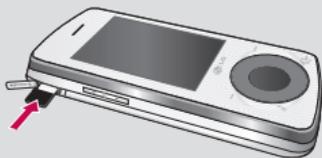

01

02

03

04

05

06

07

08

菜单地图



游戏马 应用程序

- 1 游戏
- 2 应用程序
- 3 网络设定



通话记录

- 1 所有通话
- 2 通未接来电
- 3 接通来电
- 4 通来电
- 5 通话时间
- 6 数据资料



公文包

- 1 日历
- 2 备忘录
- 3 任务



多媒体

- 1 照相机
- 2 录影机
- 3 Muvee
- 4 FM 收音机
- 5 录音机



信息

- 1 新信息
- 2 收件箱
- 3 电子邮箱
- 4 蓝牙箱
- 5 草稿箱
- 6 发件箱
- 7 已发件箱
- 8 收听语音邮件
- 9 小区广播信息
- 0 模板
- * 设置



我的文档

- 1 图像
- 2 声音
- 3 视频
- 4 其它
- 5 游戏马应用程序



情景模式

- 1 普通
- 2 静音
- 3 仅振动
- 4 户外
- 5 耳机



电话本

- 1 搜索
- 2 新联系人
- 3 快速拨号
- 4 群组
- 5 全部复制
- 6 全部删除
- 7 设置
- 8 资料



工具

- 1 闹钟
- 2 计算器
- 3 小费计算器
- 4 计时表
- 5 单位对换器
- 6 世界时钟



浏览器

- 1 主页
- 2 Google
- 3 书签
- 4 输入网址
- 5 网址浏览记录
- 6 已保存的页面
- 7 设置
- 8 资料



MP3 播放机

- 1 所有歌曲
- 2 我的播放列表
- 3 歌手
- 4 相册
- 5 风格
- 6 随机播放所有歌曲
- 7 音乐编号



设置

- 1 日期和时间
- 2 语言
- 3 显示
- 4 快捷键
- 5 触摸键盘
- 6 连接
- 7 通话
- 8 保安
- 9 飞行模式
- 0 省电
- * 重新设置
- # 储存器状态

待机屏幕

状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启动了蓝牙。

下表说明了您可能在状态栏中看到的不同图标的涵义。

图标	描述
	网络信号强度（指示栏数不同）
	无网络信号
	剩余电量
	电池电量空
	新文本信息
	新语音信息
	收件箱已满
	收到新文本+语音信息
	已设定闹钟

图标	描述
	正在使用“振动”情景模式
	正在使用“普通”情景模式
	正在使用“户外”情景模式
	正在使用“静音”情景模式
	正在使用“耳机”情景模式
	呼叫被转接
	GPRS 可用
	EDGE 可用
	正在漫游
	已选择航行模式
	蓝牙

01

02

03

04

05

06

07

08

待机屏幕



转盘导航键和触摸键盘

使用转盘导航键，您可以更轻松地选择菜单和功能。从主菜单中，选择**设置**，然后选择**触摸键盘**。在此，您可以打开或关闭**振动**，然后选择触摸键盘**敏感度**。

主菜单

主菜单提供 12 个菜单选项。

- 1 选择**菜单**。
- 2 使用箭头键或转盘选择所需菜单选项。
- 3 选定需要的选项时，按**确定**打开。

呼叫

拨打电话或视频电话

- 1 使用键盘键入号码。
要删除一个数字，请按 **C**。
- 2 按  键启动通话。
- 3 要结束通话，请按  键。

提示! 要输入 + 以拨打国际电话，请按住 **0**。

从电话簿拨打电话

- 1 按  键打开地址簿。
- 2 使用键盘输入您要呼叫的联系的第一个字母。例如，要呼叫 Office，请按 **6** 三次。
- 3 要在联系人及其不同电话号码间滚动，请使用  和  。
- 4 按  键启动通话。

接听和拒绝电话

电话铃响起时，请按  键接听电话。

电话响后，打开手机或按相机键，然后选择**静音**以静音。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。

按  键拒接来电。

提示! 您可以更改手机上的设置以不同方式接听来电。按  或 ，选择 ，然后选择**通话**。选择**接听模式**，从**滑盖滑开**、**任意键**或**仅发送键**中选择。

01

02

03

04

05


06

07

08

呼叫

通话选项

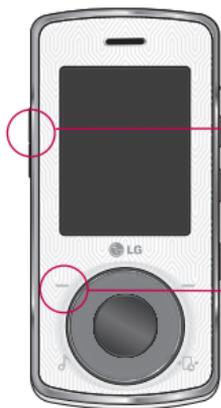

调节呼叫音量

要调节通话过程中的音量，请按手机右侧的音量键。

选项 - 从列表中选择其它来电选项，包括**电话簿和信息**，以便您在通话过程中查看信息和电话簿。

快速拨号

您可以为常用联系人指定快速拨号号码。

- 1 按  或 ，然后选择 。
- 2 选择**快速拨号**。
- 3 语音信箱已设为快速拨号 1。不能对此设置进行更改。使用  和  键选择其它号码，然后按  选择**分配**，或按硬键号码。
- 4 此时将打开您的地址簿。使用  和  键选择您要分配到该号码的联系人，然后选择**确定**。

要呼叫快速拨号号码，按住指定的数字，直到屏幕上显示该联系人。将自动启动呼叫，无需再按 。

查看通话记录

按  或 ，然后选择  以查看：

所有通话 - 查看所有拨电、已接来电和未接来电的完整列表。

通未接来电 - 查看您没接到的所有电话的列表。

通接来电 - 查看所有已拨打的电话的列表。

通来电 - 查看打给您的所有电话的列表。

通话时间 - 查看通话时长的详细信息。

提示! 从任意通话记录中选择“选项”，然后选择“删除”删除选定的或所有录制项。

提示! 使用  和 ，突出显示单个通话条目以查看该通话的日期和时间。要查看通话时间，请选择“选项”，然后选择**查看**。

呼叫

使用呼叫转接

- 1 按  或 ，选择 ，然后选择**呼叫**。
- 2 选择**呼叫转接**。
- 3 选择转接电话的情况：转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。
- 4 选择**启动**，然后选择是要转接到语音邮箱、其它号码还是常用号码。
- 5 输入转接号码或选择**电话簿**浏览转接号码。

备注：转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

提示！要关闭所有通话转接，请从**呼叫转接**菜单中选择**全部取消**。

使用呼叫阻截

- 1 按  或 ，选择 ，然后选择**呼叫**。
- 2 选择**呼叫阻截**。
- 3 选择以下七个选项中的一项或所有项：
 - 所有拨电**
 - 国际拨电**
 - 主国以外的国际拨电**
 - 所有来电**
 - 在国外的来电**
 - 取消所有阻截**
 - 更改密码**
- 4 选择**启动**，然后输入呼叫阻截密码。请与您的网络运营商联系，了解有关此服务的信息。

提示！从**通话**菜单中选择**固定拨号号码**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。启动后，仅可以使用手机拨打此号码列表中的号码。

更改呼叫设置

1 按  或 ，选择 ，然后选择**通话**。

2 在此，您可以修改以下设置：

呼叫转接 - 选择是否要转接呼叫。

呼叫拦截 - 选择何时拦截呼叫。

接听模式 - 选择是使用接受键、任意键接听电话还是滑开手机时接听电话。

发送本机号码 - 选择当您呼叫对方时是否显示您的号码。

呼叫等待 - 有等待呼叫时会收到通知。

分钟提示 - 选择**打开**，在通话过程中每一分钟将听到一次提示音。

自动重拨 - 选择开或关。

选择线路 - 可选择线路1或线路2。

(需网络供货商和智能咕支援)。

封闭用户群组 - 定义

发送双音多频音 - 选择开或关。

电话本

搜索联系人

按  或 ，选择 ，然后选择**搜索**。

或者，使用更快捷的方式...

- 1 从待机屏幕按 。
- 2 输入您要呼叫的联系人的第一个字母。
- 3 要在联系人及其不同电话号码间滚动，请使用  和 。

添加新联系人

- 1 按  或 ，选择 ，然后选择**新联系人**。
- 2 选择是将新联系人保存到**手机**还是**SIM 卡**。
- 3 在提供的字段中输入所有资料，然后选择**保存**。

或者，使用更快捷的方式...

- 1 在待机屏幕上输入要保存的号码，选择**选项**，然后选择**保存、设置号码类型**。
- 2 输入以上相关资料，然后选择**保存**。

备注：保存联系人的电子邮件地址时，按  输入符号，使用  和  滚动，直到看到 。

联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用选项菜单：

- 1 打开您要使用的联系人。请参阅上面的**搜索联系人**。
- 2 按  打开选项列表。

在此，您可以：

查看 - 您可查看联系人。

修改 - 更改联系人的任何详细信息。

拨号 - 您可致电给联系人。

新建信息 - 您可寄信息给联系人。

发送方式 - 将联系人的详细信息作为名片发送给其他人。选择发送方式：**作为文本信息**、**作为多媒体信息**、通过**蓝牙**还是通过**电子邮件**。

通过蓝牙发送所有联系人 - 您可通过蓝牙发送联系人

删除 - 删除联系人。如果确定，请选择“确定”或按 。

新联系人 - 添加新联系人。

复制至 SIM 卡/手机 - 选择是移动或复制到 SIM 卡还是手机（取决于联系人的初始保存位置）。

将联系人添加到群组

您可以将联系人集合到群组，例如，将工作同事和家人分开。手机中已设置多个群组：**朋友**、**同事**和**重要人士**。

- 1 按  或 ，选择 ，然后选择**群组**。
- 2 滚动到您要添加联系人的群组，选择**添加成员**。
- 3 此时将打开您的电话簿。滚动到您要添加到群组的联系人，依次选择**选项**和**全部标记**（或者按  即可），然后选择**完成**。

提示！ 您可以为群组指定来电铃声或图标。选择您要为其指定来电铃声或图标的群组，选择选项，然后选择所需项目。

重命名群组

您可以重命名群组以满足您的要求。

- 1 按  或 ，选择 ，然后选择**群组**。
- 2 突出显示您要重命名的群组。
- 3 选择“选项”，选择**重命名**，然后输入新群组名称。
- 4 选择**保存**。

备注：您仅可以将联系人分配到群组或向联系人添加保存在手机内存（不是 SIM 卡）中的图片。

电话本

为联系人添加图片

您可以为联系人添加图片，更改联系人在地址簿中的显示方式。

- 1 按  或 ，选择 ，然后选择**设置**。
- 2 选择**视图选项**，然后选择**附加图片**。
- 3 然后返回地址簿，选择您要为其添加图片的联系人。
- 4 选择“选项”，然后选择**编辑**。
- 5 向下滚动到**图片**部分。
选择“选项”，然后选择**新建图片**。

此时将打开相机取景器，以便您为联系人拍照。或者，您可以从**图像**文件中选择一张图片。

将电话簿复制到 SIM 卡

您也可以选择将联系人从 SIM 卡复制到手机，或从手机复制到 SIM 卡。

- 1 按  或 ，选择 ，然后选择**全部复制**。
- 2 选择复制联系人：**SIM 卡至手机**或**手机至 SIM 卡**。
- 3 选择是保存还是删除原始记录。

删除所有联系人

- 1 按  或 ，选择 ，然后选择**全部删除**。
- 2 选择是从 **SIM 卡**还是**手机**删除联系人。
- 3 如果确定，请选择**确定**。

查看资料

按  或 ，选择 ，然后选择**资料**。

在此，您可以查看**服务号码**、您的**本机号码**以及**我的名片**。

提示! 如果您尚未创建名片，**我的名片**屏幕将为您提供创建名片的选项。选择**新建**，输入所需联系人的详细信息。选择**保存**。

信息

信息

KM710 将文本信息、多媒体信息、蓝牙信息和电子邮件集到一个直观易用的菜单中。仅需按  或 ，然后选择 。

发送信息

发送文本信息的快速方式是从待机屏幕按 ，然后直接转到下面的步骤 4。

或者：

- 1 按  或 ，选择 ，然后选择**新信息**。
- 2 选择是发送**文本**信息还是**多媒体**信息。
- 3 此时将打开一条新信息。
- 4 使用 T9 预测模式或 Abc 手动模式输入信息。
请参阅**输入文本**，查看如何在不同的文本输入模式间切换。
- 5 选择“选项”，然后选择**插入**以添加图像、动画、声音、符号、文本模板、情绪图标或姓名和号码。
- 6 选择“选项”，然后选择**发送**或按  即可。
- 7 输入电话号码，或选择“选项”后选择**电话簿**以打开联系人列表。
您可以添加多个联系人。

- 8 选择“选项”，然后选择**发送**或按  即可。

输入文本

有两种方式可输入文本：

T9 预测和 Abc 手动。

要打开 T9 预测文本，打开一条新信息，然后依次选择“选项”、**T9 语言**和 **T9 开**。打开 T9 后，您可以使用  在 T9 预测、Abc 手动和数字之间切换。

T9 预测

T9 模式根据您的按键顺序，使用内置词典识别您输入的字。只需按与您要输入的字母关联的数字键即可，随着您的键入内容，字典将识别您输入的字。例如，依次按 8、3、5、3、7、4、6、6、3 输入“telephone”。

如果没有出现您需要的单词，请选择“选项”，然后选择**新建 T9 单词**。使用 Abc 手动模式输入单词，您输入的单词或名称将被添加到词典中。

Abc 手动

在 Abc 模式中，要输入字母，您必须重复按键。例如，要写入“hello”，需要按两次 4、两次 3、三次 5，再按三次 5，最后按三次 6。

信息

Abc 手动

在 Abc 模式中，要输入字母，您必须重复按键。例如，要写入“hello”，需要按两次 4、两次 3、三次 5，再按三次 5，最后按三次 6。

 **警告：** 您将按每个收件人每条文本信息 160 个字符付费。

信息文件夹

按  或 ，选择 。您可以识别 KM710 中的文件夹结构，完全无需进行说明。

收件箱 - 您接收到的所有信息将放置在收件箱中。在此，您可以进行回复、转发等操作，有关详细信息，请参阅以下内容。

电子邮件 - 包含您的所有电子邮件信息。

蓝牙箱 - 蓝牙箱文件夹包含蓝牙信息文件夹。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 - 这是发送信息时的临时储存文件夹。

已发件箱 - 您发送的所有信息将放置在“已发件箱”文件夹中。

小区广播信息 - 接收自运营商的所有小区广播和更新。

模板 - 一个已撰写好的有用信息列表，用于快速回复。

在此，您还可以通过选择**收听语音邮件**进入语音邮箱，或通过选择**设置**进入信息设置。

管理信息

您可以使用收件箱管理信息。

1 按  或 ，选择 ，然后选择**收件箱**。

2 选择“选项”，然后选择：

查看 - 查看选定的信息。

删除 - 删除选定的信息。

回复 - 回复选定的信息。

转发 - 将选定信息发送给其他人。

以电话回复 - 向发件人拨打电话。

保存号码 - 保存新联系人或现有联系人。

资料 - 查看有关信息的详细资料，例如，发送时间。

多项删除 - 删除选定的信息。

删除所有已读的 - 将删除所有打开的信息。

全部删除 - 您可以选择是否删除每种类型的所有信息。

如果看到信息**无空间接收 SIM 卡信息**，您应从收件箱中删除一些信息。如果看到信息**无空间接收信息**，您可以删除信息或保存的文件以腾出空间。

使用模板

为您最常使用的文本信息和多媒体信息创建模板。手机中已存在多个模板，您可以根据需要进行编辑。

- 1 按  或 ，选择 ，然后选择**模板**。
- 2 选择**文本模板**或**多媒体模板**。随后，您可以选择**选项**，然后选择**编辑**更改现有模板；或选择“选项”以**新建模板**或**删除模板**。
- 3 要发送模板，请选择您要发送的模板，选择“选项”，然后选择**发送方式**。
- 4 选择您要发送模板的方式：作为文本信息、作为多媒体信息、蓝牙信息或电子邮件。
- 5 选择一个联系人，然后依次选择“选项”、**发送**（或仅按  即可）。

更改文本信息设置

KM710 已预定义信息设置，因此，您可以立即发送信息。

如果您要更改设置，请参阅以下内容获取详细资料。

按  或 ，选择 ，然后选择**设置**和**文本信息**。您可以更改：

信息类型 - 将文本转换为语音、传真、传呼、X.400 电子邮件或ERMES。

有效期 - 选择信息在信息中心中的最常保存时间。

发送报告 - 选择可接收信息已发送确认信息。

回复计费 - 选择对回复信息收件人计费。

信息中心号码 - 输入信息中心的详细信息。

符号编码 - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

信息

更改多媒体信息设置

KM710 已预定义信息设置，因此，您可以立即发送信息。

如果您要更改设置，请参阅以下内容获取详细资料。

按  或 ，选择 ，然后选择**设置**和**多媒体信息**。

您可以更改：

主题 - 在多媒体信息中包含主题字段。

幻灯片播放时间 - 选择幻灯片在屏幕上显示多长时间。

发送时间 - 选择每封邮件的发送前的时间。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最常保存时间。

发送报告 - 选择是否允许请求发送报告。

阅读报告 - 选择是否允许发送阅读报告。

自动下载 - 选择是自动还是手动下载多媒体信息，取决于您是在当地还是漫游。

网络设置文件 - 选择特定于网络设置文件的运营商以发送多媒体信息。

许可的消息类型 - 选择允许接收其多媒体信息的发件人类型。

更改其它设置

按  或 ，选择 、**设置**，然后选择：

电子邮件 - 设置电子邮件帐户，选择接入点和接收间隔，以及添加签名。

语音邮件号码 - 您的语音邮件号码保存在此。有关其提供的服务的详细资料，请联系您的网络运营商。

服务信息 - 您可以在此关闭 Push 信息，这意味着您的信息在到达时将不再被直接推入设备，只有在您检查新信息时才会。

小区广播 - 查看接收自运营商的所有小区广播和更新。

照相机

快速拍照

- 1 按住手机右侧的  键，此时屏幕上将出现相机取景器。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 按  或手机右侧的  键拍照。

拍照后

拍好的照片将显示在屏幕上。图像名称滚动显示在屏幕底部。

选择右侧的子菜单，您可以在此选择拍摄新照片、将图像设为**墙纸**或**图像编号**、作为多媒体信息、通过蓝牙或电子邮件发送照片。要退出相机，请按住 **C**。

使用工具栏选项

选择选项将在取景器屏幕底部显示选项工具栏。

解析度 - 请参阅第 30 页的“更改图像大小”。

质量 - 在**标准**、**精细**和**超精细**之间切换。质量越精细，照片将越清晰，同时，文件更大。储存卡中可保存的大照片文件则越少。

快门音 - 从三种快门声音中选择一种或将声音切换为关。

保存至 - 可选择手机或外部

重新设置 - 选择是重新设置手机，恢复为原始相机设置。

计时器 - 延迟计时器允许您设置按下拍摄按钮后的延迟。从 **3 秒**、**5 秒**或 **10 秒** 中选择。如果照片中要包括您自己，自拍器非常有用。

连拍 - 可以自动快速连续拍摄最多 6 张照片。适用于拍摄移动中的物体或体育赛事。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。

从以下选项中选择：**自动**、**日光**、**白炽**、**阴天**或**荧光效果**。

彩色效果 - 从四个图像效果选项中选择：**关**（标准/彩色）、**旧照片**、**单色**（黑白）或**底片**。

曝光值 - 您可以调节曝光值。

照相机

更改图像大小

您可以更改照片大小以保存在储存空间中。像素越高，文件越大，同时意味着将占用更多内存。如果要在手机中保存更多图片，请更改像素大小，使文件更小。

- 1 选择**选项**，从工具栏中选择**解析度**。
- 2 从 5 个数字选项中选择像素值（QV: 320X240、V: 640X480、1M: 1280X960、2M: 1600X1200、3M: 2048X1536）。
- 3 选择要使用的大小，然后选择**确定**。设置菜单将自动关闭，您可以拍照了。

查看保存的照片

- 1 您可以通过相机模式或从待机屏幕访问保存的照片。从取景器中选择**相册**即可。您应该在待机屏幕中按  或 ，然后选择**我的文档和图像**。
- 2 屏幕上将显示您的图片库。
- 3 使用箭头选择您要查看的照片，然后选择“选项”、**查看**或按  即可放大。

将照片设为墙纸或图像编号

您可以设置以设定时间间隔显示图像。从图片库中，使用  和  选择图像，然后选择“选项”、**设定为**，将选定图像用作墙纸或联系人的图像编号。

备注： 图像编号仅可添加到手机（不是 SIM 卡）中保存的联系人中。

录影机

快速摄像

- 1 按  或  并选择 ，然后选择**录影机**。
- 2 将相机镜头对准要拍摄的物体。
- 3 按  一次或按手机右侧的  键开始录制。
- 4 **REC** 出现在取景器的左下角，计时器将显示视频长度。
- 5 要暂停视频，请选择**暂停**，要恢复录制，请选择**恢复**。
- 6 选择**停止**可以停止录制。

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。图像名称滚动显示在屏幕底部。选择一个子菜单，您可以在这里选择拍摄新视频、播放视频，或通过多媒体信息、蓝牙或电子邮件发送视频，或查看“相册”中的其它视频。

使用工具栏选项

选择选项将在取景器屏幕底部显示选项工具栏。使用箭头键导航工具栏选项。

解析度 - 如果要在手机中保存更多视频，请更改像素大小，使文件更小。有两个选项可供视频选择：320 x 240 或 176 x 144。

质量 - 在**精细**、**标准**和**超精细**之间切换。质量越精细，视频将越清晰，同时，文件更大。手机内存中可保存的大视频文件则越少。

保存至 - 可选择手机或外部。

重新设置 - 选择**是**重新设置手机，恢复为原始录影机设置。在风景视图的取景器屏幕中，按  或  将显示以下子菜单，提供有关录影机设置的详细信息。

视频模式 - 要录制作为多媒体信息发送的视频，请选择多媒体信息。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从以下选项中选择：**自动**、**日光**、**白炽**、**阴天**或**荧光效果**。

彩色效果 - 从四个色调选项中选择：**关**（标准/彩色）、**旧照片**、**单色**（黑白）或**底片**。

01

02

03

04

05

06

07

08

录影机

曝光值 - 您可以调节曝光值。

提示! 设置菜单层叠在取景器之上。更改图像色彩或质量元素时，您无法在设置菜单背景下预览所做的图像更改。

观看保存的视频

- 1 您可以从录影机模式或待机屏幕访问保存的视频。从取景器中选择**摄像册**。您应该在待机屏幕中按  或 ，然后选择**我的文档**和**视频**。
- 2 屏幕上将显示您的图片库。
- 3 使用  和  选择要查看的视频，然后选择“选项”、**播放**或按  即可观看该视频。

观看视频时调节音量

要在播放视频时调整音频音量，请使用手机左侧的键。

我的文档

您可以将任意多媒体文件储存在手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到储存卡中。使用储存卡的优点是：您可以释放手机内存的存储空间。

所有多媒体文件保存在“我的文档”中。要访问“我的文档”，请按  或 ，然后按  打开一个文件夹列表，该列表中保存了所有多媒体文件。

图像

图像包含一个文件夹，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

图像选项菜单

图像中可用的选项取决于您选择的图像类型。对于使用手机相机拍摄的照片，所有选项均可用。对于默认图像，以下选项可用：**查看**、**设定为**、**文件资料**、**幻灯片**、**排序方式**和**列表视图**。

在**图像**文件夹中，选择“选项”以显示选项列表。

查看 - 查看选定的信息。

删除 - 删除选定的图像。

设定为 - 将选定图像设为墙纸或图像编号。

发送方式 - 通过多媒体信息、蓝牙或电子邮件向朋友发送选定的图像。

备注：在通过多媒体信息发送图像前，可能需要调整其大小。

文件 - 修改图像、重命名、制作动画或查看所选图像的资料（名称、大小、日期、图像大小和版权所有）。如果插入了外部储存卡，将另外显示两个选项：**移动至外部储存卡**和**复制至外部储存卡**。

通过蓝牙打印 - 通过 PictBridge 或蓝牙打印图像文件。

幻灯片 - 请参阅第 35 页的“创建幻灯片”。

新建文件夹 - 在主图像文件夹中创建一个新文件夹。

标记/取消标记 - 您可标记或取消标记。

全部删除 - 删除“图像”文件夹中的所有照片。

排序方式 - 按日期、类型或名称排列图像。

列表视图：更改您查看照片的方式。

我的文档

发送照片

- 1 按  或 ，然后选择 。
- 2 滚动并选择**图像**。
- 3 选择照片，然后选择“选项”。
- 4 选择**发送方式**，然后从**多媒体信息**、**蓝牙**或**电子邮件**中选择。
- 5 如果选择**多媒体信息**或**电子邮件**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择“蓝牙”，手机将提示您打开蓝牙并搜索要将图片发送至的设备。

管理图像

- 1 按  或 ，然后选择 。
- 2 滚动并选择**图像**。
- 3 选择“选项”，然后选择**排序方式**。
- 4 从**日期**、**类型**或**名称**中选择。

删除图像

- 1 按  或 ，然后选择 。
- 2 滚动并选择**图像**。
- 3 选择图像，然后选择“选项”。
- 4 选择**删除**。

删除多个图像

- 1 按  或 ，然后选择 。
- 2 滚动并选择**图像**。
- 3 依次选择“选项”、**标记/取消标记**和**删除**。
- 4 在每个图像旁边将显示一个框。选择图像，然后依次选择“选项”、**全部标记**或按  即可标记。要取消标记图像，请依次选择“选项”、**取消所有标记**或按  即可取消勾选。
- 5 标记了所有对应的框后，选择**完成**并确认您要删除所有标记的图像。

创建幻灯片

如果您要查看手机中的所有图像或浏览已有图像，您可以创建一个幻灯片，这样，您无需对每张图像都执行打开和关闭操作。

- 1 按  或 ，然后选择 。
- 2 滚动并选择**图像**。
- 3 选择您要开始幻灯片放映的照片，然后选择“选项”。
- 4 选择**幻灯片**，放映即开始。
- 5 选择“选项”、**暂停**以暂停幻灯片放映，选择**退出**结束幻灯片放映并返回“图像”文件夹。

在幻灯片放映过程中选择“选项”会显示更多选项：

重复开/关 - 确定是否重复幻灯片放映。

声音

声音文件夹包含**默认声音**和录音。在此，您可以管理、发送或将声音设为铃声。

使用声音

- 1 按  或 ，然后选择 。
- 2 滚动并选择**声音**。
- 3 选择**默认声音**或从录音文件列表中选择。

- 4 选择声音，然后选择“选项”、**播放**或按  即可试听该声音。
- 5 选择“选项”、**设定为**，然后从**铃声类型**和**铃声编号**中选择。

视频

视频文件夹显示已下载的视频以及手机中录制的视频列表。

观看视频

- 1 按  或 ，然后选择 。
- 2 滚动并选择**视频**。
- 3 选择一个联系人，然后选择“选项”、**播放**或仅按  即可。

暂停视频时使用选项

选择“选项”将暂停正在播放的视频，您可以从以下选项选择：

删除 - 删除视频。

发送方式 - 以多媒体、蓝牙或电子邮件信息发送视频。

文件 - 重命名视频、将所选视频移至文件夹，或查看资料（名称、日期、大小、播放和版权所有）。

风景视图 - 更改查看视频的方式。

我的文档

发送视频剪辑

- 1 使用箭头键选择视频。
- 2 选择“选项”、**发送方式**，然后从**多媒体信息**、**蓝牙**或**电子邮件**中选择。
- 3 如果选择**多媒体信息**或**电子邮件**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将视频发送至的设备。

备注：在通过多媒体信息发送视频前，可能需要调整其大小。某些视频可能太大，根本无法通过多媒体信息发送，在这种情况下，请选择其它发送选项。

使用视频选项菜单

在“视频”文件夹中，选择“选项”以显示下列选项列表。

播放 - 观看选定的视频。

删除 - 删除选定的视频。

发送方式 - 使用多媒体信息、蓝牙或电子邮件发送视频。

文件 - 编辑或重命名视频，或查看资料（名称、大小、日期、播放和版权所有）。

新建文件夹 - 在主视频文件夹中创建一个新文件夹。

标记/取消标记 - 选择多个要删除的视频剪辑。

全部删除 - 删除“视频”文件夹中的所有剪辑。

排序方式 - 按日期、类型或名称排列视频。

列表视图 - 更改您查看视频的方式。

其它

其它文件夹用于储存非图片、声音、视频、游戏或应用程序文件。

当您从计算机传输到手机时，您可能发现文件保存在**其它**文件夹中。

游戏马应用程序

KM710 中预安装了多款游戏，供您在闲暇时娱乐。如果选择要下载其它游戏或应用程序，它们将保存到此文件夹中。

玩游戏

- 1 按  或 ，然后选择 。
- 2 滚动并选择**游戏马应用程序**。
- 3 选择所选游戏，然后依次选择“选项”、**玩游戏**或按  即可。

使用游戏选项菜单

在“游戏”文件夹中，选择“选项”以显示下列列表：

玩游戏 – 选择此选项可以开始玩游戏。

资料 – 查看文件的名称、版本、厂商、数据大小和域。

外部储存卡

如果您已插入储存卡，它将显示为我的文档中的一个文件夹。您的外部储存卡文件夹将分为四个文件夹：图像、声音、视频和其它。每个文件夹将包含该类型下所有保存在储存卡而不是手机中的文件。

将手机用作批量储存器

KM710 可以用作批量储存器，和 USB 记忆棒一样。要将文件从计算机移到手机时，这是一个好方法。如果已插入储存卡，作为批量储存器连接时，将在计算机上显示两个驱动器。手机内存和外部储存卡。

- 1 按  或 ，选择 ，然后选择**连接**。
- 2 选择 **USB 连接模式**。
- 3 滚动到**批量储存**，然后选择**确定**。
- 4 将 USB 数据线的较小端插入 KM710 一端的接口。将较大端插入

计算机的 USB 端口。

- 5 此时将自动打开一个可移动磁盘（如果已插入储存卡，则为两个），其中显示手机或储存卡上的所有文件夹。
- 6 将您的图像、视频、音乐或其它文件拖放至正确文件夹。
- 7 通过单击桌面工具栏上的**安全移除硬件**图标，安全移除您的手机。
- 8 当您访问文件时，如图像，请按  或 ，然后依次选择 、**外部储存卡**和**图像**。此文件中将包含所有您传送的图像。

将文件传输到手机

您也可以使用蓝牙将文件从计算机传送到手机。

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用计算机发送文件。
- 3 文件发出后，您必须选择**是**在您的手机上接受它。
- 4 文件将根据其类型保存到相应文件夹。例如，照片将保存在**图像**文件夹，音乐将保存在**声音**文件夹。如果手机无法识别文件类型，文件将保存在**其它**文件夹。

备注：使用蓝牙发送的文件将保存在手机内存中。

多媒体

音乐

LG KM710 拥有内置的 MP3 播放机，因此，您可以播放所有喜爱的音乐。

 音乐识别技术和相关数据由 Gracenote® 提供。

Gracenote 是音乐识别技术及相关内容传输方面的行业标准。有关详细资料，请访问 www.gracenote.com。

CD 和音乐相关数据来自 Gracenote, Inc., copyright © 2000–2006

Gracenote, 版权所有。Gracenote Software, copyright © 2000–2006 Gracenote, 版权所有。此产品及服务享有以下一项或多项专利：#5,987,525、#6,061,680、#6,154,773、#6,161,132、#6,230,192、#6,230,207、#6,240,459、#6,330,593 及其它已发行或待发行专利。一些服务在许可范围内由 Open Globe, Inc. 提供，其在美国的专利号为：#6,304,523。

Gracenote 和 CDDB 是 Gracenote 的注册商标。Gracenote 徽标和徽标类型，以及“Powered by Gracenote”徽标是 Gracenote 的商标。

要访问 MP3 播放机，按  或 ，然后选择 。在此，您可以访问：

LG KM710 | 用户手册

所有歌曲 – 包含手机中的所有歌曲。

我的播放列表 – 包括您创建的所有播放列表，以及**特殊**列表。您可以按以下特征之一选择特定音乐：**歌手、相册、风格和随机播放所有歌曲**。

提示! 您可以通过前面板上的热键  进入 MP3 播放机。使用  键，您可以直接进入播放列表。

将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或 USB 数据线。

使用蓝牙传输：

- 1 请确保双方设备都已打开蓝牙，对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件发出后，您必须选择是在您的手机上接受它。
- 4 文件将显示在 **MP3 播放机 > 所有歌曲**。

提示! 要通过 USB 数据线对 KM710 进行充电而不在显示批量存储器或音乐同步的动画信息，请选择“数据服务”模式。在此模式下，当 KM710 与计算机交换数据时，您只会看到数据服务模式的动画信息。

播放歌曲

- 1 按  或 ，然后选择 。
- 2 选择**所有歌曲**，然后选择要播放的歌曲。按 。
- 3 按  暂停歌曲。
- 4 按  跳到下一首歌曲。
- 5 按  跳到上一首歌曲。
- 6 选择“选项”、**最小化**隐藏音乐播放机屏幕，这样，在音乐播放时，您可以像往常一样使用手机。
- 7 选择**返回**以停止音乐并返回音乐菜单。

播放音乐时使用选项

选择“选项”，然后从下列内容中选择：

最小化

自然音开

添加至播放列表

通过蓝牙收听

设定为铃声

评级

资料

设置 - 更改**均衡器**或**播放模式**、更改音乐灯设置或**设置随机播放**以调节音乐效果。

提示! 要在聆听音乐时更改音量，请使用手机侧面的音量键。

备注：

ePlaylist: Gracenote ePlaylist

允许用户生成一键式“More Like This”播放列表：选择与样曲类似的一首或多首歌曲或歌手即可。

Gracenote 播放列表随后会返回一个音乐集，其中包含相关歌手和风格的音乐。

创建播放列表

您可以从**所有歌曲**文件夹中进行选择，以创建自己的播放列表。

- 1 按  或 ，然后选择 。
- 2 选择**我的播放列表**。
- 3 选择**新建**，输入播放列表名称，然后选择**保存**。
- 4 此时会显示**所有歌曲**文件夹。选择要包括在播放列表中的所有歌曲：滚动到这些歌曲，然后按 ；这些歌曲的名称前面会显示一个勾号。如果意外添加了不需要的歌曲，请选择它并再次按  以取消勾选。
- 5 选择“选项”，然后选择**保存**保存播放列表。

多媒体

播放播放列表

- 1 按  或 ，然后选择 。
- 2 选择**我的播放列表**。
- 3 选择要播放的播放列表，选择**查看**，然后按 。

编辑播放列表

您可能随时想要向播放列表添加新歌曲或从中删除歌曲。

您可能需要管理播放列表。要管理播放列表，您可以对其进行编辑。

- 1 按  或 ，然后选择 。
- 2 选择**我的播放列表**。
- 3 滚动到您要编辑的播放列表，选择**查看**，然后选择“选项”。

添加 - 使用此选项，您可以向播放列表添加歌曲，也可以从中删除歌曲。

删除 - 从播放列表中删除歌曲。选择**是**确认。

搜索 - 您可搜索播放列表中的歌曲。

向上移动/向下移动 - 在列表上上移或下移歌曲，以更改播放顺序。

发送方式 - 可选择多媒体信息、蓝牙或电子邮件。

全部删除 - 从播放列表中删除所有歌曲。

资料 - 查看播放列表资料。

删除播放列表

- 1 按  或 ，然后选择 。
- 2 选择**我的播放列表**。
- 3 滚动到您要删除的播放列表，然后选择“选项”。
- 4 选择**删除**，然后选择**是**确认。

备注：

DRM（数字版权管理）

由于安装了数字版权管理（DRM）系统，您从互联网下载或通过多媒体信息接收的某些媒体内容可能包含一个“购买权限”菜单，购买后方可访问。您可以从对内容具有所有权的网站获取购买版权的键。

音乐的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。请查看有关使用此材料的适用国家的国家立法。

如果您在 MP3 播放机正在播放 MP3 时按 MP3 短键，就可以使用 BGM 模式。在 BGM 模式中，您可以在使用其它功能时同时播放 MP3。BGM 可以在 MP3 播放机屏幕上停止。

使用收音机

LG KM710 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

备注：要收听收音机，您需要插入耳机。将耳机插入耳机插槽（与插入充电器的插槽相同）。

搜索电台

您可以手动或自动微调电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您可以在手机中最多保存 12 个频道。

自动微调：

- 1 按  或 ，然后选择 。
- 2 选择 **FM 收音机**。
- 3 选择**自动扫描**，然后选择**是**。
- 4 每次找到一个电台时，KM710 将询问您是否保存。如果要保存该频道，请选择**是**，否则，请选择**否**。手机将自动为您选择要保存的电台分配一个频道编号。

手动微调：

- 1 按  或 ，然后选择 。
- 2 选择 **FM 收音机**。
- 3 选择您要保存电台的频道编号，然后选择**编辑**。

- 4 要进入电台，您可以使用箭头键搜索频率，也可以使用键盘输入频率。

- 5 选择**保存**。

备注：使用**编辑**功能，您也可以编辑保存在频道编号中的电台，该编辑功能与您在电台手动微调中使用的编辑功能相同。

提示！要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

重新设置频道

- 1 按  或 ，然后选择 。
- 2 选择 **FM 收音机**。
- 3 选择“选择”，然后选择**重新设定频道**。选择**是**确认重新设置。每个频道的开始频率将返回为 87.5Mhz。

收听收音机

- 1 按  或 ，然后选择。
- 2 选择 **FM 收音机**。
- 3 选择您要收听的电台的频道编号。

多媒体

语音备忘录

使用**语音备忘录**录制语音备忘录或其它声音。

- 1 按  或 ，然后选择 。
- 2 选择**录音机**。
- 3 按  开始录音。
- 4 选择**暂停**暂停录音。
- 5 选择**停止**结束录音。
- 6 选择“选项”，然后选择**播放**收听录音。

备注：通过选择**专辑**，您可以收听保存的所有录音。

发送录音

- 1 完成录音后，请选择选项。
- 2 选择**发送方式**，然后从**多媒体信息**、**蓝牙**或**电子邮件**中选择。如果选择**信息**或**电子邮件**，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择**蓝牙**，手机可能提示您打开蓝牙。

提示！ 如果要將录音作为信息发送，开始录音前，请选择“选项”，然后选择**录音模式**。选择**彩信**。此操作将确保录音适合作为信息发送。

Muvee

此菜单功能通过将声音和图像以各种效果混合在一起，制作出新内容，当播放音乐时，将自动播放并传送图像。这些内容文件将保存在**我的文档**中。

- 1 按  或 ，然后选择 。
- 2 选择 **Muvee**。
- 3 选择一种 Muvee 演示，然后选择您要混合的图像。

公文包/工具

将事件添加到日程表中

- 1 从待机屏幕中按  或 ，选择 ，然后选择**日历**。
- 2 选择您要添加事件的日期。您可以通过以下方式选择日期：使用导航键滚动到日期；或选择“选项”，然后手动输入日期。

备注：如果您已在日程表中保存了事件，要为事件输入日期，在选择“选项”后，请选择**转到日期**。

- 3 选择“选项”，然后选择**新建日程表**，输入事件开始时间。使用箭头键向下滚动，输入事件的结束时间。
- 4 向下滚动，输入事件**主题**。
- 5 再次向下滚动，选择是否要为事件设置**闹钟**。向左或向右滚动，查看可用选项。您可以将闹钟设为在事件开始时停止，或在事件开始前的特定时期内停止，以提醒您该事件即将开始。
- 6 再次向下滚动，选择事件是一次性事件，还是以**每日、每周、每月或每年**为间隔重复。如果事件为重复事件，您还可以向下滚动以输入**截止日期**，事件将在该日期完全停止。

- 7 选择**保存**，您的事件将保存在日程表中。对于保存了事件的日期，将以三角形光标标记。

编辑日程表事件

- 1 从待机屏幕中按  或 ，选择 ，然后选择**日历**。
- 2 选择“选项”，然后选择**所有日程表**以查看所有事件列表。滚动到您要编辑的事件，然后依次选择“选项”、**查看**或按  即可。或者，在日程表中选择事件日期，然后依次选择“选项”、**查看**或按  即可。
- 3 依次选择“选项”、**编辑**，或按  即可滚动到您要更改的事件的事件详情。进行修改，然后选择**保存**以储存编辑过的事件。

备注：您可以选择事件以查看它，然后依次选择“选项”、**删除**从日程表中删除该事件。

公文包/工具

共享日程表事件

- 1 从待机屏幕中按  或 ，选择 30，然后选择**日历**。
- 2 选择要共享的事件，然后选择“选项”。
- 3 选择**发送方式**，从**文本信息**、**多媒体信息**、**蓝牙**或**电子邮件**中选择。

添加备忘录

- 1 在待机屏幕中按  或 ，选择 30，然后选择**备忘录**。
- 2 选择**新建**，键入您的备忘录。
- 3 依次选择“选项”、**保存**，或按  即可。
- 4 在您下一次打开备忘录应用程序时，将打开**备忘录**应用程序。

提示！ 您可以编辑现有备忘录。选择您要编辑的备忘录，选择“选项”，然后选择**编辑**。

向任务列表添加事件

- 1 在待机屏幕中按  或 ，选择 30，然后选择**任务**。
- 2 选择“新建”，为您的新任务键入到期日、备注、优先级和状态。（使用“选项”，您可以根据日程表选择日期）
- 3 依次选择“选项”、**保存**。
- 4 此时屏幕上将显示您的任务列表，选择“选项”，您可以选择查看、添加、删除和执行操作。

设置闹钟

- 1 在待机屏幕中按  或 ，选择 30，然后选择**闹钟**。
- 2 选择**新建**。
- 3 向下滚动，输入所需闹钟时间。
- 4 选择您希望闹钟响起的方式：**一次**、**每天**、**周一 - 周五**、**周一 - 周六**或**周六 - 周日**。
- 5 向下滚动，选择闹钟声音。依次选择“选项”、**声音**以选择新声音。
- 6 向下滚动，为闹钟输入名称或保留建议的名称。
- 7 选择**保存**。

备注： 您最多可以设置 5 个闹钟。即使手机关机，闹钟仍然会响起。

使用计算器

- 1 在待机屏幕中按  或 ，选择 ，然后选择**计算器**。
- 2 按数字键以输入数字。
- 3 对于简单计算，选择您所需的函数 (+, -, ×, ÷)，然后选择 =。
- 4 对于更复杂的计算，请选择**函数**以选择一个命令。
- 5 选择“清除”清除屏幕，以开始一个新计算。

使用秒表

- 1 在待机屏幕中按  或 ，选择 ，然后选择**计时表**。
- 2 选择**开始**启动计时器。
- 3 如果要记录时间，请选择**圈数**。
- 4 选择**停止**结束计时器。
- 5 选择**恢复**从您停止的时间重新开始秒表，或选择**重新设置**重新开始计时。

换算单位

- 1 在待机屏幕中按  或 ，选择 ，然后选择**单位对换器**。
- 2 选择要换算的内容：**币种、面积、长度、重量、温度、体积/容量或速度**。
- 3 向上滚动可以选择您要输入的测量单位。左右滚动可以选择单位，然后向下滚动以选择单位量。
- 4 向下滚动到单位换算框，选择您要换算的测量单位。在下面的行中将自动显示换算值。

向世界时间添加城市

- 1 在待机屏幕中按  或 ，选择 ，然后选择**世界时钟**。
- 2 选择“选项”、**更改时区**，然后选择城市。
- 3 从选项中选择**新城市**以在列表中添加更多城市。

使用 SIM 卡服务

此功能视 SIM 卡和网络服务而定。如果 SIM 卡支持 SAT（即，SIM 卡应用程序套件）服务，则此菜单将是 SIM 卡上储存的运营商特定服务的名称。

网络

轻松使用浏览器，您可以在需要时随时获取新闻、天气预报以及体育或交通资料。此外，您还可以使用浏览器下载最新音乐、铃声、墙纸和游戏。

访问网页

- 1 在待机屏幕中按  或 ，选择 ，然后选择**确定**。
- 2 要直接访问浏览器主页，请选择**主页**。或者，选择**输入网址**并键入所需的 URL。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 在待机屏幕中按  或 ，选择 ，然后选择**确定**。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加一个书签，请选择“选项”，然后选择**新建书签**。输入书签名称和 URL。
- 4 选择**保存**。现在，您添加的书签将显示在书签列表中。
- 5 要访问书签，只需滚动到所需书签，依次选择“选项”、**连接**或按  即可。您将被连接到书签页面。

保存页面

- 1 如上所述，访问所需网页。
- 2 选择“选项”，滚动到**保存**，然后选择**此页**。
- 3 选择**确定**。

提示! 此菜单还允许您编辑已保存的页面的标题、保护或取消保护屏幕备忘录，以及删除保存的页面。

访问已保存的页面

- 1 在待机屏幕中按  或 ，选择 ，然后选择**确定**。
- 2 选择**已保存的页面**。
- 3 选择所需页面，然后依次选择“选项”、**连接**或仅按  即可。

查看浏览器历史记录

- 1 在待机屏幕中按  或 ，选择 ，然后选择**确定**。
- 2 选择**网址浏览记录**，然后选择**确定**。
- 3 此时将显示一个您最近访问过网页的标题列表。要访问其中一个网页，请滚动到所需页面，依次选择“选项”、**连接**或按  即可。

更改网络浏览器设置

- 1 从待机屏幕中按  或 ，然后选择 。选择**设置**。
- 2 您可以选择浏览互联网时手机的处理方式、显示方式以及资料使用方式。您可以修改以下设置：**网络设置文件、提供模式、缓存、Cookie、保安证书、显示图像、Java 脚本**和**正在使用存储器**。
- 3 更改设置后，请选择**确认**。

设置

使用此文件夹，您可以调整设置以使 KM710 更具个性化。

备注：有关详细资料，请参阅第 21 页的“呼叫设置”。

个性化情景模式

您可以在待机屏幕上快速更改情景模式。按 ，选择要启动的情景模式即可。从以下选项选择：

普通

静音

仅振动

户外

耳机

使用“设置”菜单，您可以更改每个情景模式设置。

1 按  或 ，然后选择 。

2 对于**静音**和**仅振动**情景模式，您可以调整振动强度。对于其它情景模式，您可以更改列表中可用的所有声音和提醒选项，包括呼叫提示类型、铃声、铃声音量 and 信息提示类型等（有关详细信息，请参考您的手机）。

更改显示设置

1 按  或 ，然后选择 。

2 选择**屏幕显示**，然后从以下选项中选择：

墙纸 - 选择要显示在屏幕上的墙纸。

时钟 - 选择要在屏幕上显示的时钟类型。

屏保 - 更改显示项目和显示时间。

背景灯计时器 - 选择背景灯显示的持续时间。

亮度 - 调整屏幕亮度。

主屏快捷键 - 更改待机屏幕快捷键。

主题 - 快速更改屏幕整体外观。

字体大小 - 选择字体大小：标准、中、大。

主题 - 快速更改屏幕整体外观。

菜单样式 - 将菜单视图从网格视图更改为列表视图，反之亦然。

拨号样式 - 调整您键入电话号码时显示的字体样式。

待机文本 - 选择待机屏幕上的显示信息。

网络名称 - 选择是显示还是隐藏网络名称。

备注：背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的用手机进行充电。

更改手机设置

您可以自由调整 KM710 的设置，使其满足您的需要。

按  或 ，然后选择 。从以下列表中选择：

日期和时间 - 调整日期和时间设置，或者，选择在旅行时自动更新时间。

语言 - 更改 KM710 的显示语言。

显示 - 更改屏幕设置。

快捷键 - 可编辑快捷键。

触摸键盘 - 可变更触摸键盘设定。

连接性 - 有关详细资料，请参阅“更改连接设置”。

呼叫 - 有关详细资料，请参阅第 21 页的“呼叫设置”。

保安 - 有关详细资料，请参阅第 51 页的“更改保安设置”。

飞行模式 - 将航行模式切换为开或关。航行模式打开时，您将无法拨打电话、连接互联网、发送信息或使用蓝牙。

省电 - 选择以设置省电选项：**始终打开**、**仅夜间**或**关**。

重新设置 - 将所有设置重置到其出厂设置。

储存器状态 - 查看 KM710 中内存的当前状态（公用、预留和 SIM 卡）。

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

按  或 ，然后选择 。选择**连接**。选项包括：

蓝牙 - 设置 KM710 以使用蓝牙。您可以调整对其它设备的可见性，或搜索您可以与之配对的设备。

网络 - KM710 将自动连接到首选网络。要更改这些设置，请使用此菜单。您还可以使用此菜单附加 GPRS 和添加新的接入点。

USB 连接模式 - 选择**数据服务**并使用 LG PC 套件软件同步 KM710 以复制手机中的文件。如果您已插入储存卡，请选择**批量储存**，以与插入 USB 记忆棒时使用手机的相同方式来使用手机。连接计算机，将文件拖放到 KM710 可移动设备文件夹。有关详细资料，请参阅第 37 页。

设置

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

开始使用蓝牙共享文件之前，您需要将您的设备与其它蓝牙设备配对。有关配对设备的详细资料，请参阅与**其它蓝牙设备配对**。

打开蓝牙：

- 1 按  或 ，然后选择 。
选择**连接**，然后选择**蓝牙**。
- 2 选择**打开/关闭蓝牙**，然后选择**开**。
- 3 选择**关**以关闭蓝牙。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 依次选择“选项”、**发送方式**，然后选择**蓝牙**。
- 3 如果尚未启动，请选择**是**打开蓝牙。
- 4 KM710 将自动搜索范围内其它启用了蓝牙的设备。
- 5 选择您要向其发送文件的设备，然后选择**发送**。
- 6 您的文件将被发送。

接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详细资料，请参阅**更改蓝牙设置**。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。选择**是**以接收文件。

提示！ 注意进度栏，确保文件已发送。

更改蓝牙设置

- 1 按  或 ，然后选择 。
选择**连接**，然后选择**蓝牙**。
- 2 选择**蓝牙设置**以更改：
我的可见性 - 选择是向其他人**显示**还是**隐藏**您的设备。
我的名称 - 为您的 KM710 输入一个名称。
我的地址 - 更改您的蓝牙地址。
主要储存位置 - 您可储存到手机或储存卡。（要插入记忆咭）。

与其它蓝牙设备配对

要将您的 KM710 与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为**开且可见**。您可以在**蓝牙设置**菜单中更改可见性：选择**我的可见性**，然后选择**可见**。
- 2 从蓝牙菜单中选择**装置列表**，然后选择**新建**。
- 3 KM710 将搜索设备。搜索完全**配对**时，屏幕上将显示**刷新**。
- 4 选择您要与之配对的设备，选择**配对**，输入通行码，然后选择**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 查看蓝牙是否为**开且可见**。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 选择**是以立即连接**。KM710 将自动切换到“耳机”情景模式。

更改保安设置

更改保安设置以保护 KM710 及重要信息。

按  或 ，然后选择 。选择**保安**，然后从以下列表中选择：

PIN 码要求 - 选择开机时要请求的 PIN 码。

自动键盘锁 - 选择键盘自动锁的时间。

手机锁 - 为以下选项选择保安密码以锁定手机：**开机时**、**更换 SIM 卡时**或**立即**。

固定拨号号码 - 选择可从此手机拨出的号码列表。

更改密码 - 更改您的**保安密码**、**PIN1 码**或**PIN2 码**。

配件

这些配件随 KM710 提供。

充电器



数据线和 CD

在 KM710 和电脑间建立连接并同步。




电池



用户手册

了解更多关于 KM710 的信息。

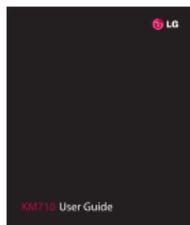

立体声耳机



外部储存卡



备注

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800 和 PCS1900 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

技术参数

常规

产品名称：KM710

系统：GSM900/DCS1800/PCS1900

外部环境

最高温度：+55° C（放电）、
+45° C（充电）

最低温度：-10° C

01

02

03

04

05

06

07

08

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM710

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary information

The conformity to above standards is verified by BABT.

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

02. FEB. 2008

Signature of representative

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息。此款 KM710 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10 克重的人体组织吸收的能量平均值不超过 2W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.376 W/Kg (10克)，戴在身体上时，其值为 0.734 W/Kg (10克)。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/Kg，平均

值超过一 (1) 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。
例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。

关于安全有效使用手机的准则

- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应在通风条件好的位置对手机进行充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。否则，可能导致安全气囊失效，或由于不适当的个人行为造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，例如，胸前的口袋内。

避免对您的听力造成伤害

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 请勿在加油点或化工厂附近使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。

关于安全有效使用手机的准则

- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KM710 User Guide

Congratulations on your purchase of the advanced and compact KM710 phone by LG, designed to operate with the latest digital mobile communication technology.

Gracenote® End User License Agreement

Version 20061005

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© Gracenote 2006

SET UP	01
YOUR STANDBY SCREEN	02
THE BASICS	03
GET CREATIVE	04
GET ORGANISED	05
THE WEB	06
SETTINGS	07
ACCESSORIES	08

Contents

01 SET UP

Getting to know your phone	9
Installing the SIM and battery	11
Memory card	13
Menu map	14

02 YOUR STANDBY SCREEN

Your standby screen	15
The status bar	15
Wheel Navigation Key & Touchpad	16
The main menu	16

03 THE BASICS

Calls	17
Making a call	17
Making a call from your contacts	17
Answering and rejecting a call	17
In-call options	18
Speed dialling	19
Viewing your call logs	19
Using call divert	20
Using call barring	20
Changing the call settings	21

Contacts	22
Searching for a contact	22
Adding a new contact	22
Contact options	22
Adding a contact to a group	23
Renaming a group	23
Adding a picture to a contact	23
Copying your contacts to your SIM / Phone	24
Deleting all your contacts	24
Viewing information	24
Messaging	25
Messaging	25
Sending a message	25
Entering text	25
Message folders	26
Managing your messages	26
Using templates	27
Changing your text message settings	27
Changing your multimedia message settings	28
Changing your other settings	28

04 GET CREATIVE

Camera	29	Using options while video is paused.....	36
Taking a quick photo.....	29	Sending a video clip	36
After you've taken your photo.....	29	Using the video options menu	36
Using your toolbar options.....	29	Others	36
Changing the image size.....	30	Games and Apps	37
Viewing your saved photos	30	Playing a game.....	37
Setting a photo as wallpaper or Picture ID	30	Using the games options menu.....	37
Video camera	31	External memory	37
Shooting a quick video.....	31	Using your phone as a Mass storage device	37
After you've shot your video	31	Transferring a file to your phone	38
Using your toolbar options.....	31	Multimedia	39
Watching your saved videos	32	Music	39
Adjusting the volume when viewing a video.....	32	Transferring music onto your phone	39
My stuff	33	Playing a song.....	40
Images	33	Using options while playing music.....	40
Images options menu.....	33	Creating a playlist.....	41
Sending a photo	34	Playing a playlist.....	41
Organising your images	34	Editing a playlist	41
Deleting an image	34	Deleting a playlist	42
Deleting multiple images.....	34	Using the radio	42
Creating a slide show.....	35	Searching for stations	42
Sounds	35	Resetting channels	43
Using a sound	35	Listening to the radio	43
Videos	35	Voice recorder	43
Watching a video.....	35	Sending a voice recording	44
		Muvee	44

Contents

05 GET ORGANISED

Organiser/Tools.....	45
Adding an event to your calendar.....	45
Editing a calendar event.....	45
Sharing a calendar event.....	46
Adding a memo.....	46
Adding an event to your To do list.....	46
Setting your alarm.....	46
Using your calculator.....	47
Using the stopwatch.....	47
Converting a unit.....	47
Adding a city to your world clock.....	47
Using the SIM Services.....	47

06 THE WEB

The web.....	48
Accessing the web.....	48
Adding and accessing bookmarks.....	48
Saving a page.....	49
Accessing a saved page.....	49
Viewing your browser history.....	49
Changing the web browser settings.....	49

07 SETTINGS

Settings.....	50
Personalising your profiles.....	50
Changing your screen settings.....	50
Changing your phone settings.....	51
Changing your connectivity settings.....	51
Sending and receiving your files using Bluetooth.....	52
Pairing with another Bluetooth device.....	53
Using a Bluetooth headset.....	53
Changing your security settings.....	53

08 ACCESSORIES

Accessories.....	54
Network service.....	55
Technical data.....	55
General.....	55
Ambient Temperatures.....	55
Guidelines for safe and efficient use.....	57

Getting to know your phone

End/Power key

Ends or rejects a call.
Turns the phone on/off.
Press once to return to the standby screen.

Clear key

Deletes a character with each press. Use this key to go back to the previous screen.

Main screen

Navigation wheel

- In standby mode:



Messaging



Contacts list



Profiles




Favourites

- In menu: Navigates between menus

SEND key

Dials a phone number and answers incoming calls.

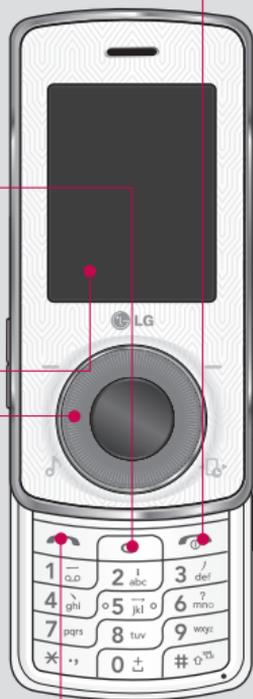

Charger, Cable, Handsfree connector



Volume



Capture button

01

02

03

04


05

06


07

08

Getting to know your phone

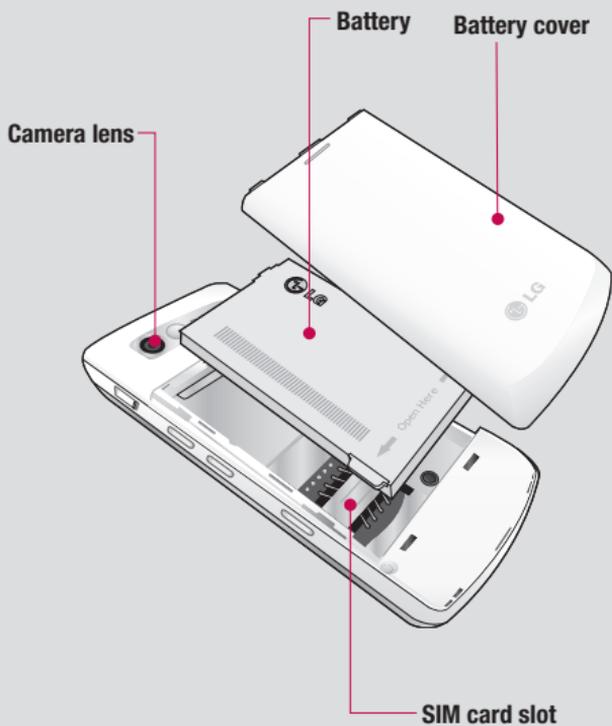

Installing the SIM and battery

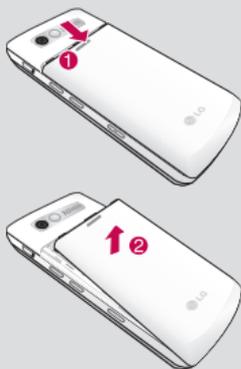


1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.


 **WARNING:** Do not use your fingernail when removing the battery

 **WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

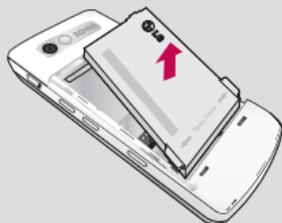

2 Remove the battery

Lever the side edge of the battery and remove it carefully from the battery compartment.

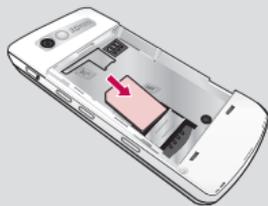

3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

01

02

03

04


05

06

07

08

Installing the SIM and battery

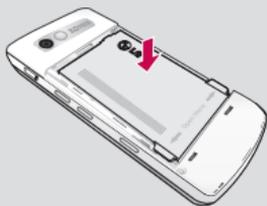


4 Install the battery

Insert the top of the battery into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

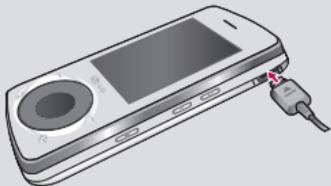

6 Charging your phone


Slide back the cover of the charger socket on the side of your KM710. Insert the charger and plug into a mains electricity socket. Your KM710 will need to be charged until the message "Full Battery" appears on the screen.

Memory card

Installing a memory card

Expand the memory space available on your phone by using a memory card.

To insert the memory card, slide it into the slot at the top until it clicks into place, making sure that the gold contact area is facing upwards.

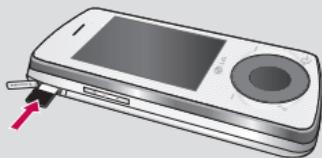

01

02

03

04

05

06

07

08

Menu map



GAMES & APPS

- 1 Games
- 2 Applications
- 3 Network profile



CALL HISTORY

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



ORGANISER

- 1 Calendar
- 2 Memo
- 3 To do



MULTIMEDIA

- 1 Camera
- 2 Video camera
- 3 Muvee
- 4 FM Radio
- 5 Voice recorder



MESSAGING

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Bluetooth box
- 5 Drafts
- 6 Outbox
- 7 Sent
- 8 Listen voicemail
- 9 Info messages
- 0 Templates
- * Settings



MY STUFF

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Others
- 5 Games & Apps



PROFILES

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



CONTACTS

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



TOOLS

- 1 Alarm clock
- 2 Calculator
- 3 Tip calculator
- 4 Stopwatch
- 5 Unit converter
- 6 World clock
- 7 SIM service



BROWSER

- 1 Home
- 2 Google
- 3 Bookmarks
- 4 Enter address
- 5 History
- 6 Saved pages
- 7 Settings
- 8 Information



MP3 PLAYER

- 1 All songs
- 2 My playlists
- 3 Artists
- 4 Albums
- 5 Genres
- 6 Shuffle all songs



SETTINGS

- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Shortcut
- 5 Touchpad
- 6 Connectivity
- 7 Call
- 8 Security
- 9 Flight mode
- 0 Power save
- * Reset
- # Memory status

Your standby screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth is active.

Below is a table explaining the meaning of icons you are likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	New text+voice message
	An alarm is set

Icon	Description
	Vibrate profile in use
	General profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	GPRS available
	EDGE available
	Roaming
	Flight mode is selected
	Bluetooth

01

02

03

04

05

06

07

08

Your standby screen



Wheel Navigation Key & Touchpad

With the wheel navigation key, you can select menu and functions more easily. From the main menu, select **Settings**, then **Touchpad**. From here you can turn on or off **Vibration** and select the touchpad **Sensibility**.

The main menu

The main menu provides twelve menu options.

- 1 Select **Menu**.
- 2 Use the navigation keys or wheel to select the required menu option.
- 3 When the option you require is selected, press **OK** to open.

Calls

Making a call

- 1 Key in the number using the keypad.
To delete a digit press **C**.
- 2 Press the  key to initiate the call.
- 3 To end the call, press the  key.

TIP! Enter + when making an international call, press and hold **0**.

Making a call from your contacts

- 1 Press the  key to open the address book.
- 2 Using the keypad to enter the first letter of the contact you want to call. For example for Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use  and .
- 4 Press the  key to initiate the call.

Answering and rejecting a call

When your phone rings press the  key to answer the call.

While your phone is ringing, open your handset or press the camera key, then select **Silent** to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

Press the  key to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press the  or  and , select  and choose **Call**.
Select **Answer mode** and choose from **Slide open**, **Any key** or **Send key only**.

01

02

03

04

05


06

07

08

Calls

In-call options

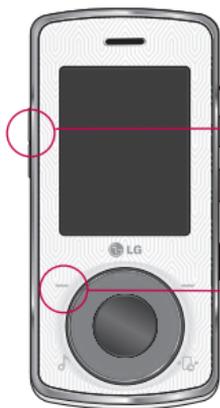

Adjusting the call volume

To adjust the volume during a call, press the volume keys on the right-hand side of your phone.

Options - Choose from a list of further in-call options, including **Contacts** and **Messaging** so you can check your messages and add contacts during a call.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press  or  and select .
- 2 Select **Speed dials**.
- 3 Your voicemail is set to speed dial 1. You cannot change this. Select any other number either by using the  and  keys, and pressing the  to select **Assign**, or by pressing the hard key number.
- 4 Your address book will open. Select the contact you would like to assign to that number using the  and  keys, then select **OK**.

To call a speed dial number, press and hold the assigned number until the call is initiated. The call will initiate automatically, there's no need to press .

Viewing your call logs

Press  or  and select  to view:

All calls - View the complete list of all your dialled, received and missed calls.

Missed calls - View the list of any calls you have missed.

Dialled calls - View the list of all the numbers you have called.

Received calls - View the list of all the numbers that have called you.

Call duration - View details of how long you have spent on your calls.

Call costs - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.

Data information - View the amount of all your received and sent data in kilobytes.

TIP! From any call log select Options and choose Delete to delete selected or all the recorded items.

TIP! Using  and , highlight any single call entry to view the date and time of the call. To view the call duration select Options and choose **View**.

01

02

03

04

05

06

07

08

Calls

Using call divert

- 1 Press  or , select  and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no reply or when you are out of reach.
- 4 Choose **Activate** and select whether to divert to voicemail, another number or your favourite number.
- 5 Enter your divert number or select **Contacts** to browse for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Cancel all** from the **Call divert** menu.

Using call barring

- 1 Press  or , select  and choose **Call**.
- 2 Select **Call barring**.
- 3 Choose any or all of the seven options:
 - All outgoing**
 - Outgoing international**
 - O/G international except home country**
 - All incoming**
 - Incoming when abroad**
 - Cancel all barrings**
 - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **Security** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Changing the call settings

1 Press  or , select  and choose **Call**.

2 From here you can amend the settings for:

Call divert - Choose whether to divert your calls.

Call barring - Select when you would like calls to be barred.

Answer mode - Choose whether to answer the phone using the Send key, any key or by sliding your handset open.

Send my number - Choose whether your number will be displayed when you call someone.

Call waiting - Be alerted when you have a call waiting.

Minute minder - Select **On** to hear a tone every minute during a call.

Auto redial - Choose **On** or **Off**.

Select line - You can choose line 1 or line 2. (Operators and the Sim card support needed.)

Closed User Group - Choose Default, **On** or **Off**.

Send DTMF tones - Choose **On** or **Off**.

01

02

03

04

05

06

07

08

Contacts

Searching for a contact

Press or , select and choose **Search**.

Or, using the slightly quicker method...

- 1 Press from the standby screen.
- 2 Enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use and .

Adding a new contact

- 1 Press or , select and choose **New Contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Or, using the slightly quicker method...

- 1 Enter the number you wish to store from the standby screen and select **Options** and choose **Save, Set number type**.
- 2 Enter the relevant information as above and select **Save**.

Note: When you are storing a contact's email address, press to enter a symbol and scroll with and until you see @.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** above.
- 2 Press to open the list of options.

From here you can:

Edit - Change any of the contact's details.

Send via - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth** or by **Email**.

Send all contacts via Bluetooth - You can send all contacts via Bluetooth.

Delete - Delete the contact. Select OK or press if you are sure.

New contact - Add a new contact.

Copy to SIM/Phone - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

Adding a contact to a group

You can collect your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Friends, Colleagues** and **VIP** already set up on the phone.

- 1 Press  or , select  and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **Add member**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and select **Options** and **Mark all** (or just press ) , then **Done**.

TIP! You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to and select **Options** and choose an item you want.

Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 Press  or , select  and choose **Groups**.
- 2 Highlight the one you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.

- 4 Select **Save**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved on your Phone (not SIM) memory.

Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Press  or , select  and choose **Settings**.
- 2 Select **View Options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a photo to.
- 4 Choose **Options** and select **Edit**.
- 5 Scroll down to the **Picture** section. Choose **Options** and select **New Picture**. Your camera viewfinder will open, so you can take a picture of your contact. Alternatively you can select a picture from the **Image** file.

01

02

03

04

05

06

07

08

Contacts

Copying your contacts to your SIM / Phone

You can also choose to copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 Press  or , select  and choose **Copy All**.
- 2 Select to copy the contacts from **SIM to phone** or **Phone to SIM**.
- 3 Choose whether to keep the original records or delete them.

Deleting all your contacts

- 1 Press  or , select  and choose **Delete all**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Select **OK** if you are sure.

Viewing information

Press  or , select  and choose **Information**.

From here you can view **Service dial numbers**, your **Own number** and your **My business card**.

TIP! If you haven't yet created a business card, the **My business card** screen will give you the option to create one. Select **New** and enter your details as you would for any contact. Choose **Save**.

Messaging

Messaging

Your KM710 combines Text messages, Multimedia messages, Bluetooth messages and Email into one intuitive and easy to use menu. Simply Press  or  and select .

Sending a message

The quick way to begin sending a Text message is to press  from the standby screen and go straight to step 4 below. Otherwise:

- 1 Press  or , select  and then **New message**.
- 2 Choose to send **Text, Multimedia** or **Bluetooth**.
- 3 A new message will open.
- 4 Enter your message using T9 predictive mode or Abc manual mode.
See **Entering text** to see how to switch between the different text entry modes.
- 5 Select Options and choose **Insert** to add a symbol, image, animation, sound, text template, contact or business card.
- 6 Select Options and choose **Send to** or just press .

- 7 Enter the phone number or select Options and choose **Contacts** to open your contacts list. You can add multiple contacts.
- 8 Select Options and choose **Send** or just press .

Entering text

There are two ways to enter text: T9 predictive and Abc manual. To turn on T9 predictive text, begin a new message, choose Options, Set T9 and choose On. With T9 on, you can switch between T9 predictive, Abc manual and numbers by pressing .

T9 predictive

T9 mode uses a built-in dictionary to recognise words you are rewriting based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word as you type. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

If the word you want doesn't appear, choose Options and select **New T9 word**. Enter the word using Abc manual mode and your word or name will be added to the dictionary.

01

02

03

04

05

06

07

08

Messaging

Abc manual

In Abc mode you must press the key repeatedly to enter a letter. For example, to write 'hello', press 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

Message folders

Press  or , select . You'll recognise the folder structure used on your KM710, it's fairly self-explanatory.

Inbox - All the messages you receive are placed into your inbox. From here you can reply, forward and more, see below for details.

Email - Contains all your email messages.

Bluetooth box - The Bluetooth box folder contains your Bluetooth message folders.

Drafts - If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent - All the messages you send are placed into your Sent folder.

Info messages - All info messages and updates received from your operator

Templates - A list of useful messages, already written for a quick reply.

You can also access your voicemail from here by selecting **Listen voicemail** and your messaging settings by selecting **Settings**.

Managing your messages

You can use your Inbox to manage your messages.

1 Press  or , select  and then **Inbox**.

2 Select Options and then choose to:

View - View a selected message.

Delete - Delete a selected message.

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.

Return call - Call the person who sent you the message.

Save number - Save as a new or existing contact.

Information - View the details of a message, for example, the time it was sent.

Multi Delete - Delete selected messages.

Delete all read - All opened messages will be deleted.

Delete all - You can select whether to delete all of each message type.

If you see the message **No space for SIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

Using templates

You can create templates for the Text and Multimedia messages you send most frequently. There are some templates already on your phone, which you can edit if you wish.

- 1 Press  or , select  and then **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then select **Options** and choose **Edit** to change existing templates or select **Options** to add **New template** or **Delete** templates.
- 3 To send a template, select the one you want to send, choose **Options** and select **Send via**.
- 4 Choose how you'd like to send the template; as a Text, Multimedia, Bluetooth message or Email.
- 5 Select a contact and choose **Options**, **Send** (or just press ).

Changing your text message settings

Your KM710 message settings are pre-defined so that you can send messages immediately.

If you'd like to change the settings, see below for more information.

Press  or , select , then choose **Settings** and **Text message**. You can make changes to:

Message types - Convert your text into Voice, Fax, Paging, X.400 Email or ERMES.

Validity period - Choose how long your message is stored at the message center.

Delivery report - Choose to receive confirmation that your message was delivered.

Reply charging - Choose to be billed for your message recipient's reply.

Message center number - Enter the details for your message center.

Character encoding - Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

01

02

03

04

05

06

07

08

Messaging

Changing your multimedia message settings

Your KM710 message settings are pre-defined so that you can send messages immediately.

If you'd like to change the settings, see below for more information.

Press  or , select , then choose **Settings** and **Multimedia message**.

You can make changes to:

Subject - Include a subject field in your multimedia messages.

Slide duration - Choose how long your slides appear on screen.

Delivery time - Choose how long before each message is sent.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your message is stored at the message center.

Delivery report - Choose to allow and/or request a delivery report.

Read report - Choose to allow and/or send a read report.

Auto download - Choose to automatically or manually download multimedia messages, depending on whether you are at home or roaming.

Network Profiles - Select a operator specific network profile for sending multimedia messages.

Permitted message Types - Select which type of senders to allow multimedia messages from.

Changing your other settings

Press  or , select , choose **Settings** then:

Email - Set your email account, choose your access point and retrieve interval, and add a signature.

Voicemail number - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.

Service message - Here you can switch off Service message, which means your messages will no longer be pushed directly to your device as they are received, only when you check for new messages.

Info messages - Change the settings for the info messages and updates received from your operator.

Camera

Taking a quick photo

- 1 Press and hold down the  key on the right hand side of the handset and the camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press  or the  key on the right side of the handset to take a photo.

After you've taken your photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen.

Select a sub menu of right side where you can choose to take a New Photo, set your image as **Wallpaper** or **Picture ID**, look at the other photos in your Album, or send the photo as a Multimedia message, Bluetooth or email. To exit the Camera, press and hold **C**.

Using your toolbar options

Selecting Options will display a new toolbar across the bottom of the viewfinder screen. Use  to navigate through the toolbar options.

Resolution - See Changing the image size on page 30.

Quality - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality the sharper

a photo will be but the file size will increase as a result. You'll be able to store fewer larger photo files in your memory.

Shutter tone - Select one of the three shutter sounds or switch the sound off.

Save to - You can choose Photo or External.

Reset settings - Choose **Yes** to reset your phone to its original camera settings.

Self timer - The delay-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

Continuous shot - This enables you to take up to six shots automatically in very quick succession. Great for taking photos of moving objects or at sporting events.

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy** or **Fluorescent**.

Colour effect - Choose from four color tone options: **Off** (normal/color), **Sepia**, **Mono** (black and white) or **Negative**.

EV - This enables you to regulate exposure value.

01

02

03

04

05

06

07

08

Camera

Changing the image size

You can change the size of the photo to save memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on your phone, you can alter the pixel number to make the file size smaller.

- 1 Choose **Options** and select **Resolution** from the toolbar.
- 2 Select a pixel value from the four numerical options (QV: 320X240, V: 640X480, 1M: 1280X960, 2M: 1600X1200, 3M: 2048X1536).
- 3 Select the size you would like to use and choose **OK**. The settings menu will automatically close, ready for you to take your picture.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply select **Album**. From the standby screen you should press  or , then select **My stuff** and **Images**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation to select the photo you want to view and choose Options, **View** or just press  to enlarge it.

Setting a photo as wallpaper or Picture ID

You can set the image to appear at certain times. From your image gallery, use  and  to select an image and choose Options, **Set as** to use the selected image as wallpaper or Picture ID for one of your contacts.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

Video camera

Shooting a quick video

- 1 Press the  or  and select , then **Video camera**.
- 2 Point the camera lens towards the subject of the video.
- 3 Press  once or press the  key on the right side of the handset to start recording.
- 4 **REC** will appear in the bottom of the viewfinder and a timer will show the length of your video.
- 5 To pause the video choose **Pause** and resume by selecting **Resume**.
- 6 Select **Stop** to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom the screen.

Select a sub menu where you can choose to take a New video, play the video, or Send the video via Multimedia message, Bluetooth or Email, or look at the other videos in your Album.

Using your toolbar options

Selecting Options will display a new toolbar across the bottom of the viewfinder screen. Use the navigation keys to navigate the toolbar options.

Resolution - If you want to fit more videos onto your phone you can alter the pixel number to make the file size smaller. Choose between two options for your video, 320 x 240 or 176 x 144.

Quality - Choose between **Fine**, **Normal** and **Super Fine**. The finer the quality the sharper a video will be, but the file size will increase as a result. You'll be able to store fewer larger video files in the phone's memory.

Save to - You can choose Photo or External.

Reset settings - Choose **Yes** to reset your phone to it's original video camera settings. In the viewfinder screen of landscape mode, pressing  or  will show you the below sub-menus for more detail video camera setting.

Video mode - To shoot a video you want to send in a multimedia message, select MMS.

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the

01

02

03

04

05

06

07

08

Video camera

light conditions. Choose from **Auto, Daylight, Incandescent, Cloudy , Night mode or Fluorescent.**

Colour effect - Choose from four color tone options: **Off** (normal/color), **Sepia**, **Mono** (black and white) or **Negative**.

EV - This enables you to regulate exposure value.

TIP! The settings menu is superimposed over the viewfinder. When you change elements of the image colour or quality, you'll be able to see the image change in preview behind the settings menu.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the keys on the left side of the handset.

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the viewfinder, simply select **Album**. From the standby screen you should press  or , then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the  and  to select the video you want to view and choose Options, **Play** or just press  to watch it.

My stuff

You can store any multimedia files on your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

All your multimedia files will be saved in My stuff. To access My stuff, press  or  then  to open a list of folders storing all of your multimedia files.

Images

Images contains a folder of default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **View**, **Set as**, **File info**, **Slide show**, **Sort by** and **List view** options are available for default images. In the **Images** folder, select Options to bring up your list of options.

View - View the selected message.

Delete - Delete the selected image.

Send via - Send the selected image to a friend via MMS, Bluetooth or Email.

Note: The image may need to be resized before it can be sent by MMS.

Set as - Set selected image as your wallpaper or as a picture ID.

File - Edit image, rename, make animation or view the information (Name, Size, Date, Image size and Copyright) of the selected image. If you have an external memory card inserted, two additional options will show: **Move to external memory** and **Copy to external memory**.

Print via Bluetooth - Print an image file via Bluetooth.

Slide show - See Creating a slide show on page 35.

New folder - Create a new folder within the main Images folder.

Mark/Unmark - You can mark or unmark.

Delete all - Delete all the photos in your Images folder.

Sort by - Arrange your images by Date, Type or Name.

List view - Change the way you view your photos.

01

02

03

04

05

06

07

08

My stuff

Sending a photo

- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Select a photo and choose Options.
- 4 Select **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose Bluetooth, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Organising your images

- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Select Options then **Sort by**.
- 4 Choose from **Date, Type** or **Name**.

Deleting an image

- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Select an image and choose Options.
- 4 Select **Delete**.

Deleting multiple images

- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Choose Options and select **Mark/Unmark** then **Delete**.
- 4 A box will appear next to each image. Select the image and select Options, **Mark all** or just press  to mark it. To unmark an image, select Options, **Unmark all** or just press  so that the tick disappears from the box.
- 5 Once you have marked all of the appropriate boxes, select **Done** and confirm you want to delete all of the marked images.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Select the photo you would like to begin the slideshow and choose Options.
- 4 Select **Slide show** and it will begin.
- 5 Select Options, **Pause** to pause the slide show and **Quit** to end the slide show and return to the Images folder.

Selecting Options during the slide show presents further choices:

Repeat on/off - Decide whether you want the slide show on repeat or not.

Sounds

The **Sounds** folder contains the **Default sounds**, downloaded sounds and your voice recordings. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Press  or  then select .
- 2 Scroll to and select **Sounds**.
- 3 Select **Default sounds** or choose from the list of voice recording files or downloaded sound files.
- 4 Select a sound and choose Options, **Play** or just press  to listen to it.
- 5 Select Options, **Set as** and choose from **Ringtone** and **Ringtone ID**.

Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Press  or  then select .
- 2 Scroll to and select **Videos**.
- 3 Select a video and choose Options, **Play** or just press .

01

02

03

04

05

06

07

08

My stuff

Using options while video is paused

By selecting Options, the video you are playing will be in pause mode and you can choose from:

Delete - Delete the video.

Send via - Send the video in a Multimedia message, by Bluetooth or by Email.

File - Rename the video, Move the selected video to a folder, View the Information (Name, Date, Size, Playback and Copyright).

Landscape view - Change how you view your video.

Sending a video clip

- 1 Select a video by using the navigation keys.
- 2 Select Options, **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 3 If you choose **Multimedia Message** or **Email**, your video clip will be attached to a message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Note: The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case choose one of the other sending options.

Using the video options menu

In the Videos folder, select Options to bring up the following list of options.

Play - watch the selected video.

Delete - Delete the selected video.

Send via - Send the video using a Multimedia message, Bluetooth or email.

File - Edit or rename the video, or view the information (Name, Size, Date, Playback and Copyright).

New folder - Create a new folder within the main Videos folder.

Mark/Unmark - Select more than one video clip to be deleted or to send via Bluetooth.

Delete all - Delete all the clips in your Video folder.

Sort by - Arrange your videos by Date, Type or Name.

List view - Change the way you view your videos.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications.

You may find that when you transfer files from your computer to your phone, they will appear in the **Others** folder.

Games and Apps

Your KM710 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Playing a game

- 1 Press  or  then select .
- 2 Scroll to and select **Games & Apps**.
- 3 Select the game of your choice and choose Options, **Play** or just press .

Using the games options menu

In the Games folder, select Options to bring up the following list:

Play - Select this to play the game.

Information - View the Name, Version, Vendor, Data-size and Domain of the file.

External memory

If you've inserted a memory card it will be displayed as a folder within My stuff. Your external memory folder will be divided into four further folders: Images, Sounds, Videos and Others. Each folder will contain all the files of that type saved to your memory card rather than your handset.

Using your phone as a Mass storage device

Your KM710 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. In order to use the phone as mass storage device, you need to insert an external memory card. When connected to PC through USB cable only external memory card will be accessed.

- 1 Press  or , select  then **Connectivity**.
- 2 Select **USB connection mode**.
- 3 Scroll to **Mass storage** and select **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KM710. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically, if you have a memory card inserted, showing all the folders on memory card.
- 6 Drag and drop your images, videos, music or others into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.

My stuff

- 8 When you want to then access a file, for example an image, press  or  then select  followed by **External memory** then **Images**. All the images you just transferred will be contained in this file.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. For example, photographs will be saved in the **Image** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

Note: Files sent using Bluetooth will be saved to the phone memory.

Multimedia

Music

Your LG KM710 has a built-in MP3 player so you can play all your favourite music.

 Music recognition technology and related data are provided by Gracenote®.

Gracenote is the industry standard in music recognition technology and related content delivery. For more information, visit www.gracenote.com.

CD and music-related data from Gracenote, Inc., copyright © 2000-2006 Gracenote. Gracenote Software, copyright © 2000-2006 Gracenote. This product and service may practice one or more of the following U.S. Patents: #5,987,525; #6,061,680; #6,154,773, #6,161,132, #6,230,192, #6,230,207, #6,240,459, #6,330,593, and other patents issued or pending. Some services supplied under license from Open Globe, Inc. for U.S. Patent: #6,304,523.

Gracenote and CDDB are registered trademarks of Gracenote. The Gracenote logo and logotype, and the "Powered by Gracenote" logo are trademarks of Gracenote.

To access the MP3 player, press  or  and select . From here you have access to:

All songs - Contains all of the songs you have on your phone.

My playlists - Contains any playlists you have created as well as **On the go**. You can select specific music by each of these characteristics: **Artists, Albums, Genres** and **Shuffle all songs**.

TIP! You can access the MP3 player through the MP3 hot key  on the front. By using the  key, you can get directly to your playlist.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your USB cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **MP3 player > All songs**.

01

02

03

04

05

06

07

08

Multimedia

TIP! When you want to charge KM710 by USB data cable without animation message for USB Mass Storage or Music Sync, please choose the Data Service mode. In this mode, you can see the animation message for data service mode only when KM710 exchanges the data with your computer.

Playing a song

- 1 Press  or  and select .
- 2 Select **All songs** and then the song you want to play. Press .
- 3 Press  to pause the song.
- 4 Press  to skip to the next song.
- 5 Press  to skip to the previous song.
- 6 Select Options, **Minimize** to hide the music player screen so that you can continue using your phone as normal while music is playing.
- 7 Select **Back** to stop the music and return to the music menu.

Using options while playing music

Select Options and choose from:

Minimise

Natural sound

Add to playlist

Listen via Bluetooth

Set as ringtone

Rating

Information

Settings - Change the **Equalizer** or **Play mode**, change the music light settings or **Set shuffle** to mix up the music.

TIP! To change the volume while listening to music, use the volume keys on the side of your phone.

Note:

ePlaylist: Gracenote ePlaylist allows the listener to generate one-touch More Like This playlists by simply selecting one or more songs or artists as seeds songs. Gracenote Playlist then returns a mix of music that contains music from related artists and genres.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press  or  and select .
- 2 Choose **My playlists**.
- 3 Select **New**, enter the playlist name and choose **Save**.
- 4 The **All songs** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to the ones you want and pressing ; a tick will show next to the song name. If you accidentally add a song you don't want, select it and press  again to untick it.
- 5 Select Options, **Save** to store the playlist.

Playing a playlist

- 1 Press  or  and select .
- 2 Choose **My playlists**.
- 3 Select the playlist you would like to play and choose **View**, then press .

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. You may also want to organise your playlists. When you want to do this, you can edit the playlist.

- 1 Press  or  and select .
- 2 Choose **My playlists**.
- 3 Scroll to the playlist you want to edit and select **View**, then choose Options.

Add - You can add or delete songs from the playlist using this option.

Remove - Remove a song from the playlist. Select **Yes** to confirm.

Search - You can search the song in playlist.

Move up/Move down - Move the song up or down the list to change the playing order.

Send via - You can send the playlist via multimedia message, bluetooth or E-mail.

Remove all - Remove all of the songs from the playlist.

Information - View the playlist information.

Multimedia

Deleting a playlist

- 1 Press  or  and select .
- 2 Choose **My playlists**.
- 3 Scroll to the playlist you want to delete and choose **Options**.
- 4 Select **Delete** and select **Yes** to confirm.

Note:

DRM (Digital Rights Management)

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

When an MP3 is playing on the MP3 player, if you press MP3 short key, you can use BGM mode. In BGM mode MP3 can be played while other functions are being used. BGM can be stopped on the MP3 player screen.

Using the radio

Your LG KM710 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

Note: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 12 channels in your phone.

To auto tune:

- 1 Press  or  and select .
- 2 Choose **FM radio**.
- 3 Select **Auto scan** then **Yes**.
- 4 Each time a station is found, your KM710 will ask if you want to save it. Select **Yes** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.

To manually tune:

- 1 Press  or  and select .
- 2 Choose **FM radio**.
- 3 Select a channel number that you want to save a station to and choose **Edit**.
- 4 To enter your station, you can either use the navigation keys to search for the frequency, or you can enter the frequency using the keypad.
- 5 Select **Save**.

Note: You can also edit the stations you have saved in a channel number by using the same **Edit** feature you use to manually tune in stations.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

Resetting channels

- 1 Press  or  and select .
- 2 Choose **FM radio**.
- 3 Select Options, **Reset channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Press  or  and select.
- 2 Choose **FM radio**.
- 3 Select the channel number of the station you would like to listen to.

Voice recorder

Use your **voice recorder** to record voice memos or other sounds.

- 1 Press  or  and select .
- 2 Choose **Voice recorder**.
- 3 Press  to begin recording.
- 4 Select **Pause** to pause the recording.
- 5 Choose **Stop** to end the recording.
- 6 Select Options, **Play** to listen to the recording.

Note: You can listen to all of the voice recordings you have saved by selecting **Album**.

01

02

03

04

05

06

07

08

Multimedia

Sending a voice recording

- 1 Once you have finished recording, select Options.
- 2 Select **Send via** and choose from **Multimedia message, Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

TIP! If you plan to send your recording as a message, before you start recording, choose Options and select **Recording mode**. Choose **MMS**. This will ensure that the recording fits into a message.

Muvee

This menu is a function to make new contents by mixing sounds and images with various effects and the image can be played and transformed automatically followed by the music. These contents files will be saved in

My stuff.

- 1 Press  or  and select .
- 2 Choose **Muvee**.
- 3 Select the one of the Muvee styles, then choose a image you would like to mix to.

Organiser/Tools

Adding an event to your calendar

- 1 From the standby screen press  or , and select , then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using arrow keys or by selecting Options and manually entering the date.

Note: Once you've already got an event saved in your calendar, you will need to select **Go to date** after selecting Options in order to enter a date to set your event to.

- 3 Select Options and choose **New schedule** and enter the time you would like your event to begin. Scroll down using the navigation keys and enter the end time of your event.
- 4 Scroll down and enter a **Subject** for the event.
- 5 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.

- 6 Scroll down once more to select whether the event is a one-off or if it is to be repeated at **Daily, Weekly, Monthly** or **Yearly** intervals. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Select **Save** and your event will be saved in the calendar. A triangular cursor will mark the days that any events have been saved to.

Editing a calendar event

- 1 From the standby screen press  or , and select , then **Calendar**.
- 2 Choose Options and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and select Options, **View** or just press . Alternatively select the day of the event in the calendar and choose Options, **View** or just press .
- 3 Select Options, **Edit** or just press  and scroll to the event detail you want to change. Make your modifications and select **Save** to store the edited event.

Note: You can delete an event from your calendar by selecting to view the event and then select Options, **Delete**.

01

02

03

04

05

06

07

08

Organiser/Tools

Sharing a calendar event

- 1 From the standby screen press  or , and select , then **Calendar**.
- 2 Select the event you would like to share and choose Options.
- 3 Choose **Send via** and select from **Text message, Multimedia message, Bluetooth** or **Email**.

Adding a memo

- 1 From the standby screen press  or , and select , then **Memo**.
- 2 Select **New** and type your memo.
- 3 Choose Options, **Save** or just press .
- 4 Your memo will appear on screen the next time you open the **Memo** application.

TIP! You can edit an existing memo. Select the one you want to edit, select Options and select **Edit**.

Adding an event to your To do list

- 1 From the standby screen, press  or , and select , then **To do**.
- 2 Select **New** and type Due date, Note, Priority and Status of your new to do. (Using the Options, you can select the date referring to your calendar)

- 3 Choose Options, **Save**.
- 4 Your to do list will appear on screen and you can View, Add, Delete and do several things by choosing from the Options.

Setting your alarm

- 1 From the standby screen press  or , and select , then **Alarm clock**.
- 2 Select **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose whether you would like your alarm to sound **Once, Daily, Mon - Fri, Mon - Sat** or **Sat - Sun**.
- 5 Scroll down to choose the alarm sound. Choose Options, **Sounds** to select a new sound.
- 6 Scroll down and enter a name for the alarm or keep the suggested name.
- 7 Select **Save**.

Note: You can set up to 5 alarms. The alarm will be alerted on even if the phone is switched off.

Using your calculator

- 1 From the standby screen press  or , and select , then **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷), followed by =.
- 4 For more complex calculations, select **Function** to select a command.
- 5 Select **Clear** to clear the screen to start a new calculation.

Using the stopwatch

- 1 From the standby screen press  or , and select , then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at, or select **Reset** to begin the time again.

Converting a unit

- 1 From the standby screen press  or , and select , then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.

- 3 Scroll up to choose from the unit of measurement you want to enter. Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Adding a city to your world clock

- 1 From the standby screen press  or , and select , then **World clock**.
- 2 Select **Options** and choose **Change time zone** and select a city.
- 3 Choose **New city** from the options to add more cities in your list.

Using the SIM Services

This feature depends on SIM and the network services.

In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

The web

With browser at the tip of your fingers, you can get the up to date news and weather forecast as well as information on sports or traffic whenever you need it. In addition, browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 From the standby screen press  or , select  and choose **OK**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen press  or , select  and choose **OK**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Select **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Options**, **Connect** or just press . You will be connected to your bookmarked page.

Saving a page

- 1 Access your required web page as described above.
- 2 Choose Options and scroll to **Save**, select **This page**.
- 3 Select **OK**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

Accessing a saved page

- 1 From the standby screen press  or , select  and choose **OK**.
- 2 Select **Saved pages**.
- 3 Select the required page and select Options, **Connect** or just press .

Viewing your browser history

- 1 From the standby screen press  or , select  and choose **OK**.
- 2 Select **History** and choose **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select Options, **Connect** or just press .

Changing the web browser settings

- 1 From the standby screen press  or , select . Select **Settings**.
- 2 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network Profiles, Rendering mode, Cache, Cookies, Security certificates, Show image, Java script** and **Memory in use**.
- 3 Once you have changed your settings, select **OK**.

01

02

03

04

05

06

07

08

Settings

Within this folder you can adapt your settings to make your KM710 personal to you.

Note: For information on call settings see page 21.

Personalising your profiles

You can quickly change your profile from the standby screen. Simply press  and select , then the profile you would like to activate. Choose from:

General

Silent

Vibrate only

Outdoor

Headset

Using the Settings menu you can personalise each profile setting.

- 1 Press  or  and select .
- 2 For the **Silent** and **Vibrate only** profiles, you can adapt the vibration. For the other profiles, you can change all of the sounds and alert options available in the list, including your Call alert type, Ring tones, Ring Volume and Message alert type and so on (please refer to your handset for details).

Changing your screen settings

- 1 Press  or  and select .
- 2 Select **Display** and choose from:
 - Wallpaper** - Choose a wallpaper to appear on your screen display.
 - Clocks** - Choose a style of the clock to appear on your screen display.
 - Screen saver** - Change Display item and Display time.
 - Backlight timer** - Choose how long the backlight remains on for.
 - Brightness** - Adjust the screen brightness.
 - Home screen shortcut** - Change your standby screen shortcuts.
 - Theme** - Quickly change the whole look of your screen.
 - Font size** - Choose the font size among Normal, Medium and Large.
 - Menu style** - Change the menu view from Grid view to List view or vice versa.
 - Dial style** - Adjust the font style for when you are typing a phone number.
 - Standby text** - Choose to add a message to your standby screen.
 - Network name** - Choose to show or hide the network name.

Note: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Changing your phone settings

Enjoy the freedom of adapting your KM710 so that it works in a way which suits you best.

Press  or  and select . Choose from the list below:

Date & time - Adjust your date and time settings or choose to auto update the time when you travel.

Language - Change the language of your KM710's display.

Display - Change your screen settings.

Shortcut - To change the functionalities of 4 Navigation keys.

Touchpad - Turn the touchpad vibration **On** or **Off**.

Connectivity - See Changing your connectivity settings for more information.

Call - See Call settings on page 21 for more information.

Security - See Changing your security settings on page 53 for more information.

Flight mode - Switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the Internet, send messages or use Bluetooth when Flight mode is switched on.

Power save - Choose to set the power saving option **Always on**, on for **Night only** or **Off**.

Reset - Reset all the settings to their factory definitions.

Memory status - See current status of the memories (Common, Reserved and SIM card) in your KM710.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Press  or  and select . Choose **Connectivity**. Your options are:

Bluetooth - Set up your KM710 for Bluetooth use. You can adapt your visibility to other devices or search through devices you're paired with.

Network - Your KM710 connects automatically to your preferred network. To change these settings use this menu. You can also attach GPRS and add new access points using this menu.

USB connection mode - Choose **Data service** and synchronise your KM710 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted select **Mass storage** to use your phone in the same way as you would a USB

01

02

03

04

05

06

07

08

Settings

stick. Connect to your computer and drag and drop files to the KM710 removable device folder. See page 37 for further details.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls. Before you can start sharing files with Bluetooth, you will need to pair your device with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device**.

To switch Bluetooth on:

- 1 Press  or  and select . Choose **Connectivity**, then **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select Options and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.
- 4 Your KM710 will automatically search for **LG KM710** | User Guide

other Bluetooth enabled devices within range.

- 5 Choose the device you want to send the file to and select **Send**.
- 6 Your file will be sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is sent.

Changing your Bluetooth settings:

- 1 Press  or  and select . Choose **Connectivity**, then **Bluetooth**.
- 2 Choose **Bluetooth settings** to make changes to:
 - My visibility** - Choose whether to **Show** or **Hide** your device to others.
 - My name** - Enter a name for your KM710.
 - My address** - Know your Bluetooth address.
 - Primary storage** - You can choose phone or memory card. (You need to insert memory card.)

Pairing with another Bluetooth device

By pairing your KM710 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My visibility**, then **Show**.
- 2 Select **Device list** from the Bluetooth menu and choose **New**.
- 3 Your KM710 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair**, enter the passcode and then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Select **Yes** to **Connect now**. Your KM710 will automatically switch to Headset profile.

Changing your security settings

Change your security settings to keep your KM710 and the important information it holds protected.

Press  or  and select . Choose **Security** then select from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Auto key lock - Choose a duration for locking the key automatically.

Phone lock - Choose a security code to lock your phone, **When powered on**, **When SIM changed** or **Immediately**.

Fixed dial number - Choose a list of numbers that can be called from your phone.

Change codes - Change your **Security code**, **PIN1 code** or **PIN2 code**.

Accessories

These accessories were supplied with your KM710.

Charger



Data cable and CD

Connect and synchronise your KM710 and PC.



Battery



User Guide

Learn more about your KM710.



Stereo headset



External memory



Note

- Always use genuine LG accessories.
- Failure to do so may invalidate your warranty.
- Accessories may vary in different regions: please check with our regional service company or agent for further information.

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800 and PCS1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KM710

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging),

+45°C (charging)

Min : -10°C

01

02

03

04

05

06

07

08

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM710

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.6.1
EN 60960-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

BABT, Belfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

02. FEB. 2008

Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model KM710 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear

is 0.376 W/Kg (10g) and when worn on the body is 0.734 W/Kg (10g).

- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over one (1) gram of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations.

Guidelines for safe and efficient use

For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Guidelines for safe and efficient use

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



Warranty Card
產品保用證

Mobile Phone
手提電話

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms and
conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.
Otherwise, this warranty will be voided.

重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。

Mobile Phone Warranty Policy

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LG/EHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset :12 months
 - (ii) Charger : 6 months
 - (iii) Battery :6 months
 - (iv) Hand free earphone :3 months.
 - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
 - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories, etc.)
 - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
 - (5) All parts replaced within the warranty period are the property of LG/EHK. We have rights to handle those parts as necessary.
 - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
 - (7) Warranty will be voided under the following conditions, and LG/EHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alteration or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
 - (8) LG/EHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
 - (9) LG/EHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
 - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
 - (11) This warranty card is restricted within Hong Kong SAR only.
-
- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身: 12個月
 - (ii) 充電器: 6個月
 - (iii) 電池: 6個月
 - (iv) 免提耳機: 3個月
 - (2) 保修服務只適用於原裝行貨，水貨及冒牌貨均屬無效。
 - (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
 - (4) 用戶要求維修服務時，須同時出示手機。保用證及印有IMEI號碼之有效發票正本對本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
 - (5) 在保修期內維修更換后的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
 - (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
 - (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人收取所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
 - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
 - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害、意外事件造成之損失概不負責。
 - (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
 - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
 - (11) 此保用證只適用於香港特別行政區範圍內。



服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜



To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號

Limited Warranty

限期保用證

To provide our best after-sales service, please complete and return this warranty card to us.
您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下專有的售後服務。

Customer Information

客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號



