



عربي
ENGLISH

دليل المستخدم
BL40

ENGLISH
عربي



CE0168



P/N : MMBB0352253 (1.0) G

دليل مستخدم BL40

LG Electronics Inc.

BL40 User Guide



CE0168

P/N : MMBB0352253 (1.0) G

Bluetooth QD ID B015514

تهانينا لشرائك الهاتف المتقدم والصغير الحجم BL40 من LG.
والمصمّم للعمل مع تقنية الاتصال الرقمي الأحدث للهواتف
المحمولة.

قد تختلف بعض المحتويات الموجودة في هذا الدليل عن
هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.



دليل مستخدم BL40

المحتويات

62.....	ويب	3.....	إرشادات لاستخدام آمن و فعال
65.....	PC Suite	10.....	التعرّف على الهاتف الخاص بك
69.....	الاعدادات	11.....	نظرة على الهاتف وهو مفتوح
74.....	Wi-Fi	12.....	تنبيت بطاقة USIM و البطارية
74.....	تحديث برنامج الهاتف	13.....	بطاقة الذاكرة
75.....	الملحقات	15.....	الشاشة الرئيسية الخاصة بك
76.....	بيانات تقنية	19.....	المكالمات
77.....	استكشاف الأخطاء وإصلاحها	22.....	جهات الاتصال
		24.....	المراسلة
		32.....	الكاميرا
		40.....	كاميرا فيديو
		44.....	الصور ومقاطع الفيديو
		52.....	الوسائط المتعددة
		59.....	المنسق

إرشادات لاستخدام آمن و فعال

- وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG. فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.
- حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كغ وهو حد مقسّم على نحو متناسب إلى 10 غرامات من النسيج.
- يبلغ الحد الأقصى لمعدل الامتصاص النوعي لهذا الجهاز عندما جرى اختباره من قبل DASY4 لاستخدامه على الأذن 0.757 واط/كغ (10 غرام) وعند حمله على الجسم يكون هذا المعدل 0.842 واط/كغ (10 غرام).
- معلومات بيانات SAR للمقيمين في بلدان/مناطق تبني حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) هو 1.6 واط/كغ كمتوسط لكل غرام واحد (1) من النسيج.
- يرجى قراءة هذه الإرشادات البسيطة، عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.
- التعرض لطاقة التردد اللاسلكي
- معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR). لقد تم تصميم طراز الهاتف المحمول BL40 هذا بحيث يفي بمتطلبات السلامة السارية المتعلقة بالتعرض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.
- تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد. أو SAR. وتجري اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كافة نطاقات التردد التي تم اختبارها.

إرشادات لاستخدام آمن و فعال

العناية بالمنتج وصيانته

⚠ تحذير

استخدم فقط البطاريات، والشواحن، والملحقات الموافق على استخدامها مع طراز الهاتف المَعَيّن هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول. وقد يكون خطيراً.

- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة بتطبيقاتك بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدتين رطبتين فيما يكون شحنه جار. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.

- لا تقم بتفكيك الوحدة، اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.

- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.
- لا تستخدم الهاتف أو ملحقاته في أماكن تكون فيها نسبة الرطوبة عالية جداً مثل أحواض السباحة أو البيوت الزجاجية لزراعة النباتات أو الغرف المعرضة لأشعة الشمس أو البيئات الاستوائية. فقد يؤدي ذلك إلى إلحاق الضرر بالهاتف وإبطال الضمان.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. يرجى استشارة طبيبك للتأكد ما إذا كان تشغيل الهاتف يتداخل مع تشغيل الجهاز الطبي.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون، والراديو، والكمبيوتر الشخصي.

تشغيل فعال للهاتف

أجهزة إلكترونية وطبية

قد تتعرّض كل الهواتف المحمولة للتشويش، ما قد يؤثر على أدائها.

• لا تستخدم الهاتف المحمول بالقرب من

الأجهزة الطبية دون طلب الإذن للقيام بذلك.

يرجى استشارة طبيبك للتأكد ما إذا كان

تشغيل الهاتف يتداخل مع تشغيل الجهاز

الطبي.

• قد تسبّب بعض الهواتف المحمولة الإزعاج

للأدوات المساعدة للسمع.

• قد يؤثر الحد الأدنى من التشويش على

أجهزة التلفزيون، والراديو، والكمبيوتر

الشخصي.

إرشادات لاستخدام آمن و فعال

أجهزة ضبط النبط

توصي الشركات المصنّعة لجهاز ضبط النبط بإبقاء مسافة 15 سم كحد أدنى بين الهاتف المحمول وجهاز ضبط النبط لتجنب أي تشويش محتمل مع جهاز ضبط النبط. لتحقيق ذلك، استخدم الهاتف على الأذن المقابلة لجهة جهاز ضبط النبط ولا تحمله في الجيب على مستوى الصدر.

المستشفيات

قم بإيقاف الجهاز اللاسلكي عندما يطلب منك ذلك في المستشفيات أو العيادات أو مرافق الرعاية الصحية، يتم وضع هذه الطلبات لتجنب أي تشويش محتمل مع المعدات الطبية الحساسة.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة، فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.

- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

تجنب إلحاق الضرر بسمعك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بالأتي تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك، كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقف عن استخدام الجهاز المحمول إلى أن يتم استبداله من قبل موفر خدمة معتمد.

مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية، التزم بالقيود، واتبع

الأنظمة أو القوانين.

مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال، أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

إرشادات لاستخدام آمن و فعال

في الطائرة

باستطاعة الأجهزة اللاسلكية أن تتسبب بحوادث تشويش في الطائرة.

- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قبل طاقم الطائرة.

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ



قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافةً. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى. ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصمّمة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.

- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة، فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلّص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة، يرجى إعادة التصنيع عندما يكون ذلك ممكناً، لا تتخلّص منها كمخلفات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة، ووضوابط المنتج، والنقوش المستخدمة، والبطارية والأوضاع البيئية.



التعرّف على الهاتف الخاص بك

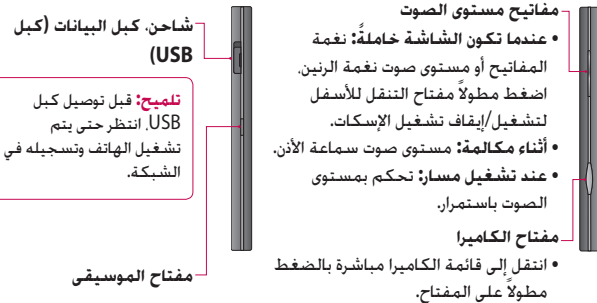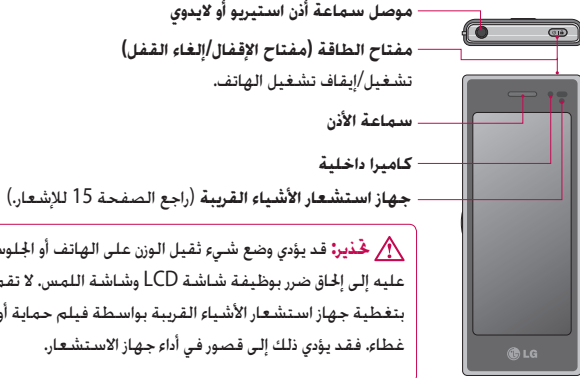

نظرة على الهاتف وهو مفتوح

شحن الهاتف


افتح غطاء موصل الشاحن الموجود على جانب الهاتف BL40. أدخل الشاحن وقيم بتوصيله بمقبس كهربائي رئيسي. يجب أن يتم شحن الهاتف BL40 حتى تظهر على الشاشة رسالة تشير إلى أن "البطارية ممتلئة".

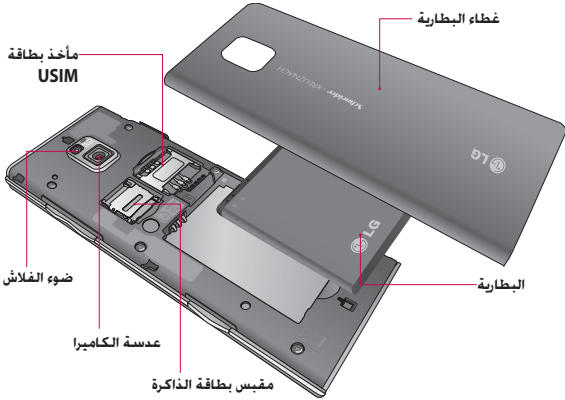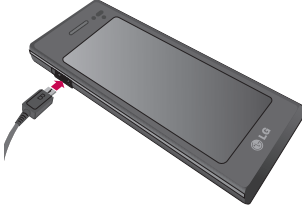

تثبيت بطاقة USIM و البطارية


1 انزع غطاء البطارية والبطارية

حرك غطاء البطارية لأسفل واسحب البطارية إلى الخارج.

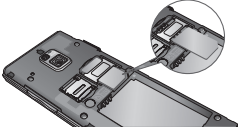


3 تركيب البطارية

قم أولاً بإدراج الجهة العليا للبطارية في الحافة العليا لحجرة البطارية. تأكد من محاذاة ملامسات البطارية مع أطراف توصيل الهاتف. اضغط جهة البطارية السفلى إلى الأسفل حتى تستقر في مكانها.

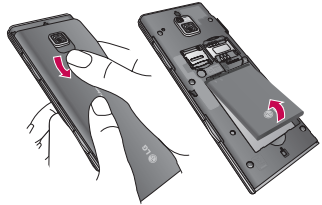

⚠ تحذير: لا تقم بإزالة البطارية عندما يكون الهاتف قيد التشغيل. إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

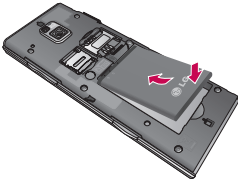

2 تثبيت بطاقة USIM

ادفع بطاقة USIM إلى داخل حاملها. تأكد من كون ناحية الملامسات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. لإزالة بطاقة USIM. اسحبها بلطف في الاتجاه المعاكس.

بطاقة الذاكرة


تركيب بطاقة ذاكرة

يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة (microSD).




يعتمد الهاتف BL40 بطاقة ذاكرة تصل سعتها إلى 32 غيغا بايت.

ملاحظة: بطاقة الذاكرة هي عبارة عن ملحق اختياري.

أدخل بطاقة الذاكرة داخل الفتحة الموجودة في الأعلى. حتى تستقر في مكانها. تأكد من كون ناحية الملامسات الذهبية موجهة نحو الأسفل.

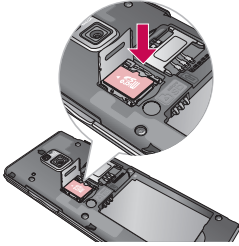

يجب فتح الغطاء عبر سحب الغطاء المعدني نحو الأعلى.

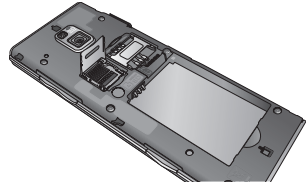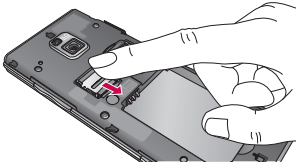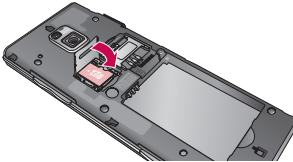


⚠ تحذير: حرّك بطاقة الذاكرة إلى داخل الفتحة. حتى لا تلحق الضرر بالبطاقة.

بطاقة الذاكرة

تنسيق بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهيأة أصلاً. إذا لم تكن مهيأة، ستحتاج إلى تهيئتها قبل البدء باستخدامها.

ملاحظة: سيتم حذف كل الملفات خلال عملية التهيئة.

1 في الشاشة الرئيسية حدد  وحدد **اعدادات الهاتف** من علامة التبويب اعدادات.

2 قم بالتمرير والمس معلومات الذاكرة ثم **مرر والمس الذاكرة الخارجية**.

3 **المس تهيئة** ثم أكد خيارك.

4 أدخل كلمة المرور. إذا كان قد تم تعيين واحدة، ستتم تهيئة البطاقة وتصبح جاهزة للاستخدام.

ملاحظة: إذا تضمنت بطاقة الذاكرة محتوى موجود، فقد تختلف بنية الحافظة بعد التهيئة بما أنه تم حذف كل الملفات.

نقل جهات الاتصال

لنقل جهات الاتصال من بطاقة USIM إلى هاتفك:

1 في علامة التبويب اتصال، قم بالتمرير عبر **جهة الاتصال** واختر  ثم **تغيير الموقع**.

2 **المس نسخ إلى الهاتف**.


3 **اختر تحديد الكل** وحدد الأسماء الواحد تلو الآخر والمس **نسخ إلى الهاتف**.

الشاشة الرئيسية الخاصة بك

التلقائي للمفاتيح أثناء المكالمات.

وبالتالي. يستطيع المستخدمون إلغاء قفل الهاتف بشكل صحيح أثناء البحث في دليل الهاتف أثناء المكالمات.

تخصيص الشاشة الرئيسية

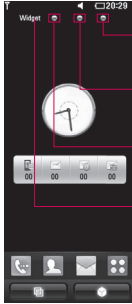

اختصارات الشاشة الرئيسية

متصفح الشاشة الرئيسية

الشاشة الرئيسية للاسماء

عنصر واجهة استخدام الشاشة الرئيسية (نشط)

تلميح شاشة اللمس

تعتبر الشاشة الرئيسية أيضاً مكاناً جيداً لتعتاد على استخدام شاشة اللمس. لتحديد عنصر اللمس وسط الرمز.

- لا حاجة إلى الضغط بقوة: فشاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة.
- استخدم رأس إصبعك لللمس الخيار المطلوب. احترس من عدم لمس أي مفاتيح أخرى.
- عندما يكون ضوء الشاشة متوقفاً عن التشغيل. اضغط على مفتاح الطاقة للعودة إلى الشاشة الرئيسية.
- عندما لا يكون الهاتف BL40 قيد الاستخدام. يعود إلى شاشة القفل.

جهاز استشعار الأشياء القريبة

عند تلقي أو إجراء مكالمة. يقوم جهاز الاستشعار هذا تلقائياً بإيقاف تشغيل الإضاءة الخلفية وإقفال لوحة المفاتيح الرقمية التي تعمل باللمس بتحسس الكائنات عندما يكون الهاتف قرب الأذن.

وهذا يؤدي إلى إطالة فترة عمل البطارية ويمنع لوحة المفاتيح الرقمية التي تعمل باللمس من العمل بشكل غير صحيح من خلال الإقفال

- ابق على اتصال مع الهاتف BL40 - تعتمد واجهة المستخدم على أربعة أنواع شاشات رئيسية. للتبديل بين الشاشات الرئيسية قم باللمس بسرعة فوق الشاشة من اليسار إلى اليمين أو من اليمين إلى اليسار.

الشاشة الرئيسية الخاصة بك

- تخصيص الشاشة الرئيسية - لكل نوع من أنواع الشاشة الرئيسية. يمكنك إضافة كائنات أو إزالتها من خلال الضغط باستمرار على الشاشة. أو من خلال الضغط باستمرار على الكائنات إذا تمت إضافة هذه الأخيرة مسبقاً.

إقفال حركة الشاشة

إقفال حركة الشاشة - تعيين حركة لتطبيقات الاختصار الـ 9 الموسعة.
تتيح الحركة في شاشة الإقفال للمستخدمين إلغاء قفل الهاتف وتنفيذ التطبيقات مباشرة بعد أن ترسم حركة على الشاشة.

لإعداد هذه الميزة.

- 1 حدد قائمة - إعدادات الشاشة - إقفال حركة الشاشة

- 2 قم بسحب وإفلات الحركة المفضلة من أسفل الشاشة إلى التطبيقات التي تريد تعيينها إليها.

شاشة اللمس

تغيير مفاتيح التحكم في شاشة لمس الهاتف BL40 بسرعة. وهذا يتوقف على المهمة التي تقوم بها.

التمرير

قم بالسحب من جهة إلى جهة للتمرير. كما يمكنك التمرير إلى أعلى أو أسفل على بعض الشاشات. مثل صفحات ويب.

التكبير أو التصغير

عند عرض صور. أو صفحات ويب. أو رسائل بريد إلكتروني. أو خرائط. يمكنك التكبير والتصغير. وذلك عبر جمع إصبعيك معاً أو إبعادهما عن بعضهما.

عرض شريط الحالة

الوصف	الرمز
لا توجد خدمة	
2G	
3G	
EDGE	
HSDPA	
Wi-fi قيد التشغيل	
رسالة بلوتوث	
سماعة رأس ليدوية أحادية لجهاز بلوتوث	
الاتصال باستيريو + أحادي بلوتوث	
سماعة رأس استيريو بلوتوث	
سماعة رأس أحادية بلوتوث	
تشغيل بلوتوث	
طابعة بواسطة بلوتوث	
النقل باستخدام بلوتوث	
إمكانية رؤية بلوتوث	
موسيقى بلوتوث	

الوصف	الرمز
جاري التنزيل	
اكتمال التنزيل.	
تم إلغاء التنزيل.	
خيار أثناء المكالمة	
إنترنت	
جاري البحث	
تحويل المكالمات	
رفض المكالمة	
الحماية	
سماعة الرأس	
منطقة محلية	
التجوال	
المنبه	
جدول (التقويم)	
متعدد المهام	
إيقاف الموسيقى مؤقتاً	
تشغيل الموسيقى	

الشاشة الرئيسية الخاصة بك


الوصف	الرمز
صامت	
النمط المخصص 1-10 أو المخصص 1-10	
الذاكرة الخارجية	
حالة البطارية	
Microsoft Exchange	

الوصف	الرمز
تشغيل راديو FM	
بث FM	
إرسال البريد الإلكتروني	
استلام البريد الإلكتروني	
فشلت عملية إرسال MMS	
إرسال MMS	
استلام MMS	
رسالة MMS جديدة	
إرسال رسالة SMS	
استلام SMS	
بريد صوتي جديد	
رسالة جديدة	
فشلت عملية إرسال SMS	
بريد إلكتروني جديد	
رسالة Push	
وضع الرحلات الجوية	
عادي	
الخارج	

المكالمات

خيارات أثناء المكالمة

انتظار - المس  لوضع المكالمة قيد الانتظار.

كتم - المس  لإيقاف تشغيل الميكروفون بحيث لن يكون باستطاعة الشخص الذي تتكلم معه سماعك.

مكبر الصوت - المس  لبدء تشغيل مكبر صوت الهاتف.

+ **خيارات - اختر** من ضمن قائمة من الخيارات الإضافية التي تتوفر لك أثناء المكالمة. وهي تشمل إنشاء مذكرة جديدة والانتقال إلى الرسائل. بحيث يمكنك التحقق من رسائلك وإضافة جهات اتصال أثناء مكالمة. كما يمكنك إنهاء المكالمة من هنا وذلك بلمس إنهاء المكالمة.


☐ - **المس** لفتح لوحة مفاتيح رقمية للكتابة بالأرقام. مثلاً عند طلب مراكز الاتصال أو خدمات هاتف مؤتمنة أخرى.



📅 - **لإضافة** مذكرة أثناء مكالمة.


📞 - **للبحث** في جهات الاتصال أثناء إجراء مكالمة.

تلميح! اضغط على مفتاح الطاقة لفترة قصيرة لإقفال شاشة اللمس ومنع إجراء مكالمات عن طريق الخطأ.

إجراء مكالمة أو مكالمة فيديو


- 1 **المس**  لفتح لوحة المفاتيح.
- 2 اكتب الرقم على لوحة المفاتيح. لحذف رقم. اضغط على مفتاح المسح.
- 3 **المس** **مكالمة صوتية** لوضع المكالمة.
- 4 **لإنهاء** المكالمة. **المس** **إنهاء المكالمة**.


تلميح! لإدخال + لإجراء مكالمات دولية. المس  مرتين أو اضغط باستمرار للأسفل .

تلميح! يمكنك حفظ رقم. إرسال رسالة والبحث عن جهات اتصال بالضغط على .

المكالمات

الاتصال السريع

1 على الشاشة الرئيسية المس  لفتح جهات الاتصال.

2 المس  وحدد الاتصالات السريعة.


3 تفتح قائمة جهات الاتصال. حدد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم وذلك بلمس رقم هاتفها مرة واحدة.

لطلب رقم اتصال سريع. المس  على الشاشة الرئيسية ثم اضغط باستمرار على الرقم المَعَيَّن حتى تظهر جهة الاتصال على الشاشة. تبدأ المكالمة تلقائياً. من دون الحاجة إلى لمس مكالمة صوتية.

إيقاف تشغيل DTMF

يسمح لك DTMF باستخدام الأوامر الرقمية للتنقل ضمن المكالمات المؤتمنة. يكون DTMF قيد التشغيل كإعداد افتراضي. لإيقاف التشغيل أثناء مكالمة (مثلاً لتسجيل ملاحظة حول رقم) المس  وحدد إيقاف تعطيل DTMF.

إجراء مكالمة ثانية

1 خلال المكالمة الأولية. المس  وحدد الرقم الذي تود الاتصال به.

2 اطلب الرقم أو ابحث عن جهات الاتصال.

3 المس مكالمة صوتية لتوصيل المكالمة.

4 يتم عرض المكالمتين معاً على شاشة المكالمة. يتم إقفال المكالمة الأولية ووضعها في حالة الانتظار.


5 المس رمز التبديل  للتبديل بين المكالمات.

6 المس الرمز + لفتح قائمة أثناء المكالمة وحدد "الانضمام إلى المكالمات" لإجراء مكالمة جماعية.

7 لإنهاء إحدى المكالمتين أو كليهما اضغط على إنهاء .

ملاحظة: سيُفرض عليك رسم مقابل كل مكالمة تجريها.

استخدام حظر المكالمات

- 1 المس  واختر اعدادات المكالمات في علامة التبويب اعدادات.
- 2 المس حظر المكالمات واختر مكالمات صوتية و/أو مكالمات الفيديو.
- 3 اختر أحد الخيارات السبعة أو كلها.
- 4 أدخل كلمة مرور حظر المكالمات. يرجى التحقق من توفر هذه الخدمة مع مشغل الشبكة.

تلميح! حدد أرقام الاتصال الثابتة لتنشغيل وجميع قائمة بالأرقام التي يمكن الاتصال بها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من المشغل. وحدها الأرقام المضمّنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.

تغيير ضبط المكالمات العام

- 1 المس  واختر اعدادات المكالمات في علامة التبويب اعدادات.
- 2 المس اعدادات عامة. يسمح لك ذلك بتعديل الاعدادات التالية:

رفض المكالمات



- إرسال رقمي - اختر ما إذا أردت أن يظهر رقمك عند إجراء مكالمات صادرة.
- معاودة الاتصال التلقائي - مرر المفتاح إلى اليسار لبدء التشغيل أو إلى اليمين ل إيقاف التشغيل.
- منبه الدقائق - مرر المفتاح إلى اليسار لبدء التشغيل لسماع نغمة كل دقيقة خلال فترة المكالمات.
- وضع الرد بلوتوث - حدد لايدوي لتتمكن من الرد على مكالمات باستخدام سماعة رأس بلوتوث. أو حدد هاتف للضغط على مفتاح الهاتف للرد على مكالمات.
- حفظ رقم جديد - حدد تشغيل أو إيقاف لحفظ رقم جديد.
- نقاء الصوت - حدد تشغيل أو إيقاف للتخلص من الضجيج المحيط بك. تجعل هذه الميزة صوتك أعلى وأنقى.

جهات الاتصال


البحث عن جهة اتصال

هناك طريقتان للبحث عن جهة اتصال:


من الشاشة الرئيسية

- 1 على الشاشة الرئيسية المس  لفتح جهات الاتصال. المس  وأدخل اسم جهة الاتصال مستخدماً لوحة المفاتيح.
- 2 المس مكالمة فيديو أو مكالمة صوتية لوضع المكالمة.

في القائمة الرئيسية


- 1 المس . والمس جهة اتصال في علامة التبويب اتصال.

إضافة جهة اتصال جديدة

- 1 على الشاشة الرئيسية المس  ثم المس جهة اتصال جديدة.
- 2 اختر ما إذا كنت تريد حفظ جهة الاتصال في الهاتف أو في USIM.
- 3 إذا كنت تريد إضافة صورة لكل جهة اتصال. المس إضافة صورة.
- 4 أدخل الاسمين الأول والأخير لجهة الاتصال الجديدة. ليس من الضروري إدخال الاسمين.



ولكن يجب إدخال أحدهما على الأقل.

- 5 تعيين أخرى.

- 6 المس  لحفظ جهة الاتصال.

تلميح! يمكنك إنشاء مجموعات مخصصة لجهات الاتصال لديك. راجع إنشاء مجموعة.

إنشاء مجموعة

- 1 على الشاشة الرئيسية. المس  ثم المس جهة اتصال في علامة التبويب اتصال.
 - 2 المس جهات الاتصال في أعلى الشاشة. ثم المس مجموعات وحدد مجموعة جديدة.
 - 3 أدخل اسماً للمجموعة الجديدة. وقم بتعيين صورة المجموعة. اسم المجموعة. نغمة رنين المجموعة واهتزاز المجموعة.
 - 4 المس  لحفظ المجموعة.
- ملاحظة:** إذا قمت بحذف مجموعة. فلن تفقد جهات الاتصال التي تم تعيينها إلى تلك المجموعة. بل ستبقى موجودة في جهات الاتصال لديك.

مسح جهات الاتصال - حذف كل جهات الاتصال المتوفرة لديك.

معلومات الذّاكرة.

مزامنة جهات الاتصال - الاتصال بالخادم لمزامنة جهات الاتصال.

إرسال كل جهات الاتصال عبر بلوتوث

- أرسل كل جهات الاتصال إلى جهاز آخر باستخدام بلوتوث. ستنم مطالبتك ببدء تشغيل بلوتوث إذا قمت بتحديد هذا الخيار.

عرض المعلومات

تلميح! لإضافة بطاقة العمل الخاصة

بك. حدد بطاقة العمل الخاصة بي وأدخل التفاصيل كما تقوم عادةً بالنسبة لأي جهة اتصال. المس  للانتهاء.

تلميح! يمكنك تعديل مجموعة موجودة وذلك بلمس المجموعة المحددة مرة واحدة. اختر من ضمن عرض الأعضاء، أو تعديل مجموعة. أو إرسال رسالة، أو إرسال بطاقة عمل أو حذف مجموعة.

تغيير اعدادات جهات الاتصال

يمكنك تكييف اعدادات جهات الاتصال بحيث تناسب مع تفضيلاتك الخاصة.

1 المس جهة اتصال في علامة التبويب اتصال. وحدد  ثم قم بالتمرير عبر اعدادات جهة الاتصال.

2 من هنا يمكنك ضبط الاعدادات التالية:
اسم العرض

نسخ - قم بنسخ جهات الاتصال من بطاقة USIM إلى الجهاز، أو العكس. يمكنك القيام بذلك لكل جهة اتصال على حدة. أو لكل الجهات دفعةً واحدة.



نقل - يعمل هذا الأمر بالطريقة نفسها التي يعمل بها النسخ. غير أن جهة الاتصال ستبقى في الموقع الجديد فقط.

المراسلة

المراسلة

يجمع الهاتف BL40 ميزات إرسال رسائل SMS وMMS في قائمة واحدة بديهية وسهلة الاستخدام.


هناك طريقتان لدخول مركز المراسلة:

- 1 على الشاشة الرئيسية، المس  ، أو المس  ثم قم بالتمرير عبر **المراسلة** من علامة التبويب اتصال.

إرسال رسالة

- 1 المس  ثم كتابة رسالة لفتح رسالة فارغة.
- 2 المس إلى لإدخال رقم المستلم، أو فتح جهات الاتصال لديك أو المفضلات، يمكنك إضافة جهات اتصال عديدة، حالما تنتهي المس صندوق الرسائل أدناه لبدء إنشاء رسالة نصية.
- 3 بعد إدخال النص، يمكنك إرسال رسالة SMS بلمس زر الإرسال في أعلى الرسالة.

تلميح! سيتم فرض رسم عليك مقابل كل رسالة نصية تتألف من 160 حرفاً لكل شخص ترسل الرسالة إليه.


- 4 المس  إدخال لإضافة صورة، فيديو، صوت، نموذج SMS، نموذج MMS، رمز تعبير، اسم ورقم، شريحة جديدة، موضوع أو توقيع وأكثر (بطاقة عمل/جدول/مذكرة/مهام).

⚠ تحذير قد يختلف حد عدد الأحرف عن 160 من بلد إلى آخر وذلك استناداً إلى كيفية ترميز رسائل SMS.

⚠ تحذير: إذا تمت إضافة صورة، ملف فيديو أو ملف صوتي إلى رسالة SMS، فسيتم تحويلها تلقائياً إلى MMS، وسيفرض رسم عليك وفقاً لذلك.

إدخال النص

المس لبدء تشغيل نص T9 التكهني.
اضغط للتبديل بين لوحات مفاتيح
الأرقام والرموز والنص.

استخدم  للتبديل بين مختلف لوحات
المفاتيح في كل وضع من أوضاع إدخال النص
(مثلاً. الأحرف الكبيرة أو الأحرف الصغيرة).

لإدخال مسافة. المس **␣**.

T9 التكهني


في وضع T9، ستري ، دائرة باللون
البرتقالي.

ما عليك إلا لمس مفتاح الرقم المقترن بالحرف
الذي تريد إدخاله، وسيوقع القاموس الكلمة
التي تود استخدامها.

دليل Abc


في وضع Abc عليك لمس المفتاح بشكل
متكرر لإدخال حرف. فلكتابة كلمة 'hello'
مثلاً. المس 4 مرتين، و3 مرتين، و5 ثلاث مرات.
و5 ثلاث مرات مجدداً. ثم 6 ثلاث مرات.

إعداد البريد الإلكتروني

1 المس  على الشاشة الرئيسية. وقم
بالتمرير إلى بريد إلكتروني في علامة
التبويب اتصال.

2 المس كتابة بريد إلكتروني. في حال عدم
إعداد حساب بريد إلكتروني. فابدأ معالج
إعداد البريد الإلكتروني.

تلميح! في حال تعيين حساب بريد إلكتروني
مسبقاً. لا يتم تنشيط المعالج تلقائياً.

يمكنك أيضاً تعديل اعدادات حساب معين
بالتنقل إلى اتصال < بريد إلكتروني >
 < حساب بريد الكتروني جديد. إنها
كالتالي:

العنوان - أدخل اسماً لهذا الحساب.
اسم المستخدم - أدخل اسم مستخدم
الحساب.

كلمة المرور - أدخل كلمة مرور الحساب.
عنوان البريد الإلكتروني - أدخل عنوان البريد
الإلكتروني للحساب.

عنوان الرد على البريد الإلكتروني - أدخل
عنوان البريد الإلكتروني 'الرد على'.

المراسلة

بريد إلكتروني للاسترداد - اختر طريقة تنزيل رسائل البريد الإلكتروني. اختر من الرأس فقط أو الكل بما في ذلك النص الأساسي لـ POP3. الرأس فقط. الرأس + النص الأساسي. أو الكل لـ IMAP4.

استرداد تلقائي - اختر ما إذا كنت ترغب في استرداد رسائل البريد الإلكتروني الجديدة تلقائياً.

استرداد الجديدة فقط - اختر ما إذا كنت ترغب في تجاهل رسائل البريد الإلكتروني التي تم تنزيلها مسبقاً.

اعدادات متقدمة - اختر ما إذا كنت ترغب في استخدام الاعدادات المتقدمة.

رقم منفذ SMTP - يكون هذا الرقم عادة 25.

SMTP TLS/SSL - اختر ما إذا كنت ترغب في استخدام TLS/SSL لخادم الصادر.

منفذ خادم الوارد - يكون هذا الرقم عادة 110 لحسابات POP3 و 143 لحسابات IMAP4.

TLS/SSL واردة - اختر ما إذا كنت ترغب في استخدام TLS/SSL لخادم الوارد.

مصادقة SMTP - اختر اعدادات الحماية لخادم البريد الصادر.

خادم البريد الصادر - أدخل عنوان خادم البريد الإلكتروني الصادر

خادم البريد الوارد - أدخل عنوان خادم البريد الإلكتروني الوارد

الحجم الأقصى للاستلام - حدد الحد الأقصى لحجم رسائل البريد الإلكتروني. الحجم الأقصى هو 2 ميغا بايت.

نوع صندوق البريد - أدخل نوع صندوق البريد POP3 أو IMAP4.

حفظ في الخادم - اختر ما إذا كنت تريد حفظ رسائل البريد الإلكتروني في الخادم. يتم دائماً حفظ نسخ لحسابات IMAP4.

حفظ البريد المرسل في - حدد المكان الذي تريد حفظ فيه رسائل البريد الإلكتروني المرسلة إلى صناديق بريد IMAP4. عندما يكون نوع صناديق البريد POP3 يتم دائماً حفظ البريد المرسل في الهاتف.

خيار التنزيل - اختر طريقة تنزيل رسائل البريد الإلكتروني. اختر من الرأس فقط أو الكل بما في ذلك النص الأساسي لـ POP3. الرأس فقط. الرأس + النص الأساسي. أو الكل لـ IMAP4.

نقطة الوصول - اختر نقطة الوصول إلى إنترنت.

لقد تم إعداد حسابك الآن. وسيظهر في قائمة الحسابات في حافظة البريد الإلكتروني.

مزامنة البريد الإلكتروني المستلم من - اختر
المدة لمزامنة رسائل البريد الإلكتروني.

عناصر المزامنة - اختر ما إذا كنت ترغب في استخدام عناصر المزامنة (جهات الاتصال والجدول والمهام).

جهات الاتصال - حدد جهات الاتصال المتزامنة.

الجدول - حدد الجداول المتزامنة.

المهام - حدد المهام المتزامنة.

استخدام SSL - اختر ما إذا كنت ترغب في استخدام SSL. Microsoft Exchange.

نمط إنترنت - اختر نمط إنترنت الخاص بك.

حفظ في المرسلة - اختر ما إذا كنت ترغب

في حفظ رسائل البريد الإلكتروني المرسلة إلى الخادم.

استرداد بريدك الإلكتروني

يمكنك أن تتحقق من وجود رسائل بريد إلكتروني جديدة في حسابك تلقائياً أو يدوياً. للتحقق يدوياً:

اسم مستخدم SMTP - أدخل اسم مستخدم SMTP.

كلمة مرور SMTP - أدخل كلمة مرور SMTP.

تسجيل دخول آمن لـ APOP - اختر
لتنشيط تسجيل دخول آمن لـ APOP لحساب POP3. تكون حسابات IMAP4 دوماً معيّنة إلى إيقاف.

حالما يتم إعداد الحساب. سيظهر في قائمة الحسابات في حافظة البريد الإلكتروني.

حساب بريد إلكتروني Microsoft Exchange

عنوان البريد الإلكتروني - أدخل عنوان البريد الإلكتروني للحساب.

عنوان الخادم - أدخل عنوان خادم البريد الإلكتروني.

اسم المستخدم - أدخل اسم المستخدم للحساب.


كلمة المرور - أدخل كلمة مرور الحساب.

المجال - أدخل مجال الحساب (اختياري).


رسالة تلقائية - اختر ما إذا كنت ترغب في استخدام رسالة تلقائية.

المراسلة

تلميح! أثناء اتصال Wi-Fi نشط. يتم إرسال رسائل البريد الإلكتروني وتلقيها عبر Wi-Fi.


1 المس  على الشاشة الرئيسية. وقم بالتمرير عبر البريد الإلكتروني من علامة التبويب اتصال.

2 حدد بريد إلكتروني.

3 المس الحساب الذي تريد استخدامه ثم .

4 قم باختيار استرداد/تزامن الرسائل وسيتم توصيل BL40 بحساب البريد الإلكتروني واسترداد الرسائل الجديدة.

إرسال بريد إلكتروني باستخدام حسابك الجديد

1 المس  على الشاشة الرئيسية. وقم بالتمرير إلى البريد الإلكتروني - اكتب بريدًا إلكترونيًا في علامة التبويب اتصال لفتح رسالة فارغة جديدة.


2 أدخل عنوان المستلم ودون رسالتك.


ويمكنك أيضاً إرفاق صور وملفات فيديو وملفات صوت وأنواع أخرى من الملفات.

3 المس إرسال بريد إلكتروني لإرسال بريدك الإلكتروني.

تغيير اعدادات البريد الإلكتروني

يمكنك تغيير اعدادات البريد الإلكتروني وفق تفضيلاتك الخاصة.

1 المس  على الشاشة الرئيسية. وقم بالتمرير عبر البريد الإلكتروني من علامة التبويب اتصال.

2 حدد  وقم بالتمرير إلى اعدادات البريد الإلكتروني.

3 يمكنك تعديل الاعدادات التالية:

حسابات البريد الإلكتروني - قم بإدارة حسابات بريدك الإلكتروني.

السماح بالرد على البريد الإلكتروني - اختر ما إذا كنت تريد السماح بإرسال رسائل تأكيد القراءة.

طلب الرد على البريد الإلكتروني - اختر ما إذا كنت تريد طلب رسائل تأكيد القراءة.

الفاصل الزمني للاسترداد - حدد مدى تكرار

قيام BL40 بالتحقق من وجود رسائل بريد إلكتروني جديدة.

استرداد القيمة - اختر عدد رسائل البريد الإلكتروني التي تود استردادها في المرة الواحدة.

تضمين الرسالة في إعادة التوجيه والرد - حدد ما إذا كان يجب تضمين الرسالة الأصلية في ردك.

تضمين المرفق - حدد ما إذا كان يجب تضمين المرفق الأصلي في أي رد.

استرداد تلقائي أثناء التجوال - اختر ما إذا كنت ترغب في استرداد الرسائل تلقائياً أثناء تواجدك في الخارج (التجوال).

إعلام بريد إلكتروني جديد - اختر ما إذا كنت ترغب في أن يتم تنبيهك عند وصول بريد إلكتروني جديد من دون رسالة منبثقة.

التوقيع - قم بإنشاء توقيع على البريد الإلكتروني وشغل هذه الميزة.

الأولوية - اختر مستوى الأولوية لرسائل البريد الإلكتروني.


حجم البريد المرسل - اختر حجم البريد الإلكتروني الذي ترسله.

استخدام النماذج

قم بإنشاء نماذج لرسائل SMS وMMS التي ترسلها بشكل متكرر. هناك بعض النماذج الموجودة مسبقاً على الهاتف. والتي يمكنك تعديلها.

1 عند كتابة رسالة جديدة. يمكنك إدخال نماذج من إدراج في قائمة الخيارات.

2 اختر نموذج SMS أو نموذج MMS.

يمكنك في ما بعد لمس  لإضافة نموذج جديد. حذف أو حذف كل النماذج. لتعديل رسالة ما عليك سوى تحديثها. إجراء التعديلات ثم لمس حفظ.

استخدام الرموز التعبيرية


يمكنك إضفاء الحيوية على رسائلك من خلال استخدام الرموز التعبيرية. تجد على هاتفك بعض الرموز التعبيرية الشائعة الاستخدام.

يمكنك إضافة رمز تعبيرى جديد عبر لمس رمز تعبيرى جديد.

تغيير اعدادات الرسائل النصية

يمكن تغيير هذه الاعدادات بحسب تفضيلاتك.

المراسلة

قم بالتمرير عبر المراسلة في علامة التبويب اتصال. المس  ثم اختر اعدادات الرسائل ورسالة نصية. يمكنك تغيير ما يلي:
مركز الرسائل النصية - أدخل تفاصيل مركز الرسائل.


تقرير استلام - مرر المفتاح إلى اليسار لاستلام تأكيد بتسليم رسائللك.

مدة الصلاحية - اختر فترة تخزين رسائللك في مركز الرسائل.

أنواع الرسائل - قم بتحويل النص إلى صوت، أو فاكس، أو X.400 أو بريد إلكتروني.

ترميز الحروف - اختر طريقة ترميز الحروف. يؤثر هذا الأمر في حجم الرسائل وبالتالي في رسوم البيانات.

إرسال النص الطويل ك - اختر إرسال النص الطويل كرسائل SMS متعددة أو كرسالة MMS.

تغيير اعدادات رسائل الوسائط المتعددة يمكن تغيير هذه الاعدادات بحسب تفضيلاتك. قم بالتمرير عبر المراسلة في علامة التبويب اتصال. المس  ثم اختر اعدادات الرسائل ورسالة وسائط متعددة.

يمكنك إدخال تغييرات على:

وضع الاسترداد - حدد شبكة محلية أو شبكة التجوال. إذا حددت يدوي فيما بعد فستتلقى إشعارات عن رسائل MMS فقط. ويمكنك حينئذٍ تقرير ما إذا كنت تريد تنزيلها بشكل كامل.

تقرير الاستلام - اختر السماح بتقرير الاستلام و/أو طلبه.


إشعار بقراءة الرسالة - اختر السماح بإشعار بقراءة الرسالة و/أو إرساله.

الأولوية - اختر مستوى أولوية رسائل MMS.

مدة الصلاحية - اختر فترة حفظ رسالتك في مركز الرسائل.

مدة الشريحة - اختر مدة ظهور الشرائح على الشاشة.

وضع الإنشاء - اختر الوضع بين مقيد/تحذير/
مجاني.
تقييد - يتعدّر إرفاق أنواع ملفات غير معتمدة
مع MMS.

 **تحذير:** يمكنك أن تحدد تقييد أو إرفاق
أنواع ملفات غير معتمدة مع MMS عبر
تأكيد منيثق.

مجاني - يمكن إرفاق نوع الملف غير المعتمد
مع MMS وفقاً للحجم المتوفر.
وقت الاستلام - اختيار المدة قبل تسليم كل
رسالة.
مركز رسالة الوسائط المتعددة- أدخل
تفاصيل مركز الرسائل.

الكاميرا

التقاط صورة

1 اضغط باستمرار على مفتاح الكاميرا في الجانب الأيمن من الهاتف.

2 مع الإمساك بالهاتف أفقياً، صوّب العدسة باتجاه موضوع الصورة.

3 اضغط برفق على زر الالتقاط فيظهر صندوق البؤرة في وسط شاشة محدد المنظر.

4 ضع الهاتف بحيث يمكنك مشاهدة موضوع الصورة في صندوق البؤرة.

5 عندما يتحوّل لون صندوق البؤرة إلى أخضر، فهذا يعني أن الكاميرا تركز على موضوع الصورة.

6 اضغط على زر الالتقاط بشكل كامل لالتقاط اللقطة.

بمجرد التقاط الصورة

تظهر الصورة الملتقطة على الشاشة، يظهر اسم الصورة مع أربعة رموز على الجانب الأيمن.

إرسال المس لإرسال الصورة ك رسالة بريد إلكتروني أو بلوتوث.

ملاحظة: قد يتم فرض رسم إضافي عند تنزيل رسائل MMS أثناء التجوال.

استخدام ك المس لاستخدام الصورة كخلفية.

إعادة التسمية المس لتعديل اسم الصورة المحددة.

تعديل المس لتعديل الصورة مستخدماً أدوات مختلفة.


↶ المس للعودة إلى القائمة السابقة.
حذف المس لحذف الصورة.

صورة جديدة المس لالتقاط صورة أخرى على الفور. المس لالتقاط صورة أخرى على الفور.

🖼️ المس لعرض معرض من الصور المحفوظة.

التعرّف على محدد المنظر

التكبير/التصغير - المس () للتكبير أو () للتصغير. كطريقة بديلة يمكنك استخدام مفاتيح مستوى الصوت الجانبية.

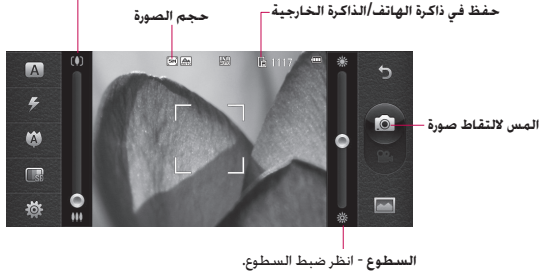

رجوع - المس هنا للعودة إلى الشاشة الرئيسية.

وضع الكاميرا

1. تم تحديد وضع الكاميرا.

2. المس لالتقاط صورة

3. قم بالسحب لأسفل للتبديل إلى

كاميرا الفيديو

فيديو

الاستوديو

المس للوصول إلى وضع المشهد.

حالة الفلاش - تعيين الفلاش أو إيقاف تشغيله.

الماكرو - قم بتشغيله لالتقاط لقطات قريبة.


الجودة (عادي/دقيق/دقيق جداً)

الاعدادات - المس هذا الرمز لفتح قائمة الاعدادات. راجع استخدام الاعدادات المتقدمة.

الكاميرا

استخدام الفلاش

الضبط الافتراضي للفلاش هو تلقائي، ولكن هناك خيارات أخرى.

1 حدد  في الزاوية اليسرى لمحدد المنظر للدخول إلى قائمة الفلاش الفرعية.

2 هناك أربعة خيارات للفلاش:

تلقائي - ستقوم الكاميرا بتقييم الإضاءة المتوفرة لالتقاط صورة جيدة وستستخدم الفلاش كما تقتضي الحاجة.

التخفيف من العين الحمراء - ستستخدم الكاميرا الفلاش مرتين من أجل التخفيف من العين الحمراء.


إيقاف دائم - لن يضيء فلاش الكاميرا أبداً. ويُعتبر هذا الأمر مفيداً إذا ما رغبت في توفير طاقة البطارية.

تشغيل دائم - يضيء فلاش الكاميرا دائماً.

3 حين تقوم بلمس خيار تريده، تنغلق قائمة الفلاش تلقائياً بحيث تسمح لك بالتقاط الصورة فوراً.

4 يتغيّر رمز حالة الفلاش الموجود على محدّد المنظر وفقاً للوضع الجديد الذي عيّنته للفلاش.

اختيار نوع اللقطة

1 المس  وحدد وضع اللقطة لفتح أنواع اللقطات المتوفرة

2 اختر من بين ثمانية خيارات:

لقطة عادية - هذا هو نوع اللقطة

الافتراضي. حيث يتم التقاط الصورة

بالطريقة العادية. كما تم توضيحه في التقاط صورة سريعة.

لقطات متلاحقة - يمكنك هذا الخيار من أخذ ست لقطات تلقائياً بطريقة متواصلة سريعة.

صورة بانورامية - يمكنك هذا الخيار من


لصق الصور إلى جانب بعضها البعض

بعد لقطات متلاحقة. يمكن دمج ما بين ست إلى ثمان صور في صورة بانورامية.

فتستمتع بالتالي بالحجم الكامل لنشاشة جهاز BL40.

التقاط لقطة بانورامية
لتقط صوراً من الحياة تماماً كما تظهر
باستخدام لقطة بانورامية، يتيح لك الاستمتاع
بالحجم الكامل للشاشة BL40 مع بانوراما
360°.

تلميح!

بانوراما 360° : يتيح لك هذا الخيار لصق
الصور ضمن 12 قطعة، بعد الضغط
على  قم بتحريك عدسة الكاميرا في
الاتجاه (يمين/يسار/أعلى/أسفل) الذي تريد
التقاط الصورة فيه، ثم سيتم التقاط
الصورة تلقائياً. عندما تصبح الخانة الحمراء
في الخانة البيضاء في وسط الشاشة، تكون
الكاميرا جاهزة لالتقاط الصورة.

لقطة ابتسامة - يسمح هذا الخيار
بتشغيل الغالق تلقائياً عندما تكشف
الكاميرا عن ابتسامة.
بانوراما - يعتبر نوع اللقطة هذا جيداً
لالتقاط صورة لمجموعة كبيرة من
الأشخاص أو لالتقاط مشهد بانورامي.
لقطة تجميلية - تمكّنك من التقاط صورة
واضحة وساطعة لوجه شخص. مفيدة
بشكل خاص حين تكون اللقطة قريبة.
لقطة فنية - اختر تأثيرات صورة مختلفة،
(عادي، أسود وأبيض، دافئ، بارد).
لقطة بإطار - اختيار إطار من ضمن إطارات
المرح لتحويل صديق أو تزيين محيطه.
لقطة بتركيز خارجي - يعني هذا النوع من
اللقطات تركيزاً انتقائياً.
يمكنك التركيز على وسط الصورة.

الكاميرا

استخدام الاعدادات المتقدمة

في محدد المنظر. المس  لفتح جميع خيارات الاعدادات المتقدمة.

يمكنك تغيير ضبط الكاميرا عبر تمرير العجلة. بعد تحديد الخيار، المس زر .

تلميح! يمكنك عرض قائمة التعليمات حول



وظائف الكاميرا بلمس

تأثير الألوان - اختر درجة اللون لاستخدامها على صورتك الجديدة. راجع اختيار تأثير الألوان.

توازن اللون الأبيض - اختر من ضمن تلقائي، متوهج، مشمس، فلوريسنت وغائم.

المؤقت الذاتي - يسمح لك المؤقت الذاتي بتعيين فترة تأخير بعد ضغط زر الغالق. اختر من ضمن إيقاف التشغيل، أو 3 ثوانٍ، أو 5 ثوانٍ أو 10 ثوانٍ. هذا خيار مثالي إن أردت تضمين نفسك في الصورة.

وضع اللقطة - اختر وضع اللقطة.

ISO - يحدد تصنيف ISO حساسية جهاز استشعار الضوء في الكاميرا. بقدر ما تكون قيمة ISO عالية، بقدر ما تكون الكاميرا حساسة. يعتبر هذا الأمر مفيداً في الحالات الداكنة عندما لا يكون استخدام الفلاش ممكناً. اختر قيمة ISO من بين تلقائي، أو 100، 200، 400، أو 800.

تبديل الكاميرا - للصور الشخصية الذاتية. قم بتبديل كاميرا هاتف LG BL40 الداخلية.

الحجم - تغيير حجم الصورة التي تريد حفظها على مساحة الذاكرة أو لالتقاط صورة لجهة اتصال بحجم مناسب. راجع تغيير حجم الصورة.

وضع المشهد - تعيين الكاميرا بحيث تتناسب مع بيئة الاستخدام، تغيير من تلقائي. عمودي. أفقي. رياضة ويلي.

تحديد المعالم - اختر تشغيل معلومات EXIF للصورة لكتابة معلومات GPS.

إعادة تعيين الإعدادات - استعادة كل إعدادات الكاميرا.

تلميح! عندما تنهي تشغيل الكاميرا، تعود كل الإعدادات إلى وضعها الافتراضي باستثناء حجم الصورة وجودتها. يجب إعادة تعيين الإعدادات غير الافتراضية، شأن درجة اللون وISO، تحقق من ذلك قبل التقاط الصورة التالية.

تلميح! تقع قائمة الإعدادات فوق محدد المنظر، وستتمكن بالتالي من مشاهدة معاينة لتغييرات الصورة خلف قائمة الإعدادات عندما تقوم بتغيير عناصر ألوان الصورة أو وجودتها.

الجودة - اختر من ضمن دقيق جداً، ودقيق وعادي، كلما كانت الجودة أكثر دقة، كانت الصورة أكثر وضوحاً، ولكن حجم الملف سيكون أكبر نتيجةً لذلك، ما يعني أنه سيكون باستطاعتك تخزين عدد أقل من الصور في الذاكرة.

الذاكرة - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو الذاكرة الخارجية.

تثبيت الصورة - يمكّنك من التقاط صورة من دون اهتزاز الكاميرا أو عدم ثباتها.


وضع التركيز - حدد طريقة تركيز الكاميرا، اختر من ضمن نقطة، تركيز تلقائي وتتبع الوجه، صوت الغالق - حدد خياراً من ضمن خيارات صوت الغالق الـ 3.

شاشة الشبكة - اختر من ضمن إيقاف تشغيل، أو تقاطع بسيط، أو ثلاثية الأقسام.

الكاميرا

تغيير حجم الصورة

بقدر ما يكون عدد عناصر البكسل كبيراً، بقدر ما يكون حجم الملف أكبر. ما يعني أن الملفات ستحتل مساحة أكبر في الذاكرة. إذا أردت تخزين المزيد من الصور على الهاتف، فيمكنك تعديل عدد عناصر البكسل لجعل الملفات أصغر حجماً.

1 في محدد المنظر، المس  في الزاوية اليسرى.

2 حدد حجم في قائمة المعاينة.

3 حدد قيمة بكسل من الخيارات

5M(2560x1920),

3M(2048x1536),


2M(1600x1200),

1M(1280x960), VGA(640x480),

(QVGA(320x240, جهات الاتصال)


أو اختر حجم الخلفية التي تم تعريفها مسبقاً.

اختيار تأثير اللون

1 في محدد المنظر، المس  في الزاوية اليسرى.

2 حدد تأثير الألوان في قائمة المعاينة.

3 هناك خيارات لدرجة اللون.

4 حالما تقوم بالتحديد يصبح بالإمكان إغلاق قائمة درجة اللون عبر تحديد  فتصبح جاهزة لالتقاط الصورة.

تلميح! يمكنك تغيير صورة تم التقاطها بالألوان إلى الأسود والأبيض أو البني الداكن. غير أنه لا يمكنك تغيير صورة تم التقاطها بالأسود والأبيض أو البني الداكن إلى صورة ملونة.

استخدام الكاميرا الثانوية

تتوفر في LG BL40 كاميرا داخلية 640x480. ليس فقط لإجراء مكالمات فيديو بل أيضاً لالتقاط الصور.



1 للتبديل إلى الكاميرا الداخلية المس
ثم حدد استخدام الكاميرا الثانوية في قائمة تبديل الكاميرا.

2 ستشاهد نفسك بعد مرور بضع ثوانٍ في محدّد المنظر. لالتقاط الصورة، اضغط على الزر الجانبي كما تفعل عادةً.

تلميح! تتوفر إعدادات أقل في الكاميرا

الداخلية إذ ليس لديها فلاش أو ISO.

ويمكنك مع ذلك تغيير حجم الصورة. وضّح المشهد. تأثير الألوان. جودة الصورة. توازن اللون الأبيض كما يمكنك تعيين المؤقت الذاتي عبر لمس  بالطريقة نفسها التي تقوم فيها بذلك عند استخدام الكاميرا الرئيسية.


3 بعد التقاط الصورة، ستتوفر لديك كل

الخيارات نفسها التي تتوفر بالنسبة إلى صورة تلتقطها بواسطة الكاميرا الرئيسية.



4 للعودة إلى الكاميرا الرئيسية المس
ثم حدد استخدام الكاميرا الرئيسية في قائمة تبديل الكاميرا.

عرض الصور المحفوظة

1 يمكنك الوصول إلى الصور المحفوظة من ضمن وضع الكاميرا، ما عليك سوى لمس  وسيظهر الاستوديو على الشاشة.

كاميرا فيديو

التقاط فيديو

- إرسال** المس لإرسال الصورة ك رسالة
بريد إلكتروني أو بلوتوث. راجع إرسال رسالة.
وإرسال واستلام ملفات باستخدام بلوتوث.
استخدام ك المس لاستخدام الفيديو
كنغمة رنين.

- إعادة التسمية** المس لتعديل اسم الصورة
المحددة.

- تعديل** المس لتعديل الصورة مستخدماً
أدوات مختلفة.

- ↶** المس للعودة إلى القائمة السابقة.
حذف المس لحذف الفيديو الذي قمتم
بالتقاطه لتوّك. وأكد بلمس نعم.

- فيديو جديد** المس لإنشاء فيديو آخر على
الفور. وسيتم حفظ الفيديو الحالي.
المس لعرض معرض الصور وملفات
الفيديو المحفوظة.



- 1 اضغط باستمرار على مفتاح الكاميرا
الموجود في الجانب الأيمن من الهاتف.
2 كطريقة بديلة، اسحب للأسفل  في
الباحث عن العرض في وضع الكاميرا للتبديل
إلى وضع الفيديو.
3 اضغط على زر الالتقاط مرة واحدة أو المس
 في الباحث عن العرض لبدء التسجيل.
4 ● سيظهر تسجيل في أسفل محدد
المنظر مع مؤقت يظهر طول الفيديو.
5 إيقاف الفيديو مؤقتاً، المس  ولاستئناف
التسجيل حدد  .
6 المس  على الشاشة لإيقاف التسجيل.

بعد التقاط فيديو

- ستظهر على الشاشة صورة ثابتة تمثل الفيديو
الملتقط. سيظهر اسم الفيديو في أسفل
الشاشة. مع أربعة رموز في الجانب الأيمن.
تشغيل المس لتشغيل الفيديو.

التعرّف على محدد المنظر

التكبير/التصغير - المس (⏏) للتكبير أو (⏏) للتصغير، كطريقة بديلة يمكنك استخدام مفاتيح مستوى الصوت الجانبية.

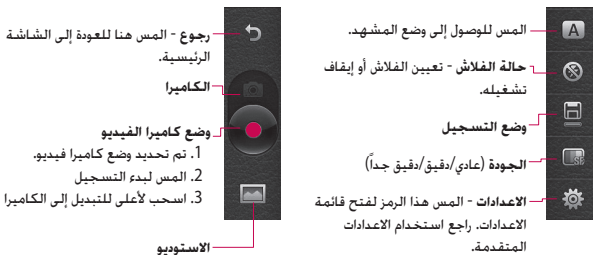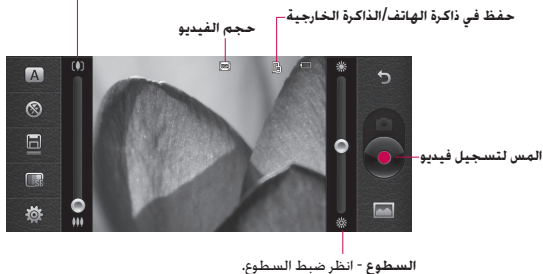


كاميرا فيديو

- 1 في محدد المنظر. المس  في الزاوية اليسرى.
- 2 حدّد حجم الفيديو.

⚠ تحذير: يتوافق برنامج التعديل الممتاز المتوفر على LG BL40 مع كل أنواع ملفات الفيديو باستثناء 640x480. لا تقم بالتسجيل في هذا التنسيق إذا كنت تنوي تعديل الفيديو.

تلميح! بالنسبة إلى برنامج تحويل تنسيق الفيديو، انظر القرص المضغوط الذي يصحب BL40.

استخدام كاميرا الفيديو الثانوية
تتوفر في LG BL40 كاميرا داخلية 320x240.
ليس فقط لإجراء مكالمات فيديو بل أيضاً
لتسجيل فيديو.

- 1 للتبديل إلى الكاميرا الداخلية المس 
ثم حدد استخدام الكاميرا الثانوية في قائمة تبديل الكاميرا.


استخدام الاعدادات المتقدمة
باستخدام محدد المنظر. المس  لفتح جميع خيارات الاعدادات المتقدمة. راجع اعدادات الكاميرا المتقدمة الموجودة في الصفحة 35.
وضع التسجيل - قم بتعيين حد لمدة الفيديو، اختر بين عادي MMS أو DLNA لتحديد الحد الأقصى لحجم إرسال الفيديو ك MMS.

تلميح! إذا اخترت مدة MMS، فتمكنك جودة أقل للصورة من تسجيل فيديو أطول.

الذاكرة - اختر ما إذا كنت تريد حفظ ملفات الفيديو في ذاكرة الهاتف أو في الذاكرة الخارجية.
الصوت - اختر من كنم الصوت لتسجيل فيديو من دون صوت، أو إلغاء الكتم لتضمين الصوت.



تغيير حجم صورة الفيديو
بقدر ما يكون عدد عناصر البكسل كبيراً، بقدر ما يكون حجم الملف أكبر. ما يعني أن الملفات ستحتل مساحة أكبر في الذاكرة. إذا أردت أن يستوعب هاتفك المزيد من مقاطع الفيديو، فيمكنك تعديل عدد عناصر البكسل لجعل الملفات أصغر حجماً.

مشاهدة مقاطع الفيديو على التلفزيون
قم بتوصيل BL40 إلى التلفزيون باستخدام
كبل إخراج التلفزيون.
ملاحظة: يمكن شراء كبل إخراج التلفزيون
بشكل منفصل.
أفضل درجات الدقة المناسبة متوفرة أتناه:
WVGA 800x480 2 ميغابايت في الثانية
30 إطاراً في الثانية
CIF 352x288 384 كيلوبايت في الثانية
30 إطاراً في الثانية (Window Media)
VGA 640x480 384 كيلوبايت في الثانية
30 إطاراً في الثانية
يمكن العثور على معلومات مفصلة في
معلومات الملف في قائمة الخيارات عندما يتم
إعادة تشغيل فيديو.
(يتعدّر إظهار جودة الفيديو).

- 2 ستشاهد نفسك بعد مرور بضع ثوانٍ في
محدد المنظر. لبدء تسجيل الصورة، اضغط
على مفتاح الالتقاط كما تقوم بذلك عادةً.
ثم اضغط مرة أخرى لإيقاف التسجيل.
- 3 بعد التقاط الفيديو ستتوفر لديك كل
الخيارات نفسها التي تكون متوفرةً للفيديو
الذي تلتقطه بواسطة الكاميرا الرئيسية.
- 4 للعودة إلى الكاميرا الرئيسية المس 
ثم استخدام الكاميرا الرئيسية.


تلميح! يمكنك مع ذلك تغيير حجم
الصورة. وتأثير الألوان. وتوازن اللون الأبيض
والجودة وذلك بلمس الاعدادات بالطريقة
نفسها التي تقوم فيها بذلك عند استخدام
الكاميرا الرئيسية.

مشاهدة ملفات الفيديو المحفوظة

- 1 في محدد المنظر، المس .
- 2 يظهر الاستوديو على الشاشة.
- 3 المس الفيديو الذي تريد عرضه مرةً واحدةً
لإحضاره إلى مقدمة المعرض. المس 
للتشغيل.

الصور و مقاطع الفيديو


عرض الصور وملفات الفيديو

1 المس  على شاشة المعاينة الخاصة بالكاميرا.

2 يظهر الاستوديو على الشاشة.

3 المس الفيديو أو الصورة لفتحهما كلياً.

تلميح! انقر إلى اليمين أو إلى اليسار لعرض صور أخرى أو ملفات فيديو أخرى.

تلميح! لحذف فيديو أو صورة، افتحه وحدد  . المس نعم للتأكيد.

استخدام التكبير/التصغير عند مشاهدة فيديو أو صورة

عند عرض صور أو مقاطع فيديو، يمكنك التكبير والتصغير عبر جمع إصبعيك معاً أو إبعادهما عن بعضهما.

ضبط مستوى الصوت عند عرض فيديو

لضبط مستوى صوت الفيديو أثناء تشغيله.

المس شريط مستوى الصوت الموجود في

الجانب الأيسر من الشاشة، كطريقة بديلة.

استخدم مفاتيح مستوى الصوت على جانب الهاتف.

تعيين صورة كخلفية الشاشة

1 المس الصورة التي ترغب في تعيينها

كخلفية الشاشة لفتحها.

2 المس الشاشة لفتح قائمة الخيارات.

3 المس استخدام كـ

4 تنتقل الشاشة إلى الوضع العمودي.

يمكنك تكبير وتصغير ونقل المقطع

المقتصص لصورة مستخدماً صورة مصغرة

أسفل الشاشة.

تعديل الصور

1 افتح الصورة التي ترغب في تعديلها. والمس رمز الخيارات لتحديد **تعديل**.

2 المس الرمز لتعديل صورتك:

حدد منطقة



أضف رسماً يدوياً إلى صورتك. حدد سماكة الخط من ضمن الخيارات الأربعة واللون الذي تود استخدامه.

إضافة كتابة إلى صورة.



قم بترتيب صورتك بواسطة الطوابيع.



احذف التعديل الذي أضفته إلى الصورة. يمكنك اختيار حجم الممحاة التي تستخدمها.



المس للعودة إلى الاستوديو.



حفظ

حدد لحفظ التغييرات كتحديث الوجود. أو ملف جديد. إذا حددت ملف جديد فأدخل اسم ملف.

تراجع

احذف التعديل الذي أضفته إلى الصورة.

الصورة

المس لفتح المزيد من خيارات التأثير بما فيها الاستدارة.

تصفية

المس لتطبيق خيارات التأثير على صورة.

ضبط

هذا يساعدك على ضبط صورة تم التقاطها باستخدام لون تلقائي. وسطوع تلقائي. إلخ.

إضافة نص إلى صورة

1 في شاشة التعديل. المس .

2 حدد التوقيع النصي أو فقاعة النص.

3 أدخل النص باستخدام لوحة المفاتيح والمس **حفظ**.

الصور و مقاطع الفيديو

- 4 قم بتعيين النص إلى الموقع الذي ترغب فيه على الصورة من خلال تحريكه. عند لمس النص. سيتم تمكين لوحة المفاتيح لإعادة التعديل.

إضافة تأثير إلى صورة

- 1 في شاشة التعديل. المس **تصفية** .
- 2 يمكنك تطبيق أي من الخيارات المختلفة على الصورة.
- 3 للتراجع عن أحد التأثيرات ما عليك إلا لمس **تراجع** .

اقتصاص صورة

- 1 في شاشة التعديل المس **✂** .
- 2 اختر الشكل الذي تريد استخدامه لاقتصاص الصورة.
- 3 قم بسحب الصندوق إلى المنطقة التي تود اقتصاصها.
- 4 حين تصبح راضياً عن التحديد. فالمس **حفظ** .

- إضافة تدرج لون إلى صورة
- 1 في شاشة التعديل. المس **الصورة** .
 - 2 اختر تدرج الألوان.
 - 3 حدد جزءاً من الصورة. يظهر خط مرسوم حول كل شيء موجود في تلك المنطقة يكون من اللون نفسه أو من لون مشابه. مثلاً. شعر شخص ما أو ثيابه.
 - 4 قم بتعديل شدة تدرجات الألوان وذلك بلمس **الشدة** والمس زر '+' أو '-'.
 - 5 المس موافق.
 - 6 سيتم إزالة كل الألوان من الصورة. باستثناء القسم المعلوم لتدرجات الألوان.
 - 7 تحديد **حفظ** لحفظ التغييرات.

مبادلة الألوان في صورة

1 في شاشة التعديل. المس الصورة .

2 اختر مبادلة الألوان.

3 حدد جزءاً من الصورة. يظهر خط مرسوم حول كل شيء موجود في تلك المنطقة يكون من اللون نفسه أو من لون مشابه. مثلاً، شعر شخص ما أو ثيابه.

4 حدد لوناً.

5 اضغط على موافق.

6 يتغير لون جزء من الصورة ثم تحديده لتدرجات الألوان إلى اللون المحدد.

7 تحديد حفظ لحفظ التغييرات.

رسم ضبابي

1 للرسم الضبابي على الصورة. المس الصورة.

2 اختر رسم ضبابي.

3 انسخ عبر الميكروفون لوضع الضباب على الصورة وارسم بإصبعك فوقها.

4 بعد تطبيق الضباب على الصورة. يمكنك تغيير اللون وتكثيف الضباب ومسح العرض.

قطرة مطر

1 لإضافة قطرات مطر إلى الصورة. حدد قائمة الصورة.

2 اختر قطرة مطر.

3 تظهر الفقاعات فوق الصورة.

4 يمكنك تعيين كثافة/مقياس القطرات بضبط شريط قائمة كثافة/مقياس على التوالي.

5 يمكن أيضاً ضبط اتجاه القطرات مع تدوير الهاتف المحمول.

غشاوة الحركة

1 لتطبيق غشاوة الحركة. المس الصورة .

2 حدد غشاوة الحركة.

3 حدد الموقع الذي تريده لدخول غشاوة

الحركة برسم مخطط تفصيلي. المس موافق. ثم تحكم بالاتجاه الذي تريده.

4 يمكن تعيين كثافة الغشاوة باستخدام شريط ضبط الكثافة.

الصور و مقاطع الفيديو

تأثير فني

1 في شاشة التعديل، المس **تصفية**.

2 اختر تأثير فني.

3 حدد التأثير الفني لتتمكن من مشاهدة الرسم.

4 سيتم إنشاء الرسم وحفظه تلقائياً. المس إلغاء للتوقف.

تعديل مقاطع الفيديو

تتوفر ميزات التعديل لكل أنواع الفيديو لـ MPEG4 باستثناء دقة 640x480 (VGA). لا تقم بالتسجيل في هذه التنسيقات إذا كنت تخطط لتعديل الفيديو.

تشذيب طول الفيديو

1 افتح الفيديو الذي تريد تعديله. ثم المس مفتاح الخيار **⏮**.

2 تحديد **تعديل** واختر **اقتطاع / اقتطاع متعدد**.

3 المس **▶** وقم بتعيين نقطتي البدء والإنهاء الجديدتين باستخدام **تشذيب**.

4 المس **معاينة** لكي تؤكد أنك فرح بالقصة الجديدة.

5 المس **حفظ** أو كطريقة بديلة. المس **↩** للعودة إلى المعرض وتجاهل التغييرات.

دمج ملفي فيديو معاً

1 افتح الفيديو الذي تريد تعديله. ثم المس مفتاح الخيار **⏮**.

2 تحديد **تعديل** واختر **دمج الفيديو**.

3 ستفتح حافظة مقاطع الفيديو خاصتي. اختر الفيديو الذي تريد دمجه.


4 المس ودفع الصورة التي تريد نقلها إلى نهاية الفيديو أو بدايته.

5 المس معاينة لاختيار طريقة دمج مقاطع الفيديو معاً.

6 اضغط حفظ ثم نعم لحفظ ملف الفيديو الجديد المدمج. استبدل الملف الموجود أو احفظه كملف جديد.

7 كرر هذه الخطوات لدمج المزيد من ملفات الفيديو.

دمج صورة بفيديو

1 افتح الفيديو الذي تريد تعديله. ثم المس مفتاح الخيار .

2 تحديد **تعديل** واختر دمج صورة.

3 ستمفتح حافظة الصور. اختر الصور التي تريد دمجها بالفيديو والمس تحديد.

4 المس ودفع الصورة التي تريد نقلها إلى نهاية الفيديو أو بدايته.


5 المس معاينة للتحقق من طريقة دمج الصورة والفيديو معاً.

6 اضغط على حفظ ثم اختر استبدال الملف الموجود أو حفظه كملف جديد.

7 كرر هذه الخطوات لدمج المزيد من الصور. إضافة نص إلى الفيديو

1 افتح الفيديو الذي تريد تعديله. ثم المس مفتاح الخيار .

2 تحديد **تعديل** وحدد تراكب النص.

3 المس  وقم بإيقاف التشغيل مؤقتاً لتعيين نقطة البدء لمظهر النص.


4 المس بدء واختر أنماط النص. أدخل النص باستخدام لوحة المفاتيح والمس موافق.

5 المس ناحية الشاشة التي تريد ظهور النص فيها ثم المس موافق.

الصور و مقاطع الفيديو

- 6 المس حفظ. استبدل الملف الموجود أو احفظه كملف جديد.
 - 7 كرر هذه الخطوات لإضافة المزيد من النص.
تراكب صورة
 - 1 افتح الفيديو الذي تريد تعديله. ثم المس مفتاح الخيار .
 - 2 تحديد **تعديل** واختر **تراكب الصورة**.
 - 3 ستفتح حافظة الصور. اختر الصورة التي تريدها أن تراكب الفيديو.
 - 4 المس  وقم بالإيقاف حين تريد ظهور الصورة. ثم حدد اللانشفافية بعد لمس زر بدء.
 - 5 المس موافق واضغط على إنهاء عندما يجب إيقاف تراكب الصورة.
 - 6 المس ناحية الشاشة التي تريد ظهور النص فيها. إذا كانت الصورة كبيرة جداً فقد تراكب الشاشة بأكملها. وليس فقط المنطقة المحددة.
 - 7 المس حفظ. استبدل الملف الموجود أو احفظه كملف جديد.
 - 8 كرر هذه الخطوات لإضافة المزيد من الصور.
- إضافة مسار صوتي إلى الفيديو
 - 1 افتح الفيديو الذي تريد تعديله. ثم المس مفتاح الخيار .
 - 2 تحديد **تعديل** واختر **دبلجة الصوت**.
 - 3 ستفتح حافظة أصواتي. اختر المسار الذي تريد إضافته إلى الفيديو.
 - 4 سيتم مسح المسار الصوتي الأصلي من الفيديو.
 - 5 إذا كان الصوت أقصر من الفيديو فاختر ما إذا كنت ترغب في تشغيله مرة واحدة أو تكراره.
 - 6 استبدل الملف الموجود أو احفظه كملف جديد.

إضافة مؤثرات صوتية حية إلى الفيديو

1 افتح الفيديو الذي تريد تعديله. ثم المس مفتاح الخيار .

2 تحديد **تعديل** واختر مؤثرات صوتية حية.

3 تعيين قيمة الصوت إلى الصوت الأصلي أو الصوت المسجل.

إضافة تأثير التعقيم


1 افتح الفيديو الذي تريد تعديله. ثم المس مفتاح الخيار .


2 تحديد **تعديل** واختر تأثير التعقيم.

3 يظهر الفيديو في البداية بشكل تدريجي ويتلاشى في النهاية.

4 استبدل الملف الأصلي أو احفظه كملف جديد.

الوسائط المتعددة

يمكنك تخزين ملفات الوسائط المتعددة في ذاكرة الهاتف بحيث يتوفر لديك وصول سهل إلى كل الصور، والأصوات، ومقاطع الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. يسمح لك استخدام بطاقة الذاكرة بتحرير مساحة في ذاكرة الهاتف. للوصول إلى قائمة الترفيه، المس  حدد أشياء في علامة التبويب ترفيه، يمكنك فتح قائمة بالحافظات حيث يتم تخزين كل ملفات الوسائط المتعددة الخاصة بك.

تلميح! لحذف أي ملف في الأشياء، المس  ثم حذف.

الصور

تحتوي الصور على قائمة بالصور، بما فيها الصور الافتراضية التي تم تحميلها مسبقاً إلى هاتفك. صوراً قمت أنت بتنزيلها وصوراً تم التقاطها بكاميرا الهاتف.

إرسال صورة

- 1 لإرسال صورة، فقط حدد الصورة التي تريد.
- 2 المس إرسال. اختر بين رسالة، البريد الإلكتروني، بلوتوث أو التحميل على ويب.
- 3 إذا اخترت رسالة أو بريد إلكتروني، فسيتم إرفاق صورتك بالرسالة ويمكنك كتابة الرسالة وإرسالها بشكل عادي. أما إذا اخترت بلوتوث، فسيبحث الهاتف عن جهاز لإرسال الصورة إليه.

استخدام صورة

يمكنك اختيار الصور لاستخدامها كخلفيات للشاشة وكشاشات توقف، أو حتى لتعريف المتصل.

طباعة صورة

- 1 المس الصور.
- 2 حدد صورة والمس .
- 3 المس طباعة عبر بلوتوث.

نقل صورة أو نسخها

يمكن نقل صورة أو نسخها بين ذاكرة الهاتف وبطاقة الذاكرة. قد ترغب في القيام بذلك لمسح المساحة في إحدى الذاكرات، أو لمنع فقدان الصور.

إنشاء عرض شرائح

إذا أردت عرض كل الصور الموجودة على الهاتف، فيمكنك إنشاء عرض شرائح يوفر عليك عملية فتح كل صورة وإغلاقها بشكل فردي.

تحديد المعالم

قم بتشغيل الكاميرا وتمتع بقدرات خدمات هاتفك المستندة إلى الموقع. التقط صوراً حيثما كنت وضع علامات عليها حول الموقع.

إذا قمت بتحميل صور تم وضع علامات عليها إلى مدونة تدعم تحديد المعالم، فيمكنك مشاهدة الصور معروضة على خريطة.

أصوات

تحتوي حافظة أصواتي على الأصوات التي تم تنزيلها. وعلى الأصوات الافتراضية والتسجيلات الصوتية. ومن هنا يمكنك إدارة الأصوات، أو إرسالها أو تعيينها كنغمات رنين.

ملفات الفيديو

تعرض حافظة مقاطع الفيديو خاصتي قائمة بمقاطع الفيديو التي قمت بتنزيلها إلى هاتفك أو بتسجيلها عليه.


ملاحظة: قد لا تعمل بشكل صحيح بعض المحتويات التي تم تنزيلها عبر إنترنت أو ترميزها من قبل مستخدم.

نصيحة! يدعم BL40 تشغيل تنسيقي الفيديو DivX وXvid لضمان توفر محتوى أفضل. يسمح بـ DivX لتشغيل فيديو DivX® بحجم 320x240.

ملاحظة: يمكن شراء كبل إخراج التلفزيون بشكل منفصل.

الوسائط المتعددة

إرسال فيديو كليب

1 حدد فيديو والمس  .


2 المس إرسال واختر من ضمن رسالة بريد إلكتروني وبلوتوث.

3 إذا اخترت رسالة أو بريد إلكتروني، فسيتم إرفاق ملف الفيديو بالرسالة ويمكنك كتابتها وإرسالها بشكل عادي. أما إذا اخترت بلوتوث، فسيبحث الهاتف عن جهاز لإرسال الفيديو إليه.

الألعاب والتطبيقات

يمكنك تنزيل ألعاب وتطبيقات جديدة إلى الهاتف لتسليتك في أوقات الفراغ.

جاري تثبيت لعبة Java وتطبيقها

1 المس  ثم حدد أشياء في علامة التثبيت ترفيه.

2 المس عنصر كل الذاكرة الموجود في قائمة الجانب العلوي.

3 حدد كل الذاكرة أو ذاكرة الهاتف. إذا قمت بإدخال بطاقة ذاكرة جديدة، فالمس قائمة الذاكرة الخارجية.


استخدام قائمة الترفيه

يحتوي الترفيه على ألعاب فلاش محملة مسبقاً تستخدم استشعار الحركة المضمّن.

محتويات الفلاش

تحتوي حافظّة محتويات الفلاش على كل ملفات SWF و SVG التي تم تنزيلها.

عرض ملف SWF/ SVG

1 المس  ثم حدد أشياء في علامة التثبيت ترفيه.

2 المس محتويات الفلاش.

3 حدد الملف الذي تريد عرضه.

مستندات

يمكنك عرض ملفات PowerPoint، Excel، Word، والملفات النصية وملفات pdf في هذه الحافظة.

نقل ملف إلى هاتفك

تُعتبر تقنية بلوتوث الطريقة الأسهل على الأرجح لنقل ملف من الكمبيوتر إلى هاتفك. كما يمكنك استخدام LG PC Suite عبر كبل المزامنة. لنقل الملفات (شأن الموسيقى) باستخدام بلوتوث:

- 1 تأكد من تشغيل بلوتوث على الهاتف والكمبيوتر ومن كونهما متصلين ببعضهما البعض.
- 2 استخدم الكمبيوتر لإرسال الملف عبر بلوتوث.
- 3 عندما يُرسل الملف إليك، اقبله على الهاتف بلمس نعم.
- 4 يجب أن يظهر الملف في حافظة صورك إذا كان ملف صور وحافظة الصوت إذا كان ملف موسيقى.

أخرى

تُستخدم الحافظة أخرى لتخزين ملفات ليست عبارة عن صور، أو ملفات صوت، أو مقاطع فيديو، أو ألعاب أو تطبيقات، وهي تُستخدم بالطريقة نفسها التي يتم بها استخدام حافظة المستندات.

إنشاء فيلم

- 1 المس  ثم حدد صانع الأفلام في علامة التبويب ترفيه.
- 2 المس إدراج لإضافة صورة.
- 3 المس النمط لاختيار نمط فيلم.
- 4 المس الصوت على الشاشة لتغيير الصوت. مثلاً لتسجيل صوت.
- 5 المس زر معاينة لمشاهدة النتائج.
- 6 المس ترتيب التشغيل على الشاشة لتغيير الترتيب.

الوسائط المتعددة


- 7 المس استخدام للاختيار بين الاحتفاظ و MMS.
 - 8 لحفظ الفيلم. المس حفظ الفيلم.
 - الموسيقى
يكون مشغل الموسيقى مضمناً في الهاتف LG BL40 بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك. للوصول إلى مشغل الموسيقى. المس مفتاح القائمة  ثم حدد موسيقى في علامة التبويب ترفيهه.
 - 2 حدد ملف الموسيقى على الجهاز الآخر وحدد إرساله عبر بلوتوث.
 - 3 عندما يرسل الملف إليك. اقبله على الهاتف بلمس نعم.
 - 4 يجب أن يظهر الملف في موسيقى < كل المسارات.
 - تشغيل أغنية
1 المس  ثم حدد موسيقى في علامة التبويب ترفيهه.
 - 2 المس كل المسارات.
 - 3 حدد الأغنية التي تريد تشغيلها والمس .
 - 4 المس  لإيقاف الأغنية مؤقتاً.
 - 5 المس  للتحرك إلى الأغنية التالية. (المس طويل للانتقال إلى تقديم سريع إلى الأمام)
 - 6 المس  للعودة إلى الأغنية السابقة. (المس طويل للانتقال إلى إرجاع)
 - 7 المس  للعودة إلى قائمة موسيقى.
- تلميح!** جهاز BL40 هو أحد الهواتف المحمولة الفريدة التي تطبق Dolby Mobile™ للموسيقى. موفراً بالتالي جودة صوت Dolby Mobile™ إلى الهاتف المحمول.
- نقل الموسيقى إلى الهاتف
يمكن أيضاً استخدام LG PC Suite. الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كبل المزامنة.
 - لنقل الموسيقى باستخدام بلوتوث:
1 تأكد من تشغيل بلوتوث على الجهازين ومن كونهما متصلين ببعضهما.

ملاحظة: يمكن أن تكون حقوق النشر للمفاتيح الموسيقية محمية بموجب المعاهدات الدولية وقوانين حقوق النشر الوطنية. ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. يمنع القانون الوطني في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر. قبل تحميل أو نسخ الملف، يُرجى التحقق من القانون الوطني للبلد المعني والمتعلق باستخدام مثل هذه المواد.

إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك وذلك بإنشاء مجموعة مختارة من الأغاني من حافظة كل المسارات.

لتشغيل قائمة تشغيل، حددها والمس إحدى المسارات التي تحتوي عليها.

ملاحظة: لإضافة قائمة تشغيل ثانية، المس  ثم قائمة تشغيل جديدة.

استخدام الراديو


يكون موالف راديو FM مضمّنًا في الهاتف LG BL40 بحيث يمكنك الاستماع إلى المحطات المفضلة لديك أثناء التنقل.

ملاحظة: ستحتاج إلى إرفاق سماعة الرأس المرفقة مع LG للاستماع إلى الراديو. قم بإدراجها في المقبس المخصص لها.

البحث عن محطات

يمكنك ضبط محطات الراديو في هاتفك وذلك بالبحث عنها إما يدويًا أو تلقائيًا. وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. ويمكنك حفظ ما يصل إلى 48 قناة في هاتفك.

ضبط تلقائي:

1 المس  واختر راديو FM في علامة التبويب ترفيه.

2 المس .


3 المس **تفحص تلقائي**. سيتم تلقائيًا

تخصيص أرقام قناة للمحطات التي يتم العثور عليها في هاتفك.

الوسائط المتعددة

ملاحظة: يمكنك أيضاً ضبط إحدى المحطات يدوياً باستخدام العجلة التي تظهر إلى جانب تردد الراديو.

الاستماع إلى الراديو

1 المس  واختر راديو FM في علامة التبويب ترفيهه.


2 المس رقم قناة المحطة التي تريد الاستماع إليها.


تلميح! لتحسين استقبال الراديو، قم بتمديد سلك سماعة الرأس الذي يعمل كهوائي الراديو.


⚠ تحذير: بهدف ضمان أفضل استقبال ممكن خُتِنَ إلى استخدام سماعة رأس LG المرفقة مع الجهاز.

المنسّق



إضافة حدث إلى التقويم

1 على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر المنسّق في علامة التبويب أدوات مساعدة.

2 حدد التاريخ الذي تريد إضافة حدث إليه.
3 المس  ثم جدول جديد.


تلميح! يمكنك إدخال العطلات في التقويم. المس كل يوم من أيام العطل على حدة. ثم المس  وحدد تعيين أيام العطل. توضع علامة باللون الأحمر فوق كل يوم.

تغيير عرض التقويم الافتراضي

1 على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر المنسّق في علامة التبويب أدوات مساعدة. تحدد اعدادات في .

2 المس عرض افتراضي واختر شهر، أسبوع، جدول زمني، قائمة أو كل المهام.

استخدام الباحث عن التاريخ

1 على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر المنسّق في علامة التبويب أدوات مساعدة.


2 حدد الباحث عن التاريخ من قائمة الخيارات.

3 في التبويب من قم بتعيين التاريخ المطلوب.

4 في علامة التبويب بعد، قم بتعيين عدد الأيام.

5 يظهر التاريخ الهدف أدناه.

ضبط المنبه

1 على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر المنبهات في علامة التبويب أدوات مساعدة.

2 إذا أردت إضافة منبه جديد، فالمس منبه جديد، إذا أردت تعيين المنبه للرنين مجدداً بعد ساعة، فالمس منبه سريع.

تلميح! المس رمز التشغيل أو قم بتعيين


لتنشغيل المنبه. 

المنسق

مسجل الصوت

استخدم مسجل الصوت لتسجيل مذكرات صوتية أو ملفات صوت أخرى.

تسجيل ملف صوتي أو صوت

1 على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر مسجل الصوت في علامة التبويب أدوات مساعدة.

2 المس  لتبدأ التسجيل.

3 المس  لإنهاء التسجيل.

4 إذا قمت بلمس  جديد، فستتم إعادة تشغيل التسجيل الصوتي بعد حفظ التسجيل الصوتي السابق.

إرسال التسجيل الصوتي

1 عندما تنتهي من التسجيل، المس إرسال.

2 اختر من ضمن رسالة، أو بريد إلكتروني

أو بلوتوث. إذا اخترت رسالة أو بريد

إلكتروني، فسيتم إرفاق المسار المسجل

مع الرسالة وإرساله كـ MMS. إذا اخترت

بلوتوث، فسيبحث الهاتف عن جهاز لإرسال

التسجيل الصوتي إليه.

استخدام مرسل FM لتشغيل

الموسيقى

يتيح لك BL40 بفضل مرسل FM المضمّن

الاستماع إلى الموسيقى عبر أي موالف FM

ضمن نطاق الهاتف. مثلاً في المنزل أو في

السيارة.

1 المس  ثم أدوات واختر مرسل FM في

علامة التبويب أدوات مساعدة.

2 حدد ترددًا ترغب في إرسال إشارة FM إليه.

ثم المس إرسال.

3 ثم قم بتعيين الموالف إلى التردد ذاته.

ملاحظة: يبلغ الحد الأقصى لمسافة تشغيل مرسل FM 2 متر (6.5 قدم).

قد تتعرض عملية الإرسال لتشويش بسبب إعاقات، مثل الجدران، أو أجهزة إلكترونية أخرى، أو محطات راديو عامة.

لتجنب أي تشويش، ابحث دائماً عن تردد FM مجاني على المستلم قبل استخدام مرسل FM.


لا يمكن استخدام مرسل FM ورايو FM في الجهاز في الوقت نفسه.

ويب

المتصفح


المتصفح يصلك بعالم سريع وكامل من الألعاب والموسيقى والأخبار والرياضة والترفيه وغيرها. مباشرةً من هاتفك المحمول. حيثما كنت ومهما كنت تفعل.

إضافة إشارات مرجعية والوصول إليها لكي تتمكن من الوصول إلى مواقعك المفضلة على ويب بشكل سريع وسهل. يمكنك إضافة إشارات مرجعية وحفظ صفحات ويب.

1 على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر **المتصفح** في علامة التبويب أدوات مساعدة.

2 حدد إشارات مرجعية. تظهر قائمة بالإشارات المرجعية على الشاشة.

3 لإضافة إشارة مرجعية جديدة. المس إشارة مرجعية جديدة. أدخل اسماً للإشارة المرجعية يتبعه URL.

4 المس  تظهر إشارتك المرجعية الآن في قائمة الإشارات المرجعية.

استخدام قارئ RSS

إنّ RSS (Really Simple Syndication) عبارة عن تنسيقات موجز ويب يتم استخدامها لنشر المحتوى الذي يتكرر تحديثه. شأن إدخال المدونات. أو عناوين الأخبار أو البث الصوتي على ويب. ويحتوي مستند RSS. والذي يسمى تغذية. أو تغذية ويب. أو قناة. على ملخص محتوى من موقع ويب مرتبط أو على النص الكامل. وبفضل تغذية RSS سيتمكن الأشخاص من الاحتفاظ بمواقعهم المفضلة على ويب بطريقة مؤتمتة تعتبر أسهل من التدقيق في تلك المواقع يدوياً.

وباستطاعة المستخدم الاشتراك في موجز عبر إدخال ارتباط الموجز في القارئ أو عبر النقر فوق رمز RSS في متصفح يبدأ عملية الاشتراك. ويتحقق القارئ من موجزات ويب التي اشترك فيها المستخدم بشكل دوري بحثاً عن محتوى جديد. ويقوم بتنزيل أي تحديثات يعثر عليها.

استخدام الهاتف كمودم

بإمكان وظيفة الهاتف BL40 أن تكون مضاعفةً إذ باستطاعته أن يعمل كمودم للكمبيوتر. ما يوفر لك الوصول إلى البريد الإلكتروني وإنترنت حتى عندما لا يكون باستطاعتك الاتصال باستخدام الأسلاك. يمكنك القيام بذلك مستخدماً كبل USB أو بلوتوث.

استخدام كبل USB:

- 1 تأكد من تثبيت LG PC Suite على الكمبيوتر.
- 2 قم بتوصيل الجهاز BL40 والكمبيوتر باستخدام كبل USB وابدأ بتشغيل البرنامج LG PC Suite.
- 3 انقر فوق اتصال على الكمبيوتر. ثم انقر فوق اعدادات وحدد مودم.
- 4 اختر مودم USB لمحمول LG وحدد موافق. يظهر الآن على الشاشة.
- 5 انقر فوق اتصال فيتصل الكمبيوتر من خلال BL40.

استخدام بلوتوث:

- 1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً بالنسبة إلى الكمبيوتر والهاتف BL40.
- 2 قم بإقران الكمبيوتر والهاتف BL40 بحيث يكون رمز المرور مطلوباً للاتصال.
- 3 استخدم معالج الاتصال على LG PC Suite لإنشاء اتصال بلوتوث نشط.
- 4 انقر فوق اتصال على الكمبيوتر. ثم انقر فوق ضبط.
- 5 انقر فوق مودم.
- 6 اختر مودم قياسي على ارتباط بلوتوث وانقر فوق موافق. يظهر الآن على الشاشة.
- 7 انقر فوق اتصال فيتصل الكمبيوتر من خلال BL40.

ويب

YouTube: يمكنك مشاهدة أفلام فيديو

على YouTube Mobile من جهازك المحمول. قد ترغب بالاتصال بشركة الهاتف المحمول للحصول على مزيد من المعلومات حول توفر البيانات المتدفقة على جهازك المحمول.

كاتب المدونة: يمكنك إدارة حسابك ومشاركة المدونة. يمكنك تحميل صورة أو فيديو.

الوصول إلى خدمة **Google**

يمكنك بدء تشغيل خدمات Google في هذا التطبيق. المس **Google** في علامة التبويب أدوات مساعدة.

الخرائط: يمكنك الوصول إلى الخرائط من أجهزتك المحمولة.

بحث: تسمح لك خدمة Google Mobile Web Search بالبحث عن مواقع ويب المصممة خصيصاً للهواتف والأجهزة المحمولة.

Mail: يُعدّ Gmail لتطبيقات الهواتف

المحمولة من تطبيقات Java القابلة للتنزيل. ويوفر للأجهزة المحمولة المعتمدة أفضل تجربة ممكنة في استخدام Gmail. لتنزيله. قم بزيارة <http://gmail.com/app> من متصفح هاتفك المحمول.

PC Suite

يمكنك مزامنة الكمبيوتر مع الهاتف. هذا الأمر يضمن تطابق التفاصيل والتواريخ المهمة. ويستخدم كنسخ احتياطي للألمنيان.

تلميح! ستحتاج إلى تثبيت التطبيق PC Suite المتوفر على القرص المضغوط أو الذي يمكن تنزيله من الموقع <http://www.update.lgmobile.com> (في www.lgmobile.com المنتجات < الدليل والبرنامج > انتقل إلى قسم تنزيل الدليل والبرنامج)

تنبيه! في حال عدم ظهور رسالة دليل التثبيت على جهاز الكمبيوتر. يرجى التحقق من ضبط القرص المضغوط على Windows.

- 5 قم بإدراج القرص المضغوط المرفق مع الهاتف أو انقر فوق زر التنزيل لتنزيل برنامج LG PC Suite مباشرة من إنترنت.
- 6 انقر فوق مثبت LG PC Suite الذي يظهر على الشاشة.

توصيل الهاتف والكمبيوتر

- 1 حدد وضع PC Suite في قائمة التوصيل ثم قم بتوصيل كبل USB بهاتفك والكمبيوتر.
- 2 سيتم تنشيط برنامج LG PC Suite تلقائياً على جهاز الكمبيوتر.
- 3 أصبح الآن هاتفك والكمبيوتر متصلين ببعضهما.

تثبيت برنامج LG PC Suite على الكمبيوتر

- 1 على الشاشة الرئيسية. المس  ثم انقر فوق التوصيل.
- 2 حدد اتصال USB وانقر فوق PC Suite.
- 3 قم بتوصيل الهاتف بالكمبيوتر مستخدماً كبل USB ثم انتظر قليلاً.
- 4 ستعرض رسالة دليل التثبيت على شاشة الكمبيوتر.

PC Suite

تلميح! يساعدك عرض محتويات الهاتف على الكمبيوتر على إدارة الملفات التي لم تعد بحاجة إليها.

مزامنة جهات الاتصال

- 1 توصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز جهات الاتصال.
- 3 انقر فوق زر مزامنة جهات الاتصال فيقوم الكمبيوتر الآن باسترداد وعرض كل جهات الاتصال المحفوظة في الهاتف.
- 4 انقر فوق القائمة وحدد تصدير. يمكنك الآن تحديد الموقع حيث تريد حفظ جهات الاتصال.

مزامنة الرسائل

- 1 توصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الرسائل.
- 3 تظهر كل رسائل الهاتف في الحافظات على الشاشة.
- 4 استخدم شريط الأدوات في أعلى الشاشة لتعديل الرسائل وإعادة ترتيبها.

إجراء نسخ احتياطي لمعلومات الهاتف واستعادتها

- 1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.
- 2 انقر فوق الرمز نسخ احتياطي وحدد نسخ احتياطي أو استعادة.
- 3 اختر النسخ الاحتياطي لـ بيانات جهات الاتصال و/أو بيانات دليل الهاتف/الجدول/ المهمة/المذكرة. حدد الموقع الذي تريد إجراء نسخ احتياطي للمعلومات فيه. أو استعادة المعلومات منه. انقر فوق موافق.
- 4 سيتم إجراء نسخ احتياطي للمعلومات. عرض ملفات الهاتف على الكمبيوتر
- 1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.
- 2 انقر فوق رمز إدارة الصور. ملفات الفيديو أو موسيقى.
- 3 تظهر على الشاشة في حافظة هاتف LG كل الصور وملفات الصوت. والفيديو التي حفظتها في الهاتف.

نقل الموسيقى باستخدام Windows Media Player

- 1 في الشاشة الرئيسية حدد . ثم قم بالتمرير عبر التوصليل في علامة التبويب الإعدادات.
- 2 حدد وضع اتصال USB واختر تزامن الموسيقى.
- 3 قم بتوصيل الهاتف بالكمبيوتر مستخدماً كبل USB متوافق.
- 4 عندما تحاول توصيل الهاتف بالكمبيوتر، سيقراً الهاتف: "تزامن الموسيقى" يتبعه تم التوصليل.
- 5 سيطالبك الكمبيوتر ببدء تشغيل برنامج إدارة الموسيقى المفضل لديك.
- 6 حدد Window Media Player.
- 7 انتقل إلى علامة التبويب تزامن. ثم قم بسحب وإفلات الموسيقى التي ترغب في إرسالها إلى الهاتف إلى لوحة الرسم مزانة القائمة.
- 8 انقر فوق زر بدء التزامن. سيؤدي ذلك إلى بدء عملية النقل.

تزامن الموسيقى

تتيح لك هذه القائمة إضافة الموسيقى إلى الهاتف BL40. قبل أن تبدأ بنقل الموسيقى من الكمبيوتر إلى الهاتف، تأكد من توفر الإعداد التالي والملحق:

- Microsoft Windows XP أو Vista
- Windows Media Player 10 أو إصدار لاحق
- كبل بيانات USB
- بطاقة microSD (إذا رغبت في استخدام الذاكرة الخارجية كجهاز تخزين للموسيقى).

⚠ تحذير

لا تقم بقطع اتصال الهاتف أثناء عملية النقل.

PC Suite

عندما تنتهي العملية يظهر إطار منبثق لإعلامك باكتمال عملية التحويل.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Pat. 7,295,673



لا تقم بقطع اتصال الهاتف أثناء عملية النقل.

DivX Converter

قم بتنصيب DivX converter الذي يتم تزويده به على القرص المضغوط نفسه حيث برنامج PC Suite. سيقوم DivX بتحويل ملفات الوسائط الموجودة على جهاز الكمبيوتر إلى تنسيق يسمح لك بتحميلها وعرضها على هاتفك.

عند التثبيت. حدد DivX من Program Files على الكمبيوتر. ثم DivX converter Converter. يتبعه

استخدم الأسهم في التطبيق لتغيير تنسيق التحويل إلى Mobile. إذا نقرت فوق خانة التطبيق بزر الماوس الأيمن وحددت تفضيلات. فيمكنك تغيير الموقع الذي تم حفظ الملفات المحولة فيه.

قم بسحب الملفات وإفلاتها في التطبيق لإجراء تحليل أولي. ثم حدد تحويل كي تبدأ العملية.

68 BL40 LG | دليل المستخدم


الاعدادات

تخصيص الأوضاع

يمكنك أن تقوم بسرعة بتغيير نمطك على الشاشة الرئيسية. ما عليك سوى لمس رمز ملخص الحالة في الأعلى ولمس علامة التبويب النمط.

تغيير اعدادات الهاتف

استمتع بحرية تكيف هاتف BL40 وفق تفضيلاتك الخاصة.

1 على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر اعدادات الهاتف في علامة التبويب الاعدادات.

2 حدد قائمة من الخيارات أدناه:

التاريخ والوقت

توفير الطاقة


اللغات

الفصل الذاتي - إفعال لوحة المفاتيح تلقائياً في الشاشة الرئيسية.


الحماية - اضبط اعدادات الحماية. وهذا يشمل رموز PIN وقفل الهاتف. (ثم تعيين رمز الحماية الافتراضي إلى "0000")
معلومات الذاكرة.

إعادة تعيين الاعدادات - يسمح هذا الخيار باستعادة كل الاعدادات إلى الافتراضية.
المعلومات - استعرض معلومات BL40 الفنية.

تغيير اعدادات اللمس

على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر اعدادات اللمس في علامة التبويب الاعدادات.

تغيير اعدادات التوصيل

لتغيير هذه الاعدادات. استخدم هذه القائمة:
على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر التوصيل في علامة التبويب الاعدادات.

تحديد الشبكة - يتصل الهاتف BL40 تلقائياً بالشبكة المفضلة.

نمط إنترنت - قم بتعيين الأوضاع للاتصال بإنترنت.

نقاط وصول - قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً. يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

الاعدادات

GPS

- تستخدم تقنية GPS معلومات من أقمار اصطناعية في مدار الأرض للبحث عن مواقع.
- يقدّر جهاز الاستقبال المسافة إلى أقمار GPS الاصطناعية بالاستناد إلى الوقت الذي يحتاجه الإشارات لتصل إليها. ثم يستخدم هذه المعلومات لتحديد موقعه.
- قد يتطلب الأمر من بضع ثوانٍ إلى عدة دقائق.
- يتم استخدام GPS المدعم الموجود على هذا الهاتف المحمول (A-GPS) لاسترداد بيانات المساعدة للكشف عن المواقع عبر اتصال حزم بيانات مع الشبكات الموجودة على الأرض.
- يتم استرداد بيانات المساعدة من خادم الخدمة فقط حين يقدم موفر الشبكة ذلك وعند الحاجة.

مزامنة البيانات - يمكن إجراء نسخ احتياطي لجهاز الاتصال أو استعادتها على الكمبيوتر عبر خدمة المزامنة.

DLNA - يمكنك مشاركة المحتويات في الهاتف عبر الشبكة المحلية. يمكن الوصول إلى قائمة الأشياء - موسيقى، ملف فيديو، صورة والذاكرة الخارجية أيضاً.


قم بالتشغيل لبدء عمل الشبكة المحلية وقم بتأكيد اسم الهاتف والتحقق من العناصر التي تريد مشاركتها.

يمكن أن يعتمد الملفات التالية، موسيقى: mp3، فيديو: AAC/ MP4/ H.264(AVC)، صورة: jpeg.

إذا قمت بتشغيل وظيفة الشبكة المحلية وكان Wi-Fi متوقفاً عن التشغيل، فسيتم التوصل تلقائياً بعد أن يتم تشغيل Wi-Fi.

نوع GPS - اختر إما GPS مدعم أو مستقل.

ملاحظة: لدى خدمة GPS خطأ في التسامح ويتعذر عليه العمل في المباني أو تحت الأرض.

استخدام وضع الرحلات الجوية
قم بتشغيل وضع الرحلات الجوية بتحديد 
ثم الاعدادات > الأوضاع وحدد وضع الرحلات
الجوية.

يمنعك وضع الرحلات الجوية من إجراء
مكالمات، أو الاتصال بالإنترنت. أو إرسال رسائل أو
استخدام بلوتوث.

إرسال الملفات واستلامها باستخدام
بلوتوث

يعتبر بلوتوث طريقة جيدة لإرسال الملفات
وتلقيها إذ لا حاجة إلى أسلاك ويكون الاتصال
سريعاً وسهلاً. كما يمكنك الاتصال بسماعات
رأس بلوتوث لإجراء مكالمات وتلقيها.

لإرسال ملف:

1 افتح الملف الذي تريد إرساله، وهو عادةً
عبارة عن صورة، أو فيديو أو ملف موسيقي.

2 المس  واختر إرسال.
حدد بلوتوث.

اتصال USB - قم بمزامنة هاتف BL40
باستخدام البرنامج LG PC Suite لنسخ
الملفات من الهاتف.

إخراج التلفزيون - اختر PAL أو NTSC
لتوصيل BL40 بالتلفزيون.

تسجيل DivX VOD - تستخدم هذه
القائمة لإنشاء رمز تسجيل DivX VOD.
يرجى زيارة <http://vod.divx.com>

للتسجيل والحصول على الدعم التقني.
اتصال بيانات الرزمة - قم بتعيين اتصال
بيانات الحزمة.

اعدادات المتصفح - قم بتعيين القيم ذات
صلة بالمتصفح.

اعدادات التشغيل - لقد قام مشغل الشبكة
بحفظ هذه المعلومات مسبقاً. يمكنك
تعديلها إذا أردت إضافة تغييرات.

اعدادات Java - يسمح لك هذا الخيار بتعيين
الأوضاع للاتصالات التي تتم عبر برامج Java.
كما يسمح أيضاً بعرض الشهادات.

الاعدادات

3 إذا قمت مسبقاً بإقران جهاز بلوتوث، فلن يقوم BL40 بالبحث تلقائياً عن أجهزة بلوتوث أخرى. وإلا، فسيبحث الهاتف BL40 تلقائياً عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.

4 اختر الجهاز الذي تريد إرسال الملف إليه والمس تحديد.

5 سيتم إرسال ملفك.

نلميح! تحقق من شريط التقدم لتتأكد من إرسال الملف.


لاستلام ملف:

1 لاستلام ملفات، يجب أن يكون بلوتوث قيد التشغيل. راجع تغيير اعدادات الـ بلوتوث أدناه للحصول على مزيد من المعلومات.

2 تظهر رسالة تطالبك بقبول الملف من المرسل. المس نعم لاستلام الملف.

3 ستشاهد الموقع الذي تم حفظ الملف فيه ويمكنك أن تختار عرض الملف أو استخدامه كخلفية (ملف صورة فقط). يتم عادةً حفظ الملفات في الحافظة المناسبة في ملفات.

تغيير اعدادات بلوتوث

1 على الشاشة الرئيسية حدد  ثم قم بالتمرير عبر بلوتوث في علامة التبويب الاعدادات.

2 المس .

إحداث تغييرات في:

معلومات جهازي - أدخل اسماً للهاتف BL40.

إمكانية رؤية جهازي - اختر أن يكون الجهاز مرئياً. أو مخفياً أو مرئياً لدقيقة واحدة.

تشغيل وضع USIM عن بعد - تنشيط وضع USIM عن بعد.

الخدمات المعتمدة - اختر الطريقة التي تريدها لاستخدام بلوتوث مع مختلف الخدمات.

حذف - اختر لحذف قوائم الجهاز المقترن.

حذف الكل - اختر لحذف كل قوائم الجهاز المقترن.

الاقتران بجهاز بلوتوث آخر

عند إجراء اقتران لهاتف BL40 بجهاز آخر، يمكنك إعداد اتصال محمي برمز مرور. وهذا يؤدي إلى جعل عملية الاقتران أكثر أمان.

1 تأكد من كون بلوتوث قيد التشغيل.
يمكنك تغيير إمكانية الرؤية في قائمة إعدادات.

2 المس جهاز جديد للبحث.

3 سيقوم الهاتف BL40 بالبحث عن أجهزة بلوتوث. عند اكتمال عملية البحث يظهر رمز تحديث على الشاشة.

4 اختر الجهاز الذي تريد إقرانه وأدخل رمز المرور. ثم المس موافق.

5 يتصل هاتفك حينئذٍ بالجهاز الآخر. حيث عليك إدخال رمز المرور نفسه.

6 لقد أصبح اتصال بلوتوث المحمي برمز مرور آمنًا الآن.

استخدام سماعة رأس بلوتوث

1 تأكد من كون بلوتوث قيد التشغيل.

2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.

Wi-Fi

يتيح لك مدير التشغيل اللاسلكي إدارة اتصالات إنترنت عبر Wi-Fi (شبكة LAN اللاسلكية) على جهازك. يتيح للهاتف الاتصال بالشبكات اللاسلكية المحلية، أو الوصول إلى إنترنت لاسلكياً. Wi-Fi أسرع وذات نطاق أوسع من تقنية بلوتوث اللاسلكية. وبالتالي يمكن استخدامه لإرسال رسائل بريد إلكتروني سريعاً ولاستعراض إنترنت.

ملاحظة: WPA2، WEP، تشفير WPA-PSK/2، وليس EAP، تشفير WPS. إذا قام موفر خدمة Wi-Fi أو مسؤول الشبكة بتعيين التشفير لحماية الشبكة، فعليك ملء المفتاح في الإطار المنبثق. إذا لم يتم تعيين التشفير، فلن يظهر الإطار المنبثق هذا. يمكنك الحصول على المفتاح من موفر خدمة Wi-Fi لديك أو من مسؤول الشبكة.

تحديث برنامج الهاتف

تحديث برنامج الهاتف المحمول LG من إنترنت

للحصول على مزيد من المعلومات حول استخدام هذه الوظيفة، يرجى زيارة موقع ويب LG

المسار: <http://www.lgmobile.com>
- select country – Products menu
- Manual & software menu

تسمح لك هذه الميزة بتحديث أحدث إصدار لبرامج الهاتف الثابتة بسهولة من إنترنت من دون الحاجة إلى زيارة مركز الخدمة. بما أن تحديث برنامج الهاتف المحمول الثابت يتطلب انتباه المستخدم الكامل لمدة عملية التحديث، يرجى التحقق من كل التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. تجدر الملاحظة إلى أن إزالة كبل بيانات USB أو البطارية أثناء الترقية قد يتسبب بالحاق ضرر بالغ بهاتفك المحمول.

الملحقات

تتوفر مجموعة متنوعة من الملحقات التي تناسب هاتفك المحمول. ويمكن بيعها بشكل منفصل. يمكنك تحديد هذه العناصر الاختيارية طبقاً لمتطلبات اتصالاتك الشخصية. استشر البائع المحلي للتحقق من إمكانية التوفر. (إن العناصر المدرجة أدناه مضمنة في العلبة)



كبل البيانات
والقرص المضغوط
لتوصيل ومزامنة الهاتف
BL40 والكمبيوتر. يحتوي
القرص المضغوط أيضاً على
دليل المستخدم هذا ضمن
تنسيق إلكتروني.



الشاحن



البطارية



سماعة رأس
استيريو



دليل المستخدم

ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة إلى أخرى.

بيانات تقنية

عام

اسم المنتج: BL40

النظام: GSM/ W-CDMA

درجات الحرارة المحيطة

الحد الأقصى: +55 درجة مئوية (تفريغ).

+45 درجة مئوية (شحن)



الدنيا: -10° درجة مئوية

تسجيل DivX VOD

إنشاء رمز تسجيل DivX VOD.

قم بزيارة </http://vod.divx.com>

للتسجيل وللحصول على الدعم الفني.

Declaration of Conformity 	
Supplier Details	
Name LG Electronics Inc	
Address LG Electronics Inc, LG Twin Towers 20, Yeuksido-dong, Yeongdeunggo-gu, Seoul, Korea 150-721	
Product Details	
Product Name GSM/ W-CDMA Terminal Equipment	
Model Name BL40	
Trade Name LG	
Applicable Standards Details	
RATTE Directive 1999/5/EC EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-10 V1.3.1 EN 301 489-17 V1.2.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1 EN 301 511 V9.3.2 EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1 EN 300 338 V1.7.1, EN 301 332-2 V1.3.1 EN 30360 2001/EN62209-1:2006 EN 60950-1:2005	
Supplementary Information	
The conformity to above standards is verified by the following Notified Body(BABT) BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom Notified Body Identification Number : 0188	
Declaration	
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name Seung Hyeon, J / Director Issued Date 21 Jul 2009
European Standard Center LG Electronics Logistics and Services B.V. Valuwezoom 15, 1527 AE Almere, The Netherlands Tel. +31 - 36-547 - 8945 Fax +31 - 36 - 547 - 8794 e-mail : jacob @ lge.com	 Signature of representative

استكشاف الأخطاء وإصلاحها

يسرد هذا الفصل بعض المشاكل التي قد تصادفها أثناء استخدام الهاتف. بعض المشاكل تتطلب منك الاتصال بموفر الخدمة. ولكن معظمها يكون سهلاً ويمكنك تصحيحه بنفسك.

الرسالة	الأسباب المحتملة	الحلول المحتملة
خطأ USIM	لا يوجد بطاقة USIM في الهاتف أو ربما قمت بإدراجها بشكل غير صحيح.	تأكد من إدراج بطاقة USIM بطريقة صحيحة.
لا يوجد اتصال بالشبكة	الإشارة ضعيفة خارج شبكة GSM	توجه نحو نافذة أو نحو مكان مفتوح. تحقق من خريطة تغطية مشغل الشبكة.
الرموز غير متطابقة	لتغيير رمز حماية. عليك تأكيد الرمز الجديد بإدخاله مرة أخرى. إن الرمزين الذين أدخلتهما لا يتطابقان.	اتصل بمركز الخدمة.
يتعذر ضبط الوظيفة	غير معتمد من قبل موفر الخدمة. أو التسجيل مطلوب.	اتصل بموفر الخدمة.
المكالمات غير متوفرة	خطأ في الطلب تم إدراج بطاقة USIM جديدة تم بلوغ الحد الخاص برسوم المكالمات	شبكة جديدة غير مصرّح لها. تحقق من القيود الجديدة. اتصل بموفر الخدمة أو أعد تعيين الحد بواسطة PIN 2.

استكشاف الأخطاء وإصلاحها

الرسالة	الأسباب المحتملة	الحلول المحتملة
يتعذر تشغيل الهاتف	لم يتم الضغط على مفتاح التشغيل/إيقاف التشغيل لفترة كافية	اضغط مفتاح التشغيل/إيقاف التشغيل لثانيتين على الأقل.
	البطارية فارغة	اترك الشاحن متصلاً لفترة أطول.
خطأ في الشحن	ملاصقات البطارية متسخة	قم بتنظيف ملاصقات البطارية.
	البطارية فارغة بالكامل	اشحن البطارية.
خطأ في الشحن	درجة الحرارة خارج النطاق	تأكد من أن درجة الحرارة المحيطة جيدة. وانتظر قليلاً. ثم حاول الشحن مرة أخرى.
	مشكلة في الاتصال	تحقق من وحدة التزويد بالطاقة والاتصال بالهاتف. تحقق من ملاصقات البطارية. وقم بتنظيفها إذا اقتضى الأمر.
الرقم غير مسموح به	لا جهد رئيسي	قم بالتوصيل بمقبس آخر أو تحقق من الجهد.
	الشاحن به خلل	إذا لم يسخن الشاحن. فقم باستبداله.
الرقم غير مسموح به	الشاحن غير مناسب	استخدم ملحقات LG الأصلية فقط.
	خلل في البطارية	استبدل البطارية.
الرقم غير مسموح به	وظيفة رقم الاتصال المحدد قيد التشغيل.	تحقق من الإعدادات.

Congratulations on your purchase of the advanced and compact BL40 phone by LG, designed to operate with the latest digital mobile communication technology.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



BL40 User Guide

Contents

Guidelines for safe and efficient use	3	Multimedia	52
Getting to know your phone	10	Utilities	59
Open view	11	The web	62
Installing the USIM and battery	12	PC Suite	65
Memory card	13	Settings	69
Your home screen	15	Wi-Fi	75
Calls	19	Phone Software update	75
Contacts	22	Accessories	76
Messaging	24	Technical data	77
Camera	32	Trouble shooting	78
Video camera	40		
Your photos and videos	44		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model BL40 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.757 W/kg (10g) and when worn on the body is 0.842 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments; it may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronic and medical devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient use

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or

attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service centre.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

Guidelines for safe and efficient use

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

Handsfree or Stereo earphone connector

Power key (Lock/ Unlock key)


Turns the phone on/off.

Earpiece

Inner camera

Proximity Sensor (Refer to page 15 for notice.)

⚠ WARNING: Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the proximity sensor with a protective film or cover. It can cause the sensor to malfunction.

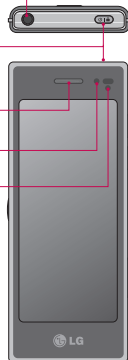

Charger, Data cable (USB cable)

TIP: Before connecting the USB cable, wait until the phone has powered up and has registered on the network.

Music key



Volume keys

- **When the screen is idle:** Key tone or ring tone volume, Press long the down key to Silent on/off.
- **During a call:** earpiece volume.
- **When playing a track:** controls the volume continuously.



Camera key

- Go to camera menu directly by pressing and holding the key.

Open view

Charging your phone


Open the cover of the charger connector on the side of your BL40. Insert the charger and plug it into a mains electricity socket. Your BL40 must be charged until the "Battery full" message appears on the screen.

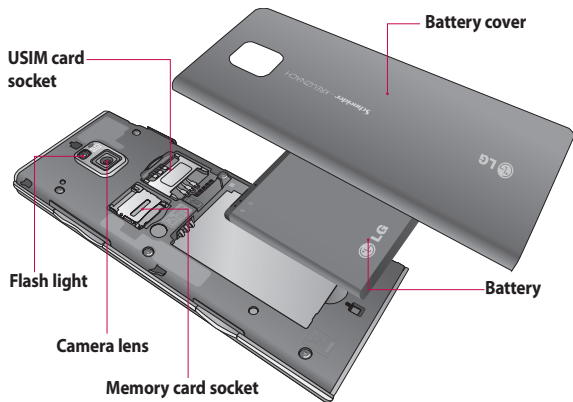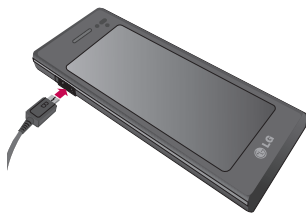

Installing the USIM and battery

1 Remove the battery cover and the battery


Slide down the battery cover and pull out the battery.

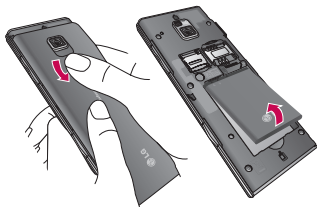

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.


2 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure the gold contact area on the card is facing downwards. To remove the USIM card, gently pull it outwards.

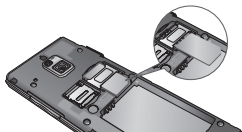

3 Install the battery

Insert the top of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.

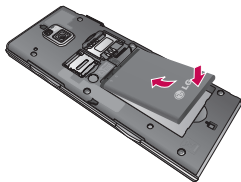


Memory card


Installing a memory card

You can expand the available memory space on your phone by using a memory card (microSD). The BL40 will support up to an 32GB memory card.




NOTE: A memory card is an optional accessory.

Slide the memory card into the slot at the top, until it clicks into place. Make sure the gold contact area is facing downwards.

 **WARNING:** Slide the memory card into the slot, otherwise the card may be damaged.

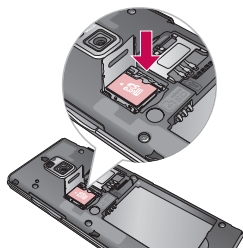

The slot has to be opened by pulling the metal cover upwards.

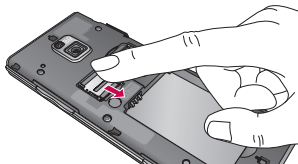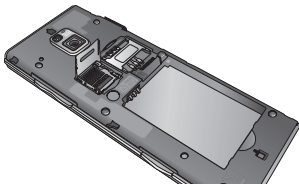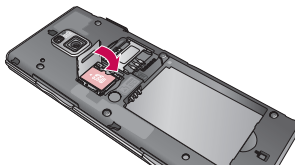


Memory card

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.


NOTE: All files will be deleted when formatting.

- 1 From the home screen select  and select **Phone settings** from the Settings tab.
- 2 Scroll and touch **Memory info** then scroll and touch **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one has been set. The card will then be formatted and ready to use.

NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

Transferring your contacts

To transfer your contacts from your USIM to your phone:

- 1 From the Communications tab, scroll through Contacts and choose  then **Change location**.
- 2 Touch **Copy to Handset**.
- 3 Choose **Select all** or select names one by one and touch **Copy to Handset**.

Your home screen

Touch screen tips

The home screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.

- Do not press too hard; the touchscreen is sensitive enough to pick up on a light touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- When the screen light is off, press the power key to return to the home screen.
- Whenever your BL40 is not in use, it will return to the lock screen.


Proximity sensor

When receiving and making calls, this sensor automatically turns the backlighting off and locks the touch keypad by sensing objects when the phone is near the ear.

This makes the battery life last longer and prevents the touch keypad from malfunctioning through automatic key locking during calls.

Users, therefore, do not have the inconvenience of unlocking the phone when searching the phonebook during calls.

Customising the home screen

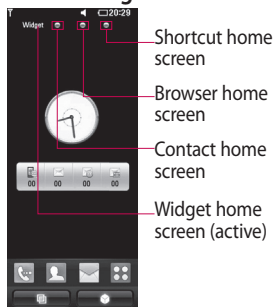

- **Get in touch with your BL40 -**
The User Interface is based on four types of Homescreens. To swap

Your home screen

between the home screens just wipe quickly over the display from left to right or from right to left.

- **Home screen customisation** - For each type of home screen you are able to add and remove objects by pressing & holding your finger on the screen, or if already added touching and holding one of the objects.

Touch screen

The controls on the BL40 touch screen change dynamically, depending on the task you are carrying out.


Scrolling

Drag from side to side to scroll. On some screens, such as web pages, you can also scroll up or down.

Zooming In or Out

When viewing photos, web pages, emails, or maps, you can zoom in and out. Pinch your fingers together or slide them apart.

Using the Multi-tasking function

Touch the multitasking key  to open the **Multitasking** menu. From here you can view some applications that are running and access them with one touch.

Lock screen gesture

















Lock screen gesture - set a gesture to the 9 extended shortcut applications.


















Gesture in Lock screen allows users to unlock the phone and execute the applications directly as they draw a gesture on the screen.

To set up this feature,



















- 1 Select Menu - Screen settings
- Lock screen gesture
- 2 Drag & drop the preferred gesture from the bottom of the screen to the applications you want to assign them to.






Viewing the status bar

Icon	Description
	No Service
	2G
	3G
	EDGE
	HSDPA
	Wi-fi is on
	Bluetooth Message
	Bluetooth Mono hands free headset
	Connect Bluetooth Mono + Stereo
	Bluetooth Stereo headset
	Bluetooth Mono headset
	Bluetooth on
	Printer by Bluetooth
	Bluetooth Transfer
	Bluetooth Visibility
	Bluetooth Music

Icon	Description
	Downloading
	Downloading complete.
	Downloading cancelled.
	In-call option
	Internet
	Searching
	Call divert
	Call reject
	Security
	Headset
	HomeZone
	Roaming
	Alarm
	Schedule (Calendar)
	Multi-tasking
	Music paused
	Music playing

Your home screen


Icon	Description
	FM radio playing
	FM broadcasting
	Email sending
	Email receiving
	MMS sending has failed
	MMS transmit
	MMS receiving
	MMS New message
	SMS sending
	SMS receiving
	New voicemail
	New message
	SMS sending has failed
	New email
	Push message
	Flight mode
	Normal
	Outdoor



Icon	Description
	Silent
	Customised profile 1-10 or Customised 1-10
	External memory
	Battery status
	Microsoft Exchange


Calls

TIP! Press the power key briefly to lock the touchscreen and prevent calls being made by mistake.


Making a call or a video call


- 1 Touch  to open the keypad.
- 2 Type in the number on the keypad. To delete a digit, press the clear key.
- 3 Touch the **Voice call** to place the call.
- 4 To end the call, touch the **End call**.

TIP! To enter + for making international calls, touch  twice or press and hold down .

TIP! You can **Save number**, **Send message**, **Search contacts** by tapping .


In-call options

Hold - Touch  to put a call on hold.


Mute - Touch  to turn the microphone off so the person you are talking to cannot hear you.

Speaker - Touch  to turn the speaker phone on.

+ Options - Choose from a list of further in-call options, including Bluetooth talk, Go to messages, Go to contacts, Create new memo, Recent history, Go to calendar, DTMF off/on, End call.



 - Touch to open a numerical keypad for typing in numbers, e.g. when dialling call centres or other automated telephone services.


 - Add a memo during a call.

 - Search your contacts during a call.

Calls

Speed dialling

- 1 From the home screen touch  to open your **Contacts**.
- 2 Touch  and select **Speed dials**.
- 3 Your contacts list will open. Select the contact you want to assign to that number by touching the phone number once.




To call a speed dial number, touch  on the home screen then press and hold the assigned number until the contact appears on the screen. The call will initiate automatically, without having to touch **Voice call**.

Turning off DTMF

DTMF lets you use numerical commands to navigate within automated calls. DTMF default is set to on.


To turn it off during a call touch  and select **DTMF off**

Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Call the number or search your contacts.
- 3 Touch **Voice call** to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch the swap icon  to toggle between calls.
- 6 Touch the + symbol to open the in-call menu and select "Join calls" to make a conference call.
- 7 To end one or both calls press .


NOTE: You will be charged for each call you make.

Using call barring

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Call barring** and choose **Voice calls** and/or **Video calls**.
- 3 Choose any or all of the five options.
- 4 Activate and enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code, available from your operator. Only numbers within the fixed dial list can be called from your phone.

Changing the common call setting

- 1 Touch  and choose **Call settings** in the Settings tab.

- 2 Touch **Common settings**. This lets you amend the following settings:

Call reject - You can reject the dialling call.

Send my number - Choose whether to display your number on an outgoing call.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a handset key to answer a call.

Save new number - Select **ON** or **OFF** to save a new number.



Voice clarity - Select **ON** or **OFF** to clear noises around. This feature makes your voice louder and clearer.

Contacts


Searching for a contact

There are two ways to search for a contact:


From the home screen

- 1 From the home screen touch  to open your **Contacts**. Touch  and enter the contact name using the key pad.
- 2 Touch **Video call** or **Voice call** to place the call.

From the main menu

- 1 Touch , touch **Contacts** on the Communications tab.

Adding a new contact


- 1 From the home screen touch  then touch **New contact**.
- 2 Set the group picture, group name, group ringtone and group vibration.
- 3 If you want to add a picture to each contact, touch **Picture**.
- 4 Enter the first and last name of your new contact. You do not


have to enter both, but you must enter at least one.

- 5 Set others.
- 6 Touch  to save the contact.

TIP! You can create customised groups for your contacts. See **Creating a group**.


Creating a group

- 1 From the home screen, touch  and then touch **Contacts** in the Communications tab.
- 2 Touch **Contacts** on the top of the screen, then touch **Groups** and select **New group**.
- 3 Choose whether to save the contact to Handset or USIM and set the group picture, group name, group ringtone and group vibration.

- 4 Touch  to save the group.


NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your

contacts.

TIP! You can edit an existing group by touching the selected group once. Touch and select  Add member(s), Edit group, Remove from group, Send message, Send business card via, Delete group, Send group contacts via bluetooth.

Changing your contact settings

You can adapt your contact settings to suit your own preferences.

1 Touch **Contacts** from the Communications tab, select  and scroll through **Contact settings**.

2 From here, you can adjust the following settings:

Display name - You can set display name.

Copy - Copy your contacts from your USIM to your handset, or vice versa. You can do this one

contact at a time, or all at once.

Move - This works in the same way as Copy, but the contact will only remain in the new location.

Clear contacts - Delete all your contacts.


Memory info. - You can find Memory information.

Synchronise contacts - Connect to your server to synchronise your contacts.

Send all contacts via Bluetooth

- Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Viewing information

TIP! To add your own business card, select **My business card** and enter your details as you would for any contact. Touch  to save.


Messaging

Messaging


Your BL40 combines SMS and MMS into one intuitive, easy to use menu. There are two ways of entering the messaging centre:


- 1 From the home screen, touch  , or touch  then scroll through **Messaging** from the Communications tab.


Sending a message

- 1 Touch  then **Write message** to open a blank message.
- 2 Touch **To** to enter the recipient's number, or open your contacts or favourites. You can add multiple contacts. When you are finished, touch the message box below to start composing the message text.
- 3 After entering the text, you can send the SMS by touching the send SMS/MMS button on top of the message.


TIP! You will be charged for a 160 character text message for every person you send the message to.


- 4 Touch  **Insert** to add an Image, Video, Sound, SMS Template, MMS Template, Emoticon, Name & number, New slide, signature, subject and **More** (Business card/Schedule/ Memo/ Tasks/My business card).


 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded.

 **WARNING:** If an image, video or audio file is added to an SMS, it will automatically be converted to an MMS, and you will be charged accordingly.

Entering text


 Touch to turn on T9 predictive texting.

 Tap to change between the number, symbol and text keypads.

Use  to toggle between the different keyboards in each text entry mode (e.g., capital or lower case letters).

To enter a space, touch .

T9 predictive


In T9 mode, you will see , coloured circle in orange.

Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

Abc manual

In Abc mode you have to touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three more times, then 6 three times.

Setting up your email

- 1 Touch  from the home screen, and scroll to **Email** on the Communications tab.
- 2 Touch **Write email**. If the email account is not set up, start the email set up wizard.

TIP! If an email account is already set up, the wizard is not activated automatically.

You can also edit specific account settings by navigating to **Communications > Email >**



New email account. They are the following:

Title - Enter a name for this account.

User name - Enter the account username.

Password - Enter the account password.

Email address - Enter the account email address.

Messaging

Reply email address - Enter the 'reply to' email address.

Outgoing mail server - Enter the outgoing email server address

Incoming mail server - Enter the incoming email server address

Maximum receive size - Select the size limit for your emails, up to the maximum of 2 MB.

Mailbox type - Enter mailbox type POP3 or IMAP4.

Save to server - Choose whether to save your emails on the server. Copies are always saved for IMAP4 accounts.

Save sent mail into - Select where to save sent emails for IMAP4 mailboxes. For POP3 mailboxes sent mails are always saved to the handset.

Download option - Choose the way to download emails. Choose between Header only or All including body for POP3, and

header only, header + body, or all for IMAP4.

Access point - Choose your Internet access point.

Email to retrieve - Choose the way to download emails. Choose from Header only or All including body for POP3, header only, header + body, or all for IMAP4.

Auto retrieve - Choose whether to retrieve your new emails automatically.

Retrieve only new - Choose whether to discard emails already downloaded previously.

Advanced settings - Choose whether to use the advanced settings.

SMTP port number - Normally, this will be 25.

SMTP TLS/SSL - Choose whether to use TLS/SSL for outgoing server.

Incoming server port - Normally, this is 110 for POP3 accounts and

143 for IMAP4 accounts.

Incoming TLS/SSL - Choose whether to use TLS/SSL for incoming server.

SMTP authentication - Choose the security settings for the outgoing mail server

SMTP Username - Enter the SMTP username.

SMTP Password - Enter the SMTP password.

APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Once the account is set up, it will appear in the accounts list in your Email folder.

Microsoft Exchange email account

Email address - Enter the account email address.

Server address - Enter the email server address.

Username - Enter the account's username.

Password - Enter the account's password.

Domain - Enter the account domain(Optional).

Auto push - Choose whether to use Push Email.

Now your account is set up, it will appear in the list of accounts in your Email folder.

Mail days to sync - Choose period to sync emails.

Sync items - Choose whether to use Sync items(Contacts,Schedule s,Tasks).

Contacts - Select sync Contacts.

Schedules - Select sync Schedules.

Tasks - Select sync Tasks.

Use SSL - Choose whether to use SSL for Microsoft Exchange.


Internet Profile - Choose your internet Profile.

Messaging

Save in sent – Choose whether to save your sent emails to the server.

Retrieving your email

You can automatically or manually check your account for new emails. To check manually:

- 1 Touch  from the home screen, and scroll through **Email** from the Communications tab.
- 2 Select **Email**.
- 3 Touch the account you want to use then .
- 4 Choose Retrieve/Message synchronisation and your BL40 will connect to your email account and retrieve your new messages.

Sending an email using your new account

- 1 Touch  from the home screen, and scroll to **Email- Write email** on the Communications tab to



open a new blank message.

- 2 Enter the recipient's address and write your message. You can also attach images, videos, audio files and other file types.
- 3 Touch **Send email** to send your email.

TIP! During an active Wi-Fi connection, emails are sent and received via Wi-Fi.

Changing your email settings

You can change your email settings based on your own preferences.

- 1 Touch  from the home screen, and scroll through **Email** from the Communications tab.
- 2 Select  and scroll to **settings**.
- 3 You can alter the following settings:

Email accounts - Manage your email accounts.

Allow reply email - Choose whether to allow read confirmation messages to be sent.

Request reply email - Choose whether to request read confirmation messages.

Retrieve interval - Select how often your BL40 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at one time.

Include message in fwd & reply - Select whether to include the original message in your reply.

Include attachment - Select whether to include the original attachment in any reply.

Auto retrieval in roaming - Choose whether to retrieve messages automatically when abroad (roaming).

New email notification - Choose whether to be alerted about a

new email without a pop-up message.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Mail sending size - Choose the size of email you send.

Using templates

Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.

- 1 When writing a new message, you can enter **Templates** from **Insert** in option menu.
- 2 Choose **SMS Template** or **MMS Template**. You can then touch  to **New template**, **Delete** or **Delete all** templates. To edit a message just select edit make your changes and touch **Save**.

Messaging


Using emoticons

Live up your messages using emoticons. There are some commonly used emoticons already on your phone.

You can add a new emoticon by touching **New emoticon**.

Changing your text message settings

These settings can be changed based on your preferences.

Scroll through **Messaging** from the Communications tab. Touch  then choose **Message settings** and **Text message**. You can change the following:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long

your messages are stored at the message centre.

Message types - Convert your text into **Voice**, **Fax**, **X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This impacts on the size of your messages and therefore on your data charges.


Send long text as - Choose to send long messages as Multiple SMS or MMS.

Signature - Create an email signature and switch this feature on.

Changing your multimedia message settings

These settings can be changed based on your preferences.

Scroll through **Messaging** from the Communications tab.

Touch  then choose **Message settings** and **Multimedia message**.

You can make changes to the following:

Retrieval mode - Select **Home network** or **Roaming network**. If you are selecting Manual you will only receive notifications about MMS messages. You can then decide whether to download them in full.

Delivery report - Choose whether to allow and/or request a delivery report.

Read reply - Choose whether to allow and/or request a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long slides appear on screen.

Creation mode - Choose the mode between restricted/Warning/Free.

Restrict - It is unable to attach unsupported type files to MMS.

WARNING: You can select to restrict or attach unsupported type files to MMS via confirmation popup.

Free - It can attach the unsupported type file to MMS up to the available size.

Delivery time - Choose how long to wait before a message is delivered.

Multimedia message centre - Enter the details of your message centre.

Camera

Taking a photo

- 1 Press and hold down the Camera key on the right side of the phone.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press the capture button lightly and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the photo subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button fully to capture the shot.

Once you've taken the photo

Your captured photo will appear on the screen. The image name is shown with four icons on the right side.


Send Touch to send the image as a **Message, Email, Bluetooth** or **Blog this**.

NOTE: Additional cost may occur when MMS are downloaded when roaming.

Use as Touch to use the image as Homescreen, Lockscreen, Contact image, start up, shut down, Incoming call, Outgoing call.


Rename Touch to edit the name of the selected image.

Edit Touch to edit the image using various tools.



 Touch to return to the previous menu.


Delete Touch to delete the image.

New picture Touch to take another photo immediately. Your current photo will be saved.



 Touch to view a gallery of your saved photos.

Getting to know the viewfinder

Zoom - Touch  to zoom in or  to zoom out. Alternatively you can use the side volume keys.

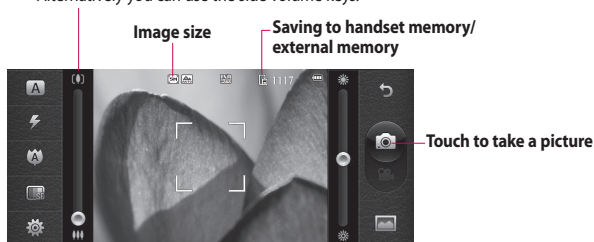


Brightness - See Adjusting the Brightness.

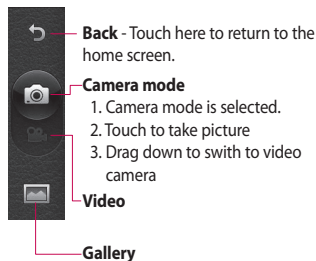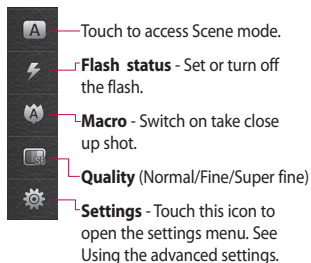

Camera


Using the flash

The default flash setting is auto, but there are other options.

- 1 Select  from the left side of the viewfinder to enter the flash sub-menu.
- 2 There are four flash options:
Auto - Your camera will assess the light available for a good picture and use the flash as necessary.
Red-eye reduction - The camera will flash twice in order to remove red eye.
Off - The camera will never flash. This is useful if you want to save battery power.
On - The camera will always flash.
- 3 When you touch the option you want, the flash menu will automatically close, allowing you to take a picture immediately.

- 4 The flash status icon in the viewfinder will change based on the new flash mode.

Choosing a shot type

- 1 Touch  and select **Shot mode** to open the available shot types
- 2 Choose from eight options:
Normal shot - This is the default shot type, the photo will be taken in the normal way, as outlined in taking a quick photo.
Continuous shot - This enables you to take six shots automatically in very quick succession.
Stitch shot - This enables you to stitch photos side by side after continuous shot. Six to eight pictures can be merged together in a panoramic image, allowing you to enjoy the full size of your BL40's screen.

Smile shot - Automatically triggers the shutter when camera detects a smile.

Panorama - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view.

Beauty shot - This enables you to take a photo of person's face clearly and brightly. Especially useful when you are close up.

Art shot - Choose different picture effects. (Original, Black&White, Warm, Cold.)


Frame shot - Choose from one of the fun frames to transform your friend or just decorate their surroundings.

Out focusing shot - This shot type means selective focusing. You can focus on the center of image.

Taking a panoramic shot


Capture life as it appears using a panoramic shot. Allows you to enjoy the full size of your BL40's screen with 360° Panorama.


TIP!


360° Panorama : This enables you to stitch photos up to 12 pieces. After pressing  and turn the camera lens in the direction(right/left/up/down) of you want to take a picture. Then it will capture automatically. When the red box come in the white box of the middle screen, it is able to capture.

Camera

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

You can change the camera setting by scrolling the wheel. After selecting the option, touch the  button.

TIP! You can view the help menu about the functions of the camera by touching .

Swap cam - For self portraits, switch to the LG BL40's inner camera.

Size - Change the size of the photo to save on memory space or to take an appropriately sized picture for a contact. See **Changing the image size**.

Colour Effect - Choose a colour tone to use on your new photo. See **Choosing a colour effect**.

White balance - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds** or **10 seconds**. This is ideal if you want to be included in a photo.

Shot mode - Choose the shot mode.

ISO - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can't use the flash. Select the ISO value from **Auto**, **100**, **200**, **400**, or **800**.

Memory - Choose whether to save your photos to the **Handset memory** or the **External memory**.

Image stabilization - Enables you to take a picture without the camera wobbling or shaking.

Focus Mode - Select the way the camera will focus. Choose between **Spot**, **Manual focus** and **Face tracking**.

Shutter sound - Select one of the 3 shutter sounds.

Grid screen - Choose between **Off**, **Simple cross** or **Trisection**.

Geo-Tagging - Choose to switch on the EXIF information for the photo to write GPS information.

Reset settings - Restore all camera settings.


TIP! When you exit the camera, all settings will return to their defaults except image size and image quality. Any non-default settings will need to be reset, such as colour tone and ISO. Check these before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you will see a preview of the image change behind the settings menu.



Camera

Changing the image size

The more pixels, the larger the file, which means the files take up more memory space. If you want to store more pictures on your phone, you can alter the number of pixels to make the files smaller.

- 1 Using the viewfinder, touch  in the left corner.
- 2 Select **Size** from the Preview menu.
- 3 Select a pixel value from the options (**5M(2560x1920)**, **3M(2048x1536)**, **2M(1600x1200)**, **1M(1280x960)**, **VGA(640x480)**, **QVGA(320x240)**, **Contacts**) or choose the predefined wallpaper size.


Choosing a colour effect


- 1 Using the viewfinder, touch  in the left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are colour tone options.
- 4 When you've made your selection the colour tone menu can be closed by selecting the , ready for you to take your picture.

TIP! You can change a picture taken in colour to black and white or sepia, but you cannot change a picture taken in black and white or sepia to colour.


Using the secondary camera

Your LG BL40 has an inner 640x480 camera for both video calls and taking photos.


- 1 To switch to the inner camera touch  then select **Use secondary camera** from the **Swap cam** menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image, press the side button as normal.

TIP! The secondary camera has fewer settings as it has no flash nor ISO. You can still alter the image size, colour effect, image quality, white balance and set the self-timer by touching  in the same way as when using the main camera.

- 3 After you've taken the photo you'll be offered all the same options as for an image taken with the main camera.






- 4 To return to the main camera touch  and then select **Use main camera** from the **Swap cam** menu.

Viewing your saved photos

- 1 You can access your saved photos from within camera mode. Just touch  and your gallery will appear onscreen.

Video camera










Shooting a video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Alternatively, draw down  in the view finder in camera mode to switch to video mode.
- 3 Press the capture button once or touch  in the view finder to start recording.
- 4 ● **REC** will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 5 To pause the video, touch  and resume recording by selecting .
- 6 Touch  on the screen to stop recording.

After taking a video


A still image representing your captured video will appear on the screen. The name of the video will be shown on the bottom of the screen, along with four icons on the

right side.



-  **Play** Touch to play the video.
-  **Send** Touch to send the video as a **Message**, **Email** or **Bluetooth**. See Sending a message, and Sending and receiving your files using Bluetooth.
-  **Use as** Touch to use the video as a ringtone.
-  **Rename** Touch to edit the name of the selected Video.
-  **Edit** Touch to edit the Video using various tools.
-  Touch to return to the previous menu.
-  **Delete** Touch to delete the video you have just made, and confirm by touching **Yes**.
-  **New video** Touch to shoot another video immediately. Your current video will be saved.
-  Touch to view the saved videos and pictures gallery.

Getting to know the viewfinder

Zoom - Touch and Scroll up/down to zoom in or to zoom out. Alternatively you can use the side volume keys

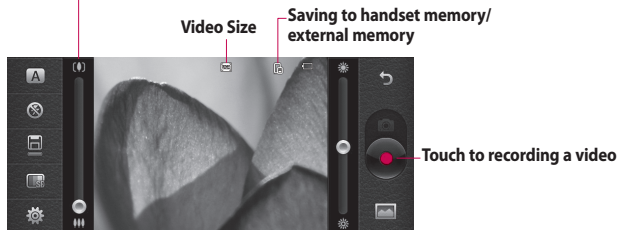


Brightness - See Adjusting the Brightness.

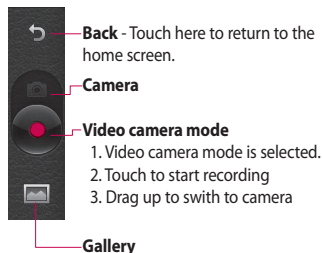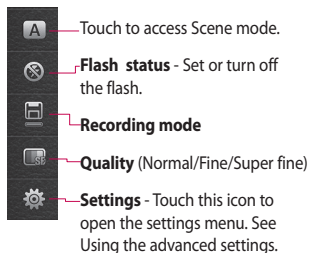

Video camera

Using the advanced settings

Using the viewfinder, touch  to open all the advanced settings options. Refer to the advanced settings of Camera page 35.

Recording mode - Set a duration limit for your video. Choose between Normal, MMS or DLNA to limit the maximum size to send the video as an MMS.

TIP! If you choose MMS duration, the lower image quality will enable you to record a longer video.


Memory - Choose whether to save your videos to Handset memory or External memory.

Audio - Choose from Mute to record a video without sound, or unmute to include the sound.


Changing the video image size

The more pixels, the larger the file

size, which means the files take up more memory space. If you want to store more videos on your phone, you can alter the number of pixels to make the files smaller.

1 Using the viewfinder, touch  in the left corner.



2 Select **Video size**.

 **WARNING:** The great editing software on your LG BL40 is compatible with all video types except 640x480. Don't record in this format if you plan to edit the video.

TIP! For video format conversion software, see the CD that came with your BL40.



Using the secondary video camera

Your LG BL40 has an inner 320x240 camera for both video calls and recording videos.

- 1 To switch to the inner camera, touch  then select **Use secondary camera** from the **Swap cam** menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, and press it again to stop recording.
- 3 After you've shot the video, you'll be offered all the options available for a video shot using the main camera.
- 4 To return to the main camera touch  and then **Use main camera**.

TIP! You can still alter the image size, colour effect, white balance and quality by touching **Settings** in the same way as when using the main camera.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery. Touch  for it to play.

Watching your videos on TV

Connect your BL40 to TV using the TV output cable.

NOTE: The TV output cable is available for purchase separately.

The best suited resolutions are given below:

QVGA 320x240 2mbps 30fps


QCIF 176x144 384kbps 30fps
(Window Media)

VGA 640x480 384kbps 30fps


You can find detailed information in File info from option menu when a video is being played back.
(It can not be shown the video quality.)

Your photos and videos

Viewing your photos and videos

- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.

Using zoom when viewing a video or photo

When viewing photos or videos, you can zoom in and out by pinching your fingers together or spreading them apart.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the left side of the screen. Alternatively, use the volume keys on the side of the phone.

Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch **Use as**.
- 4 You can choose images to use as Homescreen, Lock screen, Contacts image, Start up image, Shout down image, Outgoing call image, Incoming call image.

Editing your photos

1 “Open the photo you want to edit, and touch the options to select **Edit**.

2 Touch the icons to alter your photo:



Select Area



Draw something on your photo, freehand. Select the line thickness from the four options, then the colour you want to use.



Adding writing on a picture.



Decorate your photo with stamps.



Erase the editing you have done to the picture. You can choose the size of eraser you use.



Touch to return to the gallery.

Save

Select to save the changes as an **Update existing**, or a **New file**. If you select **New file** enter a file name.

Undo

Erase the editing you have done to the photo.

Image

Touch to open further effect options including **Rotate**.

Filter

Touch to apply the effect options to a photo.

Adjustment

This helps to adjust a picture taken using automatic colour, brightness etc.

Adding text to a photo

1 From the editing screen, touch



2 Select **Signature Text** or **Bubble Text**.

3 Type the text using the keypad and touch **Save**.


Your photos and videos

- 4 Set the text to the desired location on the picture by sliding it.
Touch the text, keypad will be enabled for reedit.

Adding an effect to a photo

- 1 From the editing screen, touch **Filter**.
- 2 You can apply any of the various options to the photo
- 3 To undo an effect simply touch **Undo**.

Cropping a photo

- 1 From the editing screen, touch .
- 2 Choose the shape you want to use to crop the picture.
- 3 Drag the box over the area you want to crop.
- 4 When you are happy with your selection, touch **Save**.

Adding a colour accent to a photo

- 1 From the editing screen, touch **Image**.
- 2 Choose **Colour Accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is the same or a similar colour, for example, a person's hair or jumper.
- 4 Alter the intensity of the accenting by touching **Intensity** and touch '+' or '-' button.
- 5 Touch **OK**.
- 6 All colour will be removed from the photo, apart from in the section marked for colour accenting.
- 7 Select **Save** to save the changes.

Swapping colours in a photo

- 1 From the editing screen, touch **Image**.
- 2 Choose **Colour Swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is the same or a similar colour, for example, a person's hair or jumper.
- 4 Select a colour.
- 5 Press **OK**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select **Save** to save the changes.

Fog Drawing

- 1 Tasks Fog drawing on your picture, touch Image.
- 2 Choose **Fog Drawing**.
- 3 Puff into the mic to put fog on the picture and draw with your finger over it.

- 4 After the fog is applied on the picture, you can change color and intensity of the fog and erase width.

Rain Drop

- 1 For adding rain drops on your picture, select Image menu.
- 2 Choose **Rain Drop**.
- 3 The bubbles appears over the image.
- 4 You can set the intensity/scale of droplets by adjusting the intensity/scale menu bar respectively.
- 5 Also the direction of droplets can be adjusted with the cell phone rotation.

MotionBlur

- 1 For applying Motion Blur, touch **Image**.
- 2 Select **MotionBlur**.
- 3 Select the location you want to enter MotionBlur by drawing an

Your photos and videos

outline. Touch Ok, and then Rub in the direction you want.

- 4 Intensity of the blur can be set using the intensity adjust bar.

Artistic Effect




- 1 From the editing screen, touch **Filter**.
- 2 choose **Artistic Effect**.
- 3 Select the Artistic Effect effect and you can watch the painting.
- 4 The painting will be created and automatically saved. Touch cancel to stop in between.

Editing your videos


The video editing features are available for MPEG4 types except 640x480 (VGA) resolution.

Don't record in these formats if you plan to edit your video.

Trimming the length of the video

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Trim/Multi-trim**.
- 3 Touch  and set the new start and end points using **Trim**.
- 4 Touch **Preview** to confirm you are happy with the new cut.
- 5 Touch **Save** or, alternatively, touch  to return to the gallery and discard the changes.

Merging two videos

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you want to merge.




- 4 Touch and slide the photo to move it to the end or the beginning of the video.
- 5 Touch **Preview** to choose how to merge the videos together.
- 6 Press **Save** then **Yes** to save the new merged video. Replace the existing file or save as a new file.
- 7 Repeat these steps to merge more videos.

Merging a photo with a video

- 1 Open the video you want to edit, touch  option key.
- 2 Select  and choose **Image merge**.
- 3 The Images folder will open. Choose the photo you want to merge into your video and touch **Select**.
- 4 Touch and slide the photo to move it to the end or the beginning of the video.

- 5 Touch **Preview** to check how the photo and video merge together.
- 6 Press **Save** then choose to replace the existing file or save as a new file.
- 7 Repeat these steps to merge more photos.



Adding text to a video

- 1 Open the video you want to edit, touch  option key.
- 2 Select  and select **Text overlay**.
- 3 Touch  and pause playback for setting the start point for text appearance.
- 4 Touch **Start** and choose the text styles. Enter your text using the keypad and select **OK**.
- 5 Touch the area of the screen you want the text to appear and touch **OK**.

Your photos and videos

- 6 Touch **Save**. Replace the existing file or save as a new file.
- 7 Repeat these steps to add more text.
- 7 Touch **Save**. Replace the existing file or save as a new file.
- 8 Repeat these steps to add more photos.



Overlaying a photo

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Image overlay**.
- 3 The Images folder will open. Choose the photo you want to overlay on your video.
- 4 Touch  and pause when you want the picture to appear, then select Opacity after touching the Start button.
- 5 Touch **OK** and then press **End** when the photo overlay shall be stopped.
- 6 Touch the area of the screen where you want the text to appear. If the photo is too big it will overlay the whole screen, not just the selected area.



Adding a soundtrack to your video

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Audio dubbing**.
- 3 The My sounds folder will open. Choose the track you want to add to your video.
- 4 The original audio track on your video will be erased.
- 5 If the audio is shorter than the video choose whether to play it **Once** or to **Repeat** it.
- 6 Replace the existing file or save as a new file.

Adding live sound to your video

- 1 Open the video you want to edit, touch  option key.
- 2 Select  and choose **Live dubbing**.
- 3 Set the sound value to original sound or recording sound.


Adding a dimming effect

- 1 Open the video you want to edit, touch  option key.
- 2 Select  and choose **Dimming Effect**.
- 3 Your video will now fade in at the start and fade out at the end.
- 4 Replace the original file or save as a new file.

Multimedia

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

To access the Entertainment menu, touch  select **My Stuff** from the Entertainment Tab. You can open a list of the folders that store all your multimedia files.

TIP! To delete any files in My Stuff, touch  then **Delete**.

Pictures

Images contains a list of pictures including default images pre-loaded onto your phone, images you have downloaded and those taken on your phone's camera.


Sending a photo

- 1 To send a photo just select the picture you want.
- 2 Touch **Send**. Choose between **Message, Email, Bluetooth, Blogger**.
- 3 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, your phone will search for a device to send the picture to already paired device.

Using an image

You can choose images to use as wallpapers and screensavers, or even to identify a caller.

Printing an image

- 1 Touch **Images**.
- 2 Select an image and touch .
- 3 Touch **Print via Bluetooth**.

Moving or copying an image

An image can be moved or copied between the phone memory and the memory card. You may want to do this to clear some space in one of the memories, or to safeguard your images against being lost.

Creating a slide show

If you want to view all the images on your phone, you can create a slide show to save you having to open and close each individual image.

Geo-tagging

Turn on the camera and enjoy the capabilities of your phone's location-based services.

Take pictures wherever you are and tag them with the location.

If you upload tagged pictures to a blog that supports Geo-tagging, you can see the pictures displayed on a map.

Sounds

The **My sounds** folder contains Downloaded sounds, **Default sounds** and **Voice recordings**.

From here you can manage or send sounds or set them as ringtones.

Videos

The **My videos** folder shows a list of videos you have downloaded or recorded on your phone.


NOTE: Some contents downloaded via the internet or encoded by a user may not play properly.

TIP! BL40 supports both DivX & Xvid video format playback to ensure greater content availability. DivX Certified to play DivX® video up to 320x240.

NOTE: The TV output cable is available for purchase separately.

Multimedia


Sending a video clip

- 1 Select a video and touch  .
- 2 Touch **Send** and choose between **Message**, **Email** and **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message, which you can write and send as normal. If you choose **Bluetooth**, your phone will search for a device to send the video to already paired device.

Games and Applications

You can download new games and applications to your phone to keep you amused in your spare time.

Installing a Java game and application

- 1 Touch  then select **My Stuff** from Entertainment tab.
- 2 Touch the All Memory item that is upper side menu.

- 3 Select All memory or Phone Memory. If you insert new memory card, touch External Memory menu.


Use the Fun stuff menu

Fun stuff contains preloaded flash games which are using the integrated motion sensor.

Flash contents

The Flash contents folder contains all downloaded SWF and SVG files.

Viewing an SWF/ SVG file

- 1 Touch  then select **My Stuff** from the Entertainment tab.
- 2 Touch **Flash contents**.
- 3 Select the file you want to view.

Documents

You can view stored Excel, PowerPoint, Word, Text and pdf files in this folder.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.


To transfer files (e.g. music) using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are connected to each other.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent, accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Image** folder if it is image file and **Sound** folder if it is a music file.

Others

The **Others** folder is used to store files that are not pictures, audio files, videos, games or applications. It is used in the same way as the **Documents** folder.

Creating a movie

- 1 Touch  then select **Movie maker** from the Entertainment tab.
- 2 Touch **Insert** to add an image.
- 3 Touch the style to choose a movie style.
- 4 Touch the **Sound** on the screen to change the sound, e.g. for a voice recording.
- 5 Touch the **Preview** button to see the results.
- 6 Touch the **Play Order** on the screen to change the order.

Multimedia

- 7 Touch the **Usage** to choose between Keeping and MMS.
- 8 To save your movie, touch **Save movie**.

Music

Your LG BL40 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch menu key  then select **Music** from the Entertainment Tab.

TIP! BL40 is one of few mobile phones to apply Dolby Mobile™ for music, providing Dolby™ sound quality to your mobile phone.

Transferring music onto your phone

You can also use the LG PC Suite. The easiest way to transfer music onto your phone is via Bluetooth or the sync cable.


To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select to send it via Bluetooth.
- 3 When the file is sent, accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch  then select **Music** from the Entertainment tab.
- 2 Touch **All tracks**.
- 3 Select the song you want to play then touch .
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song. (Touch long to go FF)
- 6 Touch  to go back to the previous song. (Touch long to go REW)

- 7 Touch  to return to the **Music** menu.


TIP! To change the volume while listening to music, touch .

Note: The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

To play a playlist, select it and touch one of the tracks it contains.

NOTE: To add a second playlist, touch  then New playlist.

Using the radio

Your LG BL40 has a built-in FM radio tuner so you can listen to your favourite stations on the move.



NOTE: You will need to attach your LG supplied headset to listen to the radio. Insert them into the headset socket.

Multimedia

Searching for stations


You can tune your phone to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You can store up to 48 channels on your phone.

Automatic tuning:


- 1 Touch  and choose **FM radio** from the Entertainment tab.
- 2 Touch .
- 3 Touch **Autoscan**. The stations found will be allocated to channel numbers in your phone.

NOTE: You can also manually tune to a station by using the wheel displayed next to the radio frequency.

Listening to the radio



- 1 Touch  and choose **FM radio** from the Entertainment tab.
- 2 Touch the channel number of the station you would like to listen to.


TIP! To improve radio reception, extend the headset cord, which functions as the radio aerial.

 **WARNING:** In order to guarantee the best reception possible you need to use the LG headset supplied with your phone.



Utilities

Adding an event to your calendar


- 1 From the home screen select  then scroll through **Organiser** in Utilities tab.
- 2 Select the date to which you want to add an event.
- 3 Touch  then **New schedule**.

TIP! You can enter holidays in your calendar. Individually touch each day of the holiday, then touch  and select **Set holiday**. Each day will be marked in red text.


Changing your default calendar view


- 1 From the home screen select  then scroll through **Organiser** in Utilities tab. Select **Settings** in .
- 2 Touch **Default view** and choose Month, Week, Timetable, List or All tasks.

Using the date finder

- 1 From the home screen select  then scroll through **Organiser** in Utilities tab.
- 2 Select **Date finder** from the option menu.
- 3 In the **From** tab set the required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown.

Setting your alarm

- 1 From the home screen select  then scroll through **Alarms** in Utilities tab.
- 2 If you want add a new alarm, touch **New alarm**. If you want to set the alarm to sound again within one hour, touch **Quick alarm**.


TIP! Touch On icon or set  to start the alarm.

Utilities

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 From the home screen select  then scroll to **Voice recorder** in the Utilities tab.
- 2 Touch **Record** to begin recording.
- 3 Touch **Stop** to end recording.
- 4 If you touch **New**, it will automatically restart the voice recording after saving the previous one.


Sending the voice recording

- 1 Once you have finished recording, touch **Send**.
- 2 Choose **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recorded track will be attached to the message and sent as MMS. If you

choose **Bluetooth**, your phone will search for a device to send the voice recording to already paired device.

Using the FM transmitter to play music

The BL40 allows you with its built-in FM transmitter to listen to your music via any FM tuner in range of the phone, e.g. at home or in your car.

- 1 Touch  then **Tools** and choose **FM Transmitter** from the Utilities tab.
- 2 Select a frequency that you want to transmit an FM signal on, and then touch **Transmit**.
- 3 Then set your tuner to the same frequency.

NOTE: The operating distance of the FM transmitter is up to a maximum of 2 metres (6.5 feet).

The transmission maybe subject to interference due to obstructions, such as walls, other electronic devices, or from public radio stations.

To avoid interference, always search for a free FM frequency on the receiver before using the FM transmitter.

The FM transmitter cannot be used at the same time as the FM radio of your device.

The web


Browser

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the home screen select  then scroll through **Browser** in the Utilities tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **New Bookmark**. Enter a name for the bookmark followed by its URL.

- 4 Touch . Your Bookmark will now appear in the bookmark list.

Using the RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content, such as blog entries, news headlines or podcasts. An RSS document, called a feed, web feed, or channel, contains either a summary of content from an associated web site or its full text. RSS makes it possible for people to keep up with their favourite web sites in an automated way that is easier than checking manually.

The user subscribes to a feed by entering its link into the reader or by clicking an RSS icon in a browser that starts the subscription process. The reader checks the user's subscribed feeds regularly for new content and downloads any updates that it finds.

Using your phone as a modem

Your BL40 can double as a modem for your PC, giving you email and internet access even when you don't have any wired connection. You can do this via the USB cable or by Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your BL40 and PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communications** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on the screen.
- 5 Click **Connect** and your PC will connect via your BL40.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and BL40.
- 2 Pair your PC and BL40 so that a passcode is required to connect them.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communications** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on the screen.
- 7 Click **Connect** and your PC will connect via your BL40.

The web

Access to Google Service

You can launch google services in this application. Touch **Google** in the Utilities tab.

Maps: You can access maps from your mobile devices.

Search: Google Mobile Web Search allows you to search for websites that are specifically designed for mobile phones and devices.

Mail: The Gmail for mobile application is a downloadable Java application, offering the best possible Gmail experience for supported mobile devices. To download, visit <http://gmail.com/> app from your mobile browser.

YouTube: You can watch videos on YouTube Mobile from your mobile device. You may want to contact your carrier for more information about the availability of data streaming on your mobile device.


Blogger: You can manage your account and share your blog. It is available to upload a picture and video.

PC Suite

You can synchronise your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help put your mind at ease.

TIP! You will need to install the application PC Suite provided on the CD-ROM.

Installing the LG PC Suite on your computer

- 1 From the home screen, touch  and then click **Connectivity**.
- 2 Select **USB connection** and click **PC Suite**.
- 3 Connect handset and PC via USB cable and wait for a while.
- 4 Installation guide message will be displayed on the computer screen.

Caution! If installation guide message is not displayed in your PC, please check your CD-ROM setting on Windows.

- 5 Insert the supplied CD-ROM or the click the download button to directly download the LG PC Suite program from the internet.
- 6 Click on the LG PC Suite Installer which will appear on your screen.

Connecting your phone and PC

- 1 Select PC Suite mode in Connectivity menu and then connect the USB cable to your phone and your PC.
- 2 LG PC Suite will be automatically activated on your PC.
- 3 Your phone and PC are now connected.

PC Suite

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose whether to back up **Contents Data** and/or **Phonebook/Schedule/ToDo/Memo Data**. Select the location you want to back up the information to, or restore it from. Click **OK**.
- 4 Your information will be backed up.

Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the Manage Photos, Videos or Music icon.
- 3 Images, audio files and videos you have saved on your phone

will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to manage files you no longer need.

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click **Sync Contacts** button your PC will now import and display all the contacts saved on your phone.
- 4 Click on **Menu** and select **Export**. You can now select where you want to save your contacts to.

Synchronising the messages

- 1 Connect the phone to your PC.
- 2 Click on the Messages icon.
- 3 All your phone messages will be displayed in folders on the screen.

- 4 Use the toolbar at the top of the screen to edit and rearrange messages.

Music Sync


This menu lets you add music to your BL40. Before you start transferring music from your PC to your phone, make sure your computer has the following set-up and accessory is at hand:

- Microsoft Windows XP or Vista
- Windows Media Player 10 or above
- USB data cable
- microSD card (If you wish to use external memory as the music storage.)

WARNING

Do not disconnect your phone during the transfer.

Transferring music using Windows Media Player

- 1 From the home screen select , then scroll through **Connectivity** in the **Settings** tab.
- 2 Select **USB connection mode** and choose **Music sync**.
- 3 Connect your handset and PC using a compatible USB cable.
- 4 When you try to connect the handset to your PC, your handset will read: "Music Sync" followed by Connected.
- 5 The PC will prompt you to launch your preferred music management software.
- 6 Select Window Media Player.
- 7 Go to the Sync Tab, then drag and drop the music you wish to transfer to your handset into the **Sync List** panel.
- 8 Click on the **Start Sync** button. This starts the transfer process.

PC Suite

WARNING

Do not disconnect your phone during the transfer.

DivX Converter

Install the DivX converter, which is supplied on the same CD-ROM as the PC Suite software. DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then

select **Convert** for the process to begin. When the process is complete a Conversion complete pop up will be displayed.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Pat. 7,295,673


Settings

Personalising your profiles

You can quickly change your profile on the home screen. Just touch the status summary icon on the top, then touch the profile tab.

Changing your phone settings

Enjoy the freedom of adapting the BL40 to your own preferences.

- 1 From the home screen select  then scroll to **Phone settings** in the Settings tab.
- 2 Select a menu from the list below:

Date & Time - Adjust your date and time settings or choose to auto update the time when travelling or for daylight saving.

Power save - Choose to switch the factory set power saving settings: Off and On.

Languages - Change the language on your BL40's display.

Auto lock - Lock the keypad automatically on the home screen.


Security - Adjust your security settings, including PIN codes and handset lock. (The Security Code default is set to "0000")

Memory info.

Reset settings - Restores all settings to their factory defaults.

Information - View the technical information for your BL40.


Changing your touch settings

From the home screen select  then scroll to **Touch settings** in the Settings tab.

Settings

Changing your connectivity settings

To change any settings, use this menu:

From the home screen select  then scroll to **Connectivity** in the Settings tab.

Network selection - Your BL40 will connect automatically to your preferred network.

Internet profile - Set the profiles for connecting to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Server synchronisation - You can backup or restore contacts to the PC through Synch service.

DLNA - You can share contents in your handset by Home network. It can access the My stuff menu - Music, Video, Image and external memory too.

Switch on to start home networking and confirm my device name and check items for sharing.

It can support the following files. Music: mp3, Video: H.264(AVC)/ AAC/ MP4, Image: jpeg.

If you turn on the Home network function in the state of Wi-Fi off, it will be connected automatically after Wi-Fi has been turned on.

GPS type - Choose either **Assisted GPS** or **Stand alone**.

GPS

- The GPS technology uses information from earth-orbiting satellites to find locations.
- A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach them, then uses that information to identify its location.
- This may take from a couple of seconds to several minutes.
- Assisted GPS(A-GPS) on this mobile is used to retrieve location assistance data over a packet data connection with the terrestrial networks.
- The assistance data is only retrieved from the Service server when offered by your network provider and needed.

Note: GPS service has an error tolerance and will not work in buildings or underground.

USB connection - Synchronise your BL40 using the LG PC Suite software to copy files from your phone.

TV out - Choose **PAL** or **NTSC** when connecting your BL40 to a TV.

DivX VOD registration - This menu is used to generate a DivX VOD registration code. Please visit <http://vod.divx.com> to register and for technical support.

Packet data conn. - Set the packet data connection.


Browser settings - Set the values related to the browser.

Streaming settings - Your network operator has already saved this information. You can edit it if you want to make changes.

Java settings - Allows you to set profiles for connections made by Java programs and to view certificates.

Settings

Using flight mode


Turn flight mode on by selecting  then **Settings** > **Profiles** and select **Flight mode**.

Flight mode prevents you making calls, connecting to the Internet, sending messages or using Bluetooth.

Sending and receiving files using Bluetooth

Bluetooth is a great way to send and receive files as it uses no wires and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, which will typically be a photo, video or music file.
- 2 Touch  and choose **Send**. Select **Bluetooth**.

- 3 If you have already paired the Bluetooth device, your BL40 will not automatically search for other Bluetooth devices. If not, your BL40 will search for other Bluetooth enabled devices within range.
- 4 Choose the device to which you want to send the file to and touch **Select**.
- 5 Your file will be sent.


TIP! Check the progress bar to make sure your file has been sent.

To receive a file:

- 1 To receive files your Bluetooth must be set to **On**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.

- 3** You will see where the file has been saved and choose to **View** the file or **Use as wallpaper** (image file only). Files will usually be saved to the appropriate folder in My Files.

Changing your Bluetooth settings

- 1** From the home screen select  then scroll through **Bluetooth** in the Settings tab.

- 2** Touch .

Make changes to:

My device information - Enter a name for your BL40.

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

Remote USIM mode on -
Activate the remote USIM mode.

Supported services - Select how to use Bluetooth in association with different services.

Delete - Choose to delete the paired device lists.

Delete all - Choose to delete all the paired device lists.

Pairing with another Bluetooth device

By pairing your BL40 with another device, you can set up a passcode protected connection. This makes your pairing more secure.

- 1** Check that your Bluetooth is **On**.
You can change your visibility using the **Settings** menu.
- 2** Touch **New device** to search.
- 3** Your BL40 will search for Bluetooth devices. When the search is completed **Refresh** icon will appear on the screen.
- 4** Choose the device you want to pair with and enter a passcode, then touch **OK**.

Settings

- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check that your Bluetooth is **On**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.

Wi-Fi

Wireless Manager allows you to manage Internet connections per Wi-Fi (Wireless LAN) on your device. It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

NOTE: The BL40 supports WEP, WPA-PSK/2 encryption, and not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the LG Mobile website

**path: <http://www.lgmobile.com>
- select country – Products menu
- Manual & software menu**

This Feature allows you to update the firmware of your phone to the latest version and conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Accessories

There is a variety of accessories available for your mobile phone, which may be sold separately. You can select these optional items according to your personal communication requirements. Please consult your local dealer for availability. **(The items described below are supplied in the box)**

Charger



Battery



Stereo headset



Data cable and CD-ROM

To connect and synchronise your BL40 and PC. The CD-ROM also contains this User Guide in electronic format.



User Guide



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Technical data

General

Product name: BL40

System: GSM/ W-CDMA

Ambient Temperatures


Max: +55°C (discharging),
+45°C (charging)

Min: -10°C

DivX VOD registration

Generate a DivX VOD registration
code.

Please visit <<http://vod.divx.com/>>
for registration and technical
support.

Declaration of Conformity		LG Electronics
Supplier Details		
Name LG Electronics Inc.		
Address LG Electronics Inc. LG Twin Towers 20, Yeuksido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721		
Product Details		
Product Name GSM/W-CDMA Terminal Equipment		
Model Name BL40		
Trade Name LG		
CE 0168		
Applicable Standards Details		
RETE Directive 1999/5/EC EN 301 488-01 V1.6.1, EN 301 488-07 V1.3.1, EN 301 488-09 V1.3.1 EN 301 488-17 V1.2.1, EN 301 488-19 V1.2.1, EN 301 488-24 V1.4.1 EN 301 511 V9.2.2 EN 301 908-1 V2.2.1, EN 301 908-2 V3.2.1, EN 302 758 V1.7.1, EN 302 757-2 V1.3.1 EN 50360 2001/EN62209-1 2006 EN 62209-1 2001		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT) BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom Notified Body Identification Number : 0188		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives		
European Standard Center LG Electronics Logistics and Services B.V. Veluwezoom 15, 1327 AE Almere, The Netherlands Tel : +31 - 36 547 - 8640, Fax : +31 - 36 - 547 - 8794 e-mail : jacobs @ lge.com		
Name Seung-Hyeon JI / Director		Issued Date 21 Jul 2008
		Signature of representative

Trouble shooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure the USIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the Network Operator coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	Contact your Service centre.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New USIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

Message	Possible causes	Possible Solutions
Phone cannot be switched on	On/Off key not pressed long enough	Press the On/Off key down for at least two seconds.
	Battery empty	Keep charger attached for a longer time.
	Battery contacts dirty	Clean the contacts.
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Number not permitted	Battery defective	Replace battery.
	The Fixed dial number function is on.	Check settings.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.