



繁體中文

簡體中文

ENGLISH

USER GUIDE

LG-K350Y

有關本使用者指南

繁體中文

感謝選用 LG！使用產品前請仔細閱讀此用戶指南，以保安全及正確使用。

- 只可使用原裝 LG 配件。所提供的項目僅適用於此裝置，可能不兼容其他裝置。
- 由於使用觸控螢幕鍵盤，此裝置不適合視障人士使用。
- 說明以產品的預設設定為基礎。
- 本產品預載的應用程式需要更新及支援，並可能不再支援而無須事前通知。如對裝置預載的應用程式有任何疑問，請與 LG 服務中心聯絡。有關用戶自行安裝之應用程式，請與相關服務供應商聯絡。
- 修改裝置的操作系統或安裝非官方來源提供的軟件，可能導致裝置故障及資料損毀或遺失。此等行為違反 LG 授權協議，並導致保養失效。
- 一些內容和圖片視乎您地區、服務供應商、軟件版本或 OS 版本可能與您的裝置有所不同，並可能有所更改而不須事前通知。
- 於裝置中的軟件、音效、牆紙、圖像及其他媒體乃被授權作為有限度使用。如您抽取及使用這些項目作為商業用途，則可能已侵犯版權法。作為用戶，您對於已非法形式使用媒體附上全部責任。
- 如使用數據服務例如訊息、上傳、下載、自動同步或使用位置服務時，可能被收取額外費用。如要避免產生額外收費，請選擇符合所需的數據計劃。聯絡您的服務供應商以獲取額外詳情。

教學通知

 警告：	可能構成自身/他人傷害，或對裝置/其他財產造成損毀的情況。
 注意	通知或其他資訊。

目錄

安全及有效使用準則.....	5	鎖定及解鎖裝置	26
特別功能.....	11	KnockON.....	26
擷取+	12	Knock Code	27
檢視已儲存的備忘錄	12	更換螢幕鎖定方式	27
手勢拍攝	13	Smart Lock.....	27
以手勢拍攝	13	桌面	28
基本功能.....	14	熟悉桌面運作	28
配件	15	返回最近使用的應用程式	29
設計外觀	16	自訂桌面	30
開啟和關閉手機電源	17	通知面板	31
安裝智能卡及電池	18	擷取螢幕截圖	33
充電	20	螢幕鍵盤	33
充分利用電池壽命	21	使用鍵盤與輸入文字	33
插入記憶卡	21	輸入特殊字元	34
取出記憶卡	22	在電腦與裝置之間傳送與接收 數據	34
觸控螢幕提示	23	使用 USB 連接以傳輸數據	34
點按或觸控	23	LG Bridge	35
點按並按住	23	LG Bridge 功能	35
拖拉	24	下載 LG Bridge 軟件	35
掃動或滑動	24	應用程式	36
點按兩下	24	安裝或解除安裝應用程式	37
多點觸控	25	打開 Play Store 應用程式	37
Google 帳號設定	25	打開載有應用程式詳情的畫面	37
建立您的 Google 帳戶	25	解除安裝應用程式	37
登入您的 Google 帳戶	26	通話功能	37
		撥打電話	37
		從通訊錄中撥打電話	38
		接聽來電和拒接來電	38

通話期間撥打第二個電話	38	時鐘	50
檢視通話記錄	38	鬧鐘	50
變更您的通話設定	39	計時器	50
通訊錄	39	世界時鐘	51
搜尋聯絡人	39	秒錶	51
新增通訊錄	39	計算機	51
最愛	40	日曆	51
建立群組	40	工作	52
收發訊息	40	語音備忘錄	52
發送訊息	41	錄製聲音或語音	52
查看對話	41	下載	52
更改訊息設定	41	FM收音機	52
相機	41	LG Backup	53
拍攝相片	41	有關備份以及復原裝置的資料	53
取景器的相機選項	42	備份裝置的資料	54
完成拍照後	43	Google 應用程式	54
錄製影片	44	設定	56
錄製影片後	44	存取設定功能表	57
媒體匣	45	網絡設定	57
檢視圖片	45	Wi-Fi	57
編輯相片	45	Wi-Fi Direct	58
設定牆紙	45	藍牙	58
放大及縮小	46	流動數據	59
播放影片	46	通話	59
刪除相片/影片	47	NFC	60
電子郵件	47	Android Beam	60
新增帳戶	47	列印	60
處理帳號資料夾	47	USB 網路連線	61
編寫及發送電子郵件	48	Wi-Fi 热點	61
更改電子郵件一般設定	48	藍牙數據連線	61
移除帳號	48		
音樂	48		
播放歌曲	49		
音樂播放器選項	49		

飛航模式	61	附錄	71
流動網絡	61	手機的軟件更新	72
VPN	61	常見問題解答	73
聲音和通知設定	62	防盜指南	75
更多設定	62	更多資訊	76
顯示設定	63	開放來源程式碼軟件	76
桌面	63	商標	76
鎖定螢幕	63	確認聲明	76
主頁觸摸按鈕	64		
更多顯示設定	64		
一般設定	64		
語言及鍵盤	64		
位置	65		
帳戶及同步處理	65		
協助工具	66		
快捷鍵	67		
Google	67		
安全	67		
日期及時間	68		
內存空間與 USB	68		
電池與省電	69		
記憶體	69		
應用程式	69		
預設訊息應用程式	69		
備份與重設	70		
關於手機	70		

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

如果發生故障，您裝置中內置的軟件工具會建立一份故障日誌。此工具只會收集與故障相關的數據，例如訊號強度、通話時突然斷線的手機 ID 位置和載入的應用程式。此日誌只用作協助確定發生故障的原因。這些日誌會被加密，如您需要退回裝置進行維修，只有已授權的 LG 維修中心才可存取其內容。

無線電波暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。

本型號手機 LG-K350Y 之設計符合適用的無線電波暴露安全要求。這些要求乃基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的量度單位叫作特定吸收比率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2 W/kg。
- 本型號手機經測試後在耳邊使用的最高 SAR 值為 0.523 W/kg (10 克)，佩戴在身上時的最高 SAR 值為 1.420 W/kg (10 克)。
- 在將手機置於耳邊正常使用或使其距身體至少 5 毫米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持 5 毫米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，直到傳輸完成為止。

產品保護及維護

- 請僅使用經認可適用於此特定型號手機的原裝 LG 電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。
- 一些內容和圖片可能與您的裝置有所不同，並可能有所更改而不須事前通知。
- 請勿拆開此裝置。如手機需要維修，請由合格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能全新的或是經過翻新的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。

- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的手機是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理手機時，請謹慎使用。
- 如果手機受潮，請立即拔下手機電源線並立即擦乾。請勿嘗試用烤爐、微波爐或風筒等外部加熱裝置加快變乾的過程。
- 手機如果潮溼，液體會改變手機內產品標籤的顏色。因手機暴露於液體而造成的損壞並不受保養條款覆蓋。

有效地操作手機

電子裝置

所有手機均可能受訊號干擾，這可能會影響手機效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。
- 如可能，請在介乎 0°C 與 40°C 的溫度中使用手機。將手機暴露在極低或極高的溫度下可能會導致手機損壞、故障或甚至爆炸。

道路安全

檢查您駕駛時所在地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。

- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在路邊時特別重要。

避免損害您的聽覺



避免聽力受損，請不要長時間在高音量下聆聽。

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

注意

- 耳機的過大聲音壓力可能導致聽覺受損。

玻璃部件

您的手機的部分部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在加油站使用手機。
- 請勿在燃料或化學物質附近使用手機。
- 請勿在放置了手機及配件的汽車車廂運送或擺放易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。 手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急通話

某些流動網絡可能無法使用緊急通話。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池或造成電池短路。
- 請保持電池的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組在必須更換前可重新充電數百次。
- 如果電池很久沒有使用，則需重新充電，以擴展其用量。

- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將手機置於過熱或過冷的地方，因為這可能降低您的手機性能。
- 如果以錯誤方式放置電池，可能引起爆炸。請根據相關指示處理廢棄電池。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。
- 請勿讓如動物牙齒、指甲等尖銳物與電池發生接觸。這可能會引起火災。

特別功能

擷取+

使用擷取+ 功能在通話期間輕鬆快捷地建立備忘錄，還可附上已儲存圖片或目前畫面。

- 1 點按並向下滑動狀態欄，然後點按 。如無法看見 ，點按 > 勾選 擷取+ 啟用。
- 2 使用下列選項建立備忘錄。

	點按以儲存您建立的備忘錄。
	點按以復原至最近期執行動作。
	點按以重新執行最近期已刪除的動作。
	點按以在備忘錄插入文字。
	點按以選擇筆型及顏色。
	點按以使用橡皮擦擦除備忘錄的筆跡。
	點按以裁剪備忘錄的影像。
	點按選擇分享或紙張樣式的方式。
	點按以隱藏或顯示工具列。

注意

- 使用擷取+ 時，請用指尖觸控，而非指甲。

- 3 點按 以儲存現有備忘錄至 或 。

檢視已儲存的備忘錄

點按 > > 然後選擇 Capture+ 相簿。

手勢拍攝

在手勢自拍中，您可在前置相機鏡頭前做手勢來拍攝相片。


以手勢拍攝

有兩個方法使用手勢拍攝功能。

- 如要拍照，打開手掌，舉起手直至前鏡頭偵測，而且螢幕上顯示方框為止。然後握拳頭啓動計時器，您會有時間準備拍照。

或者

- 如要拍照，合起拳頭，舉起手直至前鏡頭偵測，而且螢幕上顯示方框為止。然後打開手掌，啓動計時器，您會有時間準備好拍照。

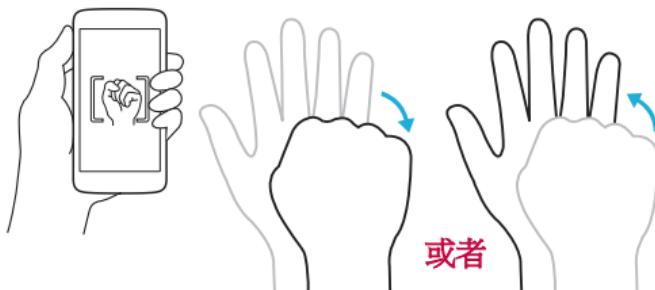

基本功能

配件



這些配件可搭配裝置使用。

- 旅行充電器
- 快速入門指南
- 立體聲耳機
- USB 線
- 電池

注意

- (上列配件為可選購配件。)
- 只可使用原裝 LG 配件。所提供的項目僅適用於此裝置，可能不兼容其他裝置。
- 裝置隨附的配件及所有可用配件視乎不同地區或服務供應商而可能有所不同。

設計外觀

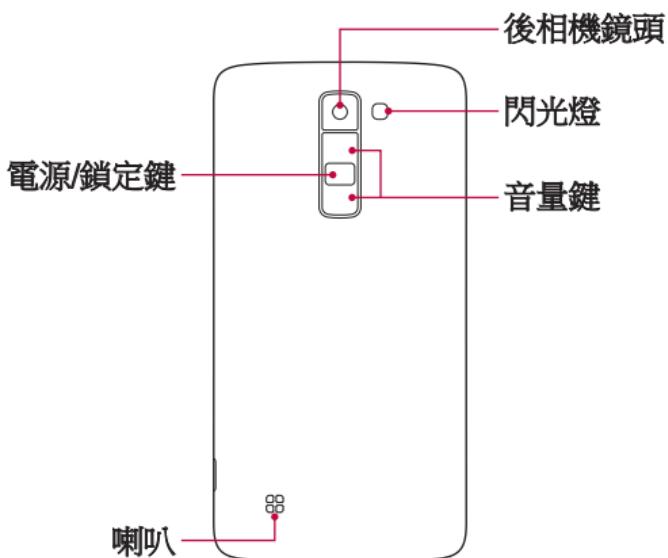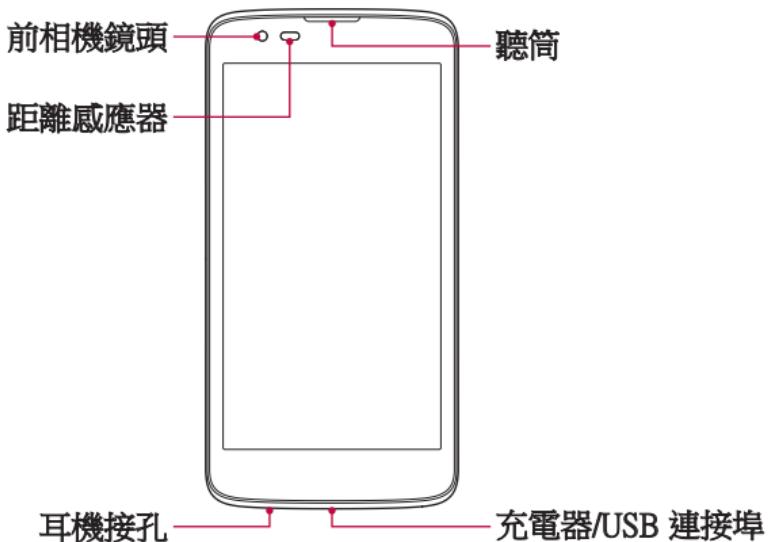

電源/鎖定鍵	<ul style="list-style-type: none"> 長按此鍵以開啟或關閉手機電源。 短按以開啟/關閉螢幕。
音量鍵	<p>螢幕關閉時</p> <ul style="list-style-type: none"> 按音量提升鍵兩次即可啟動攝取+。 按音量降低鍵兩次即可啟動相機。 <p>從桌面</p> <ul style="list-style-type: none"> 控制鈴聲。 收聽音樂/觀看影片時控制音量。 <p>進行通話時：</p> <ul style="list-style-type: none"> 可控制音量。

注意：距離感應器

- 當接收及撥出通話時，距離感應器會感應手機接近您的耳朵，並自動關閉畫面背光照明及鎖上觸控螢幕。這將延長電池壽命並且防止通話時不小心啟動觸控畫面。

警告：

- 若將較重物體置於手機上，或坐在手機上，螢幕和觸控畫面功能可能會受到損壞。切勿用螢幕保護貼或任何其他保護貼遮蓋距離感應器。這可能會導致感應器出現故障。

開啟和關閉手機電源

開啟手機電源

按住手機背部的**電源/鎖定鍵**幾秒鐘直至螢幕開啓。

關閉裝置

- 按住手機背部的**電源/鎖定鍵**直至手機選項功能表出現。
- 如確認要關機請按**關機 > 確定**。

安裝智能卡及電池

插入由裝置服務供應商提供的 SIM 卡和隨附的電池。


⚠ 警告：

- 切勿將記憶卡插入至 SIM 卡插槽。如記憶卡卡在 SIM 卡槽，請攜帶裝置至 LG 服務中心以移除記憶卡。


💡 注意

- 只有 Nano SIM 卡可讓裝置正常運作。


1 要取下背蓋，請用一隻手緊握裝置。再用另一隻手，如下圖所示用姆指打開背蓋。

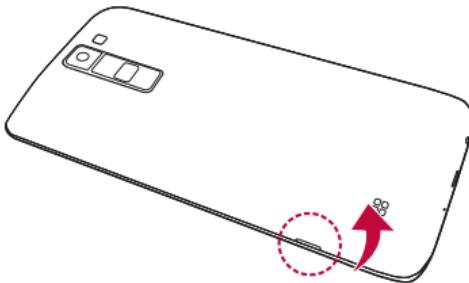


2 如圖所示將 SIM 卡推入 SIM 卡插槽。確保卡片的金屬接觸面朝下。

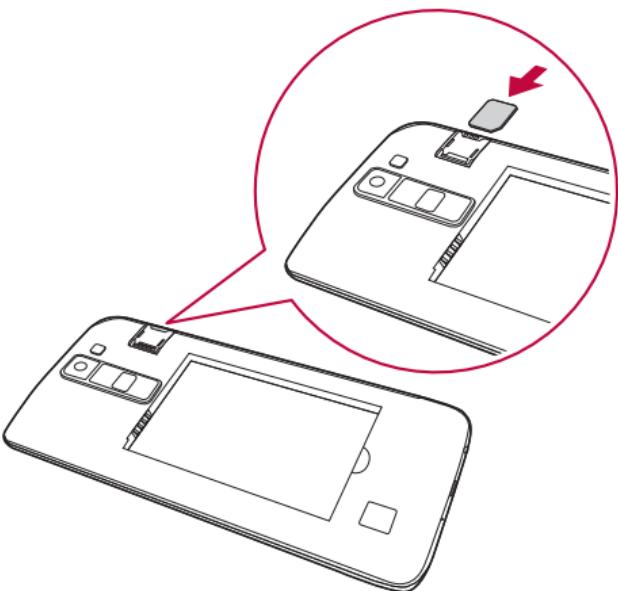

3 插入電池。

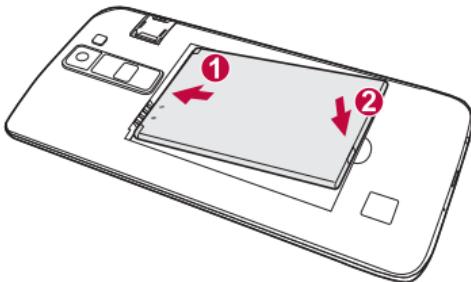

4 如要合上背蓋，將背蓋對準電池盒，並按下背蓋直到卡緊為止。

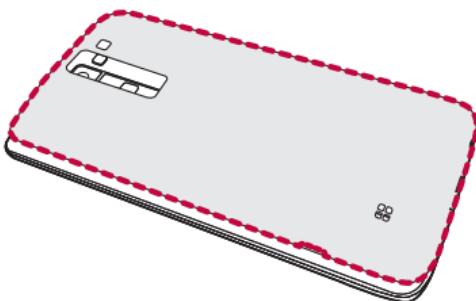


充電

首次使用前請為手機充電。請使用充電器為電池充電。亦可使用 USB 纜線將裝置連接至電腦，電腦就可為電池充電。

⚠ 警告：

- 只使用 LG 認可的充電器、電池及纜線。如您使用未經認可的充電器、電池或纜線，可能會導致電池充電延遲，又或會導致電池爆炸或裝置損壞，這並不包括於保養範圍。

充電器接頭位於裝置底部。插入充電器，並將其連接至電源插座。

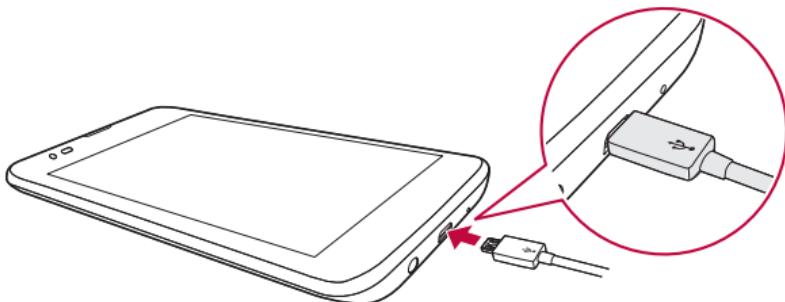



注意

- 請勿於充電時打開背蓋。

充分利用電池壽命

關閉無須持續在背景運行的功能，便能延長電池電量。您可監控應用程式及系統資源的電池電量消耗。

延長裝置電池壽命

- 不使用無線電通訊時將其關閉。不使用 Wi-Fi、Bluetooth® 或 GPS 時，請將其關閉。
- 降低螢幕亮度，並設定較短的螢幕逾時。
- 關閉 Gmail、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的部分應用程式可能會耗用電池壽命。
- 使用已下載的應用程式期間，請檢查電池電量。

插入記憶卡

您的裝置支援容量最大至 32GB microSD 卡。視乎記憶卡製造商及種類而定，部份記憶卡可能未能與裝置兼容。



警告：


- 部份記憶卡可能未能與裝置完全兼容。使用不兼容的記憶卡可能對裝置或記憶卡造成損毀，或對儲存的資料亦可能造成損壞。



注意

- 過於頻繁地寫入及清除數據會縮短記憶卡的壽命。

- 1 取下背蓋。
- 2 插入記憶卡時，請將金屬接觸面朝下。

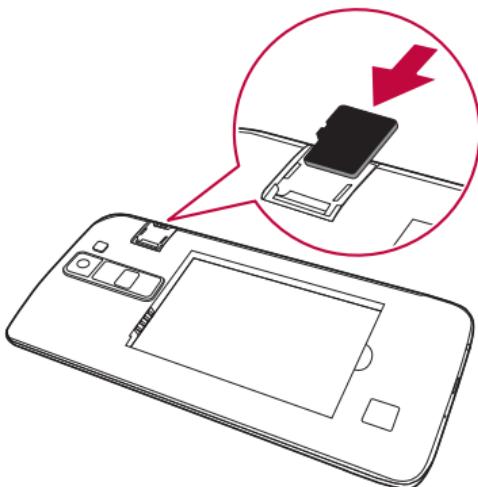

- 3 重新蓋上背蓋。

取出記憶卡

移除記憶卡前請先卸載，以保安全 >

- 1 點按 > > > 一般標籤 > 內存空間與 USB > .
- 2 取下背蓋，然後取出記憶卡。

警告：

- 切勿在傳輸或存取資料時取出記憶卡。此行為會令數據遺失或受損，或對記憶卡或手機造成損害。LG 對由於不正確使用記憶卡而造成的損失（包括資料遺失）概不負責。

觸控螢幕提示


以下為如何於裝置上瀏覽的一些提示。

注意

- 請勿過份用力按壓，只需輕力但確切地點按，觸控螢幕已能感應。
- 使用指尖點按所需選項。請注意不要點按其他按鍵。


點按或觸控

點按或觸控以啟動您選擇的項目、連結、捷徑或螢幕鍵盤上的字母。

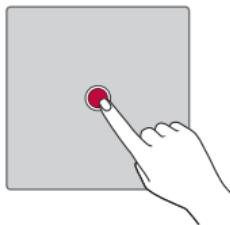


點按並按住

用手指按住畫面上的項目，直至有其他動作產生才鬆開手指。

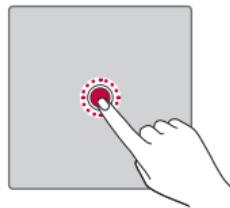


拖拉

觸摸並按住項目片刻，然後於螢幕上移動手指但不抬起，直至到達目標位置。您可在桌面拖放項目改變其放置。

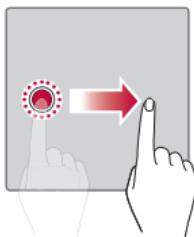


掃動或滑動

要掃動或滑動，請快速移動您的手指以橫跨螢幕表面，並於首次接觸螢幕時不停止動作（否則會變成拖拉項目）。

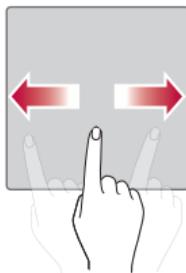


點按兩下

輕觸兩下即可放大圖片或地圖。

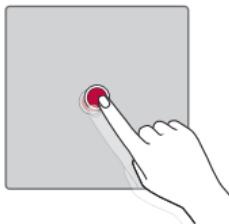

多點觸控

使用瀏覽器或地圖，或瀏覽圖片時，捏緊或散開食指及拇指以放大或縮小。

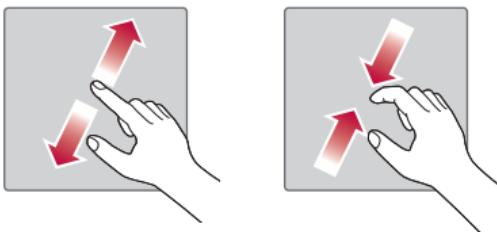

Google 帳號設定

當您第一次在手機上開啟 Google 應用程式，您需要使用您現有的 Google 帳戶登入。如您沒有 Google 帳戶，手機會提示您建立帳戶。

建立您的 Google 帳戶

- 1 點按 > > > 一般標籤 > 帳戶及同步處理。
- 2 點按 新增帳號 > Google > 或建立新帳戶。
- 3 輸入您的姓氏及名字，然後點按 繼續。
- 4 輸入使用者名稱，然後點按 繼續。您的裝置將會連接 Google 伺服器，並檢查使用者名稱是否可用。
- 5 輸入密碼，然後點按 繼續。
- 6 然後按照指示，輸入與帳戶有關的必填及可填資訊。請等待伺服器建立您的帳戶。

登入您的 Google 帳戶

- 1 點按 > > > 一般標籤 > 帳戶及同步處理。
- 2 點按 新增帳號 > Google。
- 3 輸入您的電子郵件地址並點按 繼續。
- 4 輸入密碼，然後點按 繼續。
- 5 登入後，您可使用 Gmail 和 Google 服務。

登入後，手機將會與您的 Google 服務同步，例如 Gmail、通訊錄及 Google 日曆。您亦可以使用地圖、從 Play Store 下載應用程式、將設定備份至 Google 伺服器，以及在手機上使用其他 Google 服務。

鎖定及解鎖裝置

按下電源/鎖定鍵以關閉螢幕，並把裝置轉為鎖定模式。若在指定時間內未使用手機，裝置將自動鎖定。這有助防止意外按鍵，並可節省電池電力。

如要解鎖裝置，按下電源/鎖定鍵，並向任何方向滑動螢幕。

KnockON

KnockON 功能可讓您點按兩下螢幕，輕鬆開啟或關閉螢幕。

開啟螢幕

- 1 快速點按螢幕中間兩下即可開啟螢幕。
- 2 解鎖螢幕或存取任何可用的捷徑或小工具。

關閉螢幕

- 1 點按桌面空白位置或狀態欄兩下。
- 2 螢幕便會關閉。

注意

- 為了更有效地進行辨認，請點按螢幕中心，而非螢幕頂部或底部。
- 使用指尖而非指甲點按螢幕以開啟或關閉。

Knock Code

Knock Code 功能讓您透過螢幕上一系列敲擊建立您的解除鎖定碼。螢幕關閉時，您可在螢幕點按相同次序以存取桌面。

注意

- 如您輸入錯誤的 Knock Code 6 次，系統會強制將您帶到 Google 帳戶登入/後備 PIN。

設定 Knock Code 功能

- 點按  >  >  > 顯示標籤 > 鎖定螢幕 > 選擇螢幕鎖定 > Knock Code。
- 依自己喜好的圖形點按方格，以設定您的 Knock Code。您的 Knock Code 圖形可以是 6 至 8 次點按。

使用 Knock Code 解除鎖定螢幕

當螢幕關閉時，您可以點按已設定的 Knock Code 圖形來解除鎖定螢幕。

更換螢幕鎖定方式

您可更換螢幕鎖定方式，以防止其他人存取您的個人資訊。

- 點按  >  >  > 顯示標籤 > 鎖定螢幕 > 選擇螢幕鎖定。
- 選擇所需的螢幕鎖定：無、揮動、Knock Code、圖形、PIN 碼或密碼。

注意

- 請於設定解鎖圖形前建立 Google 帳戶，並緊記您於新增圖形鎖時所設定的備份 PIN 碼。

Smart Lock

您可使用Smart Lock以輕鬆解鎖手機。您可設定為在有可信的藍牙手機連接時，位於熟悉的地點時（例如家中或公司），或手機可辨認您的臉時將手機保持解鎖。

設定Smart Lock功能

- 1 點按 > > > **鎖定螢幕** > Smart Lock。
- 2 在您新增任何信任的裝置、信任的位置或信任的臉孔前，您需要建立螢幕鎖定（Knock Code、圖形、PIN 碼或密碼）。

桌面

主桌面是眾多應用程式與功能的起點。讓您可新增例如應用程式捷徑、Google 小工具等項目，以便即時存取資訊及應用程式。此為預設桌布，點按 即可從任何功能表中存取。

熟悉桌面運作



- ① **狀態欄** - 顯示手機狀態的資料，包括時間、訊號強度、電池狀態及通知圖示。
- ② **小工具** - 小工具是自有的應用程式，包含了可透過應用程式列表或桌面存取的應用程式。與捷徑不同，小工具是可於螢幕上運作的應用程式。
- ③ **應用程式圖示** - 點按圖示（應用程式、資料夾等）以開啟並使用。
- ④ **位置指示器** - 指出您正檢視的桌面桌布。

⑤ **快速按鍵區** - 在任何桌面桌布提供一觸式功能存取。

⑥ **主頁觸控按鈕**

◁ 返回按鈕	返回前一畫面。同時可關閉彈出的項目（如功能表、對話方塊和螢幕鍵盤）。
○ 主頁按鈕	從任何畫面返回主頁。
□ 概覽按鈕	顯示最近使用的應用程式。如按住此鍵，會顯示可用選項的功能表。

檢視其他桌面面板

作業系統提供多個桌面桌布，讓您有更多空間新增圖示、小工具等。

- 將手指在桌面向左或右滑動以轉到更多桌面桌布。

返回最近使用的應用程式

有了 Android，多任務處理變得簡易，您可以同時執行多個應用程式。開啟新的應用程式時，您無需退出原來的應用程式。使用及切換數個開啟中的應用程式。

Android 會管理每一個應用程式，根據需要停止及啟動程式，確保閒置的應用程式不會耗用不必要的資源。

- 1 點按 □。將會顯示最近使用的應用程式列表。
- 2 點按要存取的應用程式。此舉不會停止之前的應用程式於背景上執行。確保於使用完畢後點按以離開應用程式。
 - 若要從最近使用的應用程式列表移除應用程式，請於應用程式預覽向左或向右滑動應用程式。若要清除所有應用程式，請點按**全部清除**。

自訂桌面

您可以新增應用程式及小工具和更換牆紙，以自訂您的桌面。

於桌面新增項目

- 1 或點按並按住桌面的空白部分。
- 2 於新增模式功能表中，選擇您想新增的項目。您將於桌面上看見已新增的項目。
- 3 將其拖拉至理想的位置，然後放開手指。

注意

- 要將應用程式圖示從應用程式功能表新增至桌面，按住您想新增的應用程式。

於桌面移除項目

在桌面按住要移除的圖示 > 將圖示拖放至 。

新增應用程式至快速按鍵區

從應用程式畫面或桌面上，按住應用程式圖示並拖曳至快速按鍵區。然後把它放在想要的位置。

從快速按鍵區移除應用程式

按住所需快速按鍵，並拖曳至 。

注意

- 應用程式按鍵  無法移除。

在桌面上自訂應用程式圖示



- 1 按住應用程式圖示，直至它從目前位置解除鎖定，然後放開手指。編輯圖示  將會顯示於應用程式的右上角。
- 2 再次點按應用程式圖示，並選擇所需的圖示設計及大小。
- 3 點按**確定**以儲存變更。

通知面板

通知提醒您收到新訊息、日曆事件和鬧鐘，以及進行中事項（如正在通話）等。

開啟通知面板

從狀態欄向下掃動以開啟通知面板。要關閉通知面板，向上撥動畫面或點按 。

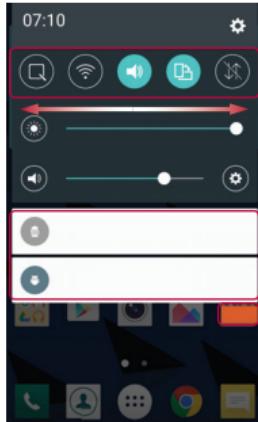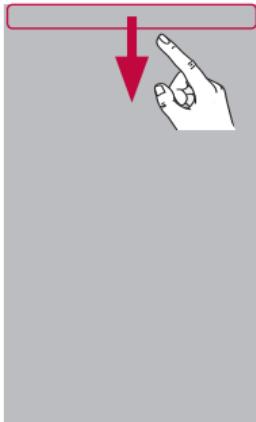

- ① 點按每個快速設定鍵以切換開啟/關閉。按住所需按鍵，以直接存取該功能的設定功能表。要查看更多切換按鍵，向左或右方滑動。點按  以移除、新增或重新整理快速設定鍵。
- ② 連同簡單說明，列出目前的通知。點按通知以進行檢視。
- ③ 點按以清除所有通知。

收到通知時，其圖示會顯示於畫面頂部。等候通知的圖示會顯示於左方，而 Wi-Fi 或電力等的系統圖示則顯示於右方。

狀態欄上的指示圖示

於畫面頂部的狀態欄上顯示的指示圖示，報告未接來電、新訊息、日曆事件、裝置狀態等。



顯示於畫面頂部的圖示提供有關裝置狀態的資訊。以下圖表所列出的為最常用的圖示。

圖示	說明	圖示	說明
	沒有插入 SIM 卡		目前正在播放歌曲
	沒有可用的網絡訊號		已開啟靜音模式
	已開啟飛航模式		已開啟震動模式
	已連接至 Wi-Fi 網絡		電池已完全充電
	已連接有線耳機		電池充電中
	正在通話		本手機須透過 USB 線連接至電腦
	未接來電		數據下載
	藍牙開啟		數據上傳
	系統警告		GPS 開啟
	鬧鐘已設定		正在同步資料
	新語音留言		選取輸入法
	新文字或多媒體訊息		Wi-Fi 热點已啟動



注意

- 狀態欄上的圖示位置根據功能或服務可能有所不同。
- 可用選項視乎不同地區或服務供應商而可能有所不同。

擷取螢幕截圖

同時按住**音量降低鍵及電源/鎖定鍵**2秒鐘以擷取目前畫面的截圖。

若要檢視擷取的影像，點按 > > > Screenshots。

螢幕鍵盤

您可以使用螢幕鍵盤輸入文字。當您點選輸入文字的欄位時，螢幕鍵盤會於螢幕上顯示。

使用鍵盤與輸入文字

圖示	說明
	點按一下以大寫您輸入的下一個字母。點按兩下即可大寫所有字母。
	點按以前往鍵盤設定。按住以語音方式輸入文字或存取剪輯工作列。
	點按以輸入一個空格。
	點按以新建一行。
	點按以刪除前一字母。

輸入特殊字元

螢幕鍵盤允許您輸入特殊字元。

舉例，如輸入「á」，按住「a」按鈕，直至視窗彈出並顯示相關特殊字元。您無需鬆開手指，只需拖曳手指到想要的特殊字元即可。在字元反白顯示後，鬆開手指。

注意

- 注意：鍵右上角的符號表示有其他可用的字元。

在電腦與裝置之間傳送與接收數據

您可在電腦與裝置之間複製或移除數據。

使用 USB 連接以傳輸數據

- 1 使用隨手機隨附的 USB 線，將手機連接至電腦。
- 2 開啟通知面板，點按現有的連接類型，並選擇**媒體裝置 (MTP)**。
- 3 您的電腦會出現彈出式視窗，讓您傳送想要的數據。

注意

- 您需要在電腦上安裝 LG Android Platform Driver 以偵測手機。
- 檢查使用**媒體裝置 (MTP)** 的條件。

項目	要求
OS	Microsoft Windows XP SP3、Vista 或更高版本
Window Media Player 版本	Windows Media Player 10 或更高版本

LG Bridge

LG Bridge 讓您在電腦上輕鬆管理 LG 裝置內的音樂、影片和文件等內容。您同時可將聯絡資料及影像備份至您的電腦，或更新裝置的軟體版本。

注意

- 安裝及開啟程式後，您可在說明功能表中查看使用 LG Bridge 的詳細指示。
- 視乎裝置而定，支援的功能可能有異。
- 相關的 LG USB 驅動程式是連接 LG 手機和電腦的必要程式。安裝 LG Bridge 時會自動安裝。

LG Bridge 功能

- 透過 WiFi 或數據在電腦上管理內容。
- 透過 USB 備份和還原裝置的數據。
- 透過 USB 在電腦上更新裝置的軟體版本。

下載 LG Bridge 軟件

- 1 瀏覽 www.lg.com。
- 2 點按搜尋按鈕並輸入型號名稱以便搜尋。
- 3 選擇型號資訊，並點按產品支援。
- 4 選擇下載標籤下的 PC SYNC，以下載 Windows 或 Mac OS 版本的 LG Bridge。

應用程式

安裝或解除安裝應用程式

Play Store 讓您瀏覽並搜尋免費及付費應用程式。

打開 Play Store 應用程式

點按 > > .

打開載有應用程式詳情的畫面

您可隨時在 Play Store 內瀏覽時，請按以打開載有詳情的畫面。應用詳情畫面載有說明、評級、評論及應用程式的相關資料。您可在此畫面下載、解除安裝、為應用程式評分等。

解除安裝應用程式：

- 1 點按 > > > 一般標籤 > 應用程式。
- 2 當所有應用程式出現後，捲動並選擇您想解除安裝的應用程式。
- 3 點按解除安裝。

通話功能

跨地區也能享受清晰通話音質。

撥打電話

- 1 點按 > .
- 2 使用鍵盤輸入號碼。要刪除數字，點按 .
- 3 輸入想要撥打的號碼後，點按 以打電話。
- 4 要結束通話，點按 .

注意

- 要在撥打國際電話時輸入「+」，點按並按住 .

從通訊錄中撥打電話

- 1 點按 > .
- 2 滾動通訊錄以尋找。您也可在搜尋一欄輸入聯絡人的名字，或捲動螢幕右面的字母列尋找。
- 3 在顯示的列表中點按 要撥號的聯絡人。

接聽來電和拒接來電

- 向任何方向滑動 以接聽來電。
- 向任何方向滑動 以拒絕接聽來電。

注意

- 向 掃動可拒絕接聽來電並向致電者發送訊息。

通話期間撥打第二個電話

- 1 進行第一個通話時，點按 > **新增通話**，然後輸入號碼。
- 2 點按 。兩個通話均會在通話螢幕中顯示。您的原來通話會被鎖定及保留。
- 3 點按顯示的號碼，以在通話之間切換。或點按 以開始電話會議。
- 4 要結束所有通話，點按 。

注意

- 您撥打的每一個通話均需收費。

檢視通話記錄

- 1 點按 > > **通話記錄**標籤。
- 2 檢視所有已撥、已接和未接來電的清單。

注意

- 點按任何通話記錄項目，檢視通話的日期和持續時間。
- 點按 > **刪除全部**以刪除所有記錄項目。

變更您的通話設定

您可自行設置通話設定，例如來電轉接以及其他由供應商提供的特別功能。

- 1 點按  > 。
- 2 點按  > **通話設定**並設置所需選項。

通訊錄

您可在手機上新增通訊錄，並與 Google 帳戶或其他帳戶內的通訊錄同步（須支援通訊錄同步）。

搜尋聯絡人

- 1 點按  > 。
- 2 點按**搜尋聯絡人**，使用鍵盤輸入該聯絡人姓名。相配結果會在輸入文字時顯示。

新增通訊錄

- 1 點按  > 。
- 2 輸入新聯絡人號碼。
- 3 點選  > **新增至通訊錄** > **新增通訊錄**。
- 4 如要為新聯絡人新增圖片，點選圖片圖示。選擇**拍照**或**從媒體匣中選取**。
- 5 輸入所需的聯絡人資料。
- 6 點按**儲存**。

最愛

您可將常用的聯絡人分類為您的最愛。

新增聯絡人至您的最愛

- 1 點按  > .
- 2 點按聯絡人以檢視詳情。
- 3 點按螢幕右上角的星號。星號變為黃色。

從最愛清單移除聯絡人

- 1 點按  >  > **最愛**標籤。
- 2 選擇一個聯絡人以查看詳情。
- 3 點按螢幕右上角的黃色星號。星號會變為原來的顏色，聯絡人將從我的最愛移除。

建立群組

- 1 點按  >  > **群組**標籤。
- 2 點按  > **新群組**。
- 3 為新群組輸入一個名稱。您可為新建立的群組設定獨有鈴聲。
- 4 點按**新增會員**將聯絡人新增至群組，然後點按**新增**。
- 5 點按**儲存**以儲存群組。

注意

- 若要刪除某群組，指定給該群組的通訊錄將不會遺失。他們仍保留在通訊錄中。

收發訊息

手機將文字和多媒體訊息結合至簡單易用的功能表中。

注意

- 每一則文字訊息都可能需要收費。詳情請向您的服務供應商查詢。

發送訊息

- 1 點按 > > .
- 2 點按 ，然後從聯絡人清單中選擇一個或多個收件者。

或者

在收件者一欄中輸入聯絡人名稱或聯絡人號碼。當您輸入該聯絡人名稱時，會顯示匹配的聯絡人。您可以點按建議收件者，並增加多於一位聯絡人。

- 3 點按文字欄位，開始輸入訊息。
- 4 點按 以開啟選項功能表。從任何可用的選項中選擇。
- 5 點按 將您想分享的檔案附加至訊息。
- 6 點按 發送以發送訊息。

查看對話

與另一方傳送的訊息會按時間順序顯示，讓您更清楚看到和尋找您的對話。

更改訊息設定

您手機中的訊息設定預設為即時傳送訊息。您可按偏好更改這些設定。

- 點按 > > > 設定。

相機


您可使用相機和攝影機，拍攝並分享相片和影片。

- 點按 > 。

拍攝相片

- 1 在螢幕上對準拍攝對象以進行取景。
- 2 拍攝對象四周的正方形表示相機已對焦。
- 3 點按 以拍攝相片。您的相片將自動儲存至媒體匣。

取景器的相機選項

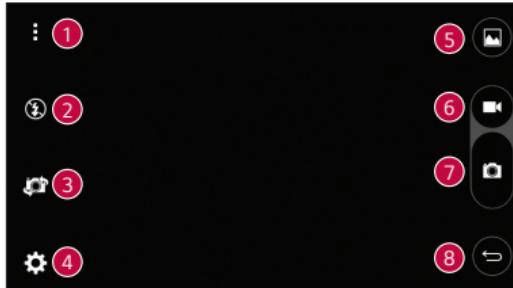

1	⋮	點按隱藏/顯示取景器的相機選項。
2	⚡	點按以管理相機的閃光燈。
3	📸	點按以在前置/後置鏡頭之間切換拍攝。
4	⚙️	點按以開啟相機設定功能表。
5	🖼️	點按以觀看您最後拍攝的相片或影片。
6	🎥	點按以開始錄影。
7	📷	點按以拍攝相片。
8	⬅️	點按以離開相機。

💡 注意

- 請確保拍照前以超細纖維布清潔鏡頭護蓋。有手指污跡的鏡頭護蓋可能令模糊的相片出現「暈圈」效果。

使用進階設定

在相機取景器，點按  以顯示進階選項。點按每個圖示以調整下列相機設定。

	點按以設定相片比例及影片品質。
	點按以透過語音指令啟動相機快門。開啟後，您可說「Cheese」、「Smile」、「LG」等以拍攝相片。
	點按以設定您的相機計時器。此功能最適合自拍相片或影片時使用。
	透過顯示格線協助對齊，以拍攝較佳的相片及錄製較佳的影片。
	設定相片及影片的儲存位置。選擇 IN（內置記憶體）或 SD（記憶卡）。此功能表只會在已插入 SD 卡時顯示。
	點按以了解功能如何操作。此圖示會向您提供說明指南。

完成拍照後

點按螢幕的圖像縮圖以檢視您最後拍攝的相片。

	點選以編輯相片。
	點按以立即拍攝新相片。
	點按以開啟可用的分享選項。
	點按以刪除相片。
	點按以存取額外選項。
	點按以新增相片至您的最愛。

錄製影片

- 1 點按  >  > .
- 2 在螢幕上對準拍攝對象以進行取景。
- 3 點按  以開始錄製影片。錄影長度將顯示於螢幕上方。

注意

- 於錄製影片期間可點按  以拍攝照片。
- 4 點按  以暫停錄製影片。您可再次點按  以恢復錄製影片。
或者
點按  以停止錄影。您的影片將自動儲存至媒體匣。

錄製影片後

點按螢幕的圖像縮圖以檢視您最後錄製的影片。

	點按以立即拍攝另一段影片。
	點按以開啟可用的分享選項。
	點按以刪除影片。
	點按以存取額外選項。
	點按以新增影片至您的最愛。

媒體匣

媒體匣應用程式會顯示您儲存的相片及影片，包括您使用相機應用程式拍攝的相片或影片，以及您於網上或其他位置下載的相片或影片。

- 1 點按 > > .
- 2 點按相簿以開啟及檢視內容。相簿的相片及影片按時序顯示。
- 3 點按相簿相片以檢視。

注意

- ・視乎安裝的軟件而定，某些檔案格式並不支援。
- ・部分檔案可能因為編碼而無法正常顯示。
- ・如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。

檢視圖片

媒體匣以資料夾形式顯示您的圖片。當其他應用程式（如電子郵件）儲存圖片時，下載資料夾會自動建立以存放該圖片。同樣地，當擷取螢幕截圖時，會自動建立螢幕截圖資料夾。

圖片按建立日期顯示。選擇圖片以進行全螢幕檢視。向左或右捲動以檢視下一個或上一個圖像。

編輯相片

觀看相片時，點按 .

設定牆紙

檢視相片時，點按 > **將影像設定為**以將圖片設定為牆紙或通訊錄相片。

放大及縮小

使用以下方法以放大圖像：

- 於任何位置點按兩次以放大。
- 在圖片的任何一處張開兩隻手指以放大圖片。捏緊或點按圖片兩次以縮小。

播放影片

1 點按 > > 。

2 選擇要收看的影片。

影片選項



1		點按以暫停/恢復影片播放。
2		按住以3秒鐘快進。點按以執行10秒鐘快進。
3		觸控並按住以3秒鐘倒退。 點按以執行10秒鐘倒退。
4		點按以調整影片音量。
5		點按以鎖定/解除螢幕。
6		點按以存取額外選項。



注意

- ・播放影片時，向上或向下滑動螢幕右側以調整音量。
- ・播放影片時，向上或向下滑動螢幕左側以調整亮度。
- ・播放影片時，從左到右（或相反）滑動手指以快進或倒退。

刪除相片/影片

使用以下方法：

- ・在資料夾中點按 ，選擇相片/影片，然後點按 **刪除**。
- ・觀看相片時，點按 。

電子郵件

您可以使用電子郵件應用程式讀取 Gmail 以外供應商的電子郵件。電子郵件應用程式支援以下帳戶類型：POP3、IMAP 及 Microsoft Exchange（企業使用者適用）及其他帳戶。

- ・點按 > > .

新增帳戶

當您第一次開啟電子郵件應用程式時，將會開啟設定精靈以協助您新增電子郵件帳戶。您可使用**設定**應用程式新增電子郵件帳戶。

- ・點按 > > > 一般標籤 > 帳戶及同步處理 > 新增帳號 > 電子郵件。

處理帳號資料夾

- ・點按 > 顯示所有資料夾。

每個帳號均有收件匣、重要人士、已發送、草稿和顯示所有資料夾。您可能會有更多資料夾，視乎您的帳戶服務供應商所支援的功能而定。

編寫及發送電子郵件

- 1 點按 。
- 2 輸入將會收到訊息的收件者的地址。當您輸入文字時，會從您的通訊錄顯示匹配的地址。
- 3 點按**副本/密件副本**欄位，以複製或隱藏複製至其他聯絡人/電子郵件地址。
- 4 點按文字欄位，並輸入訊息。
- 5 長按文字欄以編輯已選文字。
- 6 點按 ，在訊息上附加要發送的檔案。
- 7 點按  發送電子郵件。

更改電子郵件一般設定

- 點按  > **設定** > **一般設定**。

移除帳號

- 點按  > **設定** >  > **移除帳號** > 選擇要移除的帳戶 > **移除帳號** > **是**。

音樂

您的手機設有音樂播放器，讓您播放所有最愛曲目。

注意

- 視乎安裝的軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。
- 音樂檔案的版權可能受國際公約和國內版權法保護。因此，您或需要取得授權或許可，才可以複寫或複製音樂。在某些國家，國內法律禁止私人複製受版權保護的材料。下載或複製檔案前，先檢查有關國家關於使用這類材料的國家法律。

播放歌曲

- 1 點按 > > .
- 2 在螢幕上方選擇音樂類別標籤。
- 3 點按要播放的歌曲。

音樂播放器選項。



1		點按以暫停播放。
2		點按以繼續播放。
3		點按以播放下一首曲目。按住以快進。 點按以重新開始播放目前曲目，或跳至上一首曲目。 觸控並按住以倒退。
4		點按以調整音量。
5		點按以開啟音樂資料庫。
6		點按以隨機模式播放目前播放列表（以隨機順序播放曲目）。

⑦		點按以在重播所有曲目、單曲循環和關閉重播之間切換。
⑧		點按以新增歌曲至您的最愛。
⑨		點按以開啟目前播放列表。
⑩		點按以存取額外選項。

時鐘

時鐘應用程式讓您存取鬧鐘、計時器、世界時鐘及秒錶功能。點按螢幕上方的標籤或以水平滑動畫面，使用這些功能。

· 點按 > 。

鬧鐘

鬧鐘標籤讓您設定鬧鐘。

- 1 點按**鬧鐘**標籤。
- 2 點按 以新增鬧鐘。
- 3 更改所需設定然後點按**儲存**。

注意

· 您亦可點按現有鬧鐘以進行編輯。

計時器

計時器標籤可用作發出響鬧訊號，以聲音提示您已過去一段指定的時間。

- 1 點按**計時器**標籤。
- 2 於計時器設定所需時間。
- 3 點按**開始**，以開始使用計時器。
- 4 點按**停止**，以停止計時器。

世界時鐘

世界時鐘標籤讓您輕鬆查看世界各地城市的當地時間。

- 1 點按**世界時鐘**標籤。
- 2 點按  並選擇所需城市。

秒錶

秒錶標籤讓您將手機作為秒錶使用。

- 1 點按**秒錶**標籤。
- 2 點按**開始**以啟動秒錶。
 - 點按**單圈計時**以記錄單圈時間。
- 3 點按**停止**以停止秒錶。

計算機

計算機應用程式讓您使用標準計算機或科學計算機進行計算。

- 1 點按  >  > 。
- 2 點按數字鍵以輸入數字。
- 3 對於簡單計算，請點按所需的功能 (+、-、×、÷)，然後按「=」。

注意

- 對於更複雜的計算，點按 。

日曆

日曆應用程式讓您追蹤您的事件日程表。

- 1 點按  >  > 。
- 2 選擇數據然後點按 。
- 3 輸入事件詳情並點按**儲存**。

工作

您可登記任務至手機，輕鬆管理日程表。

- 1 點按 > > .
- 2 點按 新增任務。
- 3 輸入任務詳情並點按 **儲存**。

語音備忘錄

語音備忘錄應用程式為您錄低可於多個用途使用的音訊檔案。

錄製聲音或語音

- 1 點按 > > .
- 2 點按 開始錄音。
- 3 點按 結束錄音。
- 4 點按 收聽錄音。

注意

- 點按 以存取錄音。 您可聆聽已儲存的錄音。

下載

使用此功能以查看已通過應用程式下載的檔案。

- 點按 > > .

FM收音機

您的手機具有內置 FM 收音機，只要作出適當調校，就可以隨時隨地聆聽您最愛的電台。

- 點按 > > .



注意

- 您必須插入耳機作為天線使用。

LG Backup

有關備份以及復原裝置的資料

建議定期於內置儲存記憶體中建立與儲存備份檔案，尤其是更新任何軟件之前。在儲存記憶體保存目前的備份檔案，能讓您在遺失裝置、裝置被盜或突發令裝置損壞之情況下，修復裝置資料。

本 LG Backup 應用程式支援 LG 手機、其他軟件或操作系統版本。因此，當您購買新的 LG 智慧型手機和平板電腦時，您可將目前的手機數據備份至新的手機。

如果您的智慧型手機和平板電腦已預先安裝 LG Backup 應用程式，您可以備份和還原大部份的數據，包括已下載和預先安裝的應用程式、書簽、日曆項目、通訊錄、桌面設定和系統設定等。



警告：

- 要防止因電源不足而導致於備份或還原過程中突發關機，您應時常保持電源充足。



注意

- 還原備份檔案前，系統將會刪除儲存在智能手機的所有檔案。務必複製粘貼備份檔案至另一位置。
- 請注意，手機資料將被備份的內容覆寫。

備份裝置的資料

1 點按  >  > .

2 選擇所需選項。

- 在裝置間複製資料 - 從舊裝置移動數據至新裝置。
- 備份和還原 - 備份數據或從備份進行還原。

Google 應用程式

Google 提供娛樂、社交網絡及商業應用程式。您可能需要 Google 帳戶方可存取某類應用程式。

如需應用程式的詳情，請前往應用程式的說明功能表。

注意

- 視地區或服務供應商而定，這個功能可能無法使用。

Google

在網上或裝置上快速搜尋所需項目。

Chrome

搜尋資料並瀏覽網頁。

Gmail

透過 Google Mail 服務發送並接收電子郵件。

地圖

在地圖上搜尋您的位置以及其它位置的資訊。

YouTube

觀看或建立影片並與他人分享。

雲端硬碟

只要雲端儲存內容，即可隨時隨地存取並與他人分享。

Play 音樂

一部裝置可讓您發掘、收聽並分享心愛音樂。

Play Movies

觀看已儲存至裝置的影片並從 Play Store 下載多類內容。

Hangouts

與個別朋友或在群組中聊天並使用影像、表情符號及視像通話。

Photos

管理儲存在裝置上的相片、專輯及影片，並尚在至 Google+。

文件

編輯 Word 文件。

試算表

編輯Excel試算表。

簡報

編輯PowerPoint 簡報。

語音搜尋

說出關鍵字詞或短語進行快速搜尋。

設定

存取設定功能表

設定應用程式可讓您自訂及個人化您的手機。

打開設定應用程式

- 點選  > 點選並按住  > 系統設定。
- 或者
- 點按  >  > .

檢視設定

點按  以切換檢視設定。

- **列表檢視** - 上下捲動以檢視清單。
- **選項卡視圖** - 左右掃動以點按所需標籤。

注意

- 此指南的工作指引內容乃根據預設檢視設定編寫。

網絡設定

Wi-Fi

您可以在無線接入點 (AP) 範圍內使用高速存取互聯網。

於**設定**畫面中點按**網絡**標籤>**Wi-Fi**。

- 1 點按  以開啟 Wi-Fi，並開始掃描可用的 Wi-Fi 網路。
- 2 點按一個網絡進行連接。
 - 如果網絡已有鎖定圖示加密，您需要輸入安全密鑰或密碼。
 - 狀態欄上的圖示會顯示 Wi-Fi 狀態。

注意

- 如果您不在 Wi-Fi 範圍或將 Wi-Fi 設為關閉，裝置可能會自動轉為使用數據連接至網絡，可能需要收取數據費用。

Wi-Fi Direct

Wi-Fi Direct 讓 Wi-Fi 裝置直接連接而無需接入點。

- 點按  > 進階的 Wi-Fi > Wi-Fi Direct。

注意

- 在此功能表中，附近可見的 Wi-Fi Direct 裝置均可看到您的裝置。

藍牙

藍牙是一種短距離無線通訊技術，讓您無線連接多個藍牙裝置，例如耳機及免提車內套件，以及支援藍牙的手提裝置、電腦、打印機及無線裝置。

注意

- 對經由藍牙無線功能傳輸或接收的資料之遺失、竊取或不當使用之情況，LG 概不負責。
- 時刻確保僅透過信任且安全的裝置分享和接收數據。
- 若是裝置之間有障礙物，可能需要縮短可運行的距離。
- 某些裝置（特別是經由藍牙 SIG 測試許可的裝置）可能會與您的手機不相容。

為手機配對至另一藍牙手機

- 1 於設定畫面中點按**網絡**標籤 > **藍牙**。
- 2 點按  以開啟藍牙，並掃描可用的藍牙裝置。
 - 如要偵測附近可見的裝置，點按**搜尋**。
- 3 從列表中選擇您想配對的裝置。配對成功後，您的手機就會連接到該手機。

注意

- 配對兩個藍牙裝置是一次性的過程。完成配對後，裝置將可持續確認連接並交換資訊。
- 請參閱藍芽裝置隨附的文字，查看配對模式及密碼（通常是 0 0 0 0 – 四個零）的資訊。

透過藍牙傳送資料

- 1 選擇檔案或項目，例如通訊錄或媒體檔案。
- 2 選擇經藍牙傳送資料的選項。
- 3 搜尋和配對已啟動藍牙的裝置。

注意

- 由於其他藍牙裝置的規格及功能不同，因此顯示及操作可能有所不同，未必可以與所有藍牙裝置進行傳送或交換等功能。

透過藍牙接收資料

- 1 於**設定**畫面中點按**網絡標籤 > 藍牙**。
- 2 點按  以開啟藍牙功能。
- 3 您會從傳送的裝置收到一個有關接受配對的請求。請選擇**接受**。

流動數據

顯示數據用量並設定裝置數據用量限制。

- 點按  以開啟或關閉裝置的數據連接。如此，您可管理裝置數據使用方法。相反，您也可透過 Wi-Fi 網絡連接使用數據。

通話

此功能表讓您進行不同通話設定。

於**設定**畫面中點按**網絡標籤 > 通話**。

- **留言信箱** - 讓您選擇您的服務供應商的語音信箱服務。
- **固定撥號** - 管理並編輯一份可從您手機撥打的號碼清單。需要使用 PIN2，您可以向網絡商索取。啟用後，您手機只能撥打固定撥號清單中包含的號碼。
- **來電快顯視窗** - 使用應用程式時，彈出來電顯示。

- **拒接來電** - 讓您設定拒接來電功能。
- **用訊息拒絕** - 當您想拒接來電時，使用此功能可以快速發送訊息。如果您需要在會議中拒接來電，此功能將十分有用。
- **來電轉接** - 讓您選擇什麼時候轉接來電。
- **自動接聽** - 設定時間後，已連接的免提裝置會自動接聽來電。
- **連接震動** - 於另一方接聽來電時手機震動。
- **儲存未知號碼** - 通話後將未知號碼新增至通訊錄。
- **電源鍵結束通話** - 讓您使用電源鍵結束通話。
- **靜音來電** - 啓動後來電期間即可翻轉手機將來電靜音。
- **通話限制** - 鎖定來電、撥出或國際電話。
- **通話時間** - 讓您查看不同類型通話的通話時間。
- **其他設定** - 讓您變更其他設定，本機號碼或來電待接。
- **扬声器** - 启动視頻通话时，免提通话将开启。

NFC

您的手機配備 NFC 功能。NFC（近距離無線通訊）為一種無線連接技術，使得電子裝置之間具有雙向溝通能力。NFC 可於數公分的距離上運作。您可輕鬆以您的裝置觸碰 NFC 標籤或其他 NFC 支援裝置以分享內容。如果您使用裝置接觸一個 NFC 標籤，您的裝置就可以顯示其內容。

Android Beam

當此功能開啟時，您可以將裝置貼近另一支援近距離通訊 (NFC) 裝置的方式傳送應用程式內容。只需將兩部裝置貼近（通常為背對背）然後點選螢幕。應用程式將決定傳送的項目。

列印

讓您使用連接至與 Android 裝置相同 Wi-Fi 網絡的印表機，列印某些畫面的內容（如 Chrome 顯示的網頁）。

USB 網路連線

讓您透過 USB 線共享互聯網連線。

- 1 使用 USB 線將手機連接到電腦。
- 2 於**設定**畫面中點按**網絡**標籤 > **網絡共享**。
- 3 點按  以啓動 USB 網路連線。

Wi-Fi 热點

您也可使用手機提供裝置寬頻連線。建立熱點並分享連接。

於**設定**畫面中點按**網絡**標籤 > **網絡共享**。

- 1 點按  以啓動 Wi-Fi 热點。
- 2 點按建立 Wi-Fi 热點已變更 SSID、安全、密碼及其他熱點選項。

藍牙數據連線

讓您透過藍牙與其他裝置連接。

- 於**設定**畫面中點按**網絡**標籤 > **網絡共享**。
- 點按  以啓動藍牙網絡共享並分享網絡。

飛航模式

讓您在不能接撥電話或使用數據的地方使用不少手機上的功能，包括遊戲和音樂。當您將電話轉至飛行模式時，您將不能接收或撥打任何電話，並不能存取網上訊息。

於**設定**畫面點按**網絡** > **更多** > **飛航模式**。

流動網絡

此功能表讓您管理不同的流動網絡設定。

於**設定**畫面點按**網絡** > **更多** > **流動網絡**。

VPN

您可以在手機上新增、設定或管理虛擬專用網絡 (VPNs)，讓您
設定

連接或存取安全的本地網絡的資源，例如您的公司網絡。
於**設定**畫面點按**網絡 > 更多 > VPN**。

聲音和通知設定

讓您為裝置進行多種聲音設定。

於**設定**畫面點按**聲音和通知**標籤。

- **聲音設定檔** - 讓您設定裝置的聲音設定檔。
- **音量** - 調整裝置的音量設定以配合您的需要及環境。
- **鈴聲** - 讓您設定通話鈴聲。您可新增或刪除鈴聲。
- **個人來電鈴聲** - 您可根據來電號碼編寫鈴聲。
- **聲音與震動** - 啟動以設定裝置收到來電時有鈴聲及震動。
- **震動類型** - 讓您選擇震動的類型。
- **勿干擾** - 讓您設定不被通知干擾的時間表。當設定只限優先時，您可設定允許若干功能。
- **鎖定螢幕** - 讓您選擇是否在鎖定螢幕上顯示或隱藏通知。
- **應用程式** - 讓您為個別應用程式設定通知顯示，包括優先顯示及禁止顯示通知。

更多設定

容許您進行其他聲音及通知設定。

於**設定**畫面點按**聲音和通知**標籤 > **更多**。

- **通知聲音** - 允許您設定預設的通知鈴聲，您也可新增或移除鈴聲。
- **音效** - 如要在按撥號鍵盤的數字、選擇螢幕選項等時啓動或關閉音效，請在此功能表上設置。
- **訊息/通話聲音通知** - 讓裝置自動讀出來電及訊息事項。

顯示設定

桌面

讓您進行桌面設定。

於**設定**畫面點按**顯示**標籤 > **桌面**。

- **選擇主頁** - 選擇所需的桌面主題。
- **主題** - 為您的裝置設定螢幕主題。您可從 LG SmartWorld 下載新主題。
- **牆紙** - 設定桌面上使用的牆紙。
- **螢幕效果** - 讓您可選擇從一桌面撥動至下一畫面時，顯示的效果類型。
- **允許主頁螢幕循環** - 啓動以允許桌面捲動（於最後一個畫面後返回第一個畫面）。
- **說明** - 顯示桌面的說明資訊。

鎖定螢幕

讓您進行鎖定螢幕設定。

於**設定**畫面點按**顯示**標籤 > **鎖定螢幕**。

- **選擇螢幕鎖定** - 讓您設定螢幕鎖定以保護您的裝置。
- **Smart Lock** - 對於可信設備或場所則可設定手機為解鎖模式。如需更多資料，請參考 **Smart Lock**一節。
- **牆紙** - 選擇顯示於鎖定畫面的牆紙。
- **捷徑** - 自訂鎖定螢幕上的捷徑。
- **遺失手機的通訊錄資訊** - 遺失電話時，在鎖定螢幕上顯示手機用戶的資料。
- **鎖定時計** - 允許您設定螢幕逾時後自動鎖定螢幕的時限。
- **電源按鈕立即鎖定** - 勾選以於按下電源/鎖定鍵時即時鎖定螢幕。此設定覆蓋了安全鎖計時器的設定。

主頁觸摸按鈕

設定所有螢幕底部顯示的桌面觸控鍵。設定要顯示哪些鍵、它們在欄上的位置以及樣式。

於**設定**畫面點按**顯示**標籤 > **主頁觸摸按鈕**。

更多顯示設定

容許您進行其他顯示設定。

於**設定**畫面點按**顯示**標籤。

- **字體類型** - 選擇想要的字體。
- **字體大小** - 選擇想要的字體大小。
- **亮度** - 使用滑桿調整螢幕亮度。
- **自動旋轉螢幕** - 設定當您旋轉裝置時自動切換方向。
- **螢幕逾時** - 設定畫面自動關閉的時間。
- **休眠模式** - 選擇在插在機座或充電時的休眠期間顯示的螢幕保護。
- **運動感應器校正** - 改善傾斜的精準度及感應器的速度。

一般設定

語言及鍵盤

讓您變更文字輸入的設定

選擇手機上的文字語言和設定螢幕鍵盤，包括您已新增至字典的字詞。

於**設定**畫面，點按**一般** 標籤 > **語言及鍵盤**。

- **語言** - 選擇裝置上使用的語言。
- **通用鍵盤** - 讓您選擇其它鍵盤類別。
- **LG 鍵盤** - 變更 LG 鍵盤設定。
- **Google 語音輸入** - 變更語音輸入設定。

- **文字轉換語音輸出** - 點按以對文字轉換語音輸出設定首選引擎或進行一般設定。
- **指標速度** - 調整指標速度。
- **更改按鈕** - 轉換滑鼠按鈕以在右方使用主要按鈕。

位置

如要開啟定位服務，您的電話會使用 Wi-Fi 和裝置網絡判定您大概的所在位置。如選擇此選項，系統會問您是否同意允許 Google 在提供這些服務時，使用您所處的位置。

於**設定**畫面中點按**一般**標籤 > **位置**。

- **模式** - 設定如何判定您現時的位置資訊。
- **相機** - 啓動以在相片或影片中新增位置標籤。
- **Google 位置記錄** - 讓您選擇 Google 及其產品存取的位置資訊設定。

帳戶及同步處理

使用此功能表已新增、移除並管理您的 Google 及其他受支援的帳戶。您亦可使用這些設定來控制全部應用程式是否根據自己的日程表來發送、接收及同步處理資料，以及其發送、接收及同步處理資料的方式，以及全部應用程式是否可以自動同步使用者資料。

Gmail™、日曆及其他應用程式亦可能有其設定，以控制其同步資料的方式，請參閱該應用程式的部分以取得詳細資訊。

於**設定**畫面，點按**一般** 標籤 > **帳戶及同步處理**。

- **自動同步處理數據** - 啓動此選項以自動同步您新增至裝置的所有帳戶。
- **帳戶** - 顯示所有已新增的帳戶。點按其中一個帳戶以查看或進行管理。
- **新增帳號** - 點按以新增帳戶。

協助工具

您可使用協助工具設定，以設定已安裝到手機的協助工具外掛程式。

於設定畫面中點按一般標籤> 協助工具。

- **視覺** - 進行適合視障人士的設定。
 - **TalkBack** - 讓您設定 TalkBack 功能，此功能可以透過口語反饋協助視力受損者。
 - **訊息/通話聲音通知** - 讓您聽到為來電及訊息自動讀出的警示。
 - **螢幕亮度** - 啓動以將螢幕變暗。
 - **字體大小** - 設定字體大小。
 - **觸控縮放** - 讓您可以點按螢幕三下來縮小或放大螢幕。
 - **螢幕顏色反轉** - 啟動以轉換螢幕和內容的色彩。
 - **螢幕濾色片** - 讓您變更螢幕和內容的色彩。
 - **電源鍵結束通話** - 啓動後即可按電源/鎖定鍵結束通話。
- **聽覺** - 進行適合聽障人士的設定。
 - **標題** - 讓您為聽障人士自訂字幕設定。
 - **閃光提示** - 啓動以設定來電及通知的閃光。
 - **關閉所有聲音** - 啓動以關閉所有裝置聲音。
 - **音訊類型** - 設定音訊類型。
 - **聲音平衡** - 設定音頻線路。 移動桌面導航上的滑塊，以便對其進行設置。
- **電機與認識能力** - 進行適合運動障礙人士的設定。
 - **觸控回饋時間** - 設定觸碰與回應時間。
 - **Touch assistant** - 顯示輕易存取一般動作的觸控板。
 - **螢幕逾時** - 設定背光燈自動關閉前的時間。
 - **觸控控制區域** - 讓您選擇及限制可觸控的螢幕範圍。
- **協助工具捷徑** - 點按主頁按鈕三次即可快速存取所選功能。

- **自動旋轉螢幕** - 啓動以允許裝置自動根據裝置的方向（縱向或橫向）旋轉螢幕。
- **按擊功能** - 讓您使用一個或多個類似鍵盤按鍵的切換器與裝置互動。此功能對於行動不便而無法直接與裝置互動的使用者非常實用。

快捷鍵

當螢幕關閉或鎖定時，按下**音量鍵**以快速存取應用程式。

於**設定**畫面中點按**一般**標籤>**快捷鍵**。

- 按**音量提升鍵**兩次即可啟動擷取+。
- 按**音量降低鍵**兩次即可啟動相機。

Google

使用 Google 設定以管理您的 Google 應用程式及帳戶設定。

於**設定**畫面中點按**一般**標籤 > **Google**。

安全

使用功能表以設置保密您的手機及其資料。

於**設定**畫面中點按**一般**標籤 > **安全**。

- **內容鎖定** - 選擇鎖定類型以鎖定 QuickMemo+ 中的檔案。
- **加密手機** - 讓您可加密裝置上的資料，以保安全。每次開機時，您需要輸入 PIN 碼或密碼以解鎖手機。
- **加密 SD 卡儲存器** - 讓您加密 SD 卡資料儲存裝置，以免資料被其他裝置使用。
- **設定 SIM 卡鎖定** - 設定 PIN 碼鎖定您的 SIM 卡，隨後您可更改 PIN 碼。
- **密碼鍵入為可見** - 啟動以於輸入密碼時簡要地顯示密碼最後一個字元，讓您可看見正在輸入的內容。
- **裝置管理員** - 檢視或禁用手機管理員。

- **未知的來源** - 允許安裝非 Play Store 的應用程式。
- **確認應用程式** - 在安裝可能會造成危害的應用程式之前禁止或警告。
- **儲存裝置類型** - 顯示使用中的儲存類型。
- **證書管理** - 讓您管理您的安全認證。
- **Trust agents** - 選擇可於解鎖螢幕上使用的應用程式。
- **螢幕固定** - 您可使用螢幕 PIN 碼以啟動裝置並顯示特定應用程式的螢幕。
- **應用程式的使用量存取** - 讓您檢視裝置應用程式的使用資訊。

日期及時間

設定您喜好的日期及時間顯示方式。

於**設定**畫面，點按**一般** 標籤 > **日期及時間**。

內存空間與 USB

您可管理裝置內置記憶體上的已用及可用空間。

於**設定**畫面中點按**一般**標籤 > **內存空間與 USB**。

內存空間

- **總空間** - 以文字及彩色棒形圖來顯示手機內部記憶體的空間總量和已用空間（未用空間為灰色）。點按以查看相關應用程式所使用的空間。

SD 卡

顯示記憶卡的空間總量和已用空間。

電池與省電

顯示現時的電量狀態，包括剩餘電量百分比及充電狀態。

於**設定**畫面點按**一般**標籤 > **電池與省電**。

- **電池使用狀況** - 顯示電池用量水平及使用詳情。點選其中一項以查看更詳細資訊。
- **狀態列上之電量百分比** - 勾選以在電池圖示旁的狀態欄顯示電池存量百分比。
- **省電** - 點按省電模式開關以切換至開啟或關閉。設定自動啟動省電模式的電池量百分比。

記憶體

您可在裝置上檢視應用程式已使用的平均儲存空間。

於**設定**畫面中點按**一般**標籤 > **記憶體**。

應用程式

讓您檢視安裝在手機中的應用程式詳細資訊、管理數據及強制停止。

於**設定**畫面中點按**一般**標籤 > **應用程式**。

預設訊息應用程式

此功能表讓您選擇使用什麼訊息應用程式作為預設的訊息應用程式。

於**設定**畫面點按**一般** 標籤 > **預設訊息應用程式**。

備份與重設

更改設定以管理設定和數據。

於**設定**畫面，點按**一般**標籤 > **備份與重設**。

- **LG Backup** - 為裝置上的所有資料備份，以便於數據遺失或取代時可進行還原。如需更多資訊，請參考 LG Backup。
- **備份我的數據** - 備份應用程式數據、Wi-Fi 密碼以及其他設定至 Google 伺服器。
- **備份帳戶** - 顯示現時用作備份資訊的帳戶。
- **自動還原功能** - 當重新安裝應用程式時，還原已備份設定及資料。
- **網絡設定重設** - 重設所有網絡設定。.
- **重設為原廠設定** - 將設定重設為原廠預設值並刪除您的所有數據。如果您用此方法重設手機，您會被提示重新輸入您首次啟動 Android 時所輸入的訊息。

關於手機

檢視法律資訊、檢視手機狀態及軟件版本，以及執行軟件更新。

於**設定**畫面中點按**一般**標籤 > **關於手機**。

附錄

手機的軟件更新

LG 手機軟件會透過互聯網更新

如需更多有關此功能的資訊，請瀏覽

<http://www.lg.com/common/index.jsp> → 選擇國家/地區及語言。

使用此功能，您無須親臨服務中心也可輕鬆透過互聯網將手機軟體更新為較新版本。LG 為您的手機推出較新版本的軟體時，此功能才可使用。

手機軟體更新要求用戶加倍留意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的說明和備註。請注意，更新期間若移除 USB 數據線，有可能對您的手機造成嚴重損害。

注意

- LG 保留權利，可酌情決定只為選定型號提供軟體更新，並不保證所有手機型號均有軟體的較新版本。

透過空中下載 (OTA) 進行 LG 手機軟體更新

此功能讓您無須連接 USB 數據線，亦能輕鬆透過 OTA 將手機軟體更新為較新版本。LG 為您的手機推出較新版本的軟體時，此功能才可使用。

您應該先在裝置上檢查軟件版本：**設定 > 一般標籤 > 關於手機 > 更新中心 > 軟體更新 > 現在檢查更新**。

注意

- 手機內置記憶體的個人資料—包括 Google 帳號及任何其他帳號的資訊、系統/應用程式數據及設定、任何已下載的應用程式及 DRM 授權—在更新手機軟體的程序期間可能會遺失。因此，LG 建議您先備份個人資料，才更新裝置軟件。LG 對於個人資料的任何遺失概不負責。
- 此功能視乎網路服務供應商、地區或國家而定。

常見問題解答

本章節列出一些使用手機時可能遇上的問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行修正。

訊息	可能起因	可用解決方法
SIM 卡錯誤	手機內無 SIM 卡，或不正確地插入 SIM 卡。	確保已正確地插入 SIM 卡。
無網絡連接/ 失去網絡	訊號較弱或您位於運營商網絡服務範圍外。	移近窗邊或移至空曠範圍。檢查網絡供應商的覆蓋範圍。
	網絡商套用新服務。	請聯絡您的服務供應商。
密碼不相符	要更改安全密碼，您需要重新輸入以確認新的安全密碼。	如您忘記密碼，請聯絡您的服務供應商。
	您所輸入的兩個密碼並不相符。	
並無可設定應用程式	服務供應商不支援此功能，或需要註冊使用此功能。	請聯絡您的服務供應商。
已下載的應用程式可能引致許多錯誤。	移除應用程式	<ol style="list-style-type: none">點按 > > .點按 一般標籤 > 應用程式。點按應用程式 > 解除安裝。

訊息	可能起因	可用解決方法
無法撥打電話	撥號錯誤	新網絡未獲受權。
	新 SIM 卡已插入。	請檢查新的限制。
	已達預付費用上限。	聯絡您的服務供應商，或使用 PIN2 重設限額。
手機無法啟動	按電源/鎖定鍵時間太快。	按住電源/鎖定鍵至少兩秒。
	電池並無充電。	為電池充電。檢查螢幕上的充電指示器。
充電錯誤	電池並無充電。	為電池充電。
	外界溫度太高或太低。	確保於正常溫度下為手機充電。
	接觸不良。	檢查充電器是否正常，以及是否正確地連接至手機。
	無電壓。	將充電器插入不同的插座。
	充電器故障。	更換充電器。
	使用不當充電器。	請只使用原裝 LG 配件。
號碼不允許。	固定撥號功能已開啟。	檢查設定功能表並關閉功能。
無法接收/發送文字訊息和圖片	記憶體已滿。	刪除手機內某些數據（如應用程式或訊息）以騰出更多可用記憶。
無法開啟檔案	不支援的檔案格式。	檢查支援的檔案格式。

訊息	可能起因	可用解決方法
沒有聲音	震動模式。	檢查聲音功能表的設定狀態以確保您並非使用震動或靜音模式。
死機或停止運作。	軟件間歇性問題。	如在嘗試操作手機時螢幕凍結或電話沒有回應，請拆除電池後再安裝。然後重新開啟手機。 或者 透過網站嘗試進行軟件更新。

防盜指南

您可設定裝置以避免他人在無許可下將裝置還原至原廠設定。例如，如您遺失裝置，或裝置遭盜用或被清除內容，只有具備 Google 帳戶或螢幕鎖定資訊者可使用此裝置。

您只需確定您裝置的下列事項已妥善保護：

- **設定螢幕鎖定：**如您遺失裝置，或裝置遭盜用但已設定螢幕鎖定，此情況下裝置內容無法透過設定功能表清除，除非螢幕已解鎖。
- **在裝置上新增 Google 帳戶：**如您裝置內容不幸被清空但您擁有 Google 帳戶，此情況下別人無法在裝置完成設定程序，除非您再次輸入 Google 帳戶的資訊。

在作出妥善安全措施後，您需要解鎖螢幕或輸入 Google 帳戶密碼方可還原至原廠設定。這可確保重設由您或您信任的人進行。

注意

- 進行原廠還原時，不要忘記您新增至您裝置的 Google 帳戶及密碼。如在設定程序期間無法提供帳戶資訊，您將無法在還原後使用裝置。

更多資訊

開放來源程式碼軟件

若要獲取此產品所包含的 GPL、LGPL、MPL 來源程式碼和其他開放來源程式碼認證，請瀏覽 <http://opensource.lge.com>。

除了來源程式碼，所有涉及到的授權條款、免責聲明和版權聲明可供下載。

LG Electronics 亦可以透過收費 CD-ROM 提供開放來源程式碼，費用包括 CD-ROM 成本（例如媒體成本、運費以及處理費），您可透過 opensource@lge.com 索取。

此服務由購買產品日期起計算三年內有效。

商標

- 版權 ©2016 LG Electronics, Inc. 保留所有權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。
- Google™、Google Maps™、Gmail™、YouTube™、Hangouts™ 及 Play Store™ 均為 Google, Inc 的商標。
- Bluetooth® 乃 Bluetooth SIG, Inc. 全球的註冊商標。
- Wi-Fi® 及 Wi-Fi 標誌乃 Wi-Fi Alliance 的註冊商標。
- 所有其他商標及版權均屬於其擁有者。

確認聲明

LG Electronics 在此聲明 LG-K350Y 產品符合對 1999/5/EC 指示的基本要求和其他相關規定。確認聲明副本請見：
<http://www.lg.com/global/declaration>

关于本用户指南

简体中文

感谢您选择 LG。首次使用设备前, 请仔细阅读本用户指南, 确保安全、正确使用。

- 务必使用正品 LG 配件。提供的物品仅为该设备设计, 可能与其他设备不兼容。
- 此设备采用触摸屏键盘, 因此不适合视障人士使用。
- 说明基于设备的默认设置。
- 设备上的默认应用程序如有更新以及不再受支持, 恕不另行通知。如果对设备提供的应用程序有疑问, 请联系 LG 服务中心。对于用户安装的应用程序, 请联系相关服务提供商。
- 修改设备的操作系统或安装非官方来源的软件可能损坏设备, 并导致数据损坏或丢失。这些行为违反 LG 许可协议并将导致保修失效。
- 因地区、服务提供商、软件版本或操作系统版本不同, 某些内容和插图可能与您的设备有所不同, 如有变化, 恕不提前通知。
- 与您的设备一同提供的软件、音频、墙纸、图像及其它媒体均经过许可, 可有限使用。如果您将这些材料抽取一部分或整体用于商业或其他用途, 您可能会侵犯版权法。此时用户会因非法使用媒体而承担相应的全部法律责任。
- 可能会产生额外的数据服务（如信息、上传、下载、自动同步和定位服务）费用。为避免额外费用, 请选择一项适合您自身需求的数据计划。联系您的服务提供商以获取更多详细信息。

说明性公告

 警告	可能造成自身和他人人身伤害或者设备或其他财产损坏的情况。
 注意	公告或其他信息。

目录

关于安全有效使用手机的准则	5	KnockON	27
特殊功能	11	轻敲解码	28
捕获+	12	改变屏幕锁定方式	28
查看保存的备忘录	12	Smart Lock	29
手势拍摄	13	主屏	29
使用手势拍照	13	了解主屏	30
基本功能	14	返回到最近使用的应用程序	31
配件	15	自定义主屏	31
设备布局	16	通知面板	32
开机和关机	18	抓拍屏幕	35
安装 SIM 卡和电池	18	屏上键盘	35
为电池充电	20	使用键盘并输入文本	35
优化电池使用寿命	21	输入特殊字符	36
插入存储卡	22	在 PC 与设备间传输数据	36
取出存储卡	23	使用 USB 连接传输数据	36
触摸屏提示	23	LG Bridge	37
轻触或点触	23	LG Bridge 的功能	37
点触并按住	24	下载 Bridge 软件	37
拖动	24	应用程序	38
滑动	24	安装或卸载应用程序	39
轻触两次	25	打开 Play Store 应用程序	39
双指缩放	25	打开显示有关应用程序详细信息的屏幕	39
Google 帐户设置	26	卸载应用程序	39
创建 Google 帐户	26	通话	39
登录 Google 帐户	26	拨打电话	39
设备锁定和解锁	27	呼叫联系人	40
		接听和拒绝电话	40
		拨打第二个电话	40
		查看通话记录	40

更改通话设置	41	闹钟	52
联系人	41	计时器	53
搜索联系人	41	世界时钟	53
添加新联系人	41	秒表	53
按收藏归类联系人	41	计算器	53
创建群组	42	日历	54
信息	42	任务	54
发送信息	43	录音机	54
对话视图	43	录制声音或语音	54
更改信息设置	43	下载	55
相机	43	FM 收音机	55
拍照	44	LG Backup	55
取景器上的照相机选项	44	关于备份和恢复设备数据	55
拍摄照片后	45	备份设备数据	56
录制视频	46	Google 应用程序	56
录制视频后	46	设置	58
图片库	46	访问“设置”菜单	59
查看图片	47	网络设置	59
编辑照片	47	WLAN	59
设置壁纸	47	WLAN 直连	60
放大和缩小	47	蓝牙	60
播放视频	48	移动数据	61
删除照片/视频	49	通话	62
电子邮件	49	NFC	62
添加帐户	49	Android Beam	63
使用帐户文件夹	49	正在打印	63
撰写和发送电子邮件	50	USB 绑定	63
更改电子邮件常规设置	50	WLAN 热点	63
删除电子邮件帐户	50	蓝牙绑定	63
音乐	50	飞行模式	64
播放歌曲	51		
音乐播放器选项	51		
时钟	52		

移动网络	64	附录	73
VPN	64	设备软件更新	74
声音和通知设置	64	常见问题解答	75
更多设置	65	防盗指南	77
显示屏设置	65	更多信息	78
主屏	65	开源软件提示信息	78
锁定屏幕	66	商标	78
主页触摸按钮	66	确认声明	78
更多显示设置	66		
常规设置	67		
语言和键盘	67		
位置	67		
帐户与同步	68		
辅助工具	68		
快捷键	69		
Google	69		
安全性	70		
日期和时间	70		
存储器和 USB	71		
电池和省电	71		
内存	71		
应用程序	71		
默认消息应用程序	72		
备份与重置	72		
关于手机	72		

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

如果发生故障，设备内置的软件工具会收集故障记录。此工具仅收集特定于故障的数据，如信号强度、呼叫突然掉线时的 cell ID position 和加载的应用程序。该记录仅用于帮助确定故障原因。该类记录已加密，如果您需要将设备退回以进行维修，仅 LG 授权维修中心可查看它们。

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR) 信息。

此款 LG-K350Y 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10 克重的人体组织吸收的能量平均值不超过 2 W/kg。
- 经对该型号手机进行的测试得知，本型号手机在耳边使用的最高SAR值为 0.523 W/kg (10 克)，戴在身体上时，其值为1.420 W/kg (10 克)。
- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 5 毫米的位置时符合 RF 暴露标准。当使用便携盒、皮带夹或皮套进行身体佩戴操作时，不得包含金属并且产品应至少距身体 5 毫米。为了发送数据文件或信息，此设备需要高质量的网络连接。在某些情况下，数据文件或信息的发送可能被延迟，直到有这样的连接可用。确保遵照以上间隔距离说明直到完成发送。

产品保养和维护

- 务必使用经核准用于此特定手机型号的正品 LG 电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。
- 某些内容和插图可能与您的设备有所差异，恕不提前通知。
- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的的情况下，不要触摸天线。

- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 本手机为正常使用过程中会发热的电子设备。在缺乏足够通风的条件下过长时间直接接触皮肤时，可能导致不舒服或轻微灼伤。因此，在操作的过程中或之后立即处理您的手机时，应特别小心。
- 如果手机变湿，请立即拔下其电源插头，并让它完全晾干。切勿试图使用烤炉、微波炉或电吹风等外部热源加快干燥处理。
- 潮湿手机内的液体会改变手机内产品标签的颜色。由于接触液体而对设备造成的损坏不在保修范围内。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。
- 如果可能，请在介于 0°C 与 40°C 温度之间使用手机。将手机放置在过低或过高的温度的环境下可能会导致损坏、故障、甚至爆炸。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。

- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在靠近马路时，尤其要注意这一点。

防止损伤您的听力



为防止听力可能受损，请勿长时间高音量倾听。

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。

备注

- 耳机声音压力过大可能导致听力受损。

玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在机舱内使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池或将其短路。
- 保持电池的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。

- 不要将电池充电器暴露在直射阳光下，也不要在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当类型的电池进行替换，可能有爆炸危险。请按说明处理用过的电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。
- 确保没有细尖的物体，如动物牙齿、指甲等进入手机内触碰电池。这可能引发火灾。

特殊功能

捕获+

在通话过程中，您可以使用捕获+ 功能通过保存的图片或在当前屏幕上轻松有效地创建备忘录。

1 点触并向下滑动状态栏，然后轻触 。 如果您看不到 ，点击 > 勾选**捕获+** 将其启用。

2 使用以下选项创建备忘录：

	轻触可保存已创建的备忘录。
	轻触可撤销最近的操作。
	轻触可重做最近删除的操作。
	轻触可在备忘录中插入文本。
	点击可选择笔型和颜色。
	轻触可选择橡皮擦擦除备忘录上的笔痕。
	点击可裁切备忘录的图像。
	点击可选择共享或纸张样式。
	轻触隐藏或显示工具栏。

注意

· 使用捕获+ 时，请使用指尖，而不是指甲。

3 轻触 可将当前备忘录保存至 或 。

查看保存的备忘录

点击 > > 并选择**Capture+**相册。


手势拍摄

手势拍摄功能使您能够通过前置相机用手势拍照。

使用手势拍照

“手势拍摄”功能有两种使用方法。

- 举起手，五指张开，直到前置相机检测到手掌且屏幕上出现一个框。然后手掌合拢成拳头启动定时器，留出准备时间。
- 举起手并握拳，直到前置相机检测到拳头且屏幕上出现一个框。然后松开拳头启动定时器，留出准备时间。

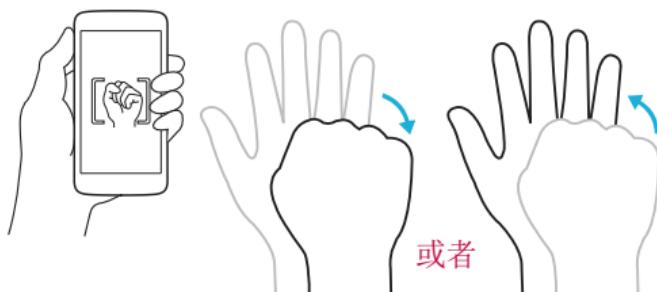

基本功能

配件

以下配件可与您的设备一起使用。



- 旅行适配器
- 快速入门指南
- 立体声耳机
- USB 数据线
- 电池



注意

- 上述配件可能为可选配件。
- 务必使用正品 LG 配件。 提供的物品仅为该设备设计，可能与其他设备不兼容。
- 本设备随附的物品及任何可用配件可能会因您所在区域或服务提供商而有所不同。

设备布局

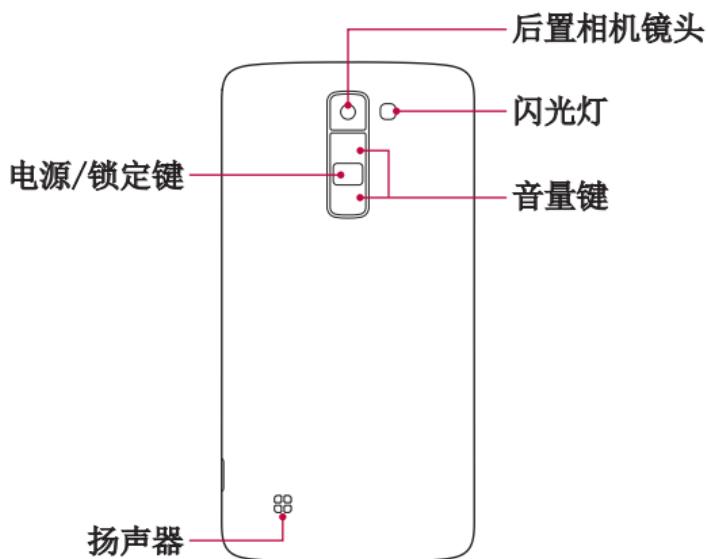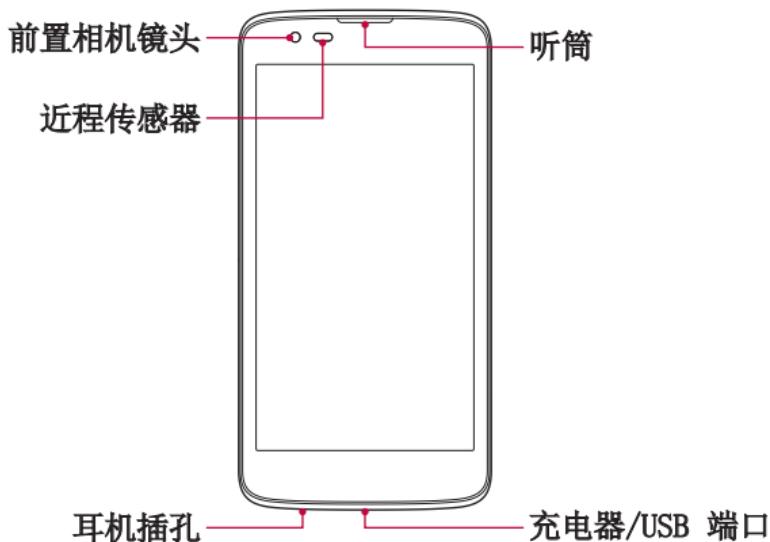

电源/锁定键	<ul style="list-style-type: none">· 按住此键可开/关机。· 短按可打开/关闭屏幕。
音量键	<p>同时屏幕关闭:</p> <ul style="list-style-type: none">· 按音量调高键两次，启动捕获+。· 按音量调低键两次，启动照相机。 <p>在主屏上:</p> <ul style="list-style-type: none">· 控制铃声音量。 <p>通话期间:</p> <ul style="list-style-type: none">· 播放音频/视频时，控制耳机音量。· 持续控制音量。

备注：近程传感器

- 在接听及拨打电话时，若手机位于耳旁，一旦感应到物体，此近程传感器将自动关闭背景灯并锁定触摸屏。这样有助于延长电池寿命，并避免在通话期间无意中激活触摸屏。

警告

- 在设备上放置重物或坐在手机上可能会损坏显示屏及触摸屏功能。不要在近程传感器上使用屏幕保护膜或任何其他类型的保护膜。这可能会影响传感器的感应度。

开机和关机

开机

按住设备背面的**电源/锁定键**几秒钟，直到屏幕打开。

关闭设备

- 1 按住设备背面的**电源/锁定键**，直到显示设备选项菜单。
- 2 点击**关机** > **确定**确认您要关机。

安装 SIM 卡和电池

先插入设备服务提供商提供的 SIM 卡，然后插入随附的电池。


警告

- 请勿将内存卡插入到 SIM 卡插槽。如果内存卡不小心卡入 SIM 卡插槽，请将设备送往 LG 服务中心取出内存卡。


注意

- 本设备仅支持 Nano SIM 卡。


- 1 要卸下后盖，请用手抓紧设备。如图所示，用另一只手的大拇指指甲卸下后盖。

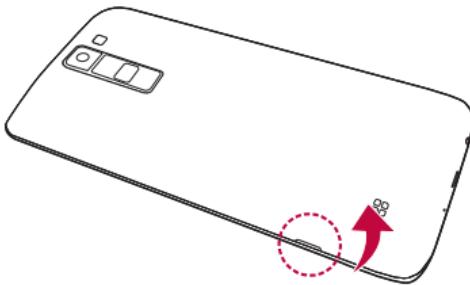


2 将 SIM 卡滑入 SIM 插槽中，如图所示。 确保卡的金色接触区域朝下。

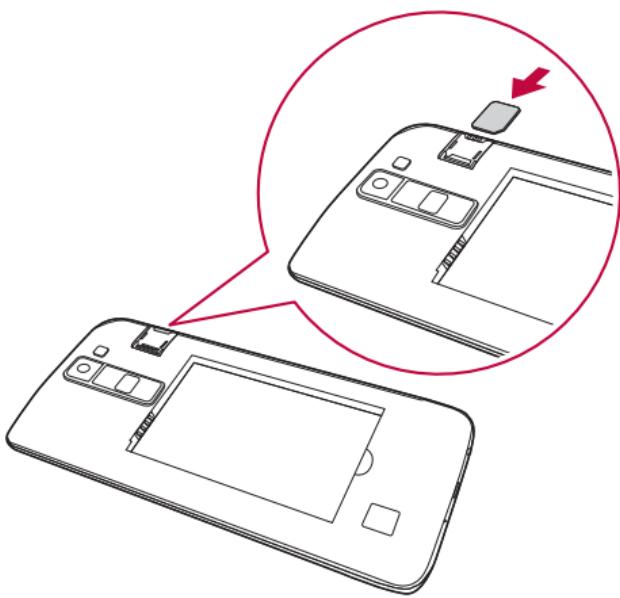

3 插入电池。

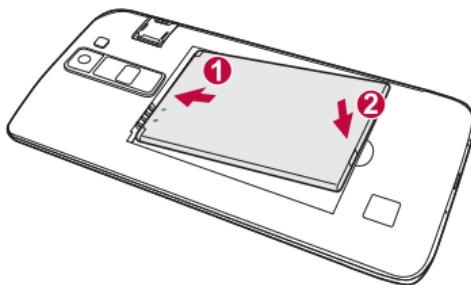

4 要装回设备后盖，请在电池仓上对齐后盖，向下按直至其卡入到位。

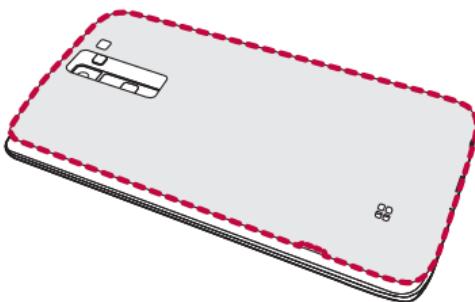


为电池充电

第一次使用电池前，请为电池充电。 使用充电器为电池充电。也可使用电脑为电池充电，方法是使用 USB 数据线将设备连接到电脑。

警告

- 只能使用已获得 LG 许可的充电器、电池和数据线。 如果您使用未获许可的充电器、电池或数据线，可能会导致电池充电缓慢。 未获许可的充电器可导致电池爆炸或损坏设备，相应后果不属于 LG 保修范围。

充电器接口位于设备底部。 插入充电器并插入电源插座。

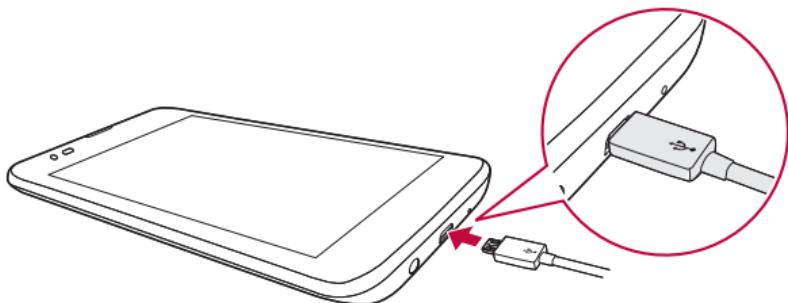

注意

- 设备正在充电时，不要打开后盖。

优化电池使用寿命

通过禁用无需在后台持续运行的功能来延长电池电量可支持的时间。 您可以监视应用程序和系统资源如何消耗电池电量。

延长设备电池的使用寿命

- 如果您未使用无线电通信，请关闭它。 如果不使用 WLAN、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕待机时间。
- 关闭 Gmail、日历、联系人及其他应用程序的自动同步。
- 您下载的一些应用程序可能会消耗电池电量。
- 使用下载的应用程序时，检查电池电量水平。

插入存储卡

您的设备支持高达 32GB 的 microSD 卡。根据存储卡制造商和类型，某些存储卡可能与您的设备不兼容。

⚠ 警告


- 某些存储卡可能与您的设备不完全兼容。使用不兼容的卡可能损坏设备、存储卡或卡中存储的数据。

💡 注意

- 如果写入和清除数据过于频繁，将缩短存储卡的寿命。

1 取下后盖。

2 将金色接触区朝下，插入存储卡。

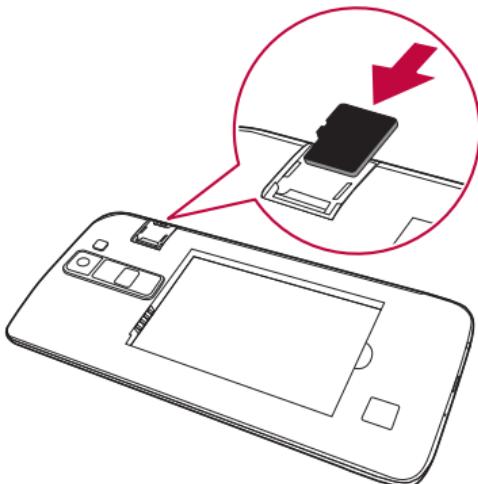

3 盖上后盖。

取出存储卡

为安全起见，请首先卸载存储卡，而后取出。

1 点击 ○ > ⌂ >  > 常规选项卡 > 存储器与 USB > 

2 取下后盖并拔出存储卡。

⚠ 警告

- 在设备传输或访问信息时，请勿取出存储卡。此行为会造成数据丢失或损坏，或者损坏存储卡或设备。LG 对因存储卡滥用或使用不当造成的损失（包括数据丢失）概不负责。

触摸屏提示


以下是关于如何浏览设备的一些提示。

💡 注意

- 无需大力按，触摸屏非常敏感，仅需轻触即可。
- 使用指尖轻触所需选项。请注意不要触碰到任何其他按钮。


轻触或点触

通过点击或点触，激活屏上键盘的选定项目、链接、快捷键或字母。

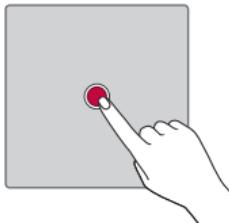


点触并按住

触摸并按住项目，方法是点击屏幕上的某个项目，并且在动作发生前不抬起手指。

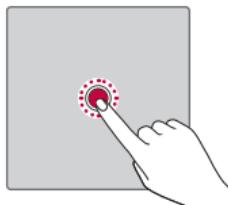


拖动

点触项目并短暂按住，不要抬起手指，在屏幕上移动手指，直至达到目标位置。 在主屏上，可拖动项目进行重新定位。

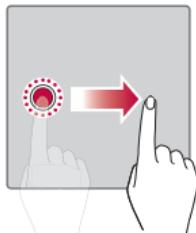


滑动

滑动的方法是手指单击屏幕后不要停顿（因而避免拖动项目），在屏幕表面迅速移动。

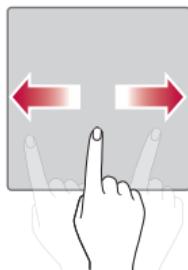


轻触两次

轻触两次可放大图片或地图。

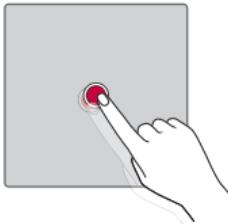

双指缩放

使用浏览器、地图或者在浏览图片时，将食指和拇指并拢或张开，即可放大或缩小。

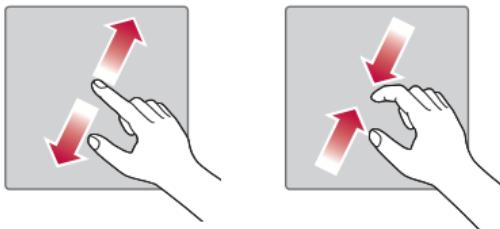

Google 帐户设置

当第一次在设备上打开 Google 应用程序时，需要使用现有的 Google 帐户登录。 如果您没有 Google 帐户，则会提示您创建一个帐户。

创建 Google 帐户

- 1 轻触 > > > 常规选项卡 > 帐户与同步。
- 2 点击添加帐户 > Google > 或创建新帐户。
- 3 输入您的姓名，然后点击下一步。
- 4 输入用户名并点击下一步。 您的设备将会与 Google 服务器通信，检查用户名的可用性。
- 5 输入密码并点击下一步。
- 6 按照说明输入有关帐户的必需和可选信息。 服务器正在创建您的帐户，请稍候。

登录 Google 帐户

- 1 轻触 > > > 常规选项卡 > 帐户和同步。
- 2 点击添加帐户 > Google。
- 3 输入电子邮件地址，然后点击下一步。
- 4 输入密码并点击下一步。
- 5 登录后，您便可以使用 Gmail 和 Google 服务了。

登录后，您的设备将同步 Google 服务，如 Gmail、联系人、Google 日历等。您可以使用地图，从 Play Store 下载应用程序，将设置备份到 Google 服务器，或利用设备上的其他 Google 服务。

设备锁定和解锁

按电源/锁定键可关闭屏幕，并将设备置于锁定模式。如果一段时间不用，设备将自动锁定。这有助于防止意外点触，节省电池电量。

如要解锁设备，请按电源/锁定键并向任意方向滑动屏幕。

KnockON

使用 KnockON 功能可通过轻触两次屏幕来轻松开关屏幕。

打开屏幕

- 1 双击锁定屏幕中心可开启屏幕。
- 2 解锁屏幕或访问任何可用快捷方式或小工具。

关闭屏幕

- 1 双击主屏或状态栏的空白区域。
- 2 屏幕将关闭。

注意

- 为了获得更佳的识别效果，请点击屏幕的中央位置，而不是屏幕底部或屏幕顶部。
- 使用指尖，而不是指甲，点击屏幕予以开关。

轻敲解码

轻敲解码功能允许您通过在屏幕上轻敲（或轻触）的动作组合创建自己的解锁代码。当屏幕关闭时，您可以通过轻触相同的顺序，访问主屏。

注意

- 如果轻敲解码输错 6 次，将强制把您带到您的 Google 帐户登录/备份 PIN。

设置轻敲解码功能

- 1 轻触  >  >  > 显示屏选项卡 > 锁定屏幕 > 选择屏幕锁定 > 轻敲解码。
- 2 轻触图案中的正方形以设置您的轻敲解码。轻敲解码图案可能需要 6 至 8 次点击。

使用轻敲解码解锁屏幕

当屏幕关闭时，您可以通过轻触您设置的轻敲解码图案来为屏幕解锁。

改变屏幕锁定方式

您可以改变屏幕锁定方式，防止他人访问您的个人信息。

- 1 轻触  >  >  > 显示屏选项卡 > 锁定屏幕 > 选择屏幕锁定。
- 2 从“无”、“滑动”、“轻敲解码”、“图案”、“PIN”及“密码”方式中选择需要的屏幕锁定。

注意

- 设置解锁图案之前，请先创建一个 Google 帐户，并记住创建图案锁定时设置的备份 PIN。

Smart Lock

您可以使用Smart Lock更轻松地解锁设备。当有受信任的蓝牙设备连接到设备、或处于家中或工作场所等熟悉位置时，或者设备能识别您脸部时，您可以设置为保持设备处于不锁定状态。


设置Smart Lock功能

- 1 点击  >  >  > 显示屏选项卡 > 锁定屏幕 > Smart Lock。
- 2 在添加任何受信任的设备、受信任的地点或受信任的面孔及受信任的声音之前，您需要设置屏幕锁定（轻敲解码、图案、PIN 或密码）。

主屏

主屏是许多应用程序和功能的起点，使您可以添加应用程序快捷方式、Google 小工具等项目，从而直接访问信息和应用程序。这是默认的画布，可从任何菜单中轻触  访问画布。

了解主屏

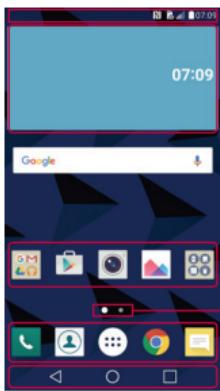

- ① 状态栏
- ② 窗口小部件
- ③ 应用程序图标
- ④ 位置指示灯
- ⑤ 快捷按钮区
- ⑥ 主页触摸按钮

- ① **状态栏** - 显示设备的状态信息，包括时间、信号强度、电池状态和通知图标。
- ② **窗口小部件** - 窗口小部件是独立应用程序，可以通过应用程序抽屉或在主屏上访问。与快捷方式不同，窗口小部件可用作屏幕应用程序。
- ③ **应用程序图标** - 点击图标（应用程序、文件夹等）可打开并使用它。
- ④ **位置指示器** - 指示您当前正在查看的主屏画布。
- ⑤ **快捷按钮区** - 可让您一键访问任何主屏画布上的功能。
- ⑥ **主页触摸按钮**

◁ 返回按钮	返回上一个屏幕。同时关闭弹出项目，如菜单、对话框和屏上键盘等。
○ 主页按钮	从任何屏幕返回到主屏。
□ 概览按钮	显示近期使用的应用程序。如果您触摸并按住该按钮，将打开可用选项菜单。

查看其他主屏面板

操作系统提供多个主屏画布，为添加图标、窗口小部件等提供更大的空间。

- 在主屏上向左或向右滑动手指可访问其他画布。

返回到最近使用的应用程序

多任务可在 Android 中轻松实现，您可同时运行多个应用程序。打开其他应用程序之前，无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。

Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

- 1 轻触 。屏幕将显示最近使用的应用程序列表。
- 2 轻触要访问的应用程序。但这不会让上一个应用程序在后台停止运行。使用完应用程序后，请确保点击退出应用程序。
 - 要关闭最近的应用程序列表中的应用程序，向左或向右滑动应用程序预览。要清除所有应用程序，轻触**全部清除**。

自定义主屏

您可以通过添加应用程序、窗口小部件或更改墙纸来自定义主屏。

在主屏上添加项目

- 1 点触并按住主屏的空白部分。
- 2 在“添加模式”菜单中，选择要添加的项目。您会在主屏上看到此添加的项目。
- 3 将它拖到您想要的位置，然后抬起手指。

注意

- 要将应用程序图标添加到主屏，请在“应用程序”屏幕上点触并按住要添加的应用程序。

从主屏上删除项目

位于主屏时，点触并按住要移除的图标，然后将其拖到 。

为快捷按钮区添加应用程序

从应用程序屏幕或主屏，点触并按住应用程序图标并将其拖动到快捷按钮区。然后，将其放到指定位置。

从快捷按钮区删除应用程序

触摸并按住目标快速按钮，将其拖动至 。

注意

- 无法删除应用程序按钮 .

自定义主屏上的应用程序图标


- 1 触摸并按住一个应用程序图标，直至将其从当前位置解锁，然后松开。该应用程序的右上角将显示编辑图标 .
- 2 再次轻触应用程序图标并选择所需的图标设计和大小。
- 3 轻触**确定**以保存更改。

通知面板

通知可提醒您接收到新信息、日历事件和闹钟，以及正在进行的事件，如正在通话。

打开通知面板

从状态栏向下滑动可打开通知面板 要关闭通知面板，向上滑动屏幕或轻触 。

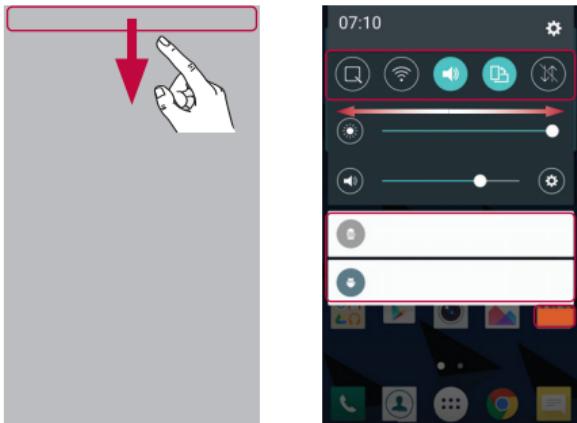

- ① 快速点击每个设置按钮，将其打开或关闭。触摸并按住相应按钮以直接访问功能设置菜单。要查看更多切换按钮，请向左或向右滑动。点击 以删除、添加或重新设定快速设置按钮。
- ② 列出了当前通知，每个通知都带有简短的说明。轻触通知以查看。
- ③ 轻触以清除所有通知。

当收到通知时，屏幕顶部将出现其图标。未读通知的图标会显示在左侧，WLAN 强度和电池电量等系统图标会显示在右侧。

状态栏上的指示器图标

指示器图标显示在屏幕顶部的状态栏上，可报告未接来电、新信息、日历事件、设备状态等。



屏幕顶部显示的图标可提供有关设备状态的信息。下表仅列示了最常见的图标。

图标	说明	图标	说明
	未插入 SIM 卡		当前正在播放歌曲
	无可用网络信号		已打开静音模式
	已打开飞行模式		已打开振动模式
	已连接到 WLAN 网络		电池已充满电
	已连接有线耳机		电池正在充电
	正在通话		设备通过 USB 数据线连接至 PC
	未接来电		正在下载数据
	蓝牙开启		正在上传数据
	系统警告		已打开 GPS
	闹钟已设置		正在同步数据
	收到新语音邮件		选择输入法
	收到新文本消息或彩信		WLAN 热点已激活

注意

- 图标在状态栏中的位置可能会因功能或服务而异。
- 可用选项可能会因地区或服务提供商而异。

抓拍屏幕

同时按住**音量调低键**和**电源/锁定键**约 2 秒钟，可截取当前屏幕的屏幕截图。

要查看截取的图像，请点击 > > > Screenshots 文件夹。

屏上键盘

您可以使用屏上键盘输入文本。当您轻触可用的文本输入字段时，屏上键盘会显示在屏幕上。

使用键盘并输入文本

图标	说明
	轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。
	轻触以转到键盘设置。点触并按住以通过语音或访问剪切任务栏输入文本。
	轻触以输入空格。
	点击以新建一行。
	轻触以删除上一字符。

输入特殊字符

使用屏上键盘可输入特殊字符。

例如，要输入“á”，点触并按住“a”按钮，直到显示一个弹出菜单，然后显示相关的特殊字符。不移开手指，将手指拖到所需的特殊字符上。一旦突出显示，即抬起手指。

注意

- 键右上角处的符号表示该键有其他字符。

在 PC 与设备间传输数据

您可以在 PC 与设备间复制或移动数据。

使用 USB 连接传输数据

- 1 使用设备随附的 USB 数据线将设备连接到 PC。
- 2 打开“通知”面板，点击当前的连接类型，然后选择**媒体设备（MTP）**。
- 3 PC 上将弹出一个窗口，供您传输所需数据。

注意

- PC 上必须安装 LG Android 平台驱动程序，才能检测到设备。
- 检查**媒体设备（MTP）** 的使用要求。

项目	要求
操作系统	Microsoft Windows XP SP3、Vista 或更高版本
Window Media Player 版本	Windows Media Player 10 或更高版本

LG Bridge

LG Bridge这款应用程序可方便您在 PC 上管理 LG 设备保存的图像、音乐、视频和文档等。此外，您还可以将联系人和图像等文件备份到您的 PC 或更新设备的软件。

注意

- 安装并打开程序后，您可以在“帮助”菜单中查看有关如何使用 LG Bridge的详细说明。
- 支持的功能可能会因设备而异。
- LG 通用 USB 驱动程序是将 LG 设备连接至 PC 的必备程序。它将在安装 LG Bridge时自动安装。

LG Bridge的功能

- 通过 WLAN 或数据在 PC 上管理设备中的内容。
- 通过 USB 备份和恢复设备的数据。
- 通过 USB 在 PC 上更新设备的软件。

下载 LG Bridge软件

- 1 转至 www.lg.com。
- 2 点击搜索按钮，然后输入型号名称搜索该型号。
- 3 选择型号信息，并点按产品支持
- 4 选择下载下的PC SYNC，以下载Windows 或 Mac OS 版本的LG Bridge。

应用程序

安装或卸载应用程序

Play 商店允许您浏览和搜索免费和付费应用程序。

打开 Play 商店应用程序

轻触 > > .

打开显示有关应用程序详细信息的屏幕

无论何时在 Play 商店中浏览，点击某个应用程序均可打开它的详细信息屏幕。

应用程序详细信息屏幕包括说明、评分、评论以及该应用程序的相关信息。在此屏幕中，您可以下载、安装、卸载、对应用程序评分等等。

卸载应用程序

1 轻触 > > > 常规选项卡 > 应用程序。

2 所有应用程序都显示后，请滚动并选择要卸载的应用程序。

3 轻触卸载。

通话

您可以在整个地区享受清晰的通话质量。

拨打电话

1 轻触 > .

2 使用拨号器输入号码。要删除数字，请轻触 .

3 输入所需的数字之后，轻触 拨打电话。

4 要结束通话，请轻触 .

注意

· 要输入“+”以拨打国际电话，请点触并按住 .

呼叫联系人

- 1 轻触 ○ > 
- 2 滚动浏览联系人列表。您还可以在搜索字段中输入联系人的姓名，或沿屏幕右边上的字母顺序滚动浏览。
- 3 在显示的列表中，点击要呼叫的 

接听和拒绝电话

- 向任意方向滑动  以接听来电。
- 向任意方向滑动  以拒接来电。

注意

- 如果要拒接来电并向主叫方发送短信，请滑动 

拨打第二个电话

- 1 在第一次通话过程中，点击 : > **添加通话**，然后输入号码。
- 2 轻触 。此时呼叫屏幕上显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 3 轻触显示的数字可在不同的通话间切换。或轻触  以启动电话会议。
- 4 要结束所有呼叫，请轻触 

注意

- 您需要对每通电话付费。

查看通话记录

- 1 点击 ○ >  > **通话记录**选项卡。
- 2 查看所有已拨电话、已接来电和未接来电的列表。

注意

- 轻触任意通话记录条目，以查看通话日期和时长。
- 点击 : > **全部删除**以删除所有记录项目。

更改通话设置

您可以配置通话设置（如呼叫转移）以及运营商提供的其他特殊功能。

- 1 轻触  > .
- 2 点击  > **通话设置**并配置所需的选项。

联系人

您可以在设备上添加联系人，并将其与 Google 帐户或其他支持同步联系人的帐户中的联系人同步。

搜索联系人

- 1 轻触  > .
- 2 轻触**搜索联系人**，使用键盘输入联系人姓名。随着您开始键入，手机会显示匹配项。

添加新联系人

- 1 轻触  > .
- 2 输入新联系人的号码。
- 3 轻触  > **添加至“联系人”** > **新建联系人**。
- 4 如果要为新联系人添加图片，请轻触图像图标。选择**拍照**或从**图片库中进行选择**。
- 5 输入所需的联系人信息。
- 6 点击**保存**。

按收藏归类联系人

您可以按收藏归类经常呼叫的联系人。

将联系人添加到收藏

- 1 轻触 ○ > .
- 2 轻触联系人以查看其详细信息。
- 3 轻触屏幕右上方的星号。 星号将变为黄色。

从收藏列表中删除联系人

- 1 点击 ○ >  > 收藏选项卡。
- 2 选择联系人以查看其详细信息。
- 3 轻触屏幕右上方的黄色星号。 星号变为原来的颜色，联系人已从收藏中删除。

创建群组

- 1 点击 ○ >  > 群组选项卡。
- 2 点击 : > 新群组。
- 3 为新群组输入名称。 您也可以为新建的群组设置一个独特铃声。
- 4 点击新增成员将联系人添加到群组并点击添加。
- 5 点击保存以保存群组。

注意

- 备注：如果您删除一个群组，分配至该群组的联系人将不会被删除。他们将保留在您的联系人列表中。

信息

您的设备将短信和彩信结合到一个直观易用的菜单中。

注意

- 您可能要为所发送的每条短信付费。 请向您的服务提供商咨询。

发送信息

- 1 轻触 > > .
- 2 点击 , 然后从“联系人”列表中选择一个或多个收件人。
或者
在收件人字段中输入联系人姓名或电话号码。随着您输入联系人姓名，匹配的联系人将会显示。您可以轻触建议的联系人，并且可以添加多个联系人。
- 3 轻触文本字段，开始输入信息。
- 4 轻触 以打开选项菜单。选择任意可用选项。
- 5 点击 以附加想要在信息中共享的文件。
- 6 轻触 **发送** 以发送信息。

对话视图

与另一方交流的信息将以时间顺序显示，以便您方便查看和查找对话。

更改信息设置

设备的信息设置已预定义为允许您立即发送信息。您可以根据喜好更改设置。

- 点击 > > > **设置**。

相机

您可以使用照相机或摄像机拍摄和共享照片及视频。

- 点击 > > .

拍照

- 1 在屏幕上选景。
- 2 景物周围出现方框表示相机已完成对焦。
- 3 轻触 以拍照。拍摄的图片将自动保存到“图片库”。

取景器上的照相机选项



①		点击以隐藏/显示取景器上的照相机选项。
②		点击可管理相机的闪光灯。
③		点击以在后置摄像头与前置摄像头之间切换。
④		点击可打开相机设置菜单。
⑤		点击以查看最近拍摄的照片或视频。
⑥		点击以开始录制。
⑦		轻触以拍照。
⑧		点击以退出照相机。

注意

- 拍照前，务必使用超细纤维布清洁镜头保护盖。镜头盖沾染指印可能导致照片模糊，产生晕轮效应。

使用高级设置

在照相机取景器中，轻触  打开高级选项。轻触每个图标以调整以下照相机设置。

	点击以设置照片比例和视频质量。
	点击以通过语音命令启动相机快门。开启该功能时，说出“Cheese”、“Smile”或“LG”等即可拍照。
	点击以设置照相机计时器。该功能适合自拍照片或视频时使用。
	点击以通过显示网格线帮助对齐，改善拍照或录制视频的效果。
	点击以设置照片和视频的存储位置。从 IN（内存）和 SD（内存卡）中进行选择。只有在插入 SD 卡后才会出现该菜单。
	点击以了解某项功能的工作方式。此图标将为您提供帮助指南。

拍摄照片后

轻触屏幕上的图像缩略图可查看您拍摄的最后一张照片。

	轻触可编辑照片。
	轻触可以立即拍摄其它照片。
	点击可打开可用的共享选项。
	轻触以删除照片。
	轻触以访问更多选项。
	轻触以将照片添加至收藏。

录制视频

- 1 点击 > > .
- 2 在屏幕上选景。
- 3 轻触 可开始视频录制。录制时长显示在屏幕顶部。

注意

- 点击 可在录制视频时拍照。
- 4 轻触 可暂停视频录制。点击 可继续录制。
或者
轻触 以停止录制。录制的视频将自动保存到“图片库”。

录制视频后

轻触屏幕上的视频缩略图可查看您录制的最后一个视频。

	轻触以立即录制其他视频。
	点击可打开可用的分享选项。
	轻触以删除视频。
	轻触以访问更多选项。
	点击可将视频添加至收藏。

图片库

图片库应用程序展示存储器中的图片和视频，包括使用照相机应用程序拍摄的照片以及从网络或其他位置下载的图片。

- 1 轻触 > > .
- 2 轻触一个相册以打开并查看其内容。 相册中的图片和视频以时间顺序显示。

3 轻触相册中的图片即可查看。

注意

- 根据所安装的软件，一些文件格式可能不受支持。
- 由于编码原因，一些文件可能无法正确播放。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。

查看图片

图片库以文件夹的形式显示您的图片。当一个应用程序（如电子邮件）保存一张图片时，系统会自动创建下载文件夹以包含该图片。同样，抓拍屏幕后，会自动创建抓拍图片文件夹。

照片将按其创建日期显示。选择一张要全屏查看的图像。向左或向右滚动以查看下一张或上一张图像。

编辑照片

查看照片时，点击 。

设置壁纸

查看照片时，轻触  **将图像设置为** 可将图像设置为壁纸或将其分配给联系人。

放大和缩小

使用以下方法放大图像：

- 在任何位置轻触两下以放大。
- 在图片中的任何位置张开两根手指可实现放大。捏拢手指或轻触两次图像可实现缩小。

播放视频

1 轻触 ○ > ⏮ > 📹。

2 选择要观看的视频。

视频选项



①	⏸ / ▶	轻触可以暂停/继续视频播放。
②	▶	触摸并按住可渐进性快进。轻触一次快进 10 秒。
③	◀	触摸并按住可渐进性后退。轻触一次后退 10 秒。
④	🔊	点击以调节视频音量。
⑤	🔒 / 🔑	轻触以锁定/解锁屏幕。
⑥	⋮	轻触以访问更多选项。

注意

- 播放视频时，在屏幕右侧向上或向下滑动可调整音量。
- 播放视频时，在屏幕左侧向上或向下滑动可调整亮度。
- 播放视频时，从左到右（或反方向）滑动手指可快进和快退。

删除照片/视频

使用以下方法：

- 在文件夹中，点击 ，选择照片/视频，然后点击 **删除**。
- 查看照片时，点击 。

电子邮件

您可以使用电子邮件应用程序读取 Gmail 以外其他提供商的电子邮件。电子邮件应用程序支持下列帐户类型：POP3、IMAP 和 Microsoft Exchange（用于企业用户）以及其他帐户。

- 轻触  >  > .

添加帐户

首次打开电子邮件应用程序时，屏幕上将打开一个设置向导，帮助您添加电子邮件帐户。您还可以使用**设置**应用程序添加电子邮件帐户。

- 点击  >  >  > 常规选项卡 > 帐户与同步 > 添加帐户 > 电子邮件。

使用帐户文件夹

- 点击  > 显示所有文件夹。

每个帐户均有“收件箱”、“重要人士”、“已发送”、“草稿箱”和“显示所有文件夹”。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

撰写和发送电子邮件

- 1 轻触 。
- 2 输入邮件目标收件人的地址。输入文字时，匹配的地址从您的联系人中提供。
- 3 轻触**抄送/密送**字段，以便抄送或密件抄送至其他联系人/电子邮件地址。
- 4 轻触文本字段并输入信息。
- 5 长按文本字段可编辑选定的文字。
- 6 轻触  以附加想要随信息发送的文件。
- 7 轻触  发送信息。

更改电子邮件常规设置

- 点击  > **设置** > **常规设置**。

删除电子邮件帐户

- 点击  > **设置** >  > **删除帐户** > 选择要删除的帐户 > **删除账户** > **是**。

音乐

设备中有音乐播放器，您可以播放所有喜爱的曲目。

注意

- 根据所安装的软件，一些文件格式可能不受支持。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。
- 音乐文件的版权可能受国际条约和国家版权法保护。因此，可能需要获得许可或许可证才能复制音乐。在某些国家/地区，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家/地区关于使用此类材料的国家立法。

播放歌曲

- 1 轻触 > > .
- 2 选择屏幕顶部的音乐类别选项卡。
- 3 轻触您要播放的歌曲。

音乐播放器选项



①		轻触可暂停播放。
②		轻触可继续播放。
③		点击可跳到下一曲目。 触摸并按住可快进。 轻触并按住可后退。
④		轻触可调节音量。
⑤		点击以打开音乐库。
⑥		轻触以采用随机播放模式（按随机顺序播放曲目）播放当前的播放列表。

⑦		轻触以在重复播放所有歌曲、重复播放当前歌曲或关闭重复之间切换。
⑧		轻触可将歌曲添加至收藏。
⑨		轻触可打开当前播放列表。
⑩		轻触以访问更多选项。

时钟

通过“时钟”应用程序可访问“闹钟”、“计时器”、“世界时钟”和“秒表”功能。点击屏幕顶部的选项卡或水平滑过屏幕，可访问这些功能。

- 轻触 > > .

闹钟

“闹钟”选项卡允许您设置闹钟。

- 1 点击**闹钟**选项卡。
- 2 轻触 以添加新窗口。
- 3 根据需要调整设置，然后点击**保存**。

注意

- 您还可以点击现有闹钟对其进行编辑。

计时器

“计时器”选项卡可用于在设定时间过后发出声音提示。

- 1 点击**计时器**选项卡。
- 2 在计时器上设置所需的时间。
- 3 轻触**启动**以启动计时器。
- 4 轻触**停止**以停止计时器。

世界时钟

世界时钟选项卡允许您轻松查看全球其他城市的当前时间。

- 1 点击**世界时钟**选项卡。
- 2 轻触  并选择所需城市。

秒表

“秒表”选项卡可将您的设备用作秒表。

- 1 点击**秒表**选项卡。
- 2 点击**启动**以启动秒表。
 - 点击**记录**以录制记录次数。
- 3 点击**停止**以停止秒表。

计算器

使用“计算器”应用程序的基本计算器或科学计算器，可执行数学计算。

- 1 轻触  >  > 。
- 2 点击数字按钮以输入数字。
- 3 对于简单的计算，请轻触要执行的函数（+、-、x 或 ÷），然后点触 =。

注意

- 有关更复杂的计算，点击 。

日历

“日历”应用程序允许您跟踪您的事件日程表。

- 1 轻触 > > .
- 2 选择一项数据，然后点击 .
- 3 输入活动详细信息并点击**保存**。

任务

您可以将任务注册到您的设备，方便日程表管理。

- 1 点击 > > .
- 2 点击 以添加任务。
- 3 输入任务详细信息，然后点击**保存**。

录音机

“录音机”应用程序可为您录制各种用途的音频文件。

录制声音或语音

- 1 轻触 > > .
- 2 点击 以开始录音。
- 3 点击 以结束录音。
- 4 点击 以收听录音。

注意

- 点击 以访问您的录音。 您可以收听您保存的录音。

下载

使用此应用程序可查看您通过应用程序下载的具体文件。

- 轻触 > > .

FM 收音机

设备内置了 FM 收音机，因此您在移动过程中也能转到喜爱的电台并收听无线广播。

- 轻触 > > .

注意

- 必须插入耳机作为天线方可使用。

LG Backup

关于备份和恢复设备数据

建议您定期在内部存储器上创建和保存备份文件，尤其是在更新任何软件之前。当设备丢失、被盗或因无法预料的问题受损时，在存储卡上保留最新备份文件也许能让您恢复设备数据。

此 LG Backup应用程序受 LG 设备、其他软件或操作系统版本的支持。因此，当购买新的 LG 设备时，可以将当前设备的数据备份到新设备中。

如果在设备上预加载了 LG Backup应用程序，则可以备份和恢复大多数的数据，包括下载的和预安装的应用程序、书签、日历条目、联系人、主屏设置及系统设置。

警告

- 要预防在备份或恢复操作中出现因电池电量不足引起的意外关机，您应始终为电池充满电。



注意

- 在恢复备份文件之前，存储在设备上的所有文件都将被删除。 务必将备份文件复制到其他位置。
- 请注意，您的设备数据将被备份内容覆盖。

备份设备数据

1 轻触 > > .

2 选择您所需的模式。

- **在设备间复制数据** - 将旧设备上的数据复制到新设备。
- **备份与恢复** - 备份数据或从备份恢复。

Google 应用程序

Google 提供娱乐、社交网络和业务应用程序。 访问某些应用程序可能需要使用 Google 帐户。

要查看更多应用程序信息，请访问每个应用程序的帮助菜单。



注意

- 某些应用程序可能无法使用，具体取决于您所在的地区或您的服务提供商。

Google

在互联网上或您的设备上快速搜索项目。

Chrome

搜索信息和浏览网页。

Gmail

通过 Google Mail 服务发送或接收电子邮件。

地图

在地图上查找您的位置，搜索位置，以及查看各个位置的位置

信息。

YouTube

观看或创建视频并与他人共享。

云端硬盘

将您的内容存储在云端，随时随地访问，并与他人共享。

Play 音乐

在您的设备上发现、倾听和共享音乐。

Play 电影

观看您的设备上存储的视频，并从 Play Store 下载要观看的各种内容。

环聊

与朋友单聊或群聊，并在聊天时使用图像、图释和视频通话。

Google 相册

管理设备上存储的或已上传到 Google+ 的照片、专辑和视频。

文档

编辑Word文档。

表格

编辑 Excel电子表格。

幻灯片

编辑 PowerPoint演示文稿。

语音搜索

通过说出一个关键字或短语快速搜索项目。

设置

访问“设置”菜单

“设置”应用程序用于对您的设备进行自定义和个性化。

打开设置应用程序

- 轻触 > 触摸并按住 > 系统设置。
- 或者
- 轻触 > > .

查看设置

点击 可切换视图模式。

- **列表视图** - 上下滚动查看列表。
- **标签视图** - 左右滑动或点击需要的选项卡。

注意

- 本指南中的任务执行说明基于默认视图设置。

网络设置

WLAN

您可以在无线接入点 (AP) 覆盖区内使用高速互联网访问。

在**设置**屏幕上，点击**网络选项卡** > **WLAN**。

1 轻触 以打开 WLAN 并开始扫描可用的 WLAN 网络。

2 轻触某个网络进行连接。

- 如果网络有小锁图标保护，则您需要输入安全密钥或密码。
- 状态栏显示了可指明 WLAN 状态的图标。

注意

- 如果您在 WLAN 区域之外，或者将 WLAN 设为关闭，则设备可能使用数据自动连接到网络，这可能产生额外的数据费用。

WLAN 直连

WLAN 直连在启用了 WLAN 的设备之间提供直接连接，无需借助接入点。

- 点击  > 高级 WLAN > WLAN 直连。

注意

- 在此菜单中时，附近的其他可见 WLAN 直连设备可以看到您的设备。

蓝牙

蓝牙是一种短距离通信技术，允许您以无线方式连接多个蓝牙设备，如耳机、免提式车载套件设备、启用蓝牙的手持设备、电脑、打印机和无线设备。

注意

- LG 对经蓝牙功能发送或接收的数据的丢失、拦截或误用不承担任何责任。
- 始终确保您用于共享和接收数据的设备可信且安全。
- 如果设备间存在障碍物，则需要缩短操作距离。
- 某些未经蓝牙 SIG 测试或认可的设备可能与您的设备不兼容。

将您的设备与其他蓝牙设备配对

- 1 在设置屏幕上，点击网络选项卡 > 蓝牙。
- 2 点击  启动蓝牙并开始扫描可用的蓝牙设备。
 - 如果还希望检测搜索范围内的可见设备，请点击搜索。
- 3 从列表中选择您要配对的设备。一旦配对成功，您的设备将连接到另一个设备。



注意

- 两个蓝牙设备间的配对只需进行一次。一旦创建配对，设备将持续识别配对设备并交换信息。
- 有关配对模式和通行码（通常为 0 0 0 0 – 四个零）的信息，请参阅蓝牙设备附带的文档。

通过蓝牙发送数据

- 1 选择一个文件或项目，如联系人或媒体文件。
- 2 选择选项以通过蓝牙发送数据。
- 3 搜索并配对已启用蓝牙的设备。



注意

- 由于其他蓝牙兼容设备的规格和功能不同，显示和操作可能有所不同，传输或交换也许不适用于所有蓝牙兼容设备。

通过蓝牙接收数据

- 1 在**设置**屏幕上，点击**网络选项卡** > **蓝牙**。
- 2 轻触 将蓝牙打开。
- 3 您将收到接受来自发送设备的配对尝试的请求。请务必选择**接受**。

移动数据

显示数据使用情况和设备数据使用限制。

- 点击 可打开或关闭设备数据连接。此功能用于管理设备数据使用情况。您也可以改为使用 WLAN 网络连接访问数据。

通话

用于配置各种通话设置。

在**设置**屏幕上，点击**网络选项卡** > **通话**。

- **语音邮件中心** - 允许您选择运营商的语音信箱服务。
- **固定拨号** - 允许您管理并汇集一个号码列表，可从设备拨打此列表中的号码。您需要提供 PIN2 码，此代码由运营商提供。如果启动，则仅可以使用设备拨打固定号码列表中的号码。
- **来电弹出窗口** - 正在使用一个应用程序时，显示来电弹出窗口。
- **拒接来电** - 允许您设置拒接来电功能。
- **用消息拒绝** - 拒接来电时，可使用此功能快速发送一条信息。此选项可用于在会议期间拒接来电。
- **呼叫转接** - 允许您选择何时转接来电。
- **自动应答** - 设置在连接的免提设备自动接听来电前的时间。
- **连接振动** - 当对方接听电话后，您的设备会振动。
- **保存未知号码** - 允许您在通话后将未知号码添加至联系人。
- **电源键结束呼叫** - 允许您使用电源键结束呼叫。
- **等待接听的来电** - 翻转设备即可使来电静音。
- **呼叫限制** - 锁定来电、拨出电话或国际电话。
- **通话时间** - 允许您查看各种类型通话的通话时间。
- **其他设置** - 允许您更改其他设置，如**本机号码**或**来电等待**等。
- **扬声器** - 启动视频呼叫时，免提通话将开启。

NFC

您的手机启用了 NFC。NFC (Near Field Communication, 近场通讯) 是一项无线连接技术，它可使电子设备之间实现双向通信。它能在几厘米的距离内工作。只需通过设备轻触，即可设置

与 NFC 标签或其他 NFC 支持设备共享内容。如果您通过设备点击 NFC 标签，则将在设备上显示标签内容。

Android Beam

打开此功能时，您可以将两台设备紧靠在一起，将应用程序内容播送至其他具有 NFC 功能的设备。只需将设备放在一起（一般采用背靠背的方式），然后轻触屏幕即可。此应用程序将决定发送的内容。

正在打印

您可以将某些屏幕的内容（如 Chrome 中显示的网页）通过打印机打印，此打印机需连接到与您的 Android 设备相同的 WLAN 网络。

USB 绑定

允许您通过 USB 数据线与计算机共享互联网连接。

- 1 使用 USB 数据线将设备连接到 PC。
- 2 在**设置**屏幕上，点击**网络选项卡 > 绑定**。
- 3 点击  开启 USB 绑定。

WLAN 热点

您也可以使用设备提供设备宽带连接。 创建热点，共享连接。
在**设置**屏幕上，点击**网络选项卡 > 绑定**。

- 1 点击  开启 WLAN 热点。
- 2 点击“设置 WLAN 热点”更改 WLAN 名称、安全类型、密码和其他热点选项。

蓝牙绑定

允许您通过蓝牙连接其他设备。

- 在**设置**屏幕上，点击**网络选项卡 > 绑定**。
- 点击  开启蓝牙绑定，以通过蓝牙绑定共享您的连接。

飞行模式

允许您在禁止拨打或接听电话或使用数据的区域使用设备的许多功能，例如游戏和音乐。将设备设置为飞行模式时，它无法发送或接收任何电话，也无法访问在线数据。

在设置屏幕上，点击网络选项卡 > **更多** > 飞行模式。

移动网络

此菜单允许您配置各种设备网络设置。

在设置屏幕上，点击网络选项卡 > **更多** > 移动网络。

VPN

从您的设备中，您可以添加、设置和管理虚拟专用网（VPN），以允许您连接和访问受保护的本地网络（如您的公司网络）中的资源。

在设置屏幕上，点击网络选项卡 > **更多** > VPN。

声音和通知设置

用于更改设备上的各种声音设置。

在设置屏幕上，点击**声音和通知**选项卡。

- **声音模式** - 用于设置设备的声音配置文件。
- **音量** - 调节设备的音量设置，以便适合您的需要和环境。
- **铃声** - 允许您设置呼叫铃声。您还可以添加和删除铃声。
- **铃声 ID** - 允许您根据来电电话号码新建铃声。
- **声音和振动** - 启用以将设备设为接到来电时既响铃又振动。
- **振动类型** - 允许您选择振动类型。
- **请勿打扰** - 允许您设置日程表，防止通知打扰。如果设置了“仅优先级”，可设置为允许特定功能打扰。
- **锁定屏幕** - 用于选择希望在锁定屏幕上显示还是隐藏通

知。

- **应用程序** - 允许您设置各个应用程序的通知，包括设置为优先级和阻止它们显示通知。

更多设置

允许您进行其他声音和通知设置。

在**设置**屏幕上，点击**声音和通知**选项卡 > **更多**。

- **通知声音** - 用于设置通知声音。 您还可以添加和删除通知声音。
- **音效** - 此菜单允许您选择在拨号盘上轻触数字、选择屏幕选项等情况下是否发出声音。
- **消息/呼叫声音通知** - 允许您的设备自动读出来电和消息事件。

显示屏设置

主屏

用于设置主屏设置。

在**设置**屏幕上，点击**显示屏**选项卡 > **主屏**。

- **选择主页** - 选择所需主页。
- **主题** - 设置设备的屏幕主题。 您可以从 LG SmartWorld 中下载新主题。
- **壁纸** - 设置用于主屏上的壁纸。
- **屏幕点击效果** - 选择从主屏界面向下一屏滑动时显示效果的所需类型。
- **允许主屏幕循环** - 启用以允许主屏连续滚动（最后一屏后循环回第一屏）。
- **帮助** - 显示主屏的帮助信息。

锁定屏幕

用于设置锁定屏幕设置。

在**设置**屏幕上，点击**显示屏选项卡** > **锁定屏幕**。

- **选择屏幕锁定** - 允许您设置屏幕锁定类型以确保设备的安全。
- **Smart Lock** - 设置此选项使设备面向受信任的设备或地点处于解锁状态。 如果需要更多信息，请参阅“**设备锁定和解锁**”中的“**Smart Lock**”部分。
- **壁纸** - 选择锁定屏幕显示的壁纸。
- **快捷方式** - 自定义锁定屏幕上的快捷方式。
- **手机丢失时的联系人信息** - 允许您在设备丢失时，在锁定屏幕上显示所有者信息。
- **锁定计时器** - 可让您设置屏幕超时后屏幕自动锁定前的时间。
- **电源按钮立即锁定** - 勾选后，可在按下电源或锁定按钮后立即锁定屏幕。 此设置将覆盖锁定计时器设置。

主页触摸按钮

设置在所有屏幕底部显示的主页触摸按钮。 设置要显示的按钮、其在栏中的位置和外观。

在**设置**屏幕上，点击**显示屏选项卡** > **主页触摸按钮**。

更多显示设置

用于设置其他显示设置。

在**设置**屏幕上，点击**显示屏选项卡**。

- **字体类型** - 选择所需的字体类型。
- **字体大小** - 选择所需的字体大小。
- **亮度** - 使用滑块调节屏幕亮度。
- **自动旋转屏幕** - 设置为在旋转设备时自动切换方向。

- **屏幕超时** - 设置屏幕自动关闭前的延迟时间。
- **互动屏保** - 选择设备在插接或充电时处于睡眠状态期间要显示的屏保。
- **运动传感器校准** - 可让您提高倾斜精确度和传感器速度。

常规设置

语言和键盘

允许您更改文本输入设置。

选择设备上的文本语言，并用于配置屏上键盘，包括您添加到其字典中的词汇。

在设置屏幕上，点击常规选项卡 > **语言和键盘**。

- **语言** - 选择要在设备上使用的语言。
- **当前键盘** - 允许您选择当前键盘类型。
- **LG 键盘** - 更改 LG 键盘设置。
- **Google 语音输入** - 更改语音输入设置。
- **文本-语音输出** - 轻触以设置偏好的引擎或文本转语音输出的常规设置。
- **指针速度** - 调节指针速度。
- **更改按钮** - 扭转鼠标按钮以使用右侧主要按钮。

位置

打开位置服务，您的设备将使用 WLAN 和设备网络确定您的大概位置。选择此选项时，将询问您在提供这些服务时是否允许 Google 使用您的位置。

在设置屏幕上，点击常规选项卡 > **位置**。

- **模式** - 设置您当前位置的确定方式。
- **使用照相机** - 启用以在照片或视频中添加位置标签。
- **Google 位置记录** - 允许选择将您的位置信息设置为可供 Google 及其产品访问。

帐户与同步

使用此菜单添加、删除和管理您的 Google 以及其他支持的帐户。您也可以使用这些设置控制所有应用程序如何及是否根据各自的计划发送、接收和同步数据，以及是否所有应用程序都可以自动同步用户数据。

Gmail™、日历和其他应用程序可能还具有自有设置以控制数据同步方式；请参阅有关这些应用程序的部分获得详细信息。

在**设置**屏幕上，点击**常规**选项卡 > **帐户与同步**。

- **自动同步数据** - 启用此选项可自动同步您在设备上添加的所有帐户。
- **帐户** - 显示您添加的所有帐户。点击一个帐户可查看或管理它。
- **添加帐户** - 点击以添加新帐户。

辅助工具

使用辅助工具可配置您在设备上安装的辅助功能插件。

在**设置**屏幕上，点击**常规**选项卡 > **辅助工具**。

- **视觉** - 设置针对视障人士的选项。
- **语音菜单** - 用于设置语音菜单功能，来通过言语反馈协助视觉有障碍的人。
- **消息/呼叫声通知** - 启用以允许您听到来电和信息的自动语言提醒。
- **屏幕亮度** - 启用以将屏幕设置为更暗的对比度。
- **字体大小** - 设置字体大小。
- **触摸缩放** - 允许您通过三点轻触屏幕来进行缩放。
- **屏幕颜色反转** - 启用以反转屏幕和内容的颜色。
- **屏幕滤色镜** - 用于更改屏幕和内容的颜色。
- **电源键结束呼叫** - 启用此选项以便通过按电源/锁定键结束语音通话。

- **听觉** - 设置针对听障人士的选项。
- **标题** - 用于为有听力障碍的人自定义字幕设置。
- **闪光灯提醒** - 启用此选项以设置闪光灯在有来电和通知时闪光。
- **关闭所有声音** - 启用此选项以关闭所有设备声音。
- **音频类型** - 设置音频类型。
- **声音平衡** - 设置音频线路。 在滑动条上移动滑块进行设置。
- **电机与认识能力** - 设置针对运动障碍人士的选项。
- **触摸反馈时间** - 设置点触反馈时间。
- **触控助手** - 显示触控板以便于访问常用操作。
- **屏幕超时** - 设置背景灯自动关闭前的时间。
- **触摸控制区域** - 可选择一个屏幕区域，仅将触控激活限制在该屏幕区域内。
- **辅助功能快捷方式** - 点击三次主页按钮后，可快速访问选定功能。
- **自动旋转屏幕** - 启用此选项以允许设备根据实体设备方向（纵向或横向）旋转屏幕。
- **开关控制** - 允许您使用一个或多个如键盘按键一样的开关与设备进行交互。 此菜单可帮助行动受限的用户避免直接与设备进行交互。

快捷键

当屏幕关闭或锁定时，按**音量键**即可快速访问应用程序。

在**设置**屏幕上，点击**常规**选项卡 > **快捷键**。

- 按**音量调高键**两次，启动捕获+。
- 按**音量调低键**两次，启动照相机。

Google

使用 Google 设置管理您的 Google 应用程序和帐户设置。

在**设置**屏幕上，点击**常规**选项卡 > **Google**。

安全性

使用此菜单配置设备及其数据的保护方式。

在**设置**屏幕上，轻触**常规**选项卡 > **安全性**。

- **内容锁定** - 选择锁定类型可锁定 Quick备忘录+ 中的备忘录。
- **加密手机** - 用于加密设备数据以保护安全性。 您需要在每次开机时输入 PIN 或密码才能解密设备。
- **加密 SD 卡存储** - 加密 SD 卡存储并使其他设备无法使用数据。
- **设置 SIM 卡锁定** - 设置 PIN 以锁定 SIM 卡并允许您更改 PIN。
- **密码键入可见** - 启用此选项以便在您输入密码时短时间显示最后一个字符，以便您看到自己的输入内容。
- **设备管理器** - 查看或停用设备管理器。
- **未知源** - 允许安装非 Play Store 应用程序。
- **验证应用程序** - 安装可能引起危害的应用程序之前进行拒绝或警告。
- **存储器类型** - 显示当前存储器类型。
- **证书管理** - 允许您管理自己的安全证书。
- **Trust agents** - 选择可在不解锁屏幕的情况下使用的应用程序。
- **屏幕固定** - 通过屏幕 PIN，可以使您的设备仅显示某个应用程序的屏幕。
- **应用程序的使用记录访问** - 用于查看设备上应用程序的使用信息。

日期和时间

设置日期和时间显示方式的首选项。

在**设置**屏幕上，点击**常规**选项卡 > **日期和时间**。

存储器与 USB

您可以监控设备的已用和可用内存。

在**设置**屏幕上，点击**常规选项卡** > **存储器和 USB**。

内部存储器

- **内部存储器** - 以文本显示您的设备内存中的空间总量和已用空间，并带有条形图（未用空间为灰色）。点击以查看相应的应用程序及其使用的空间量。

SD 卡

显示内存卡的空间总量和已用空间。

电池和省电

显示当前电池状态，包括剩余电量百分比和充电状态。

在**设置**屏幕上，点击**常规选项卡** > **电池和省电**。

- **电池使用情况** - 显示电池使用水平和电量使用详情。轻触某个项目以查看更多详情。
- **状态栏上的电量百分比** - 勾选以在电池图标旁边的状态栏上显示电池使用量百分比。
- **省电** - 轻触省电开关以将其切换为“开启”或“关闭”。设置将自动开启省电功能的电池电量百分比。

内存

您可以监控设备平均使用的内存和应用程序所用内存。

在**设置**屏幕上，点击**常规选项卡** > **内存**。

应用程序

可以查看设备上安装的应用程序的详细信息，管理其数据和强行停止。

在**设置**屏幕上，点击**常规选项卡** > **应用程序**。

默认消息应用程序

此菜单允许您选择用作默认信息应用程序的信息应用程序。

在设置屏幕上，点击常规选项卡 > **默认消息应用程序**。

备份与重置

更改设置以管理您的设置和数据。

在设置屏幕上，点击常规选项卡 > **备份与重置**。

- **LG 备份** - 备份设备上的所有信息并在出现数据丢失或更换时进行恢复。如果需要更多信息，请参阅“**应用程序**”中的“**LG Backup**”部分。
- **备份我的数据** - 将应用程序数据、WLAN 密码及其他设置备份到 Google 服务器。
- **备份帐户** - 显示当前用于备份信息的帐户。
- **自动还原** - 重新安装应用程序时，恢复备份的设置和数据。
- **网络设置重置** - 重置所有网络设置。
- **重设出厂数据** - 将您的设置重置为出厂默认值，然后删除所有数据。如果以此方式重置设备，首次启动 Android 时，将提示您重新输入相同的信息。

关于手机

查看法律信息，检查设备状态和软件版本，并执行软件更新。

在设置屏幕上，点击常规选项卡 > **关于手机**。

附录

设备软件更新

从互联网更新 LG 设备软件

有关使用此功能的更多信息，请访问 <http://www.lg.com/common/index.jsp> → 选择您所在的国家/地区和语言。

此功能可帮助您方便地从互联网将设备固件更新为最新版本，而无需访问服务中心。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

由于设备固件更新要求用户在更新过程期间保持全部注意力，因此在继续执行操作之前，请确保留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的设备。

注意

- LG 保留根据自行判断决定固件更新仅可用于指定型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

通过空中下载（OTA）进行 LG 设备软件更新

此功能使您可以通过 OTA 方便地将设备的软件更新为较新的版本，而无需连接 USB 数据线。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

首先，您应在设备上检查软件版本：设置 > 常规选项卡 > 关于手机 > 更新中心 > 软件更新 > 现在检查更新。

注意

- 设备内存中您的个人数据（包括有关您的 Google 帐户、其他任何帐户、您的系统/应用程序数据和设置、下载的任何应用程序和 DRM 许可证的信息）可能会在设备软件的更新过程中遗失。因此，LG 建议您在更新设备软件之前，先备份个人数据。对于任何个人数据的遗失，LG 概不负责。
- 此功能取决于网络服务提供商、所在区域和国家/地区。

常见问题解答

本章列出了您在使用设备过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	设备中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，或者您在运营商网络范围之外。	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。
	运营商应用了新服务。	请与服务提供商联系。
密码不匹配	要更改安全码，必须再次输入以确认新密码。	如果忘记密码，请联系您的服务提供商。
	两次输入的密码不匹配。	
无应用程序可供设置	服务提供商不支持或需要注册。	请与服务提供商联系。
下载的应用程序导致大量错误。	请删除该应用程序。	<ol style="list-style-type: none">1 轻触 > > .2 轻触常规选项卡 > 应用程序。3 点击该应用程序 > 卸载。

信息	可能原因	可行解决措施
无法拨打 电话	拨号错误。	新网络未获得授权。
	已插入新 SIM 卡。	查看新的限制。
	达到预付费上 限。	与服务提供商联系或重新设置 PIN 2 的限制。
设备无法 打开	按电源/锁定键时 间过短。	请按电源/锁定键至少两秒钟。
	电池未充电。	为电池充电。 检查显示屏上的 充电指示灯。
充电错误	电池未充电。	为电池充电。
	外部温度太热或 太冷。	确保设备在正常温度下充电。
	触点问题	检查充电器以及到设备的连 接。
	无电压	请将充电器插入其他插座。
	充电器故障	更换充电器。
	错误充电器	请仅使用原装 LG 配件。
不允许使用 号码。	已打开固定拨号 功能。	检查“设置”功能表并关闭该 功能。
无法接收/ 发送短信和 图片	内存已满	从设备中删除一些数据（如应 用程序或信息），以释放出更 多可用内存。
文件无法 打开	不受支持的文件 格式	检查受支持的文件格式。

信息	可能原因	可行解决措施
无声音	振动模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	如果尝试操作时，屏幕冻结或设备不响应，请取出并重新插入电池。然后重启设备。 或者 尝试通过网站执行软件更新。

防盗指南

您可以设置设备，以防他人在未经您许可的情况下将手机恢复出厂设置，从而盗用您的手机。例如，如果您的设备丢失、被盗或被擦除，只有使用您的 Google 帐户或屏幕锁定信息才能使用设备。

要确保您的设备受到保护，您只需要采取如下措施：

- **设置屏幕锁定：**如果您的设备丢失或被盗，但您设置了屏幕锁定，除非解锁屏幕，否则无法使用“设置”菜单格式化设备。
- **在设备上添加您的 Google 帐户：**如果您的设备内容被擦除，但设备上有 Google 帐户，则只有在输入 Google 帐户信息之后才能完成设置过程。

对设备进行保护之后，如果需要恢复出厂设置，您需要解锁屏幕或输入 Google 帐户密码。此举确保只有您或您信任的人才能执行重置。

备注

- 执行恢复出厂设置之前，请务必牢记您添加至设备的 Google 帐户和密码。如果您在设置过程中无法提供帐户信息，那么您在执行恢复出厂设置之后将根本无法使用设备。

更多信息

开源软件提示信息

为取得本产品内搭载的 GPL、LGPL、MPL 及其他开源证书下的源代码, 请您访问 <http://opensource.lge.com>。

除源代码以外, 所有相关的许可条款、免责声明和版权通知均可供下载。

LG Electronics 在收到发送至 opensource@lge.com 的电子邮件请求后, 也可以 CD-ROM 的形式为您提供开源代码, 仅收取执行配送的费用 (如介质费用、运输费和手续费)。

此报价从您购买该产品之日起, 三年内有效。

商标

- 版权所有 © 2016 LG Electronics Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Google Maps™、Gmail™、YouTube™、Hangouts™ 和 Play Store™ 是 Google, Inc. 的商标。
- Bluetooth® 是 Bluetooth SIG, Inc. 在全球的注册商标。
- WLAN® 和 WLAN 徽标是 WLAN Alliance 的注册商标。
- 所有其他商标和版权是其各自所有者的财产。

确认声明

LG Electronics 特此宣布此 LG-K350Y 产品符合指令 1999/5/EC 的核心要求和其它相关规定。有关《确认声明》的副本, 请访问 <http://www.lg.com/global/declaration>

About this user guide

ENGLISH

Thank you for choosing LG. Please carefully read this user guide before using the device for the first time to ensure safe and proper use.

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- This device is not suitable for people who have a visual impairment due to the touchscreen keyboard.
- Descriptions are based on the device default settings.
- Default apps on the device are subject to updates and support for these apps may be withdrawn without prior notice. If you have any questions about an app provided with the device, please contact a LG Service Centre. For user-installed apps, please contact the relevant service provider.
- Modifying the device's operating system or installing software from unofficial sources may damage the device and lead to data corruption or data loss. Such actions will violate your LG licence agreement and void your warranty.
- Some contents and illustrations may differ from your device depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully responsible for the illegal use of media.
- Additional charges may apply for data services, such as messaging, uploading, downloading, auto-syncing and location services. To avoid additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

Instructional notices

 WARNING	Situations that could cause injury to yourself and others, or damage to device or other property.
 NOTE	Notices or additional information.

Table of contents

Guidelines for safe and efficient use	5	Changing the screen lock method	29
Special Features.....	12	Smart Lock.....	29
Capture+	13	Home screen.....	30
Viewing the saved memo.....	13	Getting to Know the Home Screen.....	30
Gesture shot.....	14	Returning to recently used applications	31
Taking the photos with a gesture.....	14	Customising the Home screen.....	32
Basics.....	15	Notifications panel	33
Accessories	16	Capturing a screenshot.....	35
Device layout	17	On-screen keyboard	35
Turning Your Device On and Off	19	Using the keypad and entering text.....	35
Installing the SIM card and battery	19	Entering special characters.....	36
Charging the battery	21	Transferring data between a PC and the device	37
Optimizing battery life	22	Transferring data using USB connection.....	37
Inserting the memory card.....	23	LG Bridge	38
Removing the memory card	24	Features of LG Bridge	38
Touch screen tips.....	24	To download the LG Bridge software.....	38
Tap or touch	24	Apps	39
Touch and hold	25	Installing or uninstalling apps.....	40
Drag	25	To open the Play Store app.....	40
Swipe or slide	25	To open a screen with details about an app	40
Double-tap.....	26	To uninstall applications.....	40
Pinch-to-Zoom	26	Calls.....	40
Google account setup.....	27	Making a call	40
Creating your Google account	27	Calling your contacts.....	41
Signing into your Google account.....	27	Answering and rejecting a call	41
Locking and unlocking the device	28	Making a second call.....	41
KnockON.....	28	Viewing your call logs.....	41
Knock Code.....	28	Change your call settings	42
		Contacts	42

Searching for a contact.....	42	Calculator	55
Adding a new contact.....	42	Calendar	55
Favourites contacts.....	43	Tasks	56
Creating a group.....	43	Voice Recorder.....	56
Messaging.....	44	Recording a sound or voice.....	56
Sending a message.....	44	Downloads.....	56
Conversation view.....	44	FM Radio.....	57
Changing your messaging settings	44	LG Backup.....	57
Camera	45	About backing up and restoring device data.....	57
Taking a photo.....	45	To backup your device data	58
Camera options on the viewfinder.....	45	Google apps	58
Once you have taken a photo	47	Settings.....	60
Recording a video	47	Access the Settings menu	61
After recording a video	48	Networks Settings.....	61
Gallery	48	Wi-Fi.....	61
Viewing pictures.....	49	Wi-Fi Direct.....	62
Editing photos.....	49	Bluetooth.....	62
Setting wallpaper.....	49	Mobile data.....	63
Zooming in and out.....	49	Call.....	64
Playing a video.....	50	NFC.....	65
Deleting photos/videos.....	51	Android Beam.....	65
Email	51	Printing	65
Adding an account	51	USB tethering.....	65
Working with account folders.....	51	Wi-Fi hotspot	65
Composing and sending email.....	52	Bluetooth tethering	66
Changing an email general settings	52	Airplane mode	66
Deleting an email account	52	Mobile networks	67
Music	52	VPN.....	67
Playing a song.....	53	Sound & notification settings.....	67
Music player options.....	53	More settings.....	68
Clock	54	Display settings.....	68
Alarms.....	54		
Timer.....	54		
World clock.....	55		
Stopwatch.....	55		

Home screen.....	68
Lock screen.....	68
Home touch buttons.....	69
More display settings.....	69
General settings.....	70
Language & keyboard.....	70
Location.....	70
Accounts & sync.....	70
Accessibility.....	71
Shortcut key.....	72
Google.....	72
Security.....	73
Date & time	73
Storage & USB.....	73
Battery & power saving	74
Memory	74
Apps.....	74
Default message app	75
Backup & reset	75
About phone.....	75
Appendix.....	76
Device software update	77
FAQ.....	78
Anti-Theft Guide	80
More information.....	82
Open source software notice information.....	82
Trademarks	82
Declaration of conformity.....	82

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-K350Y has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.523 W/kg (10 g) and when worn on the body is 1.420 W/Kg (10 g).

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 5 mm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 5 mm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

- Always use genuine LG batteries, chargers and accessories approved for use with this particular device model. The use of any other types may void any approval or warranty applying to the device and may be dangerous.
- Some contents and illustrations may differ from your device without prior notice.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the colour of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0°C and 40°C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE

- Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

Special Features

Capture+

You can use Capture+ function to easily and efficiently create memos during a call, with a saved picture or on the current screen.

- 1 Touch and slide the status bar downward and tap . If you can not see , tap > checkmark **Capture+** to enable.
- 2 Create a memo using the following options:

	Tap to save the memo you've created.
	Tap to undo the most recent action.
	Tap to redo the most recently deleted action.
	Tap to insert text into your memo.
	Tap to select the pen type and colour.
	Tap to use the eraser to erase the pen marks on the memo.
	Tap to crop the image of memo.
	Tap to select the share or paper style.
	Tap to hide or display the toolbar.

NOTE

- While using the Capture+, use your fingertip, not the fingernail.
- 3 Tap to save the current memo to or .

Viewing the saved memo

Tap > > and select the **Capture+** album.

Gesture shot

The Gesture shot feature allows you to take a picture with a hand gesture using the front camera.


Taking the photos with a gesture

There are two methods for using the Gesture shot feature.

- Raise your hand, with an open palm, until the front camera detects it and a box appears on the screen. Then close your hand into a fist to start the timer, allowing you time to get ready.

OR

- Raise your hand, in a clenched fist, until the front camera detects it and a box appears on the screen. Then unclench your fist to start the timer, allowing you time to get ready.

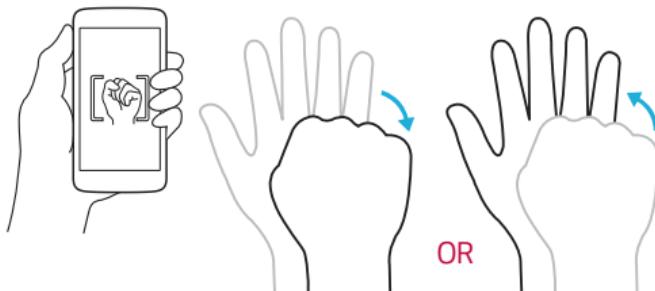

Basics

Accessories

These accessories are available for use with the your device.



- Travel Adaptor
- Quick Start Guide
- Stereo Headset
- USB Cable
- Battery



NOTE

- Items described above may be optional.
- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- The items supplied with the device and any available accessories may vary depending on the region or service provider.

Device layout

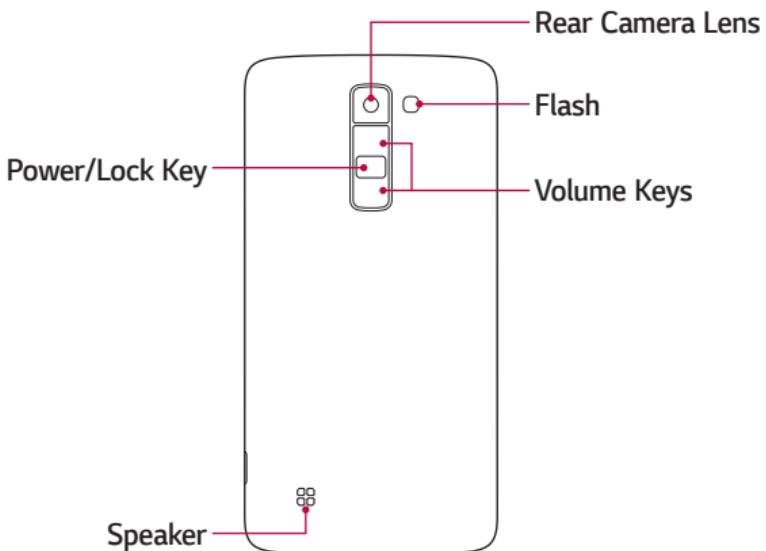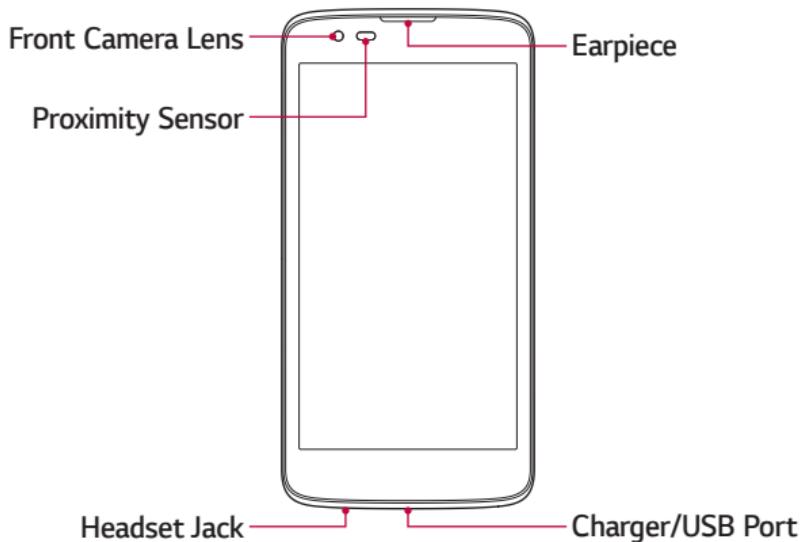

Power/Lock Key	<ul style="list-style-type: none">• Turn your device on/off by pressing and holding this key.• Short press to turn on/off the screen.
Volume Keys	<p>While screen is off:</p> <ul style="list-style-type: none">• Press Volume Up Key twice to launch Capture+.• Press Volume Down Key twice to launch Camera. <p>On the Home screen:</p> <ul style="list-style-type: none">• Control ringer volume. <p>During a call:</p> <ul style="list-style-type: none">• Control your earpiece volume when playing audio/video.• Control volume continuously.

NOTE: Proximity Sensor

- When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

WARNING

- Placing a heavy object on the device or sitting on it can damage the display and touch screen functions. Do not cover the proximity sensor with screen protectors or any other type of protective film. This could cause the sensor to malfunction.

Turning Your Device On and Off

Turning your device on

Press and hold the Power/Lock Key on the back of the device for a couple of seconds until the screen turns on.

Turning your device off

- 1 Press and hold the Power/Lock Key on the back of the device until the device options menu appears.
- 2 Tap Power off > OK to confirm that you want to turn off the device.

Installing the SIM card and battery

Insert the SIM card provided by the device service provider, and the included battery.


WARNING

- Do not insert a memory card into the SIM card slot. If a memory card happens to be lodged in the SIM card slot, take the device to a LG Service Centre to remove the memory card.


NOTE

- Only the Nano SIM cards work with the device.


- 1 To remove the back cover, hold the device firmly in one hand. With your other hand, lift off the back cover with your thumbnail as shown in the figure.

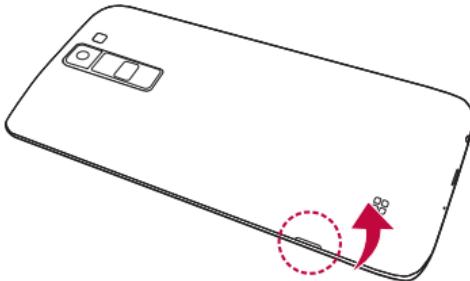


2 Slide the SIM card into the SIM card slot as shown in the figure. Make sure the gold contact area on the card is facing downward.

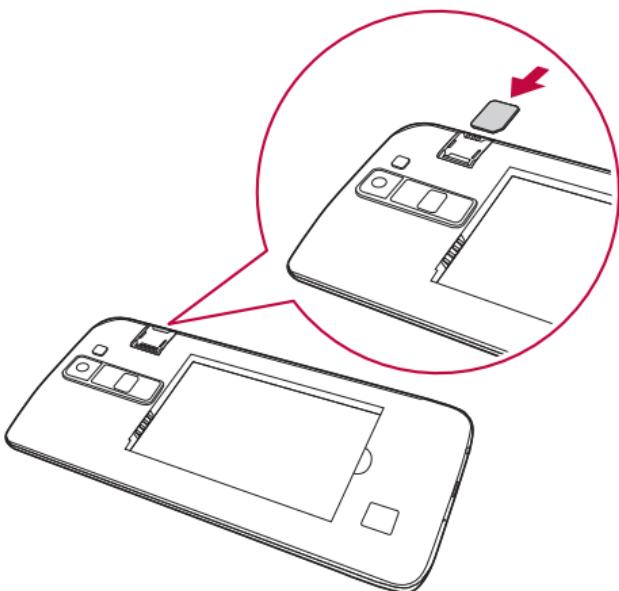

3 Insert the battery.

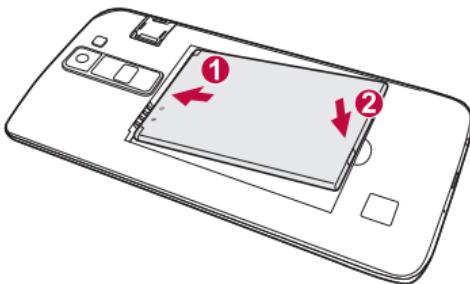

- 4** To replace the cover onto the device, align the back cover over the battery compartment and press it down until it clicks into place.

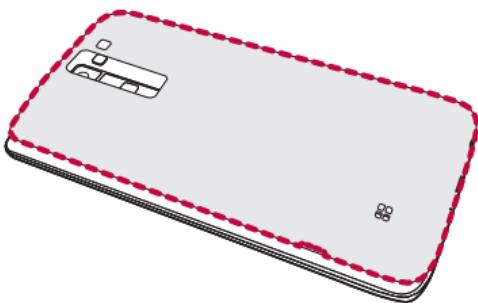


Charging the battery

Charge the battery before using it for first time. Use the charger to charge the battery. A computer can also be used to charge the battery by connecting the device to it using the USB cable.

WARNING

- Use only LG-approved chargers, batteries and cables. If you use unapproved chargers, batteries or cables, it may cause battery charging delay. Or this can cause the battery to explode or damage the device, which are not covered by the warranty.

The charger connector is located at the bottom of the device. Insert the charger and plug it into a power outlet.

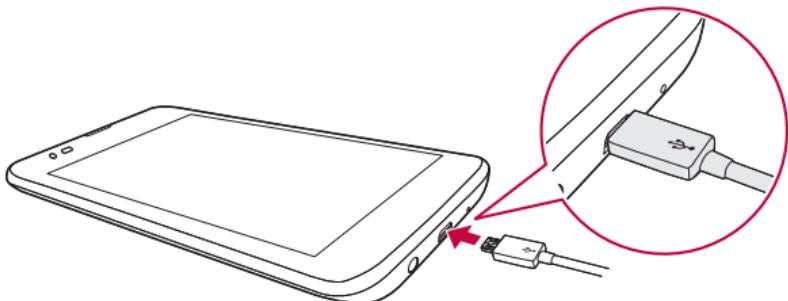



NOTE

- Do not open the back cover while your device is charging.

Optimizing battery life

Extend your battery's power by turning off features that you do not need to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your device battery life

- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you download may consume battery power.
- While using downloaded applications, check the battery charge level.

Inserting the memory card

Your device supports up to a 32GB microSD card. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.


⚠️ WARNING

- Some memory cards may not be fully compatible with the device. If you use an incompatible card, it may damage the device or the memory card, or corrupt the data stored in it.

💡 NOTE

- If you write and erase data too frequently, it will shorten the lifespan of memory cards.

- 1 Remove the back cover.
- 2 Insert a memory card with the gold-coloured contacts facing downwards.

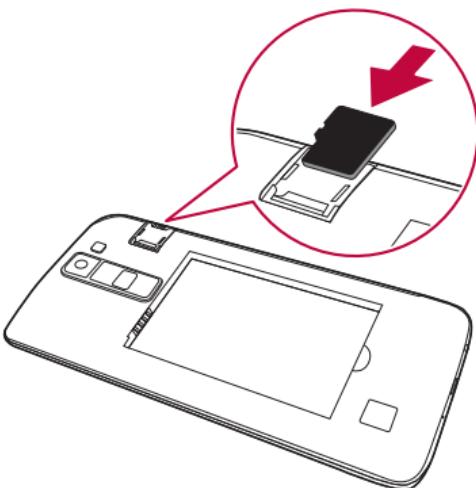

- 3 Replace the back cover.

Removing the memory card

Before removing the memory card, unmount it for safety.

1 Tap > > General tab > Storage & USB > .

2 Remove the back cover and pull out the memory card.

WARNING

- Do not remove the memory card while the device is transferring or accessing information. This behavior can cause data to be lost or corrupted or can damage the memory card or the device. LG is not responsible for losses that result from the abuse or improper use of memory cards, including the loss of data.

Touch screen tips


Here are some tips on how to navigate on your device.

NOTE

- Do not press too hard; the touch screen is sensitive enough to pick up a light, yet firm tap.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other buttons.


Tap or touch

Tap or touch to activate your chosen item, link, shortcut, or letter on the on-screen keyboard.

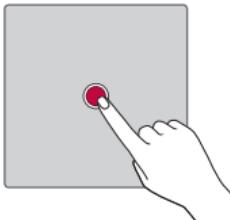


Touch and hold

Touch and hold an item on the screen by tapping it and not lifting your finger until an action occurs.

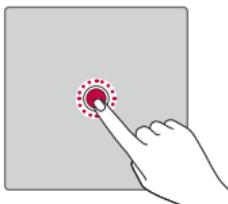


Drag

Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

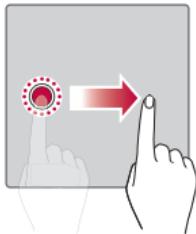


Swipe or slide

To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead).

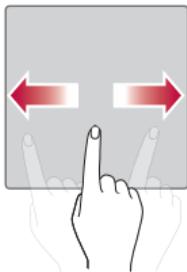


Double-tap

Double-tap to zoom on a picture or a map.

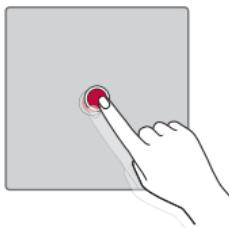

Pinch-to-Zoom

Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser, Maps, or when viewing pictures.

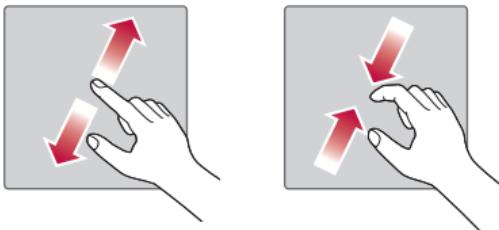

Google account setup

The first time you open a Google application on your device, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

Creating your Google account

- 1 Tap > > > General tab > Accounts & sync.
- 2 Tap ADD ACCOUNT > Google > Or create a new account.
- 3 Enter your first and last name, then tap NEXT.
- 4 Enter a username and tap NEXT. Your device will communicate with Google servers and check for username availability.
- 5 Enter your password and tap NEXT.
- 6 Follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing into your Google account

- 1 Tap > > > General tab > Accounts & sync.
- 2 Tap ADD ACCOUNT > Google.
- 3 Enter your email address and tap NEXT.
- 4 Enter your password and tap NEXT.
- 5 After signing in, you can use Gmail and take advantage of Google services.

After signing in, your device will sync with your Google services, such as Gmail, Contacts, and Google Calendar. You can also use Maps, download applications from Play Store, back up your settings to Google servers, and take advantage of other Google services on your device.

Locking and unlocking the device

Pressing the Power/Lock Key turns off the screen and puts the device into lock mode. The device automatically gets locked if it is not used for a specified period. This helps to prevent accidental taps and saves battery power.

To unlock the device, press the Power/Lock Key and swipe the screen in any direction.

KnockON

The KnockON feature allows you to double-tap the screen to easily turn it on or off.

Turning the screen on

- 1 Double-tap the centre of the Lock screen to turn the screen on.
- 2 Unlock the screen or access any of the available shortcuts or widgets.

Turning the screen off

- 1 Double-tap an empty area of the Home screen or the status bar.
- 2 The screen will turn off.

NOTE

- For better recognition performance, tap on the centre of the screen, but not on the bottom or on the top of the screen.
- Use the fingertip instead of fingernail to tap the screen for turning it on or off.

Knock Code

The Knock Code feature allows you to create your own unlock code using a combination of knocks on the screen. You can access the Home screen directly when the screen is off by tapping the same sequence on the screen.

NOTE

- If you enter the wrong Knock Code 6 times, it will compulsorily take you to your Google account log in/backup PIN.

Setting up the Knock Code feature

- 1 Tap > > > Display tab > Lock screen > Select screen lock > Knock Code.
- 2 Tap the squares in a pattern to set your Knock Code. Your Knock Code pattern can be 6 to 8 taps.

Unlocking the screen using the Knock Code

You can unlock the screen by tapping the Knock Code pattern you already set, when the screen turns off.

Changing the screen lock method

You can change the way that you lock the screen to prevent others accessing your personal information.

- 1 Tap > > > Display tab > Lock screen > Select screen lock.
- 2 Select a desired screen lock from None, Swipe, Knock Code, Pattern, PIN and Password.

NOTE

- Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.

Smart Lock

You can use Smart Lock to make unlocking your device easier. You can set it to keep your device unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognises your face.


Setting up Smart Lock feature

- 1 Tap > > > Display tab > Lock screen > Smart Lock.
- 2 Before you add any trusted devices, trusted places, or trusted face, you need to set up a screen lock (Knock Code, Pattern, PIN or Password).

Home screen

The Home screen is the starting point for many applications and functions. It allows you to add items like app shortcuts and Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping O.

Getting to Know the Home Screen

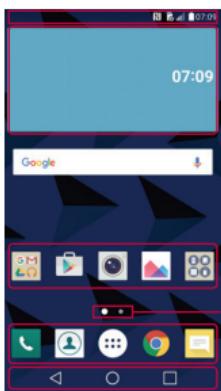

- ① Status Bar
- ② Widget
- ③ Application Icons
- ④ Location Indicator
- ⑤ Quick Button Area
- ⑥ Home Touch Buttons

- ① **Status Bar** – Shows the device status information, including the time, signal strength, battery status and notification icons.
- ② **Widget** – Widgets are self-contained applications that can be accessed through the Apps drawer or on the Home screen. Unlike a shortcut, a Widget can function as an on-screen application.
- ③ **Application Icons** – Tap an icon (application, folder, etc.) to open and use it.
- ④ **Location Indicator** – Indicates which Home screen canvas you are currently viewing.
- ⑤ **Quick Button Area** – Provides one-touch access to the function in any Home screen canvas.

⑥ Home Touch Buttons

<input type="triangle-left"/> Back Button	Returns to the previous screen. Also closes pop-up items, such as menus, dialog boxes and the on-screen keyboard.
<input type="circle"/> Home Button	Return to the Home screen from any screen.
<input type="square"/> Overview Button	Displays recently used applications. If you touch and hold this button, it opens a menu of available options.

Viewing other Home screen panels

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets and more.

- Slide your finger left or right across the Home screen to access additional canvases.

Returning to recently used applications

Multitasking is easy with Android, you can keep more than one application running at the same time. There is no need to quit an application before opening another. Use and switch between several open applications.

Android manages each application, stopping and starting them as needed to make sure that idle applications don't consume resources unnecessarily.

- 1 Tap . A list of recently used applications will be displayed.
- 2 Tap the application you want to access. This does not stop the previous app from running in the background. Make sure to tap to back out of an app after using it.
 - To close an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap Clear all.

Customising the Home screen

You can customise your Home screen by adding apps and widgets and changing wallpapers.

Adding items on your Home screen

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you want to add. You then see this added item on the Home screen.
- 3 Drag it to the desired location and lift your finger.

NOTE

- To add an application icon to the Home screen from the Apps screen, touch and hold the application you want to add.

Removing an item from the Home screen

While on the Home screen, touch and hold the icon you want to remove, and drag it to .

Adding an app to the Quick Button Area

From the Apps screen or on the Home screen, touch and hold an application icon and drag it to the Quick Button Area. Then release it in the desired location.

Removing an app from the Quick Button Area

Touch and hold the desired Quick Button, drag it to .

NOTE

- The Apps Button  cannot be removed.

Customising app icons on the Home screen


- 1 Touch and hold an application icon until it unlocks from its current position, then release it. The editing icon  appears in the upper-right corner of the application.
- 2 Tap the application icon again and select the desired icon design and size.
- 3 Tap OK to save the change.

Notifications panel

Notifications alert you to the arrival of new messages, calendar events and alarms, as well as ongoing events, such as when you are on a call.

Opening the notifications panel

Swipe down from the status bar to open the notifications panel. To close the notifications panel, swipe the screen upwards or tap <|.

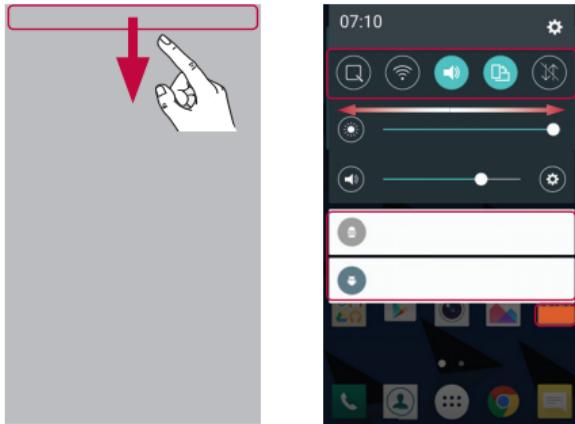

- ① Tap each quick setting button to toggle it on/off. Touch and hold the desired button to directly access the settings menu for the function. To see more toggle buttons, swipe left or right. Tap to remove, add or rearrange quick setting buttons.
- ② Current notifications are listed, each with a brief description. Tap a notification to view it.
- ③ Tap to clear all the notifications.

When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons, such as Wi-Fi and battery strength are shown on the right.

Indicator icons on the Status Bar

Indicator icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.

Notification icons



Status icons



The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description	Icon	Description
	No SIM card inserted		A song is currently playing
	No network signal available		Silent mode is on
	Airplane mode is on		Vibrate mode is on
	Connected to a Wi-Fi network		Battery fully charged
	Wired headset connected		Battery is charging
	Call in progress		The device is connected to a PC via a USB cable
	Missed call		Downloading data
	Bluetooth is on		Uploading data
	System warning		GPS is on
	An alarm is set		Data is synchronizing
	New voicemail available		Choose input method
	New text or multimedia message		Wi-Fi hotspot is active



NOTE

- The icon's location in the status bar may differ according to the function or service.
- The available options may vary depending on the region or service provider.

Capturing a screenshot

Press and hold the **Volume Down Key** and the **Power/Lock Key** at the same time for 2 seconds to capture a screenshot of the current screen.

To view the captured image, tap > > > **Screenshots** folder.

On-screen keyboard

You can enter text by using the on-screen keyboard. The on-screen keyboard appears on the screen when you tap an available text entry field.

Using the keypad and entering text

Icon	Description
	Tap once to capitalise the next letter you type. Double-tap for all caps.
	Tap to go to the keyboard settings. Touch and hold to enter text by voice or access the clip tray.
	Tap to enter a space.
	Tap to create a new line.
	Tap to delete the previous character.

Entering special characters

The on-screen keyboard allows you to enter special characters.

For example, to input "á", touch and hold the "a" button until the pop-up appears and displays related special characters. Without lifting the finger, drag your finger to the desired special character. Once it's highlighted, lift your finger.

NOTE

- A symbol at the top right corner of a key indicates that additional characters are available for that key.

Transferring data between a PC and the device

You can copy or move data between a PC and the device.

Transferring data using USB connection

- 1 Connect your device to a PC using the USB cable that came with your device.
- 2 Open the Notifications panel, tap the current connection type, and select **Media device (MTP)**.
- 3 A window will pop-up on your PC, allowing you to transfer the desired data.

NOTE

- The LG Android Platform Driver must be installed on your PC to be able to detect the device.
- Check the requirements for using **Media device (MTP)**.

Items	Requirement
OS	Microsoft Windows XP SP3, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

LG Bridge

LG Bridge is an application that helps you conveniently manage images, music, videos, documents, etc. saved on a LG device on your PC. Also, you can back up your files such as contacts and images to your PC or update software of a device.

NOTE

- You can see detailed instructions on how to use LG Bridge in Help menu after installing and opening the program.
- Supported features may vary depending on the device.
- The LG unified USB driver is a program required to connect an LG device to a PC. It is automatically installed when installing LG Bridge.

Features of LG Bridge

- Manage contents from your device on PC via Wi-Fi or data.
- Back up and restore the data of your device via USB.
- Update software of a device on your PC via USB.

To download the LG Bridge software

- 1 Go to www.lg.com.
- 2 Tap the Search button and enter the model name to search for the model.
- 3 Select the model information and click **Product Support** .
- 4 select the **PC SYNC** tab > **Windows** or **Mac OS** > **DOWNLOAD** to download LG Bridge.

Apps

Installing or uninstalling apps

Play Store allows you to browse and search for free and paid applications.

To open the Play Store app

Tap > > .

To open a screen with details about an app

At any time while browsing in Play Store, tap an app to open its details screen.

The App details screen includes a description, ratings, comments, and related information about the app. From this screen, you can download, install, uninstall, rate the app, and more.

To uninstall applications

- 1 Tap > > > General tab > Apps.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap Uninstall.

Calls

You can enjoy clear calling across the region.

Making a call

- 1 Tap > .
- 2 Enter the number by using the dialer. To delete a digit, tap .
- 3 After entering the desired number, tap to place the call.
- 4 To end the call, tap .

NOTE

- To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Tap  > .
- 2 Scroll through the contact list. You can also enter the contact's name in the Search field or scroll along the alphabet letters on the right edge of the screen.
- 3 In the list that is displayed, tap  you want to call.

Answering and rejecting a call

- Swipe  in any direction to answer an incoming call.
- Swipe  in any direction to decline an incoming call.

NOTE

- Swipe  if you want to decline a call and send a message to the caller.

Making a second call

- 1 During your first call, tap  > Add call and enter the number.
- 2 Tap . Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 3 Tap the displayed number to toggle between calls. Or tap  to start a conference call.
- 4 To end all calls, tap .

NOTE

- You are charged for each call you make.

Viewing your call logs

- 1 Tap  >  > Call logs tab.
- 2 View a list of all dialed, received and missed calls.

NOTE

- Tap any call log entry to view the date, time and duration of the call.
- Tap  > Delete all to delete all of the recorded items.

Change your call settings

You can configure call settings, such as call forwarding, as well as other special features offered by your carrier.

- 1 Tap  > .
- 2 Tap  > Call settings and configure the desired options.

Contacts

You can add contacts on your device and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

- 1 Tap  > .
- 2 Tap Search contacts and enter the contact name using the keyboard. Matches are displayed as you begin to type.

Adding a new contact

- 1 Tap  > .
- 2 Enter the new contact's number.
- 3 Tap  > Add to Contacts > New contact.
- 4 If you want to add a picture to the new contact, tap the image icon. Choose Take photo or Select from Gallery.
- 5 Enter the desired information for the contact.
- 6 Tap SAVE.

Favourites contacts

You can classify frequently called contacts as favourites.

Adding a contact to your favourites

- 1 Tap  > .
- 2 Tap a contact to view its details.
- 3 Tap the star at the top right of the screen. The star turns yellow.

Removing a contact from your favourites list

- 1 Tap  >  > Favorites tab.
- 2 Choose a contact to view its details.
- 3 Tap the yellow star at the top right of the screen. The star turns a dark colour and the contact is removed from your favourites.

Creating a group

- 1 Tap  >  > Groups tab.
- 2 Tap  > New group.
- 3 Enter a name for the new group. You can also set a distinct ringtone for the newly created group.
- 4 Tap Add members to add contacts to the group and tap ADD.
- 5 Tap SAVE to save the group.

NOTE

- If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contact list.

Messaging

Your device combines text and multimedia messaging into one intuitive, easy to use menu.

NOTE

- You may be charged for each message you send. Please consult with your service provider.

Sending a message

- 1 Tap  >  > .
- 2 Tap , then select one or more entries from your Contacts list.

OR

Enter a contact name or contact number into the **To** field. As you enter the contact name, matching contacts appear. You can tap a suggested recipient and add more than one contact.

- 3 Tap the text field and start entering your message.
- 4 Tap  to open the options menu. Choose from any of the available options.
- 5 Tap  to attach the file that you want to share with message.
- 6 Tap **Send** to send your message.

Conversation view

Messages exchanged with another party are displayed in chronological order so that you can conveniently see and find your conversations.

Changing your messaging settings

The messaging settings of your device are predefined to allow you to send messages immediately. You can change the settings based on your preferences.

- Tap  >  >  > **Settings**.

Camera

You can use the camera or camcorder to take and share pictures and videos.

- Tap > > .

Taking a photo

- 1 Frame your subject on the screen.
- 2 A square around the subject indicates that the camera has focused.
- 3 Tap to take a photo. Your picture will be automatically saved to the Gallery.

Camera options on the viewfinder



1		Tap to hide/display the camera options on the viewfinder.
2		Tap to manage the camera's flash.
3		Tap to swap between the rear camera lens and the front camera lens.
4		Tap to open the camera settings menu.
5		Tap to view the last photo or video you recorded.
6		Tap to start recording.

7		Tap to take a photo.
8		Tap to exit the camera.

NOTE

- Be sure to clean the protective lens cover with a microfiber cloth before taking pictures. A lens cover with smudges from fingers can cause blurry pictures with a "halo" effect.

Using the advanced settings

In the camera viewfinder, tap to show the advanced options. Tap each icon to adjust the following camera settings.

	Tap to set the ratio of your picture and the quality of video.
	Tap to activate the camera shutter by voice command. When on, you just say "Cheese", "Smile", "LG", etc. to take a picture.
	Tap to set your camera's timer. This is ideal if you want to be a part of the picture or video.
	Tap to take better pictures and record better videos by displaying a grid line for help with alignment.
	Tap to set the storage location for your pictures and videos. Choose from IN (internal memory) and SD (memory card). This menu appears only when the SD card is inserted.
	Tap to learn how a function works. This icon will provide you with a help guide.

Once you have taken a photo

Tap the image thumbnail on the screen to view the last photo you took.

	Tap to edit the photo.
	Tap to take another photo immediately.
	Tap to open the available sharing options.
	Tap to delete the photo.
	Tap to access additional options.
	Tap to add the photo to your favourites.

Recording a video

- 1 Tap > > .
- 2 Frame your subject on the screen.
- 3 Tap to start recording the video. The length of the recording is displayed on the top of the screen.

NOTE

- Tap to take pictures while recording video.
- 4 Tap to pause recording video. You can resume recording by tapping .
- OR**
- Tap to stop recording. Your video will be automatically saved to the Gallery.

After recording a video

Tap the video thumbnail on the screen to view the last video you recorded.

	Tap to record another video immediately.
	Tap to open the available sharing options to share.
	Tap to delete the video.
	Tap to access additional options.
	Tap to add the video to your favourites

Gallery

The Gallery application presents the pictures and videos in your storage, including those you've taken with the Camera application and those you downloaded from the web or other locations.

- 1 Tap > > .
- 2 Tap an album to open it and view its contents. The pictures and videos in the album are displayed in chronological order.
- 3 Tap a picture in an album to view it.

NOTE

- Depending on the software installed, some file formats may not be supported.
- Some files may not play properly due to their encoding.
- If the file size exceeds the available memory, an error can occur when you open files.

Viewing pictures

The Gallery displays your pictures in folders. When an application, such as E-mail, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder.

Pictures are displayed by the date they were created. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

Editing photos

While viewing a photo, tap .

Setting wallpaper

While viewing a photo, tap  > Set image as to set the image as wallpaper or assign it to a contact.

Zooming in and out

Use one of the following methods to zoom in on an image:

- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place in the picture zoom in. Pinch in or double-tap the image to zoom out.

Playing a video

- 1 Tap > > .
- 2 Select the video you want to watch.

Video options



1		Tap to pause/resume video playback.
2		Touch and hold to fast-forward incrementally. Tap to fast-forward 10 seconds.
3		Touch and hold to rewind incrementally. Tap to rewind 10 seconds.
4		Tap to adjust the video volume.
5		Tap to lock/unlock the screen.
6		Tap to access additional options.

NOTE

- While playing a video, slide the right side of the screen up or down to adjust the sound.
- While playing a video, slide the left side of the screen up or down to adjust the brightness.
- While playing a video, slide your finger from left to right (or vice versa) to fast-forward and rewind.

Deleting photos/videos

Use one of the following methods:

- While in a folder, tap  , select the photos/videos and then tap **DELETE**.
- While viewing a photo, tap .

Email

You can use the Email application to read email from providers other than Gmail. The Email application supports the following account types: POP3, IMAP, Microsoft Exchange (for Enterprise users) and other accounts.

- Tap  >  > .

Adding an account

The first time you open the Email application, a setup wizard opens to help you add an email account. You can also add your email account using the **Settings** app.

- Tap  >  >  General tab > Accounts & sync > ADD ACCOUNT > Email.

Working with account folders

- Tap  > Show all folders.

Each account has Inbox, Sent, Drafts and Show all folders. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

- 1 Tap +.
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be offered from your contacts.
- 3 Tap the Cc/Bcc field to copy or blind copy to other contacts/email addresses.
- 4 Tap the text field and enter your message.
- 5 Longpress the text field to edit selected words .
- 6 Tap to attach the file you want to send with your message.
- 7 Tap to send the message.

Changing an email general settings

- Tap : > Settings > General settings.

Deleting an email account

- Tap : > Settings > : > Remove account > Select the account to delete > REMOVE > YES.

Music

Your device has a music player that lets you play all your favourite tracks.

NOTE

- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.
- Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Playing a song

- 1 Tap > > .
- 2 Select a music category tab at the top of the screen.
- 3 Tap the song you want to play.

Music player options



1		Tap to pause playback.
2		Tap to skip to the next track in the album, playlist or shuffle list. Touch and hold to fast-forward.
3		Tap to restart the current track or skip to the previous track in the album, playlist or shuffle list. Touch and hold to rewind.
4		Tap to adjust the volume.
5		Tap to open the music library.
6		Tap to play the current playlist in shuffle mode (tracks are played in random order).

7		Tap to toggle through repeat all songs, repeat current song and repeat off.
8		Tap to add the song to your favourites.
9		Tap to open the current playlist.
10		Tap to access additional options.

Clock

The Clock app gives you access to the Alarms, Timer, World clock and Stopwatch functions. Access these functions by tapping the tabs across the top of the screen or swiping horizontally across the screen.

- Tap > > .

Alarms

The Alarms tab allows you to set alarms.

- 1 Tap Alarms tab.
- 2 Tap to add a new alarm.
- 3 Adjust the settings as necessary and tap **SAVE**.

NOTE

- You can also tap an existing alarm to edit it.

Timer

The Timer tab can alert you with an audible signal when a set amount of time has passed.

- 1 Tap Timer tab.
- 2 Set the desired time on the timer.
- 3 Tap **Start** to start the timer.
- 4 Tap **Stop** to stop the timer.

World clock

The World clock tab allows you to easily check the current time in other cities around the world.

- 1 Tap **World clock** tab.
- 2 Tap  and select the desired city.

Stopwatch

The Stopwatch tab allows you to use your device as a stopwatch.

- 1 Tap **Stopwatch** tab.
- 2 Tap **Start** to initiate the stopwatch.
 - Tap **Lap** to record lap times.
- 3 Tap **Stop** to stop stopwatch.

Calculator

The Calculator app allows you to perform mathematical calculations using a basic or scientific calculator.

- 1 Tap  >  > .
- 2 Tap the number buttons to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, × or ÷) followed by =.

NOTE

- For more complex calculations, tap .

Calendar

The Calendar app allows you to track your schedule of events.

- 1 Tap  >  > .
- 2 Select a date and then tap .
- 3 Enter event details and tap **SAVE**.

Tasks

You can register tasks to your device to easily manage schedules.

- 1 Tap > > .
- 2 Tap to add a task.
- 3 Enter task details and then tap **SAVE**.

Voice Recorder

The Voice Recorder app records audible files for you to use in a variety of ways.

Recording a sound or voice

- 1 Tap > > .
- 2 Tap to begin recording.
- 3 Tap to end the recording.
- 4 Tap to listen to the recording.

NOTE

- Tap to access your recordings. You can listen to your saved recordings.

Downloads

Use this application to see what files have been downloaded through the applications.

- Tap > > .

FM Radio

Your device has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.

- Tap > > .

NOTE

- You must plug in your earphones in order to use them as an antenna.

LG Backup

About backing up and restoring device data

It is recommended that you regularly create and save a backup file on the internal storage, especially before updating any software. Maintaining a current backup file in storage memory may allow you to recover device data if your device is lost, stolen, or corrupted by an unforeseen issue. This LG Backup application is supported LG device, other software or operating system versions. As a result, when you buy the new LG device, you can backup the current device data to your new device.

If you have the LG Backup application preloaded on your device, you can backup and restore most of your data, including downloaded and pre-installed applications, bookmarks, calendar entries, contacts, home screen settings, and system settings.

WARNING

- To protect against an unexpected power off during backup or restore operations, due to insufficient battery power, you should always keep your battery fully charged.

NOTE

- All files that are stored on your device are deleted before the backup file is restored. Make sure to copy the backup file to another location.
- Please note that your device data will be overwritten with the content of your backup.

To backup your device data

- 1 Tap > > .
- 2 Select the desired options.
 - Copy data between devices – Copy data from old device to new device.
 - Back up & restore – Back up data or restore from backup.

Google apps

Google provides entertainment, social network, and business apps. You may require a Google account to access some apps.

To view more app information, access each app's help menu.

NOTE

- Some apps may not be available depending on the region or service provider.

Google

Search quickly for items on the Internet or your device.

Chrome

Search for information and browse webpages.

Gmail

Send or receive emails via the Google Mail service.

Maps

Find your location on the map, search for locations, and view location information for various places.

YouTube

Watch or create videos and share them with others.

Drive

Store your content on the cloud, access it from anywhere, and share it with others.

Play Music

Discover, listen to, and share music on your device.

Play Movies & TV

Watch videos stored on your device and download various content to watch from the Play Store.

Hangouts

Chat with your friends individually or in groups and use images, emoticons, and video calls while you are chatting.

Photos

Manage photos, albums, and videos that you have saved on the device and uploaded to Google+.

Voice Search

Search quickly for items by saying a keyword or phrase.

Docs

Edit Word documents.

Sheets

Edit Excel spreadsheets.

Slides

Edit PowerPoint presentations.

Settings

Access the Settings menu

The Settings app allows you to customise and personalise your device.

Opening the settings app

- Tap > touch and hold > System settings.
- OR
- Tap > > .

Viewing settings

Tap to switch the view mode.

- List view – Scroll up and down through the list.
- Tab view – Swipe left and right or tap the tab you want.

NOTE

- The instructions to perform tasks in this guide are based on the default view setting.

Networks Settings

Wi-Fi

You can use high-speed Internet access while within the coverage of the wireless access point (AP).

On the **Settings** screen, tap **Networks** tab > **Wi-Fi**.

- 1 Tap to turn Wi-Fi on and start scanning for available Wi-Fi networks.
- 2 Tap a network to connect to it.
 - If the network is secured with a lock icon, you will need to enter a security key or password.
 - The status bar displays icons that indicate Wi-Fi status.

NOTE

- If you are out of the Wi-Fi zone or have set Wi-Fi to Off, the device may automatically connect to the Web using data, which may incur data charges.

Wi-Fi Direct

Wi-Fi Direct provides a direct connection between Wi-Fi enabled devices without requiring an access point.

- Tap  > Advanced Wi-Fi > Wi-Fi Direct.

NOTE

- When in this menu, your device is visible to other visible Wi-Fi Direct devices nearby.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices.

NOTE

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth feature.
- Always make sure that you share and receive data with devices that are trusted and properly secured.
- If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Pairing your device with another Bluetooth device

- 1 On the **Settings** screen, tap **Networks** tab > **Bluetooth**.
- 2 Tap  to turn Bluetooth on and start scanning for available Bluetooth devices.
 - If you want to detect the visible devices in range additionally, tap **SEARCH**.
- 3 Choose the device you want to pair with from the list. Once the pairing is successful, your device connects to the other device.

NOTE

- Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognise their partnership and exchange information.
- Please consult documentation included with Bluetooth device for information on pairing mode and passcode (typically 0 0 0 0 – four zeroes).

Sending data via Bluetooth

- 1 Select a file or item such as a contact or media file.
- 2 Select the option for sending data via Bluetooth.
- 3 Search for and pair with a Bluetooth-enabled device.

NOTE

- Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Receiving data via Bluetooth

- 1 On the **Settings** screen, tap **Networks** tab > **Bluetooth**.
- 2 Tap  to turn Bluetooth on.
- 3 You will receive a request to accept a pairing attempt from the sending device. Be sure to select **ACCEPT**.

Mobile data

Displays the data usage and device data usage limit.

- Tap  to toggle your device data connection On or Off. This allows you to manage your device data usage. You can use a Wi-Fi network connection for data instead.

Call

Allows you to configure various call settings.

On the **Settings** screen, tap **Networks** tab > **Call**.

- **Voicemail** – Allows you to select your carrier's voicemail service.
- **Fixed dialing numbers** – Allows you to manage and compile a list of numbers that can be called from your device. You need your PIN², which is available from your operator. If activated, only numbers in the fixed dial list can be called from your device.
- **Incoming voice call pop-up** – Displays a pop-up for an incoming call when an app is in use.
- **Call reject** – Allows you to set the call decline function.
- **Decline with message** – When you want to decline a call, you can send a quick message using this function. This is useful if you need to decline a call during a meeting.
- **Call forwarding** – Allows you to choose when to forward calls.
- **Auto answer** – Set the time before a connected hands-free device automatically answers an incoming call.
- **Connection vibration** – Vibrates your device when the other party answers the call.
- **Save unknown numbers** – Allows you to add unknown numbers to contacts after a call.
- **Power key ends call** – Allows you to use the Power key to end calls.
- **Silence incoming calls** – Enable to allow you to flip the device to silence incoming calls.
- **Call barring** – Locks incoming, outgoing or international calls.
- **Call duration** – Allows you to view the call duration for various types of calls.
- **Additional settings** – Allows you to change the following settings such as **Caller ID** or **Call waiting**, etc.
- **Speaker** – Turn on speaker phone when video call starts.

NFC

Your phone is an NFC-enabled cell mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimetres. You can share your content with an NFC tag or another NFC support device by simply tapping it with your device. If you tap an NFC tag with your device, it displays the tag content on your device.

Android Beam

When this feature is turned on, you can transfer app content to another NFC-capable device by holding the devices close together. Just bring the device together (typically back to back) and then tap your screen. The app determines what gets beamed.

Printing

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

USB tethering

Allows you to share the internet connection with your computer via a USB cable.

- 1 Connect your device to your PC with a USB cable.
- 2 On the **Settings** screen, tap **Networks** tab > **Tethering**.
- 3 Tap  to turn USB tethering on.

Wi-Fi hotspot

You can also use your device to provide a device broadband connection. Create a hotspot and share your connection.

On the **Settings** screen, tap **Networks** tab > **Tethering**.

- 1 Tap  to turn Wi-Fi hotspot on.
- 2 Tap Set up Wi-Fi hotspot to change the SSID, security type, password,

and other hotspot options.

Bluetooth tethering

Allows you to connect to other devices via Bluetooth.

- On the **Settings** screen, tap **Networks** tab > **Tethering**.
- Tap  to turn Bluetooth tethering on to share your connection via Bluetooth tethering.

Airplane mode

Allows you to use many of your device features, such as games, and music, when you are in an area where making or receiving calls or data use is prohibited. When you set your device to Airplane Mode, it cannot send or receive any calls or access online data.

On the **Settings** screen, tap **Networks** tab > **More** > **Airplane mode**.

Mobile networks

This menu allows you to configure various device network settings.

On the **Settings** screen, tap **Networks tab > More > Mobile networks**.

VPN

From your device, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

On the **Settings** screen, tap **Networks tab > More > VPN**.

Sound & notification settings

Allows you to change settings for various sounds on the device.

On the **Settings** screen, tap **Sound & notification tab**.

- **Sound profile** – Allows you to set your device sound profile.
- **Volume** – Adjust the device volume settings to suit your needs and environment.
- **Ringtone** – Allows you to set the ringtones for calls. You can also add and delete ringtones.
- **Ringtone ID** – Allows you to compose ringtones based on phone number of incoming call.
- **Sound with vibration** – Enable to set the device to vibrate in addition to the ringtone when you receive calls.
- **Vibration type** – Allows you to choose the type of vibration.
- **Do not disturb** – Allows you to set a schedule when to prevent interruptions from notifications. You can set to allow certain features to interrupt when Priority only is set.
- **Lock screen** – Allows you to choose if you want to show or hide notifications on the lock screen.
- **Apps** – Allows you to set notifications for individual apps including setting as priority and preventing them from displaying notifications.

More settings

Allows you to set other sound & notification settings.

On the **Settings** screen, tap **Sound & notification** tab > **More**.

- **Notification sound** – Allows you to set the notification sound. You can also add and delete notification sounds.
- **Sound effects** – This menu lets you select whether you hear tones when tapping numbers on the dial pad, selecting on-screen options, and more.
- **Message/call voice notifications** – Allows your device to read out incoming calls and message events automatically.

Display settings

Home screen

Allows you to set your home screen settings.

On the **Settings** screen, tap **Display** tab > **Home screen**.

- **Select Home** – Select the desired Home theme.
- **Theme** – Sets the screen theme for your device. You can download new themes from LG SmartWorld.
- **Wallpaper** – Sets the wallpaper to use on your Home screen.
- **Screen swipe effect** – Choose the desired type of effect to display when you swipe from one Home screen canvas to the next.
- **Allow Home screen looping** – Enable to allow continuous Home screen scrolling (loop back to first screen after last screen).
- **Help** – Displays help information for the Home screen.

Lock screen

Allows you to set your lock screen settings.

On the **Settings** screen, tap **Display** tab > **Lock screen**.

- **Select screen lock** – Allows you to set a screen lock type to secure your device.
- **Smart Lock** – Sets to keep your device unlocked with trusted device

or a place. If you need more information, please refer to **Smart Lock** section in **Locking and unlocking the device**.

- **Wallpaper** – Select the wallpaper to display for your lock screen.
- **Shortcuts** – Customize shortcuts on Lock screen.
- **Contact info for lost phone** – Allows you to display the owner information on the lock screen in case the device is lost.
- **Lock timer** – Allows you to set the amount of time before the screen automatically locks after the screen has timed-out.
- **Power key instantly locks** – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the lock timer setting.

Home touch buttons

Set the Home touch buttons displayed at the bottom of all screens. Set which buttons are displayed, their position on the bar and what they look like.

On the **Settings** screen, tap **Display** tab > **Home touch buttons**.

More display settings

Allows you to set other display settings.

On the **Settings** screen, tap **Display** tab.

- **Font type** – Select the desired font type.
- **Font size** – Select the desired font size.
- **Brightness** – Adjust the screen brightness by using the slider.
- **Auto-rotate screen** – Set to switch orientation automatically when you rotate the device.
- **Screen timeout** – Set the time delay before the screen automatically turns off.
- **Daydream** – Select the screen saver to be displayed when the device is sleeping while docked or charging.
- **Motion sensor calibration** – Allows you to improve the accuracy of the tilt and speed of the sensor.

General settings

Language & keyboard

Allows you to change the text input settings.

Select the language for the text on your device and for configuring the on-screen keyboard, including words that you've added to its dictionary.

On the **Settings** screen, tap **General tab > Language & keyboard**.

- **Language** – Choose a language to use on your device.
- **Current keyboard** – Allows you to select the current keyboard type.
- **LG Keyboard** – Change the LG Keyboard settings.
- **Google voice typing** – Change the voice input settings.
- **Text-to-speech output** – Tap to set the preferred engine or general settings for text-to-speech output.
- **Pointer speed** – Adjust the pointer speed.
- **Reverse buttons** – Reverse the mouse buttons to use primary button on right.

Location

Turn on location service, your device determines your approximate location using Wi-Fi and device networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

On the **Settings** screen, tap **General tab > Location**.

- **Mode** – Sets the how your current location information is determined.
- **Camera** – Enable to tag photos or videos with their locations.
- **Google Location History** – Allows you to choose your location information settings as accessed by Google and its products.

Accounts & sync

Use this menu to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own

schedules and whether all applications can synchronise user data automatically.

Gmail™, Calendar, and other applications may also have their own settings to control how they synchronise data; see the sections on those applications for details.

On the Settings screen, tap General tab > Accounts & sync.

- **Auto-sync data** – Enable this option to automatically sync all accounts you've added on your device.
- **ACCOUNTS** – Displays all of your added accounts. Tap one to view or manage it.
- **ADD ACCOUNT** – Tap to add new account.

Accessibility

Use the Accessibility settings to configure accessibility plug-ins you have installed on your device.

On the Settings screen, tap General tab > Accessibility.

- **Vision** – Sets options for people with impaired sight.
 - **TalkBack** – Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback.
 - **Message/call voice notifications** – Enable to allows you to hear automatic spoken alerts for incoming calls and messages.
 - **Screen shade** – Enable to set the screen to a darker contrast.
 - **Font size** – Sets the font size.
 - **Touch zoom** – Allows you to zoom in and out by triple-tapping the screen.
 - **Screen color inversion** – Enable to invert the colours of the screen and content.
 - **Screen color filter** – Allows you to change the colours of screen and content.
 - **Power key ends call** – Enable so that you can end voice calls by pressing the Power/Lock Key.
- **Hearing** – Sets options for people with impaired hearing.
 - **Captions** – Allows you to customise caption settings for those with hearing impairments.

- **Flash alerts** – Enable to set the flash to blink for incoming calls and notifications.
- **Turn off all sounds** – Enable to turn off all device sounds.
- **Audio type** – Sets the audio type.
- **Sound balance** – Sets the audio route. Move the slider on the slide bar to set it.
- **Motor & cognition** – Sets options for people with impaired motor skills.
- **Touch feedback time** – Sets the touch feedback time.
- **Touch assistant** – Show a touch board with easy access to common actions.
- **Screen timeout** – Sets the amount of time before the backlight turns off automatically.
- **Touch control areas** – Allows you to select an area of the screen to limit touch activation to just that area of the screen.
- **Accessibility features shortcut** – Allow you to access selected features quickly when triple-tapping the Home button.
- **Auto-rotate screen** – Enable to allow the device to rotate the screen depending on the physical device orientation (portrait or landscape).
- **Switch Access** – Allows you to interact with your device using one or more switches that work like keyboard keys. This menu can be helpful for users with mobility limitations that prevent them from interacting directly with the your device.

Shortcut key

Get quick access to apps by pressing the **Volume Keys** when the screen is off or locked.

On the **Settings** screen, tap **General tab > Shortcut key**.

- Press **Volume Up Key** twice to launch Capture+.
- Press **Volume Down Key** twice to launch Camera.

Google

Use Google Settings to manage your Google apps and account settings.

On the **Settings** screen, tap **General tab > Google**.

Security

Use this menu to configure how to help secure your device and its data.

On the **Settings** screen, tap **General** tab > **Security**.

- **Content lock** – Select lock types to lock memos for QuickMemo+.
- **Encrypt phone** – Allows you to encrypt data on the device for security. You will be required to enter a PIN or password to decrypt your device each time you power it on.
- **Encrypt SD card storage** – Encrypt SD card storage and keep data unavailable for other devices.
- **Set up SIM card lock** – Sets the PIN to lock your SIM card and allows you to change the PIN.
- **Password typing visible** – Enable to briefly show the last one character of passwords as you enter them so that you can see what you enter.
- **Phone administrators** – View or deactivate device administrators.
- **Unknown sources** – Allow installation of non-Play Store applications.
- **Verify apps** – Disallow or warn before installation of apps that may cause harm.
- **Storage type** – Displays the current storage type.
- **Certificate management** – Allows you to manage your security certificates.
- **Trust agents** – Select apps to use without unlocking screen.
- **Screen pin** – You can enable your device to only show a certain app's screen using screen pin.
- **Usage access for apps** – Allows you to view usage information of apps on your device.

Date & time

Set your preferences for how the date and time is displayed.

On the **Settings** screen, tap **General** tab > **Date & time**.

Storage & USB

You can monitor the used and available internal memory in the device.

On the **Settings** screen, tap **General tab > Storage & USB**.

DEVICE STORAGE

- **Internal storage** – Displays the total amount of space and the used space in your device internal memory in text and with a bar graph (unused space is gray). Tap to view the corresponding apps and the amount of space they use.

PORTABLE STORAGE

Displays the total amount of space and the used space in your memory card.

Battery & power saving

Displays the current battery status including the percentage of remaining charge and charging state.

On the **Settings** screen, tap **General tab > Battery & power saving**.

- **Battery usage** – Displays the battery usage level and battery use details. Tap one of the items to see more detailed information.
- **Battery percentage on status bar** – Checkmark to display the battery level percentage on the status bar next to the Battery icon.
- **Battery saver** – Tap the Battery Saver switch to toggle it on or off. Sets the battery charge percent level that automatically turns on Battery Saver.

Memory

You can monitor the memory used averagely and the memory used by apps in the device.

On the **Settings** screen, tap **General tab > Memory**.

Apps

Allows you to view details about the apps installed on your device, manage their data, and force them to stop.

On the **Settings** screen, tap **General tab > Apps**.

Default message app

This menu allows you to choose what messaging app to use as your default messaging app.

On the **Settings** screen, tap **General tab > Default message app**.

Backup & reset

Change the settings for managing your settings and data.

On the **Settings** screen, tap **General tab > Backup & reset**.

- **LG Backup** – Backs up all information on the device and restores it in the event of data loss or replacement. If you need more information, please refer to **LG Backup** section in **Apps**.
- **Back up my data** – Back up app data, Wi-Fi passwords, and other settings to Google servers.
- **Backup account** – Displays the account that is currently being used to back up information.
- **Automatic restore** – When reinstalling an app, restore backed up settings and data.
- **Network settings reset** – Reset all network settings.
- **Factory data reset** – Reset your settings to the factory default values and delete all your data. If you reset the device this way, you are prompted to re-enter the same information as when you first started Android.

About phone

View legal information, check device status and software versions, and perform a software update.

On the **Settings** screen, tap **General tab > About phone**.

Appendix

Device software update

LG device software update from the Internet

For more information about using this function, please visit

<http://www.lg.com/common/index.jsp> → select your country and language.

This feature allows you to conveniently update the firmware on your device to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the device firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your device.

NOTE

- LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG device software update via Over-the-Air (OTA)

This feature allows you to conveniently update your device software to a newer version via OTA, without connecting using a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

You should first check the software version on your device:

Settings > General tab > About phone > Update Center > Software Update > Check now for update.



NOTE

- Your personal data from internal device storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your device software. Therefore, LG recommends that you backup your personal data before updating your device software. LG does not take responsibility for any loss of personal data.
- This feature depends on your network service provider, region and country.

FAQ

This chapter lists some problems you might encounter when using your device. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM card error	There is no SIM card in the device or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Contact your service provider.
Codes do not match	To change a security code, must need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you entered do not match.	

Message	Possible causes	Possible corrective measures
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Downloaded application causes a lot of errors.	Remove the application.	<p>1 Tap > > .</p> <p>2 Tap General tab > Apps.</p> <p>3 Tap the app > Uninstall.</p>
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Device cannot be turned on	Power/Lock key pressed too briefly.	Press the Power/Lock key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure device is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the device.
	No voltage	Plug the charger into a different outlet.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.

Message	Possible causes	Possible corrective measures
Number not allowed.	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive/send SMS & photos	Memory full	Delete some data, such as applications or messages from your device to make more memory available.
Files do not open	Unsupported file format	Check the supported file formats.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.
Hangs up or freezes	Intermittent software problem	If the screen freezes or the device does not respond when you try to operate it, remove the battery and reinsert it. Then power the device back on. OR Try to perform a software update through the website.

Anti-Theft Guide

You can set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google account or screen lock information can use the device.

All you need to make sure your device is protected is:

- Set a screen lock:** If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.

- Add your Google account on your device: If your device is wiped but you have your Google account on it, the device can't finish the setup process until your Google account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google account password if you need to do a factory reset.

This ensures that you or someone you trust is doing the reset.

NOTE

- Do not forget your Google account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.

More information

Open source software notice information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Trademarks

- Copyright ©2016 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.

Declaration of conformity

Hereby, LG Electronics declares that this LG-K350Y product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>



CE0168