

USER GUIDE

LG-K430dsY

حول دليل المستخدم هذا

- شكرًا لاختيارك منتجات LG. يرجى قراءة دليل المستخدم هذا بعناية قبل استخدام الجهاز للمرة الأولى لضمان استخدامه بشكل آمن وصحيح.
- استخدم دائمًا ملحقات LG الأصلية. تم تصميم العناصر المتوفرة لاستخدامها مع هذا الجهاز فقط وقد تكون غير متوافقة مع أجهزة أخرى.
 - لا يناسب هذا الجهاز الأشخاص الضعفاء البصر نظرًا لاحتوائه على لوحة مفاتيح تعمل باللمس.
 - تستند المواصفات إلى إعدادات الجهاز الافتراضية.
 - قد تخضع التطبيقات الافتراضية على الجهاز لتحديثات وقد يتم سحب دعم هذه التطبيقات من دون إشعار مسبق. إذا كان لديك أي سؤال حول تطبيق متوفر على الجهاز، يرجى الاتصال بمركز خدمة LG. للتطبيقات التي يثبتها المستخدم، يرجى الاتصال بموفر الخدمة المناسب.
 - قد يؤدي تعديل نظام تشغيل الجهاز أو تثبيت برنامج من موارد غير رسمية إلى إلحاق ضرر بالجهاز وتلف البيانات أو فقدانها. يؤدي القيام بإجراءات مماثلة إلى انتهاك اتفاقية ترخيص LG وإبطال الكفالة.
 - قد تختلف بعض المحتويات والأشكال التوضيحية عن الجهاز وفقًا للمنطقة أو موفر الخدمة أو إصدار البرنامج أو إصدار برنامج التشغيل (OS) وتخضع للتغيير من دون إشعار مسبق.
 - البرنامج والصوت وخلفية الشاشة والصور والوسائط الأخرى المتوفرة مع الهاتف مرخصة للاستخدام المحدود. إذا قمت باقتباس هذه المواد واستخدامها لأغراض تجارية أو أغراض أخرى، قد تنتهك قوانين حقوق النشر. كمستخدم، تتحمل المسؤولية كاملة عن الاستخدام غير القانوني للوسائط.
 - قد تُفرض رسوم إضافية لخدمات البيانات، مثل الرسائل والتحميل والتنزيل والمزامنة التلقائية وخدمات تحديد الموقع. لتجنب الرسوم الإضافية، حدد خطة بيانات مناسبة لاحتياجاتك. اتصل بموفر الخدمة للحصول على تفاصيل إضافية.

الإشعارات التعليمية

الحالات التي قد تتسبب في إصابتك أو إصابة الآخرين بأذى أو إلحاق ضرر بالجهاز أو أغراض أخرى.	تحذير 
يُرجى الاطلاع على الإشعارات والمعلومات الإضافية.	ملاحظة 

جدول المحتويات

25.....	Knock Code	5.....	إرشادات لاستخدام آمن وفعال
26.....	تغيير طريقة قفل الشاشة	10.....	الميزات التي ستعشقها
26.....	Smart Lock	11.....	QuickMemo+
27.....	الشاشة الرئيسية	11.....	استخدام Capture+
27.....	التعرف على الشاشة الرئيسية	11.....	عرض المذكرة المحفوظة
28.....	العودة إلى التطبيقات المستخدمة مؤخراً	12.....	التقاط الصورة عن طريق الإيماءة
29.....	تخصيص الشاشة الرئيسية	12.....	التقاط صور بواسطة إيماءة
30.....	لوحة الإشعارات	13.....	الأساسيات
32.....	التقاط لقطة شاشة	14.....	الملحقات
32.....	لوحة المفاتيح على الشاشة	15.....	تخطيط الجهاز
32.....	استخدام لوحة المفاتيح وإدخال النصوص	17.....	تشغيل الجهاز وإيقاف تشغيله
32.....	إدخال حروف مميزة	17.....	تركيب بطاقة SIM والبطارية
33.....	نقل البيانات بين الكمبيوتر الشخصي والجهاز	19.....	شحن البطارية
33.....	إرسال بيانات باستخدام اتصال USB	20.....	تحسين عمر البطارية
34.....	تطبيق LG Bridge	20.....	إدخال بطاقة الذاكرة
34.....	ميزات LG Bridge	21.....	إزالة بطاقة الذاكرة
34.....	تنزيل برنامج LG Bridge	21.....	تلميح شاشة اللمس
35.....	التطبيقات	22.....	الضغط أو اللمس
36.....	تنصيب التطبيقات أو إلغاء تثبيتها	22.....	اللمس باستمرار
36.....	لفتح تطبيق سوق Play	22.....	السحب
36.....	لفتح شاشة مع تفاصيل حول تطبيق ما	23.....	النمرير أو التحريك
36.....	لإلغاء تثبيت التطبيقات	23.....	الضغط المزدوج
36.....	المكالمات	23.....	التصغير والتكبير باستخدام الإصبعين
36.....	إجراء مكالمة	24.....	إعداد حساب Google
37.....	الاتصال بالأسماء	24.....	إنشاء حساب Google
37.....	الرد على مكالمة ورفضها	24.....	تسجيل الدخول إلى حساب Google
37.....	إجراء مكالمة ثانية	25.....	إيقاف الجهاز وإلغاء قفله
37.....	عرض سجلات المكالمات	25.....	تشغيل/إيقاف الشاشة
38.....	تغيير إعدادات المكالمة		
38.....	الأسماء		
38.....	البحث عن اسم		

50	الحاسبة
50	التقويم
51	مسجل الصوت
51	تسجيل ملف صوتي أو صوت
51	تنزيلات
51	راديو FM
52	LG Backup
52	حول النسخ الاحتياطي لبيانات الجهاز واستعادتها
52	لنسخ بيانات الهاتف احتياطيًا
53	تطبيقات Google
55	الإعدادات
56	الوصول إلى قائمة الإعدادات
56	الشبكات
56	بطاقة SIM الثنائية
57	Wi-Fi
57	Wi-Fi Direct
58	Bluetooth
59	بيانات الهاتف المحمول
59	إعدادات المكالمات
60	اتصال USB
60	نقطة Wi-Fi المحمولة
60	ربط Bluetooth
61	وضع الرحلات الجوية
61	VPN
61	شبكات الهاتف
61	طباعة
62	الصوت و الإشعار
62	المزيد
63	إعدادات الشاشة
63	الشاشة الرئيسية
63	تأمين الشاشة
64	أزرار اللمس في الشاشة الرئيسية
64	المزيد من إعدادات الشاشة

38	إضافة اسم جديد
38	الأسماء المفضلة
39	إنشاء مجموعة
40	الرسائل
40	إرسال رسالة
40	عرض المحادثات
40	تغيير إعدادات الرسائل
41	الكاميرا
41	التقاط صورة
41	خيارات الكاميرا في محدد المنظر
43	بعد التقاط الصورة
43	تسجيل ملف فيديو
44	بعد تسجيل فيديو
44	المعرض
44	عرض الصور
44	تحرير الصور
45	ضبط خلفية الشاشة
45	التكبير والتصغير
45	تشغيل فيديو
46	حذف الصور/ملفات الفيديو
46	البريد الإلكتروني
46	إضافة حساب
46	العمل مع مجلدات الحسابات
47	إنشاء بريد إلكتروني وإرساله
47	تغيير الإعدادات العامة لبريد إلكتروني
47	حذف حساب بريد إلكتروني
47	موسيقى
48	تشغيل أغنية
48	خيارات مشغل الموسيقى
49	الساعة
49	تنبيهات
49	المؤقت
50	الساعة العالمية
50	ساعة الإيقاف

65	 عامة
65	 اللغة ولوحة المفاتيح
65	 الموقع
66	 الحسابات والمزامنة
66	 إمكانية الوصول
68	 مفتاح الاختصار
68	 Google
68	 الحماية
69	 Quick Cover View
69	 التاريخ و الوقت
69	 التخزين و USB
69	 البطارية وتوفير الطاقة
70	 الذاكرة
70	 التطبيقات
70	 تطبيق الرسائل الافتراضي
70	 نسخ احتياطي وإعادة الضبط
71	 حول الهاتف
72	 ملحق
73	 تحديث برنامج الجهاز
74	 الأسئلة الشائعة
76	 دليل مكافحة السرقة
77	 المزيد من المعلومات
77	 معلومات حول إشعار البرامج المفتوحة المصدر
77	 علامات تجارية
77	 بيان التوافق

إرشادات لاستخدام آمن وفعال

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

في حال حدوث خطأ. تم تضمين أداة برنامج في الجهاز من شأنها تجميع سجل الخطأ. تجمع هذه الأداة البيانات الخاصة بالخطأ فقط. مثل قوة الإشارة وموضع معرف الخلية لدى انقطاع المكالمات المفاجئ والتطبيقات التي تم تحميلها. يستخدم السجل فقط للمساعدة في تحديد سبب الخطأ. تجدر الإشارة إلى أن هذه السجلات مشفرة ويمكن الوصول إليها من قبل مركز تصليح معتمد من LG فقط في حال احتجت إلى إعادة جهازك لتصلحه.

التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR).

لقد تم تصميم طراز الهاتف المحمول LG-K430dsY هذا بحيث يفي بمتطلبات السلامة المتبعة المتعلقة بالتعرض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.

- تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد (SAR). وتجري اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.
- وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.
- حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين International Commission on Non-Ionizing Radiation Protection (ICNIRP) هو 2 واط/كجم، وهو حد مقسم على نحو متناسب إلى 10 جرعات من النسيج العضوي.
- أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختباره للاستخدام على الأذن تعادل 0.610 واط/كيلوجرام (10 جرام) وعند الحمل على الجسد تكون 1.540 واط/كيلوجرام (10 جرام).
- يفي هذا الجهاز بإرشادات التعرض للتردد اللاسلكي (RF) عند استخدامه في موضع الاستخدام العادي على الأذن أو عند وضعه على بعد 5 مم على الأقل من الجسم. عند استخدام علبة حمل أو مشبك للحزام أو حامل لتشغيل الجهاز أثناء حمله على الجسم. يجب ألا تحتوي على أي معدن ويجب وضع المنتج على بعد 5 مم على الأقل من الجسم. ومن أجل إرسال ملفات البيانات أو الرسائل. يتطلب هذا الجهاز اتصالاً نوعياً عالي الجودة بالشبكة. في بعض الحالات، يجوز أن يتم تأخير إرسال ملفات البيانات أو الرسائل إلى أن يصبح هذا الاتصال متاحاً. احرص على اتباع التعليمات المتعلقة بالمسافات الفاصلة المشار إليها أعلاه إلى أن يتم اكتمال الإرسال.

العناية بالمنتج وصيانتة

- استخدم دائماً بطاريات وشواحن وملحقات من LG معتمدة لاستخدامها مع طراز الهاتف هذا فقط. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي كفالة أو موافقة تنطبق على الهاتف المحمول. وقد يكون خطيراً.
- قد تختلف بعض المحتويات والصور عن جهازك من دون إشعار مسبق.
- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى إصلاحها.
- قد تتضمن الإصلاحات المشمولة بالكفالة، وفقاً لـ LG، لوحات أو قطع الغيار سواء كانت جديدة أو مجددة، على أن تتمتع بوظائف موازية لوظائف الأجزاء التي تم استبدالها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل أجهزة التدفئة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيثما تطالب القوانين الخاصة بذلك، على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدتين رطبتين أثناء شحنه، فقد يتسبّب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات مثل سماعات الأذن بحذر. لا تلمس الهوائي من دون وجود سبب يدعوك إلى ذلك.

- لا تستخدم الزجاج المكسور أو تلمسه أو تحاول إزالته أو إصلاحه إذا كان مكسوراً أو متحولاً إلى شظايا أو متحطماً. لا تشمل الكفالة تلف الشاشة الزجاجية نتيجة سوء الاستخدام.
- هذا الهاتف عبارة عن جهاز إلكتروني يولد الحرارة أثناء الاستخدام العادي. قد يؤدي احتكاك المنتج بالبشرة مباشرة ولفترة طويلة في غياب التهوية المناسبة إلى عدم الشعور بالراحة أو التسبب بحروق طفيفة. لذا، استخدم الهاتف بعناية أثناء التشغيل أو بعده مباشرة.
- في حال تعرض الهاتف للبلل، افصله على الفور ليجف بالكامل. لا تحاول تسريع عملية التجفيف باستخدام مصدر تجفيف خارجي مثل الفرن أو المايكروويف أو مجفف الشعر.
- يتسبب السائل الموجود في الهاتف المبلل بتغيير لون تسمية المنتج داخل الهاتف. لا تشمل الكفالة الضرر الناتج عن تعرض الجهاز للسوائل.

تشغيل فعال للهاتف

الأجهزة الإلكترونية

- قد تتعرض كل الهواتف المحمولة للتشويش، مما قد يؤثر على أدائها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية من دون طلب الإذن للقيام بذلك.
- تجنّب وضع الهاتف على أجهزة ضبط النبض، مثلاً، في الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.
- استخدم الهاتف في مكان تتراوح فيه درجة الحرارة بين 0 و 40 درجة مئوية. إذا أمكن، قد يؤدي تعريض الهاتف إلى درجات حرارة مرتفعة أو منخفضة جداً إلى إلحاق ضرر بالمنتج أو تعطله أو حتى إلى حدوث انفجار.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- توقف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمات إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل أجهزة الستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.

- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملحاً خصوصاً بالقرب من الطرقات.

تجنب إلحاق الضرر بسمعك



لتفادي إلحاق الضرر بالسمع، لا تستمع إلى مستويات صوت عالية لفترات طويلة.

- قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بالأتي تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط صوت الموسيقى والمكالمات على مستوى معقول.
- عند استخدام سماعات الرأس، اخفض مستوى الصوت إذا كنت لا تسمع الأشخاص الذين يتحدثون بالقرب منك أو في حالة تمكّن الشخص الجالس بجوارك من سماع ما تنصت إليه.



ملاحظة

- قد يؤدي ضغط الصوت المرتفع من سماعات الأذن وسماعات الرأس إلى فقدان السمع.

القطع الزجاجية

- بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقف عن استخدام الجهاز المحمول إلى أن يتم استبدال الزجاج من قبل موفر خدمة معتمد.

مناطق التفجير

- لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود. واتبع الأنظمة أو القوانين.

مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في محطة لإعادة التزود بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول أو ملحقاته.

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قبل طاقم الطائرة.

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرةً على جميع شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد على هاتفك المحمول فقط لإجراء مكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى. ليس هناك من تأثير للذاكرة من شأنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. فمن الممكن إعادة شحن حزمة البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية في حال عدم استخدامها لفترة طويلة وذلك لزيادة فترة صلاحية استخدامها.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة. مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى تراجع في أداء البطارية.
- هناك خطر الانفجار إذا ما تمّ استبدال البطارية بنوع خاطئ. يجب التخلص من البطاريات المستخدمة وفقاً للإرشادات.
- إذا كنت بحاجة إلى استبدال البطارية. خذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للحصول على المساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة و إعدادات المنتج وأنماط الاستخدام والبطارية والأوضاع البيئية.
- احرص على عدم احتكاك البطارية بأغراض حادة الأطراف كإنياب الحيوانات أو الأظافر. فقد يسبب هذا الأمر حريقاً.



الميزات التي ستعشقها

QuickMemo+

تتيح لك ميزة QuickMemo+ إنشاء مذكرات.

استخدام Capture+

يمكنك استخدام وظيفة QuickMemo+ لإنشاء مذكرات بشكل سهل وفعال أثناء مكالمة باستخدام صورة محفوظة أو على الشاشة الحالية.

- 1 اضغط على شريط الحالة وممره لأسفل واضغط على . في حال عدم ظهور , اضغط على  > ضع علامة اختيار على **Capture+** لتمكينه.
- 2 أنشئ مذكرة باستخدام الخيارات التالية:

اضغط لحفظ المذكرة التي أنشأتها.	
اضغط للتراجع عن الإجراء الأحدث.	
اضغط لإعادة أحدث إجراء تم حذفه.	
اضغط لإدخال نص في المذكرة.	
اضغط لتحديد نوع القلم واللون.	
اضغط لاستخدام الممحاة لمسح علامات القلم على المذكرة.	
اضغط لاقتصاص صورة المذكرة.	
اضغط لتحديد نمط المشاركة أو الورقة.	
اضغط لإخفاء شريط الأدوات أو عرضه.	

ملاحظة

يرجى استخدام طرف الإصبع أثناء استخدام ميزة QuickMemo+. لا تستخدم أظافرك.

- 3 اضغط على  لحفظ المذكرة الحالية على  أو .

عرض المذكرة المحفوظة

اضغط على  <  < وحدد ألبوم **Capture+**.

التقاط الصورة عن طريق الإيماءة

تسمح ميزة لقطة الإيماءة بالتقاط صورة بواسطة إيماءة يد باستخدام الكاميرا الأمامية.


التقاط صور بواسطة إيماءة

هناك طريقتان لاستخدام ميزة لقطة الإيماءة.

- ارفع يدك وافتحها حتى تكتشفها الكاميرا الأمامية. عندها سيظهر مربع على الشاشة. ثم أغلق يدك بشكل قبضة لبدء المؤقت، مما يتيح لك الوقت للاستعداد.

أو

- ارفع يدك وشدّ القبضة حتى تكتشفها الكاميرا الأمامية. عندها سيظهر مربع على الشاشة. ثم أرخ يدك لبدء المؤقت، مما يتيح لك الوقت للاستعداد.

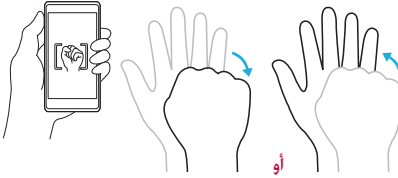

الأساسيات

الملحقات



تتوفر هذه الملحقات للاستخدام مع الجهاز.

- محول السفر
- دليل البدء السريع
- سماعة هاتف استريو
- كيبيل USB
- البطارية

ملاحظة

- قد تكون العناصر المذكورة أعلاه اختيارية.
- استخدم دائمًا ملحقات LG الأصلية. تم تصميم العناصر المتوفرة لاستخدامها مع هذا الجهاز فقط وقد تكون غير متوافقة مع أجهزة أخرى.
- قد تختلف العناصر المتوفرة مع الجهاز وأي ملحقات متوفرة بحسب المنطقة أو موثر الخدمة.

تخطيط الجهاز

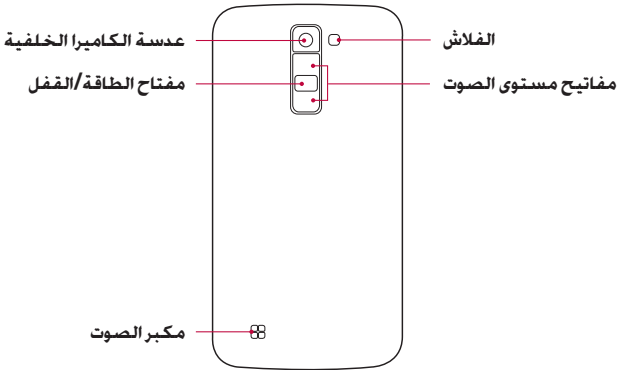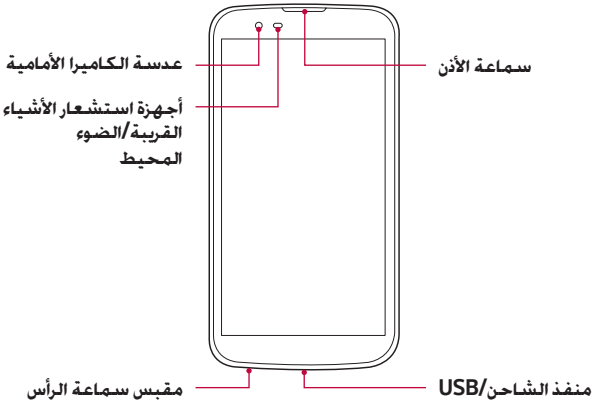

• قم بتشغيل/إيقاف تشغيل الجهاز بالضغط باستمرار على هذا المفتاح. • اضغط ضغطة قصيرة لتشغيل/إيقاف تشغيل الشاشة.	مفتاح الطاقة/القفل
عندما تكون الشاشة متوقفة عن التشغيل: • اضغط مرتين على مفتاح رفع مستوى الصوت لتشغيل Capture+. • اضغط مرتين على مفتاح خفض مستوى الصوت لتشغيل الكاميرا والتقاط صورة. على الشاشة الرئيسية: • للتحكم في مستوى صوت الرنين. أثناء مكالمة: • للتحكم بمستوى صوت سماعة الأذن عند تشغيل صوت/فيديو. • للتحكم بمستوى الصوت باستمرار.	مفاتيح مستوى الصوت

ملاحظة : جهاز استشعار الأشياء القريبة

- عند تلقي مكالمة أو إجرائها، يقوم جهاز استشعار الأشياء القريبة تلقائيًا بإيقاف تشغيل الإضاءة الخلفية وإيقاف شاشة اللمس من خلال تحسس اقتراب الهاتف من الأذن. وهذا الإجراء يطيل من عمر البطارية ويمنعك من تنشيط شاشة اللمس من دون قصد أثناء المكالمات.

تحذير

- قد يؤدي وضع غرض ثقيل الوزن على الهاتف أو الجلوس عليه إلى إلحاق ضرر بوظائف الشاشة وشاشة اللمس. لا تغطي جهاز استشعار الأشياء القريبة بأغلفة حماية الشاشة أو أي نوع آخر من الطبقات الواقية. فقد يتسبب هذا في تعطل جهاز الاستشعار.

تشغيل الجهاز وإيقاف تشغيله

تشغيل الجهاز

اضغط باستمرار على مفتاح الطاقة/القفل لبضع ثوانٍ حتى يتم تشغيل الشاشة.

إيقاف تشغيل الجهاز

- 1 اضغط باستمرار على مفتاح الطاقة/القفل حتى تظهر قائمة خيارات الجهاز.
- 2 اضغط على إيقاف التشغيل > موافق لتأكيد رغبتك في إيقاف تشغيل الجهاز.

تركيب بطاقة SIM والبطارية

أدخل بطاقة SIM التي يزودك بها موفر خدمة الجهاز والبطارية المضمّنة.




- لا تدخل بطاقة ذاكرة في فتحة بطاقة SIM. إذا تم وضع بطاقة ذاكرة في فتحة بطاقة SIM، فخذ الهاتف إلى مركز خدمة LG لإخراج بطاقة الذاكرة.




ملاحظة

- تعمل بطاقات Nano SIM فقط مع الجهاز.


- 1 لإزالة الغطاء الخلفي. امسك الجهاز بيد واحدة بقوة. وباليد الأخرى. ارفع الغطاء الخلفي باستخدام الإبهام كما هو مبين في الصورة أدناه.

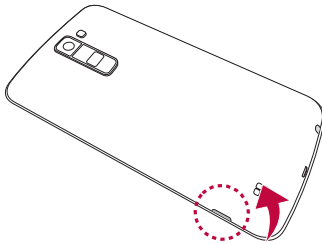


2 أدخل بطاقة SIM في فتحة بطاقة SIM كما هو مبين في الصورة. تأكد من أن ناحية الموصلات الذهبية على البطاقة موجهة نحو الأسفل.

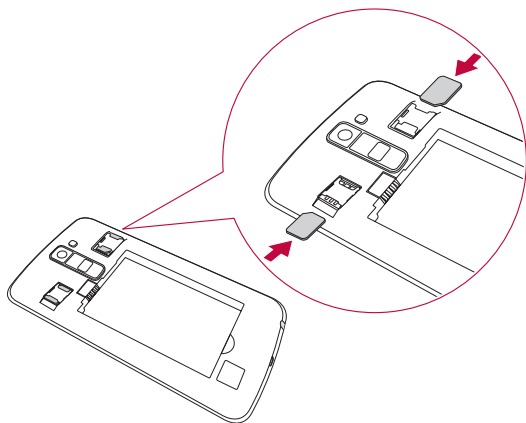

3 أدخل البطارية.

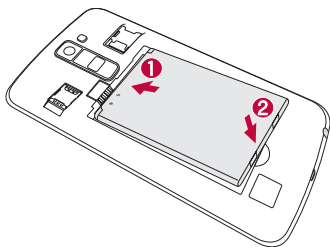

4 لإعادة تثبيت الغطاء على الجهاز، قم بمحاذاة الغطاء الخلفي مع حجرة البطارية واضغط عليه للأسفل حتى يستقر في مكانه.

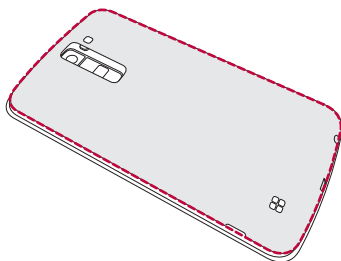


شحن البطارية

اشحن البطارية قبل استخدامها للمرة الأولى. استخدم الشاحن لشحن البطارية. يمكن أيضًا استخدام الكمبيوتر لشحن البطارية عبر توصيل الجهاز بالكمبيوتر باستخدام كابل USB.



• استخدم الشواحن والبطاريات والكابلات المعتمدة من قبل LG فقط. إذا استخدمت شواحن أو بطاريات أو كابلات غير معتمدة، فقد يؤدي ذلك إلى بطء في شحن البطارية. أو قد يؤدي أيضًا إلى انفجار البطارية أو إلحاق الضرر بالجهاز، وهي أضرار لا تشملها الكفالة.

يقع موصل الشاحن في أسفل الجهاز. أدخل الشاحن وقم بتوصيله بمقبس كهربائي.

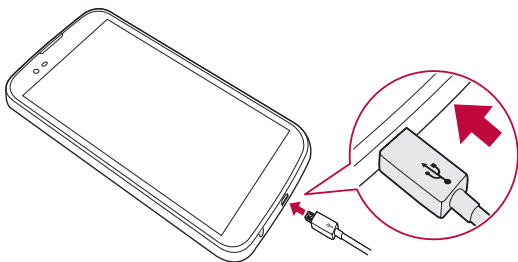

تحسين عمر البطارية

يمكنك تمديد فترة عمل البطارية عن طريق إيقاف تشغيل الميزات التي لا تحتاج إلى تشغيلها بصورة مستمرة في الخلفية. كما يمكنك مراقبة كيفية استهلاك التطبيقات وموارد النظام لطاقة البطارية.

إطالة عمر بطارية الجهاز:

- قم بإيقاف تشغيل الاتصالات اللاسلكية التي لا تستخدمها. أوقف تشغيل Wi-Fi أو Bluetooth® أو GPS إذا كنت لا تستخدمها.
- قلل سطوع الشاشة وعيّن مهلة أقصر لإضاءة الشاشة.
- أوقف تشغيل المزامنة التلقائية لـ Google Mail والتقويم والأسماء والتطبيقات الأخرى.
- قد تستهلك بعض التطبيقات التي قمت بتنزيلها طاقة البطارية.
- أثناء استخدام التطبيقات التي تم تنزيلها. تحقق من مستوى شحن البطارية.

إدخال بطاقة الذاكرة

يدعم جهازك بطاقة microSD تصل سعتها إلى 32 جيجابايت. قد تكون بعض بطاقات الذاكرة غير متوافقة مع جهازك وذلك وفقاً للشركة المصنّعة لبطاقة الذاكرة ونوعها.




- قد لا تكون بعض بطاقات الذاكرة متوافقة بشكل كامل مع الجهاز. وقد يؤدي استخدام بطاقة غير متوافقة إلى إلحاق ضرر بالجهاز أو بطاقة الذاكرة أو إتلاف البيانات المخزنة على البطاقة.



- تؤدي كتابة البيانات ومحوها بشكل متكرر إلى تخفيض عمر بطاقات الذاكرة.

1 انزع الغطاء الخلفي.

2 أدخل بطاقة ذاكرة ووجهه الموصّلات الذهبية نحو الأسفل.

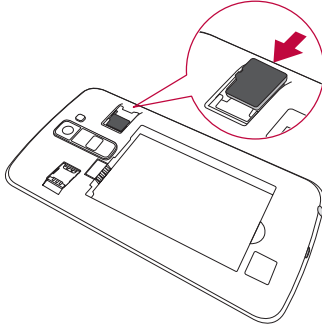

3 أعد الغطاء الخلفي إلى مكانه.

إزالة بطاقة الذاكرة

قبل إزالة بطاقة الذاكرة، افصلها أولاً لإزالتها بشكل آمن.

اضغط على  <  < علامة التبويب عامة < التخزين و USB < .

 **تحذير**

- لا تزل بطاقة الذاكرة أثناء قيام الجهاز بنقل المعلومات أو الوصول إليها. فقد يؤدي ذلك إلى فقدان البيانات أو تلفها أو إلحاق ضرر ببطاقة الذاكرة أو الجهاز. لا يتم تحمل مسؤولية الخسارة الناتجة عن سوء استخدام بطاقات ذاكرة تالفة بما في ذلك فقدان البيانات.

تلميحات شاشة اللمس


في ما يلي بعض التلميحات حول كيفية التنقل في الجهاز:

 **ملاحظة**

- لا تضغط بقوة، فشاشة الضغط حساسة بشكل كافٍ يتيح لها التعرف على ضغطة خفيفة ولكن ثابتة.
- استخدم طرف إصبعك للضغط على الخيار المطلوب. احرص على عدم الضغط على أي مفاتيح أخرى.


الضغط أو اللمس

يمكنك الضغط بإصبع واحد لتحديد عناصر وارتباطات واختصارات وأحرف على لوحة المفاتيح على الشاشة.

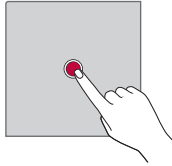


اللمس باستمرار

المس باستمرار عنصراً على الشاشة عبر الضغط عليه من دون رفع إصبعك إلى حين إتمام الإجراء.

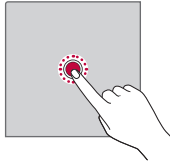


السحب

المس باستمرار عنصراً ما لفترة وجيزة مع تحريك إصبعك على الشاشة من دون رفعه حتى تصل إلى الموضع الهدف. يمكنك سحب عناصر على الشاشة الرئيسية لتغيير موضعها.

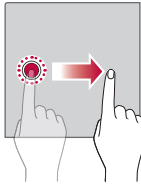


التمرير أو التحريك

للمتمرير أو التحريك، مرّر إصبعك بسرعة على سطح الشاشة من دون توقف عند الضغط عليها للمرة الأولى (لتجنّب سحب عنصر).

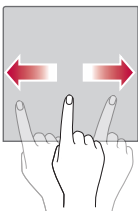



الضغط المزدوج

اضغط مرتين لتكبير/تصغير صفحة ويب أو خريطة.

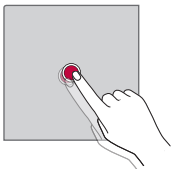

التصغير والتكبير باستخدام الإصبعين

استخدم إصبعي السبابة والإبهام في حركة تقريب أو توسيع للتكبير أو التصغير عند استخدام المتصفح أو الخرائط أو عند عرض صور.

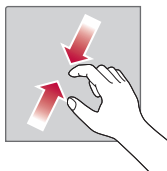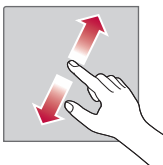

إعداد حساب Google

عند فتح تطبيق Google للمرة الأولى على الجهاز، سَيُطلب منك تسجيل الدخول باستخدام حساب Google الموجود. سيطلب منك إنشاء حساب Google إذا لم يكن لديك واحدًا.

إنشاء حساب Google

- 1 اضغط على  <  < علامة التبويب عامة < الحسابات والمزامنة.
- 2 اضغط على إضافة حساب < Google < أو أنشئ حسابًا جديدًا.
- 3 أدخل الاسم والعائلة. ثم اضغط على التالي.
- 4 أدخل رقم جهازك للحماية. ثم اضغط على التالي.
- 5 اتبع الإرشادات وأدخل معلومات الحساب المطلوبة والاختيارية. انتظر حتى يقوم الخادم بإنشاء حسابك.

تسجيل الدخول إلى حساب Google

- 1 اضغط على  <  < علامة التبويب عامة < الحسابات والمزامنة.
 - 2 اضغط على إضافة حساب < Google.
 - 3 أدخل عنوان البريد الإلكتروني الخاص بك واضغط على التالي.
 - 4 أدخل كلمة المرور الخاصة بك واضغط على التالي.
 - 5 بعد تسجيل الدخول، يمكنك استخدام Gmail والاستفادة من خدمات Google.
 - 6 بعد إعداد حساب Google، سيقوم الجهاز تلقائيًا بالمزامنة مع حساب Google على الويب (في حال توفر اتصال البيانات).
- بعد تسجيل الدخول، سيقوم الجهاز بالمزامنة مع خدمات Google، مثل Gmail والأسماء وتقويم Google. يمكنك أيضًا استخدام الخرائط وتنزيل تطبيقات من سوق Play وإجراء نسخ احتياطي لإعداداتك إلى خوادم Google والاستفادة من خدمات Google الأخرى على الجهاز.

إيقاف الجهاز وإلغاء قفله

يؤدي الضغط على مفتاح الطاقة/القفل إلى إيقاف تشغيل الشاشة وإدخال الهاتف في وضع القفل. يقفل الجهاز تلقائيًا إذا لم يتم استخدامه لفترة محددة. يساعد هذا في منع الضغط على الهاتف عن طريق الخطأ وتوفير طاقة البطارية. لإلغاء قفل الجهاز، اضغط على مفتاح الطاقة/القفل ومرّر الشاشة بأي اتجاه.

تشغيل/إيقاف الشاشة

تسمح لك ميزة تشغيل/إيقاف الشاشة بالضغط مرتين على الشاشة لتسهيل تشغيلها أو إيقاف تشغيلها.

تشغيل الشاشة

- 1 اضغط مرتين في وسط شاشة القفل لتشغيلها.
- 2 ألع قفل الشاشة أو الوصول إلى اختصارات أو عناصر واجهة الاستخدام المتوفرة.

إيقاف تشغيل الشاشة

- 1 اضغط مرتين على مساحة فارغة في الشاشة الرئيسية أو شريط الحالة.
- 2 ستتوقف الشاشة عن التشغيل.

ملاحظة

- اضغط في وسط الشاشة. إذا ضغطت على الجهة العليا أو السفلى من الشاشة، فسينخفض معدل التعرّف.

Knock Code

تسمح لك ميزة Knock Code بإنشاء رمز إلغاء القفل الخاص بك باستخدام مجموعة من الضغطات على الشاشة. يمكنك الوصول إلى الشاشة الرئيسية مباشرة عندما تتوقف الشاشة عن التشغيل عبر الضغط بالتسلسل نفسه على الشاشة.

ملاحظة

- إذا أدخلت Knock Code خاطئًا 5 مرات، فسيتم نقلك إلزامًا إلى صفحة تسجيل الدخول إلى حساب Google/رمز PIN الاحتياطي.
- استخدم طرف الإصبع بدلاً من الظفر للضغط على الشاشة لتشغيلها أو إيقاف تشغيلها.

إعداد ميزة Knock Code

- 1 اضغط على  <  < علامة التبويب إعدادات الشاشة < تأمين الشاشة < اختر قفل الشاشة < Knock Code.
- 2 اضغط على المربعات في نقش ما لضبط Knock Code الخاص بك. يمكن أن يكون نقش Knock Code مؤلفاً من 6 إلى 8 ضغطات.

إلغاء قفل الشاشة باستخدام Knock Code

يمكنك إلغاء قفل الشاشة عبر الضغط على نقش Knock Code الذي عيّنته مسبقاً عندما تتوقف الشاشة عن التشغيل.

تغيير طريقة قفل الشاشة

يمكنك تغيير طريقة قفل الشاشة لمنع الآخرين من الوصول إلى معلوماتك الشخصية.

- 1 اضغط على  <  < علامة التبويب إعدادات الشاشة < تأمين الشاشة < اختر قفل الشاشة.
- 2 حدد قفل الشاشة المطلوب من بلا أو مسح أو Knock Code أو النقر أو رمز PIN أو كلمة المرور.



- أنشئ حساب Google قبل ضبط نقش لإلغاء القفل وتذكر رمز PIN الاحتياطي الذي أنشأته أثناء إنشاء نقش القفل.

Smart Lock

يمكنك استخدام ميزة Smart Lock لتسهيل عملية إلغاء قفل الجهاز. يمكنك ضبطها لإبقاء الجهاز غير مقفل عندما يكون متصلاً بجهاز يعمل بتقنية Bluetooth موثوق به أو عندما تكون متواجداً في موقع مألوف مثل المنزل أو العمل أو عندما يتعرف على وجهك.


إعداد ميزة Smart Lock

- 1 اضغط على  <  < علامة التبويب إعدادات الشاشة < تأمين الشاشة < Smart Lock.
- 2 قبل إضافة أي أجهزة أو أماكن موثوق بها أو وجه موثوق به، عليك إعداد قفل شاشة (Knock Code أو النقر أو رمز PIN أو كلمة المرور).

الشاشة الرئيسية

الشاشة الرئيسية هي نقطة البداية للعديد من التطبيقات والوظائف. وتتيح لك إضافة عناصر مثل اختصارات التطبيقات أو عناصر واجهة الاستخدام الخاصة بـ Google لتمنحك وصولاً فوريًا إلى المعلومات والتطبيقات. هذه المساحة المحيطة الافتراضية والتي يمكن الوصول إليها من أي قائمة عبر الضغط على .

التعرّف على الشاشة الرئيسية

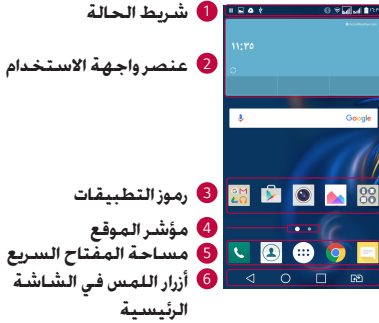

- 1 شريط الحالة - لعرض معلومات عن حالة الجهاز. بما في ذلك الوقت وقوة الإشارة وحالة البطارية ورموز الإشعارات.
- 2 عنصر واجهة الاستخدام - تُعد عناصر واجهة الاستخدام تطبيقات مضمّنة يمكن الوصول إليها عبر إطار التطبيقات أو الشاشة الرئيسية. وبخلاف الاختصار. يمكن لعنصر واجهة استخدام أن يعمل كتطبيق على الشاشة.
- 3 رموز التطبيقات - اضغط على رمز (تطبيق. مجلد. إلخ) لفتحه واستخدامه.
- 4 مؤشر الموقع - يشير إلى أي مساحة محيطة للشاشة الرئيسية تستعرضها حاليًا على الشاشة.
- 5 مساحة المفتاح السريع - لتوفير الوصول بلمسة واحدة إلى الوظيفة في أي مساحة محيطة للشاشة الرئيسية.

للعودة إلى الشاشة السابقة. ولإغلاق العناصر المنبثقة مثل القوائم ومربعات الحوار ولوحة المفاتيح التي تظهر على الشاشة.	زر الرجوع ◀
للعودة إلى الشاشة الرئيسية من أي شاشة.	زر الشاشة الرئيسية ○
لعرض التطبيقات المستخدمة حديثاً. يؤدي لمس هذا الزر باستمرار إلى فتح قائمة الخيارات المتوفرة.	زر المعايينة □
اختر أي بطاقة SIM ستستخدم، الممس باستمرار للانتقال إلى إعدادات بطاقة SIM الثنائية.	مفتاح تبديل SIM [X]

عرض لوحات الشاشة الرئيسية الأخرى

يوفر نظام التشغيل مساحات محيطية متعددة للشاشة الرئيسية بهدف توفير مساحة أكبر لإضافة رموز وعناصر واجهة استخدام والمزيد غيرها.

- مرّر إصبعك إلى اليسار أو اليمين على الشاشة الرئيسية للوصول إلى مساحات محيطية إضافية.

العودة إلى التطبيقات المستخدمة مؤخراً

بعد تعدد المهام أمراً سهلاً مع نظام التشغيل Android نظراً لإمكانية تشغيل أكثر من تطبيق واحد في الوقت نفسه. لا حاجة لإنهاء تطبيق قبل فتح تطبيق آخر. يمكنك استخدام العديد من التطبيقات المفتوحة والتنقل فيما بينها.

يدير نظام التشغيل Android كل تطبيق ويوقف تشغيله ويقوم بتشغيله عند الحاجة للتأكد من أن التطبيقات الخاملة لا تستهلك الموارد بشكل غير ضروري.

- 1 اضغط على □. ستظهر قائمة بالتطبيقات المستخدمة مؤخراً.
 - 2 اضغط على التطبيق الذي تريد الوصول إليه. لا يؤدي ذلك إلى إيقاف تشغيل التطبيق السابق في الخلفية. احرص على الضغط للخروج من تطبيق ما بعد استخدامه.
 - لإغلاق تطبيق من قائمة التطبيقات الحديثة. مرّر معايينة التطبيق إلى اليسار أو اليمين.
- لمسح التطبيقات كافة. اضغط على مسح الكل.

تخصيص الشاشة الرئيسية

يمكنك تخصيص الشاشة الرئيسية عبر إضافة تطبيقات وعناصر واجهة استخدام وتغيير خلفيات الشاشة.

إضافة عناصر إلى الشاشة الرئيسية

- 1 المس باستمرار الجزء الفارغ من الشاشة الرئيسية.
- 2 في القائمة وضع الإضافة. حدد العنصر الذي تريد إضافته. عندئذٍ سترى العنصر الذي تمت إضافته على الشاشة الرئيسية.
- 3 اسحبه إلى الموقع المطلوب وارفع إصبعك.



- لإضافة رمز تطبيق إلى الشاشة الرئيسية من شاشة التطبيقات، المس باستمرار التطبيق الذي تريد إضافته.

إزالة عنصر عن الشاشة الرئيسية

على الشاشة الرئيسية، المس باستمرار الرمز الذي تريد إزالته > اسحبه إلى .

إضافة تطبيق إلى مساحة المفاتيح السريع

من شاشة التطبيقات أو على الشاشة الرئيسية، المس باستمرار رمز تطبيق واسحبه إلى مساحة المفاتيح السريع. ثم حرره في الموقع المطلوب.

إزالة تطبيق من مساحة المفاتيح السريع

المس باستمرار المفاتيح السريع المطلوب واسحبه إلى .



- لا يمكن إزالة  زر التطبيقات.

تخصيص رموز التطبيق على الشاشة الرئيسية

- 1 المس رمز تطبيق باستمرار حتى تتمكن من تحريكه من موقعه الحالي ثم حرره. يظهر رمز التحرير  في الزاوية اليمنى العليا من التطبيق.
- 2 اضغط على رمز التطبيق مجدداً وحدد تصميم الرمز والحجم المطلوبين.
- 3 اضغط على موافق لحفظ التغيير.

لوحة الإشعارات

تُعلمك الإشعارات بوصول رسائل جديدة وأحداث تقويم وتنبيهات بالإضافة إلى أنها تعلمك أيضًا بالأحداث الجارية أثناء إجرائك مكالمة مثلاً.



فتح لوحة الإشعارات

مرر لأسفل من شريط الحالة لفتح لوحة الإشعارات. لإغلاق لوحة الإشعارات، مرر الشاشة لأعلى أو اضغط على .

1 مسح الإعدادات السريعة

2 الإشعارات

3 مسح

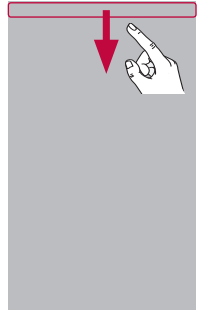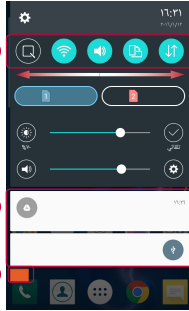

1 اضغط على كل زر إعداد سريع للتبديل بين تشغيل/إيقاف التشغيل. المس باستمرار الزر المطلوب للوصول مباشرة إلى قائمة الإعدادات الخاصة بالوظيفة. لعرض المزيد من أزرار التبديل، مرر إصبعك على الشاشة إلى اليسار أو اليمين. اضغط على  لإزالة أزرار الإعدادات السريعة أو إضافتها أو إعادة ترتيبها.

2 تم إدخال كل من الإشعارات الحالية مع وصف موجز. اضغط على إشعار لعرضه.

3 اضغط لمسح الإشعارات كافة.

عند وصول إشعار، يظهر رمزه عند أعلى الشاشة. تظهر رموز الإشعارات المعلقة على اليسار ورموز النظام مثل Wi-Fi وقوة البطارية على اليمين.

رموز المؤشر على شريط الحالة

تظهر رموز المؤشر على شريط الحالة في أعلى الشاشة للإبلاغ عن المكالمات التي لم يرد عليها والرسائل الجديدة وأحداث التقويم وحالة الشريط والمزيد.

رموز الإشعارات

رموز الحالة



توفر الرموز المعروضة في أعلى الشاشة معلومات حول حالة الجهاز. الرموز المدرجة في الجدول أدناه هي بعض أشهر الرموز.

الرمز	الوصف	الرمز	الوصف
	لم يتم إدخال بطاقة SIM		يتم تشغيل أغنية حاليًا
	لا يوجد إشارة شبكة متوفرة		تم إسكات الرنين
	وضع الرحلات الجوية قيد التشغيل		وضع الاهتزاز قيد التشغيل
	متصل بشبكة Wi-Fi		البطارية مشحونة بشكل كامل
	سماعة الرأس السلكية متصلة		جاري شحن البطارية
	مكالمة جارية		الجهاز متصل بكمبيوتر شخصي بواسطة كابل USB
	مكالمات لم يرد عليها		تنزيل البيانات
	Bluetooth قيد التشغيل		تحميل البيانات
	تحذير النظام		GPS قيد التشغيل
	تم تعيين منبه		تتم مزامنة البيانات
	يتوفر بريد صوتي جديد		اختيار أسلوب الإدخال
	رسالة نصية أو وسائط متعددة جديدة		نقطة Wi-Fi المحمولة نشطة

ملاحظة

- قد يختلف موقع الرمز في شريط الحالة وفقًا للوظيفة أو الخدمة.
- قد تختلف الخيارات المتوفرة وفقًا للمنطقة أو موفر الخدمة.

التقاط لقطة شاشة

اضغط باستمرار على مفتاح خفض مستوى الصوت ومفتاح الطاقة/القفل في الوقت نفسه لمدة ثانيتين لالتقاط لقطة شاشة للشاشة الحالية.
لعرض الصورة التي تم التقاطها، اضغط على  < مجلد Screenshots.

لوحة المفاتيح على الشاشة

يمكنك إدخال نص باستخدام لوحة المفاتيح على الشاشة. تظهر لوحة المفاتيح على الشاشة عند الضغط على حقل إدخال نص متوفر.

استخدام لوحة المفاتيح وإدخال النصوص

الوصف	الرمز
اضغط مرة واحدة لكتابة الحرف التالي بالأحرف الكبيرة. اضغط مرتين للكتابة بأحرف كبيرة.	
اضغط للانتقال إلى إعدادات لوحة المفاتيح. المس باستمرار لتغيير أسلوب إدخال النص.	
اضغط لإدخال مسافة.	
اضغط لإدخال سطر جديد.	
اضغط لحذف الحرف السابق.	

إدخال أحرف مميزة

تتيح لك لوحة المفاتيح على الشاشة إدخال أحرف مميزة.
على سبيل المثال، لإدخال الحرف "á"، المس باستمرار زر الحرف "a" حتى يظهر الإطار المنبثق ويعرض الأحرف المميزة ذات الصلة. ثم اسحب إصبعك من دون رفعه إلى الحرف المميز المطلوب. عندما يتم تمييزه، ارفع إصبعك.



* يشير الرمز الموجود في الزاوية العليا اليمنى من المفتاح إلى توفر أحرف إضافية لهذا المفتاح.

نقل البيانات بين الكمبيوتر الشخصي والجهاز

يمكنك نسخ بيانات أو نقلها بين الكمبيوتر الشخصي والجهاز.

إرسال بيانات باستخدام اتصال USB

- 1 قم بتوصيل الجهاز بكمبيوتر شخصي باستخدام كابل USB المتوفر مع الجهاز.
- 2 افتح لوحة الإشعارات واضغط على نوع الاتصال الحالي وحدد جهاز الوسائط (بروتوكول نقل الوسائط).
- 3 ستظهر نافذة منبثقة على الكمبيوتر الشخصي، ما يسمح لك بنقل البيانات المطلوبة.



- يلزم تثبيت برنامج التشغيل LG Android Platform Driver على الكمبيوتر الشخصي للتمكن من اكتشاف الجهاز.
- تحقق من متطلبات استخدام جهاز الوسائط (بروتوكول نقل الوسائط).

العناصر	المطلب
برنامج التشغيل	Microsoft Windows XP SP3 أو Vista أو أعلى
إصدار Window Media Player	Windows Media Player 10 أو إصدار أعلى

تطبيق LG Bridge

LG Bridge هو تطبيق يساعدك في إدارة الصور والموسيقى ومقاطع الفيديو والمستندات. الخ. المحفوظة في جهاز LG على جهاز الكمبيوتر الشخصي بطريقة سهلة. يمكنك كذلك نسخ ملفاتك احتياطيًا مثل الأسماء والصور على الكمبيوتر الشخصي أو تحديث برنامج جهاز ما.

ملاحظة

- يمكنك رؤية إرشادات مفصلة حول كيفية استخدام LG Bridge في قائمة المساعدة بعد تثبيت البرنامج وفتحه.
- قد تختلف الميزات المدعومة بحسب الجهاز.
- إن LG unified USB driver هو برنامج يلزم تثبيته لتوصيل جهاز LG بكمبيوتر شخصي. يتم تثبيته تلقائيًا عند تثبيت LG Bridge.

ميزات LG Bridge

- إدارة المحتويات من جهازك على الكمبيوتر الشخصي عبر Wi-Fi أو البيانات.
- نسخ بيانات الجهاز احتياطيًا واستعادتها عبر USB.
- تحديث برنامج جهاز ما على الكمبيوتر الشخصي عبر USB.

تنزيل برنامج LG Bridge

- 1 انتقل إلى www.lg.com.
- 2 اضغط على زر البحث وادخل اسم الطراز للبحث عن الطراز.
- 3 حدد معلومات الطراز وانقر فوق انتقال.
- 4 مرر للأسفل وحدد علامة التبويب مزامنة الكمبيوتر الشخصي < Windows أو Mac OS > تنزيل لتنزيل LG Bridge.

التطبيقات

تثبيت التطبيقات أو إلغاء تثبيتها

يتيح لك سوق Play تصفح التطبيقات المجانية والمدفوعة والبحث عنها.

افتح تطبيق سوق Play

اضغط على  <  < .

افتح شاشة مع تفاصيل حول تطبيق ما

في أي وقت أثناء التصفح في سوق Play، اضغط على تطبيق ما لفتح شاشة التفاصيل الخاصة به.

تحتوي شاشة تفاصيل التطبيق على وصف وتصنيفات وتعليقات ومعلومات ذات صلة حول التطبيق. من هذه الشاشة، يمكنك تنزيل التطبيق وتثبيته وإلغاء تثبيته وتصنيفه وغيرها.

لإلغاء تثبيت التطبيقات

- 1 اضغط على  <  < علامة التبويب عامة < التطبيقات.
- 2 بمجرد ظهور جميع التطبيقات، قم بالتمرير وحدد التطبيق الذي تريد إلغاء تثبيته.
- 3 اضغط على إلغاء التثبيت.

المكالمات

يمكنك الاستمتاع بإجراء مكالمات واضحة في أرجاء المنطقة كافة.

إجراء مكالمة

- 1 اضغط على  < .
- 2 أدخل الرقم باستخدام لوحة الطلب. لحذف رقم، اضغط على .
- 3 بعد إدخال الرقم المطلوب، اضغط على  لإجراء المكالمة.
- 4 لإنهاء المكالمة، اضغط على .

 ملاحظة

• لإدخال علامة "+" لإجراء مكالمات دولية، المس باستمرار .

الاتصال بالأسماء

- 1 اضغط على  < ○ .
- 2 مرّر عبر قائمة الأسماء. يمكنك أيضًا إدخال الاسم في حقل البحث أو تمرير شريط الأحرف الأبجدية في الجانب الأيسر من الشاشة.
- 3 في القائمة التي تظهر، اضغط على الاسم المطلوب الاتصال به.

الرد على مكالمة ورفضها

- مرّر  في أي اتجاه للرد على مكالمة واردة.
- مرّر  في أي اتجاه لرفض مكالمة واردة.

ملاحظة

- مرّر  إذا أردت رفض مكالمة وإرسال رسالة إلى المتصل.

إجراء مكالمة ثانية

- 1 أثناء المكالمة الأولى، اضغط على  > إضافة مكالمة وأدخل الرقم.
- 2 اضغط على  .
- 3 يتم عرض المكالمتين معًا على شاشة المكالمة. يتم إقفال المكالمة الأولية ووضعها في حالة الانتظار.
- 4 اضغط على الرقم المعروض للتبديل بين المكالمات. أو اضغط على  لبدء مكالمة جماعية.

- 5 لإنهاء كل المكالمات، اضغط على  .

ملاحظة

- ستُفرض عليك رسوم مقابل كل مكالمة تجريها.

عرض سجلات المكالمات

- 1 اضغط على  < ○ علامة التبويب السجلات.
 - 2 يتم عرض قائمة بكل المكالمات الصادرة والمستلمة والتي لم يرد عليها.
- ### ملاحظة
- اضغط على أي إدخال في سجل المكالمات لعرض تاريخ المكالمة ووقتها ومدتها.
 - اضغط على  > > حذف الكل لحذف كل العناصر المسجلة.

تغيير إعدادات المكالمة

يمكنك تكوين إعدادات المكالمات الهاتفية. مثل إعادة توجيه المكالمة بالإضافة إلى الميزات الخاصة الأخرى التي تقدمها شركة الاتصالات.

- 1 اضغط على  < .
- 2 اضغط على  > إعدادات المكالمات وقم بتكوين الخيارات المطلوبة.

الأسماء

يمكنك إضافة أسماء إلى الجهاز ومزامنتها مع الأسماء الموجودة في حساب Google أو حسابات أخرى تدعم مزامنة الأسماء.

البحث عن اسم

- 1 اضغط على  < .
- 2 اضغط على بحث في الأسماء وأدخل الاسم باستخدام لوحة المفاتيح. يتم عرض النتائج المطابقة عندما تبدأ بالكتابة.

إضافة اسم جديد

- 1 اضغط على  < .
- 2 أدخل رقم الاسم الجديد.
- 3 اضغط على  > إضافة إلى الأسماء < اسم جديد.
- 4 إذا أردت إضافة صورة إلى الاسم الجديد. اضغط على رمز الصورة. اختر بين التقاط صورة أو اختر من المعرض.
- 5 أدخل معلومات الاسم المطلوبة.
- 6 اضغط على حفظ.

الأسماء المفضلة

يمكنك تصنيف الأسماء التي تطلبها بشكل متكرر كمفضلة.

إضافة اسم إلى المفضلة

- 1 اضغط على  < .
- 2 اضغط على اسم لعرض تفاصيله.
- 3 اضغط على النجمة في الجهة العليا اليسرى من الشاشة. يتغير لون النجمة إلى اللون الأصفر.

إزالة اسم من قائمة المفضلة

- 1 اضغط على  <  علامة التبويب المفضلة.
- 2 المس أحد الأسماء لعرض تفاصيله.
- 3 اضغط على النجمة الصفراء في الجهة العليا اليسرى من الشاشة. يتغير لون النجمة إلى لون داكن وتتم إزالة الاسم من المفضلة.

إنشاء مجموعة

- 1 اضغط على  <  علامة التبويب المجموعات.
- 2 اضغط على  مجموعة جديدة.
- 3 أدخل اسمًا للمجموعة الجديدة. يمكنك أيضًا ضبط نغمة رنين مميزة للمجموعة التي تم إنشاؤها حديثًا.
- 4 اضغط على إضافة أعضاء لإضافة أسماء إلى المجموعة واضغط على إضافة.
- 5 اضغط على حفظ لحفظ المجموعة.

ملاحظة

- إذا قمت بحذف مجموعة، فلن تفقد الأسماء التي تم تعيينها إلى تلك المجموعة، بل ستبقى موجودة في قائمة الأسماء.

الرسائل

يجمع الجهاز بين ميزة إرسال رسائل نصية ورسائل وسائط متعددة في قائمة واحدة بديهية وسهلة الاستخدام.

ملاحظة

• قد تُفرض عليك رسوم مقابل كل رسالة ترسلها. يرجى استشارة موفر الخدمة لديك.

إرسال رسالة

- 1 اضغط على  <  < .
- 2 اضغط على . ثم حدّد إدخال أو أكثر من قائمة الأسماء. أو
- 3 اضغط على حقل النص وابدأ بإدخال الرسالة.
- 4 اضغط على  لفتح قائمة الخيارات. اختر أياً من الخيارات المتوفرة.
- 5 اضغط على  لإرفاق الملف الذي تريد مشاركته في الرسالة.
- 6 اضغط على إرسال لإرسال الرسالة.

عرض المحادثات

تظهر الرسائل التي تم تبادلها مع طرف آخر بترتيب زمني لتتمكن من رؤية محادثاتك والعثور عليها بسهولة.

تغيير إعدادات الرسائل

تم تحديد إعدادات الرسائل الخاصة بالجهاز مسبقاً للسماح لك بإرسال الرسائل على الفور. يمكنك تغيير الإعدادات وفقاً لتفضيلاتك.

• اضغط على  <  <  < الإعدادات.

- احرص على تنظيف غطاء العدسة الواقي بواسطة قطعة قماش من الألياف الدقيقة قبل التقاط الصور. يمكن أن يؤدي تلطخ العدسة ببصمات الأصابع إلى الحصول على صور ضبابية مع تأثير "الهالة".

استخدام الإعدادات المتقدمة

في محدد المنظر الخاص بالكاميرا. اضغط على  لعرض الخيارات المتقدمة. اضغط على كل رمز لضبط إعدادات الكاميرا التالية.

لتعيين نسبة عرض إلى طول الصورة وجودة الفيديو.	
يسمح لك هذا الخيار بالتقاط الصور بواسطة أوامر صوتية. عند تشغيل هذه الميزة، ما عليك سوى قول "Cheese" أو "Smile" أو "LG" وما إلى ذلك لالتقاط صورة.	
ضبط مؤقت الكاميرا. هذا خيار مثالي إن أردت أن تظهر في الصورة أو الفيديو.	
يسمح لك هذا الخيار بالتقاط صور أفضل وتسجيل مقاطع فيديو بشكل أفضل عبر عرض خطوط شبكة للمساعدة في المحاذاة.	
عيّن موقع تخزين الصور والفيديو. اختر من بين IN (الذاكرة الداخلية) و SD (بطاقة الذاكرة). تظهر هذه القائمة فقط عند إدخال بطاقة SD.	
يسمح لك هذا الخيار بمعرفة كيفية عمل وظيفة. سيوفر لك هذا الرمز دليل للمساعدة.	

بعد التقاط الصورة

اضغط على الصورة المصغرة للصورة على الشاشة لعرض آخر صورة التقطتها.

اضغط لتحرير الصورة.	
اضغط لالتقاط صورة أخرى على الفور.	
اضغط لفتح خيارات المشاركة المتوفرة.	
اضغط لحذف الصورة.	
اضغط للوصول إلى الخيارات الإضافية.	
اضغط لإضافة الصورة إلى المفضلة.	

تسجيل ملف فيديو

- 1 اضغط على  <  < .
 - 2 حدد إطار الهدف على شاشتك.
 - 3 اضغط على  لبدء تسجيل الفيديو.
 - 4 يُعرض طول التسجيل في أعلى الشاشة.
- ملاحظة 
- اضغط على  لالتقاط صور أثناء تسجيل فيديو.
- 5 اضغط على  لإيقاف تسجيل الفيديو مؤقتًا. يمكنك استئناف التسجيل مجددًا عبر الضغط على .
- أو
- اضغط على  لإيقاف التسجيل. سيتم حفظ الفيديو تلقائيًا في المعرض.

بعد تسجيل فيديو

اضغط على الصورة المصغرة للفيديو على الشاشة لعرض آخر مقطع فيديو سجّله.

	اضغط لتسجيل فيديو آخر على الفور.
	اضغط لفتح خيارات المشاركة المتوفرة (مثل الرسائل أو Bluetooth) للمشاركة.
	اضغط لحذف الفيديو.
	اضغط للوصول إلى الخيارات الإضافية.
	اضغط لإضافة الفيديو إلى المفضلة

المعرض

يظهر تطبيق المعرض الصور ومقاطع الفيديو الموجودة في وحدة التخزين. بما في ذلك تلك التي التقطتها بواسطة تطبيق الكاميرا وتلك التي قمت بتنزيلها من الويب أو مواقع أخرى.

- 1 اضغط على  <  <  .
- 2 اضغط على ألبوم لفتحه وعرض محتوياته. (تظهر الصور وملفات الفيديو في الألبوم بالترتيب الزمني).
- 3 اضغط على صورة في الألبوم لعرضها.

ملاحظة

- قد تكون بعض تنسيقات الملفات غير مدعومة وفقًا للبرنامج المثبت.
- قد لا تعمل بعض الملفات بشكل صحيح بسبب الترميز.

عرض الصور

يعرض المعرض صورك ضمن مجلدات. عندما يقوم تطبيق، مثل البريد الإلكتروني، بحفظ صورة، يتم إنشاء مجلد download تلقائيًا لاحتواء الصورة. وبطريقة مماثلة، يؤدي التقاط لقطة شاشة تلقائيًا إلى إنشاء مجلد Screenshots. يتم عرض الصور بحسب تاريخ إنشائها. حدد صورة لعرضها بملء الشاشة. مرر إلى اليسار أو اليمين لعرض الصورة التالية أو السابقة.

تحرير الصور

عند عرض صورة، اضغط على  .

ضبط خلفية الشاشة

عند عرض صورة، اضغط على  > ضبط الصورة > لضبط الصورة كخلفية شاشة أو تعيينها إلى اسم.

ملاحظة

- قد تكون بعض تنسيقات الملفات غير مدعومة وفقًا للبرنامج المثبت.
- إذا تجاوز الملف حجم الذاكرة المتاحة، فقد يحدث خطأ عند فتح الملفات.

التكبير والتصغير

استخدم إحدى الطرق التالية لتكبير صورة معينة:


- اضغط مرتين في أي مكان للتكبير.
- أبعد إصبعين عن بعضهما في أي مكان لتكبير الصورة. ضمّ إصبعين إلى بعضهما أو اضغط مرتين على الصورة لتصغيرها.

تشغيل فيديو

1 اضغط على  <  < .

2 حدد الفيديو الذي تريد مشاهدته.

خيارات الفيديو

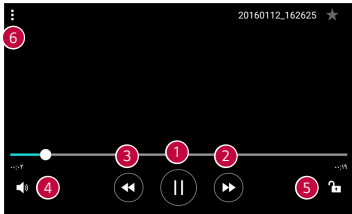

المس لاستئناف تشغيل الفيديو أو إيقاف تشغيله مؤقتًا.		1
المس باستمرار للتقديم السريع تدريجيًا. اضغط للتقديم السريع 10 ثواني.		2
المس باستمرار للإرجاع التشغيل تدريجيًا. اضغط للإرجاع 10 ثواني.		3

4		اضغط للتحكم بمستوى صوت الفيديو.
5		اضغط لقفل/إلغاء قفل الشاشة.
6		اضغط للوصول إلى الخيارات الإضافية.

ملاحظة

- عند تشغيل فيديو، مرّر الجهة اليمنى من الشاشة إلى الأعلى أو الأسفل لضبط مستوى الصوت.
- عند تشغيل فيديو، مرّر الجهة اليسرى من الشاشة إلى الأعلى أو الأسفل لضبط درجة السطوع.
- عند تشغيل فيديو، مرّر إصبعك من اليسار إلى اليمين (أو العكس) للتقديم أو الإرجاع بسرعة.

حذف الصور/ملفات الفيديو

استخدم إحدى الطرق التالية:

- في مجلد، اضغط على . وحدد الصور/مقاطع الفيديو. ثم اضغط على حذف.
- عند عرض صورة، اضغط على .

البريد الإلكتروني

يمكنك استخدام تطبيق البريد الإلكتروني لقراءة رسائل البريد الإلكتروني من موفري خدمة غير Gmail. يدعم تطبيق البريد الإلكتروني أنواع الحسابات التالية: POP3 وIMAP وMicrosoft Exchange (لمستخدمي Enterprise) وغيرها.

- اضغط على  <  < .

إضافة حساب

في المرة الأولى التي تقوم فيها بفتح تطبيق البريد الإلكتروني، يفتح معالج الإعداد لمساعدتك في إضافة حساب بريد إلكتروني. يمكنك أيضًا إضافة حساب البريد الإلكتروني باستخدام تطبيق الإعدادات.

- اضغط على  < الإعدادات < .

العمل مع مجلدات الحسابات

- اضغط على  < عرض جميع المجلدات.

يتوفر في كل حساب مجلد صندوق وارد والأشخاص المهمون جدًا والرسائل المرسلة والمسودات وعرض جميع المجلدات. قد تتوفر لديك مجلدات إضافية. ويتوقف ذلك على الميزات التي يعتمد عليها موفر خدمة الحسابات.

إنشاء بريد إلكتروني وإرساله

- 1 اضغط على .
- 2 أدخل عنواناً للمستلم المراد إرسال الرسالة إليه. أثناء قيامك بإدخال النص، تظهر العناوين المطابقة من قائمة الأسماء الخاصة بك. قم بفصل العناوين المتعددة بفواصل منقوطة.
- 3 اضغط على حقل نسخة / نسخة مخفية لإرسال نسخة أو نسخة مخفية إلى أسماء/ عناوين بريد إلكتروني أخرى.
- 4 اضغط على حقل النص وأدخل الرسالة.
- 5 اضغط مطولاً على حقل النص لتحرير الكلمات المحددة (عريض/مائل/مسطر/ملون).
- 6 اضغط على  لإرفاق الملف الذي تريد إرساله مع الرسالة.
- 7 اضغط على  لإرسال الرسالة.

تغيير الإعدادات العامة لبريد إلكتروني

• اضغط على  > الإعدادات > الإعدادات العامة.

حذف حساب بريد إلكتروني

• اضغط على  > الإعدادات >  إزالة الحساب > حدد الحساب الذي تريد حذفه > إزالة > نعم.

موسيقى

يتوفر في الجهاز مشغل موسيقى يتيح لك تشغيل كل المسارات المفضلة لديك.


ملاحظة

- قد تكون بعض تنسيقات الملفات غير مدعومة وفقاً للبرنامج المثبت.
- إذا تجاوز الملف حجم الذاكرة المتاحة، فقد يحدث خطأ عند فتح الملفات.
- قد تخضع حقوق تأليف ونشر ملفات الموسيقى لحماية المعاهدات الدولية وقوانين حقوق النشر الوطنية. ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. تمنع القوانين الوطنية في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر. قبل تحميل الملف أو نسخه، يرجى التحقق من القوانين الوطنية للبلد المعني والمتعلقة باستخدام مثل هذه المواد.

تشغيل أغنية

- 1 اضغط على  <  < .
- 2 اضغط على علامة التبويب الأغاني.
- 3 حدد الأغنية التي تريد تشغيلها.
- 4 تتوفر الخيارات التالية.

خيارات مشغل الموسيقى

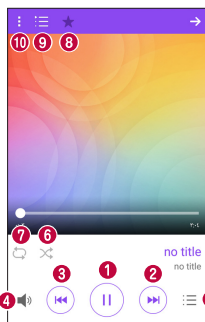

1		اضغط لإيقاف التشغيل مؤقتًا.
2		اضغط لاستئناف التشغيل.
3		اضغط للانتقال إلى المسار التالي في الألبوم أو قائمة التشغيل أو قائمة مزج المسارات. المس باستمرار للتقديم السريع.
4		اضغط لإعادة تشغيل المسار الحالي أو التخطي إلى المسار السابق في الألبوم أو قائمة التشغيل أو قائمة مزج المسارات. المس باستمرار لإرجاع التشغيل.
5		اضغط لضبط مستوى الصوت.
6		اضغط لفتح مكتبة الموسيقى.
		اضغط لتشغيل قائمة التشغيل الحالية في وضع مزج المسارات (يتم تشغيل المسارات في ترتيب عشوائي).

7		اضغط للتبديل بين تكرار كل الأغاني أو تكرار الأغنية الحالية أو إيقاف تشغيل التكرار.
8		اضغط لإضافة الأغنية إلى المفضلة.
9		اضغط لفتح قائمة التشغيل الحالية.
10		اضغط للوصول إلى الخيارات الإضافية.

الساعة

يوفر لك تطبيق الساعة إمكانية الوصول إلى وظائف التنبيهات والمؤقت والساعة العالمية وساعة الإيقاف. يمكنك الوصول إلى هذه الوظائف عبر الضغط على علامات التبويب في أعلى الشاشة أو التمرير أفقيًا عبر الشاشة.

• اضغط على  <  < .

تنبيهات

يسمح لك تطبيق التنبيهات بضبط تلك الأخيرة.

- 1 اضغط على علامة التبويب تنبيهات.
- 2 اضغط  لإضافة تنبيه جديد.
- 3 اضبط الإعدادات كما تقتضي الحاجة واضغط على حفظ.

ملاحظة

• يمكنك أيضًا الضغط على تنبيه لتحريره.

المؤقت

يمكن أن تعلمك علامة التبويب المؤقت بإصدار إشارة صوتية بعد مرور فترة زمنية محددة.

- 1 اضغط على علامة التبويب المؤقت.
- 2 عَيِّن الوقت المطلوب على المؤقت.
- 3 اضغط على بدء لتشغيل المؤقت.
- 4 اضغط على إيقاف لإيقاف تشغيل المؤقت.

الساعة العالمية

تسمح لك علامة التبويب الساعة العالمية بالتحقق بسهولة من الوقت الحالي في مدن أخرى حول العالم.

1 اضغط على علامة التبويب الساعة العالمية.

2 اضغط على  وحدد المدينة المطلوبة.

ساعة الإيقاف

تسمح لك علامة التبويب ساعة الإيقاف باستخدام الجهاز كساعة إيقاف.

1 اضغط على علامة التبويب ساعة الإيقاف.

2 اضغط على بدء لبدء تشغيل ساعة الإيقاف.

• اضغط على الدورة لتسجيل أوقات الدورة.

3 اضغط على إيقاف لإيقاف ساعة الإيقاف.

الحاسبة

يسمح لك تطبيق الحاسبة بإجراء العمليات الحسابية باستخدام حاسبة عادية أو علمية.

1 اضغط على  <  < .

2 اضغط على أزرار الأرقام لإدخال الأرقام.

3 بالنسبة للعمليات الحسابية البسيطة، اضغط على الوظيفة التي تريدها لإجراء العمليات

النالية (+ أو - أو × أو ÷). يتبعها =.

 ملاحظة

• بالنسبة إلى العمليات الحسابية الأكثر تعقيداً، اضغط على .

التقويم

يسمح لك تطبيق التقويم بتعقب جدول الأحداث.

1 اضغط على  <  < .

2 اضغط على التاريخ الذي تريد إضافة حدث إليه. ثم اضغط على .

مسجّل الصوت

يسجّل تطبيق مسجّل الصوت ملفات صوتية لتستخدمها بطرق مختلفة.

تسجيل ملف صوتي أو صوت

- 1 اضغط على  <  < .
- 2 اضغط على  لبدء التسجيل.
- 3 اضغط على  لإنهاء التسجيل.
- 4 اضغط على  للاستماع إلى التسجيل.

 ملاحظة

• اضغط على  للوصول إلى التسجيلات. يمكنك الاستماع إلى التسجيلات المحفوظة.

تنزيلات

استخدم هذا التطبيق لمشاهدة الملفات التي تم تنزيلها عبر التطبيقات.

• اضغط على  <  < .

راديو FM

يتوفر في جهازك راديو FM مضمّن لتمكّن من ضبط محطاتك المفضلة والاستماع إليها أثناء التنقل.

• اضغط على  <  < .

 ملاحظة

• عليك توصيل سماعات الأذن لاستخدامها كهوائي.

حول النسخ الاحتياطي لبيانات الجهاز واستعادتها

ننصحك بإنشاء ملف نسخة احتياطية للبيانات بشكل دوري وحفظها في وحدة التخزين الداخلية، وخاصة قبل تحديث أي برنامج. حيث قد يتيح لك الاحتفاظ بملف نسخ احتياطي حديث على ذاكرة التخزين استعادة بيانات الجهاز في حالة فقدانه أو سرقة أو تلفه لسبب غير متوقع.

إن تطبيق LG Backup مدعوم على جهاز LG أو برامج أو إصدارات برامج تشغيل أخرى. لذا، عند شراء جهاز LG الجديد، يمكنك إجراء نسخ احتياطي لبيانات الجهاز الحالي إلى الجهاز الجديد. في حال كان تطبيق LG Backup محملاً مسبقاً على جهازك، يمكنك نسخ معظم البيانات احتياطياً واستعادتها. بما في ذلك التطبيقات التي تم تنزيلها وتثبيتها مسبقاً والإشارات المرجعية وإدخالات التقويم والأسماء وإعدادات الشاشة الرئيسية وإعدادات النظام.



- للحماية ضد إيقاف التشغيل غير المتوقع أثناء عمليات النسخ الاحتياطي أو الاستعادة بسبب انخفاض الطاقة في البطارية، ينبغي المحافظة على البطارية مشحونة بالكامل.



ملاحظة

- يتم حذف كل الملفات المخزنة على الجهاز قبل استعادة ملف النسخ الاحتياطي. احرص على نسخ ملف النسخ الاحتياطي على موقع آخر.
- تجدر الإشارة إلى أن محتويات ملف النسخ الاحتياطي ستحل محل بيانات الجهاز.

لنسخ بيانات الهاتف احتياطياً

- 1 اضغط على  <  < .
- 2 حدد الخيارات المطلوبة.

- نسخ البيانات بين الأجهزة - لنسخ البيانات من الجهاز القديم إلى الجهاز الجديد.
- النسخ الاحتياطي والاستعادة - نسخ البيانات احتياطياً أو استعادتها من النسخ الاحتياطي.

تطبيقات Google

توفر Google تطبيقات ترفيهية وتطبيقات شبكة التواصل الاجتماعي وتطبيقات العمل. قد يُطلب منك حساب Google للوصول إلى بعض التطبيقات. لعرض المزيد من المعلومات حول التطبيق، اطلع على قائمة المساعدة في كل تطبيق.



قد لا تتوفر بعض التطبيقات وفقًا للمنطقة أو موقع الخدمة.

Google

ابحث بسرعة عن عناصر على الإنترنت أو الجهاز.

Chrome

ابحث عن المعلومات وتصفح صفحات ويب.

Gmail

أرسل رسائل بريد إلكتروني أو استلمها عبر خدمة Google Mail.

خرائط

اعثر على موقعك في الخريطة وابحث عن مواقع واعرض معلومات الموقع لأمكنة متنوعة.

YouTube

شاهد مقاطع فيديو أو أنشئها وشاركها مع الآخرين.

Drive

خزن المحتويات على cloud واستخدمها أينما كنت وشاركها مع الآخرين.

موسيقى Play

تعرف على الموسيقى واستمع إليها وشاركها على جهازك.

أفلام Play

شاهد مقاطع الفيديو المخزنة على جهازك وقم بتنزيل محتويات متنوعة للمشاهدة من سوق Play.

Hangouts

تحدث مع أصدقائك بشكل فردي أو ضمن مجموعات واستخدم الصور والرموز التعبيرية ومكالمات الفيديو أثناء المحادثة.

صور

قم بإدارة الصور والألبومات ومقاطع الفيديو التي تم حفظها على الجهاز وتحميلها إلى Google+.

البحث الصوتي

ابحث بسرعة عن عناصر عبر قول كلمة أو جملة أساسية.

الإعدادات

الوصول إلى قائمة الإعدادات

يتيح لك تطبيق الإعدادات تخصيص جهازك.

فتح تطبيق الإعدادات

- اضغط على  > المس باستمرار  > إعدادات النظام.
- أو
- اضغط على  >  > .

إعدادات العرض

اضغط على  لتبديل وضع العرض.

- عرض القائمة – مرّر للأعلى والأسفل عبر القائمة.
- عرض التبويب – مرّر لليسار أو اليمين أو اضغط على علامة التبويب التي تريدها.

ملاحظة

- تستند إرشادات تنفيذ المهام في هذا الدليل إلى إعداد العرض الافتراضي.

الشبكات

بطاقة SIM الثنائية

يمكنك تكوين إعدادات SIM الثنائية.

على شاشة الإعدادات، اضغط على علامة التبويب الشبكات > بطاقة SIM الثانية.

- **SIM 1** – يتيح لك هذا الخيار تغيير اسم بطاقة SIM ورمزها إلى بطاقة SIM 1.
- **تنشيط الفتحة 1** – ضع علامة اختيار على هذا الخيار لتنشيط الفتحة 1 الخاصة ببطاقة SIM أو إلغاء تنشيطها.
- **SIM 2** – يتيح لك هذا الخيار تغيير اسم بطاقة SIM ورمزها إلى بطاقة SIM 2.
- **تنشيط الفتحة 2** – ضع علامة اختيار على هذا الخيار لتنشيط الفتحة 2 الخاصة ببطاقة SIM أو إلغاء تنشيطها.
- **سمة لون بطاقة SIM** – يتيح لك هذا الخيار تحديد الألوان المطلوبة.
- **ميزة تقليل التكلفة** – تتم إضافة كل اسم مع بطاقة SIM التي تم تعيينها عند إضافته إلى دليل الهاتف. أثناء الاتصال، يتم تحديد بطاقة SIM المطابقة الخاصة بالمشغّل ويتم إكمال العملية باستخدامه. يجعل هذا الاستفادة من استخدام المشغّل نفسه ممكنة.

- **بيانات الهاتف المحمول** - ضع علامة اختيار على هذا الخيار لتمكين الوصول إلى البيانات على شبكة الهاتف المحمول.
- **بطاقة SIM المطلوب استخدامها** - يمكنك تغيير شبكة البيانات الافتراضية. ستستخدم خدمات حزم الهاتف المحمول كافة (ويب، رسالة MMS، البريد الإلكتروني، وغير ذلك) بطاقة SIM المحددة على هذه القيمة. عند إدراج بطاقة SIM واحدة، يتم تعيين شبكة البيانات الافتراضية كبطاقة SIM المدرجة ولا يسمح بالتغيير.
- **بيانات التجوال** - ضع علامة اختيار على هذا الخيار ليسمح لك باستخدام اتصالات بيانات الجهاز المحمول أثناء تجوّلك خارج منطقة تغطية الشبكة المحلية.

Wi-Fi

- يمكنك الوصول إلى الإنترنت بسرعة عالية ضمن تغطية نقطة الوصول اللاسلكية (AP). على شاشة الإعدادات، اضغط على علامة التبويب **الشبكات < Wi-Fi**.
- 1 اضغط على  لتشغيل Wi-Fi وبدء البحث عن شبكات Wi-Fi المتوفرة.
- 2 اضغط على شبكة للاتصال بها.
- إذا كانت الشبكة محمية برمز قفل، ستحتاج إلى إدخال مفتاح حماية أو كلمة مرور.
- 3 يعرض شريط الحالة رموز تشير إلى حالة Wi-Fi.

ملاحظة

- إذا كنت متواجداً خارج منطقة تغطية شبكة Wi-Fi أو عيّنت Wi-Fi إلى إيقاف التشغيل، فقد يتصل الجهاز تلقائيًا بالويب باستخدام البيانات، ما قد يؤدي إلى فرض رسوم بيانات.

Wi-Fi Direct

يوفر Wi-Fi Direct اتصالاً مباشراً بين الأجهزة الممكنة لاستخدام Wi-Fi من دون الحاجة إلى نقطة وصول.

- اضغط على  < خيارات Wi-Fi المتقدمة < **Wi-Fi Direct**.

ملاحظة

- في هذه القائمة، يكون الجهاز مرئيًا لأجهزة Wi-Fi Direct الأخرى المرئية والقريبة.

Bluetooth

إن Bluetooth عبارة عن تقنية اتصالات قصيرة المدى تسمح لك بالاتصال لاسلكيًا بعدد من أجهزة Bluetooth. مثل سماعات الرأس والأجهزة اللاييدوية التي تُستخدم في السيارات والأجهزة المحمولة المزودة بتقنية Bluetooth وأجهزة الكمبيوتر والطابعات والأجهزة اللاسلكية.

ملاحظة

- لا تتحمل شركة LG مسؤولية فقدان البيانات التي يتم إرسالها أو استقبالها عبر ميزة Bluetooth أو اعتراضها أو إساءة استخدامها.
- تأكد دائمًا من مشاركة البيانات ونلقبها من أجهزة موثوق بها ومحمية بطريقة صحيحة.
- وفي حالة وجود عوائق بين الأجهزة. قد تقل مسافة التشغيل.
- قد تكون بعض الأجهزة غير متوافقة مع الجهاز لديك وبخاصة تلك الأجهزة التي لم تختبرها Bluetooth SIG أو لم تعتمدها.

إقران جهازك بجهاز آخر يعمل بتقنية Bluetooth

- 1 على شاشة الإعدادات. اضغط على علامة التبويب الشبكات < Bluetooth.
- 2 اضغط على  لتشغيل Bluetooth وبدء البحث عن أجهزة Bluetooth المتوفرة.
- إذا أردت أيضًا اكتشاف الأجهزة المرئية في النطاق. اضغط على بحث.
- 3 اختر الجهاز الذي تريد الاقتران به من القائمة. عند نجاح عملية الاقتران. يتصل جهازك بالجهاز الآخر.

ملاحظة

- إقران جهازين مزوّتين بتقنية Bluetooth هو عملية يتم إجراؤها مرة واحدة. بعد انتهاء الاقتران. تستمر الأجهزة بالتعرّف على علاقة الشراكة بينها وتبادل المعلومات.
- يرجى مراجعة الوثائق المرفقة بجهاز Bluetooth للحصول على معلومات حول وضع الاقتران ورمز المرور (نموذجيًا 0000. أربعة أصفار).

إرسال البيانات عبر Bluetooth

- 1 حدد ملفًا أو عنصرًا مثل اسم أو ملف وسائط.
- 2 حدد خيارًا لإرسال البيانات عبر Bluetooth.
- 3 البحث عن جهاز مزود بتقنية Bluetooth والاقتران به.

ملاحظة

- نظرًا لاختلاف مواصفات الأجهزة الأخرى المتوافقة مع تقنية Bluetooth وميزاتها. قد تختلف شاشة العرض والعمليات وقد يكون إجراء بعض الوظائف مثل النقل أو التبادل غير ممكن مع كل الأجهزة المتوافقة مع تقنية Bluetooth.

تلقي البيانات عبر Bluetooth

- 1 على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < Bluetooth.
- 2 اضغط على  لتشغيل Bluetooth.
- 3 ستتلقي طلباً لقبول محاولة الاقتران من الجهاز المُرسِل. احرص على تحديد قبول.

بيانات الهاتف المحمول

لعرض استخدام البيانات وحدّ استخدام بيانات الجهاز:

- اضغط على  لتشغيل اتصال بيانات الجهاز أو إيقاف تشغيله. يتيح لك ذلك إدارة استخدام بيانات الجهاز. يمكنك استخدام اتصال شبكة Wi-Fi للبيانات بدلاً من ذلك.

إعدادات المكالمات

تتيح لك تكوين إعدادات متنوعة للمكالمات.

على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < إعدادات المكالمات.

[علامة التبويب SIM 1/SIM 2]

- البريد الصوتي - يسمح لك هذا الخيار بتحديد خدمة البريد الصوتي الخاصة بشركة الهاتف.
- أرقام الاتصال الثابت - يسمح لك هذا الخيار بإدارة قائمة بالأرقام التي يمكن الاتصال بها من هاتفك وتجميعها. ستحتاج إلى رمز PIN2 الذي يوفره المشغّل، إذا تم تنشيطه. فستتمكّن من الاتصال بالأرقام المدرجة في قائمة أرقام الاتصال الثابت فقط من هاتفك.
- إعادة توجيه المكالمات - يسمح لك هذا الخيار بتعيين خيارات إعادة توجيه المكالمات.
- حظر المكالمات - لحظر المكالمات الواردة أو الصادرة أو الدولية.
- مدة المكالمات - لعرض مدة المكالمات بما في ذلك المكالمات الأخيرة والمكالمات الصادرة والواردة وكل المكالمات.
- إعدادات إضافية - يتيح لك هذا الخيار تغيير الإعدادات التالية مثل هوية المتصل أو انتظار المكالمات أو غيرها.

[علامة التبويب عام]

- إعادة التوجيه الذكي - يتيح لك هذا الخيار تلقي اتصالات بطاقة SIM2 إذا كان خطك مشغولاً على بطاقة SIM1 والعكس صحيح.
- نافذة منبثقة للمكالمة الواردة - يتيح لك هذا الخيار عرض نافذة منبثقة للمكالمة الواردة عندما يكون التطبيق قيد الاستخدام.
- رفض المكالمات - يسمح لك هذا الخيار بتعيين وظيفة رفض المكالمات.

- **الرفض برسالة** - عندما تريد رفض مكالمة. يمكنك إرسال رسالة سريعة باستخدام هذه الوظيفة. ويعتبر هذا الأمر مفيداً إذا أردت رفض مكالمة أثناء اجتماع.
- **رد آلي** - يتيح لك هذا الخيار ضبط الوقت قبل أن يجيب الجهاز اللاسلكي المتصل تلقائياً على المكالمة الواردة.
- **اهتزاز عند الاتصال** - ليهتز الهاتف عندما يرد الطرف الآخر على المكالمة.
- **حفظ الأرقام غير المعروفة** - يسمح لك هذا الخيار بإضافة أرقام غير معروفة إلى الأسماء بعد مكالمة.
- **مفتاح التشغيل ينهي المكالمة** - يسمح لك هذا الخيار باستخدام مفتاح التشغيل لإنهاء المكالمات.
- **كتم صوت المكالمات الواردة** - ضع علامة اختيار على هذا الخيار لتمكين من كتم صوت المكالمات الواردة بقلب الجهاز.

اتصال USB

يتيح لك هذا الخيار مشاركة اتصال الإنترنت مع الكمبيوتر بواسطة كابل USB.

- 1 قم بتوصيل جهازك بالكمبيوتر الشخصي بواسطة كابل USB.
- 2 على شاشة الإعدادات، اضغط على علامة التبويب الشبكات > الربط.
- 3 اضغط على  لتشغيل اتصال USB.

نقطة Wi-Fi المحمولة

يمكنك أيضاً استخدام الجهاز لتوفير اتصال ذي نطاق ترددي عريض للجهاز. أنشئ نقطة اتصال فعالة وشارك اتصالك.

على شاشة الإعدادات، اضغط على علامة التبويب الشبكات > الربط

- 1 اضغط على  لتشغيل نقطة Wi-Fi المحمولة.
- 2 اضغط على قم بضبط نقطة الاتصال Wi-Fi لتغيير SSID ونوع الحماية وكلمة المرور وخيارات أخرى للنقطة المحمولة.

ربط Bluetooth

يتيح لك هذا الخيار الاتصال بأجهزة أخرى عبر Bluetooth.

- على شاشة الإعدادات، اضغط على علامة التبويب الشبكات > الربط.
- اضغط على  لتشغيل ربط Bluetooth ومشاركة اتصالاتك عبر ربط Bluetooth.

وضع الرحلات الجوية

يتيح لك هذا الوضع استخدام عدد كبير من ميزات جهازك، مثل الألعاب والموسيقى عندما تكون في مكان يُمنع فيه إجراء مكالمات أو تلقيها أو استخدام البيانات. عند ضبط جهازك على وضع الرحلات الجوية، لا يمكنك إجراء مكالمات أو تلقيها أو الوصول إلى البيانات عبر الإنترنت. في شاشة الإعدادات، اضغط على علامة التبويب الشبكات > المزيد > وضع الرحلات الجوية.

VPN

يمكنك من جهازك إضافة شبكات خاصة ظاهرية (VPNs) وإعدادها وإدارتها. تسمح لك هذه الشبكات بالاتصال بالموارد الموجودة داخل شبكة محلية محمية. مثل شبكة شركتك والوصول إليها.

في شاشة الإعدادات، اضغط على علامة التبويب الشبكات > المزيد > VPN.

شبكات الهاتف

تتيح لك هذه القائمة بتكوين إعدادات مختلفة لشبكة الجهاز مثل وضع الشبكة وأسماء نقاط الوصول وغير ذلك.

في شاشة الإعدادات، اضغط على علامة التبويب الشبكات > المزيد > شبكات الهاتف.

طباعة

للسماح لك بطباعة محتوى بعض الشاشات (مثل صفحات الويب المعروضة في متصفح Chrome) باستخدام طابعة متصلة بشبكة Wi-Fi نفسها كجهاز Android.

على شاشة الإعدادات، اضغط على علامة التبويب الشبكات > المزيد > طباعة.

الصوت و الإشعار

- يتيح لك تغيير إعدادات صوتية متنوّعة على الجهاز.
- على شاشة الإعدادات، اضغط على علامة التبويب الصوت و الإشعار.
- أوضاع الصوت - يتيح لك هذا الخيار ضبط وضع صوت الجهاز.
- مستوى الصوت - يتيح لك هذا الخيار ضبط إعدادات مستوى صوت الجهاز لملاءمة احتياجاتك وبيئتك.
- نغمة رنين SIM1/ SIM2 - يتيح لك هذا الخيار ضبط نغمات رنين للمكالمات. يمكنك أيضًا إضافة نغمات رنين وحذفها.
- معرف الرنين - يتيح لك هذا الخيار إنشاء نغمات رنين استنادًا إلى رقم هاتف المكالمات الواردة.
- صوت مع اهتزاز - يتيح لك هذا الخيار ضبط الجهاز ليهتز ويصدر نغمة رنين عند تلقيك مكالمات.
- نوع اهتزاز SIM1/ SIM2 - يتيح لك هذا الخيار اختيار نوع الاهتزاز.
- عدم الإزعاج - يتيح لك هذا الخيار ضبط جدول يضمّ الأوقات التي تريد فيها منع تلقي الإشعارات لتفادي مقاطعتك. يمكنك ضبط السماح بتشغيل بعض الميزات عند ضبط الأولوية فقط.
- تأمين الشاشة - يتيح لك هذا الخيار اختيار ما إذا كنت تريد عرض الإشعارات أو إخفائها على قفل الشاشة.
- تطبيقات - يتيح لك هذا الخيار ضبط إشعارات للتطبيقات الفردية وبالتالي منعها من عرض الإشعارات وضبط الأولوية.

المزيد

- يتيح لك ضبط إعدادات الصوت والإشعار الأخرى.
- على شاشة الإعدادات، اضغط على علامة التبويب الصوت و الإشعار < المزيد.
- صوت إشعار SIM1/ SIM2 - يتيح لك هذا الخيار ضبط صوت الإشعارات. يمكنك أيضًا إضافة أصوات للإشعارات وحذفها.
- تأثيرات الصوت - تسمح لك هذه القائمة بتحديد ما إذا كنت تريد سماع نغمات عند الضغط على الأرقام على لوحة الاتصال وعند تحديد خيارات على الشاشة والمزيد غيرها.
- إشعارات الرسائل/المكالمات الصوتية - يتيح لك هذا الخيار لجهازك قراءة المكالمات الواردة وأحداث الرسائل تلقائيًا.

إعدادات الشاشة

الشاشة الرئيسية

يتيح لك هذا الخيار ضبط إعدادات الشاشة الرئيسية.

على شاشة الإعدادات، اضغط على علامة التبويب إعدادات الشاشة > الشاشة الرئيسية.

• **تحديد الشاشة الرئيسية** - لتحديد السمة المطلوبة للشاشة الرئيسية.

• **سمة** - لتعيين سمة الشاشة على جهازك. يمكنك تنزيل سمات جديدة من LG SmartWorld.

• **خلفية الشاشة** - لضبط خلفية الشاشة التي تريد استخدامها على الشاشة الرئيسية.

• **تأثيرات الشاشة** - يتيح لك هذا الخيار تحديد نوع التأثير المطلوب عرضه عند التمرير من مساحة محيطية للشاشة الرئيسية إلى التالية.

• **السماح بالتكرار الحلقي للشاشة الرئيسية** - يتيح لك تمكين هذا الخيار تمرير الشاشة الرئيسية بشكل مستمر (الرجوع إلى الشاشة الأولى بعد الشاشة الأخيرة).

• **مساعدة** - لعرض معلومات حول الشاشة الرئيسية.

تأمين الشاشة

تتيح لك تعيين إعدادات قفل الشاشة.

على شاشة الإعدادات، اضغط على علامة التبويب إعدادات الشاشة > تأمين الشاشة.

• **اختر قفل الشاشة** - يتيح لك هذا الخيار ضبط نوع قفل الشاشة لحماية جهازك.

• **Smart Lock** - يتيح لك هذا الخيار إبقاء جهازك غير مقفل عند الاتصال بجهاز موثوق به أو عندما يكون موجودًا في مكان موثوق به. إذا احتجت إلى المزيد من المعلومات، يرجى مراجعة القسم Smart Lock في إقفال الجهاز وإلغاء قفله.

• **خلفية الشاشة** - لتحديد خلفية الشاشة المطلوب عرضها على شاشة القفل.

• **اختصارات** - يسمح لك هذا الخيار باختيار الاختصارات المتوفرة على شاشة القفل.

• **معلومات الاتصال للهاتف المفقود** - يتيح لك هذا الخيار عرض معلومات المالك على شاشة القفل في حال فقدان الجهاز.

• **مؤقت الإغلاق** - يتيح لك هذا الخيار تعيين مدة الوقت قبل أن تقفل الشاشة تلقائيًا بعد انقضاء مهلة الشاشة.

• **يقفل زر الطاقة على الفور** - ضع علامة اختيار على هذا الخيار لإقفال الشاشة على الفور عند الضغط على مفتاح الطاقة/الإقفال. يمنع هذا الإعداد تعيين إعداد مؤقت القفل.

أزرار اللمس في الشاشة الرئيسية

لضبط أزرار اللمس في الشاشة الرئيسية التي تظهر في أسفل كل الشاشات. لاختيار الأزرار التي تريدها أن تظهر وتحديد موقعها على الشريط وشكلها. على شاشة الإعدادات. اضغط على علامة التبويب إعدادات الشاشة > أزرار اللمس في الشاشة الرئيسية.

المزيد من إعدادات الشاشة

- يتيح لك هذا الخيار تعيين إعدادات أخرى للشاشة.
- على شاشة الإعدادات. اضغط على علامة التبويب إعدادات الشاشة.
- نوع الخط - لاختيار نوع الخط المطلوب.
- حجم الخط - لاختيار حجم الخط المطلوب.
- السطوع - لضبط سطوع الشاشة باستخدام شريط التمرير.
- تدوير الشاشة تلقائيًا - يتيح لك هذا الخيار تبديل اتجاه الشاشة تلقائيًا عند تدوير الجهاز.
- مهلة الشاشة - يسمح هذا الخيار بضبط الفترة الزمنية الفاصلة قبل إيقاف تشغيل الشاشة تلقائيًا.
- حلم اليقظة - يتيح لك هذا الخيار تحديد شاشة التوقف لتظهر عندما يكون الجهاز ساكنًا أثناء وضعه على قاعدة الإرساء و/أو الشحن.
- معايرة استشعار الحركة - يسمح لك هذا الخيار بتحسين دقة إمالة جهاز الاستشعار وسرعته.

اللغة ولوحة المفاتيح

يتيح لك هذا الخيار تغيير إعدادات إدخال النص.

حدد لغة للكتابة على جهازك ولتكوين لوحة المفاتيح التي تظهر على الشاشة. بما في ذلك الكلمات التي أضفتها إلى القاموس.

على شاشة الإعدادات. اضغط على علامة التبويب عامة > اللغة ولوحة المفاتيح.

- اللغة - يتيح لك هذا الخيار اختيار لغة لاستخدامها على الجهاز.
- لوحة المفاتيح الحالية - يتيح لك هذا الخيار تحديد نوع لوحة المفاتيح الحالية.
- لوحة مفاتيح LG - يتيح لك هذا الخيار تغيير إعدادات لوحة مفاتيح LG.
- الكتابة بالصوت من Google - يتيح لك تمكين هذا الخيار تحديد الكتابة بالصوت من Google لإدخال البيانات. اضغط على الرمز إعدادات لتغيير إعدادات الصوت من Google.
- تحويل النص إلى الكلام - اضغط لضبط المحرك المفضل أو الإعدادات العامة لتحويل النص إلى الكلام.
- سرعة المؤشر - اضبط سرعة المؤشر.
- عكس الأزرار - يتيح لك هذا الخيار عكس أزرار الماوس لاستخدام الزر الأيمن كالزر الأساسي.

الموقع

قم بتشغيل خدمة تحديد الموقع وسيحدد الجهاز موقعك التقريبي باستخدام Wi-Fi وشبكات الجهاز. عند تحديد هذا الخيار، يتم سؤالك إذا كنت توافق على السماح لـ Google استخدام الموقع عند توفير هذه الخدمات.

على شاشة الإعدادات. اضغط على علامة التبويب عامة > الموقع.

- الوضع - لضبط كيفية تحديد معلومات موقعك الحالي.
- الكاميرا - يتيح لك تمكين هذا الخيار وضع علامة على الصور أو مقاطع الفيديو مع المواقع التي التقطت فيها. Google سجل المواقع في
- سجل المواقع في Google - يتيح لك هذا الخيار اختيار إعدادات معلومات الموقع كما يتم الوصول إليها من Google ومنتجاته.

الحسابات والمزامنة

- تتيح لك هذه القائمة إضافة حسابات Google والحسابات الأخرى المعتمدة وإزالتها وإدارتها. كما يمكنك استخدام هذه الإعدادات للتحكم بالطريقة التي ترسل بها كل التطبيقات البيانات وتلقاها وتجري مزامنة لها وما إذا كنت تجري ذلك بحسب جداولها الخاصة. وما إذا كان باستطاعة كل التطبيقات مزامنة بيانات المستخدم تلقائيًا.
- كما قد يكون للتطبيقات Gmail™ والتقويم والتطبيقات الأخرى إعدادات خاصة بها للتحكم في كيفية مزامنة البيانات: راجع الأقسام حول تلك التطبيقات لمعرفة التفاصيل.
- على شاشة الإعدادات، اضغط على علامة التبويب عامة > الحسابات والمزامنة.
- **مزامنة البيانات تلقائيًا** - يتيح لك تمكين هذا الخيار مزامنة كافة الحسابات التي أضفتها إلى جهازك تلقائيًا.
 - **الحسابات** - يتيح لك هذا الخيار عرض كافة الحسابات التي أضفتها. اضغط على أحد الحسابات لعرضه و/أو إدارته.
 - **إضافة حساب** - اضغط على هذا الخيار لإضافة حساب جديد.

إمكانية الوصول

- استخدم إعدادات إمكانية الوصول لتكوين الوظائف الإضافية لإمكانية الوصول التي قمت بتثبيتها على جهازك.
- على شاشة الإعدادات، اضغط على علامة التبويب عامة > إمكانية الوصول.
- **الرؤية** - يتيح لك هذا الخيار ضبط خيارات للأشخاص الذين يعانون ضعفًا في البصر.
 - **TalkBack** - يتيح لك هذا الخيار إعداد وظيفة TalkBack التي تساعد الأشخاص الضعيفي البصر عن طريق توفير تعليقات صوتية.
 - **إشعارات الرسائل/المكالمات الصوتية** - يتيح لك تمكين هذا الخيار سماع تنبيهات شفوية تلقائية للمكالمات والرسائل الواردة.
 - **ظلال الشاشة** - يتيح لك تمكين هذا الخيار تعيين تباين أعمق للشاشة.
 - **حجم الخط** - لضبط حجم الخط.
 - **التكبير/التصغير باللمس** - تسمح لك بالتكبير والتصغير من خلال النقر ثلاث مرات على الشاشة.
 - **عكس لون الشاشة** - يتيح لك هذا الخيار عكس ألوان الشاشة والمحتوى.
 - **تصفية لون الشاشة** - يتيح لك هذا الخيار تغيير ألوان الشاشة والمحتوى.
 - **مفتاح التشغيل/إيقاف المكالمات** - يتيح لك تمكين هذا الخيار إنهاء المكالمات الصوتية بالضغط على مفتاح الطاقة/القفل.

- **سماع** - يتيح لك هذا الخيار ضبط خيارات للأشخاص الذين يعانون ضعفًا في السمع.
- **الشرح** - يسمح لك هذا الخيار بتخصيص إعدادات الشرح لمن يعاني ضعفًا في السمع.
- **تنبيهات الفلاش** - يتيح لك تمكين هذا الخيار تعيين الفلاش ليومض عند تلقي مكالمات واردة وصدور إشعارات.
- **إيقاف تشغيل جميع الأصوات** - يتيح لك تمكين هذا الخيار إيقاف تشغيل كل أصوات الهاتف.
- **نوع الصوت** - لضبط نوع الصوت.
- **ضبط اتزان الصوت** - لضبط مسار الصوت. حرّك المفتاح المنزلق على شريط التمرير لتعيينه.
- **الإعاقة الحركية والصعوبات المعرفية** - يتيح لك هذا الخيار ضبط خيارات للأشخاص الذين يعانون ضعفًا في المهارات الحركية.
- **لمس وقت التعليق** - لتعيين لمس وقت التعليق.
- **Touch assistant** - لعرض لوحة لمس مع الوصول السهل إلى الإجراءات العامة.
- **مهلة الشاشة** - لضبط المدة الزمنية قبل انطفاء الإضاءة الخلفية تلقائيًا.
- **لمس مناطق التحكم** - يتيح لك هذا الخيار تحديد منطقة على الشاشة لوضع حد لتنشيط اللمس لتلك المنطقة فقط من الشاشة.
- **اختصار لمزايا إمكانية الوصول** - يسمح لك هذا الخيار بالوصول إلى الميزات المحددة بشكل سريع عند الضغط 3 مرات على زر الصفحة الرئيسية.
- **تدوير الشاشة تلقائيًا** - يتيح لك تمكين هذا الخيار تدوير الشاشة بحسب الاتجاه الفعلي للجهاز (عمودي أو أفقي).
- **الوصول عبر مفتاح التحويل** - يتيح لك هذا الخيار التفاعل مع الجهاز باستخدام مفتاح واحد أو أكثر تعمل مثل مفاتيح لوحة المفاتيح. يمكن أن تكون هذه القائمة مفيدة للمستخدمين الذين لديهم صعوبة في الحركة تمنعهم من التفاعل مع الهاتف بشكل مباشر.

مفتاح الاختصار

احصل على إمكانية الوصول بسرعة إلى التطبيقات عبر الضغط على مفتاحي مستوى الصوت عندما تكون الشاشة متوقفة عن التشغيل أو مقفلة.

على شاشة الإعدادات، اضغط على علامة التبويب عامة > مفتاح الاختصار.

- اضغط مرتين على مفتاح رفع مستوى الصوت لفتح تطبيق Capture+.
- اضغط مرتين على مفتاح خفض مستوى الصوت لتشغيل تطبيق الكاميرا.

Google

استخدم إعدادات Google لإدارة تطبيقات Google وإعدادات الحساب.

الحماية

استخدم هذه القائمة لتكوين كيفية المساعدة في حماية الجهاز وبياناته.

على شاشة الإعدادات، اضغط على علامة التبويب عامة > الحماية.

- قفل المحتويات - لتحديد أنواع القفل لإقفال المذكرات لـ QuickMemo+.
- تشفير الهاتف - يسمح لك هذا الخيار تشفير البيانات على الهاتف من أجل الأمان. سيُطلب منك إدخال رمز PIN أو كلمة المرور لفك تشفير هاتفك كل مرة تقوم فيها بتشغيل الهاتف.
- تشفير وحدة تخزين بطاقة SD - لتشفير وحدة تخزين بطاقة SD والحفاظ على عدم توفر البيانات للأجهزة الأخرى.
- إعداد قفل بطاقة SIM - لتعيين رمز PIN لإقفال بطاقة SIM والسماح لك بتغيير رمز PIN.
- كتابة كلمة المرور مرئية - يتيح لك تمكين هذا الخيار عرض كل حرف من كلمات المرور بشكل سريع أثناء إدخالها بحيث يمكنك رؤية الأحرف التي تدخلها.
- مديرو الهاتف - عرض مديري الهاتف أو إلغاء تنشيطهم.
- مصادر غير معروفة - يسمح لك هذا الخيار بتثبيت تطبيقات من خارج سوق Play.
- التحقق من التطبيقات - لعدم السماح بتثبيت التطبيقات التي قد تسبب بحدوث ضرر أو التحذير قبل ذلك.
- نوع التخزين - لعرض نوع التخزين الحالي.
- إدارة الشهادة - يتيح لك هذا الخيار إدارة شهادات الحماية.
- Trust agents - حدد التطبيقات التي تريد استخدامها من دون إلغاء قفل الشاشة.
- تثبيت الشاشة - يمكنك تمكين الجهاز لعرض شاشة تطبيق معين فقط باستخدام تثبيت الشاشة.

- الوصول إلى استخدام التطبيق - يتيح لك هذا الخيار عرض معلومات استخدام التطبيقات على الجهاز.

Quick Cover View

يفضل Quick Cover View. يمكنك التحقق من المكالمات الواردة وإيقاف المنبه/المؤقت عندما يكون الغطاء مغلقًا. لإلغاء القفل بالغطاء، يجب ضبط قفل الشاشة على مسح. على شاشة الإعدادات، اضغط على علامة التبويب عامة > Quick Cover View.

التاريخ و الوقت

عيّن تفضيلاتك لكيفية عرض التاريخ والوقت. على شاشة الإعدادات، اضغط على علامة التبويب عامة > التاريخ و الوقت.

التخزين و USB

- يمكنك مراقبة الذاكرة الداخلية المتوفرة والمستخدم في الجهاز. على شاشة الإعدادات، اضغط على علامة التبويب عامة > التخزين و USB.
- وحدة التخزين الداخلية - يتيح لك هذا الخيار عرض المساحة الإجمالية والمساحة المتوفرة في الذاكرة الداخلية للجهاز على شكل نص ومخطط بياني شريطي مرّز بالألوان (المساحة غير المستخدمة باللون الرمادي). تدرج التطبيقات المناسبة والمساحة التي تستخدمها ضمن اسم كل مستخدم للجهاز.
- بطاقة SD - يتيح لك هذا الخيار عرض المساحة الإجمالية والمساحة المتوفرة في بطاقة الذاكرة.

البطارية وتوفير الطاقة

- يتيح لك هذا الخيار عرض حالة البطارية الحالية بما في ذلك النسبة المئوية لمستوى الشحن المتبقي وحالة الشحن.
- على شاشة الإعدادات، اضغط على علامة التبويب عامة > البطارية وتوفير الطاقة.
- استخدام البطارية - لعرض مستوى استهلاك البطارية وتفاصيل الاستخدام، اضغط على أحد العناصر لرؤية المزيد من المعلومات المفصلة.
- النسبة المئوية للبطارية موجودة على شريط الحالة - ضع علامة اختيار على هذا الخيار لعرض مستوى شحن البطارية على شريط الحالة إلى جانب رمز البطارية.
- توفير الطاقة - اضغط على المفتاح توفير طاقة للتبديل بين تشغيل أو إيقاف التشغيل. لضبط مستوى شحن البطارية الذي يؤدي تلقائيًا إلى تشغيل توفير الطاقة.

الذاكرة

يمكنك مراقبة الذاكرة المستخدمة بشكل متوسط والذاكرة التي تستخدمها تطبيقات الجهاز.

التطبيقات

للسماح لك بعرض التفاصيل حول التطبيقات المثبتة على جهازك وإدارة بياناتها وإجبارها على التوقف.

على شاشة الإعدادات، اضغط على علامة التبويب عامة > التطبيقات.

تطبيق الرسائل الافتراضي

تسمح لك هذه القائمة باختيار تطبيق الرسائل الذي تريد استخدامه كتطبيق رسائل افتراضي. على شاشة الإعدادات، اضغط على علامة التبويب عامة > تطبيق الرسائل الافتراضي.

نسخ احتياطي وإعادة الضبط

غيّر الإعدادات لإدارة إعداداتك وبياناتك.

على شاشة الإعدادات، اضغط على علامة التبويب عامة > نسخ احتياطي وإعادة الضبط.

• **LG Backup** – يتيح لك هذا الخيار نسخ جميع المعلومات الموجودة على الجهاز احتياطيًا واستعادتها، وذلك في حال فقدان البيانات أو استبدالها. إذا احتجت إلى مزيد من المعلومات، يرجى مراجعة قسم LG Backup في التطبيقات.

• **نسخ احتياطي لبياناتي** – لإجراء نسخ احتياطي لبيانات التطبيقات وكلمات مرور Wi-Fi وإعدادات أخرى إلى خوادم Google.

• **الحساب الاحتياطي** - لعرض الحساب الذي يتم استخدامه حاليًا لنسخ المعلومات احتياطيًا.

• **استعادة تلقائية** – لاستعادة الإعدادات والبيانات التي تم نسخها احتياطيًا عند إعادة تثبيت أحد التطبيقات.

• **إعادة ضبط إعدادات الشبكة** – يتيح لك هذا الخيار إعادة ضبط كل إعدادات الشبكة.

• **إعادة ضبط بيانات الشركة المصنعة** – إعادة ضبط الإعدادات إلى القيم الافتراضية للشركة المصنعة وحذف جميع البيانات لديك. إذا أعدت ضبط الجهاز بهذه الطريقة.

فسيُطلب منك إعادة إدخال المعلومات نفسها التي استخدمتها عند تشغيل Android في المرة الأولى.

حول الهاتف

لعرض المعلومات القانونية والتحقق من حالة الجهاز وإصدارات البرامج وإجراء تحديث للبرنامج.
على شاشة الإعدادات، اضغط على علامة التبويب عامة > حول الهاتف.

ملحق

تحديث برنامج الجهاز

تحديث برنامج جهاز LG من الإنترنت

لمزيد من المعلومات حول استخدام هذه الوظيفة، يرجى زيارة

<http://www.lg.com/common/index.jsp> ← وتحديد البلد واللغة.

تسمح لك هذه الميزة بتحديث برامج الجهاز الثابتة بسهولة إلى إصدار أحدث من الإنترنت من دون الحاجة إلى زيارة مركز الخدمة. ستكون هذه الميزة متوفرة عندما تصدر LG إصدار برنامج ثابت أحدث للجهاز لديك.

بما أن تحديث البرنامج الثابت للجهاز يتطلب انتباه المستخدم الكامل طوال مدة عملية التحديث، يرجى التحقق من كل التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. تجدر الإشارة إلى أن إزالة كابل بيانات USB أثناء الترقية قد تتسبب بإلحاق ضرر بالغ بجهازك.

ملاحظة

- تحتفظ شركة LG بحق توفير تحديثات برامج ثابتة لطرازات معينة فقط وفق ما تراه مناسباً ولا تضمن توفر إصدار برامج ثابتة أحدث لكافة طرازات الهاتف.

تحديث برنامج جهاز LG لاسلكياً (OTA)

تتيح لك هذه الميزة تحديث برنامج الجهاز إلى إصدار أحدث بشكل لائق عبر OTA من دون التوصيل بكابل بيانات USB. ستكون هذه الميزة متوفرة عندما تصدر LG إصدار برنامج ثابت أحدث للجهاز لديك.

عليك أولاً التحقق من إصدار البرنامج على الجهاز: الإعدادات > علامة التبويب عامة > حول الهاتف > علامة التبويب عام > مركز التحديث > تحديث البرنامج > تحقق الآن من التحديث.

ملاحظة

- قد يتم فقدان بياناتك الشخصية من وحدة التخزين الداخلية للجهاز-بما فيها معلومات حول حساب Google وأي حسابات أخرى وبيانات النظام/التطبيق والإعدادات وأي تطبيقات تم تنزيلها وترخيص DRM-أثناء عملية تحديث برنامج الجهاز. لذا، توصي LG بإجراء نسخ احتياطية لبياناتك الشخصية قبل تحديث برنامج الجهاز. ولا تعتبر LG مسؤولة عن أي فقد للبيانات الشخصية.
- تعتمد هذه الميزة على موثوقية خدمة الشبكة والمنطقة والبلد.

الأسئلة الشائعة

يسرد هذا الفصل بعض المشاكل التي قد تصادفها أثناء استخدام الجهاز. بعض المشاكل يتطلب منك الاتصال بموفر الخدمة. ولكن معظم المشاكل سهلة ويمكنك تصحيحها بنفسك.

الرسالة	الأسباب المحتملة	التدابير التصحيحية الممكنة
خطأ في بطاقة SIM	ما من بطاقة SIM في الجهاز أو تم إدخالها بشكل غير صحيح.	تأكد من إدخال بطاقة SIM بالطريقة الصحيحة.
لا يوجد اتصال بالشبكة/ فقدان الشبكة	الإشارة ضعيفة أو أنك خارج نطاق شبكة مزود الخدمة.	توجّه نحو نافذة أو نحو مكان مفتوح. تحقق من خريطة تغطية مشغل الشبكة.
	قام المشغل بتطبيق خدمات جديدة.	تحقق مما إذا كانت بطاقة SIM أقدم من 6 إلى 12 شهرًا. في هذه الحالة، غيّر بطاقة SIM عند أقرب فرع لموفر الشبكة. اتصل بموفر الخدمة لديك.
الرموز غير متطابقة	لتغيير رمز الأمان. عليك تأكيد الرمز الجديد وذلك بإدخاله مرة أخرى.	إذا فقدت الرمز. فاتصل بموفر الخدمة.
	إن الرمزَين الذين أدخلتهما لا يتطابقان.	
لا توجد تطبيقات يمكن تعيينها	غير معتمد من قبل موفر الخدمة أو أن التسجيل مطلوب.	اتصل بموفر الخدمة لديك.
يتسبب التطبيق الذي تم تنزيله في حدوث الكثير من الأخطاء.	إزالة التطبيق.	1 اضغط على  <  < . 2 اضغط على علامة التبويب عامة < التطبيقات. 3 اضغط على التطبيق < إلغاء التثبيت.

الرسالة	الأسباب المحتملة	التدابير التصحيحية الممكنة
المكالمات غير متوفرة	خطأ في الطلب	شبكة جديدة غير مصرّح لها.
	تم إدخال بطاقة SIM جديدة.	تحقق من القيود الجديدة.
	تم الوصول إلى حد الشحن المدفوع مقدّمًا.	اتصل بموفر الخدمة أو أعد ضبط الحد بواسطة PIN2.
بتعدّر تشغيل الجهاز	تم ضغط مفتاح التشغيل/إيقاف التشغيل لبرهة قصيرة جدًا.	اضغط على مفتاح التشغيل/إيقاف التشغيل لفنائيتين على الأقل.
	لم يتم شحن البطارية.	اشحن البطارية. تحقق من مؤشر الشحن على الشاشة.
خطأ في الشحن	لم يتم شحن البطارية.	اشحن البطارية.
	إنّ درجة الحرارة في الخارج عالية جدًا أو متدنية جدًا.	تأكد من أن الجهاز قيد الشحن على درجة حرارة عادية.
	مشكلة في الاتصال	تحقق من الشاحن ومن اتصاله بالجهاز.
	لا يوجد فولتية	قم بتوصيل الشاحن بمقبس مختلف.
	خلل في الشاحن	استبدل الشاحن.
	الشاحن غير مناسب	استخدم ملحقات LG الأصلية فقط.
	وظيفة أرقام الاتصال الثابت قيد التشغيل.	تحقق من قائمة الإعدادات وقم بإيقاف تشغيل الوظيفة.
رقم غير مسموح به.		
لا يمكن استلام / إرسال رسائل SMS وصور	ذاكرة ممتلئة	احذف بعض البيانات مثل التطبيقات أو الرسائل من جهازك لتوفير المزيد من المساحة في الذاكرة.
الملفات لا تفتح	تنسيق الملف غير معتمد	تحقق من تنسيقات الملف المعتمدة.

الرسالة	الأسباب المحتملة	التدابير التصحيحية الممكنة
لا أصوات	وضع الاهتزاز	تحقق من حالة الإعدادات في قائمة الصوت للتأكد من عدم ضبط الهاتف على وضع الاهتزاز أو عدم الإزعاج.
تعليق أو تجميد	مشكلة متقطعة في البرنامج	إذا تجمّدت الشاشة أو توقف الجهاز عن الاستجابة عند محاولة تشغيله، فأزل البطارية وأعد إدخالها. ثم أعد تشغيل الجهاز. أو حاول تحديث برنامج عبر موقع الويب.

دليل مكافحة السرقة

يمكنك إعداد جهازك لمنع استخدامه من قبل أشخاص آخرين إذا كانت قد تمت إعادة ضبطه على إعدادات الشركة المصنعة من دون إذن منك. على سبيل المثال، في حال فقدان الجهاز أو سرقة أو مسحه. يمكن فقط للشخص الذي يعلم تفاصيل حساب Google الخاص بك أو معلومات قفل الشاشة استخدام الجهاز.

الخطوات التي عليك اتخاذها لضمان حماية جهازك هي التالية:

- **ضبط قفل شاشة:** في حال فقدان الجهاز أو سرقة لكن كنت قد ضبطت قفل شاشة عليه، لا يمكن مسح معلومات الجهاز باستخدام قائمة الإعدادات إلا إذا تم إلغاء قفل الشاشة.

- **إضافة حساب Google إلى جهازك:** إذا تم مسح معلومات جهازك لكنك تملك حساب Google عليه، لا يمكن للجهاز إنهاء عملية الإعداد حتى يتم إدخال معلومات حساب Google مجدداً.

بعد حماية جهازك. عليك إما إلغاء قفل الشاشة أو إدخال كلمة مرور حساب Google إذا احتجت إلى إعادة الضبط على إعدادات الشركة المصنعة. يضمن هذا الإجراء أنك تقوم أنت شخصياً أو شخص تثق به بإجراء إعادة الضبط.

ملاحظة

- لا ننس حساب Google وكلمة المرور اللذين أضفتهم إلى جهازك قبل إجراء إعادة الضبط على إعدادات الشركة المصنعة. إذا لم توفر معلومات الحساب خلال عملية الإعداد، فلن تتمكن أبداً من استخدام الجهاز بعد إجراء إعادة الضبط على إعدادات الشركة المصنعة.

المزيد من المعلومات

معلومات حول إشعار البرامج المفتوحة المصدر

للحصول على التعليمات البرمجية المصدر بموجب GPL و LGPL و MPL وتراخيص مفتوحة المصدر أخرى يتضمنها هذا المنتج، يرجى زيارة الموقع <http://opensource.lge.com>. بالإضافة إلى التعليمات البرمجية المصدر، تتوفر كل أحكام الترخيص وإشعارات إخلاء المسؤولية وإشعارات حقوق النشر للتنزيل. ستوفر LG Electronics أيضًا التعليمات البرمجية المصدر على قرص مضغوط بتكلفة تغطي هذا التوزيع (مثل تكلفة الوسائط والشحن والاستخدام) عند طلبها بإرسال بريد إلكتروني إلى opensource@lge.com. إن هذا العرض صالح لمدة ثلاث (3) سنوات اعتبارًا من تاريخ شراء المنتج.

علامات تجارية

- حقوق النشر © 2016 LG Electronics, Inc. جميع الحقوق محفوظة. LG وشعار LG هما علامتان تجاريتان مسجلتان لمجموعة LG Group والكيانات التابعة. كل العلامات التجارية الأخرى تعود إلى مالكيها.
- إن Google™ و Google Maps™ و Gmail™ و YouTube™ و Hangouts™ و Play Store™ هي علامات تجارية لشركة Google, Inc.
- Bluetooth® هي علامة تجارية مسجلة لشركة Bluetooth SIG, Inc. عالميًا.
- Wi-Fi® وشعار Wi-Fi هما علامتان تجاريتان مسجلتان لـ Wi-Fi Alliance.
- تعود كافة العلامات التجارية وحقوق النشر الأخرى إلى مالكيها.

بيان التوافق

تعلن LG Electronics بموجبه أن المنتج LG-K430dsY يتوافق مع المتطلبات الأساسية والأحكام الأخرى ذات الصلة الخاصة بالتوجيه 1999/5/EC. يمكن العثور على نسخة من إعلان التوافق على العنوان التالي <http://www.lg.com/global/declaration>

التخلص من الأجهزة القديمة الخاصة بك



- 1 جميع الأجهزة الكهربائية والإلكترونية يجب التخلص منها بشكل منفصل عن النفايات المنزلية عبر منشآت التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
- 2 سيساعد التخلص من جهازك القديم بشكل صحيح في الحد من التبعات السلبية المحتملة للبيئة وصحة الإنسان.
- 3 لمزيد من المعلومات المفصلة حول التخلص من جهازك القديم، يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بالمحل الذي اشتريته منه المنتج.

التخلص من البطاريات/المراكم التالفة



- 1 قد يتحد هذا الرمز مع الرموز الكيميائية مثل الزئبق (Hg) أو الكاديوم (Cd) أو الرصاص (Pb) إذا كانت البطارية تحتوي على أكثر من 0.0005% زئبق أو 0.002% كاديوم أو رصاص 0.004%.
- 2 يجب التخلص من جميع البطاريات/المراكم بشكل منفصل عن النفايات المنزلية عبر منشآت التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
- 3 سيساعد التخلص من البطاريات/المراكم القديمة بشكل صحيح في الحد من التبعات السلبية المحتملة للبيئة وصحة الإنسان والحيوان.
- 4 لمزيد من المعلومات المفصلة حول التخلص من البطاريات/المراكم القديمة يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بالمحل الذي اشتريته منه المنتج.

About this user guide

ENGLISH

Thank you for choosing LG. Please carefully read this user guide before using the device for the first time to ensure safe and proper use.

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- This device is not suitable for people who have a visual impairment due to the touchscreen keyboard.
- Descriptions are based on the device default settings.
- Default apps on the device are subject to updates and support for these apps may be withdrawn without prior notice. If you have any questions about an app provided with the device, please contact a LG Service Centre. For user-installed apps, please contact the relevant service provider.
- Modifying the device's operating system or installing software from unofficial sources may damage the device and lead to data corruption or data loss. Such actions will violate your LG licence agreement and void your warranty.
- Some contents and illustrations may differ from your device depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may apply for data services, such as messaging, uploading, downloading, auto-syncing and location services. To avoid additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

Instructional notices

 WARNING	Situations that could cause injury to yourself and others, or damage to device or other property.
 NOTE	Notices or additional information.

Table of contents

Guidelines for safe and efficient use	5	Knock Code	28
Features you will love	12	Changing the screen lock method.....	29
QuickMemo+	13	Smart Lock.....	29
Using Capture+	13	Home screen	30
Viewing the saved memo.....	13	Getting to Know the Home Screen.....	30
Gesture shot	14	Returning to recently-used applications	31
Taking the photos with a gesture.....	14	Customizing the Home screen	32
Basics	15	Notifications panel.....	33
Accessories	16	Capturing a screenshot.....	35
Device layout.....	17	On-screen keyboard	36
Turning Your Device On and Off	19	Using the keypad and entering text.....	36
Installing the SIM card and battery.....	19	Entering special characters.....	36
Charging the battery	21	Transferring data between a PC and the device	37
Optimizing battery life.....	22	Transferring data using USB connection.....	37
Inserting the memory card	23	LG Bridge.....	38
Removing the memory card	24	Features of LG Bridge	38
Touch screen tips	24	To download the LG Bridge software.....	38
Tap or touch.....	24	Apps	39
Touch and hold.....	25	Installing or uninstalling apps.....	40
Drag.....	25	To open the Play Store app.....	40
Swipe or slide.....	25	To open a screen with details about an app.....	40
Double-tap.....	26	To uninstall applications.....	40
Pinch-to-Zoom.....	26	Calls	41
Google account setup	27	Making a call.....	41
Creating your Google account.....	27	Calling your contacts.....	41
Signing into your Google account.....	27	Answering and rejecting a call	41
Locking and unlocking the device.....	28	Making a second call.....	42
KnockON.....	28	Viewing your call logs.....	42
		Change your call settings	42

Contacts	43	Calculator	56
Searching for a contact.....	43	Calendar	56
Adding a new contact.....	43	Voice Recorder	57
Favourites contacts.....	43	Recording a sound or voice.....	57
Creating a group.....	44	Downloads	57
Messaging	45	FM Radio	57
Sending a message.....	45	LG Backup	58
Conversation view.....	45	About backing up and restoring device	
Changing your messaging settings.....	45	data.....	58
Camera	46	To backup your device data	58
Taking a photo	46	Google apps	59
Camera options on the viewfinder.....	46	Settings	61
Once you have taken a photo.....	48	Access the Settings menu	62
Recording a video.....	48	Networks Settings	62
After recording a video.....	49	Dual SIM card	62
Gallery	49	Wi-Fi.....	63
Viewing pictures.....	49	Wi-Fi Direct.....	64
Editing photos	50	Bluetooth.....	64
Setting wallpaper.....	50	Mobile data.....	65
Zooming in and out	50	Call.....	66
Playing a video.....	50	USB tethering	67
Deleting photos/videos	51	Wi-Fi hotspot.....	67
E-mail	52	Bluetooth tethering.....	67
Adding an account	52	Airplane mode.....	67
Working with account folders.....	52	VPN.....	67
Composing and sending email.....	52	Mobile networks	68
Changing an email general settings.....	53	Printing.....	68
Deleting an email account.....	53	Sound & notification settings	68
Music	53	More settings.....	69
Playing a song.....	53	Display settings	69
Music player options.....	54	Home screen.....	69
Clock	55	Lock screen.....	70
Alarms	55	Home touch buttons	70
Timer.....	55		
World clock.....	55		
Stopwatch.....	56		

More display settings.....	70
General settings.....	71
Language & keyboard.....	71
Location.....	71
Accounts & sync.....	72
Accessibility.....	72
Shortcut key	74
Google	74
Security.....	74
Quick Cover View.....	75
Date & time.....	75
Storage & USB.....	75
Battery & power saving.....	75
Memory	76
Apps.....	76
Default message app	76
Backup & reset.....	76
About phone.....	77
Appendix	78
Device software update.....	79
FAQ.....	80
Anti-Theft Guide	83
More information	84
Open source software notice information ..	84
Trademarks.....	84
Declaration of conformity.....	85

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-K430dsY has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.610 W/kg (10 g) and when worn on the body is 1.540 W/Kg (10 g).

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 5 mm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 5 mm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

- Always use genuine LG batteries, chargers and accessories approved for use with this particular device model. The use of any other types may void any approval or warranty applying to the device and may be dangerous.
- Some contents and illustrations may differ from your device without prior notice.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.

- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the colour of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0 °C and 40 °C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.



NOTE

- Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

Features you will love

QuickMemo+

The QuickMemo+ feature allows you to create memos.

Using Capture+

You can use QuickMemo+ function to easily and efficiently create memos during a call, with a saved picture or on the current screen.

- 1 Touch and slide the status bar downward and tap .
If you can not see , tap  > checkmark **Capture+** to enable.
- 2 Create a memo using the following options:

	Tap to save the memo you've created.
	Tap to undo the most recent action.
	Tap to redo the most recently deleted action.
	Tap to insert text into your memo.
	Tap to select the pen type and colour.
	Tap to use the eraser to erase the pen marks on the memo.
	Tap to crop the image of memo.
	Tap to select the share or paper style.
	Tap to hide or display the toolbar.

NOTE

- Please use a fingertip while using the QuickMemo+ feature. Do not use your fingernail.

- 3 Tap  to save the current memo to  or .

Viewing the saved memo

Tap  >  >  and select the **Capture+** album.

Gesture shot

The Gesture shot feature allows you to take a picture with a hand gesture using the front camera.


Taking the photos with a gesture

There are two methods for using the Gesture shot feature.

- Raise your hand, with an open palm, until the front camera detects it and a box appears on the screen. Then close your hand into a fist to start the timer, allowing you time to get ready.

OR

- Raise your hand, in a clenched fist, until the front camera detects it and a box appears on the screen. Then unclench your fist to start the timer, allowing you time to get ready.

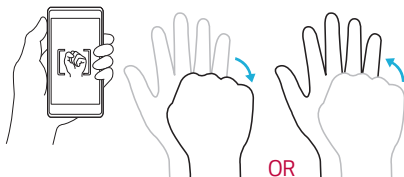

Basics

Accessories

These accessories are available for use with the your Device.



- Travel Adaptor
- Quick Start Guide
- Stereo Headset
- USB Cable
- Battery



NOTE

- Items described above may be optional.
- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- The items supplied with the device and any available accessories may vary depending on the region or service provider.

Device layout

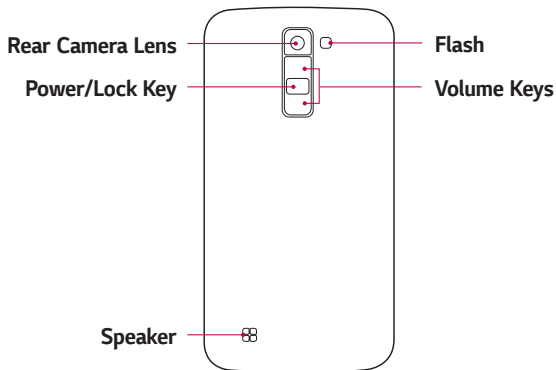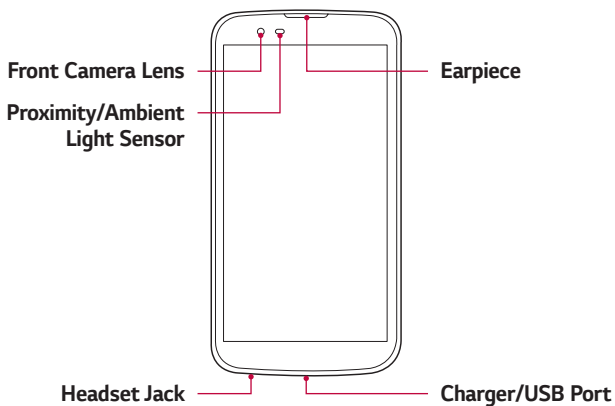

Power/Lock Key	• Turn your device on/off by pressing and holding this key. • Short press to turn on/off the screen.
Volume Keys	While screen is off: • Press Volume Up Key twice to launch Capture+. • Press Volume Down Key twice to launch Camera and take a picture. On the Home screen: • Control ringer volume. During a call: • Control your earpiece volume when playing audio/video. • Control volume continuously.



NOTE : Proximity Sensor

- When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.



WARNING

- Placing a heavy object on the phone or sitting on it can damage the display and touch screen functions. Do not cover the proximity sensor with screen protectors or any other type of protective film. This could cause the sensor to malfunction.

Turning Your Device On and Off

Turning your device on

Press and hold the **Power/Lock Key** for a couple of seconds until the screen turns on.

Turning your device off

- 1 Press and hold the **Power/Lock Key** until the device options menu appears.
- 2 Tap **Power off** > **OK** to confirm that you want to turn off the device.

Installing the SIM card and battery

Insert the SIM card provided by the device service provider, and the included battery.


WARNING

- Do not insert a memory card into the SIM card slot. If a memory card happens to be lodged in the SIM card slot, take the device to a LG Service Centre to remove the memory card.


NOTE

- Only the Nano SIM cards work with the device.


- 1 To remove the back cover, hold the device firmly in one hand. With your other hand, lift off the back cover with your thumbnail as shown in the figure below.

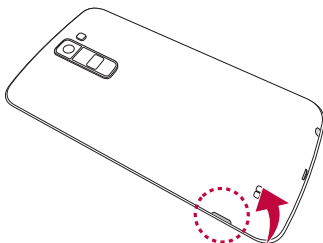


- 2 Slide the SIM card into the SIM card slot as shown in the figure. Make sure the gold contact area on the card is facing downward.

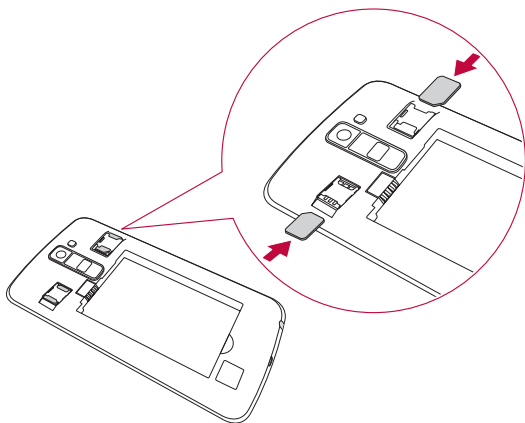

- 3 Insert the battery.

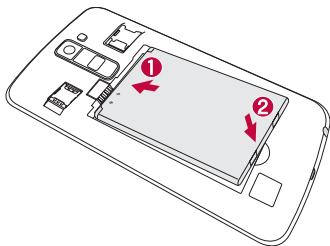

- 4 To replace the cover onto the device, align the back cover over the battery compartment and press it down until it clicks into place.

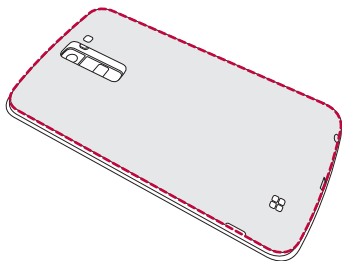


Charging the battery

Charge the battery before using it for first time. Use the charger to charge the battery. A computer can also be used to charge the battery by connecting the device to it using the USB cable.

WARNING

- Use only LG-approved chargers, batteries and cables. If you use unapproved chargers, batteries or cables, it may cause battery charging delay. Or this can cause the battery to explode or damage the device, which are not covered by the warranty.

The charger connector is located at the bottom of the device. Insert the charger and plug it into a power outlet.

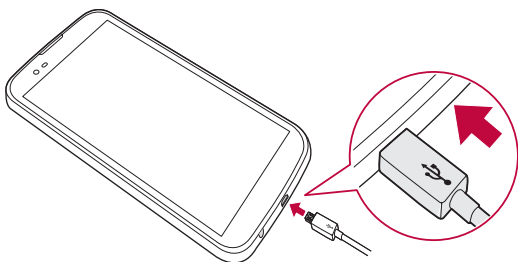

Optimizing battery life

Extend your battery's power by turning off features that you do not need to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your device battery life:

- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth® or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you download may consume battery power.
- While using downloaded applications, check the battery charge level.

Inserting the memory card

Your device supports up to a 32GB microSD card. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.


WARNING

- Some memory cards may not be fully compatible with the device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored in it.

NOTE

- Frequent writing and erasing of data shortens the lifespan of memory cards.

- 1 Remove the back cover.
- 2 Insert a memory card with the gold-coloured contacts facing downwards.

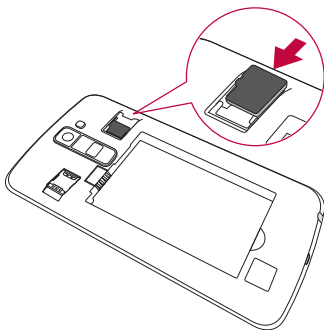

- 3 Replace the back cover.

Removing the memory card

Before removing the memory card, first unmount it for safe removal.

Tap  >  >  > **General** tab > **Storage & USB** > .

WARNING

- Do not remove the memory card while the device is transferring or accessing information. Doing so can cause data to be lost or corrupted or damage to the memory card or device. It is not responsible for losses that result from the misuse of damaged memory cards, including the loss of data.

Touch screen tips


Here are some tips on how to navigate on your device.

NOTE

- Do not press too hard; the tap screen is sensitive enough to pick up a light, yet firm tap.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other buttons.


Tap or touch

A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

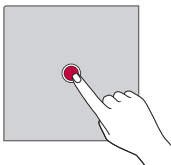


Touch and hold

Touch and hold an item on the screen by tapping it and not lifting your finger until an action occurs.

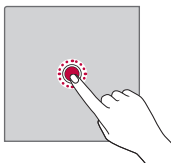


Drag

Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

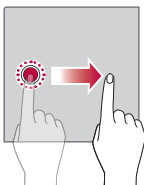


Swipe or slide

To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead).

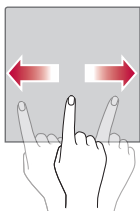



Double-tap

Double-tap to zoom on a webpage or a map.

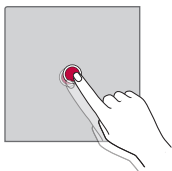

Pinch-to-Zoom

Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser, Maps, or when viewing pictures.

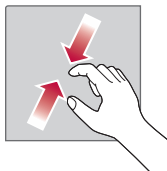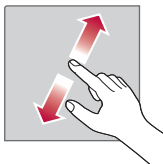

Google account setup

The first time you open a Google application on your device, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

Creating your Google account

- 1 Tap  >  >  > **General tab** > **Accounts & sync**.
- 2 Tap **ADD ACCOUNT** > **Google** > **Or create a new account**.
- 3 Enter your first and last name, then tap **NEXT**.
- 4 Enter your device number for security tap **NEXT**.
- 5 Follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing into your Google account

- 1 Tap  >  >  > **General tab** > **Accounts & sync**.
- 2 Tap **ADD ACCOUNT** > **Google**.
- 3 Enter your email address and tap **NEXT**.
- 4 Enter your password and tap **NEXT**.
- 5 After signing in, you can use Gmail and take advantage of Google services.
- 6 Once you have set up your Google account, your device will automatically synchronise with your Google account on the web (if a data connection is available).

After signing in, your device will sync with your Google services, such as Gmail, Contacts, and Google Calendar. You can also use Maps, download applications from Play Store, back up your settings to Google servers, and take advantage of other Google services on your device.

Locking and unlocking the device

Pressing the Power/Lock Key turns off the screen and puts the device into lock mode. The device automatically gets locked if it is not used for a specified period. This helps to prevent accidental taps and saves battery power.

To unlock the device, press the Power/Lock Key and swipe the screen in any direction.

KnockON

The KnockON feature allows you to double-tap the screen to easily turn it on or off.

Turning the screen on

- 1 Double-tap the centre of the Lock screen to turn the screen on.
- 2 Unlock the screen or access any of the available shortcuts or widgets.

Turning the screen off

- 1 Double-tap an empty area of the Home screen or the status bar.
- 2 The screen will turn off.

NOTE

- Tap on the centre area of the screen. If you tap on the bottom or the top area, the recognition rate may decrease.

Knock Code

The Knock Code feature allows you to create your own unlock code using a combination of knocks on the screen. You can access the Home screen directly when the screen is off by tapping the same sequence on the screen.

NOTE

- If you enter the wrong Knock Code 5 times, it will compulsorily take you to your Google account log in/backup PIN.
- Use the fingertip instead of finger nail to tap the screen for turning it on or off.

Setting up the Knock Code feature

- 1 Tap  >  >  > **Display** tab > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 Tap the squares in a pattern to set your Knock Code. Your Knock Code pattern can be 6 to 8 taps.

Unlocking the screen using the Knock Code

You can unlock the screen by tapping the Knock Code pattern you already set, when the screen turns off.

Changing the screen lock method

You can change the way that you lock the screen to prevent others accessing your personal information.

- 1 Tap  >  >  > **Display** tab > **Lock screen** > **Select screen lock**.
- 2 Select a desired screen lock from None, Swipe, Knock Code, Pattern, PIN and Password.

NOTE

- Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.

Smart Lock

You can use Smart Lock to make unlocking your device easier. You can set it to keep your device unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognises your face.


Setting up Smart Lock feature

- 1 Tap  >  >  > **Display** tab > **Lock screen** > **Smart Lock**.
- 2 Before you add any trusted devices, trusted places, or trusted face, you need to set up a screen lock (Knock Code, Pattern, PIN or Password).

Home screen

The Home screen is the starting point for many applications and functions. It allows you to add items like app shortcuts and Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .

Getting to Know the Home Screen

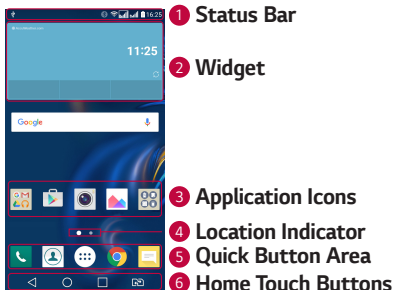

- 1 Status Bar** - Shows the device status information, including the time, signal strength, battery status and notification icons.
- 2 Widget** - Widgets are self-contained applications that can be accessed through the Apps drawer or on the Home screen. Unlike a shortcut, a Widget can function as an on-screen application.
- 3 Application Icons** - Tap an icon (application, folder, etc.) to open and use it.
- 4 Location Indicator** - Indicates which Home screen canvas you are currently viewing.
- 5 Quick Button Area** - Provides one-touch access to the function in any Home screen canvas.

6 Home Touch Buttons

 Back Button	Returns to the previous screen. Also closes pop-up items, such as menus, dialog boxes and the on-screen keyboard.
 Home Button	Return to the Home screen from any screen.
 Overview Button	Displays recently used applications. If you touch and hold this button, it opens a menu of available options.
 SIM Switch Key	Choose which SIM card you're going to use. Touch and hold to go to Dual SIM card settings.

Viewing other Home screen panels

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets and more.

- Slide your finger left or right across the Home screen to access additional canvases.

Returning to recently-used applications

Multitasking is easy with Android; you can keep more than one application running at the same time. There is no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to make sure that idle applications don't consume resources unnecessarily.

- 1 Tap . A list of recently used applications will be displayed.
- 2 Tap the application you want to access. This does not stop the previous app from running in the background. Make sure to tap to back out of an app after using it.
 - To close an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.

Customizing the Home screen

You can customise your Home screen by adding apps and widgets and changing wallpapers.

Adding items on your Home screen

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you want to add. You then see this added item on the Home screen.
- 3 Drag it to the desired location and lift your finger.

NOTE

- To add an application icon to the Home screen from the Apps screen, touch and hold the application you want to add.

Removing an item from the Home screen

While on the Home screen, touch and hold the icon you want to remove > drag it to .

Adding an app to the Quick Button Area

From the Apps screen or on the Home screen, touch and hold an application icon and drag it to the Quick Button Area. Then release it in the desired location.

Removing an app from the Quick Button Area

Touch and hold the desired Quick Button, drag it to .

NOTE

- The **Apps Button**  cannot be removed.

Customizing app icons on the Home screen



- 1 Touch and hold an application icon until it unlocks from its current position, then release it. The editing icon  appears in the upper-right corner of the application.
- 2 Tap the application icon again and select the desired icon design and size.
- 3 Tap **OK** to save the change.

Notifications panel

Notifications alert you to the arrival of new messages, calendar events and alarms, as well as ongoing events, such as when you are on a call.

Opening the notifications panel

Swipe down from the status bar to open the notifications panel. To close the notifications panel, swipe the screen upwards or tap .

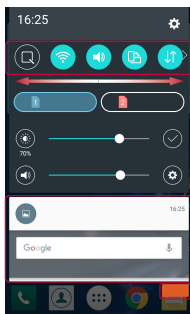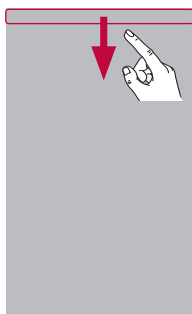

1 Quick Settings Area

2 Notifications


3 CLEAR

- 1 Tap each quick setting button to toggle it on/off. Touch and hold the desired button to directly access the settings menu for the function. To see more toggle buttons, swipe left or right. Tap  to remove, add or rearrange quick setting buttons.
- 2 Current notifications are listed, each with a brief description. Tap a notification to view it.
- 3 Tap to clear all the notifications.

When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons, such as Wi-Fi and battery strength are shown on the right.

Indicator icons on the Status Bar

Indicator icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.



The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description
	No SIM card inserted
	No network signal available
	Airplane mode is on
	Connected to a Wi-Fi network

Icon	Description
	A song is currently playing
	Ringer is silenced
	Vibrate mode is on
	Battery fully charged

	Wired headset connected		Battery is charging
	Call in progress		The device is connected to a PC via a USB cable
	Missed call		Downloading data
	Bluetooth is on		Uploading data
	System warning		GPS is on
	An alarm is set		Data is synchronizing
	New voicemail available		Choose input method
	New text or multimedia message		Wi-Fi hotspot is active

NOTE

- The icon's location in the status bar may differ according to the function or service.
- The available options may vary depending on the region or service provider.

Capturing a screenshot

Press and hold the **Volume Down Key** and the **Power/Lock Key** at the same time for 2 seconds to capture a screenshot of the current screen. To view the captured image, tap  >  >  > **Screenshots** folder.

On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears on the screen when you tap an available text entry field.

Using the keypad and entering text

Icon	Description
	Tap once to capitalise the next letter you type. Double-tap for all caps.
	Tap to go to the keyboard settings. Touch and hold to change entering text method.
	Tap to enter a space.
	Tap to create a new line.
	Tap to delete the previous character.

Entering special characters

The on-screen keyboard allows you to enter special characters.

For example, to input "á", touch and hold the "a" button until the pop-up appears and displays related special characters. Without lifting the finger, drag your finger to the desired special character. Once it's highlighted, lift your finger.

NOTE

- A symbol at the top right corner of a key indicates that additional characters are available for that key.

Transferring data between a PC and the device

You can copy or move data between a PC and the device.

Transferring data using USB connection

- 1 Connect your device to a PC using the USB cable that came with your device.
- 2 Open the Notifications panel, tap the current connection type, and select **Media device (MTP)**.
- 3 A window will pop-up on your PC, allowing you to transfer the desired data.

 NOTE

- The LG Android Platform Driver is required to be installed on your PC to be able to detect the device.
- Check the requirements for using **Media device (MTP)**.

Items	Requirement
OS	Microsoft Windows XP SP3, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

LG Bridge

LG Bridge is an application that helps you conveniently manage images, music, videos, documents, etc. saved on a LG device on your PC. Also, you can back up your files such as contacts and images to your PC or update software of a device.

NOTE

- You can see detailed instructions on how to use LG Bridge in Help menu after installing and opening the program.
- Supported features may vary depending on the device.
- The LG unified USB driver is a program required to connect an LG device to a PC. It is automatically installed when installing LG Bridge.

Features of LG Bridge

- Manage contents from your device on PC via Wi-Fi or data.
- Back up and restore the data of your device via USB.
- Update software of a device on your PC via USB.

To download the LG Bridge software

- 1 Go to www.lg.com.
- 2 Tap the Search button and enter the model name to search for the model.
- 3 Select the model information and click **GO**.
- 4 Scroll down, select the **PC SYNC** tab > **Windows** or **Mac OS** > **DOWNLOAD** to download LG Bridge.

Apps

Installing or uninstalling apps

Play Store allows you to browse and search for free and paid applications.

To open the Play Store app

Tap  >  > .

To open a screen with details about an app

At any time while browsing in Play Store, tap an app to open its details screen.

The App details screen includes a description, ratings, comments, and related information about the app. From this screen, you can download, install, uninstall, rate the app, and more.

To uninstall applications

- 1 Tap  >  >  > **General** tab > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap **Uninstall**.

Calls

You can enjoy clear calling across the region.

Making a call

- 1 Tap  > .
- 2 Enter the number using the dialer. To delete a digit, tap .
- 3 After entering the desired number, tap  to place the call.
- 4 To end the call, tap .

NOTE

- To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Tap  > .
- 2 Scroll through the contact list. You can also enter the contact's name in the Search field or scroll along the alphabet letters on the right edge of the screen.
- 3 In the list that is displayed, tap the contact you want to call.

Answering and rejecting a call

- Swipe  in any direction to answer an incoming call.
- Swipe  in any direction to decline an incoming call.

NOTE

- Swipe  if you want to decline a call and send a message to the caller.

Making a second call

- 1 During your first call, tap  > **Add call** and enter the number.
- 2 Tap .
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Tap the displayed number to toggle between calls. Or tap  to start a conference call.
- 5 To end all calls, tap .

NOTE

- You are charged for each call you make.

Viewing your call logs

- 1 Tap  >  > **Call logs** tab.
- 2 View a list of all dialed, received and missed calls.

NOTE

- Tap any call log entry to view the date, time and duration of the call.
- Tap  > **Delete all** to delete all of the recorded items.

Change your call settings

You can configure call settings, such as call forwarding, as well as other special features offered by your carrier.

- 1 Tap  > .
- 2 Tap  > **Call settings** and configure the desired options.

Contacts

You can add contacts on your device and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

- 1 Tap  > .
- 2 Tap **Search contacts** and enter the contact name using the keyboard. Matches are displayed as you begin to type.

Adding a new contact

- 1 Tap  > .
- 2 Enter the new contact's number.
- 3 Tap  > **Add to Contacts** > **New contact**.
- 4 If you want to add a picture to the new contact, tap the image icon. Choose **Take photo** or **Select from Gallery**.
- 5 Enter the desired information for the contact.
- 6 Tap **SAVE**.

Favourites contacts

You can classify frequently called contacts as favourites.

Adding a contact to your favourites

- 1 Tap  > .
- 2 Tap a contact to view its details.
- 3 Tap the star at the top right of the screen. The star turns yellow.

Removing a contact from your favourites list

- 1 Tap  >  > **Favourites** tab.
- 2 Choose a contact to view its details.
- 3 Tap the yellow star at the top right of the screen. The star turns a dark colour and the contact is removed from your favourites.

Creating a group

- 1 Tap  >  > **Groups** tab.
- 2 Tap  > **New group**.
- 3 Enter a name for the new group. You can also set a distinct ringtone for the newly created group.
- 4 Tap **Add members** to add contacts to the group and tap **ADD**.
- 5 Tap **SAVE** to save the group.

NOTE

- If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contact list.

Messaging

Your device combines text and multimedia messaging into one intuitive, easy to use menu.

NOTE

- You may be charged for each message you send. Please consult with your service provider.

Sending a message

- 1 Tap  >  > .
- 2 Tap , then select one or more entries from your Contacts list.

OR

Enter a contact name or contact number into the **To** field. As you enter the contact name, matching contacts appear. You can tap a suggested recipient and add more than one contact.

- 3 Tap the text field and start entering your message.
- 4 Tap  to open the options menu. Choose from any of the available options.
- 5 Tap  to attach the file that you want to share with message.
- 6 Tap **Send** to send your message.

Conversation view

Messages exchanged with another party are displayed in chronological order so that you can conveniently see and find your conversations.

Changing your messaging settings

Your device messaging settings are predefined to allow you to send messages immediately. You can change the settings based on your preferences.

- Tap  >  >  > **Settings**.

Camera


You can use the camera or camcorder to take and share pictures and videos.

- Tap  >  > .

Taking a photo

- 1 Frame your subject on the screen.
- 2 A square around the subject indicates that the camera has focused.
- 3 Tap  to take a photo. Your picture will be automatically saved to the Gallery.

Camera options on the viewfinder

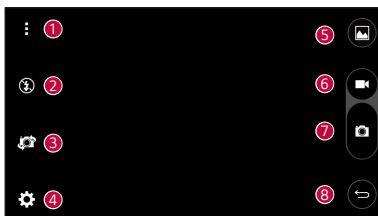

1		Tap to hide/display the camera options on the viewfinder.
2		Allows you to manage the camera's flash.
3		Tap to swap between the rear camera lens and the front camera lens.
4		Tap this icon to open the camera settings menu.
5		Tap to view the last photo or video you recorded.
6		Tap to start recording.
7		Tap to take a photo.

8		Tap to exit the camera.
---	---	-------------------------

NOTE

- Be sure to clean the protective lens cover with a microfiber cloth before taking pictures. A lens cover with smudges from fingers can cause blurry pictures with a "halo" effect.

Using the advanced settings

In the camera viewfinder, tap  to show the advanced options. Tap each icon to adjust the following camera settings.

	Set the ratio of your picture and the quality of video.
	Allows you to take pictures with voice commands. When on, you just say " Cheese ", " Smile ", " LG ", etc. to take a picture.
	Set your camera's timer. This is ideal if you want to be a part of the picture or video.
	Allows you to take better pictures and record better videos by displaying a grid line for help with alignment.
	Set the storage location for your pictures and videos. Choose from IN (internal memory) and SD (memory card). This menu appears only when the SD card is inserted.
	Allows you to learn how a function works. This icon will provide you with a help guide.

Once you have taken a photo

Tap the image thumbnail on the screen to view the last photo you took.

	Tap to edit the photo.
	Tap to take another photo immediately.
	Tap to open the available sharing options.
	Tap to delete the photo.
	Tap to access additional options.
	Tap to add the photo to your favourites.

Recording a video

- 1 Tap  >  > .
- 2 Frame your subject on the screen.
- 3 Tap  to start recording the video.
- 4 The length of the recording is displayed on the top of the screen.

NOTE

- Tap  to take pictures while recording video.
- 5 Tap  to pause recording video. You can resume recording again by tapping .

OR

Tap  to stop recording. Your video will be automatically saved to the Gallery.

After recording a video

Tap the video thumbnail on the screen to view the last video you recorded.

	Tap to record another video immediately.
	Tap to open the available sharing options (such as Messaging or Bluetooth) to share.
	Tap to delete the video.
	Tap to access additional options.
	Tap to add the video to your favourites

Gallery

The Gallery application presents the pictures and videos in your storage, including those you've taken with the Camera application and those you downloaded from the web or other locations.

- 1 Tap  >  > .
- 2 Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
- 3 Tap a picture in an album to view it.

NOTE

- Depending on the software installed, some file formats may not be supported.
- Some files may not play properly due to their encoding.

Viewing pictures

The Gallery displays your pictures in folders. When an application, such as E-mail, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder.

Pictures are displayed by the date they were created. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

Editing photos

While viewing a photo, tap .

Setting wallpaper

While viewing a photo, tap  > **Set image as** to set the image as wallpaper or assign it to a contact.

NOTE

- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.

Zooming in and out

Use one of the following methods to zoom in on an image:


- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place in the picture zoom in. Pinch in or double-tap the image to zoom out.

Playing a video

1 Tap  >  > .

2 Select the video you want to watch.

Video options

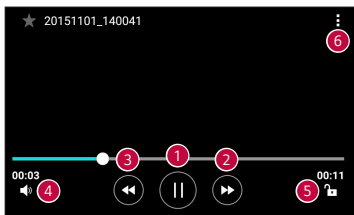

1		Tap to pause/resume video playback.
2		Touch and hold to fast-forward incrementally. Tap to fast-forward 10 seconds.
3		Touch and hold to rewind incrementally. Tap to rewind 10 seconds.
4		Tap to adjust the video volume.
5		Tap to lock/unlock the screen.
6		Tap to access additional options.



NOTE

- While playing a video, slide the right side of the screen up or down to adjust the sound.
- While playing a video, slide the left side of the screen up or down to adjust the brightness.
- While playing a video, slide your finger from left to right (or vice versa) to fast-forward and rewind.

Deleting photos/videos

Use one of the following methods:

- While in a folder, tap , select the photos/videos and then tap **DELETE**.
- While viewing a photo, tap .

E-mail

You can use the Email application to read email from providers other than Gmail. The Email application supports the following account types: POP3, IMAP, Microsoft Exchange (for Enterprise users) and other accounts.

- Tap  >  > .

Adding an account

The first time you open the Email application, a setup wizard opens to help you add an email account. You can also add your email account using the **Settings** app.

- Tap  > **Settings** > .

Working with account folders

- Tap  > **Show all folders**.

Each account has Inbox, VIP, Sent, Drafts and Show all folders. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

- 1 Tap .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be offered from your contacts. Separate multiple addresses with semicolons.
- 3 Tap the **Cc/Bcc** field to copy or blind copy to other contacts/email addresses.
- 4 Tap the text field and enter your message.
- 5 Long press the text field to edit selected words (Bold/Italic/Underline/Color).
- 6 Tap  to attach the file you want to send with your message.
- 7 Tap  to send the message.

Changing an email general settings

- Tap  > **Settings** > **General settings**.

Deleting an email account

- Tap  > **Settings** >  > **Remove account** > Select the account to delete > **REMOVE** > **YES**.

Music

Your device has a music player that lets you play all your favourite tracks.


NOTE

- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.
- Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Playing a song

- 1 Tap  >  > .
- 2 Tap the **Songs** tab.
- 3 Select the song you want to play.
- 4 The following options are available.

Music player options

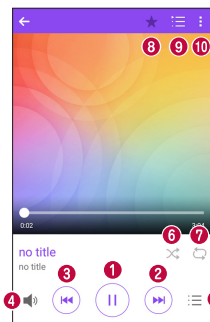

1		Tap to pause playback.
		Tap to resume playback.
2		Tap to skip to the next track in the album, playlist or shuffle list. Touch and hold to fast-forward.
3		Tap to restart the current track or skip to the previous track in the album, playlist or shuffle list. Touch and hold to rewind.
4		Tap to adjust the volume.
5		Tap to open the music library.
6		Tap to play the current playlist in shuffle mode (tracks are played in random order).
7		Tap to toggle through repeat all songs, repeat current song and repeat off.
8		Tap to add the song to your favourites.
9		Tap to open the current playlist.
10		Tap to access additional options.

Clock

The Clock app gives you access to the Alarms, Timer, World clock and Stopwatch functions. Access these functions by tapping the tabs across the top of the screen or swiping horizontally across the screen.

- Tap  >  > .

Alarms

The Alarms tab allows you to set alarms.

- 1 Tap **Alarms** tab.
- 2 Tap  to add a new alarm.
- 3 Adjust the settings as necessary and tap **SAVE**.

NOTE

- You can also tap an existing alarm to edit it.

Timer

The Timer tab can alert you with an audible signal when a set amount of time has passed.

- 1 Tap **Timer** tab.
- 2 Set the desired time on the timer.
- 3 Tap **Start** to start the timer.
- 4 Tap **Stop** to stop the timer.

World clock

The World clock tab allows you to easily check the current time in other cities around the world.

- 1 Tap **World clock** tab.
- 2 Tap  and select the desired city.

Stopwatch

The Stopwatch tab allows you to use your device as a stopwatch.

- 1 Tap **Stopwatch** tab.
- 2 Tap **Start** to initiate the stopwatch.
 - Tap **Lap** to record lap times.
- 3 Tap **Stop** to stop stopwatch.

Calculator

The Calculator app allows you to perform mathematical calculations using a standard or scientific calculator.

- 1 Tap  >  > .
- 2 Tap the number buttons to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, x or ÷) followed by =.

NOTE

- For more complex calculations, tap .

Calendar

The Calendar app allows you to track your schedule of events.

- 1 Tap  >  > .
- 2 Tap the date you want to add an event to. Then tap .

Voice Recorder

The Voice Recorder app records audible files for you to use in a variety of ways.

Recording a sound or voice

- 1 Tap  >  > .
- 2 Tap  to begin recording.
- 3 Tap  to end the recording.
- 4 Tap  to listen to the recording.



NOTE

- Tap  to access your recordings. You can listen to your saved recordings.

Downloads

Use this application to see what files have been downloaded through the applications.

- Tap  >  > .

FM Radio

Your device has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.

- Tap  >  > .



NOTE

- You must plug in your earphones in order to use them as an antenna.

LG Backup

About backing up and restoring device data

It is recommended that you regularly create and save a backup file on the internal storage, especially before updating any software. Maintaining a current backup file in storage memory may allow you to recover device data if your device is lost, stolen, or corrupted by an unforeseen issue.

This LG Backup application is supported LG device, other software or operating system versions. As a result, when you buy the new LG device, you can backup the current device data to your new device.

If you have the LG Backup application preloaded on your device, you can backup and restore most of your data, including downloaded and pre-installed applications, bookmarks, calendar entries, contacts, home screen settings, and system settings.



WARNING

- To protect against an unexpected power off during backup or restore operations, due to insufficient battery power, you should always keep your battery fully charged.



NOTE

- All files that are stored on your device are deleted before the backup file is restored. Make sure to copy the backup file to another location.
- Please note that your device data will be overwritten with the content of your backup.

To backup your device data

1 Tap  >  > .

2 Select the desired options.

- **Copy data between devices** – Copy data from old device to new device.
- **Back up & restore** – Back up data or restore from backup.

Google apps

Google provides entertainment, social network, and business apps. You may require a Google account to access some apps.

To view more app information, access each app's help menu.

NOTE

- Some apps may not be available depending on the region or service provider.

Google

Search quickly for items on the Internet or your device.

Chrome

Search for information and browse webpages.

Gmail

Send or receive emails via the Google Mail service.

Maps

Find your location on the map, search for locations, and view location information for various places.

YouTube

Watch or create videos and share them with others.

Drive

Store your content on the cloud, access it from anywhere, and share it with others.

Play Music

Discover, listen to, and share music on your device.

Play Movies & TV

Watch videos stored on your device and download various content to watch from the Play Store.

Hangouts

Chat with your friends individually or in groups and use images, emoticons, and video calls while you are chatting.

Photos

Manage photos, albums, and videos that you have saved on the device and uploaded to Google+.

Voice Search

Search quickly for items by saying a keyword or phrase.

Settings

Access the Settings menu

The Settings app allows you to customize and personalize your device.

Opening the settings app

- Tap  > touch and hold  > **System settings**.

OR

- Tap  >  > .

Viewing settings

Tap  to switch the view mode.

- **List view** – Scroll up and down through the list.
- **Tab view** – Swipe left and right or tap the tab you want.



NOTE

- The instructions to perform tasks in this guide are based on the default view setting.

Networks Settings

Dual SIM card

You can configure Dual SIM settings.

On the **Settings** screen, tap **Networks** tab > **Dual SIM card**.

- **SIM card 1** – Allows you to change the SIM card name and SIM card icon for SIM card 1.
- **Activate slot 1** – Checkmark to activate or deactivate the SIM card slot 1.
- **SIM card 2** – Allows you to change the SIM card name and SIM card icon for SIM card 2.
- **Activate slot 2** – Checkmark to activate or deactivate the SIM card slot 2.
- **SIM card colour theme** – Allows you to select your desired colours.

- **Cost save mode** – Every contact is added along with assigned SIM when adding in phone book. During calling, matching operator SIM is identified and the operation is completed using the matching operator SIM. This makes possible to use benefit from using same operator.
- **Mobile data** – Checkmark to enable data access over the mobile network.
- **SIM card to use** – You can change the default data network. All mobile packet services (Web, MMS, Email, etc) will use SIM selected on this value. When only one SIM card is inserted, the default data network is set as the inserted SIM and it is not allowed to change.
- **Data roaming** – Checkmark to allow you to use mobile data connections when you're roaming outside your home network area.

Wi-Fi

You can use high-speed Internet access while within the coverage of the wireless access point (AP).

On the **Settings** screen, tap **Networks** tab > **Wi-Fi**.

- 1 Tap  to turn Wi-Fi on and start scanning for available Wi-Fi networks.
- 2 Tap a network to connect to it.
 - If the network is secured with a lock icon, you will need to enter a security key or password.
- 3 The status bar displays icons that indicate Wi-Fi status.

NOTE

- If you are out of the Wi-Fi zone or have set Wi-Fi to Off, the device may automatically connect to the Web using data, which may incur data charges.

Wi-Fi Direct

Wi-Fi Direct provides a direct connection between Wi-Fi enabled devices without requiring an access point.

- Tap  > **Advanced Wi-Fi** > **Wi-Fi Direct**.

NOTE

- When in this menu, your device is visible to other visible Wi-Fi Direct devices nearby.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices.

NOTE

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth feature.
- Always make sure that you share and receive data with devices that are trusted and properly secured.
- If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Pairing your device with another Bluetooth device

- 1 On the **Settings** screen, tap **Networks** tab > **Bluetooth**.
- 2 Tap  to turn Bluetooth on and start scanning for available Bluetooth devices.
 - If you want to detect the visible devices in range additionally, tap **SEARCH**.
- 3 Choose the device you want to pair with from the list. Once the pairing is successful, your device connects to the other device.

NOTE

- Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognise their partnership and exchange information.
- Please consult documentation included with Bluetooth device for information on pairing mode and passcode (typically 0 0 0 0 – four zeroes).

Sending data via Bluetooth

- 1 Select a file or item such as a contact or media file.
- 2 Select the option for sending data via Bluetooth.
- 3 Search for and pair with a Bluetooth-enabled device.

NOTE

- Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Receiving data via Bluetooth

- 1 On the **Settings** screen, tap **Networks** tab > **Bluetooth**.
- 2 Tap  to turn Bluetooth on.
- 3 You will receive a request to accept a pairing attempt from the sending device. Be sure to select **ACCEPT**.

Mobile data

Displays the data usage and device data usage limit.

- Tap  to toggle your device data connection On or Off. This allows you to manage your device data usage. You can use a Wi-Fi network connection for data instead.

Call

Allows you to configure various call settings.

On the **Settings** screen, tap **Networks** tab > **Call**.

[SIM card 1/SIM card 2 Tab]

- **Voicemail** – Allows you to select your carrier's voicemail service.
- **Fixed dialing numbers** – Allows you to manage and compile a list of numbers that can be called from your phone. You need your PIN2, which is available from your operator. If activated, only numbers in the fixed dial list can be called from your phone.
- **Call forwarding** – Allows you to set the call forwarding options.
- **Call barring** – Locks incoming, outgoing or international calls.
- **Call duration** – View the duration of calls, including Last call, Outgoing calls, Incoming calls and All calls.
- **Additional settings** – Allows you to change the following settings such as **Caller ID** or **Call waiting**, etc.

[Common Tab]

- **Smart forward** – Allows you to receive SIM2 calls if you are busy on SIM1 and vice versa.
- **Incoming voice call pop-up** – Displays a pop-up for an incoming call when an app is in use.
- **Call reject** – Allows you to set the call decline function.
- **Decline with message** – When you want to decline a call, you can send a quick message using this function. This is useful if you need to decline a call during a meeting.
- **Auto answer** – Sets the time before a connected hands-free device automatically answers an incoming call.
- **Connection vibration** – Vibrates your phone when the other party answers the call.
- **Save unknown numbers** – Allows you to add unknown numbers to contacts after a call.
- **Power key ends call** – Allows you to use the Power key to end calls.
- **Silence incoming calls** – Checkmark to allow you to flip the device to silence incoming calls.

USB tethering

Allows you to share the internet connection with your computer via a USB cable.

- 1 Connect your device to your PC with a USB cable.
- 2 On the **Settings** screen, tap **Networks** tab > **Tethering**.
- 3 Tap  to turn USB tethering on.

Wi-Fi hotspot

You can also use your device to provide a device broadband connection. Create a hotspot and share your connection.

On the **Settings** screen, tap **Networks** tab > **Tethering**

- 1 Tap  to turn Wi-Fi hotspot on.
- 2 Tap Set up Wi-Fi hotspot to change the SSID, security type, password, and other hotspot options.

Bluetooth tethering

Allows you to connect to other devices via Bluetooth.

- On the **Settings** screen, tap **Networks** tab > **Tethering**.
- Tap  to turn Bluetooth tethering on to share your connection via Bluetooth tethering.

Airplane mode

Allows you to use many of your device features, such as games, and music, when you are in an area where making or receiving calls or data use is prohibited. When you set your device to Airplane Mode, it cannot send or receive any calls or access online data.

On the **Settings** screen, tap **Networks** tab > **More** > **Airplane mode**.

VPN

From your device, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

On the **Settings** screen, tap **Networks** tab > **More** > **VPN**.

Mobile networks

This menu allows you to configure various device network settings such as **Network mode**, **Access point names**, etc.

On the **Settings** screen, tap **Networks** tab > **More** > **Mobile networks**.

Printing

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

On the **Settings** screen, tap **Networks** tab > **More** > **Printing**.

Sound & notification settings

Allows you to change settings for various sounds on the device.

On the **Settings** screen, tap **Sound & notification** tab.

- **Sound profile** – Allows you to set your device sound profile.
- **Volume** – Adjust the device volume settings to suit your needs and environment.
- **SIM1/2 ringtone** – Allows you to set the ringtones for calls. You can also add and delete ringtones.
- **Ringtone ID** – Allows you to compose ringtones based on phone number of incoming call.
- **Sound with vibration** – Enable to set the device to vibrate in addition to the ringtone when you receive calls.
- **SIM1/SIM2 vibration type** – Allows you to choose the type of vibration.
- **Do not disturb** – Allows you to set a schedule when to prevent interruptions from notifications. You can set to allow certain features to interrupt when Priority only is set.
- **Lock screen** – Allows you to choose if you want to show or hide notifications on the lock screen.
- **Apps** – Allows you to set notifications for individual apps including preventing them from displaying notifications and setting priority.

More settings

Allows you to set other sound & notification settings.

On the **Settings** screen, tap **Sound & notification** tab > **More**.

- **SIM1/2 notification sound** – Allows you to set the notification sound. You can also add and delete notification sounds.
- **Sound effects** – This menu lets you select whether you hear tones when tapping numbers on the dial pad, selecting on-screen options, and more.
- **Message/call voice notifications** – Allows your device to read out incoming calls and message events automatically.

Display settings

Home screen

Allows you to set your home screen settings.

On the **Settings** screen, tap **Display** tab > **Home screen**.

- **Select Home** – Select the desired Home theme.
- **Theme** – Sets the screen theme for your device. You can download new themes from LG SmartWorld.
- **Wallpaper** – Sets the wallpaper to use on your Home screen.
- **Screen swipe effect** – Choose the desired type of effect to display when you swipe from one Home screen canvas to the next.
- **Allow Home screen looping** – Enable to allow continuous Home screen scrolling (loop back to first screen after last screen).
- **Help** – Displays help information for the Home screen.

Lock screen

Allows you to set your lock screen settings.

On the **Settings** screen, tap **Display** tab > **Lock screen**.

- **Select screen lock** – Allows you to set a screen lock type to secure your device.
- **Smart Lock** – Sets to keep your device unlocked with trusted device or a place. If you need more information, please refer to **Smart Lock** section in **Locking and unlocking the device**.
- **Wallpaper** – Select the wallpaper to display for your lock screen.
- **Shortcuts** – Allows you to choose the shortcuts available on the lock screen.
- **Contact info for lost phone** – Allows you to display the owner information on the lock screen in case the device is lost.
- **Lock timer** – Allows you to set the amount of time before the screen automatically locks after the screen has timed-out.
- **Power button instantly locks** – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the lock timer setting.

Home touch buttons

Set the Home touch buttons displayed at the bottom of all screens. Set which buttons are displayed, their position on the bar and what they look like.

On the **Settings** screen, tap **Display** tab > **Home touch buttons**.

More display settings

Allows you to set other display settings.

On the **Settings** screen, tap **Display** tab.

- **Font type** – Select the desired font type.
- **Font size** – Select the desired font size.
- **Brightness** – Adjust the screen brightness by using the slider.
- **Auto-rotate screen** – Set to switch orientation automatically when you rotate the device.

- **Screen timeout** – Set the time delay before the screen automatically turns off.
- **Daydream** – Select the screen saver to be displayed when the device is sleeping while docked and/or charging.
- **Motion sensor calibration** – Allows you to improve the accuracy of the tilt and speed of the sensor.

General settings

Language & keyboard

Allows you to change the text input settings.

Select the language for the text on your device and for configuring the on-screen keyboard, including words that you've added to its dictionary.

On the **Settings** screen, tap **General** tab > **Language & keyboard**.

- **Language** – Choose a language to use on your device.
- **Current keyboard** – Allows you to select the current keyboard type.
- **LG Keyboard** – Change the LG Keyboard settings.
- **Google voice typing** – Enable to select Google voice typing to enter data. Tap the Settings icon to change the Google voice settings.
- **Text-to-speech output** – Tap to set the preferred engine or general settings for text-to-speech output.
- **Pointer speed** – Adjust the pointer speed.
- **Reverse buttons** – Reverse the mouse buttons to use primary button on right.

Location

Turn on location service, your device determines your approximate location using Wi-Fi and device networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

On the **Settings** screen, tap **General** tab > **Location**.

- **Mode** – Sets the how your current location information is determined.

- **Camera** – Enable to tag photos or videos with their locations.
- **Google Location History** – Allows you to choose your location information settings as accessed by Google and its products.

Accounts & sync

Use this menu to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules and whether all applications can synchronize user data automatically.

Gmail™, Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

On the **Settings** screen, tap **General** tab > **Accounts & sync**.

- **Auto-sync data** – Enable this option to automatically sync all accounts you've added on your device.
- **ACCOUNTS** – Displays all of your added accounts. Tap one to view and/ or manage it.
- **ADD ACCOUNT** – Tap to add new account.

Accessibility

Use the Accessibility settings to configure accessibility plug-ins you have installed on your device.

On the **Settings** screen, tap **General** tab > **Accessibility**.

- **Vision** – Sets options for people with impaired sight.
 - **TalkBack** – Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback.
 - **Message/call voice notifications** – Enable to allows you to hear automatic spoken alerts for incoming calls and messages.
 - **Screen shade** – Enable to set the screen to a darker contrast.
 - **Font size** – Sets the font size.
 - **Touch zoom** – Allows you to zoom in and out by triple-tapping the screen.

- **Screen colour inversion** – Enable to invert the colours of the screen and content.
- **Screen colour filter** – Allows you to change the colours of screen and content.
- **Power key ends call** – Enable so that you can end voice calls by pressing the Power/Lock Key.
- **Hearing** – Sets options for people with impaired hearing.
 - **Captions** – Allows you to customise caption settings for those with hearing impairments.
 - **Flash alerts** – Enable to set the flash to blink for incoming calls and notifications.
 - **Turn off all sounds** – Enable to turn off all device sounds.
 - **Audio type** – Sets the audio type.
 - **Sound balance** – Sets the audio route. Move the slider on the slide bar to set it.
- **Motor & cognition** – Sets options for people with impaired motor skills.
 - **Touch feedback time** – Sets the touch feedback time.
 - **Touch assistant** – Show a touch board with easy access to common actions.
 - **Screen timeout** – Sets the amount of time before the backlight turns off automatically.
 - **Touch control areas** – Allows you to select an area of the screen to limit touch activation to just that area of the screen.
- **Accessibility features shortcut** – Allow you to access selected features quickly when triple-tapping the Home button.
- **Auto-rotate screen** – Enable to allow the device to rotate the screen depending on the physical device orientation (portrait or landscape).
- **Switch Access** – Allows you to interact with your device using one or more switches that work like keyboard keys. This menu can be helpful for users with mobility limitations that prevent them from interacting directly with your device.

Shortcut key

Get quick access to apps by pressing the **Volume Keys** when the screen is off or locked.

On the **Settings** screen, tap **General** tab > **Shortcut key**.

- Press the **Volume Up Key** twice to open the Capture+ app.
- Press the **Volume Down Key** twice to launch the Camera app.

Google

Use Google Settings to manage your Google apps and account settings.

Security

Use this menu to configure how to help secure your device and its data.

On the **Settings** screen, tap **General** tab > **Security**.

- **Content lock** – Select lock types to lock memos for QuickMemo+.
- **Encrypt phone** – Allows you to encrypt data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.
- **Encrypt SD card storage** – Encrypt SD card storage and keep data unavailable for other devices.
- **Set up SIM card lock** – Sets the PIN to lock your SIM card and allows you to change the PIN.
- **Password typing visible** – Enable to briefly show each character of passwords as you enter them so that you can see what you enter.
- **Phone administrators** – View or deactivate device administrators.
- **Unknown sources** – Allow installation of non-Play Store applications.
- **Verify apps** – Disallow or warn before installation of apps that may cause harm.
- **Storage type** – Displays the current storage type.
- **Certificate management** – Allows you to manage your security certificates.
- **Trust agents** – Select apps to use without unlocking screen.
- **Screen pin** – You can enable your device to only show a certain app's screen using screen pin.

- **App usage access** – Allows you to view usage information of apps on your device.

Quick Cover View

With Quick cover case, you can check incoming calls and stop alarm/timer when the cover is closed. To unlock with the cover, screen lock must be set to Swipe.

On the **Settings** screen, tap **General** tab > **Quick Cover View**.

Date & time

Set your preferences for how the date and time is displayed.

On the **Settings** screen, tap **General** tab > **Date & time**.

Storage & USB

You can monitor the used and available internal memory in the device.

On the **Settings** screen, tap **General** tab > **Storage & USB**.

- **INTERNAL STORAGE** – Displays the total amount of space and the available space in your device internal memory in text and with a color-coded bar graph (unused space is gray). Corresponding apps and the amount of space they use is listed under each device user.
- **SD CARD** – Displays the total amount of space and the remaining available space in your memory card.

Battery & power saving

Displays the current battery status including the percentage of remaining charge and charging state.

On the **Settings** screen, tap **General** tab > **Battery & power saving**.

- **Battery usage** – Displays the battery usage level and battery use details. Tap one of the items to see more detailed information.
- **Battery percentage on status bar** – Checkmark to display the battery level percentage on the status bar next to the Battery icon.
- **Battery saver** – Tap the Battery Saver switch to toggle it on or off. Sets the battery charge percent level that automatically turns on Battery Saver.

Memory

You can monitor the memory used averagely and the memory used by apps in the device.

Apps

Allows you to view details about the apps installed on your device, manage their data, and force them to stop.

On the **Settings** screen, tap **General** tab > **Apps**.

Default message app

This menu allows you to choose what messaging app to use as your default messaging app.

On the **Settings** screen, tap **General** tab > **Default message app**.

Backup & reset

Change the settings for managing your settings and data.

On the **Settings** screen, tap **General** tab > **Backup & reset**.

- **LG Backup** – Backs up all information on the device and restores it in the event of data loss or replacement. If you need more information, please refer to **LG Backup** section in **Apps**.
- **Back up my data** – Back up app data, Wi-Fi passwords, and other settings to Google servers.
- **Backup account** – Displays the account that is currently being used to back up information.
- **Automatic restore** – When reinstalling an app, restore backed up settings and data.
- **Network settings reset** - Reset all network settings.
- **Factory data reset** – Reset your settings to the factory default values and delete all your data. If you reset the device this way, you are prompted to re-enter the same information as when you first started Android.

About phone

View legal information, check device status and software versions, and perform a software update.

On the **Settings** screen, tap **General** tab > **About phone**.

Appendix

Device software update

LG device software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp> → select your country and language.

This feature allows you to conveniently update the firmware on your device to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the device firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your device.



NOTE

- LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG device software update via Over-the-Air (OTA)

This feature allows you to conveniently update your device software to a newer version via OTA, without connecting using a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

You should first check the software version on your device:

Settings > General tab > About phone > Update Center > Software Update > Check now for update.

NOTE

- Your personal data from internal device storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your device software. Therefore, LG recommends that you backup your personal data before updating your device software. LG does not take responsibility for any loss of personal data.
- This feature depends on your network service provider, region and country.

FAQ

This chapter lists some problems you might encounter when using your device. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM card error	There is no SIM card in the device or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6~12 months old. If so, change your SIM card at your network provider's nearest branch. Contact your service provider.

Message	Possible causes	Possible corrective measures
Codes do not match	To change a security code, must need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you entered do not match.	
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Downloaded application causes a lot of errors.	Remove the application.	1 Tap  >  > . 2 Tap General tab > Apps. 3 Tap the app > Uninstall.
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Device cannot be turned on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure device is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the device.
	No voltage	Plug the charger into a different outlet.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed.	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive/send SMS & photos	Memory full	Delete some data, such as applications or messages from your device to make more memory available.
Files do not open	Unsupported file format	Check the supported file formats.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or Do not disturb mode.

Message	Possible causes	Possible corrective measures
Hangs up or freezes	Intermittent software problem	If the screen freezes or the device does not respond when you try to operate it, remove the battery and reinsert it. Then power the device back on. OR Try to perform a software update through the website.

Anti-Theft Guide

You can set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google account or screen lock information can use the device.

All you need to make sure your device is protected is:

- **Set a screen lock:** If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- **Add your Google account on your device:** If your device is wiped but you have your Google account on it, the device can't finish the setup process until your Google account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google account password if you need to do a factory reset. This ensures that you or someone you trust is doing the reset.



NOTE

- Do not forget your Google account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.

More information

Open source software notice information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Trademarks

- Copyright ©2016 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.

Declaration of conformity

Hereby, **LG Electronics** declares that this **LG-K430dsY** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at **<http://www.lg.com/global/declaration>**



Disposal of your old appliance

- 1 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 2 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 3 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Disposal of waste batteries/accumulators

- 1 This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
- 2 All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
- 4 For more detailed information about disposal of your old batteries/ accumulators, please contact your city office, waste disposal service or the shop where you purchased the product.



CE0168