


Model	V-CQ362HT		
Language	English+Arabic		
Page	12	Color(cover/body)	1/1
Material	Weight 100g	Size(W*H)	150X220(mm)
Date	2006.01.09	Designer	Liubin
Part No.	38288I3001A	Description	owner's manual

Change Record


No.	Change content	ECO No.	Date	Designer	Confirm
1					
2					
3					
4					
5					
6					
7					
8					
9					

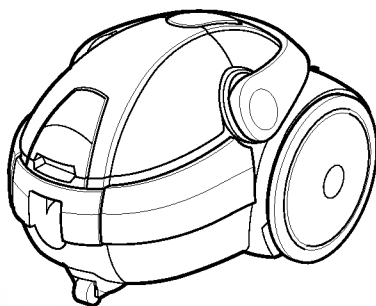

V-CQ362HT


E | English

Basic Parts

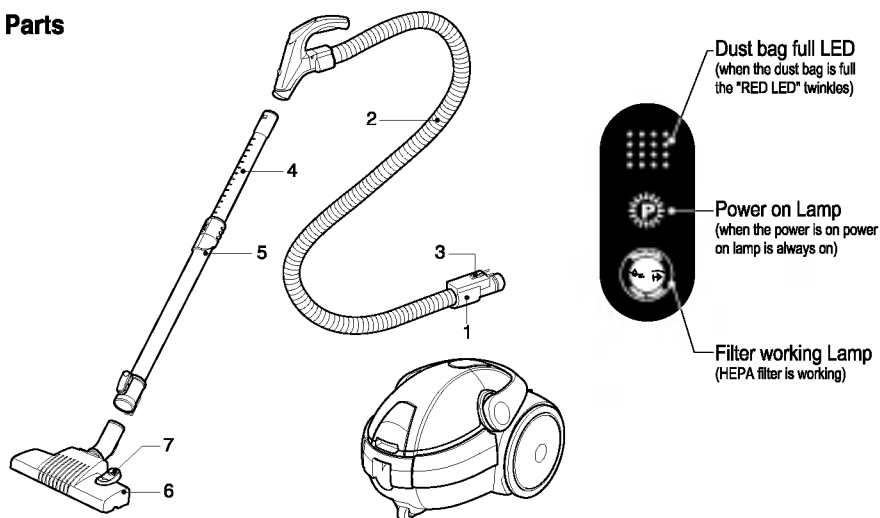


Optional Parts


















- The different figure and quantity of the following parts depend on the different models which you have bought.

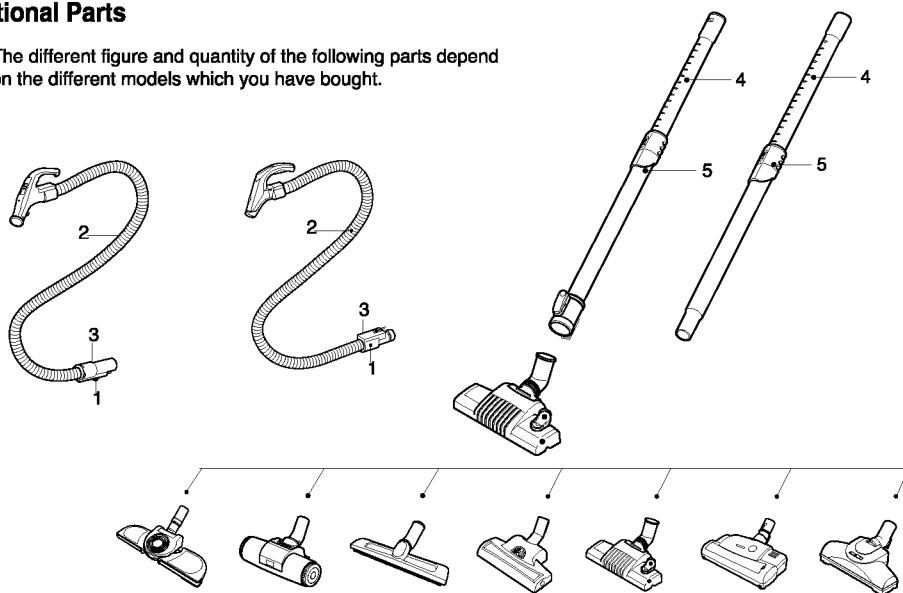

Accessory

- These specifications are subject to change according to the agent / buyer's request.

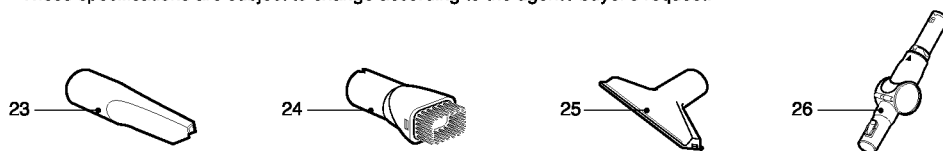

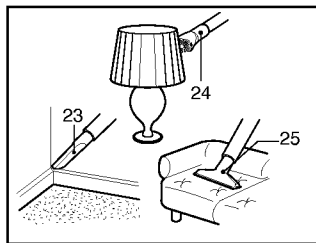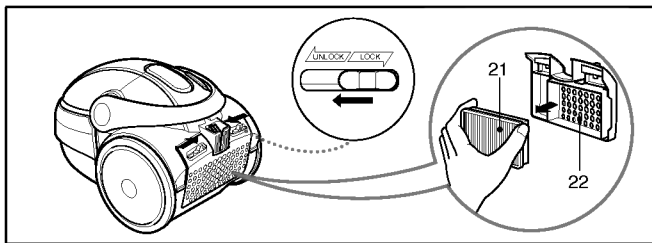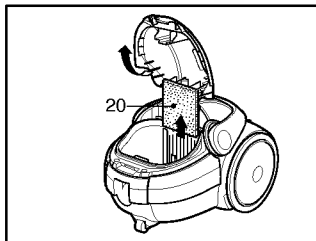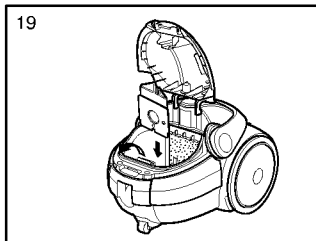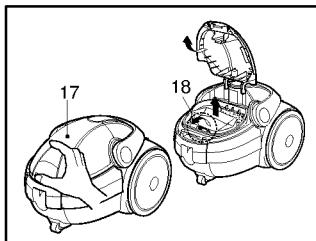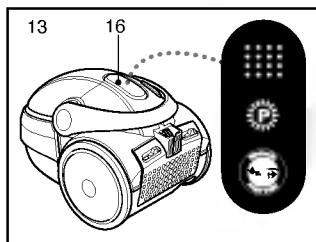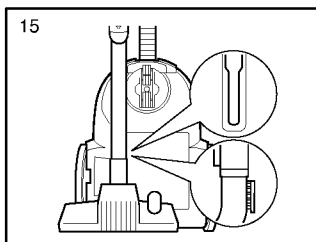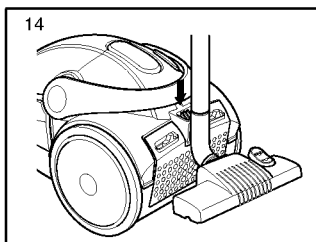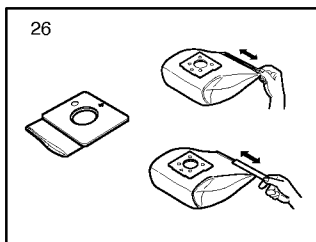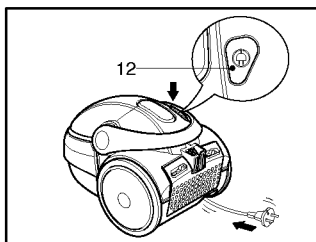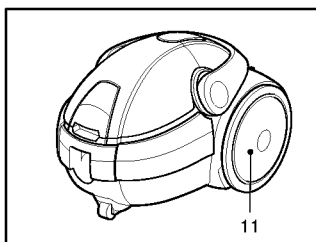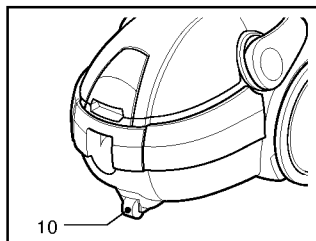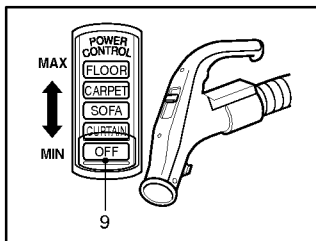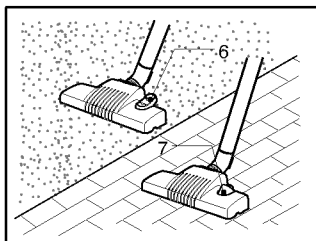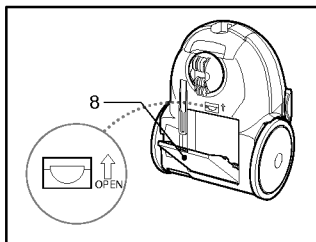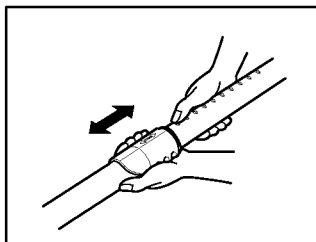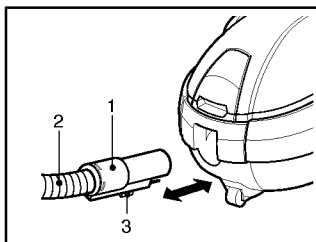

Information for your safety

Please read all the following information, which contains important instructions for the safety, the use and the maintenance of the appliance.

This appliance complies with the following EC Directives: -73/23/EEC, 93/68/EEC-Low Voltage Directive-89/336EEC -EMC Directive.

- Never allow children to use the appliance unsupervised.
- Do not use the appliance if the main lead is damaged or faulty.
- If the main lead is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard.
- Always switch the vacuum cleaner off before :
 - changing the dust bag
 - changing or cleaning the filters.
- **If no dustbag is inserted, the cover cannot be closed. Please do not use force!**
- Do not vacuum flammable or explosive substances(liquids or gases).
- Do not vacuum hot ash, embers etc. nor sharp objects.
- Do not vacuum water or other liquids.
- When you vacuum with an attachment appliance that has a rotating brush roller, do not reach into the running brush roller.

WARNING! Should it become necessary to replace the moulded on plug then the detective plug should be destroyed to avoid any possible shock hazard that could occur should such a plug be inserted into a 13 amp socket elsewhere in the house.

How to Use

Connecting the flexible hose

Push the end of the head (1) on the flexible hose (2) into the attachment point on the vacuum cleaner.

To remove the flexible hose from the vacuum cleaner, press on the button (3) situated on the head, then pull upwards.

Assembling the tubes

- **Telescopic tube (4)**
 - Hold spring latch (5)
 - Pull out the tube to required length.
 - Release spring latch to lock.

Using the cleaning head and Accessory

Fit the large cleaning head onto the end of the tube.

- **The 2 position head (6)** is equipped with a pedal (7) which allows you to alter its position according to the type of floor to be cleaned. **Hard floor position**(tiles, parquet floors...). Press on the pedal to lower the brush. **Carpet or rug position.** Press on the pedal to lift the brush up.

Dust bag storage(8)

Dust bag storage(8) can easily lay up the new dust bag.
It prevent dust bag from missing.

How to plug in and use

Pull out the mains lead to the desired length and plug into the socket.
Slide button (9) to start the vacuum cleaner. To stop it slide the button (9) again.

Electronic power control(9)

Suction capacity increases steplessly up to MAX.

OFF : Power off **CURTAIN** : Low
FLOOR : Full power.

Urethane Wheel(10), (11)

The three urethane wheel of stairs(10) and urethane wheel(11) prevent a scratch on the floor.
They reduce the rolling noise.

LED Display (13)

YELLOW: Power on **RED**: Bag Full

Park-System (14)

For short breaks during vacuuming, for example to move a small piece of furniture or a rug, use the Park system to

support the flexible hose and cleaning head.

- Slide the hook attached to the large cleaning tool into the slot on the rear of the appliance.

Carring and storage (15)

When you have switched off and unplugged the appliance, press on the button (12) to automatically rewind the cord.

You can move or store your appliance in a vertical position by sliding the hook on the large cleaning head into the clip on the underside of the appliance.

Changing the dust bag

The dustbag needs changing when the cleaner is set to maximum power and the cleaner head is off the floor but the "bag full" LED (red) (16) shine.

When the bag is full lamp(Red) is on. also, it(cleaner) makes suction power low rapidly by itself to protect the motor after 1 and half minute.

This time bag full lamp(Red) is still on. Even if the dustbag does not appear to be full at this stage, it should be changed. It could be that a great deal of very fine dust has clogged up the pores of the dust bag.

- Turn off the appliance and unplug it.
- Open the cover by pulling the cover (17).
- Pull out the filter bag carrier.
- Your appliance is equipped with either a paper dust bag or a fabric dust bag (26) (depending on model)
- Push the latch (18) forwards in the direction of the arrow and remove the full dust bag throw it away.
- Insert the new dust bag into the cleaner (19).
- **If your appliance is fitted with a fabric dust bag** follow the same instructions as above.
Empty it and reuse it (26). Do not wash it.

Note: as the appliance is fitted with a safety device which checks that the bag is in place you cannot close the cover if the bag is not fitted correctly.

Cleaning the motor filter

The motor filter is situated inside the appliance between the dust bag and the motor. Each time that you change the air outlet filter we advise you to remove the motor filter (20) and to clean it by tapping to remove the dirt and then replacing it in the vacuum cleaner.

Changing the air outlet filters

- To change filter (21) remove the cover of the filter compartment (22) situated at the rear of the appliance, by pushing the little catch.

Crevice Tool (23)

For vacuuming in those normally inaccessible places i.e. reaching cobwebs, or down the side of a sofa! Set the suction power control switch to sofa before vacuuming

Dusting brush (24)

For vacuuming picture frames furniture outlines, books and other uneven objects.

Upholstery Nozzle (25)

For vacuuming upholstery, mattresses, etc. The thread collectors help to pick up the threads and fluff.

What to do if your appliance does not work

Check that the appliance is correctly plugged in and that the electrical socket is working.


What to do when the suction performance reduces?

- Stop the appliance and unplug it.
- Check that the tubes, flexible hose and cleaning tool are not blocked.
- Check that the dust bag is not full. Replace it if necessary.
- Check that the air outlet filter is not blocked. Replace it if necessary.




LG Electronics Inc.

<http://www.lge.com/>

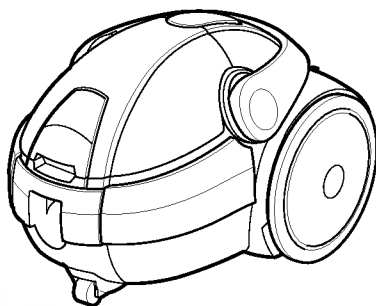


V-CQ362HT

الأجزاء الرئيسية

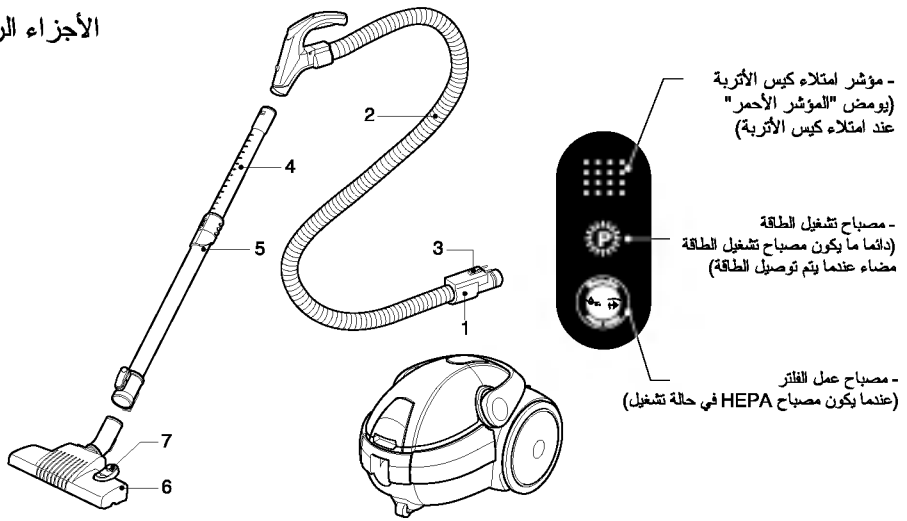


أجزاء اختيارية


















■ تعتمد أشكال وأمية الأجزاء التالية على نوع الطرازات المختلفة التي قمت بشرائها.

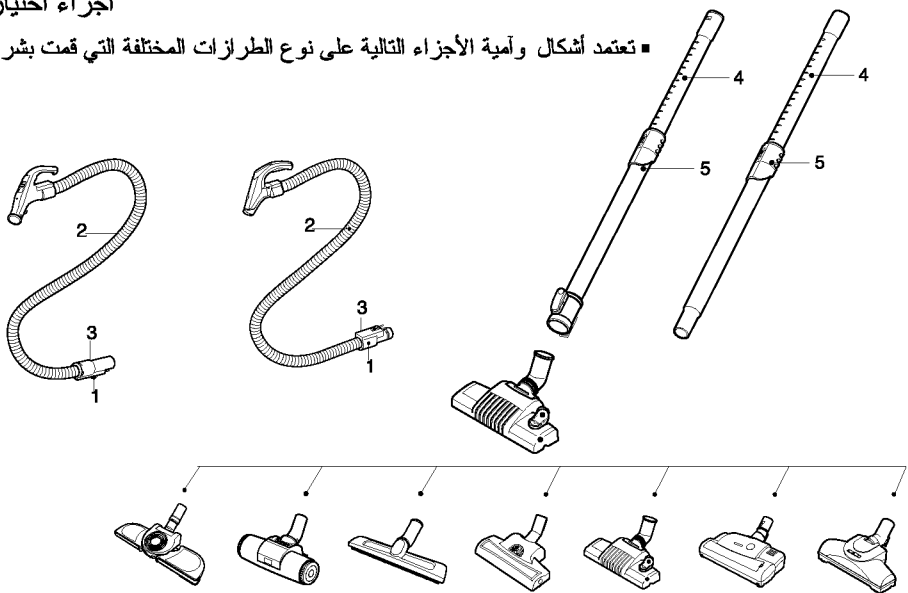

الملحق

■ تختلف تلك المواصفات وفقا لمتطلبات الوكيل/المشتري.

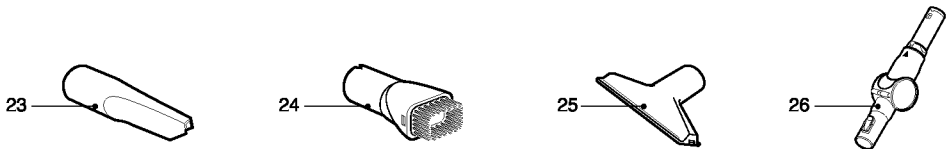

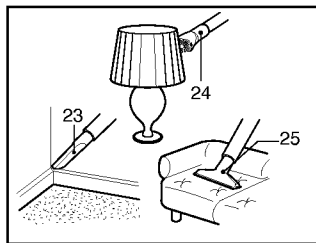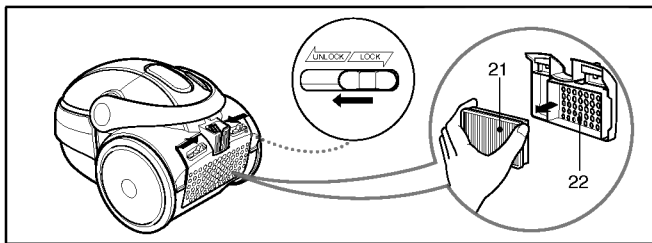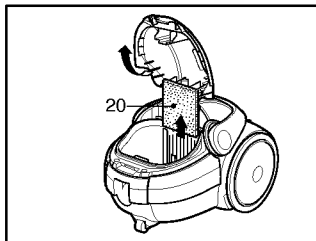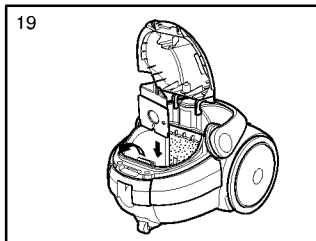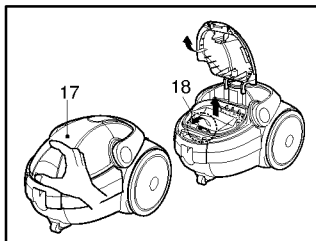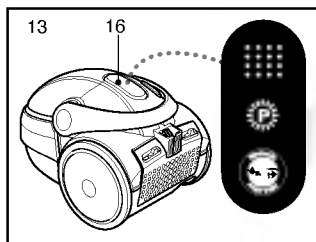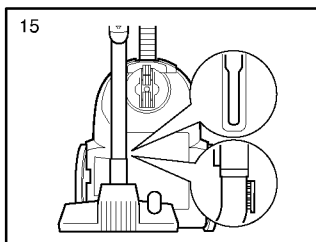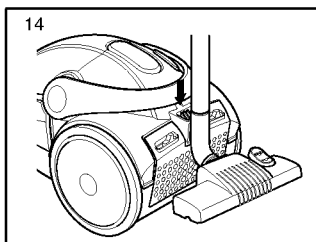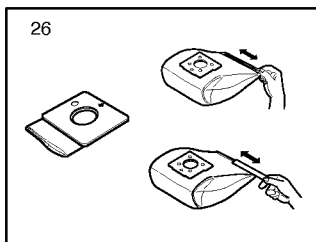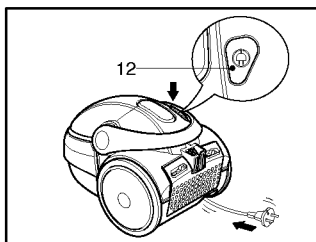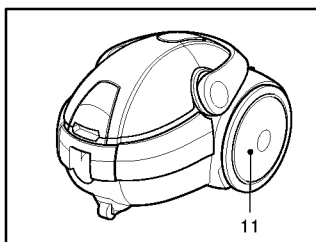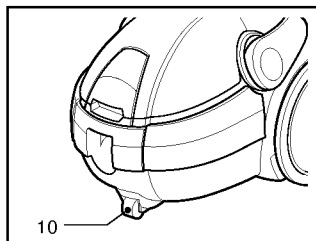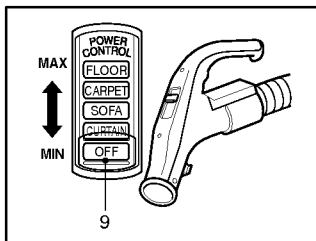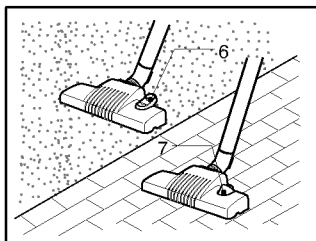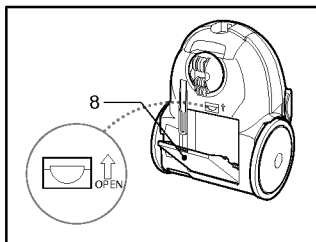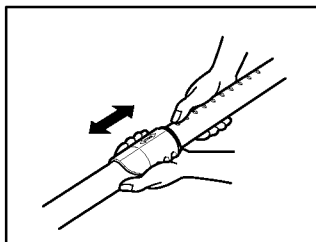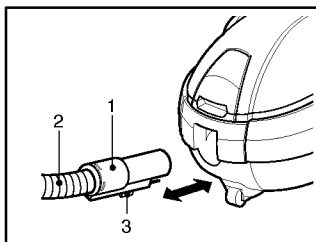

معلومات لسلامتك

الرجاء قراءة كافة المعلومات التالية والتي تحتوي على إرشادات مامة من أجل سلامتك، كما تخص تلك المعلومات كيفية استخدام الجهاز وصيانتة.

يتوافق هذا الجهاز مع توجيهات الاتحاد الأوروبي (EC) التالية:
-73/23/EEC, 93/68/EEC-Low Voltage Directive
-89/336EEC -EMC Directive.

■ لا تسمح أبدًا للأطفال باستخدام الجهاز دون إشراف.

■ لا تستخدم الجهاز إذا كان السلك الرئيسي تالف أو يحتوي على بعض العيوب.

■ إذا تلف السلك الرئيسي، فيجب استبداله من وكيل خدمة أجهزة إلكترونية معتمد من قبل LG من أجل تجنب المخاطر.

أوقف تشغيل المكينة الكهربائية دائمًا قبل:

• تغيير كيس الأتربة

• تغيير الفلاتر أو تنظيفها.

لا يمكن إغلاق الغطاء ما لم يتم تركيب كيس الأتربة.
يرجى عدم استخدام القوة!

■ لا تقم بشفط مواد قابلة للاشتعال أو قابلة للانفجار (سوائل أو غازات) إلى داخل المكينة الكهربائية.

■ لا تقم بشفط الرماد الساخن أو بقايا المواد المحترقة الساخنة أو المواد ذات الأطراف الحادة.

■ لا تقم بشفط الماء أو السوائل الأخرى.

■ عند التنظيف باستخدام الجهاز المرفق المحتوي على أسطوانة فر شاة دائرية، لا تلمس الفرشاة الدائرية أثناء عملها.

تحذير!

في حالة ما أصبح ضروريًا استبدال المقيس الملصق بسلك التيار، يجب تدمير المقيس لتجنب حدوث صدمة كهربائية كنتيجة لإنخال هذا المقيس في مأخذ تيار 13 أمبير بأي مكان آخر بالمنزل.

كيفية الاستخدام

توصيل الخرطوم المرن

ادفع نهاية الرأس (1) بالخرطوم المرن (2) إلى فتحة التركيب في المكينة الكهربائية.

لإخراج الخرطوم المرن من المكينة الكهربائية، اضغط على الزر (3) الموجود على الرأس، ثم اسحب لأعلى.

تركيب المواسير

• الماسورة المتركة (4)

- امسك ماسورة الربط (5)

- اسحب الماسورة إلى الطول المطلوب.

- حرر ماسورة الربط ليتم القفل.

استخدام رأس التنظيف والملحقات الإضافية

قم بتركيب رأس التنظيف العريضة في نهاية الماسورة.

• الرأس ذو الوضع الثلاثي (6) تم تزويدها بدواسة (7) والتي تسمح لك بتغيير وضعها وفقًا لنوع الأرضية التي يتم تنظيفها.

وضع الأرضية الصلبة (أرضيات الباركية والسيراميك...):

اضغط على الدواسة لإنزال الفرشاة لأسفل. وضع السجاد أو

البساط. اضغط على الدواسة لرفع الفرشاة لأعلى.

مخزن كيس الأتربة (8)

ويستطيع مخزن كيس الأتربة (8) تخزين كيس الأتربة الجديد بسهولة . فهو يمنع فقدان كيس الأتربة.

كيفية التوصيل والاستخدام

اسحب سلك التيار إلى الطول المطلوب وقم بالتوصيل بمأخذ التيار .

قم بتحريك الزر (9) لبدء تشغيل المكينة الكهربائية.

ولإيقاف المكينة، قم بتحريك الزر (9) مرة أخرى.

المفتاح الإلكتروني للتحكم في الطاقة (9)

تزايد سعة الشفط تدريجيًا حتى تصل إلى الحد الأقصى MAX.

OFF (إيقاف تشغيل): إيقاف تشغيل الستائر: منخفض

الأرضية: طاقة كاملة.

عجلة مصنوعة من اليوريثين (10)، (11)

تعمل العجلات اليوريثين الثلاثة للسلام (10) والعجلة اليوريثين

(11) على تجنب خدش الأرضية. تعمل أيضًا على التقليل من

الضوضاء الناتجة من حركة المكينة.

عرض المؤشر LED (13)

أصفر: تشغيل الطاقة أحمر: الكيس ممتلئ

نظام الإيقاف المؤقت (14)

للحصول على فترات راحة قصيرة أثناء التنظيف - لنقل قطعة أثاث أو سجادة صغيرة على سبيل المثال، استخدم نظام الإيقاف المؤقت لتدعيم الخرطوم المرن ورأس التنظيف.

- قم بتركيب الخطاف المرفق بأداة التنظيف العريضة في الفتحة الموجو
دة بمؤخرة الجهاز.

الحمل والتخزين (15)

بعد إيقاف تشغيل الجهاز ونزع توصيلات الجهاز، اضغط على الزر (12) للترجيع التلقائي السريع للسلك.

يمكنك نقل الجهاز أو تخزينه في وضع رأسي بتحريك الخطاف الموجود على رأس التنظيف العريضة إلى المشبك الموجود بالجانب السفلي من الجهاز.

تغيير كيس الأتربة

يحتاج كيس الأتربة للتغيير عند ضبط المكينة على أقصى طاقة ممكنة ورأس التنظيف بعيد عن الأرضية لكن يضيء مؤشر full bag LED (الكيس ممتلئ) (أحمر) (16).

عند امتلاء كيس الأتربة يكون المصباح (الأحمر) مضيئاً، وكذلك تقوم (المكينة) سريعاً بخفض قوة الشفط ذاتياً بعد دقيقة ونصف لحماية الموتور.

هذه المرة لا يزال مصباح امتلاء الكيس (الأحمر) مضيئاً. يجب تغيير كيس الأتربة حتى إذا لم يكن ممتلئاً في هذا الوقت. فقد تكون كمية كبيرة من التراب الناعم قد أدت إلى انسداد فتحات كيس الأتربة.

- أوقف تشغيل الجهاز وقم بفصل التوصيلات.

- افتح الغطاء عن طريق سحب الغطاء (17).

- قم بسحب حامل كيس الفلتر.

- الجهاز مزود بكيس أتربة ورقي أو كيس أتربة قماشى (26) (وفقاً للطراز المستخدم).

- قم بدفع المزلاج (18) للأمام في اتجاه السهم، ثم أزل كيس الأتربة الممتلئ وتخلص منه.

- قم بتركيب كيس الأتربة الجديد في المكينة (19).

- إذا كان جهازك مزوداً بكيس أتربة قماشى اتبع نفس الإرشادات الواردة أعلاه.

- قم بإفراغ الكيس وإعادة استخدامه (26). لا تقم بغسله.

ملاحظة: كنتيجة لاحتواء الجهاز على أداة أمان هدفها التأكد من وجود الكيس بمكانه، لن يمكنك إغلاق الغطاء ما لم يتم تركيب الكيس بشكل صحيح.

تنظيف فلتر الموتور

يوجد فلتر الموتور بداخل الجهاز بين كيس الأتربة والموتور. في كل مرة تقوم فيها بتغيير فلتر منفذ الهواء، ننصح بك فلتر الموتور (20) وتنظيفه بالطرق عليه لإزالة الأتربة ثم إعادة تركيبه في المكينة الكهربائية.

تغيير فلتر منفذ الهواء

- لتغيير الفلتر (21)، انزع غطاء حاوية الفلتر (22) الموجودة بالجاء الخلفي من الجهاز عن طريق دفع القفل الصغير.

أداة تنظيف الأركان (23)

للتنظيف في الأماكن التي لا يمكن الوصول إليها بشكل طبيعي (مثل أركان الأسقف أو أسفل قطع الأثاث)، قم بضبط مفتاح التحكم في طاقة الشفط إلى الأريكة قبل التنظيف.

فرشاة الأتربة (24)

لتنظيف إطارات الصور وحروف قطع الأثاث والكتب والمواد الأخرى غير منتظمة الشكل.

فومة مواد التجديد (25)

لتنظيف مواد التجديد والمراتب تساعد مجمعات الخيوط على التقاط الخيوط والزغب.

ما الذي يجب فعله عند توقف الجهاز عن العمل؟

افحص الجهاز للتأكد من اتصاله بالتيار بشكل صحيح ومن عمل مأخذ التيار الكهربائي.

ما الذي يجب فعله عند انخفاض مستوى الشفط؟

- أوقف تشغيل الجهاز وافصل توصيلاته.

- تأكد من عدم انسداد المواسير والخرطوم المرن وأداة التنظيف.

- تأكد من عدم امتلاء كيس الأتربة.

- واستبدله إذا تطلب الأمر.

- تأكد من عدم انسداد فلتر منفذ الهواء.

- واستبدله إذا تطلب الأمر.



LG Electronics Inc.

<http://www.lge.com/>