


Model	V-CR58*S**/N**		
Language	English/Arabic		
Page	24	Color(cover/body)	1/1
Material	Weight 40g	Size(W*H)	150 × 220(mm)
Date	2008.12.12	Designer	dufeng
Part No.	MFL37914134	Description	owner's manual

### Change Record


No.	Change content	ECO No.	Date	Designer	Confirm
①					
②					
③					
④					
⑤					
⑥					
⑦					
⑧					
⑨					

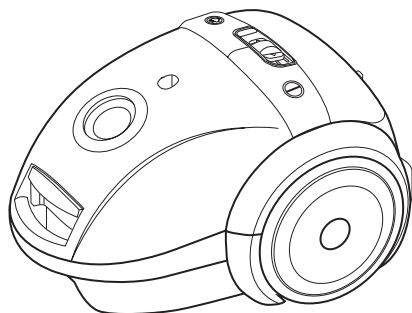

**V-CR58\*S\*\*/N\*\***


**E | English**

## Basic Parts

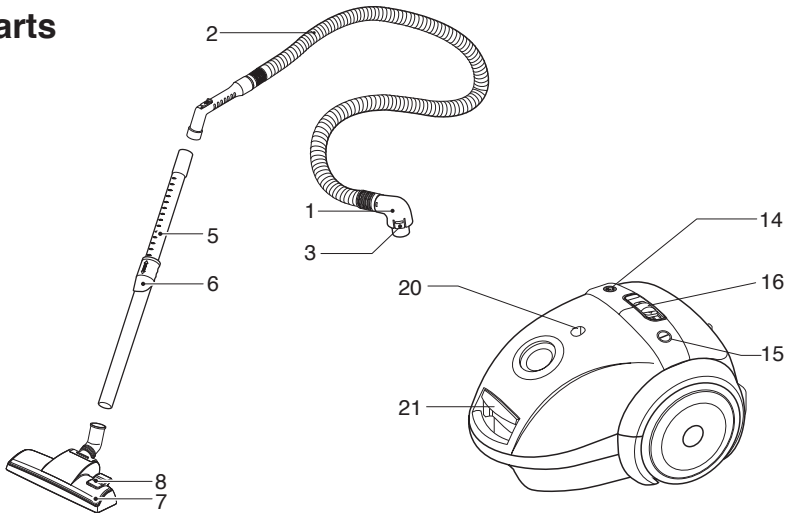


## Optional Parts






















- The different figure and quantity of the following parts depend on the different models which you have bought.

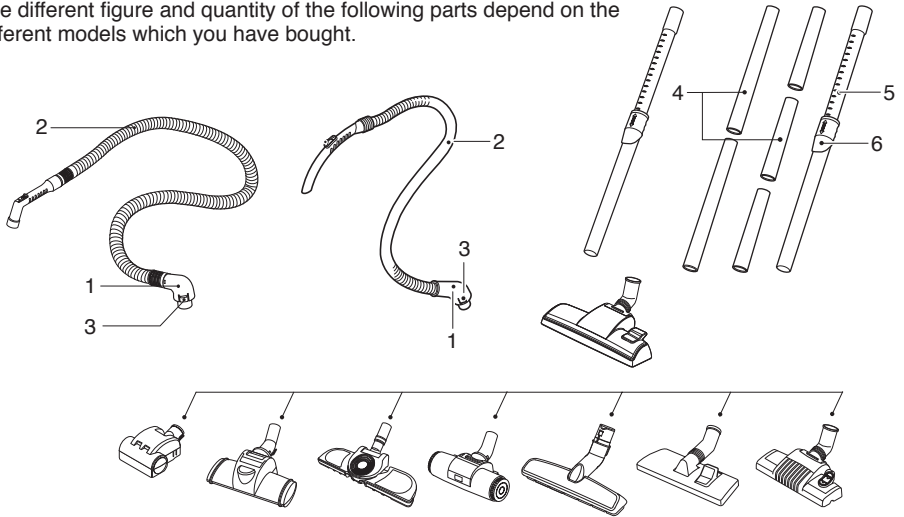




## Accessory

- These specifications are subject to change according to the agent/buyer's request.



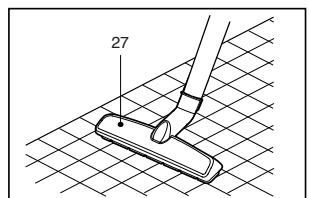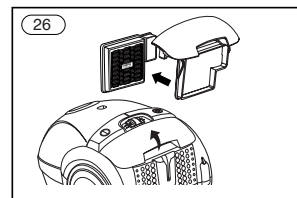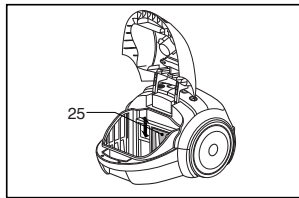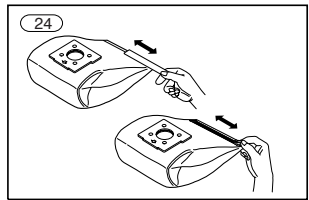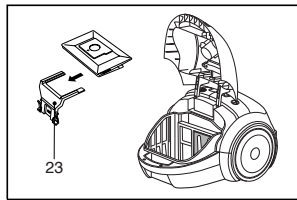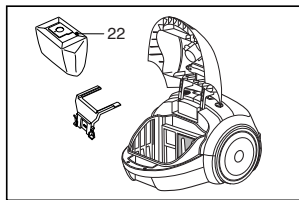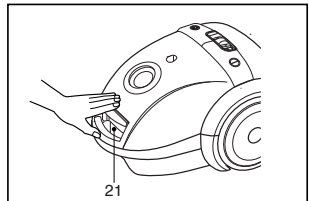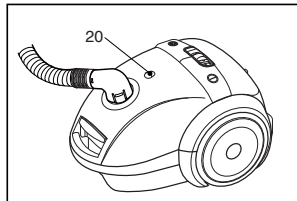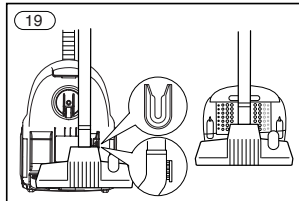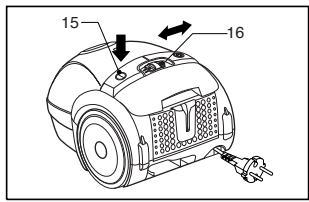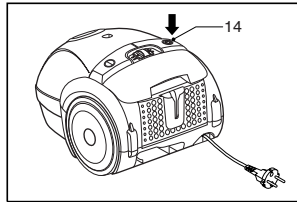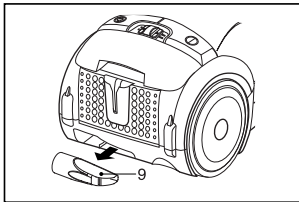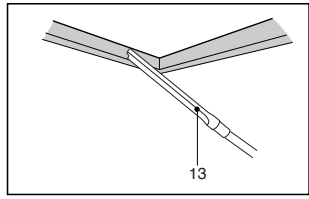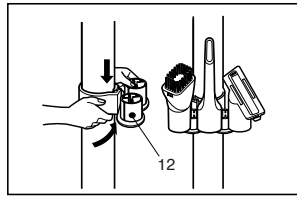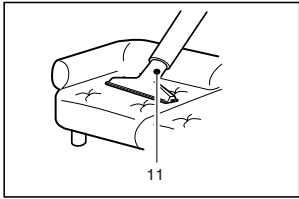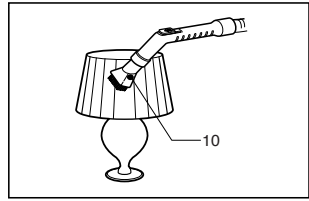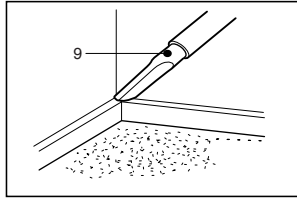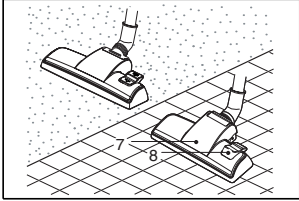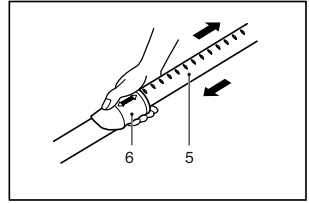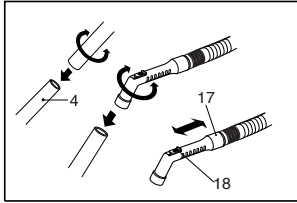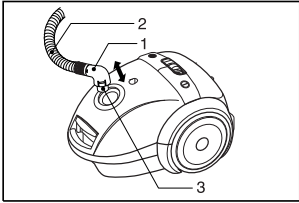



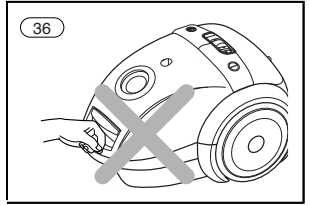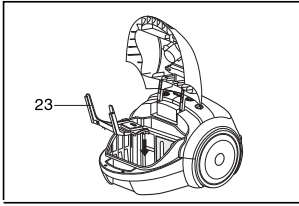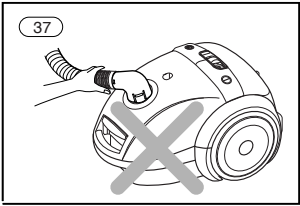

# IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electric shock, personal injury, or damage when using the vacuum cleaner. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand. This appliance complies with the following ECDirectives :-73/23/EEC, 93/68/EEC-Low Voltage Directive-89/336EEC -EMC Directive.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION." These words mean:



**WARNING**

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



**CAUTION**

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.



**WARNING**

- **Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in use.**

Failure to do so could result in electrical shock or personal injury.

- **Do not use vacuum cleaner to pick up anything that is burning or smoking such as cigarettes, or hot ashes.**

Doing so could result in death, fire or electrical shock.

- **Do not vacuum flammable or explosive substances such as gasoline, benzene, thinners, propane (liquids or gases).**

The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.

- **Do not handle plug or vacuum cleaner with wet hands.**

Doing so could result in death or electrical shock.

- **Do not unplug by pulling on cord.**

Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.

- **Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.**

Failure to do so could result in electrical shock or personal injury.

- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.**

Failure to do so could result in electrical shock or personal injury or fire or product damage.

- **Do not allow to be used as toy. Close attention is necessary when used by or near children.**

Personal injury or product damage could result.

- **Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.**

Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.

- **Do not use vacuum cleaner if it has been under water.**

Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.

# IMPORTANT SAFETY INSTRUCTIONS



## CAUTION

- **Do not put any objects into openings.**  
Failure to do so could result in product damage.
- **Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.**  
Failure to do so could result in product damage.
- **Do not use vacuum cleaner without dust tank and/or filters in place.**  
Failure to do so could result in product damage.
- **Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc.**  
They may damage the cleaner or dust bin.
- **Store the vacuum cleaner indoors.**  
Put the vacuum cleaner away after use to prevent tripping over it.
- **The vacuum cleaner is not intended to use by young children or infirm people without supervision.**  
Failure to do so could result in personal injury or product damage.
- **Only use parts produced or recommended by LG Electronics Service Agents.**  
Failure to do so could result in product damage.
- **Use only as described in this manual. Use only with LG recommended or approved attachments and accessories.**  
Failure to do so could result in personal injury or product damage.
- **To avoid personal injury and to prevent the machine from falling when cleaning stairs, always place it at the bottom of stairs.**  
Failure to do so could result in personal injury or product damage.
- **Use accessory nozzles in sofa mode.**  
Failure to do so could result in product damage.
- **Make sure the filters (exhaust filter and motor safety filter) are completely dry before replacing in the machine.**  
Failure to do so could result in product damage.
- **Do not dry the filter in an oven or microwave.**  
Failure to do so could result in fire hazard.
- **Do not dry the filter in a clothes dryer.**  
Failure to do so could result in fire hazard.
- **Do not dry near an open flame.**  
Failure to do so could result in fire hazard.
- **Always clean the dust bin after vacuuming carpet cleaners or fresheners, powders and fine dust.**  
These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner. (Depending on model)
- **Don't grasp the tank handle when you are moving the vacuum cleaner.**  
The vacuum cleaner's body may fall when separating tank and body. Personal injury or product damage could result. **You should grasp the carrier handle** when you are removing the vacuum cleaner. (Depending on model)
- **If after emptying the dust tank the indicator light is on (red), clean the dust tank.**  
Failure to do so could result in product damage. (Depending on model)

# IMPORTANT SAFETY INSTRUCTIONS



## CAUTION

### **Thermal protector :**

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch.



## WARNING

- **Do not continue to vacuum if any parts appear missing or damaged.**

Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.

- **Do not use an extension cord with this vacuum cleaner**

Fire hazard or product damage could result.

- **Using proper voltage.**

Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the bottom of vacuum cleaner.

- **Turn off all controls before unplugging.**

Failure to do so could result in electrical shock or personal injury.

- **Do not change the plug in any way.**

Failure to do so could result in electrical shock or personal injury or product damage. Doing so result in death. If plug does not fit, contact a qualified electrician to install the proper outlet.

- **Repairs to electrical appliances may only be performed by qualified service engineers.**

Improper repairs may lead to serious hazards for the user.

- **Do not plug in if control knob is not in OFF position.**

Personal injury or product damage could result. (Depending on model)

- **Keep children away and beware of obstructions when rewinding the cord to prevent personal injury.**

The cord moves rapidly when rewinding. (Depending on model)

- **The hose contains electrical wires. Do not use it if it is damaged, cut or punctured.**

Failure to do so could result in death, or electrical shock. (Depending on model)

## How to Use

### Connecting the flexible hose

Push the end of the head(1) on the flexible hose(2) into the attachment point on the vacuum cleaner.

To remove the flexible hose from the vacuum cleaner, press on the button(3) situated on the head, then pull upwards.

### Assembling the tubes

(depending on model)

- **Metal(or Plastic) Pipe(4)**
  - Fit together the two tubes by twisting slightly.
- **Telescopic tube(5)**
  - Push spring latch(6) forward.
  - Pull out tube to required length.
  - Release spring latch to lock.

### Using the cleaning head and Accessory Nozzles

(depending on model)

Fit the large cleaning head onto the end of the tube.

- **The 2 position head(7)** is equipped with a pedal(8) which allows you to alter its position according to the type of floor to be cleaned.

**Hard floor position**(tiles, parquet floors...). Press on the pedal to lower the brush.

**Carpet or rug position.** Press on the pedal to lift the brush up.

- **Crevice Tool (9)**  
**Flexible Crevice Tool (optional) (13)**  
For vacuuming in those normally inaccessible places i.e. reaching cobwebs, or down the side of a sofa!
- **Dusting brush(10)**  
For vacuuming picture frames furniture outlines, books and other uneven objects.
- **Upholstery Nozzle(11)**  
For vacuuming upholstery, mattresses, etc. The thread collectors help to pick up the threads and fluff.
- **Accessory Holder (12)** can be attached on the Extension wands using clamping hook. Accessories can be stored in the holder.

### How to plug in and use

Pull out the supply cord to the desired length and plug into the socket.

Press button (15) to start the vacuum cleaner. To stop it press the button (15) again.

### Adjusting the power level

- If your appliance is equipped with an electronic variable power control(16), you can choose the power appropriated for the task. The more you slide the button towards the right, the greater the suction power.
- The flexible hose handle(17) has a manual air flow regulator(18) which allows you to briefly reduce the suction level.

### Storage(19)

When you have switched off and unplugged the appliance, press on the button (14) to automatically rewind the cord.

You can move or store your appliance in a vertical position by sliding the hook on the large cleaning head into the clip on the underside of the appliance.

### Changing the dust bag

The dustbag needs changing when the cleaner is set to maximum power and the cleaner head is off the floor but the "bag full" indicator window(20) is completely coloured red.

Even if the dustbag does not appear to be full at this stage, it should be changed.

It could be that a great deal of very fine dust has clogged up the pores of the dust bag.

- Turn off the appliance and unplug it.
- Open the cover by pressing the hook(21) and lifting it up until it snaps into place.

Your appliance is equipped with either a paper dust bag (22) or a fabric dust bag (24)(depending on model).

- Take hold of the dust bag by the handle and pull. Remove the bag and throw it away.
- To refit a new bag push the cardboard support of a new bag into the bag mount (23)until it will go no further.

If your appliance is fitted with a fabric dust bag follow the same instructions as above.

Empty it and replace it(24).

**Note:** as the appliance is fitted with a safety device which checks that the bag is in place you cannot close the lid if the bag is not fitted correctly.

### Cleaning the motor filter

The motor filter is situated inside the appliance between the dust bag and the motor. Each time that you change the air outlet filter we advise you to remove the motor filter(25)and to clean it by tapping to remove the dirt and then replacing it in the vacuum cleaner.

### Changing the air outlet filters

- To change these filters remove the cover of the filter compartment (26) situated at the rear of the appliance.
- Cleaning the washable HEPA filter with water at least once a year.
- **Hard floor Nozzle (27)**  
Efficient cleaning of hard floors (wood, linoleum,etc.)

### Mini turbine nozzle(optional) (28)

- Mini turbine is used for stairs and other hard to reach places.
- To clean the mini turbine nozzle, remove the nozzle cover (29):  
Remove 2 screws on the bottom and take mini turbine nozzle cover off as shown.
- Frequently clean and remove hair, string, and lint build-up in the brush area. Failure to do so could damage to mini turbine nozzle.

## WARNING

- Please never close the Filter Cover like (36), To avoid nipping your hand.
- Please don't hold the hose when lift the main body off the floor (37).

## What to do if your appliance does not work?

Check that the appliance is correctly plugged in and that the electrical socket is working.

## What to do when the suction performance reduces?

- Stop the appliance and unplug it.
- Check that the tubes, flexible hose and cleaning tool are not blocked.
- Check that the dust bag is not full.Replace if necessary.

## CLEANING THE DUST TANK AND FILTER ASSEMBLY (depending on model)

For best cleaning results, the dust tank should be cleaned often.

1. Unplug cord from wall outlet.
  2. Pull lid release out and up, then lift filter cover.
  3. Pull the dust tank assembly (30) up.
  4. Push the release lever (31) of the filter assembly (32) and pull it out of the dust tank (33).
  5. Wash the dust tank with sponge or soft cloth under cold running water.
  6. Brush (34) is for cleaning the filter assembly(32). It is on the back of the filter assembly.
  7. Pull the filter supporter (35) down from the filter assembly (32).
  8. Clean the filter assembly (32) and the filter supporter (35) with the brush under cold running water.
- Do not use detergent or wash in washing machine or dishwasher.
9. Allow the filter assembly (32) and filter supporter (35) to dry in shaded location for a day.
- Do not tumble or spin dry, nor microwave or place in oven or in path of direct heat.
  - Ensure both the filter and filter supporter are completely dry before placing it back into the vacuum.

## HOW TO FIT THE BAG MOUNT AND THE DUST BAG

If you want to use a dust bag instead of the dust tank, please:

1. Unplug cord from wall outlet.
2. Pull the cover release out and up, then lift canister hood.
3. Pull the dust tank assembly (30) up.
4. Fit the bag mount (23) with the spring, ensure the bosses on both sides of the bag mount into the slots near the handle on the base.
5. To fit a bag push the cardboard support of a new bag into the bag mount until it will go no further.





**LG Electronics Inc.**

<http://www.lge.com>



**LG Electronics Inc.**

<http://www.lge.com>

## كيفية تركيب الهيكل الورقي وكيس العبار

- إذا أردت تبديل علبة الغبار بكيس الغبار،  
فيرجى:
١. اخراج السلك الكهربائي من مقبس الجدار .
  ٢. اخراج غطاء التحرير، ورفع قبعة العلبة .
  ٣. سحب علبة الغبار الكاملة (٣٠) الى الأعلى .
  ٤. تركيب الهيكل الورقي للكيس (٢٣) مع  
اليابات ، التأكد على تركيب كل الجانبين  
للهيكل الورقي الى المقبس القريب من  
المقبض في القاعدة .
  ٥. ضغط جوانب الكيس الجديد الى الهيكل  
الورقي حتى التثبيت .

## تنظيف علبة الغبار والفلتر الكامل (حسب الموديلات)

- يجب تنظيف علبة الغبار دائما من أجل  
أفضل نتيجة التنظيف .
١. اخراج السلك الكهربائي من المقبس في  
الجدار .
  ٢. اخراج غطاء التحرير، رفع غطاء الفلتر .
  ٣. اخراج علبة الغبار الكامل (٢٠) .
  ٤. ضغط عتلة التحرير (٣١) في الفلتر  
الكامل (٢٢) واخرجه من علبة الغبار  
(٣٣) .
  ٥. غسل علبة الغبار بالاسفنج أو القماش  
المرن تحت الماء المتدفقة الباردة .
  ٦. استعمال الفرشاة (٢٤) لتنظيف الفلتر  
الكامل (٢٢) . وتركيبها وراء الفلتر  
الكامل .
  ٧. اخراج مقبض الفلتر (٣٥) الى التحت من  
الفلتر الكامل (٣٢) .
  ٨. تنظيف الفلتر الكامل (٣٢) ومقبض  
الفلتر (٣٥) بالفرشاة تحت الماء  
المتدفقة الباردة .
- ممنوع استعمال السائل الكميائي أو  
التنظيف في الغسالة أو جهاز تنظيف  
الصحون .
٩. يجب تجفيف الفلتر الكامل (٣٢) ومقبض  
الفلتر (٣٥) في مكان مظلل .
- ممنوع سقوطها وتحريرها أو تجفيفها  
بالميكروموجات أو وضعها في الفرن أو  
بالحرارة المباشرة .
- يجب التأكد أن الفلتر الكامل ومقبض  
الفلتر تجفيفهما بشكل كامل قبل اعادة  
التركيب الى المكنسة الكهربائية.

## التحذير

- ممنوع اغلاق غطاء الفلتر مثل (٣٦) لتفادى اصابة أيديكم .
- ممنوع قبض الخرطوم عند رفع الجسم الرئيسي من الأرض (٣٧) .

## ماذا تعمل اذا لم تشتغل المكنسة الكهربائية؟

اختبار المقبس الكهربائي وادخال القابس بشكل صحيح .

## ماذا تعمل اذا تم تخفيض قوة الشفط؟

- وقف استعمال المكنسة الكهربائية واخراج القابس .
- اختبار الخرطوم والأنابيب وأدوات التنظيف.
- اختبار كيس الغبار (مليئاً) . يجب تغييره ان انقضى الأمر .

اذا تم تركيب الكيس القماشي في المكنسة الكهربائية، فيجب متابعة نفس التعليمات المذكورة أعلاه .  
تفريغه وتبديله (٢٤) .

**الملاحظة:** يتم تركيب الجهاز الأمني للمكنسة الكهربائية، ولا يمكن اغلاق الغطاء اذا لم يتم تركيب الكيس صحيحا .

## تنظيف فلتر المحركات

يتم وضع فلتر المحركات بين كيس الغبار والمحركات داخل المكنسة الكهربائية .  
ونقترح لكم اخراج فلتر المحركات (٢٥) وتنظيفه بضره لازالة الغبار واعادة تركيبه الى المكنسة الكهربائية عند تغيير فلتر الهواء الجارحي من قبلكم كل مرة .

## تغيير فلترات الهواء الخارجية

- فتح غطاء مقصورة الفلتر (٢٦) الموجود وراء المكنسة الكهربائية لتغيير هذه الفلترات .
- تنظيف فلتر شآظف قابل الغسل بالماء مرة واحدة كل سنة على الأقل .

## • صنبور الأرضية الصلبة (٢٧)

قادر على تنظيف أرضيات صلبة (الخشب، المشمع الخ) .

## (٢٨) الفوهة الطربينية الصغيرة (المختارة)

- استعمال الفوهة الطربينية الصغيرة للدرجات والأماكن التي يصعب الوصول اليها .
- فتح غطاء الفوهة من أجل تنظيف الفوهة الطربينية الصغيرة (٢٩) . فك ٢ من البراغي في التحت و
- التنظيف وازالة الشعر والخيوط والنسيج الموجودة في الفرشاة دائماً . سيتم تخريب الفوهة الطربينية الصغيرة اذا لم يتم ذلك .

## كيفية الاستعمال

### توصيل الخرطوم

ادخال نهاية رأس (١) الخرطوم (٢) الى نقطة التوصيل للمكنسة الكهربائية .  
من أجل فك الخرطوم من المكنسة الكهربائية، ضغط الزر (٣) من الرأس، ثم الاخراج .

### تعديل مستوى الطاقة

• لو كان جهازك مزودا بمتحكم متغير كهربائي (١٦) للطاقة، يمكن ان تختار الطاقة المناسبة للمهمة . تدور الزر الى الأيمن اكثر، تصيح طاقة الامتصاص اكبر .

### تعديل درجة القوة

• عند مقبض الخرطوم (١٧) يتم تركيب جهاز تعديل الشفط اليدوي (١٨) من أجل تخفيض قوة الشفط .

### التخزين (١٩)

ضغط الزر (١٤) لادخال السلك الكهربائي عند اطفاء المكنسة الكهربائية واخراج القابض .  
يمكنكم نقل أو تخزين المكنسة الكهربائية بشكل قائم بتحريك الخطاف الموجود على رأس التنظيف العريض الى المشبك من تحت .

### تغيير كيس الغبار

يجب تغيير كيس الغبار عند رفع قوة الشفط الى الأكبر وعدم اشتغال رأس التنظيف في الأرض واضاءة لامية " bag full " (٢٠) باللون الأحمر .

يجب تبديل كيس الغبار في بعض أحيان عدم ظهور اشارة ز الكيس مليئس .

قد يكون كيس الغبار مسدودا بسبب الغبار الرقيق .

• اطفاء المكنسة الكهربائية واخراج القابض .

• فتح الغطاء بضغط الخطافة (٢١) ورفع .

يتم تركيب الكيس الورقي (٢٤) أو القماشي (٢٢) في المنسة الكهربائية .  
(حسب الموديلات)

• فتح مسك كيس الغبار بالمقبض واخراجه، ونقله وتركه .

• فتح تركيب كيس الغبار الجديد الى هثكل الكيس (٢٣) حتى التثبيت .

### تركيب الأنابيب (حسب الموديلات)

• الأنبوب المعدني (أو البلاستيكي) (٤)  
- اربط الأنبوبين عبر ليهما بلطف .

### • الأنبوب المتراكب (٥)

- مسك ماسورة الربط (٦)

- اخراج الأنبوب حتى الطول المطلوب

- تحرير ماسورة الربط للاقفال .

### استعمال رأس التنظيف والفوهات الاضافية

(حسب الطرازات)

تركيب رأس التنظيف الكبير الى نهاية الأنبوب .

### • تجهيز الرأس ذو الوضع الثنائي (٧) مع

الدواسة (٨) لتعديل الأوضاع حسب أنواع الأرض التي سيتم تنظيفها .

• وضع الأرضيات الصلبة ( البلاطات، الأرضيات الباركية ...): ضغط الدواسة لتخفيض الفرشاة .

• وضع السجاد أو البساط: ضغط الدواسة لرفع الفرشاة .

### • أدوات تنظيف الأركان (٩)

أدوات الشق المرنة (المختارة) (١٣)

من أجل تنظيف الأماكن التي يصعب الوصول إليها، مثل أركان الأسقف أو أسفل قطع الأثاث .

### • فرشاة الغبار (١٠)

من أجل تنظيف اطارات الصور وحروف قطع الأثاث والكتب والمواد الأخرى الغير منتظمة الشكل .

### • فوهة مواد التنجيد (١١)

تساعد مجمعات الخيوط على التقاط الخيوط والزعب لتنظيف مواد التنجيد والمراتب .

### • يمكن تركيب مقبض المتممات (١٢) على

العصا الممتد بخطافة التثبيت . ويمكن تخزين المتممات في المقبض .

### الواقعي الحراري:

يوجد بهذه المكنسة ترموستات يحميها في حالة ارتفاع درجة حرارة المحرك . في حالة توقف المكنسة الكهربائية فجأةً، فأغلق المفتاح وافصلها عن التيار الكهربائي. افحص المكنسة الكهربائية للتأكد من عدم وجود مصدر لارتفاع الحرارة مثل امتلاء غرفة الأتربة أو انسداد خرطوم أو انسداد مرشح. في حالة وجود أي من هذه الحالات، قم بإصلاحها أو انتظر لمدة ٣٠ دقيقة على الأقل قبل محاولة استخدام المكنسة الكهربائية. وبعد مرور ٣٠ دقيقة، قم بتوصيل المكنسة الكهربائية بالتيار الكهربائي وأدر المفتاح .

# تعليمات هامة للسلامة



تنبيه

- لا تضع أي أغراض في الفتحات حيث يمكن أن يؤدي عدم القيام بذلك إلى تلف المنتج .
- لا تستخدم المكنسة في حالة انسداد الفتحات: احفظ الفتحات بعيدا عن الأتربة أو النسالة أو الشعر أو أي شيء قد يقلل تيار الهواء . حيث يمكن أن يتسبب ذلك في تلف المنتج .
- لا تستخدم المكنسة بدون صندوق الأتربة و/أو المرشحات مثبتة في أماكنها. حيث يمكن أن يؤدي عدم القيام بذلك إلى تلف المنتج .
- لا تستخدم المكنسة في تنظيف الأشياء الحادة والصلبة مثل الدبابيس، أو الحجارة، أو الألعاب الصغيرة، إلخ . فقد تتلف هذه الأشياء المكنسة أو صندوق الأتربة .
- تخزين المكنسة الكهربائية داخل المنزل . أحفظ المكنسة بعيدا بعد الاستخدام لمنع لتجنب التعثر فيها .
- المكنسة غير معدة للاستخدام من قبل الأطفال أو الأفراد ذوي الاحتياجات الخاصة بدون رقابة . حيث يمكن أن يؤدي عدم القيام بذلك إلى الإصابة الجسدية أو تلف المنتج .
- استخدم قطع الغيار المنتجة أو الموصى بها من قبل وكلاء خدمة شركة . نذرفقعه نذرعظغم حيث يمكن أن يؤدي عدم القيام بذلك إلى تلف المنتج .
- استخدم المكنسة الكهربائية كما هو موصوف في هذا الدليل فقط استخدمها فقط مع الملحقات أو المرفقات الموصى بها أو المعتمدة من غم . حيث يمكن أن يؤدي عدم القيام بذلك إلى الإصابة الجسدية أو تلف المنتج .
- لتجنب الإصابة الجسدية أو لمنع الجهاز من الصندوق عند تنظيف السلالم، ضع المكنسة دائما أسفل السلالم . حيث يمكن أن يؤدي عدم القيام بذلك إلى الإصابة الجسدية أو تلف المنتج .
- استخدم الفوهات المرفقة في وضع الأريكة حيث يمكن أن يتسبب ذلك في تلف المنتج .
- لا تجفف المرشح في فرن أو ميكروويف . حيث يمكن أن يؤدي عدم القيام بذلك إلى خطر الحريق .
- لا تجفف المرشح في مجفف الملابس . حيث يمكن أن يؤدي عدم القيام بذلك إلى خطر الحريق .
- لا تجفف المكنسة بالقرب من مصدر لهب مفتوح . حيث يمكن أن يؤدي عدم القيام بذلك إلى خطر الحريق .
- قم بتنظيف المكنسة دائما بعد تنظيف السجاد والمنظفات والمنعشات والمساحيق والأتربة الدقيقة . فهذه الأشياء تسد المرشحات وتقلل تيار الهواء ويمكنها أن تتلف المكنسة قد يؤدي عدم تنظيف صندوق الأتربة إلى تلف دائم للمكنسة. (حسب الطراز)
- لا تمسك الصندوق من المقبض أثناء تحريك المكنسة . فقد يسقط جسم المكنسة عند فصل الصندوق عن المقبض حيث يمكن أن يؤدي ذلك إصابة جسدية أو إلى تلف المنتج يجب أن تمسك من مقبض الحمل عند تحريك (حسب الطراز)
- إذا أضاء مصباح المؤشر بعد إفراغ صندوق الأتربة باللون (الأحمر)، فقم بتنظيف صندوق الأتربة . حيث يمكن أن يؤدي عدم القيام بذلك إلى تلف المنتج (حسب الطراز)

- احتفظ بالشعر، والملابس الفضفاضة، والأصابع، وكل أجزاء الجسم بعيداً عن الفتحات والأجزاء المتحركة الأخرى .
- قد يؤدي عدم القيام بذلك إلى الصدمة الكهربائية أو الإصابة الجسدية .
- لا تسحب المكنسة من سلك التيار أو تحملها منه، ولا تستخدم سلك التيار كمقبض، ولا تفلق الباب على سلك التيار، أو تلف سلك التيار حول أطراف حادة لا تسحب المكنسة الكهربائية على سلك التيار احتفظ بسلك التيار بعيداً عن الأسطح الساخنة.
- قد يؤدي عدم القيام بذلك إلى الصدمة الكهربائية أو الإصابة الجسدية أو الحرق أو تلف المنتج .
- لا تستخدم المكنسة الكهربائية كلعبة . يجب الانتباه الشديد عند استخدام المكنسة أو عندما تكون قريبه من الأطفال حيث يمكن أن يتسبب ذلك في الإصابة الجسدية أو تلف المنتج .
- لا تستخدم الجهاز إذا كان سلك التيار الكهربائي تالفاً أو معيباً حيث يمكن أن يتسبب ذلك في الإصابة الجسدية أو تلف المنتج .في هذه الحالة اتصل بوكيل خدمة شركة نذصفقومهذرعظغم لتجنب المخاطر .
- لا تستبدل القابس بأي شكل من الأشكال قد يؤدي عدم القيام بذلك إلى الصدمة الكهربائية أو الإصابة الجسدية أو تلف المنتج قد يؤدي القيام بذلك إلى الوفاة إذا لم يكن القابس مناسباً، فاتصل بكهربائي مختص لتركيب المنفذ الصحيح .
- يجب فقط القيام بإصلاح الأجهزة الكهربائية من قبل مهندسي صيانة متخصصين . قد تؤدي الإصلاحات غير السليمة إلى مخاطر جسيمة للمستخدم.
- لا تقم بتوصيل التيار الكهربائي إذا لم يكن المقبض على الوضع OFF (إيقاف التشغيل) . حيث يمكن أن يتسبب ذلك في الإصابة الجسدية أو تلف المنتج (حسب الطراز)
- ابق الأطفال بعيداً ولاحظ العوائق عند لف السلك لمنع الإصابة الجسدية . يتحرك السلك بسرعة أثناء اللف . (حسب الطراز)
- يحتوي الخرطوم على أسلاك كهربائية لا تستخدمه إذا كان تالفاً أو مقطوعاً أو مثقوباً حيث يمكن أن يؤدي عدم القيام بذلك إلى الوفاة أو الصدمة الكهربائية (حسب الطراز)



# تعليمات هامة للسلامة

الرجاء قراءة جميع التعليمات قبل استخدام المكنسة الكهربائية لمنع خطر حدوث حريق، أو صدمة كهربية، أو إصابة للأشخاص، أو تلف عند استخدام المكنسة الكهربائية، لا يشمل هذا الدليل كل الظروف المحتملة التي قد تحدث. اتصل دائماً بفني الخدمة أو المصنع في حالة وجود أية مشكلات لا تفهمها يتوافق هذا الجهاز مع قوانين الاتحاد الأوروبي: - EEC/23/73 ، وقانون الفولت المنخفض 89/336/CEE - وقانون EMC. هذا هو رمز تنبيه للسلامة .



ينبهك هذا الرمز ضد المخاطر المحتملة التي يمكن أن تقتلك أو تؤذيك أنت أو الآخرين . تنبيه للسلامة وتعني كلمة زتحذيرس أو "WARNING" حق تلي كل رسائل السلامة كل رمز "CAUTION"س تنبيهس  
تعني هذه الكلمات ما يلي:

ينبهك هذا الرمز إلى المخاطر أو الممارسات غير الآمنة والتي قد تؤدي إلى إصابة جسدية خطيرة أو الوفاة.

**تحذير** !

ينبهك هذا الرمز إلى المخاطر أو الممارسات غير الآمنة والتي قد تؤدي إلى إصابة جسدية أو تلف الممتلكات.

**تنبيه** !

**تحذير** !

• لا تستخدم المكنسة الكهربائية إذا كانت مظلورة بالمياه .

حيث يمكن أن يتسبب ذلك في الإصابة الجسدية أو تلف المنتج في هذه الحالة اتصل بوكيل خدمة شركة LG Electronics لتجنب المخاطر .

• لا تستمر في التنظيف بالمكنسة الكهربائية إذا بدا لك أن أية أجزاء مفقودة أو تالفة .

حيث يمكن أن يتسبب ذلك في الإصابة الجسدية أو تلف المنتج في هذه الحالة اتصل بوكيل خدمة شركة LG Electronics لتجنب المخاطر .

• لا تستخدم سلك التمديد مع هذه المكنسة الكهربائية

حيث يمكن أن يتسبب ذلك في خطر الحريق أو تلف المنتج .

• استخدام الفولتية الصحيحة

قد يؤدي استخدام فولتية غير صحيحة إلى تلف المحرّض أو إصابة المستخدم الفولتية السليمة مطبوعة أسفل المكنسة الكهربائية .

• أوقف تشغيل كل مفاتيح التحكم في المكنسة قبل فصلها عن التيار

قد يؤدي عدم القيام بذلك إلى الصدمة الكهربائية أو الإصابة الجسدية .

• افصل مصدر التيار الكهربائي قبل صيانة الوحدة أو تنظيفها أو عند عدم استخدام المكنسة .

قد يؤدي عدم القيام بذلك إلى الصدمة الكهربائية أو الإصابة الجسدية .

• لا تستخدم المكنسة في تنظيف أشياء حارقة أو مصدر للأدخنة، مثل السجائر أو الرماد الساخن .

حيث يمكن أن يؤدي ذلك إلى الوفاة أو الحريق أو الصدمة الكهربائية .

• لا تقم بتنظيف المواد القابلة للاشتعال أو الانفجار مثل الجازولين أو البنزين أو مخفف الطلاء أو البروبان (سوائل أو غازات) .

حيث يمكن للدخان الذي ينبعث من هذه السوائل أن يتسبب في خطر الحريق أو الانفجار حيث يمكن أن يؤدي ذلك إلى الوفاة أو الإصابة الجسدية




• لا تمسك القابس أو المكنسة بأيدي مبللة .






















حيث يمكن أن يؤدي ذلك إلى تلف المنتج أو الصدمة

• لا تفصل التيار الكهربائي بجذب السلك .


حيث يمكن أن يؤدي ذلك إلى تلف المنتج أو الصدمة الكهربائية

لفصل التيار عن المكنسة، امسك بالقابس، و ليس السلك .

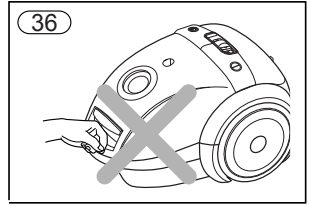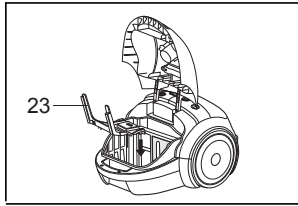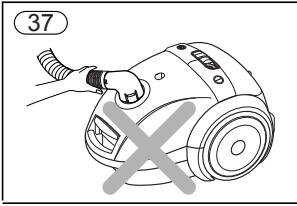

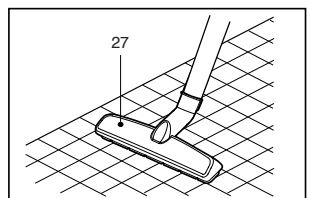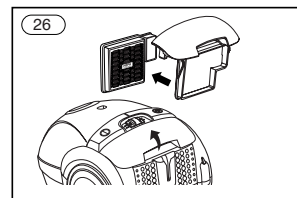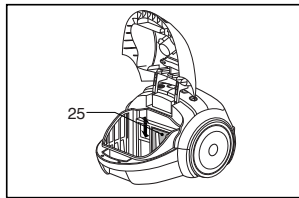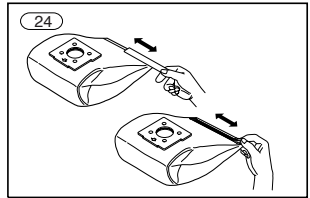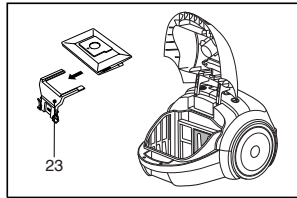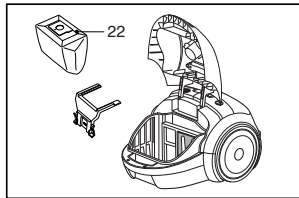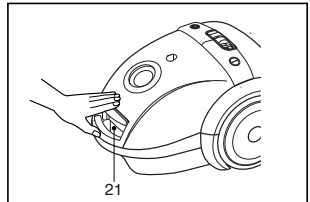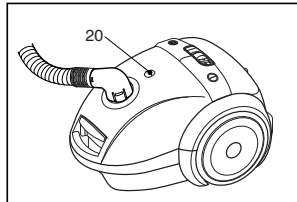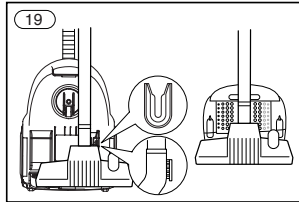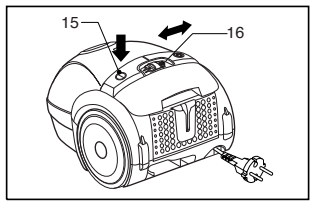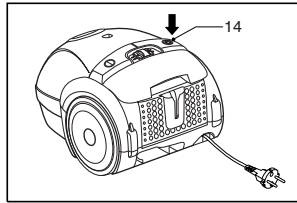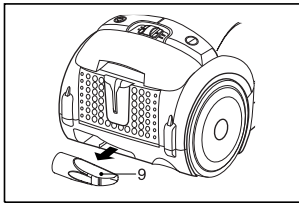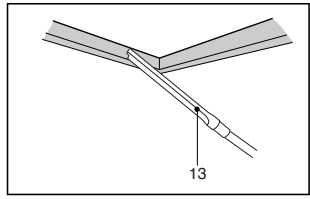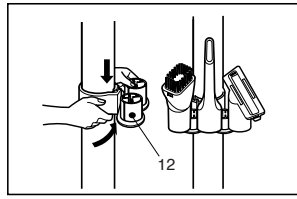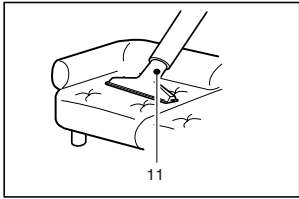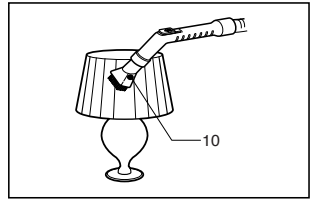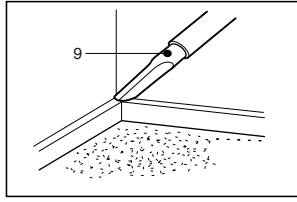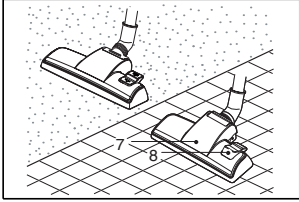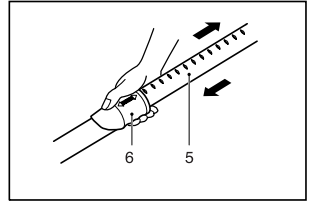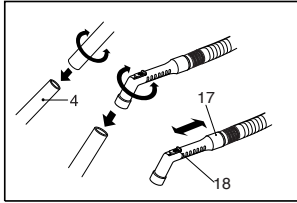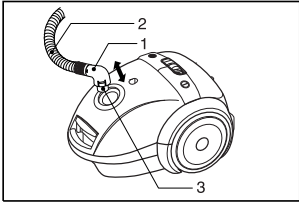


## الأجزاء الأساسية

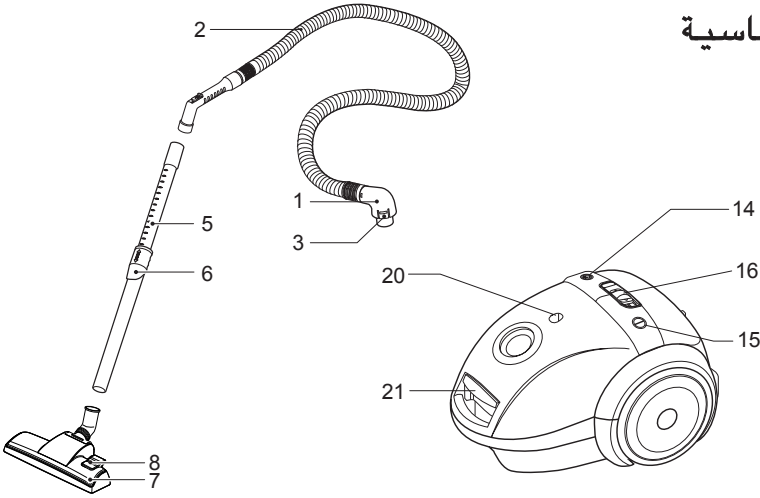


## الأجزاء المختارة


■ يتم تقديم الأرقام والكميات المختلفة من الأجزاء التالية حسب الموديلات المختلفة التي اشتريتها .

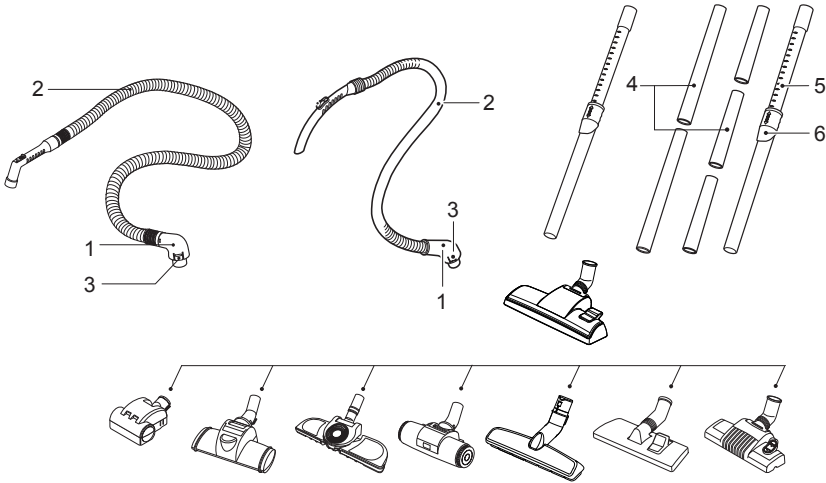

## المتنمات

■ سوف تتغير هذه المواصفات حسب طلبات الوكلاء والزيائن .



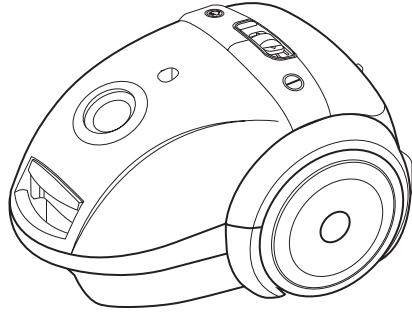

**V-CR58\*S\*\*/N\*\***

العربية