


Model	VB7820CEU		
Language	English and Hebrew		
Page	22	Color(cover/body)	2/1
Material	Weight 100g	Size(W*H)	150 x 220(mm)
Date	2009.01.12	Designer	Yang fan
Part No.	MFL42248107	Description	Owner's manual

Chage Record

No.	Change content	ECO No.	Date	Designer	Confirm
①					
②					
③					
④					
⑤					
⑥					
⑦					
⑧					
⑨					

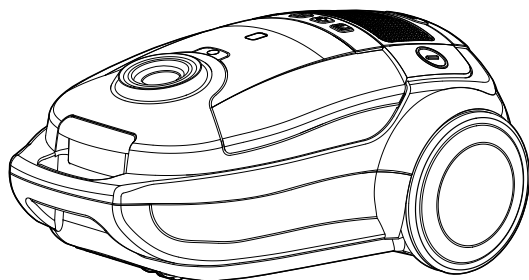


VB7820CEU

E | English




Basic Parts

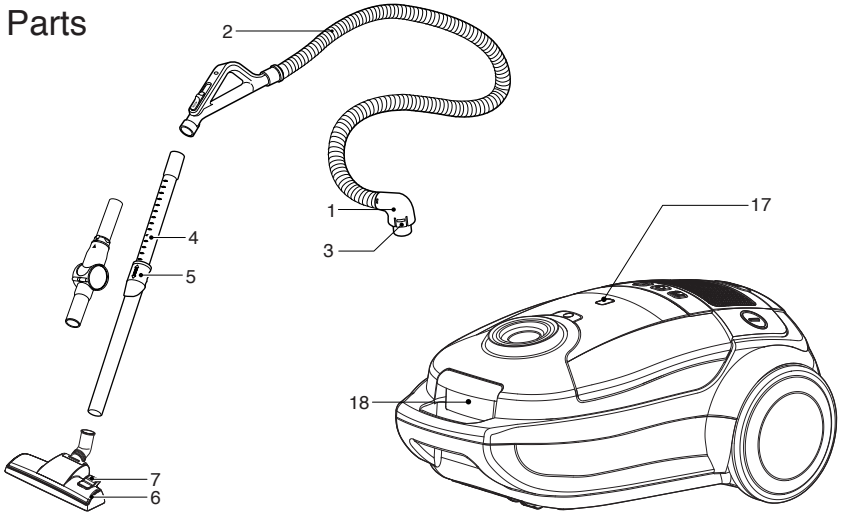



Optional Parts






















- The different figure and quantity of the following part depend on the different models which you have bought.




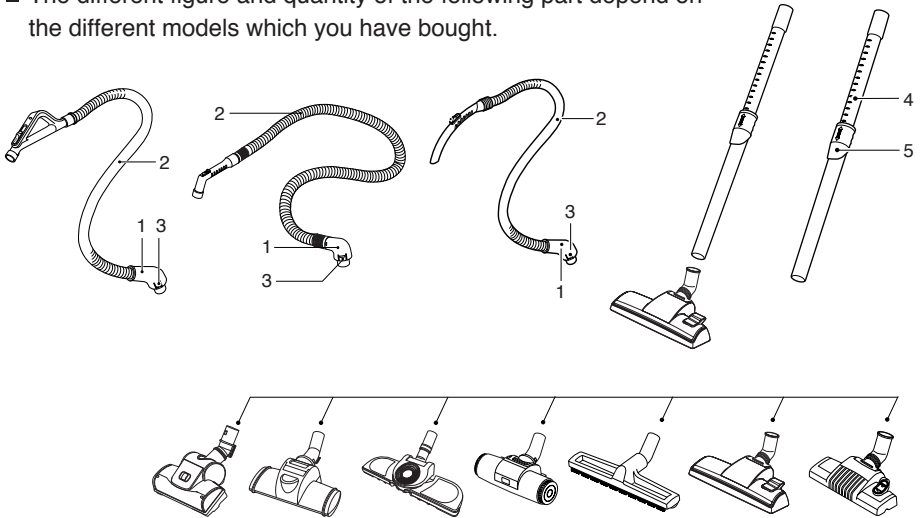


Accessory

- These specifications are subject to change according to the agent / buyer's request.



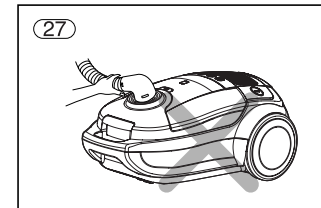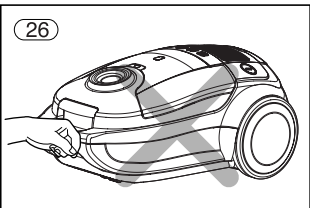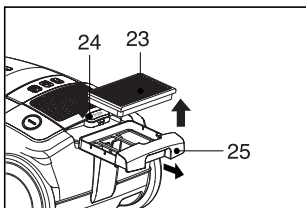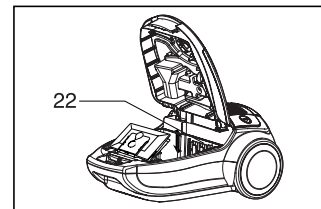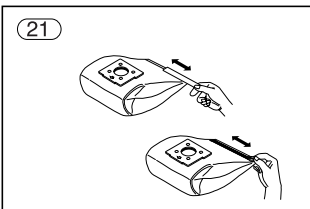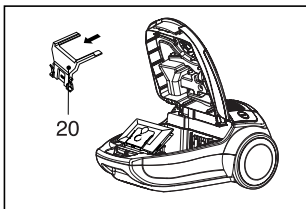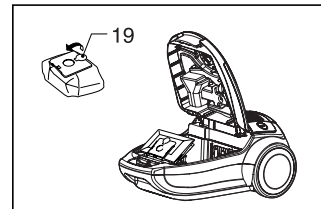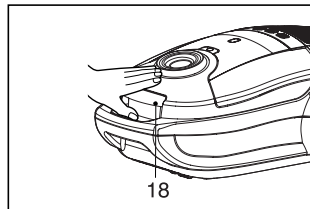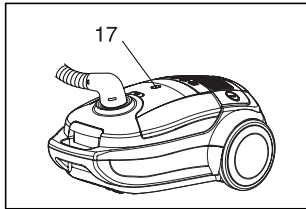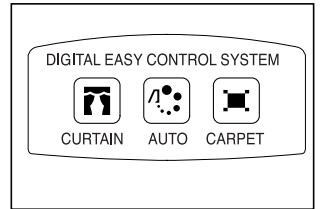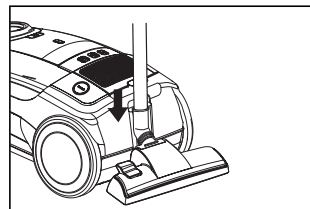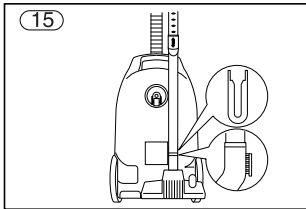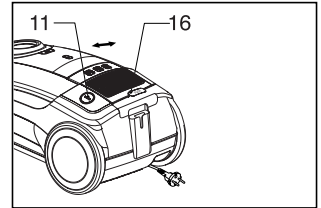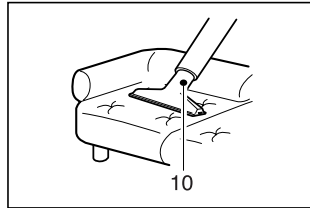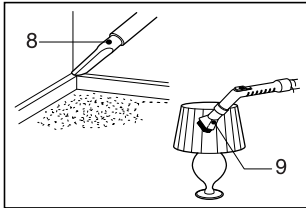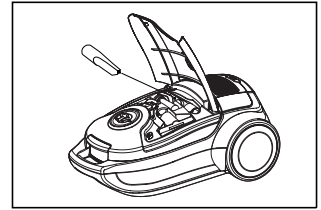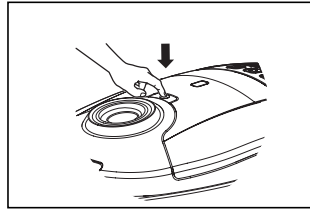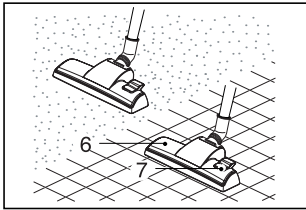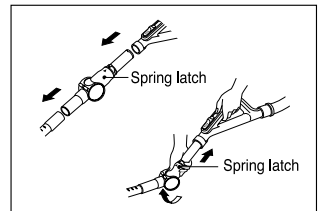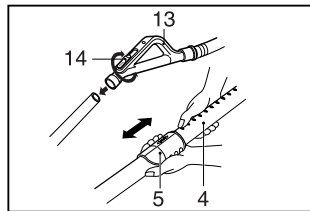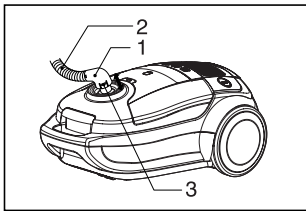

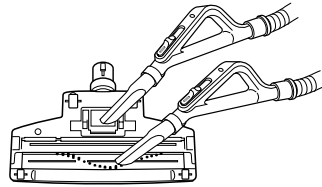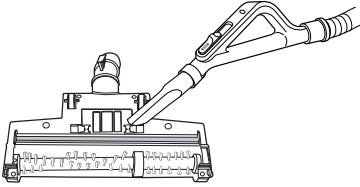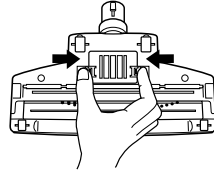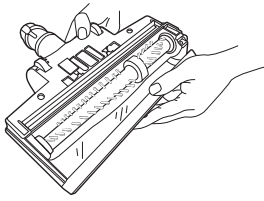

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electric shock, personal injury, or damage when using the vacuum cleaner. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand. This appliance complies with the following ECDirectives :-73/23/EEC, 93/68/EEC-Low Voltage Directive-89/336EEC -EMC Directive.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION." These words mean:



WARNING

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



CAUTION

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.



WARNING

- **Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in use.**

Failure to do so could result in electrical shock or personal injury.

- **Do not use vacuum cleaner to pick up anything that is burning or smoking such as cigarettes, or hot ashes.**

Doing so could result in death, fire or electrical shock.

- **Do not vacuum flammable or explosive substances such as gasoline, benzene, thinners, propane (liquids or gases).**

The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.

- **Do not handle plug or vacuum cleaner with wet hands.**

Doing so could result in death or electrical shock.

- **Do not unplug by pulling on cord.**

Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.

- **Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.**

Failure to do so could result in electrical shock or personal injury.

- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.**

Failure to do so could result in electrical shock or personal injury or fire or product damage.

- **Do not allow to be used as toy. Close attention is necessary when used by or near children.**

Personal injury or product damage could result.

- **Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.**

Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.

- **Do not use vacuum cleaner if it has been under water.**

Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.



WARNING

- **Do not continue to vacuum if any parts appear missing or damaged.**

Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.

- **Do not use an extension cord with this vacuum cleaner**

Fire hazard or product damage could result.

- **Using proper voltage.**

Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the bottom of vacuum cleaner.

- **Turn off all controls before unplugging.**

Failure to do so could result in electrical shock or personal injury.

- **Do not change the plug in any way.**

Failure to do so could result in electrical shock or personal injury or product damage. Doing so result in death. If plug does not fit, contact a qualified electrician to install the proper outlet.

- **Repairs to electrical appliances may only be performed by qualified service engineers.**

Improper repairs may lead to serious hazards for the user.

- **Do not plug in if control knob is not in OFF position.**

Personal injury or product damage could result. (Depending on model)

- **Keep children away and beware of obstructions when rewinding the cord to prevent personal injury.**

The cord moves rapidly when rewinding. (Depending on model)

- **The hose contains electrical wires. Do not use it if it is damaged, cut or punctured.**

Failure to do so could result in death, or electrical shock. (Depending on model)

IMPORTANT SAFETY INSTRUCTIONS



CAUTION

- **Do not put any objects into openings.**
Failure to do so could result in product damage.
- **Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.**
Failure to do so could result in product damage.
- **Do not use vacuum cleaner without dust tank and/or filters in place.**
Failure to do so could result in product damage.
- **Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc.**
They may damage the cleaner or dust bin.
- **Store the vacuum cleaner indoors.**
Put the vacuum cleaner away after use to prevent tripping over it.
- **The vacuum cleaner is not intended to use by young children or infirm people without supervision.**
Failure to do so could result in personal injury or product damage.
- **Only use parts produced or recommended by LG Electronics Service Agents.**
Failure to do so could result in product damage.
- **Use only as described in this manual. Use only with LG recommended or approved attachments and accessories.**
Failure to do so could result in personal injury or product damage.
- **To avoid personal injury and to prevent the machine from falling when cleaning stairs, always place it at the bottom of stairs.**
Failure to do so could result in personal injury or product damage.
- **Use accessory nozzles in sofa mode.**
Failure to do so could result in product damage.
- **Make sure the filters (exhaust filter and motor safety filter) are completely dry before replacing in the machine.**
Failure to do so could result in product damage.
- **Do not dry the filter in an oven or microwave.**
Failure to do so could result in fire hazard.
- **Do not dry the filter in a clothes dryer.**
Failure to do so could result in fire hazard.
- **Do not dry near an open flame.**
Failure to do so could result in fire hazard.
- **Always clean the dust bin after vacuuming carpet cleaners or fresheners, powders and fine dust.**

These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner. (Depending on model)
- **Don't grasp the tank handle when you are moving the vacuum cleaner.**
The vacuum cleaner's body may fall when separating tank and body. Personal injury or product damage could result. **You should grasp the carrier handle** when you are removing the vacuum cleaner. (Depending on model)
- **If after emptying the dust tank the indicator light is on (red), clean the dust tank.**
Failure to do so could result in product damage. (Depending on model)

IMPORTANT SAFETY INSTRUCTIONS



CAUTION

Thermal protector :

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch.

How to Use

Connecting the flexible hose

Push the end of the head(1) on the flexible hose (2) into the attachment point on the vacuum cleaner.

To remove the flexible hose from the vacuum cleaner, press on the button(3) situated on the head, then pull upwards.

Assembling the tubes

(depending on model)

• Telescopic tube(4)

- Push spring latch(5) forward.
- Pull out tube to required length.
- Release spring latch to lock.

Using the cleaning head and Accessory

Nozzles (depending on model)

Fit the large cleaning head onto the end of the tube.

- **The 2 position head(6)** is equipped with a pedal(7) which allows you to alter its position according to the type of floor to be cleaned.

Hard floor position(tiles, parquet floors...). Press on the pedal to lower the brush.

Carpet or rug position. Press on the pedal to lift the brush up.

• Crevice Tool(8)

For vacuuming in those normally inaccessible places i.e. reaching cobwebs, or down the side of a sofa!

• Dusting brush(9)

For vacuuming picture frames furniture outlines, books and other uneven objects.

• Upholstery Nozzle(10)

For vacuuming upholstery, mattresses, etc. The thread collectors help to pick up the threads and fluff.

How to plug in and use

Pull out the supply cord to the desired length and plug into the socket.

Press button (11) to start the vacuum cleaner. To stop it press the button (11) again.

Adjusting the power level

- The flexible hose handle(13) has a manual air flow regulator(14) which allows you to briefly reduce the suction level.

Electronic power control(12)

- Press the "ON -OFF" button (11)
(The lamps of three are on, indicate the power is on)
- Press the "CURTAIN" button in using minimum suction power mode.
- Press the "CARPET" button in using maximum suction power mode.
- The suction level, which is decreased by collected dusts in the dust bag, would be maintained in a proper level if you press the "AUTO" button
- Press "CURTAIN" or "CARPET" buttons to stop the auto mode.

Storage(15)

When you have switched off and unplugged the appliance, press on the button (16) to automatically rewind the cord.

You can move or store your appliance in a vertical position by sliding the hook on the large cleaning head into the clip on the underside of the appliance.

Changing the dust bag

The dustbag needs changing when the cleaner is set to maximum power and the cleaner head is off the floor but the "bag full" indicator window(17) is completely coloured red.

Even if the dustbag does not appear to be full at this stage, it should be changed.

It could be that a great deal of very fine dust has clogged up the pores of the dust bag.

- Turn off the appliance and unplug it.
- Open the cover by pressing the hook (18) and lifting it up until it snaps into place.

Your appliance is equipped with either a paper dust bag (19) or a fabric dust bag (21)(depending on model).

- Take hold of the dust bag by the handle and pull. Remove the bag and throw it away.
- To refit a new bag push the cardboard support of a new bag into the bag mount (20) until it will go no further.

If your appliance is fitted with a fabric dust bag follow the same instructions as above.

Empty it and replace it **(21)**.

Note: as the appliance is fitted with a safety device which checks that the bag is in place you cannot close the lid if the bag is not fitted correctly.

Cleaning the motor filter

The motor filter is situated inside the appliance between the dust bag and the motor. Each time that you change the air outlet filter we advise you to remove the motor filter **(22)** and to clean it by tapping to remove the dirt and then replacing it in the vacuum cleaner.

Changing the air outlet filter

- Depending on the model you Should press the HEPA locker **(24)**, then remove the HEPA filter **(23)** from the HEPA frame **(25)** and Clean it.
- Cleaning the washable HEPA filter with water at least once a year.

WARNING

Please never close the Filter Cover like **(26)**, To avoid nipping your hand.

Please do not hold the hose when we lift the main body off the floor **(27)**.

What to do if your appliance does not work?

Check that the appliance is correctly plugged in and that the electrical socket is working.

What to do when the suction performance reduces?

- Stop the appliance and unplug it.
- Check that the tubes, flexible hose and cleaning tool are not blocked.
- Check that the dust bag is not full. Replace if necessary.



LG Electronics Inc.

<http://www.lge.com/>



LG Electronics Inc.

<http://www.lge.com/>

מה לעשות במקרה שהמכשיר אינו

פועל?

בדקו שהמכשיר מחובר לחשמל כהלכה וששקע החשמל תקין.

מה לעשות במקרה שביצועי השאיבה

פוחתים?

- כבו את המכשיר ונתקו אותו מהחשמל.
- בדקו אם הצינורות, הצינור הגמיש ואביזר הניקוי סתומים או חסומים.
- בדקו אם שקית האבק מלאה.
- החליפו במקרה הצורך.

אם המכשיר מצויד בשקית אבק מבר, בצעו את ההוראות לעל.

רוקנו אותה והתקינו אותה מחדש (21)

הערה: המכשיר מצויד בהתקן בטיחות שבדרך שהשקית מותקנת במקומה, ואינו מאפשר לסגור את המכסה אם השקית אינה מותקנת כהלכה.

ניקוי מסנן המנוע

מסנן המנוע ממוקם בתוך המכשיר, בין שקית האבק לבין המנוע. בכל החלפה על מסנן יציאת האוויר, אנו ממליצים להסיר את מסנן המנוע (22) ולנקותו על ידי הקשה עליו כדי להסיר את תלכלוך ולאחר מכללה תקינו חזרה בשואב האבק.

החלפת מסנני יציאת האוויר

- בהתאם לדגם, לחצו על מהדק ה-HEPA (24).
- הסירו את מסנן ה-HEPA (23) ממסגרת ה-HEPA (25).
- שטפו את מסנן ה-HEPA הניתן לרחיצה לפחות פעם בשנה.

אזהרה

אין לסגור לעלם את מכסה המסנן כמו (26), כדי למנוע את צביטת היד.

אין לאחוז בצינור כשמרימים את בסיס הגוף על המכשיר מהרצפה. (27)

אופן השימוש

חיבור הצינור הגמיש

דחפו את קצה הראש (1) על הצינור הגמיש (2) לתוך נקודת החיבור שבשואב האבק.

כדי להסיר את הצינור הגמיש משואב האבק, לחצו על תל'חצן (3) שנמצא בראש ול'אחר מכן משכו על פי מעלה.

הרכבת הצינורות (בהתאם לדגם)

• צינור פל'סקופי (4)

- דחפו את התפס הקפיצי (5) קדימה.

- משכו את הצינור לאורך הרצוי.

- שחררו את התפס הקפיצי כדי לנעול.

שימוש בראש הניקוי ובאביזרי הפיח (בהתאם לדגם)

חברו את ראש הניקוי הגדול לקצה הצינור.

• **הראש הדו - מצבי (6)** מצויד בדושה (7) שמאפשרת לשנות את מצבו בהתאם לסוג הרצפה שיש לנקות.

מצב רצפה קשה (מרצפות, רצפת פרקט וכדומה).

לחצו על הדושה כדי להוריד את המברשת.

מצב שטיח או מרבד. לחצו על הדושה כדי להרים את המברשת.

• פייה לניקוי פינות (8)

לשאיבה במקומות שהגישה אליהם קשה בדרך כלל, כגון קורי עכביש או בצד הספה!

• מברשת אבק (9)

לשאיבת מסגרות על תמונות, רהיטים, ספרים ומשטח ים לא ישירים אחרים.

• פייה לניקוי ריפוד (10)

לשאיבת ריפוד, מזרונים וכדומה. אוספי הסיבים מסייעים בשאיבת סיבים ומוך.

חיבור לחשמל והפעלה

משכו את כבל החשמל לאורך הרצוי ותקעו אותו בשקע חשמל.

לחצו על תל'חצן (11) כדי להפעיל את שואב האבק.

כדי להפסיק את הפעלה, לחצו שוב על תל'חצן (11).

כיוון העוצמה

- ידית הצינור הגמיש (13) מצוידת בווסת זרימת אוויר ידני (14) שמאפשר לכוון במהירות את עוצמת השאיבה.

בקרת עוצמה אלקטרונית (12)

- לחצו על הלחצן "ON-OFF" (11) (אחד מהמחווים בצבע אדום, מציין שהמכשיר דלוק).
- לחצו על הלחצן "CURTAIN" כדי להשתמש בעוצמת שאיבה מינימלית.
- לחצו על הלחצן "CARPET" כדי להשתמש בעוצמת שאיבה מקסימלית.
- עוצמת השאיבה, שהאבק האסוף במיכל האבק עלול להפחית אותה, יכולה להיות קבועה בעוצמה מסוימת, אם לחצו על הלחצן "AUTO".
- לחצו על הלחצן "CURTAIN" או "CARPET" כדי להפסיק את המוד האוטו.

אחסון (15)

- לאחר כיבוי המכשיר וניתוקו מהחשמל, לחצו על תל'חצן (16) כדי ל'גלגל חזרה את הכבל אוטומטית.
- ניתן להיזו או לאחסן את המכשיר במצב אנכי על ידי הכנסת הוושעל ראש הניקוי הגדול לתוך המהדק שבתל'ק התחתון על המכשיר.

התל'פת שקית האבק

יש להתל'יף את שקית האבק כאשר השואב מכוון לעוצמה המל'אה וראש השואב מורם מעל לרצפה, אך תל'ון המחונן "שקית מל'אה" (17) אדום ליגמרי.

גם אם נראה שעקית האבק אינה מל'אה בעל'ב זה, יש להתל'יפה.

ייתכן שגורגרי אבק זעירים סתמו את הנקוביות על שקית האבק.

• כבו את המכשיר ונתקו אותו מהחשמל.

• פתחו את המכסה על - ידי לחיצה על הוושעל (18) והרימו אותו עד שייכנס למקומו בנקישה.

המכשיר מצויד בעקית אבק (19) מנייד או מבד (21) (בהתאם לדגם).

• אחזו בידיית שקית האבק ומשכו. הסירו את השקית והעל'יכו אותה.

• כדי להתקין את השקית החדשה, דחפו את תומך הקרפון על השקית החדשה לתוך מסגרת השקית (20) עד הסוף.

מתג ניתוק חרמי :

שואב האבק הזה מצויד במתג ניתוק חרמי המיועד להגן עליו במקרה של התחממות יתר של המנוע . אם שואב האבק נכבה לפתע מעצמו, כבו את שואב האבק ונתקו אותו משקע החשמל שבקיר. נסו לגלות את הסיבה להתחממות היתר כגון שקית אבק מלאה, צינור יניקה חסום, או מסנן מלוכלך. אם מוצאים את הסיבות, מפלו בהן, והמתינו 30 דקות לפחות לפני השימוש בשואב האבק. לאחר 30 דקות, חברו את התקע לשקע החשמל שבקיר והדליקו את שואב האבק.

הוראות במיחות חשובות

זהירות

- אל תשתמשו כאשר אחד מן הפתחים חסום. שמרו על הפתחים מפי אבק, מוך, שיער או כל העלול להפחית את זרימת האוויר.
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר.
- אל תשתמשו בשואב האבק ללא מיכל אבק ו / או מסנן במקום.
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר.
- אל תשתמשו בשואב האבק כדי לשאוב חפצים חדים וקשים, צעצועים קמונים, סיכות, מהדקים וכד'.
הם עלולים לגרום לנזק למכשיר או מיכל האבק.
- אחסנו את שואב האבק בתוך הבית.
שמרו על שואב האבק הרחק מהדרך אחרי שימוש כדי למנוע תאונות.
- שואב האבק הזה אינו מיועד לשימושם של ילדים או של אנשים מוגבלים ללא השגחה.
אי ביצוע הוראה זו עלול לגרום לפגיעה אישית או נזק למכשיר.
- יש להשתמש אך ורק בחלקים המיוצרים או מומלצים לשימוש על ידי סוכני השירות של LG Electronics.
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר.
- יש להשתמש בשואב האבק אך ורק בהתאם למתואר בחוברת זו. יש להשתמש אך ורק באביזרים המומלצים או מאושרים על ידי LG.
אי ביצוע הוראה זו עלול לגרום לפגיעה אישית או נזק למכשיר.
- למועט פגיעה אישית וסכנת נפילה של שואב האבק בעת ניקוי מדרגות, הציבו את שואב האבק במדרגה נמוכה ולע אוב את המדרגות שמעליו.
אי ביצוע הוראה זו עלול לגרום לפגיעה אישית או נזק למכשיר.
- יש להשתמש באביזרי הפיות במודת של ספה (Sofa Mode).
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר.
- יש להבטיח שהמסננים (מסנן הפליטה ומסנן במיחות המנוע) יבשים לגמרי לפני שמחזירים אותם בחזרה לשואב האבק.
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר.
- אסור ליבש את המסנן בתנור או במקרונג.
אי ביצוע הוראה זו עלול לגרום לסכנת אש.
- אסור ליבש את המסנן במקונת ייבוש.
אי ביצוע הוראה זו עלול לגרום לסכנת אש.
- אסור ליבש את המסנן ליד אש.
אי ביצוע הוראה זו עלול לגרום לסכנת אש.
- תמיד נקו את מיכל האבק אחרי שאיבת תכשיר לניקוי שטיפים, או מרענים, פודרות ואבקות דקות.
חומרים אלה עלולים לחסום את המסננים, להפחית את זרימת האוויר, ולגרום לנזק לשואב האבק.
אי ניקוי מיכל האבק עלול לגרום לנזק בלתי הפיך לשואב האבק. (בהתאם לדגם)
- אין לאחוז בידית המיכל כאשר מעבירים את שואב האבק. גוף השואב עלול ליפול כאשר מפרידים את המיכל והגוף.
אי ביצוע הוראה זו עלול לגרום לפגיעה אישית או נזק למכשיר. יש לאחוז בידית נשיאה כאשר מעבירים את שואב האבק. (בהתאם לדגם)
- אם אחרי התרוקנות מיכל האבק, סחון מצב מיכל האבק מראה אדום, נקו את מיכל האבק.
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר. (בהתאם לדגם)
- אל תניחו חפצים כלשהם בתוך הפתחים.
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר.

- **תיקונים למכשירים אלקטרוניים חייבים להתבצע אך ורק על ידי מכנאי מוסמך .**
תיקונים בלתי נכונים עלולים לגרום לסכנות חמורות למשתמש .
- **אין לחבר את התקע לשקע החשמל אם בקרת העוצמה אינה במצב OFF (כבוי) .**
אי ביצוע הוראה זו עלול לגרום לפגיעה אישית או נזק למכשיר . (בהתאם לדגם)
- **שימרו על ילדים הרחק, ושימו לב למחסומים כאשר מגלגלים את כבל החשמל כדי למנוע פגיעה אישית .**
הכבל נע במהירות בעת הגילגול .
(בהתאם לדגם)
- **יש בצינור כבלים חשמליים . אין להשתמש בצינור אם הוא ניזוק, חתוך או מוקב .**
אי ביצוע הוראה זו עלול לגרום למוות או הלם חשמלי .
(בהתאם לדגם)
- **אין להמשיך להשתמש בשואב האבק אם פריט כלשהו חסר או ניזוק .**
אי ביצוע הוראה זו עלול לגרום לפגיעה אישית או נזק למכשיר .
במקרים אלה, התקשרו לסוכן שירות של LG Electronics כדי למנוע סכנה.
- **אין להשתמש בכבל מאריך עם שואב האבק .**
אי ביצוע הוראה זו עלול לגרום לסכנת אש או נזק למכשיר .
- **השתמשו במתח חשמלי מתאים .**
שימוש במתח חשמלי בלתי מתאים עלול לגרום לנזק למונע ופגיעה למשתמש .
מתח חשמלי מתאים רשום על התווית בתחתית שואב האבק .
- **כבו את כל הבקורות לפני הניתוק מן החשמל .**
אי ביצוע הוראה זו עלול לגרום להלם חשמלי או פגיעה אישית .
- **אין להחליף את התקע בשום אופן .**
אי ביצוע הוראה זו עלול לגרום להלם חשמלי, או פגיעה אישית או נזק למכשיר . אם התקע אינו מתאים, התקשרו למכנאי לגרום למוות . אם התקע אינו מתאים, התקשרו למכנאי מוסמך כדי להחליף את השקע המתאים .

הוראות בטיחות חשובות

נא לקרוא את כל ההוראות הבאות לפני השימוש בשואב האבק הזה, על מנת למנוע סכנת אש, הלם חשמלי, פגיעה אישית או נזק למכשיר, בעת השימוש בשואב האבק. חוברת זו אינה כוללת את כל המצבים האפשריים שעלולים לקרות. תמיד התקשרו לסוכן השירות שלך, או ליצרן בקשר לבעיות שאתם לא מבינים. מכשיר זה תואם להנחיות ה-EC הבאות: Directive EMC-EEC336/89-, Directive-73/23/RV, 93/68/EEC -Low Voltage -.

זה סימן התרעה.



סימן זה מתריע לכם על אפשרות חשיפה לסכנה שעלולה להרוג או לפגוע בככם ובאחרים.

כל מידע בטיחות בא אחרי סימן התרעה, והמילה "אזהרה" או "היראות". משמעותן של מילים אלה:

סימן זה מתריע לכם על אפשרות חשיפה לסכנת פגיעה חמורה או מוות.





אזהרה !






















סימן זה מתריע לכם על אפשרות חשיפה לסכנת פגיעה גופנית או נזק לרכוש.

זהירות !


אזהרה !

- **אין לגרור או לקחת את כבל החשמל, להשתמש בו כידית, או למשכו סביב קצוות חדים או פינות. אל תעבירו את שואב האבק מעל הכבל. שמרו על הכבל הרחק מסממחים חמים.**
אי ביצוע הוראה זו עלול לגרום להלם חשמלי, או פגיעה אישית, או אש, או נזק למכשיר.
- **השניחו על ילדים קטנים כדי לוודא כי אינם משחקים במכשיר זה. הקפידו במיוחד בעת השימוש בקברת ילדים.**
אי ביצוע הוראה זו עלול לגרום לפגיעה אישית או נזק למכשיר.
- **אין להשתמש במכשיר אם כבל החשמל או תקע פגום או לא תקין.**
אי ביצוע הוראה זו עלול לגרום לפגיעה אישית או נזק למכשיר.
- **במקרים אלה, התקשרו לסוכן שירות של LG Electronics כדי למנוע סכנה.**
- **אין להשתמש בשואב האבק אם הוא היה נמצא במים.**
אי ביצוע הוראה זו עלול לגרום לפגיעה אישית או נזק למכשיר.
- **במקרים אלה, התקשרו לסוכן שירות של LG Electronics כדי למנוע סכנה.**
- **יש לנתק את שואב האבק מהחשמל לפני העיירות או ניקי המכשיר או כאשר שואב האבק אינו בשימוש.**
אי ביצוע הוראה זו עלול לגרום להלם חשמלי או פגיעה אישית.
- **אין להשתמש בשואב האבק כדי להרים דבר הנמצא עדיין בכביעה או מעלה עשן, כגון סיגריות או אפר חם.**
אי ביצוע הוראה זו עלול לגרום למוות, אש או הלם חשמלי.
- **אין לשאוב חומרים דליקים או נפיצים כגון גסולין, בנזן, מרללים, ופרופן (נוזלים או גזים)**
העשן מהחומרים האלה יכול ליצור סכנת אש או פיצוץ.
אי ביצוע הוראה זו עלול לגרום למוות או פגיעה אישית.
- **אל תמפלו בתקע או בשואב האבק בידיים רטובות.**
אי ביצוע הוראה זו עלול לגרום למוות או הלם חשמלי.
- **אל תתקו מן החשמל באמצעות משיכת הכבל.**
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר או הלם חשמלי. לניתוק, אחוז בתקע, לא בכבל.
- **הרחיקו שיער, לבוש רפוי, אצבעות וכל חלק גוף אחר מן הפתחים והחלקים הנעים.**
אי ביצוע הוראה זו עלול לגרום להלם חשמלי או פגיעה אישית.

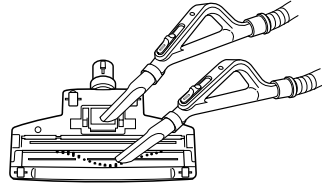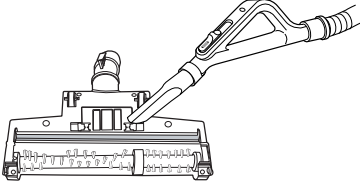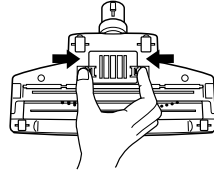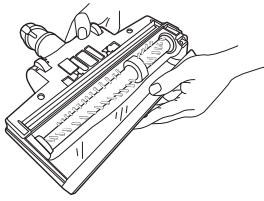

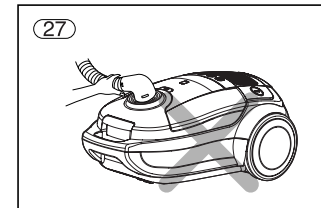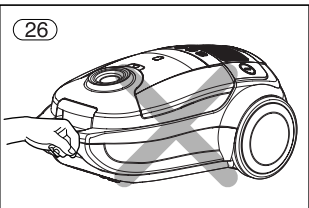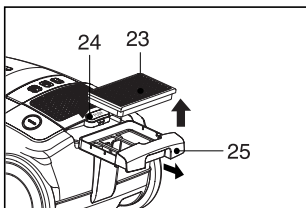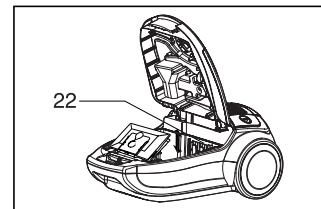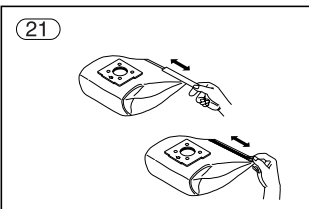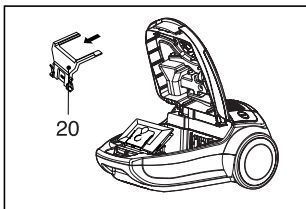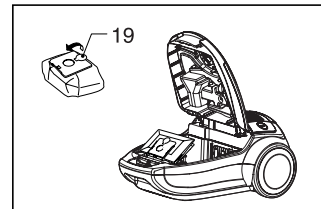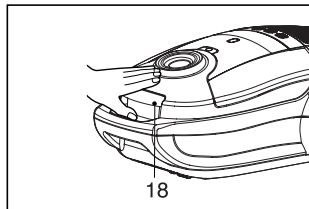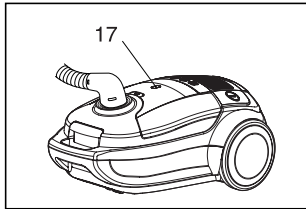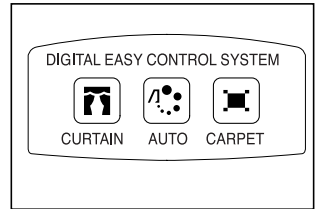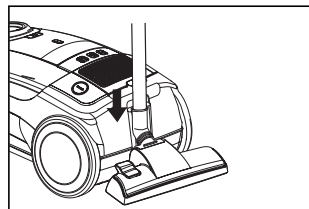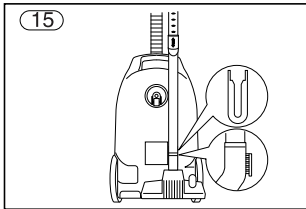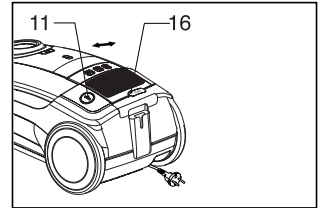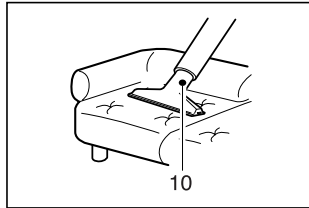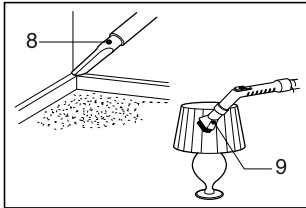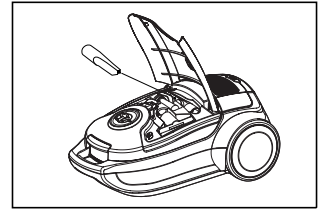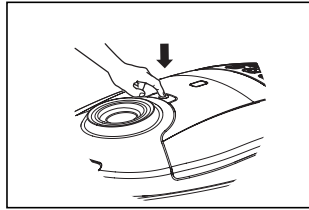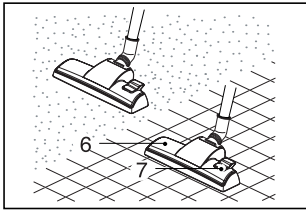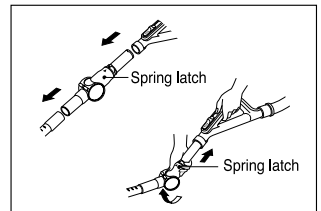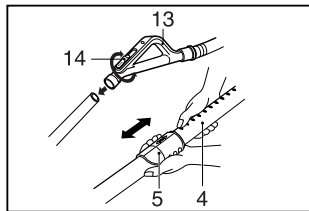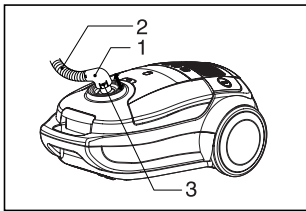


חלקים בסיסיים

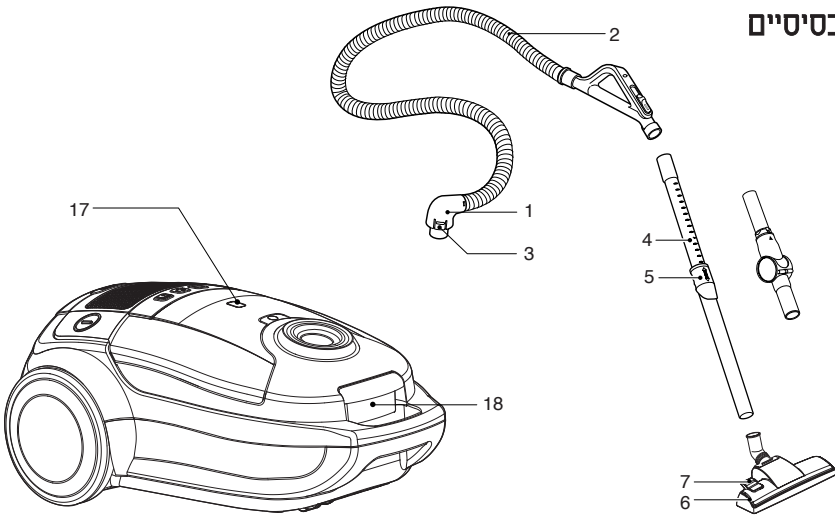

חלקים אופציונליים


■ הצורות והכמויות השונות של החלקים הבאים תלויות בדגמים השונים שקניתם.

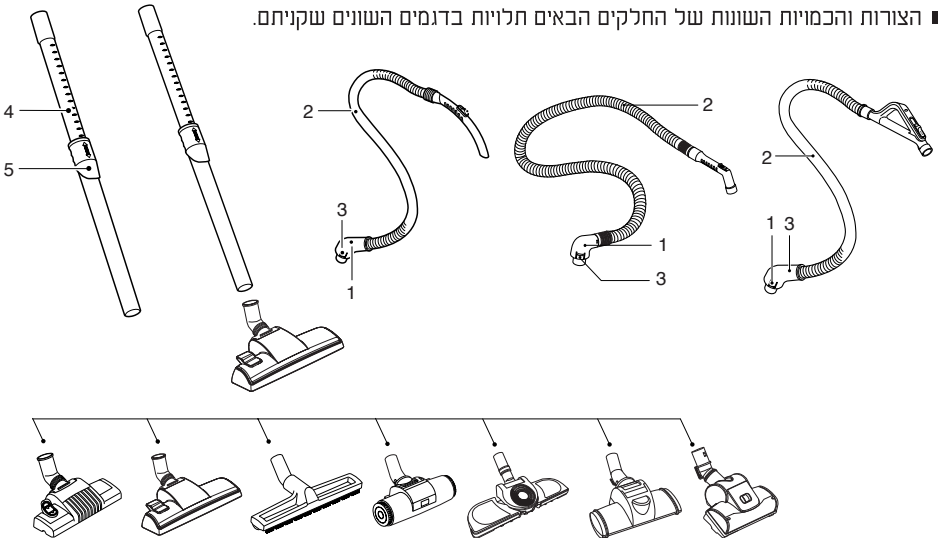

אביזר

■ מפרטים אלה נחווים לשינויים בהתאם לבקשת הסוכן קונה.



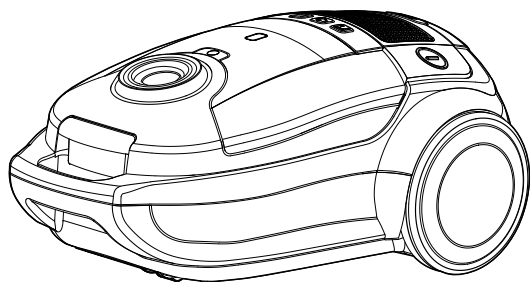

VB7820CEU

עברית