



לקוח יקר
עברית

מדרור למשתמש ב- KC910q

ENGLISH
לקוח יקר



CE 0168 ⓘ

P/N : MMBB0325606 (1.0) G

מדרור למשתמש ב- KC910q

LG ELECTRONICS INC.

KC910q User Guide

CE 0168 ⓘ

P/N : MMBB0325606 (1.0) G

Bluetooth QD ID B014448



חלק מתוכנו של מדריך זה עלול להיות שונה
מהטלפון עצמו, זאת בהתאם לתוכנת הטלפון או
לספק השירות שלכם.

מדריך למשתמש ב- KC910q

ברכות לרגל רכישת הטלפון הסלולרי המתקדם והקומפקטי KC910q
מבית LG, המתוכנן לפעול בטכנולוגיית התקשורת הדיגיטלית הניידת
החדשה ביותר.

01 הכרת הטלפון והכנתו לשימוש

02 מסך הבית שלכם

03 העקרונות הבסיסיים

04 היו יצירתיים

05 היו מאורגנים

06 האינטרנט

07 הגדרות

08 אביזרים

תוכן העניינים

27	שינוי הגדרות שיחות הוידאו.....
28	אנשי קשר.....
29	אפשרויות אנשי קשר.....
30	יצירת קבוצה.....
30	שינוי הגדרות אנשי קשר.....
31	צפייה במידע.....
32	שליחת הודעות.....
32	שליחת הודעות.....
32	שליחת הודעה.....
33	הזנת טקסט.....
33	מצב T9 להזנת טקסט אוטומטי.....
33	מצב ABC ידני.....
34	מקלדת.....
34	זהיהו כתב יד.....
37	הגדרת דואר אלקטרוני.....
38	אחזור דואר אלקטרוני.....
39	שליחת דואר באמצעות חשבון חדש.....
39	שינוי הגדרות הדואר האלקטרוני.....
40	תיקיות הודעות.....
40	ניהול ההודעות שלכם.....
41	שימוש בתבניות.....
41	שימוש בסמלי הבעה.....
41	שינוי הגדרות הודעות הטקסט.....
42	שינוי הגדרות הודעות המולטימדיה.....
43	שינוי הגדרות אחרות.....

הכרת הטלפון והכנתו לשימוש

8	היכרות עם הטלפון שלכם.....
10	כשהמכשיר פתוח.....
11	התקנת כרטיס USIM והסוללה.....
14	כרטיס זיכרון.....
16	מפת התפריטים.....

מסך הבית שלכם

17	עצות לתפעול מסך המגע.....
18	מקשי הקיצור.....
19	שורת המצב.....
20	שינוי המצב שלכם משורת המצב.....
20	השימוש בפונקציית ריבוי-המשימות.....

העקרונות הבסיסיים

21	שיחות.....
21	ביצוע שיחות קוליות או שיחות וידאו.....
21	ביצוע שיחות מתוך רשימת אנשי הקשר.....
22	מענה לשיחה ודחיית שיחה.....
23	אפשרויות במהלך שיחה.....
24	התאמת עוצמת הקול.....
24	חיוג מהיר.....
24	ביצוע שיחה נוספת.....
25	כיבוי DTMF.....
25	צפייה בימני השיחות שלכם.....
26	שימוש בהפניית שיחה.....
26	שימוש בחסימת שיחות.....
26	שינוי הגדרות השיחה הנפוצות.....

היו יצירתיים

58.....	צפייה בסרטוני הידאו שנשמרו	44.....	מצלמה
59.....	צפייה בסרטוני וידאו על מסך הטלוויזיה	44.....	צילום מהיר
60.....	התמונות וסרטוני הידאו שלכם	45.....	לאחר הצילום
60.....	צפייה בתמונות ובסרטוני הידאו שלכם	46.....	הכרת כונת המצלמה
60.....	שימוש בזום בעת צפייה בסרטוני וידאו או בתמונות	47.....	שימוש במבזק
60.....	כוונן העוצמה בעת צפייה בסרטוני וידאו	47.....	בחירת מצב צילום
61.....	לכידת תמונה מסרטון וידאו	48.....	כיוון החשיפה
61.....	צפייה בתמונות כמצגת שקופיות	48.....	צילום מתמשך
62.....	קביעת תמונה כספט	48.....	פנורמה
62.....	עריכת תמונות	49.....	שימוש בהגדרות מתקדמות
63.....	הוספת טקסט לתמונה	49.....	הגדרות תצוגה מקדימה
64.....	הוספת אפקטים לתמונה	50.....	הגדרות נוספות
65.....	חיתוך תמונה	51.....	שינוי גודל התמונה
65.....	שינוי צורה של תמונה	51.....	בחירת גוון הצבע
65.....	הוספת דגש צבע לתמונה	52.....	שימוש במצלמה הפנימית
66.....	החלפת צבעים בתמונה	52.....	צפייה בתמונות שנשמרו
66.....	עריכת סרטוני וידאו	53.....	מצלמת וידאו
66.....	קיצוץ משך סרטוני הידאו שלכם	53.....	צילום סרטון וידאו מהיר
67.....	מיזוג שני סרטוני וידאו	54.....	לאחר צילום סרטון הידאו
67.....	מיזוג תמונה עם וידאו	55.....	הכרת כונת המצלמה
68.....	הוספת טקסט לווידאו	56.....	כיוון החשיפה
69.....	שכתב-על של תמונה	56.....	שימוש בהגדרות מתקדמות
69.....	הוספת הקלטת קול	56.....	הגדרות תצוגה מקדימה
70.....	הוספת פסקול לסרטון וידאו	57.....	הגדרות נוספות
70.....	משך זמן סרטוני וידאו	57.....	שינוי גודל סרטון הידאו
71.....	הוספת אפקט עמעום	58.....	בחירת גוון הצבע
72.....	מוליטימדיה	58.....	שימוש במצלמת הידאו הפנימית
72.....	תמונות		

תוכן העניינים

83	יצירת רשימת השמעה	72	תפריט אפשרויות התמונות שלי
83	עריכת רשימת השמעה	73	שליחת תמונה
84	מחיקת רשימת השמעה	73	שימוש בתמונה
84	האזנה לרדיו	74	שיפור התמונות שלכם
84	חיפוש תחנות	74	הדפסת תמונה
85	איפוס ערוצים	74	העברה או העתקה של תמונות
85	האזנה לרדיו	75	יצירת מצגת שקופיות
		75	בדיקת מצב הזיכרון
		75	צלילים
		75	שימוש בצלילים
		76	סרטוני וידאו
		76	אפשרויות בעת השהיית הוידאו
		76	שליחת וידאו קליפ
		77	משחקים ויישומים
		77	הודרת משחק
		77	שימוש במשחקים
		77	שימוש בתפריט אפשרויות משחק
		78	תוכן Flash
		78	צפייה בקבצי SWF/ SVG
		78	אפשרויות צפייה בקבצי SWF/ SVG
		78	מסמכים
		78	צפייה בקובץ
		79	העברת קבצים לטלפון
		79	אחרים
		80	יצירת סרט
		81	מוסיקה
		81	העברת מוסיקה לטלפון
		82	השמעת שיר
		82	אפשרויות בזמן השמעת מוסיקה

היו מאורגנים

86	עזרי ניהול
86	הוספת אירוע ללוח השנה
86	שינוי תצוגת ברירת המחדל של לוח השנה
87	הוספת פריטים לרשימת משימות לביצוע
87	שיתוף משימות לביצוע
87	איתור תאריך
88	הגדרת התראות
88	הוספת תזכורת
89	הקלטת קולית
89	הקלטת צלילים וקולות
89	שליחת הקלטות קוליות
90	שימוש במחשבון
90	המרת יחידות
90	שימוש בשעון עזר
90	הוספת עיר לשעון העולמי
91	Jogging buddy
92	סינכרון עם מחשב
92	התקנת LG PC Suite על המחשב
92	חיבור הטלפון למחשב

106..... שימוש בדיבורית Bluetooth
107..... Wi-Fi

109..... אביזרים

110..... שירותי רשת

110..... נתונים טכניים

הנחיות

112..... הנחיות לשימוש בטוח ויעיל
117..... פתרון בעיות

93..... גיבוי ושחזור נתוני הטלפון
93..... צפייה בקבצי הטלפון במחשב
93..... סינכרון אנשי קשר
94..... סינכרון ההודעות שלכם
94..... שימוש בטלפון כאחסון בנפח גדול
95..... ממיר DivX

האינטרנט

96..... דפדפן
96..... גישה לאינטרנט
96..... הספת סימניות וגישה אליהן
97..... קורא RSS
97..... שמירת דפים
98..... גישה לדפים שמורים
98..... צפייה בהיסטוריית הדפדפן
98..... שינוי הגדרות דפדפן האינטרנט
98..... שימוש בטלפון כבמודם

הגדרות

100..... שינוי הגדרות מסך
100..... התאמה אישית של הפרופיל
101..... שינוי הגדרות הטלפון
102..... שינוי הגדרות המגע
102..... שינוי הגדרות הקישוריות
103..... שימוש במנהל הזיכרון
104..... שימוש במצב טיסה
104..... Bluetooth וקבלה של קבצים באמצעות
105..... שינוי הגדרות Bluetooth
106..... התאמה עם מכשיר Bluetooth אחר

היכרות עם הטלפון שלכם



⚠ אזהרה: הנחת עצם כבד על הטלפון או ישיבה עליו כאשר הוא בסיסכם עלולים לגרום לפגיעה בתפקוד מסך המגע ומסך ה-LCD של הטלפון.

01

02

03

04

05

06

07

08

מקשי צד

- כאשר המסך פעיל: עוצמת צליל המקשים.
- במהלך שיחה: עוצמת שמע
- בעת השמעת רצועת רקע: שליטה רציפה בעוצמת השמע.

מקש נעילה/ביטול נעילה (הפעלת מייצב התמונה בזמן צילום)

לחצן המצלמה




שקע מטען, כבל נתונים ושקע דיבורית

עצה: כדי לחבר כבל USB, חכו עד שהטלפון נדלק במלואו ונרשם לרשת.

שקע לכרטיס זיכרון Micro SD



כשהמכשיר פתוח

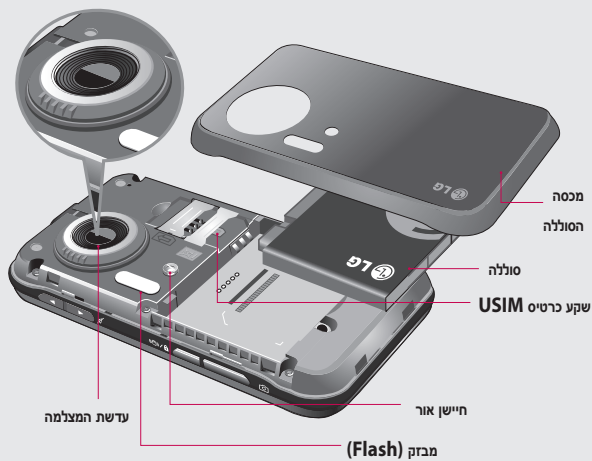

התקנת כרטיס USIM והסוללה

1 הסירו את מכסה הסוללה

לחצו על לחצן שחרור הסוללה שבקצהו העליון של הטלפון בכיוון מטה והרימו את מכסה הסוללה.



2 הסירו את הסוללה

אחזו את הקצה העליון של הסוללה והרימו אותה מתוך תא הסוללה.



אזהרה: אין להשתמש בציפורניים בעת הסרת הסוללה.

אזהרה: אין להסיר את הסוללה בעת שהטלפון דלוק, מכיוון שהדבר עלול לגרום נזק למכשיר.

01

02

03

04

05

06


07

08

התקנת כרטיס USIM והסוללה

3 התקנת כרטיס USIM

הכניסו את כרטיס ה-USIM לתוך תא כרטיס ה-USIM. ודאו שנקודות המגעים המוזהבת על גבי הכרטיס פונה כלפי מטה. להסרת כרטיס ה-USIM, משכו אותו קלות בכיוון ההפוך.

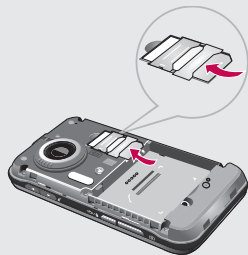


4 הכניסו את הסוללה

הכניסו את קצה הסוללה תחילה לתוך הקצה העליון של תא הסוללה. ודאו שנקודות המגעים נמצאות מול הנקודות המתאימות על הטלפון. לחצו את הסוללה בכיוון מטה עד שתינעל במקומה.



5 טעינת הטלפון

פתחו את מכסה שקע המטען הנמצא בצידו של טלפון KC910 שלכם. הכניסו את המטען וחברו אותו לשקע החשמל. יש להמשיך ולטעון את הטלפון עד שתופיע ההודעה "הסוללה טעונה" על המסך.

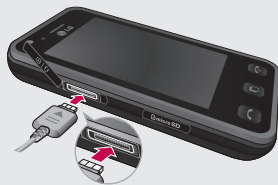

01

02

03

04

05

06

07

08


כרטיס זיכרון

התקנת כרטיס זיכרון

ניתן להגדיל את נפח הזיכרון בטלפון באמצעות כרטיס זיכרון.

הערה: כרטיס הזיכרון הוא אביזר אופציונלי.

- 1 פתחו את מכסה כרטיס הזיכרון.
- 2 הכניסו את כרטיס הזיכרון לתוך החרץ בחלק העליון עד שיינעל במקומו. ודאו שהאזור שבו יש מגעי זהב פונה מטה.

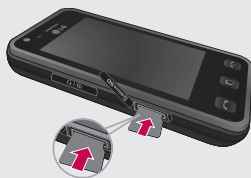

- 3 סגרו את מכסה כרטיס הזיכרון.

אתחול כרטיס הזיכרון

יתכן שכרטיס הזיכרון שלכם כבר מאותחל. אם הכרטיס אינו מאותחל עדיין, יהיה עליכם לעשות כן לפני שתוכלו להשתמש בו:

- 1 במסך הבית בחרו במקש  ואחר כך הקישו על הגדרות, ובחרו בהגדרות הטלפון.
- 2 הקישו על מנהל הזיכרון ואז בחרו בזיכרון חיצוני.
- 3 הקישו על איתחול ואשרו את בחירתכם.
- 4 הזינו את הסיסמה, אם הוגדרה כזו, וכעת יאותחל הכרטיס ויהיה מוכן לשימוש.

עצה! כדי לשנות את יעד ברירת המחדל לאחסון נתונים, פתחו את 'מנהל הזיכרון' מתוך תפריט 'הגדרות הטלפון' ובחרו ב'הגדרות אחסון ראשי'.

01

02

03

04

05

06

07

08

הערה: אם קיים כבר תוכן בכרטיס הזיכרון שלכם, הוא יתוּיֵק באופן אוטומטי בתיקיות המתאימות; לדוגמה, סרטוני הוידאו יתוּיֵקו בתיקית Videos.

העברת אנשי הקשר שלכם

כדי להעביר את אנשי הקשר שלכם מה-USIM לטלפון:

- 1** מְכַרְטִיֵּית 'תְּקִשׁוּרַת', בחרו באנשי קשר ואחר מכן בחרו בהגדרות אנשי קשר.
- 2** בחרו בהעתק.
- 3** בחרו במכשיר ל-USIM ואז הקישו על בוצע.
- 4** בחרו בבחור הכול או בחרו בשמות אחד-אחד והקישו על אישור.

מפת התפריטים

הקישו על  במסך הבית כדי לפתוח את התפריט העליון. מאן ניתן להגיע לתפריטים הבאים: תקשורת, מדיה, שירותים והגדרות.

מדיה



גלריה



התפריטים שלי



מצלמה



מצלמת וידאו



Muvee Studio



מוסיקה



רדיו FM



משחקים ויישומים



תקשורת



חייג



חיוג מהיר



אנשי קשר



יומני שיחות



הודעה חדשה



הודעת דוא"ל חדשה



הודעות



הגדרות



פרופילים



הגדרות מסך



הגדרות טלפון



הגדרות שיחה



הגדרות מגע



קישוריות



Bluetooth



Wi-Fi



שירותים



דפדפן



Google



עזרי ניהול



שעון מעורר



תזכורת



הקלטה קולית



כלים



USIM Services



מסך הבית שלכם

במסך הבית תוכלו לפתוח את כל אפשרויות התפריטים, לבצע שיחה מהירה, לצפות בסטטוס הטלפון, וכן מגוון פעולות נוספות.

עצות לתפעול מסך המגע

מסך הבית הוא גם מקום מושלם להתרגל למסך המגע.

כדי לבחור בפריט כלשהו, הקישו על הסמל בצורה מדויקת. ה-KC910q שלכם ירטוט מעט כאשר הוא יזהה שהקשתם על אפשרות כלשהי.

כדי לדפדף ברשימות, הקישו על הפריט האחרון ברשימה והניעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.

• אין צורך לנחוץ חזק מדי, מכיוון שמסך המגע רגיש דיו כדי לחוש במגע קל אך החלטי.

• השתמשו בקצה האצבע כדי להקיש על האפשרויות הרצויה. היזהרו שלא להקיש על אף מקש אחר.

• כאשר תאורת המסך כבויה, לחצו לחיצה ארוכה על מקש 'נעל/בטל נעילה' מצידו הימני של המסך כדי לשוב למסך הבית.

• אל תכנסו את הטלפון בברתיק או בכיסוי אחר מכיוון שמסך המגע לא יתפקד כאשר הוא מכוסה בחומר כלשהו.

• אם תקישו על **W** יוצג ה-widget הנייד.

ניתן לגרור ולהקיש על ה-widget הרצוי באופן מיידי.



01

02

03

04

05

06

07

08

מסך הבית שלכם

מקשי הקיצור


מקשי הקיצור במסך הבית מאפשרים גישה קלה בלחיצה אחת לפונקציות שבהן אתם משתמשים הכי הרבה.

הקישו כדי להציג את רשימת אנשי הקשר שלכם, ולחיפוש המספר שברצונכם להתקשר אליו. הזינו את שם איש הקשר באמצעות לוח המגע. בנוסף ניתן ליצור אנשי קשר חדשים ולערוך אנשי קשר קיימים. לפרטים נוספים, עיינו בעמ' 28.



הקישו על מנת להציג את לוח מקשי המגע לחיוג כדי להתקשר. הזינו את המספר כפי שהייתם עושים על גבי לוח מקשים רגיל והקישו על מקש המגע 'שיחה' או לחצו על המקש הקשיח .



כדי ליזום שיחת וידאו עם מספר זה, לחצו על  לאחר הזנת המספר ובחרו ב'בצע' שיחת וידאו. לפרטים נוספים, עיינו בעמ' 21.

הקישו כדי לפתוח את התפריט המלא המחולק לארבעה תפריטי-משנה. הקישו על הכרטיסיות האנכיות כדי לצפות באפשרויות נוספות.



הקישו כדי לפתוח את תפריט הוודעות. כאן ניתן ליצור הודעות SMS חדשות. לפרטים נוספים, עיינו בעמ' 34.



שורת המצב

שורת המצב מציגה בפניכם, באמצעות סמלים שונים, פרטים כגון עוצמת האות, הודעות חדשות ואורך חיי הסוללה, וכמו כן מדווחת לכם אם החיבור שלכם ל-Bluetooth או ל-GPRS הינו פעיל. להלן טבלה שבה מוסברות משמעויות הסמלים העשויים להופיע בשורת המצב.

תיאור	סמל
ריבוי-משימות	
עוצמת אות של הרשת (מספר הפסים צפוי להשתנות)	
אין אות רשת	
אורך חיי הסוללה	
הסוללה ריקה	
הודעת טקסט חדשה	
הודעה קולית חדשה	
תיבת ההודעות מלאה	
שליחת ההודעה נכשלה	

תיאור	סמל
הגדרה התראה	
פרופיל רגיל בשימוש	
פרופיל חוץ בשימוש	
פרופיל שקט בשימוש	
פרופיל דיבורית בשימוש	
הפניית שיחות	
EDGE בשימוש	
נדידה	
מצב טיסה פעיל	
Bluetooth פעיל	
WiFi פעיל	
GPS פעיל (תיוג גיאוגרפי, Jogging buddy)	
השמעת מוסיקת רקע	
עצירת מוסיקת רקע	

01

02

03

04

05

06


07

08

המסך הראשי שלכם

שינוי המצב שלכם משורת המצב

הקישו על סמל המצב הנוכחי המייצג את הגדרותיכם הנוכחיות בשורת המצב כדי לפתוח את 'סיומם סטטוס'. שם יוצגו השעה, הרשת, מזהה השירות, וכן מצב הסוללה, זיכרון המכשיר, הזיכרון החיצוני, הפרופיל, MP3, MP3 ו-Bluetooth ו-WiFi. ניתן להגדיר סוג פרופיל, השמעה/הפסקה של MP3 וכן הפעלה/כיבוי של Bluetooth ו-WiFi.

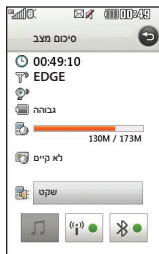

השימוש בפונקציית ריבוי-המשימות

בעת לחיצה על על מקש ריבוי המשימות נפתח כברירת מחדל תפריט הקיצורים ורק במעבר לחוצץ השני ניתן לצפות בכל היישומים הפועלים אצלכם ולגשת אליהם בהקשה אחת.

מכל יישום, הקישו על המקש הקשיח 'ריבוי-משימות' ובחרו ב'מסך הראשי' כדי לחזור למסך הבית ללא יציאה מהיישום וללא סגירתו.

כשיש לכם יישום הפועל ברקע (למשל, משחק או רדיו FM), הסימן  יופיע בשורת המצב.

כשתלחצו על מקש זה מתוך מסך הבית, תוכלו לצפות בתפריט קיצורים למספר פונקציות נפוצות, כולל הודעות חדשות, אנשי קשר ועוד.

תוכלו לערוך את תפריט הקיצורים לפי ראות עינכם על ידי לחיצה על מקש 'ערוך' ושינוי בתפריטים שברצונך ליצור נקיצורים.

שיחות


ביצוע שיחות קוליות או שיחות וידאו

- 1 הקישו על  כדי לפתוח את לוח המקשים.
- 2 הקלידו את המספר באמצעות לוח המקשים למחיקת ספרה, לחצו על המקש .
- 3 הקישו על המקש הקשיח  כדי לבצע שיחה.
- 4 לסיום השיחה, לחץ על המקש הקשיח .

עצה! כדי להזין את התו + לצורך שיחה בינלאומית, הקישו על  פעמיים.


עצה! לחצו על מקש נעילה/ביטול נעילה בצד הימני של הטלפון כדי לנעול את מסך המגע במטרה למנוע ביצוע שיחות בטעות.


עצה! כדי לפתוח את לוח המקשים במהרה שיחה, הקישו על .



עצה! ניתן לערוך שיחת וידאו, לשלוח הודעה, לשמור מספר או לחפש אנשי קשר על ידי הקשה על .

ביצוע שיחות מתוך רשימת אנשי

הקשר

- 1 במסך הבית, הקישו על  לפתיחת רשימת אנשי הקשר.
- 2 הקישו על 'שם' והזינו את האותיות הראשונות של שם איש הקשר שאליהם ברצונכם להתקשר.
- 3 מתוך הרשימה המסוננת, הקישו על איש הקשר שאליהם ברצונכם להתקשר ובחרו במספר ספציפי, אם יש בזיכרון יותר ממספר אחד.
- 4 הקישו על 'שיחה'.

עצה! לחצו על  ותוכלו לבחור באחת מהאפשרויות הבאות: **הוסף איש קשר**, **שלח הודעה**, **מחק**, **חיוג מהיר**, **כרטיס הביקור שלי**, **חיפוש לפי קבוצה ועוד...**

עצה! ניתן לחפש בין אנשי הקשר שלכם מתוך מסך השיחה. הקישו על  והקישו על  בעמודה הימנית התחתונה של המסך כדי לגלות בין אנשי הקשר שלכם, או הקלידו את האותיות הראשונות של השם כדי לסנן את הרשימה.

01

02

03

04

05


06


07

08

שיחות

מענה לשיחה ודחיית שיחה

כשהטלפון מצלצל, לחצו על המקש הקשיח  או על מסך המגע 'קבל' על מנת לענות לשיחה.

לחצו על  כדי להשתיק את הצלצול. זו אפשרות מושלמת למצב שבו שכחתם לשנות את הפרופיל ל'שקט' במהלך פגישה.

לחצו על המקש הקשיח  או על מקש המגע  על מנת לדחות את השיחה הנכנסת.

אפשרויות במהלך שיחה

01

לפני ביצוע פעולות במכשיר יש לבטל את נעילת המקשים על ידי לחיצה ארוכה על מקש נעילת המקשים.

02

03

04

רמקול - הקישו על  כדי לעבור למצב רמקול.

05

השתקה - הקישו על  כדי לכבות את המיקרופון כך שהאדם שעמו אתם משוחחים לא יוכל לשמוע אתכם.

06


07

08


אפשרויות - רשימת האפשרויות במהלך שיחה הכוללת יצירת תזכורת חדשה, מעבר להודעות לבדיקת את הודעותיכם והוספת אנשי קשר במהלך שיחה. כמו כן ניתן לסיים את השיחה מתפריט זה על ידי הקשה על סיום שיחה.

 - בחרו לחיפוש אנשי קשר במהלך שיחה.

 - בחרו להוספת אדם נוסף לשיחה.

 - הקישו כדי לפתוח לוח מקשים מספרי ולניווט בין התפריטים באמצעות אפשרויות ממוספרות. לדוגמה, בעת חיוג למרכזי שירות או לשירותים טלפוניים אוטומטיים אחרים.

למעבר לתפריט הראשי לחצו על מקש ריבוי המשימות.

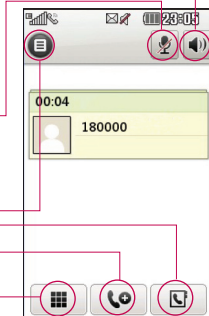

עצה! כדי לדפדף ברשימת אפשרויות או רשימת אנשי קשר, הקישו על הפריט האחרון שניתן לראותו במסך והניעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.


שיחות

התאמת עוצמת הקול

כדי לכוון את עוצמת הקול במהלך שיחה, השתמשו בלחצני החצים 'מעלה' ו'מטה' מצדו הימני של הטלפון.

חיוג מהיר


ניתן להקצות אנשי קשר שאליהם אתם מתקשרים הרבה למספר חיוג מהיר.

1 הקישו על  במסך הבית לפתיחת רשימת אנשי הקשר.


2 הקישו על  ובחרו חיוג מהיר.

3 בחרו באחד ממספרי החיוג המהיר על מנת להקצותו כחיוג מהיר לאיש קשר. (התא הקולי שלכם כבר מוגדר לחיוג מהיר מספר 1. לא ניתן לשנות זאת).

4 כעת תיפתח רשימת אנשי הקשר. בחרו באיש הקשר שברצונכם להקצות למספר זה על ידי הקשה בודדת על מספר הטלפון שלו.

כדי להתקשר למספר חיוג מהיר, הקישו על  במסך הבית ולחצו לחיצה ארוכה על המספר שהוקצה, עד להופעת איש הקשר על המסך. השיחה תתבצע באופן אוטומטי, ואין צורך ללחוץ על **שיחה**.


ביצוע שיחה נוספת


1 במהלך השיחה הראשונה שלכם, הקישו על  ובחרו במספר שברצונכם להתקשר אליו.

2 חייגו את המספר או חפשו ברשימת אנשי הקשר (ראו **ביצוע שיחה בעמ' 21**).

3 לחצו על  כדי לחבר את השיחה.

4 שתי השיחות יוצגו על גבי מסך השיחות. השיחה הראשונה שלכם תינעל והמתקשר יועבר למצב המתנה.

5 כדי לעבור משיחה לשיחה, הקישו על  ובחרו החלף שיחה או לחצו על מספר השיחה הנמצאת במצב המתנה.


6 כדי לסיים שיחה אחת או את שתי השיחות, לחצו על  ובחרו בסיום ואחר כך בהכול, בהמתנה, או בפעילה.

עצה! ניתן לצרף שיחות באמצעות הקשה על סמל 'הצירוף' ואחר כך על **צרף**. ודאו שספק השירות תומך בשיחות ועידה.

הערה: תחוייבו עבור כל אחת מהשיחות שתבצעו.


DTMF כיבוי

DTMF מאפשר לכם להשתמש בפקודות מספריות כדי לנווט בין התפריטים במסגרת שיחות אוטומטיות. מצב ברירת המחדל של DTMF הינו 'פעיל'.

כדי לכבותו במהלך שיחה (כדי לרשום את מספר, למשל), הקישו על  ובחרו בכיבוי DTMF.

עצה! כדי לדפדף ברשימת אפשרויות, הקישו על הפריט האחרון ברשימה והניעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.

צפייה ביומני השיחות שלכם


הקישו על , בחרו בתקשורת ולחצו על יומני שיחות, ובחרו באחת מהאפשרויות הבאות:


כל השיחות - צפייה ברשימת כל השיחות שחויגו, שהתקבלו ושלא נענו.

שיחות שחויגו - צפייה ברשימת המספרים שאליהם התקשרתם.

שיחות שהתקבלו - צפייה ברשימת המספרים שהתקשרו אליכם.

שיחות שלא נענו - צפייה ברשימת השיחות אשר שהחמצתם.

קיצור! ניתן להכנס ליומני השיחות על ידי מקש החיוג הקשיח .

עצה! מתוך כל אחד מיומני השיחות, הקישו על  ועל מחק הכל כדי למחוק את כל הפריטים השמורים בו.

עצה! הקישו על כל אחד מהפריטים ביומן שיחות כלשהו כדי לצפות בתאריך, בשעה ובמשך השיחה.

01

02

03

04

05

06

07

08

שיחות

שימוש בהפניית שיחה

1 הקישו על  , בחרו בהגדרות ובחרו בהגדרות שיחה.

2 הקישו על הפניית שיחה ובחרו בשיחות וידאו ו/או בשיחות קוליות.

3 בחרו אם להפנות את כל השיחות, כאשר הקו תפוס, כאשר אין תשובה או כאשר אינכם זמינים.

4 הזינו את המספר שאליו ברצונכם להפנות את שיחות.

5 הקישו על בקשה כדי להפעיל אפשרות זו.

הערה: על הפניית שיחות חלים חיובים. לפרטים נוספים, צרו קשר עם ספק השירות שלכם.

עצה! כדי לבטל את כל הפניות השיחה, בחרו בבטל הכול מתוך תפריט הפניית שיחות.

שימוש בחסימת שיחות

1 הקישו על  , בחרו בהגדרות ובחרו בהגדרות שיחה.

2 הקישו על חסימת שיחות ובחרו בשיחות וידאו ו/או בשיחות קוליות.

3 בחרו בחלק מחמש האפשרויות הבאות או

בכול;

כל היוצאות

יוצאות בין"ל

שיחות יוצאות בין"ל להוציא מדינת הבית כל הנכנסות

נכנסות בזמן שהייה בחו"ל

4 הזינו את סיסמת חסימת השיחות. בדקו עם ספק השירות שלכם בנוגע לשירות זה.

עצה! בחרו במספר קבוע מראש כדי ליצור רשימה של מספרים שאליהם ניתן להתקשר מהטלפון שלכם. לצורך כך תזדקקו לקוד PIN2 ממפעיל השירות שלכם. מהטלפון שלכם ניתן יהיה להתקשר רק למספרים הכלולים ברשימת המספרים הקבועים מראש.

שינוי הגדרות השיחה הנפוצות

1 הקישו על  , בחרו בהגדרות ובחרו בהגדרות שיחה.

2 הקישו על הגדרות נפוצות. מאן ניתן לעדכן את ההגדרות של:

דחיית שיחה - העבירו את המתג למצב ON כדי לסמן את רשימת השיחות הנדחות. תוכלו להקיש על תיבת הטקסט כדי לבחור בין כל השיחות, אנשי קשר ספציפיים, קבוצות

01

02

03

04

05

06

07

08

עצה! כדי לדפדף ברשימת אפשרויות, הקישו על הפריט האחרון ברשימה והגיעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.

שינוי הגדרות שיחות הוידאו

- 1 הקישו על , בחרו בהגדרות, הגדרות שיחה ולאחר מכן בהגדרות שיחת וידאו.
- 2 בחרו בהגדרות שיחות הוידאו שלכם. החליטו אם להשתמש בתמונה פרטית ובחרו תמונה כזו, ו/או הפעילו את המראה כדי שתוכלו לצפות בעצמכם על המסך בעת שיחת וידאו.

ספציפיות, או שיחות שמקורן במספרים לא-רשומים (אלה שאינם ברשימת אנשי הקשר שלכם). הקישו על **שמור** כדי לשנות את ההגדרות.

שלח את המספר שלי - בחרו אם המספר שלכם יוצג כאשר אתם מתקשרים.

חיוג-חוזר אוטומטי - העבירו את המתג למצב ON או למצב OFF.

מצב מענה - בחרו אם לענות לשיחות באמצעות מקש שיחה או כל מקש אחר.

התראת דקה - העבירו את המתג למצב ON כדי לשמוע צליל בכל דקה במהלך השיחה.

מצב מענה BT - בחרו בדיבורית כדי לאפשר מענה לשיחה באמצעות דיבורית Bluetooth או בחרו במכשיר כדי ללחוץ על מקש בטלפון כדי לענות לשיחה בעת השימוש בדיבורית.


שמור מספר חדש - בחרו כן כדי לשמור את המספר החדש.

אנשי קשר

חיפוש אנשי קשר

יש שתי דרכים לחיפוש אנשי קשר:

מתוך מסך הבית

- 1 במסך הבית, הקישו על  לפתיחת אנשי קשר. הקישו על 'שם' והזינו את שם איש הקשר באמצעות לוח המגע.
- 2 הקישו על **שיחה** או על המקש הקשיח  כדי לבצע שיחה.

עצה! ניתן לחפש על פי קבוצה על ידי הקשה

על  ובחירה בחפש לפי קבוצה. כעת

תפיתח רשימת כל הקבוצות שלכם.

מתוך התפריט הראשי

- 1 הקישו על , ובחרו בתקשורת.
- 2 הקישו על אנשי קשר ועל חפש.

עצה! ברגע שתקישו על 'שם', יוצג לוח

המקשים האלפבתי.

עצה! כדי לדפדף ברשימת אפשרויות, הקישו


על הפריט האחרון ברשימה והניעו את

האצבע בכיוון מעלה על פני המסך. הרשימה

תנוע מעלה וכך יוצגו פריטים נוספים מתוך

הרשימה.

הוספת איש קשר חדש

- 1 במסך הבית, הקישו על  ואז בחרו בהוסף איש קשר.
- 2 בחרו אם לשמור את איש הקשר בטלפון או ב-USIM.
- 3 הזינו את השם הפרטי ושם המשפחה של איש הקשר. אין צורך להזין את שניהם, אך חובה להזין לפחות אחד מהם.
- 4 הזינו עד חמישה מספרים שונים והקצו סוג לכל אחד מהם. בחרו מתוך נידד, בית, משרד, זימונית ופקס.
- 5 הוסיפו כתובות דוא"ל.
- 6 הקצו את איש הקשר לקבוצה אחת או יותר. בחרו מתוך ללא קבוצה, משפחה, חברים, עמיתים, בית ספר או VIP.
- 7 כאשר שומרים איש קשר על המכשיר ניתן להוסיף רינגטון, יום הולדת, יום נישואין, דף

אנשי קשר

הבית, כתובת בית, שם חברה, תפקיד, כתובת חברה וכן תזכורת.

8 הקישו על שמור כדי לשמור את פרטי איש הקשר.

עצה! ניתן ליצור קבוצות מותאמות-אישית לאנשי הקשר שלכם; עיינו בסעיף אודות יצירת קבוצה בעמ' 30.

אפשרויות אנשי קשר

01

ישנן מגוון פעולות שניתן לעשות בעת צפייה באיש

02

קשר. להלן הסבר כיצד לגשת לתפריט האפשרויות ולהשתמש בו:

03


1 פתחו את איש הקשר הרצוי. (עיינו בסעיף אודות חיפוש אנשי קשר בעמ' 28).

04

2 במסך זה ניתן להתקשר לאיש קשר או לשלוח לו הודעה באופן ישיר.

05

06

3 לחצו על  כדי לפתוח רשימת אפשרויות. מכאן תוכלו לבצע את הפעולות הבאות:

07

08

בצע שיחת וידאו - שיחת וידאו לאיש הקשר. ערוך - שינוי פרטי איש הקשר.

מחק - מחיקת איש הקשר. הקישו על כן אם אתם בטוחים בכך.


העתק או העבר ל- **USIM** או לטלפון - בחרו אם להעביר או להעתיק את הפרטים לכרטיס USIM או לטלפון (תלוי היכן שמרתם את איש הקשר מלכתחילה).

שלח כרטיס ביקור - שליחת פרטי איש הקשר לאדם אחר ככרטיס ביקור. בחרו לשלוח בצורת הודעת טקסט, הודעת מולטימדיה, דוא"ל או באמצעות **Bluetooth**.

שינוי הגדרות אנשי קשר



ניתן לשנות את הגדרות רשימת אנשי הקשר שלכם כך שהיא תתאים להעדפותיכם.


עצה! כדי לדפדף ברשימת אפשרויות, הקישו על הפריט האחרון ברשימה והניעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.

- 1 מكرטיסיית 'תקשורת', הקישו על אנשי קשר ואז בחרו בהגדרות אנשי קשר.
 - 2 מכאן תוכלו לעדכן את ההגדרות הבאות:
הגדרות רשימת אנשי קשר - בחרו אם לצפות באנשי הקשר שנשמרו הן בטלפון וב-USIM, בטלפון בלבד או ב-USIM בלבד.
- ניתן לבחור את תצוגת אנשי הקשר; שם פרטי תחילה או את שם המשפחה של איש הקשר תחילה. ניתן לבחור בעזרת פקודת מקש מהירה בין ביצוע שיחה קולית, ביצוע שיחת וידאו ושליחת הודעה. ברשימת אנשי הקשר, הקישו על  ליצירת קשר ישיר. ניתן לשנות הגדרה זו. (בצע שיחה קולית/בצע שיחת וידאו/שלח הודעה/אל תציג).

עצה! שליחת הודעה לאיש הקשר. לפרטים נוספים אודות שליחת הודעות, עיינו בעמ' 32.

יצירת קבוצה

- 1 במסך הבית הקישו על  ובחרו ככרטיסיית תקשורת. הקישו על אנשי קשר ובחרו בקבוצות.
 - 2 הקישו על .
 - 3 בחרו בהוסף קבוצה.
 - 4 בחרו האם לשמור את הקבוצה למכשיר או ל-USIM.
 - 5 הזינו שם לקבוצה החדשה.
 - 6 הקישו על שמור.
- הערה:** אם תמחקו קבוצה, אנשי הקשר שהוקצו לקבוצה זו לא ילכו לאיבוד. הם ישארו ברשימת אנשי הקשר שלכם (ללא קבוצה).

עצה! ניתן לערוך קבוצה על ידי בחירה בה והקשה על . בחרו בהוסף איש קשר, שנה שם קבוצה, מחק קבוצה, הוסף חברים או להקצות רינגטון קבוצתי.

אנשי קשר

סינכרון אנשי קשר - התחברות לשרת כדי לסנכרן את אנשי הקשר שלכם.*

הענתק - העתיקו את אנשי הקשר שלכם מכרטיס ה-USIM לטלפון או מהטלפון לכרטיס USIM. בחרו אם לעשות זאת אחד-אחד, או כולם ביחד. אם בחרתם אחד-אחד, יהיה עליכם לבחור כל איש קשר להענתק 'אחד-אחד'.

העבר - איש הקשר יישמר אך ורק במיקום אליו העברתם אותו. ולכן, אם אתם מעבירים איש קשר כלשהו מה-USIM לטלפון, הוא יימחק מזיכרון ה-USIM.

שלח את כל אנשי הקשר דרך **Bluetooth**- שלחו את כל אנשי הקשר שלכם להתקן אחר באמצעות Bluetooth. אם תבחרו באפשרות זו, תתבקשו להדליק את Bluetooth.

גיבוי אנשי קשר - ראו גיבוי ושחזור נתוני הטלפון בעמ' 93.

שחזור אנשי קשר - ראו גיבוי ושחזור נתוני הטלפון בעמ' 93.

נקה אנשי קשר - מחקו את כל אנשי הקשר שלכם. הקישו על כן אם אתם בטוחים שאתם רוצים למחוק את כל אנשי הקשר שלכם.

צפייה במידע

1 מכרטיסיית 'תקשורת', הקישו על אנשי קשר ואז בחרו במידע.

2 מכאן ניתן לצפות במספרי שירותים, במספר שלכם, בפרטי הזיכרון שלכם. (כמה זיכרון נשאר זמין לשימוש) וכן בכרטיס הביקור שלי.

עצה! אם עדיין לא הוספתם כרטיס ביקור שלכם, בחרו בכרטיס הביקור שלי והזינו את כל הפרטים שלכם, כפי שהייתם עושים ביחס לכל איש קשר אחר. לסיים, הקישו על שמור.

*בהתאם לתמיכת המפעיל.

01

02

03

04

05

06

07

08


שליחת הודעות

שליחת הודעות


מכשיר KC910q שלכם משלב הודעות SMS, הודעות MMS ודואר אלקטרוני לכדי תפריט אחד אינטואיטיבי וקל לשימוש.

יש שתי דרכים להיכנס למרכז ההודעות:

במסך הבית, הקישו על .

אפשרות נוספת הינה להקישו על , ואז בחרו בתקשורת ובהודעה חדשה.

שליחת הודעה

1 הקישו על  ואז על צור הודעה חדשה כדי לפתוח הודעה חדשה ריקה.

2 מכאן ניתן לבחור בהודעה כדי לשלוח SMS או MMS (ע"י הוספת נושא, תמונה צליל וכדומה תהפוך ההודעה באופן אוטומטי להודעת MMS), או לבחור דוא"ל כדי לשלוח הודעת דוא"ל (לפרטים נוספים, עיינו בעמ' 38).

3 הקישו על לוח המקשים את את גוף ההודעה.

4 הקישו על הוסף כדי להוסיף תמונה, וידאו, צליל, תבנית, סמל הבעה, שם ומספר, שקופית חדשה, נושא ועוד (כרטיס ביקור, לוח זמנים, הערה, משמות לביצוע או כרטיס הביקור שלי).

5 הקישו על 'נמען' כדי להזין את מספר הנמען, או הקישו על סמל החיפוש כדי לפתוח את אנשי הקשר שלכם. ניתן להוסיף מספר אנשי קשר. לאחר שסיימתם, הקישו על שלח.

⚠ אזהרה: תחויבו עבור הודעת טקסט בת 160 להודעה באנגלית ו70 תווים להודעה בעברית עבור כל אדם שאליה תשלחו את ההודעה.

⚠ אזהרה: אם מוסיפים תמונה, סרטון וידאו או קול להודעת SMS, היא תומר אוטומטית להודעת MMS ואתם תחויבו בהתאם.

עצה! תשובה מהירה - שלחו תשובה מיידית להודעה המסומנת באמצעות תבנית.

01

המספר הקשור לאות שברצונכם להזין, והמילון יחזה את המילה שבה אתם מעוניינים.

02

לדוגמה, הקישו על 6, 5, 9, 2, 4 כדי לכתוב טלפון.

03

אם המילה שבה אתם מעוניינים אינה מופיעה, הקישו על אפשרויות, הגדרות הזנת טקסט והוסף למילון. במסך זה תוכלו להזין את המילה וזו תתווסף למילון.

04

05

06


07

08

עצה! פשוט הקישו על כל אות כדי לכתוב את הודעתכם, ולחצו על:

כדי לעבור לאותיות רישיות
 כדי להוסיף רווח

מצב ABC ידני

במצב ABC תוכלו לראות את  T9.


במצב ABC ידני עליכם להקיש על המקש מספר פעמים כדי להזין אות. לדוגמה, כדי לכתוב 'שלום', הקישו על 7 פעמיים, על 5 ארבע פעמים, על 2 שלוש פעמים, שוב על 4 פעמיים.


הזנת טקסט


ישנן חמש דרכים להזין טקסט:


לוח המקשים, מקלדת, כתב יד-מסך, כתב יד-תיבה, כתב יד-תיבה כפולה.

הקישו על המסך פעם אחת, ואז תיפתח המקלדת.

 T9 הקישו כדי להפעיל את מצב T9 להזנת טקסט אוטומטי.

 החלפה בין חמש שפות הכתיבה (אנגלית, עברית, ערבית, רוסית וקוראית).

 הקישו כדי להתליף בין לוחות המקשים של מספרים, סמלים וטקסט.

השתמשו ב- כדי לדפדף בין סוגי מקלדת שונים בכל מצב הזנת טקסט (לדוגמה, אותיות ראשיות או קטנות באנגלית).

כדי להזין רווח, הקישו על .

מצב T9 להזנת טקסט אוטומטי

על מנת לראות כי מצב T9 פעיל התסכלו על הנורה הירוקה במקש  T9.

מצב T9 משתמש במילון מובנה כדי לזהות את המילים שאתם כותבים בהתבסס על סדר המקשים שעליהם אתם מקישים. פשוט הקישו על מקש

שליחת הודעות

מקלדת

על מנת לעבור למצב כתיבה זה יש לסובב את המכשיר למצב אופקי ומצב הכתיבה ישתנה למקלדת מלאה. פשוט הקישו על כל אות כדי לכתוב את הודעתכם, ולחצו על:

כדי לעבור לאותיות ראשיות

כדי להוסיף רווח

עצה! אם תשנו את תצוגת הטלפון לתצוגת רוחב במצב הודעות, הוא יציג באופן אוטומטי את לוח המקשים.

עצה! מצב לוח המקשים מסוגל לחזות ולהציג את מה שלדעתו הוא חושב שתקלידו. המילים נחזות בהתבסס על המשפטים שהקלדתם עד כה. אם אינכם מעוניינים להשתמש במילים המוצעות, המשיכו להקליד מילים חדשות. אם ברצונכם להשתמש במילים המוצעות, הקישו על שורת הרווח כדי לאשר אותן.

זיהוי כתב יד

במצב כתב יד ניתן לכתוב פשוט על המסך וה- KC910q ימיר את כתב ידכם להודעה שכתבתם. בחרו במסך או בתיבה בהתאם לתצוגה המועדפת עליכם. (כתב יד-מסך, כתב יד-תיבה, כתב יד-תיבה כפולה.) כתב יד-מסך מאפשר לכם להזין אותיות ברציפות על המסך המלא.

כתב יד-תיבה מאפשר לכם להזין אות אחר אות. יש אזור נפרד להזנת סימנים, מספרים ואותיות. בכתב יד-תיבה כפולה יש שתי תיבות להזנת אותיות אחת כאן ואחת כאן, כך שתוכלו להזין אותיות ברציפות.

⚠ אזהרה: מצב זה פעיל בשפות אנגלית, רוסית וקוריאנית.

⚠ אזהרה: במצב זה, יתכן שיהיה לכם נוח יותר להשתמש בעט, אך זכרו לא ללחוץ עליה זקק, כדי להגן על המסך.

01

משיכות עט	אות
J j	J
K k	K
L l	L
M m	M
N n	N
O o	O
P p	P
Q q	Q
R r	R
S s	S
T t	T
U u	U
V v	V
W w	W
X x	X
Y y	Y
Z z	Z
β	β

02

03

04

05

06

07

08

זיהוי כתב היד מתרגם את תנועות העט לאותיות,

מספרים או תווים אחרים, ומציג תווים אלה כטקסט. זיהוי כתב יד פעיל רק היכן שניתן להזין טקסט.

הערה: את רוב האותיות ניתן לכתוב באמצעות תנועות עט שונות. ראו את הטבלאות להלן. החץ בוחר אם האות היא ראשית (upper case) או קטנה (lower case), ולא את סגנון הכתיבה.

אלפבית

אם בחרתם במצב אותיות ראשיות (ABC),

האותיות שתזינו יוכנסו כאותיות ראשיות גם אם נכתבו באותיות קטנות, ולהיפך.















משיכות עט	אות
A A a a	A
B B b b	B
C C	C
D D d d	D
E E e e	E
F F f f	F
G G g g	G
H H h h	H
I I i i	I

שליחת הודעות





5' 5' 5' 5'	5
6'	6
7' 7' 7' 7'	7
8' 8' 8' 8'	8
9' 9' 9' 9'	9

אותיות מודגשות



כתבו את התווים כפי שמתואר לעיל, ואז כתבו את הדגש מעל האות שהוזנה. תווים דומים אחרים, כגון ò או ù, פועלים לפי אותו עיקרון.

		grave
		acute
		circumflex
		tilde
		ring
		dieresis
		cedilla

תווים מודגשים

משיכות עט	דגש
	רוח
	Backspace
	Enter
	שינוי מצב הזנת טקסט






סימני פיסוק

משיכות עט	סימן
	נקודה
	שטרודל @

הערה: התחילו כל תנועת כתיבה בנקודה.

מספרים

הקישו על  כדי לעבור ממצב הזנת טקסט למצב הזנת מספרים.

משיכות עט	מספר
	0
	1
	2
	3
	4

01

השם שלי - הזינו את שמכם.

02

שם משתמש - הזינו את שם המשתמש של החשבון.

03

סיסמה - הזינו את סיסמת החשבון.

04

כתובת דוא"ל - הזינו את כתובת הדוא"ל.

05

כתובת דוא"ל למענה - הזינו את כתובת הדוא"ל למשלוח מענה.

06

שרת דואר יוצא - הזינו את כתובת שרת הדואר היוצא.

07

שרת דואר נכנס - הזינו את כתובת שרת הדואר הנכנס.

08

גודל קבלה מרבי - בחרו במגבלת גודל על הודעות הדוא"ל שלכם, כאשר המרב הוא 2MB.

סוג תיבת דואר - הזינו את סוג תיבת הדואר, POP3 או IMAP4.

שמירה בשרת - בחרו אם לשמור את הודעותיכם בשרת. בחשבונות IMAP4, תמיד נשמרים עותקים.

שמרו דואר שנשלח בתוך - בחרו אם לשלוח הודעות דוא"ל שנשלחו (כאשר סוג תיבת הדואר הוגדר כ-IMAP4). אם תיבת הדואר

הגדרת דואר אלקטרוני

ניתן לשמור על קשר גם בעת נסיעות על ידי שימוש בדואר אלקטרוני ב-KC910q שלכם. קל ומהיר ליצור חשבון דוא"ל מסוג POP3 או IMAP4.

עצה! כדי לדפדף ברשימת אפשרויות, הקישו על הפריט האחרון ברשימה והניעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.

הערה! במכשיר ישנם 5 חשבונות דוא"ל ברירת מחדל. במידה ותרצו להוסיף חשבון חדש יש למחוק את אחד החשבונות הקיימים ולעקוב אחר הוראות החוברת.

1 הקישו על  מתוך מסך הבית, ואז על הודעות.

2 בחרו בהגדרות הודעה, בדוא"ל ואז בחשבונות דוא"ל.

3 הקישו על הוסף חשבון דוא"ל.

4 כעת ניתן לבחור כיצד חשבון הדוא"ל שלכם יפעל:

כתרת - הזינו שם עבור החשבון.

שליחת הודעות

הוגדרה כ- POP3, ההודעות שנשלחו יישמרו תמיד בטלפון.

אחזור רק חדשות - בחרו אם להשליך הודעות דוא"ל שכבר נטענו בעבר.

נקודת גישה - בחרו בנקודת הגישה שלכם לאינטרנט.

דוא"ל לאחזור - בחרו את השיטה להורדת הודעות דוא"ל. בחרו בין 'כותרת בלבד' ל'הכול' (כולל גוף ההודעה) עבור POP3, או 'כותרת בלבד' או 'הכול' עבור IMAP4.

אחזור אוטומטי - בחרו אם לאחזור את ההודעות החדשות שלכם באופן אוטומטי.

הגדרות מתקדמות

מספר יציאת SMTP - בדרך כלל, זה יהיה 25.
SMTP TLS/SSL - בחרו אם להשתמש ב-TLS/SSL עבור שרת הדואר היוצא.

יציאת שרת נכנס - בדרך כלל זה יהיה 110 עבור חשבונות POP3 ו-143 עבור חשבונות IMAP4.

TLS/SSL נכנס - בחרו אם להשתמש ב-TLS/SSL עבור שרת הדואר הנכנס.

אימות SMTP - בחרו את הגדרות האבטחה עבור שרת הדואר היוצא.

שם משתמש SMTP - הזינו את שם המשתמש של SMTP.

סימת SMTP - הזינו את הסיסמה של SMTP.



כניסה מאובטחת APOP בחרו להפעיל את הכניסה המאובטחת מסוג APOP לחשבון POP3. בחשבונות IMAP4, האפשרות תמיד מוגדרת ככבויה.

כעת, לאחר שהחשבון שלכם מוכן, הוא יופיע ברשימת החשבונות בתיקיית הדוא"ל שלכם.

אחזור דואר אלקטרוני

ניתן לבדוק אם יש הודעות חדשות בחשבון באופן אוטומטי או ידני. לבדיקה אוטומטית, עיינו בפרק אודות שינוי הגדרות הדוא"ל בעמ' 39.

כדי לבדוק באופן ידני:

- 1 הקישו על  ואחר כך על הודעות.
- 2 בחרו בתיבת דואר.
- 3 הקישו על החשבון שברצונכם להשתמש בו, ואחר כך על .
- 4 בחרו באחזור וכעת יתחבר ה-KC910q לחשבון הדוא"ל שלכם ויאחזר את ההודעות החדשות שלכם.

01

02

03

04

05

06

07

08

3 ניתן לשנות את ההגדרות הבאות:

חשבונות דוא"ל - נהלו את חשבונות הדוא"ל שלכם.

אפשר מענה דוא"ל - בחרו אם להרשות שליחת הודעות אישור קריאה.

בקש מענה דוא"ל - בחרו אם לבקש אישור קריאת דוא"ל.

מרווח זמן לקבלה - בחרו באיזו תדירות יבדוק ה-KC910q שלכם אם יש הודעות דוא"ל חדשות.

כמות לאחזור - בחרו במספר הודעות הדוא"ל לאחזור בכל פעם.

כלול הודעה בהעברה ובמענה - בחרו אם לכלול בתגובתכם את ההודעה המקורית.

כלול קובץ מצורף - בחרו אם לכלול בתגובתכם את הקובץ המצורף המקורי.

קבלה אוטומטית בעת נדידה - בחרו אם לאחזר את הודעותיכם באופן אוטומטי בעת שאתם בחו"ל (בנדידה).

התראת דוא"ל חדש - בחרו אם לקבל התראות בדבר הודעות חדשות.

חתימה - צרו חתימה להודעות הדוא"ל שלכם והפעילו תכונה זו.

שליחת דוא"ל באמצעות חשבון חדש

1 הקישו על  בתפריט 'תקשורת' כדי לפתוח הודעת דוא"ל ריקה חדשה.

2 כעת תוכלו להזין את כתובת הנמען ולכתוב את הודעתכם. ניתן גם להוסיף תמונות, סרטוני וידאו, צילילים או סוגי קבצים אחרים.

3 הקישו על **שלח** והודעת הדוא"ל תישלח.

עצה! ניתן לטעון מסמכי וורד, אקסל, פאוארפוינט ו-PDF ל-KC910q שלכם כך שתוכלו לייצן בהם גם כשאתם בתנועה.

שינוי הגדרות הדואר האלקטרוני

ניתן לשנות את הגדרות הדוא"ל שלכם על פי העדפותיכם.

עצה! כדי לדפדף ברשימת אפשרויות, הקישו על הפריט האחרון ברשימה והגיעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.

1 הקישו על  מתוך מסך הבית, ואז על הודעות ועל הגדרות הודעה.

2 בחרו דוא"ל.

שליחת הודעות

עדיפות - בחרו את רמת העדיפות של הודעת הדוא"ל שלכם.

גודל שליחת דואר - בחרו את גודל הדוא"ל שאתם שולחים.

תיקיות ההודעות

תוכלו לזהות בקלות את מבנה התיקיות במכשיר KC910q שלכם.

צור הודעה חדשה - פתחו הודעה חדשה ריקה.

תיבת דואר נכנס - כל ההודעות שאתם מקבלים יגיעו לתיבת הדואר הנכנס שלכם. מכאן ניתן לצפות בהן, למחוק אותם ועוד. לפרטים נוספים, עיינו תחת **ניהול הודעות** בהמשך.

תיבת דואר - כל הודעות הדוא"ל שתקבלו ב-KC910q שלכם יגיעו לתיבת הדואר.

טיוטות - אם לא היה לכם די זמן לגמור לכתוב הודעה כלשהי, כאן תוכלו לשמור את מה שכבר כתבתם.

תיבת דואר יוצא - זו תיקיית אחסון זמנית בעת משלוח ההודעות.

פריטים שנשלחו - ההודעות ששלחתם נשמרות בתיקייה זו.

התיקיות שלי - צרו תיקיות לאחסון ההודעות שלכם.

תבניות - השתמשו ברשימה של תבניות הודעה נפוצות לטקסט ולמולטימדיה.

סמלי הבעה - הוסיפו סמלי הבעה להודעות שלכם.

הגדרות הודעה - שנו את ההגדרות עבור הודעות הטקסט, המולטימדיה והמייל שלכם.

ניהול ההודעות שלכם

ניתן להשתמש בתיבת הדואר שלכם כדי לנהל את הודעותיכם.

עצה! כדי לדפדף ברשימת אפשרויות, הקישו על הפריט האחרון ברשימה והניעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.

1 הקישו על  ואז על **תיבת דואר נכנס**.

2 הקישו על  ואז בחרו בפעולה הרצויה:

מחק - מחקו הודעות מסומנות.

צור הודעה חדשה - פתחו הודעה חדשה ריקה.


01

1 הקישו על  ואז בחרו בתבניות.

02

2 בחרו תבניות טקסט או תבניות מולטימדיה.

03

כעת תוכלו להקיש על  כדי להוסיף

תבנית, לערוך, למחוק תבנית אחת או למחוק

04

את כל התבניות. כדי לערוך הודעה, פשוט

סמנו אותה, ערכו את השינויים הרצויים והקישו

על שמור.

06

שימוש בסמלי הבעה

הכניסו מעט חיים להודעותיכם באמצעות סמלי


הבעה. בטלפון שלם תוכלו למצוא מספר סמלי

הבעה נפוצים.

07

1 הקישו על  ואז בחרו בסמלי הבעה.

08

2 הקישו על הוסף חדש, או על  כדי לערוך

או למחוק את כל סמלי הבעה.

שינוי הגדרות הודעות הטקסט

הגדרות הודעות הטקסט במכשיר KC910q

שלכם נקבעו מראש, כדי שתוכלו לשלוח הודעות

מייד. ניתן לשנות הגדרות אלו על פי העדפותיכם.

העבר לתיקיות שלי - העבירו את ההודעות

המסומנות ל'תיקיות שלי'.

חפש - חפשו בתוך ההודעות לפי תאריך ו/או

השולח.

מסנן - צפו בהודעות שלכם לפי סוג. בכך

יצורפו הודעות SMS בנפרד מהודעות

MMS.

מחק הכול - מחקו את כל ההודעות.

אם נתקלתם בהודעה אין מקום להודעות **USIM**,

עליכם למחוק מספר הודעות מתיבת הדואר

הנכנס שלכם.

אם נתקלתם בהודעה אין מקום להודעות, עליכם

למחוק הודעות או קבצים שמורים כדי לפנות

מקום.

שימוש בתבניות

צרו תבניות עבור הודעות SMS או MMS

שאתם שולחים בתדירות הגדולה ביותר. בטלפון


שלכם תוכלו למצוא מספר תבניות שאותן תוכלו

לערוך לפי הצורך.

שליחת הודעות

עצה! כדי לדפדף ברשימת אפשרויות, הקישו על הפריט האחרון ברשימה והניעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.

שינוי הגדרות הודעות המולטימדיה
הגדרות הודעות המולטימדיה במכשיר KC910q שלכם נקבעו מראש, כדי שתוכלו לשלוח הודעות מייד. ניתן לשנות הגדרות אלו על פי העדפותיכם.

הקישו על , ואז בחרו בהגדרות הודעות, ואחר כך בהודעות מולטימדיה. ניתן לבצע את השינויים הבאים:

מצב קבלה - בחרו בין רשת מקומית או רשת נדידה. אם לאחר מכן תבחרו ב'דני', תקבלו רק התראות ביחס להודעות MMS ותוכלו להחליט האם להורידן במלואן.

דוח מסירה - בחרו אם לאפשר ו/או לבקש דוח מסירה.


אישור קריאה - בחרו אם לאפשר ו/או לשלוח אישור קריאה.

עדיפות - בחרו את רמת העדיפות של הודעות MMS שלכם.

תקופת תוקף - בחרו כמה זמן תישמר הודעתכם במרכז ההודעות.

משך הצגת שקופית - בחרו כמה זמן יופיעו השקופיות שלכם על המסך.

שעת מסירה - בחרו את משך הזמן לפני מסירת ההודעה.

הקישו על , ואז בחרו בהגדרות הודעה ואחר כך בהודעות טקסט. ניתן לבצע את השינויים הבאים:

מוקד הודעות טקסט - הזינו את פרטי מוקד ההודעות שלכם.

דוח מסירה - הפעילו כדי לקבל אישור שהודעתכם נמסרה לנמען.

תקופת תוקף - בחרו כמה זמן תישמר הודעתכם במרכז ההודעות.

סוגי הודעות - המירו את הטקסט שלכם ל**קול**, **פקס**, **X.400** או **דוא"ל**.

קידוד תווים - בחרו כיצד התווים שלכם יקודדו. יש לכך השפעה על גודל ההודעות שלכם וכתוצאה מכך על עלות המשלוח.

שלח טקסט ארוך כ- בחרו לשלוח טקסט ארוך ממספר הודעות SMS או כהודעת MMS.

01

02

03

04

05


06


07

08

מוקד הודעות מולטימדיה - הזינו את פרטי מרכז
ההודעות שלכם.

שינוי הגדרות אחרות

הקישו על  ואז בחרו בהגדרות הודעה ואחר
כך ב:

תא דואר וידאו הקישו על הוסף חדש או על  כדי להוסיף שירות מענה וידאו חדש. לפרטים
נוספים אודות שירות זה, צרו קשר עם חברת
הסלולר שלכם.

הודעת אינטרנט - בחרו לקבל הודעות שירות
או לחסום אותן. ניתן גם להגדיר את אבטחת
ההודעות שלכם על ידי יצירת רשימות שולחים
מהימנים ושאינם מהימנים.

שירות מידע - בחרו את מצב הקבלה, השפה
והגדרות נוספות שלכם.

מצלמה

צילום מהיר

עצה! לעדשת המצלמה יש מכסה משלה. סובבו את המכסה לכיוון הריצוני כדי לפתוח את הכוונת ולהתחיל לצלם.

- 1 הקישו על מקש  בצדו הימני של הטלפון.
- 2 כעת תקבלו תזכורת להסיר את מכסה העדשה. כוונת המצלמה תופיע על המסך.
- 3 תוך שאתם מחזיקים את הטלפון בצורה אופקית, כוונת את העדשה אל נושא הצילום.
- 4 לחצו קלות על לחצן הצמצם, וכעת תופיע תיבת מיקוד במרכז מסך כוונת המצלמה.
- 5 מקמו את הטלפון כך שתוכלו לראות את נושא הצילום בתיבת המיקוד.
- 6 כשתיבת המיקוד הופכת לירוקה, זה סימן שהמצלמה התמקדה בנושא הצילום.
- 7 לחצו על לחצן הצמצם לחיצה מלאה.

עצה! זיהוי פנים

מצב זה מזהה באופן אוטומטי פנים אנושיות ומתמקד בהן כדי להקל על צילום תמונות ברורות יותר.

עצה! צילום הקשה

ניתן לצלם גם על ידי הקשה על המסך. לאחר שבחרתם אובייקט בעזרת הקשה על המסך, תוכלו לראות אותו בתיבת המיקוד. כאשר תיבת המיקוד הופכת לירוקה, תוכלו לצלם פשוט על ידי הרחקת אצבעותיכם מהמסך.

01

02

03

04

05


06

07

08


לאחר הצילום

התמונה שצילמתם תופיע על המסך. שם התמונה יופיע בתלבוז התחתון של המסך לצד חמישה סמלים בצד ימין.


 הקישו כדי לצלם שוב מייד. התמונה הנוכחית שלכם תישמר.

 הקישו כדי לצפות בגלריה של התמונות שנשמרו.

 הקישו כדי לשלוח את התמונה כהודעה, כדוא"ל או באמצעות **Bluetooth**. עיינו בעמ' 32 לפרטים אודות שליחת הודעה, ובעמ' 104 לפרטים אודות שליחה וקבלת קבצים באמצעות Bluetooth.

 הקישו כדי לטעון לבלוג שלכם.

 הקישו כדי להגדיר את התמונה שזה עתה צילמתם כטפט.

 הקישו כדי למחוק את התמונה שצילמתם זה עתה ואשרו על ידי הקשה על כן. כעת שוב תופיע כוונת המצלמה.

מצלמה

הכרת כוונת המצלמה

הגדרות - הקישו על סמל זה כדי לפתוח את תפריט ההגדרות. לפרטים אודות שימוש בהגדרות מתקדמות, עיינו בעמ' 49.

מצב מצלמה - הצגת מצב המצלמה.

גודל

מצב מבזק



הקודם - הקישו כאן כדי לשוב למסך הבית.

גלריה


מבזק - עיינו בהסבר אודות השימוש במבזק בעמ' 47.

מצב צילום - לפרטים אודות בחירת מצב הצילום, עיינו בעמ' 47.

חשיפה - לפרטים אודות כוונן החשיפה, עיינו בעמ' 48.

זום - הקישו על  כדי להגדיל את התמונה או על  כדי להקטינה לחילופין, תוכלו להשתמש בלחצני העוצמה הצדדיים.


וידאו - הקישו כדי לעבור למצלמת וידאו.

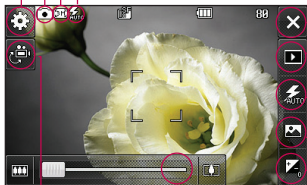

עצה! ניתן לסגור את כל אפשרויות הקיצורים כדי שמסך כוונת המצלמה יהיה ברור יותר. פשוט הקישו פעם אחת במרכז הכוונת. כדי להחזיר את האפשרויות, הקישו על המסך שוב.

שימוש במבזק

ברירת המחדל של המבזק היא במצב אוטומטי, אך ישנן אפשרויות נוספות:

1 בחרו ב-  מהצד הימני של הכוונת כדי לפתוח את תפריט-המשנה של המבזק.

2 יש שלוש אפשרויות מבזק:

אוטומטי - המצלמה תעריך בעצמה את כמות התאורה הדרושה לצילום תמונה באיכות טובה ותשתמש במבזק על פי הצורך.

הפחתת עין אדומה - המצלמה תבזיק פעמיים כדי להפחית את תופעת העין האדומה.

כבי תמיד - המבזק לא יפעל בשום מצב. הדבר שימושי אם ברצונכם לחסוך בחיי הסוללה.

3 לאחר שהקשתם על האפשרות הרצויה, ייסגר תפריט המבזק והמצלמה תהיה מוכנה לצילום.

4 סמל מצב המבזק ככוונת המצלמה ישתנה בהתאם למצב המבזק שבחרתם.


בחירת מצב צילום

1 הקישו על  כדי לפתוח את מצבי הצילום האפשריים.

2 בחרו מתוך שבע האפשרויות הבאות:

צילום רגיל - זוהי ברירת המחדל, והצילום יתבצע בדרך הרגילה, כפי שתוארה בסעיף אודות צילום מהיר.

צילום חייך - סוג צילום זה מושלם לצילום בני אדם. התמקדו בנושא הצילום והקישו על

 וכעת יבוצע הצילום באופן אוטומטי כשהוא מחייך.

צילום יופי - זה מאפשר לכם לצלם את פניו של אדם באופן חד ובהיר. הדבר מועיל במיוחד כשאתם מאד קרובים אל המצולם.

צילום אמנותי - בחרו באפקטים שונים לתמונה. (חס, מקורי, שחור-לבן, קר).

צילום מתמשך - ניתן לצלם שבע תמונות במהירות, זו אחר זו. לפרטים נוספים, עיינו בסעיף אודות **צילום מתמשך** בעמוד הבא.

פנורמה - אפשרות זו מושלמת לצילום קבוצה גדולה של אנשים או נוף פנורמי. לפרטים נוספים, עיינו בסעיף אודות הפנורמה בעמ' 48.

תמונת מסגרת - בחרו אחת ממסגרות הכיף

01

02

03

04

05

06

07


08



מצלמה

שיהפכו את חבריכם למשהו אחר לגמרי או פשוט יקשטו את סביבתם.


כיוון החשיפה

החשיפה מציינת את ההפרש בין האור לצל בתמונה. תמונה בעלת ניגודיות נמוכה תראה מעורפלת, בעוד שתמונה בעלת ניגודיות גבוהה תיראה חדה הרבה יותר.

1 הקישו על .


2 הניעו את מצייני הניגודיות לאורך השררה, לכיוון  לתמונה מעורפלת בעלת ניגודיות נמוכה יותר, ולכיוון  לתמונה חדה בעלת ניגודיות גבוהה יותר.

צילום מתמשך

1 הקישו על  כדי לפתוח את מצבי הצילום, ובחרו בצילום מתמשך.

2 מקמו את האובייקט בכונת המצלמה ולחצו על לחצן הצמצם כמו בצילום רגיל.


3 המצלמה תצלם שבע תמונות במהירות זו אחרי זו, ותציג את הראשונה על ידי שבע תמונות ממוזערות בצידו השמאלי של המסך.

4 לאחר שסיימתם את התמונה שברצונכם לשמור, הקישו על . תוכלו לשמור יותר

מתמונה אחת מתוך השבע.

פנורמה

צלמו את העולם כפי שהוא באמת באמצעות צילום פנורמי. המצלמה תאפשר לכם לצלם שלוש תמונות, זו לצד זו, ותשלב אותן לתמונה אחת כך שתוכלו לצפות בצילום פנורמי של המראה שלפניכם.

1 הקישו על  כדי לפתוח את סוגי הצילום, ובחרו ב'פנורמה'.


2 צלמו את הצילום הראשון כרגיל. כעת תופיע בכונת המצלמה גרסה מוצללת של צידה הימני של התמונה.

3 כשתצלמו את התמונה השנייה והשלישית, התאימו את התמונה המוצללת של התמונה הקודמת לתמונה שבכונת המצלמה.

4 בגלריית התמונות יישמרו התמונות בנפרד במידה ולא סיימתם את הפעולה הפנורמית וכתמונה פנורמית אחת במידה וכן סיימתם את הפעולה.

הערה: עקב גודל התמונה, תופיע התמונה הפנורמית מעוותת קלות בתצוגת הגלריה. הקישו עליה פעמיים כדי לצפות בה כראוי.

שימוש בהגדרות מתקדמות

מתוך כוונת המצלמה, הקישו על  כדי לפתוח את ההגדרות המתקדמות.

הגדרות תצוגה מקדימה

שנו את גודל התמונה כדי לחסוך בזיכרון או שנו את גודל תמונה שנשמרה מראש לגודל הנכון עבור אנשי קשר. עיינו בסעיף אודות שינוי גודל התמונה בעמ' 51.

מצב סצנה - הגדירו את המצלמה כך שתתאים את עצמה לסביבה. בחרו מתוך אוטומטי, לאורך, לרוחב, לילה וספורט.

אפקט צבע - בחרו גוון צבע שיתאים לתמונה שאתם מצלמים. עיינו בסעיף אודות בחירת גוון צבע בעמ' 51.

זיהוי מצמוצים - זה מאפשר למצלמה להפסיק לצלם כאשר היא מבחינה במצמוץ של העין.

איזון לבן - בחרו בין אוטומטי, בוקה, שמש, פלורסנט או מעגן.

צילום מקרו - צילום רחב.

טיימר עצמי - באמצעות הטיימר העצמי תוכלו להגדיר משך זמן שהייה לאחר הלחיצה על

הצמצם. בחרו בין כבוי, 3 שניות, 5 שניות או 10 שניות. הדבר מתאים במיוחד לצילום הקבוצתי שגם אתם רוצים להופיע בו.

ISO - יחידות ISO קובעות את רגישותו של חיישן האור של המצלמה. ככל שערך ה-ISO גבוה יותר, כך תהיה המצלמה רגישה יותר לאור. הדבר מועיל בתנאי תאורה חשוכים כאשר לא ניתן להשתמש במבזק. בחרו בערך ISO מתוך: אוטומטי, 100, 200, 400, 800, או 1600.

איכות - בחרו בין איכות מיטבית, מעולה, ורגילה. ככל שאיכות התמונה גבוהה יותר, כך גם היא תהיה חדה יותר, אך גודל הקובץ גדל גם הוא כתוצאה מכך, והתוצאה היא שתוכלו לשמור בזיכרון מספר תמונות קטן יותר.

פיצוי תאורה אחורית - כשאתם מצלמים על רקע בהיר מאד, האובייקט עשוי להיראות כהה. הפעילו אפשרות זו כדי לפצות על כך. כעת יהיה אובייקט הצילום בהיר יותר.

סגנון תצוגה מקדימה (מסך מלא או תמונה מלאה).

מצלמה פנימית/חיצונית - לצורך צילום דיוקן עצמי, עברו למצלמה הפנימית של LG KC910q. לפרטים אודות שימוש במצלמה

01

02

03

04

05

06

07

08

מצלמה

הפנימית, עיינו בעמ' 52.

הגדרות נוספות

זיכרון - בחרו אם לשמור את התמונות שלכם בזיכרון המכשיר או בזיכרון החיצוני.

תיוג מיקום GPS - בחרו אם להפעיל את אפשרות EXIF כדי לכתוב מידע בנוגע ל-GPS בתוך הצילום.

הגדלה - בחרו בין 8X, 4X או 16X.

ייצוב תמונה - מאפשר לכם לצלם ביציבות ללא השפעה מצד רעידה של המצלמה.

מיקוד - בחרו בצורת המיקוד הרצויה ע"י המצלמה. בחרו בין אוטומטי, ידני או זיהוי פנים.

צליל צמצם - בחרו אחד מתוך שלושה צלילי פתיחת צמצם או באפשרות הרביעית ללא צליל.

מסך רשת - בחרו בין לא פעיל, צלב פשוט או חלוקה לשלוש.

איפוס הגדרות - אפסו את כל הגדרות המצלמה.

עצה! לאחר שסגרתם את המצלמה, ישוּבו כל

ההגדרות למצב ברירת המחדל, למעט גודל התמונה ואיכות התמונה. כל ההגדרות שאינן ברירת המחדל יאופסו, לדוגמה גוון הצבע וערך ISO. בדקו אותן לפני הצילום הבא שלכם.

עצה! תפריט ההגדרות משולב בתוך כוונת

המצלמה, כך שאם תשנו רכיבים של צבע התמונה או איכותה תוכלו לראות את התמונה משתנית לנגד עיניכם בתצוגה המקדימה מאחורי תפריט ההגדרות.

01

02

03

04


05

06

07

08


בחירת גוון הצבע

- 1 מתוך כוונת המצלמה, הקישו על  בפינה השמאלית העליונה.
- 2 בחרו באפקט צבע מתפריט התצוגה המקדימה.
- 3 ישנם חמישה גווני צבע, לא פעיל (צבע רגיל), שחור-לבן, תשלילי, חום עתיק או פוסטר.
- 4 לאחר שבחרתם, ניתן לסגור את תפריט גווני הצבע ע"י בחירה בסמל 'הקודם', והמצלמה תהיה מוכנה לצילום.

עצה! ניתן לשנות תמונה שצולמה בצבע לשחור-לבן או לחום עתיק לאחר הצילום, אך לא ניתן לשנות תמונה שצולמה בשחור-לבן או בחום עתיק לצבע.


שינוי גודל התמונה

ככל שמספר הפיקסלים גדול יותר, כך גדל גם גודל הקובץ, כלומר התמונה צורכת יותר זיכרון. אם ברצונכם לשמור יותר תמונות בטלפון שלכם, תוכלו לשנות את מספר הפיקסלים כדי להקטין את גודל הקובץ.

- 1 מתוך כוונת המצלמה, הקישו על  בפינה השמאלית העליונה.
- 2 בחרו בגודל מתפריט התצוגה המקדימה.
- 3 בחרו בערך הפיקסלים מתוך שש האפשרויות המספריות: **8M: 3264x2448**, **5M: 2592x1944**, **3M: 2048x1536**, **2M: 1600x1200**, **1M: 1280x960**, **640x480**, **320x240** או בחרו את האפשרות שהוגדרה מראש:

אנשי קשר - ניתן לקבוע שהמצלמה תצלם תמונה בגודל המתאים לצירוף לאיש קשר.

מצלמה


- 4** כדי לחזור למצלמה העיקרית, הקישו על  ואז בחרו במצלמה חיצונית מתוך תפריט התצוגה המקדמה.


צפייה בתמונות שנשמרו

- 1** ניתן לגשת לתמונות שנשמרו מתוך מצב מצלמה. פשוט הקישו  והגלריה תופיע על המסך.

שימוש במצלמה הפנימית

במכשיר KC910q שלכם יש מצלמה פנימית ברזולוציה של 640x480 שנועדה לא רק לשיחות וידאו אלא גם לצילום.

- 1** על מנת להפעיל את המצלמה הפנימית, הקישו על  בחוצץ תצוגה מקדמה יש לבחור 'מצלמה פנימית'.
- 2** לאחר מספר שניות תוכלו לצפות בעצמכם בכוונת המצלמה. כדי לצלם, לחצו על לחצן הצמצם כרגיל.

עצה! למצלמה הפנימית פחות הגדרות, מכיוון שאין בה מבזק או ערכי ISO. עדיין ניתן לשנות את גודל ואיכות התמונה, את מצב סצנה, את אפקט הצבע, את איזון הלבן ולכוון את הטיימר הפנימי, על ידי הקשה על  באותה דרך שבה עשיתם זאת במצלמה העיקרית.



- 3** לאחר שצילמתם, יעמדו לפניכם לבחירה אותן האפשרויות שהוצעו לכם עבור הצילום במצלמה העיקרית.

מצלמת וידאו

צילום סרטון וידאו מהיר

- 1 לחצו לחיצה ארוכה על מקש המצלמה בצד הימני של הטלפון.
- 2 לחילופין, הקישו על  בכוונת המצלמה במצב מצלמה כדי לעבור למצב וידאו.

עצה! פתחו את מצלמת הווידאו במהירות על ידי לחיצה ארוכה על לחצן מצלמה.

- 3 כעת תופיע כוונת מצלמת הווידאו על המסך.
- 4 תוך שאתם מחזיקים את הטלפון בצורה אופקית, כוונו את העדשה אל נושא הווידאו.
- 5 לחצו על לחצן הצמצם פעם אחת כדי להתחיל בהקלטה.
- 6 הקלט יופיע בפינה העליונה של הכוונת והטיימר בתחתית יציג לפניכם את משך הווידאו שלכם.
- 7 כדי להשהות את ההקלטה, הקישו על  , וכדי לחזור ולהפעיל את ההקלטה בחרו ב- .

- 8 הקישו על במסך או לחצו על לחצן הצמצם פעם נוספת כדי להפסיק את ההקלטה.

01

02

03

04

05

06

07

08

מצלמת וידאו

לאחר צילום סרטון הוידאו

על המסך תופיע תמונה המייצגת את הוידאו שהקלטתם. שם סרטון הוידאו יופיע בחלקו התחתון של המסך לצד חמישה סמלים בצד ימין.



הקישו כדי לצלם עוד סרטון וידאו מיד.
סרטון הוידאו הנוכחי שלכם יישמר.

הקישו כדי להציג את סרטון הוידאו.

הקישו כדי לשלוח את סרטון הוידאו כהודעה, בדוא"ל או באמצעות **Bluetooth**. עיינו בעמ' 32 לפרטים אודות שליחת הודעה, ובעמ' 104 לפרטים אודות שליחה וקבלת קבצים באמצעות **Bluetooth**.

הקישו כדי לטעון את הבלוג שלכם.

הקישו כדי לצפות בגלריה של סרטוני הוידאו שנשמרו.

הקישו כדי למחוק את סרטון הוידאו שצילמתם זה עתה ואשרו על ידי הקשה על כן. כעת תופיע כוונת המצלמה שוב.

הכרת כוונת המצלמה

הגדרות - הקישו על סמל זה כדי לפתוח את תפריט ההגדרות. לפרטים אודות שימוש בהגדרות מתקדמות, עיינו בעמ' 56.

מצב וידאו - בחירה במצב וידאו.

גודל התמונה

הקודם - הקישו כאן כדי לשוב למסך הבית.



גלריה

חשיפה - לפרטים אודות כוונן החשיפה, עיינו בעמ' 56.

מהירות הקלטה

הפסק הקלטה

התחל הקלטה

זום - הקישו על  כדי להגדיל את התמונה או על  כדי להקטינה. לחילופין, תוכלו להשתמש בלחצני העוצמה הצדדיים.

עצה ניתן לסגור את כל אפשרויות הקיצורים כדי שמסך כוונת המצלמה יהיה ברור יותר. פשוט הקישו פעם אחת במרכז הכוונת. כדי להחזיר את האפשרויות, הקישו על המסך שוב.

01

02

03

04

05

06

07

08

מצלמת וידאו

צבע בעמ' 58.

איזון לבן - האיזון הלבן (white balance) מבטיח שהקטעים הלבנים בסרטים שלכם יהיו ריאליסטיים. כדי שהמצלמה תוכל לכוון את האיזון הלבן כהלכה, יתכן שיהיה עליכם לקבוע את תנאי התאורה. בחרו בין אוטומטי, בוקה, שמש, פלורנסט או מעונן.

איכות - בחרו בין איכות מיטבית, מעולה ורגילה. ככל שהאיכות גבוהה יותר, כך יהיה הוידאו חד יותר. גודל הקובץ גדל גם הוא כתוצאה מכך, והתוצאה היא שתוכלו לשמור בזיכרון מספר סרטוני וידאו קטן יותר.


משך זמן - קבעו מגבלה על משך סרטון הוידאו שלכם. בחרו בין רגיל (ללא הגבלה, בהתאם לזיכרון הפנימי במכשיר) לזיכרון החיצוני) לבין MMS כדי להגביל את הגודל כך שתוכלו לשלוח אותו כהודעת MMS.



עצה! אם בחרתם במשך הקלטה שנועד ל-MMS, נסו לבחור באיכות תמונה נמוכה יותר כדי שתוכלו לצלם סרטוני וידאו ארוכים יותר.

מצלמה פנימית/חיצונית - העבירו למצלמה הפנימית של LG KC910q כדי לצלם סרטון

כיוון החשיפה

החשיפה מציינת את ההפרש בין האור לצל בתמונה. תמונה בעלת ניגודיות נמוכה תראה מעורפלת, בעוד שתמונה בעלת ניגודיות גבוהה תיראה חדה הרבה יותר.

1 הקישו על .

2 הניעו את מציין הניגודיות לאורך השורה, לכיוון  לתמונה מעורפלת בעלת ניגודיות נמוכה יותר, ולכיוון  לתמונה חדה בעלת ניגודיות גבוהה יותר.

שימוש בהגדרות מתקדמות

מתוך כוונת המצלמה, הקישו על הגדרות כדי לפתוח את ההגדרות המתקדמות.

הגדרות תצוגה מקדימה

גודל וידאו - שנו את גודל סרטון הוידאו כדי לחסוך בזיכרון. עיינו בסעיף אודות שינוי גודל הוידאו בעמ' 57.

מצב סצנה - בחרו בין אוטומטי לבין לילה. אפקט צבע - בחרו גוון צבע שיתאים לווידיאו שאתם מצלמים. עיינו בסעיף אודות בחירת גוון

מדריך למשתמש | ב-LG KC910q

01

02

03

04

05

06

07

08


3 בחרו בערך פיקסלים מתוך חמש האפשרויות הבאות:

640x384(W)  אפשרות המסך


הרחב באיכות הגבוהה ביותר.

400x240(W)  גם כאן מדובר

במסך רחב, אך ברזולוציה נמוכה יותר.

640x480  מסך סטנדרטי בגודל

VGA.

320x240  גודל תמונה קטן יותר,

ולכן הקובץ יהיה קטן יותר. אפשרות נהדרת

לחיסכון בנפח הזיכרון.

176x144  גודל התמונה הקטן

יותר, ולכן הקובץ יהיה הקטן ביותר.

4 הקישו על סמל 'הקודם' כדי לשוב לכוונת.

⚠ אזהרה: תוכנת העריכה הנפלאה

שבמכשיר LG KC910q שלכם תואמת

לכל סוגי הוידאו למעט 640x384 ו-

640x480. אל תקליטו בפורמטים אלה אם

אתם מתכוונים לערוך את הסרטון.

וידאו של עצמכם. לפרטים אודות שימוש במצלמת הוידאו הפנימית, עיינו בעמ' 58.

הגדרות נוספות

זיכרון - בחרו אם לשמור את סרטוני הוידאו שלכם בזיכרון הטלפון או בזיכרון החיצוני.

קול - בחרו ב'השתק' כדי להקליט סרטון וידאו ללא קול.


מיקרופון נטול רעש - בחרו האם להפעיל או לא את אפשרות זו.

הגדלה - בחרו בין 8X, 4X או 16X.

איפוס הגדרות - אפסו את כל הגדרות מצלמת הוידאו.

שינוי גודל סרטון הוידאו

ככל שמספר הפיקסלים גדול יותר, כך גדל גם גודל הקובץ, כלומר הסרטון צורך יותר זיכרון. אם ברצונכם לשמור יותר סרטוני וידאו בטלפון שלכם, תוכלו לשנות את מספר הפיקסלים כדי להקטין את גודל הקובץ.


1 מתוך כוונת המצלמה, הקישו על  בפינה השמאלית העליונה.

2 בחרו בגודל וידאו מתפריט התצוגה המקדימה.

מצלמת וידאו

עצה! לתוכנת המרת פורמט וידאו, עיינו בתקליטור שקיבלתם עם KC910q שלכם.

בחירת גוון הצבע

- 1 מתוך כוונת המצלמה, הקישו על  בפניה השמאלית העליונה.
- 2 בחרו באפקט צבע מתפריט התצוגה המקדימה.
- 3 ישנם חמישה גווני צבע, לא פעיל (צבע רגיל), שחור-לבן, תשליל, חום עתיק או פוסטר.
- 4 הקישו על אפשרות גוון הצבע בה אתם מעוניינים.

עצה! ניתן לשנות סרטון וידאו שצולם בצבע לשחור-לבן או לחום עתיק לאחר הצילום, אך לא ניתן לשנות סרטון שצולם בשחור-לבן או בחום עתיק לצבע.

שימוש במצלמת הוידאו הפנימית

במכשיר LG KC910q שלכם יש מצלמה פנימית ברזולוציה של 320x240 שנועדה לא רק לשיחות וידאו אלא גם לצילום סרטוני וידאו.

- 1 כדי לעבור למצלמה הפנימית, הקישו על  ואז בחרו במצלמה פנימית מתוך תפריט התצוגה המקדימה.
- 2 לאחר מספר שניות תוכלו לצפות בעצמכם בכוונת המצלמה. כדי להתחיל ולצלם, לחצו על לחצן הצמצם כרגיל ולחצו פעם נוספת כדי להפסיק לצלם.
- 3 לאחר שצילמתם את הוידאו, יועמדו בפניכם אותן אפשרויות שהוצעו לכם לצילום הוידאו במצלמה העיקרית.
- 4 כדי לחזור למצלמה העיקרית, הקישו על  ואחר כך על מצלמה חיצונית.

עצה! עדיין ניתן לשנות את גודל ואיכות התמונה, את מצב סצנה, את אפקט הצבע ואת איזון הלבן על ידי הקשה על הגדרות באותה דרך שבה עשיתם זאת במצלמה הראשית.

01

02

03

04


05

06

07

08

צפייה בסרטוני הידאו שנשמרו

- 1 כוונת, הקישו על  .
- 2 כעת תופיע הגלריה על המסך.
- 3 הקישו על סרטון הידאו שבו אתם מעוניינים פעם אחת כדי להביאו לקדמת הגלריה. הקרנת סרטוני הידאו תתחיל באופן אוטומטי.

צפייה בסרטוני וידאו על מסך

הטלוויזיה


חברו את מכשיר KC910q שלכם לטלוויזיה באמצעות כבל היציאה לטלוויזיה.
הערה: כבל יציאת הטלוויזיה ניתן לרכישה באופן נפרד.

⚠ אזהרה: כל הפורמטים, למעט 320x240 וכן 176x144, מתאימים לצפייה בטלוויזיה.

התמונות וסרטוני הוידאו שלכם


צפייה בתמונות ובסרטוני הוידאו

שלכם

- 1 הקישו על  במסך התצוגה המקדימה של המצלמה.
- 2 כעת תופיע הגלריה על המסך.
- 3 הקישו על וידאו או תמונה כדי לפתוח אותם במלואם.



עצה! היזזו ימינה או שמאלה כדי לצפות בתמונות או בסרטוני וידאו אחרים.

עצה! כדי למחוק תמונה או סרטון וידאו, פתחו אותם ובחרו ב-, והקישו על כן לאישור.

שימוש בזום בעת צפייה בסרטוני וידאו

או בתמונות

כדי להגדיל את התמונה, לחצו על + שוב ושוב. כדי להקטינה, לחצו על -. השתמשו בתמונה הממוזערת בפינה הימנית התחתונה כדי להזיז את אזור המיקוד.

כוונן העוצמה בעת צפייה בסרטוני

וידאו

לכוונן עוצמת השמע בסרטון הוידאו בעת ההקרנה, הקישו על שורת העוצמה בציוד השמאלי של המסך. לחילופין ניתן להשתמש בלחצני העוצמה בצדו של הטלפון.

01

צפייה בתמונות כמצגת שקופיות

במצב מצגת שקופיות, יוצגו התמונות בגלריה כל אחת בתורה כמצגת שקופיות. בסרטוני וידאו לא ניתן לצפות בצורת מצגת שקופיות.

02

03

04

1 הקישו על התמונה שעמה אתם מעוניינים להתחיל את מצגת השקופיות.


05

06

07

08





2 בחרו ב-  בחרו ב-

3 כעת תתחיל מצגת השקופיות.

לכידת תמונה מסרטון וידאו

1 בחרו בסרטון הוידאו שממנו ברצונכם ללכוד תמונה.

2 הקישו על  כדי להשהות את הקרנת הוידאו במסגרת שאותה ברצונכם להמיר לתמונה, ובחרו ב-  בצדו הימני של המסך.

3 בחרו בשמור.

4 כעת תופיע התמונה על המסך עם שם התמונה שהוענק לה.





5 הקישו על התמונה, ואז על  כדי לשוב לגלריה.

6 התמונה תישמר בתיקיית 'התמונות שלי' ותופיע בגלריה. עליכם לצאת מהגלריה ואז לפתוח אותה שוב כדי שתוכלו לצפות בה.



⚠ אזהרה: מספר אפשרויות עלולות שלא לפעול אם קובץ המולטימדיה לא הוקלט על ידי הטלפון עצמו.

התמונות וסרטוני הוידאו שלכם

במצגת השקופיות ישנן מספר אפשרויות:


-  הקישו כדי לדלג על תמונות.
-  הקישו כדי להשהות את מצגת השקופיות בתמונה מסוימת.
-  הקישו שוב כדי להמשיך בהקרנה.
-  הקישו כדי להגדיל או להקטין את מהירות החלפת השקופיות.


קביעת תמונה כטפט


- 1** הקישו על התמונה שאותה אתם מעוניינים להגדיר כטפט פעמיים כדי לפתוח אותה.
- 2** הקישו על המסך כדי לפתוח את תפריט האפשרויות.
- 3** הקישו על .
- 4** כעת יעבור המסך למצב תצוגה אנכית. ניתן להגדיל או להקטין את התמונה ולהעביר את הקטע החתוך באמצעות התמונה הממוזערת בתחתית המסך.
- 5** אם אתם מרוצים מהבחירה, הקישו על .

עריכת תמונות


ישנן המון אפשרויות מרתקות לטפל בתמונותיכם, לשנותן, להוסיף להן או להפיה בהן מעט רוח חיים.

- 1** פתחו את התמונה שברצונכם לערוך והקישו על  כדי לפתוח את אפשרויות העריכה.
- 2** הקישו על הסמלים כדי לשנות את התמונה שלכם:

 חיתוך התמונה. בחרו באזור חיתוך ריבועי או מעגלי והניעו את האצבע על גבי המסך כדי לבחור את האזור הרצוי.

 ציור חופשי על גבי התמונה. בחרו בעובי הקו מתוך ארבע האפשרויות המוצגות וכן בצבע שברצונכם להשתמש בו.

T כתבו על התמונה. עיינו בהוספת טקסט לתמונה בעמ' 63.

 עטרו את התמונה בחותמות. בחרו מבין החותמות השונות והקישו על התמונה במקום שבו הייתם רוצים לראותן.

01

02

03

04

05

06

07

08



הוספת טקסט לתמונה

- 1 במסך העריכה, הקישו על **T**.
- 2 בחרו בחתימה כדי להוסיף טקסט לא-ממוסגר או בחרו באחת מבעות הדיבור.
- 3 הזינו את הטקסט שלכם באמצעות לוח המקשים והקישו על **בוצע**.
- 4 הזיזו את הטקסט על ידי נגיעה בו והזזתו למקום שבו תרצו שיופיע.

מחקו את השניים שערכתם בתמונה. ניתן לבחור בגודל המחק שברצונכם להשתמש בו.

שמרו את השניים שערכתם בתמונה. בחרו אם לשמור את השניים בעדכון, או כקובץ חדש. אם בחרתם בקובץ חדש, הזינו את שם הקובץ.

בטלו את הפעולה האחרונה או פעולות נוספות שביצעתם בתמונה.

עיינו בסעיף אודות הוספת אפקטים לתמונה בעמ' 64.


הקישו כדי לפתוח אפשרויות עריכה נוספות. ישנן עוד אפשרויות עריכה מתקדמות. עיינו בסעיפים אודות שינוי צורה של תמונה, הוספת דגש צבע והחלפת צבעים בתמונה בעמ' 65.

הדבר עוזר להתאים תמונה שצולמה בעזרת צבע או בהירות אוטומטיים.

הקישו כדי לחזור לגלריה.

התמונות וסרטוני הוידאו שלכם

הוספת אפקטים לתמונה

1 במסך העריכה, הקישו על .

2 בחרו אם להחיל אחת מתוך שמונה-עשרה האפשרויות הבאות על התמונה:



ייפוי פנים - זיהוי אוטומטי של פנים בתמונה והארתן.

אפקט מנהרה - גרמו לתמונה שלכם להיראות כאילו היא צולמה במצלמת Lomo ישנה!
תשליל צבע - תשליל (נגטיב) של הצבע המקורי.

שחור-לבן - אפקט של שחור-לבן.

חום עתיק אפקט של חום עתיק.

טשטוש - הפעילו אפקט של טשטוש.

חדד - העבירו את הסמן לאורך השורה כדי לחדד את המיקוד של התמונה. בחרו בסמל  אישור כדי להחיל את השינויים, או ב-  כדי לבטלם.

עמעום פסיפס - הקישו כדי להחיל אפקט של עמעום מפוקסל על התמונה.

ציור שמן - אפקט של ציור שמן.

סקיצה - החילו אפקט שיגרום לתמונה להיראות כמו סקיצה.

הבלט - אפקט של תבליט.

סולרזציה - שנו את אפקט החשיפה לאור.

חי - אפקט של בהירות וברק.

אור ירח - שנו את האור כך שייראה כמו אור ירח.

עתיק - אפקט של תצלום עתיק.

זוהר - אפקט של קרן אור.





סרטים מצויירים - אפקט של סרטים מצויירים.

צבעי מים - החילו אפקט שיגרום לתמונה להיראות כמו ציור בצבעי מים.



3 כדי לבטל אפקט כלשהו, פשוט הקישו על .

עצה! ניתן להוסיף לכל תמונה יותר מאפקט אחד.

חיתוך תמונה

- 1 במסך העריכה, הקישו על .
 - 2 בחרו בצורה שבה הייתם מעוניינים לחתוך את התמונה.
 - 3 גררו את התיבה מעל האזור שברצונכם לחתוך.
 - 4 אם אתם מרוצים מהבחירה, הקישו על .
- ### שינוי צורה של תמונה
- אפשרות זו מתאימה במיוחד לשינוי הבעות הפנים של חברים או פשוט לעיוות תמונות לצרכים אמנותיים.
- 1 במסך העריכה, הקישו על .
 - 2 בחרו בשינוי צורה וכעת יופיעו על התמונה ארבעה צלבים.
 - 3 הזיזו את הצלבים על גבי התמונה עד שיהיו מעל החלקים שברצונכם לשנות. לדוגמה, אם ברצונכם לשנות תווי פנים, הציבו צלבים משני צידי העיניים ומשני צידי השפתיים.
 - 4 בחרו בפרצוף המייצג את הדרך שבה אתם רוצים לשנות את התמונה.
 - 5 בחרו ב-  כדי לשמור את השינויים.

הוספת דגש צבע לתמונה

- 1 במסך העריכה, הקישו על .
- 2 בחרו בדגש צבע.
- 3 בחרו בחלק מן התמונה. כעת יופיע קו סימון מסביב לכל העצמים באזור שבחרתם שיש להם צבע זהה או דומה.
- 4 לדוגמה, צבע השיער של מישהו או צבע המעיל שלהם.
- 4 שנו את חוזק דגש הצבע על ידי הקשה על ואז הזזת הסמן מעלה ומטה על שורת החוזק.
- 5 הקישו על אישור.
- 6 כל הצבעים יימחקו מהתמונה, למעט מהאזור שסימנתם לצורך הוספת דגש צבע.
- 7 בחרו ב-  כדי לשמור את השינויים.

01

02

03

04

05



06

07

08

התמונות וסרטוני הידאו שלכם

החלפת צבעים בתמונה

- 1 במסך העריכה, הקישו על .
- 2 בחרו בהחלפת צבע.
- 3 בחרו בחלק מן התמונה. כעת יופיע קו סימון מסביב לכל העצמים באזור שבחרתם שיש להם צבע זהה או דומה.
- 4 לדוגמה, צבע השיער של מישהו או צבע המעיל שלהם.
- 4 הקישו על  ובחרו בצבע כלשהו.
- 5 לחצו על אישור.
- 6 צבע האזור בתמונה שנבחר לצורך הוספת דגש צבע ישתנה לזה שנבחר לצורך החלפת צבעים.
- 7 בחרו ב-  כדי לשמור את השינויים.

עריכת סרטוני וידאו


תכונות העריכה זמינות עבור כל סוגי הידאו, למעט 640x384 וכן 640x480.

אל תצלמו בפורמטים אלו אם אתם מתכוונים לערוך את סרטוני הידאו שלכם.

קיצוץ משך סרטוני הידאו שלכם

- 1 פתחו את הידאו שברצונכם לערוך, בחרו ב-  והקישו על המסך כדי לפתוח את האפשרויות הרלוונטיות.
- 2 בחרו ב-  ובחרו בקיצוץ.
- 3 הקישו על  וסמנו את נקודות ההתחלה והסיום החדשות באמצעות .
- 4 הקישו על  כדי לוודא שאתם מרוצים מהעריכה שעשיתם.
- 5 הקישו על , או, לחילופין, על  כדי לשוב לגרסה ולבטל את השינויים.


01

5 הקישו על  כדי לבחור כיצד הסרטונים יתמזגו זה עם זה: ללא, פייד, פאן זום, אליפסה, חשיפה, תריס, לוח דמקה, דיזולב, פיצול או צורת יהלום.

02

03

04

6 הקישו על  ואחר כך על כן כדי לשמור את הוידאו החדש הממוזג. בחרו אם לשמור את השינויים בקובץ המקורי, או כקובץ חדש.

05



06


7 חזרו על הצעדים הללו למיזוג סרטונים נוספים.

07



08

מיזוג תמונה עם וידאו

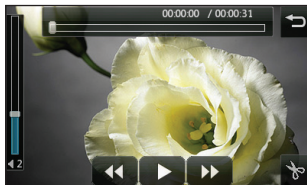- 1** פתחו את הוידאו שברצונכם לערוך, בחרו ב-  והקישו על המסך כדי לפתוח את האפשרויות הרלוונטיות.
- 2** בחרו ב-  ובחרו **במיזוג תמונה**.
- 3** כעת תיפתח תיקיית 'התמונות שלי'. בחרו בתמונה שברצונכם למזג לתוך סרטון הוידאו והקישו על **בחר**.



מיזוג שני סרטוני וידאו

- 1** פתחו את הוידאו שברצונכם לערוך, בחרו ב-  והקישו על המסך כדי לפתוח את האפשרויות הרלוונטיות.
- 2** בחרו ב-  ובחרו **במיזוג וידאו**.
- 3** כעת תיפתח תיקיית 'סרטוני הוידאו שלי'. בחרו בסרטון הוידאו שאותו ברצונכם למזג.
- 4** הקישו על התמונה והזיזו אותה כדי למזג עם סוף סרטון הוידאו או עם תחילתו.


התמונות וסרטוני הוידאו שלכם







- 4 הקישו על התמונה והזיזו אותה כדי למזג עם סוף סרטון הוידאו או עם תחילתו.
 - 5 הקישו על  כדי לבחור כיצד התמונה והסרטון יתמזגו זה עם זה: ללא, פייד, פאן זום, אליפסה, חשיפה, תריס, לוח דמקה, דיזולב, פיצול או צורת יהלום.
 - 6 הקישו על שמור ואחר כך על כן. בחרו אם לשמור את השינויים בקובץ המקורי, או כקובץ חדש.
 - 7 חזרו על הצעדים הללו למיזוג תמונות נוספות.
- ### הוספת טקסט לוידאו
- 1 פתחו את הוידאו שברצונכם לערוך, בחרו ב-||
הקישו על המסך כדי לפתוח את האפשרויות הרלוונטיות.
 - 2 בחרו ב-  ובחרו בשכבת-על של טקסט.
 - 3 הזינו את הטקסט שלכם באמצעות לוח המקשים והקישו על שמור.
 - 4 הקישו על  וסמנו מתי ברצונכם שהטקסט יופיע באמצעות .
 - 5 הקישו על האזור במסך שבו ברצונכם שהטקסט יופיע.
- 6 הקישו על  כדי לסמן מתי ברצונכם שהטקסט ייעלם.
 - 7 הקישו על  כדי לוודא שאתם מרוצים משכבת הטקסט שיצרתם.
 - 8 הקישו על  ואחר כך על כן. בחרו אם לשמור את השינויים בקובץ המקורי, או כקובץ חדש.
 - 9 חזרו על הצעדים הללו להוספת טקסט נוסף.

שכבת-על של תמונה

- 1 פתחו את הוידאו שברצונכם לערוך, בחרו ב- והקישו על המסך כדי לפתוח את האפשרויות הרלוונטיות.
- 2 בחרו ב- ובחרו בשכבת-על של תמונה.
- 3 כעת תיפתח תיקיית 'התמונות שלי'. בחרו בתמונה שברצונכם להוסיף כשכבה לטרטון הוידאו שלכם.
- 4 הקישו על  וסמנו מתי ברצונכם שהתמונה תופיע באמצעות .
- 5 הקישו על האזור במסך שבו ברצונכם שהתמונה תופיע. אם התמונה גדולה מדי היא תכסה את כל המסך ולא רק את האזור שנבחר.
- 6 הקישו על  כדי לסמן מתי ברצונכם שהתמונה תעלם.
- 7 הקישו על  כדי לוודא שאתם מרוצים משכבת התמונה שיצרתם.

- 8 הקישו על  ואחר כך על כן. בחרו אם לשמור את השינויים בקובץ המקורי, או בקובץ חדש.
- 9 חזרו על הצעדים הללו להוספת תמונות נוספות.

הוספת הקלטת קול

- 1 פתחו את הוידאו שברצונכם לערוך, בחרו ב- והקישו על המסך כדי לפתוח את האפשרויות הרלוונטיות.
- 2 בחרו ב- ובחרו בהקלטת קול.
- 3 איכות השמע המקורית תושפע מכך שהוספתם הקלטת קול. הקישו על כן לאישור.
- 4 הקישו על  כדי לצפות בסרטון הוידאו. כשאתם מגיעים לחלק שמעליו ברצונכם להקליט את הקול (voice over), הקישו על .

01

02

03

04

05

06

07

08

התמונות וסרטוני הוידאו שלכם

3 כעת תיפתח תיקיית 'הצילימים שלי'. בחרו ברצועה שברצונכם להוסיף לסרטון הוידאו שלכם.

4 הסאונד המקורי של הוידאו שלכם יימחק. הקישו על כן לאישור.

5 אם משך רצועת השמע קצר ממשך סרטון הוידאו, החליטו אם להשמיעו פעם אחת או לחזור עליו.

6 בחרו אם לשמור את השינויים בקובץ המקורי, או כקובץ חדש.


משך זמן סרטוני וידאו

1 פתחו את הוידאו שברצונכם לערוך, בחרו ב-|| והקישו על המסך כדי לפתוח את האפשרויות הרלוונטיות.

2 בחרו ב-  ובחרו במשך זמן.


3 בחרו באחת מאפשרויות המהירות הבאות:
x4, x2, x1/4, x1/2

4 בחרו אם לשמור את השינויים בקובץ המקורי, או כקובץ חדש.

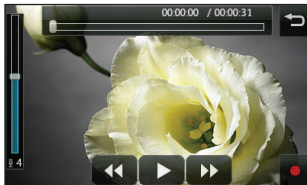

5 הקישו על כדי להפסיק את ההקלטה או ההשמעה.

6 הקישו על  כדי לוודא שאתם מרוצים מהקלטת הקול שיצרתם.

7 לשמירה, הקישו על  ואחר כך על כן. בחרו אם לשמור את השינויים בקובץ המקורי, או כקובץ חדש.

8 חזרו על הצעדים הללו להוספת הקלטות קול נוספות לסרטון הוידאו.

הוספת פסקול לסרטון וידאו

1 פתחו את הוידאו שברצונכם לערוך, בחרו ב-|| והקישו על המסך כדי לפתוח את האפשרויות הרלוונטיות.

2 בחרו ב-  ובחרו בדיבוב קול.

01

02

03

04


05

06

07


08

הוספת אפקט עמנום

- 1 פתחו את הוידאו שברצונכם לערוך, בחרו ב-|| והקישו על המסך כדי לפתוח את האפשרויות הרלוונטיות.
- 2 בחרו ב-  ובחרו באפקט עמנום.
- 3 בחרו אם לשמור את השינויים בקובץ המקורי, או כקובץ חדש.
- 4 כעת יהיה לסרטון הוידאו שלכם אפקט פייד אין בתחילתו, ואפקט פייד אאוט בסופו.

מולטימדיה

ניתן לשמור קבצי מולטימדיה בזיכרון הטלפון שלכם כדי שתהיה לכם גישה נוחה לכל התמונות, הצלילים, סרטוני הוידאו והמשחקים שלכם. ניתן גם לשמור את הקבצים שלכם על כרטיס זיכרון. היתרון בשימוש בכרטיס זיכרון הוא בכך שאתם מפנים נפח זיכרון בטלפון שלכם.

כדי לפתוח את תפריט מולטימדיה, הקישו על  ואחר כך על מדיה. הקישו על הפריטים שלי כדי לפתוח את רשימת התיקיות המכילות את כל קבצי המולטימדיה שלכם.

תמונות

תיקיית התמונות שלי מכילה רשימת תמונות כולל תמונות ברירת מחדל שנטענו מראש לטלפון, תמונות שהורדתם ותמונות שצילמתם במצלמת הטלפון.

תפריט אפשרויות התמונות שלי

האפשרויות הזמינות עבורכם בתיקיית התמונות שלי תלויות בסוג התמונה שבחרתם. כל האפשרויות יהיו זמינות עבור התמונות שצילמתם במצלמת הטלפון, אך רק השתמש כו, הדפס, מייין לפי או מנהל הזיכרון זמינות עבור תמונות ברירת המחדל.

עצה! כשאתם מביטים בתמונה, העבירו את הטלפון למצב תצוגת רוחב כדי להציג אפשרויות נוספות בפניה הימנית של המסך. בחרו בין האפשרויות שלח, טען, הגדר כמסך בית, ערוך ומחק.

שלח - שלחו את התמונה לחבר/ה.

ערוך - באפשרותכם לערוך את התמונה.

העבר - העבירו תמונה מזיכרון הטלפון לכרטיס הזיכרון וחזרה.

העתק - העתיקו תמונה מזיכרון הטלפון לכרטיס הזיכרון וחזרה.

01

02

03

04

05

06



07

08

4 אם בחרתם בהודעה או בדוא"ל, תצורף התמונה שלכם להודעה ותוכלו לכתבה ולשלוחה באופן רגיל. אם בחרתם ב-Bluetooth, תתבקשו להפעיל את Bluetooth והטלפון שלכם יחפש מכשיר כדי לשלוח את התמונה אליו.

שימוש בתמונה

ניתן להשתמש בתמונות כטפטים וכשומרי מסך, ואף כדי לזהות מי המתקשר.

- 1** הקישו על  ואחר כך על מדיה.
- 2** הקישו על הפריטים שלי ואז בחרו בתמונות שלי.
- 3** בחרו בתמונה והקישו על .
- 4** הקישו על השתמש כ- ובחרו מתוך: ערכת נושא למסך ראשי - קבעו כטפט למסך הבית. תמונות אנשי קשר - הקצו תמונות לאנשים מסוימים ברשימת אנשי הקשר שלכם כך שהן יוצגו כאשר הם מתקשרים אליכם.

השתמש כ- בחרו תמונה כערכת נושא למסך הראשי, תמונה לאיש קשר, שיחה נכנסת, שיחה יוצאת, הפעלה או כיבוי.

שנה שם - שנו שם של תמונה.

ערוך - באפשרותכם לערוך את התמונה.

Smart light - שנו את תאורת התמונה

שלכם באופן אוטומטי כדי לשפר אותה.

הדפס - הדפיסו את התמונה שנבחרה על מדפסת התומכת ב-Pictbridge או ב-Bluetooth.

מצגת שקופיות - צפו בתמונותיכם במצגת שקופיות.

מידע קובץ - צפו במידע אודות הקובץ.

שליחת תמונה

- 1** הקישו על  ואחר כך על מדיה.
- 2** הקישו על הפריטים שלי ואז בחרו בתמונות שלי.
- 3** בחרו בתמונה שברצונכם לשלוח והקישו על **שלה**. בחרו מתוך הודעה, דוא"ל, Bluetooth או בלוג.

מולטימדיה

שיחה נכנסת - קבעו כתמונה שתופיע במהלך שיחות נכנסות.

שיחה יוצאת - קבעו כתמונה שתופיע במהלך שיחות יוצאות.

הפעלה - קבעו כתמונה שתופיע כאשר אתם מדליקים את הטלפון.


כיבוי - קבעו כתמונה שתופיע כאשר אתם מכבים את הטלפון.

שיפור התמונות שלכם

ניתן לשפר תמונה שצולמה באור חלש מבלי לפגוע באיכות התמונה.

1 הקישו על  ואחר כך על **מדיה**.

2 הקישו על **הפריטים שלי** ואז בחרו **בתמונות שלי**.


3 בחרו בתמונה והקישו על  ואחר כך בחרו **Smart Light**.

4 התאורה תשתנה באופן אוטומטי ותוכלו לשמור את התמונה החדשה.

הדפסת תמונה

1 הקישו על  ואחר כך על **מדיה**.

2 הקישו על **הפריטים שלי** ואז בחרו **בתמונות שלי**.

3 בחרו בתמונה והקישו על .

4 הקישו על **הדפס** ואחר כך בחרו בין

Bluetooth לבין **PictBridge**.

עצה! ניתן להדפיס באמצעות Bluetooth או על ידי חיבור למדפסת PictBridge.

העברה או העתקה של תמונות

ניתן להעביר או להעתיק תמונות בין זיכרון הטלפון לכרטיס הזיכרון. תוכלו לעשות זאת כדי לפנות זיכרון באחד משני אמצעי האחסון הללו, או כדי לשמור על התמונות שלכם מפני אובדן.

1 הקישו על  ואחר כך על **מדיה**.

2 הקישו על **הפריטים שלי** ואז בחרו **בתמונות שלי**.

3 הקישו על .


4 בחרו בהעבר או בהעתק ובחרו בתמונה אותן ברצונכם להעתיק או להעביר.

יצירת מצגת שקופיות

אם ברצונכם לצפות בכל התמונות בטלפון שלכם, תוכלו ליצור מצגת שקופיות שתחסוך מכם את הצורך לפתוח ולסגור כל תמונה בנפרד.

1 הקישו על  ואחר כך על מדיה.

2 הקישו על הפריטים שלי ואז בחרו באחת התמונות.

3 הקישו על  ואחר כך על מצגת שקופיות.

בדיקת מצב הזיכרון

ניתן לבדוק בכמה נפח זיכרון השתמשתם וכמה נשאר לשימושכם.

1 הקישו על  ואחר כך על מדיה.

2 הקישו על הפריטים שלי ואז בחרו בתמונות שלי.

3 הקישו על  ואז על מידע זיכרון.

4 בחרו בין זיכרון הטלפון לבין זיכרון חיצוני.

הערה: אם אין בטלפון שלכם כרטיס זיכרון, לא תוכלו לבחור באפשרות זיכרון חיצוני.

צלילים

תיקיית הצלילים שלי מכילה את הצלילים שהורדתם, את צלילי ברירת המחדל ואת הקלטות הקול. מכאן תוכלו לנהל ולשלוח רינגטונים או לקבוע צלילים כרינגטונים.

שימוש בצלילים

1 הקישו על  ואחר כך על מדיה.

2 הקישו על הפריטים שלי ואז בחרו בצלילים שלי.

3 בחרו בצלילי ברירת מחדל או בהקלטות קול.

4 בחרו בצליל והוא יושמע מייד.

5 הקישו על  ובחרו בהשתמש כ-.

6 בחרו בין רינגטון קולי, רינגטון וידאו, צליל חודעה, הפעלה, או כיבוי.

01

02

03

04

05

06

07

08

מולטימדיה

סרטוני וידאו

תיקיות סרטוני הוידאו שלי מכילה רשימה של כל סרטוני הוידאו שהורדתם או שצילמתם באמצעות הטלפון שלכם.

צפייה בוידאו

1 הקישו על  ואחר כך על מדיה.

2 הקישו על הפרטים שלי ואז בחרו בסרטוני הוידאו שלי.

3 בחרו בוידאו לצפייה.

מחק - מחקו את סרטון הוידאו.

הקישו על השתמש כ- ובחרו מתוך רינגטון קולי או רינגטון וידאו. (יכולה להיות הגבלה בתלות בגודל מסגרת הוידאו).

ערוך - ניתן לערוך את שם הקובץ.

מידע קובץ - צפו במידע הקובץ: שם, גודל, תאריך, שעה, סוג, משך, ממדים, הגנה וזכויות יוצרים.

הערה: ככל יציאת הטלוויזיה ניתן לרכישה באופן נפרד.

שליחת וידאו קליפ

1 בחרו סרטון וידאו והקישו על .

2 הקישו על שלח ובחרו מתוך הודעה, דוא"ל או

Bluetooth או **YouTube**.

3 אם בחרתם בהודעה או בדוא"ל, יצורף הוידאו

קליפ שלכם להודעה ותוכלו לכתבה ולשלחה

באופן רגיל. אם בחרתם ב-**Bluetooth**,


תתבקשו להפעיל את Bluetooth והטלפון

שלכם יחפש מכשיר כדי לשלוח את הוידאו

קליפ אליו.

עצה! KC910q תומך בהשמעה בפורמטים Xvid ו-DivX כדי להבטיח זמינות תוכן מרבית. לפרטים נוספים, עיינו בעמוד 99.

אפשרויות בעת שהיית הוידאו

הקישו על  במצב השהייה ובחרו מתוך:

צלם - צלמו את המסגרת המוקפאת כתמונה בודדת.

שלח - שלחו את הוידאו כהודעה, דוא"ל, או Bluetooth.

01

שימוש במשחקים
1 הקישו על  ואחר כך על מדיה.

02

2 הקישו על משחקים ויישומים ואחר כך על

03

המשחקים והיישומים שלי ועל משחקים.

04

3 בחרו במשחק והקישו עליו כדי לפתחו.

05

שימוש בתפריט אפשרויות משחק

06

מתוך תיקיית 'המשחקים והיישומים' מוצעות לכם

07

האפשרויות הבאות:

08

צור תיקייה חדשה - צרו תיקייה בתוך תיקיית

המשחקים והיישומים.

מיון לפי - מיינו את המשחקים והיישומים לפי

תאריך, גודל או שם.

מנהל הזיכרון - צפו במצב הזיכרון.

פרטי קובץ - צפו במידע אודות המשחק.

משחקים ויישומים

ניתן להוריד משחקים ויישומים לטלפון שלכם כדי

לבדר אתכם בזמנכם הפנוי.

הורדת משחק

1 הקישו על  ואחר כך על שירותים.

2 הקישו על דפדפן.

3 הקישו על סימניית.

4 ודפדפו לסימניית 'משחקים'.

5 כעת תחברו לפורטל האינטרנט ושם תוכלו

למצוא משחקים להורדה.

עצה! כדי למחוק קובץ כלשהו ב'פריטים שלי',

הקישו על  ואז על מחק.

מולטימדיה

תוכן Flash

תיקיית 'תוכן Flash' מכילה את כל קבצי SWF - קבצי ברירת המחדל ואלה שהורדתם בעצמכם.

צפייה בקבצי SWF/ SVG

- 1 הקישו על  ואחר כך על מדיה.
- 2 הקישו על הפריטים שלי ואחר כך על תוכן **.Flash**.
- 3 בחרו בקובץ לצפייה.

אפשרויות צפייה בקבצי SWF/ SVG

הקישו על  ובחרו מתוך:

השתק - השתיקו את הקול.

שלח - שלחו את הקובץ כהודעה, דוא"ל או דרך **.Bluetooth**


טפט - הפכו את הקובץ לטפט שלכם.

פרטי קובץ - צפו בפרטי הקובץ; שם, גודל, תאריך, שעה, סוג והגנה.

מסמכים

מתוך 'מסמכים' בתוך 'הפריטים שלי' תוכלו לצפות בכל קבצי המסמכים שלכם. מאן ניתן לצפות בקבצי אקסל, פאוארפוינט, וורד, טקסט וכן PDF.

צפייה בקובץ

- 1 הקישו על  ואחר כך על מדיה.
- 2 הקישו על הפריטים שלי ואחר כך על מסמכים.
- 3 בחרו במסמך והקישו על הצג.

העברת קבצים לטלפון

Bluetooth הוא ככל הנראה הדרך הטובה ביותר להעברת קבצים מהמחשב לטלפון שלכם. תוכלו גם להשתמש ב-LG PC Suite דרך כבל הסינכרון שלכם; לפרטים נוספים, עיינו בעמ' 92. להעברה באמצעות Bluetooth:


- 1 ודאו ש-Bluetooth בטלפון ובמחשב שלכם פועל ושהם נראים זה לזה.
- 2 השתמשו במחשב כדי לשלוח את הקובץ באמצעות Bluetooth.
- 3 לאחר שהקובץ נשלח אליכם, תצטרכו לאשר את קבלתו לטלפון שלכם על ידי הקשה על כן.
- 4 הקובץ אמור להופיע בתיקיות מסמכים או אחרים שלכם.

אחרים

תיקיית אחרים משמשת לשמירת קבצים שאינם תמונות, צלילים, סרטוני וידאו, משחקים או יישומים. השימוש בה דומה לזה של תיקיית מסמכים. יתכן שלאחר העברת קבצים מהמחשב לטלפון שלכם, הם יופיעו בתיקיית אחרים במקום בתיקיית מסמכים.

אם זה קרה, תוכלו להעבירם.

כדי להעביר קובץ מ'אחרים' ל'מסמכים':

- 1 הקישו על  ואחר כך על מדיה.
- 2 הקישו על הפרטים שלי ואחר כך על אחרים.
- 3 בחרו בקובץ והקישו על .
- 4 הקישו על העבר, ואז הקישו על העבר שוב.

01

02

03

04

05

06


07

08

מולטימדיה


יצירת סרט

- 1 הקישו על  ואחר כך על מדיה.
- 2 הקישו על **Muvee studio**.
- 3 הקישו על  כדי להוסיף תמונה. הקישו על התמונות שברצונכם לכלול ובחרו בהוסף.
- 4 הקישו על כרטיסיית הסגנונות בחלק העליון של המסך כדי לבחור סגנון לסרט שלכם.
- 5 הקישו על כרטיסיית הצלילים בתחתית המסך כדי לשנות את הצליל, כגון הקלטת קול.
- 6 הקישו על לחצן  כדי לראות את מה שיצרתם.
- 7 הקישו על  ואז על סדר השמעה כדי לשנות את הסדר.

- 8 הקישו על  ואז על מיקום לשמירה כדי לבחור היכן לשמור את הסרט, ועל משך כדי לבחור בין ארוך לקצר.
- 9 כדי לשמור את הסרט שלכם, הקישו על סמל השמירה בפינה השמאלית העליונה.



מוסיקה

- במכשיר LG KC910q שלכם יש נגן מוסיקה מובנה כך שתוכלו להשמיע את כל השירים האהובים עליכם. לפתיחת נגן המוסיקה, הקישו על  , ואז על מדיה ואז על מוסיקה. מכאן תוכלו לגשת למספר תיקיות:
- השמעו לאחרונה - תוכלו להאזין לכל השירים שהשמעתם לאחרונה.
- כל הרצועות - מכילה את כל השירים שיש לכם בטלפון.
- אמנים - צפו באוסף המוסיקה שלכם על פי אמנים.
- אלבומים - צפו באוסף המוסיקה שלכם על פי אלבומים.
- ז'אנרים - צפו באוסף המוסיקה שלכם על פי ז'אנרים.
- רשימות השמעה - מכילה את כל רשימות ההשמעה שיצרתם.
- השמעה בסדר אקראי - האזינו למוסיקה שלכם בסדר אקראי.

העברת מוסיקה לטלפון

- הדרך הקלה ביותר להעביר מוסיקה לטלפון שלכם היא באמצעות Bluetooth או כבל הסינכרון שלכם.
- ניתן גם להשתמש ב-LG PC Suite ;
לפרטים, עיינו בעמ' 92. להעברה באמצעות Bluetooth:
- 1 ודאו ש- Bluetooth פועל בשני המכשירים ושהם נראים זה לזה.
 - 2 בחרו בקובץ מוסיקה במכשיר האחר ובחרו לשלוח אותו באמצעות Bluetooth.
 - 3 לאחר שהקובץ נשלח אליכם, תצטרכו לאשר את קבלתו לטלפון שלכם על ידי הקשה על כן.
 - 4 הקובץ אמור להופיע תחת מוסיקה < כל הרצועות.

01

02

03

04

05

06


07

08

מולטימדיה


השמעת שיר

- 1 הקישו על  ואחר כך על מדיה.
- 2 הקישו על מוסיקה ואז על כל הרצועות.
- 3 בחרו בשיר שברצונכם להשמיע והקישו על השמע.
- 4 הקישו על  כדי להשהות את השמעת השיר.
- 5 הקישו על  כדי לעבור לשיר הבא.
- 6 הקישו על  כדי לעבור לשיר הקודם.
- 7 הקישו על  כדי לחזור לתפריט מוסיקה.

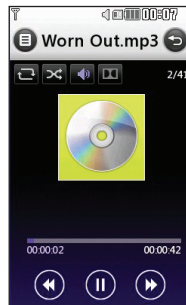

עצה! KC910q הוא הטלפון הראשון בעולם המשתמש ב-Dolby Mobile להשמעת מוסיקה, ובכך מוסיף את האיכות המצוינת של Dolby לטלפון הנייד שלכם.

אפשרויות בזמן השמעת מוסיקה

- הקישו על  ובחרו מתוך:
 - מזער - העלימו את מסך גגן המוסיקה כך שתוכלו להמשיך ולהשתמש בטלפון שלכם כרגיל.
 - עבור למוסיקה שלי - חזרה לתפריט מוסיקה.
 - פריט חזותי - בחרו פריט חזותי.
 - הוסף לרשימת השמעה - הוסיפו את הרצועה לאחת מרשימות ההשמעה שלכם.
 - שלה - שלחו את השיר החודעה או דרך Bluetooth.
 - מחק - מחקו את השיר.
- השתמש כ- - השתמשו בשיר כרינגטון קולי, רינגטון וידאו, צליל הודעה, הפעלה, או כיבוי.
- מידע קובץ - צפו במידע הקובץ: שם, גודל, תאריך, שעה, סוג, משך, הגנה וזכויות היוצרים של השיר.

01

כדי להשמיע רשימת השמעה, בחרו בה והקישו על הפעל.

02

הערה: כדי להוסיף רשימת השמעה נוספת, הקישו על ☰ ואחר כך על הוסף רשימת השמעה.

03

04

עריכת רשימת השמעה

05

מדי פעם ודאי תרצו להוסיף שירים חדשים או למחוק שירים מתוך רשימת השמעה. במקרה זה, תוכלו לערוך את רשימת ההשמעה.

06

1 הקישו על 🎵 ואחר כך על מדיה.

07

2 הקישו על מוסיקה ואחר כך על רשימות השמעה.

08

3 בחרו ברשימת ההשמעה.

4 הקישו על ☰ ובחרו בין:

הוסף שירים חדשים - הוסיפו שירים חדשים לרשימת ההשמעה. סמנו את השירים שברצונכם להוסיף והקישו על **בוצע**.

שנה סדר הרשימה - שנו את סדר ההשמעה של רשימת ההשמעה.

עצה! כדי לשנות את עוצמת ההשמעה בעת



האזנה למוסיקה, הקישו על

יצירת רשימת השמעה

תוכלו ליצור רשימות השמעה משלכם על ידי בחירה במבחר שירים מתוך תיקיית כל הרצועות.

1 הקישו על 🎵 ואחר כך על מדיה.

2 הקישו על מוסיקה ואחר כך על רשימות השמעה.


3 הקישו על הוסף רשימת השמעה, הזינו את שם רשימת ההשמעה והקישו על **שמור**.

4 כעת תוצג תיקיית 'כל הרצועות'. הקישו על כל השירים שברצונכם לכלול ברשימת ההשמעה שלכם; ליד שמות הרצועות שלהם יופיע סימן וי.

5 הקישו על **בוצע**.

מולטימדיה



שלח - שלחו שיר כהודעה או באמצעות Bluetooth.

הסר מהרשימה - הסירו שיר מרשימת ההשמעה. הקישו על  לאישור.

מנהל הזיכרון - צפו במצב הזיכרון.

הסר הכול - הסר את כל הרצועות מרשימת ההשמעה.

מחיקת רשימת השמעה

- 1 הקישו על  ואחר כך על מדיה.
- 2 הקישו על מוסיקה ואחר כך על רשימות השמעה.
- 3 הקישו על  ואחר כך על מחק או על מחק הכול כדי למחוק את כל רשימות ההשמעה.

האזנה לרדיו

במכשיר LG KC910q שלכם יש רדיו FM כדי שתוכלו להאזין לתחנות האהובות עליכם כשאתם בתנועה.

הערה: כדי להאזין לרדיו, יהיה עליכם להכניס אוזניות. הכניסו אותן לשקע האוזניות (אותו השקע שאליו אתם מחברים את המטען).

חיפוש תחנות

ניתן לשמור תחנות רדיו בטלפון על ידי חיפוש אחריהן באופן ידני או אוטומטי. הן יישמרו תחת מספרי ערוצים ספציפיים כדי שלא תצטרכו להמשיך ולחפש. ניתן לשמור עד 50 ערוצים בטלפון שלכם.

כדי לחפש באופן אוטומטי:

- 1 הקישו על  ואחר כך על מדיה.
- 2 הקישו על רדיו FM ואחר כך על .

01

02

03

04

05

06

07

08



האזנה לרדיו

1 הקישו על  ואחר כך על מדיה.

2 הקישו על רדיו FM ואחר כך על מספר הערוץ שברצונכם להאזין לו.

עצה! כדי לשפר את קליטת הרדיו, האריכו את כבל האוזנייה המשמש גם כאנטנת רדיו.

3 הקישו על סריקה אוטומטית ואחר כך על כן. לתחנות שנמצאו יוקצו באופן אוטומטי מספרי ערוצים בטלפון שלכם.

הערה: ניתן גם לכוונן תחנות על ידי  וכן  המוצגים לצד תדר הרדיו.

איפוס ערוצים

1 הקישו על  ואחר כך על מדיה.

2 הקישו על רדיו FM ואחר כך על .


3 בחרו באיפוס כדי לאפס את הערוץ הנוכחי, או באיפוס הכול כדי לאפס את כל הערוצים. כל הערוצים יחזרו לתדר הפתיחה: 87.5 מה"צ.

עזרי ניהול



עצה! ניתן לקבוע חופשות בלוח השנה שלכם. הקישו על כל אחד מימי החופשה שלכם, ואז הקישו על  ובחרו בקבע חופשה. כל אחד מימי החופשה ייצבע בירוק.

שינוי תצוגת ברירת המחדל של לוח

השנה

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בעזרי ניהול. בחרו בהגדרות.
- 2 הקישו על לוח שנה ובחרו בין תצוגה חודשית לבין תצוגה שבועית.
- 3 קבעו את השבוע מתחיל ביום.
- 4 לחצו על שמור כדי לאשר את בחירתכם.

הוספת אירוע ללוח השנה

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בעזרי ניהול. בחרו בלוח שנה.
- 2 בחרו בתאריך שבו אתם מעוניינים להוסיף אירוע.
- 3 הקישו על  ואז על הוסף אירוע.
- 4 הקישו על כטגוריה ואז בחרו בין פעילות, יום נישואין או יום הולדת. סמנו את התאריך והזינו את השעה שבה מתחיל האירוע.
- 5 עבור פעילויות שונות ימי נישואין, הזינו את תאריך ושעת הסיום בשתי תיבות התאריך והשעה התחתונות.
- 6 אם ברצונכם להוסיף נושא או הערה לאירוע שלכם, הקישו על הערה והקלידו את ההערה שלכם.
- 7 הגדירו התראה וכן חזרה.
- 8 בחרו בשמור וכעת יישמר האירוע שלכם בלוח השנה. התאריך שבו נשמרו אירועים יוצג כשהוא מוקף בסימון בצורת מסגרת מרובעת וכן יישמע צלצול פעמון בתחילת מועד האירוע, כדי שתוכלו להישאר מאורגנים.

01

02

03

04

05

06


07

08

עצה! ניתן לגבות ולסנכרן את לוח השנה עם המחשב שלכם. עיינו בסעיף אודות סינכרון עם המחשב בעמ' 92.


איתור תאריך

כלי איתור התאריך הוא כלי שימושי לחישוב התאריך בעוד מספר מסוים של ימים. לדוגמה, 60 יום לאחר 10.10.08 יחול התאריך 09.12.08. הדבר נחוץ לצורך מעקב אחר תאריכי יעד.



- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בעזרי ניהול.
- 2 בחרו באיתור תאריך.
- 3 בכרטיסיית מתאריך, הגדירו את התאריך הרצוי.
- 4 בכרטיסיית אחרי הגדירו את מספר הימים.
- 5 תאריך היעד יוצג למטה.

הוספת פריטים לרשימת משימות

לביצוע

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בעזרי ניהול.
- 2 בחרו במשימות לביצוע והקישו על הוסף מטלה.
- 3 קבעו את התאריך עבור המשימה לביצוע, הוסיפו הערות ובחרו עדיפות: גבוהה, בינונית או נמוכה.
- 4 שמרו את המשימה לביצוע על ידי הקשה על שמור.

שיתוף משימות לביצוע

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בעזרי ניהול. בחרו במשימות לביצוע.
- 2 בחרו במשימה לביצוע שבה ברצונכם לשתף אחרים, והקישו על .
- 3 בחרו בשלח. ניתן לבחור לשתף את פריט המשימה שלכם על ידי הודעת טקסט, הודעת מולטימדיה, דוא"ל או Bluetooth.

עזרי ניהול

הגדרת שעון מעורר


1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בשעון מעורר.

2 הקישו על הוסף התראה.

3 קבעו את השעה שבה אתם מעוניינים שההתראה תושמע, והקישו על שמור.

4 בחרו אם אתם מעוניינים שההתראה תושמע מדי יום, בימים א'–ה', א'–ו', ו'–ש', למעט חופשות או בחרו יום בשבוע. הסימנים יציינו את ימות השבוע שבהם בחרתם.

5 בחרו בקבע סוג התראה כדי לבחור סוג להתראה שלכם.

6 הקישו על קבע צלצול התראה ואז בחרו בצלצול. כדי להאזין לצלילים, הקישו על הצליל, ואחר כך על .

7 הוסיפו תזכורת להתראה.

8 לבסוף, ניתן להגדיר את משך הנוודניק ל- 5, 10, 20, 30 דקות, שעה אחת או כבוי.

9 לאחר שקבעתם את ההתראה, הקישו על שמור.

10 כדי לכבות את ההתראה, תוכלו לבחור בין נודניק לבין הפסק. הערה: ניתן להגדיר עד 5 התראות.

עצה! הקישו על סמל פעיל/כבוי בצד הימני של ההתראה.

הוספת תזכורת

1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בתזכורת.

2 הקישו על הוסף תזכורת.

3 הקלידו את התזכורת שלכם ואחריה הקישו על שמור.

4 התזכורת שלכם תופיע על המסך בפעם הבאה שתפתחו את יישום תזכורת.

עצה! ניתן לערוך תזכורת קיימת. בחרו בזו שברצונכם לערוך והקלידו את השינויים.

01

02

03


04

05

06

07


08

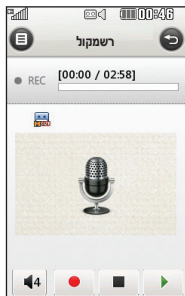

שליחת הקלטות קוליות

1 לאחר שסיימתם את ההקלטה, הקישו על .

2 הקישו על שלח ובחרו מתוך הודעה, דוא"ל או Bluetooth. אם בחרתם בהודעה או בדוא"ל, תצורף ההקלטה שלכם להודעה ותוכלו לכתבה ולשלחה באופן רגיל. אם בחרתם ב-Bluetooth, תתבקשו להפעיל את Bluetooth.

הערה: לאחר סיום ההקלטה, הקישו על  ובחרו ב שלח, קבצים, מחק, השתמש כ- (כדי להשתמש בהקלטה כרינגטון שלכם), משך, איכות, או עבור לצלילים שלי.

הקלטה קולית

השתמשו בהקלטה הקולית כדי להקליט תזכורות או צלילים אחרים.

1 הקישו על  ואחר כך על שירותים.

2 הקישו על הקלטה קולית ואחר כך על  ובחרו מתוך:

משך - קבעו את משך ההקלטה. בחרו מתוך: גודל הודעת MMS, דקה או ללא הגבלה.

איכות - בחרו את איכות הצליל. בחרו מתוך מיטבית, מעולה ורגילה.

עבור לצלילים שלי - פתחו את תיקיית קבצי השמע תחת 'הצלילים שלי'.

הקלטת צלילים וקולות

1 הקישו על  ואחר כך על שירותים.

2 הקישו על הקלטה קולית.



3 הקישו על  לתחילת ההקלטה.

4 הקישו על  לסיום ההקלטה.

5 הקישו על  כדי להאזין להקלטה שערכתם.

עזרי ניהול

שימוש במחשבון

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בכלים.
- 2 בחרו במחשבון.
- 3 הקישו על מקשי הספרות כדי להזין מספרים.
- 4 לביצוע פעולות חשבון פשוטות, הקישו על הפונקציה הרצויה (+, -, ×, ÷), ואחריה על =.
- 5 לביצוע פעולות מורכבות יותר, הקישו על  ובחרו מתוך: **sin, cos, tan, deg, sec,** או **csc, cot, rad, log, ln, exp.**



המרת יחידות

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בכלים.
- 2 בחרו בממיר.
- 3 בחרו במה שהייתם מעוניינים להמיר מתוך: מטבע, שטח, אורך, משקל, טמפרטורה, נפח או מהירות.
- 4 כעת תוכלו לבחור את היחידה, ולהזין את הערך שברצונכם להמיר, ולאחריהם את היחידה שאליה ברצונכם להמיר.
- 5 כעת יופיע הערך המתאים על המסך.

שימוש בשעון עזר

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בכלים.
- 2 בחרו בשעון עזר.
- 3 הקישו על התחיל כדי להפעיל את שעון העזר.
- 4 הקישו על הקפה אם ברצונכם למדוד זמן הקפה.
- 5 הקישו על הפסק כדי להפסיק את שעון העזר.
- 6 הקישו על המשך כדי להפעיל את שעון העזר מהרגע שבו הופסק, או הקישו על איפוס כדי להתחיל מאפס.

הוספת עיר לשעון העולמי

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בכלים.
- 2 בחרו בשעון עולמי.
- 3 הקישו על סמל  ואחר כך על הוסף עיר. התחילו להקליד את שם העיר הרצויה והיא תוצג בחלקו העליון של המסך.
- 4 הקישו על העיר כדי לבחור בה, והיא תנוסף לרשימת השעון העולמי שלכם.

01

02

03

04

05

06

07

08

Jogging buddy

בין אם אתם הולכים או רצים, יספק לכם KC910q נתונים עדכניים ביותר ביחס למרחק ולזמן, וגם ישמור עבורכם על יומן כושר תוך שימוש בטכנולוגיית GPS.

1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בכלים.

2 בחרו ב- **Jogging buddy**.

3 הקישו על <<>> כדי להגדיר מרחק או זמן לריצה שלכם.

4 ניתן להפעיל או לכבות את הצפצוף הרגיל.

5 ברגע שה-GPS מחובר, תידלק נורית ההתחלה. הקש על  כדי להתחיל.

 - לחצן איפוס

 - לחצן התחל

 - לחצן השהה

 - לחצן הפסק

צפצוף רגיל - הטלפון ישמיע צפצופים במרווחי מרחק או זמן מסוימים כדי לעזור לכם לעקוב אחר התקדמותכם מבלי שתצטרכו להביט על המסך כל הזמן.

סינכרון עם מחשב

מצב שאל תמיד

אם תגדירו את "מצב שאל תמיד" כברירת המחדל, תתבקשו תמיד לבחור בסוג של חיבור USB בכל פעם שתחברו את הטלפון למחשב באמצעות כבל נתונים. אם תבטלו את "מצב שאל תמיד", החיבור יהיה זה שאותו הגדרתם באופן ידני תחת 'תפריטים - הגדרות - קישוריות - מצב USB' ואחת מהאפשרויות 'אינטרנט', 'התקן זיכרון חיצוני' או 'PC Suite'.

ניתן לסנכרן את המחשב עם הטלפון שלכם כדי לוודא שכל הפרטים והתאריכים החשובים מתאימים, וגם לצרור גיבוי הקבצים שלכם כדי להסיר דאגות מלבכם.

התקנת LG PC Suite על המחשב

המחשב

- 1 במסך הבית הקישו על קישוריות.
- 2 בחרו בחיבור **USB** ואז הקישו על **אישור**.
מוסיקה - מצב סינכרון מוסיקה.
אחרים - מצב שירותי נתונים.

- 3 הכניסו את התקליטור המצורף לתוך המחשב. לחצו על **PC Suite Installer** שיופיע על המסך.
- 4 בחרו בשפת ההתקנה ולחצו על **אישור**.
- 5 עקבו אחר ההוראות על המסך להשלמת התקנת **LG PC Suite Installer**.
- 6 לאחר סיום ההתקנה, יופיע סמל **LG PC Suite** על שולחן העבודה במחשב שלכם.

חיבור הטלפון למחשב

- 1 חברו את כבל USB לטלפון ולמחשב.
- 2 לחצו לחיצה כפולה על סמל **LG PC Suite** על שולחן העבודה במחשב.
- 3 לחצו על **אשף החיבור** ואז על **USB**.
- 4 לחצו על **הבא**, ואז על **הבא שוב**, ולבסוף על **סיום**. הטלפון והמחשב שלכם מחוברים כעת.

גיבוי ושחזור נתוני הטלפון

- 1 חברו את הטלפון למחשב כפי שתואר לעיל.
- 2 לחצו על סמל גיבוי ובחרו בין גיבוי לבין שחזור.
- 3 בחרו אם לגבות נתוני תוכן ו/או ספר טלפונים/לוח זמנים/משימות לביצוע/תזכורות. בחרו במיקום שאליו אתם מעוניינים לגבות, או לשחזר מידע. לחצו על אישור.
- 4 כעת יגובה המידע שלכם.

צפייה בקבצי הטלפון במחשב

- 1 חברו את הטלפון למחשב כפי שתואר לעיל.
- 2 לחצו על סמל תוכן.
- 3 כעת יוצגו כל המסמכים, תוכן Flash, התמונות, הצלילים וסרטוני הוידאו ששמרתם בטלפון על המסך בתיקיית 'טלפון LG'.

עצה! הצפייה בתוכן הטלפון על מסך המחשב מסייעת לארגון וסידור קבצים ומסמכים ולמחיקת תוכן שאינכם זקוקים לו עוד.

סינכרון אנשי קשר

- 1 חברו את הטלפון למחשב.
- 2 לחצו על סמל אנשי קשר.
- 3 כעת ייבא המחשב שלכם את כל אנשי הקשר השמורים בכרטיס USIM ובטלפון, ויציגם על המסך.
- 4 לחצו על קובץ ובחרו בשמור. כעת תוכלו לבחור באיזה מיקום ברצונכם לשמור את אנשי הקשר שלכם.

הערה: כדי לגבות אנשי קשר מכרטיס USIM, לחצו על תיקיית כרטיס SIM בצידו השמאלי של מסך המחשב. לחצו לחיצה ימנית על אחד מאנשי הקשר שלכם ובחרו בבחור הכול, ואחר כך בהעתק או בהעבר לזיכרון הטלפון. לחצו לחיצה ימנית על אנשי הקשר שלכם ובחרו בהעתק לאנשי קשר. כעת לחצו על תיקיית טלפון בצידו השמאלי של המסך וכל מספרי הטלפון יוצגו.

01

02

03

04

05

06

07


08

סינכרון עם מחשב

סינכרון ההודעות שלכם

- 1 חברו את הטלפון למחשב.
- 2 לחצו על סמל הודעות.
- 3 כל הודעות המחשב והטלפון שלכם יוצגו בתיקיות על המסך.
- 4 השתמשו בשורת הכלים בחלקו העליון של המסך כדי לערוך ולסדר את ההודעות.

שימוש בטלפון כאחסון בנפח גדול

- ניתן להשתמש בטלפון שלכם כהתקן זיכרון חיצוני במידה ומותקן בו כרטיס זיכרון.
- 1 נתקו את הטלפון מהמחשב.
 - 2 במסך הבית בחרו ב- , ואחר כך הקישו על הגדרות.
 - 3 בחרו בקישוריות ואז במצב חיבור **USB**.
 - 4 הקישו על אחסון בנפח גדול.

- 5 חברו את הטלפון למחשב. הטלפון שלכם יציג את ההודעה: **מתחבר כהתקן זיכרון חיצוני...** ולאחר מכן: **מחובר כהתקן זיכרון חיצוני.** אין לנתק את הטלפון במהלך ההעברה.
 - 6 כעת תיפתח במחשב באופן אוטומטי תיקיית כונן הניתן-להסרה, או שתיים אם מותקן אצלכם כרטיס זיכרון, ובה יוצגו כל התיקיות בטלפון או בכרטיס הזיכרון שלכם.
- הערה:** על הטלפון להיות מנותק מהמחשב כדי לאתחל את תהליך התקן הזיכרון החיצוני.
- הערה:** תהליך זה מגבה את התוכן השמור בכרטיס הזיכרון שלכם בלבד, לא את זיכרון הטלפון. כדי להעביר את תוכן זיכרון הטלפון שלכם (לדוגמה, אנשי קשר), יהיה עליכם לבצע סינכרון באמצעות PC Suite.

01

02

03

04

05

06

07

08

ממיר DivX

התקינו את ממיר DivX שסופק על אותו תקליטור שהכיל את תוכנת PC Sync.

DivX ימיר קבצי נתונים במחשב שלכם לפורמט שיאפשר לכם לטעון אותם ולצפות בהם בטלפון.

לאחר ההתקנה, בחרו ב- **DivX** מתוך קבצי התוכניות במחשב שלכם, ואחר כך ב- **DivX converter** וב- **Converter**.

השתמשו בחיצים שביישום כדי להחליף את פורמט ההמרה ל- **Mobile**. אם תלחצו לחיצה ימנית על תיבת היישום ותבחרו ב- **Preferences** (העדפות), תוכלו לשנות את מיקום שמירתם של הקבצים המומרים.

גרו ושחררו את הקבצים לתוך היישום לצורך ניתוח ראשוני. לאחר מכן, בחרו ב- **Convert** (המר) כדי להתחיל בתהליך. בסיום התהליך, תופיע הודעה על סיום ההמרה.

כעת ניתן להעביר את הקובץ המומר לטלפון שלכם, באמצעות אפשרות אחסון בנפח גדול (ראו בעמ' 94) או לטעון אותו באמצעות תוכנת PC Sync (ראו בעמ' 92).

האינטרנט

דפדפן

דפדפן מעניק לכם עולם מהיר וצבעוני של משחקים, מוזיקה, חדשות, ספורט, בידור והרבה יותר, הישר לתוך הטלפון הנייד שלכם. בכל מקום שבו אתם נמצאים, ובכל תחום שבו אתם מתעניינים.

גישה לאינטרנט

1 במסך הבית, בחרו ב-  ואז הקישו על **שירותים** ובחרו **בדפדפן**.

2 כדי להגיע ישירות לדף הבית של הדפדפן שלכם, בחרו **בבית**. לחילופין, בחרו **בהזן כתובת** והקלידו את כתובת האינטרנט הרצויה, ואחריה לחצו על **התחבר**.


הערה: על ההתחברות לשירות זה והורדת תכנים חל חיוב נוסף. בדקו את תעריפי העברת הנתונים אצל ספק הרשת שלכם.

הוספת סימניות וגישה אליהן

לצורך גישה נוחה ומהירה לאתרים המועדפים עליכם, תוכלו להוסיף סימניות ולשמור דפי אינטרנט.

1 במסך הבית, בחרו ב-  ואז הקישו על **שירותים** ובחרו **בדפדפן**.

2 בחרו בסימניות. כעת תופיע על המסך רשימת הסימניות שלכם.

3 כדי להוסיף סימנייה חדשה, בחרו ב-  והקישו על **הוסף חדש**. הזינו שם עבור הסימנייה ואחריה את כתובת האינטרנט.


4 הקישו על **שמור**. כעת תופיע הסימנייה החדשה ברשימת הסימניות.

5 כדי לגשת לסימנייה, פשוט הקישו על הסימנייה הרצויה והקישו על 'התחבר'. כעת תחובר לסימנייה זו.

קורא RSS

RSS (קיצור של Really Simple Syndication) היא משפחת פורמטי הזנה ברשת שנועדה לפרסם תוכן המתעדכן בתדירות גבוהה, כגון פוסטים בבלוגים, חדשות או פודקסטים. מסמך RSS, הקרוי גם הזנה, הזנה מהרשת או ערוץ, מכיל תקציר תוכן מאתר הרשת הרלוונטי או את הטקסט במלואו. RSS מאפשר לכם להיות מעודכנים ביחס לאתרי האינטרנט המועדפים עליכם בצורה אוטומטית שהיא נוחה הרבה יותר מבדיקה חוזרת ונשנית שלהם. המשתמש נרשם להזנה על ידי הוספת קישור ההזנה לתוך קורא RSS או על ידי לחיצה על סמל RSS בדפדפן, וכך מתחיל תהליך הרישום. קורא RSS בודק באופן סדיר את ההזנות שאליהן נרשם המשתמש, ומחפש תוכן חדש, ואם נמצא תוכן כזה, הוא מוריד אותו.

שמירת דפים

- 1 גשו לדף האינטרנט הרצוי כפי שתואר לעיל.
- 2 הקישו על  ובחרו בשמור דף זה.
- 3 הזינו שם לדף האינטרנט כדי שתוכלו לזהותו בקלות.
- 4 הקישו על שמור.

עצה! תפריט זה יאפשר לכם גם לערוך כותרות של דפים שמורים, להגן על תזכורת המסך או להסיר ממנה הגנה, ולמחוק דפים שמורים.

01

02

03

04

05

06

07

08

האינטרנט


גישה לדפים שמורים

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בדפדפן.
- 2 בחרו בדפים שמורים.
- 3 בחרו בדף שבו ברצונכם לעיין והוא ייפתח.

צפייה בהיסטוריית הדפדפן

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בדפדפן. בחרו בהיסטוריה.
- 2 כעת יוצגו דפי האינטרנט שאותם פתחתם לאחרונה. כדי לגשת לאחד מדפים אלה, פשוט בחרו את הדף הרצוי.

שינוי הגדרות דפדפן האינטרנט

- 1 במסך הבית, בחרו ב-  ואז הקישו על שירותים ובחרו בדפדפן. בחרו בהגדרות דפדפן.
- 2 תוכלו לערוך פרופילים, הגדרות תצוגה, מטמון, קבצי **cookie**, אבטחה, או שחזור הגדרות יצרן.
- 3 ניתן להדליק או לכבות את אלה פשוט על ידי הקשה על סמל המתג.

שימוש בטלפון כמודם

מכשיר KC910q שלכם יכול לשמש גם כמודם עבור המחשב שלכם, ולאפשר לכם גישה לדואר האלקטרוני ולאינטרנט גם כאשר אינכם יכולים להתחבר בחיבור קווי. ניתן להשתמש בכבל USB או ב- Bluetooth.

שימוש בכבל USB:

- 1 ודאו שעל המחשב שלכם מותקנת LG PC Suite.
 - 2 חברו את KC910q למחשב באמצעות כבל USB ופתחו את תוכנת LG PC Suite.
 - 3 לחצו על תקשורת במחשב שלכם. כעת לחצו על הגדרות ובחרו במודם.
 - 4 בחרו **LG Mobile USB Modem** ובחרו באישור. כעת הוא יופיע על המסך.
 - 5 לחצו על 'התחבר' והמחשב יתחבר דרך מכשיר KC910q שלכם.
- הערה:** לפרטים נוספים אודות סינכרון באמצעות LG PC Suite, עיינו בעמ' 92.

שימוש ב-Bluetooth:

- 1 ודאו ש-Bluetooth פועל ושהוא נראה הן ע"י המחשב שלכם והן ע"י הטלפון.
 - 2 תאמו בין המחשב ל-KC910q שלכם כך שתידרש סיסמה לצורך ההתחברות.
 - 3 השתמשו באשף ההתחברות בתוכנת LG PC Suite כדי ליצור חיבור Bluetooth פעיל.
 - 4 לחצו על תקשורת במחשב שלכם. כעת לחצו על הגדרות.
 - 5 לחצו על מודם.
 - 6 בחרו בחיבור מודם - **Bluetooth** סטנדרטי ולחצו על אישור. כעת הוא יופיע על המסך.
 - 7 לחצו על התחבר והמחשב יתחבר דרך מכשיר KC910q שלכם.
- הערה:** לפרטים נוספים אודות Bluetooth, עיינו בעמ' 99.

01

02

03

04

05

06

07

08

הגדרות

בתיקיה זו תוכלו להתאים את הגדרותיכם כדי שמכשיר KC910q שלכם יתאים להעדפותיכם האישיות.

הערה: לפרטים נוספים אודות הגדרות שיחה, עיינו בעמ' 26.

שינוי הגדרות מסך

1 הקישו על  ואז בחרו בהגדרות.

2 הקישו על **הגדרות מסך** ואז בחרו ב';
ספט - בחרו בערכת נושא עבור מסך הבית שלכם.

חייג - כווננו את גודל וצבע המספר.

גופן - הגדירו את גודל הגופנים.

תאורה רקע - בחרו לכמה זמן תישאר התאורה האחורית דולקת.

הערה: ככל שהתאורה האחורית תישאר דלוקה זמן רב יותר, כך יגדל ניצול הסוללה, ויתכן שתצטרכו לטעון את הטלפון שלכם לעיתים תכופות יותר.

הבירות - כווננו את הבירות המסך.

ערכת הנושא - שנו במהירות את מראה המסך כולו.

הודעת פתיחה - בחרו אם להפעיל או לא, וכתבו את תוכן הודעת הברכה.

בחרו תמונה עבור **שיחות נכנסות, שיחות יוצאות, הפעלה וכיבוי**.

איפוס תפריט ראשי - כדי לאפס את התפריט הראשי, הקישו על כן.

3 הקישו על **שמור** כדי לשמור את ההגדרות שלכם.

התאמה אישית של הפרופיל

ניתן לשנות במהירות את הפרופיל שלכם במסך הבית. פשוט הקישו על סמל תקציר הסטטוס בחלק העליון והקישו על כרטיסיית פרופילים.

בהשתמש בתפריט ההגדרות, תוכלו להתאים את הגדרות הפרופילים באופן אישי.

1 הקישו על  ואחר כך בחרו בהגדרות.

2 הקישו על **פרופילים** ואחר כך בחרו בפרופיל שברצונכם לערוך.

01

מצב חיסכון בחשמל - מצב חיסכון בחשמל - בחרו אם להפעיל את הגדרות מצב החיסכון בחשמל של היצרן למצב **פועל**, כבוי וכן אוטומטי.

03

שפות - שנו את שפות התצוגה של הטלפון שלכם.

04

נעילת מקשים אוטומטית - נעלו את המקשים אוטומטית במסך הבית.

06

אבטחה - כווננו את הגדרות האבטחה שלכם, כולל קודי PIN ונעילת הטלפון.

07

מנהל הזיכרון - לפרטים נוספים, עיינו בסעיף אודות שימוש במנהל הזיכרון בעמ' 103.

08

שחזור הגדרות יצרן - אפסו את כל ההגדרות להגדרות היצרן המקוריות.

מידע - צפו בפרטים טכניים אודות מכשיר KC910q שלכם.

3 כעת תוכלו לערוך את כל אפשרויות הצלילים וההתראות ברשימה, כולל **הגדרות הרינגטונים**, **לשיחות קוליות ולשיחות וידאו** וכן **עוצמת הקול**, **התראות על הודעות**, ועוד.

שינוי הגדרות הטלפון

תוכלו ליהנות מהחופש להתאים את הדרך שבה KC910q שלכם פועל להעדפותיכם האישיות.

עצה! כדי לנפדף ברשימת אפשרויות, הקישו על הפריט האחרון ברשימה והניעו את האצבע בכיוון מעלה על פני המסך. הרשימה תנוע מעלה וכך יוצגו פריטים נוספים מתוך הרשימה.

1 הקישו על  ואז בחרו בהגדרות.

2 הקישו על **הגדרות הטלפון** ובחרו אפשרות מתוך הרשימה הבאה.

תאריך ושעה - כווננו את התאריך והשעה או בחרו לעדכן באופן אוטומטי את הגדרות הזמן בזמן נסיעות או לצורך שעון קיץ.

הגדרות


שינוי הגדרות מגע

הקישו על  ואז בחרו בהגדרות. בחרו בהגדרות הקשה. כדי לאפס את מסך המגע, ולחפכו לנוח יותר לשימוש, בחרו בכיוול מסך מגע והקישו על הצלבים. כשאתם מרוצים מההגדרות, שמרו אותן.

בחרו באפקט מסך מגע כדי לאפס את סוג ההקשה, צליל ההקשה וכן הרטט שלה.

שינוי הגדרות הקישוריות

הגדרות הקישוריות שלכם כבר נקבעו על ידי מפעיל הרשת שלכם, כך שתוכלו ליהנות מהטלפון שלכם מייד. אם ברצונכם לשנות הגדרות כלשהן, השתמשו בתפריט זה.

הקישו על  ואז בחרו בהגדרות. הקישו על קישוריות.

הגדרות רשת - מכשיר KC910q שלכם מתחבר אוטומטית לרשת המועדפת עליכם. לשינוי הגדרות אלו, השתמשו בתפריט זה.

פרופיל אינטרנט - הגדירו את פרופילי ההתחברות לאינטרנט.

נקודות גישה - מפעיל הרשת שלכם כבר שמר נתונים אלו. ניתן להוסיף נקודות גישה חדשות

באמצעות תפריט זה.

חיבור חבילות נתונים - חיבור קבוע או במידת הצורך לשירותי נתונים.

סוג GPS - בחרו בין GPS עם סיוע לבין באופן עצמאי.

GPS

- טכנולוגיית GPS משתמשת במידע שמקורו בלוויינים כדי לאתר מקומות שונים.

- המקלט מעריך את המרחק ללוויין GPS בהתבסס על הזמן שדרוש לאות להגיע אליו, ואז משתמש במידע זה כדי לזהות את מיקומו המדויק.

- הדבר עשוי לארוך בין מספר שניות למספר דקות.

- מצב 'GPS' עם סיוע בטלפון נייד זה משמש לאחזור נתוני סיוע מיקום בעזרת חיבור חבילות נתונים (packet data).

- נתוני הסיוע הללו מאוחזרים משרת השירות רק במקרה הצורך.

- צלמו את המקום שבו אתם נמצאים ותוכלו ללחצמיד לתמונות תויות עם פרטים אודות המיקום הרלוונטי.

הערה: לשירות ה-GPS יש רגישות רבה לשיגאות, ואין הוא מסוגל לתפקד בתוך בניינים או מתחת לאדמה.

01

גדרות Java - מאפשר הגדרות פרופילים.

02

ירשום **DivX VOD** - תפריט זה נועד להפקת קוד רישום ל-DivX VOD (וידאו על פי דרישה) לרישום ולתמיכה טכנית, בקרו באתר <http://vod.divx.com>.

03

04

05


שימוש במנהל הזיכרון

06

למכשיר KC910q שלכם יש שלושה זיכרונות זמינים: הטלפון, כרטיס USIM וכרטיס זיכרון חיצוני (יתכן שיהיה עליכם לרכוש את כרטיס הזיכרון בנפרד). ניתן להשתמש במנהל הזיכרון כדי לקבוע את דרך השימוש בכל זיכרון ולהציג את נפח הזיכרון הזמין.

07

08

הקישו על  ואחר כך על הגדרות. בחרו בהגדרות הטלפון ואחר כך במנהל הזיכרון.

מצב חיבור USB - סנכרונו את KC910q שלכם באמצעות תוכנת LG PC Suite כדי להעתיק קבצים מהטלפון שלכם. לפרטים נוספים אודות סינכרון, עיינו בעמ' 92.

אם אתם משתמשים בסינכרון מוסיקה מול Windows Media Player, בחרו בסינכרון מוסיקה בתפריט זה. סינכרון מוסיקה אפשרי רק עבור תוכן מוסיקלי. אם ברצונכם לסנכרן מול זיכרון חיצוני, תוכלו להשתמש ב'זיכרון חיצוני' כאמצעי האחסון העיקרי. אם ברצונכם לסנכרן מול זיכרון פנימי, תוכלו להשתמש ב'זיכרון פנימי' כאמצעי האחסון העיקרי.

סינכרון שרת - הפונקציה סינכרון שרת מסנכרת באמצעות רשת אלחוטית את הנתונים בטלפון ואת הנתונים בשרת, דוגמת כתובות אנשי קשר, פריטי לוח זמנים ותזכורות.

גדרות זרימה - מפעיל הרשת שלכם כבר שמר נתונים אלו. ניתן לערוך אותם אם ברצונכם לערוך בהם שינויים.


יציאת TV - בחרו בין **PAL** לבין **NTSC**

לצורך חיבור ה-KC910q שלכם לטלוויזיה.

הערה: ככל יציאת הטלוויזיה ניתן לרכישה באופן נפרד.

הגדרות

שימוש במצב טיסה

הפעילו את מצב טיסה על ידי בחירה ב-  ואחר כך בהגדרות. הקישו על **פרופילים** ובחרו **מצב טיסה**.

במצב טיסה לא תוכלו לבצע שיחות, להתחבר לאינטרנט, לשלוח הודעות או להשתמש ב- Bluetooth.

שליחה וקבלה של קבצים באמצעות

Bluetooth

Bluetooth היא דרך נהדרת לשלוח ולקבל קבצים, מכיוון שאין צורך בכבלים כלשהם והחיבור מהיר ונוח. ניתן גם להתחבר לדיבורית Bluetooth כדי לבצע שיחות ולקבל שיחות. כדי לשלוח קובץ:

- 1 פתחו את הקובץ שברצונכם לשלוח - בדרך כלל מדובר בקבצי תמונות, וידאו או מוסיקה.
- 2 הקישו על  ובחרו **שלח Bluetooth**.
- 3 הקישו על כן כדי להפעיל את Bluetooth.

זיכרון משותף במכשיר - צפו בנפח הזיכרון הזמין על KC910q שלכם עבור תמונות, צלילים, סרטוני וידאו, קבצי Flash, הודעות MMS, דוא"ל, Java ועוד.

זיכרון שמור למכשיר - צפו בנפח הזיכרון הזמין במכשיר שלכם עבור הודעות SMS, אנשי קשר, לוח השנה, רשימת משימות לביצוע, תזכורות, התראות, היסטוריית שיחות, סימניות ופריטים שונים.

זיכרון USIM - צפו בנפח הזיכרון על גבי כרטיס USIM שלכם.

זיכרון חיצוני - צפו בנפח הזיכרון הזמין על כרטיס הזיכרון החיצוני שלכם (יתכן שיהיה עליכם לרכוש את כרטיס הזיכרון בנפרד).

הגדרת אחסון ראשי - בחרו במיקום שבו אתם מעדיפים לשמור פריטים.

עצה! לפריטים אודות התקנת כרטיס זיכרון, עיינו בעמ' 14.

- 4** אם כבר יצרתם התאמה עם התקן Bluetooth אחר, ה-KC910q שלכם לא יחפש באופן אוטומטי אחרי התקני Bluetooth אחרים. אם לא, מכשיר KC910q שלכם יחפש אחר מכשירי Bluetooth אחרים בטווח שידור.
- 5** בחרו במכשיר שאליז אתם מעוניינים לשלוח את הקובץ והקישו על **בחר**.
- 6** כעת יישלח הקובץ שבחרתם.

צה! השגיחו על שורת ההתקדמות כדי לוודא שהקובץ נשלח.

כדי לקבל קובץ:

- 1** כדי לקבל קבצים, ה-Bluetooth שלכם חייב להיות במצב **פועל וגלוי**, לפרטים נוספים, עיינו בסעיף **אודות שינוי הגדרות Bluetooth** להלן.
- 2** תתבקשו לאשר את קבלת הקובץ מהשולח. הקישו על **כן** כדי לקבל את הקובץ.

- 3** תוכלו לראות היכן הקובץ נשמר ותוכלו לבחור בהצג או בהשתמש **כספט**. הקבצים יישמרו בדרך כלל בתיקייה הרלוונטית תחת 'הפריטים שלי'.

שינוי הגדרות Bluetooth:

- 1** הקישו על  ובחרו בהגדרות.
- 2** בחרו ב-**Bluetooth** ואחר כך הקישו על  ובחרו בהגדרות.
- ערכו את השינויים ב:

ניראות המכשיר שלי - בחרו אם להיות במצב **גלוי** או **מוסתר** או **נראה למשך דקה אחת**. שם המכשיר **שלי** - הזינו שם עבור מכשיר KC910q שלכם.

שירותים נתמכים - בחרו כיצד להשתמש ב-Bluetooth ביחס למכשירים אחרים. עיינו בסעיפים **אודות שימוש בטלפון כמודם בעמ' 98** ו**אודות שימוש בדיבורית Bluetooth בעמ' 106**.

הכתובת שלי - הציגו את כתובת Bluetooth שלכם.

01

02

03

04

05

06

07

08

התאמה עם מכשיר Bluetooth

אחר

באמצעות התאמה (pairing) של KC910q שלכם למכשיר אחר, תוכלו לקבוע סיסמה שתגן על החיבור ביניהם. כתוצאה מכך תהיה ההתאמה ביניכם מאובטחת יותר.

1 ודאו ש-Bluetooth שלכם הוא במצב פועל ונראה. ניתן לשנות את הנראות שלכם בתפריט הגדרות.

2 הקישו על חפש.

3 ה-KC910q שלכם יחפש אחר מכשירים אחרים. לאחר השלמת החיפוש, תופיע על המסך הפקודה רענן.

4 בחרו במכשיר שעמו אתם רוצים להיות מותאמים, הזינו את הסיסמה, ואחר כך הקישו על אישור.

5 כעת יתחבר הטלפון שלכם למכשיר האחר ובו יהיה עליכם להזין את אותה סיסמה.

6 חיבור Bluetooth מוגן-הסיסמה שלכם מוכן.

שימוש דיבורית Bluetooth

1 ודאו ש-Bluetooth שלכם הוא במצב פועל ונראה.

2 עקבו אחר ההוראות שקיבלתם עם הדיבורית כדי להביאה למצב של התאמה (pairing) ולבצע עמה התאמה.

3 הקישו על שאל תמיד או על אפשר בלי לשאול והקישו על כן כדי להתחבר, וכעת יעבור ה-Bluetooth שלכם באופן אוטומטי לפרופיל אוזניות.

עצה! לפרטים נוספים אודות מצב מענה BT, עיינו בעמ' 27, כך שתוכלו לשלוט בדרך שבה תענו לשיחות כאשר דיבורית Bluetooth שלכם מחוברת.

– אם נקודת הגישה משתמשת בהצפנה מסוג WEP או WPA-PSK/2, הזינו את מפתח האבטחה.

01

02

03

04

05

06

07

08

2. תמיכה בפרופיל רשת Wi-Fi

1. תמיכה בפרופיל Wi-Fi (כיצד להתחבר לנקודות גישה נפוצות או לנק' גישה מוסתרת) אם נק' הגישה אינה מופיעה ברשימת החיפוש, אפשר להתחבר אליה על ידי שמירתה כפרופיל.

3. על ידי שמירת נקודות גישה נפוצות כפרופילים, קל יותר להזין את מפתח האבטחה בעת התחברות לנק' גישה בעלת הצפנה לצורך אבטחה.

4. אם נק' הגישה אינה תומכת ב-DHCP (כתובת דינמית), אפשר להתחבר אליה על ידי שימוש בכתובת IP סטטית.

5. תיאור כל שדה בפרופיל Wi-Fi.

6. שם רשת: (SSID ID)

7. סוג אבטחה: תמיכה ב-WEP או ב-WPA-PSK/2.

8. מפתח אבטחה: שמירת מפתח האבטחה.

'מנהל האלחוט' מאפשר לכם לנהל את החיבור האלחוטי לאינטרנט (Wi-Fi) ואת חיבורי ה-Bluetooth במכשיר שלכם. הוא מאפשר לטלפון להתחבר לרשתות אלחוט מקומיות או לגשת לאינטרנט בצורה אלחוטית. Wi-Fi היא שיטה מהירה יותר ובעלת טווח רחב יותר מאשר טכנולוגיית האלחוט של Bluetooth.

הערה: מכשיר KC910q תומך בהצפנת WEP ו-WPA-PSK/2 אך לא בהצפנת EAP או WPS. אם ספק שירות Wi-Fi או מנהל הרשת שלכם מגדיר הצפנה לצורך אבטחת הרשת, עליכם להזין את המפתח בחלון הקופץ שייפתח. אם לא הוגדרה הצפנה, חלון זה לא ייפתח. אם אינכם יודעים מהו המפתח, עליכם לבקש מספק שירות Wi-Fi או מנהל הרשת שלכם.

1. כיצד להגדיר Wi-Fi

1. Wi-Fi פועל

2. חיפוש AP (נקודת גישה)

– חיפוש אחר נקודת גישה זמינה להתחברות אליה.

3. התחבר לנקודת גישה

– מתחבר לנקודת הגישה הרצויה ברשימת חיפוש נקודות הגישה.

Wi-Fi

שדרוג תוכנה
תוכנית שדרוג תוכנות הטלפונים הניידים של **LG**
לפרטים נוספים אודות התקנת תוכנית זו
והשימוש בה, בקרו באתר <http://update.lgmobile.com>

תכונה זו מאפשרת לכם לשדרג את התוכנה שלכם
לגרסה המעודכנת ביותר במהירות ובנוחות דרך
האינטרנט מבלי שתצטרכו לבקר במרכז שירות
שלנו.

מכיוון שתוכנית שדרוג תוכנות הטלפונים הניידים
דורשת את תשומת ליבו המלאה של המשתמש
במשך תהליך השדרוג, אנא ודאו שקראתם את כל
ההוראות וההערות שיופיעו בכל שלב ושלב לפני
שתתקדמו הלאה. חשוב שתזכרו שהסרת כבל
הנתונים מסוג USB או הסוללות במהלך השדרוג
עלולה לגרום לנזק חמור לטלפון הנייד שלכם.
מכיוון שהיצרן אינו מקבל על עצמו כל אחריות
לאובדן נתונים במהלך השדרוג, מומלץ שתורשמו
את כל הפרטים החשובים מראש ליתר ביטחון.

9. הגדרות IP/DNS: כאן ניתן להגדיר אוטומטי
או סטטי בהתאם לתמיכה של נק' הגישה ב-
DHCP (כתובת דינמית).
אם הגדרתם 'סטטי', היזנו את ערך כתובת IP
ושרת DNS כדי להתחבר ל-IP הסטטי בעת
ניסיון ההתחברות.

10. כיצד לשמור את פרופיל Wi-Fi

11. בחרו ב'רשתות שמורות' מתוך תפריט
'אפשרויות', ואז בחרו ב'הוסף רשתות' והזינו
את הערכים המתאימים לכל שדה.

12. ניתן לבחור ולשמור את רשימת חיפוש נקודות
הגישה לאחר שבחרתם ב-Wi-Fi פועל ואז
ב'רענן' (חיפוש נק' גישה).

13. לאחר התחברות לנק' הגישה שיש לה את סוג
האבטחה, תוכלו לשמור את הפרופיל בחלון
ק/לא שייפתח.

אביזרים

האביזרים הבאים סופקו יחד עם KC910q.

מטען



סוללה



עט אלקטרוני
ורצועת נשיאה



אוזניות סטריאו



01

02

03

04

05

06

07

08



כבל נתונים ותקליטור
חברו וסנכרנו את
המחשב שלכם.
את KC910q



מדריך למשתמש
הכירו את KC910q
שלכם לעומק.

הערה:

- השתמשו תמיד באביזרים מקוריים של LG.
- אחרת הדבר עלול לגרום לביטול האחריות שברשותכם.
- ייתכנו אביזרים שונים באזורים שונים. לקבלת פרטים נוספים, בדקו אצל נציגת השירות האזורית שלנו או עם הסוכן שלנו.

שירותי רשת

הטלפון הסלולרי המתואר במדריך זה אושר לשימוש ברשתות GSM וכן W-CDMA. מספר תכנות המתוארות במדריך זה נקראות שירותי רשת. אלה הם שירותים מיוחדים שיש לטפל בהם מול ספק שירותי הסלולר שלכם. לפני שתוכלו ליהנות משירותי רשת אלה, יהיה עליכם להתחבר אליהם דרך ספק השירות שלכם ולקבל ממנו הוראות לשימוש בהם.

נתונים טכניים

כלי
 שם המוצר: KC910q
 מערכת: GSM / W-CDMA
טמפרטורת סביבה
 מרבית: 55 מעלות צלזיוס (פריקה),
 45 מעלות צלזיוס (טעינה)
 מינימלית: 10- מעלות צלזיוס

רישום DivX VOD

הפיקו קוד רישום DivX VOD.
 לרישום ולתמיכה טכנית, בקרו באתר
<http://vod.divx.com>.

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM/ W-CDMA Terminal Equipment

Model Name

KC910q

Trade Name

LG



Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 29.Aug. 2008

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Signature of representative

הנחיות לשימוש בטוח ויעיל

קראו נא הנחיות פשוטות אלה. אי עמידה בהנחיות אלו עלולה להיות מסוכנת או לא-חוקית.

חשיפה לאנרגיית תדר רדיו

פרטים אודות חשיפה לגלי רדיו ושיעור הבליעה הספציפי (SAR). טלפון נייד זה מדגם KC910q תוכנן לעמוד בדרישות הבטיחות הרלוונטיות ביחס לחשיפה לגלי רדיו. דרישות אלו מבוססות על קווים מנחים מדעיים, ואלה כוללים שולי בטיחות המיועדים להבטיח את בטיחותם של כל בני האדם, בלא קשר לגילם או למצב בריאותם.

- הנחיות החשיפה לגלי רדיו משתמשות ביחידת מידה הנקראת "שיעור בליעה ספציפי" (Specific Absorption Rate) או SAR. בדיקות SAR מבוצעות בשיטה תקנית כאשר הטלפון משדר ברמת העוצמה המרבית המאושרת עבורו בכל תחומי התדרים שבשימוש.
- למרות שעשויים להיות הבדלים ברמות SAR בין טלפונים שונים של LG, כל הטלפונים מתוכננים לעמוד בהנחיות הרלוונטיות של חשיפה לגלי רדיו.

- מגבלת ה-SAR המומלצת על-ידי International Commission on Non-Ionizing Radiation Protection (ICNIRP) היא ממוצע של 2 ואט/ק"ג על פני 10 גרם של רקמה.
- ערך ה-SAR הגבוה ביותר עבור דגם טלפון זה שנמדד על-ידי DASY4 לשימוש באוזן הוא 0.993 ואט/ק"ג (10 גר') וכאשר לובשים אותו על הגוף, מדובר ב-1.26 ואט/ק"ג (10 גר').
- מידע נתוני SAR עבור תושבי המדינות/אזורים שאמצו את רמת ה-SAR המומלצת על-ידי Institute of Electrical and Electronics Engineers (IEEE) היא 1.6 ואט/ק"ג בממוצע על פני גרם אחד של רקמה.

הטיפול במצור ותחזוקתו

אזהרה

השתמשו רק בסוללות, במטענים ובאביזרים המאושרים לשימוש עבור דגם ספציפי זה של טלפון. שימוש בסוגים אחרים עלול לבטל את האישור או האחריות החלים על הטלפון ועלול להיות מסוכן.

- אין לאפשר זעזוע מכני או חבטה.
- יש לכבות את הטלפון בכל מקום שבו נדרש הדבר על ידי תקנות מיוחדות. לדוגמה, אל תשתמשו בטלפון בבתי חולים, שכן הדבר עלול להשפיע על פעולת מכשור רפואי רגיש.
- אין לאחוז בטלפון בידיים רטובות בזמן הטענתו. הדבר עלול לגרום למכת חשמל או לנזק חמור לטלפון שלכם.
- אין לטעון את הטלפון ליד חומר דליק, מכיוון שהמכשיר עלול להתחמם ולהפוך לסכנת שריפה.
- השתמשו במטלית יבשה לניקוי חלקי החיצוני של המכשיר (אין להשתמש בחומרים ממיסים כגון בנז, מדלל או אלכוהול).
- אין לטעון את הטלפון כאשר הוא נמצא על גבי מצעים או ריפוד.
- יש לטעון את הטלפון באזור מאורר היטב.

- אין לפרק יחידה זו. כאשר נדרש תיקון, פנו לטכנאי שירות מוסמך.
- אין לקרב את המכשיר למכשירים חשמליים כגון טלוויזיות, מכשירי רדיו או מחשבים אישיים.
- יש לשמור את היחידה הרחק ממקורות חום דוגמת רדיאטורים או תנורי בישול.
- אין להפיל את היחידה.

הנחיות לשימוש בטוח ויעיל

- אין לחשוף יחידה זו לכמות מוגזמת של עשן או אבק.
 - אין להחזיק את הטלפון בסמוך לכרטיסי אשראי או כרטיסי נסיעה; הנתונים בספ המגנטי עלולים להיפגם.
 - אין להקיש על המסך באמצעות חפצים חדים; הדבר עלול לגרום נזק לטלפון.
 - אין לחשוף את הטלפון לנזולים או ללחות.
 - יש להשתמש בעזרים דוגמת אוזנייה בזהירות. אין לגעת באנטנה שלא לצורך.
- ### תפעול יעיל של הטלפון
- #### התקנים אלקטרוניים
- כל הטלפונים הניידים עלולים לספוג הפרעות שישפיעו לרעה על ביצועיהם.
 - אין להשתמש בטלפון הנייד בסמוך לציוד רפואי ללא קבלת רשות. יש להימנע מהנחת הטלפון מעל לקוצב לב, למשל בכיס החזה.
 - טלפונים ניידים עלולים ליצור הפרעה לעזרי שמיעה מסוימים.
 - הפרעה משנית עלולה להשפיע על טלוויזיות, מכשירי רדיו, מחשבים וכו'.

בטיחות בדרכים

- בדקו את החוקים והתקנות לגבי שימוש בטלפונים ניידים באזורים שבהם אתם נהגים.
- אין להחזיק את הטלפון ביד בזמן נהיגה.
- יש להפנות את מלוא תשומת הלב לנהיגה.
- יש להשתמש בדיבורית, אם היא זמינה.
- רדו לשול הדרך וחנו לפני ביצוע שיחה או מענה לשיחה, בהתאם לתנאי הדרך.
- אנרגיית תדר רדיו עשויה להשפיע על מערכות אלקטרוניות מסוימות בכלי רכב דוגמת מערכת סטריאו או ציוד בטיחות.
- אם המכונת מצוידת בכרית אוויר מתנפחת, אין לחסום אותה על ידי התקנה של ציוד אלחוטי נישא. הדבר עלול לגרום לכשל של הכרית או לפגיעה חמורה עקב ביצועים לא נאותים שלה.
- אם אתם מאזינים למוסיקה בעת תנועה, ודאו שהעוצמה היא ברמה סבירה, כך שתמשיכו להיות מודעים לסביבתכם. הדבר חשוב במיוחד בקרבת כבישים.

מנעו נזק לשמיעתכם

עלול להיגרם נזק לשמיעתכם אם אתם נחשפים לעוצמות קול גבוהות למשכי זמן ארוכים. לכן אנו ממליצים שלא תדליקו או תכבו את המכשיר סמוך לאוזנכם. אנו ממליצים גם שעוצמות המוסיקה והשיחות יהיו ברמה סבירה.

חלקי זכוכית

חלקים מסוימים של הטלפון הנייד שלכם עשויים מזכוכית. זכוכית זו עלולה להישבר אם המכשיר יפול על משטח קשה או יסבול מכה משמעותית. אם הזכוכית נשברה, אל תנסו לגעת בה או להרחיקה. חדלו להשתמש במכשיר הנייד שלכם עד להחלפת הזכוכית על ידי מרכז שירות מורשה.

סביבה שבה מבוצעות עבודות עם חומרי נפץ

אין להשתמש בטלפון באזורים שבהם מתבצעות פעולות פיצוץ, שימו לב להגבלות ועמדו בכל התקנות והכללים.

סביבה נפיצה פוטנציאלית

- אין להשתמש בטלפון באזורי תדלוק.
- אין להשתמש בו בסמוך לדלק או לכימיקלים.
- אין להוביל או לאחסן גז דליק, נוזלים דליקים או חומרי נפץ בתא הרכב המכיל את הטלפון הנייד או את אביזריו.

כלי טיס

- התקנים אלחוטיים עלולים לגרום להפרעה במטוס.
- יש לכבות את הטלפון הנייד לפני העלייה למטוס.
 - אין להשתמש בו על הקרקע ללא קבלת רשות מאנשי הצוות.

ילדים

יש לשמור על הטלפון במקום בטוח מחוץ להישג ידם של ילדים קטנים. המכשיר כולל חלקים זעירים העלולים להוות סכנת חנק אם ינותקו מהטלפון.

הנחיות לשימוש בטוח ויעיל

שיחות חירום

שיחות חירום עלולות שלא להיות זמינות בכל הרשתות הסלולריות. לפיכך, בשום מקרה אינכם יכולים לסמוך על הטלפון בלבד לביצוע שיחות חירום. בדקו את הנושא עם ספק השירות המקומי.

מידע אודות הסוללה והטיפול בה

- אין צורך לפרוק את הסוללה במלואה לפני טעינתה מחדש. בניגוד למערכות סוללה אחרות, אין השפעת זיכרון העלולה להשפיע על ביצועי הסוללה.
- השתמשו בסוללות ובמטענים של LG בלבד.
- מטעני LG מיועדים למרב את חיי הסוללה.
- אין לפרק או לקצר את מארז הסוללה.
- שמרו על ניקיון מגעי המתכת של הסוללה.
- החליפו את הסוללה כאשר היא מפסיקה לספק ביצועים קבילים. ניתן לטעון מחדש את מארז הסוללה מאות פעמים לפני שיהיה צורך להחליפה.
- כדי למרב את שמישות הסוללה, טענו אותה מחדש אם לא הייתה בשימוש במשך זמן רב.

- אין לחשוף את מטען הסוללה לאור שמש ישיר ואין להשתמש בו בתנאי לחות גבוהה, דוגמת חדר אמבטיה.
- אין להשאיר את הסוללה במקומות חמים וקרים; הדבר עלול לפגום בביצועי הסוללה.
- יש סכנת התפוצצות אם הסוללה הוחלפה בסוג סוללה שאינו מתאים.
- השליכו סוללות משומשות על פי הוראות היצרן. אם אפשר, נסו למחזר סוללות. אל תשליכו אותן עם האשפה הביתית.
- אם עליכם להחליף סוללה, קחו אותה לנקודת השירות הקרובה של LG Electronics או למפיץ לצורך קבלת עזרה.
- יש לנתק תמידי את המטען מהשקע לאחר שהטלפון נטען במלואו כדי לנמנע בזבז מיותר של חשמל מצד המטען.

פתרון בעיות

בפרק זה מוצגות מספר בעיות שעלולים להתקל בהן תוך שימוש בטלפון שלכם. בחלק מהבעיות יש צורך ליצור קשר עם ספק השירות שלכם, אך את רוב הבעיות שתיקנלו בהן תוכלו לפתור בקלות בעצמכם.

הודעה	גורמים אפשריים	אפשרויות לתיקון הבעיה
שגיאת SIM	אין כרטיס SIM בטלפון או שהכנסתם אותו בצורה לא נכונה.	ודאו שכרטיס ה-SIM הוכנס כראוי.
אין חיבור לרשת	אות חלש מחוץ לרשת GSM	עברו למקום גבוה יותר, כגון חלון או שטח פתוח. בדקו את מפת הכיסוי של חברת הסלולר.
הקודים אינם תואמים	כשאתם רוצים להחליף קוד אבטחה, עליכם להזין את הקוד החדש שוב כדי לאשרו. שני הקודים שהוזנו אינם זהים זה לזה.	פנו לספק השירות.
לא ניתן להגדיר פונקציה	היא לא נתמכת ע"י ספק השירות או שנדרש רישום עבורה	פנו לספק השירות.
לא ניתן לבצע שיחות	טעות בחיוג הוכנס כרטיס SIM חדש עברתם את מגבלת החיוב	רשת חדשה לא מאושרת. בדקו אם יש מגבלות חדשות. צרו קשר עם ספק השירות או אפסו את המגבלה בעזרת PIN2.
לא ניתן להדליק את הטלפון	מקש הדלקה/כיבוי נלחץ מחר מדי הסוללה ריקה מגעי הסוללה מלוכלכים	לחצו על מקש הדלקה/כיבוי במשך שתי שניות לפחות. טענו את הסוללה. בדקו את מד הטעינה בתצוגת המכשיר. נקו את המגעים.

פתרון בעיות

הודעה	גורמים אפשריים	אפשרויות לתיקון הבעיה
	הסוללה ריקה לגמרי	טענו את הסוללה.
	הטמפרטורה מחוץ לטווח	ודאו שטמפרטורת הסביבה נכונה, המתינו מעט ונסו שוב.
שגיאת טעינה	בעיית מגעים	בדקו את הספק ואת החיבור שלו לטלפון. בדקו את מגעי הסוללה ונקו אותם במקרה הצורך.
	אין מתח	חברו לשקע אחר או בדקו את המתח.
	המטען פגום	אם המטען אינו מתחמם, החליפו אותו.
	מטען לא מתאים	השתמשו תמיד באביזרים מקוריים של LG.
	הסוללה פגומה	החליפו את הסוללה.
הטלפון מאבד את הרשת	האות חלש מדי	החיבור-מחדש לספק שירות אחר נעשה אוטומטית.
אין אפשרות לחייג את המספר	פונקציית חיוג מספר קבוע פועלת.	בדקו את ההגדרות.



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KC910q User Guide



Congratulations on your purchase of the advanced and compact KC910q phone by LG, designed to operate with the latest digital mobile communication technology.

Set up **01**

Your home screen **02**

The basics **03**

Get creative **04**

Get organised **05**

The web **06**

Settings **07**

Accessories **08**

Contents

Set up

Getting to know your phone	8
Open view	10
Installing the USIM and battery	11
Memory card	14
Menu map	16

Your home screen

Touch screen tips	17
The quick keys	18
The status bar	19
Changing your status from the status bar	20
Using the Multitasking function	20

The basics

Calls	21
Making a call or video call	21
Making a call from your contacts	21
Answering and rejecting a call	22
In-call options	23
Adjusting the call volume	24
Speed dialling	24
Making a second call	24
Turning off DTMF	25
Viewing your call logs	25
Using call divert	26
Using call barring	26

Changing the common call setting	27
Changing your video call settings	28
Contacts	29
Searching for a contact	29
Adding a new contact	29
Contact options	30
Creating a group	31
Changing your contact settings	31
Viewing information	33
Messaging	34
Messaging	34
Sending a message	34
Entering text	35
T9 predictive	35
Abc manual	35
Keyboard	36
Handwriting recognition	36
Setting up your email	39
Retrieving your email	41
Sending an email using your new account	41
Changing your email settings	42
Message folders	43
Managing your messages	43
Using templates	44
Using emoticons	44
Changing your text message settings	44

Changing your multimedia message settings.....	45	Changing the video image size.....	61
Changing your other settings.....	46	Choosing a colour tone.....	62
Get creative		Using the inner video camera.....	62
Camera	47	Watching your saved videos	63
Taking a quick photo	47	Watching your videos on your TV	63
After you've taken your photo.....	48	Your photos and videos	64
Getting to know the viewfinder.....	49	Viewing your photos and videos.....	64
Using the flash.....	50	Using zoom when viewing a video or photo	64
Choosing a shot mode	50	Adjusting the volume when viewing a video	64
Adjusting the exposure.....	51	Capturing an image from a video	65
Taking a continuous shot	51	Viewing your photos as a slide show.....	65
Taking a panoramic shot	52	Setting a photo as wallpaper	66
Using the advanced settings.....	52	Editing your photos.....	66
Preview settings.....	52	Adding text to a photo.....	67
Other settings.....	54	Adding an effect to a photo	68
Changing the image size.....	55	Crop a photo	69
Choosing a colour effect.....	55	Morphing a photo.....	69
Using the inner camera.....	56	Adding a colour accent to a photo	69
Viewing your saved photos	56	Swapping the colours in a photo	70
Video camera	57	Editing your videos.....	70
Shooting a quick video	57	Trimming the length of your video...70	
After you've shot your video	58	Merging two videos together.....	71
Getting to know the viewfinder.....	59	Merging a photo with a video	71
Adjusting the exposure.....	60	Adding text to a video.....	72
Using the advanced settings.....	60	Overlaying a photo	73
Preview settings.....	60		
Other settings.....	61		

Contents

Adding a voice recording	73	Transferring a file to your phone	83
Adding a soundtrack to your video ..	74	Others	83
Changing the speed of your video ..	74	Music	85
Adding a dimming effect	75	Transferring music onto your phone	85
Multimedia	76	Playing a song	86
Pictures	76	Using options while playing music...	86
My images options menu	76	Creating a playlist	87
Sending a photo	77	Editing a playlist	87
Using an image	77	Deleting a playlist	88
Marking up your images	78	Using the radio	88
Printing an image	78	Searching for stations	88
Moving or copying an image	78	Resetting channels	89
Creating a slide show	79	Listening to the radio	89
Checking your memory status	79		
Sounds	79		
Using a sound	79		
Videos	80		
Using options while video is paused	80		
Sending a video clip	80		
Games and Applications	81		
Playing a game	81		
Using the games options menu	81		
Flash contents	82		
Viewing an SWF/ SVG file	82		
Using options viewing the SWF/ SVG	82		
file	82		
Documents	82		
Viewing a file	82		

Get organised

Organiser	90
Adding an event to your calendar	90
Changing your default calendar	
view	90
Adding an item to your To do list	91
Sharing a To do task	91
Using date finder	91
Setting your alarm	92
Adding a memo	92
Voice recorder	93
Recording a sound or voice	93
Sending the voice recording	93
Using your calculator	94

Converting a unit.....	94	Using your phone as a modem.....	102
Using the stopwatch.....	94	Settings	
Adding a city to your world time.....	95	Changing your screen settings.....	104
Jogging Buddy.....	95	Personalising your profiles.....	104
PC Sync.....	96	Changing your phone settings.....	105
Installing LG PC Suite on your computer.....	96	Changing your touch settings.....	106
Connecting your phone and PC.....	97	Changing your connectivity settings.....	106
Backing up and restoring your phone's information.....	97	Using memory manager.....	108
Viewing your phone files on your PC.....	97	Using flight mode.....	109
Synchronising your contacts.....	97	Sending and receiving your files using Bluetooth.....	109
Synchronising your messages.....	98	Pairing with another Bluetooth device.....	110
Using your phone as a mass storage device.....	98	Using a Bluetooth headset.....	111
DivX Converter.....	99	Wifi.....	112
The web		Accessories.....	113
Browser.....	100	Network service.....	114
Accessing the web.....	100	Technical data.....	114
Adding and accessing your bookmarks.....	100	Guidelines	
Using RSS reader.....	101	Guidelines for safe and efficient use.....	116
Saving a page.....	101	Trouble Shooting.....	122
Accessing a saved page.....	102		
Viewing your browser history.....	102		
Changing the web browser settings.....	102		

Getting to know your phone

Inner camera lens

Proximity Sensor


End/Power key

Ends or rejects a call.
Turns the phone on/off.
Press once to return to
the home screen.

Multitasking key

Call key

Dials a phone number and
answers incoming calls.

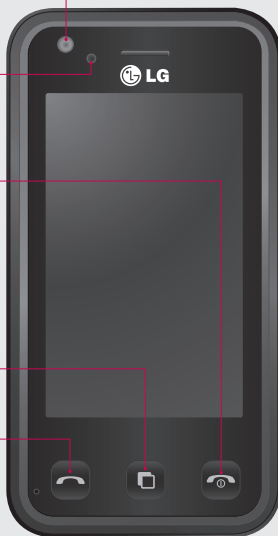

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.



**Charger, Cable,
Handsfree connector**

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.

Micro SD memory card socket



Side keys
• Ring tone / Touch tone

Lock/ Unlock key (image stabilization key in camera)

Capture button

01

02

03

04


05

06

07

08

Open view

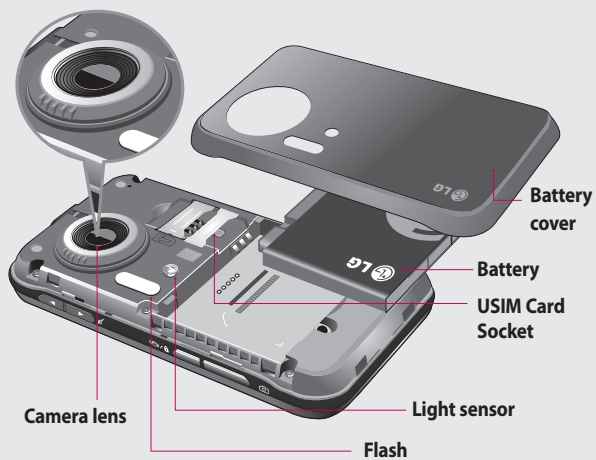

Installing the USIM and battery

1 Remove the battery cover

Press and hold down the battery release button at the top of the phone and lift off the battery cover.



WARNING: Do not use your fingernail when removing the battery.

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

2 Remove the battery

Hold the top edge of the battery and lift it from the battery compartment.



01

02

03

04

05

06


07

08

Installing the USIM and battery

3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the Golden contact Area on the card is facing downwards. To remove the USIM card, pull it gently in the opposite direction.

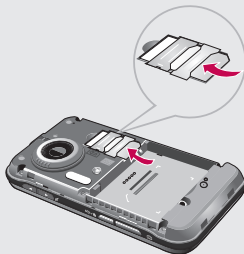

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the Battery Until it clicks into place.



5 Charging your phone

Open up the cover of the charger socket on the side of your KC910q. Insert the charger and plug into a mains electricity socket. Your KC910q will need to be charged until a message reading "Battery full" appears on screen.



01

02

03

04

05

06

07

08


Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card. The KC910q will support up to a 8GB memory card.

NOTE: A memory card is an optional accessory.

- 1 Open the memory card cover.
- 2 Slide the memory card into the slot, until it clicks into place. Make sure that the gold contact area is facing downwards.

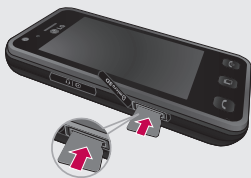

- 3 Close the memory card cover.

Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen select **Settings** and choose **Phone settings**.
- 2 Touch **Memory manager** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

TIP! To change your default storage destination, open Memory manager from the Phone settings menu and select Primary storage settings.

NOTE: If your memory card has existing content on, it will automatically be filed in the correct folder, for example, videos will be stored in the My Videos folder.

Transferring your contacts

To transfer your contacts from your USIM to your phone:

- 1 From communicate tab, select **Contacts** and choose **Contact Settings**.
- 2 Touch **Copy**.
- 3 Choose **USIM To Handset**.
- 4 Choose **Select all** or choose names by one by one and touch **Done**.

01

02

03

04


05

06

07

08

Menu map

Touch  in the home screen to open a **Top menu**. From here you can access further menus: **Communicate**, **Entertainment**, **Utilities** and **Settings**.



Communicate



Dialling



Speed dials



Contacts



Call history



New message



New Email



Messaging



Entertainment



Gallery



My stuff



Camera



Video camera



Muvee Studio



Music



FM radio



Games & apps



Utilities



Browser



Google



Organiser



Alarms



Memo



Voice recorder



Tools



USIM Services



Settings



Profiles



Screen settings



Phone settings



Call settings



Touch settings



Connectivity



Bluetooth



Wi-Fi

Your home screen

Whenever your KC910q is not in use it will return to your home screen. From here you can access all menu options, make a quick call and view the status of your phone - as well as many other things.

Touch screen tips

The home screen is also a great place to get accustomed to the touch screen.

To select an item, touch the icon accurately. Your KC910q will vibrate slightly when it recognises you've touched an option.

To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- There's no need to press too hard, the touchscreen is sensitive enough to pick up on a light yet firm touch.
- Use the tip of your finger to touch the option you require. Be careful

not to touch any other keys.

- When the screen light is off, press and hold the Unlock/Lock key on the right hand side to restore the home screen.
- Don't cover the phone with a case or cover as the touch screen will not work with any material covering it.
- When you touch **W** the mobile widget shows up. You can drag and click what you need right away.



01

02

03

04

05

06

07


08


Your home screen

The quick keys

The quick keys on your home screen provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Call** or press the  hard key.

To initiate a video call with the number, press  after inputting the number and choose **Make Video call**. See page 21 for details.



Touch to open your contacts. To search for the number you want to call. Enter the name of the contact using the touchpad. You can also create new contacts and edit existing ones. See page 30 for details.



Touch to access the Messaging options menu. From here you can create a new SMS. See page 34 for details.


























Touch to open the full Top menu which is separated into four sub-menus. Touch the vertical tabs to view further options.

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set

Icon	Description
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	Wifi connected
	GPS on (Geo-tagging, Jogging buddy)
	Memory card inserted
	Browser Connected

01

02

03

04

05

06


07

08

Your home screen

Changing your status from the status bar


Touch the current status icon that represents your current setting in the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3, Bluetooth and Wifi status. You can set Profile type, play/pause MP3 and activate/deactivate Bluetooth and Wifi.

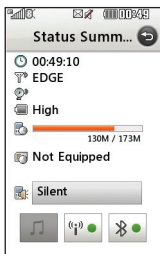

Using the Multitasking function

Press the multitasking hard key to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.




From any application, press the Multitasking key and select Home screen to return to the home screen without exiting or closing the application.


When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

When you press this key from the home screen, you can view a short cut menu to some commonly used functions, including **New message** and **Alarms**.


Calls


Making a call or video call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit press the clear key.
- 3 Touch the  hard key to initiate the call.
- 4 To end the call press the  hard key.


TIP! To enter + for making an international call, touch  twice.


TIP! Press the lock/unlock button on the right side of the handset to lock the touchscreen to prevent calls being made by mistake.

TIP! To bring up the keypad during a call, touch the  key.

TIP! You can **Make video call**, **Send message**, **Save number** or **Search contacts** by tapping .

Making a call from your contacts

- 1 From the home screen touch  to open Contacts.
- 2 Touch Name and enter the first few letters of the contact you would like to call.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Touch **Call**.

TIP! Press  and you can choose from **Add contact**, **Send message**, **Delete**, **Speed dials**, **My business card**, **Sort by**, **Filter**, **Send all contacts via Blue tooth**, **Delete all** and **Search by group**.

01

02

03

04


05

06


07


08



Calls

TIP! You can search your contacts from the call screen. Touch  in right lower column of screen. Scroll through your contacts or enter the first few letters of a name to filter the list.


Answering and rejecting a call


When your phone rings press the  hard key to answer the call.

Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.


Press the  hard key to reject an incoming call or touch  on the screen.

In-call options

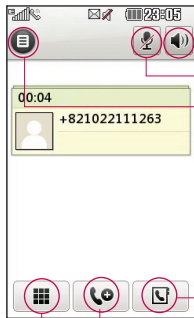

Speaker - Touch  to turn on the speaker phone.

01

Mute - Touch  to turn off the microphone so the person you are talking to cannot hear you.

02


Options - Choose from a list of further in-call option.

03

04


05

06


 - Choose to search your contacts during a call.

07

08

 - Choose to add another person to the call.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

 - Touch to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.



Calls


Adjusting the call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.

Speed dialling





You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open Contacts.
- 2 Touch  and choose **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 4 Your contacts will open. Select the contact you'd like to assign to that number by touching the phone number once.

To call a speed dial number, touch  from the home screen then press and hold the assigned number until the contact appears on screen.

The call will initiate automatically, there's no need to press **Call**.

Making a second call


- 1 During your initial call, touch  and select the number you want to call.
- 2 Dial the number or search your contacts (see **Making a call** on page 21 for details).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End** followed by **All, Held** or **Active**.

TIP! You can combine your calls by touching “Join icon” then **Join**. Check that your network provider supports conference calling.

NOTE: You will be charged for each call you make.


Turning off DTMF

DTMF allows you to use numerical commands to navigate menus within automated calls. DTMF is switched on as default.

To turn it off during a call (to make a note of a number for example) touch  and select DTMF off.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Viewing your call logs

Touch  and select **Communicate** and tap **Call history**.


Choose to view:

All calls - View a complete list of all dialled, received and missed calls.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Missed calls - View a list of all the calls you have missed.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

TIP! Touch any single call log entry to view the date, time and duration of the call.

01

02

03

04

05


06

07

08

Calls

Using call divert

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Call divert** and choose **Video calls** and/or **Voice calls**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.


TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Call barring** and choose **Video calls** and/or **Voice calls**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Changing the common call setting

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Common settings**. From here you can amend the settings for:
 - Call reject** - Slide the switch left to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (Those not saved in your contacts), No Caller Id. Touch **Save** to change the setting.
 - Send my number** - Choose whether your number will be displayed when you call someone.
 - Auto redial** - Slide the switch left for **On** or right for **Off**.
 - Answer mode** - Choose whether to answer the phone using the send key or any key.

Excuse message - Choose one from excuse messages.

Call costs - Shows Last call, All calls, Set call cost and Set limit.

Minute minder - Slide the switch left to **On** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

01

02

03

04

05


06

07

08

Calls

Changing your video call settings



- 1 Touch , select **Settings** and choose **Call settings - Video call settings**.
- 2 Choose the settings for your video calling. Determine whether to Use private picture and select one, and/or switch on the mirror to see yourself on screen when making a video call. Switch on the mirror to show the mirror effect on the video caller screen


Contacts

Searching for a contact

There are two ways to search for a contact:

From the home screen

- 1 From the home screen touch  to open Contacts. Touch Name and enter the name of the contact using the key pad.
- 2 Touch **Call** or the  hard key to initiate the call.

TIP! You can search by group by touching  and selecting **Search by group**. This will bring up a list of all your groups.


From the main menu

- 1 Touch , select **Communicate**.
- 2 Touch **Contacts** and **Search**.

TIP! The alphabetical keypad is displayed once you tap Name.

TIP! To scroll through your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Adding a new contact

- 1 From the home screen touch  then select **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **USIM**.
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.

TIP! Once you have typed in a name, press - to edit the rest of the information for your contact.

- 4 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager** and **Fax**.

01

02

03

04

05

06

07

08


Contacts

- 5 Add an email address.
- 6 Assign the contact to one or more groups. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 7 You can also add a **Ringtone, Birthday, Anniversary, Homepage, Home address, Company name, Job title, Company address** and a **Memo**.
- 8 Touch **Save** to save the contact.

TIP! You can create customised groups for your contacts, see **Creating a group** on page 32.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 29.
- 2 You can call or send a message directly from here.
- 3 Press  to open the list of options. From here you can:
 - Make a video call** - Video call the contact.
 - Edit** - Change any of the contact's details.
 - Delete** - Delete the contact. Touch **Yes** if you are sure.
 - Copy or Move to USIM/Handset** - Choose to move or copy to the USIM card or handset (depending on where you originally saved the contact).


Send business card - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, **Email** or via **Bluetooth**.

TIP! Message - Send a message to the contact. See page 34 for details on how to send messages.

Creating a group

- 1 From the home screen touch  and select the **Communicate** tab. Touch **Contacts** and select **Groups**.
- 2 Touch .
- 3 Select **Add group**.
- 4 Enter a name for your new group.
- 5 Select **Add a Ringtone** and choose.
- 6 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

TIP! You can edit an existing group by highlighting it and touching . Choose to Add contacts, Rename the group, Delete a group, Add members or assign a Group ringtone.

Changing your contact settings

You can adapt your contact settings so that your Contacts suits your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

01

02

03

04

05

06

07


08

Contacts

1 From the Communicate tab touch **Contacts** and select **Contacts settings**.

2 From here you can adjust the following settings:

Contact list settings - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset** only or **USIM** only.

You can also choose to show the first name or last name of a contact first. You can display with quick command key among Make voice call, Make video call or Send a message. In contact list touch  to call directly. You can change this setting. (Make voice call/ Make video call/ Send message/ Do not display)

Synchronise contacts - Connect to your server to synchronise your contacts. See **Synchronising your contacts** on page 107*

* According to the operator's support

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

Move - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So, if you move a contact from the USIM to the handset it will be deleted from the USIM memory.

Send all contacts via Bluetooth

- Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - See **Backing up and restoring your phone's information** on page 97.

Restore contacts - See **Backing up and restoring your phone's information** on page 97.

Clear contacts - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your contacts.

Viewing information

- 1 From the Communicate tab touch **Contacts** and **Information**.
- 2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info.** (how much memory space you've got left) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

01

02

03

04

05

06

07



08

Messaging


Messaging

Your KC910q combines SMS, MMS and email into one intuitive and easy to use menu.


There are two ways to enter the messaging centre:


- 1 From the home screen, touch  or touch , then select **Communicate** and choose **Messaging**.

Sending a message

- 1 Touch  then **Create new message** to open a blank message.
- 2 From here you can choose **Message** to send an SMS or MMS, or choose Email to send an email. See page 41 for details.
- 3 Touch **Insert** to add an image, video, sound, New slide, Subject or More (Business card, Schedule, Memo, To do, My business card).

- 4 Touch Recipient to enter the recipient's number, or touch the search icon to open your contacts. You can add multiple contacts. When you are finished, touch **Send**.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.


TIP! Quick reply - Send a reply promptly to the selected message using a template.


Entering text


There are five ways to enter text: Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.

Tap the screen once, then the keyboard shows up.

 Touch to turn on T9 predictive text.


 You can change the writing languages.

 Tap to change between the numbers, symbols and texts keypads.

Use  to scroll through the different text entry mode (for example, capitals or lowercase).

To enter a space touch .

T9 predictive



In T9 mode you will see .

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key


associated with the letter you want to enter, and the dictionary will predict the word you want to use. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

If the word you want doesn't appear, touch **Spell**. If you touch **Spell** you can then enter the word using Abc manual mode and your word or name will be added to the dictionary.

TIP! Simply touch each letter to write your message and press:

 to switch to upper case
 to add a space

Abc manual

In Abc mode you will see .

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

01

02

03

04

05

06

07

08

Messaging

Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen.

Simply touch each letter to write your message and press:

▲ to switch to upper case

TIP! If you turn the phone to landscape in messaging mode, the phone will automatically bring up the Keyboard.

TIP! Keyboard mode predicts and shows what it thinks you will type next. These words are predicted based on the sentences you have typed in so far. If you do not wish to use the suggested words, keep typing in new words.

Handwriting recognition

In Handwriting mode you simply write on the screen and your KC910q will convert your handwriting into your message. Select **Screen** or **Box** depending on your preferred view. (Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.)

Handwriting-Screen enables you to input one letters continuously on the full screen.

Handwriting-Box enables you to input a letter at a time. There is a separate area to input symbols, numbers and letters.

Handwriting-Double Box has two boxes to input letters alternately so you can input letters continuously.

⚠ WARNING: You may find it easier to use a stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other character, and displays these characters as text. Handwriting recognition is only active where text can be entered.

Note: Most letters can be written using different stroke styles. See the tables below. The arrow selects whether the letter is upper or lower case, not the style of writing.

Alphabet

If you select capital letter mode (ABC), letters you type will be inserted as capital letters even if you write in small letters, and vice versa.

Letter	Strokes
A	A A' a a'
B	B B b b'
C	C C
D	D D d d'
E	E E e e'
F	F F f f'

Letter	Strokes
G	G G' g g'
H	H H h h'
I	I I i i'
J	J J j j'
K	K K k k'
L	L L l l'
M	M M m m'
N	N N n n'
O	O O o o'
P	P P p p'
Q	Q Q q q'
R	R R r r'
S	S S
T	T T t t'
U	U U u u'
V	V V
W	W W w w'
X	X X
Y	Y Y y y'
Z	Z Z z z'
ß	ß

01

02

03

04

05





06

07



08

Messaging

Accented characters


Accent	Strokes
Space	
Backspace	
Enter	
Switching the text mode	





Punctuation marks







Mark	Strokes
Full stop	
At @	

Note: Start each stroke at the dot.

Numbers





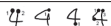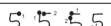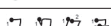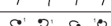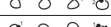







Touch  to switch from text entry to number entry.


Number	Strokes
0	
1	
2	
3	

4	
5	
6	
7	
8	
9	

Accented letters

Write the character as described above, then write the accent above the entered letter. Other such characters, for example, ö and ü, follow the same principle.

grave		
acute		
circumflex		
tilde		
ring		
dieresis		




Setting up your email

You can stay in touch on the move using email on your KC910q. It's quick and simple to set up a POP3 or IMAP4 email account.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Note! In the handset there are 5 default E-mail accounts. In order to add a new account you will have to delete an existing one and follow the instructions.

- 1 Touch  from the home screen, and touch **Messaging**.
- 2 Select **Message settings** then **Email**.
- 3 Select **Email accounts** then touch

Add new.

- 4 You can now choose how your account works:

Username - Enter the account's username.

Password - Enter the account's password.

Email address - Enter the account email address.

Reply email address - Enter the 'reply to' email address.

Outgoing mail server - Enter the outgoing email server address

Incoming mail server - Enter the incoming email server address

Maximum receive size-Choose the size limit of yours emails,the maximum is 2MB.

Mailbox type - Enter the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

01

02

03

04

05

06

07

08

Messaging

Save sent mail into - Select whether to save sent emails (when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.

Retrieve only new - Choose whether to discard emails already downloaded.

Access point - Choose your Internet access point.

Email to retrieve - Choose the way to download emails. Choose from Header only or All including body for POP3, header only, header + body, or all for IMAP4.

Auto retrieve - Choose whether to retrieve your new emails automatically.

Advanced settings - Choose whether to use the advanced settings.

SMTP port number - Normally, this will be 25.

SMTP TLS/SSL - Choose whether to use TLS/SSL for outgoing server.

Incoming server port - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

Incoming TLS/SSL - Choose whether to use TLS/SSL for incoming server.

SMTP authentication - Choose the security settings for the outgoing mail server

SMTP Username - Enter the SMTP username.

SMTP Password - Enter the SMTP password.



APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.


Retrieving your email

You can automatically or manually check your account for new emails. See **Change your email settings** on page 42 to check automatically.

To check manually:

- 1 Touch  then **Messaging**.
- 2 Select **Mailbox**.
- 3 Touch the account you want to use then .
- 4 Choose **Retrieve** and your KC910q will connect to your email account and retrieve your new messages.

Sending an email using your new account

- 1 Touch  in the Communicate menu to open a new blank message.
- 2 You can enter the recipient's address and write your message. You can also attach images, videos, sounds or other file types.
- 3 Touch **Send** and your email will be sent.

TIP! You can upload Word, Excel, PowerPoint and PDF documents to your KC910q so you can review them on the move.

01

02

03

04

05

06

07


08

Messaging

Changing your email settings

You can change your email settings according to your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  from the home screen, and choose **Messaging** and **Message settings**.
- 2 Select **Email**.
- 3 You can adapt the following settings:
 - Email accounts** - Manage your email accounts.
 - Allow reply Email** - Choose to allow the sending of read confirmation messages.
 - Request reply Email** - Choose whether to request read confirmation messages.
 - Retrieve interval** - Choose how

often your KC910q checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at one time.

Include message original

- Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in Roaming -

Choose whether to retrieve your messages automatically when abroad (roaming).

New email notification - Choose whether to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Mail sending size - Choose the size of email you send.

Message folders

You'll recognize the folder structure used on your KC910q, which is fairly self-explanatory.

Create new message - Open a new blank message.

Inbox - All the messages you received are placed into your inbox. From here you can view, delete and do more, see **Managing your messages** below for details.

Mailbox - All the emails you receive on your KC910q will be placed in your mailbox.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - Messages you send are placed in this folder.

My Folders - Create folders to store your messages.

Templates - Use a list of commonly used text and multimedia message templates.



Emoticons - Add and insert emoticons for your messages.

Message settings - Change the settings for your text and multimedia messages.

Managing your messages

You can use your Inbox to manage your messages.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then **Inbox**.
- 2 Touch  and then choose to:
 - Delete** - Delete marked messages.
 - Create new message** - Open a new blank message.

01

02

03

04

05

06

07

08

Messaging

Move to My folders - Move the marked messages to My folders.

Search - Search the messages using a date and /or a phone number.

Filter - View your message by type. This will group SMS separately from MMS.



Delete all - Delete all of the messages.

If you see the message **No space for USIM messages** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.



Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to **Add template**, **Delete** or **Delete all** templates. To edit a message just select it, make your changes and touch **Save**.

Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.


- 1 Touch  then choose **Emoticons**.
- 2 Touch **Add new**, or touch , **Delete** or **Delete all** emoticons.

Changing your text message settings

Your KC910q message settings are pre-defined so that you can send messages immediately. These settings can be changed according

to your preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Messaging settings** and **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.


Message types - Convert your text into **Voice**, **Fax**, **X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as Multiple SMS or as MMS.

Changing your multimedia message settings

Your KC910q message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch  then choose **Message settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose **Home** or **Roaming network**. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

01

02

03

04

05

06

07

08

Messaging

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.


Delivery time - Choose how long before a message is delivered.


Multi msg centre - Enter the details of your message centre.


Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info. service - Choose your reception status, language and other settings.

Changing your other settings

Touch , choose **Message settings** then:


Videomail - Touch **Add new** or  to add a new Videomail service. Contact your network operator for more information on the service they provide.

Voicemail - Touch **Add new** or  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

Camera

Taking a quick photo

TIP! The camera lens has its own cover. Twist the cover open to use the camera and quickly open the viewfinder.

- 1 Press the  key on the right side of the phone.
- 2 You will be prompted to open the lens cover. The viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Slightly press the capture button, a focus box will appear in the centre of the viewfinder screen.
- 5 Position the phone so you can see the subject of your photo in the focus box.
- 6 When the focus box turns green, the camera has focused on your subject.
- 7 Press the capture button fully.

TIP! Touch Shot

You can take a photo by touching screen also. After selecting an object with touch, you can see the subject in the focus box. When the focus box turns green you can take a photo simply by removing their finger from the screen.

TIP! Face Tracking

Automatically detects and focuses on human faces to help you to take clear Pictures.

01

02

03

04

05

06

07


08


Camera


After you've taken your photo


Your captured photo will appear on screen. The name of the image runs along the bottom of the screen together with six icons down the right side.





 Touch to take another photo straightaway. Your current photo will be saved.

 Touch to view a gallery of saved photos.


 Touch to send the photo as a **Message, Email, or Bluetooth**. See page 34 for Sending a message, and page 109 for Sending and receiving your files using Bluetooth.

 Touch to upload to your Blogger account.

 Touch to set the picture you have taken as Wallpaper.

 Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

Getting to know the viewfinder

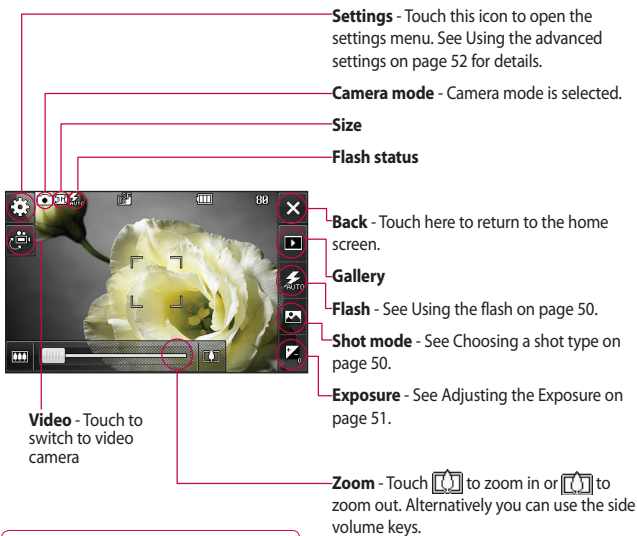

TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

01

02

03

04

05

06


07

08



Camera

Using the flash

The flash is set to auto as default, but there are other options.

- 1 Select  from the right side of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
Auto - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.
Red-eye reduction - The camera will flash twice in order to reduce red eye.
Always off - The camera will never flash. This is useful if you want to save battery power.
- 3 When you touch the option you want to use the flash menu will automatically close, ready for you to take your picture.
- 4 The flash status icon in the viewfinder will change according to your new flash mode.

Choosing a shot mode

- 1 Touch  to open the available shot mode.
- 2 Choose from seven options:
Normal shot - This is the default shot type, the photo will be taken in the normal way, as outlined in taking a quick photo.
Smile shot - This shot type is great for taking a photo of people. Focus on the subject and press  then the photo will be taken automatically when it smile.
Beauty shot - This enables you to take a photo of person's face clearly and brightly. Especially useful when you are close up.
Art shot - Choose different picture effects. (Original, Black&White, Warm, Cold.)

Continuous shot - This enables you to take seven shots automatically in very quick succession. See **Taking a continuous shot** on page 51 for details.



Panorama - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view. See **Taking a panoramic shot** on page 52 for more details.

Frame shot - Choose from one of the fun frames to transform your friend or just decorate their surroundings.



Adjusting the exposure

Exposure defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

1 Touch .

2 Slide the contrast indicator along the bar, towards  for a lower exposure, hazier image or towards  for a higher exposure, sharper image.

Taking a continuous shot

- 1 Touch  to open the available shot types and select Continuous shot.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take seven shots in quick succession and display the first with seven thumbnails shown on the left side of the screen.
- 4 Once you have highlighted the image you want to keep, touch . You will be given a chance to save more than one of the images.

01

02

03

04

05

06

07

08

Camera


Taking a panoramic shot

Capture life as it appears using a panoramic shot. The camera will let you take three photos, all aligned, and combine them into one wide angle image.

- 1 Touch  to open the available shot types and select **Panorama shot**.
- 2 Take the first photo as normal. A ghosted version of the right side of the image will appear in the viewfinder.
- 3 When you take the second and third photo, line the ghost of the previous image up with the image in the viewfinder.
- 4 In the photo gallery, the photos will be saved as one panoramic image.

NOTE: Due to the image size the panoramic photo will appear slightly distorted in the Gallery view. Touch it twice to view it properly.

Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.

Preview settings

Size - Change the size of the photo to save on memory space or take a picture preset to the correct size for contact. See **Changing the image size** on page 55.

Scene mode - Set the camera to adjust to the environment. Choose from **Auto, Portrait, Landscape, Night, Beach** and **Sport**.

Colour Effect - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour effect** on page 55.

Blink detection - This enables the camera to stop taking a photo when it detects the blink of an eye.

White balance - Choose from Auto, Incandescent, Sunny, Flourescent or Cloudy.

Macro - Switch on to take close up shots.

Self-timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from **Off, 3 seconds, 5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

ISO - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when the flash can't be used. Choose an ISO value

from **Auto, ISO 100, ISO 200, ISO 400, ISO 800** or **ISO1600**.

Quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

Back light compensation - when you take a photo with a bright background, the subject may appear dark. Turn this function ON to compensate for this. The subject of the photo will be brighter.

Inner/Outer Camera - For self portraits, switch to the LG KC910q's inner camera. See **Using the inner camera** on page 55 for details.

Preview Style - Set the form of preview.

01

02

03

04

05

06

07

08

Camera

Other settings

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

Geo-Tagging - Choose to switch on the EXIF information for the photo to write GPS information.

Zoom - Choose zoom from 4X, 8X or 16X.

Image stabilization - Enables you to take a photo without camera instability or shake.

Focus - Select the way the camera will focus. Choose from Auto, Manual or Face tracking.

Shutter sound - Select one of the three shutter sounds or no sound.

Grid screen - Choose from Off, Simple cross or Trisection.


Reset settings - Reset all the camera settings.

TIP! When you exit the camera all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example colour tone and ISO. Check them before you shoot your next photo.


TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu.

Changing the image size

The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Size** from the Preview menu.
- 3 Select a pixel value from the six numerical options (**8M: 3264 X 2448, 5M: 2592x1944, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) or choose the preset: **Contacts** - This sets the camera to take a photo the perfect size to be added to a phone contact.

Choosing a colour effect

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options: **Off, Black & White, Negative, Sepia** or **Posterize**.
- 4 When you've made your selection the colour tone menu can be closed by selecting the back icon, ready for you to take your picture.

TIP! You can change a photo taken in colour to black and white or sepia after it's taken, but you cannot change a picture taken in black and white or sepia back to colour.

01

02

03

04

05

06


07


08

Camera


Using the inner camera

Your LG KC910q has a 640x480 inner camera, not just for video calling but for taking pictures too.


- 1 To switch to the inner camera touch  then select **Inner Camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image press the capture button as normal.

TIP! The inner camera has fewer settings as it has no flash or ISO. You can still alter the image size, scene mode, colour effect, image quality, white balance and set the self-timer by touching  in the same way as when using the main camera.

- 3 After you've taken the photo you'll be offered all the same options available for an image taken with the main camera.


- 4 To return to the main camera touch  and then select **Outer Camera** from the Preview menu.

Viewing your saved photos




- 1 You can access your saved photo's from within the camera mode. Simply touch  and your gallery will appear on screen.

Video camera

Shooting a quick video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Alternatively, touch  in the view finder in camera mode to switch to video mode.

TIP! Quickly open the video camera by pressing and holding the camera key.

- 3 The video camera's viewfinder will appear on screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 **Rec** will appear at the top of the viewfinder and a timer at the bottom showing the length of your video.
- 7 To pause the video touch  and resume by selecting .
- 8 Touch  on the screen or press the capture button a second time to stop recording.

01

02

03

04

05

06


07


08


Video camera


After you've shot your video


A still image representing your captured video will appear on screen. The name of the video runs along the bottom of the screen together with six icons down the right side.

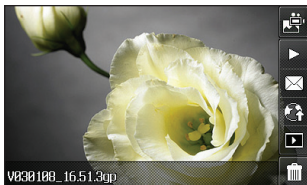



 Touch to shoot another video straight away. Your current video will be saved.

 Touch to play the video.


 Touch to send the video as a message, by **Email** or by **Bluetooth**. See page 34 for **Sending a message**, or page 109 for **Sending and receiving your files using Bluetooth**.

 Touch to upload to your youtube account.

 Touch to view a gallery of saved videos and pictures.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

Getting to know the viewfinder

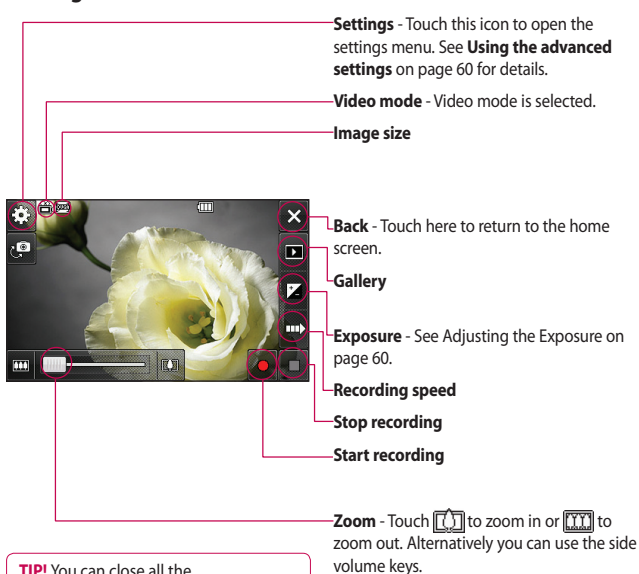

TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

01

02

03

04

05

06




07

08

Video camera

Adjusting the exposure

Exposure defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, towards  for a lower exposure, hazier image, or towards  for a higher contrast, sharper image.

Using the advanced settings

From the viewfinder touch **Settings** to open all the advanced settings options.

Preview settings

Video size - Change the size of the video to save on memory space. See

Changing the video image size on page 61.

Scene mode - Choose from Auto or Night.

Colour Effect - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page 62.

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

Quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality the sharper a video will be. The file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose from **Normal**, or **MMS** to limit the size to be able to send the video as an MMS.

TIP! If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.

Inner/Outer camera - Switch to your LG KC910q's inner camera to record a video of yourself. See **Using the inner video camera** on page 62 for details.

Other settings

Memory - Choose whether to save your videos to the Handset memory or to the External memory.

Voice - Choose Mute to record a video without sound.


Zoom - Choose zoom from 4X, 8X or 16X.


Reset settings - Reset all the video camera settings.


Noise-free Microphone - Supports recording without sound.

Changing the video image size

The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select a pixel value from the five options:

 **640x384(W)** - The highest quality widescreen option.

 **400x240(W)** - This is also widescreen, but of a lower resolution.

 **640x480** - Standard sized VGA.

01

02

03

04

05

06

07

08

Video camera



320x240 - Smaller image size, therefore smaller file size. Great for saving on memory space.



176x144 - Smallest image size and therefore smallest file size.

- 4 Touch the back icon to return to the viewfinder.



WARNING: The great editing software on your LG KC910q is compatible with all video types except 640x384 and 640x480. Don't record in this format if you plan to edit your video.

TIP! For video format conversion software, see the CD you received with your KC910q.


Choosing a colour tone


- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options, **Off** (colour), **Black & White**, **Negative**, **Sepia**, **Posterize**.
- 4 Touch the colour tone you'd like to use.

TIP! You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia back to colour.

Using the inner video camera


Your LG KC910q has a 320x240 inner camera, not just for video calling but for recording videos too.

- 1 To switch to the inner camera touch  then select **Inner**

- Camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, press a second time to stop recording.
 - 3 After you've shot the video you'll be offered all the same options available for a video shot using the main camera.
 - 4 To return to the main camera touch  and then **Outer Camera**.

TIP! You can still alter the image size, scene mode, colour effect, white balance and quality by touching **Settings** in the same way as when using the main camera.

Watching your saved videos


- 1 In the viewfinder touch .
- 2 Your gallery will appear on screen.

- 3 Touch the video you want to view once to bring it to the front of the gallery. It will automatically begin to play.

Watching your videos on your TV

Connect your KC910q to your TV using the TV output cable. During video playback, select options, from drop down menu select TV Out. This will allow you to play the video on your TV.

NOTE: The TV output cable is available for purchase separately. If in Option menu TV Out function is not present, please note that the video file you are playing is not compatible with TV Out.

 **WARNING:** All formats except 320x240 and 176x144 are compatible with watching on TV.

01

02

03

04

05


06

07

08


Your photos and videos

Viewing your photos and videos

- 1 Touch  on your camera preview screen.
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo to open it fully.



TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.



Using zoom when viewing a video or photo


To zoom in press **+** repeatedly. To zoom out press **-**. Use the thumbnail in the bottom right corner to move the focus area.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, touch the volume bar on the left side of the screen. Alternatively, use the volume keys on the side of the phone.


Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch **||** to pause the video on the frame you'd like to convert to an image. Select  from the right side of the screen.
- 3 The image will appear on screen, with its assigned image name.
- 4 Select **Save**.
- 5 Touch the image then  to return to the gallery.
- 6 The image will be saved in My folders and appear in the gallery. You need to exit the gallery and then re-open it for this to appear.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.

- 1 Touch the photo you would like to begin the slideshow to open it.
- 2 Select .
- 3 The slideshow will begin.



01

02

03

04

05





06

07



08

Your photos and videos

There are options within slideshows:


-  Touch to skip photos.
-  Touch to pause the slideshow on a particular photo.
-  Touch again to resume playback.
-  Touch to increase or decrease the speed of the slideshow.


Setting a photo as wallpaper


- 1 Touch the photo you would like to set as wallpaper twice to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch  .
- 4 The screen will switch to portrait mode. You can zoom in and out on the picture and move the cropped section using a thumbnail at the bottom of the screen.
- 5 When you are happy with the picture touch .

Editing your photos


There are loads of great things you can do to your photos to change them, add to them or liven them up a little.


- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to adapt your photo:

 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.


 Draw something on your photo freehand. Select the thickness of the line from the four options and the colour you would like use.


T Put writing on the picture. See **Adding text to a photo** on page 67.


 Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be.


 Erase the editing you have added to the picture. You can choose the size of eraser that you use.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file** enter a file name.

 Undo the last **Effect** or edit you made to the photo.


 See **Adding an effect to a photo** on page 69.

 It helps to adjust the picture taken using Auto color, brightness etc.

 Touch to return to the gallery.



Adding text to a photo

- 1 From the editing screen, touch .
- 2 Select **Signature** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the Keyboard and touch **Done**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

01

02

03

04

05

06

07

08

Your photos and videos

Adding an effect to a photo

- 1 From the editing screen, touch



- 2 Choose to apply any of the eighteen options to the photo

Face beautify - Automatically detect a face in the image and brighten it up.


Tunnel effect - Make your picture look like it has been taken using an old Lomo film camera!

Colour negative - Colour negative effect.

Black and white - Black and white colour effect.

Sepia - Sepia effect.

Blur - Apply a blurred effect.

Sharpen - Move the marker along the bar to sharpen the focus of the photo. Select the **OK** icon to apply the changes or choose  to cancel.

Mosaic blur - Touch to apply a blurred pixelated effect to the photo.

Oil painting - Oil painting effect.

Sketch - Apply an effect to make the picture look like a sketch.

Emboss - Emboss effect.

Solarize - Change the effect of exposure to the light.

Vivid - An effect of clearness and brilliance.

Moonlight - Change the light to look like moonlight.

Antique - An old photo effect.

Glow - A light beam effect.

Cartoon - A cartoon effect.



Water color - Make the picture look like a water colour painting.

- 3 To undo an effect simply touch




TIP! You can add more than one effect to a photo.

Crop a photo


- 1 From the editing screen touch .
- 2 Choose the shape you would like to use to crop the picture.
- 3 Drag the box over the area you would like to crop.
- 4 When you are happy with your selection, touch .

Morphing a photo

Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect.

- 1 From the editing screen touch .
- 2 Choose **Morphing** and four crosses will appear on the photo.
- 3 Move the crosses around the photo so they are on the parts you'd like to morph. For example, if you are morphing a face, place a cross on the outside corner of

each eye and one each side of the lips.

- 4 Select a face to represent how you'd like to morph the photo.
- 5 Select  to save the changes.

Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or jumper.
- 4 Alter the intensity of the accenting by touching  and then sliding the marker up or down the intensity bar.
- 5 Touch **OK**.

01

02

03

04


05

06

07

08

Your photos and videos

- 6 All colour will be removed from the photo, apart from the section marked for colour accenting.
- 7 Select  to save the changes.

Swapping the colours in a photo







- 1 From the editing screen, touch .
- 2 Choose **Colour swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or jumper.
- 4 Touch  and select a colour.
- 5 Press **OK**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select  to save the changes.


Editing your videos

The editing features are available for all video types except 640X384 and 640x480.

Don't record in these formats if you plan to edit your video.

Trimming the length of your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Trim**.
- 3 Touch  and mark the new start and end points using .
- 4 Touch  to ensure you are happy with the new cut.
- 5 Touch  or, alternatively, touch  to return to the gallery and discard the changes.

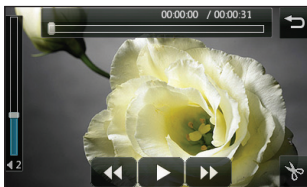

Merging two videos together

- 1 Open the video you'd like to edit, select and touch the screen to bring up the options.
- 2 Select and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you would like to merge.
- 4 Touch to choose how the videos merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split** or **Shape diamond**.

- 5 Press followed by **Yes** to save the new merged video. Choose to save over the original file or as a new file.
- 6 Repeat these steps to merge more videos.

Merging a photo with a video

- 1 Open the video you'd like to edit, select and touch the screen to bring up the options.
- 2 Select and choose **Image merge**.
- 3 The My images folder will open. Choose the photo you would like to merge into your video and touch **Select**.

01

02

03

04


05

06



07



08

Your photos and videos




- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch  to choose how the photo and video merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checkerboard, Dissolve, Split or Shape diamond.**
- 6 Press **Save** followed by **Yes**. Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Text overlay**.
- 3 Enter your text using the keypad and select **Save**.


- 4 Touch  and mark when you'd like the text to appear using .
- 5 Touch the area of the screen you'd like the text to appear in.







- 6 Touch  to mark when you'd like the text to disappear.
- 7 Touch  to ensure you are happy with the text overlay.
- 8 Touch  followed by **Yes**. Choose to save over the original file or as a new file.
- 9 Repeat these steps to add more text.

Overlaying a photo

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Image overlay**.
- 3 The My images folder will open. Choose the photo you would like to overlay your video.
- 4 Touch  and mark when you'd like the photo to appear using .
- 5 Touch the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.
- 6 Touch  to mark when you'd like the photo to disappear.
- 7 Touch  to ensure you are happy with the photo overlay.

- 8 Touch  followed by **Yes**. Choose to save over the original file or as a new file.
- 9 Repeat these steps to add more photos.

Adding a voice recording

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Voice recording**.
- 3 The quality of the original audio will be affected by adding a voice recording. Touch **Yes** to continue.
- 4 Touch  to view your video. When you get to the part you'd like to record your voice over, press .

01

02

03

04


05




06

07

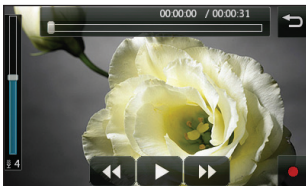

08

Your photos and videos





- 1 Press  to stop recording and playback.
- 2 Touch  to ensure you are happy with the voice recording.
- 3 Touch  followed by **Yes** to save. Choose to save over the original file or as a new file.
- 4 Repeat these steps to add more voice recordings to the video.

Adding a soundtrack to your video



- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Audio dubbing**.

- 3 The My sounds folder will open. Choose the track you would like to add to your video.
- 4 The original audio of your video will be erased. Touch **Yes** to continue.
- 5 If the audio is shorter than the video choose whether to play **Once** or to **Repeat** it.
- 6 Choose to save over the original file or as a new file.

Changing the speed of your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Time scaling**.
- 3 Select one of the four speed options: **x4**, **x2**, **x1/4**, **x1/2**.
- 4 Choose to save over the original file or as a new file.

Adding a dimming effect

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Dimming Effect**.
- 3 Choose to save over the original file or as a new file.
- 4 Your video will now fade in at the start and fade out at the end.

01

02

03

04

05

06

07

08

Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then **Entertainment**. Touch **My stuff** to open a list of folders storing all of your multimedia files.

Pictures

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

My images options menu

The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as, Print, Sort by** and **Memory manager** options are available for default images.

TIP! When looking at a picture, turn the phone to landscape to bring up further options on the right side of the screen. Choose from send, upload, set as homescreen, edit and delete.

Send - Send the image to a friend.

Edit - Edit the image.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the

phone memory to a memory card or vice versa.

Use as - Choose from Main screen theme, Contacts image, Incoming call, Outgoing call, Switch on or off image.

Rename - Rename an image.


Smart Light - Change the lighting of your picture to improve it automatically.

Print - Print the selected image using a printer supported by Pictbridge or Bluetooth.

Slide show - View your images as a slide show.

File info. - View the file information.



Sending a photo

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select the picture you want to send, and touch **Send**. Choose from **Message**, **Email**, **Bluetooth**, or **Blog this**.

- 4 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:

Main screen theme - Set a wallpaper for the home screen.

Contacts image - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

01

02

03

04

05

06

07

08

Multimedia

Incoming call - Set an image to appear during incoming calls.


Outgoing call - Set an image to appear during outgoing calls.

Switch on - Set an image to appear when you switch the phone on.


Switch off - Set an image to appear when you switch the phone off.

Marking up your images

A low- light photo can be adjusted without lowering the quality of the picture.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch  then touch **Smart Light**.
- 4 The light will automatically be changed, and you will have an option to save the new image.



Printing an image

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

TIP! You can to print via bluetooth or by connecting to a PictBridge printer.



Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Select **Move** or **Copy**.



Creating a slide show

If you want to look at all of the images on your phone, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Slide show**.

Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Memory manager**.
- 4 Choose **Handset memory** or **External memory**.

NOTE: If you do not have a memory card inserted, you will not be able to select External memory.

Sounds

The **My sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**.

From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and and it will begin to play.
- 5 Touch  and select **Use as**.
- 6 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up** or **Shut down**.

01

02

03

04

05

06

07


08

Multimedia

Videos


The **My videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My videos**.
- 3 Select a video to play.

TIP! KC910q supports both DivX & Xvid video format playback to ensure greater content availability. Refer to page 99 in detail.

Using options while video is paused

Touch  while in pause mode and choose from:

- Capture** - Capture the frozen frame as a picture.
- Send** - Send the video in a message, email, via Bluetooth or you tube.
- Delete** - Delete the video.


Use as - Enables to set Voice ringtone or Video ringtone. (This can be limited by Video frame size.)

Edit - You can edit the file.

File info. - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.


NOTE: The TV output cable is available for purchase separately.

Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **YouTube, Message, Email** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.


Games and Applications

You can download new games and applications to your phone to keep you amused when you have time to spare.

TIP! To delete any file in My stuff, touch  then **Delete**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Playing a game

- 1 Touch  then **Entertainment**.
- 2 Touch **Games & Applications**, then **M-Toy**.
- 3 Choose and touch a game to launch.

Using the games options menu

From the Games & apps folder, the following options are available:

Create new folder – Create a folder within **Games & apps**.

Sort by - Sort the games and applications by **Date**, **Size** or **Name**.

Memory manager - View the memory status.

File info. - View the game information.

01

02

03

04

05

06

07


08

Multimedia

Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.

Viewing an SWF/ SVG file

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Flash contents**.
- 3 Select the file to view.

Using options viewing the SWF/ SVG file

Touch  and choose from:

Mute - Switch the sound off.


Send - Send the file as a **Message**, **Email** or via **Bluetooth**.

File info. - View the Name, Size, Date, Time, Type and Protection of the file.

Documents

From Documents in My stuff, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files.

Viewing a file

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Documents**.
- 3 Select a document and touch **View**.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 107 for details.


To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To move a file from Others to Documents:

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Others**.
- 3 Select a file and touch .
- 4 Touch **Move**, then touch **Move** again.

01

02

03

04

05





06


07

08


Multimedia

Creating a movie

- 1 Touch  then **Entertainment**.
- 2 Touch **Muvee Studio**.
- 3 Touch  to add an image.
Touch the images you want to include then select **Insert**.
- 4 Touch the style tab across the top to choose a movie style.
- 5 Touch the sound tab at the bottom of the screen to change the sound, such as a voice recording.
- 6 Touch the **Play** button to see what you've created.
- 7 Touch  then **Play Order** to change the order.
- 8 Touch  then **Save Location** to choose where to save the movie, and touch **Duration** to choose between long and short.
- 9 To save your movie, press play and then touch the save icon in the top left corner.

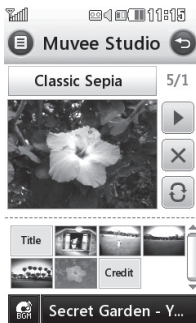

Music

Your LG KC910q has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then **Entertainment** and **Music**. From here you can access a number of folders:

Recently played - You can see the list recently played.

All tracks - Contains all of the songs you have on your phone.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains any playlists you have created.

Shuffle tracks - You can listen to the music randomly.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite, see page 107 for details. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

01

02

03

04

05






06


07

08

Multimedia


Playing a song

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **All tracks**.
- 3 Select the song you want to play and touch **Play**.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

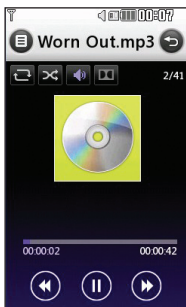

TIP! KC910q is the first worldwide handset to apply Dolby Mobile for music, Providing trademark Dolby sound quality to your mobile phone.

Using options while playing music

Touch  and choose from:

Minimize - Make the music player screen disappear so that you can continue using your phone as normal.

Go to my music - Return to the Music menu.

Visualization - Select a visual effect.

Add to playlist - Add the track to one of your playlists.

Send - Send the song as a message, Email or via Bluetooth.

Delete - Delete the song.

Use as - Use the song as a Voice ringtone, Video ringtone, Message

tone, Start-up or Shut down.


File info. - View information including the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

TIP! To change the volume while listening to music, touch




Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.



- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Touch **Add New playlist**, enter the playlist name and touch **Save**.
- 4 The All tracks folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 5 Touch **Done**.

To play a playlist, select it and touch Play.

NOTE: To add a second playlist, touch  then Add new playlist.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. When you want to do this, you can edit the playlist.

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Select the playlist.
- 4 Touch  and select:

Add new songs – To add more songs to the playlist. Mark the ones you want and touch **Done**.

Move down – Move the song down the list to change the playing order.

Change list order - Change the playing order of the playlist.

01

02

03

04

05

06

07

08

Multimedia



Send – Send a song as a message, Email or via Bluetooth.

Remove from list – Remove a song from the playlist. Touch **Yes** to confirm.

Memory info. - View the memory status.

Remove all - Remove all tracks from the playlist.

Deleting a playlist

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Touch  then **Delete** or **Delete all** to delete all of the playlists.

Using the radio



Your LG KC910q has an FM radio, so you can tune into your favourite stations and listen to them on the move.

NOTE: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).



Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone.



To auto tune:

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then .

- 3 Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to channel numbers in your phone.

NOTE: You can also manually tune into a station by using  and  displayed next to the radio frequency.

Resetting channels

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

01

02

03

04

05

06

07


08

Organiser


Adding an event to your calendar

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you would like your event to begin.
- 5 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 6 If you would like to add a subject or a note to your event, touch **Note** and type in your note.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square


colour cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

TIP! You can set a holiday in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**. Each day will be shaded green.



Changing your default calendar view

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**. Select **Organiser settings**.
- 2 Touch **Calendar settings** and choose either **Month view** or **Week view**.
- 3 Set **week starts on**.
- 4 Press **Save** to confirm your choice.

Adding an item to your To do list

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
- 2 Select **To do** and touch **Add to do**.
- 3 Set the date for the task, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your task by selecting **Save**.

Sharing a To do task


- 1 From the home screen select , then **Utilities** and choose **Organiser**. Select **To do**.
- 2 Select the task you would like to share, then touch .
- 3 Select **Send**. You can choose to share your to do item by **Text message, Multimedia msg., Email** or **Bluetooth**.

TIP! You can back up and synchronise your calendar with your computer. See PC Sync on page 96.

Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

This is great for keeping tabs on deadlines.

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

01

02

03

04

05

06

07

08

Organiser

Setting your alarm

- 1 From the home screen select  then touch **Utilities** and choose **Alarms**.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound and touch **Save**.
- 4 Choose whether you would like your alarm to Not repeated, Daily, Sun_Thu, Sun-Fri, Fri-sat, Except Holidays. Choose weekday Options are there in phone under Repeat. The icons indicate the weekday you select.
- 5 Select **Alarm type** to select a type for your alarm.
- 6 To change your alarm sound, touch the Alarm bell box and select a new sound. To preview press .
- 7 Add a memo for the alarm.
- 8 Finally you can set the snooze interval at 5, 10, 20, 30 minutes,


1 hour or off.

- 9 Once you have set your alarm, touch **Save**.
- 10 To power off the alarm, you can choose snooze or stop.

NOTE: You can set up to 5 alarms.

TIP! Touch on/off icon on the right hand side of the alarm.


Adding a memo

- 1 From the home screen select  then touch **Utilities** and choose **Memo**.
- 2 Touch **Add memo**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

TIP! You can edit an existing memo. Select the one you want to edit and type your changes.

Voice recorder

Use your voice recorder to record voice memos or other sounds.





- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder** then  and choose from:


Duration – Set the recording duration. Choose from **MMS msg. size, 1 min** or **No limit**.

Quality – Select the sound quality. Choose from Super Fine, Fine or Normal.

Go to my sounds – Open the Voice recordings folder in **My sounds**.

Recording a sound or voice

- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

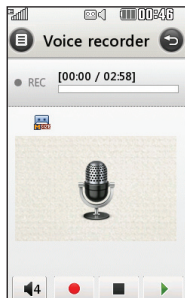

Sending the voice recording

- 1 Once you have finished recording, touch .
 - 2 Touch **Send** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose Bluetooth, you will be prompted to turn Bluetooth on.
- NOTE:** After you have finished recording, touch  and choose

01

02

03

04

05

06



07

08


Organiser

Send, Files, Delete, Use as (to use the recording as your ringtone), **Duration, Quality, or Go to my sounds.**

Using your calculator


- 1 From the home screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, -, x, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad** etc..

Converting a unit

- 1 From the home screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Converter**.

- 3 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Using the stopwatch


- 1 From the home screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.


Adding a city to your world time

- 1 From the home screen select  then touch **Utilities** and choose **Tools**.
- 2 Select **World clock**.
- 3 Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen.
- 4 Touch the city to select it, and it will be added to your World time list.

Jogging Buddy

Whether walking, running or jogging, KC910q provides up-to-the-second information including distance and time, and keeps an exercise log for you by using advanced GPS technology.

- 1 From the home screen select  then touch **Utilities** and choose **Tools**.

- 2 Select **Jogging buddy**.
- 3 Touch << >> to set Distance or Time for your jog.
- 4 You can switch Regular beep on or off.
- 5 Once GPS is connected, the start button will light up. Touch  to start.

 - Reset button

Regular beep - The phone beeps at distance or time intervals to help you keep track without having to keep looking at the screen.

 - Start button

 - Pause button

 - Stop button

01

02

03

04

05

06

07


08

PC Sync

Always ask mode

If you set the “Always ask mode” as default, the phone will always prompt you to select a type of USB connection mode each time you connect the phone to a PC via the data cable. If you disable the “Always ask mode”, the connection mode will be the one you have manually set in Menu - Settings - Connectivity - USB Mode and one of the options Internet, Mass Storage or PC Suite. You can synchronise your PC with your phone to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the home screen select  then select **Settings** and choose **Connectivity**.
- 2 Select **USB connection** mode and select **PC suite**.
- 3 Insert the supplied CD into your PC. Click on the LG PC Suite Installer which will appear on your screen.
- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 6 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.
- 4 Click on **Next**, then **Next** again, then **Finish**. Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose to back up **Contents Data** and/or **Phonebook/Schedule/ToDo/Memo Data**. Select the location you would like to backup information to, or restore information from. Click **OK**.

- 4 Your information will be backed up.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your USIM card and handset.

01

02

03

04

05

06

07

08

PC Sync

- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

NOTE: To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Right click on one of your contacts and choose **Select all**, then **Copy** or **Move to phone memory**.


Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your USIM and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the home screen select , then touch **Settings**.
- 3 Select **Connectivity**, then **USB connection** mode.
- 4 Touch **Mass storage**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.
- 6 A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.

NOTE: Your phone must be unplugged from your PC to initiate Mass Storage.

NOTE: Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

DivX Converter

Install the DivX converter which is supplied on the same CD as the PC Sync software. DivX will convert media files on your PC to a format that enables you to upload and view them on your phone.

Once installed select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select

Preferences, you can change the location of where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is finished a Conversion complete pop up will be displayed.

The converted file can now be transferred to your phone, using the Mass Storage functionality (see page 98 for details) or Upload contents using the PC Sync software (see page 97 for details).

01

02

03

04

05

06

07


08

The web

Browser

Browser gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 From the home screen select  then touch **Utilities** and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks


For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the home screen select , then touch **Utilities** and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch connect. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Saving a page

- 1 Access a webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

01

02

03

04

05


06

07


08

The web


Accessing a saved page

- 1 From the home screen select  then touch **Utilities** and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select the page you would like to view and it will open.

Viewing your browser history

- 1 From the home screen select  then touch **Utilities** and choose **Browser**. Select **History**.
- 2 The web page you have accessed recently will be displayed. To access one of these pages, simply select the item required.

Changing the web browser settings

- 1 From the home screen select  then touch **Utilities** and choose **Browser**. Select **Browser Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **security**, or **Reset Settings**.
- 3 You can simply set these to on or off by touching the switch icon.

Using your phone as a modem

Your KC910q can double as a modem for your PC, giving you email and internet access. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KC910q and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Internetkit** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KC910q.
NOTE: For more information on synchronising using the LG PC Suite see page 96 or refer to Help Menu in PC Sync software if you need further information.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KC910q.
- 2 Pair your PC and KC910q so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internetkit** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KC910q.
NOTE: For more information on Bluetooth see page 110.

01

02

03

04

05

06

07


08

Settings

Within this folder you can adapt your settings to make your KC910q personal to you.

NOTE: For information on call settings see page 27.

Changing your screen settings

- 1 Touch  then choose **Settings**.
- 2 Touch **Screen Settings** and then choose from:

Wallpaper - Choose the theme for your home screen.

Dialling - Adjust the number size and colour.

Font - Adjust the font size.

Backlight - Choose how long the backlight remains on for.

NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Brightness - Adjust the screen brightness.

Theme - Quickly change the whole look of your screen.

Greeting message - Choose on or off and fill in the greeting message.

Choose an image for **Incoming calls**, **Outgoing calls**, **Start-up** and **Shut-down**.


Reset main menu - To reset the main menu, touch **Yes**.

- 3 Touch **Save** to save your settings.

Personalising your profiles

You can quickly change your profile on the home screen. Simply touch the status summary icon on the top and touch the profile tab.

Using the settings menu you can personalise each profile setting.


- 1 Press  and then choose **Settings**.
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options

available in the list, including your **Voice/Video ringtone** and **Volume, Message alerts** and more.

Changing your phone settings

Enjoy the freedom of adapting how your KC910q works to your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose **Settings**.
- 2 Touch **Phone settings** then choose from the list below.

Date & Time - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.

Power save - Choose to switch the factory set power saving settings **On**, **Off** and **Auto**.

Languages - Change the language of your KC910q's display.

Auto key lock - Lock the keypad automatically in home screen.

Security - Adjust your security settings, including PIN codes and handset lock. (The default security code is 0000)

Memory manager - See **Using memory manager** on page 108 for more information.

Reset settings - Reset all the settings to their factory definitions.

Information - View the technical information for your KC910q.

01

02

03

04

05


06

07

08


Settings

Changing your touch settings

Touch  then **Settings**. Choose **Touch settings**. To reset the touchpad and make it easier to use, select **Touchpad calibration** and touch the crosses. Save the settings when you are happy with them. Select **Touchscreen effect** to reset touch **Type, Tone, Tone volume, Vibration** and **Vibration volume**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the start. If you want to change any settings, use this menu.

Touch  then **Settings**. Touch **Connectivity**.

Network settings - Your KC910q connects automatically to your preferred network. To change these settings use this option.

Internet profile - Set the profiles for connecting to the internet.

Access point - Your network operator has already saved this information. You can add new access points using this menu.

GPS type - Choose either **Assisted GPS** or **Stand alone**.

GPS

- GPS technology uses information from earth-orbiting satellites to find locations.
- A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach it, then uses that information to identify its location.
- It may take from a couple of seconds to several minutes.
- Assisted GPS(A-GPS) on this mobile is used to retrieve location assistance data over packet data connection.
- The assistance data is retrieved from the Service server only when you needed.
- Take pictures of where you are and have the pictures tagged with information about your location.

Note : Use of GPS Receiver requires an application that may not be included in software provided by your service provider.

Note : GPS service has an error tolerance and it is unable to work in buildings or underground.

USB connection mode -

Synchronise your KC910q using the LG PC Suite software to copy files from your phone. See page 96 for more information on synchronisation.

If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is available for only music contents. If you want to synchronize with external memory, you can use 'Mass storage.'

Server Sync - The Server sync function synchronises the data in a phone and the data on a server such as contact address information, schedule items, to do items and memo items via a wireless network.

01

02

03

04

05

06

07

08

Settings

Streaming settings - Your network operator has already saved this information. You may edit it if you'd like to make changes.

TV out - Choose **PAL** or **NTSC** for connecting your KC910q to a TV.

NOTE: The TV output cable is available for purchase separately.


Java settings - Allows you to set Profiles.

Divx VOD registration: Generate a DivX VOD registration code.

Please visit <<http://vod.divx.com/>> for registration and technical support.

Using memory manager

Your KC910q has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately). You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by **Settings**. Select **Phone settings** then **Memory Manager**.

Handset common memory - View the memory available on your KC910q for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.


USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage settings - Choose the location you prefer items to be saved to.

TIP! See page 14 for information on **Installing a memory card.**

Using flight mode


Turn on flight mode by selecting  then **Settings**. Touch **Profiles** and choose **Flight mode**.

Flight mode will not allow you to make calls, connect to the Internet, send messages or use Bluetooth.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send**. Choose **Bluetooth**.

- 3 Touch **Yes** to turn Bluetooth on.
- 4 If you have already paired the Bluetooth device, your KC910q will not automatically search for other Bluetooth devices. If not, your KC910q will search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and touch **Select**.
- 6 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.

01

02

03

04

05

06

07


08

Settings

- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your My stuff.

Changing your bluebooth settings:

- 1 Touch  and choose **Settings**.

- 2 Choose **Bluetooth** then touch  and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your Phelephone KC910q.

Supported services - Choose how to use Bluetooth in association with different services. See **Using your phone as a modem** on page 103 or **Using a Bluetooth headset** on page 111.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your KC910q and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your KC910q will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.

- 6 You passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Ask always** or **Allow without ask** and touch **Yes to Connect now**. Your KC910q will automatically switch to Headset profile.

TIP! See page 27 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

01

02

03

04

05

06

07

08

Wifi

Wi-Fi allows the phone to connect to local wireless networks, or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology.

NOTE: KC910q supports WEP, WPA-PSK/2 encryption not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets the encryption for network security, you should fill in the key in the pop-up window. If the encryption is not set, this pop-up window is not shown. If you don't know the key, you need to ask for it from your Wi-Fi service provider or network administrator.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to upgrade

your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are available to use with your KC910q.

Charger



Battery



Stylus and carry strap



Stereo headset



Data cable and CD

Connect and synchronise your KC910q and PC.



User Guide

Learn more about your KC910q.



01

02

03

04

05

06

07

08

NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with your retailer.

Network service

The wireless phone described in this guide is approved for use on the GSM and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KC910q
System : GSM / W-CDMA

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)
Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM/ W-CDMA Terminal Equipment

Model Name

KC910q

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 29.Aug. 2008

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, e-mail : seokim @ lge.com


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model KC910q has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used

frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.993 W/kg (10g) and when worn on the body is 1.26 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

Guidelines for safe and efficient use

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

Message	Possible causes	Possible Corrective measures
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly Battery empty Battery contacts dirty	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean contacts.

Message	Possible causes	Possible Corrective measures
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

