



عربي
ENGLISH

دليل مستخدم
GW525

ENGLISH
عربي



CE 0168

www.lgmobile.com

P/N : MMBB0340338 (1.0) H

دليل مستخدم **GW525**

LG ELECTRONICS INC.

GW525 User Guide



CE 0168

www.lgmobile.com

P/N : MMBB0340338 (1.0) H

Bluetooth QD ID B015130



قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.

دليل مستخدم GW525

تهانينا لشرائك الهاتف المتقدم والصغير الحجم GW525
من LG. والمصمّم للعمل مع تقنية الاتصال الرقمي الأحدث
للهواتف المحمولة.

24.....	انتظار مكالمة	8.....	التعرف على هاتفك
24.....	استخدام حظر المكالمات	9.....	نظرة على الهاتف وهو مفتوح
24.....	رقم اتصال محدد	11.....	تثبيت بطاقة SIM والبطارية
24.....	استخدام رسالة اعتذار	14.....	بطاقة الذاكرة
24.....	تكاليف المكالمات	14.....	تركيب بطاقة ذاكرة
25.....	مدة المكالمة	14.....	تهيئة بطاقة الذاكرة
25.....	حجم البيانات	15.....	نقل الأسماء
25.....	تغيير ضبط المكالمات العام	16.....	خريطة القوائم
27.....	الأسماء	17.....	شاشة وضع الانتظار
27.....	البحث عن جهة اتصال	17.....	تلميحات شاشة اللمس
27.....	إضافة جهة اتصال جديدة	18.....	المفاتيح السريعة
28.....	خيارات الأسماء	19.....	شريط الحالة
28.....	إنشاء مجموعة	20.....	تغيير الحالة من شريط الحالة
29.....	تغيير إعدادات الأسماء	20.....	استخدام وظيفة المهام المتعددة
30.....	عرض المعلومات	21.....	الكلمات
31.....	الرسائل	21.....	إجراء مكالمة
31.....	الرسائل	21.....	تغيير إعدادات شاشة لوحة مفاتيح اتصال
31.....	إرسال رسالة	21.....	الاتصال بجهات الاتصال
31.....	إدخال النص	22.....	الرد على مكالمة ورفضها
32.....	T9 التنبؤي	22.....	ضبط مستوى صوت المكالمة
32.....	دليل Abc	22.....	الاتصالات السريعة
32.....	لوحة مفاتيح Qwerty	22.....	إجراء مكالمة ثانية
33.....	إعداد البريد الإلكتروني	23.....	إيقاف تشغيل DTMF
34.....	استرداد رسائل البريد الإلكتروني	23.....	عرض سجلات المكالمات
34.....	إرسال بريد إلكتروني باستخدام حسابك الجديد	23.....	استخدام تحويل المكالمات
35.....	تغيير إعدادات البريد الإلكتروني		

48	مشاهدة الصور كعرض شرائح	36	حافظات الرسائل
48	تعيين صورة كخلفية الشاشة	36	إدارة الرسائل
48	تعديل الصور	37	استخدام النماذج
49	تشذيب طول الفيديو	37	استخدام الرموز التعبيرية
50	دمج ملفي فيديو معاً	37	تغيير إعدادات الرسائل النصية
50	دمج صورة فيديو	38	تغيير إعدادات رسائل الوسائط المتعددة
51	إضافة نص إلى الفيديو	38	تغيير الإعدادات الأخرى
51	تراكب صورة	39	الكاميرا
52	إضافة تسجيل صوتي	39	التقاط صورة سريعة
52	إضافة مسار صوتي إلى الفيديو	39	بعد التقاط الصورة
52	تغيير سرعة الفيديو	40	التعرف على محدد المنظر
53	أشياءني	41	اختيار نوع اللقطة
53	الصور	41	ضبط التباين
53	إرسال صورة	41	استخدام الإعدادات المتقدمة
53	استخدام صورة	42	عرض الصور المحفوظة
54	طباعة صورة	43	كاميرا فيديو
54	نقل صورة أو نسخها	43	إنشاء فيديو سريع
54	إنشاء عرض شرائح	43	بعد إنشاء الفيديو
54	أصوات	44	التعرف على محدد المنظر
54	استخدام صوت	45	ضبط التباين
55	ملفات الفيديو	45	استخدام الإعدادات المتقدمة
55	استخدام الخيارات فيما الفيديو متوقف مؤقتاً	46	مشاهدة ملفات الفيديو المحفوظة
55	إرسال فيديو كليب	47	الصور وملفات الفيديو
55	محتويات الفلاش	47	عرض الصور وملفات الفيديو
55	مستندات	47	استخدام التكبير/التصغير عند عرض صورة
56	نقل ملف إلى هاتفك	47	ضبط مستوى الصوت عند عرض فيديو
56	عرض ملف	47	التقاط صورة من فيديو
56	أخرى		

64.....	استخدام ساعة الإيقاف	57.....	تثبيت لعبة/تطبيق بواسطة تثبيت محلي
64.....	STK	57.....	لعبة لعبة
64.....	إضافة مدينة إلى ساعتك العالمية	57.....	استخدام قائمة خيارات الألعاب
65.....	مزامنة الكمبيوتر الشخصي	57.....	استخدام الترفيه
65.....	تثبيت برنامج LG PC Suite على الكمبيوتر	57.....	الموسيقى
	نسخ احتياطي للمعلومات على الهاتف	58.....	نقل الموسيقى إلى الهاتف
65.....	واستعادتها	58.....	تشغيل أغنية
65.....	عرض ملفات الهاتف على الكمبيوتر	58.....	إنشاء قائمة تشغيل
65.....	مزامنة الأسماء	59.....	تعديل قائمة تشغيل
66.....	مزامنة الرسائل	59.....	حذف قائمة تشغيل
	استخدام الهاتف كوسيلة تخزين ذات	59.....	استخدام الراديو
66.....	سعة كبيرة	59.....	البحث عن محطات
67.....	استخدام الهاتف كجهاز تزامن الموسيقى	60.....	إعادة تعيين القنوات
67.....	استخدام الهاتف كمودم	60.....	استخدام استوديو الأفلام
69.....	إنترنت	61.....	المنسق
69.....	المتصفح	61.....	إضافة حدث إلى التقويم
69.....	الوصول إلى ويب	61.....	إضافة عنصر إلى قائمة المهام
69.....	إضافة إشارات مرجعية والوصول إليها	61.....	استخدام الباحث عن التاريخ
70.....	استخدام قارئ RSS	61.....	تعيين المنبه
70.....	حفظ صفحة	62.....	ضوابط اللمس
70.....	الوصول إلى صفحة محفوظة	62.....	تسجيل ملف صوتي أو صوت
71.....	عرض محفوظات المتصفح	63.....	إرسال التسجيل الصوتي
71.....	تغيير إعدادات متصفح ويب	63.....	إضافة مذكرة
71.....	الوصول إلى Google	63.....	استخدام الحاسبة
72.....	الإعدادات	63.....	تحويل وحدة
72.....	تخصيص الأوضاع		
72.....	تغيير إعدادات الشاشة		
73.....	تغيير إعدادات الهاتف		

- 74..... تغيير إعدادات اللمس
- 74..... تغيير إعدادات التوصيل
- إرسال الملفات واستلامها باستخدام
- 75..... بلوتوث
- 76..... الاقتران بجهاز بلوتوث آخر
- 76..... استخدام سماعة رأس بلوتوث
- 77..... تحديث البرنامج
- 78..... الملحقات
- 79..... خدمة الشبكة
- 79..... بيانات تقنية
- 81..... توجيهات لاستخدام آمن وفعال
- 86..... استكشاف الأخطاء وإصلاحها


التعرف على هاتفك

موصل الشاحن، الكبل والجهاز اللايودي

تلميح: لتوصيل كابل USB، انتظر حتى يتم تشغيل الهاتف وتسجيله في الشبكة.



- طلب رقم هاتف والإجابة على مكالمات واردة.

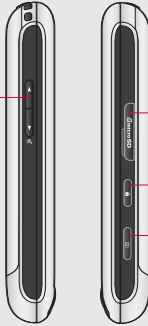

مأخذ بطاقة الذاكرة SD المصغرة

مفتاح الإقفال/إلغاء القفل

مفتاح الكاميرا

المفاتيح الجانبية

- عندما تكون الشاشة في وضع الإنتظار، مستوى صوت نغمة الرنين ونغمة اللمس.
- أثناء مكالمة: مستوى صوت سماعة الأذن.

تحذير: قد يؤدي وضع شيء ثقيل الوزن على الهاتف أو الجلوس عليه عند وجوده في جيبك إلى إلحاق ضرر بوظيفة شاشة LCD وشاشة اللمس.

نظرة على الهاتف وهو مفتوح



مفتاح المسح

- مسح حرف واحد مع كل ضغطة. اضغط المفاتيح لأسفل لمسح كافة الإدخالات.

مفتاح الادخال
Enter

- مفتاح الرمز
- إدخال حرف رمز


تغيير وضع إدخال النص (أحرف كبيرة/ أحرف صغيرة)

مفاتيح الأرقام والأحرف

مفتاح المسافة

استخدم هذا المفاتيح لإدخال مسافة أثناء التعديل.


نظرة على الهاتف وهو مفتوح

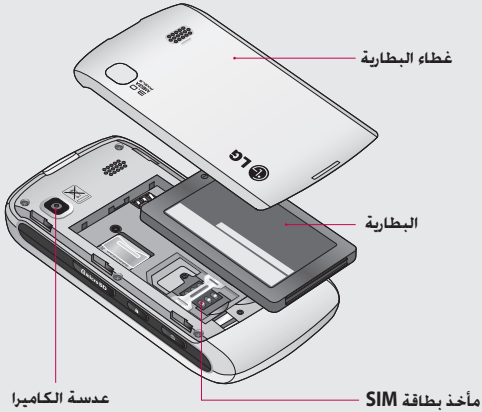


تثبيت بطاقة SIM والبطارية

1 نزع غطاء البطارية

قم بتمرير غطاء البطارية نحو الأعلى وبعيداً عن الهاتف.

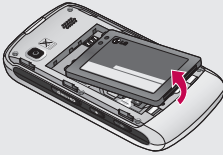


⚠ تحذيرة: لا تستخدم أطرافك لإخراج البطارية.

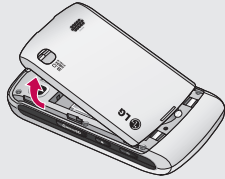

2 إزالة البطارية

بواسطة الفتحة الموجودة في الأسفل. ارفع البطارية من حجرتها.


⚠ تحذيرة: لا تقم بإزالة البطارية عندما يكون الهاتف قيد التشغيل. إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

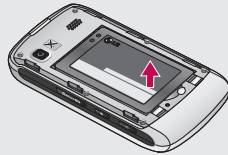

تثبيت بطاقة SIM والبطارية


3 تثبيت بطاقة SIM

قم بتمرير بطاقة SIM إلى داخل حاملها وتأكد من كون ناحية الموصلات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. لإزالة بطاقة SIM، اسحبها بلطف نحو الخارج.

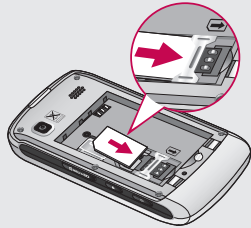


4 تثبيت البطارية

أدخل أولاً الجهة العليا للبطارية في الحافة العليا لحجرة البطارية. تأكد من محاذاة ملامسات البطارية مع أطراف توصيل الهاتف. اضغط جهة البطارية السفلى إلى الأسفل حتى تستقر في مكانها.

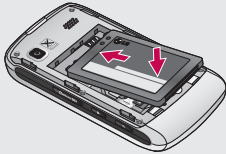

5 شحن الهاتف

ارفع غطاء مقبس الشاحن الموجود أعلى الهاتف GW525 بلّغه. ثم أدخل الشاحن ووصله بمأخذ كهربائي رئيسي. يجب أن يتم شحن الهاتف GW525 حتى تظهر على الشاشة رسالة تشير إلى أن "البطارية ممتلئة".

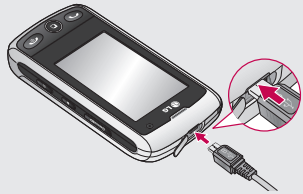

بطاقة الذاكرة

تركيب بطاقة ذاكرة

يمكنك زيادة مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة Micro SD.

ملاحظة: بطاقة الذاكرة هي عبارة عن ملحقات اختياري.

1 افتح غطاء فتحة بطاقة الذاكرة الموجود على حافة الهاتف اليمنى.



2 حرّك بطاقة الذاكرة إلى داخل الفتحة، حتى تستقر في مكانها. تأكد من كون ناحية الملامسات الذهبية موجهة نحو الأسفل.



3 أغلق الغطاء.

تهيئة بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهيأةً أصلاً. إذا لم تكن مهيأةً، ستحتاج إلى تهيئتها قبل البدء باستخدامها.

1 من شاشة وضع الانتظار حدد ، ثم المس  واختر إعدادات الهاتف.

2 المس إدارة الذاكرة ثم اختر ذاكرة خارجية.

3 المس تهيئة ثم أكد خيارك.

4 أدخل كلمة المرور، إذا كان قد تم تعيين واحدة. ستتم تهيئة البطاقة وتصبح جاهزة للاستخدام.

تلميح! لتغيير وجهة التخزين الافتراضية.

افتح إدارة الذاكرة من قائمة إعدادات الهاتف وحدد إعدادات التخزين الأساسي.


ملاحظة: إذا تضمّنت بطاقة الذاكرة ملفات. فسيتم وضعها بشكل تلقائي في الحافظة الصحيحة: فسيتم مثلاً تخزين ملفات الفيديو في حافظة مقاطع الفيديو.

نقل الأسماء

لنقل الأسماء من بطاقة SIM إلى هاتفك:

- 1 من قائمة اتصال. حدد  واختر إعدادات.
- 2 المس نسخ.
- 3 اختر من SIM إلى الهاتف.
- 4 اختر تحديد الكل أو اختر الأسماء الواحد تلو الآخر والمس نسخ.

خريطة القوائم

المس  على شاشة وضع الانتظار لفتح القائمة الرئيسية. من هنا يمكنك الوصول إلى المزيد من القوائم: اتصال، والترفيه، والأدوات المساعدة والإعدادات.

الترفيه



- 1 الكاميرا
- 2 كاميرا الفيديو
- 3 الاستوديو
- 4 أثنائي
- 5 الموسيقى
- 6 استوديو الأفلام
- 7 الألعاب والتطبيقات
- 8 راديو FM

اتصال



- 1 الأسماء
- 2 سجلات المكالمات
- 3 الرسائل
- 4 البريد الإلكتروني
- 5 اتصال

الإعدادات



- 1 الأوضاع
- 2 إعدادات الشاشة
- 3 إعدادات الهاتف
- 4 إعدادات المكالمة
- 5 بلوتوث
- 6 إعدادات اللمس
- 7 التوصيل

الأدوات المساعدة



- 1 المتصفح
- 2 Google
- 3 المنبه
- 4 المنسق
- 5 مذكرة
- 6 ضوابط اللمس
- 7 الأدوات

شاشة وضع الانتظار

- هناك نوعان من شاشة الانتظار انقر إلى اليسار أو إلى اليمين لتغيير نوع شاشة الانتظار الموجودة على شاشة وضع الانتظار.

1 عنصر واجهة الاستخدام في وضع

الانتظار - عندما تلمس ، تظهر لوحة عنصر واجهة الاستخدام المتحرك يمكنك سحب الرموز المعروضة على لوحة عناصر واجهة الاستخدام إلى الشاشة الرئيسية.

2 Livesquare - على شاشة

Livesquare يمكنك بسهولة إجراء مكالمة وإرسال رسالة وحفظ رقم باستخدام الرقم المخصص لصورة رمزية. لاستخدام وظائف المكالمات أو الرسائل أو الأسماء، حدد صورةً رمزيةً واختر رمز المفتاح السريع الذي تريد استخدامه.

من هنا يمكنك الوصول إلى كل خيارات القوائم، وإجراء مكالمة سريعة وعرض حالة الهاتف، بالإضافة إلى عدة أمور أخرى.

تلميحات شاشة اللمس

تعتبر شاشة وضع الانتظار أيضاً مكاناً جيداً لتعتاد على شاشة اللمس.

لتحديد عنصر المس وسط الرمز، سيهتز الهاتف GW525 بعض الشيء عندما يتعرف على لمسك لخيار ما.


للتمرير عبر القوائم المس العنصر الأخير المرئي وقم بإزلاق إصبعك إلى أعلى الشاشة، فتتحرك القائمة نحو الأعلى لعرض المزيد من العناصر.




- لا حاجة إلى الضغط بقوة: فشاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة ولكن ثابتة.
- استخدم رأس إصبعك للمس الخيار المطلوب، احترس من عدم لمس أي مفاتيح أخرى حوله.
- عندما يكون ضوء الشاشة الخلفي متوقفاً عن التشغيل، اضغط مفتاح إقفال/إلغاء القفل في الجانب الأيمن من الهاتف لاستعادة الشاشة الرئيسية.
- لا تضع غطاءً أو غلافاً خارجياً على الهاتف، لن تعمل شاشة اللمس عند تغطيتها بأي مادة.


شاشة وضع الانتظار


المفاتيح السريعة

توفر المفاتيح السريعة وصولاً سهلاً بمجرد لمسة واحدة إلى أكثر الوظائف استخداماً.

 المس لمس لفتح الأسماء، للبحث عن الرقم الذي تريد الاتصال به. أدخل اسم جهة الاتصال في أعلى الشاشة مستخدماً لوحة اللمس. يمكنك إنشاء الأسماء جديدة وتعديل الأسماء موجودة.

 المس لإحضار لوحة اتصال بواسطة اللمس، التي تتيح لك إجراء مكالمات. أدخل الرقم كما لو كنت تستخدم لوحة مفاتيح عادية ثم المس  أو اضغط مفتاح المشغل .

 المس لفتح القائمة الرئيسية الكاملة التي تنقسم إلى أربع قوائم فرعية عمودية. المس علامة تبويب كل قائمة فرعية لعرض المزيد من الخيارات.

 المس للوصول إلى قائمة خيارات الرسائل. من هنا يمكنك إنشاء رسالة نصية أو وسائط متعددة جديدة أو عرض حافظة الرسائل.

شريط الحالة

يستخدم شريط الحالة رموزاً مختلفة للإشارة إلى أمور مثل قوة الإشارة، والرسائل الجديدة وفترة عمل البطارية، وكذلك لإعلامك ما إذا كان بلوتوث أو GPRS نشطاً.



يفسر الجدول التالي معنى الرموز التي قد تشاهدها على شريط الحالة.

الوصف	الرمز
وضع مخصص قيد الاستخدام (سيختلف الرقم في الرمز)	
الوضع عادي قيد الاستخدام	
الوضع خارجي قيد الاستخدام	
الوضع صامت قيد الاستخدام	
الوضع سماعة الرأس قيد الاستخدام	
المكالمات محوطة	
EDGE قيد الاستخدام	
التجوال	
وضع الرحلات الجوية قيد التشغيل	
بلوتوث نشط	
تشغيل الموسيقى الخلفية BGM	
إيقاف مؤقت للموسيقى الخلفية BGM	

الوصف	الرمز
متعدد المهام	
قوة إشارة الشبكة (يختلف عدد الأشرطة)	
إشارة الشبكة غير متوفرة	
فترة العمل المتبقية للبطارية	
البطارية فارغة	
رسالة نصية جديدة	
رسالة صوتية جديدة	
صندوق الوارد للرسائل ممتلئ	
فشل إرسال الرسالة	
تم تعيين منبه	

شاشة وضع الانتظار

استخدام وظيفة المهام المتعددة

اضغط مفتاح المشغل الخاص بالمهام المتعددة  لفتح قائمة المهام المتعددة. يمكنك من هنا عرض كل التطبيقات الجارية تشغيلها والوصول إليها بواسطة لمسة واحدة. عند وجود تطبيق يجري تشغيله في الخلفية (لعبة أو راديو FM مثلاً). يظهر  على شريط الحالة.



تغيير الحالة من شريط الحالة


المس شريط الحالة لفتح ملخص الحالة. يعرض الوقت الحالي والشبكة ومعرّف الخدمة والبطارية وذاكرة الهاتف والذاكرة الخارجية والوضع وMP3 وحالة بلوتوث. ويمكنك هنا تعيين نوع الوضع. وتشغيل/ إيقاف تشغيل MP3s مؤقتاً. وتنشيط/إلغاء تنشيط بلوتوث.





المكالمات


إجراء مكالمة


- 1 المس  لفتح لوحة المفاتيح.
- 2 أدخل الرقم باستخدام لوحة المفاتيح.
لحذف رقم، المس مفتاح المسح.
- 3 اضغط  على لوحة المفاتيح أو مفتاح المشغّل  لبدء المكالمة.
- 4 لإنهاء المكالمة، اضغط مفتاح المشغّل .

تلميح! لإدخال + لإجراء مكالمة دولية.
اضغط باستمرار .

تلميح! اضغط مفتاح مشغّل إقفال/إلغاء القفل  لإقفال شاشة اللمس منعاً لإجراء مكالمات عن طريق الخطأ.



تلميح! لإحضار لوحة المفاتيح أثناء إجراء مكالمة، اضغط .

تلميح! المس لفتح القفل، يمكنك إلغاء قفل الهاتف بالضغط باستمرار على الزر حتى تصبح الشاشة قادرة على العمل أو بضغط مفتاح مشغّل إلغاء .



تلميح! يمكنك إرسال رسالة وحفظ رقم والبحث عن الأسماء بالضغط على .

تغيير إعدادات شاشة لوحة مفاتيح

اتصال


- 1 المس  لفتح لوحة المفاتيح.
- 2 المس  وحدد ضبط شاشة اتصال لتغيير شاشة لوحة اتصال.
- 3 يمكنك تغيير الحجم واللون.

الاتصال بجهات الاتصال

- 1 في شاشة وضع الانتظار، المس  لفتح الأسماء.
- 2 اضغط مربع حقل البحث وأدخل بعض الأحرف الأولى من اسم جهة الاتصال التي تود الاتصال بها.
- 3 في القائمة التي تمت تصفيتها، المس جهة الاتصال التي ترغب في الاتصال بها وحدد الرقم الذي تريد استخدامه إذا توفر لديك أكثر من رقم لجهة الاتصال هذه.
- 4 اضغط مفتاح المشغّل .

3 تفتح الأسماء. حدد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم وذلك بلمس رقم هاتفها مرةً واحدةً. للبحث عن جهة اتصال اضغط خانة حقل البحث وأدخل الحرف الأول من اسم جهة الاتصال المطلوبة.


إجراء مكالمة ثانية


1 خلال المكالمة الأولية، المس  وحدد الرقم الذي تود الاتصال به.

2 اطلب الرقم أو ابحث عن الأسماء.

3 اضغط  لتوصيل المكالمة.


4 يتم عرض المكالمتين معاً على شاشة المكالمة. ويتم إقفال المكالمة الأولية ويوضع المتصل في حالة الانتظار.

5 للتبديل بين المكالمات، المس  ثم اختر تبادل المكالمات أو اضغط رقم المكالمة قيد الانتظار.

6 لإنهاء إحدى المكالمتين أو كلاهما، اضغط  ثم حدد إنهاء يتبعها الكل. أو قيد الانتظار، أو نشط.

الرد على مكالمة ورفضها

عندما يرن هاتفك اضغط مفتاح المشغل  أو المس  للرد على المكالمة.

اضغط  لكتم الرنين. يُعتبر هذا الأمر مفيداً إذا كنت قد نسيت تغيير وضع الهاتف إلى صامت أثناء حضور اجتماع.


اضغط مفتاح المشغل  أو المس  لرفض مكالمة واردة.

ضبط مستوى صوت المكالمة

لضبط مستوى الصوت أثناء مكالمة، استخدم الزرين إلى الأعلى وإلى الأسفل على الحافة اليسرى للهاتف.

الاتصالات السريعة

يمكنك تعيين جهة اتصال تطلبها بشكل متكرر إلى رقم اتصال سريع.

1 في شاشة وضع الانتظار المس  وحدد الأسماء في قائمة اتصال ثم اضغط اتصالات سريعة.

2 تم تعيين البريد الصوتي مسبقاً إلى رقم الاتصال السريع 1. ولا يمكنك تغييره. المس أي رقم آخر لتعيينه كجهة اتصال سريع.

تلميح! يمكنك دمج مكالماتك عبر خديد قبول ثم انضمام. خُقق من اعتماد مشغل الشبكة للمكالمات الجماعية.

ملاحظة: سيُفرض عليك رسم مقابل كل مكالمة تجريها.


إيقاف تشغيل DTMF


يتيح لك DTMF استخدام الأوامر الرقمية للتنقل عبر القوائم ضمن المكالمات المؤتمتة. يكون DTMF قيد التشغيل بشكل افتراضي. لإيقاف تشغيل DTMF أثناء مكالمة (لتسجيل رقم مثلاً) المس  ثم حدد إيقاف تشغيل DTMF.


عرض سجلات المكالمات


تلميح! للتمرير عبر قائمة الخيارات. المس العنصر المرئي الأخير وقم بتمرير إصبعك إلى أعلى الشاشة، فتتحرك القائمة نحو الأعلى لعرض المزيد من العناصر.


المس  واضغط  في القائمة اتصال. اختر عرض ما يلي:

الكل  - عرض قائمة كاملة تتضمن كل مكالماتك الصادرة والمستلمة والتي لم يرد عليها.

صادرة  - عرض قائمة بكل الأرقام التي طلبتها.




مستلمة  - عرض قائمة بكل الأرقام التي اتصلت بك.

لم يرد عليها  - عرض قائمة بكل المكالمات التي لم ترد عليها.

تلميح! في أي سجل مكالمات المس  وحذف الكل لحذف كافة العناصر المسجلة.

تلميح! المس أي إدخال لسجل مكالمة واحدة لعرض تاريخ المكالمة. ووقتها ومدتها.

استخدام تحويل المكالمات

1 المس  وحدد  واختر .

2 المس تحويل المكالمات.

3 اختر ما إذا كنت تريد أن يتم تحويل كل المكالمات عندما يكون الخط مشغولاً. أو عند عدم الرد. أو عندما لا يكون الاتصال بك ممكناً.

4 أدخل الرقم الذي تريد أن يتم التحويل إليه.

5 المس طلب للتنشيط.

ملاحظة: يؤدي تحويل المكالمات إلى فرض رسوم. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

4 أدخل كلمة مرور حظر المكالمات. يرجى التحقق من توفر هذه الخدمة مع مشغل الشبكة.

رقم اتصال محدد

حدد أرقام اتصال محددة لتشغيل وتجميع قائمة بالأرقام التي يمكن الاتصال بها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من مشغل الشبكة. عند التشغيل. وحدها الأرقام المضمّنة في قائمة أرقام الاتصال المحدد هي التي يمكن طلبها من هاتفك.

استخدام رسالة اعتذار

يمكنك إرسال رسالة تفسر فيها سبب عدم استلام المكالمات الواردة باستخدام "رسالة اعتذار" قبل رفض مكالمة واردة.

تكاليف المكالمات

عرض الرسوم المطبقة على الأرقام التي طلبتها (هذه الخدمة تعتمد على الشبكة. فبعض مشغلي الشبكات غير قادرين على دعمها).

تلميح! لإيقاف تشغيل كل عمليات تحويل المكالمات. حدد إلغاء تنشيط الكل من قائمة تحويل المكالمات.

انتظار مكالمة

إذا تم تنشيط خدمة انتظار المكالمات. فستنبهك الهاتف بوجود مكالمة واردة عندما تكون مشغولاً بمكالمة أخرى.

استخدام حظر المكالمات

1 المس  وحدد  واختر .

2 المس حظر المكالمات.

3 اختر أحد الخيارات الستة أو كلها:

كل الصادرة

المكالمات الدولية الصادرة

المكالمات الدولية الصادرة باستثناء

المحلية

كل الواردة

الواردة عند السفر

إلغاء تنشيط الكل

مدة المكالمة

عرض مدة كافة المكالمات الصادرة والمستلمة أو كلاهما.

حجم البيانات

عرض كمية البيانات التي استلمتها وأرسلتها بالكيلو بايت.

رفض المكالمة - مرر المفتاح إلى بدء التشغيل لتحديد قائمة الرفض. يمكنك لمس مربع النص للاختيار من كل المكالمات. أو من الأسماء معيّنة أو مجموعات. أو من أرقام غير مسجلة (الأرقام غير الموجودة في الأسماء). أو بدون معرف المتصل. المس حفظ لتغيير هذا الضبط.

إرسال رقمي - اختر ما إذا أردت أن يظهر رقمك عند إجراء مكالمة صادرة.

معاودة الاتصال التلقائي - مرر المفتاح إلى اليسار لبدء التشغيل أو إلى اليمين ل إيقاف التشغيل.

وضع الرد - اختر ما إذا كنت تريد الرد على الهاتف باستخدام مفتاح الإرسال أو أي مفتاح.

منبه الدقائق - مرر المفتاح إلى اليسار لبدء تشغيل سماع نغمة كل دقيقة خلال فترة المكالمة.

وضع الرد بلوتوث - حدد لا يدوي لتتمكن من الرد على مكالمة باستخدام سماعة رأس بلوتوث. أو حدد هاتف لضغط مفتاح على الهاتف للرد على مكالمة.

تلميح! حدد رقم اتصال محدد لتشغيل

وجميع قائمة الأرقام التي يمكن الاتصال بها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من مشغل الشبكة. عند التشغيل. وحدها الأرقام المضمّنة في قائمة أرقام الاتصال المحدد هي التي يمكن طلبها من هاتفك.

تغيير ضبط المكالمات العام

- 1 المس  وحدد  واختر
- 2 المس إعدادات عامة. من هنا يمكنك تعديل إعدادات الخيارات التالية:

حفظ رقم جديد - حدد نعم لحفظ رقم جديد.


تلميح! للتمرير عبر قائمة الخيارات، المس العنصر المرئي الأخير وقم بتمرير إصبعك إلى أعلى الشاشة. فتتحرك القائمة نحو الأعلى لعرض المزيد من العناصر.


الأسماء

البحث عن جهة اتصال

هناك طريقتان للبحث عن جهة اتصال:

في شاشة وضع الانتظار

1 في شاشة وضع الانتظار. المس  لفتح الأسماء.

2 المس  بجوار جهة الاتصال التي تريد الاتصال بها. يتوفر هذا الأمر فقط عندما تعين مفتاح الأمر السريع كإجراء مكالمة صوتية في إعدادات قائمة الأسماء.

في القائمة الرئيسية

1 المس .

2 المس  في قائمة اتصال ثم حدد بحث.

3 تحضر الأسماء قائمة بجهات الاتصال المتطابقة مع الأحرف التي أدخلتها.

إضافة جهة اتصال جديدة

1 من شاشة وضع الانتظار المس  والمس إضافة جهة اتصال.

2 اختر ما إذا كنت تريد حفظ جهة الاتصال في الهاتف أو SIM.

3 أدخل الاسم الأول والأخير لجهة الاتصال الجديدة. ليس من الضروري إدخال الاسم. ولكن يجب إدخال أحدهما على الأقل.

4 يمكنك أن تدخل حتى خمسة أرقام مختلفة لجهة اتصال واحدة. يتم تعيين كل إدخال إلى نوع معين مسبقاً: الهاتف المحمول أو المنزل أو المكتب أو جهاز الاستدعاء أو الفاكس أو مكالمة مرئية أو عام. عندما تنتهي. المس إغلاق.

5 أضف عنوان بريد إلكتروني.

6 قم بتعيين جهة الاتصال إلى مجموعة أو أكثر. واختر من ضمن بلا مجموعة. أو عائلة. أو أصدقاء. أو زملاء. أو مدرسة. أو أشخاص مهمون جداً.

7 كما يمكنك إضافة نغمة رنين أو عيد ميلاد أو ذكرى أو صفحة رئيسية أو عنوان منزل أو اسم شركة أو مهنة أو عنوان شركة أو مذكرة.

8 المس حفظ لحفظ جهة الاتصال.

تلميح! يمكنك إنشاء مجموعات مخصصة للأسماء لديك.

الأسماء


خيارات الأسماء

تلميح! إرسال رسالة - إرسال رسالة إلى جهة الاتصال. إذا كان لجهة الاتصال عنوان بريد إلكتروني، فحدد ما إذا كنت ترغب في إرسال بريد إلكتروني أو رسالة نصية/ وسائل متعددة.

هناك العديد من الأمور التي يمكنك القيام بها عند عرض جهة اتصال، إليك الطريقة التي تتيح لك الوصول إلى قائمة الخيارات واستخدامها:

1 افتح جهة الاتصال التي تريد استخدامها.

2 يمكنك تعديل جهة الاتصال أو إرسال رسالة من هنا مباشرةً.

3 اضغط  لفتح قائمة الخيارات.

حذف - حذف جهة الاتصال. المس نعم إذا كنت متأكدًا.

نسخ أو نقل إلى SIM/الهاتف - اختر النقل أو النسخ إلى بطاقة SIM أو الهاتف (وفقاً للموقع حيث قمت أصلاً بحفظ جهة الاتصال).

إرسال بطاقة عمل - إرسال تفاصيل تتعلق بجهة الاتصال إلى شخص آخر كبطاقة عمل. اختر إرسال بطاقة العمل كرسالة نصية. أو رسالة وسائل متعددة أو بريد إلكتروني أو عبر بلوتوث.

إنشاء مجموعة

1 المس .

2 المس  في قائمة اتصال ثم

مجموعات.

3 المس .

4 حدد إضافة مجموعة.


5 أدخل اسماً للمجموعة الجديدة في حقل الاسم.

6 المس حفظ. يمكنك أيضاً أن تحدد نغمة رنين خاصة بالمجموعة.

ملاحظة: حتى لو حذفتم مجموعة، فلن تفقد الأسماء التي كان قد تم تعيينها إلى تلك المجموعة. بل ستبقى موجودة في الأسماء لديك.

تغيير إعدادات الأسماء

يمكنك تكييف إعدادات الأسماء بحيث تناسب الأسماء لديك مع تفضيلاتك.

1 في شاشة وضع الانتظار، المس  في قائمة اتصال.

2 المس  وحدد إعدادات.

3 من هنا يمكنك تنظيم الإعدادات التالية:

إعدادات قائمة الأسماء - اختر ما إذا كنت ترغب في عرض الأسماء المحفوظة في الهاتف وبطاقة SIM، أو الهاتف فقط أو بطاقة SIM فقط

كما يمكنك أن تختار عرض اسم جهة الاتصال الأول أو الأخير أولاً وما إذا كان يجب عرض مفتاح الأمر السريع بجوار جهة الاتصال أم لا.

نسخ - نسخ الأسماء من الهاتف إلى بطاقة SIM أو من بطاقة SIM إلى الهاتف.

يمكنك اختيار كافة الأسماء بلمس تحديد الكل أو تحديد كل جهة اتصال لنسخها الواحدة بعد الأخرى.

نقل - يعمل هذا الأمر بالطريقة نفسها التي يعمل بها النسخ، غير أن جهة الاتصال ستُحفظ فقط في الموقع الذي تم نقلها إليه، لذا، إذا نقلت جهة اتصال من بطاقة SIM إلى الهاتف فسيتم حذفها من ذاكرة بطاقة SIM.


إرسال كل الأسماء عبر بلوتوث - أرسل كل الأسماء إلى جهاز آخر باستخدام بلوتوث. سيتم تشغيل بلوتوث تلقائياً إذا حددت هذا الخيار.


نسخ احتياطي للأسماء واستعادتها - إجراء نسخ احتياطي للأسماء واستعادتها إلى بطاقة الذاكرة.

مسح الأسماء - مسح كافة الأسماء الموجودة في الهاتف أو بطاقة SIM، المس نعم إذا كنت متأكداً من رغبتك في حذف كافة الأسماء من حافظه الأسماء.

الأسماء

عرض المعلومات

1 في شاشة وضع الانتظار. المس  في قائمة اتصال.

2 المس  وحدد معلومات.

3 من هنا يمكنك عرض أرقام الاتصال بالخدمة. ورقمك الخاص. ومعلومات الذاكرة. (مساحة الذاكرة المتبقية لديك) بالإضافة إلى بطاقة العمل الخاصة بي.

تلميح! لإضافة بطاقة العمل الخاصة بك. حدد بطاقة العمل الخاصة بي وأدخل التفاصيل كما تقوم عادةً بالنسبة لأي جهة اتصال. المس حفظ لانتهاؤ.

الرسائل

الرسائل



⚠ تحذير: إذا تمت إضافة صورة، أو فيديو، أو صوت إلى رسالة نصية فسيتم تحويلها تلقائياً إلى وسائط متعددة وسيُفرض رسم عليك وفقاً لذلك.

تلميح! رد سريع - إرسال رد على الرسالة المحددة بسرعة. باستخدام نموذج.

يجمع الهاتف GW525 ميزات إرسال رسائل نصية ووسائط متعددة في قائمة واحدة بديهية وسهلة الاستخدام.

هناك طريقتان لدخول مركز الرسائل:

المس  في شاشة وضع الانتظار.

أو المس  في شاشة وضع الانتظار واختر  من قائمة اتصال.


إدخال النص

هناك 3 طرق لإدخال نص:



وضع النص T9 / وضع النص العادي/لوحة مفاتيح Qwerty.



إرسال رسالة

1 المس  واختر رسالة جديدة لفتح رسالة فارغة.

2 من هنا يمكنك إرسال رسائل نصية أو وسائط متعددة. لإرسال بريد إلكتروني.

المس  في شاشة وضع الانتظار. ثم  في قائمة اتصال.

3 لإرسال رسالة نصية أو وسائط متعددة.

المس رسالة جديدة. لإرسال بريد إلكتروني. المس بريد إلكتروني جديد.


4 المس إدراج. لإضافة صورة، أو فيديو، أو صوت. أو نموذج إلخ.

5 المس إلى **1** في أعلى الشاشة لإدخال رقم المستلم. أو المس رمز البحث لفتح الأسماء. يمكنك إضافة عدة الأسماء. المس إرسال عندما تصبح جاهزاً.

اضغط مثلاً 8, 3, 5, 3, 7, 4, 6, 3 لكتابة 'telephone'.

إذا لم تظهر الكلمة المطلوبة، فالمس تدقيق إملائي. إذا لمست تدقيق إملائي فستتمكن من إدخال الكلمة مستخدماً وضع ABC اليدوي وستتم إضافة الكلمة أو الاسم إلى القاموس.

دليل Abc

في وضع Abc ستري  في وضع Abc عليك لمس المفتاح بشكل متكرر لإدخال حرف إذا كان وضع T9 متوقفاً عن التشغيل. فلكتابه كلمة 'hello' مثلاً، المس 4 مرتين، و3 مرتين، و5 ثلاث مرات، و5 ثلاث مرات مجدداً، ثم 6 ثلاث مرات.

لوحة مفاتيح Qwerty


إدخال النص


يمكنك إدخال الأحرف الأبجدية والرقمية باستخدام لوحة المفاتيح على الهاتف. فتخزين الأسماء مثلاً في الأسماء، وكتابة رسالة، وإنشاء أحداث مجدولة في التقويم كلها عمليات تتطلب منك إدخال النص. تتوفر أساليب إدخال النص التالية على الهاتف: وضع ABC اليدوي ووضع 123.

 المس لتشغيل نص T9 التنبؤي أو إيقاف


تشغيله.


 يمكنك اختيار لغة الكتابة.

 اضغط للتبديل بين لوحة مفاتيح الأرقام والرموز والنص.

استخدم  للتمرير عبر مختلف لوحات

المفاتيح في كل وضع من أوضاع إدخال النص (مثلاً الأحرف الكبيرة أو الأحرف الصغيرة) عندما تكون الشاشة في الوضع الأفقي.

لإدخال مسافة المس .


لحذف حرف أو إزالة الجملة، المس مسح .

تلميح! ما عليك إلا لمس كل حرف لكتابة رسالتك واضغط:

 للتبديل إلى الأحرف الكبيرة

 لإضافة مسافة

T9 التنبؤي

في وضع T9 ستري  يستخدم وضع T9 قاموساً مضمناً للتعرف على كلماتك استناداً إلى تسلسل المفاتيح التي تلمسها، ما عليك إلا لمس مفتاح الرقم المقترن بالحرف الذي تريد إدخاله. وسيتوقع القاموس الكلمة التي تود استخدامها.

إعداد البريد الإلكتروني

يمكنك أن تبقى على تواصل أثناء التنقل من خلال استخدام البريد الإلكتروني على الهاتف GW525. فعملية إعداد حساب بريد إلكتروني POP3 أو IMAP4 تُعتبر عملية بسيطة وسهلة.

تلميح! للتمرير عبر قائمة الخيارات. المس العنصر المرئي الأخير وقم بتمرير إصبعك إلى أعلى الشاشة. فنتحرك القائمة نحو الأعلى لعرض المزيد من العناصر.

1 المس .

2 حدد  من قائمة اتصال ثم .

3 المس إضافة حساب.

4 سيساعدك معالج الإعداد على إعداد إعدادات بريدك الإلكتروني.

في حال عدم تعيين حساب بريد إلكتروني يمكنك إعداده باستخدام معالج إعداد البريد الإلكتروني.



5 يمكنك الآن اختيار طريقة إعداد حسابك:

عنوان البريد الإلكتروني - أدخل عنوان البريد الإلكتروني

تلميح! قد تسمح بعض الحقول بوضع إدخال نص واحد فقط (مثل رقم الهاتف في حقول الأسماء).

لإدخال رمز في حقل إدخال النص. اضغط مفتاح Sym وحدد رمزاً. ثم حدد موافق.

مرر بواسطة مفاتيح التنقل لعرض خيارات أكثر من الرموز.




افصل كل كلمة بمسافة وذلك بضغطة . لحذف حرف. اضغط المفتاح .

وضع إدخال النص باستخدام لوحة المفاتيح

عندما يُطلب منك إدخال نص. على سبيل المثال. أثناء كتابتك رسالة. ستنتقل لوحة المفاتيح افتراضياً إلى وضع ABC. إذا كنت تدخل رقماً أثناء إجراء مكالمة مثلاً. فستنتقل مفاتيح أرقام لوحة المفاتيح افتراضياً إلى الأرقام.

يمكنك إدخال أرقام في وضع ABC بالضغط أولاً على  ومن ثم الرقم الذي تطلبه.

استرداد رسائل البريد الإلكتروني

- يمكنك أن تتحقق من وجود رسائل بريد إلكتروني جديدة في حسابك تلقائياً أو يدوياً.
- 1 المس  ثم حدد  من قائمة اتصال.
 - 2 المس الحساب الذي تريد استخدامه. ثم حدد صندوق الوارد والمس .
 - 3 اختر استرداد فيتصل هاتفك GW525 بحساب بريدك الإلكتروني ويسترد رسائلك الجديدة.

إرسال بريد إلكتروني باستخدام

حسابك الجديد

- 1 المس بريد إلكتروني جديد في حساب البريد الإلكتروني الذي تريد استخدامه فيفتح بريد إلكتروني جديد.
- 2 يمكنك إدخال عنوان المستلم وتودين رسالتك. يمكنك أيضاً إرفاق صور أو ملفات فيديو أو أصوات أو أنواع ملفات أخرى.
- 3 المس إرسال فيتم إرسال البريد الإلكتروني.

عنوان الخادم - أدخل عنوان الخادم (Microsoft Exchange فقط).

المجال - أدخل المجال (Microsoft Exchange فقط).

اسم المستخدم - أدخل اسم مستخدم الحساب.

كلمة المرور - أدخل كلمة مرور الحساب.

نوع صندوق البريد - أدخل نوع صندوق البريد: POP3 أو IMAP4.

خادم البريد الوارد - أدخل عنوان خادم البريد الإلكتروني الوارد.

خادم البريد الصادر - أدخل عنوان خادم البريد الإلكتروني الصادر.

مصادقة SMTP - اختر إعدادات الحماية لخادم البريد الصادر.

اسم الحساب - لقد تم الآن إعداد حسابك. وسيظهر في قائمة الحسابات في حافظة البريد الإلكتروني.

تغيير إعدادات البريد الإلكتروني

يمكنك تغيير إعدادات البريد الإلكتروني وفق تفضيلاتك الخاصة.

1 المس ☰ ثم حدد 🌙 و 📧 .

2 اضغط 📧 وحدد إعدادات لتغيير الإعدادات التالية:

حسابات البريد الإلكتروني - قم بإعداد حساب البريد الإلكتروني.

البريد الإلكتروني المفضل - حدد حساب البريد الإلكتروني الذي تريد استخدامه.

السماح بالرد على البريد الإلكتروني - اختر السماح بإرسال رسائل "تأكيد القراءة".

طلب الرد على البريد الإلكتروني - اختر ما إذا كنت تريد طلب رسائل تأكيد القراءة.

الفاصل الزمني للاسترداد - حدد مدى تكرار قيام GW525 بالتحقق من وجود رسائل بريد إلكتروني جديدة.

استرداد القيمة - حدد عدد رسائل البريد الإلكتروني التي تود استردادها في المرة الواحدة.

تضمين الرسالة في إعادة التوجيه والرد - حدد ما إذا كان يجب تضمين الرسالة الأصلية في ردك.

تضمين المرفق - حدد ما إذا كان يجب تضمين المرفق الأصلي في أي رد.

استرداد تلقائياً أثناء التجوال - اختر ما إذا كنت ترغب في استرداد الرسائل تلقائياً أثناء تواجدك في الخارج (التجوال).

تلميح! قد تكون تكاليف استرداد البريد الإلكتروني أثناء التجوال أكثر ارتفاعاً. تحقق من هذا الأمر مع موفر الشبكة.

إعلام ببيريد إلكتروني جديد - اختر ما إذا كان يجب تنبيهك عند وصول رسائل بريد إلكتروني جديدة.

التوقيع - قم بإنشاء توقيع على البريد الإلكتروني وشغل هذه الميزة.

الأولوية - حدد مستوى الأولوية لرسائل البريد الإلكتروني.

حجم البريد المرسل - اختر حد الحجم لرسائل البريد الإلكتروني.

عداد البريد الإلكتروني - عرض معلومات عن البريد الإلكتروني.

حافظات الرسائل

ستتعرّف على بنية الحافظة المستخدمة في الهاتف GW525، التي تفسر نفسها بنفسها.

صندوق الوارد - توضع كل الرسائل التي تستلمها في صندوق الوارد، من هنا يمكنك عرض الرسائل وحذفها وغير ذلك؛ راجع إدارة الرسائل أدناه للحصول على التفاصيل.

صندوق الصادر - عبارة عن حافظة لحفظ الرسائل مؤقتًا فيما يكون إرسالها جارٍ.

العناصر المرسلّة - يتم وضع كل الرسائل التي أرسلتها في هذه الحافظة.



المسودات - إذا لم تكن قد انتهيت من كتابة رسالة، يمكن حفظ ما قمت به في هذه الحافظة.

حافظاتي - إنشاء حافظات لتخزين رسائلك.

المهملات - يتم وضع كل الرسائل التي تخلصت منها كمهملات في هذه الحافظة (البريد الإلكتروني فقط)

إدارة الرسائل

يمكنك استخدام صندوق الوارد لإدارة رسائلك.

1 المس : ثم حدد  و  .

2 حدد صندوق الوارد.

3 المس  ثم اختر:

حذف - حذف الرسائل المحددة.

تغيير العرض - حدد عرض مترابط أو عرض قياسي.

إنشاء رسالة جديدة - فتح رسالة جديدة فارغة أو بريد إلكتروني جديد وفارغ.

نقل إلى حافظاتي - نقل الرسائل المحددة إلى حافظاتي.

مرشّح - اختر أحد خيارات التصفية.

حذف الكل - حذف كل الرسائل في صندوق الوارد.


إذا شاهدت الرسالة لا توجد مساحة كافية لرسائل SIM، فهذا يعني أنه عليك حذف بعض الرسائل على بطاقة SIM.

إذا شاهدت الرسالة لا توجد مساحة كافية للرسائل، فهذا يعني أنه عليك حذف بعض الرسائل لتحرير مساحة في الذاكرة.

استخدام النماذج

قم بإنشاء نماذج لرسائل نصية ووسائط متعددة التي ترسلها بشكل متكرر. هناك بعض النماذج الموجودة مسبقاً على الهاتف، والتي يمكنك تعديلها.

1 المس ✉ ثم اختر نماذج من قائمة اتصال.

2 اختر نماذج نصية أو نماذج وسائط متعددة. يمكنك في ما بعد لمس  لإضافة نماذج، أو حذف أو حذف كل النماذج.

3 المس إضافة نموذج لإنشاء نموذج جديد.

4 يمكنك عرض النموذج بتحديد على القائمة وتعديله من خلال لمس على شاشة العرض.

استخدام الرموز التعبيرية

يمكنك إضفاء الحيوية على رسائلك من خلال استخدام الرموز التعبيرية. تجد على هاتفك بعض الرموز التعبيرية الشائعة الاستخدام.

1 المس ✉ ثم اختر رموز تعبيرية من قائمة اتصال.

2 المس  لإضافة رموز تعبيرية جديدة، أو حذف أو حذف كل الرموز التعبيرية.

3 المس إضافة رمز تعبيرية لإنشاء رمز تعبيرية جديد.

4 يمكنك عرض الرمز التعبيرية بتحديد على القائمة وتعديله من خلال لمس على شاشة العرض.

تغيير إعدادات الرسائل النصية

تكون إعدادات الرسائل في الهاتف GW525 معرّفة مسبقاً بحيث يمكنك إرسال الرسائل على الفور. يمكن تغيير هذه الإعدادات بحسب تفضيلاتك.

المس ✉ ثم اختر إعدادات من قائمة اتصال. حدد رسالة نصية، يمكنك تغيير ما يلي:
مركز الرسائل النصية - أدخل تفاصيل مركز الرسائل.

تقرير استلام - مرر المفتاح إلى اليسار لاستلام تأكيد بأنه تم تسليم رسائلك.

مدة الصلاحية - اختر فترة تخزين رسائلك في مركز الرسائل.

أنواع الرسائل - تحويل النص إلى نص أو صوت أو فاكس أو X.400 أو بريد إلكتروني.

ترميز الحروف - اختر طريقة ترميز الحروف. يؤثر هذا الأمر في حجم الرسائل وبالتالي في رسوم البيانات.

الرسائل

مدة الصلاحية - اختر فترة حفظ رسالتك في مركز الرسائل.


مدة النشريحة - اختر مدة ظهور الشرائح على الشاشة.

وضع الإنشاء - اختر وضع الرسائل.

وقت الاستلام - اختيار المدة قبل تسليم كل رسالة.

مركز الرسائل المتعددة - إدخال تفاصيل مركز الرسائل.

تغيير الإعدادات الأخرى

المس  في قائمة اتصال واختر إعدادات ثم:

بريد صوتي - المس  لإضافة خدمة بريد صوتي جديدة. اتصل بمشغل الشبكة للحصول على مزيد من المعلومات حول الخدمة التي يقدمها.

رسالة الخدمة - اختر استلام أو حظر رسائل الخدمة. كما يمكنك أيضاً تعيين مستويات حماية الرسالة وذلك بإنشاء قوائم مرسلين موثوق بهم وغير موثوق بهم.

عداد الرسائل - اختر لتعيين عداد الرسائل أو إعادة تعيينه.

خدمة المعلومات - حدد حالة الاستلام. واللغة وإعدادات أخرى.

إرسال النص الطويل ك- اختر إرسال الرسائل الطويلة كرسائل نصية متعددة أو كرسالة وسائط متعددة.

تغيير إعدادات رسائل الوسائط المتعددة

تكون إعدادات الرسائل في الهاتف GW525 معرّفة مسبقاً بحيث يمكنك إرسال الرسائل على الفور. يمكن تغيير هذه الإعدادات بحسب تفضيلاتك.

المس  . حدد  ثم  . اختر إعدادات ورسالة وسائط متعددة. يمكنك تغيير ما يلي:


وضع الاسترداد - اختر شبكة محلية أو شبكة جواله. إذا حددت يدوي فيما بعد فستلقى إشعارات عن رسائل وسائط متعددة فقط. ويمكنك حينئذٍ تقرير ما إذا كنت تريد تنزيلها بشكل كامل.

تقرير الاستلام - اختر السماح بتقرير الاستلام و/أو طلبه.

قراءة الرد - اختر السماح و/أو طلب تقرير القراءة.

الأولوية - اختر مستوى أولوية رسالة وسائط متعددة.

الكاميرا

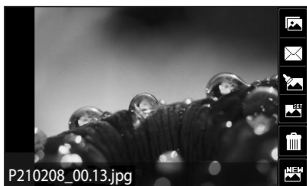

التقاط صورة سريعة

- 1 اضغط باستمرار مفتاح  في الجانب الأيمن من الهاتف. سيظهر محدد المنظر على الشاشة.
- 2 مع الإمساك بالهاتف أفقياً. صوّب العدسة باتجاه موضوع الصورة.
- 3 ضع الهاتف بحيث يمكنك مشاهدة موضوع الصورة في معاينة الشاشة.
- 4 عندما تركز الكاميرا على موضوع الصورة. إمّا اضغط  الموجود على جانب الهاتف بقوة أو اضغط الخانة الحمراء الموجودة على الجانب الأيمن السفلي من الشاشة لتلتقط الصورة. فتظهر حينئذٍ خيارات الإرسال على الشاشة.


بعد التقاط الصورة


- تظهر الصورة الملتقطة على الشاشة. ويمتد اسم الصورة عبر أسفل الشاشة مع ستة رموز على الجانب الأيمن.


المس للانتقال إلى الاستوديو. 

المس لإرسال الصورة كرسالة. أو بريد إلكتروني أو عبر بلوتوث. 

المس لتعديل الصورة. 


المس لتعيين الصورة التي قمت بالتقاطها كخلفية. 

المس لحذف الصورة التي التقطتها للتوّ وأكد بلمس نعم. يظهر محدد المنظر من جديد. 

المس لالتقاط صورة أخرى على الفور. 
المس لالتقاط صورة أخرى على الفور.

الكاميرا


التعرف على محدد المنظر

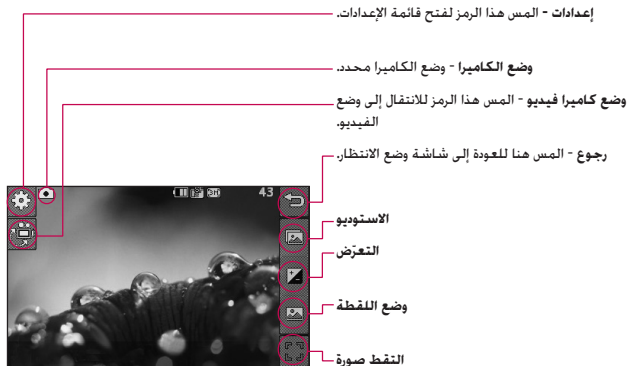

تلميح! يمكنك إحصار الخيارات بالضغط على الشاشة. وهي تتوقف عن التشغيل تلقائياً بعد بضع ثوانٍ.

اختيار نوع اللقطة

استخدام الإعدادات المتقدمة
في محدد المنظر. المس  لفتح كل خيارات الإعدادات المتقدمة.

1 المس  لفتح أنواع اللقطات المتوفرة.
2 اختر من بين خيارين:

إعدادات المعاينة

الحجم - غير حجم الصورة لتوفير مساحة في الذاكرة أو التقاط صورة تمثل الحجم الصحيح لجهة الاتصال.

لقطة عادية - هذا هو نوع اللقطة الافتراضي - يتم التقاط الصورة بالطريقة العادية. كما تم توضيحه في التقاط صورة سريعة.

لقطات متلاحقة - يمكنك هذا الخيار من أخذ ثلاث أو ست أو تسع لقطات تلقائياً بطريقة متتابعة سريعة.

تأثير الألوان - اختر درجة اللون لاستخدامها على صورتك الجديدة.

ضبط التباين

توازن اللون الأبيض - اختر من ضمن تلقائي، أو متوهج، أو مشمس، أو فلورسنت، أو غائم، وضع الليل - يُعتبر استخدامه مفيداً في الأماكن الداكنة.

يعرّف التعرّض الفرق بين الألوان الفاتحة والداكنة (التباين) في فيديو ما، فتظهر الصورة ذات التباين المنخفض غير واضحة، بينما تظهر الصورة ذات التباين العالي أكثر دقةً ووضوحاً.

المؤقت الذاتي - يسمح لك المؤقت الذاتي بتعيين فترة تأخير بعد ضغط زر الالتقاط قبل أن تلتقط الكاميرا الصورة، اختر من ضمن إيقاف التشغيل، أو 3 ثوان، أو 5 ثوانٍ أو 10 ثوان. هذا خيار مثالي إن أردت تضمين نفسك في الصورة.


1 المس

2 قم بتمرير مؤشر التباين عبر الشريط - يساراً للحصول على تعرّض منخفض وصورة ضبابية، أو يميناً للحصول على تعرّض أعلى وصورة أوضح.

تلميح! عندما تنهي تشغيل الكاميرا، تعود كل الإعدادات إلى وضعها الافتراضي باستثناء حجم الصورة وجودتها. ستحتاج كل الإعدادات غير الافتراضية إلى إعادة التعيين. كدرجة اللون مثلاً. تحقق من ذلك قبل التقاط الصورة التالية.

تلميح! تقع قائمة الإعدادات فوق محدد المنظر. وستتمكن بالتالي من مشاهدة معاينة لتغييرات الصورة خلف قائمة الإعدادات عندما تقوم بتغيير عناصر ألوان الصورة أو جودتها.

عرض الصور المحفوظة

يمكنك الوصول إلى الصور المحفوظة من ضمن وضع الكاميرا، ما عليك سوى لمس  وسيظهر الاستوديو على الشاشة.

الجودة - اختر من ضمن دقيق جداً، ودقيق وعادي. بقدر ما تكون الجودة دقيقةً بقدر ما تكون الصورة واضحة المعالم ولكن حجم الملف سيكون أكبر. أي أنك ستتمكن من تخزين عدد أقل من الصور في الذاكرة.

وضع العرض - اختر بين ملء الشاشة أو صورة كاملة. قد يتم اقتصاص الصورة في وضع ملء الشاشة للاحتواء ضمن الشاشة.

إعدادات أخرى

الذاكرة - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

صوت الغالق - حدد خياراً من ضمن خيارات صوت الغالق الثلاثة.


شاشة الشبكة - اختر من ضمن إيقاف تشغيل. أو تقاطع بسيط. أو ثلاثية الأقسام.


إعادة تعيين الإعدادات - قم بإعادة تعيين إعدادات الكاميرا كافةً.


كاميرا فيديو


بعد إنشاء الفيديو


ستظهر على الشاشة صورةً ثابتةً تمثل الفيديو الملتقط، ويمتد اسم الفيديو عبر أسفل الشاشة مع ستة رموز على الجانب الأيمن.

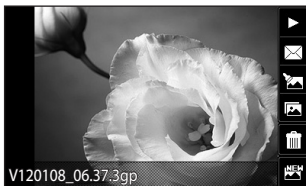



المس لتشغيل الفيديو 

المس لإرسال الفيديو كرسالة أو بريد إلكتروني أو عبر بلوتوث. 






المس لتعديل الفيديو. 

المس لعرض استوديو الصور وملفات الفيديو المحفوظة. 

المس لحذف الفيديو الذي قمت بالتقاطه لتوك وأكد بلمس نعم. يظهر محدد المنظر من جديد. 

المس لإنشاء فيديو آخر على الفور، وسيتم حفظ الفيديو الحالي. 

إنشاء فيديو سريع

- 1 اضغط باستمرار على مفتاح الكاميرا في الجانب الأيمن من الهاتف.
- 2 في وضع المعاينة الخاص بالكاميرا، المس رمز كاميرا الفيديو  في محدد المنظر للانتقال إلى وضع الفيديو. سيظهر محدد المنظر في كاميرا الفيديو على الشاشة.
- 3 مع حمل الهاتف أفقياً، صوّب العدسة باتجاه موضوع الفيديو.
- 4 اضغط مفتاح الكاميرا مرة واحدة لبدء التسجيل. أو اضغط النقطة الحمراء  في الجانب الأيمن السفلي من الشاشة.
- 5 يظهر تسجيل في الزاوية اليمنى العليا من محدد المنظر ويظهر مؤقت في الزاوية السفلى اليمنى يعرض طول الفيديو.
- 6 لإيقاف الفيديو مؤقتاً المس  ولاستئناف التسجيل حد .
- 7 المس  على الشاشة أو اضغط زر الالتقاط مرة ثانية لإيقاف التسجيل.

كاميرا فيديو

التعرف على محدد المنظر



نلميح! يمكنك إغلاق كل خيارات القائمة المختصرة للحصول على شاشة أوضح لمحدد المنظر. ما عليك سوى لمس محدد المنظر مرة واحدة. لاستدعاء الخيارات. المس الشاشة مرة أخرى.

ضبط التباين

يعرّف التعرّض الفرق بين الألوان الفاتحة والداكنة (التباين) في فيديو ما، فيظهر الفيديو ذو التباين المنخفض غير واضح، بينما يظهر الفيديو ذو التباين العالي أكثر دقّة ووضوحاً.

1 المس

2 ادفع مؤشر التعرّض عبر الشريط. نحو

اليسار للحصول على تعرّض منخفض وفيديو ضبابي، أو نحو اليمين للحصول على تعرّض أعلى وفيديو أوضح.

استخدام الإعدادات المتقدمة

باستخدام محدد المنظر، المس الإعدادات لفتح كل خيارات الإعدادات المتقدمة.

إعدادات المعاينة

حجم الفيديو - غير حجم الفيديو لتوفير مساحة في الذاكرة.

تأثير الألوان - اختر درجة اللون لاستخدامها على الفيديو الجديد.

توازن اللون الأبيض - يضمن توازن اللون الأبيض ظهور أي لون أبيض في الفيديو كواقعي.

لتمكن الكاميرا من ضبط توازن اللون الأبيض بطريقة صحيحة، قد تحتاج إلى تحديد شروط الإضاءة، أو اختر من ضمن تلقائي، أو ساطع، أو مشمس، أو فلورسنت أو غائم.

الجودة - اختر من ضمن دقيق جداً، ودقيق وعادي. بقدر ما تكون الجودة دقيقة بقدر ما يكون الفيديو واضح المعالم ولكن حجم الملف سيكون أكبر، ونتيجة لذلك، سيكون عدد ملفات الفيديو التي يمكنك تخزينها في ذاكرة الهاتف أقل.

تعيين الوقت - عيّن حداً لوقت الفيديو، اختر بلا تحديد، أو وسائط متعددة لتحديد الحجم لتمكين من إرسال الفيديو كرسالة وسائط متعددة.

وضع العرض - اختر بين ملء الشاشة أو صورة كاملة. قد يتم اقتصاص الصورة في وضع ملء الشاشة للاحتواء ضمن الشاشة.

كاميرا فيديو

تلميح! إذا اخترت مدة وسائط متعددة، فإن اختيار جودة أقل للصورة سيمكّنك من التقاط مقطع فيديو أطول.

إعدادات أخرى

الذاكرة - اختر ما إذا كنت تريد حفظ ملفات الفيديو في الذاكرة الخارجية أو في ذاكرة الهاتف.

الصوت - اختر كتم لتسجيل فيديو بدون صوت.

إعادة تعيين الإعدادات - قم بإعادة تعيين إعدادات كاميرا الفيديو كافةً.

مشاهدة ملفات الفيديو المحفوظة

- 1 في محدد المنظر، المس .
- 2 يظهر الاستوديو على الشاشة.
- 3 المس الفيديو الذي تريد عرضه مرة واحدة لفتحه بشكل كامل.
- 4 المس الرمز تشغيل في وسط الشاشة.




الصور وملفات الفيديو

ضبط مستوى الصوت عند عرض

فيديو

لضبط مستوى صوت الفيديو أثناء تشغيله،
المس رمز مكبر الصوت على الشاشة وممرّ
الشريط إلى اليسار أو إلى اليمين.




التقاط صورة من فيديو

- 1 حدد الفيديو الذي تريد التقاط صورة منه،
المس  لإيقاف الفيديو مؤقتاً على الإطار
الذي تريد تحويله إلى صورة والمس .
- 2 من قائمة الخيارات حدد .
- 3 تظهر الصورة على الشاشة مع الاسم
المعيّن لها.
- 4 المس للعودة إلى الاستوديو.


6 تُحفظ الصورة في حافظة أسيانتي وتظهر
في الاستوديو، ولكي تظهر الصورة عليك
الخروج من الاستوديو ثم إعادة فتحه.

⚠ تحذير: قد لا تعمل بعض الوظائف
بشكل صحيح إذا لم يكن ملف الوسائط
المتعددة مسجلاً في الهاتف.

عرض الصور وملفات الفيديو

- 1 المس  على شاشة المعاينة الخاصة
بالكاميرا.
- 2 يظهر الاستوديو على الشاشة.
- 3 المس الفيديو أو الصورة لفتحهما كلياً.
- 4 لتشغيل الفيديو، المس  لإيقاف
التشغيل. المس الشاشة مرة واحدة والمس
.

تلميح! انقر إلى اليمين أو إلى اليسار لعرض
صور أخرى أو ملفات فيديو أخرى.

تلميح! لحذف فيديو أو صورة، افتحه وحدد
. المس نعم للتأكيد.

استخدام التكبير/التصغير عند عرض صورة


للتكبير اضغط  بشكل متكرر. للتصغير
اضغط .

الصور وملفات الفيديو

مشاهدة الصور كعرض شرائح

يُظهر عرض الشرائح كل الصور الموجودة في الاستوديو كل صورة على حدة كعرض شرائح. ولا يمكن عرض ملفات الفيديو كعرض شرائح.

1 المس مرتين الصورة التي تريدها أن تبدأ عرض الشرائح لفتحها.

2 حدد  في الجانب الأيسر السفلي من الشاشة.

3 يبدأ عرض الشرائح.

تعيين صورة كخلفية الشاشة

1 المس الصورة التي ترغب في تعيينها كخلفية الشاشة لفتحها.

2 المس الشاشة لفتح قائمة الخيارات.

3 المس .

4 يمكنك عندها تغيير حجم الصورة.

5 إذا كانت الصورة توافق متطلباتك، فالمس تعيين.

6 بتغيير عرض الصورة تبعاً لاستخدام الوضع العمودي أو الوضع الأفقي.

تعديل الصور

يمكنك تطبيق الكثير من الأشياء الرائعة على صورك لتغييرها. أو الإضافة إليها. أو إضفاء بعض الحيوية إليها.

1 افتح الصورة التي تريد تعديلها والمس لإحضار الخيارات.

2 المس الرموز لتعديل صورتك:

 اقتصاص الصورة. اختر منطقة


اقتصاص مربعة أو دائرية وحرك إصبعك عبر الشاشة لتحديد المنطقة.


 ارسم شيئاً على الشكل الحر

لصورتك. حدد سماكة الخط من ضمن الخيارات الأربعة واللون الذي تود استخدامه.




المس لإيقاف عرض الشرائح مؤقتاً على صورة معينة.


 المس لعرض شريحة عشوائية.

 المس لإيقاف عرض الشرائح مؤقتاً على صورة معينة.

 المس مجدداً لاستئناف التشغيل.

 المس لزيادة سرعة عرض الشرائح أو إنقاص سرعته.




 المس للعودة إلى الاستوديو.


تشذيب طول الفيديو

1 افتح الفيديو الذي تريد تعديله. وحدد


والمس .

2 حدد  واختر تشذيب.

3 المس  وعين نقطتي البدء والإنهاء


الجديديتين باستخدام .


4 المس الرمز حفظ أو. كطريقة بديلة.


المس  للعودة إلى الاستوديو وتجاهل التغييرات.


T أضف كتابة إلى الصورة.


قم بتزيين صورتك بواسطة الطوابع. اختر من ضمن الطوابع المتوفرة والمس موافق. المس الصورة كلما أردت أن تظهر الطوابع.

 امسح ما ترسمه. يمكنك تحديد حجم המחاة من ضمن الخيارات الأربعة.

 حفظ التغييرات التي أدخلتها على الصور. حدد لحفظ التغييرات فوق الملف الأصلي، أو كملف جديد. إذا حددت ملف جديد، فأدخل اسم ملف.

 التراجع عن التأثير الأخير أو التعديل الذي أدخلته على الصورة.


 المس لفتح المزيد من خيارات التأثير بما فيها التحويل. هناك أيضاً المزيد من خيارات التعديل المتقدمة. راجع تغيير الحجم والتنشكيل وتوكيد الألوان وإضافة الصور. إلخ.


 المس لإضافة تأثير تصفية مثل غير واضح أو حاد أو تخطيط وغيرها إلى الصورة.

المس لتعديل تأثير في الصورة. 

الصور وملفات الفيديو

دمج ملفي فيديو معاً

1 افتح الفيديو الذي تريد تعديله. وحدد  والمس .

2 حدد  واختر دمج الفيديو.

3 تفتح حافظة أشيائي. اختر الفيديو الذي تريد دمجه.

4 المس وادفع الصورة التي تريد نقلها إلى نهاية الفيديو أو بدايته.



5 المس الرمز تأثير لاختيار طريقة دمج ملفات الفيديو معاً: بلا، أو تدوير التكبير/التصغير أو كشف، أو رقعة الشطرنج، أو تقسيم، أو شكل الماس، أو بياضوي، أو إخفاء أو حل.


6 اضغط الرمز حفظ يليه نعم لحفظ

الفيديو المدمج الجديد. حدد ما إذا كنت تريد استبدال الملف الأصلي أو الحفظ كملف جديد.

7 كرر هذه الخطوات لدمج المزيد من ملفات الفيديو.

دمج صورة بفيديو

1 افتح الفيديو الذي تريد تعديله. وحدد  والمس .

2 حدد  واختر دمج صورة.

3 ستفتح حافظة أشيائي. اختر الصورة التي تريد دمجها بالفيديو.

4 المس وادفع الصورة التي تريد نقلها إلى نهاية الفيديو أو بدايته.

5 المس الرمز تأثير لاختيار طريقة دمج الصورة والفيديو معاً: بلا، أو تدوير التكبير/التصغير، أو كشف، أو رقعة الشطرنج، أو تقسيم، أو شكل الماس، أو بياضوي، أو إخفاء أو حل.

6 اضغط الرمز حفظ يليه نعم، حدد ما إذا كنت تريد استبدال الملف الأصلي أو الحفظ كملف جديد.

7 كرر هذه الخطوات لدمج المزيد من الصور.

إضافة نص إلى الفيديو





- 1 افتح الفيديو الذي تريد تعديله. وحدد  والمس  وحدد  واختر طبقة التراكب.
- 2 أدخل النص باستخدام لوحة المفاتيح وحدد حفظ.
- 3 المس  وحدد متى تريد ظهور النص باستخدام .
- 4 المس ناحية الشاشة التي تريد ظهور النص فيها والمس موافق.
- 5 المس  لتحديد متى تريد اختفاء النص.
- 6 المس معاينة لكي تتأكد من اقتناعك بطبقة النص.
- 7 المس الرمز حفظ واختر الحفظ فوق الملف الأصلي أو كملف جديد.
- 9 كرر هذه الخطوات لإضافة المزيد من النص.


تراكب صورة

- 1 افتح الفيديو الذي تريد تعديله. وحدد  والمس  وحدد  واختر تراكب الصورة.
- 2 تفتححافظة أسياني. اختر الصورة التي تريدها أن تراكب الفيديو.
- 3 المس  وحدد متى تريد ظهور الصورة باستخدام .
- 4 المس ناحية الشاشة التي تريد ظهور الصورة فيها والمس موافق. إذا كانت الصورة كبيرة جداً فقد تراكب الشاشة بأكملها. وليس فقط المنطقة المحددة.
- 5 المس  لتحديد متى تريد أن تختفي الصورة.
- 6 المس معاينة لكي تتأكد من اقتناعك بطبقة الصورة.
- 7 المس الرمز حفظ واختر الحفظ فوق الملف الأصلي أو كملف جديد.
- 9 كرر هذه الخطوات لإضافة المزيد من الصور.

الصور وملفات الفيديو

إضافة تسجيل صوتي

- 1 افتح الفيديو الذي تريد تعديله. وحدد  والممس .
- 2 حدد  واختر تسجيل صوتي.
- 3 ستتأثر جودة الصوت الأصلي عند إضافة تسجيل صوتي. المس نعم للمتابعة.
- 4 المس  لعرض الفيديو. عندما تحصل على الجزء الذي ترغب في تسجيل صوتك فوقه. اضغط .


- 5 اضغط لإيقاف التسجيل واضغط  لتشغيله.
- 6 المس معاينة لكي تتأكد من اقتناعك بالتسجيل الصوتي.

- 7 المس الرمز حفظ واختر الحفظ فوق الملف الأصلي أو كملف جديد.
- 8 كرر هذه الخطوات لإضافة المزيد من التسجيلات الصوتية إلى الفيديو.

إضافة مسار صوتي إلى الفيديو

- 1 افتح الفيديو الذي تريد تعديله. وحدد  والممس .
- 2 حدد  واختر دبلجة الصوت.
- 3 تفتح حافظة أشيائي. اختر المسار الذي تريد إضافته إلى الفيديو.
- 4 سيتم مسح المسار الصوتي الأصلي من الفيديو. المس نعم للمتابعة.
- 5 إذا كان الصوت أقصر من الفيديو. فاختر ما إذا كنت ترغب في تشغيله مرة واحدة أو تكرار تشغيله.
- 6 حدد ما إذا كنت تريد استبدال الملف الأصلي أو الحفظ كملف جديد.

تغيير سرعة الفيديو

- 1 افتح الفيديو الذي تريد تعديله. وحدد  والممس .
- 2 حدد  واختر مقياس الوقت.
- 3 حدد خياراً من ضمن خيارات السرعة الأربعة: **x4. x2. x1/4. x1/2**
- 4 حدد ما إذا كنت تريد استبدال الملف الأصلي أو الحفظ كملف جديد.

ملاحظة: يمكن تعديل ملفات فيديو 3gp فقط.

أشياء


4 إذا اخترت رسالة وسائط متعددة أو بريد إلكتروني، فسيتم إرفاق صورتك بالرسالة ويمكنك كتابة الرسالة وإرسالها كالمعتاد. إذا اخترت بلوتوث، فسيتم تشغيل بلوتوث تلقائياً وسيبحث هاتفك عن جهاز ليرسل الصورة إليه.

استخدام صورة

يمكنك اختيار الصور لاستخدامها كخلفيات للشاشة وكشاشات توقف أو حتى لتعريف المتصل. يجب أن يكون الهاتف في الوضع عمودي.

1 المس  ثم .

2 المس  ثم صور.

3 حدد صورة والمس .

4 المس استخدام ك واختر من ضمن:



خلفية - تعيين خلفية لشاشة وضع الانتظار.

صور الأسماء - تعيين صورة إلى شخص معين في قائمة الأسماء المتوفرة لديك بحيث تظهر صورته عند اتصاله بك.

صورة بدء التشغيل - تعيين صورة بحيث تظهر عند تشغيل الهاتف.


صورة إيقاف التشغيل - تعيين صورة بحيث تظهر عند إيقاف تشغيل الهاتف.

يمكنك تخزين أية ملفات وسائط متعددة في ذاكرة الهاتف بحيث يتوفر لديك الوصول السهل إلى كل الصور، والأصوات، وملفات الفيديو والألعاب. كما يمكنك حفظ الملفات في بطاقة ذاكرة، بسمح لك استخدام بطاقة الذاكرة بتحرير مساحة في ذاكرة الهاتف.

للوصول إلى قائمة أشياءي، المس  ثم  المس. لفتح قائمة الحافظات التي تحفظ كل ملفات الوسائط المتعددة.

الصور

تحتوي الصور على قائمة بالصور بما فيها الصور الافتراضية التي تم تحميلها مسبقاً إلى هاتفك. وصوراً قمت أنت بتنزيلها وصوراً تم التقاطها بكاميرا الهاتف.

المس  لتغيير العرض من عرض الشبكة إلى عرض قائمة أو العكس بالعكس.

إرسال صورة

1 المس  ثم .

2 المس  ثم اختر الصور.

3 حدد الصورة التي تريد إرسالها، ثم حدد إرسال واختر من ضمن رسالة وسائط متعددة أو بريد إلكتروني أو بلوتوث.

أشياء

طباعة صورة

- 1 المسس  ثم  ثم صور.
- 2 المسس  ثم صور.
- 3 حدد صورة والمس .
- 4 المسس طباعة ثم اختر بين بلوتوث و

.PictBridge

أصوات

تحتوي حافظة الأصوات على الأصوات التي تم تنزيلها، وعلى الأصوات الافتراضية والتسجيلات الصوتية، ومن هنا يمكنك إدارة الأصوات، أو إرسالها أو تعيينها كنفقات رنين.

تلميح! يمكنك الطباعة عبر بلوتوث أو عبر الاتصال بطابعة PictBridge متوافقة.

نقل صورة أو نسخها

- 1 المسس  ثم  ثم صور.
- 2 المسس  ثم صور.
- 3 المسس  وحدد نقل أو نسخ.
- 4 يمكنك تحديد/إلغاء تحديد الصور بالضغط عليها بالتتابع. حدد الصورة التي تريد أن تنقلها أو تنسخها والمس نسخ/نقل.

استخدام صوت

- 1 المسس  ثم  ثم أصوات.
- 2 المسس  ثم أصوات.
- 3 حدد صوت وسيبدأ تشغيله.
- 4 المسس  وحدد استخدام كـ.
- 5 اختر من بين نغمة الرنين، أو نغمة الرسالة، أو بدء التشغيل، أو إيقاف التشغيل.

ملفات الفيديو


تعرض حافظة ملفات الفيديو قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك أو تسجيلها عليه. مشاهدة فيديو

1 المس  ثم .

2 المس  ثم ملفات الفيديو.

3 حدد فيديو ليتم تشغيله.

استخدام الخيارات فيما الفيديو متوقف مؤقتاً

المس  خلال التوقف المؤقت واختر من ضمن:

التقاط - التقاط الإطار المجدد كصورة.


إرسال - إرسال الفيديو في رسالة أو بريد إلكتروني أو عبر بلوتوث.

حذف - حذف الفيديو.

تعديل - تعديل الفيديو.

معلومات الملف - عرض تفاصيل العنوان والحجم والتاريخ والمدة وحالة الحماية وإعادة التوجيه.

إرسال فيديو كليب

1 حدد فيديو والمس .

2 المس إرسال واختر من ضمن رسالة، بريد إلكتروني، بلوتوث.

3 إذا اخترت رسالة أو بريد إلكتروني، فسيتم إرفاق الفيديو كليب بالرسالة ويمكنك كتابة الرسالة وإرسالها كالمعتاد. أما إذا اخترت بلوتوث، فسُتطلب بتشغيل بلوتوث وسيبحث الهاتف عن جهاز لإرسال الفيديو إليه.

محتويات الفلاش

تحتوي حافظة محتويات الفلاش على كل ملفات SWF الافتراضية وتلك التي قمت بتنزيلها.

مستندات

من قائمة مستندات، يمكنك عرض كل ملفات المستندات. من هنا يمكنك عرض ملفات Excel، PowerPoint، Word، Text و PDF.

نقل ملف إلى هاتفك

تُعتبر تقنية بلوتوث الطريقة الأسهل على الأرجح لنقل ملف من الكمبيوتر إلى هاتفك. كما يمكنك استخدام LG PC Suite عبر كابل المزامنة.

للنقل باستخدام بلوتوث:

1 تأكد من إيقاف تشغيل بلوتوث في الهاتف والكمبيوتر ومن كونهما مرئيين بالنسبة إلى بعضهما البعض.

2 استخدم الكمبيوتر لإرسال الملف عبر بلوتوث.

3 عندما يُرسل الملف إليك سيترتب عليك قبوله على الهاتف وذلك بلمس نعم.

4 يجب أن يظهر الملف في حافظة المستندات أو حافظات أخرى.

عرض ملف

1 المس  ثم .

2 المس  ثم مستندات.

3 حدد مستنداً.

أخرى

تُستخدم الحافظة أخرى لتخزين ملفات ليست عبارة عن صور، أو أصوات، أو ملفات فيديو، أو ألعاب أو تطبيقات، وهي تُستخدم بالطريقة نفسها التي يتم بها استخدام حافظة

المستندات. وقد تجد أن الملفات تظهر في الحافظة أخرى عوضاً عن ظهورها في حافظة المستندات عندما تنقلها من الكمبيوتر إلى هاتفك.

إذا حدث مثل هذا الأمر، فيمكنك نقل الملفات. لنقل ملف من حافظة أخرى إلى حافظة المستندات:

1 المس  ثم .

2 المس  ثم أخرى.

3 حدد ملفاً والمس .




4 المس نقل واختر الحافظة المطلوبة

من القائمة بلمس رمز السهم. ستعرض

الشاشة تم النقل عندما تكتمل عملية النقل.

تثبيت لعبة/تطبيق بواسطة تثبيت

محلي

- 1 المس  ثم .
- 2 المس  وأخرى أو بطاقة الذاكرة إذا كانت الذاكرة الخارجية مدرجةً.
- 3 حدد الملف (jad* أو jar*) الذي تود تثبيته ثم اضغط الأمر تثبيت. سيتم تثبيت التطبيق.

ملاحظة: يجب أن يحتوي ملف jad على ملف jar الخاص به.

لعب لعبة

- 1 المس  ثم .
- 2 المس .
- 3 افتح حافظة الألعاب. واختر لعبة والمس الرمز لبدء تشغيلها.

استخدام قائمة خيارات الألعاب

تتوفر ضمن حافظتي الألعاب والتطبيقات الخيارات التالية:

معلومات الملف - عرض البائع والإصدار والحجم والمجال.




فرز حسب - فرز الألعاب والتطبيقات حسب التاريخ. أو الحجم أو الاسم.

إدارة الذاكرة - عرض حالة ذاكرة الهاتف والذاكرة الخارجية.

استخدام الترفيه

يحتوي الترفيه على ألعاب فلاش تستخدم استشعار الحركة المضمّن.

الموسيقى

يكون مشغّل الموسيقى مضمّنًا في الهاتف LG GW525 بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك. للوصول إلى مشغّل الموسيقى. المس  ثم  ثم  من هنا يمكنك الوصول إلى عدد من الحافظات:

تم تشغيلها مؤخراً - قم بعرض كل الأغاني التي قمت بتشغيلها مؤخراً.

كل المسارات - يحتوي هذا الخيار على كل الأغاني المتوفرة في هاتفك.

الفنانون - لعرض مجموعتك الموسيقية حسب الفنان.

الألبومات - لعرض مجموعتك الموسيقية حسب الألبوم.

الأنواع - لعرض مجموعتك الموسيقية حسب النوع.

أشياء

قوائم التشغيل - تحتوي على كل قوائم التشغيل التي أنشأتها.

مزج المسارات - شغل المسارات بترتيب عشوائي.


نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كيبول المزامنة. للنقل باستخدام بلوتوث:

1 تأكد من إيقاف تشغيل بلوتوث في الجهازين ومن كونهما مرتبين بالنسبة إلى بعضهما البعض.


2 حدد ملف الموسيقى على الجهاز الآخر ثم حدد إرسال عبر بلوتوث.

3 عندما يصبح الملف جاهزاً للإرسال. يجب أن تقبله على هاتفك بالضغط على نعم.


4 يجب أن يظهر الملف في  كل المسارات.

تشغيل أغنية

1 المس  ثم 


2 المس  ثم حدد الموسيقى وكل المسارات.

3 حدد الأغنية التي تريد تشغيلها.

4 المس  لإيقاف الأغنية مؤقتاً.

5 المس  للتجاوز إلى الأغنية التالية.


6 المس  للرجوع إلى الأغنية السابقة.

7 المس  للعودة إلى قائمة موسيقى.

إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك وذلك بإنشاء مجموعة مختارة من الأغاني من حافظة كل المسارات.

1 المس  ثم 

2 المس  ثم حدد الموسيقى وكل المسارات.

3 المس إضافة قائمة تشغيل جديدة. وأدخل اسم قائمة التشغيل والمس حفظ.


4 تعرض حافظة كل المسارات كل الأغاني الموجودة على هاتفك. المس كل الأغاني التي تريد تضمينها في قائمة التشغيل. تظهر علامة إلى يسار أسماء المسارات.

5 المس تم.

تعديل قائمة تشغيل

قد ترغب من وقت إلى آخر. في إضافة أغان جديدة أو حذف أغان من قائمة التشغيل. يمكنك إجراء ذلك بتعديل قائمة التشغيل.

1 المس  ثم .

2 المس  ثم حدد الموسيقى وكل المسارات.

3 حدد قائمة التشغيل.

4 المس  وحدد:

إضافة أغان جديدة - لإضافة المزيد من الأغاني إلى قائمة التشغيل. حدد الأغاني التي تريد إضافتها والمس تم.

تغيير الترتيب - تغيير ترتيب تشغيل قائمة التشغيل.

إزالة - إزالة أغنية من قائمة التشغيل.

المس نعم للتأكيد.


حالة الذاكرة - عرض حالة ذاكرة الهاتف والذاكرة الخارجية.

إزالة الكل - إزالة كل المسارات من قائمة التشغيل.

حذف قائمة تشغيل

1 المس  ثم .

2 المس  ثم قوائم التشغيل.

3 المس  ثم حذف أو حذف الكل لحذف كل قوائم التشغيل.

استخدام الراديو

تتوفر في جهاز LG GW525 ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة والاستماع إليها أثناء التنقل.

ملاحظة: ستحتاج إلى توصيل سماعات

الرأس لتتمكن من الاستماع إلى الراديو. أدخل سماعات الرأس في المأخذ المخصص لها (هذا المأخذ هو نفسه المأخذ الذي تقوم بتوصيل الشاحن فيه).

البحث عن محطات

يمكنك ضبط محطات الراديو في هاتفك وذلك بالبحث عنها إما يدوياً أو تلقائياً. وسيتم حينئذٍ حفظها في أرقام محطات معينة. بحيث لن تعود بحاجة إلى إعادة ضبطها. ويمكنك حفظ ما يصل إلى 50 محطة في هاتفك. عليك أولاً توصيل سماعة الرأس بالهاتف إذ إنها تعمل كهوائي.

أشياء





للضبط تلقائياً:

1 المس  ثم 

2 المس  ثم 

3 المس تفحص تلقائياً. فيتم تلقائياً العثور على المحطات وتخصيصها إلى قناة في هاتفك.


ملاحظة: يمكنك أيضاً ضبط إحدى المحطات يدوياً باستخدام

 و  الذي يظهر إلى جانب التردد اللاسلكي. إذا ضغطت باستمرار على  و ، فسيتم العثور على المحطات تلقائياً.

استخدام استوديو الأفلام


1 المس  ثم 

2 المس 

3 المس  لإضافة صورة. ضع علامة في خانة الاختيار بجانب الصور التي تريد تضمينها ثم حدد إدراج.

4 المس علامة تبويب الوضع لتختار وضع الأفلام.

5 المس الصوت الافتراضي لتغيير الصوت.

6 المس  لمشاهدة ما أنشأته.

7 إذا أردت حفظ ما أنشأته. المس الرمز حفظ.

إعادة تعيين القنوات

1 المس  ثم 

2 المس  ثم 

3 اختر إعادة تعيين لإعادة تعيين القناة الحالية أو اختر إعادة تعيين الكل لإعادة تعيين كل القنوات. ستعود كل قناة إلى التردد 87.5 ميغاهرتز وهو تردد البداية.

المنسق




إضافة حدث إلى التقويم

- 1 في شاشة وضع الانتظار حدد . ثم المس  واختر  حدد التقويم.
- 2 حدد التاريخ الذي تريد إضافة حدث إليه.
- 3 المس  ثم إضافة حدث.

تلميح! يمكنك تعديل عنصر بتحديدده. ولس علامة التبويب ثم إدخال التغييرات. أكد التغييرات بتحديد حفظ.



استخدام الباحث عن التاريخ


الباحث عن التاريخ هو أداة سهلة تساعدك على احتساب تاريخ الأيام القليلة المقبلة. سيساعدك ذلك في تعقب المواعيد المحددة.

- 1 في شاشة وضع الانتظار حدد . ثم المس  واختر  حدد الباحث عن التاريخ.




- 2 حدد الباحث عن التاريخ.
- 3 قم بتعيين التاريخ المطلوب في علامة التبويب من.
- 4 حدد عدد الأيام في علامة التبويب بعد.
- 5 يظهر التاريخ الهدف أدناه.

تعيين المنبه

- 1 في شاشة وضع الانتظار حدد . ثم المس  واختر  المس إضافة منبه.
- 2 المس إضافة منبه.
- 3 عيّن الوقت الذي تريد أن يبدأ فيه المنبه بالرنين والمس حفظ. تعود حينئذٍ الشاشة تلقائياً إلى قائمة المنبه.

تلميح! يمكنك تعيين تواريخ العطل في تقويمك. المس على حدة كل يوم ستكون فيه في عطلة. ثم المس  وحدد تعيين أيام العطل.

إضافة عنصر إلى قائمة المهام

- 1 في شاشة وضع الانتظار حدد . ثم المس  واختر  حدد المهام ثم المس إضافة مهام.
- 2 حدد المهام ثم المس إضافة مهام.
- 3 عين تاريخ المهمة. وأضف ملاحظات وحدد مستوى للأولوية: عالية، متوسطة أو منخفضة.
- 4 قم بحفظ المهمة عبر تحديد حفظ.

- 4** حدد العنصر على القائمة واختر ما إذا كنت ترغب في أن يرن المنبه مرّةً أو يوميّاً. أو من الاثنين إلى الجمعة. أو من الاثنين إلى السبت. أو من السبت إلى الأحد. أو باستثناء أيام العطل أو اختر يوم الأسبوع. تشير الرموز إلى يوم الأسبوع الذي اخترته.
- 5** حدد نوع المنبه لتحديد نوع المنبه المطلوب.
- 6** المس جرس المنبه. يمكنك اختيار صوت من قائمة أثنائي.
- للاستماع إلى الأصوات. المس  إلى يمين الصوت.
- 7** إضافة مذكرة إلى المنبه.
- 8** أخيراً. يمكنك تعيين الفاصل الزمني للانتظار إلى 5 أو 10 دقائق أو 20 أو 30 دقيقةً أو ساعة واحدة أو إيقاف تشغيله.
- 9** بعد تعيين المنبه. المس حفظ.
- ملاحظة: يمكنك إعداد 5 تنبيهات كحد أقصى.

تلميح! المس رمز التشغيل/إيقاف التشغيل الموجود في الجانب الأيمن من المنبه الذي تريد تعيينه.

ضوابط اللمس

استخدم مسجل الصوت لتسجيل مذكرات صوتية أو ملفات صوت أخرى.

1 المس  ثم .

2 المس مسجل الصوت ثم  وإعدادات واختر من:

المدة - تعيين مدة التسجيل. اختر من

ضمن بلا تحديد. أو حجم رسالة وسائط متعددة أو 1 دقيقة

الجودة - حدد جودة الصوت. اختر من ضمن دقيق جداً، أو دقيق. أو عادي.

الذاكرة المستخدمة - اختر ما إذا كنت تريد حفظ الأصوات المسجلة في ذاكرة الهاتف أو في الذاكرة الخارجية.

تسجيل ملف صوتي أو صوت

1 المس  ثم .

2 المس مسجل الصوت.

3 المس  لبدء التسجيل.





4 المس  لإنهاء التسجيل.

5 المس  للاستماع إلى تسجيلك.


إرسال التسجيل الصوتي

- 1 حين تنتهي من التسجيل، المس .
- 2 المس إرسال عبر واختر من ضمن رسالة أو بريد إلكتروني أو بلوتوث. إذا اخترت رسالة أو بريد إلكتروني، فستتم إضافة التسجيل إلى الرسالة ويمكنك كتابة الرسالة وإرسالها بشكل عادي. إذا اخترت بلوتوث، فسيتم تشغيل بلوتوث تلقائياً ويبحث عن جهاز. ملاحظة: بعد أن تنتهي من التسجيل، المس  واختر إرسال عبر، أو ملف، أو حذف، أو استخدام كضوابط (للاستخدام التسجيلات كضوابط نغمة رنين) أو الذهاب إلى أصواتي.

استخدام الحاسبة

- 1 في شاشة وضع الانتظار حدد . ثم المس  واختر  حدد الحاسبة.
- 2 حدد مفاتيح الأرقام لإدخال الأرقام.
- 3 بالنسبة إلى الحسابات البسيطة، المس الوظيفة التي تحتاج إليها (+، -، أو X أو ÷) يليها =.
- 4 بالنسبة إلى العمليات الحسابية الأكثر تعقيداً، المس  واختر من ضمن sin أو cos أو tan أو log أو ln أو exp أو deg أو rad إلخ.




تحويل وحدة

- 1 في شاشة وضع الانتظار حدد . ثم المس  واختر  حدد محول الوحدة.
- 2 اختر ما إذا كنت ترغب في تحويل العملة، أو المساحة، أو الوزن، أو الطول، أو درجة الحرارة، أو الحجم أو السرعة.
- 3 يمكنك الآن تحديد الوحدة وإدخال القيمة التي تريد التحويل منها. تتبعها الوحدة التي تريد التحويل إليها.
- 4 تظهر القيمة المناسبة على الشاشة.

إضافة مذكرة

- 1 في شاشة وضع الانتظار حدد . ثم المس  واختر  المس إضافة مذكرة.
- 2 اكتب المذكرة، ثم المس حفظ.
- 3 تظهر مذكرك على الشاشة.

استخدام ساعة الإيقاف

- 1 في شاشة وضع الانتظار حدد . ثم المس  واختر .
- 2 حدد ساعة إيقاف.
- 3 المس بدء لبدء التوقيت.
- 4 المس دورة إذا أردت تسجيل وقت الدورة.
- 5 المس إيقاف لإيقاف تشغيل المؤقت.
- 6 المس استئناف لإعادة تشغيل ساعة الإيقاف من الوقت الذي توقفت فيه. أو المس إعادة التعيين لإعادة بدء التوقيت من جديد.

إضافة مدينة إلى ساعتك العالمية

- 1 من شاشة وضع الانتظار حدد . ثم اضغط  وحدد .
- 2 حدد الساعة العالمية
- 3 المس . يتبعه إضافة مدينة. المس الرمز في الجانب العلوي الأيسر من الشاشة واكتب اسم المدينة المطلوبة على علامة التبويب بحث. فيتم عرضها حينئذٍ في أعلى الشاشة.

STK

قد تكون هذه القائمة مختلفة. وهذا يتوقف على توفر خدمات دعم STK على بطاقة SIM أو عدم توفرها (أي مجموعة أدوات SIM).

مزمنة الكمبيوتر الشخصي

يمكنك مزمنة الكمبيوتر مع الهاتف للتأكد من تطابق كافة التفاصيل والتواريخ الهامة. كما يمكنك إجراء نسخة احتياطية لملفاتك للاطمئنان.

تثبيت برنامج LG PC Suite على الكمبيوتر

- 1 في شاشة وضع الانتظار اضغط  . وحدد  واختر .
- 2 قم بالتمرير والمس وضع اتصال USB واختر PC suite.
- 3 قم بتوصيل الهاتف بالكمبيوتر.

نسخ احتياطي للمعلومات على الهاتف واستعادتها

- 1 قم بتوصيل الهاتف بالكمبيوتر.
- 2 انقر نقرًا مزدوجاً فوق رمز LG PC Suite على سطح المكتب.
- 3 انقر فوق الرمز نسخ احتياطي وحدد نسخ احتياطي أو استعادة.
- 4 حدد المحتوى الذي ترغب في إجراء نسخ احتياطي له أو استعادته. حدد الموقع الذي تريد إجراء نسخ احتياطي للمعلومات فيه. أو استعادة المعلومات منه. انقر فوق موافق.

- 5 سيتم إجراء نسخ احتياطي للمعلومات أو استعادتها.

عرض ملفات الهاتف على الكمبيوتر

- 1 قم بتوصيل الهاتف بالكمبيوتر.
- 2 انقر نقرًا مزدوجاً فوق رمز LG PC Suite على سطح المكتب.
- 3 انقر فوق رمز المحتويات.
- 4 تظهر على الشاشة في حافظة هاتف LG كل المستندات، ومحتويات الفلاش، والصور وملفات الصوت والفيديو التي حفظتها في الهاتف.

تلميح! يساعدك عرض محتويات الهاتف على الكمبيوتر على ترتيب الملفات، وتنظيم المستندات وإزالة المحتوى الذي لم تعد بحاجة إليه.

مزمنة الأسماء

- 1 قم بتوصيل الهاتف بالكمبيوتر.
- 2 انقر نقرًا مزدوجاً فوق رمز LG PC Suite على سطح المكتب.
- 3 انقر فوق رمز الأسماء.
- 4 سيقوم الكمبيوتر الآن باستيراد وعرض كل الأسماء المحفوظة في بطاقة SIM والهاتف.



مزمنة الكمبيوتر الشخصي

استخدام الهاتف كوسيلة تخزين ذات

سعة كبيرة

يمكنك استخدام هاتفك كجهاز تخزين ذات سعة كبيرة.

1 افصل الهاتف عن الكمبيوتر.

2 في شاشة وضع الانتظار حدد  . ثم المس .

3 حدد  . ثم وضع اتصال USB.

4 المس تخزين ذات سعة كبيرة. سيتم حفظ هذا الوضع.

5 توصيل الهاتف بالكمبيوتر. سيقراً هاتفك: متصل.

6 سيتم تلقائياً تخزين كل ملفات الهاتف على القرص الثابت للكمبيوتر.

ملاحظة: يجب أن يكون هاتفك مفصلاً عن الكمبيوتر لبدء عملية التخزين ذات السعة الكبيرة.

5 انقر فوق ملف وحدد حفظ. يمكنك الآن

تحديد الموقع حيث تريد حفظ الأسماء.

ملاحظة: لإجراء نسخ احتياطي للأسماء

المحفوظة في بطاقة SIM، انقر فوق

حافطة بطاقة SIM في الجانب الأيسر من

شاشة الكمبيوتر. حدد تعديل في أعلى

الشاشة. ثم تحديد الكل.

انقر بزر الماوس الأيمن فوق الأسماء وحدد

نسخ إلى جهة اتصال. انقر الآن فوق حافطة

الهاتف إلى يسار الشاشة فتظهر كل

الأرقام.

مزمنة الرسائل

1 قم بتوصيل الهاتف بالكمبيوتر.

2 انقر نقراً مزدوجاً فوق رمز **LG PC Suite**

على سطح المكتب.

3 انقر فوق رمز الرسائل.

4 تظهر كل رسائل الكمبيوتر والهاتف في

الحافظات على الشاشة.

5 استخدم شريط الأدوات في أعلى الشاشة



لتعديل الرسائل وإعادة ترتيبها.

استخدام الهاتف كجهاز تزامن

الموسيقى

يمكنك أن تستخدم هاتفك كجهاز تزامن الموسيقى لمزامنة ملفات الموسيقى فقط. يمكنك تنفيذ تزامن الموسيقى باستخدام Windows Media Player 11 وهو يعتمد ذاكرة الهاتف وبطاقة ذاكرة خارجية.

1 افصل الهاتف عن الكمبيوتر.

2 في شاشة وضع الانتظار حدد  . ثم المس .

3 حدد  ثم وضع اتصال **USB**.

4 المس مزامنة الموسيقى. سيتم حفظ هذا الوضع.

5 توصيل الهاتف بالكمبيوتر. سيقراً هاتفك: الاتصال كوضع التزامن مع الموسيقى ... يتبعها فصل الكبل لإيقاف تزامن الموسيقى.

استخدام الهاتف كمودم

بإمكان وظيفة الهاتف GW525 أن تكون مضاعفةً إذ باستطاعته أن يعمل كمودم للكمبيوتر. ما يوفر لك الوصول إلى البريد الإلكتروني وإنترنت حتى عندما لا يكون باستطاعتك الاتصال باستخدام الأسلاك. يمكنك القيام بذلك مستخدماً كيبيل USB أو بلوتوث.

استخدام كيبيل USB:

1 تأكد من تثبيت LG PC Suite على الكمبيوتر.

2 قم بتوصيل الجهاز GW525 والكمبيوتر باستخدام كيبيل USB وأبدأ بتشغيل البرنامج LG PC Suite.

3 انقر فوق **internet Kit** على الكمبيوتر.

4 أنشئ الوضع الذي يمكنك من الاتصال بالإنترنت واحفظ الإعدادات.

5 سيظهر الوضع الذي أنشأته على شاشة الكمبيوتر. حدده وانقر فوق **اتصال**. سيتصل الكمبيوتر من خلال GW525.

مزامنة الكمبيوتر الشخصي


استخدام بلوتوث:

- 1** تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً بالنسبة إلى الكمبيوتر والهاتف GW525.
- 2** قم بإقران الكمبيوتر وGW525 بحيث يكون رمز المرور مطلوباً للاتصال.
- 3** استخدم معالج الاتصال على LG PC Suite لإنشاء اتصال بلوتوث نشط.
- 4** انقر فوق **internet Kit** على الكمبيوتر.
- 5** أنشئ الوضع الذي يمكنك من الاتصال بالانترنت واحفظ الإعدادات.
- 6** سيظهر الوضع الذي أنشأته على شاشة الكمبيوتر. حدده وانقر فوق اتصال. سيتصل الكمبيوتر من خلال GW525.

المتصفح

يمنحك المتصفح عالماً سريعاً وكاملاً من الألعاب، والموسيقى، والأخبار، والرياضة، والترفيه وغيرها، مباشرةً إلى هاتفك المحمول. أينما كنت وأياً كانت اهتماماتك.

الوصول إلى ويب

1 في شاشة وضع الانتظار حدد  . ثم


المس  واختر .

2 للانتقال مباشرةً إلى الصفحة الرئيسية للمتصفح. حدد إدخال العنوان واكتب URL المطلوب. يليه اتصال.

ملاحظة: سيتم فرض رسم إضافي عليك عند الاتصال بهذه الخدمة وتنزيل المحتوى. للحصول على تفاصيل تتعلق بالرسوم على البيانات، اتصل بموفر الشبكة.

إضافة إشارات مرجعية والوصول إليها

لكي تتمكن من الوصول إلى مواقعك المفضلة على ويب بشكل سريع وسهل، يمكنك إضافة إشارات مرجعية وحفظ صفحات ويب.

1 في شاشة وضع الانتظار حدد  . ثم

المس  واختر .

2 حدد إشارات مرجعية. تظهر قائمة بالإشارات المرجعية على الشاشة.

3 لإضافة إشارة مرجعية جديدة، المس لإضافة إشارة مرجعية. أدخل اسماً للإشارة المرجعية. يتبعه URL.

4 المس حفظ. تظهر إشارتك المرجعية الآن في قائمة الإشارات المرجعية.

5 للوصول إلى الإشارة المرجعية ما عليك إلا لمسها ثم لمس اتصال. سيتم توصيلك بالإشارة المرجعية.


استخدام قارئ RSS

إنّ RSS (Really Simple Syndication)

عبارة عن تنسيقات موجز ويب يتم استخدامها لنشر المحتوى الذي يتكرر تحديثه. شأن إدخال المدونات. أو عناوين الأخبار أو البث الصوتي على ويب. ويحتوي مستند RSS. والذي يسمى تغذية، أو تغذية ويب. أو قناة. على ملخص محتوى من موقع ويب مرتبط أو على النص الكامل. وبفضل تغذية RSS سيتمكن الأشخاص من الاحتفاظ بمواقعهم المفضلة على ويب بطريقة مؤتمتة تعتبر أسهل من التدقيق في تلك المواقع يدوياً.

وباستطاعة المستخدم الاشتراك في موجز عبر إدخال ارتباط الموجز في القارئ أو عبر النقر فوق رمز RSS في متصفح يبدأ عملية الاشتراك. ويتحقق القارئ من التغذية التي اشترك فيها المستخدم بشكل دوري بحثاً عن محتوى جديد. ويقوم بتنزيل أي تحديثات يعثر عليها.

حفظ صفحة

- 1 انتقل إلى صفحة ويب المطلوبة كما تم وصفه أعلاه.
- 2 المس  وحدد حفظ هذه الصفحة.
- 3 أدخل اسماً لصفحة ويب بحيث يمكنك التعرف عليها بسهولة.
- 4 المس حفظ.

تلميح! ستسمح لك أيضاً هذه القائمة بتعديل عناوين الصفحات المحفوظة. وحماية شاشة المذكرة أو إلغاء حمايتها. وحذف الصفحات المحفوظة.

الوصول إلى صفحة محفوظة

- 1 في شاشة وضع الانتظار حدد  . ثم المس  واختر  .
- 2 حدد صفحات محفوظة.
- 3 حدد الصفحة المطلوبة افتتح.

الوصول إلى Google




يمكنك استخدام خدمة Google باستخدام هذه القائمة.

توفر خدمة Google فرصة استخدام البحث والبريد وكتاب المدونة وYouTube.

عرض محفوظات المتصفح

- 1 في شاشة وضع الانتظار حدد  . ثم المس  واختر  . حدد محفوظات.
- 2 تظهر قائمة بعناوين صفحات ويب التي وصلت إليها مؤخراً. للوصول إلى إحدى هذه الصفحات. ما عليك إلا تحديدها.

تغيير إعدادات متصفح ويب

- 1 في شاشة وضع الانتظار حدد  . ثم المس  واختر  . تحديد الإعدادات.
- 2 يمكنك أن تختار تعديل الأوضاع. أو إعدادات المظهر. أو ذاكرة التخزين المؤقت. أو ملفات تعريف الارتباط. أو الحماية. أو لإعادة تعيين كل الإعدادات. حدد إعادة تعيين الإعدادات.

الإعدادات

تسمح لك هذه الحافظة بتكليف الإعدادات لتخصيص هاتف GW525.

تخصيص الأوضاع

يمكنك أن تقوم بسرعة بتغيير الوضع على شاشة وضع الانتظار. ما عليك سوى لمس شريط ملخص الحالة في الأعلى. ولمس علامة تبويب الوضع.

يمكنك تخصيص إعدادات الوضع باستخدام القائمة إعدادات.

1 اضغط  ثم اختر .

2 المس  ثم اختر الوضع الذي تريد تعديله.

3 يمكنك حينئذٍ تغيير كل خيارات الأصوات والتنبيهات المتوفرة في القائمة. بما فيها إعدادات نغمة الرنين ومستوى الصوت ونغمة الرسالة وغيرها.

تغيير إعدادات الشاشة

1 المس  ثم اختر .

2 المس  ثم اختر من:

خلفية الشاشة - اختر سمة لشاشة وضع الانتظار.

Livesquare - من الممكن تغيير

Liveplace وLivecon. إذا حددت تشغيل

إعادة التعيين يومياً، فسيعاد تعيين

livesquare عند الساعة الرابعة من صباح

كل يوم.

القائمة العلوية - اختر وضع القائمة

العلوية.

اتصال - اضبط حجم الرقم ولونه.

الخط - اضبط وضع الخط وحجمه.

إضاءة خلفية - اختر الفترة التي تبقى

خلالها الإضاءة الخلفية قيد التشغيل.

ملاحظة: بقدر ما تطول الفترة التي تكون

خلالها الإضاءة الخلفية قيد التشغيل. بقدر

ما يتم استخدام طاقة البطارية وقد تحتاج

إلى شحن هاتفك بشكل متكرر أكثر.

السطوع - اضبط سطوع الشاشة.

رسالة ترحيب - اختر تشغيل أو إيقاف

تشغيل وقم بملء رسالة الترحيب.

بدء التشغيل/إيقاف التشغيل - اختر سمة

شاشة بدء التشغيل/إيقاف التشغيل.

تغيير إعدادات الهاتف

استمتع بحرية تكييف هاتف GW525 وفق تفضيلاتك الخاصة.

1 المس  ثم اختر .

2 المس  ثم اختر من القائمة أدناه.

التاريخ والوقت - اضبط إعدادات التاريخ والوقت أو اختر تحديث الوقت بشكل تلقائي عند السفر أو للتوقيت الصيفي.

توفير التشغيل - اختر تبديل إعدادات توفير التشغيل التي تم تعيينها في الشركة المصنعة: إيقاف التشغيل. والليل فقط وتشغيل دائم.

اللغات - غيّر لغة شاشة الهاتف GW525.

قفل المفاتيح التلقائي - قم بإقفال لوحة المفاتيح تلقائياً في شاشة وضع الانتظار. **الحماية** - اضبط إعدادات الحماية. وهذا يشمل رموز PIN وقفل الهاتف.

إدارة الذاكرة - يمكنك استخدام إدارة الذاكرة لتحديد كيفية استخدام الذاكرة وكمية المساحة المتوفرة.

ذاكرة الهاتف العامة - اعرض الذاكرة

المتوفرة في GW525 للصور، والأصوات، وملفات الفيديو، ومحتويات الفلاش، ووسائط متعددة، والبريد الإلكتروني، وتطبيقات Java وغير ذلك.

ذاكرة الهاتف المحجوزة - اعرض الذاكرة

المتوفرة في الهاتف لرسائل نصية، والأسماء، والتقويم، وقائمة المهام، والمذكرات، والمنتبهات، وسجلات المكالمات، والإشارات المرجعية وعناصر متفرقة.

ذاكرة SIM - اعرض الذاكرة المتوفرة في بطاقة SIM.




الذاكرة الخارجية - اعرض الذاكرة المتوفرة في بطاقة الذاكرة الخارجية (قد تحتاج إلى شرائها بشكل منفصل).

إعدادات التخزين الأساسي - اختر الموقع الذي تفضل حفظ العناصر فيه بين ذاكرة الهاتف والذاكرة الخارجية.

إعادة تعيين الإعدادات - يسمح هذا الخيار باستعادة كل الإعدادات إلى الافتراضية.

معلومات - اعرض معلومات GW525 التقنية.

تغيير إعدادات اللمس

في الشاشة الرئيسية حدد  ثم  وحدد .

معايرة لوحة اللمس - يمكنك ضبط معايرة لوحة اللمس.

تأثير شاشة اللمس - يمكنك تغيير تأثير شاشة اللمس.

تغيير إعدادات التوصيل

تم مسبقاً إعداد إعدادات التوصيل بواسطة مشغل الشبكة. بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد فوراً. لتغيير هذه الإعدادات. استخدم هذه القائمة.

اللمس  ثم  وحدد .

إعدادات الشبكة

تحديد الشبكة - إذا قمت بالتعيين إلى تلقائي، فسيبحث GW525 تلقائياً عن الشبكة ويسجل الهاتف على الشبكة. ننصح بهذا الأمر للحصول على خدمة وجودة أفضل.

ملاحظة: عندما يفقد هاتفك الاتصال بالشبكة في الوضع اليدوي، ستظهر الرسالة المنبثقة في شاشة الانتظار لتحديد الشبكة المتاحة.

وضع الشبكة - يمكنك تعيين نوع الشبكة التي تريد البحث عنها عندما يتم البحث عن الشبكات في قائمة تحديد الشبكة.

القوائم المفضلة - إذا كانت الشبكة تجري بحثاً تلقائياً، فيمكنك أن تضيف الشبكة المفضلة التي تريد الاتصال بها. تتوفر الخيارات التالية:

أوضاع إنترنت - تظهر هذه القائمة أوضاع

إنترنت. يمكنك إنشاء أوضاع جديدة أو حذف أوضاع أو تعديلها باستخدام قائمة خيارات. إلا أن حذف أو تعديل التكوينات الافتراضية يتوقف على متغيرات الدولة.

نقاط وصول - قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً. يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

اتصال بيانات الرزمة. - اختر الوقت الذي تريد أن يتصل فيه هاتفك بشبكة حزم البيانات.

وضع اتصال USB - اختر خدمة البيانات وقيم بمزامنة هاتف GW525 باستخدام البرنامج LG PC Suite لنسخ الملفات من الهاتف.

إذا كنت تستخدم مزامنة الموسيقى مع

Windows Media Player، حدد مزامنة

الموسيقى في هذه القائمة. مزامنة الموسيقى متوفرة لمحتويات الموسيقى.

التزامن





5 سيتم إرسال ملفك.

تلميح! خقق من شريط التقدم للتأكد من إرسال الملف.

لاستلام ملف:

- 1 لتلقي ملفات، يجب أن يكون بلوتوث في وضع التشغيل ومرتبياً، راجع تغيير إعدادات بلوتوث إلى اليمين للحصول على مزيد من المعلومات.
- 2 تظهر رسالة تطالبك بقبول الملف من المرسل. المس نعم لاستلام الملف.
- 3 ستشاهد الموقع الذي تم حفظ الملف فيه ويمكنك أن تختار عرض الملف أو استخدامه كخلفية. يتم عادةً حفظ الملفات في الحافظة المناسبة في أثنائها.

تغيير إعدادات بلوتوث:

- 1 المس  واختر .
- 2 اختر  ثم المس  ثم اختر الإعدادات. أدخل تغييراتك على:
إمكانية رؤية جهازي - اختر أن يكون الجهاز مرئياً. أو مخفياً أو مرئياً لـ 1 دقيقة.
اسم الجهاز - أدخل اسماً للهاتف GW525.

إعدادات التشغيل - لقد قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً. يمكنك تعديلها إذا أردت إضافة تغييرات.
إعدادات Java - يمكنك إضافة وضع أو اختياره وعرض معلومات الشهادة.

إرسال الملفات واستلامها باستخدام بلوتوث

يعتبر بلوتوث طريقة جيدة لإرسال الملفات وتلقيها إذ لا حاجة إلى أسلاك ويكون الاتصال سريعاً وسهلاً. كما يمكنك الاتصال بسماعات رأس بلوتوث لإجراء مكالمات وتلقيها.

لإرسال ملف:

- 1 افتح الملف الذي تريد إرساله. وهو عادةً عبارة عن صورة، أو فيديو أو ملف موسيقى.
- 2 اختر إرسال.
اختر بلوتوث.
- 3 إذا قمت مسبقاً بإقران جهاز بلوتوث، فلن يقوم GW525 بالبحث تلقائياً عن أجهزة بلوتوث أخرى. وإلا، فسيبحث الهاتف GW525 تلقائياً عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.
- 4 اختر الجهاز الذي تريد إرسال الملف إليه والمس تحديد.

6 لقد أصبح اتصال بلوتوث المحمي برمز مرور آمناً الآن.

استخدام سماعة رأس بلوتوث

1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً.

2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.

3 المس السؤال قبل الاتصال أو الاتصال دوماً والمس نعم للاتصال الآن. يقوم الهاتف GW525 بالتبديل تلقائياً إلى وضع سماعة الرأس.

الخدمات المعتمدة - اختر الطريقة التي تريدها لاستخدام بلوتوث مع مختلف الخدمات.

وضع SIM عن بُعد - تشغيل أو إيقاف تشغيل.

عنواني - عرض عنوان بلوتوث.

الاقتران بجهاز بلوتوث آخر

عند إجراء اقتران لهاتف GW525 بجهاز آخر، يمكنك إعداد اتصال محمي برمز مرور. وهذا يؤدي إلى جعل عملية الاقتران أكثر أماناً.

1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً. يمكنك تغيير الرؤية في قائمة إعدادات.

2 المس بحث.

3 يبحث الهاتف GW525 عن الأجهزة. عند اكتمال عملية البحث، يظهر الخيار إعادة المحاولة على الشاشة.

4 اختر الجهاز الذي تريد الاقتران به وأدخل رمز المرور، ثم المس موافق.

5 يتصل هاتفك حينئذٍ بالجهاز الآخر، حيث عليك إدخال رمز المرور نفسه.

تحديث البرنامج

برنامج تحديث برنامج الهاتف المحمول
من LG

لمزيد من المعلومات حول تثبيت هذا البرنامج
واستخدامه، يرجى زيارة موقع <http://update.lgmobile.com>

تتيح لك هذه الميزة تحديث برنامجك إلى
الإصدار الأخير بسرعة وبشكل مريح على
إنترنت من دون الحاجة إلى زيارة مركز الخدمة
الخاص بنا.

بما أن برنامج تحديث برنامج الهاتف المحمول
يتطلب انتباه المستخدم الكامل لمدة
عملية التحديث، يرجى التحقق من التعليمات
والملاحظات التي تظهر في كل خطوة قبل
المتابعة، يرجى ملاحظة أن إزالة كيبول اتصال
بيانات USB أو البطاريات أثناء التحديث قد
يتسبب بإلحاق ضرر بالغ بهاتفك المحمول.
وبما أن جهة التصنيع لا تتحمل أي مسؤولية
تجاه خسارة بيانات أثناء عملية التحديث.
ننصحك بتدوين أي معلومات مهمة لتوخي
الأمان.

الملحقات

تم تزويدك بهذه الملحقات مع الهاتف GW525.



كبل البيانات
والقرص المضغوط
للبيانات

قم بتوصيل الهاتف
بمزامنته GW525
البطارية مع
الكمبيوتر.

دليل المستخدم
اعرف المزيد حول
GW525.



الشاحن



البطارية



سماعة رأس
استريو

ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى: يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

خدمة الشبكة

بيانات تقنية

عام

اسم المنتج: GW525
النظام: GSM 850 / E-GSM 900 / DCS
1800 / PCS 1900 / W-CDMA

درجات الحرارة المحيطة

الحد الأقصى: +55 درجة مئوية (تفريغ).
+45 درجة مئوية (شحن)

الحد الأدنى: -10 درجات مئوية

تمت الموافقة على استخدام الهاتف اللاسلكي الذي جاء وصفه في هذا الدليل. على شبكة GSM 850، وE-GSM 900، وDCS 1800، وPCS 1900، وW-CDMA.

وهناك عدد من الميزات المضمّنة في هذا الدليل وتسمى خدمات الشبكة. هذه الخدمات عبارة عن خدمات خاصة يمكنك الحصول عليها عبر موفر خدمة اللاسلكية. قبل أن تتمكن من الاستفادة من أي خدمة من خدمات الشبكة، عليك الاشتراك فيها عبر موفر الخدمة والحصول على الإرشادات المتعلقة باستخدامها والتي يزودك بها موفر الخدمة.

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

GW525

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 v1.3.1, EN 301 489-17 v1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1
EN 50360:2001, EN62209-1:2006
EN 60950-1 : 2001
EN 300 328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

1. June. 2009

Signature of representative

توجيهات لاستخدام آمن و فعال

- حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كغ وهو حد مقسّم على نحو متناسب إلى 10 غرامات من النسيج.
- تبلغ أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختباره بواسطة DASy4 للاستخدام على الأذن 0.904 واط/كغ (10 غرام). وعند الحمل على الجسد تبلغ 0.841 واط/كغ (10 غرام).
- معلومات بيانات SAR للمقيمين في بلدان/ مناطق تبني حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) هو 1.6 واط/كغ كمتوسط لكل غرام واحد (1) من النسيج.

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

التعرّض لطاقة التردد اللاسلكي

معلومات حول التعرّض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR). لقد تم تصميم طراز الهاتف المحمول GW525 هذا بحيث يفي بمتطلبات السلامة السارية المتعلقة بالتعرّض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمّن هوامش سلامة مصمّمة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.

- تستخدم توجيهات التعرّض للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد. أو SAR. وتجري اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كافة نطاقات التردد التي تم اختبارها.
- وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرّض للموجات اللاسلكية.

توجيهات لاستخدام آمن و فعال

العناية بالمنتج وصيانته

⚠ تحذير

استخدم فقط البطاريات والشواحن والملحقات الموافق على استخدامها مع طراز الهاتف المحمول المعين هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول. وقد يكون خطيراً.

- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالبك بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات. إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جارٍ، فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

- لا تقم بتفكيك الوحدة، اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية. إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمات أو الإجابة على المكالمات إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تلمس الهوائي دون وجود سبب يدعو إلى ذلك.
- لا تستخدم الهاتف أو ملحقاته في أماكن تكون فيها نسبة الرطوبة عالية جداً مثل أحواض السباحة أو البيوت الزجاجية لزراعة النباتات أو الغرف المعرضة لأشعة الشمس أو البيئات الاستوائية. فقد يؤدي ذلك إلى إلحاق الضرر بالهاتف وإبطال الضمان.

تشغيل فَعَال للهاتف

الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش. مما قد يؤثر على أدائها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة ضبط النبض. مثلاً، في الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون. والراديو. والكمبيوتر الشخصي.

توجيهات لاستخدام آمن و فعال

تجنّب إلحاق الضرر بسمك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمك، ونوصي بالتالي بالأا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك، كما نوصي بتعيين مستوى صوت معقول للموسيقى والمكالمات.

القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية، في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته، توقف عن استخدام الجهاز المحمول إلى أن يتم استبداله من قِبل موفر خدمة معتمد.

منطقة تفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية، التزم بالقيود. واتبع الأنظمة أو القوانين.

مناطق تتسم أجواؤها بالقابلية

للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال، أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض دون الحصول على إذن من قِبل طاقم الطائرة.

أطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن كافة شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ؛ تحقق من ذلك مع موفر الخدمات المحلي لديك.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها، وبخلاف أنظمة البطاريات الأخرى. ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط.
- فشواحن LG مصمّمة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصّلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.

• لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة. مثل الحمام.

• لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.

• هناك خطر انفجار. إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.

• تخلّص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلّص منها كمهملات منزلية.

• إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.

• قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.

• إن عمر البطارية الفعلي يتوقف على تكوين الشبكة، وإعدادات المنتج، والنقوش المستخدمة، والبطارية والأوضاع البيئية.

استكشاف الأخطاء وإصلاحها

يسرد هذا الفصل بعض المشاكل التي قد تصادفها أثناء استخدام الهاتف، بعض المشاكل تتطلب منك الاتصال بموفر الخدمة، ولكن معظمها يكون سهلاً ويمكنك تصحيحه بنفسك.

رسالة	الأسباب المحتملة	الحلول المحتملة
خطأ SIM	لا يوجد بطاقة SIM في الهاتف أو ربما قمت بإدراجها بشكل غير صحيح.	تأكد من إدراج بطاقة SIM بطريقة صحيحة.
لا يوجد اتصال بالشبكة	الإشارة ضعيفة خارج شبكة GSM	توجّه نحو نافذة أو نحو مكان مفتوح. تحقق من خريطة التغطية التي يزودك بها موفر الخدمة.
لا تتطابق الرموز	لتغيير رمز حماية، عليك تأكيد الرمز الجديد بإدخاله مرة أخرى. إن الرمزين الذين أدخلتهما لا يتطابقان.	اتصل بموفر الخدمة.
يتعدّر تعيين الوظيفة	غير معتمد من قبل موفر الخدمة، أو التسجيل مطلوب.	اتصل بموفر الخدمة.
المكالمات غير متوفرة	خطأ في اتصال تم بلوغ الحد الخاص برسوم مكالمات بطاقة SIM جديدة.	شبكة جديدة غير مصرّح لها. تحقق من الفيد الجديدة. اتصل بموفر الخدمة أو أعد تعيين الحد بواسطة PIN 2.
يتعدّر تشغيل الهاتف	لم يتم الضغط على مفتاح التشغيل/إيقاف التشغيل لفترة كافية البطارية فارغة	اضغط مفتاح التشغيل/إيقاف التشغيل على الأقل.
	ملاسمات البطارية متسخة	اشحن البطارية تحقق من مؤشر الشحن على الشاشة. قم بتنظيف ملاسمات البطارية.

رسالة	الأسباب المحتملة	الحلول المحتملة
	البطارية فارغة بالكامل درجة الحرارة خارج النطاق	اشحن البطارية تأكد من أن درجة الحرارة المحيطة جيدة. وانتظر قليلاً. ثم حاول الشحن مرة أخرى.
خطأ في الشحن	مشكلة في الاتصال لا فولتية للخطوط الرئيسية	تحقق من وحدة التزويد بالتشغيل والاتصال بالهاتف. تحقق من ملامسات البطارية. وقم بتنظيفها إذا اقتضى الأمر. قم بالتوصيل بمقبس آخر أو تحقق من الفولتية.
	الشاحن فيه خلل	إذا لم يسخن الشاحن. فقم باستبداله.
	الشاحن غير مناسب مشكلة في الاتصال	استخدم ملحقات LG الأصلية فقط. استبدل البطارية.
الهاتف ينقطع عن الشبكة	الإشارة ضعيفة جداً	إعادة الاتصال بموفر خدمة آخر تتم تلقائياً.
الرقم غير مسموح به	وظيفة رقم الاتصال المحدد قيد التشغيل.	تحقق من الإعدادات.



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

GW525 User Guide

Congratulations on your purchase of the advanced and compact GW525 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Getting to know your phone	8	Using call barring	24
Open view	9	Fixed dial number	25
Installing the SIM and battery	11	Using Excuse message.....	25
Memory card.....	14	Call costs	25
Installing a memory card.....	14	Call durations	25
Formatting the memory card	14	Data volume	25
Transferring your contacts	15	Changing the common call setting ..	25
Menu map.....	16	Contacts.....	27
Your standby screen	17	Searching for a contact	27
Touch screen tips.....	17	Adding a new contact	27
The quick keys	18	Contact options	28
The status bar	19	Creating a group.....	28
Changing your status from the		Changing your contact settings.....	29
status bar	20	Viewing information	30
Using the Multi-tasking function.....	20	Messaging.....	31
Calls	21	Messaging	31
Making a call	21	Sending a message.....	31
Changing the dialling keypad		Entering text.....	32
display settings	21	T9 predictive	32
Calling your contacts	22	Abc manual	33
Answering and rejecting a call	22	Qwerty keypad.....	33
Adjusting call volume.....	22	Setting up your email	34
Speed dialling.....	22	Retrieving your emails.....	35
Making a second call.....	23	Sending an email using your new	
Turning off DTMF.....	23	account	35
Viewing your call logs.....	23	Changing your email settings.....	35
Using call divert	24	Message folders	36
Call waiting	24	Managing your messages	37

Using templates.....	37	Viewing your photos as a slide show.....	51
Using emoticons.....	37	Setting a photo as wallpaper.....	51
Changing your text message settings.....	38	Editing your photos.....	52
Changing your multimedia message settings.....	38	Trimming the length of the video.....	53
Changing your other settings.....	39	Merging two videos.....	53
Camera.....	40	Merging a photo with a video.....	54
Taking a quick photo.....	40	Adding text to a video.....	54
After taking a photo.....	40	Overlaying a photo.....	55
Getting to know the viewfinder.....	41	Adding a voice recording.....	55
Choosing a shot type.....	42	Adding a soundtrack to your video.....	56
Adjusting the exposure.....	42	Changing the video speed.....	56
Using the advanced settings.....	42	My stuff.....	57
Viewing your saved photos.....	44	Pictures.....	57
Video camera.....	45	Sending a photo.....	57
Making a quick video.....	45	Using an image.....	57
After making a video.....	46	Printing an image.....	58
Getting to know the viewfinder.....	47	Moving or copying an image.....	58
Adjusting the exposure.....	48	Creating a slide show.....	58
Using the advanced settings.....	48	Sounds.....	58
Watching your saved videos.....	49	Using a sound.....	59
Your photos and videos.....	50	Videos.....	59
Viewing your photos and videos.....	50	Using options while the video is paused.....	59
Using zoom when viewing a photo.....	50	Sending a video clip.....	59
Adjusting the volume when viewing a video.....	50	Flash contents.....	59
Capturing an image from a video.....	50	Documents.....	60
		Transferring a file to your phone.....	60

Contents

Viewing a file.....	60	Converting a unit.....	69
Others.....	60	Using the stopwatch.....	69
Installing a game/application via a local install.....	61	STK.....	69
Playing a game.....	61	Adding a city to your world clock.....	70
Using the games options menu.....	61	PC Sync.....	71
Use the Fun stuff.....	61	Installing the LG PC Suite on your computer.....	71
Music.....	61	Backing up and restoring the information on your phone.....	71
Transferring music onto your phone.....	62	Viewing phone files on your PC.....	71
Playing a song.....	62	Synchronising your contacts.....	71
Creating a playlist.....	63	Synchronising your messages.....	72
Editing a playlist.....	63	Using your phone as a mass storage device.....	72
Deleting a playlist.....	63	Using your phone as a Music Sync device.....	73
Using the radio.....	64	Using your phone as a modem.....	73
Searching for stations.....	64	Internet.....	75
Resetting channels.....	64	Browser.....	75
Using Muvee studio.....	65	Accessing the web.....	75
Organiser.....	66	Adding and accessing your bookmarks.....	75
Adding an event to your calendar.....	66	Using the RSS reader.....	76
Adding an item to your To Do list.....	66	Saving a page.....	76
Using date finder.....	66	Accessing a saved page.....	76
Setting your alarm.....	67	Viewing your browser history.....	77
Voice recorder.....	67		
Recording a sound or voice.....	68		
Sending the voice recording.....	68		
Adding a memo.....	68		
Using your calculator.....	68		

Changing the web browser settings.....	77
Access to Google	77
Settings	78
Personalising your profiles.....	78
Changing your Screen settings.....	78
Changing your phone settings.....	79
Changing your touch settings	80
Changing your connectivity settings.....	80
Sending and receiving files using Bluetooth.....	81
Pairing with another Bluetooth device	82
Using a Bluetooth headset.....	83
Software Upgrade.....	83
Accessories	84
Network service	85
Technical data.....	85
Guidelines for safe and efficient use	87
Trouble shooting	93

Getting to know your phone

Charger, cable and handsfree connector

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.



End/ Power key

- Ends or rejects a call. Turns the phone on/off. Press once to return to the standby screen.

Multi-tasking key

Call key

- Dials a phone number and answers incoming calls.



Micro SD memory card socket

Lock/Unlock key

Camera key

Side keys

- When the screen is idle: volume of ring and touch tone.
- During a call: earpiece volume.

⚠ WARNING: Putting a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Open view



Change the text input mode
(capital/ small)

Alpha numeric keys

Space key

Use to enter a space when editing.

Clear key


- Clears a character each time it is pressed. Hold the key down to clear all input.

Enter key

Symbol key

- Enters symbolic character



Open view

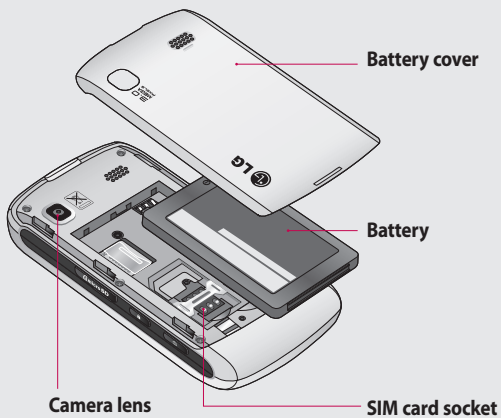

Installing the SIM and battery

1 Remove the battery cover


Slide the battery cover towards the top and away from the phone.

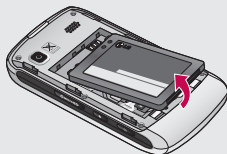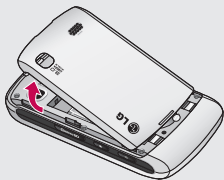

⚠ WARNING: Do not use your fingernail to remove the battery.

2 Remove the battery

Using the cut-out at the bottom, lift it from the battery compartment.

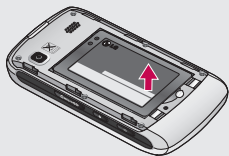


⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Installing the SIM and battery


3 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. To remove the SIM card, gently pull it outwards.

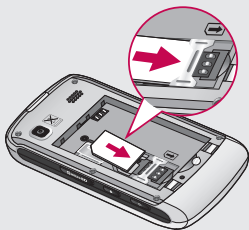


4 Install the battery

First insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clicks into place.

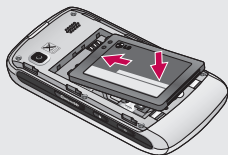

5 Charging your phone

Lift and twist the charger socket cover on the top of your GW525. Insert the charger and plug it into a mains socket. Your GW525 needs to be charged until the "Battery full" message appears on the screen.

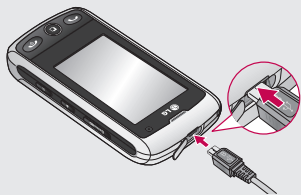


Memory card

Installing a memory card

You can increase the memory space on your phone by using a Micro SD memory card.

NOTE: A memory card is an optional accessory.

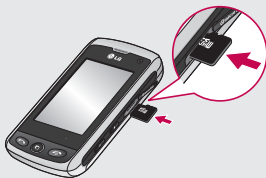

- 1 Open the memory card slot cover on the right-hand edge of the phone.
- 2 Slide the memory card into the slot until it clicks into place. Make sure the gold contact area is facing downwards.



- 3 Close the cover.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.


- 1 From the standby screen select  , then touch  and choose **Phone settings**.
- 2 Touch **Memory manager** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one has been set. The card will then be formatted and ready to use.

TIP! To change your default storage destination, open Memory manager from the Phone settings menu and select the Primary storage settings.


NOTE: If your memory card already contains files, they will automatically be put in the correct folder; for example, videos will be stored in the My Videos folder.

Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the **Communication** menu, select  and choose **Settings**.
- 2 Touch **Copy**.
- 3 Choose **SIM to handset**.
- 4 Choose **Select all** or choose names one by one and touch **Copy**.

Menu map

Touch  on the standby screen to open the **Main menu**. From here you can access further menus: **Communication**, **Entertainment**, **Utilities** and **Settings**.



Communication

- 1 Contacts
- 2 Recent history
- 3 Messaging
- 4 Email
- 5 Dialling



Entertainment

- 1 Camera
- 2 Video camera
- 3 Gallery
- 4 My stuff
- 5 Music
- 6 Muvee studio
- 7 Games & Apps
- 8 FM radio



Utilities

- 1 Browser
- 2 Google
- 3 Alarm
- 4 Organiser
- 5 Memo
- 6 Voice recorder
- 7 Tools



Settings

- 1 Profiles
- 2 Screen settings
- 3 Phone settings
- 4 Call settings
- 5 Bluetooth
- 6 Touch settings
- 7 Connectivity

Your standby screen

From here you can access all the menu options, make a quick call, view the status of your phone and much more.

Touch screen tips


The standby screen is also a great place to get accustomed to the touch screen.

To select an item, touch the centre of the icon. Your GW525 will vibrate slightly when it recognises you have touched an option.

To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up to display more items.

- There is no need to press too hard; the touchscreen is sensitive enough to pick up on a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other options around it.

- When the screen back light is off, press the Unlock/Lock key on the right hand side to bring back the home screen.
- Don't cover the phone with a case or cover. The touchscreen won't work if any material is covering it.
- There are two types of idle screen. Flick left or right to change your idle screen type on the standby screen.



- 1 Widget idle** - When you touch  , the mobile widget panel appears. You can drag icons displayed on the widget panel to the main screen.
- 2 Livesquare** - On the Livesquare screen, making a call, sending a message and saving a number is easy using the number allocated to an avatar. To use the call, message or Contacts function, select an avatar and choose the Quick key icon you want to use.

Your standby screen

The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch it to bring up the touch dialling pad, which lets you make a call. Enter the number as you would on a normal key pad and touch  or press the  hard key.



Touch to open your Contacts. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the Messaging options menu. From here you can create a new SMS or MMS or view your message folder.





















Touch to open the full main menu, which is divided into four vertical sub-menus. Touch the tab for each sub-menu to view further options.

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you are most likely to see in the status bar.


Icon	Description
	Multi-tasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery flat
	New text message
	New voice message
	Message inbox is full

Icon	Description
	Message sending failed
	An alarm is set
	Customised profile in use (number in the icon will vary)
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause


Your standby screen


Changing your status from the status bar

Touch the status bar to open the Status Summary. It shows the current time, network, SVC ID, battery, handset memory, external memory, profile, MP3 and Bluetooth status. Here you can set the Profile type, play/pause MP3s and activate/deactivate Bluetooth.

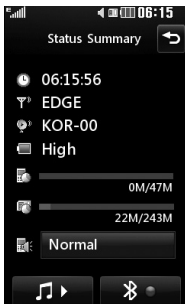





Using the Multi-tasking function


Press the Multi-tasking hard key  to open the Multi-tasking menu. From here you can view all applications that are running and access them with one touch.


When an application is running in the background (e.g. a game or the FM radio),  will appear on the status bar.


Calls


Making a call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit touch the clear key.
- 3 Press  on the key pad or the  hard key to initiate the call.
- 4 To end the call press the  hard key.

TIP! To enter + for making an international call, press and hold .



TIP! Press the lock/unlock hard key  to lock the touchscreen and prevent calls being made by mistake.

TIP! To bring up the keypad during a call, press .

TIP! Touch to unlock. You can unlock the phone by holding down the button until the screen is able to work or pressing the Unlock hard key .



TIP! You can send a message, save a number and search contacts by tapping .

Changing the dialling keypad display settings



- 1 Touch  to open the keypad.
- 2 Touch  and select Dial screen setting to change the dialling pad display.
- 3 You can change the size and colour.


Calls



Calling your contacts

- 1 From the standby screen touch  to open the Contacts.
- 2 Tap the search field box and enter the first few letters of the contact you would like to call.
- 3 From the filtered list, touch the contact you want to call and select the number to use if there is more than one for that contact.
- 4 Press the  hard key.

Answering and rejecting a call

When your phone rings press the  hard key or touch  to answer the call.

Tap  to mute the ringing. This is useful if you forgot to change your profile to Silent for a meeting.


Press the  hard key or touch  to reject an incoming call.

Adjusting call volume





To adjust the volume during a call, use the up and down button on the left edge of the phone.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the standby screen touch  and select **Contacts** in the Communication menu and then tap **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 3 Your Contacts will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact tap the search field box and enter the first letter of the name of the contact required.

Making a second call


- 1 During your initial call, touch  and select the number you want to call.
- 2 Dial the number or search your contacts.
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

TIP! You can combine your calls by selecting **Accept** then **Join**. Check that your network provider supports conference calling.

NOTE: You will be charged for each call you make.



Turning off DTMF


DTMF lets you use numerical commands to navigate menus within automated calls. DTMF is switched on by default.


To turn it off during a call (to make a note of a number for example) touch  and select **DTMF off**.

Viewing your call logs


TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up to display more items.


Touch  and tap  in the Communication menu. Choose to view:


All  - View a complete list of all your dialled, received and missed calls.

Dialled  - View a list of all the numbers you have called.

Calls




Received  - View a list of all the numbers that have called you.

Missed  - View a list of all the calls you have missed.

TIP! From any call log, touch  and **Delete all** to delete all recorded items.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

- 1 Touch , select  and choose .
- 2 Touch **Call divert** and select **Voice calls** or **Video calls**.
- 3 Choose whether to divert all calls when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

NOTE: Diverting calls will incur charges. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Call waiting

If call waiting is activated, the handset is also able to warn you about an incoming call when you are already on a call.

Using call barring

- 1 Touch , select  and choose .
- 2 Touch **Call barring** and select **Voice calls** or **Video calls**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except to home country**

All incoming

Incoming when abroad

- 4 Enter the call barring password. Please check with your network operator about this service.

Fixed dial number

Select Fixed dial numbers to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Using Excuse message

You can send a message to explain why you do not receive an incoming call using "Excuse message" before you reject an incoming call.

Call costs

View the charges applied to your dialled numbers (this service is network-dependant and some operators are unable to support it).

Call durations




View the duration of all your dialled and received calls or both.

Data volume

View the amount in kilobytes of all received data, sent data or both.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Changing the common call setting

- 1 Touch , select  and choose .
- 2 Touch **Common settings**. From here you can adjust the settings for:

Calls

Call reject - Slide the switch to **On** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, those from unregistered numbers (those not in your contacts), or no caller ID. Touch **Save** to change this setting.

Send my number - Choose whether to display your number on an outgoing call.

Auto redial - Slide the switch left for **On** or right for **Off**.

Answer mode - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to **On** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a handset key to answer a call.

Save new number - Select **Yes** to save a new number.



TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up to display more items.

Contacts



Searching for a contact

There are two ways to search for a contact:


From the standby screen

- 1 From the standby screen touch  to open the contacts.
- 2 Touch  next to the contact you would like to call. This is only available when you set the **Quick command key** as **Make voice call** in **Contact list settings**.

From the main menu

- 1 Touch .
- 2 Touch  in the Communication menu and select **Search**.
- 3 Your contacts will bring up a list of contacts corresponding to the letters you have entered.

Adding a new contact

- 1 From the standby screen touch  and touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.


- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter at least one.
- 4 You can enter up to five different numbers per contact. Each entry is assigned a preset type: **Mobile**, **Home**, **Office**, **Pager**, **Fax** or **General**. When you have finished, touch **Close**.
- 5 Add an email address.
- 6 Assign the contact to one or more groups, choosing between **No group**, **Family**, **Friends**, **Colleagues**, **School**, **VIP** or all groups.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address** or a **Memo** and also you can set **Livecon**.
- 8 Touch **Save** to save the contact.

Contacts

TIP! You can create customised groups for your contacts.

Contact options

There are many things you can do when viewing a contact. Here is how to access and use the options menu:

- 1 Open the contact you would like to use.
- 2 You can edit the contact or send a message directly from here.
- 3 Press  to open the list of options.

Make video call - Video call the contact.




Delete - Delete the contact. Touch **Yes** if you are sure.

Copy or Move to SIM/Handset - Choose to move or copy to the SIM card or handset (depending on where you originally saved the contact).

Send business card - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia msg**, **Email** or via **Bluetooth**.

TIP! Send message - Send a message to the contact. If the contact has an email address, select whether you'd like to send an email or SMS/MMS.



Creating a group

- 1 Touch .
- 2 Touch  in the Communication menu then **Groups**.
- 3 Touch .
- 4 Select **Add group**.
- 5 Enter a name for your new group in the Name field.
- 6 Touch **Save**. You can also assign a ringtone to the group.

NOTE: Even if you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

Changing your contact settings

You can adapt your contact settings so that your contacts suits your own preferences.

- 1 From the standby screen, touch .
- 2 In the Communication menu Touch  and select Settings.
- 3 From here, you can adjust the following settings:

Contact list settings - Choose whether to view contacts saved to both your **Handset and SIM**, **Handset** only or **SIM** only

You can also choose to show the first name or last name of a contact first and whether to display a quick command key next to the contact or not.

Copy - Copy your contacts from your handset to your SIM or from your SIM to your handset.

You can choose all contacts by touching Select all or select each contact to copy one by one.

Move - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So if you move a contact from the SIM to the handset it will be deleted from the SIM memory.



Send all contacts via Bluetooth - Send all your contacts to another device using Bluetooth. Bluetooth will be automatically turned on if you select this option.

Backup and Restore contacts - Backup and restore contacts to the Memory Card.

Clear contacts - Delete all your contacts on your handset or SIM. Touch Yes if you are sure you want to delete all your contacts from your contacts.

Contacts

Viewing information

- 1 From the standby screen, touch .
- 2 In the communication menu, touch  and select information.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info.** (how much memory space you've got left) and **My business card.**




TIP! To add your own business card, select **My business card** and enter your details as you would for any contact. Touch **Save** to finish.

Messaging

Messaging

Your GW525 combines SMS and MMS into one intuitive and easy to use menu.


There are two ways to enter the messaging centre:

Touch  from the standby screen, or touch  from the standby screen and choose  in the Communication menu.

Sending a message

- 1 Touch  and choose **New message** to open a blank message.
- 2 From here you can send an SMS or MMS. To send an email, touch  from the standby screen, then  in the Communication menu.
- 3 To send an SMS or MMS, touch New message. In case of Email. Touch New Email.
- 4 Touch **Insert** to add an image, video, sound, template etc.

- 5 Touch **To(1)** at the top of the screen to enter the recipient's number, or touch the search icon to open your contacts. You can add multiple contacts. Touch **Send** when ready.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

TIP! Quick reply - Send a reply to the selected message promptly, using a template.

Messaging

Entering text

There are three ways to enter text: T9 text mode/ Normal text mode/ Qwerty keypad.

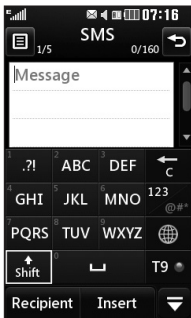

T9 Touch to turn T9 predictive text on or off.

Globe icon You can choose the writing language.

123 Tap to change between the number, symbol and text keypad.

Use **Shift** to scroll through the different keyboards in each text entry mode (e.g., capital or lower

case letters) when the screen is in Landscape mode.

To enter a space touch **Spacebar**.

To delete a character or remove the sentence, touch clear **Clear**.

TIP! Simply touch each letter to write your message and press:

Shift to switch to upper case

Spacebar to add a space

T9 predictive

In T9 mode, you will see **T9**.


T9 uses a built-in dictionary to recognise your words based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

If the word you want doesn't appear, touch **Spell**. If you touch

Spell you can then enter the word using Abc manual mode and your word or name will be added to the dictionary.

Abc manual

In Abc mode, you will see .


In Abc mode you must touch the key repeatedly to enter a letter if T9 mode is switched off. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three more times, then 6 three times.

Qwerty keypad


Entering text


You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require you to enter text. The following text input methods are available on the phone: ABC manual mode and 123 mode.

TIP! Some fields may allow only one text input mode (e.g. telephone number in contacts fields).

To enter a symbol in the text entry field, press the  key and select a symbol, then select **OK**.


Scroll using the navigation keys to show more symbol options.

Separate each word with a space by pressing .

To delete a character, press the  key.

Text input mode using the keypad

When you are required to enter text, for example when writing a message, the keypad will default to ABC mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers.

In ABC mode, you can enter numbers by first pressing  and then the number you require.

Messaging

Setting up your email

You can stay in touch on the move using email on your GW525. It's quick and simple to set up a POP3 or IMAP4 email account.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up to display more items.

- 1 Touch .
- 2 Select  from the **Communication** menu then .
- 3 Touch **Add Account**.
- 4 The Setup Wizard will help you set up your email settings. If no email account is set, you can set one up by using the email set-up wizard.
- 5 You can now choose how to set up your account:

Email address - Enter email address

Server address - Enter server address (Microsoft Exchange only).

Domain - Enter domain (Microsoft Exchange only).

Username - Enter the account username.

Password - Enter the account password.

Mailbox type - Enter mailbox type: **POP3** or **IMAP4**.

Incoming server - Enter incoming email server address.




Outgoing server - Enter outgoing email server address.

SMTP authentication - Choose security settings for outgoing mail server.

Account name - Now your account is set up, it will appear in the list of accounts in your Email folder.

Retrieving your emails

You can automatically or manually check your account for new emails.





- 1 Touch  then select  from the **Communication** menu.
- 2 Touch the account you want to use then , then select **Inbox** and touch .
- 3 Choose **Retrieve** and your GW525 will connect to your email account and retrieve your new messages.

Sending an email using your new account

- 1 Touch **New Email** in the email account you want to use and a new email will open.
- 2 You can enter the recipient's address and write your message. You can also attach images, videos, sounds or other file types.
- 3 Touch **Send** and your email will be sent.

Changing your email settings

You can change your email settings based on your own preferences.

- 1 Touch  then select  and .
- 2 Tap  and select **E-mail Settings** to change the following settings:
 - Email accounts** - Set up the Email account.
 - Preferred Email** - Select the email account you want to use.
 - Allow reply email** - Choose to allow the sending of 'read confirmation' messages.
 - Request reply email** - Choose whether to request read confirmation messages.
 - Retrieve interval** - Select how often your GW525 checks for new email messages.
 - Retrieve amount** - Select the number of emails to be retrieved at any one time.

Messaging

Include message in Fwd & Reply

- Select whether to include the original message in your reply.

Include attachment - Select whether to include the original attachment in any reply.

Auto Retrieval in Roaming

- Choose whether to retrieve messages automatically when abroad (roaming).

TIP! Costs for retrieving email may be higher when roaming. Check with your network supplier.

New email notification - Choose whether to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Select the priority level of your email messages.

Mail sending size - Select the size limit of your emails.

Email counter - view email information.

Message folders

You'll recognise the folder structure used on your GW525, and it is fairly self-explanatory.

Inbox - All the messages you receive are placed into your inbox. From here you can view, delete and more; see **Managing your messages** below for details.

Outbox - This is a temporary storage folder while messages are being sent or stores the messages that are failed to sent

Sent items - All the messages you have sent are placed in this folder.


Drafts - If you do not finish writing a message, you can save what you have done in this folder.

My Folders - Create folders to store your messages.

Trash - All the messages you have trashed are placed in this folder (email only)

Managing your messages

You can use your Inbox to manage your messages.

- 1 Touch  select .
- 2 Select **Inbox**.
- 3 Touch  and then choose to:
 - Delete** - Delete marked messages.
 - Change view** - Select Threaded view or Standard view.
 - Create new message** - Open a new blank message or email.
 - Move to My folders** - Move the marked messages to My folders.
 - Filter** - Choose one of the filter options.
 - Delete all** - Delete all messages in Inbox.

If you see the message **No space for SIM messages** you should delete some messages on the SIM.

If you see the message **No space for messages** you should delete some messages to free up memory space.

Using templates



Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.

- 1 Touch  then choose **Templates** from the **Communication** menu.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to **Add templates, Delete** or **Delete all** templates.
- 3 Touch **Add template** to create a new template.
- 4 You can view the template by selecting it on the list and edit it by touching it on the view screen.

Using emoticons


Liven up your messages using emoticons. There are some commonly used emoticons already on your phone.

Messaging

- 1 Touch  then choose **Emoticons** from the **Communication** menu.
- 2 Touch  to **Add emoticon**, **Delete** or **Delete all** emoticons.
- 3 Touch **Add emoticon** to create a new emoticon.
- 4 You can view the emoticon by selecting it on the list and edit it by touching it on the view screen.

Changing your text message settings

Your GW525 message settings are pre-defined so that you can send messages immediately. These settings can be changed based on your preferences.

Touch  then choose **Settings** from the **Communication** menu. Select **Text message**. You can make change the following:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.




Message types - Convert your text into **Text, Voice, Fax, X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This impacts on the size of your messages and therefore on your data charges.

Send long text as - Choose to send long messages as Multiple SMS messages or as an MMS.

Changing your multimedia message settings

Your GW525 message settings are pre-defined so that you can send messages immediately. These settings can be changed based on your preferences.

Touch  , select  then  .
Choose **Settings** and **Multimedia message**. You can make change the following:

Retrieval mode - Choose **Home network** or **Roaming network**. If you then select Manual you will only receive notifications about MMS messages. You can then decide whether to download them in full.

Delivery report - Choose whether to allow and/or request a delivery report.

Read reply - Choose to allow and/or request a read report.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long slides appear on screen.


Creation mode - Choose your message mode.

Delivery time - Choose how long to wait before a message is delivered.

Multi msg centre - Enter the details of your message centre.

Changing your other settings

Touch  in the **Communication** menu and choose **Settings** then:

Voicemail - Touch  to add a new Voicemail service. Contact your network operator for more information about the service they provide.



Service message - Choose whether to receive or block service messages. You can also set message security levels by creating trusted and not trusted sender lists.

Message counter - Choose to set or reset the message counter.

Info. service - Select your reception status, language and other settings.


Camera






Taking a quick photo

- 1 Press and hold down the  key on the right side of the phone.
- 2 The viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Position the phone so you can see the subject of your photo in the preview screen.
- 5 When the camera has focused on your subject, either press the  on the side of the phone firmly or press the red box on the lower right of the screen to take the photo. The sending options then appear on the screen.

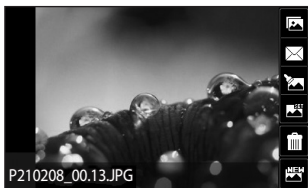
After taking a photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen along with six icons on the right-hand side.



-  Touch to move to your gallery.
-  Touch to send the photo as a message, email or via Bluetooth or via blogger.
-  Touch to edit Picture.
-  Touch to set the picture you have taken as home screen.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to take another photo immediately. Your current photo will be saved.


Getting to know the viewfinder

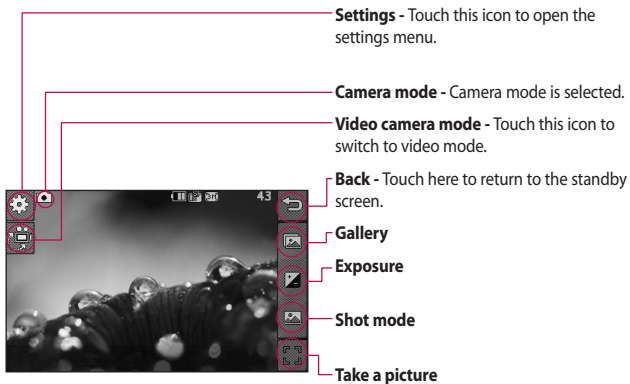

TIP! You can bring up the options by tapping the screen. They automatically turn off after a few seconds.

Camera

Choosing a shot type

1 Touch  to open the available shot types.

2 Choose from two options:

Normal shot - This is the default shot type - the photo will be taken in the normal way, as outlined in taking a quick photo.

Burst shot - This enables you to take three, six or nine shots automatically in very quick succession.

Adjusting the exposure


Exposure defines the difference between light and dark (contrast) in an image. A low contrast image will appear fuzzy, whereas a high contrast image will appear much sharper.


1 Touch .

2 Slide the contrast indicator along the bar - left for a lower exposure and hazier image, or right for

a higher exposure and sharper image.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

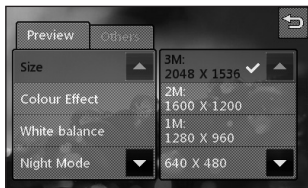

Preview settings

Size - Change the size of the photo to save memory space or take a picture of the correct size for a contact.

Colour Effect - Choose a colour tone to use on your new photo.

White balance - Choose from Auto, Incandescent, Sunny, Fluorescent or Cloudy.

Night mode - Useful for use in dark places.

Self-timer - The self-timer allows you to set a delay after the capture button is pressed before the camera takes the picture. Choose from Off, 3 seconds, 5 seconds or 10 seconds. This is ideal if you want to be included in a photo.

Quality - Choose between Super fine, Fine and Normal. The finer the quality, the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

View Mode - Choose between Full screen or Full image. In Full screen, the image may be cropped to fit the screen.

Inner/Outer Camera - For self portraits, switch to the LG GW525 inner camera

Other settings

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from Off, Simple cross or Trisection.


Reset settings - Reset all the camera settings.

TIP! When you exit the camera all settings will return to their defaults except image size and image quality. Any non-default settings will need to be reset, for example colour tone. Check these before you take your next photo.

Camera






TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you will see a preview of the image change behind the settings menu.

Viewing your saved photos

You can access your saved photos from within camera mode. Simply touch  and your gallery will appear on screen.

Video camera


Making a quick video


- 1 Press and hold down the camera key on the right-hand side of the phone.
- 2 In Camera preview mode, touch the Video camera icon  in the view finder to switch to video mode. The video camera's viewfinder will appear on the screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Press the camera key once to start recording. Or press the red dot  at the bottom right of the screen.
- 5 **Rec** will appear in the top right corner of the viewfinder and a timer in the bottom right corner showing the length of your video.
- 6 To pause the video, touch  and resume recording by selecting .
- 7 Touch  on the screen or press the capture button a second time to stop recording.



Video camera


After making a video

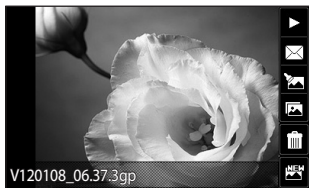
A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen along with six icons on the right-hand side.




 Touch to play the video.


 Touch to send the video as a **Message or Email** or via **Bluetooth** or via **YouTube**.  Touch to edit the video.

 Touch to view a gallery of saved videos and images.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to make another video immediately. Your current video will be saved.

Getting to know the viewfinder

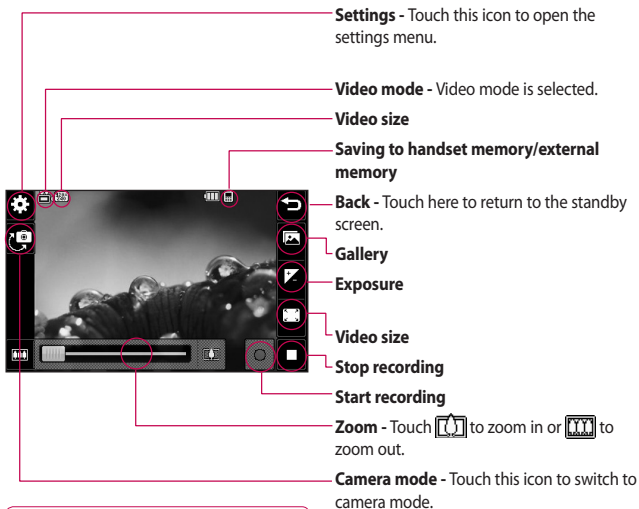


TIP! You can close all shortcut options for a clearer viewfinder screen. Simply touch the viewfinder once. To recall the options, touch the screen again.

Video camera


Adjusting the exposure

Exposure defines the difference between light and dark (contrast) in a video. A low contrast video will appear fuzzy, whereas a high contrast video will appear much sharper.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, left for a lower exposure and hazier video, or right for a higher contrast and sharper video.

Using the advanced settings

Using the viewfinder, touch **Settings** to open all the advanced settings options.

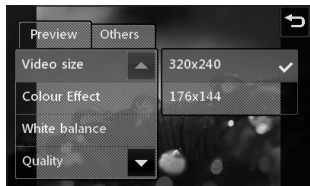

Preview settings

Video size - Change the size of the video to save memory space.

Colour Effect - Choose a colour tone to use on your new video.

White balance - The white balance ensures any white in your video is realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a video will be but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Set time - Set a time limit for your video. Choose from **No limit**, or **MMS** to limit the size so that you can send the video as an MMS.

View Mode - Choose between Full screen or Full image. In Full screen, the image may be cropped to fit the screen.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.


Other settings

Memory - Choose whether to save your videos to the **External memory** or to the **Handset memory**.

Voice - Choose Mute to record a video without sound.




Reset settings - Reset all the video camera settings.

Watching your saved videos


- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch the video you want to view once to open it fully.
- 4 Touch the Play icon in the centre of the screen.

Your photos and videos

Viewing your photos and videos

- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video, touch . To pause playback, touch the screen once and touch .

TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.





Using zoom when viewing a photo

To zoom in press  repeatedly. To zoom out press .

Adjusting the volume when viewing a video

To adjust the audio volume on a video while it is playing, touch the speaker icon on the screen and slide the bar to the left or right.


Capturing an image from a video

- 1 Select the video you want to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch .
- 3 From the options menu select .
- 4 The image will appear on the screen with its assigned image name.
- 5 Touch  to return to the gallery.
- 6 The image will be saved in your My stuff folder and will appear in the gallery. You will have to exit the gallery and then re-open it for it to be shown.

⚠ WARNING: Some functions will not work properly if the multimedia file has not been recorded on the phone.





Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos cannot be viewed as a slideshow.


- 1 Touch the photo you would like to begin the slideshow twice to open it.
- 2 Select  on the lower left side of the screen.
- 3 The slideshow will begin.



There are options within slideshows:

-  Touch to show a random slide.
-  Touch to pause the slideshow on a particular photo.
-  Touch again to resume playback.
-  Touch to increase or decrease the speed of the slideshow.


Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch .
- 4 You can then change the size of the picture.
- 5 When you are happy with the picture touch **Set**.
- 6 The display of the picture is changed depending on whether portrait mode or landscape mode is used.


Your photos and videos


Editing your photos

You can do lots of great things to your photos to change them, add to them or liven them up.


1 Open the photo you want to edit and touch  to bring up the options.


2 Touch the icons to alter your photo:


 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.


 Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.


T Add writing to the picture.


 Decorate your photo with stamps. Choose from the different stamps available and touch **OK**. Touch your photo wherever you would like the stamps to appear.


 Erase whatever you draw. You can select the size of the eraser from the four options.


 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.


 Undo the last effect or edit you made to the photo.

 Touch to open more effect options including **Rotate**. There are also more advanced editing options. See **Resize, Morphing, Colour Accent, Add images** etc.





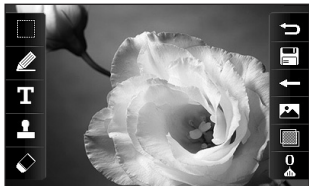

 Touch to add a filter effect such as Blur, Sharpen, Sketch etc. to a photo.

 Touch to edit an effect to a photo.



 Touch to return to the gallery.

Trimming the length of the video

- 1 Open the video you want to edit, select  and touch .
- 2 Select  and choose **Trim**.
- 3 Touch  and set the new start and end points using .
- 4 Touch the Save icon or, alternatively, touch  to return to the gallery and discard the changes.

Merging two videos







- 1 Open the video you want to edit, select  and touch .
- 2 Select  and choose **Video merge**.
- 3 The My stuff will open. Choose the video you want to merge.
- 4 Touch and slide the photo to move it to the end or the beginning of the video.
- 5 Touch the Effect icon to choose how the videos merge together: **None, Pan zoom, Uncover, Checker board, Split, Shape diamond, Oval, Blind or Dissolve**.
- 6 Press the Save icon followed by **Yes** to save the new merged video. Select whether to replace the original file or save as a new file.
- 7 Repeat these steps to merge more videos.

Your photos and videos







Merging a photo with a video

- 1 Open the video you want to edit, select  and touch .
- 2 Select  and choose **Image merge**.
- 3 The My stuff folder will open. Choose the photo you want to merge with your video.
- 4 Touch and slide the photo to move it to the end or the beginning of the video.
- 5 Touch the Effect icon to choose how the photo and video merge together: **None, Pan zoom, Uncover, Checker board, Split, Shape diamond, Oval, Blind or Dissolve**.
- 6 Press the Save icon followed by **Yes**. Select whether to replace the original file or save as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video

- 1 Open the video you want to edit, select  and touch .
- 2 Select  and choose **Text overlay**.
- 3 Enter your text using the keypad and select **Save**.
- 4 Touch  and indicate when you want the text to appear using .
- 5 Touch the area of the screen where you want the text to appear and touch **OK**.
- 6 Touch  to indicate when you want the text to disappear.
- 7 Touch **Preview** to ensure you are happy with the text overlay.
- 8 Touch the Save icon and choose to save over the original file or as a new file.
- 9 Repeat these steps to add more text.

Overlaying a photo

- 1 Open the video you want to edit, select  and touch .
- 2 Select  and choose **Image overlay**.
- 3 The My stuff will open. Choose the photo you want to overlay your video.
- 4 Touch  and indicate when you want the photo to appear using .
- 5 Touch the area of the screen where you want the photo to appear and touch **OK**. If the photo is too big it will overlay the whole screen, not just the selected area.
- 6 Touch  to mark when you want the photo to disappear.
- 7 Touch **Preview** to ensure you are happy with the photo overlay.
- 8 Touch the Save icon and choose to save over the original file or as a new file.

- 9 Repeat these steps to add more photos.

Adding a voice recording




- 1 Open the video you want to edit, select  and touch .
- 2 Select  and choose **Voice recording**.
- 3 The quality of the original audio will be affected by adding a voice recording. Touch **Yes** to continue.
- 4 Touch  to view your video. When you get to the part you want to record your voice over, press .
- 5 Press  to stop recording.
- 6 Touch **Preview** to ensure you are happy with the voice recording.
- 7 Touch the Save icon and choose to save over the original file or as a new file.
- 8 Repeat these steps to add more voice recordings to the video.

Your photos and videos

Adding a soundtrack to your video




- 1 Open the video you want to edit, select  and touch .
- 2 Select  and choose **Audio dubbing**.
- 3 The My stuff will open. Choose the track you want to add to your video.
- 4 The original audio track on your video will be erased. Touch **Yes** to continue.
- 5 If the audio is shorter than the video, choose whether to play it **Once** or to **Repeat** it.
- 6 Select whether to replace the original file or save as a new file.

Changing the video speed

- 1 Open the video you want to edit, select  and touch .
- 2 Select  and choose **Time scaling**.
- 3 Select one of the four speed options: **x4**, **x2**, **x1/4**, **x1/2**.
- 4 Select whether to replace the original file or save as a new file.
NOTE: Only 3gp Video files can be edited.


My stuff

You can store any multimedia files on your phone's memory so that you have easy access to all of your images, sounds, videos, games and apps, flash contents, documents and others. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

To access the My stuff menu, touch  then . Touch  to open a list of folders that store all of your multimedia files.

Pictures

Images contains a list of pictures, including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Touch  to change the view from Grid view to List view or vice versa.





Sending a photo

1 Touch  then .

- 2 Touch  then choose **Images**.
- 3 Select an image you want to send. Then select **Send** and choose from **Multimedia message**, **Email** or **Bluetooth**.
- 4 If you choose **Multimedia message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, Bluetooth will be turned on automatically and your phone will search for a device to send the picture.

Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller. The phone should be in Portrait mode.

- 1 Touch  then .
- 2 Touch  then **Images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose between:

My stuff





Wallpaper - Set a wallpaper for the standby screen.

Contacts image - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.

Start up image - Set an image to appear when you switch the phone on.





Shut down image - Set an image to appear when you switch the phone off.

Printing an image





- 1 Touch  then .
- 2 Touch  then **Images**.
- 3 Select an image and touch .
- 4 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

TIP! You can print via bluetooth or by connecting to a PictBridge compatible printer.

Moving or copying an image

- 1 Touch  then .
- 2 Touch  then **Images**.
- 3 Touch  and select **Move** or **Copy**.
- 4 You can mark/unmark images by tapping them sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.





Creating a slide show

- 1 Touch  then .
- 2 Touch  then **Images**.
- 3 Choose a start image for your slide show.
- 4 Touch  then **Slide show**.

Sounds

The **Sounds** folder contains Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage or send sounds or set them as ringtones.




Using a sound

- 1 Touch  then .
- 2 Touch  then **Sounds**.
- 3 Select a sound and it will start to play.
- 4 Touch  and select **Use as**.
- 5 Choose from **Ringtone, Message tone, Start-up** or **Shut down**.


Videos

The **Videos** folder shows a list of videos you have downloaded or recorded on your phone.

Watching a video

- 1 Touch  then .
- 2 Touch  then **Videos**.
- 3 Select a video to play.

Using options while the video is paused

Touch  while in pause mode and choose from:

Capture - Capture the frozen frame as a picture.


Send - Send the video in a message or email or via Bluetooth or via **YouTube**.

Delete - Delete the video.

Edit - Edit the video.

File info. - View the Title, Size, Date, Type, Duration, Protection status and Forwarding details.

Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message, Email, Bluetooth** or **YouTube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video.

Flash contents

The Flash contents folder contains all your default and downloaded SWF files.

My stuff

Documents

From the Documents menu, you can view all of your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.


Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and can see each other.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.





Viewing a file

- 1 Touch  then .
- 2 Touch  then **Documents**.
- 3 Select a document.




Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens, you can move them.

To move a file from **Others** to **Documents**:




- 1 Touch  then .
- 2 Touch  then **Others**.
- 3 Select a file and touch .
- 4 Touch **Move** and choose the destination folder from the list by touching the arrow icon. The screen will display **Moved** when the transfer is complete.

Installing a game/application via a local install

- 1 Touch  then .
- 2 Touch  and **Others** or **My memory card** if external memory is inserted.
- 3 Select the file (*.jad or *.jar) to install and press **Install** command. The application will be installed.

NOTE: The jad file should contain its own jar file.

Playing a game

- 1 Touch  then .
- 2 Touch .
- 3 Open the **Games** folder, choose a game and touch the icon to launch.

Using the games options menu

Within the Games and Application folders, the following options are available:

File info. – View the Vendor, Version, Size and Domain.




Sort by - Sort the games and applications by **Date, Size** or **Name**.

Memory manager - View the memory status of Handset memory and External memory.

Using the Fun stuff

Fun stuff contains preloaded flash games which use the integrated motion sensor.

Music

Your LG GW525 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then  then . From here, you can access a number of folders:

My stuff

Recently played - View all of the songs you have played recently.

All tracks - Contains all the songs you have on your phone.

Artists - Browse your music collection by artist.

Albums - Browse your music collection by album.

Genres - Browse your music collection by genre.

Playlists - Contains all playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone


The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

To transfer using Bluetooth:

1 Make sure both devices have Bluetooth switched on and can see each other.

2 Select the music file on the other device and select send via Bluetooth.

3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.

4 The file should appear in  > **All tracks**.


Playing a song


1 Touch  , then  .


2 Touch  then Select **All tracks**.

3 Select the song you want to play.

4 Touch  to pause the song.

5 Touch  to skip to the next song.

6 Touch  to go back to the previous song.

7 Touch  to return to the music list.




Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  then .
- 2 Touch , then Select **Playlists**.
- 3 Touch **Add new playlist**, enter the playlist name and touch **Save**.
- 4 The **All tracks** folder will show all the songs on your phone. Touch all the songs that you want to include in your playlist. A tick will appear on the left-hand side of the track names.
- 5 Touch **Done**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. You can do this by editing the playlist.

- 1 Touch , then .
- 2 Touch , then Select **Playlists**.
- 3 Select the playlist.

- 4 Touch  and select:

Add new songs – To add more songs to the playlist. Mark the ones you want to add and touch **Done**.





Change order - Change the playing order of the playlist.

Remove – Remove a song from the playlist. Touch **Yes** to confirm.

Memory status - View the memory status of the Handset memory and External memory.

Remove all - Remove all tracks from the playlist.

Deleting a playlist

- 1 Touch , then .
- 2 Touch , then **Playlists**.
- 3 Touch , then **Delete** or **Delete all** to delete all of the playlists.

My stuff

Using the radio





Your LG GW525 has an FM radio feature so you can tune into your favourite stations and listen on the move.

NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).





Searching for stations

You can tune your phone to radio stations by searching for them manually or automatically. They will then be saved to specific station numbers, so you don't have to keep re-tuning. You can save up to 50 stations in your phone. You must first attach the headset to the phone as this acts as the aerial.





To auto tune:

- 1 Touch , then .
- 2 Touch , then .
- 3 Touch **Auto** scan. Then the stations will be automatically found and allocated to a channel on your phone.





NOTE: You can also manually tune into a station by using

 and  displayed next to the radio frequency. If you press and hold  and , the stations will be found automatically.

Resetting channels





- 1 Touch , then .
- 2 Touch , then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting frequency of 87.5Mhz.


Using Muvee studio

- 1 Touch  then .
- 2 Touch .
- 3 Touch  to add an image.
Checkbox images you want to include then select Insert.
- 4 Touch style tab to choose a Muvee style.
- 5 Touch Default sound to change the sound.
- 6 Touch  to see what you've created.
- 7 If you want to save what you've created, Press play and then Touch Save icon.




Organiser

Adding an event to your calendar

- 1 From the standby screen, select , then touch  and choose . Select **Calendar**.
- 2 Select the date to which you want to add an event.
- 3 Touch  then **Add event**.

TIP! You can set holiday dates in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**.

Adding an item to your To Do list

- 1 From the standby screen, select , then touch  and choose .
- 2 Select **To do** and touch **Add to do**.




- 3 Set the date for the task, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your task by selecting **Save**.

TIP! You can edit an item by selecting it, touching the tab and entering the changes. Confirm the changes by selecting **Save**.

Using date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.


This helps you keep track of deadlines.

- 1 From the standby screen, select , then touch  and choose .
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.

- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

Setting your alarm




- 1 From the standby screen, select , then touch  and choose .
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound and touch **Save**. The screen then automatically returns to the alarm list.
- 4 Select the item on the list and choose whether you would like your alarm to repeat **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**, **Sat-Wed**, **Sat-Thu**, **Sun-Thu**, **Except holiday** or **Choose weekday**. The icons indicate the weekday you select.
- 5 Select **Alarm type** to select the type of alarm you want.

- 6 Touch **Alarm bell**. You can choose a sound from the My stuff list. To listen to sounds touch  on the right of the sound.
- 7 Add a memo to the alarm.
- 8 Finally, you can set the snooze interval to 5, 10, 20 or 30 minutes or 1 hour, or turn it off.
- 9 After setting the alarm, touch **Save**.
NOTE: You can set up to 5 alarms.

TIP! Touch the on/off icon on the right-hand side of the alarm to set it.

Voice recorder

Use your voice recorder to record voice memos or other audio files.






- 1 Touch  then .
- 2 Touch **Voice recorder** then  and **Settings** and choose from:
Duration – Set the recording duration. Choose from No limit, MMS msg. size or 1 min.

Organiser


Quality – Select the sound quality. Choose from Super fine, Fine or Normal.

Memory in use - Choose whether to save recorded sounds to the External memory or to the Handset memory.


Recording a sound or voice

- 1 Touch  then .
- 2 Touch Voice recorder.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.




Sending the voice recording

- 1 Once you have finished recording, touch .
- 2 Touch **Send via** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose




Bluetooth, it will automatically turn Bluetooth on and search for a device.


NOTE: After you have finished recording, touch  and choose Send via, File, Delete, Use as (to use the recording as your voice ringtone) Settings or Go to my sounds.

Adding a memo




- 1 From the standby screen, select , then touch  and choose .
- 2 Touch **Add memo**.
- 3 Type your memo, then touch **Save**.
- 4 Your memo will appear on the screen.

Using your calculator

- 1 From the standby screen, select , then touch  and choose .
- 2 Select **Calculator**.

- 3 Touch the number keys to enter numbers.
- 4 For simple calculations, touch the function you require (+, -, x or ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **deg** or **rad** etc.

Converting a unit

- 1 From the standby screen, select , then touch  and choose .
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency**, **Surface**, **Weight**, **Length**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Using the stopwatch




- 1 From the standby screen, select , then touch  and choose .
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin timing.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch from the time you stopped it, or touch **Reset** to start the time again.

STK

This menu may be different, depending on whether you have STK support services on the SIM card or not (i.e. SIM Application Toolkit).

Organiser




Adding a city to your world clock

- 1 From the standby screen select , then press  and select .
- 2 Select **World clock**
- 3 Touch , followed by **Add city**.
Touch the icon in the upper left-hand side of the screen and type the name of the city you require on the search tab. It will then be displayed at the top of the screen.

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing the LG PC Suite on your computer

- 1 From the standby screen, press , select  and choose .
- 2 Scroll and touch **USB connection mode** and choose **PC suite**.
- 3 Connect your phone to your PC.

Backing up and restoring the information on your phone

- 1 Connect your phone to your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 4 Mark the content you would like to back up or restore. Select the location you want to back up the information to, or restore it from. Click **OK**.

- 5 Your information will be backed up or restored.

Viewing phone files on your PC

- 1 Connect your phone to your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on the **Manage Files** icon.
- 4 All the documents, flash contents, images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content that you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on the **Manage Files** icon.

PC Sync

- 4 Your PC will now import and display all the contacts saved on your SIM card and handset.
- 5 Click on **File** and select **Save**. You can now select where you want to save your contacts to.

NOTE: To backup contacts saved to your SIM card, click on the SIM card folder on the left side of the PC screen. Select Edit at the top of the screen, then Select all. Right-click your contacts and select Copy to contact. Now click on the Handset folder on the left side of the screen and all your numbers will be displayed.



Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on the **Messages** icon.
- 4 All of your PC and phone messages will be displayed in folders on your screen.

- 5 Use the tool bar at the top of the screen to edit and rearrange messages.

Using your phone as a mass storage device



Your phone can be used as a mass storage device.

- 1 Disconnect your phone from your PC.
 - 2 From the standby screen select , then touch .
 - 3 Select , then **USB connection mode**.
 - 4 Touch **Mass storage**. This mode will be saved.
 - 5 Connect the phone to your PC. Your phone will read: **Connected**.
 - 6 All of your phone files will automatically be stored onto your PC hard drive.
- NOTE:** Your phone must be unplugged from your PC to initiate Mass Storage.

Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only.

Music Sync can be carried out using Windows Media Player 11 and supports both Handset Memory and an external Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen select  , then touch .
- 3 Select  and then **USB connection mode**.
- 4 Touch **Music sync**. This mode will be saved.
- 5 Connect the phone to your PC. Your phone will read: **Connecting as Music Sync ...** followed by **Disconnect Cable to Stop Music Sync**.

Using your phone as a modem

Your GW525 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can do this via the USB cable or by Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GW525 and PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Internet Kit** on your PC.
- 4 Create the Profile that can connect to the Internet and save the settings.
- 5 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GW525.

PC Sync

Using Bluetooth:

- 1** Ensure Bluetooth is switched **On** and is **Visible** to both your PC and GW525.
- 2** Pair your PC and GW525 so that a passcode is required for the connection.
- 3** Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4** Click **Internet Kit** on your PC.
- 5** Create the Profile that can connect to the Internet and save the settings.
- 6** The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GW525




Internet

Browser

Browser gives you a fast, full colour world of games, music, news, sport, entertainment and lots more, straight to your mobile phone.

Wherever you are and whatever you like.

Accessing the web

- 1 From the standby screen, select , then touch  and choose .
- 2 To go straight to the browser home page, select **Home**. Alternatively, select **Enter address** and type in your desired URL, followed by **Connect**.

NOTE: You will incur an extra cost by connecting to this service and downloading content. Check the data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen, select , then touch  and choose .
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **Add bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the bookmark list.
- 5 To access the bookmark simply touch it and then touch Connect. You will be connected to the bookmark.


Internet

Using the RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content, such as blog entries, news headlines or podcasts. An RSS document, called a feed, web feed, or channel, contains either a summary of content from an associated web site or the entire text. RSS makes it possible for people to keep up with their favourite web sites in an automated way that is easier than checking manually.




The user subscribes to a feed by entering its link into the reader or by clicking an RSS icon in a browser that starts the subscription process. The reader checks the user's subscribed feeds regularly for new content and downloads any updates it finds.

Saving a page




- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.




Accessing a saved page

- 1 From the standby screen, select , then touch  and choose .
- 2 Select **Saved pages**.
- 3 Select the required page and it will open.

Viewing your browser history

- 1 From the standby screen, select , then touch  and choose .
Select **History**.
- 2 A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select it.

Changing web browser settings

- 1 From the standby screen, select , then touch  and choose .
Select Settings.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or to reset all settings, select **Reset settings**.

Access to Google

You can use Google service using this menu.

Google service offers user a chance to use **Search**, **Mail**, **Blogger**, and **YouTube**.




Settings

This folder lets you adapt your settings to personalise your GW525.




Personalising your profiles

You can quickly change your profile on the standby screen. Just touch the status summary bar on the top, then touch the profile tab.

You can personalise each profile setting using the settings menu.

- 1 Press  and then choose .
- 2 Touch  and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message Tone** settings and more.

Changing your Screen settings

- 1 Touch  then choose .
- 2 Touch  and then choose from:
Wallpaper - Choose the theme for your standby screen.

Livesquare - It is possible to change Liveplace and Livecon. If you set Daily reset ON, your livesquare is reset every morning at 4 AM.

Top Menu - Choose the style of the top menu.

Dialling - Adjust the number size and colour.

Font - Adjust the font style and size.

Backlight - Choose how long the backlight stays on for.

NOTE: The longer the backlight stays on, the more battery power it uses and so you may need to recharge your phone more often.




Brightness - Adjust the screen brightness.

Greeting message - Choose on or off and fill in the greeting message.

Start-up/Shut down - Choose the image for your start-up/shut down screen.

Changing your phone settings

Enjoy the freedom of adapting the GW525 to your own preferences.

- 1 Touch  then choose .
- 2 Touch  then choose from the list below.

Date & Time - Adjust your date and time settings or choose to auto update the time when travelling or for daylight saving.

Power save - Choose to switch the factory set power saving settings: **Off**, **Night only** and **Always on**.

Languages - Change the language on your GW525's display.

Auto key lock - Lock the keypad automatically in standby screen.

Security - Adjust your security settings, including PIN codes, handset lock, change codes and Anti theft Mobile tracker.

Memory manager - You can use memory manager to determine how each memory is used and see how much space is available.

Handset common memory

- View the memory available on your GW525 for Pictures, Sounds, Videos, Flash contents, Flash, MMS, Email, Java applications and others.

Handset reserved memory

- View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memos, Alarms, Call history, Bookmarks and Miscellaneous items.

SIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (which you may need to purchase separately).

Primary storage settings -




Choose the location you prefer items to be saved between Handset memory and External memory.

Settings

Reset settings - Restores all settings to their factory defaults.

Information - View the technical information for your GW525.

Changing your touch settings

From the home screen select  then , Select .

Touchpad calibration - You can adjust calibration of your touchpad.

Touchscreen effect - You can change touchscreen effect.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch , then .
Select .

Network settings

Select network - If you set to **Automatic**, the GW525 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

NOTE: When your handset loses the network in manual mode, the popup message to select the available network will be shown on the Idle screen.

Network mode - You can set a type of network to search for when networks are searched in the Select network menu.

Preferred lists - If the network is searching automatically, you can add a preferred network to be connected to. The following options are available:

Internet profiles - This menu shows the Internet profiles. You can create, delete or edit new profiles by

using the Options Menu. However, you cannot delete or edit default configurations depending on country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose Data service and synchronise your GW525 using the LG PC Suite software to copy files from your phone.

If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is only available for music content.

Streaming settings - Your network operator has already saved this information. You can edit it if you want to make changes.

Java settings - You can add or choose a profile and view the certificate information.

Sending and receiving files using Bluetooth

Bluetooth is a great way to send and receive files as it uses no wires and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, which will typically be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the Bluetooth device, your GW525 will not automatically search for other Bluetooth devices. If not, your GW525 will search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to and touch **Select**.

Settings





5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See Changing your Bluetooth settings on the right for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your My stuff.

Changing your Bluetooth settings:

- 1 Touch  and choose .
- 2 Choose  then touch  and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your GW525.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode - Turn on or off.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your GW525 with another device, you can set up a passcode protected connection. This makes your pairing more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GW525 will search for devices. When the search is

completed, **Retry** will appear on the screen.

- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GW525 will automatically switch to Headset profile.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are supplied with the GW525.

Charger



Data cable and CD



Connect and synchronise your GW525 and PC.

Battery



Stereo headset



User Guide

Learn more about your GW525.

NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM 850, E-GSM 900, DCS 1800, PCS 1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : GW525

System : GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900 / W-CDMA

Ambient Temperatures

Max: +55°C (discharging),
+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

GW525

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 v1.3.1, EN 301 489-17 v1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1
EN 50360:2001, EN62209-1:2006
EN 60950-1 : 2001
EN 300 328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

1. June. 2009

Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model GW525 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.904 W/kg (10g) and when worn on the body is 0.841 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.
- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

Guidelines for safe and efficient use

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

Guidelines for safe and efficient use

- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Trouble shooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough Battery flat Battery contacts dirty	Press the On/Off key down for at least two seconds. Charge battery. Check the charging indicator on the display. Clean the contacts.

Trouble shooting

Message	Possible causes	Possible Solutions
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
Phone loses network	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

