


AJ-LT91

LAMP OWNER'S MANUAL

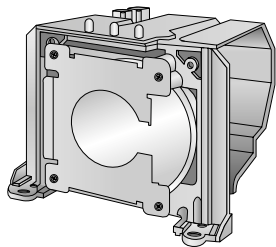

P/N : 3828VA0414U[®]

Replacing the Lamp

* Contact your dealer for replacing a new lamp.


The projector lamp usually lasts for about 2000 hours. You can see the used lamp time in the Selecting Function section. You must replace the lamp when:

- The projected image gets darker or starts to be deteriorated.
- The lamp indicator is red.(red, flashing alternately)

When replacing the lamp, contact your dealer or the service center for the correct lamp.


1. Turn off the projector and unplug the power cable.
(Cool the lamp for more than 1 hour.)
2. Stand the projector on its side as below so that you can easily access the lamp cover.
3. Remove the two retaining screws on the lamp cover with a screwdriver or similar objects and then lift off the lamp cover.

<Bottom of projector>

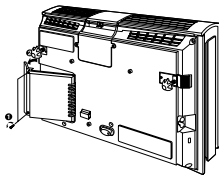

4. After lifting the lamp cover off, remove the two retaining screws on the lamp case with a screwdriver similar objects.
5. Lift up the fixed wire handle of the lamp.
6. Pull out the handle slowly and remove the lamp case.
7. Insert the new lamp gently into the correct position. Make sure it is inserted correctly.
8. Tighten the screws you removed in step 4.
- 9 Replace the lamp cover and tighten the cover screws.
(Make sure the lamp cover is securely fastened. If the lamp cover is open, the lamp indicator flashes green and the projector is not turned on.)


<Bottom of projector>

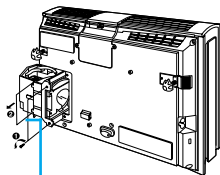

Handle

AJ-LT91

램프 사용설명서

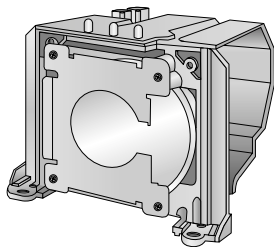

램프 교체 방법

* 램프 교환이 필요한 경우에는 반드시 프로젝터 구입처에 문의하세요.


프로젝터 램프의 수명은 보통 2000 시간입니다. 선택기능 메뉴에서 프로젝터 램프의 수명이 어느 정도 경과되었는지를 알 수 있습니다. 다음 상황이 발생했을 경우에는 반드시 램프를 교체하세요.

- 투영된 영상이 점점 더 어두워지거나 영상의 열화가 시작되는 경우
- 램프 경고 표시등이 적색인 경우(적색, 적색(점멸))

교체용 램프의 입수에 대해서는 판매점에 문의하여 정확한 부품번호의 램프를 사용하세요. 램프교체는 아래의 순서에 맞춰 실시해 주세요.


1. 프로젝터의 전원을 끄고 전원케이블을 콘센트에서 뽑습니다.
(1시간 이상 램프를 식히세요.)
2. 램프 커버에 닿기 쉽도록 프로젝터를 돌려 놓습니다.
3. 드라이버 또는 이와 유사한 물체를 이용하여 램프덮개의 고정나사 두개를 풀어주세요.
나사를 뺀 후, 램프 덮개를 빼내세요.

〈프로젝터의 밑면〉

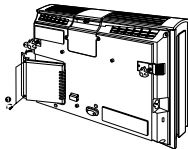

4. 램프 덮개를 푼 후, 드라이버 또는 이와 유사한 물체를 이용하여 램프를 고정시키는 두 개의 나사들을 풀주세요.
5. 고정된 철사형 핸들을 걸림턱으로부터 빼내세요.
6. 핸들을 잡고 천천히 당기면 램프 케이스가 빠집니다.
7. 새 램프 케이스를 조심스럽게 정위치로 넣습니다. 정확하게 끼워졌는지 확인하세요.
8. 4번에서 풀은 나사들을 고정시키세요.
9. 램프 덮개를 닫고 덮개나사들을 고정시킵니다.
램프가 견고하게 고정되었는지를 확인하세요. 램프커버가 열린 상태에서 전원을 켜면 램프 경고 표시등이 녹색으로 점멸되고 프로젝터가 켜지지 않습니다.)

〈프로젝터의 밑면〉

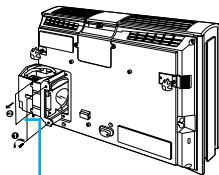

핸들

