

Model			
Language	English& Persia		
Page	24	Color(cover/body)	
Material	Weight 100g	Size(W*H)	220 x 150
Date	2013.05.06	Designer	Tiantian. wu
Part No.	MFL67873401	Description	owner's manual

Chage Record

No.	Change content	ECO No.	Date	Designer	Confirm
①					
②					
③					
④					
⑤					
⑥					
⑦					
⑧					
⑨					




OWNER'S MANUAL

VN-2320CRF
VN-2320CTS
VN-2320CBK
VN-2316CRF
VN-2316CWH
VN-2316CBK




MFL67873401

Basic Parts

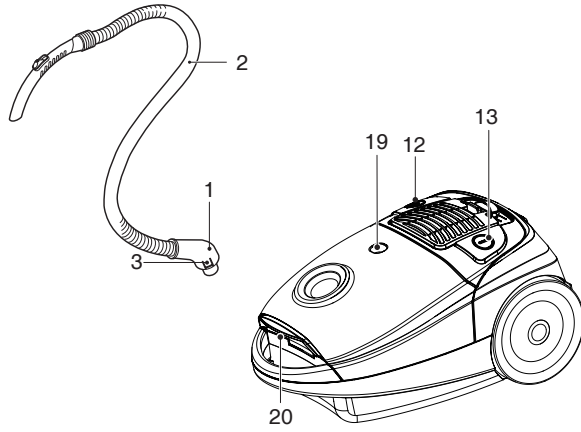



Optional Parts


















- The different figure and quantity of the following parts depend on the different models which you have bought.

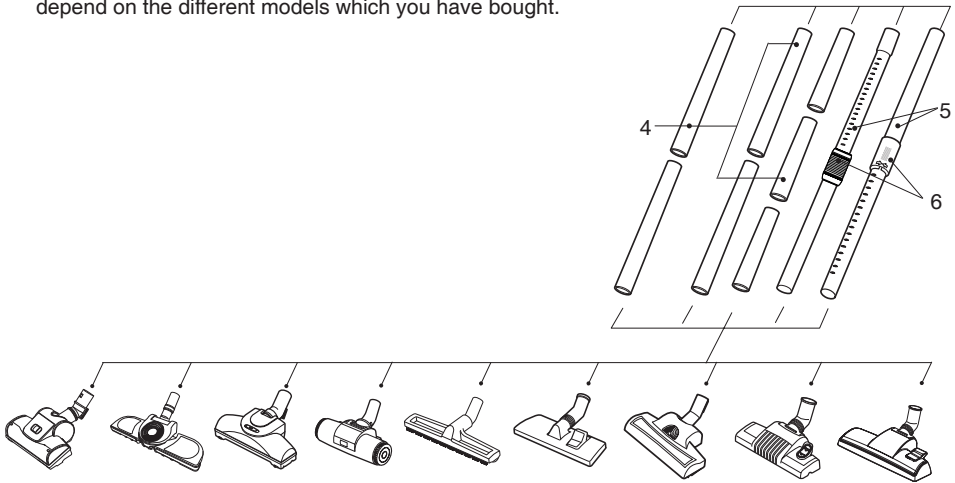

Accessory

- These specifications are subject to change according to the agent / buyer's request.



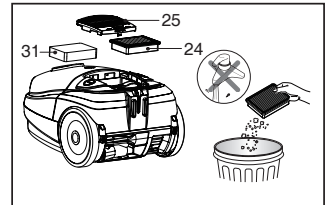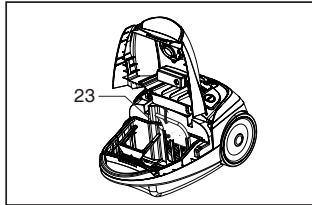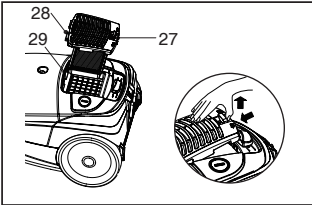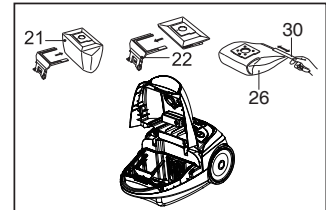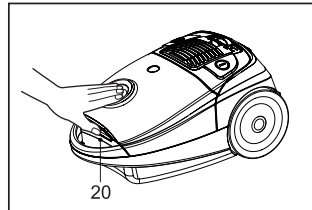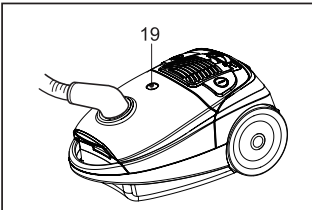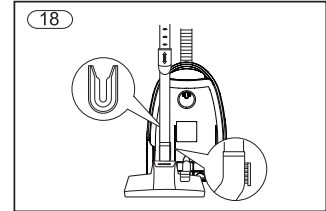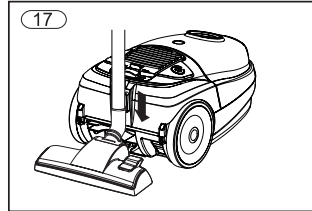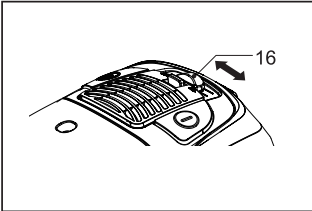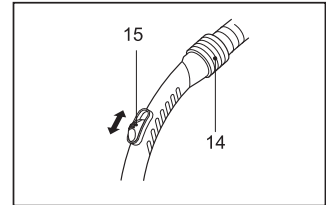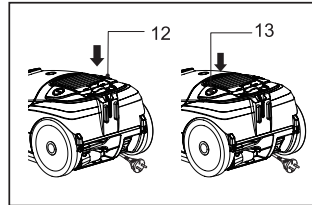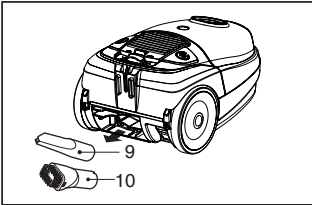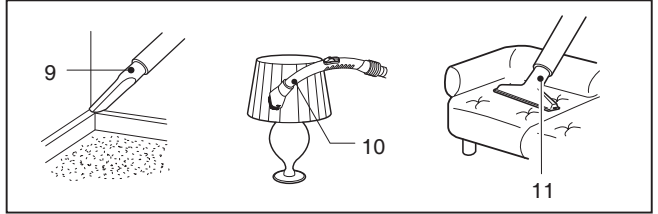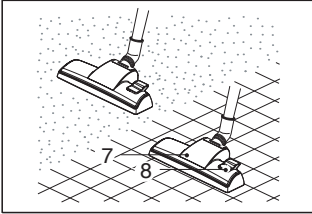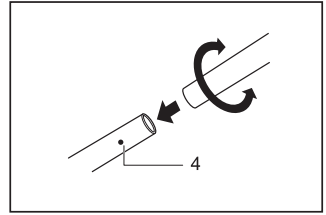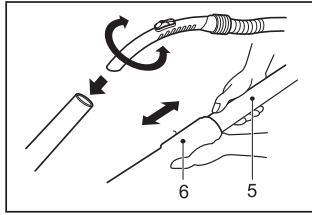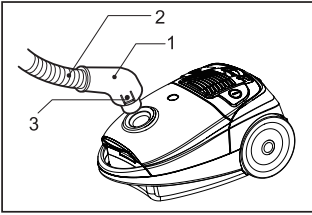

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electric shock, personal injury, or damage when using the vacuum cleaner. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand. This appliance complies with the following ECDirectives:-2006/95/EC Low Voltage Directive-2004/108/EC EMC Directive.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION." These words mean:



WARNING

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



CAUTION

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.



WARNING

- **Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.**

If the power cord is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard.

- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

Children should be supervised to ensure that they do not play with the appliance.

- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given**

 **WARNING**

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- **Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in use.**
Failure to do so could result in electrical shock or personal injury.
- **Do not vacuum liquid, blade, gesso, substances, or small particles like cement, burning or smoking such as cigarettes, or hot ashes in cleaning.**
- **Do not vacuum flammable or explosive substances such as gasoline, benzene, thinners, propane (liquids or gases).**
The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.
- **Do not handle plug or vacuum cleaner with wet hands.**
Doing so could result in death or electrical shock.
- **Do not unplug by pulling on cord.**
Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.
- **Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.**
Failure to do so could result in electrical shock or personal injury.
- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.**
Failure to do so could result in electrical shock or personal injury or fire or product damage.
- **Do not allow to be used as toy. Close attention is necessary when used by or near children.**
Personal injury or product damage could result.
- **Do not use vacuum cleaner if it has been under water.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not continue to vacuum if any parts appear missing or damaged.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use an extension cord with this vacuum cleaner**
Fire hazard or product damage could result.
- **Using proper voltage.**
Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the bottom of vacuum cleaner.
- **Turn off all controls before unplugging.**
Failure to do so could result in electrical shock or personal injury.
- **Do not change the plug in any way.**
Failure to do so could result in electrical shock or personal injury or product damage. Doing so results in death. If plug does not fit, contact a qualified electrician to install the proper outlet.
- **Repairs to electrical appliances may only be performed by qualified service engineers.**
Improper repairs may lead to serious hazards for the user.
- **Do not plug in if control knob is not in OFF position.**
Personal injury or product damage could result. (Depending on model)

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- **Keep children away and beware of obstructions when rewinding the cord to prevent personal injury.**

The cord moves rapidly when rewinding.
(Depending on model)

- **The hose contains electrical wires. Do not use it if it is damaged, cut or punctured.**

Failure to do so could result in death, or electrical shock. (Depending on model)

CAUTION

- **Do not put any objects into openings.**
Failure to do so could result in product damage.
- **Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.**
Failure to do so could result in product damage.
- **Do not use vacuum cleaner without dust bag and/or filters in place.**
Failure to do so could result in product damage.
- **Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc.**
They may damage the cleaner or dust bag.
- **Store the vacuum cleaner indoors.**
Put the vacuum cleaner away after use to prevent tripping over it.
- **Only use parts produced or recommended by LG Electronics Service Agents.**
Failure to do so could result in product damage.
- **Use only as described in this manual. Use only with LG recommended or approved attachments and accessories.**
Failure to do so could result in personal injury or product damage.
- **To avoid personal injury and to prevent the machine from falling when cleaning stairs, always place it at the bottom of stairs.**
Failure to do so could result in personal injury or product damage.

- **Use accessory nozzles in sofa mode.**
Failure to do so could result in product damage.
- **Make sure the filters (exhaust filter and motor safety filter) are completely dry before replacing in the machine.**
Failure to do so could result in product damage.
- **Do not dry the filter in an oven or microwave.**
Failure to do so could result in fire hazard.
- **Do not dry the filter in clothes dryer.**
Failure to do so could result in fire hazard.
- **Do not dry near an open flame.**
Failure to do so could result in fire hazard.
- **Always clean the dust bag after vacuuming carpet cleaners or fresheners, powders and fine dust.**

These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bag could cause permanent damage to the cleaner. (Depending on model)
- **You should grasp the carrier handle**
When you are removing the vacuum cleaner. (Depending on model)
- **If after emptying the dust bag the indicator light is on (red), clean the dust tank.**
Failure to do so could result in product damage. (Depending on model)

IMPORTANT SAFETY INSTRUCTIONS



CAUTION

Thermal protector :

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch.



WARNING

No suction liquids. Suction liquids can cause defect.

How to Use

Connecting the flexible hose

Push the end of the head (1) on the flexible hose (2) into the attachment point on the vacuum cleaner.

To remove the flexible hose from the vacuum cleaner, press on the button (3) situated on the head, then pull upwards.

Assembling the tubes

(depending on model)

- **Plastic or metal tube (4).**
 - Fit together the two tubes by twisting slightly.
- **Telescopic tube (5)**
 - Push spring latch (6) forward.
 - Pull out tube to required length.
 - Release spring latch to lock.

Using the cleaning head and Accessory Nozzles (depending on model)

Fit the large cleaning head onto the end of the tube.

- **The 2- position head (7)** is equipped with a pedal (8) which allows you to alter its position according to the type of floor to be cleaned.
 - Hard floor position** (tiles, parquet floors...). Press on the pedal to lower the brush.
- **Carpet or rug position.** Press on the pedal to lift the brush up.
- **Crevice Tool (9)**
 - For vacuuming in those normally inaccessible places i.e. reaching cobwebs, or down the side of a sofa!
- **Dusting brush (10)**
 - For vacuuming picture frames, furniture outlines, books and other uneven objects.
- **Upholstery Nozzle (11)**
 - For vacuuming upholstery, mattresses, etc. The thread collectors help to pick up the threads and fluff.

How to plug in and use

Pull out the supply cord to the desired length and plug into the socket.

Press button (13) to start the vacuum cleaner. To stop it press the button (13) again.

Adjusting the power level

- (depending on model)
 - The flexible hose handle (14) has a manual air flow regulator (15) which allows you to briefly reduce the suction level.

Electronic power control (16)

Suction capacity increases smoothly up to **MAX.**

Park-System (17)

For short breaks during vacuuming, for example to move a small piece of furniture or a rug, use the "Park system" to support the flexible hose and cleaning head.

Storage (18)

When you have switched off and unplugged the appliance, press the button (12) to automatically rewind the cord.

You can move or store your appliance in a vertical position by sliding the hook on the underside of the appliance.

Changing the dust bag

The dustbag needs changing when the cleaner is set to maximum power and the cleaner head window (19) is completely coloured red.

Even if the dustbag does not appear to be full at this stage. it should be changed, as very fine dust can clog up the pores of the dust bag.

- Turn off the appliance and unplug it.
- Open the cover by pressing the hook (20) and lifting it up until it snaps into place.

Your appliance is equipped with either a paper dust bag (21) or a fabric dust bag (26) (depending on model.)

- Take hold of the dust bag by the handle and pull. Remove the bag and throw it away.
- To refit a new bag push the cardboard support of a new bag into the bag mount (22) until it will go to further.

If your appliance is fitted with a fabric dust bag (26) follow the instructions as follows:

Pull the clip (30) out and empty the fabric dust bag, then set the clip back and push it until it can close the dust bag completely. Do not wash the fabric dust bag.

Note: as the appliance is fitted with a safety device which checks that the bag is in place you cannot close the lid if the bag is not fitted correctly.

Cleaning the motor filter

The motor filter is situated inside the appliance between the dust bag and the motor. Each time that you change the air outlet filter we advise you to remove the motor filter **(23)** and clean it by tapping to remove the dirt and then replacing it in the vacuum cleaner.

Cleaning the air outlet filters

Depending on the model you have chosen your appliance is equipped with different types of filters: foam filter **(31)**, electrostatic filter or HEPA filter **(24)**. (depend on model)

- To change the filter or clean the HEPA filter **(24)** push the release level **(27)** and lift the cover **(25)** up, then take the filter out.
- To replace the cover **(25)** after changing or cleaning the filter, insert the cover **(25)** by aligning the filter cover ribs **(28)** with groove **(29)** of body cover, then push down the cover **(25)**.
- **The foam filter (31)** should be cleaned regularly by tapping it to remove the dirt.
- **The electrostatic filter** should be changed regularly. (approximately every 6 bag changes).
- The HEPA filter **(24)** should be cleaned by tapping it at least once a year

What to do if your appliance does not work?

Check that the appliance is correctly plugged in and that the electrical socket is working.

What to do when the suction performance reduces?

- Stop the appliance and unplug it.
- Check that the tubes, flexible hose and cleaning tool are not blocked.
- Check that the dust bag is not full. Replace if necessary.
- Check that the air outlet filter is not blocked. Replace if necessary.





فهرست نمایندگان لوازم خانگی شرکت خدمات گلدیران

تلفن	شهر	کد نماینده
۷۲۶۵۱۲۱-۷۲۴۹۹۱۴	یزد	۲۱۳۰۳
۷۲۳۱۶۱۷	اردکان	۲۱۳۰۴
۵۷۲۲۲۸۲-۵۷۲۲۰۰۹	هرات	۲۱۳۰۵
۴۲۳۴۰۴۶	طَبَس	۲۱۳۰۶
۵۲۲۲۵۳۸-۵۲۲۹۳۹۹	مهریز	۲۱۳۰۷
۴۴۳۳۲۰۹-۴۴۳۲۵۱۵	بیرجند	۲۰۲۰۲
۵۲۲۸۴۵۱	قروه	۲۲۳۰۶
۸۴۷۳۱۱۵۹-۸۴۷۳۱۱۰۱	تهران	۶۰۱۸۵
۵۶۵۴۶۴۸۹-۵۶۵۴۰۱۹۷	تهران	۶۰۱۸۰
۲۶۷۰۹۰۰	اصفهان	۶۰۱۸۳
۳۳۶۷۹۴۹	تبریز	۶۰۱۸۴
۸۴۷۳۱۱۱۱	تهران	۶۰۱۸۵
۲۳۲۰۸۲۰	شیراز	۶۰۱۸۶
۸۴۵۳۲۴۰	مشهد	۶۰۱۸۷
۳۹۲۴۵۷۳	اهواز	۶۰۱۸۸

مرکز اطلاع رسانی و خدمات مشتریان گلدیران ۰۹۶۸۵

فهرست نمایندگان لوازم خانگی شرکت خدمات گلديران

تلفن	شهر	كد نماينده	تلفن	شهر	كد نماينده
۶۳۳۸۳۱۰	كوهدهشت	۲۲۱۰۸	۹۱۸۸۳۷۶۰۸۱	كنكاور	۲۱۶۰۹
۳۶۱۷۹۸۸-۴۴۶۰۹۲۲	بروجرد	۲۲۱۰۹	۹۱۷۶۶۰۱۰۷-۹۳۵۶۰۴۹۸۰۲	دوكنيدان	۲۲۸۰۱
۴۲۲۹۸۳۱	دورود	۲۲۱۱۰	۹۱۸۹۸۵۰۶۹۴-۹۳۷۴۸۲۴۳۲۸	مريوان	۲۲۳۰۷
۵۲۵۹۹۶۸	راسر	۲۰۶۲۳	۹۱۳۳۹۹۸۵۰	كرمان	۲۱۷۱۶
۳۲۷۲۹۴۹-۳۲۷۱۹۴۸	بابل	۲۰۷۰۳	۹۱۳۲۹۱۷۳۳۱	زرنند	۲۵۱۸۱
۵۲۳۲۱۳۳-۵۲۵۳۷۳۳	بايلسر	۲۰۷۰۴	۹۱۷۷۴۱۷۳۶۹	ياسوج	۲۲۸۰۳
۶۲۲۲۶۱۰	نور	۲۰۷۱۰	۹۱۱۱۷۲۱۷۱۴	گنبدكاووس	۲۱۰۰۲
۴۲۳۵۳۸۲	تنگابن	۲۰۷۱۲	۹۱۱۳۷۵۷۹۱۱	كرديكوي	۲۱۰۰۳
۵۲۳۵۶۹۳	خزرشهر	۲۰۷۱۳	۹۱۱۳۷۳۰۰۰۳	علی آباد كتول	۲۱۰۰۴
۷۷۴۵۴۴۶	محمودآباد	۲۰۷۱۴	۹۱۱۳۷۷۱۳۰-۹۱۱۱۷۰۴۰۱۹	گرگان	۲۱۰۰۵
۳۲۲۸۴۴۸	جويبار	۲۰۷۱۵	۹۱۱۷۵۲۰۹۸	آق قلا	۲۱۰۰۶
۵۶۳۵۷۲۲	نكاء	۲۰۷۱۶	۹۱۱۹۷۶۴۰۲۶	كلاله	۲۱۰۰۷
۶۲۲۲۷۹۳	گلوگاه	۲۰۷۱۷	۹۱۱۳۷۴۰۶۱۶-۹۱۱۱۷۶۶۰۹۹	مينودشت	۲۱۰۰۹
۴۲۸۲۱۹۹	تنگابن	۲۰۷۲۰	۹۱۱۷۵۶۹۷۲	گرگان	۲۱۰۱۰
۳۲۴۶۷۸۲	چالوس	۲۰۷۱۲	۹۱۱۳۷۳۲۱۴	گنبدكاووس	۲۱۰۰۸
۲۲۲۰۶۹۵	قائم شهر	۲۰۷۲۲	۹۱۱۳۲۱۴۲۵۱	رشت	۲۰۶۰۱
۵۶۵۴۳۰۹	فريدون كتار	۲۰۷۲۵	۹۱۱۸۳۹۱۱۰	بندر انزلی	۲۰۶۰۳
۳۲۱۳۰۴۸	ساری	۲۰۷۲۷	۹۱۱۱۴۱۴۴۷۱	لاهيجان	۲۰۶۰۵
۲۲۶۲۵۳۵	ساری	۲۰۷۲۸	۹۱۱۱۴۵۶۷۸۴	لنگرود	۲۰۶۰۶
۳۲۶۹۱۶۲	آمل	۲۰۷۳۰	۹۱۱۱۴۲۱۲۰۱	رودسر	۲۰۶۰۷
۴۶۲۶۶۱۵	عباس آباد تنكابن	۲۰۷۳۱	۹۱۱۸۱۹۳۲۲	تالش	۲۰۶۰۸
۳۲۳۴۲۲۱	نوشهر	۲۰۷۳۲	۹۱۱۳۸۲۳۰۱۲	تالش	۲۰۶۰۹
۲۳۷۷۲۹	قائم شهر	۲۰۷۳۴	۹۱۱۱۴۴۴۳۱	آستانه اشرفيه	۲۰۶۱۱
۳۲۳۹۷۶۰-۳۲۳۸۰۴-۱۹۳۹۰۹۷	نوشهر	۲۰۷۳۵	۹۱۱۱۴۸۰۴۸۹	رضوان شهر	۲۰۶۱۲
۳۲۹۶۲۲۶-۳۲۹۶۲۵۹	بابل	۲۰۷۳۶	۹۱۱۳۳۹۷۷۴۷	خمام	۲۰۶۱۳
۳۶۲۰۰۵۵	كلاردشت	۲۰۷۳۷	۹۱۱۱۲۶۹۷۸۱	رودبار	۲۰۶۱۴
۲۲۸۲۲۲۸	آمل	۲۰۷۳۸	۹۱۱۱۲۳۲۱۰۷	صومعه سرا	۲۰۶۱۵
۳۲۱۶۷۱۴	چالوس	۲۰۷۳۹	۹۱۱۱۴۸۵۹۶۵	لوشان	۲۰۶۱۶
۵۲۲۲۶۷۸-۵۲۲۱۶۰۰	سوادكوه	۲۰۷۴۰	۹۱۱۳۲۰۷۸۳	رشت	۲۰۶۱۸
۶۲۴۵۱۹۵-۶۲۴۲۷۴۸	رويان	۲۰۷۴۱	۹۱۱۸۱۱۱۹۸	بندر انزلی	۲۰۶۱۹
۵۲۲۹۷۳۳	چمستان	۲۰۷۴۲	۹۱۱۳۳۵۲۵۶	لشت نشاء	۲۰۶۲۰
۳۱۱۹۴۶۵-۳۲۵۵۴۶۵	ساری	۲۰۷۴۳	۹۱۱۳۴۲۵۰۱۳	كلاچای	۲۰۶۲۱
۲۲۴۹۲۱۰	اراك	۲۱۹۰۱	۹۱۱۱۴۲۱۴۳۶	املش	۲۰۶۲۲
۲۲۴۴۴۱۰	خمين	۲۱۹۰۲	۹۱۱۱۴۱۴۴۳۵	لاهيجان	۲۰۶۲۴
۲۲۲۴۶۵۴-۲۲۲۰۹۰۰-۳۲۲۷۴۷۰-۱	ساوه	۲۱۹۰۳	۹۱۱۳۸۲۱۰۴۱	صومعه سرا	۲۰۶۲۵
۴۲۲۸۱۹۰	دليجان	۲۱۹۰۵	۹۱۱۳۱۴۹۷۶	رشت	۲۰۶۲۶
۳۶۶۷۲۴۳-۳۶۸۱۴۴۰-۲	اراك	۲۱۹۰۶	۰۹۱۱۱۳۸۶۰۹۷-۹۱۵۱۳۸۶۰۹۷	فومن	۲۰۶۲۷
۵۳۳۸۹۱۸	مامونيه	۲۱۹۰۷	۹۱۱۸۵۴۹۸۱	آستارا	۲۰۶۲۸
۳۲۲۲۶۶۲	محلات	۲۱۹۰۸	۹۱۱۷۶۸۸۸۵۸	سياهكل	۲۰۶۲۹
۲۲۴۲۶۴۱	بندرلنگه	۲۱۱۰۴	۹۱۱۳۳۷۱۸۵۹	رستم آباد رودبار	۲۰۶۳۰
۲۲۸۳۰۷۴	ميناب	۲۱۱۰۶	۹۱۱۳۳۵۲۰۵۱	رشت	۲۰۶۳۱
۳۳۵۴۰۰۲-۳۳۴۰۷۳۹	بندرعباس	۲۱۱۱۱	۹۱۱۹۸۲۹۵۸۰	ماسال	۲۰۶۳۲
۴۴۲۶۷۴۷-۴۴۲۱۵۶۰	جزيره كيش	۲۱۱۱۲	۹۱۱۸۵۵۱۵۳	آستارا	۲۰۶۳۳
۴۲۲۷۰۵۲	رودان	۲۱۱۱۳	۹۱۱۵۶۶۵۰۳-۹۱۱۸۳۵۸۴۴	بهبهر	۲۰۷۱۸
۳۵۱۳۲۳۴-۳۵۶۲۶۷۶-۶۲۴۶۷۴۵	همدان	۲۱۸۰۱	۹۱۱۱۹۲۶۷۵۵	تنگابن	۲۰۷۲۳
۳۲۳۸۹۰۰	ملایر	۲۱۸۰۳	۹۱۶۱۶۱۳۳۰۳	خرم آباد	۲۲۱۰۱
۳۲۳۵۱۸۴	اسدآباد	۲۱۸۰۴	۹۱۶۱۶۳۳۴۰۱	بروجرد	۲۲۱۰۴
۳۵۴۵۵۹۳	همدان	۲۱۸۰۵	۹۱۶۶۶۴۲۰۴۹	اليگودرز	۲۲۱۰۵
۵۲۳۶۹۹۶-۵۲۳۲۸۰۵	كيودر آهنگ	۲۱۸۰۶	۹۱۶۶۶۳۴۴۳	خرم آباد	۲۲۱۰۶
۸۲۸۹۰۷۵	يزد	۲۱۳۰۲	۹۱۶۶۶۱۴۴۳۳	پلدختر	۲۲۱۰۷

فهرست نمایندگان لوازم خانگی شرکت خدمات گلدریان

کد نماینده	شهر	تلفن
۲۰۲۱۷	تربت حیدریه	۲۲۳۰۰۰۱
۲۰۲۲۰	چناران	۶۲۲۶۴۴۶-۶۲۲۹۱۹۲
۲۰۲۲۲	سبزوار	۲۲۹۶۵۰-۲۲۳۸۳۸
۲۰۲۲۳	خواف	۴۲۲۶۸۹۳
۲۰۲۲۴	سرخس	۵۲۳۹۵۱۶-۵۲۳۱۲۱۱
۲۰۲۲۵	گناباد	۷۲۵۱۶۶۱
۲۰۲۲۶	مشهد	۸۵۹۷۷۷۶
۲۰۲۲۷	مشهد	۷۲۵۷۸۸۹
۲۰۲۲۹	تایباد	۴۲۳۰۵۶۹
۲۰۲۳۰	فریمان	۶۲۲۲۶۷۹
۲۰۲۳۱	تربت جام	۲۲۴۴۲۱۱
۲۰۲۰۳	بجنورد	۲۲۲۹۶۴۱-۲۲۵۰۷۰۵
۲۰۲۰۹	شیروان	۶۲۲۷۸۵۴
۲۰۲۱۸	اسفراین	۷۲۲۲۶۶۹
۲۰۲۱۹	اشخانه	۴۲۳۵۶۵۵
۲۰۲۲۱	گرمه	۲۳۵۳۳۹۰
۲۵۰۰۷	بجنورد	۲۲۳۳۹۵۲-۲۲۳۸۰۴۵
۲۰۵۰۳	آبادان	۴۴۲۳۲۱۲-۴۴۲۱۲۸۸
۲۰۵۰۷	دزفول	۲۲۲۸۳۳۳-۲۲۲۹۶۰۰-۲۲۲۴۲۲۰
۲۰۵۰۹	دزفول	۲۲۲۷۳۹۹
۲۰۵۱۰	خرمشهر	۴۲۳۳۸۱۲-۴۲۳۳۰۶۰
۲۰۵۱۱	ماهشهر	۲۲۳۶۵۹۷-۲۲۳۱۸۳۲
۲۰۵۱۳	شوش دانایل	۵۲۳۷۱۲۱
۲۰۵۱۴	شوشتر	۶۲۳۲۸۰۰
۲۰۵۱۷	شادگان	۳۳۲۰۰۶۸
۲۰۵۲۱	خرمشهر	۴۲۳۶۳۳۳-۴۲۳۸۲۲۲
۲۰۵۲۴	ایزه	۵۲۳۱۲۱۱
۲۰۵۲۵	رامهرمز	۲۲۲۰۴۱۵
۲۰۵۲۷	بندر امام	۲۲۳۰۰۲۳
۲۰۵۲۰	اندیشک	۴۲۳۵۵۷۲
۲۰۵۲۲	اهواز	۱-۲۹۲۴۱۰۰
۲۰۵۲۳	آبادان	۴۴۴۴۰۰۰-۴۴۴۶۸۵۳
۲۰۵۳۴	بهبهان	۴۲۳۵۲۲۷
۲۰۵۳۵	امیدیه	۲۲۳۱۹۸۹
۲۵۲۱۴	اندیشک	۴۲۲۰۸۱۴
۲۵۳۰۵	باغملک	۴۲۳۱۴۱۴
۶۰۱۸۲	اهواز	۶۱۱۳۲۷۹۷۷
۲۳۰۰۱	زنجان	۷۲۳۵۲۲۲
۲۳۰۰۲	ابهر	۵۲۳۷۷۱۱
۲۳۰۰۳	خدابنده (قیدار)	۴۲۳۰۹۰۷
۲۳۰۰۴	خرم دره	۵۵۳۳۲۳۵
۲۰۷۰۸	محمود آباد	۷۷۴۶۰۸۳
۲۰۷۲۳	فریدونکنار	۵۶۵۱۴۵۰-۵۶۵۱۴۵۱
۲۳۵۰۱	سمنان	۳۳۳۳۱۰۴-۳۳۳۶۸۷۷
۲۳۵۰۲	دامغان	۵۲۳۳۶۱۵
۲۳۵۰۳	کرمانسار	۴۲۳۵۶۷۷
۲۳۵۰۴	شاهرود	۳۳۴۴۷۱۷
۲۳۵۰۵	شاهرود	۲۲۳۱۹۶۵
۲۳۶۰۳	زاهدان	۲۲۶۲۷۲۹-۲۲۶۶۷۲۹-۲۲۶۲۷
۲۳۶۰۴	چابهار	۴۲۳۳۵۱۸
کد نماینده <th>شهر</th> <th>تلفن</th>	شهر	تلفن
۲۳۶۰۵	زابل	۲۲۲۵۹۱۹
۲۳۶۰۶	ایرانشهر	۲۲۳۰۱۲۷
۲۰۴۰۲	آباده	۳۳۳۸۵۹۹-۳۳۴۴۶۸۸
۲۰۴۰۳	داراب	۶۴۴۴۵۶۲
۲۰۴۰۴	فسا	۲۲۲۶۰۱۰-۳۳۳۶۰۱۰
۲۰۴۰۷	خنج	۴۲۳۳۴۹۴-۴۵۲۳۴۹۵
۲۰۴۰۹	مرودشت	۲۳۳۲۷۵۴
۲۰۴۱۰	نیریز	۵۲۳۹۱۴۲-۵۲۳۱۵۸۸
۲۰۴۱۲	نورآباد ممسنی	۴۲۳۳۷۸۷
۲۰۴۱۴	کازرون	۲۳۲۵۲۶۳
۲۰۴۱۵	ارسنجان	۷۶۲۵۷۷۵
۲۰۴۱۷	شیراز	۱-۸۲۰۹۲۷۲
۲۰۴۱۸	چهرم	۴۴۴۵۷۴۷
۲۰۴۱۹	نورآباد ممسنی	۴۲۳۳۳۲۹
۲۰۴۲۰	شیراز	۷۱۷۲۴۶۷-۷۱۷۷۰۵۹
۲۰۴۲۱	لارستان	۲۲۲۶۰۲۲
۲۰۴۲۲	خرم بید	۳۵۲۱۳۰۸
۲۰۴۲۳	لامرد	۵۲۳۴۰۵۴-۵۲۳۲۹۸۵
۲۰۴۲۴	فیروزآباد	۶۲۳۶۵۶۵
۲۰۴۲۵	اقلید فارس	۴۲۳۲۹۵۳
۲۰۴۲۶	شیراز	۶۲۵۱۱۷۳
۲۱۴۰۱	قزوین	۲۲۳۳۱۸۳
۲۱۴۰۳	قزوین	۲۵۶۳۱۱۸-۲۵۶۸۱۱۸
۲۱۴۰۴	تاکستان	۵۲۳۸۳۲۹
۲۱۴۰۵	قزوین	۳۳۳۲۸۶۴
۲۱۴۰۶	بوئین زهرا	۴۲۳۵۲۳۵
۲۱۵۰۱	قزوین	۳۳۳۵۶۶۶-۳۳۳۱۱۴۲-۳
۲۱۵۰۲	قم	۶۶۰۱۴۸۰
۲۲۳۰۱	سنندج	۶۶۰۳۴۴۴
۲۲۳۰۲	بیجار	۲۲۳۸۳۶۹-۲۲۴۷۵۴۵
۲۲۳۰۳	سقز	۴۲۳۵۶۲۲-۴۲۳۲۲۵۸
۲۲۳۰۵	سنندج	۲۳۳۷۷۰۶
۲۱۷۰۴	کهنوج	۵۲۳۶۵۱۱
۲۱۷۰۵	رفسنجان	۵۲۳۸۴۶۹
۲۱۷۰۷	سیرجان	۳۳۲۱۶۹۸
۲۱۷۰۸	عنبرآباد	۴۶۳۲۳۱۱
۲۱۷۰۹	رفسنجان	۵۲۳۰۹۵۹
۲۱۷۱۱	کرمان	۲۴۴۹۴۲۰
۲۱۷۱۲	بافت	۴۲۳۴۴۴۰
۲۱۷۱۳	انار	۳۳۳۲۱۱۶
۲۱۷۱۴	بم	۲۲۱۴۷۸۴
۲۱۷۱۵	جیرفت	۳۳۱۶۶۶۱-۳۳۱۴۱۹۵
۲۱۶۰۲	کرمانشاه	۷۲۳۵۶۷
۲۱۶۰۳	کرمانشاه	۸۴۴۳۳۳۳-۸۴۴۴۵۰۰
۲۱۶۰۴	سرپل ذهاب	۲۲۲۱۴۰۶
۲۱۶۰۵	اسلام آباد غرب	۵۲۳۲۱۸۲-۵۲۳۷۸۶۷
۲۱۶۰۶	کرمانشاه	۷۲۳۷۱۰۳
۲۱۶۰۷	صحنه	۳۳۳۷۰۲۲
۲۱۶۰۸	جوانرود	۶۲۳۲۵۱۲

فهرست نمایندگان لوازم خانگی شرکت خدمات گلدیران

تلفن	شهر	کد نمایندده
۷۷۳۳۹۰	اشتهارد	۲۰۱۳۳
۶۶۴۷۷۵۱	کرج	۲۰۱۳۴
۴۲۰۰۹۱۲	کرج	۵۰۱۸۶
۴۲۰۰۹۱۲	کرج	۶۰۱۸۹
۴۲۰۰۹۱۲-۴۲۰۰۹۰۵-۶	کرج	۸۰۱۶۹
۳۳۵۳۸۲۳	ایلام	۲۲۴۰۱
۳۳۶۴۷۳۰	ایلام	۲۲۴۰۲
۶۲۲۶۲۱۱-۶۲۲۰۱۱۰	آیدانان	۲۲۴۰۳
۵۲۲۷۶۹۲	دره شهر	۲۲۴۰۴
۷۲۲۹۶۶۸	دهلران	۳۵۱۹۹
۸۲۲۲۶۰۶	بندر دیر	۲۱۲۰۴
۴۲۲۳۷۹۸	برازجان	۲۱۲۰۹
۷۶۳۳۳۱۸	ولایت جم	۲۱۲۱۱
۲۵۲۳۵۹۸-۲۵۲۳۵۹۸	بوشهر	۲۱۲۱۲
۲۲۴۰۴۰۲-۲۲۴۰۴۰۱-۲۲۰۸۱۵۵	کرج	۲۰۱۰۲
۲۲۵۲۲۵۲	ورامین	۲۰۱۰۳
۲۳۵۱۱۲۳	اسلامشهر	۲۰۱۰۵
۷۷۳۵۹۱۶۲-۷۷۷۸۰۴۰۰	تهران	۲۰۱۰۹
۳-۶۶۵۴۳۰۰-۶۶۵۴۳۱۱۰۵	تهران	۲۰۱۱۰
۲۲۵۰۴۴۵۰-۲۲۳۰۱۷۱۹-۲۲۳۴۳۹۶۵	تهران	۲۰۱۱۱
۶۶۰۰۳۷۸۴	تهران	۲۰۱۱۲
۵-۶۶۳۸۹۸۸۴	تهران	۲۰۱۱۸
۴۴۴۷۶۶۵	تهران	۲۰۱۲۰
۳۰۳۷۸۹۲-۳۰۴۰۸۳۲	پاکدشت	۲۰۱۲۱
۵۲۳۴۶۶۴-۵۲۳۴۳۵۴	دماوند	۲۰۱۲۲
۸۷۳۲۰۰۷-۸۹۳۰۵۱۰۱-۲	تهران	۲۰۱۲۳
۳۵۲۳۱۹۹-۳۵۲۳۱۲۲-۳۵۲۳۵۳۰	کرج	۲۰۱۲۴
۵-۳۳۰۵۷۳۳۴	تهران	۲۰۱۲۵
۳۲۵۵۸۰۹-۳۲۵۵۸۲۴-۳۲۵۵۸۲۰	شهریار	۲۰۱۲۶
۶۶۳۸۹۸۸۹-۶۶۳۸۵۷۵۸	تهران	۲۰۱۲۷
۵۵۹۵۵۰۰۰-۵۵۹۰۳۹۰۰	تهران	۲۰۱۲۸
۸۷۰۳۶۰۸-۸۹۳۰۵۳۰۵	تهران	۲۰۱۳۰
۴۶۸۸۸۹۹۶	شهرقدس	۲۰۱۳۲
۴۲۲۹۲۸۹	رباط کریم	۳۵۱۹۶
۵۵۵۶۶۹۷۸	تهران	۶۰۱۶۰
۸۵۵۵۶۴۲	تهران	۶۰۱۸۱
۴-۸۸۶۸۶۰۵۳	تهران	۸۰۱۶۸
۲۲۲۴۸۱۱	شهرکرد	۲۲۷۰۱
۴۲۳۸۹۲۴	بروجن	۲۲۷۰۳
۷۲۳۹۴۰۰	فارسان	۲۲۷۰۴
۲۲۲۱۱۰۱	فردوس	۲۰۲۲۸
۲۲۳۱۱۹۰-۲۲۳۴۵۷۷	بیرجند	۳۵۲۴۸
۸۴۰۰۲۲۷	مشهد	۲۰۲۰۴
۳۳۳۰۴۰۰-۳۳۳۰۳۰۰	نیشابور	۲۰۲۰۴
۲۲۳۵۸۵۵	سنزوار	۲۰۲۰۵
۷۷۳۲۲۵۲	خلیل آباد	۲۰۲۰۸
۲۲۳۲۵۱۵	قوچان	۲۰۲۱۱
۲۲۲۳۳۷۷-۲۲۱۳۳۷۷	تربت حیدریه	۲۰۲۱۲
۸۹۱۱۳۳۳	مشهد	۲۰۲۱۴
۸۲۳۳۸۵۵	کاشمر	۲۰۲۱۵

تلفن	شهر	کد نمایندده
۲۲۲۰۰۶۶-۲۲۲۸۵۲۷	مرآغه	۲۰۸۰۲
۲۲۲۲۰۲۲-۲۲۳۳۶۷۹	میانه	۲۰۸۰۳
۳۳۰۴۷۸۹	تبریز	۲۰۸۰۴
۶۲۳۲۸۱۵-۶۲۳۹۹۴۹	عجیشیر	۲۰۸۰۶
۴۲۳۲۸۱۲	آذرشهر	۲۰۸۰۷
۳۰۴۲۵۹۶	هادی شهر	۲۰۸۰۸
۸۲۳۲۶۶۵	ملکان	۲۰۸۰۹
۲۲۳۹۲۴۱	مرآغه	۲۰۸۱۲
۷۳۳۰۳۳۰	بناب	۲۰۸۱۷
۲۲۲۰۲۰۲	شیبستر	۲۰۸۱۸
۲۲۴۰۹۲۰-۲۲۲۰۳۵۰	ارومیه	۲۰۹۰۱
۲۲۳۵۱۴۵	مهاباد	۲۰۹۰۳
۵۲۳۳۷۵۸	سلماس	۲۰۹۰۵
۳۳۳۳۶۲۱	میاندوآب	۲۰۹۰۷
۳۳۳۵۹۰۰	ماکو	۲۰۹۰۸
۳۸۳۲۱۷۰-۳۸۳۲۴۹۳	ارومیه	۲۰۹۰۹
۴۲۲۲۱۳۳	شاهین دژ	۲۰۹۱۰
۶۲۶۰۶۲۴	نقده	۲۰۹۱۱
۵۴۰۲۳۲۶-۵۴۰۶۳۸۴-۵۴۲۲۵۲۲	تبریز	۲۰۸۱۳
۲۲۳۱۲۳۲-۲۲۶۲۰۱۳	مرند	۲۰۸۱۴
۳۳۳۳۴۴۴	اهر	۲۰۸۱۵
۳۳۳۳۶۷۰	سراب	۲۰۸۱۶
۲۶۶۳۷۵۰	خسروشهر	۲۰۸۱۹
۶۲۳۳۸۵۲-۶۲۳۳۸۵۳-۶۲۳۳۶۲۰	پوکان	۲۰۹۰۴
۴۲۲۹۹۱۸	پیرانشهر	۲۰۹۱۳
۲۲۴۴۵۰۸	خوی	۲۰۹۱۴
۲۷۳۶۶۸۶	قره ضیاءالدین	۲۰۹۱۵
۶۳۳۱۳۳۲	نقده	۲۰۹۱۶
۵۲۳۳۳۱۰	نکاب	۲۰۹۱۷
۲۳۴۰۱۲۳	ارومیه	۲۰۹۱۸
۶۶۱۷۸۱۴-۶۶۱۸۰۰۱	اردبیل	۲۲۲۰۱
۷۳۳۰۰۰۱	پارس آباد مغان	۲۲۲۰۲
۴۲۳۱۴۲۰	خلخال	۲۲۲۰۳
۵۲۳۹۱۱۸-۵۲۴۰۸۸۱	مشکین شهر	۲۲۲۰۴
۶۲۳۳۶۶۲-۶۲۸۰۳۵۶-۶۲۳۳۶۶۲	اصفهان	۲۰۳۰۱
۳۶۵۸۴۴۳	خمینی شهر	۲۰۳۰۵
۵۲۳۵۰۰۰	میارکه	۲۰۳۰۶
۳۳۳۸۹۸۹	گلیپایگان	۲۰۳۰۷
۴۲۲۲۲۳۲	داران	۲۰۳۰۸
۴۲۳۳۰۰۰-۴۴۶۷۵۰۰	کاشان	۳۰۳۰۹
۴۲۳۲۱۲۰	شهرضا	۲۰۳۱۰
۵۲۳۹۹۹۳	شاهین شهر	۲۰۳۱۲
۴۲۳۳۳۷۸	نطنز	۲۰۳۱۳
۳۴۳۳۳۰۹	گلیپایگان	۲۰۳۱۴
۴۴۷۱۱۹۰	کاشان	۲۰۳۱۵
۲۶۲۷۸۲۲	نجف آباد	۲۰۳۱۶
۲۲۵۸۷۵۱-۲۲۶۳۳۷۹	اصفهان	۲۰۳۱۷
۲۲۵۱۳۳۷	نائین	۲۰۳۱۸
۱۶۹۵۸۶۰۰	مشگدر	۲۰۱۲۹
۴۳۳۵۶۶۷	کرج	۲۰۱۳۱

دهید تا کیسه به طور کامل بسته شود.
کیسه پارچه ای را نشویید.

اگر جاروبرقی کار نکرد چکار کنیم؟

ببینید آیا دو شاخه به درستی در پریز قرار دارد و آیا پریز دارای جریان برق است یا خیر.

توجه: از آنجایی که دستگاه مجهز به قطعه ایمنی برای بررسی کیسه در محل است بنابراین چنانچه کیسه به درستی در محل قرار نگیرد درپوش جاروبرقی به درستی بسته نخواهد شد.

در صورت کاهش مکش دستگاه چه کنیم؟

- جاروبرقی را خاموش کرده و دو شاخه را از پریز بیرون بکشید.
- ببینید آیا چیزی در لوله ها، برس ها، برس های لوله خرطومی و ابزار تمیز کننده مسدود نباشد و نازل اصلی گیر کرده است.
- آیا کیسه جاروبرقی پر شده است. در صورت نیاز آن را عوض کنید.
- آیا فیلتر خروجی هوا مسدود شده است. در صورت نیاز آن را تعویض کنید.

تمیز کردن فیلتر موتور

فیلتر موتور داخل دستگاه و مابین کیسه و موتور قرار دارد. توصیه می شود هر بار که فیلتر خروجی هوا را عوض می کنید، فیلتر موتور (۲۳) را درآورده و آن را با زدن ضربه تمیز کرده و غبارهای آن را بزدايید و سپس آن را دوباره در محل قرار دهید.

تعویض فیلترهای خروجی هوا

بسته به مدل جاروبرقی تان، دستگاه مجهز به انواع فیلترهای گوناگون است: فیلتر فوم، الکترواستاتیک یا فیلتر قابل شستشوی HEPA (۲۴).

برای تعویض یا شستشوی فیلتر هپا (۲۴) اهرم رهاسازی (۲۷) را فشار دهید و درپوش (۲۵) را باز کنید، سپس فیلتر را بیرون بیاورید.

برای تعویض درپوش (۲۵) پس از تمیز کردن یا شستشوی فیلتر، زائده های درپوش فیلتر (۲۸) را مقابل شیارهای (۲۹) درپوش بدنه قرار داده و درپوش (۲۵) را جا بیندازید، سپس درپوش (۲۵) را به پایین فشار دهید.

• فیلتر الکترواستاتیک باید به طور منظم تعویض شود.
(حداقل هر ۶ ماه یک بار)

• فیلتر قابل شستشوی HEPA را حداقل سالی یک بار در آب بشویید.

نحوه ی استفاده

تنظیم قدرت

(با توجه به مدل)

- دستگیره **لوله خرطومی** (۱۴) دارای یک تنظیم کننده جریان هوا (۱۵) است که به شما امکان کاهش میزان مکش را می دهد.
- **کنترل مکش الکترونیکی** (۱۶)
- قدرت مکش به آرامی افزایش یافته و تا MAX می رود.

سیستم پارک (۱۷)

برای توقف کوتاه مدت در حین تمیز کردن، به عنوان مثال برای جابجایی اشیاء کوچک اثاثیه یا یک قالیچه، برای نگه داشتن **لوله خرطومی** و نازل اصلی از سیستم پارک استفاده کنید.

نگهداری (۱۸)

وقتی دستگاه را خاموش کرده و دو شاخه را از پریز بیرون می کشید، دکمه (۱۲) را فشار دهید تا سیم به طور خودکار جمع شود.
شما می توانید دستگاه را حرکت داده یا آن را در موقعیت عمود قرار دهید برای این کار قلاب روی نازل اصلی را به گیره واقع در زیر دستگاه هل دهید.

تعویض کیسه جاروبرقی

وقتی جاروبرقی در وضعیت مکش زیاد است و صفحه نمایش سر نازل اصلی (۱۸) به طور کامل به رنگ قرمز است یعنی این که کیسه جاروبرقی باید تعویض شود. حتی اگر در این مرحله کیسه جاروبرقی به نظر پر نرسد اما باید تعویض شود چرا که انبوه گرد و غبار بسیار ریز می تواند باعث مسدود شدن دهانه جارو شود.

- دستگاه را خاموش کرده و دو شاخه را بیرون بکشید.
- با فشار قلاب (۲۰) و بالا کشیدن آن درپوش را باز کنید تا در جای خود چفت شود.
- دستگاه شما مجهز به یک کیسه کاغذی (۲۱) یا یک کیسه پارچه ای (۲۶) است. (بسته به مدل)
- کیسه را از قسمت دستگیره گرفته و بکشید.
- با استفاده از زبانه (۲۱) روی مقوای کیسه آن را ببندید. سپس کیسه را دور بیندازید.
- برای قرار دادن کیسه جدید قسمت مقوایی کیسه جدید را در محل کیسه (۲۲) قرار دهید و آن را فشار دهید تا انتها در محل قرار گیرد.

در صورتی که دستگاه دارای کیسه پارچه ای (۲۶)

بود مراحل زیر را دنبال کنید:

گیره (۳۰) را به طرف بیرون بکشید و کیسه پارچه ای را تخلیه کنید سپس گیره را به عقب بازگردانید و آن را فشار

اتصال لوله خرطومی

سر (۱) لوله خرطومی (۲) را به محل اتصال برروی جارو برقی فشار دهید.

برای جدا کردن لوله خرطومی از جاروبرقی، دکمه (۳) واقع برروی سر **لوله خرطومی** را فشار داده و سپس بیرون بکشید.

نصب لوله ها

(با توجه به مدل)

دستگیره را در انتهای لوله تلسکوپی قرار داده و محکم کنید.

لوله پلاستیکی یا فلزی (۴)

- لوله ها را داخل هم کرده و کمی بچرخانید.

لوله تلسکوپی (۵)

- زبانه فنری (۶) را فشار دهید.

- لوله را به میزان دلخواه بیرون بکشید.

- زبانه فنری را جهت قفل شدن رها کنید.

استفاده از نازل اصلی و نازل های فرعی (با توجه به مدل)

نازل اصلی را به انتهای لوله نصب کنید.

نازل دو حالته (۷) این نازل مجهز به یک پدال (۸) است که

به شما امکان تغییر حالت برحسب نوع زمین می دهد.

وضعیت کف زمین سفت (کاشی، پارکت ...). برای پایین

آمدن برس پدال را فشار دهید.

وضعیت فرش یا قالیچه. برای بالاتر رفتن برس پدال را

فشار دهید.

ابزار شکاف (۹)

برای تمیز کردن محل هایی که غیرقابل دسترس هستند به

عنوان مثال کنج یا زیر مبل.

برس گردگیر (۱۰)

برای تمیز کردن قاب عکس، دور اثاثیه، کتاب ها و سایر

اشیاء غیر متعارف.

نازل پرده (۱۱)

برای تمیز کردن پرده، کرکره، غیره.

در قسمتی از این نازل فرچه ای برای جمع آوری تار و کرک

وجود دارد.

نحوه روشن کردن و استفاده

سیم برق را به مقدار دلخواه بیرون کشیده و دو شاخه را

به پریز متصل کنید.

دکمه (۱۳) را جهت روشن شدن دستگاه فشار دهید. برای

خاموش شدن دکمه (۱۳) را دوباره فشار دهید.

دستورالعمل های مهم ایمنی

هشدار

محافظ حرارتی :

این جاروبرقی دارای یک ترموستات ویژه ای است که مانع از بیش از حد گرم شدن جاروبرقی می شود. چنانچه جاروبرقی به طور ناگهانی خاموش شود، کلید را در حالت خاموش قرار دهید و دو شاخه را از پریز بیرون بکشید. مواردی را که ممکن است باعث افزایش دما شود بررسی کنید از قبیل پر شدن **کیسه زباله**، گرفتگی لوله ها یا انسداد فیلتر. در صورت صحیح بودن موارد فوق، آنها را در محل خود قرار داده و پیش از روشن کردن دوباره، حداقل مدت ۳۰ دقیقه صبر کنید. پس از ۳۰ دقیقه دو شاخه را به پریز متصل کرده و جاروبرقی را روشن کنید.

هشدار

عدم مکش مایعات
مکش مایعات می تواند باعث خرابی شود.

دستورالعمل های مهم ایمنی

⚠ هشدار

- کودکان را از دستگاه دور کنید و مراقب باشید که هنگام جمع کردن سیم مانعی برسر راه وجود نداشته باشد. هنگام جمع شدن سیم، حرکت آن سریع است. (به مدل بستگی دارد)
- **لوله خرطومی** حاوی سیم های برقی است. در صورت له شدن، آسیب دیدگی یا قطع شدن از آن استفاده نکنید. در غیر این صورت منجر به برق گرفتگی یا مرگ می شود. (به مدل بستگی دارد)

⚠ اخطار

- از قرار دادن اشیاء در داخل روزه ها خودداری کنید. این عمل منجر به خرابی دستگاه می شود.
- از مسدود کردن روزه ها خودداری کنید: روزه ها را از گرد و غبار، کرک، مو و هر چیزی که باعث کاهش فشار هوا می شود عاری کنید. در غیر این صورت منجر به خرابی دستگاه می شود.
- از بکارگیری جاروبرقی بدون **کیسه زبانه** یا فیلترها خودداری کنید. این عمل منجر به خرابی دستگاه می شود.
- از جاروبرقی برای برداشتن اشیاء تیز، اسباب بازی های کوچک، سوزن، سنجاق و غیره استفاده نکنید. این عمل منجر به خرابی دستگاه و مخزن می شود.
- جاروبرقی را در محیط داخل منزل نگهداری کنید. جاروبرقی را پس از هر بار استفاده به کناری قرار دهید تا در معرض ضربه نباشد.
- فقط از قطعات توصیه شده یا تولید شده توسط مرکز خدمات مجاز ال جی استفاده کنید. در غیر این صورت منجر به خرابی دستگاه می شود.
- فقط به روش توصیه شده در این دفترچه از دستگاه استفاده کنید. فقط از متعلقات توصیه شده یا تایید شده توسط ال جی استفاده کنید. در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- جهت پیشگیری از آسیب جانی افراد یا پیشگیری از افتادن جاروبرقی در هنگام تمیز کردن پله ها، همواره دستگاه را در پایین پلکان قرار دهید. در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- در حالت کاناپه از نازل های جانبی استفاده کنید. در غیر این صورت منجر به خرابی دستگاه می شود.
- پیش از قرار دادن فیلترها در دستگاه (فیلتر خروجی هوا و فیلتر موتور) از خشک شدن کامل آنها اطمینان حاصل نمایید.
- در غیر این صورت منجر به خرابی دستگاه می شود.
- از قرار دادن فیلتر در داخل اجاق یا مایکروویو خودداری کنید.
- این عمل منجر به آتش سوزی می گردد.
- از خشک کردن فیلتر در داخل خشک کن لباس خودداری کنید.
- این عمل ممکن است منجر به آتش سوزی شود.
- از خشک کردن فیلتر در نزدیکی آتش خودداری کنید. این عمل ممکن است منجر به آتش سوزی شود.
- پس از تمیز کردن فرش و موارد پرگرد و غبار، **کیسه زبانه** را خالی و تمیز کنید. این عوامل باعث انسداد فیلترها و کاهش قدرت مکش و خرابی دستگاه می شوند. کوتاهی در تمیز کردن کیسه زبانه موجب خرابی دستگاه می شود. (به مدل بستگی دارد)
- هنگامی که جارو برقی را حمل می کنید دستگیره مخصوص حمل را بگیرید. (به مدل بستگی دارد)
- چنانچه پس از تخلیه **کیسه زبانه** چراغ قرمز روشن شد، **کیسه زبانه** را تمیز کنید. در غیر این صورت منجر به خرابی دستگاه می شود. (به مدل بستگی دارد)

با دستگاه را ندهید. امور نگهداری و تمیز کردن دستگاه نباید توسط کودکان و بدون نظارت افراد بالغ انجام شود.

- هنگام تمیز کردن جاروبرقی یا زمانی که از آن استفاده نمی کنید دو شاخه را از پریز بیرون بکشید. در غیر این صورت منجر به برق گرفتگی یا آسیب جانی می شود.
- از جاروبرقی برای برداشتن موارد شعله ور یا دودزا نظیر سیگار یا خاکستر داغ استفاده نکنید. این عمل منجر به مرگ، برق گرفتگی یا آتش سوزی می شود.
- از جاروبرقی برای کشیدن مواد قابل انفجار یا قابل اشتعال نظیر گازوئیل، بنزین، تینر و غیره استفاده نکنید. گاز ناشی از این مواد می تواند منجر به انفجار یا خطر آتش سوزی شود. در نتیجه احتمال مرگ یا آسیب جانی وجود دارد.
- هرگز با دستان مرطوب جاروبرقی یا دوشاخه آن را لمس نکنید. این عمل منجر به مرگ یا برق گرفتگی می شود.
- برای کشیدن دو شاخه از پریز، هرگز سیم را نکشید. این عمل منجر به خرابی دستگاه یا برق گرفتگی می شود. برای جدا کردن از پریز همواره از دو شاخه بگیرید.
- همواره مو، لباس، انگشتان و سایر قسمت های بدن را از روزه های دستگاه و قطعات متحرک دور نگه دارید. این عمل منجر به برق گرفتگی یا آسیب دستگاه می گردد.
- هرگز برای حمل از سیم جاروبرقی استفاده نکنید و یا سیم آن را حول لبه های تیز نیچید. جاروبرقی را بر روی سیم آن قرار ندهید. سیم را از سطوح گرم دور نگه دارید. در غیر این صورت منجر به برق گرفتگی و آسیب جانی و یا آتش سوزی یا خرابی دستگاه می شود.
- هرگز اجازه ندهید از جاروبرقی به عنوان وسیله اسباب بازی استفاده شود. همواره توجه خاصی به جاروبرقی ای که در نزدیکی کودکان است، داشته باشید. در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- در صورت خیس شدن جاروبرقی از آن استفاده نکنید. در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- برای پیشگیری از خطر با مرکز خدمات گلدیران تماس بگیرید.
- در صورت مفقود شدن یا معیوب شدن قطعات جاروبرقی از آن استفاده نکنید. در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- برای پیشگیری از خطر با مرکز خدمات مجاز شرکت گلدیران تماس بگیرید.
- هرگز از سیم سیار استفاده نکنید. این عمل منجر به آتش سوزی یا خرابی دستگاه می شود.
- از ولتاژ صحیح استفاده کنید. استفاده از ولتاژ نامناسب منجر به خرابی موتور دستگاه یا آسیب فردی کاربر می شود. ولتاژ مناسب دستگاه در زیر جاروبرقی ذکر شده است.
- پیش از کشیدن دو شاخه جاروبرقی از پریز، تمامی کلیدها را خاموش کنید. در غیر این صورت منجر به برق گرفتگی یا آسیب جانی می شود.
- از تعویض دوشاخه خودداری نمایید. این عمل منجر به برق گرفتگی یا آسیب جانی و خرابی دستگاه می شود. اگر دو شاخه با پریز مطابقت ندارد برای نصب پریز مناسب با یک برق کار تماس بگیرید.
- تعمیر و وسایل برقی فقط باید توسط افراد مرکز خدمات مجاز انجام شود. تعمیرات غیرمجاز منجر به خطرات شدید جانی می گردد.
- اگر زبانه کنترل در وضعیت OFF نیست دو شاخه را در پریز قرار ندهید. این عمل منجر به آسیب فردی یا خرابی دستگاه می گردد. (به مدل بستگی دارد)

دستورالعمل های مهم ایمنی

پیش از استفاده از جاروبرقی جهت پیشگیری از خطر آتش سوزی، برق گرفتگی، آسیب جانی یا خرابی دستگاه در هنگام استفاده از آن، لطفاً تمامی دستورالعمل های زیر را مطالعه کرده و اجرا کنید. این راهنما تمامی شرایط احتمالی را پوشش نمی دهد. برای مشکلاتی که آنها را درک نمی کنید با مرکز خدمات مجاز تماس بگیرید. این دستگاه مطابق با قوانین Directives:-2006/95/EC Low Voltage Directive-2004/108/EC EMC Directive EC است.

این علامت هشدار ایمنی است.

این علامت بیانگر خطرات بالقوه ای است که ممکن است باعث مرگ یا آسیب شما و دیگران شود. تمامی پیام های ایمنی به همراه علامت هشدار ایمنی و در ادامه کلمات "اخطار" یا "هشدار" است. این دو عبارت به معنای:



این علامت به شما می گوید که احتمال خطر و موارد غیر ایمنی وجود دارد که می تواند باعث آسیب شدید جانی یا مرگ شود.

هشدار



این علامت بیانگر خطرات و شرایط غیرایمنی است که می تواند باعث آسیب جانی یا خسارت مالی شود.

اخطار




















هشدار




• در صورت خرابی سیم برق یا دوشاخه جاروبرقی، از آن استفاده نکنید.

در صورت آسیب دیدگی سیم برق، تعویض آن را به مرکز خدمات مجاز گلدیران بسپارید تا خطری شما را تهدید نکند.

- استفاده از این دستگاه برای افرادی (نظیر کودکان) که از توانایی فیزیکی محدودی برخوردارند، یا ناتوان هستند یا از تجربه کمی برخوردارند، مجاز نیست مگر تحت نظارت افراد بالغ.
- مراقب کودکان باشیم تا از جاروبرقی به عنوان وسیله بازی استفاده نکنند.
- کودکان ۸ سال به بالا می توانند از این دستگاه استفاده کنند و افراد ناتوان یا افرادی که دارای مشکلات حسی و ذهنی هستند یا افراد کم تجربه باید با نظارت افراد بالغ از دستگاه استفاده نمایند تا از خطرات احتمالی آگاه شوند. به کودکان اجازه بازی

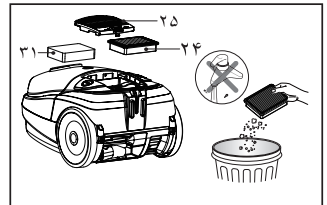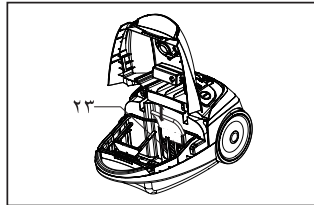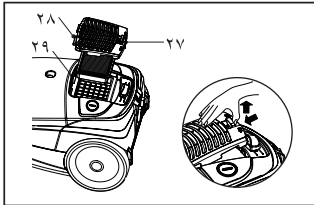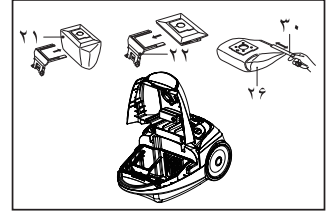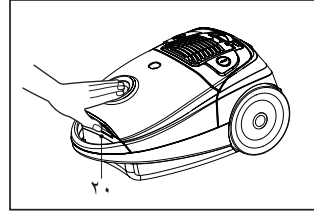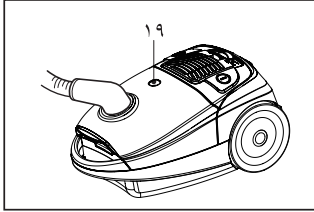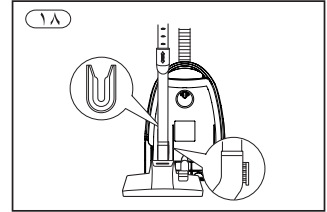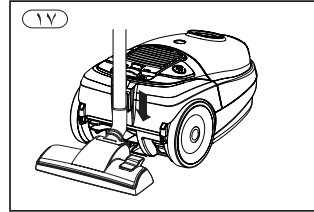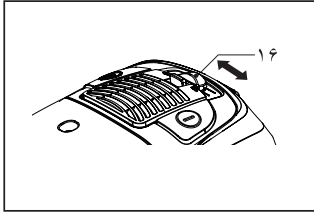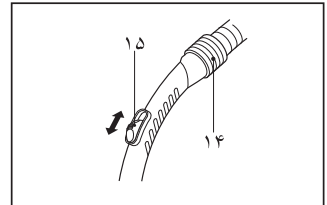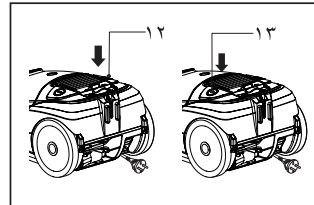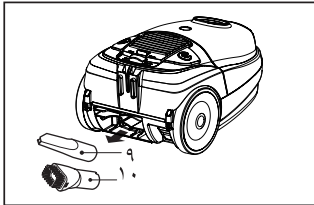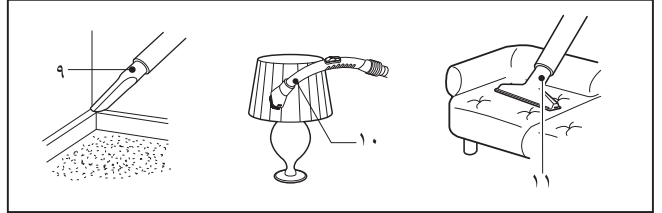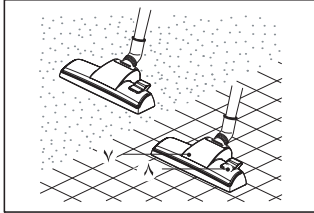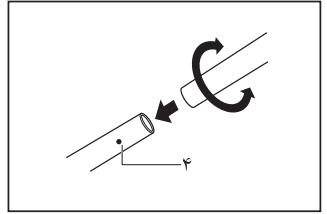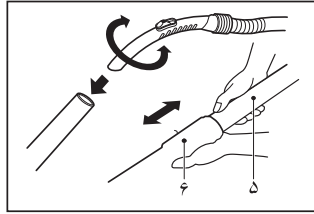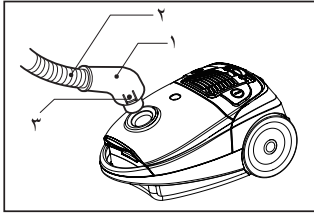


قسمت های اصلی

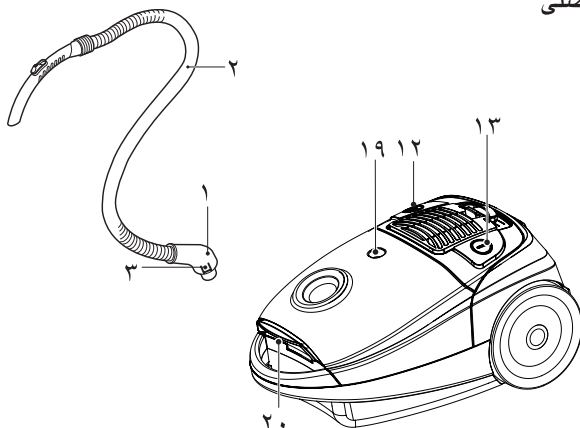



قسمت های جانبی

■ شکل و تعداد لوازم زیر بستگی به مدل که خریداری کرده اید دارد.

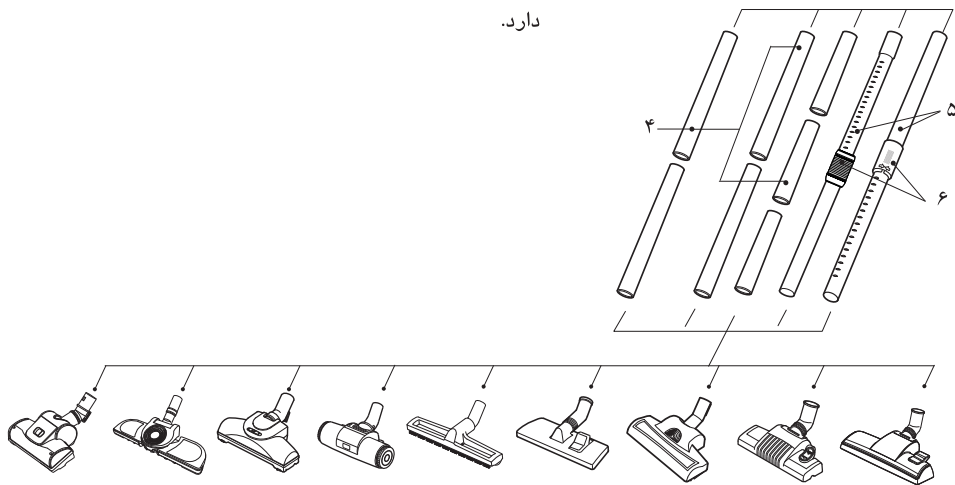

متعلقات

■ این متعلقات با توجه به درخواست خریدار/ فروشنده متغیر است.



راهنمای مصرف کنندہ

VN-2320CRF
VN-2320CTS
VN-2320CBK
VN-2316CRF
VN-2316CWH
VN-2316CBK



MFL67873401