



LG

Life's Good

ENGLISH

ARABIC


Owner's Manual

REFRIGERATOR FREEZER

**Please read carefully the manual instruction and safety caution
before operating your refrigerator and retain it for future reference**



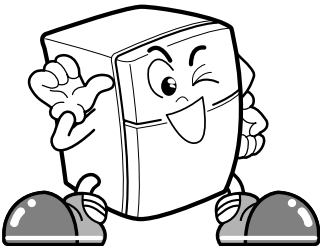


CONTENTS

IMPORTANT SAFETY INFORMATION ..	3
INSTALLATION	10
FEATURE CHART	11
OPERATION	12
Starting	
Before Setting The Temperature	
Temperature Control	
Hygiene Fresh (Optional)	
Ice Making	
Pull Out Tray (Optional)	
Defrosting	
Deodorizer (Optional)	
SUGGESTIONS ON FOOD STORAGE	15
CLEANING	16
GENERAL INFORMATION	16
LAMP REPLACEMENT	17
IMPORTANT WARNINGS.....	17
BEFORE CALLING FOR SERVICE	18
EARTH/ GROUNDING CONSTRUCTION (OPTIONAL)	19



IMPORTANT SAFETY INFORMATION

WARNING

-  Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
-  Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  Do not damage the refrigerant circuit.
-  Do not use electrical appliances inside the food storage compartment of the appliance, unless they are of the type recommended by the manufacturer.
-  The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposal, please consult with services agent or a similarly qualified person.




This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.


In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1 m² in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance. Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.


IMPORTANT SAFETY INFORMATION

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

 This is the safety alert symbol. It alerts you to safety messages that inform you of hazard that can hurt you or others or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word WARNING, or CAUTION. These words mean:

 **WARNING** You will be hurt or seriously injured if you don't follow instructions.

 **CAUTION** indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

WARNING


To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following.

Read all instructions before using this appliance.

1. When connecting the power


Do not use many power outlets.

- Using several devices at one outlet may cause fire.
- The electric leakage breaker may damage food and the dispenser may be leaked.

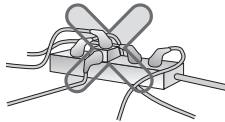

Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

Water may be flown into or the plug may be damaged, which causes fire or electric shock.

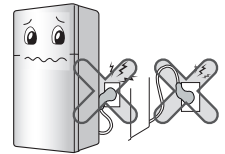

Do not allow the power cord bent or pressed by the heavy object to be damaged.

It may damage the power cord to cause fire or electric shock.



Do not extend or modify the length of the power plug.

It causes electric shock or fire by the electric damage of the power cord or others.




IMPORTANT SAFETY INFORMATION

1. When connecting the power


Unplug the power plug when cleaning, handling or replacing the interior lamp of the refrigerator.

- It may cause electric shock or injury.
- When replacing the interior lamp of the refrigerator, make sure that the rubber ring for preventing the electric spark within the socket is not taken off.

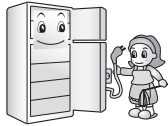


Do not pull out the cord or touch the power plug with wet hands.

- It may cause electric shock or injury.

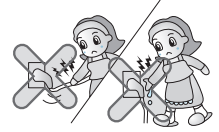


Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may fire or electric shock.




Make sure of grounding.

The incorrect grounding may cause breakdown and electric shock.

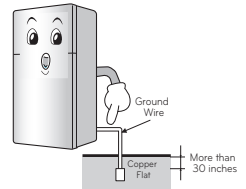

When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

It may cause electric shock or short circuit to make fire.

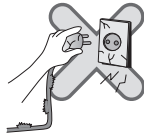

2. When using the refrigerator

Do not place the heavy object or the dangerous object (container with liquid) on the refrigerator.

It may be dropped to cause injury, fire or electric shock when opening or closing the door.



Do not cling to the door or the shelves of the door or the cool chamber.

It may make the refrigerator fallen down or damage the hands. Especially, do not allow the children to do the above.



IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not install the refrigerator in the wet place or the place which water or rain splashes.

Deterioration of insulation of electric parts may cause electric leakage.



Do not use or store inflammable materials ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

It may cause explosion or fire.

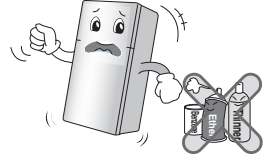

Do not place the lit candle within the refrigerator to deodorize.

It may cause explosion or fire.




Do not store the medicine or the academic materials at the refrigerator.

When the material with the strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.




Do not use the combustible spray near the refrigerator.

It may cause fire.

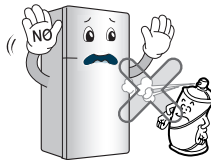

Avoid the heating devices.

It may cause fire.

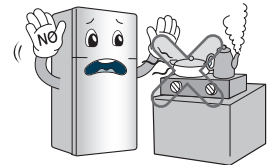


Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.

It may cause fire, electric shock or injury by dropping down.



Do not use the submerged refrigerator directly, kindly checked by the technician.

It may cause electric shock or fire.

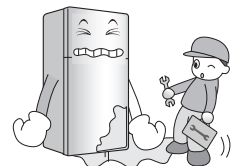

IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.

Deterioration of insulation of electric parts may cause electric shock or fire.




When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center.

It may cause fire.

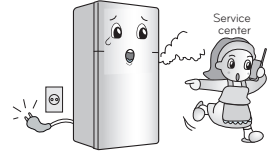


Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.

It may cause injury, electric shock or fire.

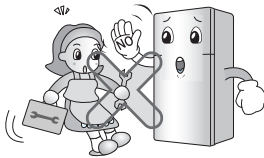

Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

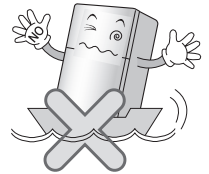

When disposing the refrigerator, remove the packing materials from the door.

It may cause to lock out the child.




Install the refrigerator on the solid and level floor.

Installing it on the unstable place may cause death by falling down the refrigerator when opening or closing the door.




When gas is leaked, do not touch the refrigerator or the outlet and ventilate the room immediately.

- The explosion by spark may cause fire or burn.
- Because this refrigerator uses natural gas as the environment-friendly refrigerant, even as small amount is combustible. When the gas is leaked by the severe damage during delivering, installing or using the refrigerator, any spark may cause fire or burn.

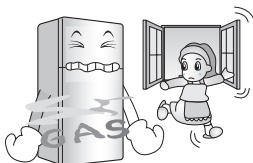

Do not put hands or other things in the air holes, under the cover, into the holes at the back of the refrigerator.

It may cause electric shock or injury.

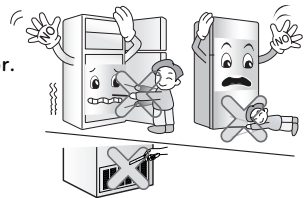


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not insert the hands or the metal stick into the exit of cool air, the cover, the bottom of the refrigerator, the heatproof grill (exhaust hole) at the backside.

It may cause electric shock or injury.

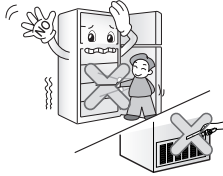


Prevent children from entering the product.

It may endanger the life of a child if the child enters the refrigerator.

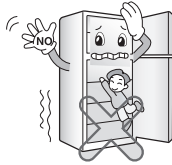

When you want to dispose the refrigerator, contact to the down-block office.

When you want to dispose the large living waste such as electric home appliance and furniture, you'd better contact the local down-block office.

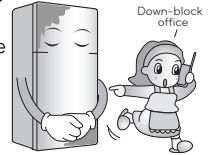

! CAUTION

Violating this direction may cause injury or damage house or furniture. Always be careful, please.


Do not touch food or containers at the freezer with wet hands.

It may cause frostbite.



Wait for 5 minutes or longer when reconnecting the plug.

It may cause the operation of the freezer to fail.

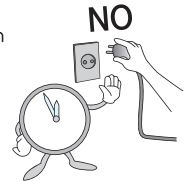

Do not put bottle in the freezer.

It may freeze the contents to break the bottle to cause injury.



Pull out the power plug not by grasping the cord but the plug of its end.

It may cause electric shock or short circuit to fire.



IMPORTANT SAFETY INFORMATION

CAUTION

Violating this direction may cause injury or damage house or furniture. Always be careful, please.

Do not install the refrigerator in the wet place or the place which water or rain splashes.

Deterioration of insulation of electric parts may cause electric leakage.




Do not insert the hands into the bottom of the refrigerator.

The iron plate of the bottom may cause injury.



Carry the refrigerator with the handle bar at the bottom of the front and the top of the rear.

Otherwise, your hands may be slipped to cause injury.

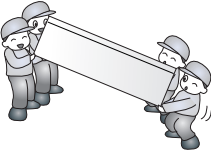


Because opening or closing the door of the refrigerator may cause injury to the person around it, be careful, please.

Opening or closing the door may cause feet or hands to be caught in the chink in door or the child to be get hurt by the corner.



Do not put any living animal in the refrigerator.

It may cause the animal died.

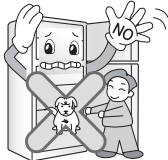

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE AND UTILIZES THE LATEST IN TECHNOLOGY.



WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH ITS PERFORMANCE AND RELIABILITY.

BEFORE USING YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY.

IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION, AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

INSTALLATION

SELECT A GOOD LOCATION

1. Place your refrigerator where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. Air must circulate properly around your refrigerator to ensure efficient operation. If your refrigerator is placed in a recessed area in the wall, allow at least 10 inches (25 cm) or greater clearance above the refrigerator and 2 inches (5 cm) or more from the wall. The refrigerator should be elevated 1 inch (2.5 cm) from the floor, especially if the floor is carpeted.
4. To avoid vibrations, the unit must be level. If required, adjust the leveling screws to compensate for unevenness of the floor. The front should be slightly higher than the rear to aid in door closing. Leveling screws can be turned easily by tipping the cabinet slightly. Turn the leveling screws clockwise() to raise the unit, counterclockwise() to lower it.
5. Don't install this appliance below 5°C. It may cause the debasement of the refrigerator.

NEXT

1. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.
2. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
4. Prior to storing food, leave your refrigerator on for 2 or 3 hours. Check the flow of cold air in the freezer compartment to ensure proper cooling. Your refrigerator is now ready for use.


FEATURE CHART

FREEZER COMPARTMENT

- Freezer Temperature Control Dial
- Freezer Shelf
- Twisting Ice Serve

REFRIGERATOR COMPARTMENT

- Deodorizer (Optional) Lamp
- Pull out tray (Optional)
- Refrigerator Temperature Control Knob
- Hygiene Fresh (Optional)
- Shelves (Optional)
- Vegetable Drawer
Used to keep fruits and vegetables, etc. fresh and crisp.

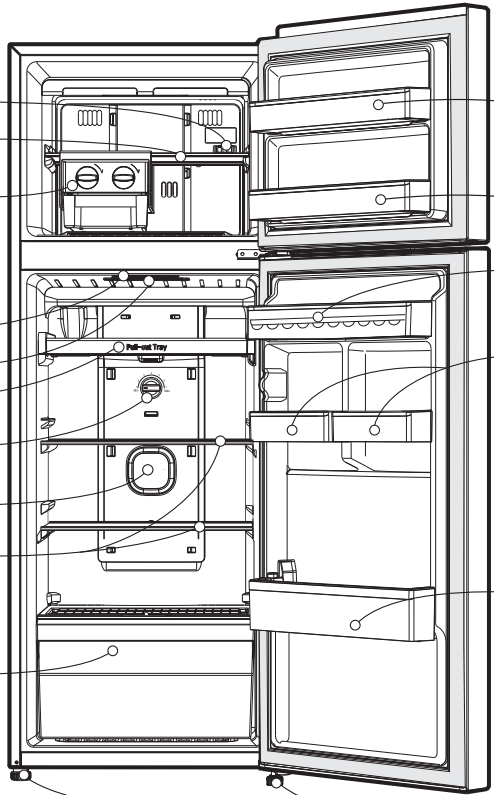

- Freezer Door Rack (***) (Optional)
- Freezer Door Rack
- Egg Storage Rack
- Movable Rack (Optional)
- Refrigerator Door Rack
- Leveling Screws

NOTE

● All parts shown may not be included with every model.

OPERATIONS

STARTING

When your refrigerator is first installed, allow it 2-3 hours to stabilize at normal operating temperatures prior to filling it with fresh or frozen foods.


If operation is interrupted, allow 5 minutes delay before restarting.

BEFORE SETTING THE TEMPERATURE

- This refrigerator has one temperature control knob for the refrigerator compartment and one temperature control dial for the freezer compartment.
- The default setting of the temperature control knob for the refrigerator compartment is '4'.
- The default setting of the temperature control dial for the freezer compartment is '3'.


TEMPERATURE CONTROL

□ CONTROLS FOR REFRIGERATOR COMPARTMENT

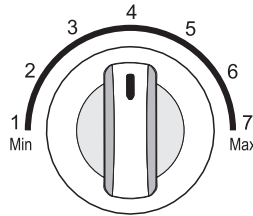

- For colder temperatures, adjust the control knob to MAX, and for warmer temperatures, adjust the control knob to MIN position

□ CONTROLS FOR FREEZER COMPARTMENT

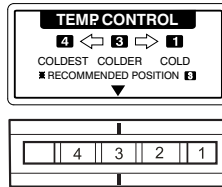

- TEMPCONTROL - 1, 2, 3, 4, 5, 6, 7
Setting at "4", the freezer compartment becomes colder. But the refrigerator compartment becomes warmer because less cold air flows into the refrigerator compartment.
- In **cold weather** the unit operates less and the freezer compartment has a tendency to warm up. For colder freezer, turn the TEMP. CONTROL to "4".
- If you take a lot of foods in the freezer or open its door frequently, its temperature is apt to be some what higher. In this case, set the TEMP. CONTROL dial 4 to cool it. Return the TEMP. CONTROL dial to the original position to cut down the consumption of energy.
- In **hot weather or to put much foods in the refrigerator compartment**, the refrigerator compartment has a tendency to warm up. For colder refrigerator, turn the TEMPCONTROL to "2" to direct more cold air into the refrigerator compartment. Setting at "4" of the TEMPCONTROL, the refrigerator compartment will not be cold enough.
- Knob 5 ~ 7 is for quick freezing in the freezer compartment. The refrigerator can be operated continuously or the refrigerator compartment can be warmer. When the quick freezing is finished, please return to set the Knob at Normal.

OPERATION

HYGIENE FRESH (OPTIONAL)

⚠ CAUTION


Before installing or using the product, make sure to read the owner's manual carefully to use the product accurately as intended. This HYGIENE FRESH filter has the antibacterial function of removing the virus or bacteria inside the refrigerator and the deodorizer function to remove the scent.

The function has tested and has been certificated by authorized institutions **Intertek**

ICE MAKING


Twisting Ice Serve Type

- To make ice cubes, fill the ice tray with water and insert in its position.
- To remove ice cubes, hold the knob of the tray and turn gently. Then, ice cubes drop in the ice cube box.
- You can remove the Twisting Ice Serve to make the freezer compartment larger.
- You should remove the ice Trays and Ice Cube Box first, then pull the frame out toward the right side.


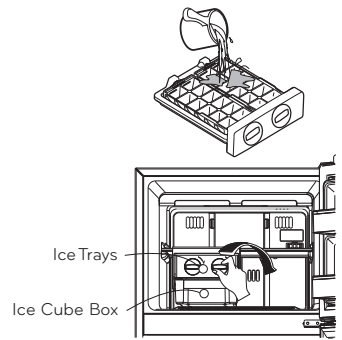


PULL OUT TRAY (OPTIONAL)

The pull out tray offers easy access to the rear of the food drawer by sliding the tray out.

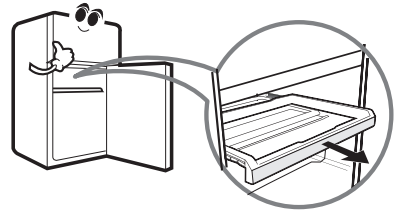


Please do not hold the bottom of the tray when slide the tray in, as it could catch your hand.

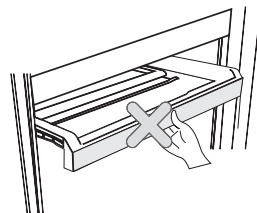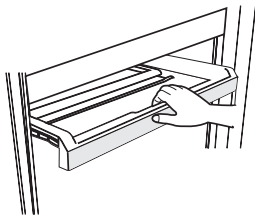

OPERATION

How to remove the Pull Out Tray

Fully extend the Pull-Out-Tray and lift the front then pull it out slowly.

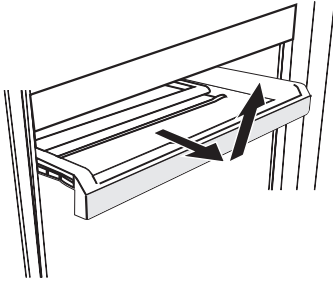

DEFROSTING

Defrosting takes place automatically.

The defrosted water flows down to the evaporating tray which is located in the lower back side of the refrigerator and is evaporated automatically.



DEODORIZER (OPTIONAL)

By using a catalyst, deodorizing performance is guaranteed.


Unpleasant odor of food in the fresh food compartment is deodorized with no harm to you and the food.

How to use

- As the catalyst is located in cooling air outlet for circulating air in fresh food compartment, there is no need to touch it.
- Do not prick the deodorizer with a sharp tip because the deodorizing catalyst may be damaged.
- When storing food with a strong odor, wrap it or store it in a container with a lid because the odor may be passed on to other foods.

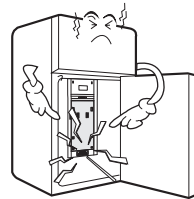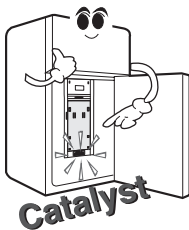

- To remove the deodorizer, take down while pulling it forward after inserting ⊖ type driver into the inside hole as shown in the figure at right.



SUGGESTIONS ON FOOD STORAGE

STORING FOOD

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food and lead to higher electric bills!
- When storing, cover food with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, causing temperatures to rise.

FREEZER COMPARTMENT

- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This deteriorates taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Avoid storing any food close to the bottom area of the freezer shelf to keep efficient air circulation.
- It is recommended to load food at least 15mm against back of freezer wall, it will keep good air circulation in the freezer compartment.
- Freezer Door Basket, marked (❄️) is -12°C compartment, that is suitable for short term storage of frozen food (optional).

REFRIGERATOR COMPARTMENT

- Avoid placing moist food deep inside refrigerator shelves, it could freeze upon direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh. Always store them in a upright position, which keeps them fresh longer.

CLEANING

It is important that your refrigerator be kept clean to prevent undesirable odors. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners, or strong alkaline solutions on any surface.

Before you clean, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or detergent to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

For products with a stainless steel exterior, use a clean sponge or soft cloth and a mild Detergent in warm water. Do not use abrasive or harsh cleaners. Dry thoroughly with a Soft cloth. Do not use appliance wax, bleach, or other products containing chlorine on stainless steel.

INTERIOR - Regular cleaning of the interior and interior parts is recommended. If you have the No

Frost model which defrosts automatically, leave both doors open during the entire cleaning process.

Disconnect the power supply, and remove food and all compartment shelves, storage trays etc.

Wash all compartments with a baking soda solution. Rinse and dry.

INTERIOR PARTS - Wash compartment shelves, door racks, storage trays, and magnetic door seals etc. with the baking soda solution or a mild detergent and warm water. Rinse and dry.

WARNING

Always remove power cord from the wall outlet prior to cleaning in the vicinity of electrical parts (lamps, switches, controls, etc.).

Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing a electric shock. Do not use flammable or toxic cleaning liquids.

GENERAL INFORMATION

VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation.

Place freezable items in freezer for longer life.

When you plan to be away for an extended period, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures.

However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

DRY ICE WARNING

When using dry ice, provide adequate ventilation.

Dry ice is frozen carbon dioxide (CO₂).

When it vaporizes, it can displace oxygen, causing dizziness, light-headedness, unconsciousness, and death by suffocation.

Open a window and do not breathe the vapors.

IF YOU MOVE

If you move, empty the refrigerator (freezer) completely and wash a mild solution of baking soda and water. (2 TBS soda to 1 quart water)

Be sure the soda is completely dissolved to avoid scratching the inside of the refrigerator (freezer). Secure any loose items, such as racks, bins, ice trays, etc. Do not try to move a loaded refrigerator.


ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed.

This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent sweating on the outer cabinet wall.

Anti-Condensation Pipe

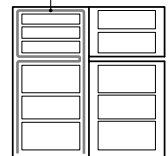

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Farm houses and by clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.
- Catering and similar non-retail applications.

LAMP REPLACEMENT

NOTE

- This product applies LED Lamp which can not be replaced by the user. Please contact authorized service centre for the lamp replacement.

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD

Use this appliance on a dedicated circuit; that is, an outlet that is the only outlet on the circuit. Overloading a circuit causes low voltage, malfunction, possible damage to the equipment, and poor cooling capacity. Check your local electric code or consult a qualified electrician if you have questions.

ACCESSIBILITY SUPPLY PLUG

The refrigerator-freezer should be so positioned that the supply plug is accessible for quick disconnection if an accident happens.

SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or replacement or a similarly qualified person in order to avoid a hazard.

ABOUT GROUNDING (EARTHING)


In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

DO NOT MODIFY OR EXTEND THE POWER CORD LENGTH

It will cause electric shock or fire.

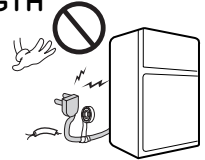

VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gaskets, latches, lids or the entire door from your unused appliance, or take some other action to make it harmless.

This appliance must be grounded (earthed).

DON'T WAIT! DO IT NOW!

Do not store inflammable materials, explosives or chemicals in the refrigerator.

WARNING

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

DISPOSAL OF THE OLD APPLIANCE

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.

All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

BEFORE CALLING FOR SERVICE

SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :


PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	<ul style="list-style-type: none">● Has a house fuse blown or circuit breaker tripped?● Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	<ul style="list-style-type: none">● Temperature control not set on proper position.● Appliance is placed close to wall or heat source.● Warm weather-frequent door openings.● Door left open for a long time.● Large amount of foods are kept in the refrigerator.
ABNORMAL NOISE(S)	<ul style="list-style-type: none">● Refrigerator is installed in a weak or uneven place, or leveling screw needs adjusting.● Unnecessary objects placed behind the refrigerator.
REFRIGERATOR HAS ODOR	<ul style="list-style-type: none">● Foods with strong odors should be tightly covered or wrapped.● Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	<ul style="list-style-type: none">● Not unusual during periods of high humidity.● Door may have been left ajar.

EARTH/GROUNDING CONSTRUCTION (OPTIONAL)

It is recommended to install the earth wire to prevent electric shock in case of electricity leakage.

How to connect the earth wire:

- Connect the earth wire's metal ring end to the earth screw on the back of the refrigerator.
- Peel off the cable sheath/insulation at the other end of the earth wire. Attach the peeled wire to a metal screw/nail and then drive it through the wall or ground.

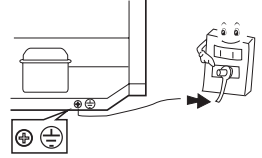

Do not connect the earth wire to the following locations.

- **Gas pipe**
It could produce sparks which lead to fire and explosion.
- **Telephone earth wire and lightning rod**
It is dangerous during lightning.
- **Water pipe and water tap**
The earth wire connection will not work when the middle of the water pipe is made of plastic.
If it is connected to a metal water pipe, it could cause someone to be electrocuted.

When installing the product in a humid or wet location, you must install the earth wire.

- Ex) • Unfloored or dirt floored room (Room with dirt and no floor), concrete floor
- Location where it can get wet such as near the sink
 - Location where water can leak or is humid such as basement
 - Other wet or humid location


Especially, for locations where it always get wet such as near the restaurant sink, you are obligated by the law to install a circuit breaker in addition to the earth wire.

After consulting with your retailer or electric construction company, you must do the earth wire construction (Type 3 earth construction). Please note that earth construction could incur extra fees.



التأريض (التوصيل الارضى) (اختياري)

ينصح بتوصيل السلك الارضى للحماية من الصدمات الكهربائية في حال تسريب الكهرباء

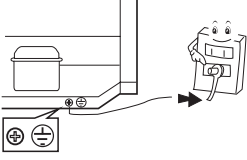

كيفية توصيل السلك الارضى :

- صل الحلقة المعدنية للسلك الارضى بالبرغي الارضى في ظهر التلاجة
- ازل غطاء الكابل من علي الطرف الاخر للسلك الارضى صل الجزء المعري من السلك الي البرغي المعدني و ثبت السلك علي الجدار و الارض

لا توصل السلك الارضى للاماكن التالية :

انابيب الغاز يمكن ان تولد شررا يؤدي للحرانق و الانفجارات, سلك الهاتف الارضى واسلاك الكهرباء, خطر اثناء البرق, انابيب و صنابير المياة, فتوصيل السلك الارضى لن يعمل ان كان اوسطها مصنوع من البلاستيك التوصيل بانابيب المياة المعدنية يمكن ان يؤدي للصعق بالكهرباء

عند تركيب المنتج بمكان رطب او مبلل لا بد من تركيب السلك الارضى امثلة كالآتي :

الغرف زات الاراضي الاسمنتية او المتسخة الاماكن التي يلحقها البلل بجانب الاحواض الاماكن التي يتسرب اليها الماء و الرطوبة كالبدروم

الاماكن التي غالبا ما تتعرض للبلل كاحواض المطاعم فانت مجبر بالقانون لتركيب دورة كسارة اضافة الي الاسلاك الارضية

بعد التشاور مع بائعك او شركة الكهرباء يجب عليك تشييد السلك الارضى (نوع رقم 3) ملاحظة : التركيب الارضى قد يتطلب رسوم اضافية

قبل استدعاء عامل الصيانة

من الممكن في أغلب الأحيان تجنب استدعاء عامل الصيانة !
إذا شعرت بأن ثلاجتك لا تعمل بشكل طبيعي ، افحص أو لا المسببات المحتملة الآتية :

المشكلة	الاسباب المحتملة
الثلاجة لا تشتغل	<ul style="list-style-type: none">• احتراق فيوز بالمنزل أو فصل قاطع الدائرة الكهربائية .• نزع أو ارتخاء الفيش من بريزة الحائط .
درجة الحرارة في حجيرة الثلاجة أو حجيرة الفريزر مرتفعة جدا .	<ul style="list-style-type: none">• لا يتم ضبط مقبض ضبط درجة الحرارة على الوضعية المناسبة.• وضع الجهاز قريبا من الجدار أو مصدر حراري .• تكرر فتح الباب في الطقس الحار .• ترك الباب مفتوحا لفترة طويلة .• تخزين كمية زائدة من الأطعمة في الثلاجة .
ضجيج غير عادي	<ul style="list-style-type: none">• الثلاجة مركبة في مكان ضعيف أو غير مستو أو أن صواميل الإستواء بحاجة لتعديل .• وضعت أشياء غير ضرورية في الجهة الخلفية من الثلاجة .
رائحة تنبعث من الثلاجة	<ul style="list-style-type: none">• الأطعمة قوية الرائحة يجب تغطيتها بإحكام أو لفها .• الأسطح الداخلية مطلوبة للتنظيف .
تكون ندى على سطح الثلاجة	<ul style="list-style-type: none">• هذا الأمر ليس بمستغرب عند ازدياد الرطوبة .• قد يكون باب الثلاجة ترك مفتوحا جزئيا .

تبديل اللمبة

ملاحظة

هذا المنتج يختص باللمبة LED و لا تستبدل بواسطة المستخدم و انما نرجو مخاطبة مركز الخدمة المرخصة استبدالها.

تحذيرات مهمة

لا تستعمل سلكا إضافيا

استخدم هذا الجهاز على مخرج تيار خاص له ؛ هذا يعني أن مخرج واحد يستخدم لهذا الجهاز فقط. التوصيل الزائد يؤدي إلى خفض الفولتية، الخلل، الضرر في الجهاز وضعف كفاءة التبريد. افحص سلك التيار الكهربائي المحلي أو اتصل بفني كهربائي للمشورة إذا كان عندك أسئلة.

الوصول السهل الى قابس التيار

جهاز الثلجة - الفريزر لا بد من تركيبه بحيث ان يمكنك وصول قابس التيار بسهولة للفصل السريع في حالة حدوث حوادث.

استبدال سلك التيار

في حالة تلف سلك التيار (شريط وصل التيار بالثلجة) ، كلف ورشة صيانة يعينها الصانع باستبداله لأن الأمر يستلزم استعمال عدد خاصة .


حول التأريض

من شأن التأريض في حالة حدوث عطل تماس تقليص خطر الصدمات الكهربائية خلال سلك لأفلات التيار الكهربائي .

وتفاديا لحدوث صدمة كهربائية ، لا بد من تأريض الثلجة .

إن سوء استخدام فيش التأريض قد يحدث صدمة كهربائية . استشر كهربائيا مؤهلا أو موظف صيانة في حالة عدم فهمك تعليمات التأريض ، أو إذا ما شككت في سلامة التأريض .

لا تقم بتعديل أو تمديد طول سلك الكهرباء .

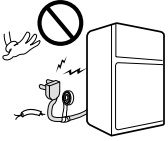

قد يتسبب ذلك في صدمة كهربائية أو حريق .

إجراء خطير للغاية

قد تكون الثلجة الفارغة مصدر إجراء خطير لأطفال. انزع طوق منع التسرب أو السقاطات أو الأغطية أو الباب بأكمله من جهازك غير المستعمل ، أو اتخذ إجراء آخر لإستبعاد ضرر الجهاز وأخطاره

لا بد من تأريض الثلجة .
لا تنتظر ، قم بذلك الآن .

لا تخزن مطلقا اشياء قابلة للاشتعال أو متفجرات وكيميائيات في الثلجة .

تحذير

هذه الأجهزة ليست معدة للاستخدام من قبل أشخاص (بمن فيهم الأطفال) يعانون من انخفاض في القدرات الجسدية، الحسية أو العقلية، أو من ليست لديهم الخبرة أو المعرفة بالاستخدام، إلا إذا أعطيت لهم إرشادات بشأن استخدام الجهاز أو أشرف عليهم شخص مسؤول عن سلامتهم يجب الإشراف على استخدام الأطفال لهذا الجهاز وضمان عدم اللعب به.

التخلص من الجهاز

يحتوي هذا الجهاز علي سوائل (سائل تبريد وزيت تشحيم) وهو مصنوع من أجزاء ومواد قابلة لإعادة الاستخدام و/أو إعادة التدوير. يجب إرسال جميع المواد الهامة إلى مركز تجميع النفايات، ومن ثم يمكن إعادة استخدامها بعد إعادة تصنيعها (إعادة التدوير). للاستعادة، يرجى الاتصال بالوكيل المحلي.

التنظيف

الأجزاء الداخلية -

اغسل أرفف الحجيرات وحاملات الأبواب وصواني التخزين وسدادات الأبواب المغنطة الخ ...
بمحلول بيكربونات الصودا أو منظف لطيف وماء دافئ. اشطف وجفف.

السطح الخارجي للثلاجة -

استخدم محلولاً دافئاً من صابون ناعم أو منظف لتنظيف السطح الخارجي للثلاجة . امسحه بقطعة قماش نظيفة رطبة ثم جففه .

تحذير

انزع دائماً الفيش من بريزة الحائط قبل تنظيف ما حول الأجزاء الكهربائية (لمبات، مفاتيح، ضوابط .. الخ). امسح الرطوبة الزائدة بإسفنجة أو قطعة قماش لمنع الماء أو السائل من التسرب لأي قطعة كهربائية لا تستعمل سوائاً قابلة للإشتعال أو سامة .

من المهم الإحتفاظ بثلاجتك نظيفة تفادياً للروائح غير المرغوب فيها . يجب المبادرة فوراً إلى مسح الطعام المسكوب لئلا يحمض ويلطخ السطوح البلاستيكية إذا ما ترسب .
لا تستعمل مطلقاً لبادات التنظيف أو الفرش أو المنظفات خشنة الحك أو المحاليل شديدة القلوية على أي سطح في الثلاجة .
تذكر قبل التنظيف بأن الأجسام الرطبة تلتصق بالأسطح الباردة . فلا تلمس الأسطح المتجمدة بأيدي مبتلة أو رطبة .

السطح الداخلي للثلاجة -

يوصى بتنظيف السطح والأجزاء الداخلية بشكل منتظم . إذا كانت ثلاجتك من الصنف الذي لا يولد جليد (NO FROST) والتي تذيب الجليد تلقائياً ، اترك بابيها مفتوحين أثناء عملية التنظيف .
افصل التيار الكهربائي واخرج الأطعمة وجميع الأرفف وصواني التخزين .. الخ . اغسل كافة الحجيرات والأرفف بمحلول بيكربونات الصودا . اشطف وجفف .

معلومات عامة

وقت الإجازة

أثناء العطلات غير الطويلة ، يستحسن ترك الثلاجة بحالة شغالة ، ضع الأشياء القابلة للتجمد في الفريزر لإطالة حياتها . أما إذا كنت تعزم تضيية إجازة طويلة فينصح بإزالة جميع الأطعمة وفصل التيار الكهربائي وتنظيف داخل الثلاجة جيداً وترك أبواب الثلاجة مفتوحة لمنع تكون الروائح .

انقطاع التيار

في أغلب الأحيان لا يستغرق انقطاع التيار أكثر من ساعة أو ساعتين ولن يؤثر ذلك في درجة حرارة الثلاجة . يستحسن أثناء انقطاع التيار عدم فتح باب الثلاجة بصورة متكررة ، أما إذا طال فترة انقطاع التيار فننصح بوضع لوح ثلج جاف فوق الطرود المجمدة .

تنبيه الثلج الجاف

في حالة استخدام الثلج الجاف، لا بد من التهوية المناسبة. والثلج الجاف يتكون من كربون ثاني أكسيد مجمد (CO₂) .

عند التبخير، تحول هذا إلى أكسيد، متسبباً في الفتور ، الصداع الخفيف ، فقد الوعي، والموت بسبب الاختناق .
افتح شباكاً ولا تتنفس البخار .


عند انتقالك إلى مسكن آخر

إذا أردت نقل الجهاز إلى مكان آخر، فرغ الثلاجة (الفريزر) تماماً واغسل الحجيرة بمحلول خفيف من صودا الخبز والماء . (ملعقتا طعام من صودا الخبز وربع الماء).
تأكد من إذابة صودا الخبز تماماً لتجنب الخدش في الأسطح الداخلية للثلاجة (الفريزر).
خذ عناية لكي لا تفقد المواد مثل الرفوف ، الصناديق، وصينية صنع ثلج ... الخ. لا تحاول نقل الثلاجة الممتلئة بالمواد.

انبوب مضاد للتكثيف :

المدار الخارجي للثلاجة قد يصبح دافئاً في بعض الأحيان ، وبخاصة بعد التركيب لا تنزعج . هذا ناتج عن الأنبوب المضاد للتكثيف الذي يضيخ غاز تبريد ساخن لمنع الإرتشاح على جدار الثلاجة الخارجي .

انبوب مضاد للتكثيف

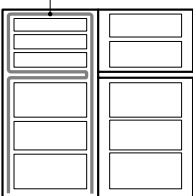

اقتراحات بشأن تخزين الأطعمة

تخزين الأطعمة

- ضع الأطعمة الطازجة في الثلاجة ، كيفية تجميد الأطعمة وإذابة الجليد عنها هو عامل مهم في المحافظة على نكهة الأطعمة وجودتها .
- لا تخزن الأطعمة التي تفسد بسهولة على درجات منخفضة ، مثل الموز والأناناس والبطيخ .
- اترك الأكل الساخن يبرد قبل وضعه في الثلاجة . إذ أن وضعه ساخنا قد يتسبب في فساد المأكولات الأخرى بالثلاجة وفي زيادة استهلاك الكهرباء .
- يراعى عند تخزين الأطعمة بالثلاجة لفها بورق فينيل أو وضعها في أنية بغطاء . فمن شأن ذلك منع الرطوبة من التبخر والمساعدة في اختفاظ الطعام بطعمه وفائدته الغذائية .
- لا تسد فتحات الهواء بالأطعمة. إذ ان دوران الهواء المبرد من شأنه المحافظة على انتظام درجة برودة الثلاجة.
- تجنب فتح باب الثلاجة بشكل متكرر . فإن من شأن ذلك دخول الهواء الساخن للثلاجة ورفع درجة حرارتها .

حجيرة الفريزر


- لا تضع القوارير داخل حجيرة التجميد، فقد تنكسر عند تجلدها.
- لا تجمد الأطعمة التي سبق وأذيب جمدها. إذ أن ذلك يتسبب في تحويل طعمها وفائدتها الغذائية.
- عند تخزين الأطعمة المجمدة مثل الأيسكريم لمدة طويلة ، ضعها على رف التجميد وليس على حامل باب التجميد.
- من المستحسن وضع الأطعمة بمسافة لا تقل عن 15 ملم من الجدار الخلفي للفريزر و ذلك لتهوئة الفريزر جيدا
- الوضع للتجميد - من الموصى به وضع الأغذية الجديدة على الموضع التالي من أجل التجميد . ومن الموصى
- سلة باب الثلاجة، العلامة (**) هي حجرة ب 12 درجة مئوية، و هي مناسبة للتخزين على المدى القصير للمواد الغذائية المجمدة (اختياري).

حجيرة الثلاجة

- تجنّب وضع أطعمة رطبة في أمكنة عميقة داخل أرفف الثلاجة، فقد تتجلد لدى تلامسها المباشر مع الهواء المبرد.
- نظف دائما الأطعمة قبل وضعها في الثلاجة . يجب غسل الخضار والفاكهة ومسحها وكذلك مسح الأطعمة المعلبة منعا لفساد ما يجاورها من مأكولات في الثلاجة.
- عند وضع البيض في حامل التخزين تأكد من أنها طازجة وضعها دوما في وضع عمودي حتى تبقى طازجة لفترة أطول.

التشغيل

كيفية إزالة الرف القابل للسحب بالكامل وارفعه من الأمام ثم اسحبه إلى الخارج ببطء.

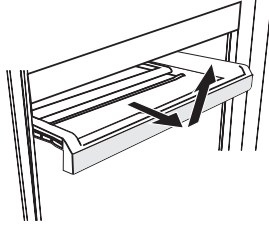

إذابة الجليد




- تجري إذابة الجليد أوتوماتيكيا.
- يسيل ماء من الاذابة الى صينية المبخر الموجودة في أسفل خلف الثلاجة ويتم تشغيل المبخر أوتوماتيكيا.

مزيل الروائح الكريهة (اختياري)

- بواسطة استخدام " حفاز البلاديوم، يتم ضمان ازالة الروائح الكريهة.
- تتم ازالة الروائح الكريهة للاطعمة في صندوق اللحم الطازج بدون اصابتك واصابة الاطعمة بضرر.

كيفية التشغيل

- في حالة وجود الحفاز في فتحة الهواء البارد لدوران الهواء في حجيرة الحفظ الطازجة، لا حاجة الى لمسه..
- لا تثقب فتحة الهواء البارد بشيء حاد مما قد يؤدي الى احداث ضرر في حفاز مزيل الروائح الكريهة.
- عند حفظ الاطعمة ذات الرائحة القوية، قم بتغطيتها أو حفظها في وعاء ذي غطاء لان هذه الرائحة تمر على الاطعمة الاخرى.

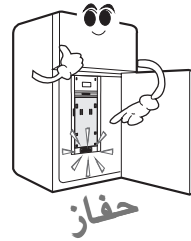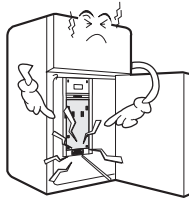

- لإزالة مزيل الرائحة، وجّهه إلى الأسفل مع سحبه إلى الأمام بعد إدخال نوع المشعل (⊖) في الثقب الداخلي كما هو مبين في الصورة على اليمين.


التشغيل

النظافة , الصحة المنعشة (اختياري)

⚠ تنبيه


قبل تثبيت أو استخدام المنتجات ، تأكد من قراءة دليل المالك بعناية لاستخدام المنتج بدقة على النحو المقصود. فلتر الصحة المنعش لديه وظيفة جديدة مضادة للجراثيم من إزالة الفيروس أو البكتيريا من داخل الثلاجة ومزيل للروائح. اختبرت وظيفته وكان معتمد من قبل المؤسسات المرخص لها في هذا المجال . Intertek

صنع الثلج

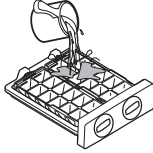

صينية صنع الثلج


صندوق المععبات الثلجية

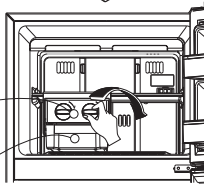



- لصنع المععبات الثلجية ، املا صينية صنع الثلج بالماء وادخلها في مكانها.
- لإخراج المععبات الثلجية ، امسك مقبض الصينية ودورها بسلس. عندها تخرج المععبات الثلجية من صندوق المععبات الثلجية.
- يمكنك سحب صينية صنع الثلج القابل للتدوير لجعل مساحة الفريزر أكبر.
- لا بد من إزالة صينية صنع الثلج وصندوق المععبات الثلجية أولاً ثم اسحب الإطار الى اليمين.

الرفّ القابل للسحب (اختياري)

يسهل الرفّ القابل للسحب إلى الخارج الوصول إلى خلف درج الطعام عبر تمرير الرفّ إلى الخارج.

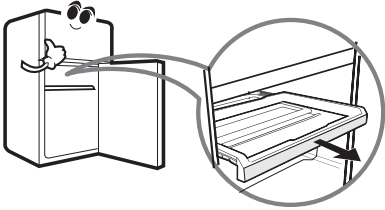

يرجى عدم الإمساك بالرفّ عند تمريره إلى الداخل، إذ يمكن أن يؤدي ذلك إلى إتلاف الرفّ.

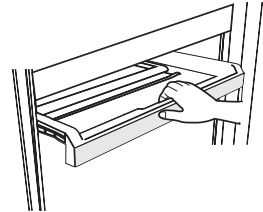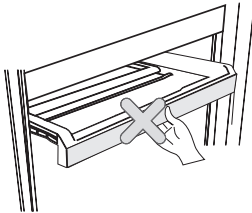

التشغيل

بدء التشغيل :


عند تركيب الثلاجة للمرة الأولى ، اتركها تستقر لمدة ساعتين إلى ثلاث ساعات على درجة حرارة التشغيل الإعتيادية قبل أن تملأها بالأطعمة الطازجة. وفي حالة انقطاع التشغيل ، انتظر خمس دقائق قبل إعادة تشغيلها.

التحكم في درجة الحرارة

- الثلاجة مكملة بلوحة التحكم لحرارة التبريد وحرارة الفريزر.
- الموقف الأول للتحكم حرارة حجرة التبريد هو موقف « 4 » .
- الضبط الأساسي لحلقة ضبط درجة الحرارة في حجييرة التجميد هو « 3 » .


ضبط درجة الحرارة

□ الثلاجة

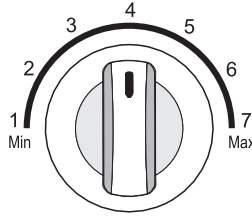

لزيادة البرودة ، اضبط مقبض الضبط على وضعية MAX (الأقصى) ولخفض البرودة ، اضبط مقبض الضبط على وضعية MIN (الأدنى).

□ فريزر

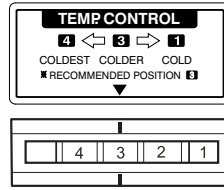

التحكم بدرجة الحرارة ٧،٦،٥،٤،٣،٢،١

يؤدي الضبط على "4" إلى تبريد حجرة الثلاجة أكثر في حين تصبح حجرة البراد أكثر دفءاً بسبب تدفق أقل للهواء البارد إليها. في الطقس البارد تعمل الوحدة أقل وتميل درجة حرارة حجرة الثلاجة إلى الارتفاع. لثلاجة أبرد، اضبط التحكم بدرجة الحرارة على "4". إذا كنت تُخرج الكثير من الطعام من الثلاجة أو تفتح بابها بشكل متكرر، تميل درجة حرارتها إلى الارتفاع بعض الشيء. في هذه الحال، اضبط مفتاح التحكم .

بدرجة الحرارة على 4 لتخفيضها. أدر مفتاح التحكم بدرجة الحرارة إلى الموضع الأصلي للحد من استهلاك الطاقة.

في الطقس الحار أو لوضع الكثير من الطعام في حجرة البراد تميل درجة حرارة حجرة البراد إلى الارتفاع. لثلاجة أبرد، اضبط التحكم بدرجة الحرارة على "2" لتوجيه هواء بارد أكثر إلى حجرة البراد. لن يكون ضبط مفتاح التحكم بدرجة الحرارة على "4" بارداً بشكل كافٍ.

مقبض الباب 6 ~ 7 هو لـ تجميد سريع في حجرة التجميد.

منذ ضبط درجة الحرارة في حجييرة التبريد وفي حجييرة التجميد عن طريق ضبط كمية من الهواء البارد، ستصبح حجييرة التبريد دافئة أكثر في حالة أن حجييرة التجميد أصبحت باردة أكثر.


جدول الأجزاء

حجيرة الفريزر

- صينية صنع الثلج القابلة للتدوير
- رف
- حلقة ضبط درجة الحرارة في الفريزر

حجيرة الثلاجة

- مزيل الروائح الكريهة (اختياري)
- الرف المتحرك (اختياري)
- التحكم في درجة الحرارة في الثلاجة بالكمبيوتر الصغير النظافة , الصحة المنعشة (اختياري)
- رفان
- درج الخضراوات يستخدم لحفظ الفواكه والخضراوات .. الخ طازجة ونضرة.

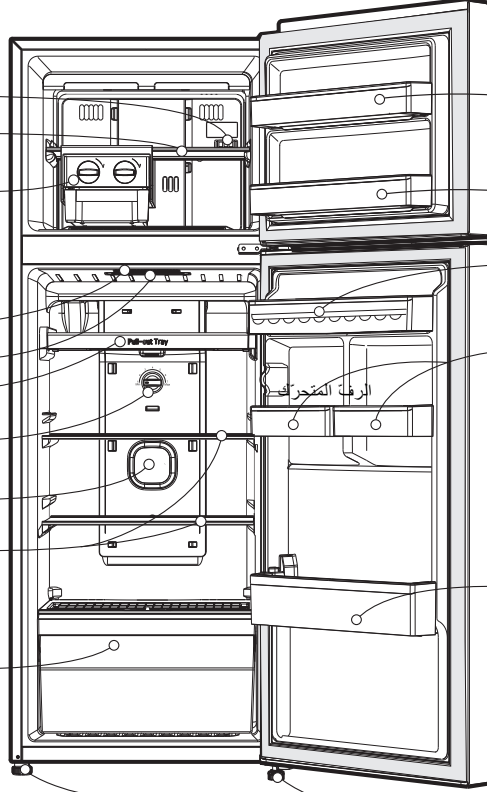

حاملان في باب الفريزر (اختياري) (**)

حاملان في باب الفريزر

حامل البيضات

البيض (اختياري)

حاملات في باب الثلاجة

براغي الاستواء

• ملاحظة جميع الأجزاء المبينة أدناه قد لا يتم تزويدها مع كل موديل.

صنعت هذه الثلاجة بعناية كبيرة من خلال استخدام أحدث ما وصلت إليه التكنولوجيا. ونحن على ثقة من أنها ستحوز على رضاكم التام أداءً وموثوقية. قبل البدء في تشغيل ثلاجتك، يرجى قراءة هذا الكتيب بتمعن وأناة. فقد تضمنت تعليمات دقيقة حول التركيب والتشغيل والصيانة، بالإضافة إلى بعض الملاحظات المفيدة.

التركيب

ثم

١. اختر مكانا مناسباً.
ضع جهاز الثلاجة بحيث يمكن استخدامه بسهولة.
٢. تجنب تركيب الجهاز قريباً من مصادر حرارة، أو أشعة الشمس المباشرة، أو الرطوبة.
٣. لا بد من توفر دورة هواء مناسبة حول ثلاجتك لضمان فاعلية التشغيل. إذا ما وضعتها في فجوة بالجدار، تأكد من وجود فراغ لا يقل عن ١٠ بوصات (٢٥ سم) أو أكثر أعلى الثلاجة وترك ما لا يقل عن بوصتين (٥ سم) من الجدار. من الضروري رفع الثلاجة بوصة واحدة (٢,٥ سم) أو أكثر عن الأرض وبخاصة إذا كانت الأرض مغطاة بالموكيت أو السجاد.
٤. لتجنب الاهتزاز، لا بد من تركيب الجهاز متساوياً.
عند اللزوم، اضبط صواميل الإستواء لضبط الإستواء للثلاجة في حالتها واضعة على أرض غير مستوية.
لا بد من أن يكون الجزء الأمامي من الثلاجة أعلى قليلاً من جزئها الخلفي لغلق الباب بلطف.
دور صوامل الاستواء باتجاه عقرب الساعة (⌚) لرفع الجهاز، وبتجاه معكاس عقرب الساعة (⌚) لخفضه.
٥. لا تركيب هذا الجهاز في مكان في درجة الحرارة أقل من ٥ م. هذا قد يؤدي إلى ضعف كفاءة الثلاجة.

تنبيه !

يؤدي مخالفة هذا الأمر إلى إصابة أو تلف المنزل أو الأثاث. يجب توخي الحذر دائما.

لا تضع يديك في أسفل الثلاجة.




فقد يتسبب اللوح
الحديدي الموجودة بقاع
الثلاجة في إصابتك.

لا تضع الثلاجة في مكان رطب أو مكان به رذاذ ماء أو مطر.




فقد يؤدي تلف عزل
الأجزاء الكهربائية إلى
تسرب كهربائي.

نظرا لأن فتح باب الثلاجة وإغلاقه قد يؤدي إلى إصابة الشخص الموجود بالقرب منه، فيجب توخي الحذر.

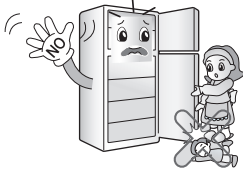

قد يؤدي فتح الباب
وإغلاقه إلى أن تعلق
القدم أو اليد في شقوق
الباب أو أن يصاب
الأطفال من الحافة
الجانبية.

احمل الثلاجة من عمود المقبض الموجود أسفل المقدمة وأعلى المؤخرة.

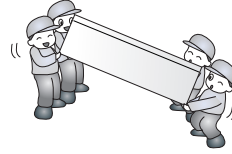


وإلا فقد تنزلق
يدك مما قد
يعرضك للإصابة.

لا تقم بتخزين المواد المتفجرة مثل علب البخاخات مع الوقود القابل للاشتعال في هذا الجهاز.

لا تضع أية حيوانات حية في الثلاجة.

وقد تسبب في قتل الحيوانات.

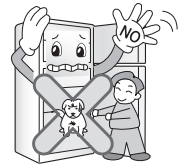

معلومات السلامة الهامة

2. عند استخدام الثلاجة


عندما تريد التخلص من الثلاجة يرجى الاتصال بمكتب التخلص من النفايات.



مكتب
التخلص من
النفايات


عندما تريد التخلص
من نفايات كبيرة
مثل الأجهزة المنزلية
والأثاث، فمن
الأفضل الاتصال
بمكتب التخلص من
النفايات.

لا تضع يدك أو عصي معدنية في مخرج الهواء البارد أو غطاء أو قاعدة الثلاجة أو الشبكة المقاومة للحرارة (فتحة العادم) في المؤخرة.

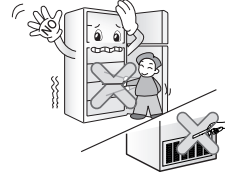

حيث قد يتسبب ذلك في صدمة كهربية أو إصابة.


لا تسمح للأطفال بالدخول داخل المنتج وذلك للخطورة على حياتهم

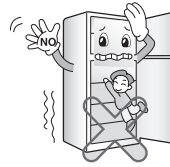

تنبيه !

يؤدي مخالفة هذا الأمر إلى إصابة أو تلف المنزل أو الأثاث. يجب توخي الحذر دائما.

انتظر لمدة 5 دقائق أو أكثر عند إعادة توصيل القابس.

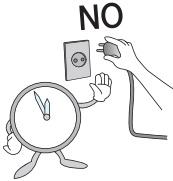

فقد يؤدي ذلك إلى فشل عملية التشغيل للفریزر.

لا تلمس الطعام أو العلب في الفريزر ويداك مبتلتان.



فقد يتسبب هذا في إصابة أنسجة الجسم.

عند سحب قابس التيار الكهربائي لا تمسكه من السلك ولكن من نهايته.



حيث قد يتسبب ذلك في صدمة كهربية أو قطع التيار الكهربائي أو نشوب حريق.

لا تضع زجاجة في الفريزر.



فقد تتجمد محتوياتها وتتسبب في الإصابة.

2. عند استخدام الثلاجة


عند وجود أية رائحة غريبة أو دخان من الثلاجة، افصل قابس التيار الكهربائي فوراً واتصل بمركز الخدمة.




لا ترش الماء داخل الثلاجة أو خارجها ولا تنظفها بالبززين أو مخفف الطلاء.




لا تستخدم الثلاجة لأغراض غير منزلية (كتخزين الأدوية أو مواد الاختبار أو استخدامها على سطح سفينة...الخ).

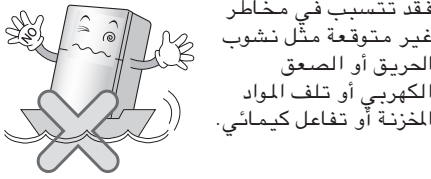

لا تسمح لأي شخص سوى المهندس المتخصص بفك الثلاجة أو إصلاحها أو تغييرها.

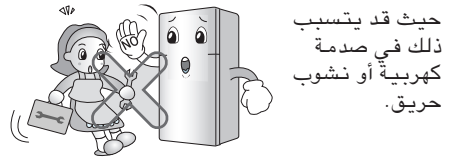


قم بتركيب الثلاجة على سطح صلب ومستوي.

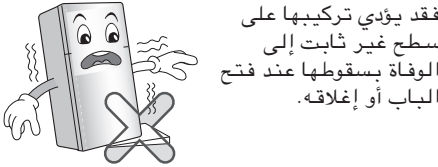


عند التخلص من الثلاجة، انزع مواد التغليف من على بابها.



لا تضع يديك أو عصي معدنية في مخرج الهواء البارد أو غطاء أو قاعدة الثلاجة أو الشبكة المقاومة للحرارة (فتحة العادم) في المؤخرة.

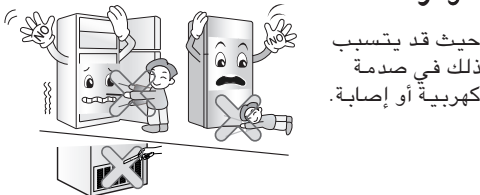


عندما يتم تسريب الغاز لا تلمس الثلاجة فقط أسرع بفتح منافذ التهوية في الغرفة لان هذا الغاز من انواع الغازات السامة ويمكن ان يحدث شرارة تسبب حرائق.

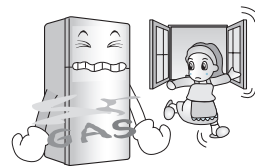

2. عند استخدام الثلاجة

لا تستخدم أو تخزن مواد سريعة الاشتعال مثل البنزين أو الكحول أو الأدوية أو غاز البروبان السائل أو الرذاذ أو أدوات التجميل بالقرب من الثلاجة أو في داخلها.

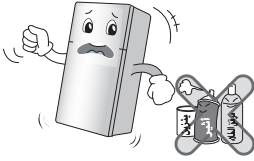


فقد يتسبب هذا في انفجار أو نشوب حريق.

لا تضع الثلاجة في مكان رطب أو مكان به رذاذ ماء أو مطر.




قد يتسبب تلف عازل الأجزاء الكهربائية في تسرب كهربائي.

لا تخزن الأدوية أو المواد الأكاديمية في الثلاجة.

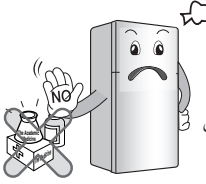

فعند تخزين مواد ذات درجات حرارة صارمة، فقد تتلف أو قد يحدث تفاعل غير متوقع مما يتسبب في وقوع مخاطر.


لا تضع الشمعة المخيطة داخل الثلاجة لإزالة الروائح منها.

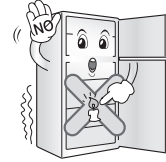


فقد يتسبب هذا في انفجار أو نشوب حريق.

تجنب أجهزة التسخين.

فقد يتسبب هذا في نشوب حريق.

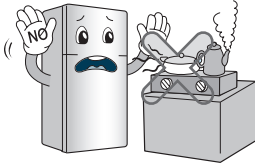


لا تستخدم الرذاذ القابل للاشتعال بالقرب من الثلاجة.

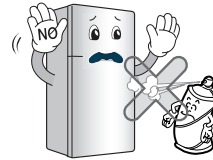

فقد يتسبب هذا في نشوب حريق.

لا تستخدم الثلاجة المغمورة بالمياه إلا بعد فحصها

حيث قد يتسبب ذلك في صدمة كهربائية أو نشوب حريق.

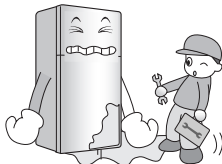


لا تضع أية أشياء مثل المزهريّة أو الأكواب أو أدوات التجميل أو الأدوية أو أية علب أخرى به سوائاً على الثلاجة.



حيث قد يتسبب ذلك في صدمة كهربائية أو إصابة عند سقوطها.

1. عند توصيل الجهاز بالتيار الكهربى

لا تجذب أو تلمس قابس التيار ويداك مبتلتان.

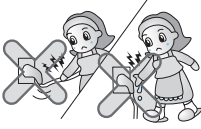

- حيث قد يتسبب ذلك في صدمة كهربية أو إصابة.

انزع قابس التيار الكهربى عند تنظيف الثلاجة أو نقلها أو استبدال المصباح الداخلى لها.



- حيث قد يتسبب ذلك في صدمة كهربية أو إصابة.
- عند استبدال المصباح الداخلى للثلاجة، تأكد من أن الحلقة المطاطية لمنه الشرر الكهربى الموجودة داخل القابس لم يتم نزعها.

افحص التأريض.


فقد يؤدي التأريض غير السليم إلى انقطاع التيار الكهربى أو صعق كهربى.



سلك التأريض


أكثر من 30 بوصة نحاس مستوى

امسح الماء أو الأتربة من على سلك التيار الكهربى وأدخله مع إحكام توصيل أطراف السنون.



فقد تؤدي الأتربة أو الماء أو التوصيل غير المحكم إلى نشوب حريق أو صعق كهربى.

عند تلف سلك التيار الكهربى أو قابس التيار الكهربى أو اتساع فتحات المقبس، لا تستخدمها.

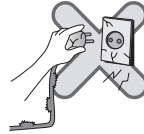

حيث قد يتسبب ذلك في صدمة كهربية أو قطع التيار الكهربى أو نشوب حريق.

2. عند استخدام الثلاجة

لا تتعلق بالباب أو أرفف الباب أو مقبض الفريزر أو غرفة التبريد.



فقد يتسبب ذلك في سقوط الفريزر أو تلف المقابض. ولا تسمح للأطفال خاصة بالتعلق بالباب.

لا تضع أبة أشياء ثقيلة أو خطيرة (علبة بها سوائل) على الثلاجة.



فقد تسقط وتتسبب في إصابة أو نشوب حريق أو صعق كهربى عند فتح الباب أو إغلاق.

احتياطات السلامة الأساسية

يحتوي هذا الدليل على رسائل السلامة الهامة. اقرأها دائما واتبعها.

هذا هو رمز السلامة. سوف انبهك إلى رسائل السلامة و أبلغكم الأخطار التي يمكن أن تؤذيك أو غيرها أو تتسبب في تلف المنتج. جميع رسائل السلامة سيسبقها رمز السلامة وإشارة الخطر متبوعة بكلمة «تحذير» أو «تنبيه». وهذه الكلمات تعني ما يلي:

تحذير ⚠️ سوف تؤذي و تصاب بجروح خطيرة إذا كنت لا تتبع التعليمات.

تنبيه ⚠️ تشير إلى موقف خطر وشيك والذي إذا لم يتم تجنبه قد يؤدي إلى إصابة طفيفة أو متوسطة أو تلف المنتج فقط.


ستحدد كل رسائل السلامة الخطر المحتمل وستخبركم بطريقة تقليل فرصة الإصابة أو ماذا سيحدث إذا لم يتم اتباع التعليمات.

تحذير

لتقليل خطر التعرض للنيران أو الصعق الكهربائي أو إصابة للأشخاص عند استخدام المنتج، يجب اتباع احتياطات السلامة الأساسية والتي تتضمن ما يلي:
اقرأ كل التعليمات قبل استخدام الجهاز.


1. عند توصيل الجهاز بالتيار الكهربائي

لا تسمح لقياس التيار الكهربائي بأن يكون متجاها لأعلى أو أن يتم الضغط عليه عند مؤخرة الثلاجة.

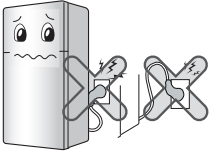

قد يُسكب الماء أو قد يتلف القابس مما يتسبب في نشوب حريق أو صعق كهربائي.

لا تستخدم مقابس كهربائية كثيرة

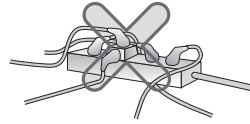

- قد يؤدي استخدام عدم أجهزة على مقبس واحد إلى اندلاع النيران.
- قد يتلف فاصل التسرب الكهربائي الطعام وقد يكون الموزع به تسرب.

لا تمدد أو تعدل طول قابس التيار الكهربائي.



فقد قد يتسبب ذلك في نشوب حريق أو صعق كهربائي.

لا تثني سلك التيار الكهربائي أو تضغط عليه بأية أشياء ثقيلة فقد يتلف.



وهو الأمر الذي قد يتسبب في نشوب حريق أو صعق كهربائي.

تحذير !

! حافظ علي منافذ التهوية بالجهاز خالية من اي انسدادات و الاجهزة المصممة داخل المباني (بيلت أن) المحافظة على التهوية

! لا تستعمل اجهزة ميكانيكية او وسائل اخري لتسريع عملية الذوبان غير الموصي بها من المصنع

! لا تتلف دورة غاز المبرد

! لا تستخدم اجهزة كهربائية بداخل قسم حفظ الاطعمة للجهاز الا الانواع الموصي بها من المصنع

! غاز المبرد و العازل المستخدم في الجهاز يتطلب وسائل خاصة للصيانة فعند الحاجة المرجو الاتصال بمكتب الخدمات او الاشخاص المؤهلين




الجهاز يحتوي علي كمية بسيطة من غاز الازوبوتين المبرد و هو غاز طبيعي بة توافق بيني ولكن قابل للاشتعال . اثناء نقل و تركيب الجهاز لا بد من الحرص علي انه لا يوجد اجزاء تالفة بدورة التبريد غاز المبرد المتسرب من الانابيب يمكن ان يشتعل او يضر بالعين و لذلك عند اكتشاف اي تسريب تجنب اي لهب او مصادر اشتعال اخري و قم بتهوية الغرفة المحتوية علي الجهاز لعدة دقائق.

من اجل تجنب اشتعال الغاز مع الهواء اذا حدث تسريب في دورة التبريد فان حجم الغرفة المحتوية للجهاز تعتمد علي كمية الغاز المبرد المستخدمة فمساحة الغرفة لا بد ان تكون 21 متر لكل 8 ج 600ل غاز مبرد داخل الجهاز كمية غاز المبرد بجهازك الخاص موضحة علي لوحة التعريف بداخل الجهاز , لا تستخدم الجهاز الواضح بة علامات اي خلل فان وجدت اي شك اتصل بالتاجر .

المحتويات

- ٣ معلومات السلامة الهامة
- ١٠ التركيب
- ١١ جدول الأجزاء
- ١٢ التشغيل
- بدء التشغيل
- قبل ضبط درجة الحرارة
- ضبط درجة الحرارة
- النظافة , الصحة المنعشة (اختياري)
- صنع الثلج
- الرفّ المتحرك (اختياري)
- إذابة الجليد
- مزيل الروائح الكريهة (اختياري)
- ١٥ اقتراحات حول تخزين الأطعمة
- ١٦ التنظيف
- ١٦ معلومات عامة
- ١٧ استبدال اللمبة
- ١٧ تحذيرات هامة
- ١٨ قبل استدعاء مهندس الصيانة
- ١٩ التلريض (التوصيل الارضى) (اختياري)

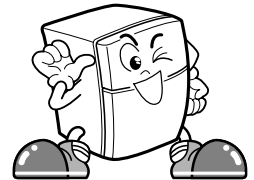



LG

Life's Good

ARABIC

ثلاجة – فريزر كتيب المالك

يرجى

قراءة كتيب التعليمات بعناية وأحذر شروط السلامة قبل
تشغيل الثلاجة والاحتفاظ به كمرجع لك في المستقبل