



Contact office for compliance of this product :  
LG Electronics Inc.  
EU Representative, Krijgsman 1,  
1186 DM Amstelveen, The Netherlands

English  
Svenska

LG Electronics, Inc  
**Wireless Charging Pad**  
**WCP-300** User Manual



**Rev 1.0 EU**  
All rights reserved.  
LG Electronics Inc., 2014





**LG**

Life's Good

LG Electronics, Inc

## **Wireless Charging Pad**

### **WCP-300** User Manual



All rights reserved.

LG Electronics Inc., 25th July 2014

Note: For optimal performance and to prevent any damage to, or misuse of the WCP-300, please read all of the information carefully before using the WCP-300.

Any modifications or changes to this manual due to typographical errors or inaccuracies of stated information shall only be made by LG Electronics Inc..

## Included in the Package

ENG



WCP-300  
(Wireless Charger)



\* Power  
Adapter



\* USB  
Cable



Warranty  
card




User Manual



WEEE Card

\* These items could be changed or excluded as it may chance.

## Description of Parts

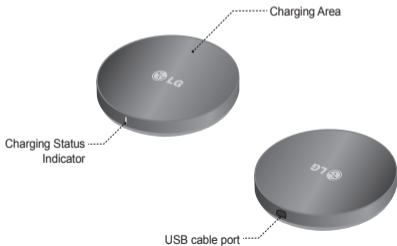

### Setup



- Connect the USB cable to the power adapter and plug it into an electrical socket.

### Charging



1. Make sure the USB cable and power adapter are connected and plugged into a electrical socket.
2. Place the device on the wireless charging pad.

**NOTE:** Make sure that the battery compartment (The center of the phone) is directly on the wireless charging pad. Otherwise, the device will not charge.

**NOTE:** The WCP-300 is compatible with all Qi certified devices.

## Charging Indicator

Function	WCP-300 Status	LED color
Operating	Power supply disconnected	Off
	Power supply connected	Solid Amber
Charging	Charging	Flickering Green
	Charging complete	Solid Green

## Precautions

- Do not drop the Wireless Charging Pad from high places.
- Do not modify, repair, or take the Wireless Charging Pad apart.
- Do not clean with water alcohol or benzene.
- Keep the Wireless Charging Pad away from humidity and dust.
- Do not place heavy objects on the Wireless Charging Pad.
- Do not place sharp objects near or on the Wireless Charging Pad.
- Keep Wireless Charging Pad away from any liquids, moisture or creams.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Item	Description
Input / Output	DC 5V, 1800mA / DC 5V, 1000mA
Charging time	< 4 hours (Based on 1500mAh Battery)
Operation temperature	-10°C ~ 60°C
Dimension	Φ 69.8mm(Dia.) X 11.9mm(H) , 62g

## Declaration of Conformity

FCC NOTICE TO USERS: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: BEJWCP300

# CE 1177

### Declaration of Conformity

Hereby, LG Electronics European Shared Service Center B.V., declares that this Wireless-charger WCP-300 is compliant with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete Declaration of Conformity may be requested through the following postal address:

LG Electronics European Shared Service Center B.V.  
European Standard Team  
Krijgsman 1  
1186 DM Amstelveen  
The Netherlands

or can be requested at our dedicated DoC email for Europe :  
doc-admin@lge.com

## Safety Instructions

**⚠ WARNING:** Failure to follow the instructions may cause serious injury and even death.

**⚠ CAUTION:** Failure to follow the instructions may cause injury to persons or damage to the product.

- Read the owner's manual carefully and keep it to hand.
- When disconnecting the power adapter, always remove with the plug, do not pull the wire by itself.
- Never handle the power adapter with wet hands, as this could cause fire or electric shock.
- Refer servicing to qualified personnel only.
- Do not open the housing
- Do not twist or pinch the USB cable while connected to the power adapter. If the USB cable or power adapter need to be replaced, ensure that they comply with the manufacturer's recommendation.
- Unplug the device during lightning storms and when unused for extended periods of time.

**When using an electrical device, especially when children are present, basic safety precautions should always be followed, including the following:**

### **DANGER to reduce the risk of electric shock**

- Always unplug the device from the electrical outlet before cleaning.
- Do not reach for a device that has fallen into water. Unplug it immediately.
- Do not place or store device where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.



**WARNING to reduce the risk of burns, fire, electric shock or injury to persons**

- Do not use with extension cord.
- Children should be closely supervised to ensure that they do not play with the device.
- Use this device only for its intended use as described in this manual. Do not use with unauthorized accessories of devices.
- Never operate this device if it has a damaged cord, plug, cable or housing. If it is not working properly, if it has been dropped or damaged, return it to the LG Service Center for examination and repair.
- Keep cord away from heated surfaces.
- This device is designed for indoor use only. Do not use outdoors.
- Only set on dry surfaces. Do not place on surface wet from water or cleaning solvents.
- Please do not put any metal substance like coin when charging. It can cause product damage and serious burns.





**LG**

Life's Good

LG Electronics Inc

## **Trådlös laddningsplatta**

**WCP-300** Användarhandbok



Med ensamrätt.  
LG Electronics Inc., 25 juli 2014

Obs! Läs all information noga innan du använder WCP-300, så får du bästa prestanda och undviker skador på WCP-300.

Ändringar i den här handboken på grund av tryckfel eller faktafel får endast utföras av LG Electronics Inc.

## Förpackningens innehåll

SV



WCP-300  
(Trådlös laddare)



\*Ströma-  
dapter



\*USB-kabel



Garan-  
tikort




Användarhand-  
bok



WEEE-kort

\* Dessa objekt kan ändras eller uteslutas.

## Beskrivning av delar

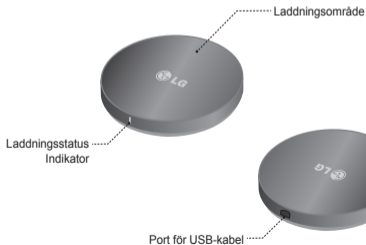

### Konfiguration



– Anslut USB-kabeln till strömadaptorn och anslut den till ett eluttag.

### Laddning



1. Kontrollera att USB-kabeln och strömadaptorn sitter i och är anslutna till ett eluttag.
2. Placera enheten på den trådlösa laddningsplattan.

**OBS!** Kontrollera att batterifacket (mitt på telefonen) ligger direkt mot den trådlösa laddningsplattan. Annars laddas enheten inte.

**OBS!** WCP-300 kan användas med alla Qi-certifierade enheter.

## Laddningsindikator

Funktion	WCP-300-indikatorlampa	färg
I drift	Strömförsörjning bortkopplad	Off (av)
	Strömförsörjning ansluten	Fast gult sken
Laddning	Laddning	Blinkande grönt sken
	Laddning slutförd	Fast grönt sken

## Säkerhetsåtgärder

- Undvik att tappa den trådlösa laddningsplattan från hög höjd.
- Du får inte ändra, reparera eller ta isär den trådlösa laddningsplattan.
- Rengör den inte med vatten, alkohol eller bensen.
- Utsätt inte den trådlösa laddningsplattan för fukt eller damm.
- Placera inga tunga föremål på den trådlösa laddningsplattan.
- Placera inga vassa föremål nära eller på den trådlösa laddningsplattan.
- Utsätt inte den trådlösa laddningsplattan för någon typ av vätska, fukt eller krämer.
- Ändringar eller modifikationer som inte uttryckligen tillåts av den part som ansvarar för regelefterlevnad kan göra att användarens rätt att använda utrustningen upphör att gälla.

Produkt-del	Beskrivning
Ineffekt/uteffekt	DC 5 V, 1 800 mA/DC 5 V, 1 000 mA
Laddningstid	< 4 timmar (baserat på 1 500 mAh-batteri)
Drifttemperatur	-10 °C ~ 60 °C
Mått	Φ 69,8 mm (dia.) x 11,9 mm (H) , 62 g

## Regelefterlevnad

FCC-MEDDELANDE TILL ANVÄNDARE: Den här enheten uppfyller artikel 15 i FCC-reglerna.

Användningen är underkastad följande två villkor:

- (1) Enheten får inte orsaka skadliga störningar, och
- (2) Enheten måste acceptera eventuell inkommande störning som kan orsaka att enheten inte fungerar normalt.

**OBS!** Den här utrustningen har testats och uppfyller kraven för klass B-digitalenheter, och uppfyller artikel 15 av FCC-reglerna. De här kraven har utformats för att ge tillräckligt skydd mot skadliga störningar i bostadsinstallationer. Den här utrustningen skapar, använder och kan utstråla radiofrekvensenergi. Om den inte installeras eller används i enlighet med instruktionerna kan det orsaka skadlig störning på radiokommunikationer. Men det finns inga garantier för att störningar inte sker i en viss installation. Om den här utrustningen skulle orsaka skadliga störningar på radio- och tv-mottagning, vilket kan fastställas genom att man slår på och av utrustningen, bör användaren försöka korrigera störningen genom en eller flera av följande åtgärder:

- Rikta om eller flytta mottagarantennen.
- Öka avståndet mellan utrustningen och mottagaren.
- Anslut utrustningen till ett annat uttag än den där mottagaren är ansluten.
- Be din återförsäljare eller en erfaren radio/tv-tekniker om hjälp.

FCC ID: BEJWCP300

# CE 1177

### Regelefterlevnad

Härmed intygar LG Electronics European Shared Service Center B.V. att den trådlösa WCP-300-laddaren uppfyller gällande regler och andra relevanta delar av direktiv 1999/5/EC. En fullständig försäkran om överensstämmelse kan beställas från följande adress:

LG Electronics European Shared Service Center B.V.  
European Standard Team  
Krijgsman 1  
1186 DM Amstelveen  
The Netherlands

eller via vår DoC-e-post för Europa på adressen:

[doc-admin@lge.com](mailto:doc-admin@lge.com)

**⚠ VARNING:** Följs inte instruktionerna kan det leda till allvarliga skador och till och med dödsfall.

**⚠ VARNING:** Följs inte instruktionerna kan det leda till person- eller produktskador.

- Läs användarhandboken noggrant och ha den nära till hands.
- När du kopplar bort strömadaptern ska du alltid hålla i kontakten, inte i själva sladden.
- Ta aldrig i strömadaptern med blöta händer – det kan orsaka brand och elektriska stötar.
- Låt endast kvalificerad personal utföra service.
- Öppna inte höljet.
- Se till att inte vrida eller klämma USB-kabeln när den är ansluten till strömadaptern. Om du behöver byta ut USB-kabeln eller strömadaptern bör du se till att följa tillverkarens rekommendation.
- Dra ur enhetens strömkabel under åskväder och när enheten inte ska användas under en längre tid.

**När du använder en elektrisk enhet, i synnerhet när barn finns i närheten, bör du vidta grundläggande försiktighetsåtgärder, bland annat följande:**

### **FARA: Minska risken för elstötar**

- Dra alltid ur strömkabeln innan du rengör enheten.
- Försök inte plocka upp en enhet som fallit ner i vatten. Koppla ur den omedelbart.
- Undvik att ställa eller förvara enheten så att den kan falla eller dras ned i ett badkar, handfat eller en diskho.
- Undvik att lägga eller tappa enheten i vatten eller annan vätska.



**VARNING: Minska risken för brännskador, brand, elstötar och personskador**

- Använd inte enheten med förlängningssladd.
- Håll noggrann uppsikt över barn så att de inte leker med enheten.
- Använd bara enheten till det avsedda syftet enligt den här handboken. Använd enheten enbart med godkända tillbehör och enheter.
- Använd inte enheten om det finns skador på sladd, kontakt, kabel eller skal. Om enheten inte fungerar som den ska eller om den har tappats eller skadats kan du lämna in den till LG:s servicecenter för undersökning och reparation.
- Håll sladdar borta från varma ytor.
- Enheten är endast avsedd för inomhusbruk. Använd den inte utomhus.
- Ställ den bara på torra ytor. Placera den inte på ytor som är blöta av vatten eller rengöringsmedel.
- Placera inga metallföremål, t.ex. mynt, på enheten under laddning. Det kan orsaka skador på produkten och allvarliga brännskador.

## MEMO

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....