



USER GUIDE

LG G5^{SE}
LG-H840

אודות מדריך למשתמש זה

תודה שבחרת מוצר זה של LG. קרא בעיון מדריך למשתמש זה לפני השימוש במכשיר בפעם הראשונה, כדי להבטיח שימוש בטוח והולם.

- השתמש תמיד באביזרים מקוריים של LG. הפריטים שסופקו מיועדים למכשיר זה בלבד וייתכן שהם לא תואמים למכשירים אחרים.
- מכשיר זה אינו מתאים לאנשים לקויי ראייה מפני שהמקלדת שלו נמצאת במסך המגע.
- התיאורים מבוססים על הגדרות ברירת המחדל של המכשיר.
- יישומי ברירת המחדל במכשיר כפופים לעדכונים, וייתכן שהתמיכה ביישומים אלה תופסק ללא כל הודעה מראש. אם יש לך שאלות כלשהן על יישום שסופק עם המכשיר, פנה למרכז שירות של LG. עבור יישומים שהותקנו על-ידי המשתמש, פנה לספק השירות הרלוונטי.
- שינוי מערכת ההפעלה של המכשיר או התקנת תוכנה ממקורות לא רשמיים עלול לגרום נזק למכשיר ולגרום להרס נתונים או לאובדן נתונים. פעולות אלה יפרו את הסכם הרישיון של LG ויבטלו את האחריות שלך.
- תכנים ואיורים מסוימים עשויים להיראות שונים מאלה שבמכשיר, בהתאם לאזור, לספק השירות, לגרסת התוכנה ולגרסת מערכת ההפעלה, והם כפופים לשינוי ללא הודעה מוקדמת.
- תוכנות, שמע, טפטים, תמונות ופריטי מדיה אחרים שסופקו יחד עם המכשיר שלך מורשים לשימוש מוגבל. אם תחלץ חומר זה ותשתמש בו למטרות מסחריות או אחרות, אתה עלול להפר חוקי זכויות יוצרים. כמשתמש, אתה נושא באחריות מלאה לשימוש לא חוקי במדיה.
- ייתכן שיחולו חיובים נוספים תמורת שירותי נתונים, כגון שליחת הודעות, העלאה, הורדה, סנכרון אוטומטי ושירותי מיקום. כדי למנוע חיובים נוספים, בחר תוכנית נתונים מתאימה לצרכיך. פנה אל ספק השירות לקבלת פרטים נוספים.

הודעות מנחות

אזהרה: מצבים שעלולים לגרום לפציעה של המשתמש ושל גורמי צד שלישי.



זהירות: מצבים שעלולים לגרום לפציעה קלה או לנזק למכשיר.



הערה: הערות או מידע נוסף.



תוכן העניינים

5 הנחיות לשימוש בטוח ויעיל

01

תכונות הניתנות להתאמה אישית

מכשיר מסוג מודולרי	13
Always On Display	13
מצב שימוש באור יום	14
עדשת זווית רחבה של 135°	15
שתי מצלמות	15
תמונות תבליט	16
צילום יציב	16
Smart Bulletin	17
Smart Notice	17
Smart cleaning	19
Quick Share	19
QuickRemote	20
QuickMemo+	22
QSlide	24
LG Health	25
נא לא להפריע	26
צלצול מותאם	26
זיהוי טביעת אצבע	27
שיתוף תוכן	30
הפעלה כפולה	32

02

פונקציות בסיסיות

רכיבי מוצרים ואביזרים	34
סקירה כללית של החלקים	35
הדלקה או כיבוי	37
התקנת כרטיס ה-SIM	38
הכנסת כרטיס הזיכרון	39
הוצאת כרטיס הזיכרון	40
סוללה	41
מסך המגע	46
המסך הראשי	49
נעילת מסך	56
הפעלה מאובטחת	59
הצפנת כרטיס זיכרון	60
יצירת צילומי מסך	61
הזנת טקסט	62

יישומים שימושיים

התקנה והסרת התקנה של יישומים	69
יישומים שהוסרו לאחרונה	70
טלפון	70
הודעות	73
מצלמה	74
גלריה	87
מחשבון	90
מזג אויר	90
הורדות	90
שעון	91
הקלטה קולית	92
נגן מוסיקה	93
דוא"ל	94
אנשי קשר	95
לוח שנה	97
מנהל הקבצים	98
משימות	99
Evernote	99
שירות התראות חירום	99
רדיו FM	99
LG Backup	100
SmartWorld	101
יישומי Google	102

Phone Settings (הגדרות טלפון)

הגדרות	105
רשתות	105
צליל והתראה	117
תצוגה	118
כללי	119

נספח

הגדרות השפה של LG	129
LG Bridge	129
עדכון תוכנת הטלפון	130
שאלות נפוצות	132
מדריך למניעת גניבה	135
מידע נוסף	136

הנחיות לשימוש בטוח ויעיל

הקפד לקרוא הנחיות פשוטות אלה. אי עמידה בהנחיות אלו עלולה להיות מסוכנת או בלתי חוקית.

למקרה של תקלה, המכשיר שלך מכיל כלי תוכנה שיאסוף יומן תקלות. כלי זה אוסף רק נתונים ספציפיים לתקלה, כגון עוצמת אות, מיקום מזהה התא בעת ניתוק פתאומי של השיחה ויישומים שנטענו. היומן משמש רק לסיוע בזיהוי הגורם לתקלה. יומנים אלה מוצפנים, ורק מרכז תיקונים מוסמך של LG יוכל לגשת אליהם במקרה שתצטרך למסור את המכשיר לתיקון.

חשיפה לאנרגיית תדר רדיו

מידע על חשיפה לגלי רדיו ושיעור ספיגה סגולית (SAR).

טלפון נייד זה מדגם LG-H840 תוכנן לעמוד בדרישות הבטיחות הרלוונטיות לחשיפה לגלי רדיו. דרישות אלו מבוססות על קווים מנחים מדעיים, ואלה כוללים שולי בטיחות המיועדים להבטיח את בטיחותם של כל בני האדם, בלא קשר לגילים או למצב בריאותם.

- הנחיות החשיפה לגלי רדיו משתמשות ביחידת מידה הנקראת "שיעור ספיגה סגולית" (SAR). בדיקות SAR מבוצעות באמצעות שיטות מתוקננות, כאשר הטלפון משדר ברמת העוצמה המרבית המאושרת עבורו בכל תחומי התדרים שבשימוש.
- אף כי עשויים להיות הבדלים בין רמות ה-SAR של דגמי טלפונים שונים של LG, כל הטלפונים מתוכננים לעמוד בהנחיות המתאימות של חשיפה לגלי רדיו.
- מגבלת ה-SAR המומלצת על-ידי הוועדה הבין-לאומית להגנה מפני קרינה בלתי מייננת (ICNIRP) היא ממוצע של 2 ואט/ק"ג על כל 10 גר' של רקמה.
- ערך ה-SAR הגבוה ביותר עבור דגם טלפון זה שנמדד לשימוש באזן הוא 0.788 ואט/ק"ג (10 גר'), וכאשר הוא נישא על הגוף, ערך זה עומד על 1.450 ואט/ק"ג (10 גר').

- מכשיר זה עומד בהנחיות החשיפה ל-RF כשמשמשים בו בתנוחת השימוש הרגילה ליד האוזן או כשהוא ממוקם לפחות 5 מ"מ מהגוף. כאשר נעשה שימוש בנרתיק נשיאה או בתפס או מנשא לחגורה, אסור שתהיה בהם מתכת כלשהי, והמרחק בין המכשיר לגוף צריך להיות לפחות 5 מ"מ. כדי לשדר קובצי נתונים או הודעות, מכשיר זה מחייב חיבור איכותי לרשת. במקרים מסוימים עלול שידור קבצי נתונים או הודעות להיות מושהה עד שחיבור כזה יהיה זמין. הקפד על שמירת הוראות המרחק המינימלי המוזכרות לעיל עד לסיום השידור.

טיפול במוצר ותחזוקה

- הקפד להשתמש בסוללות, במטענים ובאביזרים מקוריים של LG, המאושרים לשימוש בדגם טלפון ספציפי זה. השימוש בסוגים אחרים עשוי לבטל את האישור או האחריות החלים על הטלפון ועלול להיות מסוכן.
- חלק מהתוכן והאיוורים עשויים להיראות שונה מהמכשיר שברשותך, והם כפופים לשינוי ללא הודעה מראש.
- אין לפרק יחידה זו. כאשר נדרש תיקון, פנה לטכנאי שירות מוסמך.
- תיקונים במסגרת האחריות, לפי שיקול דעתה של LG, עשויים לכלול חלקים או לוחות חלופיים, חדשים או מחודשים, ובלבד שהם מצוידים בפונקציונליות זהה לזו של החלקים המוחלפים.
- אין לקרב את המכשיר למכשירים חשמליים כגון טלוויזיות, מכשירי רדיו ומחשבים אישיים.
- יש לשמור את היחידה הרחק ממקורות חום כדוגמת רדיאטורים או תנורי בישול.
- אין להפיל את היחידה.
- אין לאפשר זעזוע מכני או חבטה.
- יש לכבות את הטלפון בכל מקום שבו נדרש הדבר על-ידי תקנות מיוחדות. לדוגמה, אין להשתמש בטלפון בבתי חולים, שכן הפעלתו עלולה להשפיע על פעולת מכשור רפואי רגיש.
- אין לאחוז בטלפון בידיים רטובות בזמן הטענתו. אחיזה במצב כזה עלולה לגרום להתחשמלות ולהסב נזק כבד לטלפון.
- אין לטעון את הטלפון ליד חומר דליק, מכיוון שהמכשיר עלול להתחמם ולעלות באש.

- יש להשתמש במטלית יבשה לניקוי חלקו החיצוני של המכשיר (אין להשתמש בחומרים ממסים כגון בנזן, מדלל או אלכוהול).
- אין לטעון את הטלפון כאשר הוא נמצא על-גבי מצעים או ריפוד.
- יש לטעון את הטלפון באזור מאוורר היטב.
- אין לחשוף יחידה זו לכמות מוגזמת של עשן או אבק.
- אין להחזיק את הטלפון בסמוך לכרטיסי אשראי או כרטיסי נסיעה; הנתונים בפס המגנטי עלולים להיפגם.
- אין להקיש על המסך באמצעות חפצים חדים, שכן הדבר עלול לגרום נזק לטלפון.
- אין לחשוף את הטלפון לנזלים או ללחות.
- יש לנקוט זהירות בשימוש באביזרים, כמו אוזניות. אין לגעת באנטנה שלא לצורך.
- אם זכוכית המכשיר שבורה או סדוקה, אל תיגע בה או תנסה להסיר אותה ואל תשתמש במכשיר. האחריות אינה מכסה נזקים שנגרמו לתצוגת הזכוכית כתוצאה מפגיעה ושימוש לרעה.
- הטלפון שלך הוא מכשיר אלקטרוני המייצר חום במהלך הפעלה רגילה. בהיעדר אוורור הולם, מגע ישיר וממושך מאוד של העור עלול לגרום לאי-נוחות או לכוויות קלות. לפיכך, יש לנקוט זהירות בהחזקת הטלפון במהלך ההפעלה או מיד אחריה.
- אם הטלפון נרטב, נתק אותו מיד והנח לו להתייבש לגמרי. אל תנסה להאיץ את תהליך הייבוש בעזרת מקור חום חיצוני, כמו תנור, מיקרוגל או מייבש שיער.
- הנזלים שחדרו לטלפון ישנו את צבע תווית המוצר שבתוך המכשיר. כתב האחריות אינו מכסה נזק למכשיר כתוצאה מחשיפה לנזלים.

תפעול יעיל של הטלפון

מכשירים אלקטרוניים

כל הטלפונים הניידים עלולים לספוג הפרעות שישפיעו לרעה על ביצועיהם.

- אין להשתמש בטלפון הנייד בסמוך לציוד רפואי ללא קבלת רשות. יש להימנע מהנחת הטלפון מעל לקוצב לב, למשל בכיס החזה.
- טלפונים ניידים עלולים להפריע לעזרי שמיעה מסוימים.
- הפרעה משנית עלולה להשפיע על מכשירי טלוויזיה, מכשירי רדיו, מחשבים וכולי.
- השתמש בטלפון שלך בטמפרטורות שבין 0°C ו- 35°C , אם ניתן. חשיפת הטלפון לטמפרטורות נמוכות או גבוהות באופן קיצוני עלולה לגרום לנזק, לתקלות או אפילו לפיצוץ.

בטיחות בדרכים

בדוק את החוקים והתקנות הנוגעים לשימוש בטלפונים ניידים באזורים שבהם אתה נוהג.

- אין להחזיק את הטלפון ביד בזמן נהיגה.
- יש להפנות את מלוא תשומת הלב לנהיגה.
- רד לשול הדרך וחנה לפני ביצוע שיחה או מענה לשיחה, בהתאם לתנאי הדרך.
- אנרגיית תדר רדיו עשויה להשפיע על מערכות אלקטרוניות מסוימות בכלי רכב, כדוגמת מערכות סטריאו וציוד בטיחות.
- אם המכונית מצוידת בכרית אוויר מתנפחת, אין לחסום אותה על-ידי התקנה של ציוד אלחוטי נישא. הדבר עלול לגרום לכשל של הכרית או לפציעה חמורה עקב ביצועים לא נאותים שלה.
- אם אתה מאזין למוסיקה בעת תנועה, ודא שהעוצמה היא ברמה סבירה, כך שתמשיך להיות מודע לסביבתך. הדבר חשוב במיוחד בקרבת כבישים.

מנעו נזק לשמיעתכם

כדי למנוע נזק אפשרי לשמיעה, אל תאזין בעוצמות קול גבוהות לאורך זמן.



חשיפה לעוצמות קול גבוהות במשך פרקי זמן ארוכים עלולה להזיק לשמיעה. לכן אנו ממליצים שלא תדליק או תכבה את המכשיר סמוך לאוזןך. מומלץ גם להגדיר את עוצמת הקול של המוסיקה והשיחה לרמה סבירה.

- כאשר אתה משתמש באוזניות, הנמך את עוצמת הקול אם אינך מצליח לשמוע את האנשים שבסביבתך מדברים, או אם האדם שלצדך יכול לשמוע את מה שאתה שומע באוזניות.

- עוצמת קול מופרזת מאוזניות פנימיות ואוזניות חיצוניות עלולה לגרום לאובדן שמיעה.



חלקי זכוכית

חלקים מסוימים של ההתקן הנייד עשויים מזכוכית. זכוכית זו עלולה להישבר אם המכשיר ייפול על משטח קשה או יקבל מכה חזקה. אם הזכוכית נשברת, אל תנסה לגעת בה או להסיר אותה. יש להפסיק להשתמש בהתקן הנייד עד להחלפת הזכוכית על-ידי ספק שירות מורשה.

סביבה שבה מבוצעות עבודות עם חומרי נפץ

אין להשתמש בטלפון באזורים שבהם מתבצעות פעולות פיצוץ. שים לב להגבלות ועמוד בכל התקנות או הכללים.

סביבה שבה קיימת סבירות לפיצוץ

- אין להשתמש בטלפון באזורי תדלוק.
- אין להשתמש בו בסמוך לדלק או לכימיקלים.
- אין להוביל או לאחסן גז דליק, נוזלים דליקים או חומרי נפץ בתא הרכב המכיל את הטלפון הנייד או את אביזריו.

כלי טיס

- התקנים אלחוטיים עלולים לגרום להפרעה במטוס.
- יש לכבות את הטלפון הנייד לפני העלייה למטוס.
- אין להשתמש בו על הקרקע ללא קבלת רשות מאנשי הצוות.

ילדים

- יש לשמור על הטלפון במקום בטוח, מחוץ להישג ידם של ילדים קטנים. המכשיר כולל חלקים זעירים העלולים להוות סכנת חנק אם ינותקו מהטלפון.

שיחות חירום

- רק רשתות סלולריות מסוימות מאפשרות לבצע שיחות חירום. לפיכך, בשום מקרה אין לסמוך רק על הטלפון לביצוע שיחות חירום. בדקו את הנושא עם חברת הסלולר המקומית.

מידע לגבי הסוללה והטיפול בה

- אין צורך לפרוק את הסוללה במלואה לפני טעינתה מחדש. בניגוד למערכות סוללה אחרות, אין השפעת זיכרון שעלולה להשפיע על ביצועי הסוללה.
- יש להשתמש אך ורק בסוללות ובמטענים של LG. מטעני LG מיועדים למרב את חיי הסוללה.
- אין לפרק או לקצר את הסוללה.
- יש לשמור על ניקיון מגעי המתכת של הסוללה.
- יש להחליף את הסוללה כאשר היא אינה מפיקה עוד רמת ביצועים סבירה. ניתן לטעון מחדש את מארז הסוללה מאות פעמים לפני שיהיה צורך להחליפו.
- כדי למרב את שמישות הסוללה, טענו אותה מחדש אם לא הייתה בשימוש במשך זמן רב.
- אין לחשוף את מטען הסוללה לאור שמש ישיר או להשתמש בו בתנאי לחות גבוהה, כמו חדר אמבטיה.

- אין להשאיר את הסוללה במקומות חמים או קרים, שכן הדבר עלול לפגום בביצועיה.
- סכנת התפוצצות אם הסוללה הוחלפה בסוג סוללה שאינו מתאים. השלך סוללות משומשות בהתאם להוראות.
- אם עליך להחליף סוללה, קח אותה למרכז השירות המורשה הקרוב של LG Electronics או לספק לצורך קבלת סיוע.
- יש לנתק תמיד את המטען מהשקע לאחר שהטלפון נטען במלואו כדי למנוע בזבז מיותר של חשמל מצד המטען.
- אורך חיי הסוללה בפועל תלוי בתצורת הרשת, בהגדרות המוצר, באופי השימוש, בתנאי הסוללה ובתנאים הסביבתיים.
- הקפד שלא ייווצר מגע בין הסוללה לבין פריטים חדים כגון שיניים או ציפורניים של בעל חיים. מגע כזה עלול לגרום לשריפה.



01


**תכונות הניתנות
להתאמה אישית**

מכשיר מסוג מודולרי

תוכל לנצל את הפונקציונליות המודולרית שהמכשיר מספק כדי להשתמש בתכונות שונות שמספקים אביזרים שונים.

הוצא את המודול מחרץ המודול שבמכשיר. לאחר שתוציא את המודול תוכל להחליף את הסוללה או לחבר אביזר אחר לחרץ המודול כדי להשתמש בתכונות ספציפיות שאותו אביזר מספק.

- לפרטים, ראה **הסרת הסוללה** וכן **התקנת הסוללה**.
- קיימת אפשרות להוסיף אביזרים זמינים, הנקראים LG Friends.
- כדי לרכוש אביזרים אופציונליים, פנה למרכז שירות הלקוחות של LG.
- האביזרים הזמינים עשויים להשתנות, בהתאם לאזור או לספק השירות.

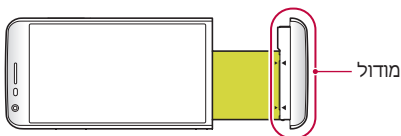

Always On Display

תוכל להציג את התאריך, השעה, החתימה או מידע אחר על המסך, גם כאשר המסך הראשי כבוי. Always On Display היא תכונה שימושית המאפשרת לבדוק מה השעה לעתים קרובות ולהציג את החתימה שלך.

1 הקש על  < **הגדרות** < **תצוגה** < **Always-on display** ולאחר מכן החלק את  כדי להפעיל את האפשרות.

- שימוש ב-Always-on display יאיץ את התרוקנות הסוללה. השבת תכונה זו כדי להאריך את חיי הסוללה.



1 הקש על < הגדרות < תצוגה < Always-on display ולאחר מכן החלק את כדי להפעיל את האפשרות.

- ייתכן שתכונה זו כבר מופעלת במכשיר כברירת מחדל בעת רכישתו. 
- הגדרת ברירת המחדל עשויה להשתנות בהתאם לאזור ולספק השירות.

2 הקש על **הגדר מה יוצג** ובחר פריטים להצגה על המסך הכבוי.

- **שעה:** הצג תמיד את השעה הנוכחית, גם כאשר המסך כבוי.
- **חתימה:** הצג את החתימה שלך במקום השעה הנוכחית במסך הכבוי. השתמש באפשרות **קבע חתימה** כדי להזין חתימה ולשנות את הגופן.

- ודא שהחתימה לא חורגת משדה הקלט. 

מצב שימוש באור יום

ניתן להשתמש בתכונה המתקדמת IPS Quantum Display כדי לראות את המסך בבהירות בתנאי אור יום כשהשמש זורחת.



עדשת זווית רחבה של 135°

תוכל להשתמש בעדשת הזווית הרחבה כדי לצלם תמונות בטווח רחב יותר מאשר רוחב שדה הראייה בפועל. תכונה זו שימושית לצילום של תמונה או סרטון בתוך נוף או לצילום של שטח רחב מתוך מקום צר. תוכל לצלם קו רקיע מתפרס, קונצרט באיצטדיון הומה אדם, חוף שלם, כל דבר אחר שנראה לעין ועוד הרבה יותר.

• לפרטים, ראה **מעבר למצלמה הכפולה**.



שתי מצלמות

ניתן להשתמש בשתי המצלמות הנמצאות בגב המכשיר כדי לצלם מגוון תמונות וסרטוני וידאו, החל בצילום סצנות מקרוב מאוד ועד לצילום סצנות המתפרסות על שטח נרחב. פשוט בצע באצבעותיך תנועת צביטה או פריסה על המסך.

• לפרטים, ראה **מעבר למצלמה הכפולה**.

תמונות תבליט

ניתן ליצור תמונות הנראות כאילו נתחמו במסגרת: תוכל לצלם תמונה רגילה ותמונה בזווית רחבה בו-זמנית. צור תמונה שתכלול כנגד ארבעת אפקטי המסגרת הבאים: עין הדג, שחור-לבן, האפלת פינות וטשטוש עדשה.

• לפרטים, ראה *Pop-out Picture*. 



צילום יציב

ניתן להשתמש בתכונת הצילום היציב כדי לצמצם את מידת הטשטוש הנוצרת כתוצאה מתנועה בעת צילום תמונה או סרטון וידאו. תכונה זו מבצעת ייצוב אוטומטי של התמונה או של צילום הווידאו כשאתה נמצא בתנועה. הקש על  כדי להפעיל תכונה זו.



Smart Bulletin

תוכל להוסיף מסך ראשי שאוסף ומציג תוכן ומידע שימושיים. הצג במבט מהיר חדשות עיקריות מ-Smart Bulletin. אינך צריך להוסיף וידג'ט נוסף או להפעיל יישום.

- 1 הקש על  < הגדרות < תצוגה < מסך ראשי < Smart Bulletin ולאחר מכן החלק את  כדי להפעיל את האפשרות.

- Smart Bulletin נמצא בלוח השמאלי של המסך הראשי.

- 2 הגדר את Smart Bulletin באמצעות פריטי התפריט הזמינים.

- כדי לסדר מחדש את פריטי התפריט המוצגים ב-Smart Bulletin, הקש הקשה ממושכת על  ולאחר מכן גרור למעלה או למטה.
- כדי להציג או להסתיר פריט בתפריט Smart Bulletin, גרור את .

• כדי לשנות את התצורה של Smart Bulletin, הקש על  ב-Smart Bulletin.



Smart Notice

תוכל להשתמש ב-Smart Notice כדי לקבל מידע שימושי לפי המיקום שלך והשעה. וידג'ט זה מנתח את הסביבה ואת דפוסי השימוש היומיים שלך כדי לספק לך מידע שימושי לפי שעה ומיקום ספציפיים.

השתמש ב-Smart Notice כ:

- תזכורות אוטומטיות להוספת מספרים בשימוש נפוץ שלא נשמרו לאנשי קשר.
- תזכורות אוטומטיות לביצוע שיחה אל מספר שלא החזרת אליו צלצול לאחר ששלחת הודעת דחייה.
- תזכורות אוטומטיות ליום הולדת של איש קשר שנשמר בלוח השנה וברשימת אנשי הקשר.

- תזכורות אוטומטיות לניקוי קבצים זמניים, קבצים שהורדו ויישומים לא היו בשימוש במשך פרק זמן ספציפי.
- תזכורות אוטומטיות להתאמה אישית של הגדרות המכשיר בהתאם לדפוס ולמקום שבו אתה משתמש במכשיר.
- תזכורות אוטומטיות לחיסכון בחשמל כאשר צריכת הסוללה גבוהה.

הפעלת Smart Notice

תוכל להוסיף את הווידג'ט Smart Notice אם לא נוסף כברירת מחדל או אם נמחק מהמסך הראשי. כדי להוסיף את הווידג'ט, בצע את הפעולות הבאות:

1 במסך הראשי, הקש הקשה ממושכת על אזור ריק ולאחר מכן הקש על **וידג'טים**.

2 הקש הקשה ממושכת על **Smart Notice**, ולאחר מכן גרור אותו למיקום אחר במסך הראשי.

- הווידג'ט Smart Notice יופיע במסך הראשי ופונקציות התזכורות האוטומטיות יופעלו, עם סקירה כללית המסבירה אותן.

- הקש על ⚙️ במסך הווידג'ט כדי לשנות את הגדרות Smart Notice כרצונך או כדי לבחור פריטים שאתה מעוניין לקבל עליהם תזכורות אוטומטיות באמצעות Smart Notice.

- ייתכן שהתכונה Smart Notice כבר מופעלת כברירת מחדל במכשיר החדש שרכשת.

- הגדרת ברירת המחדל עשויה להשתנות בהתאם לאזור או לספק השירות.




Smart cleaning

תוכל למחוק קבצים זמניים או יישומים שכבר אינך משתמש בהם.

1 הקש על ○ < הגדרות < כללי < Smart cleaning.

2 השתמש בפונקציות הרצויות.

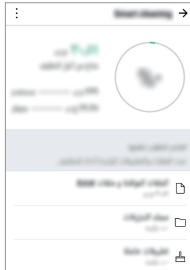

Quick Share


תוכל לשתף תמונה או סרטון וידאו עם היישום הרצוי מיד לאחר הצילום.

1 הקש על ○ < , ולאחר מכן צלם תמונה או הקלט סרטון וידאו.

2 גרור את סמל Quick Share המופיע מיד לאחר צילום התמונה או הסרטון ובחר את היישום שבאמצעותו תשתף את מה שצילמת.

לחלופין, לחץ לחיצה ארוכה על סמל Preview שיופיע לאחר שתצלם תמונה או סרטון וידאו וגרור אותו אל סמל Quick Share.

- היישום שסמל Quick Share מציג עשוי להשתנות בהתאם לסוג ולתדירות הגישה שלך אל היישומים המותקנים במכשיר.
- היעזר בתכונה זו רק בעת צילום של תמונה או סרטון וידאו במצב אוטומטי. לפרטים, ראה **מצב אוטומטי**.

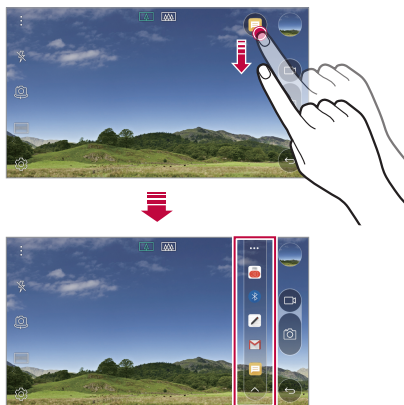

QuickRemote

סקירה כללית של QuickRemote

תוכל לשלוט במכשירים אלקטרוניים רבים במיקומים שונים על-ידי שימוש במכשיר כשלט רחוק.

- תכונה זו משתמשת באותות אינפרא-אדום (IR) ופועלת בצורה דומה מאוד לשלט רחוק. בעת שימוש ב-QuickRemote, הקפד להשאיר את חיישן האינפרא-אדום שנמצא בפינה הימנית העליונה של המכשיר גלוי.
- ייתכן שלא תהיה תמיכה בתכונה והיא עשויה להשתנות בהתאם לאזור, לספק השירות או ליצרן של המכשיר.

רישום מכשיר לשימוש כשלט רחוק

תוכל לרשום מכשיר שבו ברצונך לשלוט מרחוק עם המכשיר שלך.

- 1 הקש על $\bigcirc < LG < \text{QuickRemote}$.
- 2 הקש על $\equiv$ כדי לציין היכן ברצונך להשתמש בשלט רחוק.
- 3 הקש על $+$ ובחר את הסוג והיצרן של המכשיר שברצונך לשלוט בו מרחוק.
- 4 פעל בהתאם להוראות המוצגות על המסך כדי לוודא שהתכונה QuickRemote פועלת כראוי במכשיר.

יצירת שלט רחוק אוניברסלי

כאשר המכשיר שבו אתה מעוניין לשלוט באמצעות המכשיר שלך לא קיים ברשימה, יש לך אפשרות ליצור שלט אוניברסלי מותאם אישית על-ידי סידור הלחצנים שבהם אתה משתמש בתדירות גבוהה לפי ההעדפות שלך.

- 1 הקש על $\bigcirc < LG < \text{QuickRemote}$.
- 2 הקש על $\equiv$ כדי לציין היכן ברצונך להשתמש בשלט רחוק.
- 3 הקש על $+$ **שלט אוניברסלי**.
- 4 הזן שם של שלט רחוק והקש על **אישור**.
- 5 הקש הקשה ממושכת על הלחצן הרצוי, ולאחר מכן גרור אותו למיקום הרצוי.
- 6 הקש על **הבא**.
- 7 פעל על פי ההנחיות שבמסך כדי לרשום לחצנים ולאחר מכן הקש על **שמור**.

סקירה כללית של QuickMemo+

תוכל להוסיף הערות יצירתיות על-ידי שימוש במגוון אפשרויות בתכונה מתקדמת זו של פנקס רשימות, כגון ניהול תמונות וצילומי מסך, שאינה נתמכת על-ידי פנקס הרשימות הקונבנציונלי.

יצירת הערה

- 1 הקש על  < QuickMemo+.
- 2 הקש על  כדי ליצור הערה.
 -  : שמור הערה.
 -  : בטל את הפעולה האחרונה.
 -  : בצע שוב את הפעולה האחרונה שביטלת.
 -  : הזן הערה על-ידי שימוש בלוח המקשים.
 -  : כתוב הערות באופן ידני.
 -  : מחק הערות שנכתבו בכתב יד.
 -  : הגדל או הקטן תצוגה, סובב או מחק חלקים מהערה בכתב יד.
 -  : קבל גישה לאפשרויות נוספות, כולל שיתוף הערות ונעילתן, שינוי הסגנון של פנקס רשימות והוספת תוכן.
- 3 הקש על  כדי לשמור את ההערה.

כתיבת הערות על תמונה

- 1 הקש על  < QuickMemo+.
- 2 הקש על  כדי לצלם תמונה ולאחר מכן הקש על **אישור**.
 - התמונה מצורפת באופן אוטומטי לפנקס הרשימות.
- 3 כתוב הערות על התמונה בצורה חופשית.
- 4 הקש על  כדי לשמור את ההערה.

כתיבת הערות על צילום מסך

- 1 תוך הצגת המסך שברצונך לצלם, גרור את שורת המצב כלפי מטה והקש על **Capture+**.
 - צילום המסך נראה עמו ערכת נושא ברקע של פנקס הרשימות. כלי מזכר מופיעים בחלקו העליון של המסך.
- 2 רשום הערות על המסך שצילמת.
 - כדי לחתוך ולשמור חלק מהמסך, הקש על  וסמן חלק באמצעות כלי החיתוך.
 - כדי לצרף צילום מסך לפנקס רשימות, הקש על **T**.
- 3 הקש על  ושמור את ההערות במיקום הרצוי לך.
 - ניתן להציג הערות שמורות ב- **QuickMemo+** או ב- **גלריה**.
 - כדי לשמור הערות באותו מיקום כל הזמן, סמן את התיבה **השתמש כברירת מחדל לפעולה זו** ובחר יישום.

ניהול תיקיות

תוכל להציג הערות בחלוקה לפי סוג ההערה.

- 1 הקש על  < **QuickMemo+**.
- 2 בחלק העליון של המסך, הקש על  ובחר פריט תפריט:
 - **כל התזכירים**: הצג את כל ההערות שנשמרו ב- **QuickMemo+**.
 - **התזכירים שלי**: הצג הערות שנוצרו על-ידי **QuickMemo+**.
 - **מזכר תצלום**: הצג הערות שנוצרו על-ידי .
 - **Capture+**: הצג הערות שנוצרו על-ידי **Capture+**.


- **קטגוריה חדשה:** הוסף קטגוריות.
-  : סדר מחדש, הוסף או מחק קטגוריות. כדי לשנות שם של קטגוריה, הקש על הקטגוריה.

-  תיקיות מסוימות לא מופיעות בעת הפעלת QuickMemo+ בפעם הראשונה. תיקיות מושבתות מופעלות ומופיעות כאשר הן מכילות הערה קשורה אחת לפחות.

QSlide

ניתן להפעיל יישומים באמצעות QSlide כדי להשתמש בהם בזמן שימושים אחרים כבר פועלים. לדוגמה, השתמש במחשבון או בלוח השנה כאשר סרטון וידאו מופעל.
כאשר יישום פועל, בחר : **QSlide**.

-  ייתכן שתכונה זו אינה נתמכת בחלק מהיישומים.

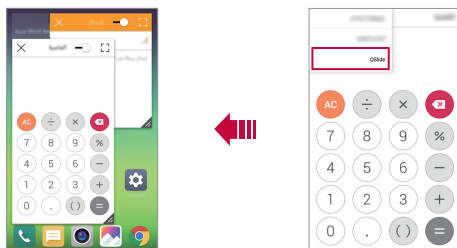

-  : כדי לעבור למצב מסך מלא, השבת את מצב QSlide.
-  : כוונן את מידת האטימות של חלון QSlide. כאשר חלון QSlide שקוף, הוא לא מגיב לקלט מגע.
-  : סגור את חלון QSlide.
-  : התאם את הגודל של חלון QSlide.

LG Health

סקירה כללית של LG Health

תוכל לנהל ענייני בריאות ולשמור על הרגלי אימון טובים על ידי ניהול מעקב אחר אימוני הכושר שלך.

צעדים ראשונים עם LG Health


תוכל להגדיר את LG Health בעת הפעלת היישום בפעם הראשונה, או לאחר ההפעלה הראשונה.

- 1 הקש על < LG Health.
- 2 פעל לפי ההוראות שעל המסך כדי להשלים את קביעת התצורה.

שימוש ב-LG Health

תוכל להציג מידע ראשי ב-LG Health ולנהל את כמות האימון הגופני ואת נתוני הבריאות.

- 1 הקש על < LG Health.
- 2 בצע את הפעולות הבאות:

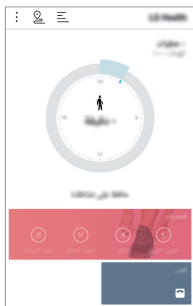

- ≡ : הצג את יומן האימונים של היום הרצוי.
- 📍 : התחל לעקוב אחר אימון כושר. המסלול והיקף התרגול הגופני שלך יתועדו עבור כל סוג של אימון.
- ⋮ : הגדר יעדי אימון יומיים, כולל קלוריות וצעדים, או קבע הגדרות שונות ב-LG Health.

תכונות הניתנות להתאמה אישית



- המידע בנושאי בריאות המסופק על-ידי LG Health משמש כמידע כללי לנוחות המשתמש ולא ניתן להשתמש בו למטרות מניעת מחלות, טיפול, אבחון או בעיות רפואיות אחרות.
- היישום LG Health עשוי להשתנות או לא להיות זמין, בהתאם למדינה ולספק השירות. הפונקציות של LG Health הזמינות והיישומים שניתן להוסיף ל-LG Health עשויים להשתנות, בהתאם למדינה. הבדלים אלה נובעים כתוצאה מהבדלים בחוקים ובתקנות.

נא לא להפריע

תוכל להגביל או להשתיק התראות כדי למנוע הפרעות במשך פרק זמן מסוים.

1 הקש על  < הגדרות < צליל והתראה < נא לא להפריע ולאחר מכן החלק את  כדי להפעיל את האפשרות.

2 הקש על **צלילים ורטט** ובחר את המצב הרצוי:

- **עדיפות בלבד:** קבל התראות קוליות או התראות ברטט עבור היישומים שנבחרו. התראות ימשיכו להישמע גם כאשר הפונקציה **עדיפות בלבד** מופעלת.
- **שקט מוחלט:** השבת את הקול והרטט.

צלצול מותאם

תוכל להגדיר את המכשיר כך שישמיע רינגטון שחובר באופן אוטומטי עבור כל שיחה נכנסת מאנשי הקשר שנבחרו. פונקציה זו שימושית משום שתדע לפי הצלצול בדיוק מי מתקשר אליך.

1 הקש על  < הגדרות < צליל והתראה < **צלצול מותאם** ולאחר מכן החלק את  כדי להפעיל את האפשרות.

2 הקש על **עריכת רינגטונים עבור** ובחר באפשרות הרצויה.



- רינגטון ברירת המחדל מושמע לשיחות נכנסות מאנשי קשר פרט לאיש הקשר שנבחר.

זיהוי טביעת אצבע

סקירה כללית של זיהוי טביעת אצבע

כדי להשתמש בפונקציה לזיהוי טביעות אצבע, רשום תחילה טביעת אצבע במכשיר שלך.

תוכל להשתמש בפונקציה לזיהוי טביעות אצבע במקרים הבאים:

- לביטול נעילת המסך
- להצגת תוכן נעול בגלריה או ב-QuickMemo+
- בעת אישור רכישה או כניסה ליישום, גע בחיישן טביעת האצבע כדי לזהות את עצמך.

- טביעות אצבע שלך ייחודיות לך והן אינן משתנות לאורך חייר. משום כך אתה יכול להשתמש בטביעות אצבע לזיהוי משתמשים במכשיר. ייתכן שטביעות אצבעות דומות מאוד של משתמשים שונים יזוהו על-ידי חיישן טביעת האצבע כאותה טביעת אצבע. כדי לשפר את אבטחת המכשיר, הגדר נעילת מסך באמצעות תבנית, קוד PIN או סיסמה.
- אם טביעת האצבע שלך לא זוהתה או אם שכחת את קוד ה-PIN המשמש לגיבוי, הבא את המכשיר שלך אל מרכז שירות הלקוחות הקרוב ביותר של LG ובנוסף, רשום טביעת אצבע מחדש וצור קוד PIN חדש לגיבוי.

אמצעי זהירות לזיהוי טביעת אצבע

רמת הדיוק של זיהוי טביעת האצבע עלולה להיפגע. כדי להבטיח זיהוי ברמת דיוק מרבית, בדוק את הפריטים הבאים לפני השימוש במכשיר.

- מקש ההפעלה/נעילה של המכשיר כולל חיישן טביעת אצבע. ודא שלא נגרם נזק למקש ההפעלה/נעילה על-ידי חפץ מתכתי, כמו מטבע או מפתח.
- רישום או זיהוי של טביעת אצבע עלול שלא לפעול במקרה של מים, אבק או חומרים אחרים על מקש ההפעלה/נעילה או על האצבע. הקפד להניח על החיישן אצבע נקייה ויבשה כדי לאפשר זיהוי טביעת אצבע.

- ייתכן שטביעת האצבע לא תזוהה כראוי אם יש צלקת על כרית האצבע או שהיא לא חלקה כתוצאה מהשריה במים.
- אם האצבע שלך מקופלת או שהנחת רק את קצה האצבע באופן חלקי בלבד, ייתכן שהזיהוי לא יצלח. ודא שהאצבע מכסה את משטח מקש ההפעלה/נעילה במלואו.
- סרוק אצבע אחת בלבד בכל רישום. סריקה של יותר מאצבע אחת עשויה להשפיע על הרישום והזיהוי של טביעת האצבע.
- במקרה של יובש בסביבה, המכשיר עלול ליצור חשמל סטטי. הימנע מסריקת טביעות אצבע בסביבה יבשה; לחלופין, גע בחפץ מתכתי (כמו מטבע או מפתח) לפני הסריקה, כדי לפרוק חשמל סטטי.

רישום טביעות אצבע

תוכל לרשום ולשמור את טביעת האצבע שלך במכשיר כדי להשתמש בזיהוי באמצעות טביעת אצבע.

1 הקש על < הגדרות < כללי < טביעות אצבע ואבטחה < טביעות אצבע.


- כדי להשתמש בתכונה זו, ודא שמוגדרת נעילת מסך. אם לא הוגדרה נעילת מסך, הגדר נעילת מסך עכשיו. לפרטים, ראה **קבע הגדרות נעילת מסך**.



2 אתר את מקש ההפעלה/נעילה בגב המכשיר והנח עליו בעדינות אצבע אחת כדי לרשום את טביעת האצבע.

- לחץ בעדינות על מקש ההפעלה/נעילה כדי לאפשר לחיישן לזהות את טביעת האצבע שלך. לחיצה חזקה מדי על מקש ההפעלה/נעילה עלולה להפעיל את פונקציית נעילת המסך או לכבות את המסך.
- ודא שקצה האצבע מכסה את משטח החיישן של מקש ההפעלה/נעילה במלואו.



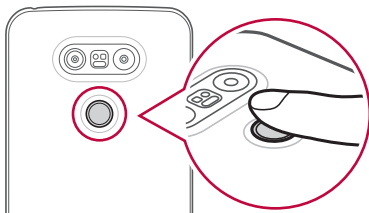

- 3 פעל בהתאם להוראות המוצגות על המסך.
 - חזור על סריקת טביעת האצבע על-ידי הזזת האצבע בקצב איטי ביותר עד שטביעת האצבע תירשם.
- 4 בסיום תהליך הרישום של טביעת האצבע, הקש על **אישור**.
 - הקש על **הוסף עוד** כדי לרשום טביעת אצבע נוספת. אם רשמת טביעת אצבע אחת בלבד ומצב האצבע לא תקין, ייתכן שהזיהוי לא יפעל היטב. כדי למנוע מצב כזה, עדיף לרשום מספר טביעות אצבע.

ניהול טביעות אצבע

תוכל לערוך או למחוק טביעות אצבע רשומות.

- 1 הקש על **○** < **הגדרות** < **כללי** < **טביעות אצבע ואבטחה** < **טביעות אצבע**.
- 2 בטל את הנעילה בהתאם לשיטת הנעילה שצוינה.
- 3 מרשימת טביעות האצבע, הקש על טביעת האצבע כדי לשנות את שמה. כדי למחוק אותה, הקש על **✕**.

ביטול נעילת המסך עם טביעת אצבע

תוכל לבטל את נעילת המסך או להציג תוכן נעול בעזרת טביעת אצבע. הפעל את הפונקציה הרצויה:

- 1 הקש על  < הגדרות < כללי < טביעות אצבע ואבטחה < טביעות אצבע.
- 2 בטל את הנעילה בהתאם לשיטת הנעילה שצוינה.
- 3 במסך הגדרות טביעת אצבע, הפעל את הפונקציה הרצויה:
 - **נעילת מסך**: בטל את נעילת המסך עם טביעת אצבע.
 - **נעילת תוכן**: בטל את נעילת התוכן עם טביעת אצבע. לשם כך, ודא שמנעול התוכן מוגדר.

שיתוף תוכן

הפעלת תוכן ממכשיר אחר.

תוכל להפעיל תמונות, סרטוני וידאו או שירים שנשמרו במכשיר באמצעות מכשיר טלוויזיה.

- 1 חבר את הטלוויזיה והמכשיר שלך לאותה רשת Wi-Fi.
- 2 בזמן הצגת הפריטים מהיישום **גלריה** או **נגן מוסיקה**, הקש על  או על **> מנגן מוסיקה בהתקן אחר**, ולאחר מכן בחר מכשיר טלוויזיה שאליו תרצה להתחבר.

• עבור Chromecast, שירותי Google Play חייבים להיות עדכניים. 

הצגת תוכן ממכשירים סמוכים

באפשרותך להציג תוכן ממגוון מכשירים, כגון מחשב, NAS או מכשיר נייד, באמצעות היישומים **גלריה** או **נגן מוסיקה**.

חיבור המכשירים

חבר את המכשיר שלך ומכשיר אחר, התומכים שניהם בפונקציה DLNA, לאותה רשת אלחוטית.

• ודא שהאפשרות (DLNA) File sharing מופעלת הן במכשיר והן במכשיר המחובר.



חיפוש מכשירים סמוכים

באפשרותך להציג רשימה של מכשירי DLNA באותה רשת על-ידי בחירה בכרטיסייה **מכשירים סמוכים** בכל יישום. השתמש בתוכן ממכשירים סמוכים כאילו היית משתמש בו במכשיר שלך.

שליחה או קבלה של קבצים

באפשרותך לשתף קבצים בין המכשיר שלך ומכשיר LG אחר, או טאבלט או מחשב.

שליחת קבצים

מתוך היישום **גלריה**, **מנהל הקבצים** או **נגן מוסיקה**, הקש על : < **שתף** או על , ולאחר מכן בחר מכשיר ברשימת שיתוף הקבצים.

קבלת קבצים

גרור את שורת המצב מטה, ולאחר מכן בצע אקטיבציה ל**שיתוף קבצים**.

אם המכשיר שלך אינו תומך בתכונת שיתוף הקבצים, הקש על  **הגדרות** < **רשתות** < **שתף והתחבר** < **שיתוף קבצים** < **SmartShare Beam**.

שליחת קבצים למחשב

אתה יכול לשלוח במהירות קבצים גדולים למחשב.

- 1 התקן את LG Bridge במחשב.
- 2 הפעל את LG Bridge במחשב, ולאחר מכן היכנס באמצעות חשבון LG שלך.
- 3 הקש על  < **הגדרות** < **רשתות** < **שתף והתחבר** < **LG AirDrive**, ולאחר מכן היכנס באמצעות חשבון LG שלך.

• באפשרותך להוריד את LG Bridge מאתר האינטרנט של LG Mobile (www.lg-mobile.co.il).



צפייה בתוכן מהענן

תוכל להציג ישירות את התוכן השמור בחשבון הענן שלך, בלי להוריד אותו אל המכשיר.

- 1 ביישום **גלריה** או **נגן מוסיקה**, בחר **מנהל הקבצים**, app, select <  **ענן**.
- 2 בחר חשבון ענן והיכנס.
- 3 שמור או הפעל תוכן בענן.

הפעלה כפולה

באפשרותך להציג את מסך המכשיר במכשיר תצוגה המחובר בחיבור אלחוטי, ולהשתמש ביישומים שונים במכשיר בו-זמנית. השתמש בשיתוף מסך עבור החיבור.

• תכונה זו אינה זמינה עבור תכנים מסוימים בחלק מהיישומים.





02

פונקציות בסיסיות

רכיבי מוצרים ואביזרים

ודא שאף אחד מהפריטים הבאים לא חסרים:

- מכשיר
- סוללה
- פין שליפה
- אוזניות סטריאו
- כבל USB
- מטען
- מדריך להתחלה מהירה





- הפריטים המתוארים לעיל עשויים להיות אופציונליים.
- הפריטים הכלולים באריזת המכשיר והזמינות של כל אביזר עשויים להשתנות בהתאם לאזור ולספק השירות.
- השתמש תמיד באביזרים מקוריים של LG Electronics. השימוש באביזרים המיוצרים על-ידי יצרנים אחרים עלול להשפיע על ביצועי השיחות של המכשיר או לגרום לתקלות. ייתכן ששירות התיקונים של LG אינו מכסה דבר זה.



- אם אחד מהפריטים הבסיסיים הללו חסרים, פנה למשווק שממנו רכשת את המכשיר.
- כדי לרכוש פריטים בסיסיים נוספים, פנה למרכז שירות הלקוחות של LG.
- כדי לרכוש פריטים אופציונליים, פנה למרכז שירות הלקוחות של LG לקבלת רשימה של משווקים זמינים.
- פריטים מסוימים בקופסת המוצר כפופים לשינוי ללא הודעה מוקדמת.
- המראה והמפרטים של המכשיר כפופים לשינוי ללא הודעה מוקדמת.

סקירה כללית של החלקים

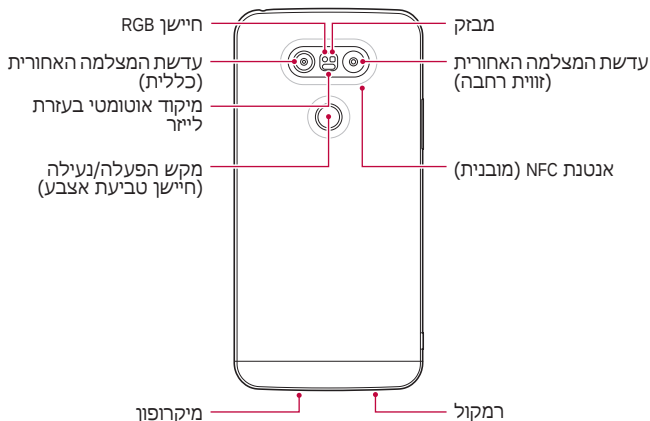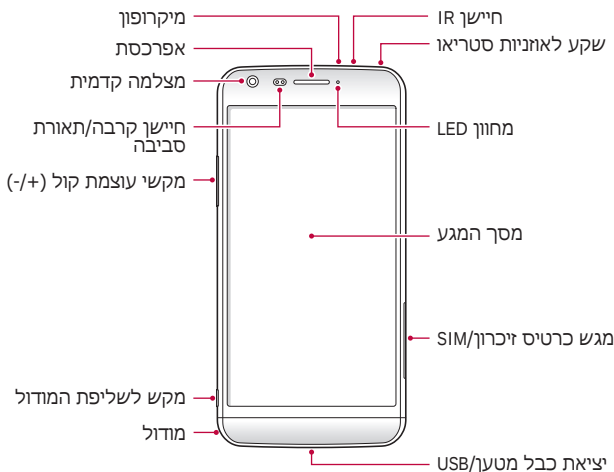

- חיישן קרבה/תאורת סביבה
 - חיישן קרבה: במהלך שיחה, חיישן הקרבה מכבה את המסך ומשבית את פונקציונליות המגע כאשר המכשיר צמוד לגוף. הוא מפעיל בחזרה את המסך והופך את פונקציונליות המגע לזמינה כאשר המכשיר נמצא מחוץ לטווח ספציפי.
 - חיישן תאורת הסביבה: חיישן תאורת הסביבה מנתח את עוצמת תאורת הסביבה כאשר מצב בקרת בהירות אוטומטית מופעל.
- מיקוד אוטומטי בעזרת ליזר
 - מזהה את המרחק מהמצלמה אל האובייקט המצולם כדי לאפשר מיקוד אוטומטי.
 - מתמקד במהירות בחפצים קרובים יותר או רחוקים יותר כאשר נעשה שימוש במצלמה האחורית לצילום תמונות.
- מקשי עוצמת קול
 - כוונן את עוצמת הקול של רינגטונים, שיחות או התראות.
 - לחץ בעדינות על מקש עוצמת הקול כדי לצלם תמונה. כדי לצלם כמה תמונות ברצף, לחץ לחיצה ארוכה על מקש עוצמת הקול.
 - לחץ פעמיים על מקש החלשת עוצמת הקול (-) כדי להפעיל את היישום **מצלמה** כאשר המסך נעול או כבוי. לחץ פעמיים על מקש הגברת עוצמת הקול (+) כדי להפעיל את **Capture+**.
- מקש הפעלה/נעילה (חיישן טביעת אצבע)
 - לחץ לחיצה קצרה על המקש כאשר ברצונך להפעיל או לכבות את המסך.
 - לחץ לחיצה ארוכה על המקש כאשר ברצונך לבחור אפשרות בקרת צריכת חשמל.
 - הנח את האצבע בעדינות על המקש כאשר ברצונך לבטל את נעילת המסך עם טביעת האצבע.

- ייתכן שהגישה לפונקציות מסוימות תהיה מוגבלת, בהתאם למפרטי המכשיר.
- אנטנת NFC מובנית בגב המכשיר. אל תגרום נזק לאנטנת ה-NFC.
- אל תניח חפצים כבדים על המכשיר ואל תשב עליו. אחרת, עלול להיגרם נזק לתכונת מסך המגע.
- כיסוי מגן למסך או אביזרים אחרים עלולים להפריע לפעולתו של חיישן הקרבה.
- אם המכשיר רטוב או שאתה משתמש בו במקום לח, ייתכן שחיישן המגע או הלחצנים לא יפעלו כראוי.

הדלקה או כיבוי

הדלקת המכשיר

כאשר המכשיר כבוי, לחץ לחיצה ארוכה על מקש ההפעלה/נעילה.

- כאשר תפעיל את המכשיר בפעם הראשונה, תתבצע קביעת תצורה ראשונית. זמן האתחול הראשון של הטלפון החכם עשוי להיות ארוך מן הרגיל.

כיבוי המכשיר

לחץ לחיצה ארוכה על מקש הפעלה/נעילה ולאחר מכן בחר **כיבוי**.

אפשרויות בקרת צריכת חשמל


הקש הקשה ממושכת על מקש הפעלה/נעילה ולאחר מכן בחר אפשרות.

- **כיבוי:** כבה את המכשיר.
- **כיבוי והפעלה מחדש:** הפעל מחדש את המכשיר.
- **הפעל מצב טיסה:** חסום פונקציות הקשורות לטלקומוניקציה, כולל ביצוע שיחות טלפון, העברת הודעות וגלישה באינטרנט. פונקציות אחרות נשארות זמינות.


התקנת כרטיס ה-SIM

השתמש כהלכה בכרטיס ה-SIM (מודול זיהוי מנוי) שקיבלת מספק השירות הסלולרי שלך.


1 הכנס את פין השליפה לתוך החור במגש הכרטיס.

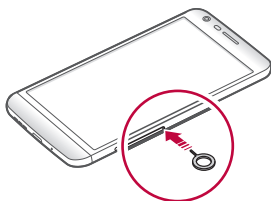


2 משוך החוצה את מגש הכרטיס.

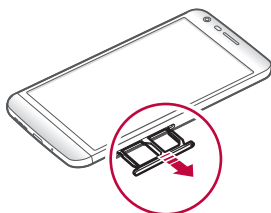

3 הנח את כרטיס ה-SIM על מגש הכרטיס כאשר המגעים המוזהבים פונים כלפי מטה.

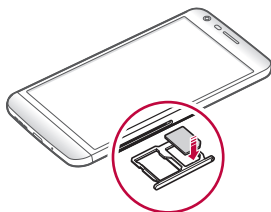

4 הכנס את מגש הכרטיס בחזרה לתוך החריץ.

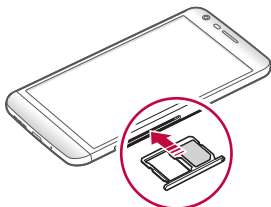

אמצעי זהירות בעת שימוש בכרטיס ה-SIM

- אל תאבד את כרטיס ה-SIM. LG אינה נושאת באחריות לנזקים ולבעיות שייגרמו כתוצאה מאובדן או העברה של כרטיס SIM.
- הקפד שלא לגרום נזק לכרטיס ה-SIM כאשר אתה מכניס או מוציא אותו.


- מבין הסוגים השונים של כרטיסי SIM, רק כרטיסי Nano-SIM מתאימים למכשיר. 
- כדי להבטיח ביצועים נטולי בעיות, מומלץ להשתמש בטלפון אם כרטיס SIM מהסוג הנכון. השתמש תמיד בכרטיס SIM מקורי שסופק על-ידי המפעיל.

הכנסת כרטיס הזיכרון

המכשיר תומך בכרטיס microSD בנפח של עד 2 TB. ייתכן שכרטיסי זיכרון מסוימים לא יתאימו למכשיר שברשותך, עקב היצרן וסוג הכרטיס.

- ייתכן שכרטיסי זיכרון מסוימים לא יהיו תואמים באופן מלא למכשיר. שימוש בכרטיס לא תואם עלול לגרום נזק למכשיר או לכרטיס הזיכרון או לשיבוש הנתונים המאוחסנים בו. 

- 1 הכנס את פין השליפה לתוך החור במגש הכרטיס.
- 2 משוך החוצה את מגש הכרטיס.
- 3 הנח את כרטיס הזיכרון על מגש הכרטיס כאשר המגעים המוזהבים פונים כלפי מטה.

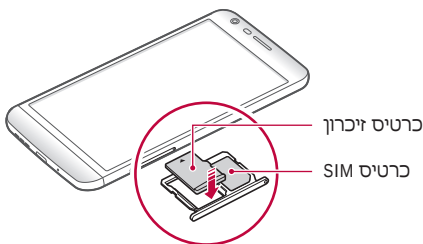

- 4 הכנס את מגש הכרטיס בחזרה לתוך החרץ.

- כרטיס זיכרון הוא פריט אופציונלי.
- כתיבה ומחיקה של נתונים בתכיפות גבוהה עלולות לקצר את חיי השירות של כרטיסי זיכרון.



הוצאת כרטיס הזיכרון

להוצאת כרטיס הזיכרון באופן בטוח, בטל תחילה את הטעינה שלו.

- 1 הקש על  < הגדרות < כללי < אחסון ו-USB < .
- 2 הכנס את פין השליפה לתוך החור במגש הכרטיס.
- 3 שלוף את מגש הכרטיס והוצא את כרטיס הזיכרון.


- אין להוציא את כרטיס הזיכרון בזמן שהמכשיר מעביר נתונים או ניגש למידע. אי הקפדה על כך עלולה לגרום לאובדן או לגרום לשיבוש הנתונים או לנזק לכרטיס הזיכרון או למכשיר עצמו. LG אינה אחראית להפסדים שייגרמו עקב שימוש לרעה או שימוש לא נאות בכרטיסי זיכרון, לרבות אובדן נתונים.




הסרת הסוללה

- כבה את המכשיר לפני הוצאת הסוללה. אחרת, עלול להיגרם נזק למכשיר.

1 לחץ על מקש שליפת המודול כדי לשלוף את המודול באופן חלקי מהמכשיר.

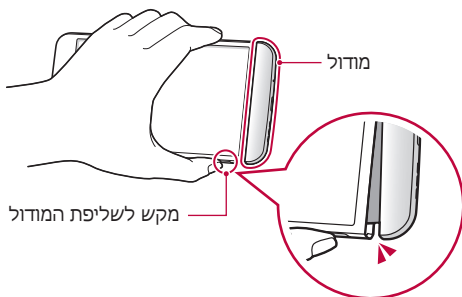


2 אחוז באמצע המודול שנשלף ומשוך אותו החוצה מהמכשיר.

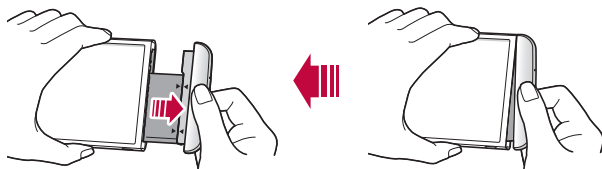

3 החזק את הסוללה ואת המודול בשתי הידיים והפרד ביניהם בכיוון החץ.

- אל תכופף את הסוללה בעת הסרתה. הדבר עלול לגרום נזק לכיסוי הפלסטיק של הסוללה.

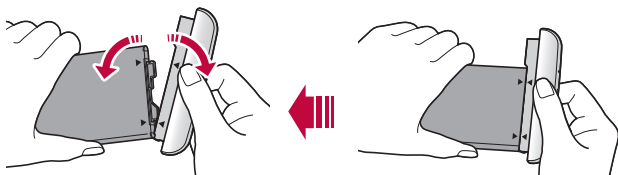


התקנת הסוללה


- מפרט המכשיר עשוי להשתנות, בהתאם לאזור ולספק השירות. כדי לרכוש סוללות נוספות או פריטים אופציונליים תואמים, פנה למרכז שירות הלקוחות של LG לקבלת תמיכה.
- הקפד להשתמש באביזרים מקוריים שסופקו על ידי LG Electronics. השימוש באביזרים של צד שלישי עלול לגרום נזק למכשיר או לגרום לתקלות.



1 התאם כראוי את החצים המסומנים והכנס את הסוללה למודול, לפי הסדר המסומן בתמונה.

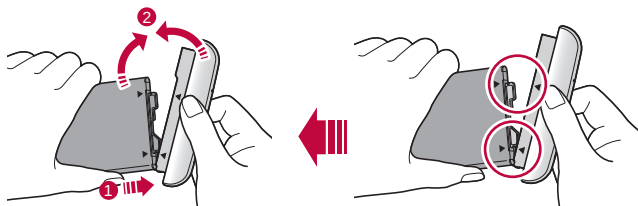

2 אחוז בחלק התחתון של המודול כפי שמוצג באיור הבא, ולאחר מכן הכנס בעדינות את המודול אל תוך המכשיר עד שיהיו מהודקים היטב.

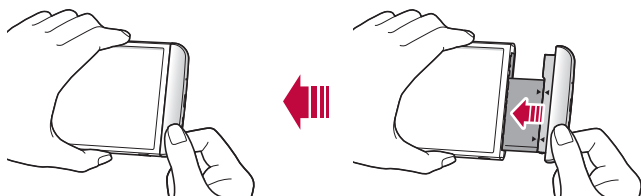

• אין ללחוץ על הלחצן לשליפת המודול בעת הכנסת המודול למכשיר. 


אמצעי זהירות בעת שימוש במודול

- בעת הכנסת הסוללה למכשיר, ודא שהסוללה מצורפת למודול. הכנסת הסוללה ללא המודול המחובר עשויה לגרום נזק למכשיר.
- בעת החלפת הסוללה, נקוט משנה זהירות כדי להבטיח שחומרים זרים או מים לא יחדרו למכשיר.
- אין להניח את המכשיר במיקום חם ולח כאשר מודול הסוללה נמצא מחוצה לה.
- ודא שהחלק הפנימי של המכשיר לא בא במגע עם חפץ מתכתי או מים ושלא נגרם לו נזק.
- השארת המכשיר כשהוא מופרד ממודול הסוללה למשך פרק זמן ממושך עלולה לעוות את המכשיר או לגרום נזק למגע המתכת. הדבר עלול לגרום לתקלה בתפקוד המכשיר.
- לעולם אין לנתק את מודול הסוללה מהמכשיר בלי ללחוץ על לחצן שליפת המודול. הדבר עלול לגרום נזק למכשיר.
- לעולם אין להוציא את המודול כאשר המכשיר נמצא בשימוש.
- אם נוצר רווח בין מודול הסוללה לבין המכשיר תוך כדי שימוש במכשיר, דחף את המודול בחוזקה למקומו.

- הכנסת מודול סוללה שאינו תואם את ספק השירות שלך - לדוגמה, מודול שרכשת מספק שירות אחר או באזור שספק השירות שלך אינו מכסה - עלולה לגרום לשיבושים בפעולת המכשיר.
- היזהר שלא להיפצע בעת הכנסה או הוצאה של מודול הסוללה.
- הקפד להכניס את הסוללה והמודול כראוי. אם תכניס אותם באופן שגוי, ייתכן שהמכשיר לא יפעל כראוי או שייגרם לו נזק.
- אי ציות להוראות במדריך למשתמש עלול להביא לגרימת נזק למכשיר.

טעינת הסוללה

לפני השימוש במכשיר, טען את הסוללה במלואה. חבר קצה אחד של כבל הטעינה למטען, הכנס את הקצה השני של המטען ליציאת הכבל ולאחר מכן חבר את המטען לשקע חשמל.

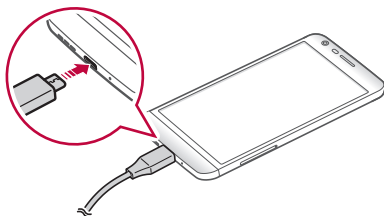

- הקפד להשתמש בכבל ה-USB שסופק כאבזר בסיסי.
- הקפד להשתמש במטען, בסוללה ובכבל טעינה שאושרו על-ידי LG. טעינת הסוללה באמצעות מטען של צד שלישי עלולה לגרום להתפוצצות הסוללה או לנזק למכשיר.
- שימוש במכשיר כאשר הוא נטען עלול לגרום להתחשמלות. כדי להשתמש במכשיר, הפסק את טעינתו.





- מכשיר זה סופק כשהסוללה בתוכו. בעת שימוש במכשיר בפעם הראשונה, בדוק את רמת הטעינה של הסוללה, ובעת הצורך טען אותה במלואה לפני השימוש במכשיר.
- הוצא את המטען משקע החשמל לאחר שהמכשיר נטען במלואו. הדבר ימנע צריכת חשמל מיותרת.
- ניתן לטעון את הסוללה בדרך נוספת, על-ידי חיבור כבל USB בין המכשיר לבין מחשב שולחני או מחשב נייד. טעינה בדרך זו עשויה להמשך יותר זמן מאשר טעינה בדרך הרגילה.
- אין לטעון את הסוללה באמצעות רכזת USB שאינה תומכת במתח הנקוב. הטעינה עלולה להיכשל או להיפסק באופן לא מכוון.

שימוש יעיל בסוללה

חיי הסוללה עשויים להתקצר אם תשאיר מספר רב של יישומים ופונקציות במצב פעיל לאורך זמן.

כבה את הפעולות ברקע כדי להאריך את חיי הסוללה.

כדי למזער את צריכת הסוללה, פעל בהתאם לעצות הבאות:


- כבה את הפונקציות Bluetooth® או Wi-Fi כאשר אינך משתמש בהן.
- הגדר זמן קצוב קצר ככל האפשר לכיבוי המסך.
- מזער את בהירות המסך.
- הגדר נעילת מסך שתופעל כאשר המכשיר לא בשימוש.
- כדי להשתמש ביישום שהורדת, בדוק את רמת הסוללה.

מסך המגע

תוכל ללמוד כיצד לשלוט במכשיר שברשותך על-ידי שימוש במחוות מסך המגע.

הקשה

הקש קלות עם קצה האצבע כדי לבחור או להפעיל יישום או אפשרות.

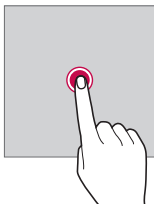


הקשת הקשה ממושכת

הקש הקשה ממושכת כמה שניות כדי להפעיל פונקציה מוסתרת.




הקשה כפולה

הקש פעמיים במהירות כדי להגדיל או להקטין דף אינטרנט או מפה.

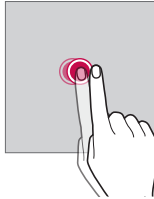


גרירה

הקש על פריט, כגון יישום או וידג'ט, ולאחר מכן הזז את האצבע למיקום אחר בתנועה מבוקרת. תוכל להשתמש במחוזה זו כדי להזיז פריט.

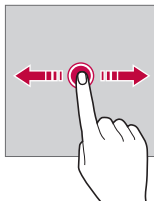



החלקה

הקש על המסך באצבעך והזז אותה במהירות מבלי לעצור. באפשרותך להשתמש במחוזה זו כדי לגלול ברשימה, בדף אינטרנט, בתמונות, במסכים ועוד.

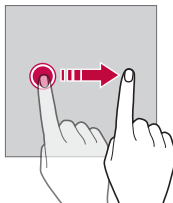

צביטה או פריסה

צבוט בשתי אצבעות כדי להקטין את התצוגה של תמונה או מפה.
כדי להגדיל, פרוס את האצבעות כדי להרחיקן זו מזו.

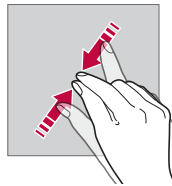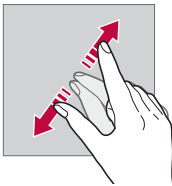

- אין לחשוף את מסך המגע לזעזוע פיזי קיצוני. הדבר עלול לגרום נזק לחיישן המגע.



- תקלה של מסך המגע עלולה להתרחש אם תשתמש במכשיר בקרבת חומרים מגנטיים, מתכתיים או מוליכים.
- אם אתה משתמש במכשיר בתנאי תאורה בוהקת, כגון אור שמש ישיר, ייתכן שהמסך לא יהיה גלוי, בהתאם למיקום שלך. השתמש במכשיר במיקום מוצל או במיקום עם תאורת סביבה שאינה בוהקת מדי אך מוארת במידה שמספיקה לקרוא ספרים.
- אל תפעיל כוח רב מדי בעת לחיצה על המסך.
- הקש בעדינות עם קצה האצבע על האפשרות הרצויה.
- ייתכן שבקרת המגע לא תפעל כראוי אם תקיש על המסך עם הציפורן או כשאתה לובש כפפות.
- ייתכן שבקרת המגע לא תפעל כראוי כאשר המסך לח או רטוב.
- ייתכן שמסך המגע לא יפעל כראוי אם יש על המסך ציפוי מגן או שחיברת אל המכשיר אביזר שנרכש בחנות מקוונת או פיזית שאינה מתמחה.



המסך הראשי

סקירה כללית של המסך הראשי


המסך הראשי הוא נקודת המוצא שממנה ניתן לגשת לפונקציות וליישומים השונים במכשיר. הקש על  בכל מסך כדי לעבור היישר אל המסך הראשי.

תוכל לנהל את כל היישומים והוידג'טים במסך הראשי. החלק את המסך לשמאל או לימין כדי להציג במבט מהיר את כל היישומים המותקנים.

כדי לחפש יישום, השתמש בחיפוש של Google.

פריסת המסך הראשי

ניתן להציג את כל היישומים ולארגן וידג'טים ותיקיות במסך הראשי.

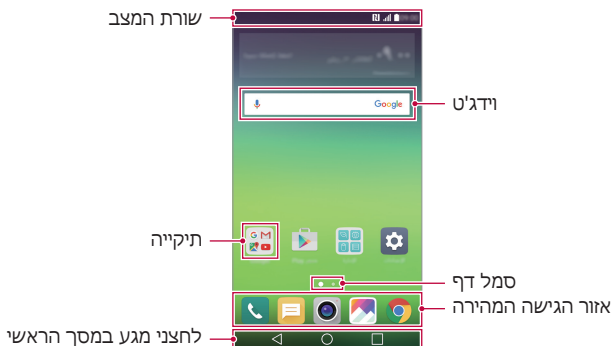

• המסך הראשי עשוי להשתנות, בהתאם לספק השירות או לגרסת התוכנה שברשותך.



- **Status bar**: הצג את סמלי המצב, השעה ורמת הטעינה של הסוללה.
- **וידג'ט**: הוסף וידג'טים למסך הראשי כדי לגשת במהירות למידע דרוש בלי שתצטרך להפעיל יישומים בזה אחר זה.
- **Folder**: צור תיקיות כדי לקבץ יישומים על פי העדפותיך.


- סמל דף: הצג את המספר הכולל של לוחות המסך הראשי והלוח המוצג כעת מודגש.
- אזור הגישה המהירה: קבע יישומים ראשיים בתחתית המסך כך שתוכל לגשת אליהם מכל אחד מהלוחות של המסך הראשי.
- לחצני מגע במסך הראשי
- <: חזור למסך הקודם. סגור את לוח המקשים או את החלונות המוקפים.
- ○: הקש כדי לעבור למסך הראשי. כדי להפעיל את **Google**, הקש הקשה ארוכה.
- □: הצג רשימה של היישומים שהיו בשימוש לאחרונה או הפעל יישום מתוך הרשימה. השתמש באפשרות **נקה הכל** כדי למחוק את כל היישומים שהיו בשימוש לאחרונה. ביישומים מסוימים, לחיצה ארוכה על הלחצן תציג לפניך אפשרויות נוספות.

עריכת לחצני המסך הראשי

תוכל לסדר מחדש את לחצני המסך הראשי או להוסיף פונקציות בשימוש נפוץ ללחצני המסך הראשי.

הקש על ○ < **הגדרות** < **תצוגה** < **לחצני תצוגה** < **שילוב לחצנים** והתאם אישית את ההגדרות.

- כמה פונקציות, כולל Qslide, לוח ההתראות או Capture+, מסופקות. ניתן להוסיף חמישה פריטים לכל היותר.

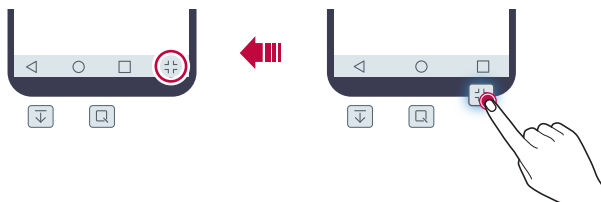

סמלי מצב

כאשר מופעלת התראה על הודעה שלא נקראה, אירוע בלוח השנה או התראה של שעון מעורר, בשורת המצב מוצג סמל ההתראה התואם. בדוק את מצב המכשיר על-ידי צפייה בסמלי ההתראות המוצגים בשורת המצב.

-  : אין אות
-  : נתונים משודרים כרגע דרך הרשת
-  : התראה מוגדרת
-  : מצב רטט מופעל
-  : Bluetooth מופעל
-  : מחובר למחשב דרך USB
-  : רמת הסוללה
-  : מצב טיסה פעיל
-  : שיחות שלא נענו
-  : רשת Wi-Fi פועלת
-  : מצב השתק מופעל
-  : GPS מופעל
-  : נקודה חמה מופעלת
-  : כרטיס SIM חסר

- ייתכן שכמה מהסמלים הללו ייראו שונים או לא יופיעו כלל, בהתאם למצב המכשיר שלך. עיין בסמלים בהתאם לסביבה שבה אתה משתמש בפועל במכשיר שלך.
- הסמלים המוצגים עשויים להשתנות, בהתאם לאזור או לספקי השירות.




חלונית ההתראות

תוכל לפתוח את לוח ההתראות על-ידי גרירת שורת המצב כלפי מטה.

השתמש בסמלי הגישה המהירה בלוח ההתראות כדי להפעיל או לכבות פונקציה בקלות ובמהירות.

גרור שמאלה או ימינה ברשימת סמלי הגישה המהירה כדי לבחור את סמל הפונקציה הרצוי.

- אם תקיש הקשה ארוכה על הסמל, מסך ההגדרות של הפונקציה המתאימה יופיע.

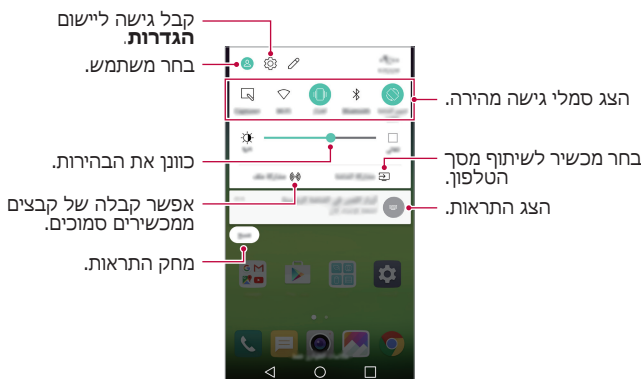

הגדרות בלוח ההתראות

תוכל לבחור פריטים להצגה בלוח ההתראות.

הקש על בלוח ההתראות.

- כדי לסדר מחדש את סמלי הגישה המהירה, הקש הקשה ארוכה על סמל ולאחר מכן גרור אותו למיקום אחר.
- בחר סמלים שברצונך להציג ברשימה.


- פריטי התפריט הזמינים עשויים להשתנות בהתאם לאזור או לספק השירות.



שינוי כיוון המסך

תוכל להגדיר שכיוון המסך ישתנה באופן אוטומטי, בהתאם לכיוון המכשיר.

בלוח ההתראות, הקש על **סיבוב** ברשימת סמלי הגישה המהירה. לחלופין, הקש על $\odot$ < **הגדרות** < **תצוגה** והפעל את **סיבוב מסך אוטומטי**.

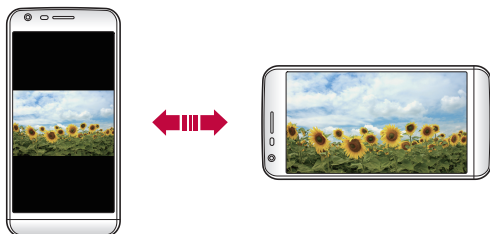

עריכת המסך הראשי


במסך הראשי, הקש הקשה ממושכת על אזור ריק ולאחר מכן הפעל את הפונקציה הרצויה.

- כדי לסדר מחדש את הלוחות של המסך הראשי, הקש הקשה ארוכה על לוח ולאחר מכן גרור אותו למיקום אחר.
- כדי להוסיף וידג'טים למסך הראשי, הקש על **וידג'טים** וגרור וידג'ט למסך הראשי.
- כדי לשנות את הגדרות המסך הראשי, הקש על **הגדרות מסך בית** והתאם אישית את האפשרויות. לפרטים, ראה **הגדרות המסך הראשי**.
- כדי להציג או להתקין מחדש את היישומים שהסרת, הקש על **היישומים שהוסרו**. לפרטים, ראה **יישומים שהוסרו לאחרונה**.

צפייה בערכת הנושא של הרקע

תוכל להציג את תמונת הרקע בלבד על-ידי הסתרת היישומים והווידג'טים במסך הראשי.

- הרחק את שתי האצבעות בזמן שאתה לוחץ על המסך הראשי.
- כדי לחזור אל מסך היישומים והווידג'טים המקורי, בצע תנועת צביטה במסך הראשי או הקש על .

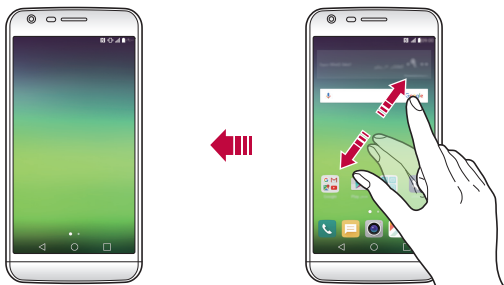

חיפוש יישומים במסך הראשי

ניתן לחפש בקלות יישומים המותקנים במסך הראשי על-ידי הזנת שם היישום הרצוי בווידג'ט של Google. רשימת היישומים המותקנים תופיע במסך החיפוש של Google.

הזזת יישומים במסך הראשי

במסך הראשי, הקש הקשה ארוכה על יישום ולאחר מכן גרור אותו למיקום אחר.

- כדי להשאיר יישומים בשימוש נפוץ בתחתית המסך הראשי, לחץ לחיצה ארוכה על יישום וגרור אותו לאזור הגישה המהירה שבתחתית המסך.
- כדי להסיר סמל מאזור הגישה המהירה, גרור אותו אל המסך הראשי.

שימוש בתיקיות מתוך המסך הראשי

יצירת תיקיות

במסך הראשי, הקש הקשה ארוכה על יישום ולאחר מכן גרור אותו מעל יישום אחר.

- פעולה זו תיצור תיקייה חשה והיישום יתווסף אליה.

עריכת תיקיות

במסך הראשי, הקש על תיקייה ולאחר מכן הפעל את הפונקציה הרצויה.

- כדי לערוך את שם וצבע התיקייה, הקש על שם התיקייה.
- כדי להסיר יישום מהתיקייה, הקש הקשה ארוכה על היישום וגרור אל מחוץ לתיקייה. אם היישום שהסרת הוא היישום היחיד שהיה בתיקייה, התיקייה תוסר באופן אוטומטי.

הגדרות המסך הראשי

תוכל להתאים אישית את הגדרות המסך הראשי.

1 הקש על  < הגדרות < תצוגה < מסך ראשי.

2 התאם אישית הגדרות:

- **בחר בית:** בחר מצב של המסך הראשי.
- **טפט:** שנה את ערכת הנושא של רקע המסך הראשי.
- **אפקט בהחלפת מסכים:** בחר אפקט שיוחל כאשר לוח המסך הראשי מתחלף.
- **ערכת נושא:** בחר את ערכת הנושא של המסך שברצונך להחיל.
- **סדר את היישומים לפי:** הגדר כיצד יתבצע מיון של יישומים במסך הראשי.
- **רשת:** שנה את מצב סידור היישומים עבור המסך הראשי.
- **הסתר יישומים:** בחר או בטל את הבחירה ביישומים שברצונך להסתיר במסך הראשי.
- **Smart Bulletin:** השתמש במסך הראשי כדי להציג מידע מותאם אישית, בהתאם לצרכיך.

נעילת מסך

סקירה כללית של נעילת המסך

מסך המכשיר נכבה וננעל כאשר לוחצים על מקש הפעלה/נעילה. בנוסף, המסך נכבה וננעל לאחר שהמכשיר לא היה פעיל במשך פרק זמן שצוין.

אם תלחץ על מקש הפעלה/נעילה כאשר לא מוגדרת נעילת מסך, המסך הראשי יופיע באופן מיידי.

כדי להבטיח שהמכשיר יהיה מאובטח ולמנוע גישה לא רצויה למכשיר, הגדר נעילת מסך.

- נעילת מסך מונעת קלט מגע מיותר על מסך המכשיר ומצמצמת את צריכת הסוללה. אנו ממליצים להפעיל את נעילת המסך כאשר אינך משתמש במכשיר.



קבע הגדרות נעילת מסך

לרשותך מספר אפשרויות שונות לנעילת המסך.

1 הקש על **○** < **הגדרות** < **תצוגה** < **מסך נעילה** < **בחירת נעילת מסך** ולאחר מכן בחר את השיטה המועדפת עליך.

2 התאם אישית את הגדרות הנעילה:

- **ללא:** ביטול פונקציית נעילת המסך.
- **החלקה:** החלק על המסך כדי לבטל את נעילת המסך.
- **Knock Code:** הקש על המרווחים במסך בתבנית מסוימת כדי לבטל את נעילת המסך.
- **תבנית:** צייר תבנית לביטול נעילת המסך.
- **קוד PIN:** הזן סיסמה מספרית לביטול נעילת המסך.
- **סיסמה:** הזן סיסמה אלפאנומרית לביטול נעילת המסך.



- כדי להגדיר נעילת מסך באמצעות תבנית, תחילה צור חשבון Google או קוד PIN לגיבוי. אם הזנת ברצף תבנית שגויה יותר פעמים מהמותר, בטל את נעילת המסך בעזרת קוד ה-PIN לגיבוי או דרך חשבון Google.
- אם הגדרת נעילת מסך באמצעות קוד PIN או סיסמה והזנת ברצף קוד PIN או סיסמה שגויים יותר פעמים מהמותר, אפשרות הזנת הסיסמה תיחסם למשך 30 שניות.

הגדרות נעילת מסך

תוכל להתאים אישית את הגדרות נעילת המסך.

1 הקש על  < **הגדרות** < **תצוגה** < **מסך נעילה**.

2 התאם אישית הגדרות:

- **בחירת נעילת מסך:** בחר שיטה לנעילת מסך.
- **Smart Lock:** בחר פריטי 'טריגר', שההתרחשות של אחד מהם תגרום לביטול אוטומטי של נעילת המכשיר.
- **אפקט החלקת מסך:** הגדר אפקטי מעבר של המסך שיוחלו כאשר נעילת המסך תבוטל. אפשרות זו תופיע אם שיטת נעילת המסך שנבחרה היא 'החלקה'.
- **טפט:** שנה את תמונת הרקע של מסך הנעילה.
- **קיצורי דרך:** הוסף קיצור דרך יישום וגש ישירות ליישום מתוך מסך הנעילה על-ידי גרירת היישום אל מחוץ למעגל הגדול. אפשרות זו תופיע אם שיטת נעילת המסך שנבחרה היא 'החלקה'.
- **אנימצית מזג אוויר:** הצג הנפשות של מזג האוויר עבור המיקום הנוכחי במסך הנעילה.
- **פרטי יצירת קשר עבור טלפון שאבד:** הצג פרטי יצירת קשר למצב חירום במסך הנעילה.
- **שעון עצר לנעילה:** הגדר את משך הזמן ללא פעילות, שלאחריו המכשיר יינעל באופן אוטומטי.
- **נעילה באמצעות לחצן ההפעלה:** נעל באופן מידי את המסך בעת לחיצה על מקש הפעלה/נעילה.

- פריטי ההגדרה הזמינים עשויים להשתנות, בהתאם לשיטת נעילת המסך שנבחרה.



הפעל מסך

ניתן להקיש הקשה כפולה על המסך כדי להפעיל או לכבות אותו.

הפעלת המסך

- הקש פעמיים באמצע המסך
- הקשה על החלק העליון או התחתון של המסך עשויה להקטין את שיעור זיהוי הפעולה.

כיבוי המסך

הקש פעמיים על שטח ריק במסך הראשי.
לחלופין, הקש הקשה כפולה על שטח ריק בשורת המצב.

- אפשרות זו זמינה אך ורק במסך הראשי שסופק על-ידי LG. היא לא תפעל כראוי במפעיל מותאם אישית או במסך ראשי שהותקן על-ידי המשתמש.

- בעת הקשה על המסך, השתמש בקצה האצבע. אל תשתמש בציפורן.

- כדי להשתמש בתכונה KnockON, ודא שחיישן הקרובה/תאורה לא נחסם על-ידי מדבקה או כל חומר זר אחר.



Knock Code

תוכל לבטל את נעילת המסך על ידי יצירת Knock Code משלך. כאשר המסך נעול, תוכל לגשת ישירות למסך הראשי על-ידי הקשה על המסך ברצף שצוין.

יצירת Knock Code

- 1 הקש על  < הגדרות < תצוגה < מסך נעילה < בחירת נעילת מסך < Knock Code.
- 2 הקש על הריבועים בתבנית הרצויה לך כדי ליצור Knock Code ולאחר מכן הקש על **הבא**.
- 3 לאימות, הזן שוב את ה- Knock Code ולאחר מכן הקש על **אשר**.
- 4 הגדר קוד PIN לגיבוי למקרה שתשכח את ה-Knock Code.

ביטול נעילת המסך עם Knock Code

בטל את נעילת המסך על ידי הזנת ה-Knock Code שיצרת.
הזן את ה-Knock Code במסך המגע כאשר המסך כבוי.

- תוכל להשתמש ב-Knock Code יחד עם התכונה KnockOn.
- אם הזנת ברצף Knock Code שגוי יותר פעמים מהמותר, בטל את הנעילה בעזרת קוד ה-PIN לגיבוי או דרך חשבון Google.
- הקפד להשתמש בקצה האצבע בעת הקשה על המסך.

הפעלה מאובטחת

סקירה כללית בנושא הפעלה מאובטחת

כשאתה מפעיל את המכשיר, המסך ננעל לצרכי אבטחה. בטל את נעילת המסך על-ידי הזנת השיטה הנוכחית לביטול נעילה, כגון Knock code, תבנית, סיסמה או קוד PIN. עד לביטול הנעילה של המסך, לא תוכל לקבל את מרבית שיחות הטלפון, הודעות הטקסט, ההתראות, ההודעות ועוד.

אמצעי זהירות של הפעלה מאובטחת

- אם הסיסמה תוזן באופן שגוי למעלה ממספר מסוים של פעמים, המכשיר יבצע הפעלה ראשונית באופן אוטומטי. הקפד לזכור את הסיסמה
- אם שכחת את סיסמת הפענוח שלך, יהיה עליך לאתחל את המכשיר כדי להשתמש בו. האתחול ימחק את כל הנתונים שנשמרו לפני האתחול.
- הצפנה מתבצעת כאשר המכשיר מאתחל בפעם הראשונה לאחר ההפעלה הראשונית. עזירת ההצפנה לפני השלמתה עלולה לגרום נזק לנתונים. לדוגמה, אין להוציא או להכניס סוללה כאשר ההצפנה מתבצעת. המתן עד לסיום ההצפנה.

הצפנת כרטיס זיכרון

ניתן להצפין את הנתונים השמורים בכרטיס הזיכרון כדי להגן עליהם. לא ניתן לגשת לנתונים המוצפנים בכרטיס הזיכרון ממכשיר אחר.

- 1 הקש על  < הגדרות < כללי < טביעות אצבע ואבטחה < הצפן אחסון כרטיס SD.
- 2 קרא את הסקירה הכללית של הצפנת כרטיס הזיכרון המוצגת על המסך ולאחר מכן הקש על **המשך** כדי להמשיך.
- 3 בחר אפשרות והקש על **הצפן כעת**:
 - **הצפנת קובץ חדש**: הצפן רק את הנתונים שנשמרו בכרטיס הזיכרון לאחר ההצפנה.
 - **הצפנה מלאה**: הצפן את כל הנתונים השמורים כעת בכרטיס הזיכרון.
 - **ללא קבצי מדיה**: הצפן את כל הקבצים, למעט קובצי מדיה כמו מוסיקה, תמונות וסרטוני וידאו.



- כדי להצפין את כרטיס הזיכרון, ודא שסוג נעילת המסך הוא קוד PIN או סיסמה.
- לאחר שיחל תהליך הצפנת כרטיס הזיכרון, פונקציות מסוימות לא יהיו זמינות.
- כיבוי המכשיר תוך כדי תהליך ההצפנה יגרום לכישלון התהליך ועלול לגרום נזק לנתונים מסוימים. לכן הקפד לוודא שהסוללה טעונה ברמה מספקת לפני שאתה מתחיל בתהליך ההצפנה.
- הקבצים המוצפנים יהיו נגישים רק מהמכשיר שבו הקבצים הוצפנו.
- לא ניתן להשתמש בכרטיס הזיכרון המוצפן במכשיר אחר של LG. כדי להשתמש בכרטיס הזיכרון המוצפן במכשיר ניד אחר, אתחל את הכרטיס.
- ניתן להפעיל הצפנת כרטיס זיכרון אפילו כאשר אין כרטיס זיכרון בתוך המכשיר. כל כרטיס זיכרון שיוקן לאחר ההצפנה יוצפן באופן אוטומטי.

יצירת צילומי מסך

באפשרותך לצלם תמונה של המסך הנוכחי שמוצג במכשיר.

באמצעות קיצור דרך

לחץ לחיצה ארוכה (לפחות שתי שניות) על מקש ההפעלה/נעילה ועל מקש החלשת עוצמת הקול (-) במקביל.

- תוכל לראות תמונות מסך דרך התיקייה **Screenshots** ב-גלריה.

באמצעות Capture+

במסך שבו ברצונך ליצור צילום מסך, גרור את שורת המצב כלפי מטה ולאחר מכן הקש על **Capture+**.




- כאשר המסך כבוי או נעול, קבל גישה אל **Capture+** בשתי לחיצות על מקש הגברת עוצמת הקול (+). ראשית, הקש על **הגדרות** < כללי והפעל את **מקש קיצור דרך**.
- לפרטים, ראה **כתיבת הערות על צילום מסך**.

הזנת טקסט

שימוש במקלדת Smart


תוכל להשתמש במקלדת Smart כדי להזין ולערוך טקסט. באמצעות מקלדת Smart, תוכל להציג טקסט תוך כדי הקלדה, בלי שתצטרך לעבור בין המסך למקלדת קונבנציונלית. הדבר יאפשר לך לאתר בקלות שגיאות ולתקן אותן תוך כדי הקלדה.

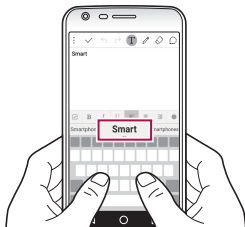

הזנת הסמן

מקלדת Smart מאפשרת לך להזין את הסמן למיקום המדויק שאתה רוצה.

כאשר תקליד טקסט, הקש הקשה ארוכה על מקש הרווח וגרור שמאלה או ימינה, עד שהסמן יזוז למיקום הרצוי לך בטקסט.

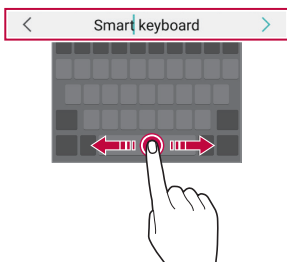


• אפשרות זו זמינה רק במקלדות QWERTY. 

הצעת מילים

מקלדת Smart מנתחת באופן אוטומטי את דפוסי השימוש שלך כדי להציע מילים בשימוש נפוץ תוך כדי הקלדה. ככל שתשתמש יותר במכשיר, כך ההצעות יהיו מדויקות יותר.

הזן טקסט והקש על מילה מוצעת; לחלופין, גרור מעלה בעדינות את הצד השמאלי או הימני של מקש הרווח.

- המילה שנבחרה תוזן באופן אוטומטי. אינך צריך להקליד באופן ידני כל אות של המילה.

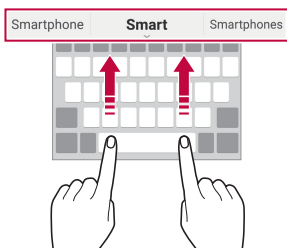


שינוי הפריסה של מקלדת QWERTY

תוכל להוסיף, למחוק או לסדר מחדש מקשים בשורה התחתונה של המקלדת.

- 1 הקש על  < הגדרות < כללי < שפה ומקלדת < מקלדת LG < גובה ופריסת המקלדת < פריסת המקלדת QWERTY. לחלופין, הקש על  במקלדת והקש על גובה ופריסת המקלדת < פריסת המקלדת QWERTY.

2 הקש על מקש בשורה התחתונה ולאחר מכן גרור אותו למיקום אחר.

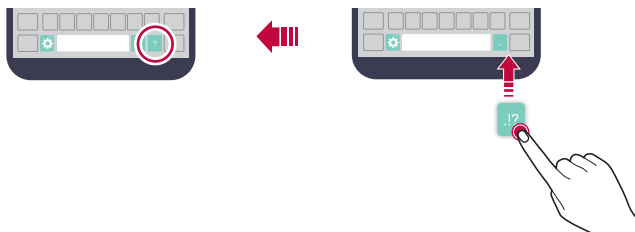

- אפשרות זו זמינה אך ורק במקלות QWERTY, QWERTZ ו-AZERTY-1.
- ייתכן ששפות מסוימות אינן תומכות בפונקציה זו.

התאמה אישית של גובה המקלדת

תוכל להתאים אישית את גובה המקלדת כדי להבטיח שתוכל להקליד בנוחות.

- 1 הקש על < הגדרות < כללי < שפה ומקלדת < מקלדת LG < גובה ופריסת המקלדת < גובה המקלדת. לחלופין, הקש על במקלדת והקש על גובה ופריסת המקלדת < גובה המקלדת.
- 2 כוונן את גובה המקלדת.



בחירת מצב מקלדת לרוחב

תוכל לבחור מצב מקלדת לרוחב מבין כמה אפשרויות.

- 1 הקש על  < הגדרות < כללי < שפה ומקלדת < מקלדת LG < גובה ופריסת המקלדת < סוג מקלדת לרוחב. לחלופין, הקש על  במקלדת והקש על גובה ופריסת המקלדת < סוג מקלדת לרוחב.

2 בחר מצב מקלדת.

פיצול המקלדת

תוכל לפצל את המקלדת לשניים ולמקם את שני החלקים בשני צדי המסך כאשר המסך נמצא במצב לרוחב.

- 1 הקש על  < הגדרות < כללי < שפה ומקלדת < מקלדת LG < גובה ופריסת המקלדת < פיצול המקלדת.

לחלופין, הקש על  במקלדת והקש על גובה ופריסת המקלדת < פיצול המקלדת.



- סובב את המכשיר למצב 'לרוחב' כדי לפצל את המקלדת לשני הצדדים. כדי למזג או לפצל את המקלדת, בצע באצבעותיך תנועת צביטה או פריסה על המקלדת.



מצב תפעול ביד אחת

תוכל להזיז את המקלדת לצד אחד של המסך כך שתוכל להשתמש במקלדת ביד אחת.

- 1 הקש על  < הגדרות < כללי < שפה ומקלדת < מקלדת LG < גובה ופריסת המקלדת < תפעול ביד אחת. לחלופין, הקש על  במקלדת והקש על גובה ופריסת המקלדת < תפעול ביד אחת.

2 לחץ על החץ המוצג לצד המקלדת כדי להזיז את המקלדת בכיוון הרצוי.



הזן טקסט באמצעות הקול

במקלדת, הקש הקשה ארוכה על  ובחר .

- כדי לאפשר זיהוי מיטבי של פקודות קוליות, דבר בצורה ברורה ובמבטא הנכון. 
- כדי להזין טקסט בדיבור, ודא שהמכשיר מחובר לרשת.
- כדי לבחור את השפה שתוגדר לזיהוי קולי, הקש על  < **שפות** במסך הזיהוי הקולי.
- התמיכה בפונקציה זו או רשימת השפות הנתמכות הם בהתאם לאזור השירות.

שינוי המקלדת

תוכל לשנות את שפת הקלט וסוג המקלדת לכל שפה.

1 הקש על  < **הגדרות** < **כללי** < **שפה ומקלדת** < **מקלדת LG** < **בחר שפה**.

2 בחר שפה והתאם אישית את סוג המקלדת.

העתקה והדבקה

באפשרותך להעתיק או לגזור טקסט מתוך יישום ולהדביק אותו באותו יישום. לחלופין, אתה יכול להפעיל יישומים אחרים ולהדביק את הטקסט בתוכם.

1 הקש הקשה ארוכה ליד הטקסט שברצונך להעתיק או לגזור.

2 גרור את  /  כדי לציין את האזור שברצונך להעתיק או לגזור.

3 בחר גזור או העתק.

- הטקסט שנגזר או הועתק נוסף באופן אוטומטי ללוח.

4 הקש הקשה ארוכה על חלון הזנת הקלט ולאחר מכן בחר הדבק.

- אם אין פריט שהועתק או נגזר, האפשרות **הדבק** לא תופיע.



מגש זמני

כאשר אתה מעתיק או גוזר תמונה או טקסט, הם נשמרים באופן אוטומטי במגש קליפים, וניתן להדביק אותם בכל שטח פנוי בכל עת.

- 1 במקלדת, הקש הקשה ארוכה על  ובחר  לחלופין, הקש הקשה ארוכה על חלון הזנת הקלט ולאחר מכן בחר **מגש זמני**.

- 2 בחר והדבק פריט מתוך מגש הקליפים.

- ניתן לשמור 20 פריטים לכל היותר במגש הקליפים.
- הקש על  כדי לנעול פריטים שמורים על מנת להבטיח שהם לא יימחקו גם לאחר שבוצעה חריגה מהכמות המרבית המותרת. ניתן לנעול עשרה פריטים לכל היותר. כדי למחוק פריטים נעולים, תחילה בטל את נעילתם.
- הקש על  כדי למחוק את הפריטים השמורים במגש הקליפים.

- ייתכן שהלוח אינו נתמך על-ידי יישומים מסוימים שהמשתמש הוריד.





03

יישומים שימושיים

התקנה והסרת התקנה של יישומים

התקנת יישומים

- היכנס לחנות יישומים כדי לחפש ולהוריד יישומים.
- תוכל להשתמש בחנויות כמו **SmartWorld**, **חנות Play** או חנות היישומים של ספק השירות שלך.

- ייתכן שחנויות יישומים מסוימות ידרשו ממך ליצור חשבון ולהיכנס לחשבון זה.
- יישומים מסוימים עשויים לגבות תשלום.
- אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך.
- התמיכה בפונקציה **SmartWorld** אינה מובטחת ותלויה באזור או בספק השירות.

הסרת התקנה של יישומים

הסר את ההתקנה של יישומים שאינך משתמש בהם עוד מהמכשיר שלך.

- יישומים מסוימים אינם ניתנים להסרה על-ידי המשתמשים.

הסרת התקנה עם מחוות ההקשה הממושכת

- במסך הראשי, הקש הקשה ארוכה על היישום כדי להסיר את התקנתו ולאחר מכן גרור אותו מעל האפשרות **הסר התקנה** בחלק העליון של המסך.
- תוכל להתקין מחדש יישומים שהסרת אם חלפו מאז ההסרה פחות מ-24 שעות. לפרטים, ראה **יישומים שהוסרו לאחרונה**.

הסרת התקנה באמצעות תפריט ההגדרות

הקש על  < **הגדרות** < **כללי** < **יישומים**, בחר יישום ולאחר מכן הקש על **הסר התקנה**.

הסרת התקנה של יישומים מחנות היישומים

כדי להסיר התקנה של יישום, עבור לחנות היישומים שממנה הורדת אותו, והסר את התקנתו.

יישומים שהוסרו לאחרונה

תוכל לראות את היישומים שהוסרו במסך הבית. באפשרותך גם להתקין מחדש יישומים שהסרת, אם חלפו מאז ההסרה פחות מ-24 שעות.

1 הקש על  > יישומים שהוסרו לאחרונה.

2 הפעל את הפונקציה הרצויה:

• **התקן מחדש:** התקן מחדש את היישום הרצוי.

•  : הסר מהמכשיר לצמיתות את היישומים שביטלת את התקנתם.

- יישומים שתסיר יימחקו מהמכשיר באופן אוטומטי 24 שעות לאחר הסרתם. אם תרצה להתקין מחדש יישומים שהוסרו, תצטרך להוריד אותם מחדש מחנות היישומים.
- תכונה זו מופעלת רק במסך הראשי שהוגדר כברירת מחדל. אם תסיר יישומים דרך מסך EasyHome או מפעיל יישומים אחר, הם יוסרו מהמכשיר באופן מיידי ולצמיתות.

טלפון

שיחה קולית

בצע שיחת טלפון על-ידי שימוש באחת השיטות הזמינות, כמו הזנה דינית של מספר טלפון או ביצוע שיחה מרשימת אנשי הקשר או מרשימת השיחות האחרונות.

ביצוע שיחה מהמקלדת

1 הקש על  > **חייג.**

2 בצע שיחה באמצעות שיטה לבחירתך:

- הזן מספר טלפון ולאחר מכן הקש על .
- הקש הקשה ממושכת על מספר חיוג מהיר.
- חפש איש קשר על-ידי הקשה על האות הראשונה בשמו ברשימת אנשי הקשר, ולאחר מכן הקש על .

- כדי להזין את התו "+" לצורך שיחה בינלאומית, הקש הקשה ממושכת על הספרה 0.
- ראה הוספת אנשי קשר לרשימת מספרי החיוג המהיר כדי ללמוד כיצד להוסיף מספרי טלפון לרשימת מספרי החיוג המהיר.

ביצוע שיחה מרשימת אנשי הקשר

- 1 הקש על  < אנשי קשר.
- 2 ברשימת אנשי הקשר, בחר איש קשר והקש על .

מענה לשיחה

- כדי לענות לשיחה, גרור את  אל מחוץ לעיגול במסך השיחה הנכנסת.
- כאשר אוזניות סטריאו מחוברות, תוכל לבצע שיחת באמצעות הלחצן חייג/סיום באוזניות.
- כדי לסיים שיחה על-ידי הקשה פשוטה על מקש הפעלה/נעילה, הקש על  < הגדרות < רשתות < הגדרות שיחה < מענה וסיום שיחות, ולאחר מכן הפעל את סיים שיחות באמצעות מקש ההפעלה.

דחיית שיחה

- כדי לדחות שיחה נכנסת, גרור את  אל מחוץ לעיגול במסך השיחה הנכנסת.
- כדי לשלוח הודעת דחייה, גרור את הודעת הדחייה אל מחוץ לעיגול.
- כדי להוסיף או לערוך הודעת דחייה, הקש על  < הגדרות < רשתות < הגדרות שיחה < סירוב דחיית שיחות < דחה שיחה ושלח הודעה.
- כאשר נכנסת שיחה, לחץ על לחצן הפחתת עוצמת הקול (-) או על לחצן ההפעלה/נעילה כדי להשתיק את הרינגטון או הרטט, או כדי להעביר את השיחה להמתנה.

צפייה בשיחות שלא נענו

במקרה של שיחה שלא נענתה, הסמל ☒ יופיע בשורת המצב, בחלק העליון של המסך.

כדי להציג את פרטי השיחה שלא נענתה, גרור את שורת המצב כלפי מטה. לחלופין, הקש על ○ < ☎ < **יומן שיחות**.

הפונקציות הנגישות במהלך שיחה

במהלך שיחה, תוכל לגשת למגוון פונקציות על-ידי הקשה על הלחצנים המוצגים על המסך:

- **אנשי קשר:** הצג את רשימת אנשי הקשר במהלך שיחה.
- **ניתוק:** סיים שיחה.
- **מקשים:** הצג או הסר את מקשי החיוג.
- **רמקול:** הפעל את פונקציית הרמקול.
- **השתק:** השתק את הקול כדי שהצד השני לא ישמע את קולך.
- **Bluetooth:** העבר את השיחה למכשיר Bluetooth משויך ומחובר.
- **:** קבל גישה לאפשרויות שיחה רבות.

• פריטי ההגדרה הזמינים עשויים להשתנות בהתאם לאזור או לספק השירות.



ביצוע שיחה בת שלושה משתתפים

במהלך שיחה, תוכל להתקשר לאיש קשר נוסף.

- 1 במהלך שיחה, הקש על **:** < **הוסף שיחה**.
 - 2 הזן מספר טלפון ולאחר מכן הקש על .
 - שתי השיחות יוצגו במסך במקביל והשיחה הראשונה תעבור להמתנה.
 - 3 כדי לעבור לשיחה אחרת, הקש על מספר אחר על המסך.
- כדי להתחיל שיחת ועידה, הקש על **מיוג שיחות**.

• ייתכן שתחויב בתשלום עבור כל שיחה. לקבלת מידע נוסף, פנה לספק השירות שלך.



צפייה ברשומות שיחה

- כדי להציג רשומות שיחה אחרונות, הקש על  <  < **יומן שיחות**. לאחר מכן, תוכל להשתמש בפונקציות הבאות:
- כדי להציג רשומות שיחה מפורטות, בחר איש קשר. כדי לבצע שיחה לאיש קשר שנבחר, הקש על .
- כדי למחוק את כל רשומות השיחה, הקש על **מחק**.

• משך השיחה המוצג עשוי להיות שונה ממשך השיחה המשמש לחיוב. לקבלת מידע נוסף, פנה לספק השירות שלך.

הגדרת אפשרויות שיחה

באפשרותך בחור באפשרויות שיחה שונות.

- 1 הקש על  <  < **חייג** או על **יומן שיחות**.
- 2 הקש על **הגדרות שיחה** ולאחר מכן הגדר את האפשרויות בהתאם להעדפותיך.

הודעות

שליחת הודעה

באמצעות היישום Messages תוכל ליצור הודעות ולשלוח אותן לאנשי קשר נבחרים או לכל אנשי הקשר.

• שליחת הודעות לחו"ל עלולה להיות כרוכה בתשלום נוסף. לקבלת מידע נוסף, פנה לספק השירות שלך.

- 1 הקש על .
 - 2 הקש על .
 - 3 ציין נמען וצור הודעה.
 - כדי לצרף קבצים, הקש על .
 - כדי לגשת לפריטי תפריט אופציונליים, הקש על **הודעות**.
 - 4 הקש על **שלח** כדי לשלוח את ההודעה.
- יישומים שימושיים

קריאת הודעה

תוכל להציג את חליפת ההודעות שלך עם כל איש קשר.

1 הקש על  < .

2 בחר איש קשר מרשימת ההודעות.

קביעת ההגדרות להעברת הודעות

באפשרותך לשנות את הגדרות העברת ההודעות בהתאם להעדפותיך.

1 הקש על  < .

2 הקש על  : < **הגדרות** ברשימת ההודעות.

מצלמה

התחלת המצלמה

תוכל לצלם תמונה או סרטון וידאו כדי להנציח רגעים חשובים.

הקש על  < .

- לפני שאתה מצלם, נקה את עדשת המצלמה במטלית מיקרופיבר. מגע של אצבע בעדשת המצלמה עלולה לגרום לתמונות מטושטשות.
- אם רמת הסוללה נמוכה מ-5%, טען את הסוללה לפני השימוש במצלמה.
- התמונות הנכללות במדריך למשתמש זה עשויות להיות שונות מאלה שנמצאות במכשיר בפועל.
- ניתן לצפות בתמונות ובסרטוני וידאו ולערוך אותם **בגלריה**.
לפרטים, ראה **סקירה כללית של הגלריה**.

החלפת מצב במצלמה


באפשרותך לבחור מצב מצלמה המתאים לסביבת הצילום כדי לצלם תמונות וסרטונים בקלות ובנוחות. במסך המצלמה, הקש על : ובחר במצב הרצוי.



מעבר בין המצלמות

באפשרותך לעבור מהמצלמה הקדמית לאחורית וחזרה בהתאם לסביבת הצילום.

במסך המצלמה, הקש על 📷 או גרור את המסך כלפי מעלה או כלפי מטה, לשמאל או לימין, כדי לעבור בין המצלמה הקדמית למצלמה האחורית.

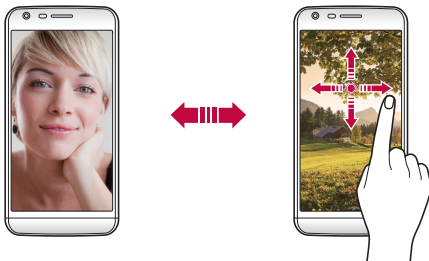

- השתמש במצלמה הקדמית לצילום תמונות סלפי. לפרטים, ראה **צילום תמונות סלפי**.



מעבר למצלמה הכפולה

תוכל להשתמש במצלמה הכפולה (השנייה) בגב המכשיר כדי לצלם תמונות עם העדשה הרגילה או העדשה בזווית רחבה. הקש על  /  כדי להחליף בין העדשה הרגילה והעדשה בזווית רחבה של המצלמה.

זום להתקרבות או התרחקות מהאובייקט המצולם

- באפשרותך להשתמש בתכונת ההגדלה או ההקטנה במסך המצלמה בעת צילום תמונה או הקלטת סרטון וידאו.
- במסך המצלמה, בצע באצבעותיך תנועת צביטה או פריסה כדי להתרחק או להתקרב אל האובייקט המצולם.
- לאחר מכן, המכשיר יחליף באופן אוטומטי בין העדשה בזווית רחבה לבין העדשה הרגילה שבגב המכשיר כדי לצלם תמונה או להקליט סרטון וידאו.


מצב פשוט

- תוכל לצלם תמונות על-ידי הקשה פשוטה על המסך.
- 1 במסך המצלמה, הקש על  < .
 - 2 הכנס את האובייקט המצולם למסגרת והקש על המסך.

מצב אוטומטי

תוכל לצלם תמונות או להקליט סרטוני וידאו על-ידי בחירת מגוון מצבי צילום ואפשרויות.

- 1 במסך המצלמה, הקש על  < :> .
- 2 כדי לצלם תמונה, הקש על . כדי לצלם סרטון וידאו, הקש על .

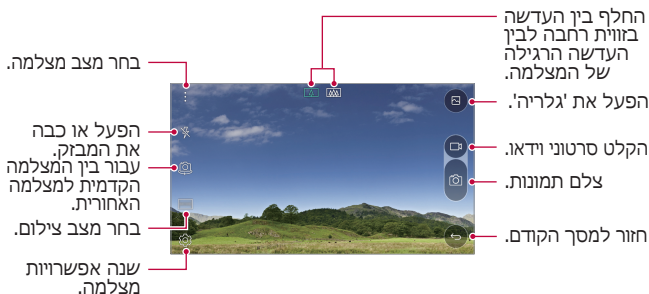

צילום תמונה

- 1 בחר מצב צילום והקש על העצם שבו ברצונך למקד את המצלמה.
 - 2 הקש על  כדי לצלם תמונה.
- לחלופין, הקש על מקש עוצמת קול.

- כאשר המסך כבוי או נעול, הפעל את המצלמה בשתי לחיצות מהירות על מקש החלשת עוצמת הקול (-). כדי להפעיל פונקציה זו, הקש על  < **הגדרות** < **כללי** והפעל את **מקש קיצור דרך**. כדי לצלם מיד עם הפעלת המצלמה באמצעות מקש החלשת עוצמת הקול (-), הפעל את התכונה **צילום מהיר**.


הקלטת סרטון וידאו

- 1 בחר מצב צילום והקש על העצם שבו ברצונך למקד את המצלמה.
- 2 הקש על .
 - | כדי לצלם תמונה תוך כדי צילום סרטון וידאו, הקש על .
 - כדי להשהות את הצילום של סרטון וידאו, הקש על . כדי לחדש את צילום הווידאו, הקש על .
- 3 הקש על  כדי לסיים את צילום סרטון הווידאו.

Pop-out Picture

תוכל לצלם תמונה או להקליט סרטון וידאו הן בעדשה הרגילה והן בעדשה בזווית רחבה במצלמה הכפולה שבגב המכשיר, כדי לצלם סצירות כאילו הוצבו בתוך המסגרת. הסצירות הנראות במסך הקדמי הקטן יצולמו בעדשה הרגילה של המצלמה, ואילו הסצירות הנראות במסך הרקע הגדול יצולמו באמצעות העדשה בזווית רחבה של המצלמה.

- 1 במצב אוטומטי, הקש על **מצב** < .
- 2 הקש על  ובחר בפריסה הרצויה.
- 3 בחר אפקטים:
 -  : החל אפקט של עדשה קמורה על האזור שצולם באמצעות המצלמה בזווית רחבה.
 -  : החל גווני אפור על האזור שצולם באמצעות המצלמה בזווית רחבה.
 -  : הכהה את קצוות האזור שצולם באמצעות המצלמה בזווית רחבה.
 -  : טשטש את האזור שצולם באמצעות המצלמה בזווית רחבה.
- 4 הקש על  כדי לצלם תמונה. כדי להקליט סרטון וידאו, הקש על .

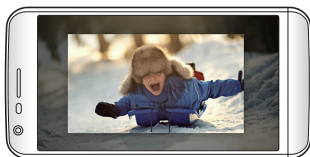

תצוגות מרובות

תוכל לצלם מספר רב של תמונות או סרטונים במתכונת של קולאז' על ידי שימוש במצלמה הקדמית ובמצלמה האחורית. ניתן לשמור תמונות וסרטוני וידאו בפריסות שונות.

- 1 במצב אוטומטי, הקש על **מצב** < .
- 2 הקש על  ובחר פריסה.
- 3 הקש על  כדי לצלם תמונות, בהתאם להוראות המוצגות על המסך. כדי להקליט סרטון וידאו, הקש על .

 - הקש על  כדי לצלם קליפ וידאו קצר.
 - כדי להחליף בין המצלמה הקדמית לאחורית (רגילה או בזווית רחבה), גרור למעלה או למטה, או שמאלה או ימינה.
 - כדי לצלם תמונות רציפות או סרטוני וידאו רציפים במרווחי זמן ספציפיים, הקש הקשה ארוכה על  או על .
 - הקש על  /  כדי לצלם תמונות או סרטוני וידאו במקביל או בזה אחר זה.



וידאו מהיר

תוכל לצלם קטעי וידאו קצרים ולהרכיב מהם סרט קצר בן 60 שניות.

1 במסך המצלמה, הקש על **מצב** <

2 הקש על


- הקש על הסמל פעם אחת כדי להקליט קליפ וידאו באורך שלוש שניות. הקש הקשה ארוכה על הסמל כדי ליצור קליפ וידאו ארוך יותר (אורך מרבי: דקה אחת).

בחר פריסת 'ריבוי תצוגות'.

הצג תצוגה של הקליפ שנבחר.

ציר הזמן.

הפעל את כל הקליפים.

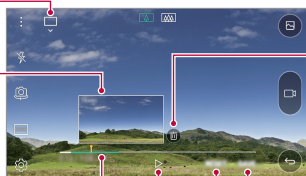

מחק את הקליפ שנבחר.

שמור את סרטון הווידאו.

מחק את כל הקליפים.

3 הקש על **שמור**.

פנורמה

תוכל ליצור תמונה פנורמית על ידי הזזת המצלמה בכיוון אחד כדי לצלם ולחבר יחד צילומים רציפים של נוף רחב.

1 במצב אוטומטי, הקש על **מצב** <

2 הקש על ולאחר מכן הזז בקצב איטי את המצלמה בכיוון אחד.

- הזז את המכשיר בכיוון החץ שמופיע בהנחיה.

3 הקש על □ כדי לסיים את הצילום.



וידאו בהילוך איטי

באפשרותך ליצור סרטון וידאו משעשע על ידי שינוי מהירות התנועה של המצולמים. תכונה זו מאפשרת לצלם וידאו במהירות גבוהה יותר ולאחר מכן להקרין אותו במהירות רגילה, כך שהתנועה נראית בהילוך איטי.

- 1 במצב אוטומטי, הקש על **מצב** < ☾☾☾.
- 2 הקש על □ והקלט סרטון.
- 3 הקש על □ כדי לסיים את צילום סרטון הווידאו.



הילוך מהיר

באפשרותך לצלם סדרה של מסגרות במרווחי זמן קבועים כדי לתעד שינויים המתרחשים באיטיות לאורך זמן, כמו למשל תנועת עננים, תנועת גרמי השמיים בלילה, תנועה בכבישים ועוד.

- 1 במצב אוטומטי, הקש על **מצב** < ⌚.

2 הקש על  והקלט סרטון.

• כדי לכוונן את קצב הפעלת סרטון הווידאו, הקש על .

3 הקש על  כדי לסיים את צילום סרטון הווידאו.



• בצילום סרטון וידאו בטיים-לאפס אין הקלטת קול נלווית. 

צילום רציף

תוכל לצלם צילומים רציפים של תמונות כדי ליצור תמונות נעות.

במסך המצב האוטומטי, לחץ לחיצה ארוכה על .

• צילומים רציפים מצולמים במהירות מהירה כאשר  מוחזק לחוץ.

• ניתן לצלם עד שלושים (30) תמונות ברצף. 

התחברות למצלמות של חברים עם מכשיר LG

תוכל לחבר את המכשיר למצלמה אחרת כדי לצפות בתמונות או

בסרטוני וידאו השמורים במצלמה.

• פונקציה זו זמינה בעת שימוש בריבוי תצוגות או בצילום מהיר. 

• מצלמות LG Friends שניתן לחבר אל מכשיר זה הן אביזרים אופציונליים. פנה למרכז שירות הלקוחות של LG לצורך רכישה.

• ייתכן שלא תהיה תמיכה בפונקציה זו או שחלק מהאפשרויות הקיימות בה ישתנו בהתאם לאזור או לספק השירות.

התאמה אישית של אפשרויות במצלמה

תוכל להתאים אישית מגוון אפשרויות מצלמה כדי להתאימה לצרכיך. במצב אוטומטי, הקש על .

- האפשרויות הזמינות משתנות בהתאם למצלמה הנבחרת (מצלמה קדמית או אחורית) ולמצב הצילום שנבחר.

בחר יחס תצוגה לתמונות או איכות תמונה לסרטוני וידאו.	16:9
קבל תמונות או סרטונים בצבעים חיים ואפקטים של פיצוי אפילו אם הפריטים צולמו מול האור. פונקציות אלה כלולות בטכנולוגיית HDR (טווח דינמי גבוה) הכלולה במצלמת המכשיר.	HDR AUTO
החל אפקטים של סרטים על תמונות.	
הגדר את הטיימר לצילום אוטומטי של תמונות לאחר פרק זמן שצוין.	 OFF
צלם תמונות עם פקודות קוליות. (האפשרויות הזמינות: Smile, Cheese, Whisky, Kimchi, LG)	 OFF
צמצם טשטוש כתוצאה מתנועה בעת צילום של תמונה או סרטון וידאו.	 / 
• הקלט סרטון וידאו בצורה יציבה כאשר אתה זז או הולך. • צמצם טשטוש קל בעת צילום של תמונה או סרטון וידאו.	 / 
הצג קווים מנחים כך שתוכל לצלם תמונות או סרטוני וידאו בהתבסס על קווי ייחוס אופקיים ואנכיים.	
הגדר את המיקומים שבהם תרצה לשמור תמונות וסרטוני וידאו. אפשרויות אלה מופיעות כאשר הוכנס כרטיס זיכרון חיצוני.	 / 
• שמור באחסון הפנימי. • שמור בכרטיס הזיכרון החיצוני.	 / 
התאם אישית את הגדרות הצילום האוטומטי. אפשרויות אלה מופיעות בעת שימוש במצלמה הקדמית.	 / 
• צלם באמצעות תכונת הצילום מבוסס המחוות. • צלם כאשר המצלמה מזהה פנים.	 / 

בחר אם להשתמש בתצוגת מחוות כדי להציג תמונה שצילמת מיד לאחר הצילום. אפשרויות אלה מופיעות בעת שימוש במצלמה הקדמית. • הפעל תצוגת מחוות.  • כבה תצוגת מחוות. 	
היפוך תמונות. אפשרויות אלה מופיעות בעת שימוש במצלמה הקדמית. •  /  : אל תהפוך את התמונה. •  : הפוך את התמונה בכיוון אופקי.	

החלת אפקטים של סרט

תוכל להחיל מסננים בצבעים שונים על תמונות.

- 1 במצב אוטומטי או במצב ידני, הקש על  < .
- 2 בחר באפקט הרצוי.

מצב ידני

תוכל ליצור תמונות בעלות מגע מקצועי על-ידי שימוש במגוון תכונות מתקדמות. כוונן את איזון הלבן, המיקוד, הבהירות, ה-ISO, מהירות הצמצם ואפשרויות אחרות.

- 1 במסך המצלמה, הקש על : < .
- 2 התאמה אישית של אפשרויות צילום.



- | | |
|----------------------|------------------------|
| כוונן את איזון הלבן. | כוונן את רמת החשיפה. |
| כוונן את המיקוד. | כוונן את מהירות הצמצם. |
| כוונן את הבהירות. | כוונן את מהירות ה-ISO. |

צילום תמונות סלפי


תוכל להשתמש במצלמה הקדמית כדי להציג את פניך על המסך ולצלם סלפי.

- בעת שימוש במצלמה הקדמית תוכל לשנות את אפשרויות הצילום של תמונות סלפי במצלמה. לפרטים, ראה **התאמה אישית של אפשרויות במצלמה**.



צילום מבוסס מחווה

תוכל לצלם תמונות סלפי באמצעות מחוות. הצג את כף ידך למצלמה הקדמית ולאחר מכן סגור אותה לאגרוף. • בתוך שלוש שניות תצולם תמונה.

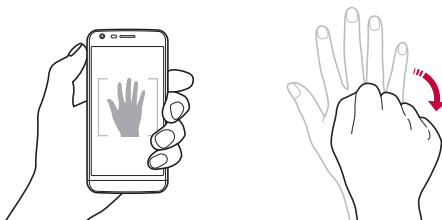

- כדי להשתמש בפונקציה זו, ודא שהאפשרות  [נבחרה באפשרויות המצלמה.
- דרך חלופית לצילום מבוסס מחוות היא לסגור את כף היד לאגרוף ולאחר מכן לפתוח אותה לכיוון המצלמה הקדמית.
- ודא שכף היד והאגרוף שלך נכללים בתוך קו הייחוס כך שהמצלמה תוכל לזהות אותם.
- ייתכן שהגישה לפונקציות מסוימות תהיה מוגבלת במהלך צילום תצוגות מרובות.



צילום מבוסס מרווחי זמן

תוכל לצלם תמונות סלפי ברצף.

- בעת שימוש במצלמה הקדמית, לחץ לחיצה ארוכה על [📷]. לחלופין, הצג את כף ידך למצלמה ולאחר מכן צור אגרוף פעמיים במהירות.
- המכשיר יצלם ארבע תמונות במרווח של שתי שניות.



צילום סלפי אוטומטי

אתה יכול להיעזר בתכונת זיהוי הפנים כדי לצלם תמונות סלפי בקלות ובנוחות. ניתן להגדיר את המכשיר כך, שכאשר אתה מביט במסך המצלמה הקדמית מזהה את פרצופך ומצלמת סלפי באופן אוטומטי.

- כאשר המצלמה הקדמית מזהה את פרצופך, המסגרת נעשית לבנה. אם בשלב זה תפסיק לנוע, צבע המסגרת יהפוך לכחול והמצלמה הקדמית תצלם תמונה.




- כדי להפעיל את הפונקציה לצילום אוטומטי של סלפי, הקש על [⚙️] ולאחר מכן על [👤], עד שיופיע הכיתוב [צ'].



תצוגה מבוססת מחווה

לאחר צילום סלפי באמצעות המצלמה הקדמית, תוכל לראות תצוגה מקדימה של הסלפי מיד אם תקרב את המסך לפנים שלך.

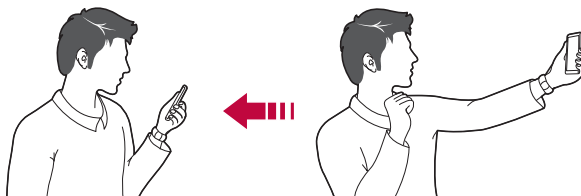

- כדי להשתמש בפונקציה זו, ודא שהאפשרות  נבחרה באפשרויות המצלמה.
- רק תצוגה מקדימה אחת תהיה זמינה לאחר צילום של תמונה.
- אם תסובב את המכשיר כשהמסך במצב תצוגה מקדימה, המסך יחזור למצב מצלמה.

גלריה

סקירה כללית של הגלריה

תוכל להציג ולנהל תמונות וסרטוני וידאו שנשמרו במכשיר.

- 1 הקש על  < .
- תמונות וסרטוני וידאו שנשמרו מוצגים לפי תיקיות.
- 2 הקש על תיקייה ובחר קובץ.
- הצג את הקובץ שנבחר במצב מסך מלא.
- החלק לשמאל או לימין על התמונה או הסרטון שבמסך כדי להציג את הקובץ הקודם או הבא.

- ייתכן שחלק מתבניות הקבצים אינן נתמכות, בהתאם לתוכנות המותקנות.
- ייתכן שקבצים מסוימים לא ייפתחו עקב קידוד.
- קבצים שחורגים ממגבלת הגודל עלולים לגרום לשגיאה.


הצגת תמונות



עריכת תמונות

- 1 תוך כדי הצגת תמונה, הקש על ✎.
 - 2 ערוך את התמונה בעזרת מגוון של אפקטים וכלי עריכה.
 - 3 הקש על ✓ כדי להחיל שינויים.
 - 4 הקש על **שמור** כדי לשמור שינויים.
- התמונה הערוכה תחליף את הקובץ המקורי.
 - כדי לשמור את התמונה שנערכה כקובץ אחר, הקש על : < **שמור עותק**.

הפעלת קובץ וידאו

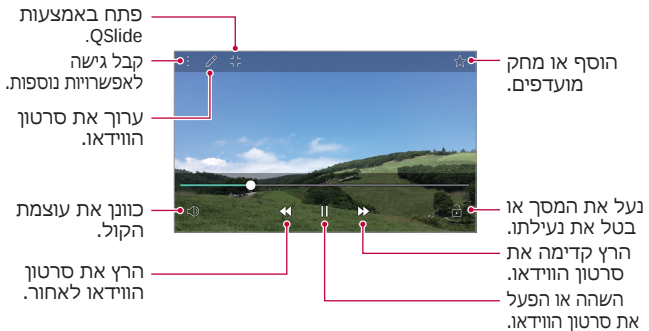


- כדי לכוונן את עוצמת הקול, גרור את הצד הימני של מסך הווידאו למעלה או למטה.
- כדי לכוונן את בהירות המסך, גרור את הצד השמאלי של מסך הווידאו מעלה או מטה.



עריכת סרטוני וידאו

- 1 במסך התצוגה המקדימה של הווידאו, הקש על ✎.
- 2 השתמש במגוון אפקטים וכלי עריכה כדי לערוך את סרטון הווידאו.

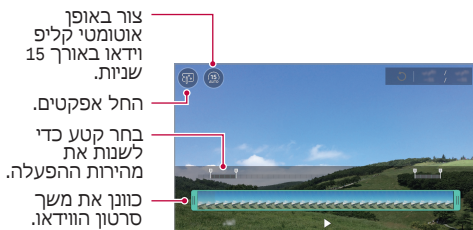

- 3 הקש על **שמור** כדי לשמור שינויים.

מחיקת קבצים

- תוכל למחוק קבצים באמצעות אחת משתי האפשרויות הבאות:
- הקש הקשה ממושכת על קובץ ברשימה, ולאחר מכן הקש על **מחק**.
 - ברשימת הקבצים, הקש על ☰ ובחר קובץ.

שיתוף קבצים

- תוכל לשתף קבצים באמצעות אחת משתי האפשרויות הבאות:
- תוך כדי הצגת תמונה או סרטון וידאו, הקש על 📎 כדי לשתף את הקובץ בשיטה הרצויה.
 - ברשימת הקבצים, הקש על 📎 כדי לבחור קובץ ולשתף אותו בשיטה הרצויה.

מחשבון



לרשותך מחשבון משני סוגים: פשוט ומדעי.

- 1 הקש על $\bigcirc$ < כלים > **מחשבון**.
 - 2 השתמש בלוח המקשים כדי לבצע חישוב.
- כדי להשתמש במחשבון המדעי, הקש על : < **מחשבון מדעי**.
 - כדי להציג היסטוריית חישובים, הקש על : < **היסטוריית חישובים**.

מזג אויר

תוכל להציג את פרטי מזג האוויר לאזור מסוים.

- 1 הקש על $\bigcirc$ < כלים > **מזג אויר**.
 - 2 הקש על + והוסף את העיר הרצויה.
- במסך פרטי מזג האוויר, הקש על < / > , או גרור את המסך לשמאל או לימין כדי להציג את מזג האוויר בערים אחרות.

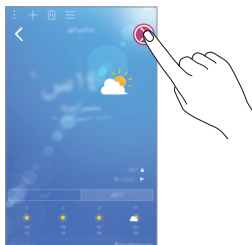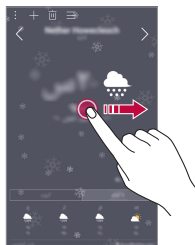

הורדות

תוכל להציג, למחוק או לשתף קבצים שהורדת מהאינטרנט או יישומים.

הקש על $\bigcirc$ < כלים > **הורדות**.

שעון

התראה

תוכל להגדיר התראה שתופעל במועד שצוין.

- 1 הקש על $\bigcirc$ < כלים < שעון < התראה.
- 2 הקש על $+$ כדי להוסיף התראה חדשה.
- 3 קבע את הגדרות ההתראה והקש על שמור.

- אם תבחר התראה שהוגדרה בעבר, תוכל לערוך אותה.
- כדי למחוק התראה, הקש על $\square$ בראש המסך. לחלופין, הקש הקשה ארוכה על ההתראה.

שעון עולמי

תוכל להציג את השעה הנוכחית בערים ברחבי העולם.

- 1 הקש על $\bigcirc$ < כלים < שעון < שעון עולמי.
- 2 הקש על $+$ והוסף עיר.

טיימר

תוכל להגדיר טיימר כדי להפעיל התראה לאחר פרק זמן שצוין.

- 1 הקש על $\bigcirc$ < כלים < שעון < טיימר.
- 2 הגדר את הזמן והקש על התחל.
- כדי להשהות את הטיימר, הקש על הפסק. כדי לחדש את פעולת הטיימר, הקש על המשך.
- כדי לאפס את הגדרות הטיימר, הקש על איפוס.
- 3 הקש על הפסק כדי להפסיק את התראת הטיימר.

שעון עצר

תוכל להשתמש בשעון העצר כדי לתעד את משך הזמן שחלף.

- 1 הקש על  < **כלים** < **שעון** < **שעון עצר**.
- 2 הקש על **התחל** כדי להפעיל את שעון העצר.
 - כדי לתעד זמן הקפה, הקש על **הקפה**.
- 3 הקש על **הפסק** כדי להשהות את שעון העצר.
 - כדי לחדש את פעולת שעון העצר, הקש על **המשך**.
 - כדי למחוק את כל רישומי שעון העצר, הקש על **איפוס**.

הקלטה קולית

תוכל להקליט ולשמור את קולך או קולות של אחרים באירועים חשובים. קובצי הקול המוקלטים יופעלו או ישותפו.

- 1 הקש על  < **כלים** < **הקלטה קולית**.
- 2 הקש על .
 - כדי להשהות הקלטה, הקש על .
- 3 הקש על  כדי לסיים את ההקלטה.
 - הקובץ נשמר באופן אוטומטי ומוצג מסך להאזנה.
- 4 הקש על  כדי להפעיל את הקול המוקלט.

- כדי לשמור את פרטי המיקום של ההקלטה, הקש על **מיקום**.
- כדי לתייג מידע על אירוע נוכחי בהקלטה, הקש על **אירוע**.
לאחר מכן בחר באירוע הרצוי.
- אם תקיש על , קובצי הקול המוקלטים יופיעו. תוכל להפעיל קובץ קול מוקלט מהרשימה.



נגן מוסיקה

תוכל להפעיל ולנהל קובצי מוסיקה שנשמרו במכשיר שלך.

1 הקש על  < LG < נגן מוסיקה.

2 בחר קטגוריה.

3 בחר קובץ מוסיקה.



• ייתכן שחלק מתבניות הקבצים אינן נתמכות, בהתאם לתוכנות המותקנות.

• קבצים שחורגים ממגבלת הגודל עלולים לגרום לשגיאה.

• קובצי מוסיקה עשויים להיות מוגנים על-די בעלים בינלאומיים של זכויות יוצרים או חוקי זכויות יוצרים. ייתכן שתצטרך להשיג אישור משפטי לפני העתקת קובץ מוסיקה. כדי להוריד או להעתיק קובץ מוסיקה, תחילה בדוק את חוק זכויות היוצרים עבור המדינה הרלוונטית.

• מודל זה תומך בהפעלת שמע Hi-Fi. קובצי שמע מסוג Hi-Fi מציגים את סמל Hi-Fi.

סקירה כללית של דוא"ל

תוכל לרשום חשבון דוא"ל במכשיר שלך ולאחר מכן תוכל לבדוק ולשלוח הודעות דוא"ל מהמכשיר.

- אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין דמי השימוש בנתונים, בהתאם לתוכנית המחירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.

רישום חשבונות דוא"ל

כאשר תשתמש ביישום הדוא"ל בפעם הראשונה, תתבקש לרשום את חשבון הדוא"ל שלך.

1 הקש על $\bigcirc < LG < \text{דוא"ל}$.

2 בחר ספק שירותי דוא"ל.

3 הזן את כתובות הדוא"ל ואת הסיסמה, ולאחר מכן הקש על **הבא** כדי לרשום את החשבון שלך.

- כדי לרשום באופן ידני חשבון דוא"ל או כדי לרשום חשבונות דוא"ל שלא נמצאו ברשימה, הקש על **הגדרה ידנית**.

ניהול חשבונות דוא"ל

כדי להציג או לערוך את הגדרות חשבון הדוא"ל שלך, הקש על $< :$ **הגדרות**.

- כדי להוסיף חשבון, הקש על **הוסף חשבון**.
- כדי למחוק חשבון, הקש על $< :$ **הסר חשבון**.

פתיחת חשבון דוא"ל נוסף

אם יש כמה חשבונות דוא"ל רשומים וברצונך להציג חשבון נוסף, הקש על $\equiv$ ובחר חשבון אחר מרשימת החשבונות.

בדיקת דוא"ל

- 1 הקש על $\equiv$ ובחר תיבת דואר.
- 2 בחר דוא"ל מרשימת הדוא"ל.
 - הודעת הדוא"ל תופיע.

שליחת דוא"ל

- 1 הקש על $+$.
- 2 הזן את כתובת הדוא"ל של נמען.
- 3 הזן נושא והודעה.
 - כדי לצרף קבצים, הקש על 📎 .
 - כדי לגשת לפריטי תפריט אופציונליים, הקש על $\therefore$.
- 4 הקש על 📧 כדי לשלוח את הדוא"ל.

אנשי קשר

סקירה כללית של אנשי קשר

באפשרותך לשמור ולנהל אנשי קשר.
הקש על $\bigcirc < LG < \text{אנשי קשר}$.

הוספת אנשי קשר

הוספת אנשי קשר חדשים

- 1 במסך של רשימת אנשי הקשר, הקש על $+$.
- 2 הזן פרטי יצירת קשר והקש על **שמור**.

ייבוא אנשי קשר

תוכל לייבא אנשי קשר מהתקן אחסון אחר.

1 במסך של רשימת אנשי הקשר, הקש על : < **ניהול אנשי קשר** < **ייבוא**.

2 בחר את מיקומי המקור והיעד של איש הקשר שברצונך לייבא ולאחר מכן הקש על **אישור**.

3 בחר אנשי קשר והקש על **ייבוא**.

הוספת אנשי קשר לרשימת מספרי החיוג המהיר

1 במסך של רשימת אנשי הקשר, הקש על : < **חיוג מהיר**.

2 הקש על **הוסף איש קשר** ממספר חיוג מהיר.

3 בחר איש קשר.

חיפוש אנשי קשר

תוכל לחפש אנשי קשר באמצעות אחת משתי האפשרויות הבאות:

- במסך רשימת אנשי הקשר, הזן שם איש קשר בתיבת החיפוש.
- גלול מעלה או מטה ברשימת אנשי הקשר.
- באינדקס של מסך רשימת אנשי הקשר, הקש על האות הראשונה של איש קשר.

רשימת אנשי קשר

עריכת אנשי קשר

1 במסך רשימת אנשי הקשר, בחר באיש הקשר הרצוי.

2 במסך פרטי איש הקשר, הקש על ✎ וערוך את הפרטים.

3 הקש על **שמור** כדי לשמור שינויים.

מחיקת אנשי קשר

1 במסך רשימת אנשי הקשר, לחץ לחיצה ארוכה על איש הקשר הרצוי.

2 הקש על **מחק איש קשר**.

הוספת מועדפים

באפשרותך לרשום אנשי קשר בשימוש נפוץ כמועדפים.

- 1 במסך רשימת אנשי הקשר, בחר באיש הקשר הרצוי.
- 2 במסך פרטי איש הקשר, הקש על ☆.

יצירת קבוצות

- 1 במסך של רשימת אנשי הקשר, הקש על **קבוצות** < : <
קבוצה חדשה.
- 2 הזן שם קבוצה חדשה.
- 3 הקש על **הוסף חברים**, בחר אנשי קשר ולאחר מכן הקש על **הוסף**.
- 4 הקש על **שמור** כדי לשמור את הקבוצה החדשה.

לוח שנה

סקירה כללית של לוח השנה

תוכל להשתמש בלוח השנה כדי לנהל אירועים ומשימות.

הוספת אירועים

- 1 הקש על ○ < **לוח שנה**.
 - 2 בחר תאריך ולאחר מכן הקש על +.
 - 3 הזן פרטי אירוע והקש על **שמור**.
- אם תקיש על תאריך בלוח השנה והתאריך מכיל אירועים, יופיע חלון מוקפץ שמציג רשימה של האירועים. הקש על אירוע בחלון המוקפץ כדי להציג את פרטי האירוע.

סנכרון אירועים

הקש על >: < **לוחות שנה מוצגים** <: < **לוחות שנה לסינכרון**
ובחר את לוח השנה שברצונך לסנכרן.

- בעת שמירת אירועים מהמכשיר שלך אל חשבון Google, מתבצע סינכרון אוטומטי שלהם גם עם לוח השנה של Google. בהמשך תוכל לסנכרן מכשירים אחרים מול לוח השנה של Google כדי שגם באותם מכשירים האירועים יהיו זהים לאלה השמורים במכשיר שלך; לאחר הסינכרון תוכל לנהל את האירועים שלך דרך אותם מכשירים.

Event pocket

תוכל להשתמש ב-Event Pocket כדי ליצור אירועים.

הקש על  כדי לפתוח את ה-Event Pocket ולאחר מכן גרור תוכן לתאריך בלוח השנה.

- : נהל תמונות, טקסט, הערות ואירועים שנשמרו באופן זמני. תוכל גם לשתף טקסט, תמונות והערות מיישום אחר ולשמור אותם בארגז האירועים. אם תקיש על **כיס** בעת יצירת אירוע, האירוע יישמר באופן זמני ב-Event Pocket.
- : הוסף חשבון Facebook כדי להציג מידע על אירועים של Facebook. ייתכן שמכשירים מסוימים אינם תומכים בפונקציה שמציגה מידע על אירועים של Facebook.
- : הצג מידע תיירותי על האזור הקרוב, כגון מיקום של מסעדות ושירותים נוחים כדי לתכנן אירוע.
- : נהל משימות שאין להן תאריך יעד, כמו למשל אירועים.

מנהל הקבצים

תוכל להציג ולנהל קבצים שנשמרו במכשיר שלך או בענן.

1 הקש על  < **כלים** < **מנהל הקבצים**.

2 הקש על  ובחר במיקום האחסון הרצוי.

משימות

תוכל לרשום משימות במכשיר שלך כדי לנהל בקלות לוחות זמנים.

- 1 הקש על  < כלים > משימות.
- 2 הקש על  כדי להוסיף משימה.
- 3 הזן פרטי משימה ולאחר מכן הקש על שמור.

Evernote

תוכל לכתוב ולאסוף מידע חשוב ולאחר מכן לשתף זאת עם מכשירים אחרים שתומכים ב-Evernote.

הקש על  < יישומים מומלצים > Evernote.

שירות התראות חירום

תוכל להציג שידורי טקסט בזמן במצבי חירום, כגון סופות טיפון, שיטפונות ורעידות אדמה.

הקש על  < כלים > שירות התראות חירום.

רדיו FM

תוכל להאזין לרדיו FM.

הקש על  < כלים > רדיו FM.

- כדי להשתמש ביישום זה, תחילה חבר אונייה למכשיר. האונייה הופלת לאנטנת הרדיו.
- התמיכה באפשרות זו תלויה באזור.



LG Backup

תוכל לגבות, לשחזר ולהעביר נתונים שנשמרו במכשיר שלך.

- 1 הקש על  < **כלי ניהול** < **LG Backup**.
לחלופין, הקש על  < **הגדרות** < **כללי** < **גיבוי ואיפוס** < **LG Backup**.

- 2 פעל לפי ההנחיות שבמסך כדי לבחור אם לגבות נתונים בתיקיית הגיבוי הקיימת במכשיר או להעתיק אותם אל מכשירים אחרים.

- אתחול המכשיר עשוי למחוק קובצי גיבוי שנשמרו בשטח אחסון פנימי. כדי למזער את אובדן הנתונים, העתק קובצי חשבים מתיקיית הגיבוי של LG בשטח האחסון הפנימי למחשב או להתקן אחסון חיצוני.



- הנתונים בחשבון Google לא יגובו. כאשר תסנכרן את חשבון Google, יישומי Google, אנשי הקשר של Google, לוח השנה של Google, תזכירים של Google, נתוני היישומים והיישומים שהורדת מחנות Play יאוחסנו ביישום הכונן באופן אוטומטי.
- קובצי גיבוי נשמרים עם סיומת הקובץ *.lbf. בתיקייה LG Backup בכרטיס הזיכרון או באחסון הפנימי.
- טען את הסוללה במלואה לפני שתגבה או תשחזר נתונים כדי למנוע כיבוי לא מכוון באמצע התהליך.



תוכל להוריד מגוון משחקים, תכני שמע, יישומים וגופנים המסופקים על-ידי LG Electronics. התאם אישית את המכשיר שלך כדי להתאימו להעדפותיך באמצעות ערכות הנושא של המסך הראשי, ערכות הנושא של המקלדת וגופנים.

1 הקש על $\bigcirc$ < LG < **SmartWorld**.

2 הזן את המזהה והסיסמה, ולאחר מכן היכנס.

3 בחר פריטי תוכן והורד אותם.

מוריד את SmartWorld

אם היישום **SmartWorld** לא מותקן, בצע את הפעולות הבאות להורדתו.

1 הקש על $\bigcirc$ < הגדרות < כללי < אודות הטלפון < מרכז עדכונים < עדכוני אפליקציות.

2 ברשימה, בחר **SmartWorld** והקש על הורדות.

- אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין דמי השימוש בנתונים, בהתאם לתוכנית המחירים שלך.
- ייתכן שלא תהיה תמיכה בתכונה זו, התמיכה נקבעת בהתאם לאזור או לספק השירות.



יישומי Google

כדי להשתמש ביישומי Google, הגדר חשבון Google. חלון הרישום של חשבון Google יופיע באופן אוטומטי כאשר תשתמש ביישום של Google בפעם הראשונה. אם אין לך חשבון Google, צור חשבון במכשיר שלך. לפרטים בנוגע לאופן השימוש ביישום, עיין בעזרה שסופקה ביישום.

• ייתכן שיישומים מסוימים לא יפעלו, בהתאם לאזור ולספק השירות.

Chrome

היכנס ל-Chrome ויבא כרטיסיות פתוחות, סימניות ונתוני שורת כתובת ממחשב למכשיר שלך.

Docs

צור מסמכים או ערוך מסמכים שנוצרו באינטרנט או במכשיר אחר. שתף וערוך מסמכים עם אחרים.

Drive

העלה, שמור, פתח, שתף וסדר קבצים במכשיר שלך. ניתן לגשת לקבצים הנגישים מהיישומים מכל מקום, כולל סביבות מקוונות ולא מקוונות.

Gmail

רשום את חשבון הדוא"ל של Google במכשיר שלך כדי לבדוק אם הגיע דוא"ל או כדי לשלוח דוא"ל.

Google

היעזר בפונקציית החיפוש של Google לחיפוש באתרי אינטרנט ובקבצים ששמרת במכשיר שלך באמצעות הזנה רגילה או קולית של מילות מפתח.

Hangouts

החלף הודעות. בצע שיחת וידאו עם אדם או קבוצה.

מפות

חפש את המיקום שלך או את המיקום של מקום על המפה. הצג מידע גיאוגרפי.

תמונות

הצג או שתף תמונות או אלבומים השמורים במכשיר שלך.

וטלוויזיה סרטים Play

השתמש בחשבון Google כדי לשכור או לרכוש סרטים. קנה תוכן והפעל אותו בכל מקום.

מוזיקה Play

קנה קובצי מוזיקה מ-**חנות Play**. הפעל קובצי מוזיקה שנשמרו במכשיר שלך.

Sheets

צור גיליונות אלקטרוניים או ערוך גיליונות אלקטרוניים שנוצרו באינטרנט או במכשיר אחר. שתף וערוך גיליונות אלקטרוניים עם אחרים.

Slides

צור חומרים למצגת או ערוך חומרים למצגת שנוצרו באינטרנט או במכשיר אחר. שתף וערוך חומרים למצגת עם אחרים.

חיפוש קולי

כדי לחפש מידע ב-Google, אמור מילת מפתח בקול במקום להקליד אותה.

YouTube

חפש והפעל סרטונים. העלה סרטוני וידאו ל-YouTube כדי לשתף אותם עם אנשים ברחבי העולם.



04

Phone Settings **(הגדרות טלפון)**

הגדרות

תוכל להתאים אישית את הגדרות המכשיר על פי העדפותיך.
הקש על  < **הגדרות**.

-  הקש על  והזן מילת מפתח בתיבת החיפוש כדי לגשת לפריט הגדרה.
- הקש על **:** כדי לשנות את מצב התצוגה. מדריך למשתמש זה מניח שאתה משתמש ב**תצוגת לשוניות**.

רשתות

Wi-Fi

תוכל להתחבר למכשירים סמוכים או באמצעות רשת Wi-Fi.

התחברות לרשת Wi-Fi

- 1 במסך ההגדרות, הקש על **רשתות** < **Wi-Fi**.
- 2 גרור את  כדי להפעיל אפשרות זו.
 - רשתות ה-Wi-Fi הזמינות יופיעו באופן אוטומטי.
- 3 בחר רשת.
 - ייתכן שתצטרך להזין את סיסמת ה-Wi-Fi של הרשת.
 - המכשיר מדלג על תהליך זה עבור רשתות Wi-Fi שבוצעה אליהם גישה בעבר. אם אינך רוצה להתחבר באופן אוטומטי לרשת Wi-Fi מסוימת, הקש הקשה ארוכה על הרשת ולאחר מכן הקש על **שכח רשת**.

הגדרות רשת Wi-Fi

במסך ההגדרות, הקש על **רשתות < Wi-Fi**.


- **עבור לנתונים ניידים:** אם תופעל פונקציית הנתונים הניידים אך המכשיר לא יצליח להתחבר לאינטרנט באמצעות Wi-Fi, המכשיר יתחבר לאינטרנט באופן אוטומטי באמצעות פונקציית הנתונים הניידים.
- :: התאם אישית את ההגדרות של רשת Wi-Fi

Wi-Fi Direct

תוכל לחבר את ההתקן שלך להתקנים אחרים שתומכים ב-Wi-Fi Direct כדי לשתף נתונים ישירות איתם. אינך צריך נקודת גישה. תוכל להתחבר עם יותר משני מכשירים באמצעות Wi-Fi Direct.

1 במסך ההגדרות, הקש על **רשתות < Wi-Fi < :: Wi-Fi מתקדם < Wi-Fi Direct**.

- מכשירים סמוכים שתומכים ב-Wi-Fi Direct יופיעו באופן אוטומטי.
- 2 בחר התקן.
- החיבור מתרחש כאשר המכשיר מקבל את בקשת החיבור.

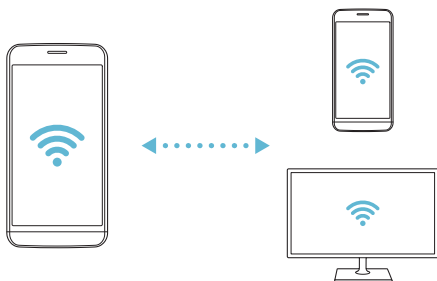

• בעת שימוש ב-Wi-Fi Direct, הסוללה עשויה להתרוקן מהר יותר. 

Bluetooth

תוכל לחבר את המכשיר שלך למכשירים סמוכים שתומכים ב-Bluetooth כדי להחליף איתם נתונים. חבר את המכשיר לאזניית Bluetooth ולמקלדת. בדרך זו תוכל לשלוט בקלות רבה יותר במכשיר.

שיוך עם מכשיר אחר

1 במסך ההגדרות, הקש על **רשתות < Bluetooth**.

2 גרור את  כדי להפעיל אפשרות זו.

- המכשירים הזמינים מופיעים באופן אוטומטי.
- כדי לרענן את רשימת המכשירים, הקש על **חיפוש**.

• רק מכשירים שבהם אפשרות החיפוש מופעלת מוצגים ברשימה. 

3 בחר מכשיר מהרשימה.

4 פעל לפי ההוראות שעל המסך כדי לבצע את האימות.

• המערכת מדלגת על שלב זה עבור מכשירים שבוצעה אליהם גישה בעבר. 

שליחת נתונים דרך חיבור Bluetooth

1 בחר קובץ.

- תוכל לשלוח קובצי מולטימדיה או אנשי קשר.

2 הקש על  < **Bluetooth**.

3 בחר מכשיר יעד עבור הקובץ.

- הקובץ יישלח ברגע שמכשיר היעד יקבל אותו.

• תהליכי שיתוף הקבצים עשויים להשתנות, בהתאם לקובץ. 

נתונים ניידים

תוכל להפעיל או לקבל נתונים לנייד. תוכל גם לנהל את השימוש בנתונים לנייד.

הפעלת נתונים לנייד

- 1 במסך ההגדרות, הקש על **רשתות > נתונים ניידים**.
- 2 גרור את  כדי להפעיל אפשרות זו.

התאמה אישית של הגדרות הנתונים לנייד

- 1 במסך ההגדרות, הקש על **רשתות > נתונים ניידים**.
 - 2 התאם אישית את ההגדרות הבאות:
- **נתונים ניידים:** הגדר שימוש ברשתות סלולריות לצורך חיבורי נתונים.
 - **הגבל שימוש בנתונים ניידים:** הגדר מגבלה לשימוש בנתונים לנייד כדי לחסום נתונים לנייד אם הגעת למגבלה.
 - **:** : התאם אישית את ההגדרות הנתונים לנייד.

הגדרות שיחה

תוכל להתאים אישית את הגדרות השיחה, כגון אפשרויות שיחה קולית ושיחה בינלאומית.


- 1 במסך ההגדרות, הקש על **רשתות > הגדרות שיחה**.
- 2 התאם אישית את ההגדרות.

• ייתכן שחלק מהפונקציות אינן נתמכות, בהתאם לאזור ולספק השירות.



תוכל להשתמש במכשיר גם ככרטיס נסיעה בתחבורה ציבורית או ככרטיס אשראי. תוכל גם לשתף נתונים עם המכשיר השני.

- 1 במסך ההגדרות, הקש על **רשתות > שתף והתחבר > NFC**.
 - 2 גרור את  כדי להפעיל אפשרות זו.
- הצמד את המכשיר שלך למכשיר השני התומך ב-NFC כדי לאפשר שיתוף נתונים.
 - המיקום של אנטנת NFC תלוי בסוג המכשיר.

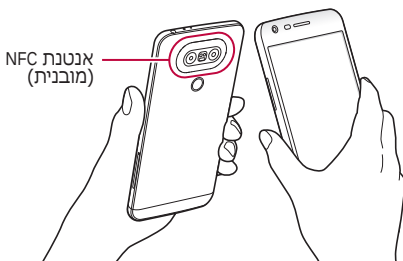

Android Beam

תוכל לשתף קבצים על ידי הצמדת גב המכשיר אל מכשיר השני. תוכל גם לשתף קבצים, כולל מוסיקה, סרטונים או אנשי קשר ואף לפתוח דף אינטרנט או להפעיל יישום דרך המכשיר השני.

- 1 במסך ההגדרות, הקש על **רשתות > שתף והתחבר > Android Beam**.
- 2 הצמד את גב המכשיר אל המכשיר השני.

• המיקום של אנטנת NFC תלוי בסוג המכשיר. 

שיתוף קבצים

תוכל לשלוח ולקבל קבצים בין המכשיר שלך למכשירים או טאבלטים אחרים של LG.

1 במסך ההגדרות, הקש על **רשתות > שתף והתחבר > שיתוף קבצים**.

2 התאם אישית את ההגדרות הבאות:

- **G5 SE**: שנה את שם המכשיר.
- **שמור ב**: הגדר את תיקיית היעד שבה יישמרו קבצים שנשלחו ממכשירים אחרים.
- **שיתוף קבצים**: אפשר קבלה של קבצים שנשלחו ממכשירים אחרים.
- **SmartShare Beam**: שתף קבצים עם מכשירים אחרים דרך SmartShare Beam.

• לפרטים, ראה **שליחה או קבלה של קבצים**. 

שרת מדיה

תוכל לשתף תוכן מדיה במכשיר שלך עם מכשירים סמוכים שתומכים ב-DLNA.

1 במסך ההגדרות, הקש על **רשתות > שתף והתחבר > שרת מדיה**.

2 התאם אישית את ההגדרות הבאות:

- **שיתוף תוכן**: שתף תוכן במכשיר עם מכשירים סמוכים.
- **G5 SE**: הגדר את שם המכשיר שלך.
- **תוכן לשיתוף**: בחר את סוג תוכן המדיה כדי לשתף עם מכשירים אחרים.
- **מכשירים מורשים**: הצג רשימה של מכשירים שמורשים לגשת לתוכן במכשיר.
- **התקנים לא מורשים**: הצג רשימה של מכשירים שאינם מורשים לגשת לתוכן במכשיר.

שתף מסך

תוכל להקרין את המסך ולהשמיע את הצלילים מהמכשיר באמצעות מכשיר אחר, כמו למשל טלוויזיה, בתנאי שהוא תומך בפונקציה Miracast.

- 1 במסך ההגדרות, הקש על **רשתות** > **שתף והתחבר** > **שתף מסך**.
 - 2 גרור את  כדי להפעיל אפשרות זו.
 - 3 בחר מכשיר מרשימה של מכשירים סמוכים.
- אם המכשיר הרצוי אינו מופיע, הקש על **חיפוש** כדי לרענן את הרשימה.
 - לאחר ההתחברות למכשיר, המכשיר מציג את מסך המכשיר שלך.

• שיתוף המסך יכבה באופן אוטומטי אם אין מכשיר תואם לשיתוף בקרבת מקום.



LG AirDrive

תוכל להשתמש בחשבון LG ממחשב כדי לנהל קבצים שנשמרו במכשיר. אינך צריך חיבור USB.

- 1 במסך ההגדרות, הקש על **רשתות** > **שתף והתחבר** > **LG AirDrive**.
 - 2 השתמש בחשבון LG יחיד כדי להיכנס ל-LG Bridge במחשב ול-LG AirDrive במכשיר.
 - 3 נהל קבצים במכשיר מהמחשב.
- ניתן להוריד את תוכנת LG Bridge מאתר www.lg-mobile.co.il.

הדפסה

תוכל לחבר את המכשיר למדפסת Bluetooth ולהדפיס תמונות או מסמכים השמורים במכשיר.

- 1 במסך ההגדרות, הקש על **רשתות** < **שתף והתחבר** < **הדפסה**.

• אם המדפסת הרצויה אינה מצוינת ברשימה, התקן את מנהל ההתקן של המדפסת מחנות היישומים.



- 2 גרור את  כדי להפעיל אפשרות זו.
- 3 בחר מדפסת במסך רשימת המדפסות.
 - כדי להוסיף מדפסת, הקש על : < **הוסף מדפסת**.
 - כדי לחפש שם מדפסת, הקש על : < **חפש**.
 - הקש על : < **הגדרות** במסך רשימת המדפסות.
- 4 בחר קובץ והקש על : < **הדפס**.
 - המסמך מודפס.


• אם אין לך חשבון Google, הקש על **הוסף חשבון** כדי ליצור חשבון.



שיתוף באמצעות USB

תוכל לחבר את המכשיר למכשיר אחר דרך USB ולשתף נתונים לנייד.

- 1 חבר את המכשיר והמכשירים האחרים באמצעות כבל USB.
- 2 במסך ההגדרות, הקש על **רשתות** < **שיתוף אינטרנט** < **שיתוף באמצעות USB** ולאחר מכן החלק על  כדי להפעיל אפשרות זו.

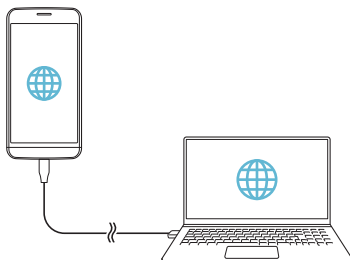


- אפשרות זו משתמשת בנתונים לנייד, ועשויה להיות כרוכה בתשלום, בהתאם לתוכנית המחירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.
- בעת התחברות למחשב, הורד את מנהל התקן ה-USB מהאתר www.lg-mobile.co.il והתקן אותו במחשב.
- לא ניתן להעביר קבצים בין המכשיר למחשב כאשר חיבור לאינטרנט באמצעות USB מופעל. כבה את החיבור לאינטרנט באמצעות USB כדי לשלוח או לקבל קבצים.
- מערכות הפעלה שתומכות בחיבור לאינטרנט הן Windows XP ואילך, או Linux.



נקודה חמה ניידת ב- Wi-Fi

תוכל להגדיר את המכשיר כנתב אלחוטי כך שהמכשירים האחרים יוכלו להתחבר לאינטרנט באמצעות חיבור הנתונים לנייד של המכשיר.

- 1 במסך ההגדרות, הקש על **רשתות** < **שיתוף אינטרנט** < **נקודה חמה ניידת ב- Wi-Fi** ולאחר מכן החלק על  כדי להפעיל אפשרות זו.
- 2 הקש על **הגדרת נקודה חמה של Wi-Fi** והזן מזהה Wi-Fi (SSID) וסיסמה.
- 3 הפעל את Wi-Fi במכשיר השני ובחר את השם של רשת המכשיר ברשימת ה-Wi-Fi.
- 4 הזן את סיסמת הרשת.

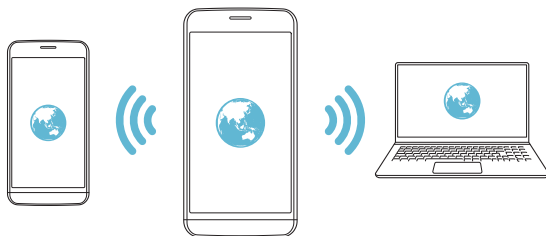

- אפשרות זו משתמשת בנתונים לנייד, ועשויה להיות כרוכה בתשלום, בהתאם לתוכנית המכירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.


- לרשותך מידע נוסף באתר אינטרנט זה:
<http://www.android.com/tether#wifi>



שיתוף אינטרנט ב-Bluetooth

ניתן לחבר מכשיר עם חיבור Bluetooth לאינטרנט דרך חיבור הנתונים לנייד במכשיר שלך.

- 1 במסך ההגדרות, הקש על **רשתות** < **שיתוף אינטרנט** < **שיתוף אינטרנט ב-Bluetooth** ולאחר מכן החלק על  כדי להפעיל אפשרות זו.
- 2 הפעל את Bluetooth בשני המכשירים ושייך אותם.

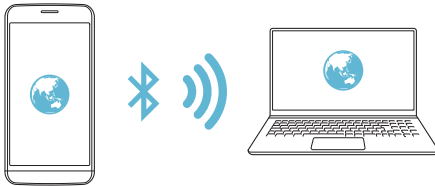

- אפשרות זו משתמשת בנתונים לנייד, ועשויה להיות כרוכה בתשלום, בהתאם לתוכנית המחרים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.
- מידע נוסף זמין באתר אינטרנט זה:
http://www.android.com/tether#Bluetooth_tethering



עזרה

תוכל להציג את העזרה בנושא קשירה ונקודות חמות. במסך ההגדרות, הקש על **רשתות** < **שיתוף אינטרנט** < **עזרה**.

מצב טיסה

תוכל לכבות את פונקציות השיחה והנתונים לנייד. כאשר מצב זה מופעל, פונקציות שאינן כוללות נתונים, כמו הפעלת משחקים ומוסיקה, הופכות ללא זמינות.

- 1 במסך ההגדרות, הקש על **רשתות** < **עוד** < **מצב טיסה**.
- 2 הקש על **הפעל** במסך האישור.

רשתות ניידות

תוכל להתאים אישית את הגדרות הנתונים לנייד.

1 במסך ההגדרות, הקש על **רשתות** < **עוד** < **רשתות ניידות**.

2 התאם אישית את ההגדרות הבאות:

- **נתונים ניידים:** הפעל או כבה נתונים לנייד.
- **נדידת נתונים:** גלוש באינטרנט, השתמש בדוא"ל, בהודעות מולטימדיה ובשירותים אחרים בחו"ל.
- **סוג רשת:** בחרו סוג רשת.
- **שמות נקודות גישה:** הצג או שנה את נקודת הגישה לשימוש בשירותי נתונים לנייד. כדי לשנות את נקודת הגישה, בחר אפשרות מתוך רשימת נקודות הגישה.
- **מפעילי רשת סלולרית:** חפש מפעילי רשת סלולרית והתחבר באופן אוטומטי לרשת.

VPN

תוכל להתחבר לרשת וירטואלית בטוחה, כמו intranet. תוכל גם לנהל רשתות פרטיות וירטואליות מחוברות.

הוספת VPN

1 במסך ההגדרות, הקש על **רשתות** < **עוד** < **VPN**.

• זכור, שביטול נעילת המסך יגרום למחיקת כל פרטי ה-VPN השמורים במכשיר.



2 הקש על **הוסף רשת VPN**.

- תכונה זו זמינה רק כאשר נעילת המסך מופעלת. אם נעילת המסך מבוטלת, מופיע מסך התראות הקש על **הגדרות** במסך ההתראות כדי להפעיל את נעילת המסך. לפרטים, ראה **קבע הגדרות נעילת מסך**.



3 הזן פרטי VPN והקש על **שמור**.

קביעת ההגדרות של VPN

- 1 הקש על VPN ברשימה **VPNS**.
- 2 הזן את פרטי חשבון המשתמש של VPN והקש על **התחבר**.
 - כדי לשמור את פרטי החשבון, סמן את התיבה **שמור פרטי חשבון**.

צליל והתראה

- תוכל להתאים אישית את הגדרות הקול, הרטט וההתראות. במסך ההגדרות, הקש על **צליל והתראה** והתאם אישית את ההגדרות הבאות:
- **פרופילי צליל:** במצבי צליל, עבור בין צליל, מצב שקט ומצב רטט בלבד.
 - **עוצמה:** התאם את עוצמת הצליל של פריטים שונים.
 - **צלצל:** בחר רינגטון לשיחות נכנסות. הוסף או מחק רינגטונים.
 - **צלצל מותאם:** צור רינגטון לשיחה נכנסת מאיש קשר מסוים. לפרטים, ראה **צלצל מותאם**.
 - **עוצמת רטט:** כוונן את עוצמת הרטט.
 - **צליל עם רטט:** קבע כי המכשיר יפעיל רטט וישמיע רינגטון בו-זמנית.
 - **סוג רטט:** תוכל לבחור סוג רטט או ליצור תבנית רטט משלך.
 - **נא לא להפריע:** הגדר את השעה, הטווח וסוג היישום לקבלת הודעות של התראות. קבל הודעות של התראות בימים מסוימים בשבוע בלבד. לפרטים, ראה **נא לא להפריע**.
 - **מסך נעילה:** הצג או הסתר הודעת התראה במסך הנעילה. תוכל גם להסתיר מידע פרטי.
 - **יישומים:** בחר את היישומים שיורשו להציג התראות במסך וקבע סדר עדיפות ביניהם בהקשר עם התראות והודעות.

- **נורית הודעה:** ציין את סטטוס המכשיר באמצעות נוריות LED.
- **עוד < צליל התראה:** בחר רינגטון להתראה. הגדר מוסיקה שנשמרה במכשיר כרינגטון להתראה.
- **עוד < רטט בעת הקשה:** קבע שהמכשיר יפעיל רטט כאשר תקיש על פריטים מסוימים על המסך.
- **עוד < אפקטים קוליים:** בחר אפקט קול שיושמע כאשר תקיש על מקש חיוג, כאשר תבחר אפשרות או כאשר תנעל או תבטל נעילה של המסך.
- **עוד < התראות קוליות על הודעות/שיחות:** הגדר את המכשיר כך שיקריא בקול את פרטי המתקשר או ההודעה.

תצוגה

תוכל להתאים אישית הגדרות מפורטות לכל סוג מסך. במסך ההגדרות, הקש על **תצוגה** והתאם אישית את ההגדרות הבאות:

- **מסך ראשי:** התאם אישית את הגדרות המסך הראשי. לפרטים, ראה **הגדרות המסך הראשי**.
- **מסך נעילה:** התאם אישית את הגדרות מסך הנעילה. לפרטים, ראה **הגדרות נעילת מסך**.
- **לחצני תצוגה:** סדר מחדש את לחצני המגע של המסך הראשי או שנה את צבעי הרקע שלהם. הסתר את לחצני המגע של המסך הראשי על המסך.
- **סוג גופן:** שנה את סוג הגופן.
- **גודל גופן:** שנה את גודל הגופן.
- **טקסט מודגש:** הדגש את הטקסט על במסך.
- **בהירות:** השתמש במחווך כדי לשנות את בהירות המסך של המכשיר.
- **אוטומטי:** הגדר את המכשיר כך שבהירות המסך תותאם באופן אוטומטי לעוצמת התאורה בסביבה.
- **Always-on display:** הצג תמיד מידע, כמו התאריך, השעה והתראות, גם כאשר המסך כבוי. לפרטים, ראה **Always On Display**.

- **סיבוב מסך אוטומטי:** סובב באופן אוטומטי את המסך בהתאם לכיוון המכשיר.
- **כיבוי מסך אוטומטי:** כבה באופן אוטומטי את המסך כאשר המכשיר לא היה פעיל במשך פרק זמן שצוין.
- **עוד < חלום בהקיץ:** הצג שומר מסך כאשר המכשיר מחובר למחזיק או נטען. בחר את סוג שומר המסך שיוצג.
- **עוד < כיול חיישן תנועה:** תקן את הזווית והמהירות של חיישן התנועה כדי לשפר את דיוק ההטיה ומהירות הפעולה של החיישן.

• כאשר תתקן את חיישן התנועה, הקפד להניח את המכשיר על משטח שטוח. אם לא תעשה זאת, יתרחשו שגיאות הקשורות לפונקציות חיישן התנועה, כמו סיבוב מסך אוטומטי.



כללי

שפה ומקלדת

תוכל להתאים אישית את הגדרות השפה והמקלדת עבור המכשיר שלך.

- 1 במסך ההגדרות, הקש על **כללי < שפה ומקלדת**.
- 2 התאם אישית את ההגדרות הבאות:
 - **שפה:** בחר שפה והחל אותה על המכשיר.
 - **מקלדת נוכחית:** הצג את סוג המקלדת שנמצאת כעת בשימוש. בחר מקלדת לשימוש בעת הזנת טקסט.
 - **מקלדת LG:** התאם אישית את הגדרות המקלדת של LG.
 - **הקלדת קולית של Google:** בחר אפשרויות להכתבת טקסט מאת Google.
 - **פלט המרת טקסט לדיבור:** בחר את ההגדרות לפלט טקסט-לדיבור.
 - **מהירות מצביע:** כוונן את מהירות המצביע של העכבר או של לוח העקיבה.

- **המרת לחצנים:** הגדר ביצוע פעולות ראשיות בתפעול ישיר דרך הלחצן הימני של העכבר.

מיקום

באפשרותך להתאים אישית את האופן שבו יישומים מסוימים יעשו שימוש בפרטי המיקום שלך.

- 1 במסך ההגדרות, הקש על **כללי** > **מיקום**.
- 2 התאם אישית את ההגדרות הבאות:
 - **מצב:** בחר שיטה לאספקת פרטי המיקום שלך.
 - **המקומות שלי:** הגדר את המכשיר לניתוח מקומות שבהם אתה מבקר לעתים תכופות כך שהוא יוכל לזהות באופן אוטומטי כתובת מגורים.
 - **בקשת מיקום האחרונה:** הצג יישומים שביקשו לאחרונה פרטי מיקום.
 - **קביעת מיקום חסכונית:** הערך את מיקום המכשיר על-ידי שימוש בצריכת חשמל נמוכה.
 - **מצלמה:** שמור את פרטי המיקום בעת צילום תמונות או סרטוני וידאו.
 - **היסטוריית מיקומים ב-Google:** קבע הגדרות היסטוריית מיקום של Google.

חשבונות וסנכרון

תוכל להוסיף או לנהל חשבונות, כולל חשבון Google. תוכל גם לסנכרן יישומים או פרטי משתמש מסוימים באופן אוטומטי.

- 1 במסך ההגדרות, הקש על **כללי** > **חשבונות וסנכרון**.
- 2 התאם אישית את ההגדרות הבאות:
 - **לסנכרן נתונים באופן אוטומטי:** סנכרן את כל החשבונות הרשומים באופן אוטומטי.
 - **חשבונות:** הצג רשימה של החשבונות הרשומים. כדי להציג או לשנות פרטים של חשבון, הקש על החשבון.
 - **הוסף חשבון:** הוסף חשבונות.

ענן

תוכל לרשום חשבון בענן ולהציג באמצעות המכשיר שלך תוכן שנשמר במחשב או בענן.

1 במסך ההגדרות, הקש על **כללי** < **ענן**.

2 התאם אישית את ההגדרות.

משתמשים

תוכל להוסיף משתמשים שאיתם תשתף את המכשיר שלך.

1 במסך ההגדרות, הקש על **כללי** < **משתמשים**.

2 התאם אישית את ההגדרות.

נגישות

תוכל לנהל יישומי Plug-in של נגישות המותקנים במכשיר שלך.

1 במסך ההגדרות, הקש על **כללי** < **נגישות**.

2 התאם אישית את ההגדרות הבאות:

- **ראייה** < **TalkBack**: הגדר את המכשיר כך שיודיע על סטטוס המסך או על פעולות באמצעות קול.

- **ראייה** < **התראות קוליות על הודעות/שיחות**: הגדר את המכשיר כך שיקריא בקול את פרטי המתקשר או ההודעה.

- **ראייה** < **גודל גופן**: שנה את גודל הגופן.

- **ראייה** < **טקסט מודגש**: הדגש את הטקסט על במסך.

- **ראייה** < **שינוי גודל תצוגה במגע**: הגדל או הקטן את התצוגה על-ידי הקשה על המסך שלוש פעמים.

- **ראייה** < **היפוך צבעי המסך**: הגבר את ניגודיות הצבע בתצוגה לטובת אנשים עם לקות ראייה.

- **ראייה** < **התאמה אישית של צבעי המסך**: כוונן את צבע התצוגה.

- **ראייה** < **גווני אפור**: העבר את המסך למצב גווני אפור.

- **ראייה < סיים שיחות באמצעות מקש ההפעלה:** סיים שיחה על-ידי לחיצה על מקש הפעלה/נעילה.
- **שמיעה < כתובית:** הפעל את שירות הכתוביות בעת הקרנת סרטוני וידאו לאנשים כבדי שמיעה.
- **שמיעה < נורית הודעה:** ציין את סטטוס המכשיר באמצעות נוריות LED.
- **שמיעה < התראות פלש:** הגדר את המכשיר כך שיוודיע על שיחות נכנסות ועל התראות באמצעות נורית מהבהבת.
- **שמיעה < כבה את כל הצלילים:** השתק את כל הצלילים והנמך את עוצמת הקול במקלט.
- **שמיעה < סוג אודיו:** בחר את סוג השמע.
- **שמיעה < איזון קול:** כוונן את איזון פלט השמע. השתמש במחוון כדי לשנות את האיזון.
- **תנועה ותודעה < Touch assistant:** הפעל את לוח המגע כדי להקל את השימוש בלחצנים ובמחוות.
- **תנועה ותודעה < הקישו והחזיקו - השהיה:** כוונן את הזמן המוקצה לקלט מגע.
- **תנועה ותודעה < לחץ לחיצה ממושכת לקבלת שיחות:** השב לשיחות או דחה שיחות על-ידי הקשת הקשה ממושכת על לחצן השיחה במקום לגרור אותו.
- **תנועה ותודעה < כיבוי מסך אוטומטי:** כבה באופן אוטומטי את המסך כאשר המכשיר לא היה פעיל במשך פרק זמן שצוין.
- **תנועה ותודעה < אזורי בקרת מגע:** הגבל את אזור המגע כך שניתן יהיה לשלוט חלק מסוים של המסך בלבד באמצעות קלט המגע.
- **קיצור דרך לתכונות הנגישות:** קבל במהירות גישה לפונקציות בשימוש נפוץ על-ידי הקשה על  שלוש פעמים.
- **סיבוב מסך אוטומטי:** שנה באופן אוטומטי את כיוון המסך בהתאם למצב הפיזי של המכשיר.
- **שינוי אופן גישה:** צור צירופי מקשים שסייעו לך לשלוט במכשיר שלך.

מקש קיצור דרך

תוכל להשתמש במקשי עוצמת הקול כדי להפעיל ישירות יישומים כאשר המסך כבוי או נעול.

1 במסך ההגדרות, הקש על **כללי** < **מקש קיצור דרך**.

2 גרור את  כדי להפעיל אפשרות זו.

- לחץ פעמיים על מקש החלשת עוצמת הקול (-) כדי להפעיל את היישום **מצלמה** כאשר המסך נעול או כבוי. לחץ פעמיים על מקש הגברת עוצמת הקול (+) כדי להפעיל את **Capture+**.

- הפעל את **צילום מהיר** אם ברצונך לצלם תמונות מיד לאחר הפעלת המצלמה בלחיצה על מקש החלשת עוצמת הקול (-).

שירותי Google

תוכל להשתמש בהגדרות Google לניהול יישומי Google שברשותך והגדרות החשבון שלך.

במסך ההגדרות, הקש על **כללי** < **שירותי Google**.

טביעות אצבע ואבטחה

1 במסך ההגדרות, הקש על **כללי** < **טביעות אצבע ואבטחה**.

2 התאם אישית את ההגדרות הבאות:

- **טביעות אצבע**: השתמש בטביעת אצבע כדי לבטל נעילת המסך או התוכן. לפרטים, ראה **סקירה כללית של זיהוי טביעת אצבע**.
- **נעילת תוכן**: הגדר את השיטה לנעילת קבצים ב **גלריה** או ב **QuickMemo+**.
- **הצפן טלפון**: הגדר את סיסמת המכשיר לפרטיות. צור קוד PIN או סיסמה שתזכור בכל פעם שהמכשיר מופעל.
- **הצפן אחסון כרטיס SD**: הצפן את כרטיס הזיכרון כדי למנוע שימוש במכשיר אחר. לפרטים, ראה **הצפנת כרטיס זיכרון**.

- **אתחול מאובטח:** הגן על המכשיר שלך בעזרת מנעול בעת שהוא מופעל. עליך לבטל את נעילת המכשיר באמצעות קוד PIN כדי לקבל שיחות, הודעות והתראות. לפרטים, ראה **סקירה כללית בנושא הפעלה מאובטחת**.
- **הגדר נעילת כרטיס SIM:** נעל או בטל נעילה של כרטיס ה-USIM, או שנה את הסיסמה (PIN).
- **הקלדת סיסמה גלויה:** הצג סיסמה בזמן שאתה מזין אותה.
- **מנהלי התקנים:** אפשר הרשאות להגבלת השליטה או השימוש במכשיר עבור יישומים מסוימים.
- **מקורות לא מוכרים:** אפשר התקנה של יישומים מיישומים שאינם מחנות Play.
- **אמת יישומים:** חסום את ההתקנה של יישומים מזיקים. הצג הודעת אזהרה כאשר יישום מזיק מותקן.
- **סוג אחסון:** הצג את סוג האחסון שבו אישור האבטחה יישמר.
- **תעודת ניהול:** נהל את אישור האבטחה השמור בהתקן.
- **Trust agents:** הצג והשתמש בסוכנים אמינים המותקנים במחשב.
- **קביעת מסך:** תקן את מסך היישום כדי לאפשר שימוש ביישום הפעיל כעת בלבד.
- **גישה לשימוש עבור היישומים:** הצג פרטים על השימוש ביישומים במכשיר.

Smart settings

תוכל לשנות באופן אוטומטי את הגדרות המכשיר בהתאם לדפוסי השימוש ולמיקום.

- כדי להשתמש בפונקציה 'הגדרות חכמות', הקפד להגדיר את כתובת המגורים. לפרטים, ראה **מיקום**.



- 1 במסך ההגדרות, הקש על **כללי < Smart settings**.
- 2 הפעל פריטים שברצונך לשנות בהם את ההגדרות באופן אוטומטי.

תאריך ושעה

תוכל להתאים אישית את הגדרות התאריך והשעה עבור המכשיר שלך.

1 במסך ההגדרות, הקש על **כללי** > **תאריך ושעה**.

2 התאם אישית את ההגדרות.

אחסון ו-USB

תוכל להציג ולנהל את האחסון הפנימי במכשיר או בשטח האחסון של כרטיס הזיכרון.

1 במסך ההגדרות, הקש על **כללי** > **אחסון ו-USB**.

2 התאם אישית את ההגדרות הבאות:

- **אחסון פנימי:** הצג את שטח האחסון הכולל ופנה שטח באחסון הפנימי של המכשיר. הצג רשימה של יישומים שנמצאים בשימוש ואת קיבולת האחסון עבור כל יישום.
- **אחסון נייד:** הצג את שטח האחסון הכולל ואת השטח הפנוי בכרטיס הזיכרון. אפשרות זו מופיעה רק כאשר הוכנס כרטיס זיכרון. כדי לבטל טעינה של כרטיס זיכרון, הקש על △.

חיסכון בחשמל ובסוללה

תוכל להציג את פרטי הסוללה הנוכחית או להפעיל מצב חיסכון בחשמל.

1 במסך ההגדרות, הקש על **כללי** > **חיסכון בחשמל ובסוללה**.

2 התאם אישית את ההגדרות הבאות:

- **ניצול סוללה:** הצג את \פרטי השימוש בסוללה. כדי להציג פרטים נוספים, בחר פריט ספציפי.
- **אחוז הסוללה בשורת המצב:** הצג את רמת טעינת הסוללה שנותרה כאחוז בשורת המצב.

- **חיסכון בחשמל:** הקטן את צריכת הסוללה על-ידי ביטול הגדרות מכשיר מסוימות, כמו בהירות התצוגה, המהירות ועוצמת הרטט. בשורת המצב מופיע  כאשר מצב חיסכון בחשמל מופעל.
- **מיטוב המשחקים:** כוונן את איכות הווידאו כדי להקטין את צריכת הסוללה בעת הפעלת משחקים.

זיכרון

תוכל להציג את הסכום הממוצע של השימוש בזיכרון לאורך פרק זמן מסוים ואת הזיכרון שהיה בשימוש על-ידי היישום.

- 1 במסך ההגדרות, הקש על **כללי** > **זיכרון**.
- 2 הקש על  כדי להגדיר משבצת זמן לאחזור נתונים.

Smart cleaning

תוכל לנקות קבצים זמניים או יישומים שאינך משתמש בהם כדי לפנות שטח אחסון.

במסך ההגדרות, הקש על **כללי** > **Smart cleaning**.

 • לפרטים, ראה *Smart cleaning*.

יישומים

תוכל להציג רשימה של יישומים מותקנים. כבה או מחק יישומים, בעת הצורך.

- 1 במסך ההגדרות, הקש על **כללי** > **יישומים**.
- 2 בחר יישום ובצע פעולות.

הקש ושלם

תוכל לבצע תשלומים עם המכשיר הנייד במקום עם כרטיס אשראי. במסך ההגדרות, הקש על **כללי** > **הקש ושלם**.

גיבוי ואיפוס

תוכל לגבות נתונים השמורים במכשיר שלך במכשיר או בטאבלט אחר של LG. אפס את המכשיר, בעת הצורך.

1 במסך ההגדרות, הקש על **כללי** < **גיבוי ואיפוס**.

2 התאם אישית את ההגדרות הבאות:

- **LG Backup**: גבה ושחזר את כל הנתונים השמורים במכשיר. לפרטים, ראה **LG Backup**.

- **גבה את הנתונים שלי**: גבה את נתונים היישום שלך, את סיסמאות Wi-Fi והגדרות אחרות לשרת Google.

- **חשבון גיבוי**: הצג את חשבון הגיבוי הנוכחי שנמצא בשימוש.

- **שחזור אוטומטי**: שחזר באופן אוטומטי הגדרות גיבוי ונתונים בעת התקנה מחדש של יישום.

- **איפוס הגדרות רשת**: אפס את Wi-Fi, Bluetooth והגדרות רשת אחרות.

- **שחזור נתוני היצרן**: אפס את כל ההגדרות עבור המכשיר ומחק נתונים.

- פעולת איפוס המכשיר מוחקת את כל הנתונים השמורים בו. הון את שם המכשיר, את חשבון Google ופרטים התחלתיים אחרים פעם נוספת.



אודות הטלפון

תוכל להציג מידע אודות המכשיר, כמו שם, הסטטוס, פרטי התוכנה ומידע משפטי.

במסך ההגדרות, הקש על **כללי** < **אודות הטלפון** והצג מידע.

רגולציה ובטיחות

ניתן להציג סימוני תקינה ומידע הקשור אליהם במכשיר.

במסך ההגדרות, הקש על **כללי** < **רגולציה ובטיחות**.



05

נספח

הגדרות השפה של LG

בחר את השפה שתשמש במכשיר שלך.

- הקש על  < הגדרות < כללי < שפה ומקלדת < שפה ובחר בשפה הרצויה.

LG Bridge

LG Bridge - סקירה כללית

LG Bridge הוא יישום המסייע לך בניהול נוח שלתמונות, שירים, סרטוני וידאו ומסמכים השמורים בטלפון החכם של LG דרך המחשב שלך. באמצעות היישום תוכל לגבות אנשי קשר, תמונות ופריטים נוספים במחשב ואף לעדכן את תוכנת המכשיר.

- לפרטים, עיין בעזרה של LG Bridge.
- זמינות של תכונות נתמכות אינה אחידה ותלויה במכשיר.
- מנהל התקן USB של LG נחוץ לך כדי לחבר טלפון חכם של LG אל המחשב והוא יותקן יחד עם LG Bridge.



הפונקציות הכלולות ביישום LG Bridge

- נהל דרך המחשב שלך את הקבצים השמורים במכשיר באמצעות חיבור Wi-Fi או חיבור נתונים ניידים.
- גבה נתונים מהמכשיר במחשב שלך או שחזר אותם מהמחשב באמצעות כבל USB.
- עדכן את תוכנת המכשיר דרך המחשב שלך באמצעות כבל USB.

התקנת LG Bridge במחשב

- 1 במחשב שלך, עבור אל www.lg-mobile.co.il.
 - 2 בשורת החיפוש, הקלד את שם המכשיר שברשותך.
 - 3 לחץ על **Download Centre < LG Bridge** והורד את קובץ ההתקנה.
- לחץ על **פרטים** כדי להציג את דרישות המינימום להתקנת LG Bridge.

עדכון תוכנת הטלפון

עדכון תוכנת הטלפון הנייד של LG מהאינטרנט

למידע נוסף אודות השימוש בפונקציה זו, בקר בכתובת <http://www.lg.com/common/index.jsp> בחר את המדינה והשפה שלך.

תכונה זו מאפשרת לך לעדכן בנוחות את הקושחה של הטלפון לגרסה חדשה יותר מהאינטרנט, ללא צורך לבקר במרכז שירות. תכונה זו תהיה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהיה זמינה למכשיר שלך.

מאחר שעדכון הקושחה של הטלפון הנייד דורש את תשומת לבו המלאה של המשתמש במשך כל תהליך העדכון, הקפד לקרוא את כל ההוראות וההערות שיופיעו בכל שלב לפני שתתקדם הלאה. חשוב לזכור שניתוק כבל ה-USB במהלך השדרוג עלול לגרום נזק חמור לטלפון הנייד.

- LG שומרת על זכותה, על פי שיקול דעתה הבלעדי, להפוך עדכוני קושחה לזמינים עבור דגמים נבחרים בלבד ואינה ערבה לזמינות הגרסה החדשה של הקושחה לכל דגמי הטלפון.



עדכון תוכנת הטלפון הנייד של LG באופן אלחוטי (OTA)

תכונה זו מאפשרת לך לעדכן בנוחות את תוכנת הטלפון לגרסה חדשה יותר בשיטת OTA, מבלי לחבר כבל USB. תכונה זו תהיה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהיה זמינה למכשיר שלך.

תחילה בדוק את גרסת התוכנה בטלפון הנייד:

הגדרות > כללי > אודות הטלפון > מרכז עדכונים > עדכון תוכנה > חפש עדכונים כעת.

-  הנתונים האישיים שלך משטח האחסון הפנימי בטלפון—לרבות פרטי חשבון Google וכל חשבון אחר, נתונים והגדרות של המערכת/היישומים שלך, יישומים שהורדו ורישיון ה-DRM שלך—עשויים ללכת לאיבוד בתהליך עדכון התוכנה של הטלפון. לפיכך, LG ממליצה לך לגבות את הנתונים האישיים שלך לפני שתעדכן את תוכנת הטלפון. LG לא תישא באחריות לאובדן נתונים אישיים כלשהם.
- הזמינות של תכונה זו תלויה באזור ובספק השירות.

שאלות נפוצות

בפרק זה מוצגות מספר בעיות שאתה עלול להיתקל בהן במהלך השימוש בטלפון. בעיות מסוימות יצריכו פנייה לספק השירות, אך את רובן תוכל לפתור בקלות בעצמך.

הודעה	סיבות אפשריות	אפשרויות לתיקון הבעיה
שגיאת SIM	אין כרטיס SIM בטלפון או שהוא הוכנס בצורה לא נכונה.	ודאו שכרטיס ה-SIM הוכנס כראוי.
אין חיבור לרשת/ החיבור חלש	האות חלש או שאתה נמצא מחוץ לטווח הרשת של ספק השירות.	התקרב לחלון או צא לאזור פתוח. בדוק את מפת הכיסוי של מפעיל הרשת הסלולרית.
	המפעיל החיל שירותים חדשים.	בדוק אם גילו של כרטיס ה-SIM עולה על 6-12 חודשים. אם כן, החלף את כרטיס ה-SIM או ה-USIM בחנות הקרובה ביותר של ספק הרשת. פנה אל ספק השירות.
הקודים אינם תואמים	כדי לשנות קוד אבטחה, הזן שוב את הקוד החדש כדי לאשרו.	אם שכחת את הקוד, פנה אל ספק השירות.
	שני הקודים שהוזנו אינם תואמים	
לא ניתן להגדיר יישומים	הם לא נתמכים על-ידי ספק השירות או שנדרש רישום עבורם.	פנה אל ספק השירות.
יישום שהורדתי קודם לשגיאות רבות.	הסר את היישום.	1. הקש על  < הגדרות. 2. הקש על כללי < יישומים. 3. הקש על היישום < הסר התקנה.

הודעה	סיבות אפשריות	אפשרויות לתיקון הבעיה
לא ניתן לבצע שיחות	טעות בחיוג	רשת חדשה לא מאושרת.
	הוכנס כרטיס SIM חדש.	בדוק אם קיימות מגבלות חדשות.
	הגעת למגבלת החיוב ששולם מראש.	צור קשר עם חברת הסלולר או אפס את המגבלה בעזרת PIN2.
לא ניתן להפעיל את הטלפון	מקש הדלקה/כיבוי נלחץ מהר מדי.	לחץ על מקש ההפעלה/כיבוי למשך שתי שניות לפחות.
	הסוללה לא נטענה.	טען את הסוללה. בדוק את מחוון הטעינה בתצוגה.
שגיאת טעינה	הסוללה לא נטענה.	טען את הסוללה.
	הטמפרטורה החיצונית גבוהה או נמוכה מדי.	ודא שהטלפון נטען בטמפרטורה הרגילה.
	בעיית מגעים	בדוק את המטען ואת החיבור שלו לטלפון.
	אין מתח	חברו את המטען לשקע אחר.
	המטען פגום	החלף את המטען
	מטען לא מתאים	השתמש רק באביזרים מקוריים של LG.
	פונקציית מספר קבוע מראש פועלת.	בדוק את התפריט 'הגדרות' ונטרל את הפונקציה.
המספר אסור.		
לא ניתן לקבל/לשלוח הודעות SMS ותמונות	הזיכרון מלא	בחר נתונים מסוימים, כמו יישומים או הודעות מהטלפון שלך, כדי לפנות זיכרון.

הודעה	סיבות אפשריות	אפשרויות לתיקון הבעיה
הקבצים אינם נפתחים	אין תמיכה בתבנית הקובץ	בדוק את תבניות הקובץ הנתמכות.
המסך אינו נדלק כאשר מתקבלת שיחה.	בעיה בחיישן הקרבה	אם אתה משתמש בנרתיק או כיסוי להגנה, ודא שהוא אינו מכסה את האזור שסביב חיישן הקרבה. ודא שהאזור שמסביב לחיישן הקרבה נקי
אין צליל	מצב רטט	בדוק את מצב ההגדרות בתפריט הצליל כדי לוודא שאינך במצב רטט או במצב 'ללא הפרעות'.
ניתוק או קפיאה	בעיה של נתק בתוכנה	אם המסך קופא או שהטלפון אינו מגיב כשמנסים להפעיל אותו, הוצא את הסוללה והכנס אותה בחזרה. לאחר מכן הפעל שוב את הטלפון. לחלופין, נסה לעדכן את התוכנה דרך אתר האינטרנט.
בדוק את מודול הסוללה	הכנס מודול סוללה שגוי. הכנס מודול סוללה פגום או הכנס את המודול בצורה שגויה.	לפרטים, ראה 'התקנת הסוללה'. מפרטי המכשיר עשויים להשתנות בהתאם לאזור ולספק השירות. כדי לרכוש מודולי סוללה נוספים או פריטים אופציונליים תואמים, פנה למרכז השירות של LG Electronics לקבלת תמיכה.

מדריך למניעת גניבה

הגדר את המכשיר שלך כך שאנשים אחרים לא יוכלו להשתמש בו אם הוא יאופס להגדרות היצרן ללא רשותך. לדוגמה, אם המכשיר אבד, נגנב או נמחק, רק אדם בעל חשבון Google או בעל פרטי נעילת מסך יוכל להשתמש במכשיר.

כל שעליך לעשות כדי לוודא שהמכשיר שלך מוגן הוא:

- להגדיר נעילת מסך: אם המכשיר אבד או נגנב, אך הגדרת נעילת מסך, לא תהיה אפשרות למחוק את המכשיר באמצעות תפריט 'הגדרות', כל עוד נעילת המסך לא תבוטל.
- הוסף את חשבון Google שלך למכשיר: אם המכשיר שלך נמחק אך הגדרת בו את חשבון Google שלך, לא תהיה אפשרות לסיים את תהליך ההגדרה של המכשיר עד שהפרטים של חשבון Google יוזנו שוב.

לאחר שהמכשיר יהיה מוגן, תצטרך לבטל את נעילת המסך או להזין את הסיסמה של חשבון Google אם עליך לבצע איפוס להגדרות היצרן. הדבר יבטיח שאתה או מישהו שאתה סומך עליו תבצעו את האיפוס.

- אל תשכח את חשבון Google והסיסמה שהוספת למכשיר לפני ביצוע האיפוס להגדרות היצרן. אם אינך יכול לספק את פרטי החשבון במשך תהליך ההגדרה, לא תוכל להשתמש כלל במכשיר לאחר ביצוע האיפוס להגדרות היצרן.



פרטי הודעה על תוכנת קוד פתוח

אנא בקרו באתר <http://opensource.lge.com> על מנת להשיג את קוד המקור תחת GPL, LGPL, MPL, קוד פתוח ורשיונות אחרים. בנוסף לקוד המקור, זמינים להורדה תנאי הרשיון, אחריות, כתבי ויתור וחכיות יוצרים. LG Electronics תספק קוד מקור על גבי התקליטור, תמורת תשלום המכסה הוצאות של ביצוע ואחסון. לבקשה ניתן לפנות לכתובת הדואר האלקטרוני opensource@lge.com : הצעה זו תקפה למשך (3) שנים ממועד הרכישה.

רגולציה ובטיחות

לפרטי תקינה, עבור להגדרות < כללי > רגולציה ובטיחות בטלפון.

סימנים מסחריים

- LG Electronics, Inc. ©2016 Copyright כל הזכויות שמורות. LG והסמל של LG הם סימנים מסחריים רשומים של LG Group ושל החברות הקשורות אליה.
- Hangouts™, YouTube™, Gmail™, Google Maps™, Google™ ו-Play Store™ הם סימנים מסחריים של Google, Inc.
- Bluetooth® הוא סימן מסחרי רשום של Bluetooth SIG, Inc. ברחבי העולם.
- Wi-Fi® והלוגו של Wi-Fi הם סימנים מסחריים רשומים של Wi-Fi Alliance.
- כל יתר הסימנים המסחריים וחכיות היוצרים הם רכושם של בעליהם בהתאמה.

מיוצר ברישיון מטעם Dolby Laboratories. Dolby Audio, וסמל ה-D הכפול הם סימנים מסחריים של Dolby Laboratories.


הצהרת בטיחות לייזר

זהירות!

מוצר זה עושה שימוש במערכת לייזר. כדי להבטיח שימוש נכון במוצר זה, קרא היטב את מדריך ההפעלה הזה ושמור אותו לעיון עתידי. אם תידרש תחזוקה ליחידה, פנה למרכז שירות מורשה.

שימוש בפקדים, פעולות כוונון או ביצוע הליכים אחרים מאלה שיצוינו להלן עלולים להביא לחשיפה מסוכנת לקרינה.

כדי למנוע חשיפה ישירה לקרן הלייזר, אל תנסה לפתוח את המארז או ליצור מגע ישיר עם הלייזר.

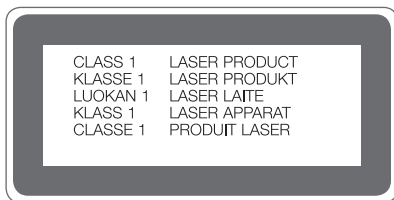

הצהרת תאימות

בזאת, **LG Electronics** מצהירה שהמוצר **LG-H840** תואם לדרישות היסודיות ולתנאים הרלוונטיים האחרים של הנחיה **1999/5/EC**.

ניתן למצוא עותק של הצהרת התאימות בכתובת

<http://www.lg.com/global/declaration>

About this user guide

Thank you for choosing this LG product. Please carefully read this user guide before using the device for the first time to ensure safe and proper use.

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- This device is not suitable for people who have a visual impairment due to the touchscreen keyboard.
- Descriptions are based on the device default settings.
- Default apps on the device are subject to updates, and support for these apps may be withdrawn without prior notice. If you have any questions about an app provided with the device, please contact a LG Service Centre. For user-installed apps, please contact the relevant service provider.
- Modifying the device's operating system or installing software from unofficial sources may damage the device and lead to data corruption or data loss. Such actions will violate your LG licence agreement and void your warranty.
- Some content and illustrations may differ from your device, depending on the area, service provider, software version, or OS version, and are subject to change without prior notice.
- Software, audio, wallpaper, images, and other media supplied with your device are licenced for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully responsible for the illegal use of media.
- Additional charges may incur for data services, such as messaging, uploading, downloading, auto-syncing and location services. To void additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

Instructional notices



WARNING: Situations that could cause injury to the user and third parties.



CAUTION: Situations that may cause minor injury or damage to the device.



NOTE: Notices or additional information.

Table of contents

5 Guidelines for safe and efficient use

01

Custom-designed Features

- 13 Modular Type
- 13 Always On Display
- 14 Daylight mode
- 15 135° Wide-angle lens
- 15 Dual cameras
- 16 Pop-out Picture
- 16 Steady recording
- 17 Smart Bulletin
- 17 Smart Notice
- 19 Smart cleaning
- 20 Quick Share
- 21 QuickRemote
- 23 QuickMemo+
- 25 QSlide
- 26 LG Health
- 27 Do not disturb
- 27 Ringtone ID
- 28 Fingerprint recognition
- 31 Content sharing
- 33 Dual Play

02

Basic Functions

- 35 Product components and accessories
- 36 Parts overview
- 38 Turning on or off the power
- 39 Installing the SIM card
- 40 Inserting the memory card
- 41 Removing the memory card
- 42 Battery
- 47 Touch screen
- 50 Home screen
- 57 Screen lock
- 60 Secure start-up
- 61 Memory card encryption
- 62 Taking screenshots
- 62 Entering text

03

Useful Apps

- 70 Installing and uninstalling apps
- 71 Recently uninstalled apps
- 71 Phone
- 75 Messaging
- 76 Camera
- 88 Gallery
- 91 Calculator
- 92 Weather
- 92 Downloads
- 93 Clock
- 94 Voice Recorder
- 95 Music
- 96 E-mail
- 97 Contacts
- 99 Calendar
- 101 File Manager
- 101 Tasks
- 101 Evernote
- 101 Cell Broadcast
- 102 FM Radio
- 102 LG Backup
- 103 SmartWorld
- 104 Google apps

04

Phone Settings

- 107 Settings
- 107 Networks
- 119 Sound & notification
- 120 Display
- 121 General

05

Appendix

- 131 LG Language Settings
- 131 LG Bridge
- 132 Phone software update
- 134 FAQ
- 137 Anti-Theft Guide
- 138 More information

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-H840 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.788 W/kg (10 g) and when worn on the body is 1.450 W/Kg (10 g).

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 5 mm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 5 mm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

- Always use genuine LG batteries, chargers and accessories approved for use with this particular device model. The use of any other types may void any approval or warranty applying to the device and may be dangerous.
- Some contents and illustrations may differ from your device without prior notice.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.

- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the colour of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0 °C and 35 °C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.



- Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.

- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



01

Custom-designed Features


Modular Type

You can use the modular functionality provided by your device to use various features provided by various accessories.

Remove the module from the module slot of the device. Then you can just replace the battery, or you can install another accessory into the module slot to use the specific features provided by the accessory.



- See *Removing the battery* and *Installing the battery* for details.
- Available accessories, which are called LG Friends, are optional.
- To purchase optional accessories, contact an LG Customer Service Centre.
- Available accessories may vary depending on the area or service provider.

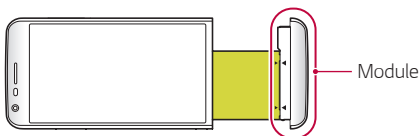

Always On Display

You can display the date, time, signature or other information on the screen even when the main screen is turned off. Always On Display is a useful feature in order to check the time frequently and display your own signature.



- The battery may drain faster when you use Always On display. Turn off this feature to use the battery longer.



- 1 Tap  > **Settings** > **Display** > **Always-on display** and then drag  to activate it.



- This feature may be turned on when you purchase the device.
- The default setting may vary depending on the area and service provider.

- 2 Tap **Set what to show** and select items to display on the turned-off screen.
 - **Time**: Always display the current time, even if the screen is turned off.
 - **Signature**: Display your signature in place of the current time on the turned-off screen. Use the **Set signature** option to enter a signature and change the font.



- Make sure to check the signature not to exceed the input field.

Daylight mode

You can use the enhanced IPS Quantum Display feature to view the screen clearly in outdoor daylight when the sun shines bright.



135° Wide-angle lens

You can use the wide-angle lens to take photos of a range that is wider than the actual field of vision. This feature is useful when you take a photo or record a video of a landscape or a wide area from a narrow area. You can capture a sprawling skyline, a packed stadium concert, an entire beach, and all that your eyes can see, and more.



- See *Switch to dual camera* for details.



Dual cameras

You can use the dual cameras on the back of the device to take a variety of photos and videos of from a tight close-up scene to a vast scene. Simply pinch or spread your fingers on the screen.



- See *Switch to dual camera* for details.

Pop-out Picture

You can make your photo as if in a frame: you can take both a normal and wide-angle photo at the same time. Make your photo popping and standing out against these four background frame effects: Fisheye, B&W, Vignette, and Lens blur.



• See *Pop-out Picture* for details.



Steady recording

You can use the steady recording feature to minimise extreme motion blur when you take a photo or record a video. This feature automatically stabilises your photo or video while you are in motion. Tap  to activate this feature.



Smart Bulletin

You can add a Home screen that collects and displays useful information for you.

View main news from Smart Bulletin at a glance. You do not need to add an additional widget or run an app.

- 1 Tap  > **Settings** > **Display** > **Home screen** > **Smart Bulletin** and then drag  to activate it.
 - The Smart Bulletin can be found on the left-most canvas of the Home screen.
- 2 Configure Smart Bulletin by using the available menu items.
 - To rearrange menu items displayed on the Smart Bulletin, tap and hold , then drag up or down.
 - To display or hide a menu item on the Smart Bulletin, drag .



- To change the Smart Bulletin configuration, tap  on the Smart Bulletin.

Smart Notice

You can use Smart Notice to get useful information that matches your time and location. This widget analyzes your environment and daily usage patterns to provide information that is useful at a specific time and location.

Use Smart Notice as:

- Automatic reminders to add frequently used unsaved numbers to contacts.
- Automatic reminders to make a call to a number you did not call back after sending a reject message.
- Automatic reminders of the birthday of a contact saved in the calendar and the contact list.

- Automatic reminders to clean up temporary files, downloaded files, and apps that have not been used for a specific period of time.
- Automatic reminders to customise device settings according to the pattern and place you are using the device.
- Automatic reminders to save power when battery consumption is high.

Starting Smart Notice

You can add the Smart Notice widget when it is not added by default or is deleted from the Home screen. Take the following steps to add the widget:

- 1 On the Home screen, tap and hold on an empty space, then tap **Widgets**.
- 2 Tap and hold **Smart Notice**, then drag it to another position on the Home screen.
 - The Smart Notice widget appears on the Home screen, and its automatic reminder functions start along with an overview of them.
 - Tap  on the widget screen to change Smart Notice settings according to your preferences or to select the items on which you want Smart Notice to provide automatic reminders.




- The Smart Notice feature may be turned on when you purchase the device.
- The default setting may vary depending on the area or the service provider.

Smart cleaning

You can delete temporary files or apps that are no longer used.

- 1 Tap  > **Settings** > **General** > **Smart cleaning**.
- 2 Use desired functions.

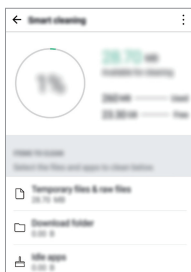


Quick Share

You can share a photo or video to the app you want immediately after taking them.

- 1 Tap  then take a photo or record a video.
- 2 Drag the Quick Share icon that appears after taking a picture or recording a video, and select an app to share it.
Alternatively, tap and hold the Preview icon that appears after taking a picture or recording a video, and drag it to the Quick Share icon.



- The app displayed by the Quick Share icon may vary, depending on the type and frequency of access of the apps installed on the device.
- You can use this feature only when you take a picture or record a video in the Auto mode. See *Auto mode* for details.

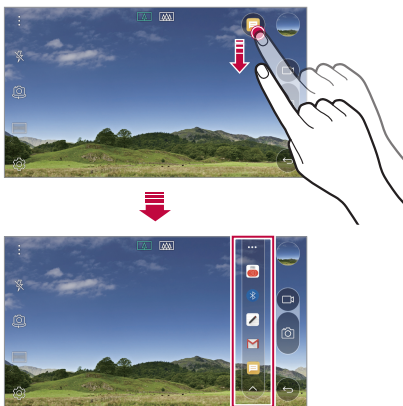

QuickRemote

QuickRemote overview

You can control many electronic devices in different locations by using your device as a remote control.



- This feature uses infrared (IR) signals and operates very similar to a remote control. When using QuickRemote, keep the IR sensor at the top right of the device uncovered.
- This feature may vary or may not be supported, depending on the area, service provider, or device manufacturer.

Registering a device for remote control

You can register a device you want to control remotely with your device.

- 1 Tap > **LG** > **QuickRemote**.
- 2 Tap to specify locations where you want to use the remote control.
- 3 Tap and select the type and manufacturer of the device you want to remotely control.
- 4 Follow the on-screen instructions to make sure that the QuickRemote feature works properly on the device.

Creating a universal remote control

When the device you want to control with your device does not exist in the list, you can create a customised universal remote control by arranging your frequently used buttons according to your preferences.

- 1 Tap  > **LG** > **QuickRemote**.
- 2 Tap  to specify locations where you want to use the remote control.
- 3 Tap  > **Universal remote**.
- 4 Enter a remote control name and tap **OK**.
- 5 Tap and hold the button you want, then drag it to the position you want.
- 6 Tap **NEXT**.
- 7 Follow the on-screen instructions to register the buttons, then tap **SAVE**.

QuickMemo+

QuickMemo+ overview

You can make creative notes by using a variety options on this advanced feature of notepad, such as image management and screenshots, which are not supported by the conventional notepad.

Creating a note

- 1 Tap  > **QuickMemo+**.
- 2 Tap  to create a note.
 -  : Save a note.
 -  : Undo the last action.
 -  : Redo the last action you undid.
 - **T** : Enter a note by using the keypad.
 -  : Write notes by hand.
 -  : Erase handwritten notes.
 -  : Zoom in or out, rotate or erase the parts of a handwritten note.
 -  : Access additional options, including sharing and locking notes, changing the note pad style and inserting content.
- 3 Tap  to save the note.

Writing notes on a photo

- 1 Tap  > **QuickMemo+**.
- 2 Tap  to take a photo, then tap **OK**.
 - The photo is automatically attached into the notepad.
- 3 Freely write notes on the photo.
- 4 Tap  to save the note.

Writing notes on a screenshot

- 1 While viewing the screen you want to capture, drag the status bar downwards and then tap **Capture+**.
 - The screenshot appears as the notepad background theme. Memo tools appear at the top of the screen.
- 2 Take notes on the captured screen.
 - To crop and save a portion of the screen, tap  and specify a portion with the crop tool.
 - To attach a screenshot to the notepad, tap **T**.
- 3 Tap  and save the notes to the location you want.
 - Saved notes can be viewed in either **QuickMemo+** or **Gallery**.
 - To save notes in the same location all the time, select the **Use as default app** checkbox and select an app.

Managing folders

You can view notes grouped by the type of the notes.

- 1 Tap  > **QuickMemo+**.
- 2 At the top of the screen, tap  and select a menu item:
 - **All memos**: View all notes saved in **QuickMemo+**.
 - **My memos**: View notes created by **QuickMemo+**.
 - **Photo memos**: View notes created by .
 - **Capture+**: View notes created by **Capture+**.
 - **New category**: Add categories.
 -  : Rearrange, add or delete categories. To change the name of a category, tap the category.



- Some folders do not appear when launching QuickMemo+ for the first time. Disabled folders are enabled and appear when they contain at least one related note.


QSlide

You can start apps by using QSlide to use them while other apps are running. For example, use the calculator or calendar when a video is playing.

When an app is running, tap **☰** > **QSlide**.



- This feature may not be supported by some apps.

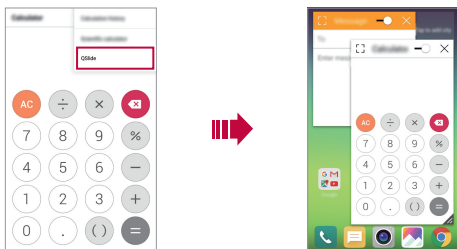

- **☐**: Turn off the QSlide mode to switch to full-screen mode.
- **—○**: Adjust the opacity of the QSlide window. If the QSlide window is transparent, it will not respond to touch inputs.
- **✕**: Close the QSlide window.
- **▴**: Adjust the size of the QSlide window.

LG Health

LG Health overview

You can manage your health and maintain good exercise habits by keeping track of the exercises you do.

Getting started with LG Health


You can configure LG Health when launching the app for the first time or after initialising it.

- 1 Tap  > **LG Health**.
- 2 Follow the on-screen instructions to complete configuration.

Using LG Health

You can view main information on LG Health and manage the amount of physical exercise and health information.

- 1 Tap  > **LG Health**.
- 2 Do the following:

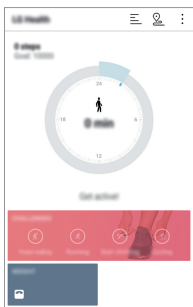

-  : View your exercise log on the day you want to check.
-  : Begin tracking an exercise. The route and amount of your physical exercise are recorded for each exercise type.
-  : Set your daily exercise goals including calories and steps, or set various LG Health settings.



- Health-related information provided by LG Health is designed for user convenience and cannot be used for purposes of disease prevention, treatment, diagnosis or other medical issues.
- LG Health may vary or may not be available, depending on the country and service provider. LG Health functions that are available and apps that can be added to LG Health may vary, depending on the country. This is due to differing laws and regulations.

Do not disturb

You can limit or mute notifications to avoid disturbances for a specific period of time.

- 1 Tap  > **Settings > Sound & notification > Do not disturb** and then drag  to activate it.
- 2 Tap **Sounds and vibrations** and select the mode you want:
 - **Priority only**: Receive sound or vibrate notifications for the selected apps. Even when **Priority only** is turned on, alarms still sound.
 - **Total silence**: Disable both the sound and vibration.

Ringtone ID

You can set the device so that it plays an automatically composed ringtone for each incoming call from the selected contacts. This function is useful because you can know who are calling you by only hearing the ringtone.

- 1 Tap  > **Settings > Sound & notification > Ringtone ID** and then drag  to activate it.
- 2 Tap **Compose ringtones for** and select the desired option.



- The default ringtone plays for incoming calls from contacts except for the selected contact.

Fingerprint recognition

Fingerprint recognition overview

Register your fingerprint on your device first before using the fingerprint recognition function.

You can use the fingerprint recognition function in the following cases:

- To unlock the screen
- To view the locked content in **Gallery** or **QuickMemo+**

When confirming a purchase or signing in to an app, identify yourself by simply touching the fingerprint sensor.



- Your fingerprint never changes for your whole life, and everyone has a unique fingerprint. Therefore, your fingerprint can be used by the device for user identification. Very similar fingerprints from different users may be recognised by the fingerprint sensor as the same fingerprint. To enhance the device security, set the screen lock to a pattern, PIN or password.
- If your fingerprint is unrecognised or if you forget the backup PIN, bring your device to the nearest LG Customer Service Centre and both register a fingerprint and create a new backup PIN.

Precautions for fingerprint recognition

Fingerprint recognition accuracy may decrease. To maximise recognition accuracy, check the following before using the device.

- The device's Power/Lock key has a fingerprint sensor. Ensure that the Power/Lock key is not damaged by a metallic object, such as coin or key.
- When water, dust or other foreign substance are on the Power/Lock key or your finger, the fingerprint registration or recognition may not work. Clean and dry your finger before having the fingerprint recognised.

- A fingerprint may not be recognised properly if the surface of your finger has a scar or is not smooth due to being soaked in water.
- If you bend your finger or use the fingertip only, your fingerprint may not be recognised. Make sure that your finger covers the entire surface of the Power/Lock key.
- Scan only one finger for each registration. Scanning more than one finger may affect fingerprint registration and recognition.
- The device may generate static electricity if the surrounding air is dry. If the surrounding air is dry, avoid scanning fingerprints, or touch a metallic object such as a coin or key before scanning fingerprints to remove static electricity.

Registering fingerprints

You can register and save your fingerprint on the device to use fingerprint identification.

- 1 Tap  > **Settings > General > Fingerprints & security > Fingerprints.**




- To use this feature, make sure that screen lock is set. If a screen lock is not set, set the screen lock. See [Configuring screen lock settings](#) for details.

- 2 Locate the Power/Lock key on the back of the device and gently put your finger on it to register the fingerprint.



- Gently press the Power/Lock key so that the sensor can recognise your fingerprint. If you press the Power/Lock key with an excessive force, the screen lock function may start or the screen may be turned off.
- Ensure that your fingertip covers the entire surface of the sensor of the Power/Lock key.

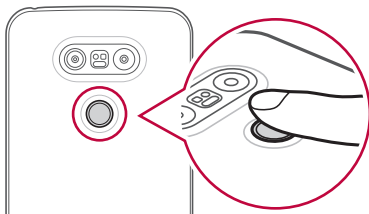

- 3 Follow the on-screen instructions.
 - Repeat scanning the fingerprint by moving your finger little by little until the fingerprint registers.
- 4 When the fingerprint registration is done, tap **OK**.
 - Tap **ADD MORE** to register another fingerprint. If you register only one fingerprint and the corresponding finger is not in a good condition, the fingerprint recognition may not work well. As the preventive measure against this kind of situation, register multiple fingerprints.

Managing fingerprints

You can edit or delete registered fingerprints.

- 1 Tap  > **Settings** > **General** > **Fingerprints & security** > **Fingerprints**.
- 2 Unlock according to the specified lock method.
- 3 From the fingerprint list, tap a fingerprint to rename it. To delete it, tap .

Unlocking the screen with a fingerprint

You can unlock the screen or view the locked content by using your fingerprint. Activate the desired function:

- 1 Tap  > **Settings** > **General** > **Fingerprints & security** > **Fingerprints**.
- 2 Unlock according to the specified lock method.
- 3 On the fingerprint settings screen, activate the desired function:
 - **Screen lock**: Unlock the screen with a fingerprint.
 - **Content lock**: Unlock content with a fingerprint. To do this, make sure that the content lock is set.

Content sharing

Playing content from another device

You can play photos, videos or songs saved on your device from a TV.

- 1 Connect the TV and your device to the same Wi-Fi network.
- 2 While viewing the items from the **Gallery** or **Music** app, tap  or  > **Play on other device**, then select a TV you want to connect to.



• For Chromecast, Google Play services should be up to date.

Viewing content from nearby devices

You can view content from various devices, such as a computer, NAS or mobile device, by using the **Gallery** or **Music** apps.

Connecting the devices

Connect both your device and another device that support DLNA function to the same wireless network.



- Make sure that File sharing (DLNA) is activated on both the device and the connected device.

Searching for nearby devices

You can view a list of DLNA devices on the same network by selecting the **Nearby devices** tab in each app.

Use content from nearby devices as if you were using it on your device.

Sending or receiving files

You can share files between your device and another LG device, or a tablet or computer.

Sending files

From the **Gallery**, **File Manager** or **Music** app, tap **:** > **Share** or , then select a device on the file sharing list.

Receiving files

Drag the status bar downward, then activate **File sharing**.

If your device does not support the file sharing feature, tap **○** > **Settings** > **Networks** > **Share & connect** > **File sharing** > **SmartShare Beam**.

Sending files to a computer

You can quickly send large files to your computer.

- 1 Install LG Bridge on your computer.
- 2 Start LG Bridge on the computer, then sign in using your LG account.
- 3 Tap  > **Settings** > **Networks** > **Share & connect** > **LG AirDrive**, then sign in using your LG account.



- You can download LG Bridge from the LG Mobile website (www.lg-mobile.co.il).

Viewing content from your cloud

You can directly view the content saved on your cloud account, without downloading it to your device.

- 1 From the **Gallery**, **Music** or **File Manager** app, select  > **Cloud**.
- 2 Select a cloud account and sign in.
- 3 Save or play content in your cloud.

Dual Play

You can display your device screen on a display device connected via a wireless connection and use different apps on your device at the same time.

Use a Screen sharing for the connection.



- This feature is not available for some content.



02

Basic Functions

Product components and accessories

Make sure that none of the following items are missing:

- Device
- Battery
- Ejection pin
- Stereo headset
- USB cable
- Charger
- Quick Start Guide




- The items described above may be optional.
- The items supplied with the device and any available accessories may vary depending on the area and service provider.
- Always use genuine LG Electronics accessories. Using accessories made by other manufacturers may affect your device's call performance or cause malfunctions. This may not be covered by LG's repair service.



- If any of these basic items are missing, contact the dealer from which you purchased your device.
- To purchase additional basic items, contact the LG Customer Service Centre.
- To purchase optional items, contact the LG Customer Service Centre for available dealers.
- Some items in the product box are subject to change without notice.
- The appearance and specifications of your device are subject to change without notice.

Parts overview

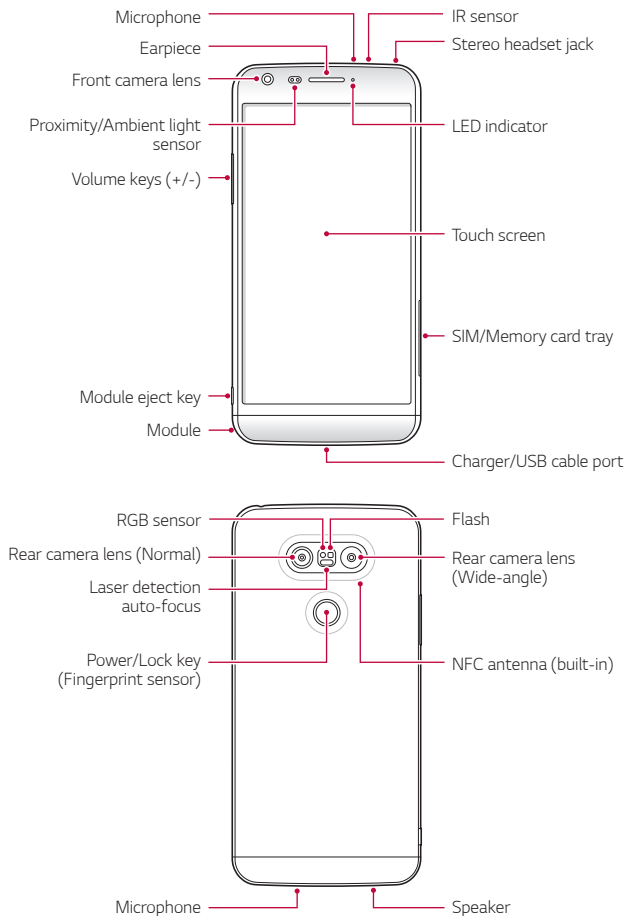

- Proximity/Ambient light sensor
 - Proximity sensor: During a call, the proximity sensor turns off the screen and disables touch functionality when the device is in close proximity to the human body. It turns the screen back on and enables touch functionality when the device is outside a specific range.
 - Ambient light sensor: The ambient light sensor analyses the ambient light intensity when the auto-brightness control mode is turned on.
- Laser detection auto-focus
 - Detects the distance from the camera to your subject for automatic focusing.
 - Quickly focuses on closer or farther objects when you use the rear camera to take photos.
- Volume keys
 - Adjust the Volume for ringtones, calls or notifications.
 - Gently press a Volume key to take a photo. To take continuous shots of photos, press and hold the Volume key.
 - Press the Volume Down (-) key twice to launch the **Camera** app when the screen is locked or turned off. Press the Volume Up (+) key twice to launch **Capture+**.
- Power/Lock key (Fingerprint sensor)
 - Briefly press the key when you want to turn the screen on or off.
 - Press and hold the key when you want to select a power control option.
 - Gently put your finger on the key when you want to unlock the screen with your fingerprint.



- Some functions may be restricted for access, depending on the device specifications.
- An NFC antenna is built into the back of the device. Do not damage the NFC antenna.
- Do not put heavy objects on the device or sit on it. Failure to do so may damage the touch screen feature.
- Screen-protective film or accessories may interfere with the proximity sensor.
- If your device is wet or is being used in a humid place, the touch sensor or buttons may not function properly.

Turning on or off the power

Turning on the power

When the power is turned off, press and hold the Power/Lock key.



- When the device is turned on for the first time, initial configuration takes place. The first booting time for the smart phone may be longer than usual.

Turning off the power

Press and hold the Power/Lock key, then select **Power off**.

Power control options


Tap and hold the Power/Lock key, then select an option.

- **Power off:** Turn off the device.
- **Power off and restart:** Restart the device.
- **Turn on Airplane mode:** Block telecommunication-related functions, including making phone calls, messaging and browsing the Internet. Other functions remain available.


Installing the SIM card

Properly use the SIM (Subscriber Identity Module) card provided by your service provider.


- 1 Insert the ejection pin into the hole on the card tray.

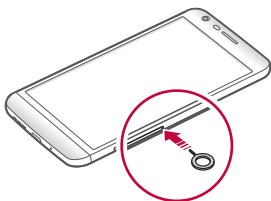


- 2 Pull out the card tray.

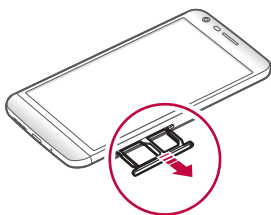

- 3 Put the SIM card on the card tray with the gold-coloured contacts facing downwards.

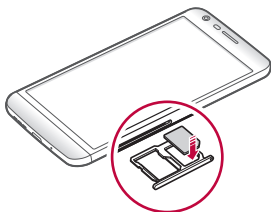

4 Insert the card tray back into the slot.

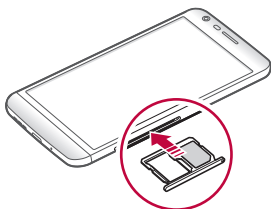

Precautions when using SIM card

- Do not lose your SIM card. LG is not responsible for damage and other issues caused by loss or transfer of a SIM card.
- Be careful not to damage the SIM card when you insert or remove it.



- Of several types of SIM cards, only the Nano-SIM cards work with the device.
- For problem-free performance, it is recommended to use the phone with the correct type of SIM card. Always use a factory-made SIM card supplied by the operator.


Inserting the memory card

The device supports up to a 2 TB microSD. Some memory cards may not be compatible with your device, depending on the memory card manufacturer and type.



- Some memory cards may not be fully compatible with the device. If you use an incompatible card, it may damage the device or the memory card, or corrupt the data stored in it.

- 1 Insert the ejection pin into the hole on the card tray.
- 2 Pull out the card tray.
- 3 Put the memory card on the card tray with the gold-coloured contacts facing downwards.

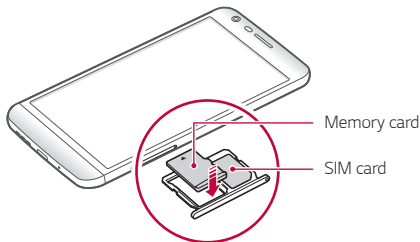

- 4 Insert the card tray back into the slot.



- The memory card is an optional item.
- Frequent writing and erasing data may shorten the lifespan of memory cards.

Removing the memory card

Unmount the memory card before removing it for safety.

- 1 Tap **○ > Settings > General > Storage & USB > △**.
- 2 Insert the ejection pin into the hole on the card tray.
- 3 Pull out the card tray and remove the memory card.



- Do not remove the memory card while the device is transferring or accessing information. This may cause data to be lost or corrupted, or may damage the memory card or the device. LG is not responsible for losses that result from the abuse or improper use of memory cards, including the loss of data.


Battery

Removing the battery



- Turn off the device before removing the battery. Failure to do so may damage the device.

- 1 Press the module eject key to partly eject the module from the device.

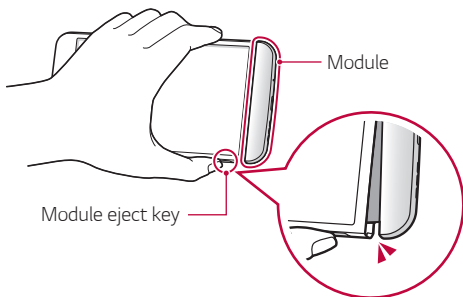


- 2 Grab the middle of the ejected module and pull it out from the device.



- 3 Hold the battery and module with both hands and separate them from one another in the direction of the arrow.



- Do not bend the battery when removing it. The plastic cap on the battery may be damaged.

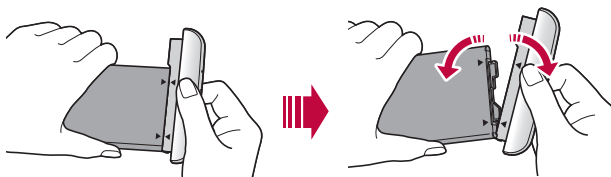


Installing the battery




- Device specifications may vary depending on the area or service provider. To purchase additional batteries or compatible optional items, contact an LG Customer Service Centre for support.
- Be sure to use authentic accessories provided by LG Electronics. Using third-party accessories may damage the device or cause malfunctions.

- 1 Align the indicated arrows correctly and insert the battery into the module according to the order indicated in the image.

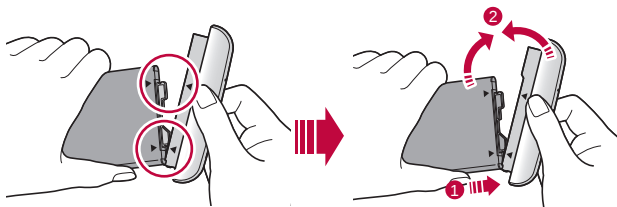

- 2 Grab the lower part of the module as shown in the figure below, then gently slide the module into the device until they are tightly fastened.

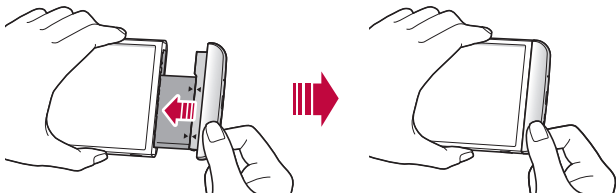

- Never press the module eject key when inserting the module into the device.

Precautions when using the module


- When inserting the battery into the device, make sure that the battery is attached to the module. Inserting the battery without the module attached may damage the device.
- When replacing the battery, take extra care to ensure that no foreign substance or water enters the device.
- Do not put the device in a hot and humid location when the battery module is removed.
- Ensure that the inside of the device does not contact a metallic object or water and does not get damaged.
- Leaving the device with the module separated for an extended period of time may deform the device or damage the metallic contacts. This may result in device malfunction.
- Never separate the module from the device without pressing the module eject key. This may damage the device.
- Never remove the module when the device is in use.
- If a gap occurs between the module and device while you are using the device, firmly insert the module into the device.

- If you insert a module that is not compatible with your service provider, for example, a module bought from other service provider or in an area that is not covered by your service provider, your device may not operate normally.
- Be careful not to hurt your fingers when inserting or removing the module.
- Make sure to insert the battery and module correctly. If you insert them incorrectly, the device may not operate properly or may get damaged.
- Failure to follow the instructions in the user guide may damage the device.

Charging the battery

Before using the device, fully charge the battery.

Connect one end of the charging cable to the charger, insert the other end of the cable into the cable port, and then plug the charger into a power socket.

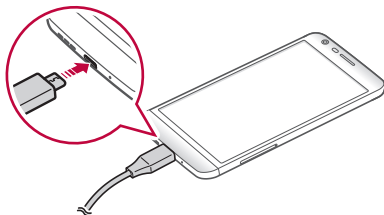

- Make sure to use the USB cable provided as a basic accessory.
- Make sure to use an LG-approved charger, battery and charging cable. Charging the battery with a third-party charger may cause the battery to explode or may damage the device.
- Using the device when it is charging may cause electric shock. To use the device, stop charging.



- This device is supplied with the battery inserted. When using the device for the first time, check the battery level and fully charge the battery before using the device if necessary.
- Remove the charger from the power socket after the device is fully charged. This prevents unnecessary power consumption.
- Another way to charge the battery is by connecting a USB cable between the device and a desktop or laptop computer. This may take a longer time than charging the battery in the common way.
- Do not charge the battery by using a USB hub that is unable to maintain the rated voltage. Charging may fail or unintentionally stop.

Using the battery efficiently

Battery lifespan may decrease if you keep many apps and functions running simultaneously and continuously.

Cancel background operations to increase battery life.

To minimise battery consumption, follow these tips:


- Turn off the Bluetooth® or Wi-Fi network function when not using them.
- Set the screen timeout to as short a time as possible.
- Minimise the screen brightness.
- Set a screen lock when the device is not used.
- To use a downloaded app, check the battery level.

Touch screen

You can familiarise yourself with how to control your device by using touch screen gestures.


Tapping

Lightly tap with your fingertip to select or run an app or option.

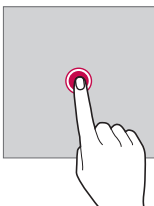


Tapping and holding

Tap and hold for several seconds to run a hidden function.

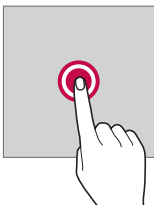


Double-tapping

Tap twice quickly to zoom in or out on a web page or map.

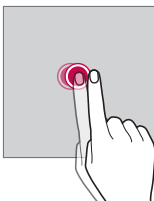


Dragging

Tap an item, such as an app or widget, then move your finger to another location in a controlled motion. You can use this gesture to move an item.

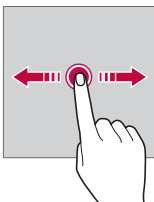



Swiping

Tap the screen with your finger and move it quickly without pausing. You can use this gesture to scroll through a list, a web page, photos, screens, and more.

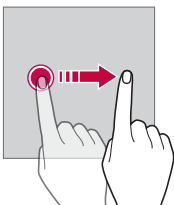

Pinching and spreading

Pinch two fingers to zoom out such as on a photo or map. To zoom in, spread your fingers apart.

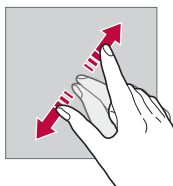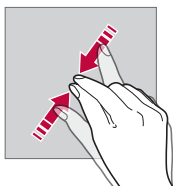

- Do not expose the touch screen to excessive physical shock. You might damage the touch sensor.



- A touch screen failure may occur if you use the device near a magnetic, metallic or conductive material.
- If you use the device under bright lights, such as direct sunlight, the screen may not be visible, depending on your position. Use the device in a shady location or a location with an ambient light that is not too bright and bright enough to read books.
- Do not press the screen with excessive force.
- Gently tap with your fingertip on the option you want.
- Touch control may not work properly if you tap while wearing a glove or by using the tip of your fingernail.
- Touch control may not work properly if the screen is moist or wet.
- The touch screen may not function properly if a screen-protective film or accessory purchased from a common online or offline store is attached to the device.

Home screen

Home screen overview


The Home screen is the starting point for accessing various functions and apps on your device. Tap  on any screen to directly go to the Home screen.

You can manage all apps and widgets on the Home screen. Swipe the screen left or right to view all installed apps at a glance.

To search for an app, use Google search.

Home screen layout

You can view all apps and organise widgets and folders on the Home screen.

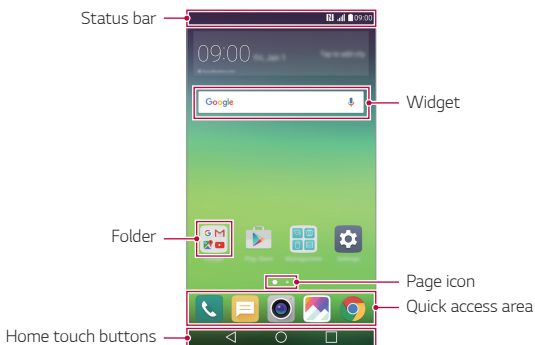

- The Home screen may vary, depending on the service provider or software version.

- **Status bar:** View status icons, the time and the battery level.
- **Widget:** Add widgets to the Home screen to quickly access necessary information without bothering to run apps one by one.
- **Folder:** Create folders to group apps by your preferences.


- Page icon: View the total number of Home screen canvases and the currently displayed canvas which is highlighted.
- Quick access area: Fix main apps at the bottom of the screen so that they can be accessed from any Home screen canvas.
- Home touch buttons
 - ◀: Return to the previous screen. Close the keypad or pop-up windows.
 - ○: Tap to go to the Home screen. To launch **Google**, tap and hold.
 - □: View a list of recently used apps or run an app from the list. Use the **Clear all** option to delete all recently used apps. In some apps, tapping and holding the button will access additional options.

Editing Home touch buttons

You can rearrange Home touch buttons or add frequently used functions to Home touch buttons.

Tap ○ > **Settings** > **Display** > **Home touch buttons** > **Button combination** and customise settings.

- Several functions, including QSlide, the notifications panel or Capture+, are provided. A maximum of five items can be added.

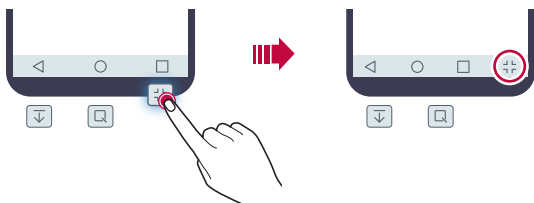

Status icons

When there is a notification for an unread message, calendar event or alarm, the status bar displays the corresponding notification icon. Check your device's status by viewing notification icons displayed on the status bar.

-  : No signal
-  : Data is being transmitted over the network
-  : Alarm is set
-  : Vibrate mode is on
-  : Bluetooth is on
-  : Connected to a computer via USB
-  : Battery level
-  : Flight mode is on
-  : Missed calls
-  : Wi-Fi is on
-  : Mute mode is on
-  : GPS is on
-  : Hotspot is on
-  : No SIM card



- Some of these icons may appear differently or may not appear at all, depending on the device's status. Refer to the icons according to the actual environment in which you are using the device.
- Displayed icons may vary, depending on the area or service provider.


Notifications panel

You can open the notifications panel by dragging the status bar downwards.

Use quick access icons in the notifications panel to easily and quickly turn a function on or off.

Drag left or right on the list of quick access icons to select the function icon you want.

- If you tap and hold the icon, the settings screen for the corresponding function appears.

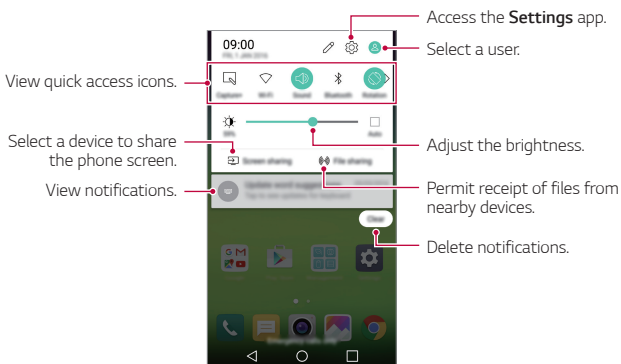

Notification panel settings

You can select items to display on the notification panel.

Tap  on the notification panel.

- To rearrange quick access icons, tap and hold an icon, then drag it to another position.
- Select icons you want to display on the list.




- Available menu items may vary depending on the area or service provider.

Switching the screen orientation

You can set the screen orientation to automatically switch, according to the device's orientation.

On the notification panel, tap **Rotation** from the quick access icon list.

Alternatively, tap  > **Settings** > **Display** and activate **Auto-rotate screen**.

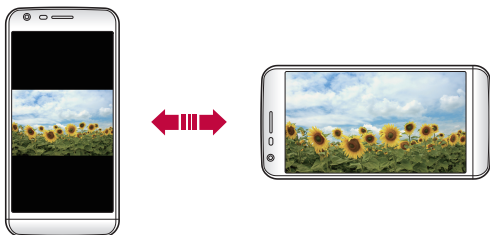

Editing the Home screen

On the Home screen, tap and hold on an empty space, then start the desired function.


- To rearrange the Home screen canvases, tap and hold on a canvas, then drag it to another location.
- To add widgets to the Home screen, tap **Widgets** and drag a widget to the Home screen.
- To change Home screen settings, tap **Home screen settings** and customise options. See *Home screen settings* for details.
- To view or reinstall the uninstalled apps, tap **Uninstalled apps**. See *Recently uninstalled apps* for details.

Viewing the background theme

You can view only the background image by hiding apps and widgets on the Home screen.

Spread two fingers apart while holding down on the Home screen.

- To return to the original screen which displays apps and widgets, pinch your fingers on the Home screen or tap ◀.

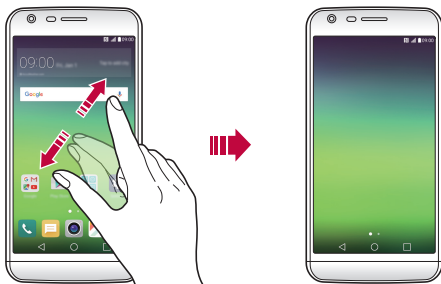

Searching for apps on the Home screen

You can easily search for apps installed on the Home screen by entering the desired app's name in the Google widget.

The installed apps list appears on the Google search screen.

Moving apps on the Home screen

On the Home screen, tap and hold an app, then drag it to another location.

- To keep frequently used apps at the bottom of the Home screen, tap and hold an app, then drag it to the quick access area at the bottom.
- To remove an icon from the quick access area, drag the icon to the Home screen.

Using folders from the Home screen

Creating folders

On the Home screen, tap and hold an app, then drag it over another app.

- A new folder is created and the apps are added to the folder.

Editing folders

On the Home screen, tap a folder and then run the desired function.

- To edit the folder name and colour, tap the folder name.
- To remove an app from the folder, tap and hold the app and drag it to outside the folder. If the removed app is the only one app that existed in the folder, the folder is removed automatically.

Home screen settings

You can customise Home screen settings.

- 1 Tap  > **Settings** > **Display** > **Home screen**.
- 2 Customise settings:
 - **Select Home**: Select a Home screen mode.
 - **Wallpaper**: Change the Home screen background theme.
 - **Screen swipe effect**: Select an effect to apply when the Home screen canvas switches.
 - **Theme**: Select the screen theme to apply.
 - **Sort apps by**: Set how apps are sorted on the Home screen.
 - **Grid**: Change the app arrangement mode for the Home screen.
 - **Hide apps**: Select or deselect apps to hide from the Home screen.
 - **Smart Bulletin**: Use the Home screen to view information customised to your needs.

Screen lock

Screen lock overview

Your device's screen turns off and locks itself if you press the Power/Lock key. This also happens after the device is left idle for a specified period of time.

If you press the Power/Lock key when a screen lock is not set, the Home screen appears immediately.

To ensure security and prevent unwanted access to your device, set a screen lock.



- Screen lock prevents unnecessary touch input on the device screen and reduces battery consumption. We recommend that you activate the screen lock while not using the device.

Configuring screen lock settings

There are several options available for configuring the screen lock settings.

- 1 Tap **○ > Settings > Display > Lock screen > Select screen lock** and then select the method you prefer.
- 2 Customise lock settings:
 - **None:** Deactivate the screen lock function.
 - **Swipe:** Slide on the screen to unlock the screen.
 - **Knock Code:** Tap the spaces of the screen in accordance with a pattern to unlock the screen.
 - **Pattern:** Draw a pattern to unlock the screen.
 - **PIN:** Enter a numeric password to unlock the screen.
 - **Password:** Enter an alphanumeric password to unlock the screen.



- To set screen lock using a pattern, first create a Google account or backup PIN. If you enter an incorrect pattern more than a specified number of times consecutively, you can unlock the screen by using your backup PIN or Google account.
- If a screen lock is set using a PIN or password and you enter an incorrect PIN or password more than a specified number of times, password entry is blocked for 30 seconds.

Lock screen settings

You can customise the following lock screen settings.

- 1 Tap  > **Settings** > **Display** > **Lock screen**.
- 2 Customise settings:
 - **Select screen lock:** Select a screen lock method.
 - **Smart Lock:** Select trusted items so that if one of them occurs, the device is automatically unlocked.
 - **Screen swipe effect:** Set screen transition effects to apply when the screen is unlocked. This option appears when the screen lock method is set to Swipe.
 - **Wallpaper:** Change the lock screen background image.
 - **Shortcuts:** Add an app shortcut and directly access the app from the lock screen by dragging the app outside the large circle. This option appears if the screen lock method is set to Swipe.
 - **Weather animation:** Display weather animations for the current location on the lock screen.
 - **Contact info for lost phone:** Display emergency contact information on the lock screen.
 - **Lock timer:** Set the amount of idle time after which the device automatically locks.
 - **Power key instantly locks:** Instantly lock the screen when the Power/Lock key is pressed.



- Available setting items may vary, depending on the selected screen lock method.

KnockON

You can turn the screen on or off by double-tapping the screen.

Turning on the screen

Double-tap the middle of the screen.

- Tapping the top or bottom of the screen may decrease the recognition rate.

Turning off the screen

Double-tap on an empty space on the Home screen.

Alternatively, double-tap an empty space on the status bar.



- This option is available only on the Home screen provided by LG. It may not function properly on a custom launcher or on the Home screen installed by the user.
- When tapping the screen, use your fingertip. Do not use a fingernail.
- To use the KnockON feature, make sure that the proximity/light sensor is not blocked by a sticker or any other foreign substance.

Knock Code

You can unlock the screen by creating your own Knock Code. When the screen is locked, you can directly access the Home screen by tapping the screen in a specified sequence.

Creating a Knock Code

- 1 Tap  > **Settings** > **Display** > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 Tap the squares in a pattern of your choice to create a Knock Code and tap **NEXT**.
- 3 Input the created Knock Code again for verification, then tap **CONFIRM**.
- 4 Set a backup PIN to use when the Knock Code is forgotten.

Unlocking the screen with a Knock Code

Unlock the screen by inputting the Knock Code you have created.

Input your Knock Code on the touch screen when the screen is turned off.



- You can use your Knock Code, together with the KnockOn feature.
- If you enter an incorrect Knock Code more than a specified number of times consecutively, unlock by using your backup PIN or Google account.
- Make sure to use your fingertip when tapping the screen.

Secure start-up

Secure start-up overview

When you turn on the device, the screen is locked for security. Unlock the screen by entering the current unlock method, such as a Knock code, pattern, password or PIN. Until the screen is unlocked, you cannot receive most phone calls, text messages, alarms, notifications, and more.

Precautions of Secure start-up

- If the password is entered incorrectly more than a specific number of times, the device will automatically initialise. Be sure to remember the password.
- If you forget your decryption password, you must initialise the device to use it again. Initialisation will delete all data saved before initialisation.
- Encryption takes place when the device boots for the first time after an initialisation. Stopping encryption before it is complete may damage data. For example, do not remove or insert the battery while encryption is in progress. Wait until the encryption is complete.

Memory card encryption

You can encrypt and protect data saved on the memory card. The encrypted data in the memory card cannot be accessed from another device.

- 1 Tap  > **Settings** > **General** > **Fingerprints & security** > **Encrypt SD card storage**.
- 2 Read the on-screen overview of memory card encryption and then tap **CONTINUE** to continue.
- 3 Select an option and tap **ENCRYPT NOW**:
 - **New data encryption**: Encrypt only data that is saved on the memory card after encryption.
 - **Full encryption**: Encrypt all the data currently saved on the memory card.
 - **Exclude media files**: Encrypt all files, except for media files such as music, photos and videos.



- To encrypt the memory card, make sure that a screen lock is set using a PIN or password.
- Once memory card encryption starts, some functions are not available.
- If the device is turned off while encryption is underway, the encryption process will fail, and some data may be damaged. Therefore, be sure to check whether the battery level is sufficient before starting encryption.
- Encrypted files are accessible only from the device where the files were encrypted.
- The encrypted memory card cannot be used on another LG device. To use the encrypted memory card on another mobile device, initialise the card.
- You can activate memory card encryption even when no memory card is installed into the device. Any memory card that is installed after encryption will automatically be encrypted.

Taking screenshots

You can take screenshots of the current screen you are viewing.

Via a shortcut

Press and hold the Power/Lock key and the Volume Down (-) key at the same time for at least two seconds.

- Screenshots can be viewed from the **Screenshots** folder in the **Gallery**.

Via Capture+

On the screen where you want to take a screenshot, drag the status bar downwards, then tap **Capture+**.



- When the screen is turned off or locked, you can access **Capture+** by pressing the Volume Up (+) key twice. First, tap **○ > Settings > General** and then turn on **Shortcut key**.
- See *Writing notes on a screenshot* for details.

Entering text

Using Smart keyboard


You can use Smart keyboard to enter and edit text.

With Smart keyboard, you can view text as you type without bothering to alternate between the screen and a conventional keyboard. This allows you to easily find and correct errors when typing.



Moving the cursor

With Smart keyboard, you can move the cursor to the exact position you want. When typing text, tap and hold on the space bar and then drag left or right until the cursor moves to the position you want in the text.

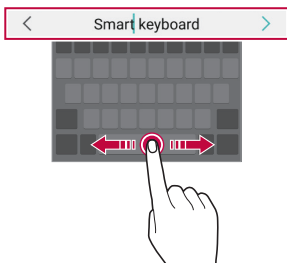


- This option is available only on the QWERTY keyboard.

Suggesting words

Smart keyboard automatically analyses your usage patterns to suggest frequently used words as you type. The longer you use your device, the more precise the suggestions are.

Enter text, then tap a suggested word or gently drag the left or right side of the space bar upwards.


- The selected word is automatically entered. You do not need to manually type every letter of the word.

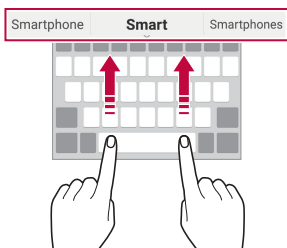

Changing the QWERTY keyboard layout

You can add, delete or rearrange keys on the bottom row of the keyboard.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **QWERTY keyboard layout**.
Alternatively, tap  on the keyboard and tap **Keyboard height and layout** > **QWERTY keyboard layout**.
- 2 Tap a key on the bottom row, then drag it to another position.

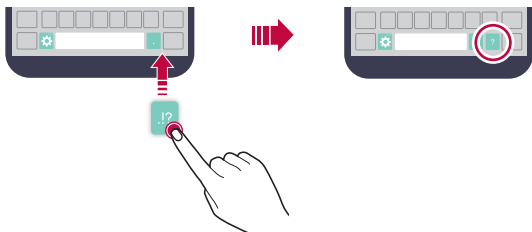

- This option is available on the QWERTY, QWERTZ and AZERTY keyboards.
- This function may not be supported for some languages.

Customising the keyboard height

You can customise the keyboard height to maximise hand comfort when typing.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Keyboard height**.
Alternatively, tap  on the keyboard and tap **Keyboard height and layout** > **Keyboard height**.

- 2 Adjust the keyboard height.



Selecting a landscape keyboard mode

You can select a landscape keyboard mode from several choices.

- 1 Tap > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Keyboard type in landscape**.

Alternatively, tap on the keyboard and tap **Keyboard height and layout** > **Keyboard type in landscape**.


- 2 Select a keyboard mode.

Splitting the keyboard

You can split the keyboard in half and place each piece on either side of the screen when the screen is in landscape mode.

Tap > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Split keyboard**.

Alternatively, tap on the keyboard and tap **Keyboard height and layout** > **Split keyboard**.

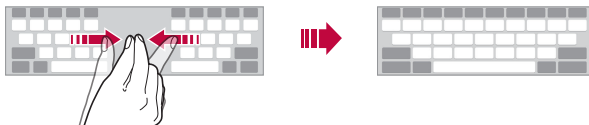



- Rotate the device to landscape mode to split the keyboard to both sides. To merge or split the keyboard, pinch together or spread apart your fingers on the keyboard.

One-handed operation mode

You can move the keyboard to one side of the screen so that you can use the keyboard with one hand.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **One-handed operation**.

Alternatively, tap  on the keyboard and tap **Keyboard height and layout** > **One-handed operation**.

- 2 Press the arrow displayed next to the keyboard to move the keyboard in the direction you want.



Entering text by using voice

On the keyboard, tap and hold  and then select .



- To maximise the voice command recognition, speak clearly with the correct pronunciation and accent.
- To enter text with your voice, make sure that your device is connected to a network.
- To select the language for voice recognition, tap  > **Languages** on the voice recognition screen.
- This function may be not supported, or the supported languages may differ depending on the service area.

Changing the keyboard

You can change the input language and the keyboard type for each language.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Select languages**.
- 2 Select a language and customise the keyboard type.

Copy and Paste

You can cut or copy text from an app, and then paste the text into the same app. Or, you can run other apps and paste the text into them.

- 1 Tap and hold around the text you want to copy or cut.
- 2 Drag  /  to specify the area to copy or cut.
- 3 Select either **CUT** or **COPY**.
 - Cut or copied text is automatically added to the clipboard.
- 4 Tap and hold the text input window, then select **PASTE**.



- If there is no item that has been copied or cut, the **PASTE** option will not appear.

CLIP TRAY

If you copy or cut an image or text, it is automatically saved to the clip tray and can be pasted to any space at any time.

- 1 On the keyboard, tap and hold  and select .
Alternatively, tap and hold the text input window, then select **CLIP TRAY**.
- 2 Select and paste an item from the clip tray.
 - A maximum of 20 items can be saved to the clip tray.
 - Tap  to lock saved items in order not to delete them, even when the maximum quantity is exceeded. A maximum of ten items can be locked. To delete locked items, unlock them first.
 - Tap  to delete the items saved to the clip tray.



- The clipboard may not be supported by some apps downloaded by the user.



03

Useful Apps

Installing and uninstalling apps

Installing apps

Access an app store to search and download apps.

- You can use **SmartWorld**, **Play Store** or the app store provided by your service provider.



- Some app stores may require you to create an account and sign in.
- Some apps may charge fees.
- If you use mobile data, you may be charged for data usage, depending on your pricing plan.
- **SmartWorld** may not be supported depending on the area or service provider.

Uninstalling apps

Uninstall apps that you no longer use from your device.



- Some apps cannot be uninstalled by users.

Uninstalling with the tap and hold gesture

On the Home screen, tap and hold the app to uninstall, then drag it over **Uninstall** at the top of the screen.

- If apps were uninstalled within 24 hours from now, you can reinstall them. See *Recently uninstalled apps* for details.

Uninstalling by using the settings menu

Tap  > **Settings** > **General** > **Apps**, select an app, then tap **Uninstall**.

Uninstalling apps from the app store

To uninstall an app, access the app store from which you download the app and uninstall it.

Recently uninstalled apps

You can view the uninstalled apps on the Home screen. You can also reinstall apps which were uninstalled within 24 hours from now.

1 Tap  > **Recently uninstalled apps**.

2 Activate the desired function:

- **Reinstall**: Reinstall the selected app.
-  : Remove the uninstalled apps permanently from the device.



- Uninstalled apps are automatically removed from the device 24 hours after they were uninstalled. If you want to reinstall the uninstalled apps, you must download them again from the app store.
- This feature is activated on the default Home screen only. If you uninstall apps while using the EasyHome screen or other launcher, they are immediately and permanently removed from the device.

Phone

Voice call

Make a phone call by using one of the available methods, such as manually entering a phone number or making a call from the contact list or the list of recent calls.

Making a call from the keypad

1 Tap  >  > **Dial**.

2 Make a call by using a method of your choice:

- Enter a phone number and tap .
- Tap and hold a speed-dial number.
- Search for a contact by tapping the initial letter of a contact name in the contact list, and then tap .



- To enter "+" when making an international call, tap and hold number 0.
- See *Adding contacts to the speed dial list* for details on how to add phone numbers to the speed dial list.

Making a call from the contact list

- 1 Tap > > **Contacts**.
- 2 From the contact list, select a contact and tap .

Answering a call

To answer a call, drag to the outside of the circle on the incoming call screen.

- When the stereo headset is connected, you can make calls by using the call/end button on the headset.
- To end a call simply by pressing the Power/Lock key, tap > **Settings** > **Networks** > **Call** > **Answer and end calls**, then turn on **End calls with the Power key**.

Rejecting a call

To reject an incoming call, drag to the outside of the circle on the incoming call screen.

- To send a rejection message, drag the rejection message to the outside of the circle.
- To add or edit a rejection message, tap > **Settings** > **Networks** > **Call** > **Decline and reject calls** > **Decline with message**.
- When a call is coming in, press the Volume Down (-) or Power/Lock key to mute ringtone or vibration, or to hold the call.

Viewing missed calls

If there is a missed call, the status bar at the top of the screen displays



To view missed call details, drag the status bar downwards. Alternatively, tap > > **Call logs**.

Functions accessible during a call

During a call, you can access a variety of functions by tapping on-screen buttons:

- **Contacts:** View the contact list during a call.
- **End:** End a call.
- **Dialpad:** Display or hide the dial pad.
- **Speaker:** Turn on the speakerphone function.
- **Mute:** Mute your voice so that your voice cannot be heard by the other party.
- **Bluetooth:** Switch the call to a Bluetooth device that is paired and connected.
- **:** : Access many call options.



- Available settings items may vary depending on the area or service provider.

Making a three-way calling

You can make a call to another contact during a call.

- 1 During a call, tap **:** > **Add call**.
- 2 Enter a phone number and tap .
 - The two calls are displayed on the screen at the same time, and the first call is put on hold.
- 3 To switch to another call, tap another number on the screen.
To start a conference call, tap **Merge calls**.



- You may be charged a fee for each call. Consult with your service provider for more information.

Viewing call records

To view recent call records, tap  > **Call logs**. Then, you can use the following functions:

- To view detailed call records, select a contact. To make a call to the selected contact, tap .
- To delete call records, tap  > **Delete**.



- The displayed call duration may differ from the call charge. Consult with your service provider for more information.

Configuring call options

You can configure various call options.

- 1 Tap  > **Dial** or **Call logs**.
- 2 Tap  > **Call settings** and then configure the options to suit your preferences.

Messaging

Sending a message

You can create and send messages to your selected contacts or all of your contacts using the Messaging app.



- Sending messages abroad may incur additional charges. Consult with your service provider for more information.

- 1 Tap > .
- 2 Tap .
- 3 Specify a recipient and create a message.
 - To attach files, tap .
 - To access optional menu items, tap .
- 4 Tap **Send** to send the message.

Reading a message

You can view exchanged messages organised by contact.

- 1 Tap > .
- 2 Select a contact from the message list.

Configuring messaging settings

You can change messaging settings to suit your preferences.

- 1 Tap > .
- 2 Tap > **Settings** from the message list.

Camera

Starting the camera

You can take a photo or record a video to keep the memorable moments.

Tap  > .



- Before taking a photo, wipe the camera lens with a microfibre cloth. If your finger touches the camera lens, you may get blurry photos.
- If the battery level is lower than 5%, charge the battery before using the camera.
- Images included in this user guide may be different from the actual device.
- Photos and videos can be viewed or edited from **Gallery**. See [Gallery overview](#) for details.

Changing the camera mode

You can select a camera mode that suits your shooting environment to take a photo or record a video easily and conveniently.


On the camera screen, tap  and select the desired mode.



Switching between cameras

You can switch between the front and rear cameras to suit your shooting environment.

On the camera screen, tap  or drag the screen either up or down or left or right to switch between the front and rear cameras.

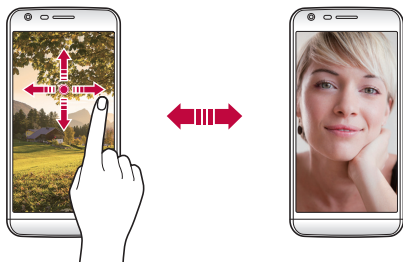

- Use the front camera to take selfies. See *Taking selfies* for details.

Switch to dual camera

You can use the dual (second) camera on the back to take photos by using either the normal or wide-angle camera lens.

Tap  /  to switch the normal and wide-angle camera lens.

Zoom in or out

You can use zoom in or out on the camera screen while taking a picture or recording a video.

On the camera screen, pinch or spread two fingers to zoom in or out.

- Then the wide-angle camera lens and normal camera lens on the back of the device are automatically switched to take a photo or record a video.

Simple mode


You can take photos by simply tapping the screen.

- 1 On the camera screen, tap  > .
- 2 Frame your subject and then tap on the screen.

Auto mode

You can take photos or record videos by selecting a variety of shooting modes and options.

- 1 On the camera screen, tap  > .
- 2 To take a photo, tap . Or to record a video, tap .

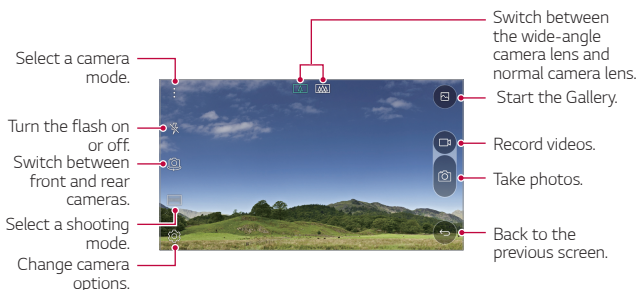

Taking a photo

- 1 Select a shooting mode, and tap the subject to focus the camera on.
- 2 Tap  to take a photo.
Alternatively, press a volume key.



- When the screen is turned off or locked, start the camera by pressing the Volume Down (-) key twice. To activate this function, tap  > **Settings** > **General** and turn on **Shortcut key**. To take photos immediately after the camera is started by the Volume Down (-) key, activate the **Quick shot** feature.


Recording a video

- 1 Select a shooting mode, and tap the subject to focus the camera on.
- 2 Tap 
 - To take a photo while recording a video, tap .
 - To pause the video recording, tap . To resume the video recording, tap .
- 3 Tap  to end the video recording.

Pop-out Picture

You can take a photo or record a video by using both the normal and wide-angle lens of the dual camera at the back of the device to shoot the scenes as if they were put in the frame. The scenes shown in the small, front screen are shot by using the normal camera lens, and the scenes shown in the large, background screen are shot by using the wide-angle camera lens. Change the front screen to a different shape or apply various effects to take a sensuous photo or video.


- 1 In the Auto mode, tap **MODE** > .
- 2 Tap  and select the desired layout.
- 3 Select effects:
 - : Apply a convex lens effect to the area captured by the wide-angle camera.
 - : Apply greyscale to the area captured by the wide-angle camera.
 - : Darken the edges of the area captured by the wide-angle camera.
 - : Blur the area captured by the wide-angle camera.
- 4 Tap  to take a photo. To record a video, tap .

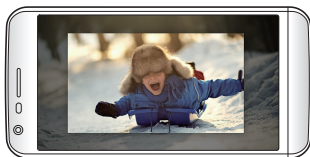

Multi-view

You can take multiple photos or videos in the form of a collage by using the front and rear cameras. Photos and videos can be saved with different layouts.


- 1 In the Auto mode, tap **MODE** > .
- 2 Tap  and select a layout.
- 3 Tap  to take photos, according to the on-screen instructions. To record a video, tap .
 - Tap  to record a short video clip.
 - To switch between front and rear (normal or wide-angle) cameras, drag up or down, or left or right.
 - To take continuous shots of photos or videos at specific intervals, tap and hold  or .
 - Tap  /  to take pictures or record videos simultaneously or sequentially.

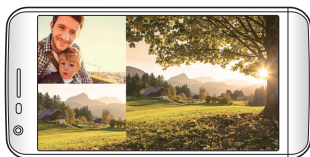

Snap Video

You can record short videos clips and assemble them into a 60-second short film.

- 1 On the camera screen, tap **MODE** > .
- 2 Tap 
 - Tap the icon once to record a three-second video clip. Tap and hold the icon to create a longer video clip (maximum length: one minute).

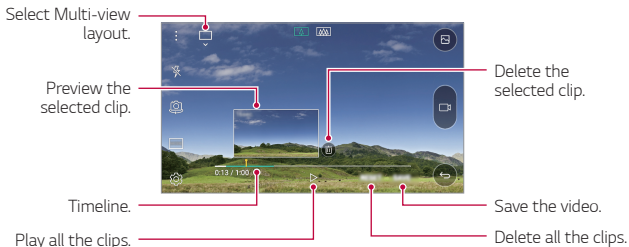

- 3 Tap **SAVE**.

Panorama

You can create a panoramic photo by moving the camera in one direction to photograph and stitch continuous shots of for a wide view.

- 1 In the Auto mode, tap **MODE** > .
- 2 Tap  and then slowly move the camera in one direction.
 - Move the device by following the direction of the arrow in the guideline.
- 3 Tap  to end shooting.



Slow-motion Video

You can create an entertaining video by changing the moving speeds of subjects in your video. This feature allows you to record a video at a faster rate of speed and then play it at the normal speed so that the video appears to be slowed down.

- 1 In the Auto mode, tap **MODE** > .
- 2 Tap  and record a video.
- 3 Tap  to end the video recording.



Time-lapse

You can take a sequence of frames at set intervals to record changes that take place slowly over time, such as cloud movements, celestial motions, traffic, and more.

- 1 In the Auto mode, tap **MODE** > .
- 2 Tap  and record a video.
 - To adjust the video playback rate, tap .
- 3 Tap  to end the video recording.



• While recording a time-lapse video, voices are not recorded.

Burst shot

You can take continuous shots of photos to create moving pictures.

In the Auto mode, tap and hold .

- Continuous shots are taken at a fast speed while  is held down.



- Up to thirty (30) continuous photos can be taken.

Connecting with LG friends cameras

You can connect the device to another camera to view photos or videos saved on the camera.



- This function is available when using multi-view or snap.
- The LG Friends cameras that can be connected with the device are optional accessories. Consult with LG Customer Service Centre for purchasing.
- This function may not be supported or some options may differ, depending on the area or service provider.

Customising camera options

You can customise a variety of camera options to suit your preferences.

In the Auto mode, tap .



- Available options vary depending on the selected camera (front or rear camera) and the selected shooting mode.

	Select an aspect ratio for photos or quality for videos.
	Obtain photos or videos in vivid colours, and get compensated effects even when they are taken against the light. These functions are provided by the high dynamic range (HDR) technology equipped in the camera of the device.
	Apply film effects to photos.
	Set the timer to automatically take photos after a specified period of time.
	Take photos with voice commands. (Available choices: Cheese, Smile, Whisky, Kimchi, LG)
	Reduce motion blur when taking a photo or recording a video: •  : Record a video stably when you are moving or walking. •  : Use to reduce little blur while taking a photo or recording a video.
	Display guide grids so that you can take photos or record videos based on the horizontal and vertical reference lines.
	Set the locations where you want to save photos and videos. These options appear when an external memory card is inserted. •  : Save to the internal storage. •  : Save to the external memory card.
	Customise auto-shooting settings. These options appear when using the front camera. •  : Shoot using the Gesture Shot feature. •  : Shoot when the camera detects a face.
	Choose whether to use Gesture View to view the taken photo immediately after taking a photo. These options appear when using the front camera. •  : Turn on Gesture View. •  : Turn off Gesture View.
	Flip images. These options appear when using the front camera. •  : Do not flip the image. •  : Flip the image horizontally.

Applying film effects

You can apply filters of various colours to photos.

- 1 In the Auto mode or Manual mode, tap  > .
- 2 Select the desired film effect.

Manual mode

You can create photos featuring professional touch by using a variety of advanced features. Adjust the white balance, focus, brightness, ISO, shutter speed and other options.

- 1 On the camera screen, tap  > .
- 2 Customise shooting options.



Adjust white balance.

Adjust focus.

Adjust brightness.

Adjust exposure level.

Adjust shutter speed.

Adjust ISO speed.

- 3 Tap  to take the photo.

Taking selfies

You can use the front camera to view your face on the screen and take selfies.




- When using the front camera, you can change in camera options how selfies are taken. See *Customising camera options* for details.

Gesture shot

You can take selfies by using gestures.

Show your palm to the front camera and then clench your fist.

- In three seconds, a photo is taken.

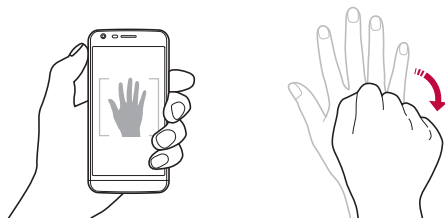

- To use this function, make sure that [👊] is selected in camera options.
- An alternative way to take gesture shots is to clench your fist and then open it towards the front camera.
- Make sure that your palm and fist are within the reference line so that the camera can detect them.
- Access to some functions may be restricted during multi-view shooting.

Interval shot

You can take continuous selfies.

While using the front camera, tap and hold . Alternatively, show your palm to the camera, then clench your fist twice quickly.

- Four photos are taken at about two second interval.



Taking auto-selfies

You can use the face detection feature to take selfies easily and conveniently. You can set the device so that, when you look at the screen, the front camera detects your face and takes a selfie automatically.


- When the front camera detects your face, the frame turns white. Then if you stop moving, the frame turns blue and the front camera takes a photo.



- Tap , then tap  until  appears to activate the auto-selfie function.

Gesture view

After taking a selfie with the front camera, you can preview the selfie immediately by placing the screen close to your face.

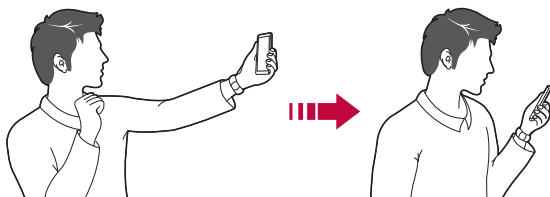

- To use this function, make sure that  is selected in camera options.
- Only one preview is available each time a photo is taken.
- If you rotate the device while in preview screen, the screen switches to camera mode.

Gallery

Gallery overview


You can view and manage photos and videos saved on your device.

- 1 Tap   .
- Saved photos and videos are displayed by the folder.
- 2 Tap a folder and select a file.
- View the selected file in full-screen mode.
- Swipe left or right on the displayed photo or video screen to view the previous or next file.



- Some file formats may not be supported, depending on the installed software.
- Some files may not be opened due to encoding.
- Files that exceed the size limit may cause an error.


Viewing photos

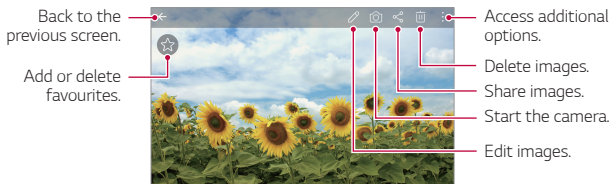

Editing photos

- 1 While viewing a photo, tap .
- 2 Use a variety of effects and tools to edit the photo.
- 3 Tap  to apply changes.
- 4 Tap **SAVE** to save changes.
 - The changes are overwritten to the original file.
 - To save the edited photo as another file, tap  > **Save copy**.


Playing a video

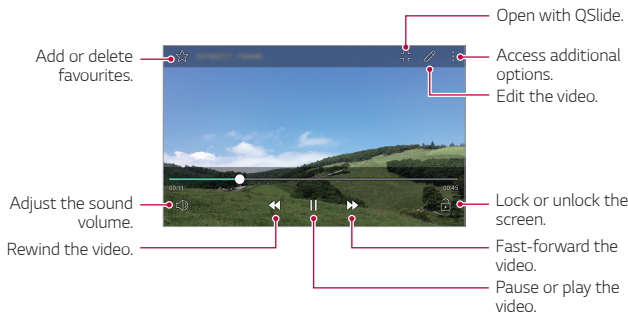

- To adjust the sound volume, drag the right side of the video screen up or down.
- To adjust the screen brightness, drag the left side of the video screen up or down.

Editing videos

- 1 On the video preview screen, tap .
- 2 Use a variety of effects and edit tools to edit the video.

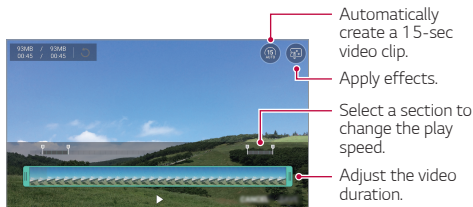

- 3 Tap **SAVE** to save changes.

Deleting files

You can delete files by using one of the following options:

- Tap and hold a file from the file list, then tap **Delete**.
- Tap  from the file list, then select files.

Sharing files

You can share files by using one of the following options:

- While viewing a photo or video, tap  to share the file by using the method you want.
- Tap  from the file list to select files and share them using the method you want.

Calculator



You can use two types of calculators: the simple calculator and the scientific calculator.

- 1 Tap  > **Tools** > **Calculator**.
- 2 Use the keypad to make a calculation.
 - To use the scientific calculator, tap  > **Scientific calculator**.
 - To view calculation history, tap  > **Calculation history**.

Weather

You can view the weather information for a particular area.

- 1 Tap  > **Tools** > **Weather**.
- 2 Tap  and add the city you want.
 - On the detailed weather screen, tap  / , or swipe the screen left or right to view the weather for other cities.

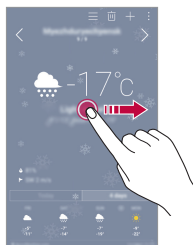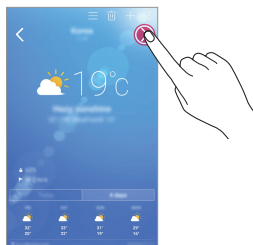

Downloads

You can view, delete or share files downloaded via the Internet or apps.

Tap  > **Tools** > **Downloads**.

Clock

Alarm

You can set an alarm to trigger it at a specified time.

- 1 Tap  > **Tools** > **Clock** > **Alarm**.
- 2 Tap  to add a new alarm.
- 3 Configure the alarm settings and tap **SAVE**.



- If you select a previously set alarm, you can edit the alarm.
- To delete an alarm, tap  at the top of the screen. Alternatively, tap and hold the alarm.

World clock

You can view the current time in cities around the world.

- 1 Tap  > **Tools** > **Clock** > **World clock**.
- 2 Tap  and add a city.

Timer

You can set the timer to trigger an alarm after a specified period of time.

- 1 Tap  > **Tools** > **Clock** > **Timer**.
- 2 Set the time and tap **Start**.
 - To suspend the timer, tap **Stop**. To resume the timer, tap **Resume**.
 - To reset the timer settings, tap **Reset**.
- 3 Tap **Stop** to stop the timer alarm.

Stopwatch

You can use the stopwatch to record a lap time.

- 1 Tap  > **Tools** > **Clock** > **Stopwatch**.
- 2 Tap **Start** to initiate the stopwatch.
 - To record a lap time, tap **Lap**.
- 3 Tap **Stop** to suspend the stopwatch.
 - To resume the stopwatch, tap **Resume**.
 - To delete all the stopwatch records, tap **Reset**.

Voice Recorder

You can record and save your voice or others' voices from important events. Recorded voice files can be played back or shared.

- 1 Tap  > **Tools** > **Voice Recorder**.
- 2 Tap 
 - To pause recording, tap .
- 3 Tap  to end recording.
 - The file is saved automatically and the pre-listen screen appears.
- 4 Tap  to play the recorded voice.




- To save the location details of recording, tap **Location**.
- To tag a current event information on the recording, tap **Event**. Then select the event you want.
- If you tap , recorded voice files appear. You can play a recorded voice file from the list.

Music

You can play and manage music files saved on your device.

- 1 Tap > **LG** > **Music**.
- 2 Select a category.
- 3 Select a music file.

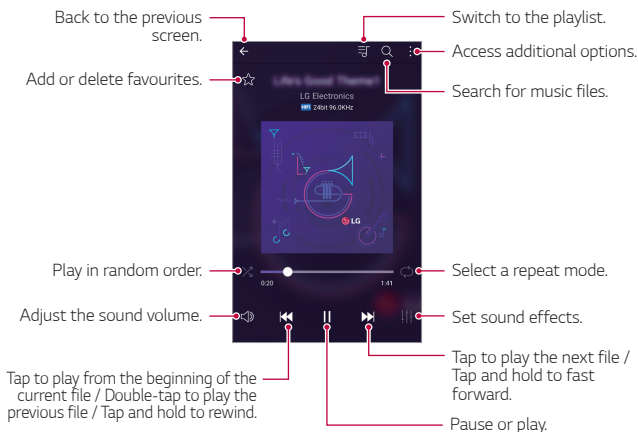

- Some file formats may not be supported, depending on the installed software.
- Files that exceed the size limit may cause an error.
- Music files may be protected by international copyright owners or copyright laws. You may have to obtain legal permission before copying a music file. To download or copy a music file, first check the copyright law for the relevant country.
- This model supports Hi-Fi audio playback. Hi-Fi audio files display the Hi-Fi icon.

E-mail

E-mail overview

You can register an email account to your device and then you can check and send emails from your device.



- If you use mobile data, you may be charged for data usage fee depending on your pricing plan. Consult with your service provider for more information.

Registering email accounts

When you use the email app for the first time, register your email account.

- 1 Tap > **LG** > **E-mail**.
- 2 Select an email service provider.
- 3 Enter your email address and password and then tap **NEXT** to register your account
 - To manually register an email account or to register email accounts not found in the list, tap **MANUAL SETUP**.

Managing email accounts

To view or edit your email account settings, tap > **Settings**.

- To add an account, tap **Add account**.
- To delete an account, tap > **Remove account**.

Opening another email account

If several email accounts are registered and you want to view another account, tap and select another one from the account list.

Checking email

- 1 Tap  and select a mail box.
- 2 Select an email from the email list.
 - The email message appears.

Sending email

- 1 Tap .
- 2 Enter the email address of a recipient.
- 3 Enter a subject and message.
 - To attach files, tap .
 - To access optional menu items, tap .
- 4 Tap  to send the email.

Contacts

Contacts overview

You can save and manage contacts.

Tap  > **LG** > **Contacts**.

Adding contacts

Adding new contacts

- 1 On the contact list screen, tap .
- 2 Enter contact details and tap **SAVE**.

Importing contacts

You can import contacts from another storage device.

- 1 On the contact list screen, tap  > **Manage contacts** > **Import**.
- 2 Select the source and target locations of the contact you want to import, and then tap **OK**.
- 3 Select contacts and tap **IMPORT**.

Adding contacts to the speed dial list

- 1 On the contact list screen, tap  > **Speed dial**.
- 2 Tap **Add contact** from a speed-dial number.
- 3 Select a contact.

Searching for contacts

You can search for contacts by using one of the following options:

- On the contact list screen, enter a contact name in the search box.
- Scroll the contact list up or down.
- From the index of the contact list screen, tap the initial letter of a contact.

Contacts list

Editing contacts

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap  and edit details.
- 3 Tap **SAVE** to save changes.

Deleting contacts

- 1 On the contact list screen, tap and hold a contact.
- 2 Tap **Delete contact**.

Adding favourites

You can register frequently used contacts as favourites.

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap ☆.

Creating groups

- 1 On the contact list screen, tap **Groups** > ⋮ > **New group**.
- 2 Enter a new group name.
- 3 Tap **Add members**, select contacts, then tap **ADD**.
- 4 Tap **SAVE** to save the new group.

Calendar

Calendar overview

You can use the calendar to manage events and tasks.

Adding events

- 1 Tap ○ > **Calendar**.
- 2 Select a date and then tap +.
- 3 Enter event details and tap **SAVE**.
 - If you tap a date from the calendar and the date contains events, a pop-up window appears showing a list of the events. Tap an event from the pop-up window to view the event details.

Syncing events

Tap  > **Calendars to display** >  > **Calendars to sync**, and select a calendar to sync.



- When your events are saved from the device to your Google account, they are automatically synced with the Google calendar, too. Then, you can sync other devices with the Google calendar in order to make those devices have the same events that your device has and to manage your events on those devices.

Event pocket

You can use the event pocket to create events.

Tap  to open the event pocket and then drag content to a date in the calendar:

-  : Manage images, text, notes and temporarily saved events. You can also share text, images and notes from another app and save them to the event box. If you tap **POCKET** when creating an event, the event is temporarily saved to the event pocket.
-  : Add a Facebook account to view information on Facebook events. Some devices may not support the Facebook event information function.
-  : View tourism information about the surrounding area, such as restaurants and convenient facilities, to plan an event.
-  : Manage tasks that have no deadline, such as events.

File Manager

You can view and manage files saved on your device or cloud.

- 1 Tap  > **Tools** > **File Manager**.
- 2 Tap  and select the desired storage location.

Tasks

You can register tasks to your device to easily manage schedules.

- 1 Tap  > **Tools** > **Tasks**.
- 2 Tap  to add a task.
- 3 Enter task details and then tap **SAVE**.

Evernote

You can write and collect important information and then share them with other devices that support **Evernote**.

Tap  > **Recommended apps** > **Evernote**.

Cell Broadcast

You can view real-time text broadcasts on emergency situations, such as typhoons, floods and earthquakes.

Tap  > **Tools** > **Cell Broadcast**.

FM Radio

You can listen to FM radio.

Tap  > **Tools** > **FM Radio**.



- To use this app, first connect a headset to the device. The headset becomes the radio antenna.
- This function may not be supported depending on the area.

LG Backup

You can back up, restore and move the data saved on your device.

1 Tap  > **Management** > **LG Backup**.

Alternatively, tap  > **Settings** > **General** > **Backup & reset** > **LG Backup**.

2 Follow the on-screen instructions to select whether to back up data in the preset backup folder on the device or to copy data to other devices.



- Initialising your device may delete backup files saved in internal storage. To minimise data loss, copy important backup files from the LG Backup folder in the internal storage to a computer or external storage.



- Data in a Google account will not be backed up. When you synchronise your Google account, Google apps, Google contacts, Google calendar, Google memo app data and apps downloaded from Play store are stored on the Drive app automatically.
- Backup files are saved with the file extension *.lbf under the LG Backup folder on the memory card or internal storage.
- Fully charge the battery before backing up or restoring data to avoid unintentional powering off during the process.

SmartWorld

You can download a variety of games, audio content, apps and fonts provided by LG Electronics. Customise your device to suit your preferences by using Home themes, keyboard themes and fonts.

- 1 Tap **○ > LG > SmartWorld**.
- 2 Enter your ID and password, then sign in.
- 3 Select and download content items.

Downloading SmartWorld app

If **SmartWorld** app is not installed, follow these steps to download it.

- 1 Tap **○ > Settings > General > About phone > Update Center > App Updates**.
- 2 From the list, select **SmartWorld** and tap **Download**.



- If you use mobile data, you may be charged for data usage fee depending on your pricing plan.
- This feature may not be supported depending on the area or service provider.

Google apps

You can use Google apps by setting a Google account. The Google account registration window appears automatically when you use a Google app for the first time. If you do not have a Google account, create one from your device. For details on how to use an app, see the Help in the app.



• Some apps may not work depending on the area or service provider.

Chrome

Sign in to Chrome and import opened tabs, bookmarks and address bar data from a computer to your device.

Docs

Create documents or edit documents created online or from another device. Share and edit documents together with others.

Drive

Upload, save, open, share and organise files from your device. Files accessible from apps can be accessed from anywhere, including online and offline environments.

Gmail

Register your Google email account to your device to check or send email.

Google

Use search function provided by Google to search web sites and files stored on your device by entering keywords or via voice.

Hangouts

Exchange messages. Make a video call with an individual or a group.

Maps

Find your location or the location of a place on the map. View geographical information.

Photos

View or share photos or albums saved on your device.

Play Movies & TV

Use your Google account to rent or purchase movies. Purchase content and play it anywhere.

Play Music

Purchase music files from **Play Store**. Play music files saved on your device.

Sheets

Create spreadsheets or edit spreadsheets created online or from another device. Share and edit spreadsheets together with others.

Slides

Create presentation material or edit presentation material created online or from another device. Share and edit presentation material together with others.

Voice Search

Search information on Google by saying a keyword, instead of typing a keyword.

YouTube

Search and play videos. Upload videos on YouTube to share them with people around the world.



04

Phone Settings

Settings

You can customise the device settings in accordance with your preferences.

Tap  > **Settings**.



- Tap  and enter a keyword in the search box to access a setting item.
- Tap  to change the view mode. This user guide assumes that you are using the **Tab view**.

Networks

Wi-Fi

You can connect to nearby devices over a Wi-Fi network.

Connecting to a Wi-Fi network

- 1 On the settings screen, tap **Networks** > **Wi-Fi**.
- 2 Drag  to activate it.
 - Available Wi-Fi networks appear automatically.
- 3 Select a network.
 - You may need to enter the network's Wi-Fi password.
 - The device skips this process for previously accessed Wi-Fi networks. If you do not want to automatically connect to a certain Wi-Fi network, tap and hold the network and then tap **Forget network**.

Wi-Fi network settings


On the settings screen, tap **Networks > Wi-Fi**.

- **Switch to mobile data:** If the mobile data connection function is activated but the device cannot connect to the Internet via Wi-Fi connection, the device automatically connects to the Internet via the mobile data connection.
-  : Customise Wi-Fi network settings.

Wi-Fi Direct

You can connect your device to other devices that support Wi-Fi Direct to share data directly with them. You do not need an access point. You can connect with more than two devices by using Wi-Fi Direct.

- 1 On the settings screen, tap **Networks > Wi-Fi >  > Advanced Wi-Fi > Wi-Fi Direct**.
 - Nearby devices that support Wi-Fi Direct automatically appear.
- 2 Select a device.
 - Connection occurs when the device accepts the connection request.

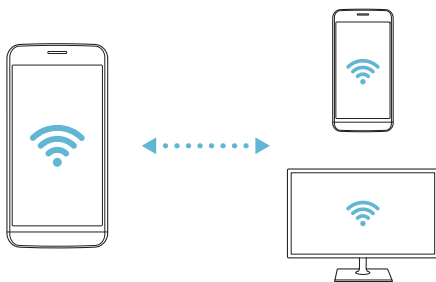

- The battery may drain faster when using Wi-Fi Direct.

Bluetooth

You can connect your device to nearby devices that support Bluetooth to exchange data with them. Connect your device to a Bluetooth headset and a keyboard. This makes it easier to control the device.

Pairing with another device

- 1 On the settings screen, tap **Networks > Bluetooth**.
- 2 Drag  to activate it.
 - Available devices appear automatically.
 - To refresh the device list, tap **SEARCH**.



• Only devices with the searching option enabled are displayed on the list.

- 3 Select a device from the list.
- 4 Follow the on-screen instructions to perform authentication.



• This step is skipped for previously accessed devices.

Sending data via Bluetooth

- 1 Select a file.
 - You can send multimedia files or contacts.
- 2 Tap  **Bluetooth**.
- 3 Select a target device for the file.
 - The file is sent as soon as the target device accepts it.



• File sharing processes may differ, depending on the file.

Mobile data

You can turn on or off mobile data. You can also manage mobile data usage.

Turning on mobile data

- 1 On the settings screen, tap **Networks > Mobile data**.
- 2 Drag  to activate it.

Customising mobile data settings

- 1 On the settings screen, tap **Networks > Mobile data**.
- 2 Customise the following settings:
 - **Mobile data:** Set to use data connections on mobile networks.
 - **Limit mobile data usage:** Set a limit for mobile data usage to block mobile data if the limit is reached.
 -  : Customise mobile data settings.

Call

You can customise call settings, such as voice call and international call options.

- 1 On the settings screen, tap **Networks > Call**.
- 2 Customise the settings.




- Some features may not be supported depending on the area or service provider.

NFC

You can use the device as a transportation card or credit card. You can also share data with other device.

- 1 On the setting screen, tap **Networks > Share & connect > NFC**.
- 2 Drag ☐ to activate it.
 - Touch your device with other device that supports NFC to allow sharing data.
 - NFC antenna may be located differently depending on the device type.

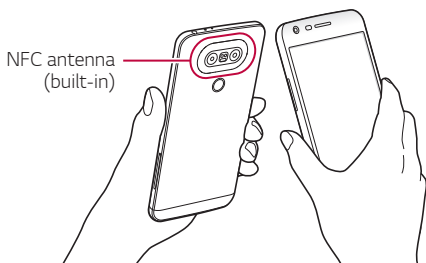

Android Beam

You can share files by touching the back of the device to other device. You can also share files including musics, videos or contacts and open a web page or launch an app from the other device.

- 1 On the settings screen, tap **Networks > Share & connect > Android Beam**.
- 2 Touch the back of the device with other device.



- NFC antenna may be located differently depending on the device type.

File sharing

You can send and receive files between your device and other LG devices or tablets.

- 1 On the settings screen, tap **Networks > Share & connect > File sharing**.
- 2 Customise the following settings:
 - **G5 SE**: Change the device name.
 - **Save to**: Set the destination folder to save files sent from other devices in.
 - **File sharing**: Permit receipt of files sent from other devices.
 - **SmartShare Beam**: Share files with other devices via SmartShare Beam.



• See *Sending or receiving files* for details.

Media server

You can share media content on your device with nearby devices that support DLNA.

- 1 On the settings screen, tap **Networks > Share & connect > Media server**.
- 2 Customise the following settings:
 - **Content sharing**: Share content on your device with nearby devices.
 - **G5 SE**: Set your device's name.
 - **Content to share**: Select the type of media content to share with other devices.
 - **Allowed devices**: View a list of devices permitted to access content on your device.
 - **Not-allowed devices**: View a list of devices not permitted to access content on your device.

Screen sharing

You can play the screen and sound of the device on a different device, such as a TV, that supports the Miracast function.

- 1 On the settings screen, tap **Networks > Share & connect > Screen sharing**.
- 2 Drag  to activate it.
- 3 Select a device from the list of nearby devices.
 - If the desired device does not appear, tap **SEARCH** to refresh the list.
 - After connecting to the device, the device displays the screen of your device.



- Screen sharing turns off automatically if there is no sharing-compatible device in the vicinity.

LG AirDrive

You can use your LG account to manage files saved on the device from a computer. You do not need a USB connection.

- 1 On the settings screen, tap **Networks > Share & connect > LG AirDrive**.
- 2 Use a single LG account to sign in to LG Bridge on the computer and **LG AirDrive** on the device.
 - LG Bridge software can be downloaded from www.lg-mobile.co.il.
- 3 Manage files on the device from the computer.

Printing

You can connect your device to a Bluetooth printer and print photos or documents saved on the device.

- 1 On the settings screen, tap **Networks > Share & connect > Printing**.



- If the desired printer is not in the list, install the printer driver from the app store.

- 2 Drag  to activate it.
- 3 Select a printer from the printer list screen.
 - To add a printer, tap  > **Add printer**.
 - To search for a printer name, tap  > **Search**.
 - Tap  > **Settings** from the printer list screen.
- 4 Select a file and tap  > **Print**.
 - The document prints.




- If you do not have a Google account, tap **ADD ACCOUNT** to create an account.

USB tethering

You can connect the device to another device via USB and share mobile data.

- 1 Connect your device and other devices via USB cable.
- 2 On the settings screen, tap **Networks > Tethering > USB tethering** and then drag ☐ to activate it.

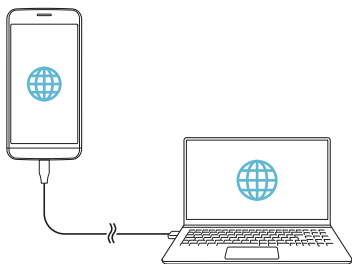


- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- When connecting to a computer, download the USB driver from www.lg-mobile.co.il and install it on the computer.
- You cannot send or receive files between your device and a computer while USB tethering is turned on. Turn off USB tethering to send or receive files.
- Operating systems that support tethering are Window XP or higher, or Linux.

Wi-Fi hotspot

You can set the device as a wireless router so that other devices can connect to the internet by using your device's mobile data.

- 1 On the settings screen, tap **Networks > Tethering > Wi-Fi hotspot** and then drag ☐ to activate it.
- 2 Tap **Set up Wi-Fi hotspot**, and enter the Wi-Fi ID (SSID) and password.
- 3 Turn on Wi-Fi on the other device, and select the name of the device network on the Wi-Fi list.
- 4 Enter the network password.

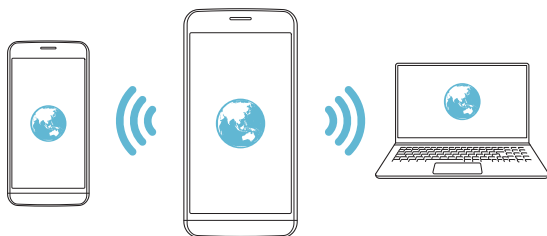


- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- More information is available at this web site:
<http://www.android.com/tether#wifi>

Bluetooth tethering

A Bluetooth-connected device can connect to the internet by using your device's mobile data.

- 1 On the settings screen, tap **Networks > Tethering > Bluetooth tethering** and then drag ☐ to activate it.
- 2 Turn on Bluetooth on both devices, and pair them.

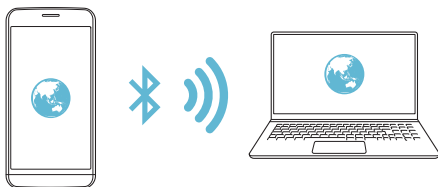

- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- More information is available at this web site:
http://www.android.com/tether#Bluetooth_tethering

Help

You can view help on using tethering and hotspots.

On the settings screen, tap **Networks > Tethering > Help**.

Airplane mode

You can turn off the call and mobile data functions. When this mode is on, functions that do not involve data, such as games and music playback, remain available.

- 1 On the settings screen, tap **Networks > More > Airplane mode**.
- 2 Tap **TURN ON** in the confirmation screen.

Mobile networks

You can customise mobile data settings.

- 1 On the settings screen, tap **Networks > More > Mobile networks**.
- 2 Customise the following settings:
 - **Mobile data**: Turn mobile data on or off.
 - **Data roaming**: Browse the web, use emails, multimedia messages and other data services overseas.
 - **Network mode**: Select a network type.
 - **Access point names**: View or change the access point for using mobile data services. To change the access point, select a choice from the access point list.
 - **Network operators**: Search for network operators and connect automatically to a network.

VPN

You can connect to a safe virtual network, such as an intranet. You can also manage connected virtual private networks.

Adding VPN

- 1 On the settings screen, tap **Networks > More > VPN**.



- Be cautious that if the screen lock is unlocked, all VPN information saved on the device are erased.

- 2 Tap **Add VPN network**.



- This feature is available only when the screen lock is activated. If the screen lock is deactivated, a notification screen appears. Tap **SETTINGS** from the notification screen to activate the screen lock. See *Configuring screen lock settings* for details.

- 3 Enter VPN details and tap **SAVE**.

Configuring VPN settings

- 1 Tap a VPN from the **VPNS** list.
- 2 Enter the VPN user account details and tap **CONNECT**.
 - To save the account details, select the **Save account information** checkbox.

Sound & notification

You can customise sound, vibrate and notification settings.

On the settings screen, tap **Sound & notification** and customise the following settings:

- **Sound profile:** Change the sound mode to sound, silent, or vibrate only.
- **Volume:** Adjust the sound volume for various items.
- **Ringtone:** Select a ringtone for incoming calls. Add or delete ringtones.
- **Ringtone ID:** Create a ringtone for an incoming call from a particular contact. See *Ringtone ID* for details.
- **Vibration strength:** Adjust the vibration intensity.
- **Sound with vibration:** Set the device to vibrate and play a ringtone simultaneously.
- **Vibration type:** You can select a vibration type or make your own vibration pattern.
- **Do not disturb:** Set the time, range and app type to receive notification messages. Receive notification messages only on particular days of the week. See *Do not disturb* for details.
- **Lock screen:** Display or hide a notification message on the lock screen. You can also hide private information.
- **Apps:** Select the apps that can show their notification messages on the screen, and set the priorities of those apps in regard to notification messages.

- **Notification LED:** Indicate device status via LED.
- **More > Notification sound:** Select a notification ringtone. Set music saved on the device as a notification ringtone.
- **More > Vibrate on tap:** Set the device to vibrate when you tap certain items on screen.
- **More > Sound effects:** Select a sound effect to play when you tap the dial pad, select an option, or lock or unlock the screen.
- **More > Message/call voice notifications:** Set the device to read the caller information or message content via voice.

Display

You can customise detailed settings for each screen type.

On the settings screen, tap **Display** and customise the following settings:

- **Home screen:** Customise settings for the Home screen. See *Home screen settings* for details.
- **Lock screen:** Customise lock screen settings. See *Lock screen settings* for details.
- **Home touch buttons:** Rearrange Home touch buttons or change their background colours. Hide Home touch buttons on the screen.
- **Font type:** Change the font face.
- **Font size:** Change the font size.
- **Bold text:** Bold the text on the screen.
- **Brightness:** Use the slide bar to change the device's screen brightness.
- **Auto:** Set the device so that the screen brightness is automatically adjusted in accordance with the surrounding light intensity.
- **Always-on display:** Always display information, such as the date, time and notifications, even when the screen is turned off. For details, see *Always On Display*.
- **Auto-rotate screen:** Automatically rotate the screen according to the device's orientation.

- **Screen timeout:** Automatically turn off the screen when the device is left idle for a specified period of time.
- **More > Daydream:** Display a screen saver when the device is connected to the holder or charging. Select a screen saver type to display.
- **More > Motion sensor calibration:** Correct the angle and speed of the motion sensor to improve the tilt accuracy and speed of the sensor.



- When correcting the motion sensor, make sure to place the device on a flat surface. Failure to do so may cause errors with the motion sensor functions, such as automatic screen rotation.

General

Language & keyboard

You can customise language and keyboard settings for your device.

- 1 On the settings screen, tap **General > Language & keyboard**.
- 2 Customise the following settings:
 - **Language:** Select a language to apply for the device.
 - **Current keyboard:** View the keyboard type currently in use. Select a keyboard to use when entering text.
 - **LG Keyboard:** Customise LG keyboard settings.
 - **Google voice typing:** Configure the options for text dictation by Google.
 - **Text-to-speech output:** Configure the settings for text-to-speech output.
 - **Pointer speed:** Adjust the pointer speed of a mouse or trackpad.
 - **Reverse buttons:** Reverse the right mouse button to perform primary direct-manipulation actions.

Location

You can customise how your location information is used by particular apps.

- 1 On the settings screen, tap **General > Location**.
- 2 Customise the following settings:
 - **Mode:** Select a method to provide your location information.
 - **My place:** Set the device to analyse frequently visited places so that it can automatically recognise a residential address.
 - **RECENT LOCATION REQUEST:** View apps that recently requested location information.
 - **Low power location estimation:** Estimate the device location by using low power consumption.
 - **Camera:** Save location information when taking photos or recording videos.
 - **Google Location History:** Configure the Google location history settings.

Accounts & sync

You can add or manage accounts, including a Google account. You can also sync particular apps or user information automatically.

- 1 On the settings screen, tap **General > Accounts & sync**.
- 2 Customise the following settings:
 - **Auto-sync data:** Sync all the registered accounts automatically.
 - **ACCOUNTS:** View a list of registered accounts. To view or change details of an account, tap the account.
 - **ADD ACCOUNT:** Add accounts.

Cloud

You can register a cloud account and view content saved on your computer or cloud from the device.

- 1 On the settings screen, tap **General > Cloud**.
- 2 Customise the settings.

Users

You can add users to share your device with them.

- 1 On the settings screen, tap **General > Users**.
- 2 Customise the settings.

Accessibility

You can manage accessibility plug-ins installed on your device.

- 1 On the settings screen, tap **General > Accessibility**.
- 2 Customise the following settings:
 - **Vision > TalkBack**: Set the device to notify screen status or actions via voice.
 - **Vision > Message/call voice notifications**: Set the device to read the caller information or message content via voice.
 - **Vision > Font size**: Change the font size.
 - **Vision > Bold text**: Bold the text on the screen.
 - **Vision > Touch zoom**: Zoom in or out by tapping the screen three times.
 - **Vision > Screen colour inversion**: Increase the display colour contrast for people with low vision.
 - **Vision > Screen colour adjustment**: Adjust the display colour.
 - **Vision > Grayscale**: Switch the screen to grayscale mode.
 - **Vision > End calls with the Power key**: End a call by pressing the Power/Lock key.

- **Hearing > Captions:** Turn on the subtitle service when playing videos for the hearing impaired.
- **Hearing > Notification LED:** Indicate device status via LED.
- **Hearing > Flash alerts:** Set the device to notify you with a blinking light for incoming calls and notifications.
- **Hearing > Turn off all sounds:** Mute all sounds and lower volume on receiver.
- **Hearing > Audio type:** Select the audio type.
- **Hearing > Sound balance:** Adjust the audio output balance. Use the slide bar to change the balance.
- **Motor & cognition > Touch assistant:** Turn on the touch board to make buttons and gestures easier to use.
- **Motor & cognition > Touch and hold delay:** Adjust the touch input time.
- **Motor & cognition > Touch and hold for calls:** Answer or decline calls by tapping and holding the call button instead of dragging it.
- **Motor & cognition > Screen timeout:** Turn off the screen automatically when the device is left idle for a specified period of time.
- **Motor & cognition > Touch control areas:** Limit the touch area so that only a particular portion of the screen can be controlled by touch input.
- **Accessibility features shortcut:** Quickly access a frequently used function by tapping  three times.
- **Auto-rotate screen:** Automatically change the screen orientation according to the physical position of the device.
- **Switch Access:** Create key combinations to control your device.

Shortcut key

You can use the volume keys to directly launch apps when the screen is turned off or locked.

- 1 On the settings screen, tap **General > Shortcut key**.
- 2 Drag  to activate it.
 - Press the Volume Down (-) key twice to launch the **Camera** app when the screen is locked or turned off. Press the Volume Up (+) key twice to launch **Capture+**.
 - Turn on **Quick shot** if you want to take photos immediately after pressing the Volume Down (-) key to start the camera.

Google services

You can use Google settings to manage your Google apps and account settings.

On the settings screen, tap **General > Google services**.

Fingerprints & security

- 1 On the settings screen, tap **General > Fingerprints & security**.
- 2 Customise the following settings:
 - **Fingerprints:** Use your fingerprint to unlock the screen or content. See *Fingerprint recognition overview* for details.
 - **Content lock:** Set the method to lock files in **Gallery** or **QuickMemo+**.
 - **Encrypt phone:** Set the device password for privacy. Create a PIN or password to enter each time the device is turned on.
 - **Encrypt SD card storage:** Encrypt the memory card to prevent use on another device. See *Memory card encryption* for details.
 - **Secure start-up:** Protect your device with a lock when it powers on. You need to unlock the device by using PIN to receive calls, messages, alarms and notifications. See *Secure start-up overview* for details.

- **Set up SIM card lock:** Lock or unlock the USIM card, or change the password (PIN).
- **Password typing visible:** Display a password as you enter it.
- **Phone administrators:** Allow privileges to restrict the control or use of the device to particular apps.
- **Unknown sources:** Allow the installation of apps from non-Play Store apps.
- **Verify apps:** Block the installation of harmful apps. Display a warning message when a harmful app is installed.
- **Storage type:** View the storage type where the security certificate will be saved.
- **Certificate management:** Manage the security certificate saved on the device.
- **Trust agents:** View and use trust agents installed on the device.
- **Screen pin:** Fix the app screen so that only the currently active app can be used.
- **Usage access for apps:** View details on usage of apps on the device.

Smart settings

You can automatically change your device settings according to the usage pattern and location.



- To use Smart settings, make sure to set the residential address. See [Location](#) for details.

- 1 On the settings screen, tap **General > Smart settings**.
- 2 Activate items you want to automatically change settings for.

Date & time

You can customise date and time settings for your device.

- 1 On the settings screen, tap **General > Date & time**.
- 2 Customise the settings.

Storage & USB

You can view and manage internal storage on the device or storage space of the memory card.

- 1 On the settings screen, tap **General > Storage & USB**.
- 2 Customise the following settings:
 - **Internal storage:** View the total storage space and free space in the device's internal storage. View a list of apps in use and the storage capacity for each app.
 - **PORTABLE STORAGE:** View the total storage space and free space in the memory card. This option appears only when a memory card is inserted. To unmount the memory card, tap .

Battery & power saving

You can view the current battery information or turn on power-saving mode.

- 1 On the settings screen, tap **General > Battery & power saving**.
- 2 Customise the following settings:
 - **Battery usage:** View the battery usage details. To view more details, select a specific item.
 - **Battery percentage on status bar:** Display the remaining battery level as a percentage on the status bar.

- **Battery saver:** Reduce battery consumption by cutting down some device settings, such as the display brightness, speed and vibration intensity. The status bar displays  when power-saving mode is on.
- **Game optimizer:** Adjust the video quality to reduce battery consumption when playing games.

Memory

You can view the average amount of memory usage over a certain period of time and the memory occupied by an app.

- 1 On the settings screen, tap **General > Memory**.
- 2 Tap ▼ to set a time slot to retrieve data.

Smart cleaning

You can clean up temporary files or apps that are no longer used to free up storage space.

On the settings screen, tap **General > Smart cleaning**.



• See *Smart cleaning* for details.

Apps

You can view a list of installed apps. Shut down or delete apps, if necessary.

- 1 On the settings screen, tap **General > Apps**.
- 2 Select an app and perform actions.

Tap & pay

You can make payments with your device instead of a credit card.

On the settings screen, tap **General > Tap & pay**.

Backup & reset

You can back up data saved on your device to another device or account. Reset the device, if necessary.

- 1 On the settings screen, tap **General > Backup & reset**.
- 2 Customise the following settings:
 - **LG Backup:** Back up and restore all data saved on the device. See *LG Backup* for details.
 - **Back up my data:** Back up your app data, Wi-Fi password and other settings to the Google server.
 - **Backup account:** View the current backup account in use.
 - **Automatic restore:** Automatically restore backup settings and data when reinstalling an app.
 - **Network settings reset:** Reset Wi-Fi, Bluetooth and other network settings.
 - **Factory data reset:** Reset all settings for the device and delete data.



- Resetting your device deletes all data on it. Enter your device name, Google account and other initial information again.

About phone

You can view information about your device, such as the name, status, software details and legal information.

On the settings screen, tap **General > About phone** and view information.

Regulatory & Safety

You can view regulatory marks and related information on your device.

On the settings screen, tap **General > Regulatory & Safety**.



05

Appendix

LG Language Settings

Select a language to use on your device.

- Tap  > **Settings** > **General** > **Language & keyboard** > **Language**, and select a language.

LG Bridge

LG Bridge overview

LG Bridge is an app that helps you manage the photos, songs, videos and documents saved on your LG smartphone from your computer conveniently. You can back up contacts, photos and more to the computer or update the device software.



- See LG Bridge help for details.
- The supported features may vary depending on the device.
- LG USB driver is a necessary program to connect your LG smartphone with the computer and is installed when you install LG Bridge.

LG Bridge functions

- Manage the files on the device from a computer via Wi-Fi connection or mobile data connection.
- Back up data from the device to a computer or restore data from a computer to the device via USB cable connection.
- Update the device software from a computer via USB cable connection.

Installing LG Bridge on a computer

- 1 Go to www.lg-mobile.co.il from your computer.
- 2 In the search bar, enter the name of your device.
- 3 Click **Download Centre** > **LG Bridge**, and download the setup file.
 - Click **Details** to view the minimum requirements for installing LG Bridge.

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp>, select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable during the upgrade may seriously damage your mobile phone.



- LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

First check the software version on your mobile phone:

Settings > General > About phone > Update Center > Software Update > Check now for update.



- Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.
- This feature depends on the area or service provider.

FAQ

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM card error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6~12 months old. If so, change your SIM or USIM card at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you entered do not match	
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Downloaded application causes a lot of errors.	Remove the application.	1. Tap  > Settings. 2. Tap General > Apps. 3. Tap the app > Uninstall.

Message	Possible causes	Possible corrective measures
Calls not available	Dialling error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be turned on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different outlet.
	Charger defective	Replace the charger
	Wrong charger	Use only original LG accessories.
Number not allowed.	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive/ send SMS & photos	Memory full	Delete some data, such as applications or messages from your phone to make more memory available.

Message	Possible causes	Possible corrective measures
Files do not open	Unsupported file format	Check the supported file formats.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or no interruptions mode.
Hangs up or freezes	Intermittent software problem	If the screen freezes or the phone does not respond when you try to operate it, remove the battery and reinsert it. Then power the phone back on. Alternatively, try to perform a software update through the website.
Check the battery module	Insert wrong battery module. Insert damaged module or insert the module not properly.	See Installing the battery for details. Device specifications may vary depending on the area or service provider. To purchase additional battery modules or compatible optional items, contact an LG Electronics Service Centre for support.

Anti-Theft Guide

Set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google account or screen lock information can use the device.

All you need to make sure your device is protected is:

- Set a screen lock: If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- Add your Google account on your device: If your device is wiped but you have your Google account on it, the device can't finish the setup process until your Google account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google account password if you need to do a factory reset. This ensures that you or someone you trust is doing the reset.



- Do not forget your Google account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.

More information

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licences, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred licence terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Regulatory & Safety

For regulatory details, go to **Settings > General > Regulatory & Safety** on your phone.

Trademarks

- Copyright ©2016 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.


Laser safety statement

Caution!

This product employs a Laser system. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorised service centre.

Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure or to make the direct contact with the laser.

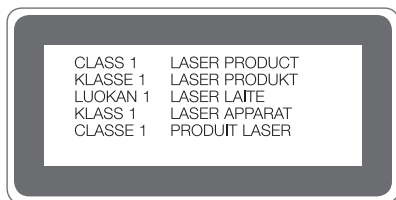

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-H840** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**.

A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>



CE0168ⓘ