

عربي

ENGLISH



**LG**

Life's Good

USER GUIDE  
**LG-K500dsZ**

## حول دليل المستخدم هذا

- شكرًا لاختيارك هذا المنتج من LG. ونرجو منك قراءة دليل المستخدم هذا بعناية قبل استخدام الجهاز للمرة الأولى لضمان استخدامه بطريقة مناسبة وأمنة.
- استخدم دائمًا ملحقات LG الأصلية. ولقد صُممت العناصر المرفقة لهذا الجهاز فقط وقد لا تكون متوافقة مع الأجهزة الأخرى.
- هذا الجهاز غير مناسب لمن يعاني من إعاقة بصرية حيث إن لوحة مفاتيحه ذات شاشة تعمل باللمس.
- تعتمد الأوصاف على الإعدادات الافتراضية للجهاز.
- تخضع التطبيقات الافتراضية المتوفرة بهذا الجهاز للتحديث وقد يتم إلغاء دعمها دون إشعار سابق. وإذا كانت لديك أية استفسارات بشأن أي تطبيق متوفر بالجهاز، فيرجى الاتصال بمركز خدمة LG. أما فيما يتعلق بالتطبيقات المثبتة بواسطة المستخدم، يرجى الاتصال بمزود الخدمة المعني.
- قد يؤدي تعديل نظام تشغيل الجهاز أو تثبيت برامج من مصادر غير رسمية إلى إلحاق ضرر بالجهاز وتلف البيانات أو فقدانها. ومثل هذه الإجراءات قد يترتب عليها انتهاك اتفاقية ترخيص LG وإلغاء الضمان.
- قد تختلف بعض المحتويات والرسومات التوضيحية من جهاز لآخر تبعًا للمنطقة أو مزود الخدمة أو إصدار البرامج أو إصدار نظام التشغيل، كما أنها تكون عرضة للتغيير دون إشعار سابق.
- البرامج والمقاطع الصوتية والخلفيات والصور وأية وسائط أخرى مرفقة بجهازك مرخصة للاستخدام المحدود؛ فإذا استخرجتها واستخدمتها لأغراض تجارية أو غيرها، فإنك بذلك تنتهك قوانين حقوق النشر. وبصفتك مستخدمًا، فإنك تتحمل المسؤولية الكاملة عن الاستخدام غير القانوني للوسائط.
- يجوز فرض رسوم إضافية على خدمات البيانات، كالرسائل والتحميل والتنزيل والمزامنة التلقائية وخدمات تعيين المواقع. ولتجنب مثل هذه الرسوم، اختر خطة بيانات مناسبة لاحتياجاتك. واتصل بمزود الخدمة للاطلاع على مزيد من التفاصيل.

## ملاحظات إرشادية

تحذير: الحالات التي قد تسبب إصابة للمستخدم أو أطراف أخرى.



تنبيه: الحالات التي قد تسبب إصابة طفيفة أو تلفاً للجهاز.



ملاحظة: ملاحظات أو معلومات إضافية.



## 02

### الوظائف الأساسية

مكونات المنتج وملحقاته	20
نظرة عامة على الأجزاء	21
التشغيل أو إيقاف التشغيل	23
تركيب بطاقة SIM	24
إدخال بطاقة الذاكرة	25
شحن البطارية	27
استخدام البطارية بشكل فعال	28
شاشة اللمس	29
الشاشة الرئيسية	32
قفل الشاشة	38
تشغيل الجهاز	41
تشغيل بطاقة الذاكرة	41
أخذ لقطات شاشة	42
إدخال نص	43

## 01

### الميزات المصممة لغرض خاص

الشاشة الثانوية	12
المشاركة السريعة	13
QuickMemo+	14
QSlide	16
مشاركة المحتوى	17
عدم الإزعاج	18
معرف الرنين	18

## إعدادات الهاتف

الإعدادات	79
الشبكات	79
الصوت و الإشعار	89
إعدادات الشاشة	90
عامة	91

## الملحق

إعدادات لغة LG	99
LG Bridge	99
تحديث برامج الهاتف	100
الأسئلة المتداولة	102
دليل مكافحة السرقة	104
المزيد من المعلومات	104

## التطبيقات المفيدة

تنصيب التطبيقات وإزالة تثبيتها	50
التطبيقات التي تم إلغاء تثبيتها مؤخراً	51
الهاتف	51
الرسائل	55
الكاميرا	56
المعرض	62
الحاسبة	64
الطقس	64
تنزيلات	64
الساعة	65
مسجل الصوت	66
موسيقى	67
البريد الإلكتروني	68
الاسماء	69
التقويم	71
إدارة الملفات	72
مهام	72
Evernote	73
بث الشبكة	73
راديو FM	73
LG Backup	73
RemoteCall Service	74
SmartWorld	75
تطبيقات Google	75

# إرشادات لاستخدام آمن وفعال

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني. في حال حدوث خطأ، تم تضمين أداة برنامج في الجهاز من شأنها تجميع سجل الخطأ. تجمع هذه الأداة البيانات الخاصة بالخطأ فقط، مثل قوة الإشارة وموضع معرف الخلية لدى انقطاع المكالمات المفاجئ والتطبيقات التي تم تحميلها. يستخدم السجل فقط للمساعدة في تحديد سبب الخطأ. تجدر الإشارة إلى أن هذه السجلات مشفرة ويمكن الوصول إليها من قبل مركز تصليح معتمد من LG فقط في حال احتجت إلى إعادة جهازك لتصليحه.

## معلومات هامة حول الجهاز

- إن تطبيقات الجهاز وخدماته عرضة للتغيير أو الإلغاء بدون إشعار، وذلك بحسب حالة موفر الخدمة وإصدار البرنامج.
- عند تشغيل الجهاز للمرة الأولى، يتم إجراء عملية التكوين الأولى. قد تستغرق عملية التمهيد وقتاً أطول من العادة.

## اقرأ قبل الاستخدام

- لشراء عناصر اختيارية، اتصل بمركز الاستعلامات من LG لمعرفة البائعين المتوفرين.
- إن شكل الجهاز ومواصفاته عرضة للتغيير بدون إشعار.
- لا تستخدم منتجات LG لأغراض أخرى غير تلك المحددة في الأصل. قد يلحق استخدام تطبيقات أو برامج غير معتمدة ضرراً بالجهاز وذلك غير مشمول بالضمان.

## التعرض لطاقة التردد اللاسلكي

- معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR).
- لقد تم تصميم طراز الهاتف المحمول LG-K500dsZ هذا بحيث يفي بمتطلبات السلامة المتبعة المتعلقة بالتعرض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص، دون أخذ العمر والصحة بعين الاعتبار.
- تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد (SAR). وتجرى اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.
  - وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تقي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.
  - حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين International Commission on Non-Ionizing Radiation Protection (ICNIRP) هو 2 واط/كجم وهو حد مقسم على نحو متناسب إلى 10 جرامات من النسيج العضوي.
  - أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختباره للاستخدام على الأذن تعادل 0.493 واط/كيلوجرام (10 جرام) وعند الحمل على الجسد تكون 1.430 واط/كيلوجرام (10 جرام).

- يفى هذا الجهاز بإرشادات التعرض للتردد اللاسلكي (RF) عند استخدامه في موضع الاستخدام العادي على الأذن أو عند وضعه على بعد 5 مم على الأقل من الجسم. عند استخدام علبة حمل أو مشبك للحزام أو حامل لتشغيل الجهاز أثناء حمله على الجسم، يجب ألا تحتوي على أي معدن ويجب وضع المنتج على بعد 5 مم على الأقل من الجسم. ومن أجل إرسال ملفات البيانات أو الرسائل، يتطلب هذا الجهاز اتصالاً نوعياً عالي الجودة بالشبكة. في بعض الحالات، يجوز أن يتم تأخير إرسال ملفات البيانات أو الرسائل إلى أن يصبح هذا الاتصال متاحاً. احرص على اتباع التعليمات المتعلقة بالمسافات الفاصلة المشار إليها أعلاه إلى أن يتم اكتمال الإرسال.

## العناية بالمنتج وصيانتة

- استخدم دائماً بطاريات وشواحن وملحقات من LG معتمدة لاستخدامها مع طراز الهاتف هذا فقط. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي كفالة أو موافقة تنطبق على الهاتف المحمول، وقد يكون خطيراً.
- قد تختلف بعض المحتويات والصور عن جهازك من دون إشعار مسبق.
- لا تَم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى إصلاحها.
- قد تتضمن الإصلاحات المشمولة بالكفالة، وفقاً لـ LG، لوحات أو قطع الغيار سواء كانت جديدةً أو مجددةً، على أن تتمتع بوظائف موازية لوظائف الأجزاء التي تم استبدالها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل أجهزة التدفئة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيثما تطالب القوانين الخاصة بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين أثناء شحنه. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات مثل سماعات الأذن بحذر. لا تلمس الهوائي من دون وجود سبب يدعوك إلى ذلك.
- لا تستخدم الزجاج المكسور أو تلمسه أو تحاول إزالته أو إصلاحه إذا كان مكسوراً أو متحولاً إلى شظايا أو متحطماً. لا تشمل الكفالة تلف الشاشة الزجاجية نتيجة سوء الاستخدام.
- هذا الهاتف عبارة عن جهاز إلكتروني يولد الحرارة أثناء الاستخدام العادي. قد يؤدي احتكاك المنتج بالبشرة مباشرة ولفترة طويلة في غياب التهوية المناسبة إلى عدم الشعور بالراحة أو التسبب بحروق طفيفة. لذا، استخدم الهاتف بعناية أثناء التشغيل أو بعده مباشرة.
- في حال تعرض الهاتف للبلل، افصله على الفور ليجف بالكامل. لا تحاول تسريع عملية التجفيف باستخدام مصدر تجفيف خارجي مثل الفرن أو المايكروويف أو مجفف الشعر.
- يتسبب السائل الموجود في الهاتف المبلل بتغيير لون تسمية المنتج داخل الهاتف. لا تشمل الكفالة الضرر الناتج عن تعرض الجهاز للسوائل.

## تشغيل فعّال للهاتف

### الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش، مما قد يؤثر على أداؤها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية من دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة ضبط النبض، مثلاً، في الجيب على مستوى الصدر.
  - قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
  - قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.
  - استخدم الهاتف في مكان تتراوح فيه درجة الحرارة بين 0 و 40 درجة مئوية، إذا أمكن. قد يؤدي تعريض الهاتف إلى درجات حرارة مرتفعة أو منخفضة جداً إلى إلحاق ضرر بالمنتج أو تعطله أو حتى إلى حدوث انفجار.

### السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
  - عليك دوماً تركيز كامل الانتباه على القيادة.
  - توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
  - قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل أجهزة الستيريو ومعدات السلامة في السيارة.
  - عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.

- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملحاً خصوصاً بالقرب من الطرقات.

## تجنب إلحاق الضرر بسمعك



لتفادي إلحاق الضرر بالسمع، لا تستمع إلى مستويات صوت عالية لفترات طويلة.

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بالألا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط صوت الموسيقى والمكالمات على مستوى معقول.

- عند استخدام سماعات الرأس، اخفض مستوى الصوت إذا كنت لا تسمع الأشخاص الذين يتحدثون بالقرب منك أو في حالة تمكن الشخص الجالس بجوارك من سماع ما تنصت إليه.

- قد يؤدي ضغط الصوت المرتفع من سماعات الأذن وسماعات الرأس إلى فقدان السمع.

## القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقف عن استخدام الجهاز المحمول إلى أن يتم استبدال الزجاج من قِبل موفر خدمة معتمد.

## مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود، واتبع الأنظمة أو القوانين.

## مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في محطة لإعادة التزود بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول أو ملحقاته.

## في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قِبل طاقم الطائرة.

## الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

## مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرةً على جميع شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد على هاتفك المحمول فقط لإجراء مكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

## معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى، ليس هناك من تأثير للذاكرة من شأنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. فمن الممكن إعادة شحن حزمة البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية في حال عدم استخدامها لفترة طويلة وذلك لزيادة فترة صلاحية استخدامها.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك الجهاز في أماكن ذات درجات حرارة مرتفعة أو منخفضة، فقد يؤدي ذلك إلى تراجع أداء البطارية.
- هناك خطر الانفجار إذا ما تمّ استبدال البطارية بنوع خاطئ. يجب التخلص من البطاريات المستخدمة وفقاً للإرشادات.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتقادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة و إعدادات المنتج وأنماط الاستخدام والبطارية والأوضاع البيئية.
- احرص على عدم احتكاك البطارية بأغراض حادة الأطراف كأنياب الحيوانات أو الأظافر. فقد يسبب هذا الأمر حرقاً.

## احتياطات أثناء استخدام بطاقات SIM

- لا تدخل بطاقة SIM في الجهاز عندما يكون المصق أو الغلاف مرفقًا. قد يلحق هذا الأمر ضررًا بالجهاز.
- لا تزل بطاقة SIM أثناء استخدام الجهاز. قد يلحق هذا الأمر ضررًا ببطاقة SIM أو النظام.
- توخّ الحذر الشديد للتأكد من أن بطاقة SIM غير مخدوشة أو مثنية أو متضررة بفضل المغناطيس. قد يؤدي ذلك إلى حذف الملفات المحفوظة أو التسبب بعطل في الجهاز.

## احتياطات أثناء استخدام بطاقات الذاكرة

- تأكد من أن التوجيه صحيح أثناء إدخال بطاقة الذاكرة. فقد يلحق إدخال البطاقة بالتوجيه غير الصحيح ضررًا بالبطاقة.

### إشعار لاستبدال البطارية



- لسلامتك، لا تزل البطارية المثبتة في المنتج. إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- بطارية Li-Ion هي مكون خطر يمكن أن يتسبب في الإصابة.
- استبدال البطارية من قبل شخص غير مؤهل يمكن أن يُسبب ضررًا على الجهاز الخاص بك.

01


الميزات المصممة  
لغرض خاص

## الشاشة الثانوية

يمكنك الاطلاع على المعلومات المفيدة مثل التاريخ والوقت وحالة البطارية والإشعارات عندما تكون الشاشة الرئيسية متوقفة عن التشغيل.

### ميزة الشاشة الثانوية

- يمكنك تعيين الوظيفة على ميزة الشاشة الثانوية عندما تكون الشاشة الرئيسية قيد التشغيل. (التطبيقات الحديثة والأدوات السريعة واختصارات التطبيقات ومشغل الموسيقى والأسماء السريعة والخطط القادمة والتوقيع)
- يمكنك مشاهدة الإشعارات واستخدام الوظيفة عبر الشاشة الثانوية أثناء استخدام تطبيقات ملء الشاشة.
- يمكنك استخدام لوحة التحكم أثناء التقاط صورة أو التسجيل.
- لتشغيل/إيقاف تشغيل الشاشة الثانوية، اقلب الجهاز.

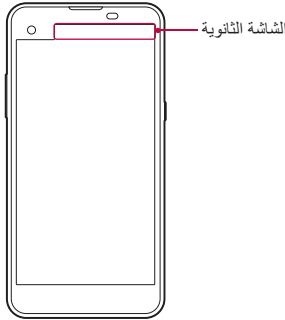

### تشغيل ميزة الشاشة الثانوية وإيقاف تشغيلها

يمكنك تشغيل ميزة الشاشة الثانوية وإيقاف تشغيلها وتحديد ما تريد عرضه.


اضغط على ○ < الإعدادات < إعدادات الشاشة < الشاشة الثانوية.

- إظهار عند تشغيل الشاشة الرئيسية توفير الوظيفة المفيدة لتعدد المهام.
- إظهار عند إيقاف تشغيل الشاشة الرئيسية عرض المعلومات المفيدة دائمًا وتوفير التشغيل السريع للوظائف التي يتم استخدامها بشكل متكرر.


- المزيد < عرض الوقت أثناء عرض المحتوى: عرض الوقت وحالة الهاتف أثناء عرض محتوى الوسائط كالصور ومقاطع الفيديو.

## المشاركة السريعة

يمكنك مشاركة صورة أو فيديو باستخدام التطبيق الذي تريده مباشرةً بعد التقاط الصورة أو تسجيل الفيديو.

- 1 المس <  لالتقاط صورة أو تسجيل فيديو.
- 2 اسحب رمز المشاركة السريعة الذي يظهر بعد التقاط صورة أو تسجيل فيديو، وحدد تطبيقًا للمشاركة عن طريقه.  
بدلاً من ذلك، المس مع الاستمرار رمز المعاينة الذي يظهر بعد التقاط صورة أو تسجيل فيديو، وقم بسحب الصورة أو الفيديو إلى رمز المشاركة السريعة.

- قد يختلف التطبيق الذي يعرضه رمز المشاركة السريعة تبعًا لنوع وتكرار الوصول إلى التطبيقات المثبتة على الجهاز.
- يمكنك استخدام هذه الميزة فقط عند التقاط صورة أو تسجيل فيديو في الوضع الأساسي انظر [الوضع الأساسي](#) لمزيد من التفاصيل.

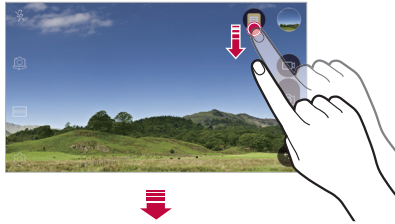

# QuickMemo+

## نظرة عامة على QuickMemo+

يمكنك تدوين ملاحظات مبتكرة باستخدام مجموعة متنوعة من الخيارات التي تخدم هذه الميزة المتقدمة بالمفكرة، كإدارة الصور ولقطات الشاشة، والتي لا تكون مدعومة بالمفكرة التقليدية.

### إنشاء ملاحظة


1 المس  < QuickMemo+.

2 المس  لتنشئ ملاحظة.

• : لحفظ ملاحظة.

• : للتراجع عن آخر إجراء.


• : للرجوع إلى آخر إجراء لم تقم به.

• : لإدخال ملاحظة باستخدام لوحة المفاتيح.

• : لكتابة الملاحظات يدويًا.

• : لمسح الملاحظات المكتوبة بخط اليد.




• : للتكبير أو التصغير، وتدوير أو محو أجزاء من الملاحظة المكتوبة بخط اليد.

• : للوصول إلى الخيارات الإضافية، متضمنًا ذلك مشاركة الملاحظات وقلعها،


وتغيير نمط المذكرة وإدراج محتوى.

3 المس  لحفظ الملاحظة.

## كتابة ملاحظات على الصور





- 1 المس  < QuickMemo+.
- 2 المس  لالتقاط صورة، ثم المس موافق.
  - يتم إرفاق الصورة تلقائيًا بالمفكرة.
- 3 اكتب ملاحظات على الصورة بحرية.
- 4 المس  لحفظ الملاحظة.

## كتابة ملاحظات على لقطة الشاشة

- 1 أثناء عرض الشاشة التي تريد التقاط صورة لها، اسحب شريط الحالة لأسفل ثم المس **Capture+**.
  - تظهر لقطة الشاشة كخلفية للمفكرة. تظهر أدوات الذاكرة أعلى الشاشة.
- 2 ضع الملاحظات على الصورة الملتقطة للشاشة.
  - لاقتصاص جزء من الشاشة وحفظه، اضغط على **> شريحة** وحدد جزءًا باستخدام أداة الاقتصاص.
  - لإرفاق لقطة شاشة بالمفكرة، اضغط على **> نص**.
- 3 المس  ثم احفظ الملاحظات في الموقع الذي تريده.
  - يمكنك عرض الملاحظات المحفوظة إما في **QuickMemo+** أو المعرض.
  - لحفظ الملاحظات بنفس المكان في كل مرة، حدد خانة الاختيار استخدم الافتراضي لهذا الإجراء. ثم اختر تطبيقًا.

## إدارة المجلدات

يمكنك عرض الملاحظات عن طريق تجميعها حسب نوع الملاحظات.

- 1 المس  < QuickMemo+.
- 2 في أعلى الشاشة، المس  ثم حدد عنصر قائمة:
  - **جميع المذكرات**: لعرض جميع الملاحظات المحفوظة في **QuickMemo+**.
  - **مذكراتي**: لعرض الملاحظات المنشأة بواسطة **QuickMemo+**.
  - **صورة مذكرة**: لعرض الملاحظات المنشأة بواسطة .
  - **Capture+**: لعرض الملاحظات المنشأة بواسطة **Capture+**.
  - **فئة جديدة**: لإضافة فئات.
  - : لإضافة فئات أو إعادة ترتيبها أو حذفها. ولتغيير اسم فئة، المس الفئة.

- قد لا تظهر بعض المجلدات عند تشغيل QuickMemo+ للمرة الأولى. ويتم تمكين المجلدات المعطلة وتظهر عندما تحتوي على ملاحظة واحدة مرتبطة على الأقل.



## QSlide

يمكنك بدء التطبيقات عن طريق QSlide لتتمكن من استخدامها أثناء تشغيل تطبيقات أخرى. على سبيل المثال، استخدم الحاسبة أو التقويم عند تشغيل فيديو. أثناء تشغيل أحد التطبيقات، المس < QSlide.

- قد لا يتم دعم هذه الميزة بواسطة بعض التطبيقات.



- [ ]: لإيقاف تشغيل وضع QSlide للتبديل إلى وضع ملء الشاشة.
- ○: لضبط شفافية نافذة QSlide. وإذا كانت نافذة QSlide شفافة، فإنها لن تستجيب للإدخالات باللمس.
- ✕: لإغلاق نافذة QSlide.
- ▲: لضبط حجم نافذة QSlide.

# مشاركة المحتوى

## تشغيل المحتوى

يمكنك تشغيل المحتوى من الجهاز على التلفاز. تشغيل المحتوى المحفوظ مثل الصور والموسيقى والفيديو.

- 1 أنشئ اتصالاً بين الجهاز والتلفاز وشبكة Wi-Fi نفسها.
- 2 حدد ملفاً من تطبيق المعرض أو موسيقى واضغط على **>** التشغيل في جهاز آخر.
- 3 حدد التلفزيون الذي تريد الاتصال به.

• لاستخدام Chromecast، قم بتحديث Google Play إلى آخر إصدار.



## إرسال ملفات أو تلقيها

يمكنك إرسال/تلقي ملفات محفوظة على هاتف أو جهاز لوحي آخر من إنتاج LG. لاستلام ملفات، اسحب شريط الحالة لأسفل، ثم اضغط على مشاركة ملف.

للأجهزة التي لا تدعم مشاركة ملف، اضغط على **>** الإعدادات **>** الشبكات **>** المشاركة والاتصال **>** مشاركة ملف **<** SmartShare Beam واسحب **>** للتنشيط.

• يمكنك إرسال ملفات بشكل أسرع عندما يكون كلا الجهازين متصلين بشبكة Wi-Fi نفسها.

• يمكنك إرسال ملفات إلى الهواتف والأجهزة اللوحية المتوافقة مع DLNA بغض النظر عما إذا كان الجهاز من LG أم لا.




## إرسال ملفات إلى جهاز آخر

- 1 حدد ملفاً والمس **>** SmartShare Beam. وبدلاً من ذلك، المس **>** من قائمة الملفات وحدد ملفات ثم المس مشاركة **<** SmartShare Beam.
  - 2 حدد جهازاً من قائمة الأجهزة القريبة التي تدعم SmartShare Beam.
- يتم إرسال الملف إلى الجهاز.



## استخدام الأجهزة القريبة

يمكنك عرض وتشغيل ملفات الوسائط المتعددة المحفوظة على الأجهزة الموجودة بالقرب من جهازك.

- 1 من المعرض أو تطبيق موسيقى، حدد  الأجهزة المجاورة.
- 2 حدد جهازًا من قائمة الأجهزة.
- إذا لم تشاهد الجهاز المطلوب على قائمة الأجهزة، فتحقق من تشغيل DLNA ثم المس بحث عن الأجهزة القريبة.
- 3 قم بتشغيل المحتوى المحفوظ على الجهاز المحدد.



## عدم الإزعاج

يمكنك تحديد الإشعارات أو كتبتها لتجنب الإزعاج لفترة زمنية محددة.

- 1 المس  < الإعدادات < الصوت و الإشعار < عدم الإزعاج وبعد ذلك اسحب  لتنشيط هذه الميزة.
- 2 المس الأصوات والاهتزازات وحدد الوضع الذي تريده:
  - الأولوية فقط: لتلقي إشعارات بالاهتزاز أو الصوت لتطبيقات محددة. حتى في حالة تشغيل الأولوية فقط، تظل التنبيهات مسموعة.
  - الصمت التام: لتعطيل كل من الصوت والاهتزاز.

## معرفة الرنين

يمكنك ضبط الجهاز لتشغيل نغمة رنين منشأة تلقائيًا لكل مكالمة واردة من الأسماء المحددة. هذه الميزة مفيدة لأنه يمكنك التعرف على المتصل بمجرد الاستماع لنغمة الرنين.

- 1 المس  < الإعدادات < الصوت و الإشعار < معرفة الرنين ثم اسحب  لتنشيط هذه الميزة.
- 2 المس إنشاء نغمات رنين لـ وحدد الخيار المرغوب فيه.

• تعمل نغمة الرنين الافتراضية مع المكالمات الواردة من الأسماء باستثناء الاسم المحدد.



02

الوظائف الأساسية

## مكونات المنتج وملحقاته

تأكد من عدم غياب أي من العناصر التالية:

- الجهاز
- دبوس الإخراج
- سماعة الرأس استيريو
- كيبول USB
- الشاحن
- دليل البدء السريع



- قد تكون العناصر المذكورة أعلاه اختيارية.
- قد تختلف العناصر المرفقة بالجهاز وأي ملحقات متوفرة وفقاً للمنطقة ومزود الخدمة.
- استخدم دائماً ملحقات أصلية من إنتاج LG Electronics؛ فاستخدام ملحقات من إنتاج جهات تصنيع أخرى قد يؤثر على أداء الجهاز من حيث الاتصال مسبباً خللاً وظيفياً. قد لا يتم تغطية هذا الأمر بواسطة خدمة الإصلاح الخاصة بشركة LG.



- إذا فقدت أيًا من هذه العناصر الأساسية، فاتصل بالوكيل الذي اشتريت منه جهازك.
- لشراء عناصر أساسية إضافية، يرجى الاتصال بمركز خدمة العملاء من LG.
- لشراء عناصر اختيارية، يرجى الاتصال بمركز خدمة العملاء من LG لمعرفة البائعين المتوفرين.
- بعض العناصر في صندوق المنتج عرضة للتغيير دون إشعار.
- مظهر الجهاز ومواصفاته عرضة للتغيير دون إشعار.



## نظرة عامة على الأجزاء

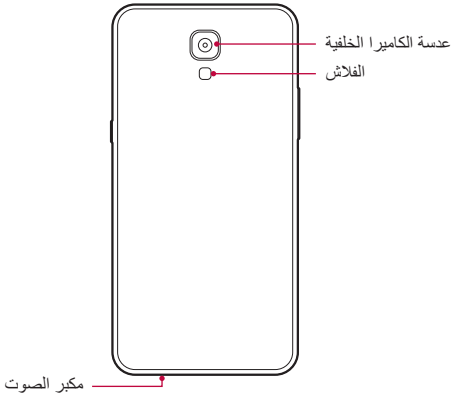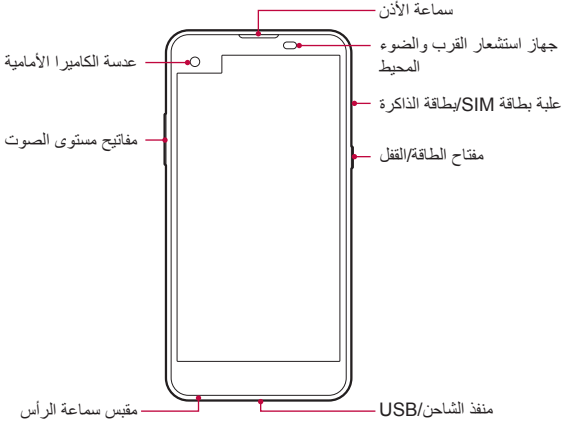

## • جهاز استشعار القرب والضوء المحيط

- جهاز استشعار القرب: أثناء إجراء مكالمة، يقوم مستشعر الأضواء القريبة بإيقاف تشغيل الشاشة وتعطيل وظائف اللمس عندما يكون الجهاز قريبًا من جسم بشري. ثم يعاود تشغيل الشاشة وتمكين وظائف اللمس عندما يكون الجهاز خارج نطاق معين.
- جهاز استشعار الضوء المحيط: يقوم مستشعر الضوء المحيط بتحليل كثافة الضوء المحيط عند تشغيل وضع التحكم في السطوع التلقائي.

## • مفاتيح مستوى الصوت

- لضبط مستوى صوت نغمات الرنين أو المكالمات أو الإشعارات.
- اضغط برفق على مفتاح مستوى الصوت لالتقاط صورة. ولالتقاط صورًا متتابعة، اضغط مع الاستمرار على مفتاح مستوى الصوت.
- اضغط على مفتاح خفض مستوى الصوت (-) لتشغيل تطبيق الكاميرا عندما تكون الشاشة مقفلة أو تم إيقاف تشغيلها. واضغط على مفتاح رفع مستوى الصوت (+) مرتين لتشغيل **Capture+**.

## • مفتاح الطاقة/القفل

- اضغط لفترة وجيزة على المفتاح عندما تريد تشغيل الشاشة أو إيقاف تشغيلها.
- اضغط مع الاستمرار على المفتاح عندما تريد تحديد خيار التحكم في الطاقة.

- قد يتم تقييد الوصول إلى بعض الوظائف اعتمادًا على مواصفات الجهاز.
- لا تضع أجسامًا ثقيلة على الجهاز أو تجلس عليه. وقد يؤدي عدم الالتزام بذلك إلى تلف ميزة شاشة اللمس.
- قد تتداخل الملحقات أو الغطاء الذي يقي الشاشة مع جهاز استشعار القرب.
- إذا ابتل جهازك أو استخدم في مكان رطب، فقد لا تعمل الأزرار أو أداة استشعار اللمس بشكل مناسب.



# التشغيل أو إيقاف التشغيل

## التشغيل

عند إيقاف التشغيل، اضغط مع الاستمرار على مفتاح الطاقة/القفل.

- عند تشغيل الجهاز لأول مرة، فلا بد من إجراء التكوين الأولي. وقد يستغرق التمهيد المبدئي وقتًا أطول من المعتاد.



## إيقاف التشغيل

اضغط مع الاستمرار على مفتاح الطاقة/القفل، ثم حدد إيقاف التشغيل.

## خيارات التحكم في الطاقة

المس مفتاح الطاقة/القفل مع الاستمرار، ثم حدد خيارًا.


- إيقاف التشغيل: لإيقاف تشغيل الجهاز.
- إيقاف تشغيل الطاقة وإعادة التشغيل: لإعادة تشغيل الجهاز.
- تشغيل وضع الرحلات الجوية: لحظر الوظائف المرتبطة بالاتصالات عن بُعد، بما في ذلك إجراء المكالمات الهاتفية والمراسلات وتصفح الإنترنت. وستظل الوظائف الأخرى متوفرة.

- في حال تجمدت الشاشة أو لم يتجاوب الجهاز عندما تحاول تشغيله، فاضغط باستمرار على مفتاح الطاقة/القفل وعلى مفتاح خفض مستوى الصوت (-) لحوالي 10 ثوانٍ لإعادة تشغيل الجهاز.




## تركيب بطاقة SIM


استخدم بطاقة SIM (وحدة تعريف المشترك) بطريقة صحيحة والتي يوفرها مزود الخدمة.  
1 أدخل دبوس الإخراج في الفتحة الموجودة بدرج البطاقة.

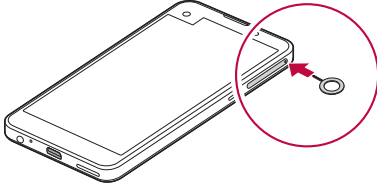


2 اسحب درج البطاقة للخارج.

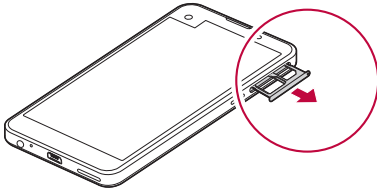

3 ضع بطاقة SIM بدرج البطاقة بحيث تكون الوصلات ذهبية اللون متجهة لأسفل.

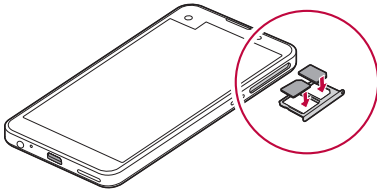

## 4 أعد إدخال درج البطاقة في الفتحة.

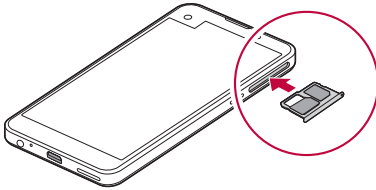

- من بين الأنواع العديدة لبطاقات SIM، بطاقات Nano-SIM هي التي تعمل فقط مع الجهاز.
- لأداء خالٍ من المشكلات، يوصى باستخدام الهاتف مع نوع مناسب من بطاقات SIM. أحرص دائمًا على استخدام بطاقات SIM المصممة بالمصنع والتي يقدمها المشغل.

### احتياطات عند استخدام بطاقة SIM

- تجنب فقدان بطاقة SIM. فإن LG لا تتحمل أي مسؤولية عن الأضرار أو المشكلات الأخرى التي قد تحدث بسبب فقدان أو نقل بطاقة SIM.
- توخ الحذر من إتلاف بطاقة SIM عند إدخالها أو إخراجها.


## إدخال بطاقة الذاكرة

يدعم الجهاز بطاقات microSD تصل سعتها إلى 2 تيرابايت. قد تكون بعض بطاقات الذاكرة غير متوافقة مع جهازك، تبعًا لجهة تصنيع بطاقة الذاكرة ونوعها.

- قد لا تكون بعض بطاقات الذاكرة متوافقة بصورة كاملة مع الجهاز. إذا استخدمت بطاقة غير متوافقة، فقد تؤدي لإتلاف الجهاز أو بطاقة الذاكرة، أو لإتلاف البيانات المخزنة عليها.



- 1 أدخل دبوس الإخراج في الفتحة الموجودة بدرج البطاقة.
- 2 اسحب درج البطاقة للخارج.
- 3 ضع بطاقة الذاكرة بدرج البطاقة بحيث تكون الوصلات ذهبية اللون متجهة لأسفل.

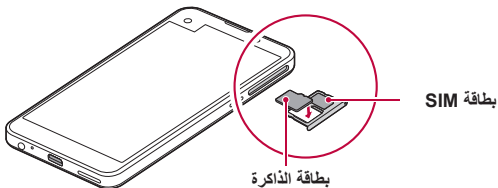

#### 4 أعد إدخال درج البطاقة في الفتحة.

- بطاقة الذاكرة من العناصر الاختيارية.
- قد تؤدي كتابة البيانات ومحوها بصورة متكررة إلى تقليل عمر بطاقات الذاكرة.

### إخراج بطاقة الذاكرة

قم بإلغاء تحميل بطاقة الذاكرة قبل إخراجها للحفاظ على سلامتها.


- 1 المس ○ < الإعدادات < عامة < التخزين و USB < △.
- 2 أدخل دبوس الإخراج في الفتحة الموجودة بدرج البطاقة.
- 3 اسحب درج البطاقة للخارج وقم بإخراج بطاقة الذاكرة.

- لا تخرج بطاقة الذاكرة أثناء قيام الجهاز بنقل المعلومات أو الوصول إليها. قد يؤدي هذا الأمر إلى فقد البيانات أو تلفها، أو إلى الإضرار ببطاقة الذاكرة أو الجهاز. LG غير مسؤولة عن الخسائر الناتجة عن سوء الاستخدام أو الاستخدام غير الصحيح لبطاقات الذاكرة، والتي تتضمن فقد البيانات.



## شحن البطارية

قبل استخدام الجهاز، اشحن البطارية تمامًا. قم بتوصيل أحد طرفي كابل الشحن بالشاحن، وأدخل طرفه الآخر في المنفذ المخصص له، ثم قم بتوصيل الشاحن بمقبس كهربائي.

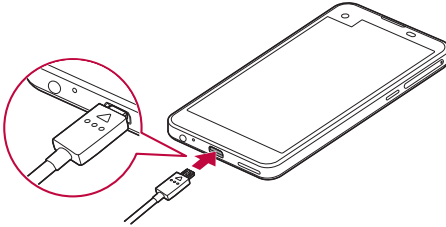

- تأكد من استخدام كابل USB المرفق كملحق أساسي.
- عند توصيل كابل USB، تأكد من أن الرمز على الكابل موجّه نحو الأعلى. قد يؤدي توصيل الكابل بطريقة غير صحيحة إلى إلحاق الضرر بالجهاز.
- تأكد من استخدام كابل شحن وبطارية وشاحن معتمد من إنتاج LG. وقد يؤدي شحن البطارية باستخدام شاحن من إنتاج طرف آخر إلى انفجارها أو تلف الجهاز.
- قد يؤدي استخدام الجهاز أثناء شحنه إلى التعرض لصدمة كهربائية. ولاستخدام الجهاز، توقف عن شحنه.



- أفضل الشاحن عن المقبس الكهربائي بعد اكتمال شحن الجهاز فهذا يحول دون استهلاك الطاقة بشكل غير ضروري.
- هناك طريقة أخرى لشحن البطارية وهي بتوصيل كابل USB بين الجهاز والكمبيوتر المكتبي أو الكمبيوتر المحمول. قد تستغرق هذه الطريقة وقتًا أطول من شحن البطارية بالطريقة العادية.
- لا تُشحن البطارية باستخدام موزع USB غير قادر على الحفاظ على الفولتية المقدرة؛ فقد يفشل الشحن أو يتوقف دون قصد.



## استخدام البطارية بشكل فعال

قد يقل عمر البطارية إذا احتفظت بالعديد من التطبيقات والوظائف قيد التشغيل في وقت واحد وباستمرار.

قم بإلغاء العمليات التي تتم في الخلفية لزيادة عمر البطارية.

لتقليل استهلاك البطارية، اتبع النصائح التالية:


- أوقف تشغيل Bluetooth® أو وظيفة شبكة Wi-Fi عند عدم استخدامهما.
- اضبط مهلة الشاشة على أقصر وقت ممكن.
- قم بتقليل سطوع الشاشة.
- قم بتعيين قفل الشاشة عند عدم استخدام الجهاز.
- لاستخدام تطبيق تم تنزيله، افحص مستوى البطارية.

## شاشة اللمس

يمكنك الاطلاع على كيفية التحكم في جهازك باستخدام إيماءات شاشة اللمس.


### اللمس

المس بطرف إصبعك برفق لتحديد تطبيق أو خيار أو تشغيله.

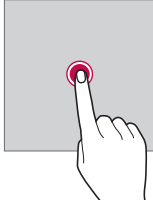


### اللمس مع الاستمرار

المس مع الاستمرار لبضع ثوانٍ لتشغيل وظيفة مخفية.

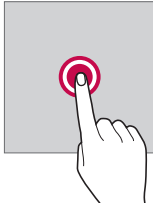


### الضغط المزدوج

اضغط مرتين وبسرعة لتكبير صورة أو خريطة أو تصغيرها.

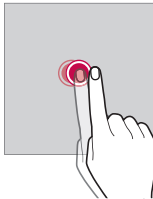


## السحب

المس عنصرًا، كتطبيق أو عنصر واجهة استخدام، مع الاستمرار ثم اسحبه إلى موقع آخر. ويمكنك استخدام هذه الإيماءة لنقل عنصر.

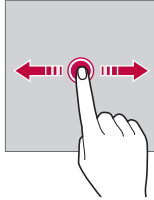



## التحرك

المس الشاشة برفق مع الاستمرار، ثم انقر بجهة اليسار أو اليمين للانتقال إلى لوحة أخرى بسرعة.

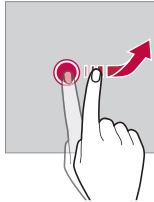

## ضم الإصبعين وفردهما

ضم إصبعيك لتصغير صورة أو خريطة. وللتكبير، قم بفردهما.

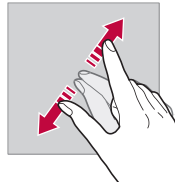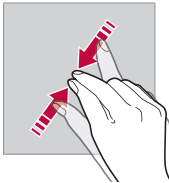



- لا تعرّض شاشة اللمس لصدمة مادية شديدة؛ فقد يتلف بسببها مستشعر اللمس.



- قد تتعطل شاشة اللمس إذا استخدمت الجهاز بالقرب من مواد موصلة أو معدنية أو ممغنطة.
- إذا استخدمت الجهاز في وجود أضواء ساطعة، كضوء الشمس المباشر، فقد لا تكون الشاشة مرئية تبعاً لموضعك. واستخدم الجهاز في موقع به ظل أو مكان ذي إضاءة غير ساطعة جدًا أو ساطعة بمقدار يكفي لقراءة الكتب.
- لا تضغط على الشاشة بشدة.
- المس الخيار الذي تريده بطرف إصبعك برفق.
- قد لا يعمل التحكم في اللمس بطريقة صحيحة عند لمس الشاشة أثناء ارتداء قفاز أو باستخدام طرف ظفرك.
- قد لا يعمل التحكم في اللمس بشكل مناسب إذا كانت الشاشة رطبة أو مبتلة.
- قد لا تعمل شاشة اللمس بطريقة صحيحة إذا كان الغطاء الذي يقيها أو الملحق الذي تم شراؤه من متجر عام عادي أو على الإنترنت متصلاً بالجهاز.

# الشاشة الرئيسية

## نظرة عامة على الشاشة الرئيسية

الشاشة الرئيسية هي نقطة البداية التي من خلالها يمكنك الوصول إلى مختلف الوظائف والتطبيقات على جهازك. المس ○ على أي شاشة للانتقال مباشرة إلى الشاشة الرئيسية. يمكنك إدارة جميع التطبيقات وعناصر واجهة الاستخدام من الشاشة الرئيسية. اسحب الشاشة ناحية اليسار أو اليمين لعرض جميع التطبيقات المثبتة في الحال. للبحث عن تطبيق، استخدم بحث Google.

## تخطيط الشاشة الرئيسية

يمكنك عرض جميع التطبيقات وتنظيم عناصر واجهة الاستخدام والمجلدات في الشاشة الرئيسية.



• قد تختلف الشاشة الرئيسية تبعًا لاختلاف مزود الخدمة أو إصدار البرنامج.

- الشاشة الثانوية: تتوفر الشاشة الثانوية في الجزء الأعلى من الشاشة وتتيح للمستخدم تكوين التطبيق المطلوب. حاول تشغيل تطبيقك المفضل بسرعة وسهولة عبر إعداد الشاشة الثانوية.
- شريط الحالة: لعرض رموز الحالات والوقت ومستوى البطارية.


- عناصر واجهة الاستخدام: لإضافة عناصر واجهة استخدام إلى الشاشة الرئيسية للوصول سريعاً إلى المعلومات الضرورية دون الحاجة إلى تشغيل التطبيقات واحداً تلو الآخر.
- المجلد: لإنشاء المجلدات وتجميع التطبيقات وفقاً لتفضيلاتك.
- رمز الصفحة: لعرض إجمالي عدد صفحات الشاشة الرئيسية والصفحات المميزة المعروضة حالياً.
- مساحة الوصول السريع: لتثبيت التطبيقات الرئيسية أسفل الشاشة حتى يمكن الوصول إليها من أي صفحة من صفحات الشاشة الرئيسية.
- أزرار اللمس في الشاشة الرئيسية
  - ◀ : للعودة إلى الشاشة السابقة. أغلق لوحة المفاتيح أو النوافذ المنبثقة.
  - ○ : المسه للانتقال إلى الشاشة الرئيسية. والمسه مع الاستمرار لتشغيل Google.
  - □ : لعرض قائمة بالتطبيقات المستخدمة مؤخراً أو لتشغيل تطبيق من القائمة. استخدم خيار مسح الكل لحذف جميع التطبيقات المستخدمة مؤخراً. وفي بعض التطبيقات، يؤدي لمس الزر مع الاستمرار إلى الوصول إلى خيارات إضافية.
  - ⌘ : اختر بطاقة SIM التي سوف تستخدمها. اضغط مع الاستمرار على تكوين إعدادات بطاقة SIM ثنائية.

## تحرير أزرار اللمس بالشاشة الرئيسية

يمكنك إعادة ترتيب أزرار اللمس بالشاشة الرئيسية أو إضافة الوظائف متكررة الاستخدام إليها.

المس ○ < الإعدادات < إعدادات الشاشة < أزرار اللمس في الشاشة الرئيسية < مجموعة الأزرار لتخصيص الإعدادات.

- تتوفر العديد من الوظائف، مثل QSlide أو إشعار أو Capture+. ويمكن إضافة خمسة عناصر كحد أقصى.

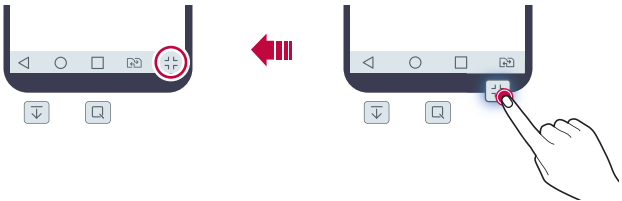

## رموز الحالة

في حالة وجود إشعار لرسالة غير مقروءة أو حدث بالتقويم أو تنبيه، يعرض شريط الحالة رمز الإشعار المقابل. ويمكنك التحقق من حالة الجهاز عن طريق عرض رموز الإشعارات المعروضة على شريط الحالة.

- : لا توجد إشارة
- : جاري إرسال البيانات عبر الشبكة
- : تم ضبط التنبيه
- : وضع الاهتزاز قيد التشغيل
- : Bluetooth قيد التشغيل
- : الاتصال بالكمبيوتر من خلال USB
- : مستوى البطارية
- : وضع الرحلات الجوية قيد التشغيل
- : المكالمات الفائتة
- : Wi-Fi قيد التشغيل
- : الوضع "صامت" قيد التشغيل
- : GPS قيد التشغيل
- : نقطة الاتصال قيد التشغيل
- : لا توجد بطاقة SIM

- قد تظهر بعض هذه الرموز بشكل مختلف أو لا تظهر على الإطلاق تبعًا لحالة الجهاز. راجع الرموز وفقًا للبيئة الفعلية التي تستخدم بها الجهاز.
- قد تختلف الرموز المعروضة تبعًا للمنطقة أو مزودي الخدمات.



## لوحة الإشعارات


يمكنك فتح لوحة الإشعارات عن طريق سحب شريط الحالة لأسفل. استخدم رموز الوصول السريع الموجودة بلوحة الإشعارات لتشغيل إحدى الوظائف أو إيقاف تشغيلها بسرعة وسهولة. اسحب لليمين أو اليسار بقائمة رموز الوصول السريع لتحديد رمز الوظيفة الذي تريده. • إذا لمست الرمز مع الاستمرار، فستظهر شاشة الإعدادات الخاصة بالوظيفة المقابلة.



## إعدادات لوحة الإشعارات

يمكنك تحديد العناصر المطلوب عرضها على لوحة الإشعارات. المس على لوحة الإشعارات. • لإعادة ترتيب رموز الوصول السريع، المس أحد الرموز مع الاستمرار ثم اسحبه إلى موضع آخر. • حدد الرموز التي تريد عرضها على القائمة.

## تبديل اتجاه الشاشة


يمكنك ضبط اتجاه الشاشة ليتغير تلقائيًا وفقًا لاتجاه الجهاز. من لوحة الإشعارات، المس تدوير الشاشة تلقائيًا من قائمة رموز الوصول السريع. أو بدلاً من ذلك المس  < الإعدادات < إعدادات الشاشة وقم بتنشيط تدوير الشاشة تلقائيًا.

## تحرير الشاشة الرئيسية

- في الشاشة الرئيسية، المس مساحة فارغة مع الاستمرار، ثم ابدأ تشغيل الوظيفة المطلوبة.
- إعادة ترتيب صفحات الشاشة الرئيسية، المس إحدى اللوحات مع الاستمرار ثم اسحبها إلى موضع آخر.
- إضافة عناصر واجهة استخدام إلى الشاشة الرئيسية، المس عناصر واجهة الاستخدام ثم اسحب إحداها إلى الشاشة الرئيسية.
- لتغيير إعدادات الشاشة الرئيسية، المس إعدادات الشاشة الرئيسية ثم خصص الخيارات. انظر إعدادات الشاشة الرئيسية لمعرفة التفاصيل.
- لعرض أو إعادة تثبيت التطبيقات التي تم إلغاء تثبيتها، المس تطبيقات تم إلغاء تثبيتها. راجع التطبيقات التي تم إلغاء تثبيتها مؤخراً لمعرفة التفاصيل.

## عرض الخلفية

- يمكنك عرض صورة الخلفية عن طريق إخفاء التطبيقات وعناصر واجهة الاستخدام إلى الشاشة الرئيسية.
- أفرد إصبعك أثناء الضغط على الشاشة الرئيسية.
- للرجوع إلى الشاشة الأصلية التي تظهر بها التطبيقات وعناصر واجهة الاستخدام، قم بضم إصبعك على الشاشة الرئيسية أو المس <img alt="back arrow icon" data-bbox="428 485 455 505"/>.

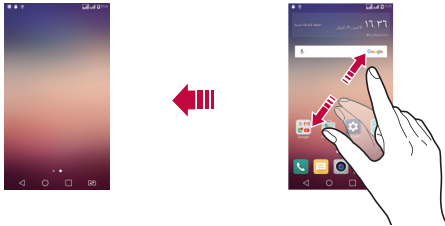

## تحريك التطبيقات على الشاشة الرئيسية

- على الشاشة الرئيسية، المس أحد التطبيقات مع الاستمرار ثم اسحبها إلى موضع آخر.
- للاحتفاظ بالتطبيقات الأكثر استخداماً أسفل الشاشة الرئيسية، المس أحد التطبيقات مع الاستمرار ثم اسحبها إلى قسم منطقة الوصول السريع الموجودة بالأسفل.
- لإزالة رمز من منطقة الوصول السريع، اسحبها إلى الشاشة الرئيسية.

## استخدام المجلدات من الشاشة الرئيسية

### إنشاء مجلدات

- على الشاشة الرئيسية، المس أحد التطبيقات مع الاستمرار ثم اسحبه فوق تطبيق آخر.
- يتم إنشاء مجلد جديد وإضافة التطبيقات إليه.

### تحرير المجلدات

- في الشاشة الرئيسية، المس مجلدًا ثم قم بنشغيل الوظيفة المطلوبة.
- لتحرير اسم المجلد ولونه، المس اسم المجلد.
- لإزالة تطبيق من المجلد، المس التطبيق مع الاستمرار ثم اسحبه إلى خارج المجلد. إذا كان التطبيق الذي تم إزالته هو التطبيق الوحيد الموجود في المجلد، فيتم إزالة المجلد تلقائيًا.

### إعدادات الشاشة الرئيسية

يمكنك تخصيص إعدادات الشاشة الرئيسية.

- 1 المس  $\odot$  < الإعدادات < إعدادات الشاشة < الشاشة الرئيسية.
- 2 خصص الإعدادات:

- **تحديد الشاشة الرئيسية:** لتحديد وضع الشاشة الرئيسية.
- **خلفية الشاشة:** لتغيير خلفية الشاشة الرئيسية.
- **تأثيرات الشاشة:** لتحديد تأثير لتطبيقه عند تغيير صفحة الشاشة الرئيسية.
- **سمة:** لتحديد سمة الشاشة التي تريد تطبيقها.
- **فرز التطبيقات حسب:** لضبط كيفية فرز التطبيقات في الشاشة الرئيسية.
- **الشبكة:** لتغيير وضع ترتيب التطبيقات بالشاشة الرئيسية.
- **إخفاء التطبيقات:** حدد أو قم بإلغاء تحديد التطبيقات التي تريد إخفائها من الشاشة الرئيسية.

# قفل الشاشة

## نظرة عامة على قفل الشاشة

تتوقف شاشة الجهاز عن التشغيل وتغلق نفسها إذا ضغطت على مفتاح الطاقة/القفل. ويحدث هذا أيضاً بعد ترك الجهاز خاملاً لفترة زمنية محددة.

إذا ضغطت على مفتاح الطاقة/القفل عند عدم ضبط قفل الشاشة، فستظهر الشاشة الرئيسية تلقائياً.

لضمان الأمان ولمنع الوصول غير المرغوب فيه إلى جهازك، اضبط قفل الشاشة.

- يحول قفل الشاشة دون إدخال أية بيانات غير ضرورية بفعل لمس شاشة الجهاز؛ نوصي بتنشيط قفل الشاشة عند عدم استخدام الجهاز.



## تكوين إعدادات قفل الشاشة

تتوفر العديد من الخيارات لتكوين إعدادات قفل الشاشة.

- 1 المس ○ < الإعدادات < إعدادات الشاشة < تأمين الشاشة < اختر قفل الشاشة ثم حدد الطريقة التي تفضلها.
- 2 خصص إعدادات القفل:
  - بلا: لإلغاء تنشيط وظيفة قفل الشاشة.
  - مسح: اسحب على الشاشة لفتح قفل الشاشة.
  - **Knock Code**: المس النقاط الموجودة على الشاشة وفقاً لنمط معين من أجل فتح قفل الشاشة.
  - **النقش**: ارسم نقشاً لفتح قفل الشاشة.
  - **رمز PIN**: أدخل كلمة مرور رقمية لفتح قفل الشاشة.
  - **كلمة المرور**: أدخل كلمة مرور رقمية أبجدية لفتح قفل الشاشة.

- لضبط قفل الشاشة باستخدام نقش قم أولاً بإنشاء حساب Google أو رمز PIN احتياطي. وإذا أدخلت نقشاً غير صحيح أكثر من عدد محدد من المرات المتتالية، فيمكنك فتح قفل الشاشة باستخدام رمز PIN الاحتياطي أو حساب Google.
- إذا تم ضبط قفل شاشة باستخدام Knock Code أو نقش أو رمز PIN أو كلمة مرور وأدخلت رمز PIN غير صحيح أو كلمة مرور غير صحيحة أكثر من عدد المرات المحددة، فسيتم حظر إدخال كلمة مرور لمدة 30 ثانية.



## إعدادات قفل الشاشة

يمكنك تخصيص إعدادات قفل الشاشة التالية.

1 المس ○ < الإعدادات < إعدادات الشاشة < تأمين الشاشة.

2 خصص الإعدادات:

- اختر قفل الشاشة: لتحديد طريقة قفل الشاشة.
- **Smart Lock**: حدد عناصر موثوق بها وبالتالي في حالة حدوث واحد منها، يتم فتح قفل الجهاز تلقائيًا.
- تأثيرات الشاشة: لتعيين تأثيرات التنقل عبر الشاشة المطلوب تطبيقها عند فتح قفل الشاشة. ويظهر هذا الخيار عند ضبط طريقة قفل الشاشة على مسح.
- خلفية الشاشة: لتغيير صورة خلفية شاشة القفل.
- اختصارات: لإضافة اختصار تطبيق ومن ثم الوصول إليه مباشرة من شاشة القفل بعد سحب التطبيق خارج الدائرة الكبيرة. ويظهر هذا الخيار إذا تم ضبط طريقة قفل الشاشة على مسح.
- رسوم حالة الطقس: لعرض رسومات الطقس المتحركة الخاصة بالموقع الحالي على شاشة القفل.
- معلومات الاتصال للهاتف المفقود: لعرض معلومات جهة الاتصال بالطوارئ على شاشة القفل.
- مؤقت الإغلاق: لتعيين الفترة الزمنية للحمول التي يتم بعدها قفل الجهاز تلقائيًا.
- يقفل زر الطاقة على الفور: لقفل الشاشة فور الضغط على مفتاح القفل/التشغيل.

• قد تختلف عناصر الإعداد المتوفرة تبعًا لطريقة قفل الشاشة المحددة.

## ضبط تشغيل/إيقاف الشاشة

يمكنك تشغيل الشاشة أو إيقاف تشغيلها عن طريق لمسها مرتين.

- لا يتوفر هذا الخيار إلا على الشاشة الرئيسية التي تقدمها LG. وقد لا تعمل بشكل مناسب على مشغل مخصص أو على الشاشة الرئيسية المثبتة بواسطة المستخدم.
- استخدم طرف إصبعك عند لمس الشاشة. ولا تستخدم ظفرك.
- لاستخدام ميزة تشغيل/إيقاف الشاشة، تأكد من عدم حظر جهاز استشعار القرب والضوء المحيط بملصق أو بأية مادة غريبة أخرى.

## تشغيل الشاشة

- المس الشاشة من المنتصف مرتين.
- قد يؤدي لمس الجزء العلوي أو السفلي من الشاشة إلى خفض معدل التعرف.

## إيقاف تشغيل الشاشة

- اضغط مرتين على مساحة فارغة على الشاشة الرئيسية أو شاشة القفل.
- بدلاً من ذلك، المس مرتين مساحة فارغة على شريط الحالة.

## Knock Code

يمكنك فتح قفل الشاشة عن طريق إنشاء Knock Code الخاص بك. وعند قفل الشاشة، يمكنك الوصول مباشرة إلى الشاشة الرئيسية عن طريق لمس الشاشة بتسلسل محدد.

- يمكنك استخدام Knock Code مع ميزة تشغيل/ إيقاف الشاشة.
- وإذا أدخلت Knock Code غير صحيح أكثر من عدد محدد من المرات المتتالية، فافتح القفل باستخدام رمز PIN الاحتياطي أو حساب Google.
- تأكد من استخدام طرف إصبعك عند لمس الشاشة.

## إنشاء Knock Code

- 1 المس ○ < الإعدادات < إعدادات الشاشة < تأمين الشاشة < اختر قفل الشاشة < Knock Code.
- 2 المس المربعات الموجودة في نقش من اختيارك لإنشاء Knock Code ثم المس التالي.
- 3 أدخل Knock Code المُنشئ مرة أخرى لإجراء التحقق، ثم المس تأكيد.
- 4 قم بتعيين رمز PIN احتياطي لاستخدامه عند نسيان Knock Code.

## فتح قفل الشاشة باستخدام Knock Code

- افتح قفل الشاشة عن طريق إدخال Knock Code الذي أنشأته.
- أدخل Knock Code على شاشة اللمس عند إيقاف تشغيل الشاشة.
- يمكنك أيضاً إدخال Knock Code عندما تكون الشاشة قيد التشغيل.

# تشفير الجهاز

## تشفير جهازك

ويمكن قراءة البيانات وكتابتها ونسخها عند ضبط تشفير الجهاز. يمكنك ضبط الجهاز باستخدام إعدادات القفل كي يقوم بإظهار المطالبة بتعريف المستخدم عند تشغيله.

## احتياطات تشفير الجهاز

يمكنك استخدام قفل الهاتف المحمول على شاشة القفل لزيادة مستوى حماية جهازك.

- إذا تم تشغيل قفل الهاتف المحمول وإدخال كلمة مرور غير صحيحة أكثر من عدد محدد من المرات، فستتم تهيئة الجهاز تلقائيًا.
- إذا نسيت كلمة مرور فك التشفير، فيجب عليك تهيئة الجهاز كي تتمكن من استخدامه مرة أخرى. وستؤدي التهيئة إلى حذف جميع البيانات المحفوظة قبل إجرائها.
- وقد يؤدي إيقاف التشفير قبل اكتماله إلى تلف البيانات.

## تشفير بطاقة الذاكرة

يمكنك تشفير البيانات المحفوظة على بطاقة الذاكرة وحمايتها. لا يمكن الوصول إلى البيانات المشفرة في بطاقة الذاكرة من جهاز آخر.

- 1 المس ○ < الإعدادات < عامة < الحماية < تشفير وحدة تخزين بطاقة SD.
- 2 اقرأ النظرة العامة المعروضة على الشاشة والخاصة بتشفير بطاقة الذاكرة ثم المس باستمرار للمتابعة.
- 3 حدد خيارًا ثم المس **التشفير الآن**:
  - **تشفير ملف جديد**: لتشفير البيانات المحفوظة على بطاقة الذاكرة فقط بعد تشفيرها.
  - **التشفير الكامل**: لتشفير جميع البيانات المحفوظة حاليًا على بطاقة الذاكرة.
  - **استثناء ملفات الوسائط**: لتشفير جميع الملفات، باستثناء ملفات الوسائط كالموسيقى والصور ومقاطع الفيديو.



- لتشفير بطاقة الذاكرة، تأكد من تعيين قفل الشاشة باستخدام رمز PIN أو كلمة مرور.
- بمجرد بدء تشفير بطاقة الذاكرة، تصبح بعض الوظائف غير متاحة.
- إذا تم إيقاف تشغيل الجهاز أثناء تقدم التشفير، فستفشل عملية التشفير، وقد تتلف بعض البيانات. ولذلك، تحقق من أن مستوى طاقة البطارية كافٍ قبل بدء التشفير.
- لا يمكن الوصول إلى الملفات المشفرة إلا من الجهاز الذي سُفِّرت به.
- لا يمكن استخدام بطاقة الذاكرة المشفرة على جهاز آخر من إنتاج LG. قم بتهيئة بطاقة الذاكرة المشفرة لاستخدامها على هاتف محمول آخر.
- يمكنك تنشيط تشفير وحدة تخزين بطاقة SD حتى في حالة عدم تركيب بطاقة الذاكرة في الجهاز. أي بطاقة ذاكرة يتم تركيبها بعد تنفيذ عملية التشفير، سيتم تشفيرها تلقائيًا.

## أخذ لقطات شاشة

يمكنك التقاط صورًا للشاشة الحالية التي تستعرضها.


### عبر اختصار

- اضغط مع الاستمرار على مفتاح القفل/التشغيل ومفتاح خفض مستوى الصوت (-) في الوقت نفسه لمدة ثانيتين على الأقل.
- يمكن عرض لقطات الشاشة من مجلد **Screenshots** الموجود في المعرض.

### عبر Capture+

في الشاشة حيث تريد أخذ لقطة شاشة، اسحب شريط الحالة لأسفل، ثم المس **Capture+**.




- عند إيقاف تشغيل الشاشة أو قفلها، يمكنك الوصول إلى **Capture+** بالضغط على مفتاح رفع مستوى الصوت (+) مرتين. المس أولاً  < الإعدادات > عامة ثم تشغيل مفتاح الاختصار.
- انظر كتابة ملاحظات على لقطة الشاشة لمعرفة التفاصيل.

# إدخال نص

## استخدام Smart keyboard

يمكنك استخدام Smart keyboard لإدخال نص وتحريره.


يمكنك استخدام Smart keyboard لعرض نص كتبته دون الحاجة إلى التبديل بين الشاشة ولوحة المفاتيح التقليدية. ويتيح لك هذا العثور على الأخطاء بسهولة وتصحيحها عند الكتابة.

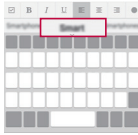

## نقل المؤشر

يمكنك استخدام Smart keyboard لنقل المؤشر إلى الموضع الذي تريده.

عند كتابة نص، المس شريط المسافة مع الاستمرار ثم اسحبه لليساار أو اليمين حتى ينتقل إلى الموضع الذي تريده في النص.

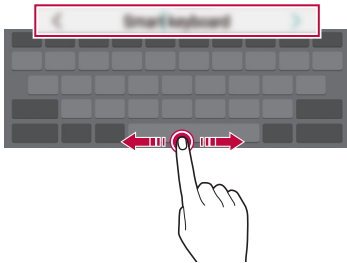

• لا يتوفر هذا الخيار إلا على لوحة مفاتيح QWERTY.




## اقترح كلمات

تقوم Smart keyboard تلقائيًا بتحليل أنماط الاستخدام لاقتراح الكلمات التي يتكرر استخدامها أثناء الكتابة. وكلما طال استخدامك للجهاز، كانت الاقتراحات أكثر دقة.

أدخل النص، ثم المس إحدى الكلمات المقترحة أو اسحب الجانب الأيمن أو الأيسر من شريط المسافة إلى أعلى برفق.


• يتم إدخال الكلمة المحددة تلقائيًا، ولذا فإنك لست بحاجة إلى كتابة كل حرف من الكلمة يدويًا.

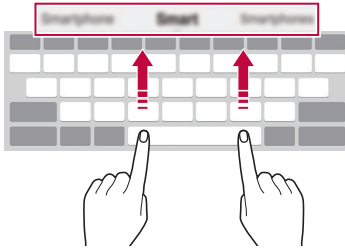

## تغيير تخطيط لوحة مفاتيح QWERTY

يمكنك إضافة مفاتيح أو حذفها أو إعادة ترتيبها بالصف السفلي من لوحة المفاتيح.

- 1 المس ○ < الإعدادات < عامة < اللغة و لوحة المفاتيح < لوحة مفاتيح LG < ارتفاع وتخطيط لوحة المفاتيح < لوحة المفاتيح الممتدة.  
بدلاً من ذلك، المس ⚙ على لوحة المفاتيح ثم المس ارتفاع وتخطيط لوحة المفاتيح < لوحة المفاتيح الممتدة.
- 2 المس مفتاحًا بالصف السفلي، ثم اسحبه إلى موضع آخر.

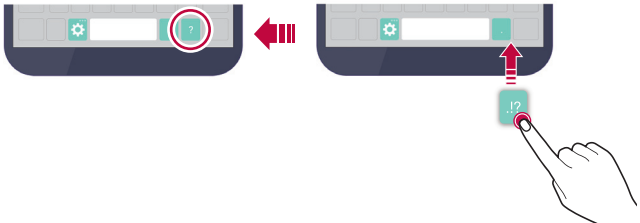

- لا يتوفر هذا الخيار إلا على لوحات مفاتيح QWERTY و QWERTZ و AZERTY.
- قد لا يتم دعم هذه الوظيفة في بعض اللغات.



## تخصيص ارتفاع لوحة المفاتيح

يمكنك تخصيص ارتفاع لوحة المفاتيح لإضفاء مزيد من الراحة على يديك أثناء الكتابة.

- 1 المس ○ < الإعدادات < عامة < اللغة و لوحة المفاتيح < لوحة مفاتيح LG < ارتفاع وتخطيط لوحة المفاتيح < ارتفاع لوحة المفاتيح.  
بدلاً من ذلك، المس ⚙ على لوحة المفاتيح ثم المس ارتفاع وتخطيط لوحة المفاتيح < ارتفاع لوحة المفاتيح.
- 2 اضبط ارتفاع لوحة المفاتيح.



## تحديد وضع لوحة المفاتيح الأفقي

يمكنك تحديد وضع لوحة المفاتيح الأفقي من بين العديد من الخيارات.

- 1 المس ○ < الإعدادات < عامة < اللغة و لوحة المفاتيح < لوحة مفاتيح LG < ارتفاع وتخطيط لوحة المفاتيح < نوع لوحة المفاتيح في العرض الأفقي.  
بدلاً من ذلك، المس ⚙ على لوحة المفاتيح ثم المس ارتفاع وتخطيط لوحة المفاتيح < نوع لوحة المفاتيح في العرض الأفقي.
- 2 حدد وضع لوحة مفاتيح.

## تقسيم لوحة المفاتيح

يمكنك تقسيم لوحة المفاتيح إلى جزأين ووضع أحدهما على أحد جانبي الشاشة عندما تكون الشاشة في وضع أفقي.

المس ○ < الإعدادات < عامة < اللغة ولوحة المفاتيح < لوحة مفاتيح LG < ارتفاع وتخطيط لوحة المفاتيح < تقسيم لوحة المفاتيح.

بدلاً من ذلك، المس ⚙ على لوحة المفاتيح ثم المس ارتفاع وتخطيط لوحة المفاتيح < تقسيم لوحة المفاتيح.

- قم بتدوير الجهاز إلى الوضع الأفقي لتقسيم لوحة المفاتيح على الجانبين. لدمج أو فصل لوحة المفاتيح، ضم إصبعك أو قم بفردهما على لوحة المفاتيح.




## وضع التشغيل بيد واحدة

يمكنك نقل لوحة المفاتيح إلى أحد جانبي الشاشة حتى يمكنك استخدامها بيد واحدة.

1 المس ○ < الإعدادات < عامة < اللغة ولوحة المفاتيح < لوحة مفاتيح LG < ارتفاع وتخطيط لوحة المفاتيح < تشغيل بيد واحدة.


بدلاً من ذلك، المس ⚙ على لوحة المفاتيح ثم المس ارتفاع وتخطيط لوحة المفاتيح < تشغيل بيد واحدة.

2 اضغط على السهم المعروض بجوار لوحة المفاتيح لنقلها في الاتجاه الذي تريده.

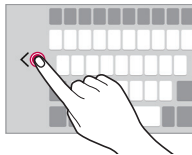


## إدخال نص باستخدام صوت

في لوحة المفاتيح، المس  مع الاستمرار ثم حدد .

- لتحسين التعرف على الأوامر الصوتية، تحدث بوضوح وبنطق سليم ونبرة مناسبة.
- لإدخال نص باستخدام الصوت، تأكد من أن جهازك متّصل بشبكة.
- لتحديد اللغة المخصصة لميزة التعرف على الصوت، اضغط على  < إعدادات > اللغة في شاشة التعرف على الصوت.
- قد لا يتم دعم هذه الوظيفة، أو ربما تختلف اللغات المدعومة وفقًا لمنطقة الخدمة.

## تغيير لوحة المفاتيح

كما يمكنك تغيير لغة الإدخال ونوع لوحة المفاتيح لكل لغة.

1 المس  < الإعدادات > عامة < اللغة ولوحة المفاتيح > لوحة مفاتيح LG < تحديد اللغات.

2 حدد لغة وخصص نوع لوحة المفاتيح.

## النسخ واللصق

يمكنك قص أو نسخ نص من تطبيق، ثم تلمصه بعد ذلك في التطبيق نفسه. أو، يمكنك تشغيل تطبيقات أخرى ولصق النص فيها.

1 المس مع الاستمرار حول النص الذي تريد نسخه أو لصقه.

2 اسحب  /  لتحديد المنطقة المطلوب النسخ أو القص بها.

3 حدد إما قص أو نسخ.

• تتم إضافة النص المقصوص أو المنسوخ إلى Clip Tray تلقائيًا.

4 المس مع الاستمرار نافذة إدخال النص، ثم حدد **إلصاق**.

- في حالة عدم وجود عنصر لقصه أو نسخه، لن يظهر خيار **إلصاق**.

## Clip Tray

عند نسخ صورة أو نص أو قصه، يتم حفظه تلقائيًا في Clip Tray ويمكن لصقه في أي مساحة وفي أي وقت.

- 1 في لوحة المفاتيح، المس  مع الاستمرار ثم حدد . بدلاً من ذلك، المس نافذة إدخال النص مع الاستمرار، ثم حدد **CLIP TRAY**.
- 2 حدد عنصرًا من Clip Tray وألصقه.
  - يمكن حفظ 20 عنصرًا كحد أقصى في Clip Tray.
  - المس  لقفّل العناصر المحفوظة كي لا يتم حذفها حتى عند تجاوز الكمية القصوى. ويمكن قفل عشرة عناصر كحد أقصى. ولحذف العناصر المقفلة، افتح قفلها أولاً.
  - اضغط على  لحذف العناصر التي تم حفظها في Clip Tray.

• قد لا تدعم بعض التطبيقات التي أنزلها المستخدم Clip Tray.



03

التطبيقات المفيدة

# تثبيت التطبيقات وإزالة تثبيتها

## تثبيت التطبيقات

- يمكنك الوصول إلى متجر التطبيقات للبحث عن تطبيقات وتنزيلها.
- يمكنك استخدام **SmartWorld** أو **متجر Play** أو متجر التطبيقات المتوفر لدى مزود الخدمة.

- قد تتطلب بعض متاجر التطبيقات أن يتم إنشاء حساب وتسجيل الدخول من خلاله.
- قد تتطلب بعض التطبيقات دفع رسوم.
- إذا استخدمت بيانات الهاتف المحمول، فقد يتم فرض رسوم على استخدامها تبعًا لخطة التسعير.
- قد لا يتم دعم **SmartWorld** تبعًا للمنطقة أو مزود الخدمة.

## إزالة تثبيت التطبيقات

- يمكنك إزالة تثبيت التطبيقات التي لم تعد بحاجة إلى استخدامها من جهازك.

- لا يمكن إزالة تثبيت بعض التطبيقات بواسطة المستخدمون.

## إزالة التثبيت بإيماءة اللمس مع الاستمرار

على الشاشة الرئيسية، المس التطبيق مع الاستمرار لإزالة تثبيته، ثم اسحبه فوق إلغاء التثبيت أعلى الشاشة.

- إذا كان إلغاء تثبيت التطبيقات قد تم في غضون 24 ساعة بدءًا من الآن، فيمكنك إعادة تثبيتها. راجع **التطبيقات التي تم إلغاء تثبيتها مؤخرًا** لمعرفة التفاصيل.

## إزالة التثبيت باستخدام قائمة الإعدادات

المس  < الإعدادات < عامة < التطبيقات وحدد تطبيقًا، ثم المس إلغاء التثبيت.

## إزالة تثبيت التطبيقات من متجر التطبيقات

لإزالة تثبيت أحد التطبيقات، يمكنك الوصول إلى متجر التطبيقات الذي قمت بتنزيل التطبيق منه ثم إزالة تثبيته.

## التطبيقات التي تم إلغائها تثبيتها مؤخرًا

يمكنك عرض التطبيقات التي تم إلغائها تثبيتها في الشاشة الرئيسية. يمكنك أيضًا إعادة تثبيت التطبيقات التي تم إلغائها تثبيتها خلال 24 ساعة من الآن.

1 المس ○ < التطبيقات التي تم إلغائها تثبيتها مؤخرًا.

2 قم بتنشيط الوظيفة التي تريدها:

- إعادة التثبيت: لإعادة تثبيت التطبيق المحدد.
- لإزالة التطبيقات التي تم إلغائها تثبيتها بصفة دائمة من الجهاز.

- يتم إزالة التطبيقات تلقائيًا التي تم إلغائها تثبيتها من الجهاز بعد 24 ساعة من إلغائها تثبيتها. إذا أردت إعادة تثبيت التطبيقات التي تم إلغائها تثبيتها، يجب عليك تنزيلها مرة أخرى من متجر التطبيقات.
- يتم تنشيط هذه الميزة في الشاشة الرئيسية الافتراضية فقط. إذا قمت بإلغاء تثبيت تطبيقات أثناء استخدام شاشة EasyHome أو مشغل تطبيقات آخر، يتم إزالتها على الفور وبصفة دائمة من الجهاز.

## الهاتف

### المكالمة الصوتية

قم بإجراء مكالمة هاتفية باستخدام إحدى الطرق المتوفرة، كإدخال أرقام الهاتف يدويًا أو إجراء مكالمة من قائمة الاسماء أو قائمة المكالمات الأخيرة.

### إجراء مكالمة من لوحة الاتصال

1 المس ○ < اتصال.

2 قم بإجراء مكالمة باستخدام طريقة من اختيارك:

- أدخل رقم هاتف ثم المس .
- المس رقم الاتصال السريع مع الاستمرار.
- ابحث عن اسم عن طريق لمس الحرف الأول من الاسم الموجود في قائمة الاسماء، ثم المس .



- لإدخال "+" عند إجراء مكالمة دولية، المس الرقم 0 مع الاستمرار.
- انظر إضافة أسماء إلى قائمة أرقام الاتصال السريع لمعرفة تفاصيل كيفية إضافة أرقام الهاتف إلى قائمة الاتصال السريع.

## إجراء مكالمة من قائمة الاسماء

- 1 المس < < الاسماء.
- 2 من قائمة الاسماء، حدد اسم ثم المس .

## الرد على مكالمة

- للرد على مكالمة، اسحب إلى خارج الدائرة على شاشة المكالمات الواردة.
- عندما تكون سماعة الرأس استيريو متصلة، يمكنك إجراء المكالمات باستخدام زر الاتصال/الإنهاء الموجود بسماعة الرأس.
  - لإنهاء مكالمة بالضغط على مفتاح القفل/التشغيل، المس < الإعدادات < الشبكات < إعدادات المكالمات < عام < الرد على المكالمات وإنهائها، ثم قم بتشغيل إنهاء المكالمات باستخدام مفتاح التشغيل.

## رفض مكالمة

- لرفض مكالمة واردة، اسحب إلى خارج الدائرة على شاشة المكالمات الواردة.
- لإرسال رسالة رفض، اسحب رسالة الرفض إلى خارج الدائرة.
  - لإضافة رسالة رفض أو تحريرها، المس < الإعدادات < الشبكات < إعدادات المكالمات < عام < رفض المكالمات < الرفض برسالة.
  - عند تلقي مكالمة، اضغط على مفتاح مستوى الصوت أو مفتاح الطاقة/القفل لكتم صوت نغمة الرنين أو الاهتزاز.

## عرض المكالمات الفائتة

- إذا فاتتك مكالمة، فسيقوم شريط الحالة الموجود أعلى الشاشة بعرض .
- لعرض تفاصيل مكالمة فاتتة، اسحب شريط الحالة لأسفل. وبدلاً من ذلك، المس < < السجلات.

## الوظائف التي يمكن الوصول إليها أثناء إجراء مكالمة

أثناء إجراء مكالمة، يمكنك الوصول إلى مجموعة متنوعة من الوظائف عن طريق لمس أزرار الشاشة:



- **الاسماء:** لعرض قائمة الاسماء أثناء إجراء مكالمة.
- **إنهاء:** لإنهاء مكالمة.
- **لوحة طلب:** لعرض لوحة الطلب أو إخفائها.
- **مكبر الصوت:** لتشغيل وظيفة السماع الخارجية.
- **كتم الصوت:** لكتم صوتك حتى لا يسمعه طرف آخر.
- **Bluetooth:** لتحويل المكالمة إلى جهاز Bluetooth تم إقرانه وتوصيله بجهازك.
- **:** للوصول إلى العديد من خيارات الاتصال.

• قد تتباين عناصر الإعدادات المتوفرة تبعًا للمنطقة أو مزود الخدمة.



## إجراء اتصال ثلاثي الاتجاهات



يمكنك الاتصال باسم آخر أثناء إجراء مكالمة.


- 1 **المس <** إضافة مكالمة أثناء إجراء مكالمة.
  - 2 أدخل رقم هاتف ثم المس .
  - تظهر المكالمتان على الشاشة في الوقت نفسه، وتوضع المكالمة الأولى قيد الانتظار.
  - 3 للتبديل إلى مكالمة أخرى، المس رقمًا آخر على الشاشة.
- ولبدء مكالمة جماعية، المس .


• قد يتم مطالبتك بدفع رسوم على كل مكالمة. استشر مزود الخدمة الخاص بك لمزيد من المعلومات.



## عرض سجلات المكالمات



عرض سجلات المكالمات الأخيرة، المس  <  < السجلات. وعندئذٍ يمكنك استخدام الوظائف التالية:

- لعرض سجلات تفاصيل المكالمات، حدد اسم. للاتصال بالاسم المحدد، المس .
- لحذف سجلات المكالمات، المس **: < حذف.**

• قد تختلف مدة المكالمة المعروضة عن رسوم المكالمة. استشر مزود الخدمة الخاص بك لمزيد من المعلومات. 

## تكوين خيارات الاتصال

يمكنك تكوين خيارات الاتصال المختلفة.

- 1 المس  <  < اتصال أو السجلات.
- 2 المس **: < إعدادات المكالمات** ثم قم بتكوين الخيارات التي تلائم تفضيلاتك.





# الرسائل

## إرسال رسالة

يمكنك إنشاء رسائل وإرسالها إلى الاسماء المحددة أو جميع الاسماء الموجودة لديك باستخدام تطبيق الرسائل.

• قد يتم فرض رسوم إضافية على إرسال الرسائل للخارج. استشر مزود الخدمة الخاص بك لمزيد من المعلومات.



- 1 المس < .
- 2 المس + .
- 3 حدد مستلمًا وأنشئ رسالة.
  - لإرفاق ملفات، المس .
  - للوصول إلى عناصر القائمة الاختيارية، المس .
- 4 المس إرسال لإرسال الرسالة.

## قراءة رسالة

يمكنك عرض الرسائل التي تم تبادلها مرتبة حسب الاسم.

- 1 المس < .
- 2 حدد اسم من قائمة الرسائل.

## تكوين إعدادات الرسائل

يمكنك تغيير إعدادات الرسائل لملائمة تفضيلاتك.

- 1 المس < .
- 2 المس  : < الإعدادات من قائمة الرسائل.

# الكاميرا


## بدء تشغيل الكاميرا

يمكنك التقاط صورة أو تسجيل فيديو للاحتفاظ باللحظات الثمينة.

المس < 

- قبل التقاط صورة، امسح عدسة الكاميرا بقطعة قماش ذات ألياف دقيقة. وإذا لامس إصبعك عدسة الكاميرا، فقد تحصل على صور ضبابية.
- إذا كان مستوى البطارية أقل من 5%، فاشحنها قبل استخدام الكاميرا.
- قد تكون الصور المضمنة في دليل المستخدم هذا مختلفة عن تلك الموجودة في الجهاز الفعلي.
- يمكن عرض الصور ومقاطع الفيديو أو تحريرها من المعرض. انظر **نظرة عامة على المعرض** لمعرفة التفاصيل.

## التبديل بين الكاميرتين

يمكنك التبديل بين الكاميرا الأمامية والخلفية لاختيار الكاميرا التي تلائم بيئة التصوير لديك. على شاشة الكاميرا، المس  أو اسحب الشاشة لأعلى أو أسفل أو لليمين أو اليسار للتبديل بين الكاميرا الأمامية والخلفية.

- استخدم الكاميرا الأمامية للتقاط صور ذاتية. وانظر **التقاط صور ذاتية** لمعرفة التفاصيل.

## الوضع البسيط

يمكنك التقاط صور عن طريق لمس الشاشة فقط.

- 1 على شاشة الكاميرا، المس  (في الشاشة الثانوية).
- 2 ضع الهدف داخل الإطار ثم المس الشاشة.


## الوضع الأساسي


يمكنك التقاط صور أو تسجيل مقاطع فيديو عن طريق التحديد من بين مختلف أوضاع وخيارات الالتقاط.

- 1 على شاشة الكاميرا، المس  (في الشاشة الثانوية).
- 2 لالتقاط صورة، المس . أو لتسجيل فيديو، المس .








## التقاط صورة

- 1 حدد وضع التقاط، ثم المس الهدف لتركيز بؤرة الكاميرا عليه.
  - 2 المس  لالتقاط صورة.
- بدلاً من ذلك، اضغط على مفتاح مستوى الصوت.




• عند إيقاف تشغيل الشاشة أو قفلها، ابدأ تشغيل الكاميرا بالضغط على مفتاح خفض مستوى الصوت (-) مرتين. لتنشيط هذه الوظيفة، المس  < الإعدادات > عامة ثم قم بتشغيل مفتاح الاختصار.

## تسجيل فيديو

- 1 حدد وضع التقاط، ثم المس الهدف لتركيز بؤرة الكاميرا عليه.
- 2 المس .
- لالتقاط صورة أثناء تسجيل الفيديو، المس .
- لإيقاف تسجيل الفيديو مؤقتاً، المس . لاستئناف تسجيل الفيديو، المس .
- 3 المس  لإنهاء تسجيل الفيديو.

## بانوراما

يمكنك إنشاء صورة بانورامية عن طريق تحريك الكاميرا في اتجاه واحد لتصوير الهدف ودمج اللقطات المتتالية في عرض أكبر.


- 1 في الوضع الأساسي، المس  < الوضع.
- 2 المس  ثم حرك الكاميرا ببطء في اتجاه واحد.
  - حرّك الجهاز باتباع اتجاه السهم الوارد في الإرشادات.
- 3 المس  لإنهاء الالتقاط.



## صور متلاحقة

يمكنك أخذ لقطات متلاحقة لإنشاء صور متحركة.


في الوضع الأساسي، المس  مع الاستمرار.


• يتم أخذ لقطات متتالية بسرعة ثابتة أثناء الضغط المستمر على .

• يمكن التقاط عدد من الصور المتتابعة يصل إلى ثلاثين (30) صورة.



## تخصيص خيارات الكاميرا

يمكنك تخصيص مجموعة متنوعة من خيارات الكاميرا لملائمة تفضيلاتك. في الوضع الأساسي، المس .

- تباين الخيارات المتوفرة تبعًا للكاميرا المحددة (الكاميرا الأمامية أو الخلفية) ووضع الالتقاط المحدد. 

تحديد نسبة عرض الصور إلى ارتفاعها أو جودة مقاطع الفيديو.	
لضبط المؤقت للالتقاط الصور تلقائيًا بعد فترة زمنية محددة.	
لالتقاط الصور عن طريق الأوامر الصوتية. الخيارات المتوفرة: LG، Kimchi، Smile، Cheese	
لعرض شبكات الموجه حتى يمكنك التقاط صور أو تسجيل مقاطع فيديو اعتمادًا على الخطوط المرجعية الأفقية والرأسية.	
لتعيين المواقع التي تريد أن يتم فيها حفظ الصور ومقاطع الفيديو. تظهر هذه الخيارات عند إدخال بطاقة الذاكرة الخارجية. •  : للحفظ في وحدة التخزين الداخلية. •  : الحفظ على بطاقة الذاكرة الخارجية.	
لتخصيص إعدادات الالتقاط التلقائي. تظهر هذه الخيارات عند استخدام الكاميرا الأمامية. •  : للالتقاط باستخدام ميزة الالتقاط بالإيماءة. •  : للالتقاط عندما تكتشف الكاميرا وجهًا.	
لقلب الصور. تظهر هذه الخيارات عند استخدام الكاميرا الأمامية. •  /  : لعدم قلب الصورة. •  /  : لقلب الصورة أفقيًا.	

## التقاط صور ذاتية


يمكنك استخدام الكاميرا الأمامية لعرض وجهك على الشاشة والتقاط صورة ذاتية له.

- عند استخدام الكاميرا الأمامية، يمكنك تغيير خيارات الكاميرا وكيفية التقاط الصور الذاتية. انظر **تخصيص خيارات الكاميرا** لمعرفة التفاصيل.



## التقاط إيماة اليد

- يمكنك التقاط صور ذاتية باستخدام الإيماءات. ما عليك سوى إظهار كف يدك أمام الكاميرا الأمامية ثم إطباق قبضتك.
- سيتم التقاط الصورة خلال ثلاث ثوانٍ.

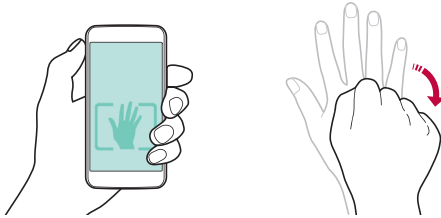

- لاستخدام هذه الوظيفة، تأكد من تحديد [👏] ضمن خيارات الكاميرا.
- هناك طريقة بديلة للتقاط بالإيماءة وهي إطباق قبضتك ثم بسطها مقابل الكاميرا الأمامية.
- تأكد من أن راحة يدك وقبضتها موجودتان ضمن الخط المرجعي حتى يمكن للكاميرا اكتشافهما.



## لقطات تسلسلية مع فواصل زمنية

يمكنك التقاط صور ذاتية متتابعة.

- أثناء استخدام الكاميرا الأمامية، المس [📷] مع الاستمرار. وبدلاً من ذلك، يمكنك إظهار كف يدك أمام الكاميرا الأمامية ثم إطباق قبضتك مرتين سريعاً.
- يتم التقاط أربع صور متسلسلة مع فواصل زمنية مدة كل منها ثلاث ثوانٍ.



## التقاط الصور تلقائياً

يمكنك استخدام ميزة اكتشاف الوجه لالتقاط صور ذاتية بطريقة مريحة وسهلة. يمكنك ضبط الجهاز وبالتالي عندما تنتظر إلى الشاشة، تكتشف الكاميرا الأمامية وجهك وتلتقط صورة ذاتية تلقائياً.

- عندما تكتشف الكاميرا الأمامية وجهك، يتحول الإطار إلى اللون الأبيض. بعد ذلك، عندما تتوقف عن الحركة، يتحول الإطار إلى اللون الأزرق وتلتقط الكاميرا الأمامية صورة.

• المس [⚙️]، ثم المس [👏] حتى يظهر [👏] لتنشيط وظيفة التقاط الصور تلقائياً.



# المعرض

## نظرة عامة على المعرض

يمكنك عرض الصور والفيديوهات المحفوظة على جهازك وإدارتها.

1 المس < .

• يتم عرض الصور والفيديوهات في المجلدات الخاصة بها.

2 المس أحد المجلدات واختر ملفاً.

• اعرض الملف المحدد في وضع ملء الشاشة.

• اسحب لليسار أو اليمين على شاشة الصور أو مقاطع الفيديو المعروضة لإظهار الملف السابق أو التالي.

• قد لا يتم دعم بعض تنسيقات الملفات اعتماداً على البرامج المثبتة.

• قد لا يتم فتح بعض الملفات بسبب الترميز.

• قد تتسبب الملفات التي تتجاوز الحد الأقصى للحجم في حدوث أخطاء.

## عرض الصور



## تحرير الصور

1 أثناء عرض صورة، المس .

2 استخدم مجموعة متنوعة من المؤثرات والأدوات لتحرير الصورة.


3 المس ✓ لتطبيق التغييرات.

4 المس **حفظ** لحفظ التغييرات.

• يتم كتابة التغييرات على الملف الأصلي.

• لحفظ الصورة المحررة كملف آخر، المس **حفظ نسخة**.

## تشغيل فيديو

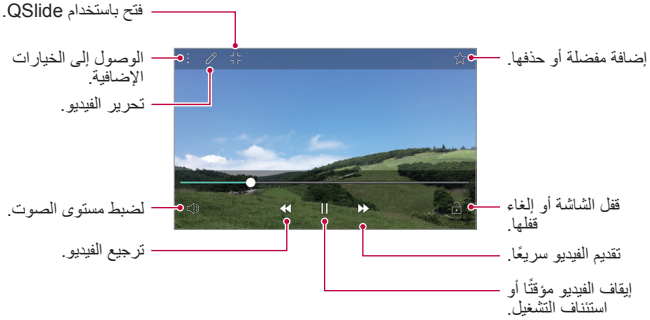

- لضبط مستوى الصوت، اسحب الجانب الأيمن من شاشة الفيديو لأعلى أو أسفل.
- لضبط سطوع الشاشة، اسحب الجانب الأيسر من شاشة الفيديو لأعلى أو لأسفل.

## حذف الملفات

يمكنك حذف ملفات باستخدام أحد الخيارات التالية:

- المس باستمرار أحد الملفات من قائمة الملفات، ثم المس **حذف**.
- المس **⋮** من قائمة الملفات، ثم حدد الملفات.

## مشاركة الملفات

يمكنك مشاركة ملفات باستخدام أحد الخيارات التالية:

- أثناء عرض صورة أو فيديو، المس **🔗** لمشاركة الملف باستخدام الطريقة التي تريدها.
- المس **📁** من قائمة الملفات لتحديد ملفات ومشاركتها باستخدام الطريقة التي تريدها.

## الحاسبة



يمكنك استخدام نوعين من أنواع الحاسبات: الحاسبة الأساسية والحاسبة العلمية.

- 1 المس ○ < الأدوات < الحاسبة.
- 2 استخدم لوحة المفاتيح لإجراء عملية حسابية.
- لاستخدام الحاسبة العلمية، المس : < الحاسبة العلمية.
- لعرض محفوظات العمليات الحسابية، المس : < محفوظات الحساب.

## الطقس

يمكنك عرض معلومات الطقس لمنطقة معينة.

- 1 المس ○ < الأدوات < الطقس.
- 2 المس + لإضافة المدينة التي تريدها.
- على شاشة تفاصيل الطقس، المس < / > أو اسحب الشاشة لليسار أو اليمين لعرض حالة الطقس لمدينة أخرى.

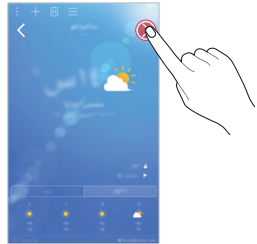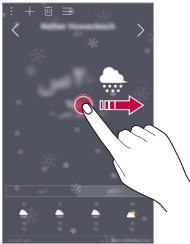

## تنزيلات

يمكنك عرض أو حذف أو مشاركة الملفات التي تم تنزيلها عبر الإنترنت أو التطبيقات.


- 1 المس ○ < الأدوات < تنزيلات.

# الساعة

## التنبيه

يمكنك ضبط تنبيه لتشغيله في وقت محدد.

- 1 المس ○ < الساعة < التنبيه.
- 2 المس + لإضافة تنبيه جديد.
- 3 قم بتكوين إعدادات التنبيه ثم المس حفظ.

- إذا حددت تنبيهها تم ضبطه مسبقاً، فيمكنك تحريره.
- لحذف تنبيه، المس  بأعلى الشاشة. وبدلاً من ذلك، المس التنبيه مع الاستمرار.

## الساعة العالمية

يمكنك عرض الوقت الحالي لمدن عبر العالم.

- 1 المس ○ < الساعة < الساعة العالمية.
- 2 المس + لإضافة مدينة.

## المؤقت

يمكنك ضبط المؤقت لتشغيل تنبيه بعد فترة زمنية محددة.

- 1 المس ○ < الساعة < المؤقت.
- 2 اضبط الوقت ثم المس بدء.
- لإيقاف المؤقت، المس إيقاف، ولاستئنافه، المس استئناف.
- لإعادة ضبط إعدادات المؤقت، المس إعادة ضبط.
- 3 المس إيقاف لإيقاف تنبيه المؤقت.

## ساعة الإيقاف

يمكنك استخدام ساعة الإيقاف لتسجيل وقت الدورة.

- 1 المس ○ < ساعة الإيقاف.
- 2 المس بدء لبدء ساعة الإيقاف.
  - لتسجيل وقت الدورة، المس الدورة.
- 3 المس إيقاف لتعليق ساعة الإيقاف.
  - لاستئناف ساعة الإيقاف، المس استئناف.
  - لحذف جميع سجلات ساعة الإيقاف، المس إعادة ضبط.

## مسجل الصوت

يمكنك تسجيل وحفظ صوتك أو أصوات الآخرين من أحداث مهمة. ويمكن تشغيل الملفات الصوتية المسجلة أو مشاركتها.

- 1 المس ○ < الأدوات < مسجل الصوت.
- 2 المس ●.
- 3 المس ⊞ لإنهاء التسجيل.
  - يتم حفظ الملف تلقائيًا وتظهر شاشة ما قبل الاستماع.
- 4 المس ⊞ لتشغيل الصوت المسجل.

- إذا لمست ⊞، فستظهر الملفات الصوتية المسجلة. ويمكنك تشغيل الملفات الصوتية المسجلة من القائمة.
- لحفظ تفاصيل موقع التسجيل، المس الموقع.
- المس حدث لإضافة حدث إلى التاريخ الذي تريده.




# موسيقى

يمكنك تشغيل ملفات الموسيقى المحفوظة على جهازك وإدارتها.

1 المس ○ < موسيقى.

2 حدد فئة.

3 حدد ملف موسيقى.

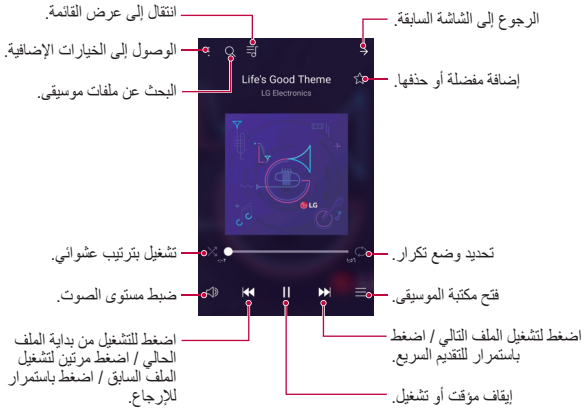

- قد لا يتم دعم بعض تنسيقات الملفات اعتماداً على البرامج المثبتة.
- قد تتسبب الملفات التي تتجاوز الحد الأقصى للحجم في حدوث أخطاء.
- يقوم مالكو حقوق النشر الدوليون بحماية ملفات الموسيقى أو تتم حمايتها بموجب قوانين حقوق النشر. لذا فإنه يلزمك الحصول على إذن قانوني قبل نسخ ملف موسيقى. ولتنزيل ملف موسيقى أو نسخه، ينبغي أولاً التحقق من قوانين حقوق النشر الخاصة بالبلد المعني.

# البريد الإلكتروني

## نظرة عامة على البريد الإلكتروني

يمكنك تسجيل حساب بريد إلكتروني بجهازك ثم التحقق من رسائل البريد الإلكتروني وإرسالها من جهازك.

- إذا استخدمت بيانات الهاتف المحمول، فقد يتم فرض رسوم على استخدامها تبعًا لخطة التسعير. استشر مزود الخدمة الخاص بك لمزيد من المعلومات.



## تسجيل حسابات البريد الإلكتروني

عندما تستخدم تطبيق البريد الإلكتروني لأول مرة، قم بتسجيل حساب البريد الإلكتروني الخاص بك.

- 1 المس < O البريد الإلكتروني.
  - 2 حدد مزود خدمة البريد الإلكتروني.
  - 3 أدخل عنوان بريدك الإلكتروني وكلمة المرور ثم المس التالي لتسجيل حسابك
- لتسجيل حساب بريد إلكتروني يدويًا أو لتسجيل حسابات بريد إلكتروني غير موجودة في القائمة، المس الإعداد اليدوي.

## إدارة حسابات البريد الإلكتروني


لعرض إعدادات حساب بريدك الإلكتروني أو تحريرها، المس : < الإعدادات.

- لإضافة حساب، المس إضافة حساب.
- لحذف حساب، المس : < إزالة الحساب.





## فتح حساب بريد إلكتروني آخر

في حالة تسجيل العديد من حسابات البريد الإلكتروني وكنت تريد عرض حساب آخر، فالمس ≡ ثم حدد حسابًا آخر من قائمة الحسابات.

## تحقق من البريد الإلكتروني


- 1 المس  ثم حدد صندوق بريد.
- 2 حدد بريداً إلكترونياً من قائمة البريد الإلكتروني.
- تظهر رسالة البريد الإلكتروني.

## إرسال بريد إلكتروني

- 1 المس .
- 2 أدخل عنوان البريد الإلكتروني الخاص بأحد المستلمين.
- 3 أدخل الموضوع والرسالة.
- لإرفاق ملفات، المس .
- للوصول إلى عناصر القائمة الاختيارية، المس .
- 4 المس  لإرسال البريد الإلكتروني.



## الاسماء

### نظرة عامة على الاسماء

- يمكنك حفظ الاسماء وإدارتها.
- المس  < الاسماء.

### إضافة اسماء

#### إضافة اسماء جديدة

- 1 في شاشة قائمة الاسماء، المس .
- 2 أدخل تفاصيل الاسم، ثم المس  حفظ.

## استيراد الاسماء

يمكنك استيراد اسماء من جهاز تخزين آخر.

- 1 في شاشة قائمة الاسماء، المس : < المزيد < التحكم في الاسماء < استيراد.
- 2 حدد الموقعين المصدر والهدف للاسم التي تريد استيراده، ثم المس موافق.
- 3 حدد الاسماء والمس استيراد.

## إضافة اسماء إلى قائمة أرقام الاتصال السريع

- 1 في شاشة قائمة الاسماء، المس : < الاتصال السريع.
- 2 المس إضافة اسم من أرقام الاتصال السريع.
- 3 حدد اسم.

## البحث عن اسماء

يمكنك البحث عن الاسماء باستخدام أحد الخيارات التالية:

- على شاشة قائمة الاسماء، أدخل اسم في مربع البحث.
- قم بالتمرير في قائمة الاسماء لأعلى أو لأسفل.
- من فهرس شاشة قائمة الاسماء، المس الحرف الأول من الاسم.

## قائمة الاسماء

### تحرير الاسماء

- 1 في شاشة قائمة الاسماء، حدد اسم.
- 2 على شاشة تفاصيل الاسماء المس ✎ لتحرير التفاصيل.
- 3 المس حفظ لحفظ التغييرات.

### حذف الاسماء

- 1 في شاشة قائمة الاسماء، المس اسم مع الاستمرار.
- 2 المس حذف الاسم.

## إضافة مفضلة

يمكنك تسجيل اسماء متكررة الاستخدام كمفضلة.

- 1 في شاشة قائمة الاسماء، حدد اسم.
- 2 على شاشة تفاصيل الاسم المس ☆.

## إنشاء مجموعات

- 1 في شاشة قائمة الاسماء، المس المجموعات < : < مجموعة جديدة.
- 2 أدخل اسمًا جديدًا للمجموعة.
- 3 المس إضافة أعضاء لتحديد اسماء، ثم المس إضافة.
- 4 المس حفظ لحفظ المجموعة الجديدة.

## التقويم

### نظرة عامة على التقويم

يمكنك استخدام التقويم لإدارة الأحداث والمهام.

### إضافة أحداث

- 1 المس ○ < التقويم.
  - 2 حدد تاريخًا ثم المس +.
  - 3 أدخل تفاصيل الحدث، ثم المس حفظ.
- إذا لمست تاريخًا من التقويم وكان التاريخ يحتوي على أحداث، فستظهر نافذة منبثقة تعرض قائمة بالأحداث. والمس حدثًا من النافذة المنبثقة لعرض التفاصيل الخاصة به.




## مزامنة الأحداث

المس : < التقويمات المطلوب عرضها > : < التقويمات المطلوب مزامنتها، وحدد التقويم الذي تريد مزامنته.

- عند حفظ الأحداث الخاصة بك من الجهاز على حساب Google، يتم مزامنتها تلقائيًا مع تقويم Google أيضًا. بعد ذلك، يمكنك مزامنة أجهزة أخرى مع تقويم Google كي يكون لدى تلك الأجهزة الأحداث ذاتها الموجودة على جهازك وبالتالي يمكنك إدارة الأحداث على تلك الأجهزة.



## حافضة الأحداث

يمكنك استخدام حافضة الأحداث لإنشاء أحداث.

- المس  لفتح حافضة الأحداث ثم اسحب المحتوى إلى تاريخ في التقويم.
-  : لإدارة الصور والنصوص والملاحظات والأحداث المحفوظة مؤقتًا. يمكنك أيضًا مشاركة النصوص والصور والملاحظات من تطبيق آخر وحفظها في مربع الحدث. وإذا لمست الحافضة عند إنشاء حدث، فسيتم حفظ الحدث مؤقتًا بحافضة الأحداث.
-  : لإدارة المهام التي ليس لها موعد نهائي، مثل الأحداث.



## إدارة الملفات

يمكنك عرض الملفات المحفوظة على جهازك أو على Cloud وإدارتها.

- 1 المس  < الأدوات > إدارة الملفات.
- 2 المس  وحدد موقع التخزين المرغوب فيه.

## مهام

يمكنك تسجيل المهام بجهازك لإدارة الجداول بسهولة.

- 1 المس  < مهام.
- 2 المس  لإضافة مهمة.
- 3 أدخل تفاصيل المهمة، ثم المس **حفظ**.

# Evernote

يمكنك كتابة معلومات مهمة وتجميعها ثم مشاركتها مع أجهزة أخرى تدعم **Evernote**.  
المس ○ < **Evernote**.

## بث الشبكة

يمكنك عرض بيانات بث النصوص في الوقت الفعلي في حالات الطوارئ مثل الأعاصير والفيضانات والزلازل.  
المس ○ < **بث الشبكة**.

## راديو FM

يمكنك الاستماع إلى راديو FM.  
المس ○ < **الأدوات** < **راديو FM**.

- لاستخدام هذا التطبيق، قم أولاً بتوصيل سماعة الرأس بالجهاز؛ وعندئذ ستعمل السماعة بمثابة هوائي لاسلكي.
- قد لا يتم دعم هذه الوظيفة تبعاً للمنطقة.



## LG Backup

يمكنك نسخ البيانات المحفوظة على جهازك احتياطياً واستعادتها ونقلها.

1 المس ○ < **الإدارة** < **LG Backup**.  
بدلاً من ذلك، المس ○ < **الإعدادات** < **عامّة** < **نسخ احتياطي وإعادة الضبط** < **LG Backup**.

2 اتبع الإرشادات التي تظهر على الشاشة لتحديد إذا كنت ستقوم بعمل نسخة احتياطية من البيانات في مجلد النسخ الاحتياطي المحدد مسبقاً على الجهاز أو نسخ البيانات إلى أجهزة أخرى.



- قد تؤدي تهيئة جهازك إلى حذف الملفات الاحتياطية المحفوظة في وحدة التخزين الداخلية. وللحد من فقدان البيانات، قم بنسخ الملفات الاحتياطية الهامة من مجلد LG Backup في وحدة التخزين الداخلية إلى كمبيوتر أو وحدة تخزين خارجية.



- لن يتم نسخ البيانات الموجودة بحساب Google احتياطيًا. وعندما تقوم بمزامنة حسابك على Google، يتم تخزين تطبيقات Google واسماء Google وتقويم Google وبيانات تطبيق مذكرة Google والتطبيقات التي تم تنزيلها من متجر Play على تطبيق Drive تلقائيًا.
- يتم حفظ الملفات الاحتياطية بالامتداد \*.lbf ضمن مجلد LG Backup على بطاقة الذاكرة أو التخزين الداخلي على الجهاز.
- أشحن البطارية تمامًا قبل نسخ البيانات احتياطيًا أو استعادتها لتجنب إيقاف التشغيل غير المقصود أثناء العملية.

## RemoteCall Service

يمكن تشخيص جهازك عن بُعد لحل المشكلات. أولاً، قم بإجراء مكالمة هاتفية مع مركز خدمة عملاء LG كما يلي:



- لاستخدام هذه الوظيفة، يتعين عليك أولاً الموافقة على استخدامها.
- إذا استخدمت بيانات الهاتف المحمول، فقد يتم فرض رسوم على استخدامها تبعًا لخطة التسعير.

1 المس ○ < الإدارة < RemoteCall Service.

2 اتصل بأحد مراكز خدمة عملاء LG.

3 بعد الاتصال، اتبع إرشادات مسؤول الخدمة لإدخال رقم وصول مؤلف من ستة أرقام.

- يتم الاتصال بجهازك وتبدأ خدمة الدعم عن بُعد.

# SmartWorld

يمكنك تنزيل مجموعة متنوعة من الألعاب والمحتويات الصوتية والتطبيقات والخطوط التي توفرها LG Electronics. ما عليك سوى تخصيص جهازك لبرنامج تفضيلاتك، وذلك باستخدام خلفيات الشاشة الرئيسية وخلفيات لوحة المفاتيح والخطوط.

- إذا استخدمت بيانات الهاتف المحمول، فقد يتم فرض رسوم على استخدامها تبعًا لخطة التسعير.
- قد لا يتم دعم هذه الميزة تبعًا للمنطقة أو مزود الخدمة.

1 المس ○ < SmartWorld.

2 أدخل المعرف وكلمة المرور ثم سجل الدخول.

3 حدد عناصر المحتوى لتنزيلها.

## تنزيل تطبيق SmartWorld

إذا لم يتم تثبيت تطبيق SmartWorld، فاتبع الخطوات التالية لتنزيله.

- 1 المس ○ < الإعدادات < عامة < حول الهاتف < عام < مركز التحديث < تحديث التطبيق.
- 2 من القائمة، حدد SmartWorld ثم المس لتنزيل.

## تطبيقات Google

يمكنك استخدام تطبيقات Google عن طريق تعيين حساب Google. وعندئذٍ ستظهر نافذة تسجيل حساب Google تلقائيًا عندما تستخدم تطبيق Google لأول مرة. وإذا لم يكن لديك حساب على Google، فأنشئ حسابًا من جهازك. وللإطلاع على كيفية استخدام تطبيق، انظر المساعدة الواردة في التطبيق.

- قد لا تعمل بعض التطبيقات تبعًا للمنطقة أو مزود الخدمة.

## Chrome

سجل الدخول إلى Chrome وقم باستيراد علامة التبويب المفتوحة والإشارات المرجعية وبيانات شريط العنوان من جهاز كمبيوتر إلى جهازك.

## مستندات

يمكنك إنشاء المستندات أو تحرير المستندات المنشأة عبر الإنترنت أو من أي جهاز آخر. كما يمكنك مشاركة المستندات مع آخرين وتحريرها.

## Drive

يمكنك تحميل الملفات وحفظها وفتحها ومشاركتها وتنظيمها من جهازك. ويمكن الوصول إلى الملفات التي يمكن الوصول إليها من التطبيقات من أي مكان آخر سواء عند الاتصال بالإنترنت أو من دونه.

## Gmail

سجل حساب بريدك الإلكتروني على Google بجهازك للتحقق من رسائل البريد الإلكتروني أو إرسالها.

## Google

استخدم ميزة البحث التي توفرها Google للبحث في مواقع الويب والملفات المخزنة على جهازك عن طريق إدخال كلمات أساسية أو من خلال الصوت.

## Hangouts

يمكنك تبادل الرسائل وإجراء مكالمة فيديو مع فرد أو مجموعة.

## خرائط

اكتشف موقعك أو موقع أحد الأماكن على الخريطة، واعرض المعلومات الجغرافية الخاصة به.

## أفلام وتلفزيون Play

استخدم حسابك على Google لاستئجار أفلام أو شرائها. ويمكنك شراء المحتوى وتشغيله من أي مكان.

## صور

اعرض الصور أو الألبومات المحفوظة على جهازك وشاركها.

## موسيقى Play

اشتر ملفات موسيقى من متجر Play. ويمكنك تشغيل ملفات الموسيقى المحفوظة على جهازك.

## جداول البيانات

يمكنك إنشاء جداول بيانات أو تحرير جداول البيانات المنشأة عبر الإنترنت أو من أي جهاز آخر. كما يمكنك مشاركة جداول البيانات مع آخرين وتحريرها.

## عروض تقديمية

يمكنك إنشاء مواد عرض تقديمي أو تحرير مواد العرض التقديمي المنشأة عبر الإنترنت أو من أي جهاز آخر. كما يمكنك مشاركة هذه المواد مع آخرين وتحريرها.

## البحث الصوتي

ابحث عن المعلومات على Google عن طريق نطق الكلمة الأساسية بدلاً من كتابتها.

## YouTube

ابحث عن مقاطع فيديو وقم بتشغيلها. ويمكنك تحميل مقاطع فيديو على YouTube لمشاركتها مع أشخاص من أنحاء العالم.

04

إعدادات الهاتف

## الإعدادات

يمكنك تخصيص إعدادات الجهاز وفقًا لتفضيلاتك.

المس ○ < الإعدادات.

- المس ○ وأدخل كلمة أساسية في مربع البحث للوصول إلى عنصر الإعداد.
- المس ○ لتغيير وضع العرض. يفترض دليل المستخدم هذا أنك تستخدم عرض التبويب.

## الشبكات

### بطاقة SIM ثنائية

يمكنك تكوين إعدادات بطاقة SIM ثنائية.

1 على شاشة الإعدادات، اضغط على الشبكات < بطاقة SIM ثنائية.

2 قم بتخصيص الوظائف التالية:

- **SIM 1**: قم بتغيير اسم وأيقونة بطاقة SIM 1.
- **تنشيط الفتحة ١**: قم بتنشيط أو إلغاء تنشيط فتحة بطاقة SIM 1.
- **SIM 2**: قم بتغيير اسم وأيقونة بطاقة SIM 2.
- **تنشيط الفتحة ٢**: قم بتنشيط أو إلغاء تنشيط فتحة بطاقة SIM 2.
- **سمة لون بطاقة SIM**: قم بتغيير سمات اللون لبطاقات SIM.
- **ميزة تقليل التكلفة**: قم بتنشيط أو إلغاء تنشيط ميزة تقليل التكلفة. في ميزة تقليل التكلفة، إذا قمت بإجراء مكالمة لإحدى الاسماء التي يتم تعيين SIM محددة لها، فإن SIM هذه تستخدم لإجراء المكالمة حتى إذا كانت SIM الأخرى نشطة، على سبيل المثال، تستخدم "بيانات شبكة المحمول".
- **بيانات الهاتف المحمول**: حدد بطاقة SIM التي تريد استخدامها لخدمة بيانات شبكة المحمول. كما يمكنك أيضًا إيقاف تشغيل هذه الوظيفة.
- **بيانات التجوال**: حدد هذا الخيار لتمكين الجهاز من استخدام بيانات شبكة المحمول عند التجوال خارج منطقة الشبكة المحلية الخاصة بك.

## Wi-Fi

يمكنك الاتصال بالأجهزة القريبة عبر شبكة Wi-Fi.

### الاتصال بشبكة Wi-Fi

1 على شاشة الإعدادات، المس الشبكات < Wi-Fi.

2 اسحب  لتنشيطه.

• تظهر شبكات Wi-Fi المتوفرة تلقائيًا.

3 حدد شبكة.

• قد تحتاج إلى إدخال كلمة مرور للشبكة Wi-Fi.

• ويختفى الجهاز هذه العملية لشبكات Wi-Fi التي سبق الوصول إليها. وإذا لم تكن تريد الاتصال بإحدى شبكات Wi-Fi تلقائيًا، فالمسها مع الاستمرار ثم المس نسيان الشبكة.

### إعدادات شبكة Wi-Fi

على شاشة الإعدادات، المس الشبكات < Wi-Fi.

• التحويل إلى بيانات الجوال: إذا تم تنشيط وظيفة اتصال بيانات المحمول ولكن لا يستطيع الجهاز الاتصال بالإنترنت من خلال اتصال Wi-Fi، يتصل الجهاز بالإنترنت تلقائيًا عن طريق الاتصال ببيانات المحمول.

• :: لتخصيص إعدادات شبكة Wi-Fi.

## Wi-Fi Direct

يمكنك توصيل جهازك بأجهزة أخرى تدعم Wi-Fi Direct لمشاركة البيانات معها مباشرة. ولن تكون بحاجة إلى نقطة وصول. ويمكنك توصيل أكثر من جهازين باستخدام Wi-Fi Direct.

1 على شاشة الإعدادات، المس الشبكات < Wi-Fi < :: < خيارات Wi-Fi المتقدمة <

Wi-Fi Direct


• تظهر الأجهزة القريبة التي تدعم Wi-Fi Direct تلقائيًا.

2 حدد جهازًا.

• يتم الاتصال عندما يقبل الجهاز طلب الاتصال.

• قد تُستنزف البطارية بصورة أسرع عند استخدام Wi-Fi Direct.



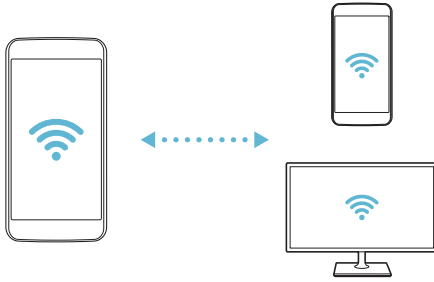

## Bluetooth

يمكنك توصيل جهازك بأجهزة قريبة تدعم Bluetooth لتبادل البيانات معها. فقط قم بتوصيل جهازك بسماعة Bluetooth ولوحة مفاتيح؛ فهذا يتيح لك التحكم في الجهاز بطريقة أكثر سهولة.

### الإقران مع جهاز آخر

- 1 على شاشة الإعدادات، اضغط على الشبكات < Bluetooth.
- 2 اسحب  لتنشيطه.
  - تظهر الأجهزة المتوفرة تلقائيًا.
  - لتحديث قائمة الأجهزة، المس بحث.

• لا يتم عرض إلا الأجهزة الممكنة بخيار بحث على القائمة. 

- 3 حدد جهازًا من القائمة.
- 4 اتبع الإرشادات التي تظهر على الشاشة لإجراء المصادقة.

• يتم تخطي هذه الخطوة بالنسبة للأجهزة التي سبق الوصول إليها. 

### إرسال البيانات عبر Bluetooth

- 1 حدد ملفًا.
  - يمكنك إرسال ملفات وسائط متعددة أو أسماء.

2 المس < Bluetooth.

3 حدد جهاز هدف للملف.

- يتم إرسال الملف بمجرد قبول الجهاز الهدف له.

• قد تختلف عمليات مشاركة الملفات تبعًا للملف.



## بيانات الهاتف المحمول

يمكنك تشغيل بيانات الهاتف المحمول أو إيقاف تشغيلها. كما يمكنك إدارة استخدامك لها.

### تشغيل بيانات الهاتف المحمول.

1 على شاشة الإعدادات، اضغط على الشبكات < بيانات الهاتف المحمول.

2 اسحب  لتنشيطه.

### تخصيص إعدادات بيانات الهاتف المحمول

1 على شاشة الإعدادات، اضغط على الشبكات < بيانات الهاتف المحمول.

2 قم بتخصيص الإعدادات التالية:

- **بيانات الهاتف المحمول:** قم بتعيينه لاستخدام اتصالات البيانات على شبكات المحمول.
- **تحديد استخدام بيانات الجوال:** لتعيين حد لاستخدام بيانات الهاتف المحمول لحظرها إذا تم بلوغ الحد.
- **⋮:** لتخصيص إعدادات بيانات الهاتف المحمول.

## إعدادات المكالمات

يمكنك تخصيص إعدادات الاتصال، كخيارات المكالمات الدولية والمكالمات الصوتية.

• قد لا يتم دعم بعض الميزات تبعًا للمنطقة أو مزود الخدمة.



1 على شاشة الإعدادات، اضغط على الشبكات < إعدادات المكالمات.

2 قم بتخصيص الإعدادات.

## مشاركة ملف

يمكنك إرسال وتلقي ملفات محفوظة بين جهازك وهواتف أو أجهزة لوحية أخرى من إنتاج LG.

• انظر إرسال ملفات أو تلقيها لمعرفة التفاصيل.



- 1 على شاشة الإعدادات، المس الشبكات < المشاركة والاتصال < مشاركة ملف.
- 2 قم بتخصيص الإعدادات التالية:
  - **LG X Screen**: لتغيير اسم الجهاز.
  - **حفظ إلى**: قم بتعيين مجلد الوجهة لحفظ الملفات المرسله من الأجهزة الأخرى به.
  - **مشاركة ملف**: للسماح باستلام الملفات المرسله من الأجهزة الأخرى.
  - **SmartShare Beam**: لمشاركة الملفات مع أجهزة أخرى عبر SmartShare Beam.

## خادم الوسائط

يمكنك مشاركة محتوى وسائط على جهازك مع أجهزة قريبة تدعم DLNA.

- 1 على شاشة الإعدادات، المس الشبكات < المشاركة والاتصال < خادم الوسائط.
- 2 قم بتخصيص الإعدادات التالية:
  - **مشاركة المحتوى**: لمشاركة المحتوى الموجود على جهازك مع أجهزة قريبة.
  - **LG X Screen**: لتعيين اسم لجهازك.
  - **المحتويات المشتركة لدي**: لتحديد نوع محتوى الوسائط لمشاركته مع أجهزة أخرى.
  - **الأجهزة المسموح بها**: لعرض قائمة بالأجهزة التي يُسمح لها بالوصول إلى المحتوى الموجود على جهازك.
  - **الأجهزة غير المسموح بها**: لعرض قائمة بالأجهزة التي لا يُسمح لها بالوصول إلى المحتوى الموجود على جهازك.

## LG AirDrive

يمكنك استخدام حساب LG لإدارة الملفات المحفوظة على الجهاز من خلال جهاز كمبيوتر. ولن تكون بحاجة إلى توصيل USB.

- 1 على شاشة الإعدادات، المس الشبكات < المشاركة والاتصال < **LG AirDrive**.
- 2 استخدم حساب LG فريدًا لتسجيل الدخول إلى LG Bridge على الكمبيوتر و **LG AirDrive** على الجهاز.
  - يمكن تنزيل برنامج LG Bridge من [www.lg.com](http://www.lg.com).
- 3 قم بإدارة الملفات الموجودة على الجهاز من الكمبيوتر.

## طباعة

يمكنك طباعة محتوى بعض الشاشات (مثل صفحات الويب المعروضة في متصفح Chrome) باستخدام طابعة متصلة بشبكة Wi-Fi نفسها كجهاز Android.

- 1 حدد المحتوى مثل الصور أو المستندات.
- 2 اضغط على : < المزيد < طباعة < ▼ < جميع الطابعات...، ثم حدد طابعة.


## اتصال USB

يمكنك توصيل الجهاز بجهاز آخر عبر USB ومشاركة بيانات الهاتف المحمول.

1 قم بتوصيل جهازك بالأجهزة الأخرى عبر كابل USB.

2 في شاشة الإعدادات، المس الشبكات < الربط > اتصال USB ثم اسحب  لتنشيطه.

- يستخدم هذا الخيار بيانات الهاتف المحمول، وقد يتم فرض رسوم على استخدامها تبعًا لخطة التسعير. استشر مزود الخدمة الخاص بك لمزيد من المعلومات.
- عند التوصيل بجهاز كمبيوتر، قم بتنزيل برنامج تشغيل USB من الموقع [www.lg.com](http://www.lg.com) وتثبيته على جهاز الكمبيوتر.
- لا يمكنك إرسال أو تلقي الملفات بين جهازك والكمبيوتر أثناء تشغيل اتصال USB. لذا يتعين عليك إيقاف اتصال USB لإرسال أو استلام الملفات.
- أنظمة التشغيل التي تدعم الربط هي Window XP أو أعلى أو Linux.

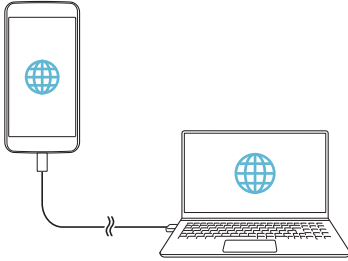


## نقطة Wi-Fi المحمولة

يمكنك ضبط جهازك ليعمل كموجه لاسلكي بحيث يمكن للأجهزة الأخرى الاتصال بالإنترنت عبر استخدام بيانات هاتفك المحمول.


- 1 في شاشة الإعدادات، المس الشبكات < الربط < نقطة Wi-Fi المحمولة ثم اسحب لتتنشيطه.
- 2 المس قم بضغط نقطة الاتصال Wi-Fi، وأدخل معرف Wi-Fi (SSID) وكلمة المرور.
- 3 قم بتنشغيل Wi-Fi على الجهاز الآخر ثم حدد اسم شبكة الجهاز من قائمة Wi-Fi.
- 4 أدخل كلمة مرور الشبكة.

- يستخدم هذا الخيار بيانات الهاتف المحمول، وقد يتم فرض رسوم على استخدامها تبعًا لخطة التسعير. استشر مزود الخدمة الخاص بك لمزيد من المعلومات.
- تتوفر المزيد من المعلومات على موقع الويب التالي:  
<http://www.android.com/tether#wifi>

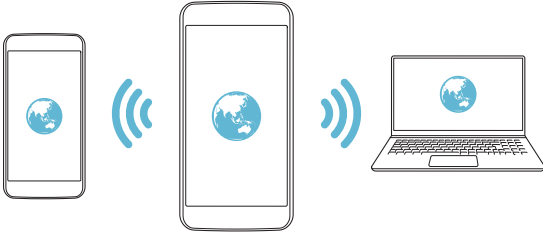


## ربط Bluetooth

يمكن لجهاز متصل عن طريق Bluetooth أن يقوم بالاتصال بالإنترنت عبر استخدام اتصال بيانات هاتفك المحمول.

- 1 في شاشة الإعدادات، المس **الشبكات < الربط < ربط Bluetooth** ثم اسحب  لتنشيطه.
- 2 قم بتشغيل Bluetooth على الجهازين لإقرانهما.

- يستخدم هذا الخيار بيانات الهاتف المحمول، وقد يتم فرض رسوم على استخدامها تبعًا لخطة التسعير. استشر مزود الخدمة الخاص بك لمزيد من المعلومات.
- تتوفر المزيد من المعلومات على موقع الويب التالي:  
[http://www.android.com/tether#Bluetooth\\_tethering](http://www.android.com/tether#Bluetooth_tethering)

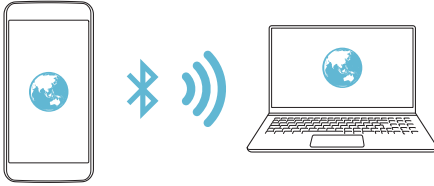

## مساعدة

يمكنك عرض تعليمات عن استخدام الربط بالإنترنت ونقاط الاتصال على شاشة الإعدادات، اضغط على **الشبكات < الربط < مساعدة**.

## وضع الرحلات الجوية

يمكنك إيقاف وظائف بيانات الهاتف المحمول والمكالمة. وعندما يكون هذا الوضع قيد التشغيل، تظل الوظائف التي لا تتضمن بيانات، كتشغيل الموسيقى والألعاب، متاحة.

- 1 على شاشة الإعدادات، اضغط على **الشبكات < المزيد < وضع الرحلات الجوية**.
- 2 المس **تشغيل** على شاشة التأكيد.

## شبكات الهاتف

يمكنك تخصيص إعدادات بيانات الهاتف المحمول.

1 على شاشة الإعدادات، اضغط على الشبكات < المزيد < شبكات الهاتف.

2 قم بتخصيص الإعدادات التالية:

- وضع الشبكة: لتحديد نوع شبكة.
- أسماء نقاط الوصول: لعرض نقطة الوصول أو تغييرها لاستخدام خدمات بيانات الهاتف المحمول. ولتغيير نقطة الوصول، حدد خيارًا من قائمة نقاط الوصول.
- مشغلو الشبكة: للبحث عن مشغلي الشبكة والاتصال بالشبكة تلقائيًا.

## VPN

يمكنك الاتصال بشبكة ظاهرية آمنة، مثل Intranet. كما يمكنك إدارة الشبكات الظاهرية الخاصة المتصلة.

### إضافة شبكة ظاهرية خاصة (VPN)

1 على شاشة الإعدادات، اضغط على الشبكات < المزيد < VPN.

- يجب مراعاة أنه في حالة فتح قفل الشاشة، فسيتم محو جميع معلومات الشبكة الظاهرية الخاصة (VPN) المحفوظة على الجهاز.



2 المس إضافة شبكة VPN.

- تكون هذه الميزة متاحة في حالة تنشيط قفل الشاشة فقط. إذا تم إلغاء وظيفة قفل الشاشة، فستظهر شاشة الإشعار. المس الإعدادات من شاشة الإشعار لتنشيط قفل الشاشة. انظر تكوين إعدادات قفل الشاشة لمعرفة التفاصيل.



3 أدخل تفاصيل الشبكة الظاهرية الخاصة (VPN)، والمس حفظ.

## تكوين إعدادات الشبكة الظاهرية الخاصة (VPN)

- 1 حدد شبكة ظاهرية خاصة (VPN) من قائمة **VPNS**.
- 2 أدخل تفاصيل حساب مستخدم VPN ثم المس اتصال.
- لحفظ تفاصيل الحساب، حدد خانة الاختيار **حفظ معلومات الحساب**.

## الصوت و الإشعار

- يمكنك تخصيص إعدادات الصوت والاهتزاز والإشعار.
- في شاشة الإعدادات، المس **الصوت و الإشعار** وقم بتخصيص الإعدادات التالية:
- **أوضاع الصوت:** لتغيير وضع الصوت إلى تشغيل الصوت أو الوضع الصامت أو الاهتزاز فقط.
  - **مستوى الصوت:** لضبط مستوى الصوت لعناصر عديدة.
  - **نغمة رنين SIM1/نغمة رنين SIM2:** لتحديد نغمة رنين للمكالمات الواردة. ولإضافة نغمات رنين أو حذفها.
  - **معرف الرنين:** لإنشاء نغمة رنين للمكالمة الواردة من اسم معين. انظر **معرف الرنين** لمعرفة التفاصيل.
  - **صوت مع اهتزاز:** لضبط الجهاز على الاهتزاز وتشغيل نغمة رنين في آن واحد.
  - **نوع اهتزاز SIM1/نوع اهتزاز SIM2:** يمكنك تحديد نوع الاهتزاز أو إنشاء نمط الاهتزاز المخصص لك.
  - **عدم الإزعاج:** لضبط الوقت والنطاق ونوع التطبيق لاستلام رسائل الإشعار. ويمكنك استلام رسائل الإشعار في أيام محددة من الأسبوع فقط. انظر **عدم الإزعاج** لمعرفة التفاصيل.
  - **تأمين الشاشة:** لعرض رسائل إشعار على شاشة القفل أو إخفائها. يمكنك أيضاً إخفاء المعلومات الخاصة.
  - **تطبيقات:** حدد التطبيقات التي يمكنها إظهار رسائل الإشعارات على الشاشة، وقم بتعيين أولويات تلك التطبيقات فيما يتعلق برسائل الإشعارات.
  - **المزيد < صوت إشعار SIM1 / صوت إشعار SIM2:** لتحديد نغمة رنين الإشعار. ولضبط الموسيقى المحفوظة على الجهاز كنغمة رنين للإشعار.
  - **المزيد < تأثيرات الصوت:** لتحديد مؤثر صوتي لتشغيله عندما تلمس لوحة الطلب ولتحديد خيار أو قفل الشاشة أو فتح قفلها.
  - **المزيد < إشعارات الرسائل/المكالمات الصوتية:** لضبط الجهاز على قراءة معلومات المتصل أو محتويات الرسالة عبر الكلام المنطوق.

## إعدادات الشاشة

- يمكنك تخصيص الإعدادات التفصيلية لكل نوع من أنواع الشاشات.
- في شاشة الإعدادات، المس إعدادات الشاشة وقم بتخصيص الإعدادات التالية:
  - الشاشة الثانوية: تخصيص إعدادات الشاشة الثانوية. راجع **الشاشة الثانوية** للحصول على تفاصيل.
  - الشاشة الرئيسية: لتخصيص إعدادات الشاشة الرئيسية. انظر **الشاشة الرئيسية** لمعرفة التفاصيل.
  - تأمين الشاشة: لتخصيص إعدادات شاشة القفل. انظر **إقفل الشاشة** لمعرفة التفاصيل.
  - أزرار اللمس في الشاشة الرئيسية: لإعادة ترتيب أزرار اللمس بالشاشة الرئيسية أو لتغيير ألوان الخلفية. ولإخفاء أزرار اللمس بالشاشة الرئيسية.
  - نوع الخط: لتغيير الخط.
  - حجم الخط: لتغيير حجم الخط.
  - نص عريض: لجعل النص على الشاشة غامقاً.
  - السطوع: استخدم الشريط المنزلق لتغيير سطوع شاشة الجهاز.
  - تلقائي: قم بتعيين الجهاز كي يتم ضبط سطوع الشاشة تلقائياً وفقاً لكثافة الضوء المحيط.
  - تدوير الشاشة تلقائياً: لتدوير الشاشة تلقائياً وفقاً لاتجاه الجهاز.
  - مهلة الشاشة: لإيقاف الشاشة تلقائياً عند ترك الجهاز خاملاً لفترة زمنية محددة.
  - المزيد < حلم اليقظة: لعرض شاشة توقف عند شحن الجهاز أو توصيله بحامل. حدد نوع شاشة التوقف لعرضها.
  - المزيد < معايرة استشعار الحركة: لتصحيح زاوية مستشعر الحركة وسرعته لتحسين دقة الإمالة وسرعة المستشعر.

• عند ضبط مستشعر الحركة، تأكد من وضع الجهاز على سطح مستو. قد يتسبب عدم الالتزام بذلك في حدوث أخطاء تتعلق بوظائف مستشعر الحركة مثل تدوير الشاشة تلقائياً.



## اللغة ولوحة المفاتيح

يمكنك تخصيص إعدادات اللغة ولوحة المفاتيح على جهازك.

1 على شاشة الإعدادات، المس **عامّة > اللغة ولوحة المفاتيح**.

2 قم بتخصيص الإعدادات التالية:

- **اللغة:** حدد اللغة التي سيتم تطبيقها على الجهاز.
- **لوحة المفاتيح الحالية:** لعرض نوع لوحة المفاتيح المستخدم حاليًا. ويمكنك تحديد لوحة مفاتيح لاستخدامها عند إدخال نص.
- **لوحة مفاتيح LG:** لتخصيص إعدادات لوحة مفاتيح LG.
- **الكتابة بالصوت من Google:** لتكوين خيارات إملاء النصوص بواسطة Google.
- **تحويل النص إلى الكلام:** لتكوين إعدادات مخرجات تحويل النص إلى كلام منطوق.
- **سرعة المؤشر:** لضبط سرعة مؤشر الفأرة أو لوحة التتبع.
- **عكس الأزرار:** لتبديل زر الفأرة الأيمن كي يقوم بتنفيذ إجراءات المعالجة المباشرة الرئيسية.

## الموقع

يمكنك تخصيص كيفية استخدام المعلومات الخاصة بموقعك من خلال تطبيقات معينة.

1 على شاشة الإعدادات، المس **عامّة > الموقع**.

2 قم بتخصيص الإعدادات التالية:

- **الوضع:** لتحديد طريقة لتقديم معلومات الموقع.
- **طلب الموقع الحديث:** لعرض التطبيقات التي طلبت معلومات الموقع مؤخرًا.
- **الكاميرا:** لحفظ معلومات الموقع عند التقاط صور أو تسجيل مقاطع فيديو.
- **سجل المواقع في Google:** لتكوين إعدادات محفوظات موقع Google.

## الحسابات والمزامنة

يمكنك إضافة الحسابات أو إدارتها بما في ذلك حساب Google. كما يمكنك مزامنة تطبيقات معينة أو معلومات المستخدم تلقائيًا.

- 1 على شاشة الإعدادات، المس عامة < الحسابات والمزامنة.
- 2 قم بتخصيص الإعدادات التالية:
  - مزامنة البيانات تلقائيًا: لمزامنة جميع المعلومات المسجلة تلقائيًا.
  - الحسابات: لعرض قائمة بالحسابات المسجلة. ولعرض تفاصيل حساب ما أو تغييرها، المس الحساب.
  - إضافة حساب: لإضافة حسابات.

## إمكانية الوصول

يمكنك إدارة مكونات الوصول الإضافية المثبتة على جهازك.

- 1 على شاشة الإعدادات، المس عامة < إمكانية الوصول.
- 2 قم بتخصيص الإعدادات التالية:
  - الرؤية < TalkBack: لضبط الجهاز بحيث يمكنه الإشعار بحالة الشاشة أو الإجراءات عبر الصوت.
  - الرؤية < إشعارات الرسائل/المكالمات الصوتية: لضبط الجهاز على قراءة معلومات المتصل أو محتويات الرسالة عبر الكلام المنطوق.
  - الرؤية < حجم الخط: لتغيير حجم الخط.
  - الرؤية < نص عريض: لجعل النص على الشاشة غامقًا.
  - الرؤية < التكبير/التصغير باللمس: لتكبير الشاشة أو تصغيرها عن طريق لمسها ثلاث مرات.
  - الرؤية < عكس لون الشاشة: لزيادة تباين لون الشاشة للأشخاص الذين يعانون من ضعف البصر.
  - الرؤية < ضبط لون الشاشة: لضبط لون الشاشة.
  - الرؤية < التدرج الرمادي: لتبديل وضع الشاشة إلى وضع التدرج الرمادي.
  - الرؤية < إنهاء المكالمات باستخدام مفتاح التشغيل: لإنهاء مكالمة بالضغط على مفتاح القفل/التشغيل.
  - سماع < الشرح: لتشغيل خدمة الترجمة عند تشغيل مقاطع فيديو لضعاف السمع.

- سماع < تبيّهات الفلاش: لضبط الجهاز بحيث يمكنه إصدار وميض عند تلقي مكالمات واردة ووجود إشعارات.
- سماع < إيقاف تشغيل جميع الأصوات: لكتم جميع الأصوات وخفض مستوى الصوت على جهاز الاستقبال.
- سماع < نوع الصوت: لتحديد نوع الصوت.
- سماع < ضبط أتران الصوت: لضبط توازن مخرجات الصوت. استخدم الشريط المنزلق لتغيير التوازن.
- الإعاقة الحركية والصعوبات المعرفية < **Touch assistant**: لتشغيل لوحة اللمس لتسهيل استخدام الأزرار والإيماءات.
- الإعاقة الحركية والصعوبات المعرفية < المس مع الاستمرار: لضبط وقت الإدخال باللمس.
- الإعاقة الحركية والصعوبات المعرفية < المس باستمرار من أجل المكالمات: للرد على المكالمات أو رفضها عن طريق اللمس المستمر لزر الاتصال بدلاً من سحبه.
- الإعاقة الحركية والصعوبات المعرفية < مهلة الشاشة: لإيقاف الشاشة تلقائياً عند ترك الجهاز خاملاً لفترة زمنية محددة.
- الإعاقة الحركية والصعوبات المعرفية < لمس مناطق التحكم: لتحديد منطقة اللمس بحيث يمكن التحكم في جزء معين من الشاشة عن طريق الإدخال باللمس.
- اختصار لمزايا إمكانية الوصول: للوصول سريعاً إلى الوظائف التي يتكرر استخدامها عن طريق لمس  ثلاث مرات.
- تدوير الشاشة تلقائياً: لتغيير اتجاه الشاشة تلقائياً وفقاً للوضع الفعلي للجهاز.
- الوصول عبر مفتاح التحويل: لإنشاء مجموعات مفاتيح للتحكم في جهازك.

## مفتاح الاختصار

يمكنك استخدام مفاتيح مستوى الصوت لتشغيل التطبيقات مباشرة عند إيقاف تشغيل الشاشة أو قفلها.

1 على شاشة الإعدادات، المس عامة < مفتاح الاختصار.

2 اسحب  لتنشيطه.

- اضغط على مفتاح خفض مستوى الصوت مرتين (-) لتشغيل تطبيق الكاميرا عندما تكون الشاشة مقفلة أو تم إيقاف تشغيلها. واضغط على مفتاح رفع مستوى الصوت (+) مرتين لتشغيل **Capture+**.

## خدمات Google

يمكنك استخدام إعدادات Google لإدارة إعدادات تطبيقات وحساب Google الخاصة بك.

على شاشة الإعدادات، المس **عام** < **خدمات Google**.

### الحماية

1 على شاشة الإعدادات، المس **عام** < **الحماية**.

2 قم بتخصيص الإعدادات التالية:

- **قفل المحتويات:** لتعيين طريقة قفل الملفات في **المعرض** أو **QuickMemo+**.
- **تشفير الهاتف:** لتعيين كلمة مرور الجهاز ليتمتع بخصوصية. ويمكنك إنشاء رمز PIN أو كلمة مرور لإدخال أي منهما في كل مرة تريد فيها تشغيل الجهاز. انظر **تشفير جهازك** لمعرفة التفاصيل.
- **تشفير وحدة تخزين بطاقة SD:** لتشفير بطاقة الذاكرة لمنع استخدامها على جهاز آخر. انظر **تشفير بطاقة الذاكرة** لمعرفة التفاصيل.
- **إعداد قفل بطاقة SIM:** لقفل بطاقة USIM أو فتح قفلها أو لتغيير كلمة المرور رمز PIN.
- **كتابة كلمة المرور مرئية:** لعرض كلمة المرور أثناء إدخالها.
- **مديرو الهاتف:** للسماح بامتيازات تقييد التحكم في الجهاز أو استخدامه على تطبيقات خاصة.
- **مصادر غير معروفة:** للسماح بتنصيب تطبيقات من بين تطبيقات غير تابعة لمتجر Play Store.
- **التحقق من التطبيقات:** لحظر تثبيت أية تطبيقات ضارة، ولعرض رسالة تحذير عند تثبيت تطبيقات ضارة.
- **نوع التخزين:** لعرض نوع المخزن الذي سيتم حفظ شهادة الأمان به.
- **إدارة الشهادة:** لإدارة شهادة الأمان المحفوظة بالجهاز.
- **Trust agents:** لعرض التطبيقات العملية الموثوقة المثبتة على الجهاز.
- **تثبيت الشاشة:** لتنصيب شاشة التطبيقات بحيث يمكن استخدام التطبيق النشط حالياً فقط.
- **الوصول إلى استخدام التطبيقات:** لعرض تفاصيل استخدام التطبيقات على الجهاز.


## التاريخ والوقت

- يمكنك تخصيص إعدادات التاريخ والوقت على جهازك.
- 1 على شاشة الإعدادات، المس عامة < التاريخ والوقت.
  - 2 قم بتخصيص الإعدادات.

## التخزين وUSB

- يمكنك عرض وإدارة التخزين الداخلي على الجهاز أو مساحة التخزين على بطاقة الذاكرة.
- 1 على شاشة الإعدادات، المس عامة < التخزين وUSB.
  - 2 قم بتخصيص الإعدادات التالية:
- **وحدة تخزين داخلية:** لعرض إجمالي مساحة التخزين والمساحة المتوفرة في التخزين الداخلي على الجهاز. ويمكنك عرض قائمة بالتطبيقات قيد الاستخدام وبسعة التخزين الخاصة بكل تطبيق.
  - **وحدة تخزين نقالة:** لعرض إجمالي مساحة التخزين والمساحة المتوفرة ببطاقة الذاكرة. يظهر هذا الخيار فقط عند إدخال بطاقة الذاكرة. وإخراج بطاقة الذاكرة، المس △.

## البطارية وتوفير الطاقة

- يمكنك عرض معلومات البطارية الحالية أو تشغيل وضع توفير الطاقة.
- 1 على شاشة الإعدادات، المس عامة < البطارية وتوفير الطاقة.
  - 2 قم بتخصيص الإعدادات التالية:
- **استخدام البطارية:** لعرض تفاصيل استخدام البطارية. ولعرض مزيد من التفاصيل، حدد عنصرًا محددًا.
  - **النسبة المئوية للبطارية موجودة على شريط الحالة:** لعرض مستوى طاقة البطارية المتبقية كنسبة مئوية على شريط الحالة.
  - **توفير الطاقة:** لتقليل استهلاك طاقة البطارية عن طريق خفض إعدادات الجهاز كسطوع الشاشة والسرعة وشدة الاهتزاز. يعرض شريط الحالة  عندما يكون وضع توفير الطاقة قيد التشغيل.

## الذاكرة

يمكنك عرض متوسط استخدام الذاكرة خلال فترة زمنية معينة عندما تكون الذاكرة قيد التشغيل بواسطة تطبيق.

- 1 على شاشة الإعدادات، المس **عامّة > الذاكرة**.
- 2 المس **▼** لضبط فترة الوقت لاسترداد البيانات.

## التطبيقات

يمكنك عرض قائمة بالتطبيقات المثبتة. ما عليك سوى إيقاف تشغيل التطبيقات أو حذفها إذا لزم الأمر.

- 1 على شاشة الإعدادات، المس **عامّة > التطبيقات**.
- 2 حدد تطبيقاً وقم بتنفيذ الإجراءات.

## نسخ احتياطي وإعادة الضبط

يمكنك نسخ البيانات المحفوظة على جهازك إلى حساب أو جهاز آخر احتياطياً؛ فأعد ضبط الجهاز إذا لزم الأمر.

- 1 على شاشة الإعدادات، المس **عامّة > نسخ احتياطي وإعادة الضبط**.
- 2 قم بتخصيص الإعدادات التالية:

- **LG Backup**: لنسخ جميع البيانات المحفوظة على جهازك احتياطياً واستعادتها. انظر **LG Backup** لمعرفة التفاصيل.
- **نسخ احتياطي لبياناتي**: لنسخ بيانات التطبيق وكلمة مرور **Wi-Fi** والإعدادات الأخرى إلى خادم **Google** احتياطياً.
- **الحساب الاحتياطي**: لعرض الحساب الاحتياطي الحالي قيد الاستخدام.
- **استعادة تلقائية**: لاستعادة الإعدادات والبيانات الاحتياطية تلقائياً عند إعادة تثبيت التطبيق.
- **إعادة ضبط إعدادات الشبكة**: لإعادة ضبط **Wi-Fi** و **Bluetooth** وإعدادات الشبكة الأخرى.
- **إعادة ضبط بيانات الشركة المصنعة**: لإعادة ضبط جميع الإعدادات الخاصة بالجهاز وحذف البيانات.

- ستؤدي إعادة ضبط جهازك إلى حذف جميع البيانات الموجودة به. ما عليك سوى إدخال اسم جهازك وحساب **Google** والمعلومات الأولية الأخرى مرة ثانية.



## حول الهاتف

يمكنك عرض المعلومات المتعلقة بجهازك كالاسم والحالة وتفاصيل البرنامج والمعلومات القانونية.

على شاشة الإعدادات، المس **عامّة** > **حول الهاتف** لعرض المعلومات.

## التنظيم والسلامة

يمكنك عرض العلامات التنظيمية والمعلومات المتعلقة بها على جهازك.

على شاشة الإعدادات، المس **عامّة** > **التنظيم والسلامة**.

05

الملحق

## إعدادات لغة LG

- حدد اللغة التي ترغب في استخدامها على جهازك.
- المس ○ < الإعدادات < عامة < اللغة ولوحة المفاتيح < اللغة، وحدد إحدى اللغات.

## LG Bridge

### نظرة عامة على LG Bridge

LG Bridge هو تطبيق يساعدك على إدارة الصور والأغاني ومقاطع الفيديو والمستندات المحفوظة على هاتف LG الذكي من جهاز الكمبيوتر الخاص بك بطريقة مريحة. يمكنك عمل نسخة احتياطية من الاسماء والصور وغيرها من البيانات على كمبيوتر أو تحديث برامج الجهاز.

- انظر تعليمات LG Bridge لمعرفة التفاصيل.
- قد تختلف الميزات المدعومة وفقاً للجهاز.
- برنامج تشغيل LG USB هو برنامج ضروري لتوصيل هاتف LG الذكي بالكمبيوتر ويتم تثبيته عندما تقوم بتثبيت LG Bridge.



### وظائف LG Bridge

- يمكنك إدارة الملفات الموجودة على الجهاز من الكمبيوتر عبر اتصال Wi-Fi أو اتصال بيانات المحمول.
- يمكنك عمل نسخة احتياطية للبيانات على كمبيوتر أو استعادة البيانات من كمبيوتر إلى الجهاز عبر اتصال كابل USB.
- يمكنك تحديث برامج الجهاز من كمبيوتر عبر اتصال كابل USB.

## تثبيت LG Bridge على كمبيوتر

- 1 انتقل إلى موقع [www.lg.com](http://www.lg.com) من الكمبيوتر الخاص بك.
- 2 في شريط البحث، أدخل اسم جهازك.
- 3 انقر فوق **LG Bridge < Download Centre**، وقم بتنزيل ملف الإعداد.
- انقر فوق تفاصيل لعرض الحد الأدنى لمتطلبات تثبيت LG Bridge.

## تحديث برامج الهاتف

### تحديث برنامج هاتف LG المحمول من الإنترنت.

لمزيد من المعلومات حول استخدام هذه الوظيفة، يرجى زيارة

<http://www.lg.com/common/index.jsp> وتحديد بلدك ولغتك.

تتيح هذه الميزة تحديث البرامج الثابتة على هاتفك بشكل ملائم إلى إصدارات أحدث من الإنترنت دون الحاجة إلى زيارة مركز الخدمة. ولا تتوفر هذه الميزة إلا عندما تتيح LG إصدارات أحدث من البرامج الثابتة لجهازك.

لأن تحديث برامج الهاتف المحمول الثابتة يتطلب عناية كاملة من المستخدم بشأن مدة عملية التحديث، يرجى منك فحص جميع الإرشادات والملاحظات التي تظهر مع كل خطوة قبل المتابعة. ويرجى أيضاً العلم بأن إزالة كيبول USB أثناء الترقية قد يحدث بسببه تلف خطير لهاتفك المحمول.

- تحتفظ LG بحقها في عدم توفير تحديثات البرامج الثابتة إلا للطرز المحددة ولا تضمن توفر إصدارات أحدث للبرامج الثابتة الخاصة بجميع طرز الهاتف المحمول.



## تحديث برنامج هاتف LG المحمول عبر البث الهوائي (OTA)

تتيح هذه الميزة لك تحديث برامج الهاتف إلى إصدار أحدث عبر OTA دون الحاجة إلى التوصيل باستخدام كابل USB. ولا تتوفر هذه الميزة إلا عندما تتيح LG إصدارات أحدث من البرامج الثابتة لجهازك.

يتعين عليك أولاً فحص إصدار البرنامج على هاتفك المحمول:

الإعدادات > عامة > حول الهاتف > عام > مركز التحديث > تحديث البرنامج > تحقق الآن من التحديث.

- قد يتم فقدان بياناتك الشخصية – بما في ذلك معلومات حساب Google وأية حسابات أخرى، وبيانات التطبيق/النظام وإعداداته، وأية تطبيقات تم تنزيلها، وترخيص DRM - الموجودة بمخزن الهاتف الداخلي أثناء عملية تحديث برامج الهاتف. ومن ثم فإن LG توصيك بنسخ بياناتك الشخصية احتياطياً قبل تحديث برامج هاتفك. ولا تتحمل LG أية مسؤولية عن فقدان بياناتك الشخصية.
- تعتمد هذه الميزة على المنطقة أو مزود الخدمة.



## الأسئلة المتداولة

يسرد هذا الفصل بعض المشكلات التي قد تواجهها عند استخدام هاتفك. وقد تتطلب بعض هذه المشكلات الاتصال بمزود الخدمة لأن ذلك سيكون أفضل من أن تقوم بحلها بنفسك.

الرسالة	الأسباب المحتملة	الإجراءات الوقائية الممكنة
يوجد خطأ في بطاقة SIM	بطاقة SIM غير موجودة في الهاتف أو تم إدخالها بطريقة غير صحيحة.	تأكد من إدخال بطاقة SIM بشكل صحيح.
لا يتوفر اتصال بالشبكة/فقد الاتصال بالشبكة	الإشارة ضعيفة أو أنت خارج نطاق شبكة شركة الاتصالات.	تحرك تجاه النافذة أو إلى منطقة مفتوحة. وتحقق من خريطة تغطية مشغل الشبكة.
لا يتوفر اتصال بالشبكة/فقد الاتصال بالشبكة	قام المشغل بتطبيق خدمات جديدة.	تحقق مما إذا كان عمر بطاقة SIM أكبر من 6~12 شهرًا. وإذا كان الأمر كذلك، فقم بتغيير بطاقة SIM أو USIM من أقرب فرع تابع لمزود خدمات الشبكة. اتصل بمزود الخدمة.
الرموز غير متطابقة	لتغيير رمز الأمان، تأكد من الرمز الجديد عن طريق إعادة إدخاله. الرمزان اللذان أدخلتهما غير متطابقين	إذا نسيت الرمز، فاتصل بمزود الخدمة.
لا يمكن ضبط أية تطبيقات	غير مدعومة بواسطة مزود الخدمة أو تتطلب التسجيل.	اتصل بمزود الخدمة.
التطبيق الذي تم تنزيله يسبب الكثير من الأخطاء.	أزل التطبيق.	1. المس < ⓪ > الإعدادات. 2. المس عامة < التطبيقات. 3. المس التطبيق < إلغاء التثبيت.
خطأ في الطلب	خطأ في الطلب	الشبكة الجديدة غير معتمدة.
المكالمات غير متاحة	تم إدخال بطاقة SIM جديدة تم بلوغ الحد الأقصى للرسوم المدفوعة مسبقًا.	تحقق من القيود الجديدة. اتصل بمزود الخدمة أو أعد ضبط الحد باستخدام PIN2.
لا يمكن تشغيل الهاتف	تم الضغط على مفتاح تشغيل/ إيقاف التشغيل لفترة وجيزة.	اضغط على مفتاح تشغيل/ إيقاف التشغيل لثانيتين على الأقل.
	البطارية غير مشحونة.	اشحن البطارية. تأكد من مؤشر الشحن على الشاشة.

الرسالة	الأسباب المحتملة	الإجراءات الوقائية الممكنة
	البطارية غير مشحونة.	اشحن البطارية.
	درجة الحرارة في الخارج مرتفعة أو منخفضة للغاية.	تأكد من شحن هاتفك في درجة حرارة طبيعية.
خطأ في الشحن	مشكلة في الاتصال	تحقق من الشاحن وتوصيله بالهاتف.
	لا توجد فولتية	قم بتوصيل الشاحن بمنفذ مختلف.
	عيب في الشاحن	استبدل الشاحن
	شاحن غير مناسب	استخدم ملحقات أصلية من إنتاج LG فقط
غير مسموح بالرقم.	وظيفة أرقام الاتصال الثابت قيد التشغيل.	تحقق من قائمة الإعدادات وأوقف تشغيل الوظيفة.
لا يمكن تلقي/ إرسال رسائل نصية قصيرة وصور	الذاكرة ممتلئة	احذف بعض البيانات، مثل التطبيقات أو الرسائل، من هاتفك لتوفير مساحة أكبر بالذاكرة.
الملفات لا تفتح	تنسيق الملف غير مدعوم	تحقق من تنسيقات الملفات المدعومة.
لا يمكن تشغيل الشاشة أثناء تلقي مكالمة.	توجد مشكلة في جهاز استشعار القرب	إذا استخدمت شريطاً أو غلبة للحماية، فتأكد من أنه لا يغطي المنطقة التي تحيط بجهاز استشعار القرب. وتأكد من أن المنطقة التي تحيط بمستشعر التقارب نظيفة.
لا يوجد صوت	وضع الاهتزاز	تحقق من حالة الإعدادات في قائمة الصوت للتأكد من عدم تشغيل وضع الاهتزاز أو عدم المقاطعة.

## دليل مكافحة السرقة

قم بإعداد جهازك لمنع الأشخاص الآخرين من استخدامه إذا كان قد تمت إعادة ضبطه على الإعدادات الافتراضية للمصنع دون إذن منك. فعلى سبيل المثال، إذا سُرق جهازك أو فُقد أو مُسحت بياناته، فإنه يمكن لأي شخص يعرف حسابك على Google أو معلومات شاشة القفل أن يستخدمه.

وكل ما تحتاج إليه لتتأكد أن جهازك محمي هو:

- ضبط قفل الشاشة: إذا فُقد جهازك أو سُرق لكنك كنت قد ضبطت قفل الشاشة، فإنه لا يمكن مسح بيانات الجهاز باستخدام قائمة الإعدادات إلا في حالة فتح قفل الشاشة.
- إضافة حساب Google على جهازك: إذا تم مسح بيانات جهازك لكن حسابك على Google موجود به، فلا يمكن للجهاز إنهاء عملية الإعداد حتى يتم إدخال معلومات حساب Google مرة أخرى.

بعد حماية جهازك، سيتعين عليك فتح قفل الشاشة أو إدخال كلمة مرور Google إذا كنت بحاجة إلى إعادة ضبط بيانات الشركة المصنعة. ويضمن لك هذا أن تقوم أو يقوم شخص تثق به بعملية إعادة الضبط.

- لا تتسّ حسابك على Google وكلمة المرور التي أضفتها إلى جهازك قبل إعادة ضبط بيانات الشركة المصنعة. وإذا لم تستطع توفير معلومات الحساب أثناء عملية الإعداد، فلن تكون قادرًا على استخدام الجهاز مطلقًا بعد إعادة ضبط بيانات الشركة المصنعة.



## المزيد من المعلومات

### معلومات حول إشعار البرامج المفتوحة المصدر

للحصول على التعليمات البرمجية المصدر بموجب GPL و LGPL و MPL وتراخيص مفتوحة المصدر أخرى يتضمنها هذا المنتج، يرجى زيارة الموقع <http://opensource.lge.com>.

بالإضافة إلى التعليمات البرمجية المصدر، تتوفر كل أحكام الترخيص وإشعارات إخلاء المسؤولية وإشعارات حقوق النشر للتنزيل.

ستوفر LG Electronics أيضًا التعليمات البرمجية المصدر على قرص مضغوط بتكلفة تغطي هذا التوزيع (مثل تكلفة الوسائط والشحن والاستخدام) عند طلبها بإرسال بريد إلكتروني إلى [opensource@lge.com](mailto:opensource@lge.com). إن هذا العرض صالح لمدة ثلاث (3) سنوات اعتبارًا من تاريخ شراء المنتج.

## التنظيم والسلامة

للحصول على تفاصيل حول القواعد التنظيمية، انتقل إلى الإعدادات > عامة > التنظيم والسلامة على الهاتف.

## العلامات التجارية

- حقوق النشر © لعام 2016 مملوكة لشركة LG Electronics, Inc. جميع الحقوق محفوظة. LG وشعار LG هما علامتان تجاريتان مسجلتان لشركة LG Group والكيانات التابعة لها.
- Google™ و Google Maps™ و Gmail™ و YouTube™ و Hangouts™ و Play Store™ هي علامات تجارية لشركة Google, Inc.
- Bluetooth® هي علامة تجارية مسجلة لـ Bluetooth SIG, Inc. عبر العالم.
- Wi-Fi® وشعار Wi-Fi هما علامتان تجاريتان مسجلتان لـ Wi-Fi Alliance.
- جميع العلامات التجارية وحقوق النشر ملك لأصحابها المعنيين.

## بيان التوافق

تعلن LG Electronics بموجبه أن المنتج **LG-K500dsZ** يتوافق مع المتطلبات الأساسية والأحكام الأخرى ذات الصلة الخاصة بالتوجيه **1999/5/EC**. يمكن العثور على نسخة من إعلان التوافق على العنوان التالي  
<http://www.lg.com/global/declaration>

## التخلص من الأجهزة القديمة الخاصة بك



- 1 جميع الأجهزة الكهربائية والإلكترونية يجب التخلص منها بشكل منفصل عن النفايات المنزلية عبر منشآت التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
- 2 سيساعد التخلص من جهازك القديم بشكل صحيح في الحد من التبعات السلبية المحتملة للبيئة وصحة الإنسان.
- 3 لمزيد من المعلومات المفصلة حول التخلص من جهازك القديم، يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بالمحل الذي اشتريته منه المنتج.

## التخلص من البطاريات/المراكم التالفة



- 1 قد يتحد هذا الرمز مع الرموز الكيميائية مثل الزئبق (Hg) أو الكاديوم (Cd) أو الرصاص (Pb) إذا كانت البطارية تحتوي على أكثر من 0.0005% زئبق أو 0.002% كاديوم أو رصاص 0.004%.
- 2 يجب التخلص من جميع البطاريات/المراكم بشكل منفصل عن النفايات المنزلية عبر منشآت التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
- 3 سيساعد التخلص من البطاريات/المراكم القديمة بشكل صحيح في الحد من التبعات السلبية المحتملة للبيئة وصحة الإنسان والحيوان.
- 4 لمزيد من المعلومات المفصلة حول التخلص من البطاريات/المراكم القديمة يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بالمحل الذي اشتريته منه المنتج.

# About this user guide

Thank you for choosing this LG product. Please carefully read this user guide before using the device for the first time to ensure safe and proper use.

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- This device is not suitable for people who have a visual impairment due to the touchscreen keyboard.
- Descriptions are based on the device default settings.
- Default apps on the device are subject to updates, and support for these apps may be withdrawn without prior notice. If you have any questions about an app provided with the device, please contact a LG Service Centre. For user-installed apps, please contact the relevant service provider.
- Modifying the device's operating system or installing software from unofficial sources may damage the device and lead to data corruption or data loss. Such actions will violate your LG licence agreement and void your warranty.
- Some content and illustrations may differ from your device, depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.
- Software, audio, wallpaper, images, and other media supplied with your device are licenced for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully responsible for the illegal use of media.
- Additional charges may incur for data services, such as messaging, uploading, downloading, auto-syncing and location services. To void additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

## Instructional notices



**WARNING:** Situations that could cause injury to the user and third parties.



**CAUTION:** Situations that may cause minor injury or damage to the device.



**NOTE:** Notices or additional information.

# Table of contents

5 Guidelines for safe and efficient use

## 01

### Custom-designed Features

- 13 Second screen
- 14 Quick Share
- 15 QuickMemo+
- 17 QSlide
- 17 Content sharing
- 19 Do not disturb
- 19 Ringtone ID

## 02

### Basic Functions

- 21 Product components and accessories
- 22 Parts overview
- 24 Turning on or off the power
- 25 Installing the SIM card
- 26 Inserting the memory card
- 28 Charging the battery
- 29 Using the battery efficiently
- 30 Touch screen
- 33 Home screen
- 40 Screen lock
- 44 Device encryption
- 45 Memory card encryption
- 46 Taking screenshots
- 46 Entering text

# 03

---

## Useful Apps

- 54 Installing and uninstalling apps
- 55 Recently uninstalled apps
- 55 Phone
- 59 Messaging
- 60 Camera
- 66 Gallery
- 68 Calculator
- 69 Weather
- 69 Downloads
- 69 Clock
- 71 Voice Recorder
- 72 Music
- 73 E-mail
- 74 Contacts
- 76 Calendar
- 77 File Manager
- 78 Tasks
- 78 Evernote
- 78 Cell Broadcast
- 78 FM Radio
- 79 LG Backup
- 80 RemoteCall Service
- 80 SmartWorld
- 81 Google apps

# 04

---

## Phone Settings

- 84 Settings
- 84 Networks
- 95 Sound & notification
- 96 Display
- 97 General

# 05

---

## Appendix

- 106 LG Language Settings
- 106 LG Bridge
- 107 Phone software update
- 109 FAQ
- 112 Anti-Theft Guide
- 113 More information

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

## Important information about the device

- Device apps and services are subject to change or cancellation without notice, depending on the provider's situation and the software version.
- When the device is turned on for the first time, an initial configuration takes place. The first booting time may be longer than usual.

## Read before use

- To purchase optional items, contact the LG Customer Information Centre for available dealers.
- The appearance and specifications of the device are subject to change without notice.
- Do not use LG products for other purposes than those originally intended. Using non-certified apps or software may damage the device and this is not covered by warranty.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-K500dsZ has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.493 W/kg (10 g) and when worn on the body is 1.430 W/kg (10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 5 mm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 5 mm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

## Product care and maintenance

- Always use genuine LG batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.
- Some contents and illustrations may differ from your device without prior notice.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.

- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the colour of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

## Efficient phone operation

### Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0 °C and 40 °C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

## Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. Make sure that you do not turn on or off the handset close to your ear. Also, make sure that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.



- Excessive sound pressure from earphones and headphones can cause hearing loss.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the device in hot or cold places, as this may deteriorate battery performance.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

## Precautions when using SIM cards

- Do not insert the SIM card into the device with the label or seal attached. This may cause damage.
- Do not remove the SIM card while using the device. This may damage the SIM card or the system.
- Take extra care to ensure that the SIM card is not scratched, bent, or damaged by magnet. This may delete files saved on the SIM card or cause device malfunctions.

## Precautions when using memory cards

- Make sure that the orientation is correct when inserting the memory card. Inserting using the wrong orientation may damage the card.



### Notice for Battery replacement

- For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Li-Ion Battery is a hazardous component which can cause injury.
- Battery replacement by non-qualified professional can cause damage to your device.



01


## **Custom-designed Features**

# Second screen

When the home main is turned off, you can see the useful information such as date, time, battery status and notifications.

## Feature of Second screen

- You can set the function on the second screen when main screen is turned on. (Recent apps, Quick Tools, App shortcuts, Music Player, Quick contacts, Upcoming plans and Signature)
- You can see notifications and use the function via second screen while you are use the entire screen apps.
- You can use the control panel during take a picture or recording.
- To turn on/off the second screen, flip over the device.

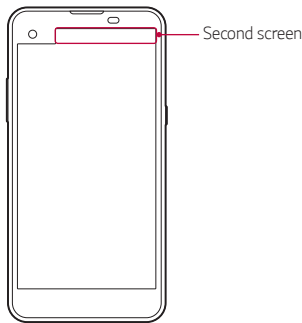

## Turning on and off Second screen feature

You can turn on and off the Second screen feature and select what to display.



Tap  > **Settings** > **Display** > **Second screen**.

- **Show when main screen on:** Provide the useful function for multi tasking.
- **Show when main screen off:** Always show the useful information and provide quick launch of frequently used functions.

- **More > Show time while content is shown:** Show the time and phone status while media content such as images and videos is shown.


## Quick Share

You can share a photo or video to the app you want immediately after taking them.

- 1 Tap  > , then take a photo or record a video.
- 2 Drag the Quick Share icon that appears after taking a picture or recording a video, and select an app to share it.  
Alternatively, tap and hold the Preview icon that appears after taking a picture or recording a video, and drag it to the Quick Share icon.



- The app displayed by the Quick Share icon may vary, depending on the type and frequency of access of the apps installed on the device.
- You can use this feature only when you take a picture or record a video in the auto mode. See *Auto mode* for details.

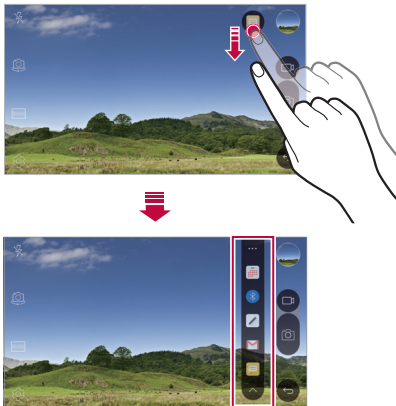











# QuickMemo+




## QuickMemo+ overview

You can make creative notes by using a variety options on this advanced feature of notepad, such as image management and screenshots, which are not supported by the conventional notepad.




## Creating a note

- 1 Tap  > **QuickMemo+**.
- 2 Tap  to create a note.
  - : Save a note.
  - : Undo the last action.
  - : Redo the last action you undid.
  - **T**: Enter a note by using the keypad.
  - : Write notes by hand.
  - : Erase handwritten notes.
  - : Zoom in or out, rotate or erase the parts of a handwritten note.
  - : Access additional options, including sharing and locking notes, changing the note pad style and inserting content.
- 3 Tap  to save the note.

## Writing notes on a photo





- 1 Tap  > **QuickMemo+**.
- 2 Tap  to take a photo, then tap **OK**.
  - The photo is automatically attached into the notepad.
- 3 Freely write notes on the photo.
- 4 Tap  to save the note.

## Writing notes on a screenshot

- 1 While viewing the screen you want to capture, drag the status bar downwards and then tap **Capture+**.
  - The screenshot appears as the notepad background theme. Memo tools appear at the top of the screen.
- 2 Take notes on the captured screen.
  - To crop and save a portion of the screen, tap  > **Slice** and specify a portion with the crop tool.
  - To attach a screenshot to the notepad, tap  > **Text**.
- 3 Tap  and save the notes to the location you want.
  - Saved notes can be viewed in either **QuickMemo+** or **Gallery**.
  - To save notes in the same location all the time, select the **Use as default app** checkbox and select an app.

## Managing folders

You can view notes grouped by the type of the notes.

- 1 Tap  > **QuickMemo+**.
- 2 At the top of the screen, tap  and select a menu item:
  - **All memos**: View all notes saved in **QuickMemo+**.
  - **My memos**: View notes created by **QuickMemo+**.
  - **Photo memos**: View notes created by .
  - **Capture+**: View notes created by **Capture+**.
  - **New category**: Add categories.
  - : Rearrange, add or delete categories. To change the name of a category, tap the category.



- Some folders do not appear when launching QuickMemo+ for the first time. Disabled folders are enabled and appear when they contain at least one related note.


# QSlide

You can display several apps simultaneously on the same screen and switch between them. For example, use the calculator or calendar when a video is playing.

When an app is running, tap **☰** > **QSlide**.



• This feature may not be supported by some apps.

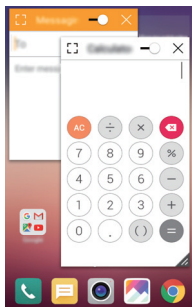


- **☰**: Turn off the QSlide mode to switch to full-screen mode.
- **○**: Adjust the opacity of the QSlide window. If the QSlide window is transparent, it will not respond to touch inputs.
- **X**: Close the QSlide window.
- **▲**: Adjust the size of the QSlide window.

## Content sharing

### Playing content

You can play content from your device on TV. Play saved content such as photos, music, and videos.

- 1 Connect your device and TV to the same Wi-Fi network.

- 2 Select a file from the **Gallery** or **Music** app and tap  > **Play on other device**.
- 3 Select the TV you want to connect to.





- To use Chromecast, update Google Play to the latest version.

## Sending or receiving files

You can send or receive files saved on your device to another LG device or tablet.



To receive files, drag the status bar downwards and then tap **File sharing**.

For devices that do not support File sharing, tap  > **Settings** > **Networks** > **Share & connect** > **File sharing** > **SmartShare Beam** and drag  to activate it.




- You can send files faster when both devices are connected to the same Wi-Fi network.
- You can send files to DLNA-compatible phones and tablets regardless if it is a LG device.

## Sending files to another device

- 1 Select a file and tap  > **SmartShare Beam**.  
Alternatively, tap  from the file list and select files then tap **SHARE** > **SmartShare Beam**.
- 2 Select a device from the list of nearby devices that support SmartShare Beam.
  - The file is sent to the device.

## Using nearby devices

You can view and play multimedia files saved on devices that are located near your device.



- 1 From the **Gallery** or **Music** app, select  > **Nearby devices**.
- 2 Select a device from the device list.

- If the desired device is not seen on the device list, check that DLNA is turned on, then tap **Search nearby devices**.

3 Play content saved on the selected device.



## Do not disturb

You can limit or mute notifications to avoid disturbances for a specific period of time.

- 1 Tap  > **Settings** > **Sound & notification** > **Do not disturb** and then drag  to activate it.
- 2 Tap **Sounds and vibrations** and select the mode you want:
  - **Priority only**: Receive sound or vibrate notifications for the selected apps. Even when **Priority only** is turned on, alarms still sound.
  - **Total silence**: Disable both the sound and vibration.

## Ringtone ID

You can set the device so that it plays an automatically composed ringtone for each incoming call from the selected contacts. This function is useful because you can know who are calling you by only hearing the ringtone.

- 1 Tap  > **Settings** > **Sound & notification** > **Ringtone ID** and then drag  to activate it.
- 2 Tap **Compose ringtones for** and select the desired option.



- The default ringtone plays for incoming calls from contacts except for the selected contact.



02

## **Basic Functions**

# Product components and accessories

Make sure that none of the following items are missing:

- Device
- Ejection pin
- Stereo headset
- USB cable
- Charger
- Quick Start Guide





- The items described above may be optional.
- The items supplied with the device and any available accessories may vary depending on the region or service provider.
- Always use genuine LG Electronics accessories. Using accessories made by other manufacturers may affect your device's call performance or cause malfunctions. This may not be covered by LG's repair service.



- If any of these basic items are missing, contact the dealer from which you purchased your device.
- To purchase additional basic items, contact the LG Customer Service Centre.
- To purchase optional items, contact the LG Customer Service Centre for available dealers.
- Some items in the product box are subject to change without notice.
- The appearance and specifications of your device are subject to change without notice.

# Parts overview

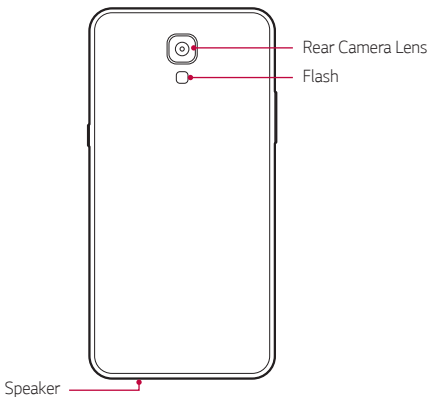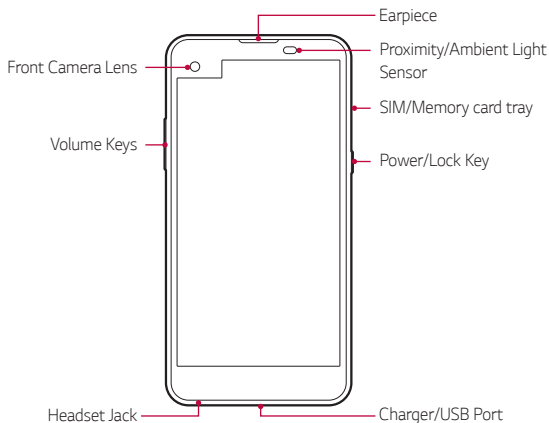

- Proximity/Ambient Light Sensor
  - Proximity sensor: The proximity light sensor turns off the screen and disables touch functionality when the device is in close proximity to the human body. It turns the screen back on and enables touch functionality when the device is outside a specific range.
  - Ambient light sensor: The ambient light sensor analyses the ambient light intensity when the auto-brightness control mode is turned on.
- Volume Keys
  - Adjust the Volume for ringtones, calls or notifications.
  - Gently press a Volume key to take a photo. To take continuous shots of photos, press and hold the Volume key.
  - Press the Volume Down (-) key twice to launch the **Camera** app when the screen is locked or turned off. Press the Volume Up (+) key twice to launch **Capture+**.
- Power/Lock Key
  - Briefly press the key when you want to turn on or off the screen.
  - Press and hold the key when you want to select a power control option.



- Some functions may be restricted for access, depending on the device specifications.
- Do not put heavy objects on the device or sit on it. Failure to do so may damage the touch screen feature.
- Screen-protective film or accessories may interfere with the proximity sensor.
- If your device is wet or is being used in a humid place, the touch sensor or buttons may not function properly.

# Turning on or off the power

## Turning on the power

When the power is turned off, press and hold the Power/Lock key.



- When the device is turned on for the first time, initial configuration takes place. The first booting time for the smart phone may be longer than usual.

## Turning off the power

Press and hold the Power/Lock key, then select **Power off**.

## Power control options

Tap and hold the Power/Lock key, then select an option.

- **Power off:** Turn off the device.
- **Power off and restart:** Restart the device.
- **Turn on Airplane mode:** Block telecommunication-related functions, including making phone calls, messaging and browsing the Internet. Other functions remain available.




- If the screen freezes or the device does not respond when you try to operate it, press and hold the Power/Lock key and Volume Down (-) key for about 10 seconds to restart your device.


# Installing the SIM card

Properly use the SIM card provided by your mobile service provider.


- 1 Insert the ejection pin into the hole on the card tray.

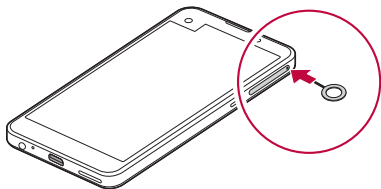


- 2 Pull out the card tray.

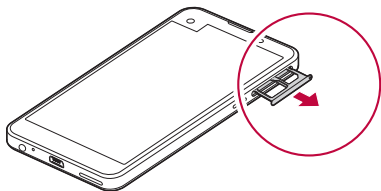

- 3 Put the SIM card on the card tray with the gold-coloured contacts facing downwards.

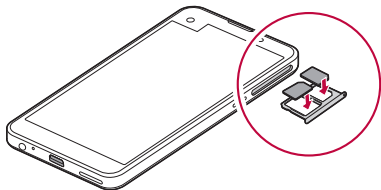

4 Insert the card tray back into the slot.

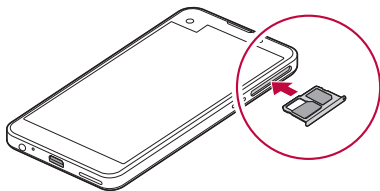

- Only Nano-SIM(Subscriber Identity Module) cards work with the device.
- For problem-free performance, it is recommended to use the phone with the correct type of SIM card. Always use a factory-made SIM card supplied by the operator.

## Precautions when using the SIM card

- Do not lose your SIM card. LG is not responsible for damage and other issues caused by loss or transfer of a SIM card.
- Be careful not to damage the SIM card when you insert or remove it.


## Inserting the memory card

The device supports up to a 2 TB microSD. Some memory cards may not be compatible with your device, depending on the memory card manufacturer and type.



- Some memory cards may not be fully compatible with the device. If you use an incompatible card, it may damage the device or the memory card, or corrupt the data stored in it.

- 1 Insert the ejection pin into the hole on the card tray.
- 2 Pull out the card tray.
- 3 Put the memory card on the card tray with the gold-coloured contacts facing downwards.

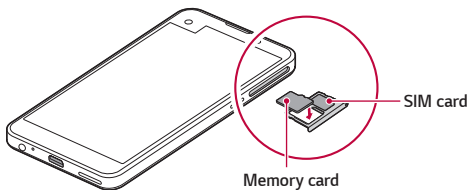

- 4 Insert the card tray back into the slot.



- Memory card is an optional item.
- Frequent writing and erasing data may shorten the lifespan of memory cards.

## Removing the memory card

Unmount the memory card before removing it for safety.

- 1 Tap **○** > **Settings** > **General** > **Storage & USB** > **△**.
- 2 Insert the ejection pin into the hole on the card tray.
- 3 Pull out the card tray and remove the memory card.




- Do not remove the memory card while the device is transferring or accessing information. This may cause data to be lost or corrupted, or may damage the memory card or the device. LG is not responsible for losses that result from the abuse or improper use of memory cards, including the loss of data.

# Charging the battery

Before using the device, fully charge the battery.

Connect one end of the charging cable to the charger, insert the other end of the cable into the cable port, and then plug the charger into a power socket.

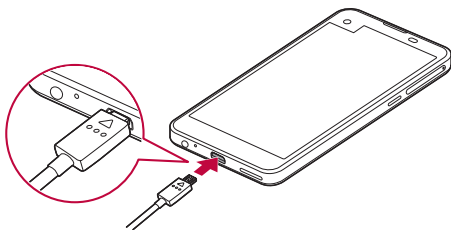

- Make sure to use the USB cable provided as a basic accessory.
- When connecting a USB cable, make sure that the icon on the cable faces up. Connecting the cable in the wrong way may damage the device.
- Make sure to use an LG-approved charger, battery and charging cable. Charging the battery with a third-party charger may cause the battery to explode or may damage the device.
- Using the device when it is charging may cause electric shock. To use the device, stop charging.



- Remove the charger from the power socket after the device is fully charged. This prevents unnecessary power consumption.
- Another way to charge the battery is by connecting a USB cable between the device and a desktop or laptop computer. This may take a longer time than charging the battery in the common way.
- Do not charge the battery by using a USB hub that is unable to maintain the rated voltage. Charging may fail or unintentionally stop.

## Using the battery efficiently

Battery lifespan may decrease if you keep many apps and functions running simultaneously and continuously.

Cancel background operations to increase battery life.

To minimise battery consumption, follow these tips:


- Turn off the Bluetooth® or Wi-Fi network function when not using them.
- Set the screen timeout to as short a time as possible.
- Minimise the screen brightness.
- Set a screen lock when the device is not used.
- To use a downloaded app, check the battery level.

# Touch screen

You can familiarise yourself with how to control your device by using touch screen gestures.

## Tapping

Lightly tap with your fingertip to select or run an app or option.

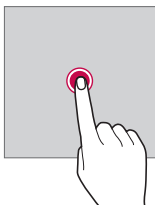


## Tapping and holding

Tap and hold for several seconds to run a hidden function.




## Double-tapping

Tap twice quickly to zoom in or out on a photo or map.

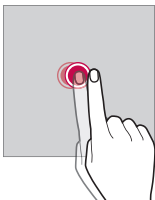


## Swiping

Tap and hold an item, such as an app or widget, then swipe it to another location. You can use this gesture to move an item.

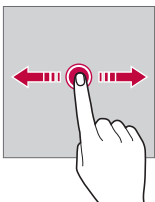



## Flicking

Gently tap and hold on the screen, then flick left or right to quickly move to another panel.

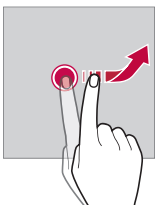

## Pinching and spreading

Pinch two fingers to zoom out such as on a photo or map. To zoom in, spread your fingers apart.

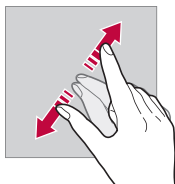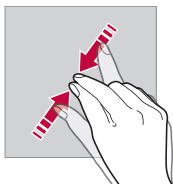


- Do not expose the touch screen to excessive physical shock. You might damage the touch sensor.



- A touch screen failure may occur if you use the device near a magnetic, metallic or conductive material.
- If you use the device under bright lights, such as direct sunlight, the screen may not be visible, depending on your position. Use the device in a shady location or a location with an ambient light that is not too bright and bright enough to read books.
- Do not press the screen with excessive force.
- Gently tap with your fingertip on the option you want.
- Touch control may not work properly if you tap while wearing a glove on or by using the tip of your fingernail.
- Touch control may not work properly if the screen is moist or wet.
- The touch screen may not function properly if a screen-protective film or accessory purchased from a common online or offline store is attached to the device.

# Home screen

## Home screen overview


The Home screen is the starting point for accessing various functions and apps on your device. Tap  on any screen to directly go to the Home screen.

You can manage all apps and widgets on the Home screen. Swipe the screen left or right to view all installed apps at a glance.

To search for an app, use Google search.

## Home screen layout

View all apps and organise widgets and folders on the Home screen.

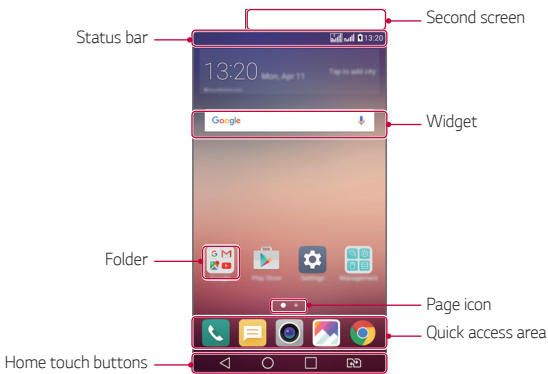

• The Home screen may vary, depending on the service provider or software version.

- **Second screen:** Second screen at the top of the screen the user can configure the desired app. Try to quickly and easily run your favorite app by setting the second screen.
- **Status bar:** View status icons, the time and the battery level.


- **Widget:** Add widgets to the Home screen to quickly access necessary information without bothering to run apps one by one.
- **Folder:** Create folders to group apps by your preferences.
- **Page icon:** View the total number of Home screen canvases and the currently displayed canvas which is highlighted.
- **Quick access area:** Fix main apps at the bottom of the screen so that they can be accessed from any Home screen canvas.
- **Home touch buttons**
  - ◀: Return to the previous screen. Close the keypad or pop-up windows.
  - ○: Tap to go to the Home screen. To launch **Google**, tap and hold.
  - □: View a list of recently used apps or run an app from the list. Use the **Clear all** option to delete all recently used apps. In some apps, tapping and holding the button will access additional options.
  - ↺: Choose which SIM card you are going to use. Tap and hold to configure the Dual SIM card settings.

## Editing Home touch buttons

You can rearrange Home touch buttons or add frequently used functions to Home touch buttons.





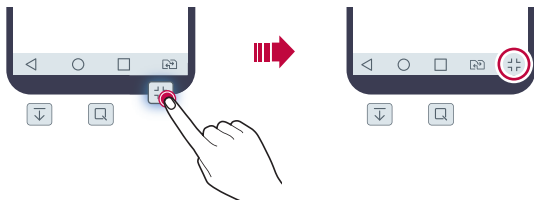









Tap ○ > **Settings** > **Display** > **Home touch buttons** > **Button combination** and customise settings.

- Several functions, including QSlide, Notification or Capture+, are provided. A maximum of five items can be added.



## Status icons

When there is a notification for an unread message, calendar event or alarm, the status bar displays the corresponding notification icon. Check your device's status by viewing notification icons displayed on the status bar.

- : No signal
- : Data is being transmitted over the network
- : Alarm is set
- : Vibrate mode is on
- : Bluetooth is on
- : Connected to a computer via USB
- : Battery level
- : Flight mode is on
- : Missed calls
- : Wi-Fi is on
- : Mute mode is on
- : GPS is on
- : Hotspot is on
- : No SIM card



- Some of these icons may appear differently or may not appear at all, depending on the device's status. Refer to the icons according to the actual environment in which you are using the device.
- Displayed icons may vary, depending on the area or service providers.


## Notifications panel

You can open the notifications panel by dragging the status bar downwards.

Use quick access icons in the notifications panel to easily and quickly turn a function on or off.


Drag left or right on the list of quick access icons to select the function icon you want.

- If you tap and hold the icon, the settings screen for the corresponding function appears.

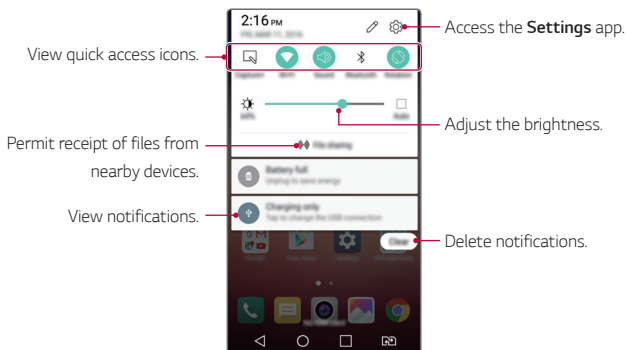

## Notification panel settings


You can select items to display on the notification panel.

Tap  on the notification panel.

- To rearrange quick access icons, tap and hold an icon, then drag it to another position.
- Select icons you want to display on the list.

## Switching the screen orientation

You can set the screen orientation to automatically switch, according to the device's orientation.

On the notification panel, tap **Rotation** from the quick access icon list. Alternatively, tap  > **Settings** > **Display** and activate **Auto-rotate screen**.

## Editing the Home screen


On the Home screen, tap and hold on an empty space, then start the desired function.


- To rearrange the Home screen canvases, tap and hold on a canvas, then drag it to another location.
- To add widgets to the Home screen, tap **Widgets** and drag a widget to the Home screen.
- To change Home screen settings, tap **Home screen settings** and customise options. See *Home screen settings* for details.
- To reinstall apps that have been uninstalled in the past 24 hours, tap **Uninstalled apps** and select an app from the list. See *Recently uninstalled apps* for details.

## Viewing the background theme

You can view only the background image by hiding apps and widgets on the Home screen.

Spread two fingers apart while holding down on the Home screen.

- To return to the original screen which displays apps and widgets, pinch your fingers on the Home screen or tap .

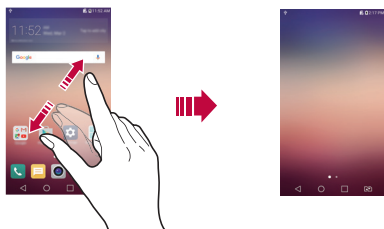

## Moving apps on the Home screen

On the Home screen, tap and hold an app, then drag it to another location.

- To keep frequently used apps at the bottom of the Home screen, tap and hold an app, then drag it to the quick access area at the bottom.
- To remove an icon from the quick access area, drag the icon to the Home screen.

## Using folders from the Home screen

### Creating folders

On the Home screen, tap and hold an app, then drag it over another app.

- A new folder is created and the apps are added to the folder.


## Editing folders

On the Home screen, tap a folder and then run the desired function.

- To edit the folder name and colour, tap the folder name.
- To remove an app from the folder, tap and hold the app and drag it to outside the folder. If only one app is left in the folder, the folder disappears automatically.

## Home screen settings

You can customise Home screen settings.

- 1 Tap  > **Settings** > **Display** > **Home screen**.
- 2 Customise settings:
  - **Select Home:** Select a Home screen mode.
  - **Wallpaper:** Change the Home screen background theme.
  - **Screen swipe effect:** Select an effect to apply when the Home screen canvas switches.
  - **Theme:** Set the screen theme. Download themes from SmartWorld.
  - **Sort apps by:** Sort apps by names or download date on the Home screen.
  - **Grid:** Change the app arrangement mode for the Home screen.
  - **Hide apps:** Select or deselect apps to hide from the Home screen.

# Screen lock

## Screen lock overview

Your device's screen turns off and locks itself if you press the Power/Lock key. This also happens after the device is left idle for a specified period of time.

If you press the Power/Lock key when a screen lock is not set, the Home screen appears immediately.


To ensure security and prevent unwanted access to your device, set a screen lock.



- Screen lock prevents unnecessary touch input on the device screen and reduces battery consumption. We recommend that you activate the screen lock while not using the device.

## Configuring screen lock settings

There are several options available for configuring the screen lock settings.

- 1 Tap  > **Settings** > **Display** > **Lock screen** > **Select screen lock** and then select the method you prefer.
- 2 Customise lock settings:
  - **None**: Deactivate the screen lock function.
  - **Swipe**: Slide on the screen to unlock the screen.
  - **Knock Code**: Tap the spaces of the screen in accordance with a pattern to unlock the screen.
  - **Pattern**: Draw a pattern to unlock the screen.

- **PIN:** Enter a numeric password to unlock the screen.
- **Password:** Enter an alphanumeric password to unlock the screen.



- To set screen lock using a pattern, first create a Google account or backup PIN. If you enter an incorrect pattern more than a specified number of times consecutively, you can unlock the screen by using your backup PIN or Google account.
- If a screen lock is set using a Knock Code, Pattern, PIN or password and you enter an incorrect PIN or password more than a specified number of times, password entry is blocked for 30 seconds.

## Lock screen settings

You can customise the following lock screen settings.

- 1 Tap > **Settings** > **Display** > **Lock screen**.
- 2 Customise settings:
  - **Select screen lock:** Select a screen lock method.
  - **Smart Lock:** Select trusted items so that if one of them occurs, the device is automatically unlocked.
  - **Screen swipe effect:** Set screen transition effects to apply when the screen is unlocked. This option appears when the screen lock method is set to Swipe.
  - **Wallpaper:** Change the lock screen background theme.
  - **Shortcuts:** Add an app shortcut and directly access the app from the lock screen by dragging the app outside the large circle. This option appears if the screen lock method is set to Swipe.
  - **Weather animation:** Display weather animations for the current location on the lock screen.
  - **Contact info for lost phone:** Display emergency contact information on the lock screen.

- **Lock timer:** Set the amount of idle time after which the device automatically locks.
- **Power key instantly locks:** Instantly lock the screen when the Power/Lock key is pressed.



- Available setting items may vary, depending on the selected screen lock method.

## KnockON

You can turn on or off the screen by double-tapping the screen.



- This option is available only on the Home screen provided by LG. It may not function properly on a custom launcher or on the Home screen installed by the user.
- When tapping the screen, use your fingertip. Do not use a fingernail.
- To use the KnockON feature, make sure that the proximity/light sensor is not blocked by a sticker or any other foreign substance.

## Turning on the screen

Double-tap the middle of the screen.

- Tapping the top or bottom of the screen may decrease the recognition rate.

## Turning off the screen

Double-tap on an empty space on the Home screen or Lock screen.

Alternatively, double-tap an empty space on the status bar.


## Knock Code

You can unlock the screen by creating your own Knock Code. When the screen is locked, you can directly access the Home screen by tapping the screen in a specified sequence.



- You can use your Knock Code, together with the KnockOn feature.
- If you enter an incorrect Knock Code more than a specified number of times consecutively, unlock by using your backup PIN or Google account.
- Make sure to use your fingertip when tapping the screen.

### Creating a Knock Code

- 1 Tap  > **Settings** > **Display** > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 Tap the squares in a pattern of your choice to create a Knock Code and tap **NEXT**.
- 3 Input the created Knock Code again for verification, then tap **CONFIRM**.
- 4 Set a backup PIN to use when the Knock Code is forgotten.

### Unlocking the screen with a Knock Code

Unlock the screen by inputting the Knock Code you have created.

Input your knock Code on the touch screen when the screen is turned off.

- It is also possible to enter a Knock Code when the screen is turned on.

# Device encryption

## Encrypting your device

It is possible to read, write and copy data even when device encryption is set. You can set the device with the lock settings so that it displays a user identification prompt when it is turned on.

## Precautions for device encryption

You can use the mobile phone lock on the lock screen to increase your device's protection level.



- If the mobile phone lock is turned on and an incorrect password is entered more than a specified number of times, the device will automatically initialise.
- If you forget your decryption password, initialise the device. Initialisation will delete all data saved before initialisation.
- Stopping encryption before it is complete may damage data.

# Memory card encryption

You can encrypt and protect data saved on the memory card. The encrypted data in the memory card cannot be accessed from another device.

- 1 Tap  > **Settings** > **General** > **Security** > **Encrypt SD card storage**.
- 2 Read the on-screen overview of memory card encryption and then tap **CONTINUE** to continue.
- 3 Select an option and tap **ENCRYPT NOW**:
  - **New data encryption**: Encrypt only data that is saved on the memory card after encryption.
  - **Full encryption**: Encrypt all the data currently saved on the memory card.
  - **Exclude media files**: Encrypt all files, except for media files such as music, photos and videos.



- To encrypt the memory card, make sure that a screen lock is set using a PIN or password.
- Once memory card encryption starts, some functions are not available.
- If the device is turned off while encryption is underway, the encryption process will fail, and some data may be damaged. Therefore, be sure to check whether the battery level is sufficient before starting encryption.
- Encrypted files are accessible only from the device where the files were encrypted.
- The encrypted memory card cannot be used on another LG device. To use the encrypted memory card on another mobile device, initialise the card.
- You can activate memory card encryption even when no memory card is installed into the device. Any memory card that is installed after encryption will automatically be encrypted.

# Taking screenshots

You can take screenshots of the current screen you are viewing.

## Via a shortcut

Press and hold the Power/Lock key and the Volume Down (-) key at the same time for at least two seconds.

- Screenshots can be viewed from the **Screenshots** folder in the **Gallery**.

## Via Capture+

On the screen where you want to take a screenshot, drag the status bar downwards, then tap **Capture+**.



- When the screen is turned off or locked, you can access **Capture+** by pressing the Volume Up (+) key twice. First tap **Settings** > **General** and then turn on **Shortcut key**.
- See *Writing notes on a screenshot* for details.

# Entering text

## Using Smart keyboard


You can use Smart keyboard to enter and edit text.

With Smart keyboard, you can view text as you type without bothering to alternate between the screen and a conventional keyboard. This allows you to easily find and correct errors when typing.



## Moving the cursor

With Smart keyboard, you can move the cursor to the exact position you want. When typing text, tap and hold on the space bar and then drag left or right until the cursor moves to the position you want in the text.

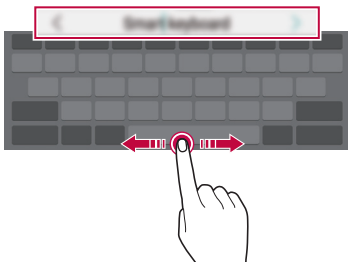


- This option is available only on the QWERTY keyboard.

## Suggesting words

Smart keyboard automatically analyses your usage patterns to suggest frequently used words as you type. The longer you use your device, the more precise the suggestions are.



Enter text, then tap a suggested word or gently drag the left or right side of the space bar upwards.

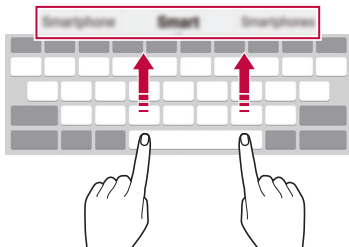
- The selected word is automatically entered. You do not need to manually type every letter of the word.



## Changing the QWERTY keyboard layout

You can add, delete or rearrange keys on the bottom row of the keyboard.

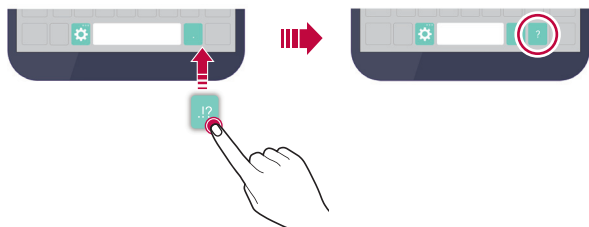

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **QWERTY keyboard layout**.  
Alternatively, tap  on the keyboard and tap **Keyboard height and layout** > **QWERTY keyboard layout**.
- 2 Tap a key on the bottom row, then drag it to another position.



- This option is available on the QWERTY, QWERTZ and AZERTY keyboards.
- This function may not be supported for some languages.

## Customising the keyboard height



You can customise the keyboard height to maximise hand comfort when typing.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Keyboard height**.  
Alternatively, tap  on the keyboard and tap **Keyboard height and layout** > **Keyboard height**.
- 2 Adjust the keyboard height.



## Selecting a landscape keyboard mode


You can select a landscape keyboard mode from several choices.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Keyboard type in landscape**.  
Alternatively, tap  on the keyboard and tap **Keyboard height and layout** > **Keyboard type in landscape**.
- 2 Select a keyboard mode.

## Splitting the keyboard

You can split the keyboard in half and place each piece on either side of the screen when the screen is in landscape mode.

Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Split keyboard**.

Alternatively, tap  on the keyboard and tap **Keyboard height and layout** > **Split keyboard**.





- Rotate the device to landscape mode to split the keyboard to both sides. To merge or split the keyboard, pinch together or spread apart your fingers on the keyboard.




## One-handed operation mode

You can move the keyboard to one side of the screen so that you can use the keyboard with one hand.



- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **One-handed operation**.

Alternatively, tap  on the keyboard and tap **Keyboard height and layout** > **One-handed operation**.

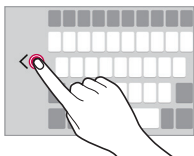
- 2 Press the arrow displayed next to the keyboard to move the keyboard in the direction you want.



## Entering text by using voice


On the keyboard, tap and hold  and then select .



- To maximise the voice command recognition, speak clearly with the correct pronunciation and accent.
- To enter text with your voice, make sure that your device is connected to a network.
- To select the language for voice recognition, tap  > **Settings** > **Language** on the voice recognition screen.
- This function may be not supported, or the supported languages may differ depending on the service area.



## Changing the keyboard

You can change the input language and the keyboard type for each language.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Select languages**.
- 2 Select a language and customise the keyboard type.

## Copy and Paste

You can cut or copy text from an app, and then paste the text into the same app. Or, you can run other apps and paste the text into them.





- 1 Tap and hold around the text you want to copy or cut.
- 2 Drag  /  to specify the area to copy or cut.
- 3 Select either **CUT** or **COPY**.
  - Cut or copied text is automatically added to the Clip Tray.
- 4 Tap and hold the text input window, then select **PASTE**.



- If there is no item that has been copied or cut, the **PASTE** option will not appear.

## Clip Tray

If you copy or cut an image or text, it is automatically saved to the Clip Tray and can be pasted to any space at any time.

- 1 On the keyboard, tap and hold  and select .  
Alternatively, tap and hold the text input window, then select **CLIP TRAY**.
- 2 Select and paste an item from the Clip Tray.
  - A maximum of 20 items can be saved to the Clip Tray.
  - Tap  to lock saved items in order to not delete them; even when the maximum quantity is exceeded. A maximum of ten items can be locked. To delete locked items, unlock them first.
  - Tap  to delete the items saved to the Clip Tray.



- The Clip Tray may not be supported by some apps downloaded by the user.



03

## Useful Apps

# Installing and uninstalling apps

## Installing apps

Access an app store to search and download apps.

- You can use **SmartWorld**, **Play Store** or the app store provided by your mobile service provider.



- Some app stores may require you to create an account and sign in.
- Some apps may charge fees.
- If you use mobile data, you may be charged for data usage, depending on your pricing plan.
- **SmartWorld** may not be supported depending on the service provider or service area.

## Uninstalling apps

Uninstall apps that you no longer use from your device.



- Some apps cannot be uninstalled by users.

## Uninstalling with the tap and hold gesture

On the Home screen, tap and hold the app to uninstall, then drag it over **Uninstall** at the top of the screen.

- If apps were uninstalled within 24 hours from now, you can reinstall them. See *Recently uninstalled apps* for details.

## Uninstalling by using the settings menu



Tap  > **Settings** > **General** > **Apps**, select an app, then tap **Uninstall**.

## Uninstalling apps from the app store

To uninstall an app, access the app store from which you download the app and uninstall it.

# Recently uninstalled apps

You can view the uninstalled apps on the Home screen. You can also reinstall apps which were uninstalled within 24 hours from now.

- 1 Tap  > **Recently uninstalled apps**.
- 2 Activate the desired function:
  - **Reinstall**: Reinstall the selected app.
  - : Remove the uninstalled apps permanently from the device.







- Uninstalled apps are automatically removed from the device 24 hours after it was uninstalled. If you want to reinstall the uninstalled apps, you must download them again from the app store.
- This feature is activated on the default Home screen only. If you uninstall apps while using the EasyHome screen or other launcher, they are immediately and permanently removed from the device.

# Phone

## Voice call

Make a phone call by using one of the available methods, such as manually entering a phone number or making a call from the contact list or the list of recent calls.

## Making a call from the keypad

- 1 Tap  >  > **Dial**.
- 2 Make a call by using a method of your choice:
  - Enter a phone number and tap .
  - Tap and hold a speed-dial number.
  - Search for a contact by tapping the initial letter of a contact name in the contact list, and then tap .



- To enter "+" when making an international call, tap and hold number 0.
- See *Adding contacts to the speed dial list* for details on how to add phone numbers to the speed dial list.

## Making a call from the contact list

- 1 Tap > > **Contacts**.
- 2 From the contact list, select a contact and tap .

## Answering a call

To answer a call, drag to the outside of the circle on the incoming call screen.

- When the stereo headset is connected, you can make calls by using the call/end button on the headset.
- To end a call simply by pressing the Power/Lock key, tap > **Settings** > **Networks** > **Call** > **Answer and end calls**, then turn on **End calls with the Power key**.

## Rejecting a call


To reject an incoming call, drag to the outside of the circle on the incoming call screen.

- To send a rejection message, drag the rejection message to the outside of the circle.
- To add or edit a rejection message, tap > **Settings** > **Networks** > **Call** > **Decline and reject calls** > **Decline with message**.
- When a call is coming in, press the Volume key or Power/Lock key to mute ringtone or vibration.

## Viewing missed calls

If there is a missed call, the status bar at the top of the screen displays



To view missed call details, drag the status bar downwards. Alternatively, tap  >  > **Call logs**.

## Functions accessible during a call

During a call, you can access a variety of functions by tapping on-screen buttons:




- **Contacts:** Move directly to the contact list from the call screen. It is possible to view the contact list during a call.
- **End:** End a call.
- **Dialpad:** Display or hide the dial pad.
- **Speaker:** Turn on the speakerphone function.
- **Mute:** Mute your voice so that your voice cannot be heard by the other party.
- **Bluetooth:** Use a Bluetooth device to make calls. Make sure that a Bluetooth device is connected.
- **⋮** : Access many call options.



- Available setting items may vary, depending on the area and service provider.

## Making a three-way calling

You can make a call to another contact during a call.



- 1 During a call, tap  > **Add call**.
- 2 Enter a phone number and tap 
  - The two calls are displayed on the screen at the same time, and the first call is put on hold.
- 3 To switch to another call, tap another number on the screen.  
To start a conference call, tap .



- You may be charged a fee for each call. Consult your mobile service provider for more information.

## Viewing call records

To view recent call records, tap  >  > **Call logs**. Then, you can use the following functions:




- To view detailed call records, select a contact. To make a call to the selected contact, tap .
- To delete call records, tap  > **Delete**.



- The displayed call duration may differ from the call charge. Contact your mobile service provider for details.

## Configuring call options

You can configure various call options.

- 1 Tap  >  > **Dial** or **Call logs**.
- 2 Tap  > **Call settings** and then configure the options to suit your preferences.






# Messaging

## Sending a message

You can create and send messages to your selected contacts or all of your contacts using the Messaging app.




- Sending messages abroad may incur additional charges. Consult with your mobile service provide for more information.

- 1 Tap  > .
- 2 Tap .
- 3 Specify a recipient and create a message.
  - To attach files, tap .
  - To access optional menu items, tap .
- 4 Tap **Send** to send the message.

## Reading a message

You can view exchanged messages organised by contact.

- 1 Tap  > .
- 2 Select a contact from the message list.

## Configuring messaging settings

You can change messaging settings to suit your preferences.

- 1 Tap  > .
- 2 Tap  > **Settings** from the message list.

# Camera

## Starting the camera

You can take a photo or record a video to keep the memorable moments.


Tap  > .



- Before taking a photo, wipe the camera lens with a microfibre cloth. If your finger touches the camera lens, you may get blurry photos.
- If the battery level is lower than 5%, charge the battery before using the camera.
- Images included in this user guide may be different from the actual device.
- Photos and videos can be viewed or edited from **Gallery**. See [Gallery overview](#) for details.

## Switching between cameras

You can switch between the front and rear cameras to suit your shooting environment.


On the camera screen, tap  or drag the screen either up or down or left or right to switch between the front and rear camera.



- Use the front camera to take selfies. See [Taking selfies](#) for details.




## Simple mode

You can take photos by simply tapping the screen.

- 1 On the camera screen, tap  (in the second screen).
- 2 Frame your subject and then tap on the screen.


## Auto mode

You can take photos or record videos by selecting a variety of shooting modes and options.


- 1 On the camera screen, tap  (in the second screen).
- 2 To take a photo, tap . Or to record a video, tap .








## Taking a photo

- 1 Select a shooting mode, and tap the subject to focus the camera on.
- 2 Tap  to take a photo.  
Alternatively, press a volume key.






- When the screen is turned off or locked, start the camera by pressing the Volume Down (-) key twice. To activate this function, tap  > **Settings** > **General** and turn on **Shortcut key**.

## Recording a video

- 1 Select a shooting mode, and tap the subject to focus the camera on.
- 2 Tap 
  - To take a photo while recording a video, tap .
  - To pause the video recording, tap . To resume the video recording, tap .
- 3 Tap  to end the video recording.

## Panorama

You can create a panoramic photo by moving the camera in one direction to photograph and stitch continuous shots of for a wide view.

- 1 On the Auto mode screen, tap **MODE** > .
- 2 Tap  and then slowly move the camera in one direction.
  - Move the device by following the direction of the arrow in the guideline.
- 3 Tap  to end shooting.



## Burst shot

You can take continuous shots of photos to create moving pictures.


On the Auto mode screen, tap and hold .

- Continuous shots are taken at a fast speed while  is held down.
















- Up to thirty (30) continuous photos can be taken.

## Customising camera options

You can customise a variety of camera options to suit your preferences. On the Auto mode screen, tap .



• Available options vary depending on the selected camera mode.

	Select an aspect ratio for photos or quality for videos.
	Set the timer to automatically take photos after a specified period of time.
	Take photos with voice commands. (Available choices: Cheese, Smile, Kimchi, LG)
	Display guide grids so that you can take photos or record videos based on the horizontal and vertical reference lines.
	Set the locations where you want to save photos and videos. These options appear when an external memory card is inserted. <ul style="list-style-type: none"><li>• : Save to the internal storage.</li><li>• : Save to the external memory card.</li></ul>
	Customise auto-shooting settings. These options appear when using the front camera. <ul style="list-style-type: none"><li>• : Shoot using the Gesture shot feature.</li><li>• : Shoot when the camera detects a face.</li></ul>
	Flip images. These options appear when using the front camera. <ul style="list-style-type: none"><li>• : Do not flip the image.</li><li>• : Flip the image horizontally.</li></ul>

## Taking selfies

You can use the front camera to view your face on the screen and take selfies.




- When using the front camera, you can change in camera options how selfies are taken. See *Customising camera options* for details.

## Gesture shot

You can take selfies by using gestures.

Show your palm to the front camera and then clench your fist.


- In three seconds, a photo is taken.

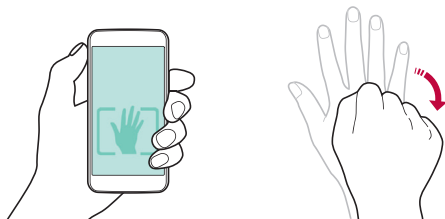

- To use this function, make sure that [👏] is selected in camera options.
- An alternative way to take gesture shots is to clench your fist and then open it towards the front camera.
- Make sure that your palm and fist are within the reference line so that the camera can detect them.

## Interval shot

You can take continuous selfies.

While using the front camera, tap and hold . Alternatively, show your palm to the camera, then clench your fist twice quickly.

- Four photos are taken at three second interval.






## Taking auto-selfies

You can use the face detection feature to take selfies easily and conveniently. You can set the device so that, when you look at the screen, the front camera detects your face and takes a selfie automatically.

- When the front camera detects your face, the frame turns white. Then if you stop moving, the frame turns blue and the front camera takes a photo.





- Tap  then tap  until  appears to activate the auto-selfie function.

# Gallery

## Gallery overview


You can view and manage photos and videos saved on your device.

- 1 Tap  > .
    - Saved photos and videos are displayed by the folder.
- 2 Tap a folder and select a file.
    - View the selected file in full-screen mode.
    - Swipe left or right on the displayed photo or video screen to view the previous or next file.






- Some file formats may not be supported, depending on the installed software.
- Some files may not be opened due to encoding.
- Files that exceed the size limit may cause an error.

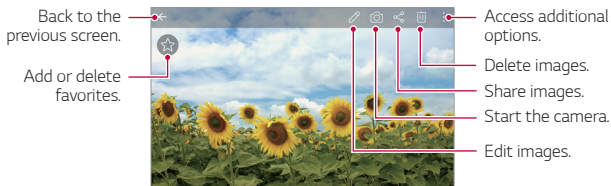
## Viewing photos



## Editing photos

- 1 While viewing a photo, tap .
- 2 Use a variety of effects and tools to edit the photo.
- 3 Tap  to apply changes.
- 4 Tap **SAVE** to save changes.
  - The changes are overwritten to the original file.
  - To save the edited photo as another file, tap  > **Save copy**.

## Playing a video

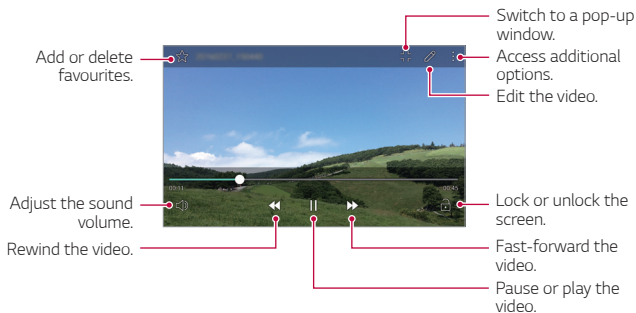




- To adjust the sound volume, drag the right side of the video screen up or down.
- To adjust the screen brightness, drag the left side of the video screen up or down.



## Deleting files

You can delete files by using one of the following options:

- Tap and hold a file from the file list, then tap **Delete**.
- Tap  from the file list, then select files.




## Sharing files

You can share files by using one of the following options:

- While viewing a photo or video, tap  to share the file by using the method you want.
- Tap  from the file list to select files and share them using the method you want.





## Calculator



You can use two types of calculators: the simple calculator and the scientific calculator.

- 1 Tap  > **Tools** > **Calculator**.
- 2 Use the keypad to make a calculation.
  - To use the scientific calculator, tap  > **Scientific calculator**.
  - To view calculation history tap  > **Calculation history**.

# Weather

You can view the weather information for a particular area.

- 1 Tap  > **Tools** > **Weather**.
- 2 Tap  and add the city you want.
  - On the detailed weather screen, tap  / , or swipe the screen left or right to view the weather for other cities.

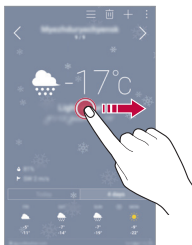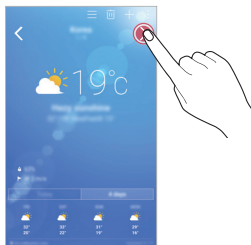

# Downloads



You can view, delete or share files downloaded via the Internet or apps.

Tap  > **Tools** > **Downloads**.


# Clock

## Alarm

You can set an alarm to trigger it at a specified time.



- 1 Tap  > **Clock** > **Alarm**.
- 2 Tap  to add a new alarm.
- 3 Configure the alarm settings and tap **SAVE**.



- If you select a previously set alarm, you can edit the alarm.
- To delete an alarm, tap  at the top of the screen. Alternatively, tap and hold the alarm.


## World clock

You can view the current time in cities around the world.

- 1 Tap  > **Clock** > **World clock**.
- 2 Tap  and add a city.


## Timer

You can set the timer to trigger an alarm after a specified period of time.

- 1 Tap  > **Clock** > **Timer**.
- 2 Set the time and tap **Start**.
  - To suspend the timer, tap **Stop**. To resume the timer, tap **Resume**.
  - To stop the timer settings, tap **Reset**.
- 3 Tap **Stop** to stop the timer alarm.





## Stopwatch

You can use the stopwatch to record a lap time.



- 1 Tap  > **Clock** > **Stopwatch**.
- 2 Tap **Start** to initiate the stopwatch.
  - To record a lap time, tap **Lap**.
- 3 Tap **Stop** to suspend the stopwatch.
  - To resume the stopwatch, tap **Resume**.
  - To delete all the stopwatch records, tap **Reset**.

# Voice Recorder

You can record and save your voice or others' voices from important events. Recorded voice files can be played back or shared.


- 1 Tap  > **Tools** > **Voice Recorder**.
- 2 Tap .
  - To add an event, tap **Event** and add an event to the date you want.
- 3 Tap  to end recording.
  - The file is saved automatically and the pre-listen screen appears.
- 4 Tap  to play the recorded voice.




- To pause recording, tap .
- To save the location details of recording, tap **Location**.
- If you tap , recorded voice files appear. You can play a recorded voice file from the list.

# Music

You can play and manage music files saved on your device.

- 1 Tap  > **Music**.
- 2 Select a category.
- 3 Select a music file.

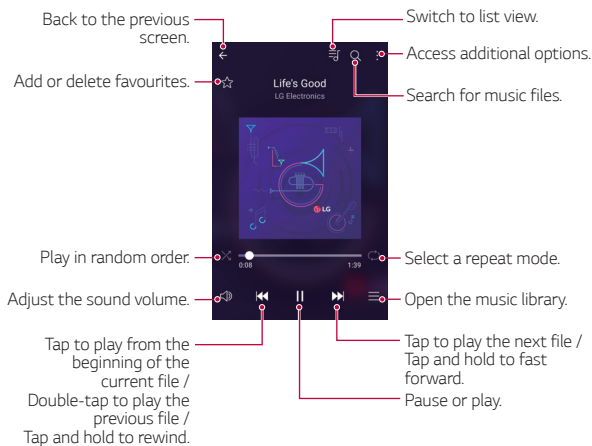

- Some file formats may not be supported, depending on the installed software.
- Files that exceed the size limit may cause an error.
- Music files may be protected by international copyright owners or copyright laws. You may have to obtain legal permission before copying a music file. To download or copy a music file, first check the copyright law for the relevant country.

# E-mail

## E-mail overview


You can register an email account to your device and then you can check and send emails from your device.



- If you use mobile data, you may be charged for data usage fee depending on your pricing plan. Check with your mobile service provider for more information.


## Registering email accounts

When you use the email app for the first time, register your email account.


- 1 Tap  > **E-mail**.
- 2 Select an email service provider.
- 3 Enter your email address and password and then tap **NEXT** to register your account
  - To manually register an email account or to register email accounts not found in the list, tap **MANUAL SETUP**.

## Managing email accounts


To view or edit your email account settings, tap  > **Settings**.

- To add an account, tap **Add account**.
- To delete an account, tap  > **Remove account**.





## Opening another email account

If several email accounts are registered and you want to view another account, tap  and select another one from the account list.

## Checking email

- 1 Tap  and select a mail box.
- 2 Select an email from the email list.
  - The email message appears.


## Sending email

- 1 Tap .
- 2 Enter the email address of a recipient.
- 3 Enter a subject and message.
  - To attach files, tap .
  - To access optional menu items, tap .
- 4 Tap  to send the email.

# Contacts


## Contacts overview

You can save and manage contacts.

Tap  > **Contacts**.


## Adding contacts

### Adding new contacts


- 1 On the contact list screen, tap .
- 2 Enter contact details and tap **SAVE**.

## Importing contacts

You can import contacts from another storage device.

- 1 On the contact list screen, tap  > **More** > **Manage contacts** > **Import**.
- 2 Select the source and target locations of the contact you want to import, and then tap **OK**.
- 3 Select contacts and tap **IMPORT**.

## Adding contacts to the speed dial list

- 1 On the contact list screen, tap  > **Speed dial**.
- 2 Tap **Add contact** from a speed-dial number.
- 3 Select a contact.


## Searching for contacts

You can search for contacts by using one of the following options:

- On the contact list screen, enter a contact name in the search box.
- Scroll the contact list up or down.
- From the index of the contact list screen, tap the initial letter of a contact.

## Contacts list

### Editing contacts

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap  and edit details.
- 3 Tap **SAVE** to save changes.

## Deleting contacts

- 1 On the contact list screen, tap and hold a contact.
- 2 Tap **Delete contact**.

## Adding favourites

You can register frequently used contacts as favourites.

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap ☆.

## Creating groups

- 1 On the contact list screen, tap **Groups** > ⋮ > **New group**.
- 2 Enter a new group name.
- 3 Tap **Add members**, select contacts, then tap **ADD**.
- 4 Tap **SAVE** to save the new group.

# Calendar



## Calendar overview

You can use the calendar to manage events and tasks.

## Adding events

- 1 Tap ○ > **Calendar**.
- 2 Select a date and then tap ⊕.
- 3 Enter event details and tap **SAVE**.
  - If you tap a date from the calendar and the date contains events, a pop-up window appears showing a list of the events. Tap an event from the pop-up window to view the event details.

## Syncing events


Tap  > **Calendars to display** >  > **Calendars to sync**, and select a calendar to sync.





- When your events are saved from the device to your Google account, they are automatically synced with the Google calendar, too. Then, you can sync other devices with the Google calendar in order to make those devices have the same events that your device has and to manage your events on those devices.

## Event pocket

You can use the event pocket to create events.

Tap  to open the event pocket and then drag content to a date in the calendar.

- : Manage images, text, notes and temporarily saved events. You can also share text, images and notes from another app and save them to the event box. If you tap **POCKET** when creating an event, the event is temporarily saved to the event pocket.
- : Manage tasks that have no deadline, such as events.



## File Manager

You can view and manage files saved on your device or cloud.

- 1 Tap  > **Tools** > **File Manager**.
- 2 Tap  and select the desired storage location.

## Tasks

You can register tasks to your device to easily manage schedules.

- 1 Tap  > **Tasks**.
- 2 Tap  to add a task.
- 3 Enter task details and then tap **SAVE**.

## Evernote

You can write and collect important information and then share them with other devices that support **Evernote**.

Tap  > **Evernote**.


## Cell Broadcast

You can view real-time text broadcasts on emergency situations, such as typhoons, floods and earthquakes.

Tap  > **Cell Broadcast**.

## FM Radio

You can listen to FM radio.



Tap  > **Tools** > **FM Radio**.



- To use this app, first connect a headset to the device. The headset becomes the radio antenna.
- This function may not be supported depending on the area.

# LG Backup

You can back up, restore and move the data saved on your device.

- 1 Tap  > **Management** > **LG Backup**.  
Alternatively, tap  > **Settings** > **General** > **Backup & reset** > **LG Backup**.
- 2 Follow the on-screen instructions to select whether to back up data in the preset backup folder on the device or to copy data to other devices.



- Initialising your device may delete backup files saved in internal storage. To minimise data loss, copy important backup files from the LG Backup folder in the internal storage to a computer or external storage.



- Data in a Google account will not be backed up. When you synchronise your Google account, Google apps, Google contacts, Google calendar, Google memo app data and apps downloaded from Play store are stored on the Drive app automatically.
- Backup files are saved with the file extension \*.lbf under the LG Backup folder on the memory card or internal storage.
- Fully charge the battery before backing up or restoring data to avoid unintentional powering off during the process.

# RemoteCall Service

Your device can be remotely diagnosed for resolving issues. First, make a phone call to the LG Customer Service Centre as follows:



- To use this function, first you must agree to usage of the function.
- If you use mobile data, you may be charged for data usage depending on your pricing plan.

- 1 Tap **○ > Management > RemoteCall Service**.
- 2 Connect a call to LG Customer Service Centre.
- 3 After the call connects, follow the service associate's instructions to enter a six-digit access number.
  - Your device is remotely connected and remote support service starts.

# SmartWorld

You can download a variety of games, audio content, apps and fonts provided by LG Electronics. Customise your device to suit your preferences by using Home themes, keyboard themes and fonts.




- If you use mobile data, you may be charged for data usage fee depending on your pricing plan.
- This feature may not be supported depending on the device manufacturer, the service provider or the area.

- 1 Tap **○ > SmartWorld**.
- 2 Enter your ID and password, then sign in.
- 3 Select and download content items.

## Downloading SmartWorld app

If **SmartWorld** app is not installed, follow these steps to download it.

- 1 Tap  > **Settings** > **General** > **About phone** > **Common** > **Update Center** > **App Updates**.
- 2 From the list, select **SmartWorld** and tap **Download**.

## Google apps

You can use Google apps by setting a Google account. The Google account registration window appears automatically when you use a Google app for the first time. If you do not have a Google account, create one from your device. For details on how to use an app, see the Help in the app.



• Some apps may not work, depending on the area and service provider.

### Chrome

Sign in to Chrome and import opened tabs, bookmarks and address bar data from a computer to your device.

### Docs

Create documents or edit documents created online or from another device. Share and edit documents together with others.

### Drive

Upload, save, open, share and organise files from your device. Files accessible from apps can be accessed from anywhere, including online and offline environments.

### Gmail

Register your Google email account to your device to check or send email.

### Google

Use search function provided by Google to search web sites and files stored on your device by entering keywords or via voice.

## Hangouts

Exchange messages. Make a video call with an individual or a group.

## Maps

Find your location or the location of a place on the map. View geographical information.

## Play Movies & TV

Use your Google account to rent or purchase movies. Purchase content and play it anywhere.

## Photos

View or share photos or albums saved on your device.

## Play Music

Purchase music files from **Play Store**. Play music files saved on your device.

## Sheets

Create spreadsheets or edit spreadsheets created online or from another device. Share and edit spreadsheets together with others.

## Slides

Create presentation material or edit presentation material created online or from another device. Share and edit presentation material together with others.

## Voice Search

Search information on Google by saying a keyword, instead of typing a keyword.

## YouTube

Search and play videos. Upload videos on YouTube to share them with people around the world.



04



## **Phone Settings**

# Settings

You can customise the device settings in accordance with your preferences.

Tap  > **Settings**.



- Tap  and enter a keyword in the search box to access a setting item.
- Tap  to change the view mode. This user guide assumes that you are using the **Tab view**.

## Networks

### Dual SIM card


You can configure Dual SIM settings.

- 1 On the settings screen, tap **Networks** > **Dual SIM card**.
- 2 Customise the following functions:
  - **SIM card 1**: Change the name and icon of the SIM card 1.
  - **Activate slot 1**: Activate or deactivate the SIM card slot 1.
  - **SIM card 2**: Change the name and icon of the SIM card 2.
  - **Activate slot 2**: Activate or deactivate the SIM card slot 2.
  - **SIM card colour theme**: Change the colour themes for the SIM cards.
  - **Cost save mode**: Activate or deactivate the cost save mode. In the cost save mode, if you make a call to a contact to which a specific SIM is assigned, this SIM is used for the call even if the other SIM is active, for example, it is using mobile data.
  - **Mobile data**: Select a SIM card you want to use for mobile data service. You can also turn off this function.
  - **Data roaming**: Select this option to enable the device to use mobile data when you are roaming outside your home network area.

## Wi-Fi


You can connect to nearby devices over a Wi-Fi network.

### Connecting to a Wi-Fi network

- 1 On the settings screen, tap **Networks** > **Wi-Fi**.
- 2 Drag  to activate it.
  - Available Wi-Fi networks appear automatically.
- 3 Select a network.
  - You may need to enter the network's Wi-Fi password.
  - The device skips this process for previously accessed Wi-Fi networks. If you do not want to automatically connect to a certain Wi-Fi network, tap and hold the network and then tap **Forget network**.


### Wi-Fi network settings

On the settings screen, tap **Networks** > **Wi-Fi**.

- **Switch to mobile data:** If the mobile data connection function is activated but the device cannot connect to the Internet via Wi-Fi connection, the device automatically connects to the Internet via the mobile data connection.
-  : Customise Wi-Fi network settings.


### Wi-Fi Direct

You can connect your device to other devices that support Wi-Fi Direct to share data directly with them. You do not need an access point. You can connect with more than two devices by using Wi-Fi Direct.

- 1 On the settings screen, tap **Networks** > **Wi-Fi** >  > **Advanced Wi-Fi** > **Wi-Fi Direct**.
  - Nearby devices that support Wi-Fi Direct automatically appear.
- 2 Select a device.
  - Connection occurs when the device accepts the connection request.



- The battery may drain faster when using Wi-Fi Direct.

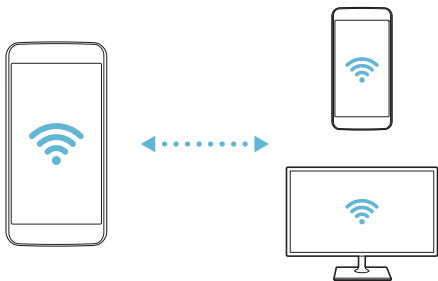

## Bluetooth

You can connect your device to nearby devices that support Bluetooth to exchange data with them. Connect your device to a Bluetooth headset and a keyboard. This makes it easier to control the device.

### Pairing with another device

- 1 On the settings screen, tap **Networks > Bluetooth**.
- 2 Drag  to activate it.
  - Available devices appear automatically.
  - To refresh the device list, tap **SEARCH**.




- Only devices with the searching option enabled are displayed on the list.

- 3 Select a device from the list.
- 4 Follow the on-screen instructions to perform authentication.



- This step is skipped for previously accessed devices.

## Sending data via Bluetooth

- 1 Select a file.
  - You can send multimedia files or contacts.
- 2 Tap  > **Bluetooth**.
- 3 Select a target device for the file.
  - The file is sent as soon as the target device accepts it.



- File sharing processes may differ, depending on the file.


## Mobile data

You can turn on or off mobile data. You can also manage mobile data usage.

### Turning on mobile data

- 1 On the settings screen, tap **Networks > Mobile data**.
- 2 Drag  to activate it.

### Customising mobile data settings

- 1 On the settings screen, tap **Networks > Mobile data**.
- 2 Customise the following settings:
  - **Mobile data:** Set to use data connections on mobile networks.
  - **Limit mobile data usage:** Set a limit for mobile data usage to block mobile data if the limit is reached.
  -  : Customise mobile data settings.

## Call

You can customise call settings, such as voice call and international call options.



- Some features may not be supported, depending on the device manufacturer or service provider.

- 1 On the settings screen, tap **Networks > Call**.
- 2 Customise the settings.

## File sharing

You can send and receive files between your device and other LG devices or tablets.



- See *Sending or receiving files* for details.

- 1 On the settings screen, tap **Networks > Share & connect > File sharing**.
- 2 Customise the following settings:
  - **LG X Screen**: Change the device name.
  - **Save to**: Set the destination folder to save files sent from other devices.
  - **File sharing**: Permit receipt of files sent from other devices.
  - **SmartShare Beam**: Share files with other devices via SmartShare Beam.

## Media server

You can share media content on your device with nearby devices that support DLNA.

- 1 On the settings screen, tap **Networks > Share & connect > Media server**.
- 2 Customise the following settings:

- **Content sharing:** Share content on your device with nearby devices.
- **LG X Screen:** Set your device's name.
- **Content to share:** Select the type of media content to share with other devices.
- **Allowed devices:** View a list of devices permitted to access content on your device.
- **Not-allowed devices:** View a list of devices not permitted to access content on your device.

## LG AirDrive

You can use your LG account from a computer to manage files saved on the device. You do not need a USB connection.

- 1 On the settings screen, tap **Networks > Share & connect > LG AirDrive**.
- 2 Use a single LG account to sign in to LG Bridge on the computer and **LG AirDrive** on the device.
  - LG Bridge software can be downloaded from *www.lg.com*.
- 3 Manage files on the device from the computer.

## Printing

You can print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

- 1 Select the content such as images or documents.
- 2 Tap **⋮ > More > Print > ▼ > All printers...**, and then select a printer.


## USB tethering

You can connect the device to another device via USB and share mobile data.

- 1 Connect your device and other devices via USB cable.
- 2 On the settings screen, tap **Networks > Tethering > USB tethering** and then drag  to activate it.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your mobile service provider for more information.
- When you connect to your computer, download the USB driver from [www.lg.com](http://www.lg.com) to the computer.
- You cannot send or receive files between your device and a computer while USB tethering is turned on. Turn off USB tethering to share files.
- Operating systems that support tethering are Windows XP or higher, or Linux.

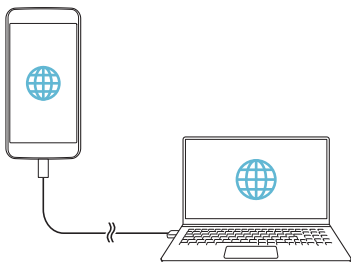


## Wi-Fi hotspot

You can set the device as a wireless router so that other devices can connect to the internet by using your device's mobile data.

- 1 On the settings screen, tap **Networks > Tethering > Wi-Fi hotspot** and then drag  to activate it.
- 2 Tap **Set up Wi-Fi hotspot**, and enter the Wi-Fi ID (SSID) and password.
- 3 Turn on Wi-Fi on the other device, and select the name of the device network on the Wi-Fi list.
- 4 Enter the network password.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your mobile service provider for more information.
- More information is available at this web site:  
<http://www.android.com/tether#wifi>

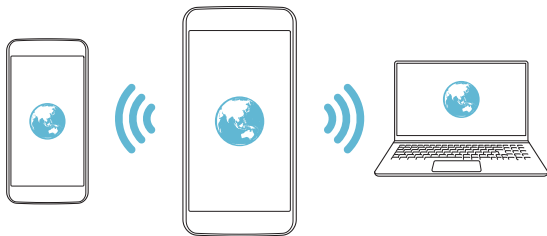


## Bluetooth tethering

A Bluetooth-connected device can connect to the internet by using your device's mobile data.

- 1 On the settings screen, tap **Networks > Tethering > Bluetooth tethering** and then drag  to activate it.
- 2 Turn on Bluetooth on both devices, and pair them.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your mobile service provider for more information.
- More information is available at this web site:  
[http://www.android.com/tether#Bluetooth\\_tethering](http://www.android.com/tether#Bluetooth_tethering)

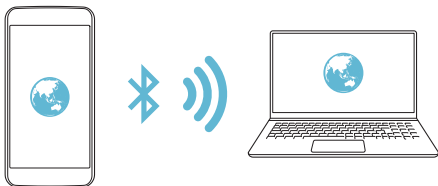

## Help

You can view help on using tethering and hotspots.

On the settings screen, tap **Networks > Tethering > Help**.

## Airplane mode

You can turn off the call and mobile data functions. When this mode is on, functions that do not involve data, such as games and music playback, remain available.

- 1 On the settings screen, tap **Networks > More > Airplane mode**.
- 2 Tap **TURN ON** in the confirmation screen.

## Mobile networks

You can customise mobile data settings.

- 1 On the settings screen, tap **Networks > More > Mobile networks**.
- 2 Customise the following settings:
  - **Network mode:** Select a network type.
  - **Access point names:** View or change the access point for using mobile data services. To change the access point, select a choice from the access point list.
  - **Network operators:** Search for network operators and connect automatically to a network.

## VPN

You can connect to a safe virtual network, such as an IntraNet. You can also manage connected virtual private networks.

### Adding VPN

- 1 On the settings screen, tap **Networks > More > VPN**.



- Be cautious that if the screen lock is unlocked, all VPN information saved on the device are erased.

- 2 Tap **Add VPN network**.



- If the screen is not locked, a notification screen appears. Tap **SETTINGS** from the notification screen and lock the screen. See *Configuring screen lock settings* for details.

- 3 Enter VPN details and tap **SAVE**.

### Configuring VPN settings

- 1 Tap a VPN from the **VPNS** list.
- 2 Enter the VPN user account details and tap **CONNECT**.
  - To save the account details, select the **Save account information** checkbox.

# Sound & notification

You can customise sound, vibrate and notification settings.

On the settings screen, tap **Sound & notification** and customise the following settings:

- **Sound profile:** Change the sound mode to sound, silent, or vibrate only.
- **Volume:** Adjust the sound volume for various items.
- **SIM1 ringtone/SIM2 ringtone:** Select a ringtone for incoming calls. Add or delete ringtones.
- **Ringtone ID:** Create a ringtone for an incoming call from a particular contact. See *Ringtone ID* for details.
- **Sound with vibration:** Set the device to vibrate and play a ringtone simultaneously.
- **SIM1 vibration type/SIM2 vibration type:** You can select a vibration type or make your own vibration pattern.
- **Do not disturb:** Set the time, range and app type to receive notification messages. Receive notification messages only on particular days of the week. See *Do not disturb* for details.
- **Lock screen:** Display or hide a notification message on the lock screen. You can also hide private information.
- **Apps:** Select the apps that can show their notification messages on the screen, and set the priorities of those apps in regard to notification messages.
- **More > SIM1 notification sound/SIM2 notification sound:** Select a notification ringtone. Set music saved on the device as a notification ringtone.
- **More > Sound effects:** Select a sound effect to play when you tap the dial pad, select an option, or lock or unlock the screen.
- **More > Message/call voice notifications:** Set the device to read the caller information or message content via voice.

# Display

You can customise detailed settings for each screen type.

On the settings screen, tap **Display** and customise the following settings:

- **Second screen:** Customise settings for Second screen. See *Second screen* for details.
- **Home screen:** Customise settings for the Home screen. See *Home screen* for details.
- **Lock screen:** Customise lock screen settings. See *Screen lock* for details.
- **Home touch buttons:** Rearrange Home touch buttons or change their background colours. Hide Home touch buttons on the screen.
- **Font type:** Change the font face.
- **Font size:** Change the font size.
- **Bold text:** Bold the text on the screen.
- **Brightness:** Use the slide bar to change the device's screen brightness.
- **Auto:** Set the device so that the screen brightness is automatically adjusted in accordance with the surrounding light intensity.
- **Auto-rotate screen:** Automatically rotate the screen according to the device's orientation.
- **Screen timeout:** Automatically turn off the screen when the device is left idle for a specified period of time.
- **More > Daydream:** Display a screen saver when the device is connected to the holder or charging. Select a screen saver type to display.
- **More > Motion sensor calibration:** Correct the angle and speed of the motion sensor to improve the tilt accuracy and speed of the sensor.



- When correcting the motion sensor, make sure to place the device on a flat surface. Failure to do so may cause motion sensor related errors, such as automatic screen rotation.

## General

### Language & keyboard

You can customise language and keyboard settings for your device.

- 1 On the settings screen, tap **General** > **Language & keyboard**.
- 2 Customise the following settings:
  - **Language:** Select a language to apply for the device.
  - **Current keyboard:** View the keyboard type currently in use. Select a keyboard to use when entering text.
  - **LG Keyboard:** Customise LG keyboard settings.
  - **Google voice typing:** Configure the options for text dictation by Google.
  - **Text-to-speech output:** Configure the settings for text-to-speech output.
  - **Pointer speed:** Adjust the pointer speed of a mouse or trackpad.
  - **Reverse buttons:** Reverse the right mouse button to perform primary direct-manipulation actions.

## Location

You can customise settings to access your location information from a particular app.

- 1 On the settings screen, tap **General > Location**.
- 2 Customise the following settings:
  - **Mode:** Select a method to provide your location information.
  - **RECENT LOCATION REQUEST:** View apps that recently requested location information.
  - **Camera:** Save location information when taking photos or recording videos.
  - **Google Location History:** Configure the Google location history settings.

## Accounts & sync


You can add or manage accounts, including a Google account. You can also sync particular apps or user information automatically.

- 1 On the settings screen, tap **General > Accounts & sync**.
- 2 Customise the following settings:
  - **Auto-sync data:** Sync all the registered accounts automatically.
  - **ACCOUNTS:** View a list of registered accounts. To view or change details of an account, tap the account.
  - **ADD ACCOUNT:** Add accounts.

## Accessibility


You can manage accessibility plug-ins installed on your device.

- 1 On the settings screen tap **General > Accessibility**.
- 2 Customise the following settings:
  - **Vision > TalkBack**: Set the device to notify screen status or actions via voice.
  - **Vision > Message/call voice notifications**: Set the device to read the caller information or message content via voice.
  - **Vision > Font size**: Change the font size.
  - **Vision > Bold text**: Bold the text on the screen.
  - **Vision > Touch zoom**: Zoom in or out by tapping the screen three times.
  - **Vision > Screen colour inversion**: Increase the display colour contrast for people with low vision.
  - **Vision > Screen colour adjustment**: Adjust the display colour.
  - **Vision > Grayscale**: Switch the screen to greyscale mode.
  - **Vision > End calls with the Power key**: End a call by pressing the Power/Lock key.
  - **Hearing > Captions**: Turn on the subtitle service when playing videos for the hearing impaired.
  - **Hearing > Flash alerts**: Set the device to notify you with a blinking light for incoming calls and notifications.
  - **Hearing > Turn off all sounds**: Turn off all sounds and lower volume on receiver.
  - **Hearing > Audio type**: Select the audio type.
  - **Hearing > Sound balance**: Adjust the audio output balance. Use the slide bar to change the balance.
  - **Motor & cognition > Touch assistant**: Turn on the touch board to make buttons and gestures easier to use.

- **Motor & cognition > Touch and hold delay:** Adjust the touch input time.
- **Motor & cognition > Touch and hold for calls:** Answer or decline calls by tapping and holding the call button instead of dragging it.
- **Motor & cognition > Screen timeout:** Turn off the screen automatically when the device is left idle for a specified period of time.
- **Motor & cognition > Touch control areas:** Limit the touch area so that only a particular portion of the screen can be controlled by touch input.
- **Accessibility features shortcut:** Quickly access a frequently used function by tapping  three times.
- **Auto-rotate screen:** Automatically change the screen orientation according to the physical position of the device.
- **Switch Access:** Create key combinations to control your device.

## Shortcut key

You can use the volume keys to directly launch apps when the screen is turned off or locked.

- 1 On the settings screen, tap **General > Shortcut key**.
- 2 Drag  to activate it.
  - Press the Volume Down (-) key twice to launch the **Camera** app when the screen is locked or turned off. Press the Volume Up (+) key twice to launch **Capture+**.

## Google services

You can use Google settings to manage your Google apps and account settings.

On the settings screen, tap **General > Google services**.

## Security

- 1 On the settings screen, tap **General** > **Security**.
- 2 Customise the following settings:
  - **Content lock:** Set the method to lock files in **Gallery** or **QuickMemo+**.
  - **Encrypt phone:** Set the device password for privacy. Create a PIN or password to enter each time the device is turned on. See *Encrypting your device* for details.
  - **Encrypt SD card storage:** Encrypt the memory card to prevent use on another device. See *Memory card encryption* for details.
  - **Set up SIM card lock:** Lock or unlock the USIM card, or change the password (PIN).
  - **Password typing visible:** Display a password as you enter it.
  - **Phone administrators:** Allow privileges to restrict the control or use of the device to particular apps.
  - **Unknown sources:** Allow the installation of apps from non-Play Store apps.
  - **Verify apps:** Block the installation of harmful apps. Display a warning message when a harmful app is installed.
  - **Storage type:** View the storage type where the security certificate will be saved.
  - **Certificate management:** Manage the security certificate saved on the device.
  - **Trust agents:** View and use trust agents installed on the device.
  - **Screen pin:** Fix the app screen so that only the currently active app can be used.
  - **Usage access for apps:** View details on usage of apps on the device.


## Date & time

You can customise date and time settings for your device.

- 1 On the settings screen, tap **General** > **Date & time**.
- 2 Customise the settings.


## Storage & USB

You can view and manage internal storage on the device or storage space of the memory card.

- 1 On the settings screen, tap **General** > **Storage & USB**.
- 2 Customise the following settings:
  - **DEVICE STORAGE:** View the total storage space and free space in the device's internal storage. View a list of apps in use and the storage capacity for each app.
  - **PORTABLE STORAGE:** View the total storage space and free space in the memory card. This option appears only when a memory card is inserted. To unmount the memory card, tap .

## Battery & power saving

You can view the current battery information or turn on power-saving mode.

- 1 On the settings screen, tap **General** > **Battery & power saving**.
- 2 Customise the following settings:
  - **Battery usage:** View the battery usage details. To view more details, select a specific item.
  - **Battery percentage on status bar:** Display the remaining battery level as a percentage on the status bar.
  - **Battery saver:** Reduce battery consumption by cutting down some device settings, such as the display brightness, speed and vibration intensity. The status bar displays  when power-saving mode is on.

## Memory

You can view the average amount of memory usage over a certain period of time and the memory occupied by an app.

- 1 On the settings screen, tap **General > Memory**.
- 2 Tap ▼ to set a time slot to retrieve data.

## Apps

You can view a list of installed apps. Shut down or delete apps, if necessary.

- 1 On the settings screen, tap **General > Apps**.
- 2 Select an app and perform actions.

## Backup & reset

You can back up data saved on your device to another device or account. Reset the device, if necessary.

- 1 On the settings screen, tap **General > Backup & reset**.
- 2 Customise the following settings:
  - **LG Backup:** Back up and restore all data saved on the device. See *LG Backup* for details.
  - **Back up my data:** Back up your app data, Wi-Fi password and other settings to the Google server.
  - **Backup account:** View the current backup account in use.
  - **Automatic restore:** Automatically restore backup settings and data when reinstalling an app.
  - **Network settings reset:** Reset Wi-Fi, Bluetooth and other network settings.
  - **Factory data reset:** Reset all settings for the device and delete data.



- Resetting your device deletes all data on it. Enter your device name, Google account and other initial information again.

## About phone

You can view information about your device, such as the name, status, software details and legal information.

On the settings screen, tap **General > About phone** and view information.

## Regulatory and safety

You can view regulatory marks and related information on your device.

On the settings screen, tap **General > Regulatory and safety**.



05

## **Appendix**

# LG Language Settings

Select a language to use on your device.

- Tap  > **Settings** > **General** > **Language & keyboard** > **Language**, and select a language.

## LG Bridge

### LG Bridge overview

LG Bridge is an app that helps you manage the photos, songs, videos and documents saved on your LG smartphone from your computer conveniently. You can back up contacts, photos and more to the computer or update the device software.



- See LG Bridge help for details.
- The supported features may vary depending on the device.
- LG USB driver is a necessary program to connect your LG smartphone with the computer and is installed when you install LG Bridge.

### LG Bridge functions

- Manage the files on the device from a computer via Wi-Fi connection or mobile data connection.
- Back up data from the device to a computer or restore data from a computer to the device via USB cable connection.
- Update the device software from a computer via USB cable connection.

## Installing LG Bridge on a computer

- 1 Go to *www.lg.com* from your computer.
- 2 In the search bar, enter the name of your device.
- 3 Click **Download Centre** > **LG Bridge**, and download the setup file.
  - Click **Details** to view the minimum requirements for installing LG Bridge.

## Phone software update

### LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp>, select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable during the upgrade may seriously damage your mobile phone.



- LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

## LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

First check the software version on your mobile phone:


**Settings > General > About phone > Common > Update Center > Software Update > Check now for update.**



- Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.
- This feature depends on your network service provider, region and country.

# FAQ

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM card error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6-12 months old. If so, change your SIM or USIM card at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you entered do not match	
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Downloaded application causes a lot of errors.	Remove the application.	<ol style="list-style-type: none"><li>1. Tap  &gt; <b>Settings</b>.</li><li>2. Tap the <b>General &gt; Apps</b>.</li><li>3. Tap the app &gt; <b>Uninstall</b>.</li></ol>

<b>Message</b>	<b>Possible causes</b>	<b>Possible corrective measures</b>
Calls not available	Dialling error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be turned on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different outlet.
	Charger defective	Replace the charger
	Wrong charger	Use only original LG accessories.
Number not allowed.	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive/ send SMS & photos	Memory full	Delete some data, such as applications or messages from your phone to make more memory available.

<b>Message</b>	<b>Possible causes</b>	<b>Possible corrective measures</b>
Files do not open	Unsupported file format	Check the supported file formats.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or no interruptions mode.

# Anti-Theft Guide

Set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google account or screen lock information can use the device.

All you need to make sure your device is protected is:

- Set a screen lock: If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- Add your Google account on your device: If your device is wiped but you have your Google account on it, the device can't finish the setup process until your Google account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google account password if you need to do a factory reset. This ensures that you or someone you trust is doing the reset.



- Do not forget your Google account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.

# More information

## Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.

## Regulatory and safety

For regulatory details, go to **Settings > General > Regulatory and safety** on your phone.

## Trademarks

- Copyright© 2016 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.

## Declaration of conformity

Hereby, **LG Electronics** declares that this **LG-K500dsZ** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**.

A copy of the Declaration of Conformity can be found at  
*<http://www.lg.com/global/declaration>*

## Disposal of your old appliance



- 1 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 2 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 3 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

## Disposal of waste batteries/accumulators



- 1 This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
- 2 All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
- 4 For more detailed information about disposal of your old batteries/accumulators, please contact your city office, waste disposal service or the shop where you purchased the product.



CE0168