



USER GUIDE

LM-G810EA

Copyright ©2020 LG Electronics Inc. All rights reserved.

אודות מדריך למשתמש זה

תודה שבחרת מוצר זה של LG. קרא בעיון מדריך למשתמש זה לפני השימוש במכשיר בפעם הראשונה, כדי להבטיח שימוש בטוח והולם.

- השתמש תמיד באביזרים מקוריים של LG. הפריטים שסופקו מיועדים למכשיר זה בלבד וייתכן שהם לא תואמים למכשירים אחרים.
- התיאורים מבוססים על הגדרות ברירת המחדל של המכשיר.
- יישומי ברירת המחדל במכשיר כפופים לעדכונים, וייתכן שהתמיכה ביישומים אלה תופסק ללא כל הודעה מראש. אם יש לך שאלות כלשהן על יישום שסופק עם המכשיר, פנה למרכז השירות של LG. עבור יישומים שהותקנו על-ידי המשתמש, פנה לספק השירות הרלוונטי.
- שינוי מערכת ההפעלה של המכשיר או התקנת תוכנה ממקורות לא רשמיים עלול לגרום נזק למכשיר ולגרום להרס נתונים או לאובדן נתונים. פעולות אלה יפרו את הסכם הרישיון של LG ויבטלו את האחריות שלך.
- תכנים ואיורים מסוימים עשויים להיראות שונים מאלה שבמכשיר, בהתאם לאזור, לספק השירות, לגרסת התוכנה ולגרסת מערכת ההפעלה, והם כפופים לשינוי ללא הודעה מוקדמת.
- תוכנות, שמע, טפטים, תמונות ופריטי מדיה אחרים שסופקו יחד עם המכשיר שלך מורשים לשימוש מוגבל. אם תחלץ חומר זה ותשתמש בו למטרות מסחריות או אחרות, אתה עלול להפר חוקי זכויות יוצרים. כמשתמש, אתה נושא באחריות מלאה לשימוש לא חוקי במדיה.
- ייתכן שיחולו חיובים נוספים תמורת שירותי נתונים, כגון שליחת הודעות, העלאה, הורדה, סנכרון אוטומטי ושירותי מיקום. כדי למנוע חיובים נוספים, בחר תוכנית נתונים מתאימה לצרכיך. פנה אל ספק השירות לקבלת פרטים נוספים.

הודעות מנחות

אזהרה: מצבים שעלולים לגרום לפציעה של המשתמש ושל גורמי צד שלישי.



זהירות: מצבים שעלולים לגרום לפציעה קלה או לנזק למכשיר.



הערה: הערות או מידע נוסף.



תוכן העניינים

6 הנחיות לשימוש בטוח ויעיל

01

תכונות הניתנות להתאמה אישית

מחוות אוויר	14
תכונות המצלמה	19
תכונות גלריה	32
איכות הקול ואפקטים	38
Floating Bar	38
Google Assistant	39
Hand ID	41
זיהוי טביעת אצבע	44
Face Unlock	47
התכונה 'ריבוי משימות'	50
AOD (always-on display)	51
Quick Help	52
הערות בנושא תכונות של עמידות במים	52

02

פונקציות בסיסיות

רכיבי מוצרים ואביזרים	56
סקירה כללית של החלקים	57
הדלקה או כיבוי	61
התקנת כרטיס ה-SIM	62
הכנסת כרטיס הזיכרון	65
הוצאת כרטיס הזיכרון	66
סוללה	66
מסך המגע	69
מסך ראשי	72
נעילת מסך	81
הצפנת כרטיס זיכרון	86
יצירת צילומי מסך	87
הזנת טקסט	88
שיתוף תוכן	92
נא לא להפריע	94

יישומים שימושיים

התקנה והסרת התקנה של יישומים	96
יישום סל המיחזור	97
קיצורי דרך של יישומים	98
טלפון	99
הודעות	102
מצלמה	103
גלריה	122
אנשי קשר	127
QuickMemo+	129
שעון	131
לוח שנה	133
משימות	133
נגן מוסיקה	134
מחשבון	135
ThinQ	135
מפעיל המשחק	135
LG Health	136
דוא"ל	137
הקלטת שמע ב-HD	139
מנהל הקבצים	140
Smart Doctor	141
LG Mobile Switch	141
יישום סל המיחזור	141
SmartWorld	142
שירות התראות חירום	142
יישומי Google	143

הגדרות

הגדרות	147
רשת ואינטרנט	147
התקנים מחוברים	154
צליל	159
תצוגה	160
מסך הנעילה ואבטחה	162
פרטיות	164
מיקום	165
הרחבות	165
שימוש חכם בדיגיטל ובקרת חירום	169
יישומים והודעות	169
סוללה	170
אחסון	171
חשבונות	171
חיפוש	171
המערכת	172
נגישות	175

הגדרות השפה של LG	179
LG Bridge	179
עדכון תוכנת הטלפון	180
מדריך למניעת גניבה	182
פרטי הודעה על תוכנת	183
קוד פתוח	
מידע בנושאי תקינה	183
(מספר הזיהוי של התקן, תיוג	
אלקטרוני וכולי)	
סימנים מסחריים	184
הצהרת בטיחות לייזר	185
הצהרת תאימות	186
מידע נוסף	186
שאלות נפוצות	188

הנחיות לשימוש בטוח ויעיל

הקפד לקרוא הנחיות פשוטות אלה. אי עמידה בהנחיות אלו עלולה להיות מסוכנת או בלתי חוקית.

למקרה של תקלה, המכשיר שלך מכיל כלי תוכנה שיאסוף יומן תקלות. כלי זה אוסף רק נתונים ספציפיים לתקלה, כגון עוצמת אות, מיקום מזהה התא בעת ניתוק פתאומי של השיחה ויישומים שנטענו. היומן משמש רק לסיוע בזיהוי הגורם לתקלה. יומנים אלה מוצפנים, ורק מרכז תיקונים מוסמך של LG יוכל לגשת אליהם במקרה שתצטרך למסור את המכשיר לתיקון.

חשיפה לאנרגיית תדר רדיו

מידע על חשיפה לגלי רדיו ושיעור ספיגה סגולית (SAR).

מכשיר זה תוכנן לעמוד בדרישות הבטיחות הרלוונטיות לחשיפה לגלי רדיו. דרישות אלו מבוססות על קווים מנחים מדעיים, ואלה כוללים שולי בטיחות המיועדים להבטיח את בטיחותם של כל בני האדם, בלא קשר לגילם או למצב בריאותם.

- הנחיות החשיפה לגלי רדיו משתמשות ביחידת מידה הנקראת "שיעור ספיגה סגולית" (SAR). בדיקות SAR מבוצעות באמצעות שיטות מתוקננות, כאשר המכשיר משדר ברמת העוצמה המרבית המאושרת עבורו בכל תחומי התדרים שבשימוש.
- אף כי עשויים להיות הבדלים בין רמות ה-SAR של דגמי מכשירים שונים של LG, כולם מתוכננים לעמוד בהנחיות המתאימות של חשיפה לגלי רדיו.
- מגבלת ה-SAR המומלצת על-ידי הוועדה הבין-לאומית להגנה מפני קרינה בלתי מייננת (ICNIRP) היא ממוצע של 2 ואט/ק"ג על כל 10 גר' של רקמה.
- ערך ה-SAR הגבוה ביותר עבור דגם זה שנמדד לשימוש באוזן הוא 0.498 ואט/ק"ג (10 גר'), וכאשר הוא נישא על הגוף, ערך זה עומד על 1.416 ואט/ק"ג (10 גר').

- מכשיר זה עומד בהנחיות החשיפה ל-RF כשמשמשים בו בתנחת השימוש הרגילה ליד האוזן או כשהוא ממוקם לפחות 5 מ"מ מהגוף. כאשר נעשה שימוש בנרתיק נשיאה או בתפס או מנשא לחגורה, אסור שתהיה בהם מתכת כלשהי, והמרחק בין המכשיר לגוף צריך להיות לפחות 5 מ"מ. כדי לשדר קובצי נתונים או הודעות, מכשיר זה מחייב חיבור איכותי לרשת. במקרים מסוימים עלול שידור קבצי נתונים או הודעות להיות מושהה עד שחיבור כזה יהיה זמין. הקפד על שמירת הוראות המרחק המינימלי המוזכרות לעיל עד לסיום השידור.

טיפול במוצר ותחזוקה

- השתמש רק באביזרים הכלולים באריזה, שאושרו על ידי LG. LG אינה מספקת אחריות לכל נזק או כשל שיגרמו כתוצאה משימוש באביזרים של חברות צד שלישי.
- חלק מהתוכן והאיוורים עשויים להיראות שונה מהמכשיר שברשותך, והם כפופים לשינוי ללא הודעה מראש.
- אין לפרק יחידה זו. כאשר נדרש תיקון, פנה לטכנאי שירות מוסמך.
- תיקונים במסגרת האחריות, לפי שיקול דעתה של LG, עשויים לכלול חלקים או לוחות חלופיים, חדשים או מחודשים, ובלבד שהם מצוידים בפונקציונליות זהה לזו של החלקים המוחלפים.
- אין לקרב את המכשיר למכשירים חשמליים כגון טלוויזיות, מכשירי רדיו ומחשבים אישיים.
- יש לשמור את היחידה הרחק ממקורות חום כדוגמת רדיאטורים או תנורי בישול.
- אין להפיל את היחידה.
- אין לאפשר זעזוע מכני או חבטה.
- יש לכבות את המכשיר בכל מקום שבו נדרש הדבר על-ידי תקנות מיוחדות. לדוגמה, אין להשתמש במכשיר בבתי חולים, שכן הפעלתו עלולה להשפיע על פעולת מכשור רפואי רגיש.
- אין לאחוז במכשיר בידיים רטובות בזמן טעינתו. אחיזה במצב כזה עלולה לגרום להתחשמלות ולהסב נזק כבד למכשיר.
- אין לטעון את הטלפון ליד חומר דליק, מכיוון שהמכשיר עלול להתחמם ולעלות באש.
- יש להשתמש במטלית יבשה לניקוי חלקו החיצוני של המכשיר (אין להשתמש בחומרים ממסים כגון בנזן, מדלל או אלכוהול).

- אין לטעון את המכשיר כאשר הוא נמצא על-גבי מצעים או ריפוד.
- יש לטעון את המכשיר באזור מאוורר היטב.
- אין לחשוף יחידה זו לכמות מוגזמת של עשן או אבק.
- אין להחזיק את המכשיר בסמוך לכרטיסי אשראי או כרטיסי נסיעה; הנתונים בפס המגנטי עלולים להיפגם.
- אין להקיש על המסך באמצעות חפצים חדים, שכן הדבר עלול לגרום נזק למכשיר.
- אין לחשוף את המכשיר לנוזלים או ללחות.
- יש לנקוט זהירות בשימוש באביזרים, כמו אוזניות. אין לגעת באנטנה שלא לצורך.
- אם זכוכית המכשיר שבורה או סדוקה, אל תיגע בה או תנסה להסיר אותה ואל תשתמש במכשיר. האחריות אינה מכסה נזקים שנגרמו לתצוגת הזכוכית כתוצאה מפגיעה ושימוש לרעה.
- המכשיר שלך הוא מכשיר אלקטרוני המייצר חום במהלך הפעלה רגילה. בהיעדר אוורור הולם, מגע ישיר וממושך מאוד של העור עלול לגרום לאי-נוחות או לכוויות קלות. לפיכך, יש לנקוט זהירות בהחזקת המכשיר במהלך ההפעלה או מיד אחריה.
- אם המכשיר נרטב, נתק אותו מיד והנח לו להתייבש לגמרי. אל תנסה להאיץ את תהליך הייבוש בעזרת מקור חום חיצוני, כמו תנור, מיקרוגל או מייבש שיער.
- הנזלים שחדרו למכשיר ישנו את צבע תווית המוצר שבתוך המכשיר. כתב האחריות אינו מכסה נזק למכשיר כתוצאה מחשיפה לנוזלים.
- מכשיר נייד זקוק לזרימת אוויר תקינה כדי לפזר את החום. מגע ישיר עם העור וזרימת אוויר לא תקינה סביב המכשיר עלולים לגרום לחום-יתר של המכשיר. חייב להיות מרחק של לפחות סנטימטר אחד בין המכשיר לבין גוף המשתמש.
- מנע חדירת אבק של חומרים זרים כלשהם לכניסת המטען/כבל USB. הוא עלול לגרום להתחממות או לשרפה.
- הימנע מחשיפת ההתקן ללחץ אוויר נמוך ברום גבוה.
- אסור לחשוף את ההתקן ללחץ אוויר נמוך מאוד. אחרת, הוא עלול לגרום לפיצוץ הסוללה או לנזילת נוזלים או גזים דליקים.

הפעלה יעילה של המכשיר

מכשירים אלקטרוניים

- כל המכשירים עלולים לספוג הפרעות שישפיעו לרעה על ביצועיהם.
- אין להשתמש במכשיר בסמוך לציוד רפואי ללא קבלת רשות. בדוק עם הרופא אם תפעול המכשיר עלול להפריע לתפעולו של ההתקן הרפואי.
- יצרנים של קוצבי לב ממליצים להשאיר רווח של 15 ס"מ בין קוצב הלב לבין התקנים אחרים כדי למנוע הפרעה אפשרית לקוצב הלב.
- התקן זה עשוי להפיק אור חזק או מהבהב.
- מכשירים עלולים להפריע לעזרי שמיעה מסוימים.
- הפרעה משנית עלולה להשפיע על מכשירי טלוויזיה, מכשירי רדיו, מחשבים וכולי.
- השתמש במכשיר שלך בטמפרטורות שבין 0°C ו- 35°C , אם ניתן. חשיפת המכשיר לטמפרטורות נמוכות או גבוהות באופן קיצוני עלולה לגרום נזק, תקלות ואפילו פיצוץ.

בטיחות בדרכים

- בדוק את החוקים והתקנות לגבי שימוש במכשירים באזורים שבהם אתה נהג.
- אין להחזיק את המכשיר ביד בזמן נהיגה.
- יש להפנות את מלוא תשומת הלב לנהיגה.
- רד לשול הדרך וחנה לפני ביצוע שיחה או מענה לשיחה, בהתאם לתנאי הדרך.
- אנרגיית תדר רדיו עשויה להשפיע על מערכות אלקטרוניות מסוימות בכלי רכב, כדוגמת מערכות סטריאו וציוד בטיחות.
- אם המכונית מצוידת בכרית אוויר מתנפחת, אין לחסום אותה על-ידי התקנה של ציוד אלחוטי נישא. הדבר עלול לגרום לכשל של הכרית או לפגיעה חמורה עקב ביצועים לא נאותים שלה.
- אם אתה מאזין למוסיקה בעת תנועה, ודא שהעוצמה היא ברמה סבירה, כך שתמשיך להיות מודע לסביבתך. הדבר חשוב במיוחד בקרבת כבישים.

מנעו נזק לשמיעתכם

כדי למנוע נזק אפשרי לשמיעה, אל תאזין בעוצמות קול גבוהות לאורך זמן.



חשיפה לעוצמות קול גבוהות במשך פרקי זמן ארוכים עלולה להזיק לשמיעה. לכן אנו ממליצים שלא תדליק או תכבה את המכשיר סמוך לאוזןך. מומלץ גם להגדיר את עוצמת הקול של המוסיקה והשיחה לרמה סבירה.

- כאשר אתה משתמש באוזניות, הנמך את עוצמת הקול אם אינך מצליח לשמוע את האנשים שבסביבתך מדברים, או אם האדם שלצדך יכול לשמוע את מה שאתה שומע באוזניות.

- עוצמת קול מופרזת מאוזניות פנימיות ואוזניות חיצוניות עלולה לגרום לאובדן שמיעה.



חלקי זכוכית

חלקים מסוימים של המכשיר עשויים מזכוכית. זכוכית זו עלולה להישבר אם המכשיר ייפול על משטח קשה או יקבל מכה חזקה. אם הזכוכית נשברת, אל תנסה לגעת בה או להסיר אותה. יש להפסיק להשתמש במכשיר עד להחלפת הזכוכית על-ידי ספק שירות מורשה.

סביבה שבה מבוצעות עבודות עם חומרי נפץ

אל תשתמש במכשיר באזורים שבהם מתבצעות פעולות פיצוץ. שים לב להגבלות ועמוד בכל התקנות או הכללים.

סביבה שבה קיימת סבירות לפיצוץ

- אין להשתמש במכשיר באזורי תדלוק.
- אין להשתמש בו בסמוך לדלק או לכימיקלים.
- אין להוביל או לאחסן גז דליק, נוזלים דליקים או חומרי נפץ בתא הרכב המכיל את המכשיר או את אביזריו.

כלי טיס

- התקנים אלחוטיים עלולים לגרום להפרעה במטוס.
- יש לכבות את המכשיר לפני העלייה למטוס.
- אין להשתמש בו על הקרקע ללא קבלת רשות מאנשי הצוות.

ילדים

- יש לשמור על המכשיר במקום בטוח, מחוץ להישג ידם של ילדים קטנים. המכשיר כולל חלקים זעירים העלולים להוות סכנת חנק אם ינותקו מהטלפון.

שיחות חירום

- רק רשתות סלולריות מסוימות מאפשרות לבצע שיחות חירום. לפיכך, בשום מקרה אין לסמוך רק על המכשיר לביצוע שיחות חירום. בדוק את הנושא עם חברת הסלולר המקומית.

מידע לגבי הסוללה והטיפול בה

- אין צורך לפרוק את הסוללה במלואה לפני טעינתה מחדש. בניגוד למערכות סוללה אחרות, אין השפעת זיכרון שעלולה להשפיע על ביצועי הסוללה.
- יש להשתמש אך ורק בסוללות ובמטענים של LG. מטעני LG מיועדים למרב את חיי הסוללה.
- אין לפרק או לקצר את הסוללה.
- יש לשמור על ניקיון מגעי המתכת של הסוללה.
- יש להחליף את הסוללה כאשר היא אינה מפיקה עוד רמת ביצועים סבירה. ניתן לטעון מחדש את מארז הסוללה מאות פעמים לפני שיהיה צורך להחליפו.
- כדי למרב את שמישות הסוללה, טענו אותה מחדש אם לא הייתה בשימוש במשך זמן רב.
- אין לחשוף את מטען הסוללה לאור שמש ישיר או להשתמש בו בתנאי לחות גבוהה, כמו חדר אמבטיה.
- אין להשאיר את הסוללה במקומות חמים או קרים, שכן הדבר עלול לפגום בביצועיה.
- סכנת התפוצצות אם הסוללה הוחלפה בסוג סוללה שאינו מתאים. השלך סוללות משומשות בהתאם להוראות.

- אם עליך להחליף סוללה, קח אותה למרכז השירות המורשה הקרוב של LG Electronics או לספק לצורך קבלת סיוע.
- יש לנתק תמיד את המטען מהשקע לאחר שהמכשיר נטען במלואו כדי למנוע בזבז מיותר של חשמל מצד המטען.
- אורך חיי הסוללה בפועל תלוי בתצורת הרשת, בהגדרות המוצר, באופי השימוש, בתנאי הסוללה ובתנאים הסביבתיים.
- הקפד שלא ייווצר מגע בין הסוללה לבין פריטים חדים כגון שיניים או ציפורניים של בעל חיים. מגע כזה עלול לגרום לשריפה.

אבטחת הפרטים האישיים

- הקפד להגן על הפרטים האישיים שלך כדי למנוע דליפת נתונים או שימוש לרעה במידע רגיש.
- הקפד תמיד לגבות נתונים חשובים בזמן השימוש במכשיר. LG אינה נושאת באחריות לאובדן נתונים כלשהו.
- בעת השלכת המכשיר, הקפד לגבות את כל הנתונים ולאפס אותו כדי למנוע שימוש לרעה במידע רגיש.
- קרא בעיון את מסך ההרשאות במהלך הורדת יישומים.
- נקוט משנה זהירות כאשר אתה משתמש ביישומים שיש להם גישה לפונקציות מרובות או לפרטים האישיים שלך.
- בדוק באופן סדיר את החשבונות האישיים שלך. אם תגלה סימן כלשהו לשימוש לרעה בפרטים האישיים שלך, בקש מספק השירות למחוק או לשנות את פרטי החשבון שלך.
- אם המכשיר שלך אבד או נגנב, שנה את הסיסמה של החשבון כדי לאבטח את הפרטים האישיים שלך.
- אין להשתמש ביישומים שמקורם אינו ידוע.

הודעה לגבי החלפת סוללה



- למען בטיחותך, אל תסיר את הסוללה המשובלת במוצר. אם עליך להחליף סוללה, קח אותה לנקודת השירות הקרובה של LG Electronics או למפיץ לצורך קבלת עזרה.
- סוללת ליתיום-יון הינה רכיב מסוכן, העלול לגרום לפציעה.
- החלפת הסוללה על-ידי אדם שאינו מוסמך לכך עלולה לגרום נזק להתקן.



01


**תכונות
הניתנות
להתאמה
אישית**

מחוות אוויר

סקירה כללית של מחוות אוויר

חיישן ה-ToF ומאיר ה-IR הנמצאים ליד המצלמה הקדמית יכולים לזהות את המיקום והצורה של ידך להפעלת אפליקציות מסוימות מבלי לגעת במסך.

הצג את ידך למצלמה הקדמית ולאחר מכן בצע תנועות יד כדי להפעיל האפליקציות הרצויות.

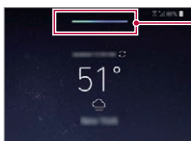

פס מחוות אוויר

אפשרות מחוות אוויר מופעלת

- ייתכן שתכונה זו לא תהיה זמינה בהתאם לאפליקציות מסוימות.
- ודא שחיישן ה-ToF ומאיר ה-IR אינם חסומים במדבקה או בחומרים זרים אחרים.
- הקפד לא להזיז את היד מהר מדי או להביא אותה רחוק מדי או קרוב למכשיר תוך שימוש בתכונה תזוזת אוויר.
- אם אתם לובשים כפפות או חיישן ה-ToF ומאיר ה-IR חשופים לאור שמש ישיר, דיוק ההכרה עשוי לרדת.
- אם המקום שלך יכול לשקף את האור היטב, דיוק ההכרה עשוי להקטין או לא יכול לעבוד כראוי.

שימוש במחוות אוויר

ניתן להפעיל את האפליקציות הרצויות באמצעות התכונה 'תזוזת אוויר'.

קיצור דרך ולכידה

בעת הצגת מסך דף הבית או באמצעות אפליקציה, תוכל להחליק שמאלה או ימינה באוויר כדי לפתוח אפליקציה או לצבוט בכל האצבעות כדי לצלם יישום מקליט מסך.

1 הקש על  < הגדרות < הרחבות < מחוות אוויר < קיצור דרך וצלם.

2 הקש על  כדי להפעיל תכונה זו.

3 בחר באפליקציות הרצויות מתחת להחלק שמאלה והחלק ימינה כדי להשתמש בקיצורי דרך באמצעות 'תזוזת אוויר'.




תנועות יד

1 כדי להפעיל את ה-תזוזת אוויר, הנח את כף היד במרחק של 6 ~ 12 ס"מ (2 ~ 5 אינץ') מהמכשיר.


2 כאשר מוט ה-תזוזת אוויר מופיע בחלק העליון של המסך, הכנס את ידך באוויר תוך הרמה למרחק של 15 ~ 20 ס"מ (6 ~ 8 אינץ') מהמכשיר כדי להפעיל את בקר קיצורי הדרך של ההחלקה.

3 החלק את ידך שמאלה או ימינה כדי לפתוח את האפליקציה הרצויה.

לחלופין, לצבוט עם כל האצבעות לקחת יישום מקליט מסך.

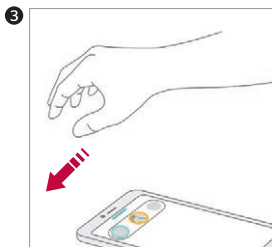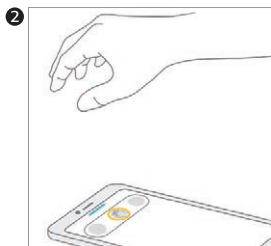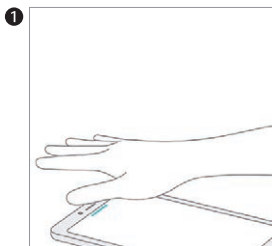

או

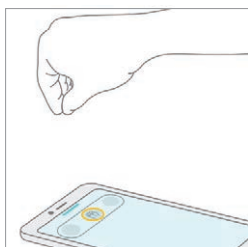

להפעיל אפליקציה

צילום מסך

שליטה במוזיקה ובווידאו

בעת שימוש באפליקציית המוזיקה או בנגן הווידאו, באפשרותך להשהות, להפעיל או לשנות כרכים עם תנועות הידיים באוויר.


1 הקש על  < הגדרות < הרחבות < מחוות אוויר < שלוט על המוזיקה והסרטונים.

2 הקש על  כדי להפעיל תכונה זו.

3 הנח את ירך במרחק של 6 ~ 12 ס"מ (2 ~ 5 אינץ') מהמכשיר כדי לאפשר את ה-תזוזת אוויר.

- כאשר מוט ה-תזוזת אוויר מופיע בחלק העליון של המסך, הכנס את ירך באוויר כדי להפעיל את בקר הבקרה של הנגן.

- 4 החלק את ידך שמאלה או ימינה כדי לשלוט בבקר הרצוי.
- כדי להשתמש בקיצור הדרך ובמאפיין הלכידה, החלק שמאלה. כדי להשהות או להפעיל, החלק ימינה.

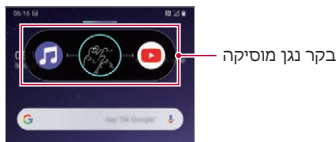

- כדי לכוונן את עוצמת הקול, כנס את ידך והמתן עד להופעת בקר עוצמת הקול. לאחר מכן, סובב שמאלה או ימינה כדי להנמיך או להגביר את עוצמת הקול.



- אם תזיז את ידך מהר מדי או תבצע מחוות יד גדולה מדי, ייתכן שבקר עוצמת הקול לא יפעל כהלכה.



שליטה בשיחות ובהתראות

תוכל לקבל שיחה או לכבות הודעות על ידי החלקת ידך שמאלה או ימינה באוויר.

1 הקש על  < הגדרות < הרחבות < מחוות אוויר < שליטה בשיחות ובהתראות.

2 הקש על  כדי להפעיל תכונה זו.

3 עם ה- תזוזת אוויר מופעל, הכנס את היד במרחק של 15 ~ 20 ס"מ (6 ~ 8 אינץ') מהמכשיר להפעלת הבקר.

- ה-תזוזת אוויר מופעל באופן אוטומטי כאשר מתקבלת שיחה או צלצול או שעון עצר.

4 החלק את ידך שמאלה או ימינה כדי לשלוט בהתאם לצורך.



בקר התראות

- באפשרותך לסיים שיחה באמצעות התכונה- תזוזת אוויר בעת הפעלת הרמקול, או חיבור אוזניות למכשיר.
- לא ניתן לסיים שיחת וידאו באמצעות התכונה- תזוזת אוויר.

הצג מדריך ידני

הפעל זאת כדי להציג תצוגה מקדימה של תנועת היד שלך. וודא שהיד שלך נשארת בתוך המעגל המנחה בזמן שאתה שולט בבקר ה- תזוזת אוויר.

1 הקש על  < הגדרות < הרחבות < מחוות אוויר < הצג את מדריך היד.

2 הקש על  כדי להפעיל תכונה זו.

תכונות המצלמה

שלוש מצלמות

שלוש המצלמות, הממוקמות על גב ההתקן, מאפשרות לך לצלם תמונות או להקליט סרטוני וידאו בשלוש זוויות צפייה שונות. הקש על  <  , ובחר  /  /  בעת צילום תמונות או הקלטת סרטונים באמצעות המצלמה האחורית.



זווית רגילה/
טלפוטו/
זווית רחבה מאוד

מצלמה אחורית

Triple shot

שלוש המצלמות הממוקמות בגב המכשיר מצלמות סדרת תמונות בזוויות צפייה שונות ושומרות זאת כסרטון וידאו עם אפקט שקפים.

- 1 הקש על  <  , והקש על **עוד** < **Triple shot**.
 - 2 כדי לצלם תמונה, הקש על .
- שלוש המצלמות מצלמות תמונות באופן אוטומטי ברצף.




- סרטון צילום משולש נשמר באופן אוטומטי ב'גלריה'.

- בעת צילום תמונה, החזק את המכשיר יציב עד שכל 3 התמונות צולמו.




תצוגה מקדימה משולשת

ניתן לבצע תצוגה מקדימה של תמונות בזוויות שונות שבחרתם שלוש המצלמות הממוקמות בגב המכשיר ולבחור את הזווית הרצויה לצילום התמונה או להקלטת סרטון הווידאו. לפני צילום תמונה, גע והחזק בסמל תצוגת המצלמה כדי להציג סמלי תצוגה מקדימה של שלוש זוויות בצד ימין.

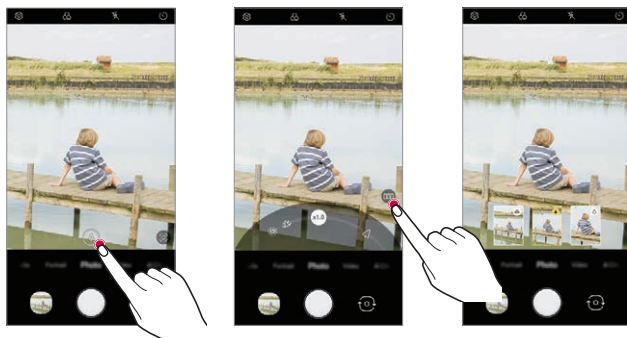

- המסך יציג את תמונת התצוגה המקדימה של זווית הצפייה הרצויה.
- לאחר בחירת הזווית הרצויה, הקש על  כדי לצלם תמונה.

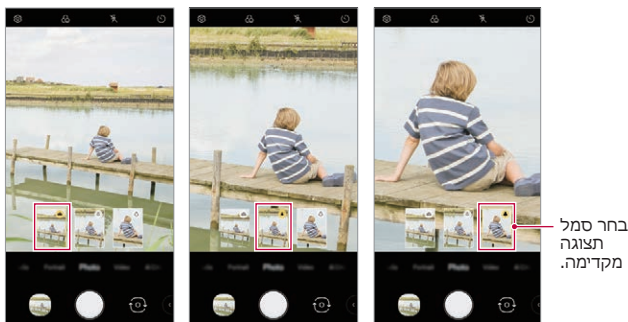

זווית רחבה במיוחד

תצוגת זווית רגילה

תצוגת טלפוטו

תכונות הניתנות להתאמה אישית

סטודיו

ניתן ליצור תמונות ברמת הסטודיו על ידי שימוש בתכונות Spotlight ו- Backdrop במצלמה.

Spotlight

ניתן להחיל אפקטי תאורה שונים בעת צילום תמונות.

- 1 הקש על , ולאחר מכן הקש על **סטודיו**.
- 2 הקש על  כדי לבחור אפקט תאורה.




- 3 הקש על סמל אפקט התאורה הרצוי.
 - 4 כאשר **אפקט אולפן זמין**. מופיע על המסך, הקש  כדי לצלם תמונה.
- ייתכן שתכונת הסטודיו לא תפעל אם המצלמה לא יכולה לזהות את הנושא.

תפאורת רקע

ניתן להחיל אפקטים שונים על רקע בעת צילום תמונות לאורך.

- 1 הקש על , ולאחר מכן הקש על **סטודיו**.
- 2 הקש  כדי לבחור באפקט של תפאורת רקע.
 - בתחתית המסך מופיעים צבעים שונים של הרקע.
- 3 בחר בצבע תפאורת רקע שברצונך להחיל.
 - ניתן להחיל את הצבעים שנבחרו על הרקע מלבד האובייקט.

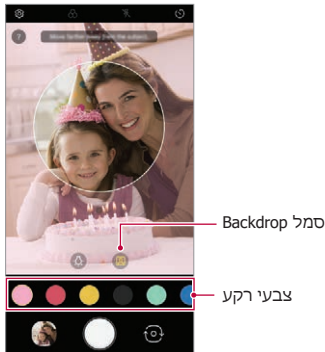

- 4 כשאתה רואה את ההודעה המנחה **אפקט אולפן זמין**, הקש על  כדי לצלם תמונה.

- אם המצלמה אינה מצליחה לזהות את הנושא, לא ניתן להחיל את פונקציית הסטודיו על התצלום השמור.
- אם הסביבה חשוכה, המצלמה לא יכולה להחיל את אפקטים של סטודיו.

דיוקן

ניתן ליצור תצלום דיוקן אמנותי, בו האובייקט יהיה ממוקד והרקע מטושטש. ניתן גם לערוך את התמונה על-ידי יישום אפקט תאורה או צבע על הרקע.

- בעת צילום תמונה, שמור את המרחק לנושא שלך ל 1.3 ~ 5 מטר.
- תכונה זו אינה זמינה אם הסביבה חשוכה מדי.

- 1 הקש על , והקש על **דיוקן**.
- 2 גרור את פס המחוון לשמאל או לימין כדי לכוון את עצמת הטשטוש.




כוון עצמת טשטוש.

- 3 כאשר **הדיוקן זמין**, מופיע במסך, הקש  או  כדי לצלם תמונה.
- ייתכן שהתכונה 'דיוקן' לא תפעל אם המצלמה אינה מצליחה לזהות את האובייקט.


Makeup Pro

בעת צילום תמונות סלפי, תוכל ליישם טכניקות איפור שונות. בעת שימוש במצלמה הקדמית, כוונן את צבע העור ויישם איפור עיניים ושפתיים.

- 1 הקש על , עבור למצלמה הקדמית והקש על .
- 2 בחר את אפשרות האיפור הרצויה, וגרור את המחוון לשמאל או לימין כדי לכוון את האפקט.
 - כאשר תבחר את **ללא**, המחוון ייעלם.

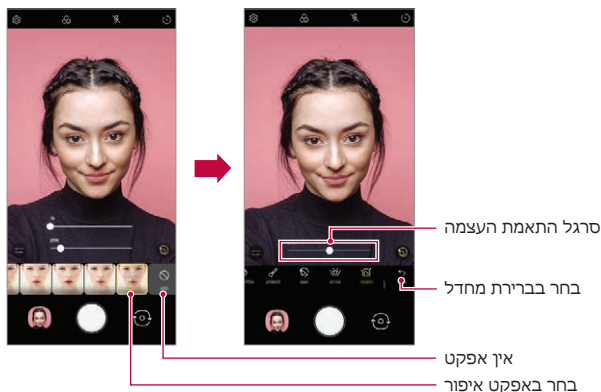

- 3 בחרו באפקטים שונים של איפור והחיל אותם על הנושא.
 - **בסיסי** או **מצב איפור**, ואז געשוב במסך כדי להחיל אפקטי איפור מפורטים יותר.
 - הזז את **סרגל התאמת עצמה** כדי להתאים את **עצמה** לפיה ייושמו האפקטים.

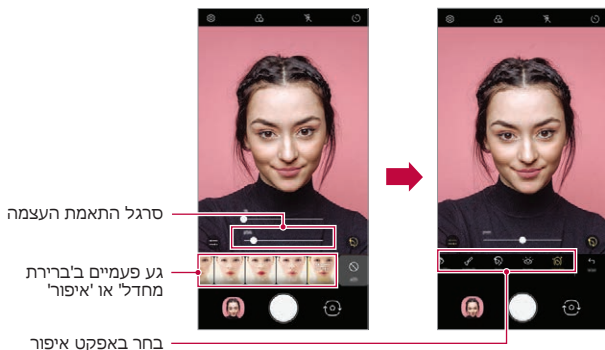

4 כדי לצלם תמונה, הקש על .

Google Lens

ניתן לקבל מידע נוסף או לבצע פעולות על פריטים סביבך באמצעות Google Lens, כגון אתרים, פוסטרים, תפריטי מסעדות, בעלי חיים, פרחים או ברכודים, ישירות במכשיר שלך.

לדוגמה, כאשר תשתמש ב-Google Lens על:

- כרטיס ביקור: ניתן לשמור את מספר הטלפון או הכתובת לאיש קשר.
- ספר: ניתן לקבל סקירות ופרטים אחרים עליו.
- אתר או מבנה: ניתן לקבל פרטים נוספים עליו.
- ציור במוזיאון: ניתן לקבל פרטים נוספים עליו.
- צמח או בעל חיים: ניתן לקבל מידע נוסף עליו.
- פלאייר או כרזת אירוע: ניתן להוסיף את האירוע ללוח השנה שלך.

- Google Lens זמין רק אם המכשיר שלך מחובר לרשת. אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך.
- התמיכה בפונקציה זו או רשימת השפות הנתמכות הם בהתאם לאזור השירות.

שימוש ב-Google Lens



- 1 הקש על , והקש על .
- 2 הצבע במצלמה על פריט.
- 3 כדי לקבל פרטים או לבצע פעולה:
 - הקש על הפריט במסך שלך.
 - כדי לבחור טקסט: הקש על מילה, והקש שוב וגרור את הנקודות הכחולות.

תכונות מציאות רבודה

ניתן להשתמש בתכונות מציאות רבודה (AR) שונות ביישום 'מצלמה'. ניתן ליצור My Avatar (האוטאר שלי), AR Emoji (אמוג'י AR), או AR Sticker (מדבקת AR) משלך לקבלת תוכן עשיר. My Avatar (האוטאר שלי) מסייע לך ליצור גרסת סרט מצויר של עצמך ולהתאים אותה. AR Emoji (אמוג'י AR) מסייע לך ליצור emojis חיות מונפשות בתלת-ממד המחקות הבעות פנים. AR Sticker (מדבקת AR) מאפשר לך לבחור מבין מדבקות שונות לשימוש בתמונה או בסרטון וידאו כאשר אתה פונה אל המצלמה.

יצירת My Avata (האוטאר שלי)

- 1 הקש על , עבור למצלמה הקדמית, ולאחר מכן הקש על .
- 2 הקש על  <  כדי לצלם תמונה.
 - פעל לפי ההוראות במסך כדי ליישר את הפנים שלך במסך.
 - כדי להפוך את האוטאר שלי באמצעות אחת מהתמונות שנשמרו מהגלריה, הקש על .

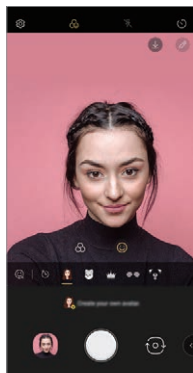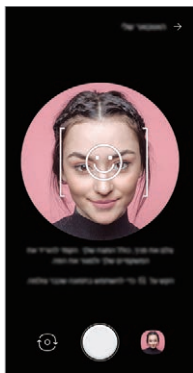


- 3 בחר את המין של My Avatar (האוטאר שלי) ובחר פרטים כולל סוג האוטאר, צבע העור, סגנון השיער והבגדים, והקש על **אישור**.
- תמונות שצולמו נשמרות בגלריה.




שימוש שלי האוטאר שלי, AR Emoji, מדבקת AR


- 1 הקש על  < , עבור למצלמה הקדמית, ולאחר מכן הקש על  < .
- 2 בחר אפשרות שברצונך להקליט.

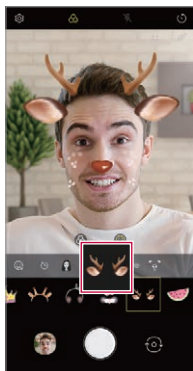

מדבקת AR

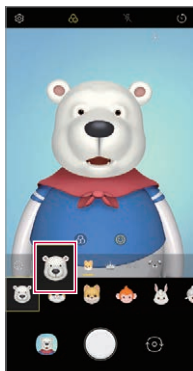

אמוג'י AR

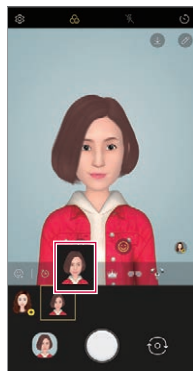

My Avatar (האוטאר שלי)


- 3 כדי לצלם תמונה, הקש על .

כדי להקליט וידאו באמצעות מדבקות AR Emojis או AR Stickers, בחרו בתפריט הקלטת הווידאו ואז הקש על  <  לבחירת הפריט הרצוי והקש על  להתחיל לצלם את הסרטון.

• תמונות שצולמו נשמרות בגלריה.


שימוש במדבקות אווטאר

- 1 הקש על 🗨️ במקלדת LG.
- 2 בחר במדבקת האווטאר הרצויה.

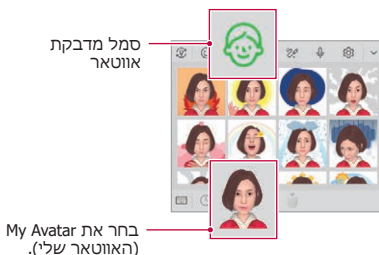

שימוש במדבקות Ani

- 1 הקש על 🗨️ במקלדת LG.
- 2 בחר את My Avatar (האווטאר שלי) הרצוי.
- 3 הקש על 📍 כדי להקליט קול ווידאו והקש על 📍 כדי לשמור.
 - ייווצרו מדבקות Ani עם הבעות פנים, תנועות וקולות שונים.
- 4 הקש ▶️ כדי להעלות את Ani Sticker.
 - הקש ▶️ כדי להציג תצוגה מקדימה של מדבקת Ani שנוצרה.

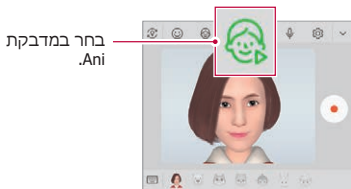

AI CAM

ניתן להשתמש בתכונה AI Cam כדי לזהות באופן אוטומטי את האובייקט בעת צילום תמונה או הקלטת וידאו באיכות אופטימלית.

1 הקש על  < , ולאחר מכן הקש על **AI CAM**.

2 כאשר האובייקט יזוהה, ייושם עליו האפקט הטוב ביותר לסצנה.

- כדי ליישם אפקטים אחרים, הקש על סמל הסצנה.
- מגוון רחב של קטגוריות, כגון דיוקן, בעלי חיים, מזון, זריחה, שקיעה, נוף, שמים, חוף, תינוקות, פרחים וטקסט, ניתן לזהות באופן אוטומטי.

- התוצאה של זיהוי הסצנה עשויה להיות שונה, בהתאם לתאורה או למיקום של האובייקט בעת צילום התמונות. מילות המפתח לא יופיעו בתמונות או בסרטונים הממשיים.



QLens

תוכל לערוך קניות, לחפש תמונות או לסרוק קוד QR על-ידי צילום תמונה ב-QLens.

1 הקש על  < , והקש על .

2 בחר את האפשרות הרצויה בתוך חיפוש חזותי או סרוק קוד QR.

3 הקש על המסך כדי לצלם תמונה של החפץ שאתה רוצה לחפש או התמקד בקוד QR.

- התוצאה תופיע לאחר רגע.

- תכונה זו זמינה רק אם המכשיר שלך מחובר לרשת. אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך.

• עבור תכונות חיפוש חזותי, באפשרותך לבחור את האזור הרצוי מהתמונה שצילמת ולאחר מכן לחפש אותו שוב.

• תכונה זו זמינה רק כאשר המצלמה האחורית במצב אוטומטי.


• התמיכה באפשרות זו תלויה באזור.



Cine shot

ניתן ללכוד רגע וליצור סרטון וידאו עם רק חלק מהסצינה בתנועה. בעת הקלטת סרטון וידאו, החזק את המכשיר יציב. לאחר שהוקלט, שפשף את האזור בוידאו שאתה רוצה בתנועה. האזור הנבחר מתחיל בתנועה ושאר הסרטון נותר נייח.

- 1 הקש על , ולאחר מכן הקש על **עוד** .
- 2 הקש על  כדי להקליט סרטון וידאו בן 3 שניות.
 - החזק את המכשיר יציב בעת הקלטת הסרטון.
- 3 הקש על  ושפשף את האזור שיהיה בתנועה עם אפקט Cine shot.

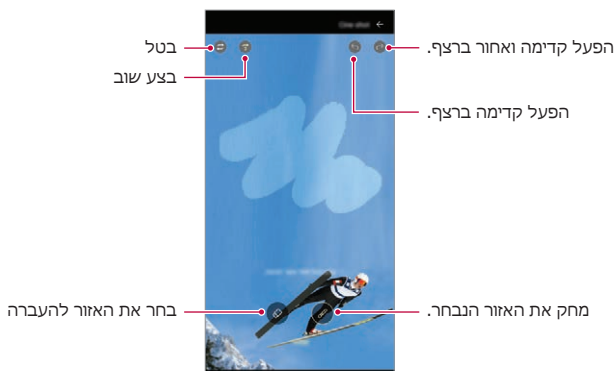

- הקש על  כדי למחוק את האזור הנבחר.
- הקש על  כדי להפעיל את האזור הנבחר בתנועה קדימה ברצף.
- הקש על  כדי להפעיל את האזור הנבחר בתנועה קדימה ואחורה ברצף.

- 4 הקש על **שמור**.
 - האזור הנבחר יהיה בתנועה.

Cine Video

באפשרותך להקליט וידאו שנראה כמו סרט.


1 הקש על  < .

2 הקש **עוד** < .

3 הקש על  כדי להקליט סרטון וידאו.

•  : הקלט סרטון על ידי בחירת התכונה 'זום נקודה' כדי להגדיל / להקטין את האזור הספציפי.

•  : בחר אפקט כדי להחיל אותו על ההקלטה. תוכל גם לכוון את השוליים הדהויים ואת החוזק של כל Cine Effect. אחרי שתתחיל בהקלטה, לא תוכל לשנות תכונה זו.

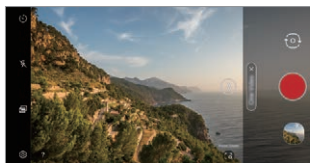

- התכונה Point Zoom תומכת במהירות זום של עד פי שלושה.
- תכונה זו תומכת בהקלטות וידאו בזווית רגילה בלבד.



תכונות גלריה

תוכן קשור

באפשרותך לערוך ולהתאים אישית תוכן קשור ב'גלריה'.

- 1 בזמן הצגת תמונה בתצוגה מקדימה, הקש על .
- 2 כאשר מופיע הסמל הקשור לתאריך או למיקום שבהם צילמת את התמונה, גע במסך.



- ניתן להציג את התמונות הקשורות לתאריך או למיקום שבחרת.
- הקש על : כדי לגשת אל אפשרויות נוספות.

יצירת GIF

באפשרותך ליצור קובץ GIF מהגלריה.

- 1 כשאתה מציג אלבום, הקש על : < **צור קובץ GIF**.
- 2 בחר את התמונות ואת סרטוני הווידאו הרצויים כדי ליצור קובץ GIF והקש על **הבא**.
- תוכל גם להוסיף/למחוק תמונה, להתאים את המהירות או את יחס המסך, לקבוע את סדר הצילום וכו'.
- 3 הקש על **שמור**.


• אפשר להשתמש לכל היותר ב-100 תמונות כדי ליצור קובץ GIF. 

יצירת קולאז'

באפשרותך ליצור קולאז' מהתוכן המשויר.

- 1 כשאתה מציג אלבום, הקש על : < **קולאז'**.
- 2 בחר את התמונות שברצונך להוסיף לקולאז' והקש על **הבא**.
 - בחר את הפריסה הרצויה מתחתית המסך.
- 3 הקש על **צור**.

• אפשר להשתמש לכל היותר ב-9 תמונות כדי ליקולאז'. 

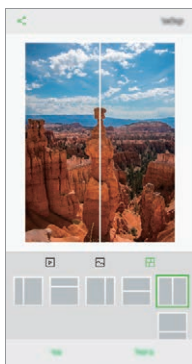


יצירת סרט

באפשרותך ליצור סרט חדש על-ידי שילוב תמונות וסרטוני וידאו.

1 הפעל את אפליקציית הגלריה, בחר בתיקיה רצויה באלבום והקש על : < **צור קובץ סרט**.

2 בחר תמונות או סרטוני וידאו עבור הסרט והקש על **הבא**.

3 ערוך את התמונות ואת סרטוני הווידאו שנבחרו ולאחר מכן הקש על **שמור**.

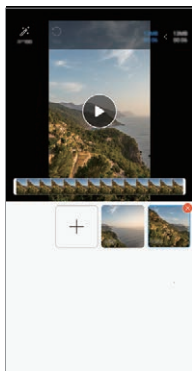

מחיקת קבצים

ניתן לבחור תמונות או סרטוני וידאו למחיקה על-ידי הקשה על ✕ בפינה השמאלית העליונה של התמונה הממוזערת שלו.

הוספת קבצים

באפשרותך לבחור תמונות או סרטוני וידאו להוספה לאחר הקשה על + בתחתית המסך. ניתן גם לבחור את התמונות ואת סרטוני הווידאו שכבר הוספת.

• גע והחזק בקובץ, ולאחר מכן הקש על קובץ נוסף לבחירת פריטים מרובים.



סידור מחדש של קבצים

כדי לסדר מחדש את התמונות ואת סרטוני הווידאו, גע והחזק בקובץ שברצונך להזיז ולאחר מכן גרור אותו למיקום הרצוי.

הוספת אפקטים של קבצים

הקש על ⌘ כדי להוסיף ערכת נושא או מוזיקת רקע, או לשנות את הגופן.

איפוס שינויי עריכה שבוצעו בסרט

תוכל לאפס את שינויי העריכה שבוצעו בסרט (כגון משך הפעלה) על-ידי הקשה על ↺.

הצגת תצוגה מקדימה של קובץ

כדי לשמור את הווידאו החדש שיצרת לפני שתשמור אותו, הקש על ⏮. לאחר שמשך ההפעלה יסתיים, הקובץ הבא יופעל באופן אוטומטי.

- אפשר להשתמש לכל היותר ב-50 תמונות וסרטוני וידאו כדי ליצור וידאו.
- כברירת מחדל, משך ההפעלה של תמונה הוא 3 שניות, ולא ניתן לשנות אותו. אפשר לקצר סרטוני וידאו לשנייה אחת לכל הפחות.
- ייתכן שתכונה זו לא תתמוך בתבניות מסוימות של תמונה או וידאו.




יצירת GIF

ניתן ליצור בקלות קובץ GIF באמצעות סרטון וידאו מוקלט.

יצירת וידאו

- 1 בנקודת ההתחלה הרצויה בזמן צפייה בווידיאו, הקש על .
- 2 בחר את האורך של קובץ ה-GIF שברצונך ליצור.
 - קובץ GIF נוצר עבור הזמן שנבחר החל מנקודת ההתחלה שציינת.
 - עבור סרטוני וידאו שאורכם קצר מ-10 שניות, תמונות GIF מופקות באופן אוטומטי עבור הזמן הנותר.

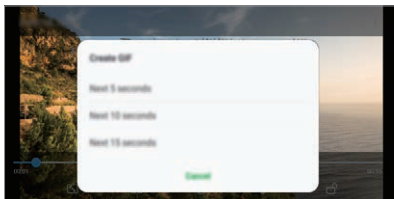

יצירת תמונות- GIF

- 1 ברשימת התצלומים ב'גלריה', הקש על : < **צור קובץ GIF**.
- 2 בחר תמונה כדי להפוך לצילום- GIF והקש על **הבא**.
 - תוכל להוסיף/למחוק תמונה, להתאים את המהירות או את יחס המסך, לקבוע את סדר הצילום.

- יצירת תמונות- GIF היא פונקציה הניתנת למשתמש להפקת תמונות יצירתיות. הפרת זכויות כגון זכות קניין רוחני או השמצת מוניטין של אדם אחר על ידי שימוש בפונקציית צילומי ה- GIF עשויה להביא לחבות אזרחית או פלילית בהתאם לחוקים הנוגעים בדבר. היזהר שלא להעתיק או להעביר עבודות של אדם אחר ללא אישור. LG Electronics אינה אחראית בשום דרך למעשים כאלה על ידי משתמשים.
- אתה יכול לבחור עד 100 תמונות לייצור כשאתה יוצר GIF.



איכות הקול ואפקטים

DTS:X 3D Surround

ניתן להשמיע שיר או להציג סרטוני וידאו בצליל תלת-ממדי אופף וחי. כדי להשתמש במאפיין הזה, חבר אוזניות, רמקול או התקנים חיצוניים אחרים למכשיר שלך.

הקש על  < הגדרות < צליל < איכות הקול ואפקטים, ולאחר מכן הקש על **DTS:X 3D Surround**  כדי להפעיל תכונה זו.

כוונון כיוון הקול

ניתן לכוונון את כיוון הקול לפי הרצוי.

1 הקש על  < הגדרות < צליל < איכות הקול ואפקטים < **DTS:X 3D Surround**.

2 בחר את כיוון הקול.

Floating Bar

סקירה כללית של ה-Floating Bar

באפשרותך להפעיל תכונות בשימוש תכוף, כולל קיצורי דרך, יישום מקליט מסך, נגן מוזיקה ואנשי קשר מהירים, על ידי נגיעה בסרגל הצף ולאחר מכן החלקתו על המסך.

כדי להפוך את התכונה Floating Bar לזמינה, הקש על  < הגדרות < הרחבות < **Floating Bar** .

פתיחה וסגירה של ה-Floating Bar

- כדי לפתוח את ה-Floating Bar: הקש על < או על >.
- כדי לסגור את ה-Floating Bar: הקש על > או על <.



- כדי לגשת לשאר אפשרויות הסרגל, החלק ימינה או שמאלה על הסרגל הצף.

הזזת ה-Floating Bar למיקום אחר

גע נגיעה ממושכת על הסרגל הצף ולאחר מכן גרור אותו למיקום הרצוי.

בשני המקרים, זה יכול להיות מועבר לכל כיוון.

Google Assistant

סקירה של Google Assistant

המכשיר שלך כולל את התכונה המובנית של Google Assistant. אתר תשובות ובצע פעולות כאשר תהיה מחוץ למשרד/לבית.

- כדי להשתמש במאפיין הזה, התחבר תחילה לרשת והיכנס לחשבון Google שלך.



התחבר

1 גע נגיעה ארוכה  במסך דף הבית כדי להפעיל את Google Assistant או לחץ על מקש Google Assistant בצד הימני של המכשיר.

2 הקש על הגדרה ראשונית.

3 פעל לפי ההוראות שעל המסך ואמור "Ok Google" או "Hey Google".

• המכשיר ישמור את נתוני הקול שלך לצורך זיהוי.

4 קבע אם להשתמש בפונקציית הנעילה של התאמת הקול.
• אם תשתמש בתפקוד נעילת התאמת הקול, תוכל לבטל את נעילת המכשיר גם כאשר מסך ההתקן כבוי או בזמן טעינת המכשיר על-ידי אמירת "Ok Google" או "Hey Google".

- תכונה זו עשויה להיות רגישה יותר מבחינת אבטחה מאשר שיטות אחרות לנעילת מסך, כגון Knock Code, תבנית, קוד PIN או סיסמה.
- אם ייעשה ניסיון להשתמש בקול דומה ל שלך או בהקלטה קולית שלך, ייתכן שנעילת המסך תבוטל.
- תצטרך לשחרר את נעילת המכשיר באמצעות השיטה שציינת לאחר כישלון בשחרור נעילת המכשיר באמצעות זיהוי קולי. ראה **הגדרת נעילת מסך** לקבלת פרטים.

5 הקש על שמור.

גישה באמצעות הקול

1 כאשר המסך הראשי כבוי או נעול, אמור "אוקי גוגל" או "היי גוגל".

2 כאשר מופיע מסך Google Assistant, אמור פקודה או שאל שאלה.

גישה מהמסך הראשי

- 1 הקש והחזק את  במסך הראשי.
- 2 אמור פקודה או שאל שאלה כאשר אתה רואה  בתחתית המסך.

- בסביבה בה קישור Wi-Fi או חיבור הנתונים הסלולריים גרועים, ייתכן שתפקוד Google Assistant יוגבל ושיעור דיוק זיהוי הדיבור עשוי להיות נמוך.
- אם הדיבור מעורפל, המיקרופון מכוסה, נגן מדיה מנגן או שהסביבה רועשת, קצב דיוק זיהוי הדיבור עשוי להיות נמוך. כשאתה משתמש במוצר באמצעות פקודות קוליות, אמור בהיגוי מדויק בסביבה שקטה לקבלת דיוק טוב יותר בזיהוי הדיבור.

Hand ID

סקירת Hand ID

ניתן לבטל את נעילת המסך באמצעות היד בעזרת התכונה Hand ID.


הנח את המכשיר על משטח שטוח והצב את ידך בכיוון המצלמה הקדמית כדי לשחרר את נעילת את המסך.

- תכונה זו משתמשת בנתוני ורידי כף היד השמורים במכשיר. נתוני ורידי כף היד המזוהים נשמרים בצורה מאובטחת במכשיר שלך.
- חיישן ה-ToF ומאיר ה-IR הממוקמים ליד המצלמה הקדמית יכולים לזהות את דפוסי הוורידים של כף היד שלך.
- Hand ID נחשב פחות מאובטח מסוגי נעילה אחרים.

אמצעי זהירות עבור זיהוי כף יד

רמת הדיוק של זיהוי כף היד עשויה לרדת במקרים הבאים. כדי להגדיל את רמת הדיוק, בדוק את ההפרעות האפשריות הבאות לפני השימוש במכשיר.

- ודא שחיישן ה-ToF ומאיר ה-IR אינם חסומים במדבקה או בחומרים זרים אחרים כאשר אתה משתמש בתכונת Hand ID.
- כאשר מים, אבק או חומר זר אחר נמצאים על חיישן ה-ToF, מאיר ה-IR או על היד שלך, ייתכן שזיהוי כף היד לא יפעל. נקה וייבש את החיישן ואת היד לפני שהפעלת זיהוי כף היד.
- אם אתה מכופף את היד, יתכן ולא ניתן יהיה לזהות את כף היד. הקפד לפתוח את כף ירך בנוחות ובצורה שטוחה תוך כדי רישום Hand ID.
- ודא שהמכשיר מקביל לידך בעת רישום או זיהוי כף היד. אם תטה את המכשיר או את היד, יתכן שרישום או זיהוי כף היד לא יפעלו כראוי.
- ודא שהמכשיר מונח על משטח שטוח או מונח על בעל יציב.
- בעת שימוש בתכונת זיהוי כף היד, נא הקפד לשמור על מרחק של עד 10 ס"מ (4 אינץ') מכף היד.

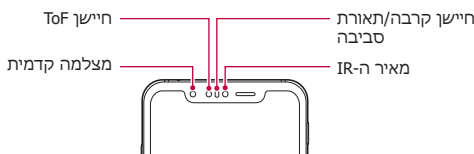

רישום נתוני כף יד

לפני השימוש בתכונת זיהוי כף היד, רשום את נתוני הוורידים של כף ידך במכשיר.

1 הקש על  < הגדרות < מסך הנעילה ואבטחה < Hand ID.

2 הקש על **הבא** ושחרר את נעילת המכשיר בהתאם לשיטה שצוינה.

3 הנח את המכשיר על משטח ישר והקש על **התחל**.

4 רשום את כף ידך בהתאם להוראות המוצגות במסך.

• הנח את כף היד במרחק של כ-15-20 ס"מ (6-8 אינץ') מהמכשיר.

• כשהמכשיר מזהה את כף היד, הורד את כף היד כלפי מטה לכיוון חיישן ה-ToF.

• הקש על **המשך** כדי להירשם שוב כאשר המכשיר ממוקם בתנוחה אחרת.

5 בסיום תהליך זיהוי כף היד, הקש על **אישור**.

ביטול נעילת המסך באמצעות זיהוי כף יד

אתה יכול לפתוח את המסך עם היד שלך.

1 הקש על  < הגדרות < מסך הנעילה ואבטחה < Hand ID.

2 במסך הגדרות מזהה יד, התאם את ההגדרות הבאות:

• **מחק נתוני כף יד**: באפשרותך למחוק את נתוני זיהוי כף היד הרשומים ולרשום אותם שוב אם Hand ID אינו פועל כהלכה.

• **כסה כיד להעיר עבור Hand ID**: באפשרותך להעיר את הטלפון ולאחר מכן להשתמש במזהה כף יד על ידי כיסוי המסך כאשר המסך כבוי.

• **החלק לביטול הנעילה**: לאחר שהמכשיר שלך מזהה את נתוני כף היד שלך, עליך להחליק על המסך כדי לבטל את נעילתו.

זיהוי טביעת אצבע

סקירה כללית של זיהוי טביעת אצבע

כדי להשתמש בפונקציה לזיהוי טביעות אצבע, עליך לרשום תחילה טביעת אצבע במכשיר שלך.

תוכל להשתמש בפונקציה לזיהוי טביעות אצבע במקרים הבאים:

- לביטול נעילת המסך.
- להצגת תוכן נעול ב גלריה או ב-QuickMemo+.
- כדי לאשר רכישה, היכנס ליישום או זהה את עצמך באמצעות טביעת האצבע שלך.

• תוכל להשתמש בטביעות אצבע לזיהוי משתמשים במכשיר. ייתכן שטביעות אצבעות דומות מאוד של משתמשים שונים יזוהו על-ידי חיישן טביעת האצבע כאותה טביעת אצבע.

- אם המכשיר אינו מצליח לזהות את טביעת האצבע שלך, או אם שכחת את הערך שצוין לצורך הרישום, הבא את המכשיר למרכז שירות הלקוחות הקרוב ביותר של LG והצטייד בתעודת זהויות שלך.

אמצעי זהירות לזיהוי טביעת אצבע

רמת הדיוק של זיהוי באמצעות טביעת אצבע עשויה לרדת בשל כמה סיבות. כדי להבטיח זיהוי ברמת דיוק מרבית, בדוק את הפריטים הבאים לפני השימוש במכשיר.

- למכשיר יש חיישן טביעת אצבע. ודא שלא נגרם נזק לחיישן טביעות האצבע על-ידי חפץ מתכתי, כמו מטבע או מפתח.
- כאשר מים, אבק או חומר זר אחר נמצאים על חיישן טביעות האצבע או על האצבע שלך, ייתכן שהרישום או הזיהוי של טביעות האצבע לא יפעל. הקפד להניח על החיישן אצבע נקייה ויבשה כדי לאפשר זיהוי טביעת אצבע.
- ייתכן שטביעת האצבע לא תזוהה כראוי אם יש צלקת על כרית האצבע או שהיא לא חלקה כתוצאה מהשריה במים.

- אם האצבע שלך מקופלת או שהנחת רק את קצה האצבע באופן חלקי בלבד, ייתכן שהזיהוי לא יצלח. ודא שהאצבע שלך מכסה את מלוא המשטח של חיישן טביעות האצבע.
- סרוק אצבע אחת בלבד בכל רישום. סריקה של יותר מאצבע אחת עשויה להשפיע על הרישום והזיהוי של טביעת האצבע.
- המכשיר עלול ליצור חשמל סטטי אם האוויר שמסביבו יבש. הימנע מסריקת טביעות אצבע בסביבה יבשה; לחלופין, גע בחפץ מתכתי (כמו מטבע או מפתח) לפני הסריקה, כדי לפרוק חשמל סטטי.

רישום טביעות אצבע


תוכל לרשום ולשמור את טביעת האצבע שלך במכשיר כדי להשתמש בזיהוי באמצעות טביעת אצבע.

1 הקש על הגדרות < מסך הנעילה ואבטחה < טביעות אצבע.

- יש להגדיר מסך נעילה כדי שניתן יהיה להשתמש בתכונה זו.
- אם נעילת המסך אינה פעילה, קבע את תצורת מסך הנעילה על-ידי ביצוע ההוראות המוצגות על המסך. ראה **הגדרת נעילת מסך** לקבלת פרטים.

2 אתר את חיישן טביעות האצבע בגב המכשיר והנח עליו בעדינות אצבע אחת כדי לרשום את טביעת האצבע.

- לחץ בעדינות על חיישן טביעת האצבע כדי לאפשר לחיישן לזהות את טביעת האצבע שלך.
- ודא שהאצבע שלך מכסה את מלוא המשטח של חיישן טביעות האצבע.

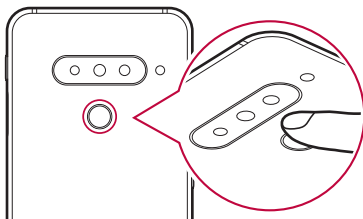

- 3 פעל בהתאם להוראות המוצגות על המסך.
 - חזור על סריקת טביעת האצבע על-ידי הזזת האצבע בקצב איטי ביותר עד שטביעת האצבע תירשם.
- 4 בסיום תהליך הרישום של טביעת האצבע, הקש על **אישור**.
 - הקש על **הוסף עוד** כדי לרשום טביעת אצבע נוספת. אם רשמת טביעת אצבע אחת בלבד ומצב האצבע לא תקין, ייתכן שהזיהוי לא יפעל היטב. כדי למנוע מצב כזה, עדיף לרשום מספר טביעות אצבע.

ניהול טביעות אצבע

תוכל לערוך או למחוק טביעות אצבע רשומות.

- 1 הקש על **○** < **הגדרות** < **מסך הנעילה ואבטחה** < **טביעות אצבע**.
- 2 בטל את הנעילה בהתאם לשיטת הנעילה שצוינה.
- 3 מרשימת טביעות האצבע, הקש על טביעת האצבע כדי לשנות את שמה. כדי למחוק אותה, הקש על **✕**.

ביטול נעילת המסך עם טביעת אצבע

תוכל לבטל את נעילת המסך או להציג תוכן נעול בעזרת טביעת אצבע. הפעל את הפונקציה הרצויה:

- 1 הקש על **○** < **הגדרות** < **מסך הנעילה ואבטחה** < **טביעות אצבע**.
- 2 בטל את הנעילה בהתאם לשיטת הנעילה שצוינה.

- 3 במסך הגדרות טביעת אצבע, הפעל את הפונקציה הרצויה:
- **נעילת מסך:** בטל את נעילת המסך עם טביעת אצבע.
 - **נעילת תוכן:** בטל את נעילת התוכן עם טביעת אצבע. לשם כך, ודא שמנעול התוכן מוגדר.

Face Unlock

סקירה כללית של תכונת Face Unlock

באפשרותך לבטל את נעילת המסך על-ידי שימוש בנתוני הפנים שנשמרו.

- תכונה זו עשויה להיות רגישה יותר מבחינת אבטחה מאשר שיטות אחרות לנעילת מסך, כגון Knock Code, תבנית, קוד PIN או סיסמה.
- כאשר נעשה שימוש בפנים דומים כגון אצל תאומים, המכשיר עשוי לזהות אותו כמשתמש רשום ולאפשר את ביטול הנעילה.
- נתוני הפנים המזהים נשמרים בצורה מאובטחת במכשיר שלך.
- אם המכשיר אינו מצליח לזהות את פניך, או ששכחת את הערך שצוין לצורך השיוך, הבא את המכשיר למרכז שירות הלקוחות הקרוב ביותר של LG והצטייד בתעודת הזהות שלך.

אמצעי זהירות בנוגע לביטול נעילה באמצעות זיהוי פנים

- רמת הדיוק של ביטול נעילה באמצעות זיהוי תווי פנים עשויה לרדת במקרים הבאים. כדי להגדיל את רמת הדיוק, בדוק את ההפרעות האפשריות הבאות לפני השימוש במכשיר.
- אם פניך מכוסים בכובע, במשקפיים, משקפי שמש או במסכה, או אם יש שינוי משמעותי בפניך בשל איפור כבד או זקן.
 - אם יש טביעות אצבע או חומרים זרים בחזית עדשת המצלמה, או אם המכשיר שלך אינו מצליח לזהות את פניך בשל תאורה חזקה או חלשה מדי.

שיוך נתוני פנים

לפני השימוש בתכונה Face Unlock, עליך לרשום את נתוני הפנים שלך במכשיר.

1 הקש על < הגדרות > מסך הנעילה ואבטחה < Face Unlock.

- כדי להשתמש בתכונה זו, חובה להגדיר את נעילת המסך באמצעות Knock Code, תבנית, קוד PIN או סיסמה.
- כאשר נעילת המסך אינה מוגדרת, יש לרשום את הנתונים בהתאם להוראות המוצגות במסך. ראה **הגדרת נעילת מסך** לקבלת פרטים.

2 הקש על **הבא** ושחרר את נעילת המכשיר בהתאם לשיטה שצוינה.

3 הקש על **התחל** והרם את המכשיר ממש מול חזית עיניך.

- בצע את שיוך הפנים בחדר עם תאורה שאינה חזקה או חלשה מדי.
- החזק את המכשיר במרחק של כ-25-51 ס"מ (10-20 אינץ') מפניך.
- מקם את כל הפנים בתוך הקו המנחה על המסך, ולאחר מכן העבר את הראש לאט במעגל תוך כדי צפייה במסך.
- הקפד שלא לזוז בעת רישום הפנים שלך. תוכל לשפר את שיעור הזיהוי על-ידי צילום תמונות יציבות מספר פעמים.

- ניתן לרשום רק פנים של אדם אחד בכל פעם.

4 בסיום תהליך שיוך הפנים, הקש על **אישור**.

ביטול נעילת המסך באמצעות טביעת פניך

באפשרותך לבטל את נעילת המסך באמצעות תווי הפנים שלך, במקום באמצעות Knock Code, תבנית, קוד PIN או סיסמה.

1 הקש על  < הגדרות < מסך הנעילה ואבטחה < בחר נעילת מסך.

2 בטל את נעילת המסך בהתאם לשיטת הנעילה שצוינה.

3 הקש על **אפשר Face Unlock**  כדי שתוכל לבטל את נעילת המסך באמצעות זיהוי תווי פנים.

אפשרויות Face Unlock

ניתן להתאים אישית את אפשרויות ביטול הנעילה האמצעות זיהוי פנים.

1 הקש על  < הגדרות < מסך הנעילה ואבטחה < Face Unlock.

2 התאם אישית את ההגדרות הבאות:


- **שפר את Face Unlock:** באפשרותך להוסיף נתוני פנים במגוון תנאים כדי לשפר את יכולות ביטול הנעילה באמצעות זיהוי פנים.
- **מחק פנים:** אם Face Unlock אינו פועל כראות, באפשרותך למחוק את נתוני הפנים המשויכים למכשיר ולשייך אותם מחדש.
- **הגבה כיד להעיר עבור Face Unlock:** באפשרותך להעיר את הטלפון ולאחר מכן להשתמש בתכונת ביטול 'נעילה על ידי זיהוי פנים' על-ידי הרמת הטלפון כשהמסך כבוי.
- **החלק לביטול הנעילה:** לאחר שהמכשיר שלך מזהה את הפנים שלך, עליך להחליק את המסך כדי לבטל את נעילתו.
- **נעילת תוכן:** מאפשר לך להציג תוכן נעול בגלריה וב-QuickMemo+ באמצעות זיהוי הפנים שלך.

התכונה 'ריבוי משימות'

ריבוי-חלונות

1 הקש על ☐ בסרגל הניווט.

- כעת יופיעו היישומים שהיו בשימוש לאחרונה.
- אם תקיש על סמל היישום, יופיעו התפריטים **פרטי יישום**, **ריבוי-חלונות**, **חלונות קופצים** ו**הצמד יישום**.

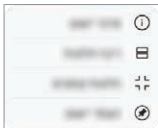

2 הקש על סמל היישום בפניה השמאלית העליונה של היישום להצגה בחלונות המרובים ובחר את **ריבוי-חלונות**.

- היישום שנבחר יופיע במחצית העליונה של המסך.

3 החלק את היישומים שהיו בשימוש לאחרונה לשמאל או לימין והקש על היישום להצגה במחצית התחתונה של המסך.

- היישום שנבחר יופיע במחצית התחתונה של המסך.

• התכונה ריבוי-חלונות אינה נתמכת על-ידי יישומים מסוימים של LG או יישומים שהורדת מה-Play Store.



AOD (always-on display)

כאשר המסך הראשי כבוי אפשר לראות את התאריך, השעה או החתימה.

החלק את החלק התחתון של מסך ה-AOD (always-on display) כדי להפעיל תכונות כגון מצלמה, Wi-Fi, Capture+, הגדרות קול, Bluetooth®, מבזק, מוסיקה ועוד.

1 הקש על  < **הגדרות** < **תצוגה** < **AOD (always-on display)**.

2 בחר את התמונה שברצונך להציג והקש על **שמור**.

- הקש על התמונה הרצויה מבין **שעון דיגיטלי**, **שעון אנלוגי**, **שעון כפול**, **חתימה**, **לוח שנה**, או **תמונה**.

- גרור את **QuickTools** ו**שעה נגן מוסיקה**  כדי להחליק מעל סמלי המצב של Quick Tools ונגן מוסיקה.

- הקש על **AI Pick**  כדי לראות מידע שימושי המסופק על סמך מודעות הקשר.

- כדי להגדיר את תקופת הזמן שבה לא תופעל התכונה **AOD (always-on display)**, הקש על **פסק זמן יומי**.

- כדי להגביר את בהירות המסך עבור התכונה **AOD (always-on display)**, הקש על **תצוגה בהירה יותר**.

- שימוש ב-AOD (always-on display) יאיץ את התרוקנות הסוללה. 

- השבת תכונה זו כדי לחסוך בצריכת הסוללה.
- כדי להפסיק את מאפיין **AOD (always-on display)**, הקש על  < **הגדרות** < **תצוגה** < **AOD (always-on display)** והקש על



Quick Help

תוכל להציג עזרה על את התכונות העיקריות של המכשיר, שאלות נפוצות או את המדריך למשתמש. חפש מידע באמצעות מילות מפתח. אתה יכול לפתור את הבעיות שלך במהירות על-ידי התייעצות אחד-על-אחד עם מומחה.

- 1 במסך הראשי, הקש **Quick Help**.
- 2 חפש פרטי עזרה על-ידי הזנת מילות מפתח בשדה החיפוש.

- תכונה זו מתעדכנת מעת לעת על-פי משוב של המשתמש.
- פריטי התפריט הזמינים עשויים להשתנות בהתאם לאזור או לספק השירות.
- בחר את הכרטיסייה של המדריך המקוון ביישום Quick Help כדי להציג הנחיות מפורטות.

הערות בנושא תכונות של עמידות במים

מוצר זה עמיד במים וחסין לאבק, בהתאם לדירוג Ingress Protection IP68.

המוצר הזה עבר בדיקות בסביבה מבוקרת והוא מוכח בתור עמיד לחדירת מים ואבק בנסיבות מסוימות (עומד בדרישות לקבלת סיווג IP68 כפי שהן מפורטות בתקן הבינלאומי IEC 60529 - Degrees of Protection provided by Enclosures [IP Code], התנאים שבהם בוצעה הבדיקה: 15-35°C, 86-106 kPa, עומק 1.5 מטר למשך 30 דקות). אין לחשוף את המכשיר לתנאים שונים מתנאי הבדיקה. התוצאות עשויות להשתנות במהלך שימוש בפועל.

אזהרה

למרות דירוג של IP68, המכשיר עלול להיות מושפע מתנאים שלא נבדקו בסביבה מבוקרת של LG. שים לב שנוק שנגרם של סיבות שכאלה עלול לשנות את הצבע של ה-LDI (מחוון נזק מנוזלים). אם צבע ה-LDI שנמצא בתוך המוצר משתנה, יש להחשיב את המוצר כבלתי זכאי לשירותי תיקון בחינם, שמסופקים במסגרת האחריות המוגבלת על המוצר.

יש להימנע מחשיפת המוצר לסביבה שבה קיימים אבק או לחות במידה מוגזמת. אין להשתמש במוצר בסביבות הבאות.

אין לטבול את המוצר בנוזלים כימיקליים כלשהם (סבון, וכו') מלבד מים. 

אין לטבול את המוצר במי מלח, לרבות מי ים. 

אין לטבול את המוצר במעיינות מים חמים. 

אין לשחות עם המוצר. 

אין להניח את המוצר ישירות על חול (כגון בחוף הים) או על בוץ. 

אין להכניס את המוצר למים בעומק של יותר מ-1.5 מטר בערך. 
אין להשאיר את המוצר במים למשך יותר מ-30 דקות.

- אם המוצר נרטב, הקפד לנגב את המיקרופון, את הרמקול ואת שקע הסטריאו במטלית יבשה לפני השימוש.
- אם המוצר נרטב או שהרטבת את הידיים, הקפד לנגב את הידיים או את המוצר לפני שאתה משתמש בו.
- אין להשתמש במוצר במקומות שבהם עלולים להתיז עליו מים בלחץ גבוה (לדוגמה, בקרבת ברז או ראש מקלחת) ואין לטבול אותו במים לפרקי זמן ארוכים, מכיוון שהוא אינו מיועד לעמידה בלחץ מים גבוה.

- מוצר זה אינו עמיד לזעזועים. אין להפיל את המוצר או לגרום לו זעזועים. הדבר עלול לגרום לנזק או לעיוות היחידה המרכזית, וייתכן שבעקבות זאת תתאפשר חדירה של מים.
- תכונות העמידות של המוצר לחדירת מים או אבק עשויות להיפגע אם המוצר ייפול או יקבל מכה.
- אם המוצר נרטב, יש לייבש אותו ביסודיות באמצעות בד רך ונקי.
- אם תשתמש במוצר כשהוא רטוב, ייתכן שמסך המגע ותכונות אחרות לא יפעלו כהלכה.
- המוצר שרכשת עמיד לחדירת מים רק כשהמגש של כרטיס ה-SIM/כרטיס הזיכרון סגור כהלכה במקומו בתוך המוצר.
- אין לפתוח או לסגור את המגש של כרטיס ה-SIM/כרטיס הזיכרון כשהמוצר רטוב או שקוע במים. חשיפה של מגש פתוח לרטיבות או ללחות עשויה לגרום נזק למוצר.
- כרטיס ה-SIM/כרטיס הזיכרון מוקף בגומי [אריזה] כדי לסייע במניעה של חדירת אבק, מים או לחות למוצר. אין לפגום במסגרת הגומי [אריזה], שכן הדבר עשוי לאפשר חדירה של אבק, מים או לחות למוצר ולגרום לו נזק.



- אם לא תפעל על פי ההוראות המפורטות, ייתכן שהדבר יגרום לכך שהאחריות המוגבלת על המוצר תבוטל.
- אם המכשיר רטוב, הצבע של LDI שבתוך המכשיר ישתנה. במקרה כזה, המכשיר אינו זכאי לשירותי תיקון בחינם שמסופקים במסגרת האחריות המוגבלת של המכשיר.
- למרות דירוג של IP68, המכשיר שלך אינו עמיד כליל בפני מים בכל המצבים.



02

פונקציות בסיסיות

רכיבי מוצרים ואביזרים

הפריטים הבאים נכללים במכשיר שלך.

- מכשיר
- אוזניות סטריאו
- כבל USB
- פין שליפה
- מטען
- מדריך להתחלה מהירה
- נרתיק טלפון Jelly





- הפריטים המתוארים לעיל עשויים להיות אופציונליים.
- הפריטים הכלולים באריות המכשיר והזמינות של כל אביזר עשויים להשתנות בהתאם לאזור ולספק השירות.
- השתמש תמיד באביזרים מקוריים של LG Electronics. השימוש באביזרים המיוצרים על-ידי יצרנים אחרים עלול להשפיע על ביצועי השיחות של המכשיר או לגרום לתקלות. ייתכן ששירות התיקונים של LG אינו מכסה דבר זה.
- חלקים מסוימים של המכשיר עשויים מזכוכית מחוסמת. אם הפלת את המכשיר על משטח קשה או אם הוא נתון למכות חזקות, עלול להיגרם נזק לזכוכית המחוסמת. אם זה קורה, הפסק מיד להשתמש במכשיר ופנה למרכז שירות לקוחות של LG.



- אם אחד מהפריטים הבסיסיים הללו חסרים, פנה למשווק שממנו רכשת את המכשיר.
- כדי לרכוש פריטים נוספים, פנה למרכז שירות לקוחות של LG.
- פריטים מסוימים בקופסת המוצר כפופים לשינוי ללא הודעה מוקדמת.
- המראה והמפרטים של המכשיר כפופים לשינוי ללא הודעה מוקדמת.
- מפרט המכשיר עשוי להשתנות, בהתאם לאזור ולספק השירות.
- הסר את הסרט המגן מחיישן טביעת האצבע לפני שימוש בתכונה לזיהוי טביעת אצבע.

סקירה כללית של החלקים

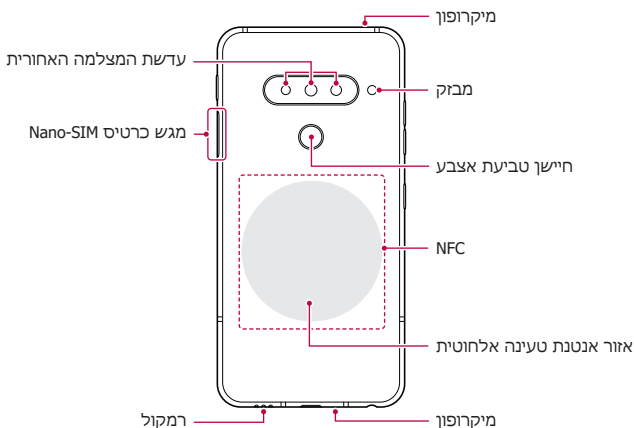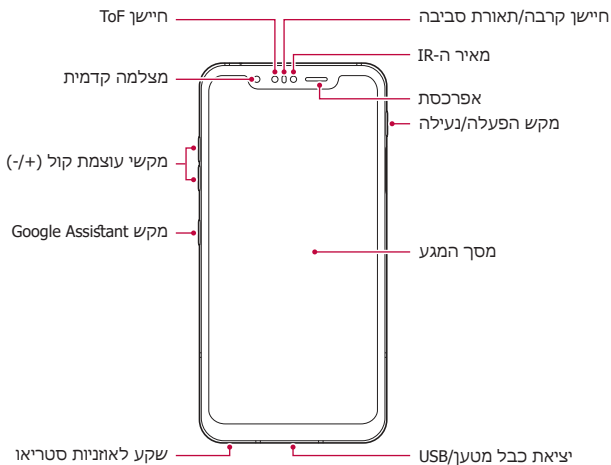


אל תנסה להסיר את המכסה האחורי בעצמך.



פעולה כזו עלולה לגרום נזק חמור לסוללה ולמכשיר, שעלול לגרום להתחממות יתר, שריפה ופציעה. אסור למי שאינו מוסמך לכך להסיר את המכסה האחורי והסוללה של המכשיר.

• Z Camera

- Z Camera מורכבת מחיישן ToF ומתאורת IR כדי להגדיל את דיוק הזיהוי במקומות אפלים או בחוץ, על-ידי זיהוי תלת-ממדי של המרחק או העומק בין ההתקן לבין האובייקט.

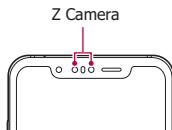

• חיישן ToF (Time-of-Flight)

- מדוד את המרחק המדויק על ידי זיהוי פליטת אור אינפרא אדום הנפלט ממאיר ה-IR.

• מאיר ה-IR

- פליטת האור האינפרא אדום.

• חיישן קרבה/תאורת סביבה

- חיישן קרבה: במהלך שיחה, חיישן הקרבה מכבה את המסך ומשבית את פונקציונליות המגע כאשר המכשיר צמוד לגוף. הוא מפעיל בחזרה את המסך והופך את פונקציונליות המגע לזמינה כאשר המכשיר נמצא מחוץ לטווח ספציפי.

- חיישן תאורת הסביבה: חיישן תאורת הסביבה מנתח את עוצמת תאורת הסביבה כאשר מצב בקרת בהירות אוטומטית מופעל.

• מקשי עוצמת קול

- כוונן את עוצמת הקול של רינגטונים, שיחות או התראות.
- בזמן השימוש במצלמה, לחץ בעדינות על מקש עוצמת הקול כדי לצלם תמונה. כדי לצלם תצלומים מתמשכים, לחץ לחיצה ארוכה על מקש עוצמת הקול.

- לחץ פעמיים על מקש החלשת עוצמת הקול כדי להפעיל את היישום מצלמה כאשר המסך נעול או כבוי. לחץ פעמיים על מקש הגברת עוצמת הקול כדי להפעיל את Capture+.
- מקש הפעלה/נעילה
- לחץ לחיצה קצרה על המקש כאשר ברצונך להפעיל או לכבות את המסך.
- לחץ לחיצה ארוכה על המקש כאשר ברצונך לבחור אפשרות בקרת צריכת חשמל.
- מקש Google Assistant
- המכשיר שלך כולל את Google Assistant באופן מובנה. אתר תשובות ובצע פעולות כאשר תהיה מחוץ למשרד/לבית. כדי להתחיל, הקש על מקש Google Assistant בצד הטלפון. לחץ והחזק את המקש כדי לדבר במהירות עם Assistant שלך. לחץ פעמיים כדי לפתוח את Visual Snapshot.
- הפעל את Google Assistant. ראה **Google Assistant** לקבלת פרטים.
- חיישן טביעת אצבע
- הפעל את תכונת הזיהוי באמצעות טביעת אצבע כדי לפשט את התהליך של ביטול נעילת המסך. ראה **סקירה כללית של זיהוי טביעת אצבע** לקבלת פרטים.

• ייתכן שהגישה לפונקציות מסוימות תהיה מוגבלת, בהתאם למפרטי המכשיר.

• החלק האחורי של המכשיר כולל אנטנת NFC מובנית. נקוט משנה זהירות כאשר אתה מטפל במכשיר כדי להימנע מגרימת נזק או מכיסוי אנטנת ה-NFC.


• אל תניח חפצים כבדים על המכשיר ואל תשב עליו. אחרת, עלול להיגרם נזק למסך המגע.

• כיסוי מגן למסך או אביזרים אחרים עלולים להפריע לפעולתו של חיישן הקרבה.

• אם המכשיר רטוב או שאתה משתמש בו במקום לח, ייתכן שמסך המגע או הלחצנים לא יפעלו כראוי.


החזק את המכשיר בצורה נכונה כפי שמוצג להלן. אם תכסה את פתח המיקרופון עם היד, עם האצבע או עם כיסוי מגן בעת שימוש במכשיר, ייתכן שבמהלך שיחה לא תישמע בבירור.

דוגמה להחזקה טובה

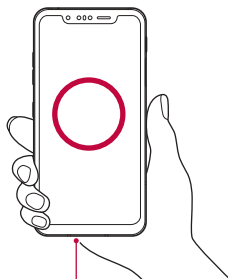

מיקרופון

דוגמה להחזקה לא טובה

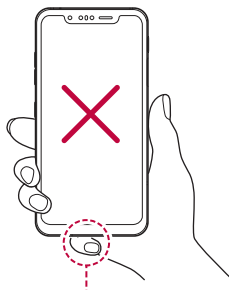

אל תכסה את המיקרופון.

הדלקה או כיבוי

הדלקת המכשיר

כאשר המכשיר כבוי, לחץ לחיצה ארוכה על מקש ההפעלה/נעילה.

- כאשר תפעיל את המכשיר בפעם הראשונה, תתבצע קביעת תצורה ראשונית. זמן האתחול הראשון של הטלפון החכם עשוי להיות ארוך מן הרגיל.

כיבוי המכשיר

לחץ לחיצה ארוכה על מקש הפעלה/נעילה ולאחר מכן בחר כיבוי.

הפעלה מחדש של המכשיר

כאשר המכשיר אינו פועל כראוי או אינו מגיב, הפעל אותו מחדש על-פי ההוראות הבאות.

- 1 הקש הקשה ארוכה על מקש ההפעלה/נעילה ועל מקש הנמכת העוצמה בו-זמנית עד שהמכשיר יכבה.
- 2 בעת הפעלה מחדש של המכשיר, שחרר את המקש.

אפשרויות בקרת צריכת חשמל

לחץ לחיצה ממושכת על מקש הפעלה/נעילה ולאחר מכן בחר אפשרות.

- **כיבוי:** כבה את המכשיר.
- **כיבוי והפעלה מחדש:** הפעל מחדש את המכשיר.


התקנת כרטיס ה-SIM

הכנס את כרטיס ה-SIM (Subscriber Identity Module) שסופק על-ידי ספק השירות כדי להתחיל להשתמש במכשיר.


- נהג בזהירות עם סיכת השליפה מכיוון שיש לה קצה חד. 

- כדי שתכונות העמידות במים והעמידות באבק יפעלו באופן יעיל, יש להכניס בצורה נכונה את מגש הכרטיס. 


1 הכנס את פין השליפה לתוך החור במגש הכרטיס.

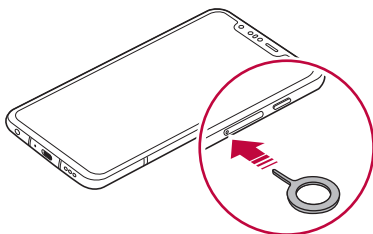


2 משוך החוצה את מגש הכרטיס.

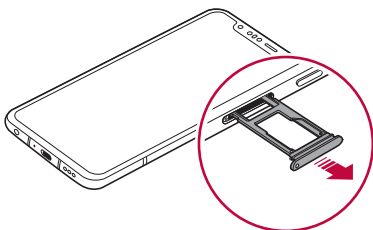

3 הנח את הכרטיס ה-SIM על מגש הכרטיס כאשר המגעים המוזהבים פונים כלפי מטה.

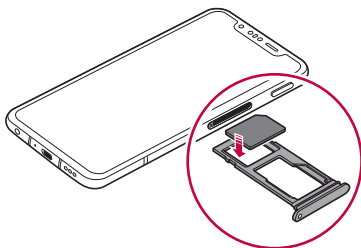

4 הכנס את מגש הכרטיס בחזרה לתוך החרץ.

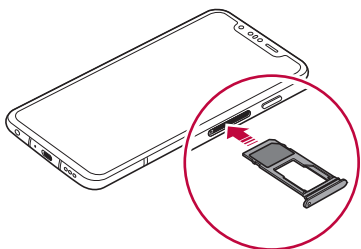

- מכשיר זה תומך בכרטיסי Nano SIM בלבד.




- לקבלת ביצועים ללא בעיות, מומלץ להשתמש במכשיר עם הסוג הנכון של כרטיס SIM. השתמש תמיד בכרטיס SIM מקורי שסופק על-ידי המפעיל.
- אל תאבד את כרטיס ה-LG. SIM-אינה נושאת באחריות למקרים ולבעיות שייגרמו כתוצאה מאובדן או העברה של כרטיס ה-SIM.
- הקפד שלא לגרום נזק לכרטיס ה-SIM כאשר אתה מכניס או מוציא אותו.
- כשאתה מכניס את כרטיס ה-SIM או את כרטיס הזיכרון, הנח אותו כראוי על מגש הכרטיס.
- כשאתה מכניס את מגש הכרטיס בחזרה למכשיר, הכנס אותו לרוחב בכיוון החץ כמוצג באיור. ודא שהכרטיס המונח על מגש הכרטיס אינו יוצא ממקומו.
- הכנס את כרטיס ה-SIM כשהמגעים המוזהבים פונים כלפי מטה.
- הקפד להכניס את כרטיס ה-SIM למכשיר על-פי ההוראות שבמדריך למשתמש.
- אם אתה מכניס את מגש הכרטיס למכשיר או מסיר אותו ממנו, היזהר שלא ייכנסו מים או נוזלים אחרים למגש הכרטיס. אם מוכנסים למכשיר כרטיס או מגש כרטיס רטובים, עלול להיגרם נזק למכשיר.
- כרטיס זיכרון הוא פריט אופציונלי.
- כתיבה ומחיקה של נתונים בתכיפות גבוהה עלולות לקצר את חיי השירות של כרטיס הזיכרון.
- ייתכן שכרטיסי זיכרון מסוימים לא יהיו תואמים באופן מלא למכשיר. שימוש בכרטיס לא תואם עלול לגרום נזק למכשיר או לכרטיס הזיכרון או לשיבוש הנתונים המאוחסנים בו.

הכנסת כרטיס הזיכרון

הכנס את כרטיס הזיכרון למכשיר.

המכשיר יכול לתמוך בכרטיס microSD בנפח של עד 2 TB. בהתאם ליצרן ולסוג של כרטיס הזיכרון, ייתכן שכרטיסי זיכרון מסוימים לא יתאימו למכשיר שלך.

- 1 הכנס את פין השליפה לתוך החור במגש הכרטיס.
- 2 משוך החוצה את מגש הכרטיס.
- 3 הנח את כרטיס הזיכרון על מגש הכרטיס כאשר המגעים המוזהבים פונים כלפי מטה.

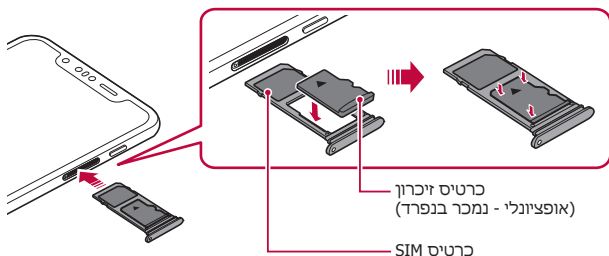

- 4 הכנס את מגש הכרטיס בחזרה לתוך החרץ.

- ייתכן שכרטיסי זיכרון מסוימים לא יהיו תואמים באופן מלא למכשיר. שימוש בכרטיס לא תואם עלול לגרום נזק למכשיר או לכרטיס הזיכרון או לשיבוש הנתונים המאוחסנים בו.



- כתיבה ומחיקה של נתונים בתכיפות גבוהה עלולות לקצר את חיי השירות של כרטיס הזיכרון.



הוצאת כרטיס הזיכרון

להוצאת כרטיס הזיכרון באופן בטוח, בטל תחילה את הטעינה שלו.

- 1 הקש על  < **הגדרות** < **אחסון** < .
- 2 הכנס את פין השליפה לתוך החור במגש הכרטיס ולאחר מכן הוצא את מגש הכרטיס מהמכשיר.
- 3 הסר את כרטיס הזיכרון ממגש הכרטיס.
- 4 הכנס את מגש הכרטיס בחזרה לתוך החרץ.


- אין להוציא את כרטיס הזיכרון בזמן שהמכשיר מעביר נתונים או ניגש למידע. אי הקפדה על כך עלולה לגרום לאובדן או לגרום לשיבוש הנתונים או לנזק לכרטיס הזיכרון או למכשיר עצמו. LG אינה אחראית להפסדים שייגרמו עקב שימוש לרעה או שימוש לא נאות בכרטיסי זיכרון, לרבות אובדן נתונים.



סוללה

טעינת הסוללה

לפני השימוש במכשיר, טען את הסוללה במלואה.
הטען את המכשיר בעזרת הכבל מסוג USB Type-C.

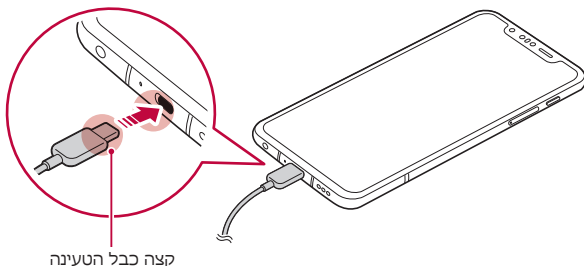



- אל תשתמש במסוף החיצוני, בכבל הטעינה או במגדר של המכשיר באיזור שיש בו לחות. הדבר עלול לגרום לשריפה, להתחשמלות, לפציעה או לנזק למכשיר. אם יש לחות, הפסק מיד להשתמש במכשיר והסר את הלחות במלואה.
- הקפד להשתמש בכבל ה-USB שסופק עם המכשיר.
- הקפד להשתמש במטען ובכבל טעינה המאושרים לשימוש על-ידי LG. טעינת הסוללה באמצעות מטען של צד שלישי עלולה לגרום להתפוצצות הסוללה או לנזק למכשיר.
- המכשיר כולל סוללה פנימית ניתנת לטעינה. כדי לשמור על בטיחות, אל תוציא את הסוללה המובנית.
- שימוש במכשיר כאשר הוא נטען עלול לגרום להתחשמלות. כדי להשתמש במכשיר, הפסק את טעינתו.



- הוצא את המטען משקע החשמל לאחר שהמכשיר נטען במלואו. הדבר ימנע צריכת חשמל מיותרת.
- המוצר מגיע עם מתאם טעינה התומך בהטענה מהירה.
- תכונת הטעינה המהירה עלולה לא לפעול אם נעשה שימוש במתאם טעינה מהיר שאינו המתאם המקורי שסופק עם המוצר.
- ניתן לטעון את הסוללה בדרך נוספת, על-ידי חיבור כבל USB בין המכשיר לבין מחשב שולחני או מחשב נייד. זה עלול להימשך זמן רב יותר לעומת חיבור המתאם לשקע חשמל בקיר.
- אין לטעון את הסוללה באמצעות רכזת USB שאינה תומכת במתח הנקוב. הטעינה עלולה להיכשל או להיפסק באופן לא מכוון.

אמצעי זהירות בעת שימוש במכשיר

- הקפד להשתמש בכבל ה-USB המסופק עם המוצר, אל תחבר את המכשיר לכבלי USB או למטענים של חברות צד שלישי. האחריות המוגבלת של LG אינה מכסה שימוש באביזרים של צד שלישי.
- אם לא תפעל על-פי ההוראות המפורטות במדריך זה או אם תשתמש במכשיר לא כהלכה, הדבר עשוי לגרום לו נזק.

טעינה אלחוטית

מכשיר זה תומך בתכונה טעינה אלחוטית. הטען את המכשיר באמצעות מטען אלחוטי בעל אישור Qi (אופציונלי, נמכר בנפרד).

טעינת הסוללה באמצעות מטען אלחוטי

1 הנח את המכשיר במרכז המטען האלחוטי כשהוא מכוון אל אנטנת הטעינה האלחוטית שבגב המכשיר.

- כדי לבדוק את איזור אנטנת הטעינה האלחוטית, ראה **סקירה כללית של החלקים**.

2 כשהסוללה טעונה במלואה, נתק את המכשיר מהמטען.

- כשאתה מטעין את הסוללה באמצעות מטען אלחוטי, אל תניח חומרים מגנטיים, מתכתיים או מוליכים בין המכשיר לבין המטען. חומרים אלה עלולים להפריע לטעינה או למכשיר והמטען עלול להתחמם. במקרה כזה, עלול להיגרם נזק למכשיר, למטען או לכרטיסי ה-SIM/הזיכרון.



- אם טמפרטורת הסוללה חורגת מרמה מסוימת בזמן טעינת המכשיר, ייתכן שהטעינה תופסק.
- אם לגב המכשיר מוצמדים חומרים מגנטיים, מתכתיים או מוליכים או אם נעשה שימוש בכיסוי מגן, ייתכן שהמכשיר לא ייטען כראוי.
- אם אתה מטעין את הסוללה באמצעות מטען אלחוטי באיזורים שבהם עוצמת אות הרשת חלשה, ביצועי הרשת של המכשיר עלולים לרדת עוד יותר.
- הטען את המכשיר באמצעות מטען אלחוטי בעל אישור Qi (אופציונלי, נמכר בנפרד). מכיוון שהאחריות המוגבלת של LG אינה מכסה שימוש באביזרים של צד שלישי, יש ליצור קשר עם היצרן המהווה צד שלישי.
- מוצר זה תומך בטעינה אלחוטית. השתמש במטען אלחוטי מאושר Qi (נמכר בנפרד) כדי לטעון את המוצר. מטענים אלחוטיים סליליים מסוימים עשויים שלא לתמוך בטעינה אלחוטית. מטענים אלחוטיים התומכים בפרופיל EPP (Extended Power Profile) מאפשרים טעינה אלחוטית מהירה.



שימוש יעיל בסוללה

חיי הסוללה עשויים להתקצר אם תשאיר מספר רב של יישומים ופונקציות במצב פעיל לאורך זמן.

כבה את הפעולות ברקע כדי להאריך את חיי הסוללה.

כדי למזער את צריכת הסוללה, פעל בהתאם לעצות הבאות:


- כבה את פונקציות ה-Bluetooth® או רשת ה-Wi-Fi כשאינך משתמש בהן.
- הגדר זמן קצוב קצר ככל האפשר לכיבוי המסך.
- מזער את בהירות המסך.
- הגדר נעילת מסך שתופעל כאשר המכשיר לא בשימוש.
- בדוק את רמת הסוללה בזמן שאתה משתמש ביישומים שהורדת.

מסך המגע

תוכל ללמוד כיצד לשלוט במכשיר שברשותך על-ידי שימוש במחוות מסך המגע.


הקשה

הקש קלות עם קצה האצבע כדי לבחור או להפעיל יישום או אפשרות.

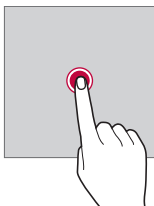


הקשת הקשה ממושכת

הקש הקשה ממושכת למשך כמה שניות כדי להציג תפריט עם אפשרויות זמינות.

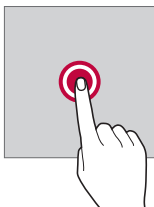


הקשה כפולה

הקש פעמיים במהירות כדי להגדיל או להקטין דף אינטרנט או מפה.

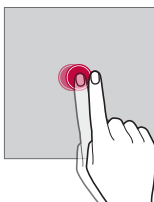


גרירה

גע והחזק פריט, כגון יישום או וידג'ט, ולאחר מכן הזז את האצבע למיקום אחר בתנועה מבוקרת. תוכל להשתמש במחוזה זו כדי להזיז פריט.

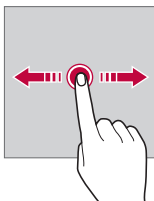



החלקה

גע במסך באצבעך והזז אותה במהירות מבלי לעצור. באפשרותך להשתמש במחוזה זו כדי לגלול ברשימה, בדף אינטרנט, בתמונות, במסכים ועוד.

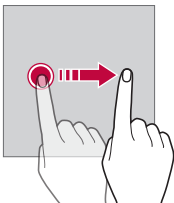

צביטה או פריסה

צבט בשתי אצבעות כדי להקטין את התצוגה של תמונה או מפה. כדי להגדיל, פרוס את האצבעות כדי להרחיקן זו מזו.

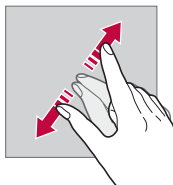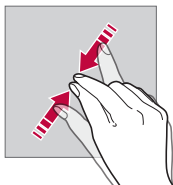

- אין לחשוף את מסך המגע לזעזוע פיזי קיצוני. הדבר עלול לגרום נזק לחיישן המגע.





- תקלה של מסך המגע עלולה להתרחש אם תשתמש במכשיר בקרבת חומרים מגנטיים, מתכתיים או מוליכים.
- אם אתה משתמש במכשיר בתנאי תאורה בוהקת, כגון אור שמש ישיר, ייתכן שהמסך לא יהיה גלוי, בהתאם למיקום שלך. השתמש במכשיר במיקום מוצל או במיקום עם תאורת סביבה שאינה בוהקת מדי אך מוארת במידה שמספיקה לקרוא ספרים.
- אל תפעיל כוח רב מדי בעת לחיצה על המסך.
- הקש בעדינות עם קצה האצבע על האפשרות הרצויה.
- ייתכן שבקרת המגע לא תפעל כראוי אם תקיש על המסך עם הציפורן או כשאתה לובש כפפות.
- ייתכן שבקרת המגע לא תפעל כראוי כאשר המסך לח או רטוב.
- ייתכן שמסך המגע לא יפעל כראוי אם יש על המסך ציפוי מגן או שחיברת אל המכשיר אביזר שנרכש בחנות מקוונת או פיזית שאינה מתמחה.
- הצגת תמונה סטטית לפרקי זמן ארוכים עלולה לגרום לדמויות גרר או לצריבת התמונה במסך. כבה את המסך או הימנע מלהציג את אותה תמונה למשך זמן רב כאשר אינך משתמש במכשיר.

מסך ראשי


סקירה כללית של המסך הראשי

המסך הראשי הוא נקודת המוצא שממנה ניתן לגשת לפונקציות וליישומים השונים במכשיר. הקש על  בכל מסך כדי לעבור היישר אל המסך הראשי.

תוכל לנהל את כל היישומים והווידג'טים במסך הראשי. החלק את המסך לשמאל או לימין כדי להציג במבט מהיר את כל היישומים המותקנים.

פריסת המסך הראשי

ניתן להציג את כל היישומים ולארגן וידג'טים ותיקיות במסך הראשי.

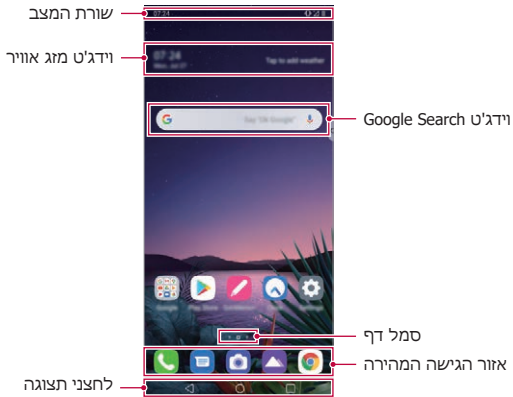

• מסך הבית עשוי להשתנות בהתאם למדיניות היצרן, להגדרות המשתמש, לגרסת התוכנה או לספק השירות.

- **שורת מצב:** הצג את סמלי המצב, השעה ורמת הטעינה של הסוללה.
- **וידג'ט מזג אוויר:** הצג את נתוני מזג האוויר והשעה עבור אזור מסוים.
- **וידג'ט Google Search:** הקש או דבר כדי לפתוח את Google Search.
- **סמל דף:** הצג את המספר הכולל של לוחות המסך הראשי. ניתן להקיש על סמל הדף הרצוי כדי לעבור לדף שבחרת. הסמל שמשקף את הלוח הנוכחי יסומן.
- **אזור הגישה המהירה:** קבע יישומים ראשיים בתחתית המסך כך שתוכל לגשת אליהם מכל אחד מהלוחות של המסך הראשי.

• לחצני תצוגה

- ▷ : חזור למסך הקודם. סגור את לוח המקשים או את החלונות המוקפצים.
- ○ : הקש כדי לעבור למסך הראשי. כדי להפעיל את Google Assistant, הקש הקשה ממושכת.
- □ : הקש כדי להציג רשימה של היישומים שהיו בשימוש לאחרונה או הפעל יישום מתוך הרשימה. כדי למחוק את כל היישומים שהיו בשימוש לאחרונה, הקש על נקה הכל.

שינוי הסגנון של לחצני התצוגה

ניתן לשנות את הסגנון של לחצני התצוגה.

1 הקש על ○ < הגדרות < תצוגה < שורת ניווט.

2 תחת סגנון, בחר מחוות, חיישן תנועה ולחצני או לחצנים בלבד כדי להתאים להעדפותיך.

• **מחוות:** כדי לראות את היישומים האחרונים, החלק על לחצן הבית — כלפי מעלה.

• **חיישן תנועה ולחצני:** לחצן "הקודם" < ולחצן "בית" ○ זמינים. כדי לראות את היישומים האחרונים, החלק על לחצן הבית ○ כלפי מעלה.

• **כפתורים בלבד:** ▷ / ○ / □ זמינים. הקש על □ כדי לראות את היישומים האחרונים.

עריכת לחצני התצוגה

תוכל לסדר מחדש את לחצני התצוגה או להוסיף פונקציות בשימוש נפוץ לאזור לחצני התצוגה.

הקש על ○ < הגדרות < תצוגה < שורת ניווט < שילוב לחצנים והתאם אישית את ההגדרות.

• המכשיר מספק כמה פונקציות, כולל 'התראה' ו-Capture+. ניתן להוסיף עד שני פריטים.

לחצני נעילה/הסתרה

הסמל לנעילה או להסתרה של לחצני התצוגה מופיע בצד שמאל התחתון של המסך.

אם תרצה לנעול את לחצני התצוגה בעת הסתרת הלחצנים, הקש על □ בצד שמאל של לחצני התצוגה.

כדי להסתיר שוב את לחצני התצוגה, בצע הקשה כפולה על ■.

• ייתכן שלא תהיה תמיכה במאפיינים מסוימים בעת הסתרת לחצני התצוגה. 

סמלי מצב

כאשר מופעלת התראה על הודעה שלא נקראה, אירוע בלוח השנה או התראה של שעון מעורר, בשורת המצב מוצג סמל ההתראה התואם. בדוק את מצב המכשיר באמצעות סמלי ההתראות המוצגים בשורת המצב.



	אין אות
	נתונים משודרים כרגע דרך הרשת
	התראה מוגדרת
	מצב רטט מופעל
	Bluetooth מופעל
	מחובר למחשב דרך USB
	רמת הסוללה
	מצב טיסה מופעל
	שיחות שלא נענו
	Wi-Fi מחובר
	מצב השתק מופעל
	GPS מופעל
	נקודה חמה מופעלת

כרטיס SIM חסר	
מצב NFC מופעל	

- ייתכן שכמה מהסמלים הללו ייראו שונים או לא יופיעו כלל, בהתאם למצב המכשיר שלך. התייחס לסמלים בהתאם לסביבה האמתית ולאזור שבהם אתה משתמש במכשיר ובהתאם לספק השירות.
- הסמלים המוצגים עשויים להשתנות, בהתאם לאזור או לספק השירות.

חלונית ההתראות

- תוכל לפתוח את לוח ההתראות על-ידי גרירת שורת המצב כלפי מטה במסך הראשי.
- באפשרותך לגרור את חלון ההודעה או להקיש על סמל החץ כדי לפתוח את רשימת סמלי ההגדרה המהירה.
 - באפשרותך להקיש על  להוסיף, למחוק או לסדר סמלים בחלון ההודעה.
 - אם תקיש הקשה ארוכה על הסמל, מסך ההגדרות של הפונקציה המתאימה יופיע.

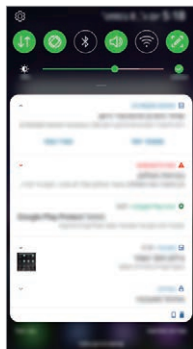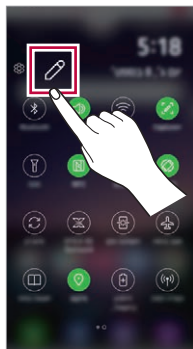


• ניתן להשתמש בלוח ההתראות גם במסך הנעילה. גרור את לוח ההתראות בזמן שהמסך נעול כדי לגשת במהירות לתכונות הרצויות.



שינוי כיוון המסך

תוכל להגדיר החלפה אוטומטית של כיוון המסך בהתאם למנח הפיזי של המכשיר.

בלוח ההתראות, הקש על **סיבוב** ברשימת סמלי הגישה המהירה. לחלופין, הקש על **הגדרות** > **תצוגה** והפעל את **סיבוב מסך אוטומטי**.

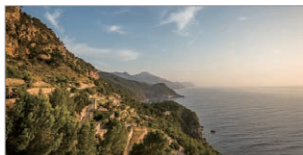


פונקציות בסיסיות

עריכת המסך הראשי

במסך הראשי, הקש הקשה ממושכת על אזור ריק ובחר את הפעולה הרצויה.

- כדי לסדר מחדש את הלוחות של המסך הראשי, הקש הקשה ארוכה על לוח ולאחר מכן גרור אותו למיקום אחר.
- כדי להוסיף וידג'ט למסך הראשי, הקש הקשה ממושכת על אזור ריק במסך הבית ולאחר מכן בחר **וידג'טים**.
- כדי לשנות טפטים, ערכות נושא, סמלים ו-AOD, גע והחזק אזור ריק במסך הראשי ולאחר מכן בחר **טפט וערכת נושא**. ניתן גם להקיש על  < **הגדרות** < **תצוגה** < **טפט וערכת נושא**, ובחר טפטים, ערכות נושא, סמלים ו-AOD להחלה על המכשיר.
- כדי לקבוע את תצורת ההגדרות של המסך הראשי, הקש הקשה ממושכת על אזור ריק במסך הבית ולאחר מכן בחר **הגדרות מסך בית**. ראה **הגדרות מסך בית** לקבלת פרטים.
- כדי להציג או להתקין מחדש את היישומים שהוסרו, גע והחזק אזור ריק במסך הראשי, ולאחר מכן בחר באפשרות **יישום סל המיחזור**. ראה **יישום סל המיחזור** לקבלת פרטים.
- כדי לשנות את מסך ברירת המחדל, גע והחזק אזור ריק במסך הראשי, עבור אל המסך הרצוי, הקש על , ולאחר מכן הקש על המסך פעם נוספת.

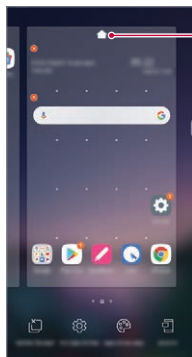



מסך ברירת מחדל

צפייה בערכת הנושא של הרקע

תוכל להציג את תמונת הרקע בלבד על-ידי הסתרת היישומים והווידג'טים במסך הראשי.

הרחק את שתי האצבעות על המסך הראשי.

- כדי לחזור אל מסך היישומים והווידג'טים המקורי, בצע תנועת צביטה במסך הראשי או הקש על .

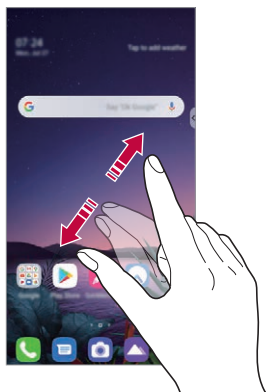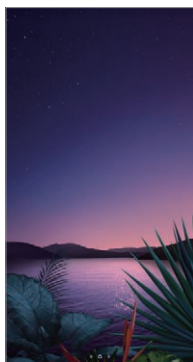

הזזת יישומים במסך הראשי

במסך הראשי, הקש הקשה ארוכה על יישום ולאחר מכן גרור אותו למיקום אחר.

- כדי להשאיר יישומים בשימוש נפוץ בתחתית המסך הראשי, לחץ לחיצה ארוכה על יישום וגרור אותו לאזור הגישה המהירה שבתחתית המסך.
- כדי להסיר סמל מאזור הגישה המהירה, גרור אותו אל המסך הראשי.

שימוש בתיקיות מתוך המסך הראשי

יצירת תיקיות

במסך הראשי, הקש הקשה ארוכה על יישום ולאחר מכן גרור אותו מעל יישום אחר.

- פעולה זו תיצור תיקייה חשה והיישום יתווסף אליה.

עריכת תיקיות

במסך הראשי, הקש על תיקייה ובצע אחת מהפעולות הבאות.

- כדי לערוך את שם וצבע התיקייה, הקש על שם התיקייה.
- כדי להוסיף יישומים, הקש הקשה ממושכת על יישום ולאחר מכן גרור אותו מעל התיקייה כדי לשחרר אותו.
- כדי להסיר יישום מהתיקייה, הקש הקשה ארוכה על היישום וגרור אל מחוץ לתיקייה. אם היישום שהסרת הוא היישום היחיד שהיה בתיקייה, התיקייה תוסר באופן אוטומטי.
- באפשרותך גם להוסיף או להסיר יישומים לאחר הקשה על ⊕ בתיקייה.

- לא ניתן לשנות את צבע התיקייה כאשר משתמשים בערכת נושא שהורדה.



הגדרות מסך בית

באפשרותך להתאים אישית את הגדרות מסך הבית.

1 הקש על ○ < הגדרות < תצוגה < מסך ראשי.

2 התאם אישית את ההגדרות הבאות:

- **בחר בית:** בחר מצב של המסך הראשי.
- **טפט:** שנה את טפט הרקע של המסך הראשי.
- **אפקט בהחלפת מסכים:** בחר אפקט שיוחל כאשר לוח המסך הראשי מתחלף.
- **צורות סמלים:** בחר אם ברצונך שלסמלים יהיו פינות מרובעות או מעוגלות.

- **מסך בית ימני:** בחר מה להציג על המסך הממוקם מימין למסך הראשי.
- **מיין את היישומים לפי:** הגדר כיצד יתבצע מיון של יישומים במסך הראשי.
- **רשת:** שנה את מצב סידור היישומים עבור המסך הראשי.
- **הסתר יישומים:** בחר אילו יישומים ברצונך להסתיר ממסך הבית.
- **לאפשר לולאות מסך בית:** הפעל כדי לאפשר גלילה מתמשכת במסך הראשי (חזרה למסך הראשון לאחר המסך האחרון).

• פונקציה זו זמינה כאשר הזרמת Google מופעלת. 

- **חפש:** חפש ע"י החלקת אצבע כלפי מטה במסך הבית.
- **נעילת מסך ראשי:** אפשר כדי למנוע הסרה או ארגון מחדש של יישומים ורכיבים גרפיים.

נעילת מסך

סקירה כללית של נעילת המסך

לחיצה על מקש הפעלה/נעילה תכבה את מסך המכשיר ותנעל אותו. בנוסף, המסך נכבה וננעל לאחר שהמכשיר לא היה פעיל במשך פרק זמן שצוין. אם תלחץ על מקש הפעלה/נעילה כאשר לא מוגדרת נעילת מסך, המסך הראשי יופיע באופן מיידי. כדי להבטיח שהמכשיר יהיה מאובטח ולמנוע גישה לא רצויה למכשיר, הגדר נעילת מסך.

- נעילת מסך מונעת קלט מיותר על מסך המכשיר ומצמצמת את צריכת הסוללה. אנו ממליצים להפעיל את נעילת המסך כאשר אינך משתמש במכשיר. 

הגדרת נעילת מסך

לרשותך מספר אפשרויות שונות לנעילת המסך.

1 הקש על  < הגדרות < מסך הנעילה ואבטחה < בחר **נעילת מסך** ואז בחר את השיטה המועדפת עליך.

2 התאם אישית את ההגדרות הבאות:

- **ללא:** ביטול פונקציית נעילת המסך.
- **החלקה:** החלק על המסך כדי לבטל את נעילת המסך.
- **Knock Code:** הקש על המסך לפי תבנית כדי לבטל את נעילת המסך.
- **תבנית:** צייר תבנית לביטול נעילת המסך.
- **קוד PIN:** הזן סיסמה מספרית לביטול נעילת המסך.
- **סיסמה:** הזן סיסמה אלפאנומרית לביטול נעילת המסך.
- **טביעות אצבע:** בטל את נעילת המסך באמצעות טביעת האצבע.
- **אפשר Face Unlock:** בטל את נעילת המסך על-ידי שתאפשר למכשיר לזהות את פניך.
- **אפשר Token ID:** בטל את נעילת המסך על-ידי שתאפשר למכשיר לזהות את כף ידך.

• אם תנסה לבטל את נעילת המכשיר 5 פעמים באופן שגוי, המסך ייחסם למשך 30 שניות.



הגדרות אתחול מאובטח

כאשר אתה בוחר ב-Knock Code, בתבנית, ב-PIN או בסיסמה כשיטה לנעילת מסך, אתה יכול להגדיר את המכשיר כך שיינעל בכל הפעלה שלו כדי לאבטח נתונים.

- לא תוכל להשתמש בכל הפונקציות, למעט שיחת החירום, עד אשר תבטל את נעילת המכשיר.
- אם תשכח את הסיסמה לביטול הצפנה, לא תוכל לשחזר נתונים מוצפנים ומידע אישי.

אמצעי זהירות עבור התכונה הפעלה מאובטחת

- אם תשכח את הסיסמה לביטול הצפנה, לא תוכל לשחזר נתונים מוצפנים ומידע אישי.
- הקפד לשמור את סיסמאות נעילת המסך שלך בנפרד.
- אם תזין את סיסמאות נעילת המסך באופן שגוי יותר ממספר הפעמים שצוין, המכשיר יאפס את עצמו באופן אוטומטי והנתונים המוצפנים והמידע האישי שלך יימחקו אוטומטית, ולא תהיה אפשרות לשחזר אותם.
- היזהר שלא להזין סיסמאות נעילת מסך שגויות יותר ממספר הפעמים שצוין.
- כשאתה מפעיל את המכשיר מיד לאחר שהמכשיר עבר איפוס, מופעלת גם הצפנה. אם תפסיק את ההצפנה באופן שרירותי, ייתכן שייגרם נזק לנתונים. המתן עד לסיום האיפוס.

התאמה אישית של מסך הנעילה

תוכל להתאים אישית את נעילת המסך.

1 הקש על < הגדרות > מסך הנעילה ואבטחה < התאמה אישית של מסך הנעילה.

2 בחר את התפקוד שברצונך לקבוע.

- **טפט:** מאפשר לקבוע את הרקע של מסך הנעילה שלך.
- **שעון:** מאפשר לקבוע את מיקום השעון במסך הנעילה.
- **קיצורי דרך:** מאפשר לבחור יישומים להפעלה במסך הנעילה שלך. הגדרה זו תופיע רק אם מוגדר מסך נעילה.
- **אנימצית מזג אוויר:** אפשר את האפשרות הזו כדי להציג הנפשות של מזג האוויר עבור המיקום הנוכחי במסך הנעילה.
- **פרטי יצירת קשר עבור טלפון שאבד:** מאפשר לך לקבוע טקסט שיוצג במסך הנעילה כדי לזהות את בעלי הטלפון.

הגדרות נעילה מאובטחת

ניתן לקבוע את הגדרות הנעילה המאובטחת.

1 הקש על  < הגדרות < מסך הנעילה ואבטחה < הגדרות נעילה מאובטחת.

2 בחר את התפקוד שברצונך לקבוע.

- **הפוך את התבנית לגלויה:** מאפשרת לך להפוך את התבנית לגלויה.
- **זמן לנעילה:** מאפשר לך לקבוע את משך הזמן לפני נעילה אוטומטית לאחר שהתאורה האחורית כבית (גמר-זמן עקב אי-פעילות).
- **נעילה באמצעות לחצן ההפעלה:** אפשר אפשרות זו כדי לנעול באופן מידי את המסך בעת לחיצה על לחצן הפעלה/נעילה. הגדרה זו גוברת על ההגדרה טיימר נעילת אבטחה.
- **הצג נעילה:** מאפשר להציג את אפשרות תפריט ההפעלה כדי להפסיק את ההודעות במסך הנעילה, Smart Lock והנעילות הביזמטריות.
- **Smart Lock:** מאפשר לך לקבוע מכשירים, מקומות, קולות ו/או זיהוי גוף מהימנים שיאפשר לטלפון שלך להישאר במצב לא נעול.

- התפריטים שתוכל להגדיר עשויים להיות שונים, בהתאם לשיטת נעילת המסך שתבחר.



הפעל מסך

ניתן להקיש הקשה כפולה על המסך כדי להפעיל או לכבות אותו.



- אפשרות זו זמינה אך ורק במסך הראשי שסופק על-ידי LG. היא לא תפעל כראוי במפעיל מותאם אישית או במסך ראשי שהותקן על-ידי המשתמש.
- בעת הקשה על המסך, השתמש בקצה האצבע. אל תשתמש בציפורן.
- כדי להשתמש בתכונה הפעלמסך, ודא שחיישן הקרובה/תאורה לא נחסם על-ידי מדבקה או כל חומר זר אחר.

הדלקת המסך

- הקש פעמיים באמצע המסך
- הקשה על החלק העליון או התחתון של המסך עשויה להקטין את שיעור זיהוי הפעולה.

כיבוי המסך

- הקש פעמיים על שטח ריק במסך הראשי ובמסך הנעילה.
- לחלופין, הקש הקשה כפולה על שטח ריק בשורת המצב.

השבת את- הפעל מסך

- אם אינך רוצה להשתמש בפונקציה הפעל מסך, הגדר באופן הבא:
- הקש על  < **הגדרות** < **הרחבות** < **הפעל מסך** וגרור אותה כדי להשבית את הפונקציה.

Knock Code

- תוכל לבטל את נעילת המסך על-ידי יצירת Knock Code משלך.
- כאשר המסך נעול, תוכל לגשת ישירות למסך הראשי על-ידי הקשה על המסך ברצף שצוין.



- תוכל להשתמש ב-Knock Code יחד עם התכונה הפעלמסך.
- הקפד להשתמש בקצה האצבע בעת הקשה על המסך.

יצירת Knock Code

- 1 הקש על ○ < הגדרות < מסך הנעילה ואבטחה < בחר נעילת מסך < Knock Code.
- 2 הקש על הריבועים בתבנית הרצויה לך כדי ליצור Knock Code ולאחר מכן הקש על **הבא**.
- 3 לאימות, הזן שוב את ה-Knock Code ולאחר מכן הקש על **אשר**.

ביטול נעילת המסך עם Knock Code

- בטל את נעילת המסך על ידי הזנת ה-Knock Code שיצרת.
- אתה יכול גם להזין את Knock Code במסך המגע כאשר המסך כבוי.
- ניתן גם להזין Knock Code כאשר מסך הנעילה מופעל.

הצפנת כרטיס זיכרון

ניתן להצפין את הנתונים השמורים בכרטיס הזיכרון כדי להגן עליהם. לא ניתן לגשת לנתונים המוצפנים בכרטיס הזיכרון ממכשיר אחר.

- 1 הקש על ○ < הגדרות < מסך הנעילה ואבטחה < **הצפנה ואישורים** < SD הצפן אחסון כרטיס .
 - 2 קרא את הסקירה הכללית של הצפנת כרטיס הזיכרון המוצגת על המסך ולאחר מכן הקש על **המשך** כדי להמשיך.
 - 3 בחר אפשרות והקש על **הצפנה**.
- **הצפנת קובץ חדש**: הצפן רק את הנתונים שנשמרו בכרטיס הזיכרון לאחר ההצפנה.
 - **הצפנה מלאה**: הצפן את כל הנתונים השמורים כעת בכרטיס הזיכרון.
 - **ללא קבצי מדיה**: הצפן את כל הקבצים, למעט קובצי מדיה כמו מוסיקה, תמונות וסרטוני וידאו.

- לאחר שיחל תהליך הצפנת כרטיס הזיכרון, פונקציות מסוימות לא יהיו זמינות.
- כיבוי המכשיר תוך כדי תהליך ההצפנה יגרום לכישלון התהליך ועלול לגרום נזק לנתונים מסוימים. לכן הקפד לוודא שהסוללה טעונה ברמה מספקת לפני שאתה מתחיל בתהליך ההצפנה.
- הקבצים המוצפנים יהיו נגישים רק מהמכשיר שבו הקבצים הוצפנו.
- לא ניתן להשתמש בכרטיס הזיכרון המוצפן במכשיר אחר של LG. כדי להשתמש בכרטיס הזיכרון המוצפן במכשיר ניד אחר, אתחל את הכרטיס.
- ניתן להפעיל הצפנת כרטיס זיכרון אפילו כאשר אין כרטיס זיכרון בתוך המכשיר. כל כרטיס זיכרון שיוזקן לאחר ההצפנה יוצפן באופן אוטומטי.

יצירת צילומי מסך

באפשרותך לצלם תמונה של המסך הנוכחי שמוצג במכשיר.

באמצעות קיצור דרך

לחץ לחיצה ארוכה (לפחות שתי שניות) על מקש ההפעלה/נעילה ועל מקש החלשת עוצמת הקול במקביל.

- תוכל לראות תמונות מסך דרך התיקייה **Screenshots** בגלריה.

באמצעות Capture+

במסך שבו ברצונך ליצור יישום מקליט מסך, גרור את שורת המצב כלפי מטה ולאחר מכן הקש על .

- כאשר המסך כבוי או נעול, קבל גישה אל **Capture+** בשתי לחיצות על מקש הגברת עוצמת הקול. כדי להשתמש בתכונה זו, הקש על  < הגדרות < הרחבות < קיצורי דרך ולאחר מכן הפעל **פתח-Capture+**.
- ראה **כתיבת הערות על יישום מקליט מסך** לקבלת פרטים.


הזנת טקסט

שימוש בסרגל הכלים החכם

ניתן להשתמש במספר שיטות קלט מקלדת במקום אחד. ניתן לבחור את שיטת הקלט הרצויה מהחלק העליון של המקלדת.

- 1 בחר את שיטת קלט המקלדת הרצויה מסרגל הכלים החכם.
- 2 הקש על ✓ ובחר את שיטת הקלט שברצונך להציג בסרגל הכלים החכם או סדר אותן מחדש.

סרגל כלים
חכם

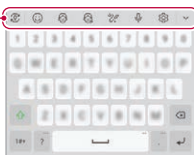

- מקלדת LG אינה מוגדרת כברירת מחדל בטלפון שלך. תוכל לשנות זאת ממסך הגדרות המקלדת.
- שיטות קלט נתמכות מסוימות עשויות להיות שונות, בהתאם למכשיר שברשותך.
- ניתן להפעיל את מאפיין סרגל הכלים החכם מהגדרות המקלדת.
- ניתן גם להשתמש בשיטות הקלט של המקלדת על-ידי הקשה על .

- 😊 : הוסף אמוג'יס.
- 🙄 : הוסף מדבקות אוטאר.
- 🙄 : הוסף מדבקות ani.
- 🗣️ : הקש על 🗣️ כדי להזין טקסט באמצעות קולך.
- כדי לאפשר זיהוי מיטבי של פקודות קוליות, דבר בצורה ברורה.
- כדי להזין טקסט בדיבור, ודא שהמכשיר מחובר לרשת.


- כדי לבחור את השפה שתוגדר לזיהוי קולי, הקש על **שפות** < במסך הזיהוי הקולי.
- ייתכן שאין תמיכה בפונקציה זו, או שרשימת השפות הנתמכות תשתנה בהתאם לאזור השירות.
- : גישה להגדרות המקלדת.
- : פתיחת האחסון הזמני. ראה **אחסון זמני** לקבלת פרטים
- : הפעל את המקלדת הצפה בעת שימוש במאפיין ריבוי-חלונות. ניתן גם להעביר את המקלדת למיקום הרצוי.

שימוש במקלדת החכמה

תוכל להשתמש במקלדת Smart כדי להזין ולערוך טקסט. באמצעות מקלדת Smart, תוכל להציג טקסט תוך כדי הקלדה, בלי שתצטרך לעבור בין המסך למקלדת קונבנציונלית. הדבר יאפשר לך לאתר בקלות שגיאות ולתקן אותן תוך כדי הקלדה.

הזזת הסמן

מקלדת Smart מאפשרת לך להזיז את הסמן למיקום המדויק שאתה רוצה. בעת הקלדת טקסט, הקש הקשה ממושכת על מקש הרווח ולאחר מכן גרור שמאלה או ימינה.

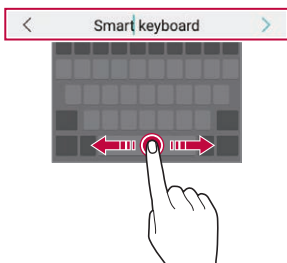

• אפשרות זו זמינה רק במקלדות QWERTY.

הצעת מילים

מקלדת Smart מנתחת באופן אוטומטי את דפוסי השימוש שלך כדי להציע מילים בשימוש נפוץ תוך כדי הקלדה. ככל שתשתמש יותר במכשיר, כך ההצעות יהיו מדויקות יותר.

הזן טקסט ולאחר מכן הקש על מילה מוצעת או גרור בעדינות את הצד השמאלי או הימני של המקלדת כלפי מעלה.

- המילה שנבחרה תוזן באופן אוטומטי. אינך צריך להקליד באופן ידני כל אות של המילה.



הוספת שפות למקלדת

באפשרותך להפוך שפות נוספות לזמינות לקלט המקלדת.

- 1 הקש על  < הגדרות < מערכת < שפה ומקלדת < נהל < מקלדות < מקלדת LG < שפה ופריסת מקלדת < בחר שפה.

- 2 בחר את השפות שברצונך להפוך לזמינות.

העתקה והדבקה

באפשרותך להעתיק או לגזור טקסט מתוך יישום ולהדביק אותו באותו יישום. לחלופין, אתה יכול להפעיל יישומים אחרים ולהדביק את הטקסט בתוכם.

- 1 הקש הקשה ארוכה ליד הטקסט שברצונך להעתיק או לגזור.
- 2 גרור את  /  כדי לציין את האזור שברצונך להעתיק או לגזור.

3 בחר גוזר או העתק.

- הטקסט שנגזר או הועתק נוסף באופן אוטומטי ללוח.

4 הקש הקשה ארוכה על חלון הזנת הקלט ולאחר מכן בחר הדבק.

- אם אין פריט שהועתק או נגזר, האפשרות **הדבק** לא תופיע.

אחסון זמני

כאשר אתה מעתיק או גוזר תמונה או טקסט, הם נשמרים באופן אוטומטי במגש קליפים, וניתן להדביק אותם בכל שטח פנוי בכל עת.

1 בסרגל הכלים החכם, בחר את לחלופין, הקש הקשה ארוכה על חלון הזנת הקלט ולאחר מכן בחר **אחסון זמני**.

2 בחר והדבק פריט מתוך מגש הקליפים.

- ניתן לשמור 20 פריטים לכל היותר במגש הקליפים.
- הקש על  כדי לנעול פריטים שמורים על מנת להבטיח שהם לא יימחקו גם לאחר שבוצעה חריגה מהכמות המרבית המותרת. ניתן לנעול עשרה פריטים לכל היותר. כדי למחוק פריטים נעולים, תחילה בטל את נעילתם.
- הקש על  כדי למחוק את הפריטים השמורים במגש הקליפים.

- ייתכן שיישומים מסוימים שהורדת לא יתמכו במגש הזמני.

שיתוף תוכן

הפעלת תוכן ממכשיר אחר

תוכל להפעיל תמונות, סרטוני וידאו או שירים שנשמרו במכשיר באמצעות מכשיר טלוויזיה.

- 1 חבר את הטלוויזיה והמכשיר שלך לאותה רשת Wi-Fi.
- 2 בעת הצגת הפריטים מתוך **גלריה** או **נגן מוסיקה**, הקש על **< נגן בהתקן אחר**.
- או הקש על **< הגדרות < התקנים מחוברים < שתף מסך** והקש על **< כדי להפעיל אותו**.
- 3 בחר את הטלוויזיה שאתה מעוניין להתחבר אליה.

• לשימוש עם Chromecast, שירותי Google Play חייבים להיות עדכניים.



הצגת תוכן ממכשירים סמוכים

באפשרותך להציג תוכן ממגוון מכשירים, כגון מחשב, NAS או מכשיר נייד, באמצעות היישומים **גלריה** או **נגן מוסיקה**.
הקש על **< הגדרות < התקנים מחוברים < שרת מדיה** והקש על **שיתוף תוכן** כדי להפעיל אותו.

חיבור המכשירים

חבר את המכשיר שלך ומכשיר אחר, התומכים שניהם בפונקציה DLNA, לאותה רשת אלחוטית.

• ודא שהאפשרות (DLNA) File sharing מופעלת הן במכשיר והן במכשיר המחובר.



חיפוש מכשירים סמוכים

באפשרותך להציג רשימה של מכשירי DLNA באותה רשת על-ידי בחירה בכרטיסייה **מכשירים סמוכים** בכל יישום. השתמש בתוכן ממכשירים סמוכים כאילו היית משתמש בו במכשיר שלך.

שליחה או קבלה של קבצים

באפשרותך לשתף קבצים בין המכשיר שלך ומכשיר LG אחר, או טאבלט או מחשב.

שליחת קבצים

מתוך היישום **גלריה** או **מנהל הקבצים**, הקש על **שתף** או  ובחר מכשיר ברשימת שיתוף הקבצים.

קבלת קבצים

גרור את שורת המצב כלפי מטה והקש על **שיתוף קבצים**. אם המכשיר שלך אינו תומך בתכונת שיתוף הקבצים, הקש על  **הגדרות** < **התקנים מחוברים** < **שיתוף קבצים** < **SmartShare Beam** .

- ודא שהמכשיר מחובר לאותה רשת אלחוטית שאליה מחובר מכשיר היעד להעברת הקבצים.
- ודא שהאפשרות שיתוף קבצים מופעלת הן במכשיר שלך והן במכשיר היעד.



נא לא להפריע

תוכל להגביל או להשתיק התראות כדי למנוע הפרעות במשך פרק זמן מסוים.

הקש על  < הגדרות < צליל < נא לא להפריע.

- **מצב** ובחר את המצב הרצוי לך:
 - **עדיפות בלבד**: קבל התראות קוליות או התראות ברטט עבור היישומים שנבחרו. התראות ימשיכו להישמע גם כאשר הפונקציה 'עדיפות בלבד' מופעלת.
 - **שקט מוחלט**: השבת את הקול והרטט.
- **בחר בעדיפויות**: קבל התראות או הודעות עבור היישומים שנבחרו.
- **שיחות מ**: בחר טווח הודעות בעת קבלת שיחה.

• **שיחות חוזרות**: שיחה שנייה מאותו מתקשר בתוך 15 דקות לא תושק.



- **מסרונים מ**: בחר טווח הודעות בעת קבלת הודעה.
- **השתמש בנא לא להפריע**: הפעל את המאפיין 'נא לא להפריע'.
- **לוח זמנים**: בחר את לוח הזמנים בו תרצה להפעיל את המאפיין 'נא לא להפריע'.
- **עזרה**: הצג עזרה עבור 'נא לא להפריע'.

03

יישומים שימושיים

התקנה והסרת התקנה של יישומים

התקנת יישומים

- היכנס לחנות יישומים כדי לחפש ולהוריד יישומים.
- תוכל להשתמש בחנויות כמו SmartWorld, חנות Play או חנות היישומים של ספק השירות שלך.

- ייתכן שחנויות יישומים מסוימות ידרשו ממך ליצור חשבון ולהיכנס לחשבון זה.
- יישומים מסוימים עשויים לגבות תשלום.
- אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך.
- ייתכן שלא תהיה תמיכה ב-SmartWorld בהתאם לאזור או לספק השירות.

הסרת התקנה של יישומים

הסר את ההתקנה של יישומים שאינך משתמש בהם עוד מהמכשיר שלך.

הסרת התקנה עם מחוות ההקשה הממושכת

- לחץ והחזק את כל האזור הריק על המסך ולחץ על  של האפליקציה שברצונך למחוק.
- תוכל להתקין מחדש יישומים שהסרת אם חלפו מאז ההסרה פחות מ-24 שעות. ראה **יישום סל המיחזור** לקבלת פרטים.

הסרת התקנה באמצעות תפריט ההגדרות

הקש על  < הגדרות < יישומים והודעות < **פרטי יישום**, בחר ביישום, ואז הקש על **הסר התקנה**.

- יישומים מסוימים אינם ניתנים להסרה על-ידי המשתמשים.

הסרת התקנה של יישומים מחנות היישומים

כדי להסיר התקנה של יישום, עבור לחנות היישומים שממנה הורדת אותו, והסר את התקנתו.

התקנה והסרה של יישומים במהלך ההגדרה

כשתפעיל את המכשיר בפעם הראשונה, תוכל להוריד יישומים מומלצים.

תוכל לדלג לשלב הבא ללא התקנה.

יישום סל המיחזור

תוכל לראות את היישומים שהוסרו במסך הבית. באפשרותך גם להתקין מחדש יישומים שהסרת, אם חלפו מאז ההסרה פחות מ-24 שעות.

1 הקש על  < **כלי ניהול** > **יישום סל המיחזור**.
אתה יכול גם לגעת ולהחזיק אזור ריק במסך הראשי, ולאחר מכן להקיש על **יישום סל המיחזור**.

2 הפעל את הפונקציה הרצויה:


- **שחזר:** התקן מחדש את היישום הרצוי.
-  : הסר מהמכשיר לצמיתות את היישומים שביטלת את התקנתם.

- יישומים שתסיר יימחקו מהמכשיר באופן אוטומטי 24 שעות לאחר הסרתם. אם תרצה להתקין מחדש יישומים שהוסרו, תצטרך להוריד אותם מחדש מחנות היישומים.
- תכונה זו מופעלת רק במסך הראשי שהוגדר כברירת מחדל. אם תסיר יישומים דרך מסך EasyHome או מפעיל יישומים אחר, הם יוסרו מהמכשיר באופן מיידי ולצמיתות.



קיצורי דרך של יישומים

- במסך הבית, גע והחזק בסמל יישום כגון 'שיחות', 'הודעה', 'מצלמה', 'גלריה' ו'הגדרות' כדי להציג תפריט גישה מהירה. קיצורי דרך של יישומים מאפשרים לך להשתמש ביישומים בקלות רבה יותר.
- הקש על ⓘ כדי לבדוק את מידע היישום.

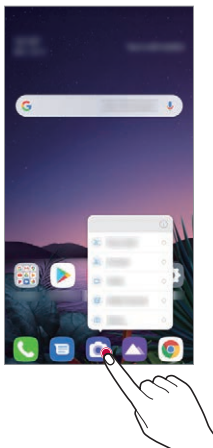

- תכונה זו זמינה רק ביישומים מסוימים.

טלפון

שיחה קולית

בצע שיחת טלפון על-ידי שימוש באחת השיטות הזמינות, כמו הזנה ידנית של מספר טלפון וביצוע שיחה מרשימת אנשי הקשר או מרשימת השיחות האחרונות.

ביצוע שיחה מהמקלדת

- 1 הקש על  <  **חייג**.
- 2 בצע שיחה באמצעות שיטה לבחירתך:
 - הזן מספר טלפון ולאחר מכן הקש על .
 - הקש הקשה ממושכת על מספר חיוג מהיר.
 - חפש איש קשר על-ידי הקשה על האות הראשונה בשמו ברשימת אנשי הקשר, ולאחר מכן הקש על .

- כדי להזין את התו "+" לצורך שיחה בינלאומית, הקש הקשה ממושכת על הספרה 0.
- ראה **הוספת אנשי קשר** למידע על אופן הוספת מספרי טלפון לרשימת מספרי החיוג המהיר.

ביצוע שיחות מאנשי קשר

- 1  <  **אנשי קשר**.
- 2 לאחר בחירת המספר שאליו ברצונך לחייג מרשימת אנשי הקשר, הקש על .

מענה לשיחה

- כדי לענות לשיחה, גרור את  במסך השיחה הנכנסת.
- כאשר אוזניות סטריאו מחוברות, תוכל לבצע שיחת באמצעות הלחצן חייג/סיום באוזניות.

- כדי לסיים שיחה מבלי לכבות את המסך, הקש על  < **הגדרות** < **רשת ואינטרנט** < **הגדרות שיחה** < **מענה וסיום שיחות** ולאחר מכן הפעל את האפשרות **סיים שיחות באמצעות מקש ההפעלה**.
- אם תאפשר את **הגדרות** < **רשת ואינטרנט** < **הגדרות שיחה** < **מענה וסיום שיחות** < **סיים שיחות באמצעות מקש ההפעלה**, ניתן לסיים שיחה על ידי לחיצה על מקש הנעילה/הפעלה בזמן שמסך השיחה בתהליך מופעל.

דחיית שיחה

- כדי לדחות שיחה נכנסת, גרור את  על מסך השיחה הנכנסת.
- כדי לשלוח הודעת דחייה, גרור את אפשרות הודעת הדחייה  על המסך.
- כדי להוסיף או לערוך הודעת דחייה, הקש על  < **הגדרות** < **רשת ואינטרנט** < **הגדרות שיחה** < **חסימת שיחה ודחייתה עם הודעה** < **דחה שיחה ושלח הודעה**.
- כאשר נכנסת שיחה, לחץ על לחצן הגברת העוצמה, על לחצן הנמכת העוצמה או על לחצן ההפעלה/נעילה כדי להשתיק את הרינגטון או הרטט, או כדי להעביר את השיחה להמתנה.

בדיקת שיחה נכנסת בזמן שימוש ביישום

כאשר נכנסת שיחה בזמן שימוש ביישום, ניתן להציג התראה בחלון מוקפץ בקצה העליון של המסך. אתה יכול לקבל את השיחה, לדחות את השיחה או לשלוח הודעה מתוך המסך הקופץ.

- הקש על  < **הגדרות** < **רשת ואינטרנט** < **הגדרות שיחה** < **הגדרות נוספות** < **הצגת שיחות קוליות בעת שימוש ביישום** ולאחר מכן בחר את הדרך שבה תרצה להציג את השיחה הנכנסת בזמן שימוש ביישום.
- יש להפעיל את ה-Floating bar אם ברצונך לבדוק את השיחות שהתקבלו באמצעות ה-Floating bar תוך כדי שימוש באפליקציה. לפרטים נוספים עיין ב-**סקירה כללית של ה-Floating Bar**.

צפייה בשיחות שלא נענו

במקרה של שיחה שלא נענתה, הסמל ✕ יופיע בשורת המצב, בחלק העליון של המסך.

כדי להציג את פרטי השיחה שלא נענתה, גרור את שורת המצב כלפי מטה. לחלופין, הקש על  <  < **יומן שיחות**.

הפונקציות הנגישות במהלך שיחה

במהלך שיחה, ניתן לגשת אל מגוון פונקציות על-ידי הקשה על הלחצנים במסך:

- **אנשי קשר**: הצג את רשימת אנשי הקשר במהלך שיחה.
- **החזק**: החזק שיחה.
- **מקשים**: הצג או הסר את מקשי החיוג.
- **רמקול**: הפעל את פונקציית הרמקול.
- **השתק**: השתק את הקול כדי שהצד השני לא ישמע את קולך.
- **Bluetooth**: העבר את השיחה למכשיר Bluetooth משויך ומחובר.
-  : סיים שיחה.
-  : באפשרותך לעבור לשיחת וידאו משיחה קולית.
-  : גישה לאפשרויות שיחה נוספות.

• פריטי ההגדרה הזמינים עשויים להשתנות בהתאם לאזור או לספק השירות. 

ביצוע שיחה בת שלושה משתתפים

במהלך שיחה, תוכל להתקשר לאיש קשר נוסף.

- 1 במהלך שיחה, הקש על **: < הוסף שיחה**.
- 2 הזן מספר טלפון ולאחר מכן הקש על .
- שתי השיחות יוצגו במסך במקביל והשיחה הראשונה תעבור להמתנה.
- 3 כדי להתחיל שיחת ועידה, הקש על **מזג שיחות**.

- ייתכן שתחויב בתשלום עבור כל שיחה. לקבלת מידע נוסף, פנה לספק השירות שלך.



צפייה ברשומות שיחה

- כדי להציג רשומות שיחה אחרונות, הקש על  <  < **יומן שיחות**. לאחר מכן, תוכל להשתמש בפונקציות הבאות:
- כדי להציג רשומות שיחה מפורטות, בחר איש קשר. כדי לבצע שיחה לאיש קשר שנבחר, הקש על .
- כדי למחוק את כל רשומות השיחה, הקש על **מחק**.

- משך השיחה המוצג עשוי להיות שונה ממשך השיחה המשמש לחיוב. לקבלת מידע נוסף, פנה לספק השירות שלך.
- לא ניתן לשחזר היסטוריית שיחות שנמחקה.
- צבוט שתי אצבעות או הרחב את האצבעות כדי לכווץ את גודל הגופן עבור יומני השיחות או אנשי הקשר.



הגדרת אפשרויות שיחה

באפשרותך בחור באפשרויות שיחה שונות.

- 1 הקש על  < **חייג** או על **יומן שיחות**.
- 2 הקש על **הגדרות שיחה** ובחר אפשרויות בהתאם להעדפותיך.

הודעות

שליחת הודעה

באפשרותך ליצור ולשלוח הודעות לאנשי הקשר שלך באמצעות היישום 'הודעות'.

- שליחת הודעות לחו"ל עלולה להיות כרוכה בתשלום נוסף. לקבלת מידע נוסף, פנה לספק השירות שלך.



- 1 הקש על  < .
- 2 הקש על .
- 3 ציין נמען וצור הודעה.
- כדי להשתמש באפשרויות המולטימדיה, הקש על .
- כדי לגשת לפריטי תפריט אופציונליים, הקש על .
- 4 הקש על  כדי לשלוח את ההודעה.

קריאת הודעה

תוכל להציג את חליפת ההודעות שלך עם כל איש קשר.

- 1 הקש על  < .
- 2 בחר איש קשר מרשימת ההודעות.

קביעת ההגדרות להעברת הודעות

באפשרותך לשנות את הגדרות העברת ההודעות בהתאם להעדפותיך.

- 1 הקש על  < .
- 2 הקש על  < **הגדרות** ברשימת ההודעות.

מצלמה

הפעלת המצלמה

תוכל לצלם תמונה או סרטון וידאו כדי להנציח את כל הרגעים החשובים שלך.


הקש על  < .

- לפני שאתה מצלם תמונה או מקליט סרטון וידאו, נקה את עדשת המצלמה במטלית רכה.
- היזהר שלא להכתים את עדשת המצלמה באצבעותיך או באמצעות חומר זר אחר.
- התמונות הנכללות במדריך למשתמש זה עשויות להיות שונות מאלה שנמצאות במכשיר בפועל.
- ניתן לצפות בתמונות ובסרטוני וידאו ולערוך אותם בגלריה. ראה **סקירה כללית של הגלריה** לקבלת פרטים.

מצב אוטומטי

תוכל לצלם תמונות או להקליט סרטוני וידאו על-ידי בחירת מגוון מצבי מצלמה ואפשרויות.

- 1 הקש על , והקש על **תצלום**.
- 2 כדי לצלם תמונה, הקש על . כדי להקליט סרטון וידאו, הקש על .

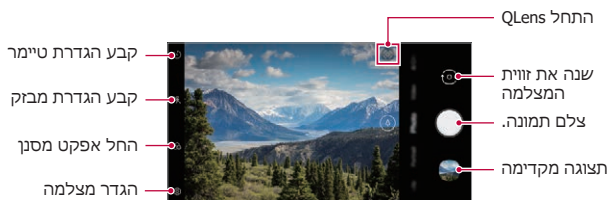

צילום תמונה

- 1 בחר מצב מצלמה והקש על העצם שבו ברצונך למקד את המצלמה.
 - 2 כדי לצלם תמונה, הקש על .
- תוכל גם ללחוץ על מקש הנמכת העוצמה או הגברת העוצמה כדי לצלם תמונה.

- כאשר המסך כבוי או נעול, הפעל את המצלמה בשתי לחיצות מהירות על מקש החלשת עוצמת הקול. הקש על  < **הגדרות** < **הרחבות** < **קיצורי דרך** ולאחר מכן הקש על **פתח את המצלמה**  להפעיל אותה.

הקלטת סרטון וידאו

- 1 הקש על  < **וידאו** והקש על הנושא להתמקד.
- 2 הקש על  כדי להקליט סרטון וידאו.
 - | כדי לצלם תמונה תוך כדי צילום סרטון וידאו, הקש על .
 - כדי להשהות את הצילום של סרטון וידאו, הקש על . כדי לחדש את צילום הווידאו, הקש על .
 - בעת צילום סרטון וידאו, תוכל להרחיב את האצבעות או לצבט באצבעות כדי להגדיל או להקטין את גודל התצוגה.
 - בעת צילום סרטון וידאו, תוכל להקיש על האזור הרצוי כדי לכוון את הבהירות.
 - באפשרותך לעבור למצלמה הקדמית והמצלמה האחורית בעת הקלטת וידאו על ידי לחיצה על .
- 3 הקש על  כדי לסיים את צילום סרטון הווידאו.

התאמה אישית של אפשרויות המצלמה

- תוכל להתאים אישית מגוון אפשרויות מצלמה כדי להתאימה לצרכיך.
- הקש על  על המסך.

- האפשרויות הזמינות משתנות בהתאם למצלמה הנבחרת (מצלמה קדמית או אחורית) ולמצב המצלמה שנבחר.

-  : צלם תמונה ב-ראייה מלאה.
-  : בחר ערכים ליחס הרוחב-גובה ולגודל בעת צילום תמונות.
-  : בחר ערכים לרזולוציה ולגודל בעת הקלטת סרטוני וידאו.

טיפים	מאפשר לך לדעת כאשר העיניים של מישהו עצומות או אם התמונה מטושטשת.
חיפוש גרסה	כאשר נמצא מידע משויך במצב אוטומטי, ייעשה שימוש ב-QLens או ב-Google Lens.
HDR	קבל תמונות בצבעים מלאי חיים ואפקטים של פיצוי אפילו אם הפריטים צולמו מול האור. תכונות אלה מסופקות בעזרת טכנולוגיית טווח דינמי רחב (HDR) שבה מצוידת המצלמה.
צמצם קולי	מזער טשטוש תנועה בזמן הקלטת וידאו.
תמונה חיה	הקלט את הפעולה לפני ואחרי צילום התמונה.
צמצם קולי	צלם תמונות עם פקודות קוליות.
Tracking focus	אפשר למצלמה להישאר ממוקדת בנושא שבו אתה נוגע על המסך, גם אם הנושא נע. (זמין כאשר המצלמה הרגילה בשימוש.)
תייג מיקומים	שמור את התמונה עם נתוני מיקום GPS.
רשת	הצג קווים מנחים כך שתוכל לצלם תמונות או סרטוני וידאו בהתבסס על קווי ייחוס אופקיים ואנכיים.
הוסף חתימה	הצג חתימה אישית בתמונות.
אחסון	בחר אם ברצונך לאחסן את התמונות וסרטוני הווידאו אחסון פנימי או כרטיס זיכרון. (אפשרות זו זמינה כאשר הוכנס כרטיס זיכרון.)
עזרה	הוסף עזרה לכל תפריט במצלמה.

אפשרויות נוספות במצלמה הקדמית


טיפים	מאפשר לך לדעת כאשר העיניים של מישהו עצומות או אם התמונה מטושטשת.
צילום סלפי	כדי לצלם סלפים, בחר באפשרות זו בין צילום בתנועת יד לבין צילום אוטומטי .
שמור הפוך	שמור תמונות הפוכות לאחר צילום תמונות סלפי.

בחירה במצב

באפשרותך לבחור בנוחות מהמצבים המוצגים על המסך ובבחרים כך שיתאימו לסביבת הצילום.

הקש על  < , ולאחר מכן הקש על **עוד**.

- באפשרותך לשנות את סדר מצבי הסצנה על ידי הזזת סמל מצב הסצנה תוך לחיצה ממושכת על הסמל.

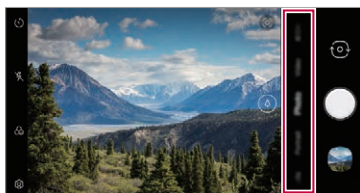

נוף לילי

ניתן לצלם תמונות לילה ברורות ומלאות חיים. בעת הצילום, החזק את המכשיר יציב. ניתן לכוון את בהירות התמונה על ידי גרירת פס הגרירה מעלה או מטה.

1 הקש על  < , ולאחר מכן הקש על **עוד** < .

2 כדי לצלם תמונה, הקש על .



פנורמה

תוכל ליצור תמונה פנורמית על ידי הזזת המצלמה בכיוון אחד כדי לצלם ולחבר יחד צילומים רציפים של נוף רחב.

- 1 הקש על , ולאחר מכן הקש על **עוד** < .
- 2 הקש על  ולאחר מכן הזז בקצב איטי את המצלמה בכיוון אחד.
- הזז את המכשיר בכיוון החץ שמופיע בהנחיה.
- 3 הקש על  כדי להפסיק את לכידת התמונה הפנורמית.



פיצ'ר החלפת רקע

באפשרותך ליצור תמונות מורכבות מייד שצולמו מהמצלמה האחורית ומהמצלמה הקדמית.

- 1 הקש על , ולאחר מכן הקש על **עוד** < .
- 2 הקש על  כדי לצלם תמונות.
- צלם תמונה שתשמש כרקע של התמונה המורכבת.
- אחרי זמן קצר, המצלמה הקדמית תצלם תמונה באופן אוטומטי.




ניתן גם לגעת ב-  ולבחור תמונה שנשמרה בגלריה לרקע התמונה המורכבת. 

מצב וידאו ידני

המשתמש יכול להגדיר ידנית פונקציות להקלטת וידאו. התאם שמע, איון לבן, מיקוד, בהירות, ISO, מהירות תריס וכו'.

- 1 הקש על  < , ולאחר מכן הקש על **עוד** < .
- 2 קבע את תפריט הסצנה המתאים לסביבת הצילום.

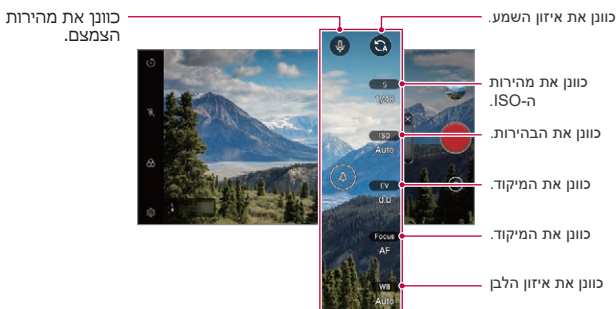

יישומים שימושיים

3 לחץ על ● להתחיל את ההקלטה.

הגדרת אפשרות

באפשרותך להגדיר את אפשרות המצלמה בהתאם לסביבה הרצויה.
לחץ על  על המסך.

-  : העבר ישירות ל- ראייה מלאה
-  : בחר ברזולוציית וגודל הווידאו.

קצב מסגרות	בחר את ערך המסגרות לשנייה.
קצב סיביות	בחר את איכות התמונה עבור סרטוני וידאו.
Hi-Fi	הקלט סרטון וידאו עם קול באיכות Hi-Fi.
שמור כ- HDR10	שמור וידאו במבנה HDR10 לקבלת אבחנה גבוהה וצבע חי.
צמצם קולי	מזער טשטוש תנועה בזמן הקלטת וידאו.
Tracking focus	אפשר למצלמה להישאר ממוקדת בנושא שבו אתה נוגע על המסך, גם אם הנושא נע. (זמין כאשר המצלמה הרגילה בשימוש.)
תייג מיקומים	שמור את התמונה עם נתוני מיקום GPS.
רשת	הצג קווים מנחים כך שתוכל לצלם תמונות או סרטוני וידאו בהתבסס על קווי ייחוס אופקיים ואנכיים.
אחסון	בחר אם ברצונך לאחסן את התמונות וסרטוני הווידאו אחסון פנימי או כרטיס זיכרון. (אפשרות זו זמינה כאשר הוכנס כרטיס זיכרון.)
עזרה	הוסף עזרה לכל תפריט במצלמה.

הילוך איטי

צור סרטון מהנה על ידי שינוי מהירות התנועה. פונקציה זו שימושית כאשר ברצונך להפעיל סרטון וידאו במהירות איטית יותר לעומת המהירות בפועל של הקליפ המקורי.

- הילוך אטי לכל הסרטון
- אפקט של הילוך אטי מוחל על כל הסרטון
- הילוך אטי למקטעים
- אפקט של הילוך אטי מוחל על מקטעים מסוימים של הסרטון

- 1 הקש על , ולאחר מכן הקש על **עוד** < .
- 2 הקש על  כדי לצלם סרטון וידאו.
- כדי להשהות את הצילום של סרטון וידאו, הקש על . כדי לחדש את צילום הווידאו, הקש על .
- 3 אם ברצונך לסיים את הצילום, לחץ על .



פלאש Jump-Cut

תמונות שיצולמו במרווחי זמן סדירים יישמרו כקובצי GIF.

- 1 הקש על , ולאחר מכן הקש על **עוד** < .
- 2 הקש על  כדי לבחור כמה עותקים של הצילום צריך לצלם.
- באפשרותך לבחור אחד מבין 4, 8, 12, 16 ו-20 עותקים.
- 3 כדי לצלם תמונה, הקש על .
- התמונות יצולמו במרווחי זמן של 3 שניות ויישמרו כקובץ GIF.
- באפשרותך ללחוץ על  לפני צילום מספר התמונות שנקבע כדי להפסיק את הצילום.

- תמונות שיצולמו יישמרו כקובצי GIF.
- באפשרותך לראות את קבצי ה-GIF השמורים באמצעות אפליקציית הגלריה.

- ברגע בו המצלמה מצלמת, מבזק נדלק.
- בתחתית המסך מוצג המספר הכולל של הצילומים שצולמו וכן מספר העותקים.
- הצילומים שצולמו נשמרים כקבצי GIF בלבד.

Triple shot

שלוש המצלמות הממוקמות בגב המכשיר מצלמות סדרת תמונות בזוויות צפייה שונות ושומרות זאת כסרטון וידאו עם אפקט שקפים. ראה *Triple shot* לקבלת פרטים.

Cine shot

ניתן ללכוד רגע וליצור סרטון וידאו עם רק חלק מהסצינה בתנועה. ראה *Cine shot* לקבלת פרטים.


Cine video

באפשרותך להקליט וידאו שנראה כמו סרט. ראה *Cine Video* לקבלת פרטים.

מזון

תוכל לצלם תצלום או להקליט וידאו תוך כוונן פס מחוון הצבעים ואיזון הלבן.

- 1 הקש על , ולאחר מכן הקש על **עוד** < .
 - 2 כדי לצלם תמונה, הקש על .
- גרור את מחוון הצבע במסך כדי לכוון את איזון הלבן, ובחר את הצבע הטוב ביותר.
 - אם פס המחוון אינו מוצג, הקש על  כדי לכוון את איזון הלבן.

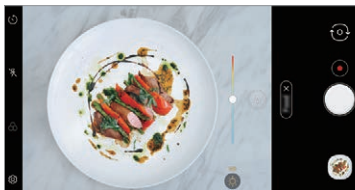

YouTube Live

תוכל להקליט סרטון וידאו ולהעלות אותו ישירות ל- YouTube. כדי להשתמש בתכונה זו, עליך לאמת את מספר הטלפון שלך.

• YouTube Live זמין רק כשהמכשיר שלך מחובר לאינטרנט. אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך.



דיוקן

ניתן לצלם דיוקן חד על-ידי יישום אפקט טשטוש עדשת המצלמה. ראה **דיוקן** לקבלת פרטים.

Google Lens

ניתן לקבל מידע נוסף או לבצע פעולות על פריטים סביבך באמצעות Google Lens, כגון אתרים, פוסטרים, תפריטי מסעדות, בעלי חיים, פרחים או ברקודים, ישירות במכשיר.


AI CAM

תוכל לצלם תמונות או סרטונים אפקטיביים מכיוון שהמצלמה מזהה את האובייקט בעת צילום התמונה או הסרטון. ראה **AI CAM** לקבלת פרטים.

מצב צילום ידני

תוכל ליצור תמונות בעלות מגע מקצועי על-ידי שימוש במגוון תכונות מתקדמות. כוונן את איזון הלבן, המיקוד, הבהירות, ה-ISO, מהירות הצמצם ואפשרויות אחרות.

- 1 הקש על , ולאחר מכן הקש על **מצלמה ידנית**.
- 2 התאם אישית את ההגדרות המצלמה הבאות.

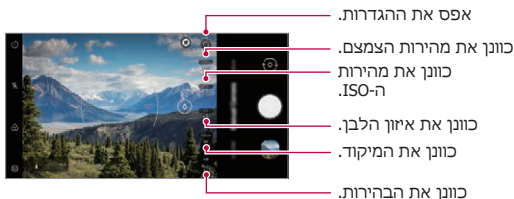

- 3 הקש על  כדי לצלם תמונה.

התאמה אישית של אפשרויות המצלמה

תוכל להתאים אישית מגוון אפשרויות מצלמה כדי להתאימה לצרכיך.

הקש על  על המסך.

-  : צלם תמונה ב-FullView.
-  : בחר ערכים ליחס הרחב-גובה ולגודל בעת צילום תמונות.


כוונן את איזון הלבן, את ה-ISO ואת מהירות התריס עבור התצלום המומלץ. ראה Graphy לקבלת פרטים.	תמונות Graphy
התמונה מאוחסנת בתבנית קובץ RAW כדרך שתוכל לשנות אותה. קבצי DNG ו-JPEG נוצרים בזמן צילום תמונה, ואחר-כך הם נשמרים בתור תמונה לא דחוסה ברזולוציה גבוהה.	שמור כ-RAW
צלם תמונות עם פקודות קוליות.	צמצם קולי

אפשר למצלמה להישאר ממוקדת בנושא שבו אתה נוגע על המסך, גם אם הנושא נע. (זמין כאשר המצלמה הרגילה בשימוש).	Tracking focus
שמור את התמונה עם נתוני מיקום GPS.	תיג מיקומים
הצג קווים מנחים כך שתוכל לצלם תמונות בהתבסס על קווי ייחוס אופקיים ואנכיים.	מדריך
הצג חתימה אישית בתמונות.	הוסף חתימה
בחר אם ברצונך לאחסן את התמונות וסרטוני הווידאו אחסון פנימי או כרטיס זיכרון. (אפשרות זו זמינה כאשר הוכנס כרטיס זיכרון).	אחסון
הוסף עזרה לכל תפריט במצלמה.	עזרה

Graphy

תוכל להחיל את הערכים המומלצים עבור איזון הלבן, ה-ISO ומהירות התריס כדי ליצור את הרושם שהצילום בוצע על-ידי מומחה.

- 1 הקש על , ולאחר מכן הקש על מצלמה ידנית.
- 2 הקש על  ובחר את הסצנה הרצויה מהתמונות המומלצות.

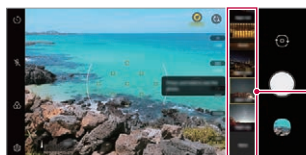

תמונות מומלצות

- 3 כדי לצלם תמונה, הקש על .
 - התמונות מצולמות תחת אותן הגדרות הצילום שנבחרו בגרפי.


- תכונה זו זמינה רק במצב צילום ידני.
- הקש על , ולאחר מכן הקש על  מתוך תפריט Graphy כדי להפסיק את המאפיין הזה.

Focus peaking

תוכל לכוון את המיקוד על האובייקט המצולם בעזרת התכונה 'Focus peaking'.

כדי לגשת לתכונה 'Focus peaking', הקש על הלחצן 'Manual Focus (MF)'. כאשר 'Focus peaking' מופעל, האובייקט המצולם שבו אתה מתמקד מופיע בצהוב. הזז את גלגל החלפת המצב למעלה ולמטה כדי להתמקד באיזור הרצוי, ולאחר מכן צלם.


- תכונה זו זמינה רק במצב צילום ידני ובמצב וידאו ידני.
- כדי להשבית תכונה זו, הקש על הלחצן **Focus peaking**.
- תכונה זו אינה זמינה כאשר משתמשים במצלמה בזווית רחבה.

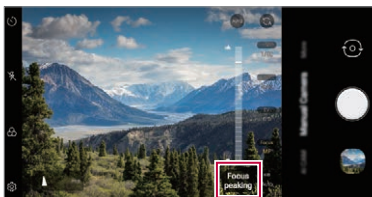

תכונות שימושיות אחרות ביישום המצלמה

נעילת חשיפה אוטומטי/מיקוד אוטומטי

כדי לתקן את רמת החשיפה הנוכחית ואת מיקום המיקוד, גע והחזק במסך במצב אוטומטי. כדי לכבות את התכונה, הקש על האזור הריק של המסך.

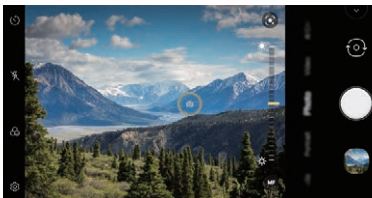

• תכונה זו זמינה רק במצבים מסוימים. 

שימוש בצילום רציף

באפשרותך לצלם תמונות רצופות ולהציג בהן תמונות מזיזות ב
גלריה.

- 1 הפעל את אפליקציית המצלמה ובחר ב **תצלום.**
- 2 הקש והחזק .
- צילומים מרובים עוקבים בעת ההמתנה .

• תכונה זו זמינה רק במצבים מסוימים. 

מעבר בין המצלמות

באפשרותך לעבור מהמצלמה הקדמית לאחורית וחזרה בהתאם
לסביבה.

במסך המצלמה, הקש על  או גרור את המסך בכיוון כלשהו כדי
לעבור בין המצלמה הקדמית למצלמה האחורית.



- השתמש במצלמה הקדמית לצילום תמונות סלפי. ראה **צילום סלפי** לקבלת פרטים.

זום להתקרבות או התרחקות מהאובייקט המצולם

- באפשרותך להשתמש בתכונת ההגדלה או ההקטנה במסך המצלמה בעת צילום תמונה או הקלטת סרטון וידאו.
- במסך המצלמה, קרב או הרחק את אצבעותיך כדי להתרחק או להתקרב אל האובייקט המצולם, ולאחר מכן השתמש בפס ההחלקה המוצג.

- תכונת הזום אינה זמינה בעת שימוש במצלמה הקדמית במצב סלפי.

צילום סלפי


תוכל להשתמש במצלמה הקדמית כדי להציג את פניך על המסך ולצלם סלפי.

צילום בתנועת יד

תוכל לצלם תמונות סלפי באמצעות מחוות. הצג את כף ידך למצלמה הקדמית ולאחר מכן סגור אותה לאגרוף.

תוכל גם לסגור אגרוף ולאחר מכן לפתוח אותו לכיוון המצלמה הקדמית.

- בתוך שלוש שניות תצולם תמונה.

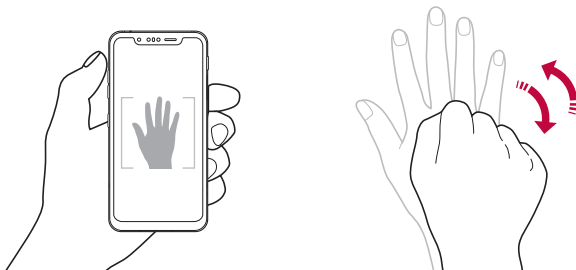


- כדי להשתמש בתכונה זו, עבור למצב המצלמה הקדמית ולאחר מכן הקש על  < **צילום סלפי** < **צילום בתנועת יד**.
- ודא שכף היד והאגרוף שלך נכללים בתוך קו הייחוס כך שהמצלמה תוכל לזהות אותם.
- ייתכן שתכונה זו לא תהיה זמינה בעת שימוש בחלק מתכונות המצלמה.

צילום אוטומטי

אתה יכול להיעזר בתכונת זיהוי הפנים כדי לצלם תמונות סלפי בקלות ובנוחות. ניתן להגדיר את המכשיר כך, שכאשר אתה מביט במסך המצלמה הקדמית מזהה את פרצופך ומצלמת סלפי באופן אוטומטי.

- המסגרת המנחה הלבנה מופיעה כאשר המצלמה הקדמית מזהה את פניך. אם הנושא בתוך המסגרת המנחה מפסיק לנוע, צבע המסגרת המנחה הופך לצהוב והמצלמה מצלמת את התמונה.

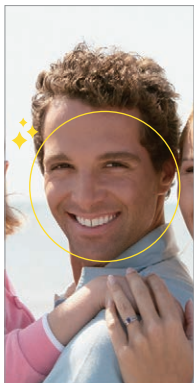

- הקש על  < **צילום סלפי** < **צילום אוטומטי** כדי להפעיל את התכונה 'צילום אוטומטי'.

צילום אינטרוולי

- תוכל לצלם תמונות סלפי במרווחי זמן קבועים. בעת השימוש במצלמה הקדמית, תוכל להציג את כף ידך למצלמה ולאחר מכן לכווץ אגרוף פעמיים במהירות.
- ארבע תמונות מצולמות במרווחים קבועים לאחר השהיית טיימר של שלוש שניות.

שמור הפוך

- לפני שתצלם תמונה עם המצלמה הקדמית, הקש על  < **שמור הפוך**. התמונה תסתובב בכיוון ההופכי.

- בעת שימוש במצלמה הקדמית, תוכל לשנות את האופן שבו תמונות סלפי מצולמות באפשרויות המצלמה. ראה **התאמה אישית של אפשרויות המצלמה** לקבלת פרטים.

חתימה

אתה יכול ליצור תצלום אישי באמצעות חתימתך.

- 1 הקש על  ולאחר מכן הקש על  < **הוסף חתימה**.
- 2 הזן את החתימה באופן הרצוי והקש על **הוסף**.



• תכונה זו זמינה רק במצבים מסוימים. 

שיתוף מהיר

תוכל לשתף תמונה או סרטון וידאו עם היישום הרצוי מיד לאחר הצילום.

- 1 הקש על  < , ולאחר מכן צלם תמונה או הקלט סרטון וידאו.
- 2 הקש על סמל היישום שמופיע במסך כדי לשתף אותו באמצעות יישום זה.

באפשרותך גם להחליק את הסמל לכיוון ההפוך כדי לראות באילו יישומים אחרים תוכל להשתמש כדי לשתף את התמונות וסרטוני הווידאו שלך.

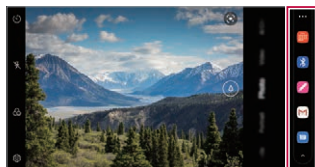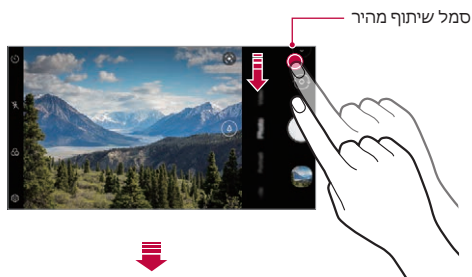

יישומים שימושיים

- היישום שסמל 'שיתוף מהיר' מציג עשוי להשתנות בהתאם לסוג ולתדירות הגישה שלך אל היישומים המותקנים במכשיר.
- תכונה זו זמינה רק במצבים מסוימים.

גלריה

סקירה כללית של הגלריה

תוכל להציג ולנהל תמונות וסרטוני וידאו שנשמרו במכשיר.

1 הקש על  < .

- תמונות וסרטוני וידאו שנשמרו מוצגים לפי תיקיות.


2 הקש על תיקייה ובחר קובץ.

- הצג את הקובץ שנבחר במצב מסך מלא.
- בעת צפייה בתמונה, החלק שמאלה או ימינה כדי להציג את התמונה הקודמת או התמונה הבאה.
- בעת צפייה בסרטון וידאו, החלק שמאלה או ימינה כדי להריץ אחורה או להריץ קדימה את הסרטון.
- אם אתה שומר את פרטי המיקום או משתמש במצב סצנה בעת הצילום, נוצרת תיקיית משנה עבור כל וידאו.
- כדי להציג את התמונות לפי המיקום בו צולמה התמונה, הקש על  <  < **תייג מיקומים**, ולאחר מכן הקש על .
- התמונות יקובצו באופן אוטומטי לפי מיקום בלשונית 'זיכרון' של היישום 'גלריה'.

- ייתכן שחלק מתבניות הקבצים אינן נתמכות, בהתאם לתוכנות המותקנות.

- ייתכן שקבצים מסוימים לא ייפתחו עקב קידוד.
- קבצים שחורגים ממגבלת הגודל עלולים לגרום לשגיאה.
- תצטרך להפעיל את מאפיין ה-GPS כדי ליצור אלבומי 'זיכרון'.

הצגת תמונות

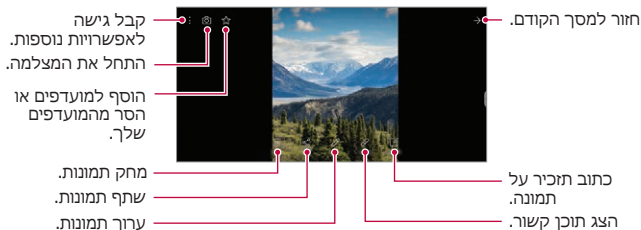

- תפריט פרטים מופיע כאשר נגיעה קלה במסך. נגיעה שוב במסך גורמת לתפריט להיעלם.

כתיבת מזכרים בתמונות

- 1 תוך כדי הצגת תמונה, הקש על .
 - 2 כתוב תזכיר על התמונה והקש על **שמור**.
- התזכיר יופיע על התמונה.

- יתכן ופונקציית תזכיר אינה זמינה בכמה קבצי תמונות.
- ניתן לחפש תזכירים שנוספו על ידי לחיצה על Q ביישום 'גלריה'.

הצג תכנים קשורים


באפשרותך לערוך או להגדיר בחופשיות את התצלומים הקשורים לגלריה.

לפרטים נוספים עיין ב **תוכן קשור**.

עריכת תמונות

- 1 תוך כדי הצגת תמונה, הקש על .
- 2 ערוך את התמונות שלך באמצעות אפקטים וכלי עריכה שונים.
- 3 לאחר סיום העריכה, הקש על **שמור עותק**.

הפעלת קובץ וידאו

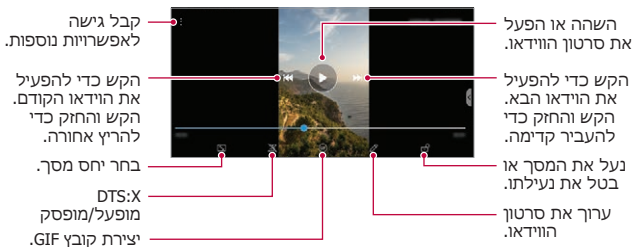

- כדי לכווון את עוצמת הקול, גרור את הצד הימני של מסך הוידאו למעלה או למטה.
- כדי לכווון את בהירות המסך, גרור את הצד השמאלי של המסך מעלה או מטה.
- גרירת המסך שמאלה במסך הפעלת הוידאו מאפשרת לך לעבור לאחור (REW) וגרירה ימינה מאפשרת לך להתקדם במהירות (FF).

עריכת סרטוני וידאו

- 1 תוך כדי הצגת סרטון וידאו, הקש על .
- 2 השתמש במגוון אפקטים וכלי עריכה כדי לערוך את סרטון הוידאו.

צור באופן אוטומטי
קליפ וידאו באורך 10
שניות, 20 שניות או
60 שניות

צור סרט תוך שימוש
במגוון אפקטים.

הפעל את עורך
הווידאו KineMaster.

כוונן את הרזולוציה.




בחר קטע כדי לשנות
את מהירות ההפעלה.

כוונן את משך סרטון
הווידאו.

3 הקש על **שמור** כדי לשמור שינויים.

יצירת וידאו

- 1 בנקודת ההתחלה הרצויה בזמן צפייה בווידיאו, הקש על **GIF**.
- 2 בחר את האורך של קובץ ה-GIF שברצונך ליצור.
 - קובץ GIF נוצר עבור הזמן שנבחר החל מנקודת ההתחלה שציינת.
 - עבור סרטוני וידאו שאורכם קצר מ-10 שניות, תמונות GIF מופקות באופן אוטומטי עבור הזמן הנותר.

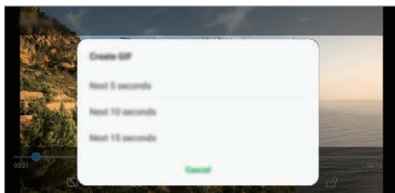

יצירת תמונות-GIF

- 1 ברשימת התצלומים ב'גלריה', הקש על : < **צור קובץ GIF**.
- 2 בחר תמונה כדי להפוך לצילום-GIF והקש על **הבא**.
 - תוכל להוסיף / למחוק תמונה, להתאים את המהירות או את יחס המסך, לקבוע את סדר הצילום.

- יצירת תמונות- GIF היא פונקציה הניתנת למשתמש להפקת תמונות יצירתיות. הפרת זכויות כגון זכות קניין רוחני או השמצת מוניטין של אדם אחר על ידי שימוש בפונקציית צילומי ה- GIF עשויה להביא לחבות אזרחית או פלילית בהתאם לחוקים הנוגעים בדבר. היזהר שלא להעתיק או להעביר עבודות של אדם אחר ללא אישור LG Electronics. אינה אחראית בשום דרך למעשים כאלה על ידי משתמשים.
- אתה יכול לבחור עד 100 תמונות לייצור כשאתה יוצר GIF.



מחיקת קבצים

- תוכל למחוק קבצים באמצעות אחת משתי האפשרויות הבאות:
- הקש הקשה ממושכת על קובץ ברשימה, ולאחר מכן הקש על **מחק**.
- הקש על ברשימת הקבצים ומחק את הקבצים הרצויים.
- קבצים שנמחקו מועברים ל**סל המיחזור** וניתן לשחזר אותם לגלריה בתוך 7 ימים.
- הקש על כדי למחוק לחלוטין את הקבצים. במקרה זה, לא ניתן לשחזר את הקבצים.

שיתוף קבצים

- תוכל לשתף קבצים באמצעות אחת משתי האפשרויות הבאות:
- בעת הצגת תמונה, הקש על כדי לשתף את הקובץ בשיטה הרצויה.
- תוך כדי הצגת סרטון וידאו, הקש על **< שתף** כדי לשתף את הקובץ בשיטה הרצויה.
- ברשימת הקבצים, הקש על כדי לבחור קובץ ולשתף אותו בשיטה הרצויה.

אנשי קשר

סקירה כללית של אנשי קשר

באפשרותך לשמור ולנהל אנשי קשר.
הקש על $\bigcirc$ < חיוניים < אנשי קשר.

הוספת אנשי קשר

הוספת אנשי קשר חדשים

- 1 במסך של רשימת אנשי הקשר, הקש על $+$.
 - מופיע חלון קופץ לבחירת מיקום שמירת אנשי הקשר. בחר במיקום שאתה רוצה.
- 2 הזן פרטי איש קשר והקש על **שמור**.

ייבוא אנשי קשר

תוכל לייבא אנשי קשר מהתקן אחסון אחר.

- 1 במסך של רשימת אנשי הקשר, הקש על $:$ < **ניהול אנשי קשר** < **ייבוא**.
- 2 בחר את מיקומי המקור והיעד של איש הקשר שברצונך לייבא ולאחר מכן הקש על **אישור**.
- 3 בחר את אנשי הקשר והקש על **ייבוא**.

הוספת אנשי קשר לרשימת מספרי החיוג המהיר

- 1 במסך של רשימת אנשי הקשר, הקש על $:$ < **חיוג מהיר**.
- 2 הקש על **הוסף איש קשר** ממספר חיוג מהיר.
- 3 בחר איש קשר.

• בעת הוספת איש קשר חדש, הקש על $\begin{smallmatrix} 1 & 2 \\ 3 & 4 \end{smallmatrix}$ כדי להוסיף מספר לחיוג מהיר.



חיפוש אנשי קשר

תוכל לחפש אנשי קשר באמצעות אחת משתי האפשרויות הבאות:

- הקש על סרגל החיפוש בחלק העליון של מסך אנשי הקשר והזן את איש הקשר או מספר הטלפון הרצוי שאותו תרצה לחפש.
- גלול מעלה או מטה ברשימת אנשי הקשר.
- באינדקס של מסך רשימת אנשי הקשר, הקש על האות הראשונה של איש קשר.

• לחיצה על סרגל החיפוש בחלק העליון של מסך אנשי הקשר והזנת איש קשר או מספר טלפון מעלה את תוצאות החיפוש המשולבות מהיסטוריית השיחות ורשימת אנשי הקשר שנשמרו במוצר. 

רשימת אנשי קשר

עריכת אנשי קשר

- 1 במסך רשימת אנשי הקשר, בחר באיש הקשר הרצוי.
- 2 במסך פרטי איש הקשר, הקש על  וערוך את הפרטים.
- 3 הקש על **שמור** כדי לשמור שינויים.

מחיקת אנשי קשר

תוכל למחוק אנשי קשר באמצעות אחת משתי האפשרויות הבאות:

- במסך רשימת אנשי הקשר, הקש הקשה ממושכת על איש קשר שברצונך למחוק ולאחר מכן הקש על **מחק איש קשר**.
- הקש על **< מחק** במסך של רשימת אנשי הקשר.

• לא ניתן לשחזר אנשי קשר שנמחקו. 

הוספת מועדפים

באפשרותך לרשום אנשי קשר בשימוש נפוץ כמועדפים.

- 1 במסך רשימת אנשי הקשר, בחר באיש הקשר הרצוי.
- 2 במסך פרטי איש הקשר, הקש על ☆.

יצירת קבוצות

- 1 ברשימה של קבוצות אנשי הקשר, הקש על +.
- 2 הזן שם קבוצה חדשה.
- 3 הקש על **הוסף חברים**, בחר אנשי קשר ולאחר מכן הקש על **הוסף**.
- 4 הקש על **שמור** כדי לשמור את הקבוצה החדשה.

QuickMemo+

סקירה כללית של QuickMemo+

תוכל להוסיף הערות יצירתיות על-ידי שימוש במגוון אפשרויות בתכונות מתקדמות אלה של פנקס רשימות, כגון ניהול תמונות וצילומי מסך, שאינה נתמכת על-ידי פנקס הרשימות הקונבנציונלי.

יצירת הערה

- 1 הקש על ○ < QuickMemo+.
- 2 הקש על + כדי ליצור הערה.
 - ✓ : שמור הערה.
 - ↶ : בטל את העריכה הקודמת.
 - ↷ : בצע שוב את שינויי העריכה שנמחקו לאחרונה.
 - T : הזן הערה על-ידי שימוש בלוח המקשים.
 - ✎ : כתוב הערות באופן ידני.
 - ◇ : מחק הערות שנכתבו בכתב יד.
 - ○ : הגדל או הקטן תצוגה, סובב או מחק חלקים מהערה בכתב יד.

• :: : קבל גישה לאפשרויות נוספות.

3 הקש על  כדי לשמור את ההערה.

כתיבת הערות על יישום מקליט מסך

1 תוך הצגת המסך שברצונך לצלם, גרור את שורת המצב כלפי מטה והקש על .

• צילום המסך נראה עמו ערכת נושא ברקע של פנקס הרשימות. כלי מזכר מופיעים בחלקו העליון של המסך.

2 חתוך את התמונה (אם צריך) ורשום הערות לפי רצונך.

• כתוב הערות על התמונה בכתב יד.

3 הקש על  ושמור את ההערות במיקום הרצוי לך.

• ניתן להציג הערות שמורות ב- **QuickMemo+** או בגלריה.

• כדי לשמור הערות באותו מיקום כל הזמן, סמן את התיבה **השתמש כברירת מחדל לפעולה זו** ובחר יישום.

• באפשרותך לצלם את המסך כולו באמצעות התכונה 'צילום בגלילה'.

• בעת שימוש ביישום כגון 'הודעה' ו-Chrome, גרור את לוח ההתראות כלפי מטה ולאחר מכן הקש על **Capture+** < **מורחב** כדי לצלם את כל המסך המוצג כעת כקובץ יחיד.

• תכונה זו זמינה רק ביישומים מסוימים שתומכים בתכונה צילום בגלילה.

• צבוט שתי אצבעות או הרחב את האצבעות כדי לשנות את פריסת התזכיר.

ניהול תיקיות

אתה מארגן ומציג תזכירים לפי סוג התזכיר.

1 בחר ב-  < **QuickMemo+**.

2 הקש על  בחלק העליון של המסך ואז בחר את הפונקציה הרצויה.

- **כל התזכירים:** ניתן להציג באופן קולקטיבי את כל התזכירים שנשמרו ב-Qmemo+.
- **התזכירים שלי:** באפשרותך להציג את התזכירים שנשמרו ב-Qmemo+.
- **Capture+:** באפשרותך להציג את התזכירים שנוצרו באמצעות Capture+.
- **סל מיחזור:** באפשרותך להציג את התזכירים שנמחקו.
- **קטגוריה חדשה:** ניתן להוסיף קטגוריות.
- ✎ : ניתן לשנות את סדר הקטגוריות או להוסיף/למחוק קטגוריות. בלחיצה על הקטגוריה, ניתן לשנות את שם הקטגוריה.

- קטגוריות מסוימות אינן מופיעות כאשר יישום התיקיות מופעל בפעם הראשונה. הקטגוריות מוצגות בנוסף רק כאשר קיימים תזכירים רלוונטיים.
- תזכירים שנמחקו מועברים לפח האשפה וניתן לשחזר אותם בתוך 7 ימים מיום המחיקה. באפליקציית-Qmemo+, באפשרותך לשנות את סוג התצוגה על ידי הנחת שתי אצבעות על המסך או הרחבת או צמצום האצבעות.

שעון

התראה

תוכל להגדיר התראה שתופעל במועד שצוין.

- 1 הקש על  < **שעון** < **התראה**.
- 2 הקש על  כדי להוסיף התראה חדשה.
- 3 קבע את הגדרות ההתראה והקש על **שמור**.

- אם תבחר התראה שהוגדרה בעבר, תוכל לערוך אותה.
- כדי למחוק התראה, הקש על **מחק** בראש המסך. לחלופין, הקש הקשה ארוכה על ההתראה.

שעון עולמי

תוכל להציג את השעה הנוכחית בערים ברחבי העולם.

1 הקש על $\bigcirc$ < **שעון** < **שעון עולמי**.

2 הקש על $+$ והוסף עיר.

טיימר

תוכל להגדיר טיימר כדי להפעיל התראה לאחר פרק זמן שצוין.

1 הקש על $\bigcirc$ < **שעון** < **טיימר**.

2 הגדר את הזמן והקש על **התחל**.

• כדי להשהות את הטיימר, הקש על **השהה**. כדי לחדש את פעולת הטיימר, הקש על **המשך**.

3 הקש על **הפסק** כדי להפסיק את התראת הטיימר.

שעון עצר

תוכל להשתמש בשעון העצר כדי לתעד את משך הזמן שחלף.

1 הקש על $\bigcirc$ < **שעון** < **שעון עצר**.

2 הקש על **התחל** כדי להפעיל את שעון העצר.

• כדי לתעד זמן הקפה, הקש על **הקפה**.

3 הקש על **השהה** כדי להשהות את שעון העצר.

• כדי לחדש את פעולת שעון העצר, הקש על **המשך**.

• כדי לנקות את כל הרשומות ולהפעיל מחדש את שעון העצר, הקש על **איפוס**.

לוח שנה

סקירה כללית של לוח השנה

תוכל להשתמש בלוח השנה כדי לנהל אירועים ומשימות.

הוספת אירועים

- 1 הקש על  < **חיוניים** < **לוח שנה**.
- 2 בחר תאריך ולאחר מכן הקש על .
- 3 הזן פרטי אירוע והקש על **שמור**.

סנכרון אירועים

הקש על **< : לוחות שנה לסנכרון** ובחר את לוח השנה שברצונך לסנכרן.

- בעת שמירת אירועים מהמכשיר שלך אל חשבון Google, מתבצע סנכרון אוטומטי שלהם גם עם לוח השנה של Google. בהמשך תוכל לסנכרן מכשירים אחרים מול לוח השנה של Google כדי שגם באותם מכשירים האירועים יהיו זהים לאלה השמורים במכשיר שלך; לאחר הסנכרון תוכל לנהל את האירועים שלך דרך אותם מכשירים.

משימות

תוכל לרשום משימות במכשיר שלך כדי לנהל בקלות לוחות זמנים.

- 1 הקש על  < **חיוניים** < **משימות**.
- 2 הקש על  כדי להוסיף משימה.
- 3 הזן פרטי משימה ולאחר מכן הקש על **שמור**.


נגן מוסיקה

תוכל להשמיע ולנהל שירים או אלבומי מוסיקה.

1 הקש על  < חיוניים > נגן מוסיקה.

2 בחר קטגוריה.

3 בחר קובץ מוסיקה.

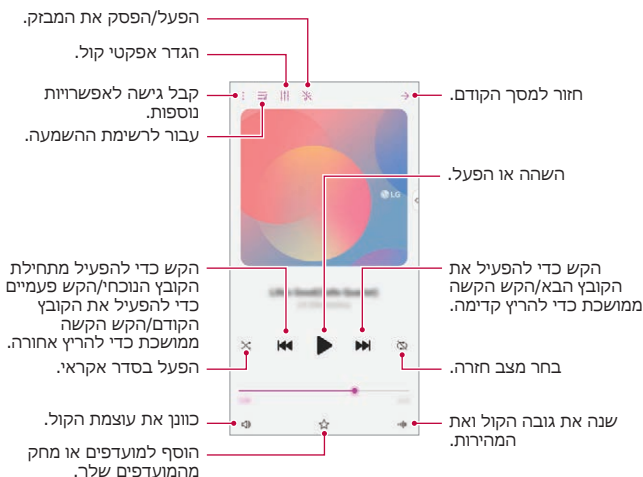

• ייתכן שחלק מתבניות הקבצים אינן נתמכות, בהתאם לתוכנות המותקנות.

• קבצים שחורגים ממגבלת הגודל עלולים לגרום לשגיאה.

• קובצי מוסיקה עשויים להיות מוגנים על-ידי בעלים בינלאומיים של זכויות יוצרים או חוקי זכויות יוצרים. ייתכן שתצטרך להשיג אישור משפטי לפני העתקת קובץ מוסיקה. כדי להוריד או להעתיק קובץ מוסיקה, תחילה בדוק את חוק זכויות היוצרים עבור המדינה הרלוונטית.

• אם אתה מגדיר את הפנס, הפנס מהבהב כך שיתאים למוזיקה המופעלת.

מחשבון

לרשותך מחשבון משני סוגים: פשוט ומדעי.

- 1 הקש על  < **חיוניים** < **מחשבון**.
 - 2 השתמש בלוח המקשים כדי לבצע חישוב.
- אם ברצונך לחשב מההתחלה, הקש והחזק .

ThinQ

באפשרותך לחבר את המוצר בקלות עם מכשירי- IoT כדי לפקח ולהשתמש בנוחות במכשירים.

בחר  < **חיוניים** < **ThinQ**.

- ניתן לרשום מכונת כביסה, מייבש, סטיילינג, מדיח כלים, תנור ומנקה רובוטים רק כאשר המוצר במצב המתנה. 
- חפש את סימן LG ThinQ במוצר כדי לראות אם ניתן לחבר אותו לאפליקציית LG ThinQ.
- הקש על  כדי לבדוק פונקציות שונות של אפליקציית LG ThinQ.

מפעיל המשחק

ניתן להשתמש ב'מפעיל המשחק' כדי להציג את כל רשימת המשחקים המותקנים, או להשתיק את המכשיר או למנוע הצגת הודעות בעת שימוש במשחקים.

- 1 לחץ על  < **חיוניים** < **מפעיל המשחק**.
- 2 בחר את האפשרות הרצויה.

סקירה כללית של LG Health

תוכל לנהל ענייני בריאות ולשמור על הרגלי אימון טובים על ידי ניהול מעקב אחר אימוני הכושר שלך.

צעדים ראשוניים עם LG Health


תוכל להגדיר את LG Health בעת הפעלת היישום בפעם הראשונה, או לאחר האיפוס.

- 1 הקש על  < **חיניים** < LG Health.
- 2 פעל לפי ההוראות שעל המסך כדי להשלים את קביעת התצורה.

שימוש ב-LG Health

תוכל להציג מידע ראשי ב-LG Health ולנהל את כמות האימון הגופני ואת נתוני הבריאות.

- 1 הקש על  < **חיניים** < LG Health.
- 2 לרשותך האפשרויות הבאות.

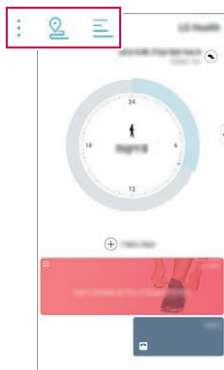

- ≡ : הצג את יומן האימונים של היום הרצוי.
- 📍 : התחל לעקוב אחר אימון כושר. המסלול והיקף התרגול הגופני שלך יתועדו עבור כל סוג של אימון.
- :: : הגדר יעדי אימון יומיים, כולל קלוריות וצעדים, או קבע הגדרות שונות ב-LG Health.

- המידע בנושאי בריאות המסופק על-ידי LG Health משמש כמידע כללי לנוחות המשתמש ולא ניתן להשתמש בו למטרות מניעת מחלות, טיפול, אבחון או בעיות רפואיות אחרות.
- היישום LG Health עשוי להשתנות או לא להיות זמין, בהתאם למדינה ולספק השירות. הפונקציות של LG Health הזמינות והיישומים שניתן להוסיף ל-LG Health עשויים להשתנות, בהתאם למדינה. הבדלים אלה נובעים כתוצאה מהבדלים בחוקים ובתקנות.

דוא"ל

סקירה כללית של דוא"ל

תוכל לרשום חשבון דוא"ל במכשיר שלך ולאחר מכן תוכל לבדוק ולשלוח הודעות דוא"ל מהמכשיר.

- אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.

רישום חשבונות דוא"ל

כאשר תשתמש ביישום הדוא"ל בפעם הראשונה, תתבקש לרשום את חשבון הדוא"ל שלך.

- 1 הקש על 🔄 < חיוניים > דוא"ל.
- 2 בחר ספק שירותי דוא"ל.

3 הזן את כתובות הדוא"ל ואת הסיסמה, ולאחר מכן הקש על **הבא** כדי לרשום את החשבון שלך.

• כדי לרשום חשבון דוא"ל באופן ידני, הקש על **הגדרה ידנית** (במקרה הצורך).

ניהול חשבונות דוא"ל

כדי להציג או לערוך את הגדרות חשבון הדוא"ל שלך, הקש על < : **הגדרות**.

- כדי להוסיף חשבון, הקש על **הוסף חשבון**.
- כדי למחוק חשבון, הקש על < : **הסר חשבון**.

פתיחת חשבון דוא"ל נוסף

אם יש כמה חשבונות דוא"ל רשומים וברצונך להציג חשבון נוסף, הקש על ≡ ובחר חשבון אחר מרשימת החשבונות.

בדיקת דוא"ל

- 1 הקש על ≡ ובחר תיבת דואר.
- 2 בחר דוא"ל מרשימת הדוא"ל.
- הודעת הדוא"ל תופיע.

שליחת דוא"ל

- 1 הקש על +.
- 2 הזן את כתובת הדוא"ל של הנמען.
- 3 הזן נושא והודעה
- כדי לצרף קבצים, הקש על .
- כדי לגשת לפריטי תפריט אופציונליים, הקש על ∴.
- 4 הקש על ➤ כדי לשלוח את הדוא"ל.

• צבט שתי אצבעות או הרחב את האצבעות כדי לכווץ את גודל הגופן עבור רשימת הדואר האלקטרוני שלך.



הקלטת שמע ב-HD

הקלטת שמע ב-HD מאפשרת לך לקבוע את תצורת הגדרות השמע באופן ידני כך שתוכל להקליט שמע בהתאם לסביבה שלך.

מצבי הקלטה

באפשרותך להקליט קובץ שמע באיכות High Definition על-ידי בחירה והגדרת תצורה של מצב השמע הרצוי כך שיתאים לסביבת ההקלטה.

הקש על  < **חיוניים** < **הקלטת שמע ב-HD** < .

רגילה

באפשרותך להקליט שמע ללא הגדרות נוספות.

הופעה

באפשרותך להקליט שמע בהופעה או באירוע מוסיקלי אחר.

מותאם אישית

תוכל לקבוע את תצורת ההגדרות הרצויות באופן ידני כדי להקליט שמע.

מצב סטודיו

במצב 'סטודיו', אתה יכול להפעיל קובץ שמע או מוסיקה ולהקליט את קולך בו-זמנית, ליצור אקורד על-ידי הקלטת קולך מספר רב של פעמים, ולהקליט את הערותיך מעל קובץ השמע המקורי של המציג או הדובר.

1 הקש על  < **חיוניים** < **הקלטת שמע ב-HD** <  < **מותאם אישית**.

2 הקש על .

3 בחר קובץ שמע שישמש כמוסיקת רקע.

4 הקש על  כדי להקליט קול.

5 הקש על  כדי לשמור את הקובץ המוקלט.

• ניתן להפעיל מוסיקת רקע באמצעות האוזניות בלבד. הקפד לחבר את האוזניות לפני השימוש בתכונה זו. 

תכונות מועילות נוספות לשימוש ביישום 'הקלטת שמע' באיכות גבוהה'

GAIN

תוכל לכוונן את רגישות הקול המוקלט באמצעות המיקרופון. ככל שערך החיזוק גבוה יותר, כך הקול מוקלט ברמת רגישות גבוהה יותר.

LCF

תוכל לסנן רעשים חלשים כגון המהום חלש של המזגן. ככל שערך ה-LCF (Low Cut Filter - מסנן בחיתוך נמוך) המוגדר גבוה יותר, כך רעשים בתדר גבוה יסוננו בצורה טובה יותר.

LMT

תכונה זו יכולה למנוע קיטוע של הצליל המוקלט. ככל שערך ה-LMT (Limiter - מגביל) המוגדר גבוה יותר, כך צלילים רבים יותר בתדר נמוך לא ייקטעו.

- כדי לשנות הגדרות נוספות, הקש על **< הגדרות**, ולאחר מכן התאם אישית את סוג הקובץ, עומק הסיביות, קצב הדגימה והגדרות אחרות.
- כשתבחר במצב קונצרט או במצב התאמה אישית עם אוזניות מחוברות,  מופיע. הקש על  ולאחר מכן בחר את המיקרופון שבו ברצונך להשתמש.
- באפשרותך לנטר את איכות הקול בעזרת האוזניה המחוברת במהלך הקלטת שמע. במהלך הקלטת שמע במצב 'סטודיו', אין תמיכה בניטור קול. תוכל לשמוע את מוסיקת הרקע בלבד.

מנהל הקבצים

תוכל להציג ולנהל קבצים שנשמרו במכשיר שלך או בענן.

1 הקש על  < **כלי ניהול** < **מנהל הקבצים**.

2 הקש על  ובחר במיקום האחסון הרצוי.

Smart Doctor

תוכל להשתמש ב-Smart Doctor כדי לאבחן את מצב המכשיר ולמטב אותו.

הקש על  < **כלי ניהול** < **Smart Doctor**.

LG Mobile Switch

העבר בקלות נתונים ממכשיר משומש למכשיר חדש באמצעות LG Mobile Switch.

1 הקש על  < **כלי ניהול** < **LG Mobile Switch**.
באפשרותך גם להקיש על  < **הגדרות** < **המערכת** < **גיבוי** < **LG Mobile Switch**.

2 פעל בהתאם להוראות המופיעות במסך כדי לבחור שיטת העברה רצויה.

- הנתונים בחשבון Google לא יגובו. כאשר אתה מסנכרן את חשבון Google שלך, יישומי Google, אנשי הקשר של Google, Google Calendar, נתוני יישום התזכורות של Google ויישומים שהורדו מחנות Play יאוחסנו ביישום Drive באופן אוטומטי.
- טען את הסוללה באופן מלא לפני העברת נתונים כדי למנוע כיבוי שלא בכוונה בזמן התהליך.

יישום סל המיחזור

באפשרותך לראות את רשימת היישומים שנמחקו על מסך הבית. ניתן לשחזר את האפליקציה שנמחקה במהלך 24 השעות האחרונות.

הקש על  < **כלי ניהול** < **יישום סל המיחזור**.
לפרטים נוספים עיין ב **יישום סל המיחזור**.

תוכל להוריד מגוון משחקים, תכני שמע, יישומים וגופנים המסופקים על-ידי LG Electronics. התאם אישית את המכשיר שלך כדי להתאימו להעדפותיך באמצעות ערכות הנושא והגופנים של המסך הראשי.

- אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך.
- ייתכן שלא תהיה תמיכה בתכונה זו, התמיכה נקבעת בהתאם לאזור או לספק השירות.

1 הקש על ○ < **שירותים** < **SmartWorld**.

2 הקש על : < **חשבון LG**, ולאחר מכן היכנס.

3 בחר והורד את פריטי התוכן הרצויים.

מוריד את SmartWorld

אם היישום SmartWorld אינו מותקן, בצע את השלבים הבאים כדי להוריד אותו.

1 הקש על ○ < **הגדרות** < **המערכת** < **מרכז עדכונים** < **עדכוני אפליקציות**.

2 ברשימה, בחר **SmartWorld** והקש על **הורד**.

שירות התראות חירום

תוכל להציג שידורי טקסט בזמן במצבי חירום, כגון סופות טיפון, שיטפונות ורעידות אדמה.

הקש על ○ < **שירותים** < **שירות התראות חירום**.

יישומי Google

ניתן להשתמש ביישומי Google על-ידי הגדרת חשבון Google. חלון הרישום של חשבון Google יופיע באופן אוטומטי כאשר תשתמש ביישום של Google בפעם הראשונה. אם אין לך חשבון Google, צור חשבון במכשיר שלך. לפרטים בנוגע לאופן השימוש ביישום, עיין בעזרה שסופקה ביישום.

• ייתכן שיישומים מסוימים לא יפעלו, בהתאם לאזור ולספק השירות.

Chrome

דפדפן מהיר, פשוט ומאובטח לאינטרנט המודרנית.

Docs

Docs הוא כלי עיבוד תמלילים בשיתוף פעולה המרחיב את הפרודוקטיביות. השתמש ב-Docs כדי ליצור, לערוך ולעבוד יחד בזמן אמת.

Drive

Drive הוא יישום אחסון קבצים ושיתוף המקל עליך לאתר, לשתף ולשתף פעולה על פרויקטי עבודה מכל מקום שהוא, באופן מדי.

Duo

צור שיחות וידאו פשוטות ובאיכות גבוהה עם חברים ובני משפחה מטלפוני iPhone-1 Android.

Gmail

Gmail הוא יישום דואר אלקטרוני קל לשימוש השומר על ההודעות שלך מאובטחות, הופך את תיבת הדואר הנכנס לחכמה יותר, ומסייע לך לשמור על הסדר.

Google

יישום Google מעדכן אותך בדברים בהם אתה מעוניין. אתר תשובות במהירות, סקור את תחומי העניין שלך וקבל הזנה של חדשות ועדכונים בנושאים שמעניינים אותך.

מפות

נוסע למקום כלשהו? עבור אל Maps, היישום הנשען על ניווט GPS בזמן אמת, מידע תנועה, תעבורה ופרטים על מיליוני מקומות, כגון סקירות וזמנים פופולריים.

חדשות

כיסוי מקיף ועדכני של חדשות, שמקורו ממקורות בכל העולם באמצעות חדשות Google.

תמונות

הבית של כל התמונות והווידאו שלך, מסודר באופן אוטומטי כדי שתוכל לשתף ולשמור את מה שחשוב לך.

Play סרטים

השתמש בחשבון Google כדי לשכור או לרכוש סרטים. קנה תוכן והפעל אותו בכל מקום.

Play מוזיקה

קנה קובצי מוזיקה מ-Play Store. הפעל מוזיקה שנשמרה במכשיר שלך.

Sheets

Sheets הוא כלי גיליון אלקטרוני בשיתוף פעולה המרחיב את הפרודוקטיביות. השתמש ב-Sheets כדי לייבא, לארגן ולנתח מידע ביחד בזמן אמת.

Slides

Google Slides הוא כלי מצגות בשיתוף פעולה המרחיב את הפרודוקטיביות. השתמש ב-Slides כדי לארגן מידע, להציג תוצאות ולקבל החלטות ביחד בזמן אמת.

YouTube

צפה בערוצים המועדפים שלך, האזן למוזיקה שאתה אוהב, והעלה סרטוני וידאו כדי לשתף אותם עם אנשים ברחבי העולם.

הערות ב - Keep

צור, ערוך ושתף את הערות הטקסט והתמונות באמצעות חשבון Google.

Assistant

המכשיר שלך כולל את Google Assistant באופן מובנה. אתר תשובות ובצע פעולות כאשר תהיה מחוץ למשרד/לבית. כדי להתחיל, פשוט הקש על מקש Google Assistant בצד המכשיר או גע והחזק בלחצן הבית של הטלפון.

• Google Assistant אינו זמין במדינות ושפות מסוימות. 



04

הגדרות

הגדרות

תוכל להתאים אישית את הגדרות המכשיר על פי העדפותיך.
הקש על  < **הגדרות**.

- הקש על  והזן מילת מפתח בתיבת החיפוש כדי לגשת לפריט הגדרה.

רשת ואינטרנט

Wi-Fi

תוכל להתחבר למכשירים סמוכים או באמצעות רשת Wi-Fi.

התחברות לרשת Wi-Fi

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **Wi-Fi**.
- 2 הקש על  כדי להפעיל אותו.
- רשתות ה-Wi-Fi הזמינות יופיעו באופן אוטומטי.
- 3 בחר רשת.
- ייתכן שתצטרך להזין את סיסמת ה-Wi-Fi של הרשת.
- המכשיר מדלג על תהליך זה עבור רשתות Wi-Fi שבוצעה אליהם גישה בעבר. אם אינך רוצה להתחבר באופן אוטומטי לרשת Wi-Fi מסוימת, הקש על הרשת ולאחר מכן הקש על **שכח**.

Wi-Fi

הגדרות רשת Wi-Fi

- במסך ההגדרות, הקש על **רשת ואינטרנט** < **Wi-Fi**.
- **עבור לנתונים ניידים:** אם תופעל פונקציית הנתונים הניידים אך המכשיר לא יצליח להתחבר לאינטרנט באמצעות Wi-Fi, המכשיר יתחבר לאינטרנט באופן אוטומטי באמצעות פונקציית הנתונים הניידים.



- הזמינות של תכונה זו תלויה בספק השירות.

- : התאם אישית את ההגדרות של רשת Wi-Fi.

Wi-Fi Direct

תוכל לחבר את ההתקן שלך להתקנים אחרים שתומכים ב-Wi-Fi Direct כדי לשתף נתונים ישירות איתם. אינך צריך נקודת גישה. תוכל להתחבר עם יותר משני מכשירים באמצעות Wi-Fi Direct.


- 1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **Wi-Fi** < **Wi-Fi Direct** **מדקתם**.

- מכשירים סמוכים שתומכים ב-Wi-Fi Direct יופיעו באופן אוטומטי.

- 2 בחר התקן.

- החיבור מתרחש כאשר המכשיר מקבל את בקשת החיבור.

- בעת שימוש ב-Wi-Fi Direct, הסוללה עשויה להתרוקן מהר יותר.

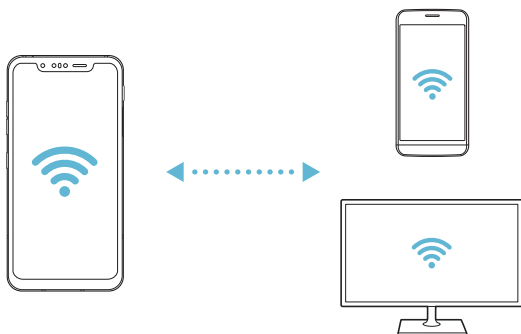

נתונים ניידים

באפשרותך להפעיל ולכבות את הנתונים הניידים. תוכל גם לנהל את השימוש בנתונים לנייד.

הפעלת נתונים לנייד

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט > נתונים ניידים**.
- 2 הקש על  כדי להפעיל אותו.

התאמה אישית של הגדרות הנתונים לנייד

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט > נתונים ניידים**.
- 2 התאם אישית את ההגדרות הבאות:
 - **פועל:** הגדר שימוש ברשתות סלולריות לצורך חיבורי נתונים.
 - **הגבל שימוש בנתונים ניידים:** הגדר מגבלה לשימוש בנתונים לנייד כדי לחסום נתונים לנייד אם הגעת למגבלה.
 - **⋮ :** התאם אישית את ההגדרות הנתונים לנייד.
 - נפח השימוש בנתונים נמדד על סמך המוצר, והנפח המחושב על ידי ספק הסלולר שלך עשוי להיות שונה.

הגדרות שיחה

תוכל להתאים אישית את הגדרות השיחה, כגון אפשרויות שיחה קולית ושיחה בינלאומית.

- ייתכן שחלק מהפונקציות אינן נתמכות, בהתאם לאזור ולספק השירות. 

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט > הגדרות שיחה**.

- 2 התאם אישית את ההגדרות.

שיתוף אינטרנט


שיתוף באמצעות USB

תוכל לחבר את המכשיר למכשיר אחר דרך USB ולשתף נתונים לנייד.

1 חבר את המכשיר והמכשירים האחרים באמצעות כבל USB.

2 במסך ההגדרות, הקש על **רשת ואינטרנט > שיתוף אינטרנט > שיתוף באמצעות USB** ולאחר מכן הקש על **כדי להפעיל אותו**.

- אפשרות זו משתמשת בנתונים לנייד, ועשויה להיות כרוכה בתשלום, בהתאם לתוכנית המחירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.
- בעת התחברות למחשב, הורד את מנהל התקן ה-USB מהאתר www.lg-mobile.co.il והתקן אותו במחשב.
- לא ניתן להעביר קבצים בין המכשיר למחשב כאשר חיבור לאינטרנט באמצעות USB מופעל. כבה את החיבור לאינטרנט באמצעות USB כדי לשלוח או לקבל קבצים.
- מערכות הפעלה שתומכות בחיבור לאינטרנט הן Windows XP ואילך, או Linux.

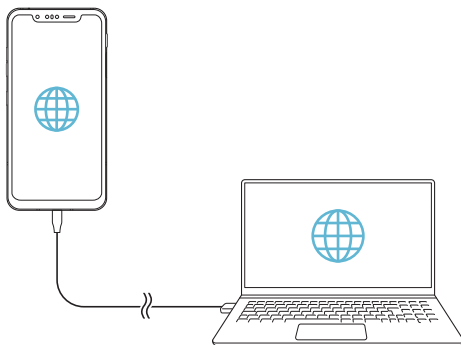


נקודה חמה ניידת ב- Wi-Fi

תוכל להגדיר את המכשיר כנתב אלחוטי כך שהמכשירים האחרים יוכלו להתחבר לאינטרנט באמצעות חיבור הנתונים לנייד של המכשיר.

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט** > **שיתוף אינטרנט** > **נקודה חמה ניידת ב- Wi-Fi** ולאחר מכן הקש על  כדי להפעיל אותו.
- 2 הקש על **הגדרת נקודה חמה של Wi-Fi**, ולאחר מכן הזן את שם Wi-Fi (SSID) והסיסמה.
- 3 הפעל את Wi-Fi במכשיר השני ובחר את השם של רשת המכשיר ברשימת ה-Wi-Fi.
- 4 הזן את סיסמת הרשת.

- אפשרות זו משתמשת בנתונים לנייד, ועשויה להיות כרוכה בתשלום, בהתאם לתוכנית המחירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.
- לרשותך מידע נוסף באתר אינטרנט זה:
<http://www.android.com/tether#wifi>

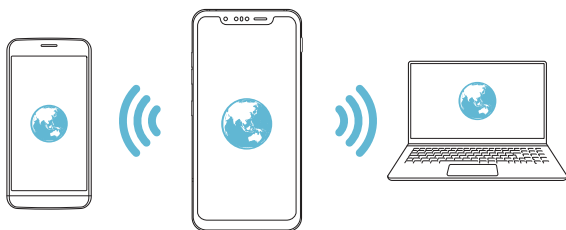

טיימר לכיבוי נקודה חמה ניידת ב-Wi-Fi

לאחר תקופה מסוימת שבה הנקודה החמה הניידת ב-Wi-Fi אינה בשימוש, היא מנותקת באופן אוטומטי. באפשרותך להגדיר את הזמן שבו יתבצע ניתוק אוטומטי.

שיתוף אינטרנט ב-Bluetooth

ניתן לחבר מכשיר עם חיבור Bluetooth לאינטרנט דרך חיבור הנתונים לנייד במכשיר שלך.

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **שיתוף אינטרנט** < **שיתוף אינטרנט ב-Bluetooth** ולאחר מכן הקש על  כדי להפעיל אותו.
- 2 הפעל את ה-Bluetooth בשני המכשירים והתאם ביניהם.

- אפשרות זו משתמשת בנתונים לנייד, ועשויה להיות כרוכה בתשלום, בהתאם לתוכנית המחירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.
- לרשותך מידע נוסף באתר אינטרנט זה:
http://www.android.com/tether#Bluetooth_tethering

עזרה

תוכל להציג את העזרה בנושא קשירה ונקודות חמות. במסך ההגדרות, הקש על **רשת ואינטרנט** < **שיתוף אינטרנט** < **עזרה**.

מצב טיסה

תוכל לכבות את פונקציות השיחה והנתונים לנייד. כאשר מצב זה מופעל, פונקציות שאינן כוללות נתונים, כמו הפעלת משחקים ומוסיקה, הופכות ללא זמינות.

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **מצב טיסה**.
- 2 הקש על **הפעל** במסך האישור.

רשתות ניידות

אתה יכול להתאים אישית את הגדרות הרשת הניידת.

1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **רשתות ניידות**.

2 התאם אישית את ההגדרות הבאות:

- **נדידת נתונים:** גלוש באינטרנט, השתמש ב ודא"ל, ב דוהע תו מולטימדיה ובשי תורים אחרים בחו"ל.
- **סוג רשת:** בחרו סוג רשת.
- **שמות נקודות גישה:** הצג או שנה את נקודת הגישה לשימוש בשירותי נתונים לנייד. כדי לשנות את נקודת הגישה, בחר אפשרות מתוך רשימת נקודות הגישה.
- **מפעילי רשת סלולרית:** חפש מפעילי רשת סלולרית והתחבר באופן אוטומטי לרשת.

VPN

תוכל להתחבר לרשת וירטואלית בטוחה, כמו אינטראנט. תוכל גם לנהל רשתות פרטיות וירטואליות מחוברות.

הוספת VPN

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **VPN**.
- 2 הקש על +.

- תכונה זו זמינה רק כאשר נעילת המסך מופעלת. אם נעילת המסך מבוטלת, מופיע מסך התראות. הקש על **שנה** במסך ההתראה כדי להפעיל את נעילת המסך. ראה **הגדרת נעילת מסך** לקבלת פרטים.

3 הזן פרטי VPN והקש על **שמור**.

קביעת ההגדרות של VPN

- 1 הקש על VPN ברשימה **VPNS**.
- 2 הזן את פרטי חשבון המשתמש של VPN והקש על **התחבר**.
- כדי לשמור את פרטי החשבון, סמן את התיבה **שמור פרטי חשבון**.

הגדרות

DNS פרטי

באפשרותך להגדיר את אפשרויות ה-DNS (מערכת שמות מתחם) הפרטי.

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט < DNS פרטי**.
- 2 בחר את האפשרות הרצויה ולחץ על **שמור**.

התקנים מחוברים

Bluetooth

תוכל לחבר את המכשיר שלך למכשירים סמוכים שתומכים ב-Bluetooth כדי להחליף איתם נתונים. חבר את המכשיר לאזוניית Bluetooth ולמקלדת. בדרך זו תוכל לשלוט בקלות רבה יותר במכשיר.

שיוך עם מכשיר אחר

- 1 במסך ההגדרות, הקש על **התקנים מחוברים < Bluetooth**.
- 2 הקש על  כדי להפעיל אותו.

 - המכשירים הזמינים מופיעים באופן אוטומטי.
 - כדי לרענן את רשימת המכשירים, הקש על .

• רק מכשירים שמוגדרים כגלויים מוצגים ברשימה. 

- 3 בחר מכשיר מהרשימה.

- 4 פעל לפי ההוראות שעל המסך כדי לבצע את האימות.

• המערכת מדלגת על שלב זה עבור מכשירים שבוצעה אליהם גישה בעבר. 

שליחת נתונים דרך חיבור Bluetooth

- 1 בחר קובץ.
 - תוכל לשלוח קובצי מולטימדיה או אנשי קשר.
- 2 הקש על  < **Bluetooth**.
- 3 בחר מכשיר יעד עבור הקובץ.
 - הקובץ יישלח ברגע שמכשיר היעד יקבל אותו.

• תהליכי שיתוף הקבצים עשויים להשתנות, בהתאם לקובץ. 

שתף מסך

תוכל להקרין את המסך ולהשמיע את הצלילים מהמכשיר באמצעות מכשיר אחר, כמו למשל טלוויזיה, בתנאי שהוא תומך בפונקציה Miracast.

- 1 במסך ההגדרות, הקש על **התקנים מחוברים** < **שתף מסך**.
- 2 הקש על  כדי להפעיל אותו.
- 3 בחר מכשיר מרשימה של מכשירים סמוכים.
 - אם המכשיר הרצוי אינו מופיע, הקש על **חיפוש** כדי לרענן את הרשימה.
 - לאחר ההתחברות למכשיר, המכשיר מציג את מסך המכשיר שלך.

• שיתוף המסך יכבה באופן אוטומטי אם אין מכשיר תואם לשיתוף בקרבת מקום. 

תוכל להשתמש במכשיר גם ככרטיס נסיעה בתחבורה ציבורית או ככרטיס אשראי. תוכל גם לשתף נתונים עם המכשיר השני.

- 1 במסך ההגדרות, הקש על **התקנים מחוברים < NFC**.
- 2 הקש על  כדי להפעיל אותו.
- הצמד את המכשיר שלך למכשיר השני התומך ב-NFC כדי לאפשר שיתוף נתונים.

• המיקום של אנטנת NFC תלוי בסוג המכשיר. ראה **סקירה כללית של החלקים** לפרטים על אזור אנטנת ה-NFC.



Android Beam

תוכל לשתף קבצים על ידי הצמדת גב המכשיר אל מכשיר השני. תוכל גם לשתף קבצים, כולל מוסיקה, סרטונים או אנשי קשר ואף לפתוח דף אינטרנט או להפעיל יישום דרך המכשיר השני.

- 1 במסך ההגדרות, הקש על **התקנים מחוברים < Android Beam**.
- 2 הצמד את גב המכשיר אל המכשיר השני.

• המיקום של אנטנת NFC תלוי בסוג המכשיר. ראה **סקירה כללית של החלקים** לפרטים על אזור אנטנת ה-NFC.



לוח השיתוף

תוכל לשתף תוכן מ'גלריה', מ'מוסיקה' ומ'מנהל הקבצים' עם מכשירים סמוכים. תוכל גם לשתף תוכן עם אנשים מסוימים ביישומים הפועלים עם Google Direct Share.

- 1 במסך ההגדרות, הקש על **התקנים מחוברים < לוח השיתוף**.
- 2 הקש על  כדי לבטל פעולה של כל אחת מהאפשרויות.

- **מכשירים סמוכים:** באפשרותך להציג את המכשירים הקרובים אליהם תוכל לשתף תוכן באפליקציות הגלריה, המוסיקה ומנהל הקבצים.
- **שיתוף ישיר:** מאפליקציה התומכת ב-Google Direct Share, אתה יכול להציג סמל המאפשר לשתף תוכן לאנשים ספציפיים.

שיתוף קבצים

תוכל לשלוח ולקבל קבצים בין המכשיר שלך למכשירים או טאבלטים אחרים של LG.

1 במסך ההגדרות, הקש על **התקנים מחוברים < שיתוף קבצים**.

2 התאם אישית את ההגדרות הבאות:

- **G8S ThinQ:** שנה את שם המכשיר.
- **שמור ב:** הגדר את תיקיית היעד שבה יישמרו קבצים שנשלחו ממכשירים אחרים.
- **שיתוף קבצים:** אפשר קבלה של קבצים שנשלחו ממכשירים אחרים.
- **SmartShare Beam:** שתף קבצים עם מכשירים אחרים דרך SmartShare Beam.
- **עזרה:** באפשרותך להציג עזרה על שיתוף קבצים.

שרת מדיה

תוכל לשתף תוכן מדיה במכשיר שלך עם מכשירים סמוכים שתומכים ב-DLNA.

1 במסך ההגדרות, הקש על **התקנים מחוברים < שרת מדיה**.

2 התאם אישית את ההגדרות הבאות:

- **שיתוף תוכן:** שתף תוכן במכשיר עם מכשירים סמוכים.
- **G8S ThinQ:** הגדר את שם המכשיר שלך.

- בהתאם למוצר המשתמש, שמות התפריט עשויים להופיע באופן שונה.



- **תוכן לשיתוף:** בחר את סוג תוכן המדיה כדי לשתף עם מכשירים אחרים.
- **מכשירים מורשים:** הצג רשימה של מכשירים שמורשים לגשת לתוכן במכשיר.
- **התקנים לא מורשים:** הצג רשימה של מכשירים שאינם מורשים לגשת לתוכן במכשיר.

הדפסה

- תוכל לחבר את המכשיר למדפסת Bluetooth ולהדפיס תמונות או מסמכים השמורים במכשיר.
- במסך ההגדרות, הקש על **התקנים מחוברים < הדפסה**.
- הקש על **שירות ההדפסה המוגדר כברירת מחדל** לחפש מדפסות שאליהן תוכל להתחבר. או, הקש על **: < הוסף מדפסת** להוסיף מדפסת ידנית.
- הקש על **⊕ הוסף שירות** להוריד את אפליקציית המדפסת הרצויה.

- זה זמין רק כאשר הרשת הסלולרית או פונקציית Bluetooth מופעלת



- כדי להוריד את יישום המדפסת ב- **⊕ הוסף שירות**, התחבר תחילה לחשבון Google שלך.

תוכל להתאים אישית את הגדרות הקול, הרטט וההתראות. במסך ההגדרות, הקש על **צליל** והתאם אישית את ההגדרות הבאות:

- **פרופילי צליל:** שנה את מצב הצליל ל**צליל**, **רטט בלבד** או **השתק**.
- **עוצמה:** התאם את עוצמת הצליל של פריטים שונים.
- **צלצול:** בחר רינגטון לשיחות נכנסות. הוסף או מחק רינגטונים.
- **צליל התראה:** בחר רינגטון להתראה. הגדר מוסיקה שנשמרה במכשיר כרינגטון להתראה.
- **צלצול עם רטט:** קבע כי המכשיר יפעיל רטט וישמיע רינגטון בו-זמנית.
- **צלצול מותאם:** צור רינגטון לשיחה נכנסת מאיש קשר מסוים.
- **התראה בפלאש בעת קבלת שיחה:** הגדר שהמבזק יהבהב לפי הרינגטון של LG.
- **נא לא להפריע:** הגדר את השעה, הטווח וסוג היישום לקבלת הודעות של התראות. קבל הודעות של התראות בימים מסוימים בשבוע בלבד.
- **איכות הקול ואפקטים:** השתמש בתפקוד זה כדי לקבוע את איכות הקול והאפקטים בעת הפעלת שיר או סרטון וידאו.
- **עוצמה:** התאם את עוצמת הצליל של פריטים שונים.
- **שנה את עוצמת הקול לעוצמה נורמלית:** השתמש בתפקוד זה כדי לנרמל את עוצמת הצליל של מקורות שמע שונים.
- **אקוולייזר:** השתמש באפשרות זו כדי לכוון את הגדרות האקוולייזר.
- **DTS:X 3D Surround:** השתמש בתפקוד כדי להפעיל מוזיקה או וידאו בצליל תלת-ממדי אופף וחי כאשר מחוברים אוזניות, רמקול או התקני שמע חיצוניים אחרים. ראה **DTS:X 3D Surround** לקבלת פרטים.
- **עוצמת רטט:** כוון את עוצמת הרטט.

- **סוג רטט:** אתה יכול לבחור את סוג הרטט כשאתה מקבל שיחות.
- **רטט בעת הקשה:** קבע שהמכשיר יפעיל רטט כאשר תקיש על פריטים מסוימים על המסך.
- **צליל לוח המקשים:** בחר את האפקט של צליל לוח המקשים.
- **צליל המקלדת LG:** בחר את האפקט של צליל מקלדת LG.
- **צליל מגע:** בחר את אפקט הצליל של הקשה על פריט.
- **צליל נעילת מסך:** בחר את אפקט הצליל שיושמע בעת נעילה או שחרור נעילה של המסך.

תצוגה

- תוכל להתאים אישית הגדרות מפורטות לכל סוג מסך. במסך ההגדרות, הקש על **תצוגה** והתאם אישית את ההגדרות הבאות:
- **מסך ראשי:** התאם אישית את הגדרות מסך בית. ראה **הגדרות מסך בית** לקבלת פרטים.
 - **טפט וערכת נושא:** בחר את טפט המסך, ערכת הנושא, הסמל ו-AOD של המכשיר שלך.
 - **גופן:** שנה את גודל הגופן, ההדגשה או הסוג.
 - **יצירת מסך משני חדש:** בחר כיצד ייראו שורת המצב ופינות היישומים.
 - **שורת ניווט:** קבע את הסגנון של סרגל הניווט באמצעות 'מחוות, מחוות ולחצנים' או 'לחצנים בלבד'. ניתן גם לשנות את שילוב הלחצנים כאשר תגדיר את 'לחצנים בלבד' כסגנון סרגל הניווט.
 - **AOD (always-on display):** הצג תמיד מידע, כמו התאריך, השעה והתראות, גם כאשר המסך כבוי. לפרטים, ראה **AOD (always-on display)**.
 - **True View:** מאפשר לשנות את בהירות וצבע המסך בהתאם למקור האור.

- **תצוגה נוחה:** הגדר את המכשיר להפחתת כמות האור הכחול על המסך כדי לצמצם את מאמץ העיניים.
- **מצב לילה:** באפשרותך להחיל נושא מסך מעומעם כדי להימנע מבוהק על המסך בשעות הלילה.
- **צבע המסך:** כוונן את הצבע, טמפרטורת הצבע או ערכי RGB של המסך הרצוי.

• הקישו על  כדי לאפס הגדרות.

- **הגברת וידאו:** בעת הפעלת וידאו במצב מסך מלא, ניתן לשנות את ההגדרות לתצוגת צבע בהירה וחיה יותר.
- **התאמת הצגת יישום לגודל המסך:** כוונן את גודל פריסת היישומים במסך.

יחס גובה-רוחב

- מכשיר זה עושה שימוש ביחס גובה-רוחב של 18.7:9.
- ייתכן שחלק מהיישומים שהורדו אינם תומכים ביחס גובה-רוחב של 18.7:9.
- במקרה כזה, בחר ביחס המסך האופטימלי עבור היישום, או התייעץ עם ספק היישום לקבלת מידע נוסף.
- ניתן לבחור את יחס המסך ליישומים מסוימים בהקשה על  < הגדרות < תצוגה < התאמת הצגת יישום לגודל המסך.
- בחר את יחס הגובה-רוחב הרצוי מהאפשרויות **תאימות (16:9)**, **רגיל (16.7:9)** ו**מסך מלא**.

- **צבע מבטא:** שנה את צבע הנקודה עבור הגדרות, תפריטים, חלונות התראה וכו'.
- **גודל תצוגה:** הגדר את הפריטים במסך לגדול שתוכל לראות בקלות. ייתכן שחלק מהפריטים ישנו מיקום.
- **בהירות:** השתמש במחוון כדי לשנות את בהירות המסך של המכשיר.
- **אוטומטי:** הגדר את המכשיר כך שבהירות המסך תותאם באופן אוטומטי לעוצמת התאורה בסביבה.

- **כיבוי מסך אוטומטי:** כבה באופן אוטומטי את המסך כאשר המכשיר לא היה פעיל במשך פרק זמן שצוין.
- **סיבוב מסך אוטומטי:** סובב באופן אוטומטי את המסך בהתאם לכיוון המכשיר.
- **שומר מסך:** הצג שומר מסך כאשר המכשיר מחובר למחזיק או למטען. בחר את סוג שומר המסך שיוצג.
- **שליטה על המסך ביד אחת:** לנוחותך, הקטן את גודל המסך כדי להשתמש במכשיר ביד אחת. גרור את הקצה השמאלי/ימני למרכז והחזק.

מסך הנעילה ואבטחה

תוכל להתאים אישית את הגדרות נעילת המסך והאבטחה.

1 במסך ההגדרות, הקש על **מסך הנעילה ואבטחה**.

2 התאם אישית את ההגדרות.

- **Google Play Protect:** סורק את המכשיר מדי יום לאיתור יישומים שעלולים להזיק.

- **איפה המכשיר שלי?:** עקוב מרחוק אחר מיקום המכשיר. תוכל גם להגן על אבטחת הנתונים שלך אם איבדת את המכשיר שלך.

- **עדכון אבטחה:** בדוק לעדכוני אבטחה וקבע את התצורה של הגדרות ההתקנה האוטומטית.

- **בחר נעילת מסך:** בחר את השיטה הרצויה לנעילת המסך. ראה **הגדרת נעילת מסך** לקבלת פרטים.

- **התאמה אישית של מסך הנעילה:** שנה את המידע המוצג במסך נעילה.

- **הגדרות נעילה מאובטחת:** שנה את הגדרות הנעילה המאובטחת.

- **טביעות אצבע:** השתמש בטביעת אצבע כדי לבטל נעילת המסך או התוכן. ראה **סקירה כללית של זיהוי טביעת אצבע** לקבלת פרטים.

- **Face Unlock**: מאפשר לך לבטל את נעילת המסך באמצעות פניך. ראה **סקירה כללית של תכונת Face Unlock** לקבלת פרטים.
- **Hand ID**: מאפשר לך לבטל את נעילת המסך באמצעות ידך. ראה **סקירת Hand ID** לקבלת פרטים.
- **נעילת תוכן**: מאפשר לך לקבוע שיטת נעילה (PIN או תבנית) עבור קובצי QuickMemo+ והגלריה.
- **הצפנה ואישורים**: קבע את ההגדרות של ההצפנה והאישורים עבור כרטיס SD.
- **הצפן אחסון כרטיס SD**: הצפן את כרטיס הזיכרון כדי למנוע שימוש במכשיר אחר. ראה **הצפנת כרטיס זיכרון** לקבלת פרטים.
- **אתחול מאובטח**: הגן על המכשיר שלך בעזרת מנעול בעת שהוא מופעל. ראה **הגדרות אתחול מאובטח** לקבלת פרטים.
- **הגנה על אישורים**: הצג את סוג האחסון שבו אישור האבטחה יישמר.
- **אישורים מהימנים**: הצג את אישורי רשות אישורים (CA) עליונה ואישורי CA בהתקנת משתמש.
- **תעודות המשתמש**: הצג ושנה את מידע אישורי האבטחה המאוחסנים במכשיר שלך.
- **התקן מהאחסון**: התקן אישור אבטחה מהתקן אחסון.
- **נקה אישורים**: מחק אישורי אבטחה בהתקנת משתמש ואישורים קשורים.
- **הגדר נעילת כרטיס SIM**: נעל או בטל נעילה של כרטיס ה-USIM, או שנה את הסיסמה (PIN).
- **מנהלי התקנים**: אפשר הרשאות להגבלת השליטה או השימוש במכשיר עבור יישומים מסוימים.
- **Trust agents**: הצג והשתמש בסוכנים אמינים המותקנים במחשב.
- **קביעת מסך**: תקן את מסך היישום כדי לאפשר שימוש ביישום הפעיל כעת בלבד.

- **גישה לשימוש:** הצג פרטים על השימוש ביישומים במכשיר.

פרטיות

ניתן לחפש ולכוון את כל הגדרות הפרטיות שלך.

1 במסך ההגדרות, הקש על **פרטיות**.

2 התאם אישית את ההגדרות.

- **מנהל הרשאות:** מאפשר לבדוק ולשנות את ההרשאות המוענקות ליישומים.

- **מסך נעילה:** מאפשר לקבוע את התראות להצגה במסך הנעילה.

- **הפוך את הסיסמאות לגלויות:** אפשר אפשרות זו כדי להציג לזמן קצר את כל אחד מתווי הסיסמה בעת ההקלדה, כדי שתוכל לראות מה הזנת.

- **שירות מילוי אוטומטי Google:** אפשר אפשרות זו כדי להכניס את המידע שלך שנשמר בחשבון, כגון סיסמה, כתובת או מספר כרטיס אשראי בהקשה אחת. ניתן גם להשבית את האפשרות, להשתמש בתכונת Google Autocomplete או להוסיף חשבון שירות חדש.

- **היסטוריית מיקומים ב-Google:** מאפשר לך לאפשר או להשבית את היסטוריית המיקומים. כאשר מאפשר, Google מאחסנת ומשתמשת באופן תקופתי בנתוני המיקום האחרון ביותר של הטלפון שלך בהקשר לחשבון Google. ממסך 'היסטוריית מיקומים', הקש על : כדי להציג ו/או לנהל את נתוני המיקום שלך.

- **בקורות פעילות:** בחר פעילויות ומידע שתמצא ש-Google תשמור.

- **מודעות:** מאפשר לך לבדוק את מזהה הפרסום ולקבוע את הפרסומות המותאמות אישית.

- **שימוש ואבחון:** אפשר את האפשרות הזו כדי לסייע בשיפור חוויית Android על-ידי שליחה אוטומטית של נתוני אבחון, מכשיר ויישום אל Google.

מיקום

ניתן לבדוק איך מידע המיקום שלך ישותף ולקבוע את תצורת ההרשאה כדי לגשת למידע המיקום. במסך ההגדרות, הקש על **מיקום** וקבע את התפקוד הרצוי.

הרחבות

Smart Doctor

תוכל להשתמש ב-Smart Doctor כדי לאבחן את מצב המכשיר ולמטב אותו.

במסך ההגדרות, הקש על **הרחבות < Smart Doctor**.

Context Awareness

תוכל לשנות באופן אוטומטי את הגדרות המכשיר בהתאם לדפוסי השימוש ולמיקום.

1 במסך ההגדרות, הקש על **הרחבות < Context Awareness**.

2 הפעל פריטים שברצונך לשנות בהם את ההגדרות באופן אוטומטי

- **Parking Assistant**: אפשרות זו תאחסן את מיקומי החניה שלך. אם אינך מעוניין לקבל הודעות על חניה סביב הבית או מקום העבודה שלך, כבה את התראות המקומות שלי . רשומות החניה מאוחסנות ב-QuickMemo+.

- **אוטומטי**: באפשרותך להגדיר את המכשיר לשינוי פרופיל הצליל, אפשרויות Bluetooth ו-Wi-Fi באופן אוטומטי בסביבות שונות, כגון בבית, רחוק מהבית, בעבודה, או מחוץ לעבודה. תוכל גם להגדיר אפליקציה שתיפתח כאשר האוזניות מחוברות או כאשר מחובר מכשיר Bluetooth.

- כדי להשתמש בתכונה זו, מיקום הבית או העבודה חייב להיות מוגדר מראש ב'מקומות שלי'. במסך ההגדרות, הקש על **מיקום < המקומות שלי** כדי להגדיר את המיקומים.



משחקים

באפשרותך להגדיר את התצורה של כלי משחק, של גרפיקה ושל תכונת חיסכון הסוללה.

- 1 במסך ההגדרות, הקש על **הרחבות > משחקים**.
- 2 התאם אישית את ההגדרות הבאות:
- 3 **מפעיל המשחק:** הקש  כדי להשתמש במשגר המשחק.
 - **כלי משחק:** באפשרותך להפעיל את הפונקציה תוך כדי משחק על ידי נגיעה בסמל כלי המשחק בין כפתורי המגע הביתיים.
 - **גרפיקת המשחקים:** כוונן את גרפיקת המשחק.

- כשאתה משנה את הרזולוציות במשחקים מסוימים, תכונת התצוגה של המכשיר עשויה שלא לפעול כראוי.
- ייתכן שתכונה זו לא תהיה זמינה בהתאם לאפליקציות משחקים מסוימות.

- **הפסקה:** הפחת את בהירות המסך ואת הביצועים בכל פעם שאתה משאיר את המשחק פועל למשך יותר מ-5 דקות.

יישום מקליט מסך

ניתן לקבוע את ההגדרות לצילום מסך.

- 1 במסך ההגדרות, הקש על **הרחבות > יישום מקליט מסך**.
- 2 התאם אישית את ההגדרות הבאות:
 - **הוסף את עצמך בווידאו על-ידי:** בחר אחת מהאפשרויות ובאות ולחץ על **שמור**.
 - **תמונה:** כלול את תמונת הפרופיל שלך בסרטון בעת הקלטה. לאחר בחירת פריט זה, הקש על  ובחר תמונת פרופיל. כעת, כוונן את גודל התמונה באמצעות המחוון.
 - **מצלמה קדמית:** כלול את עצמך בהקלטה באמצעות המצלמה הקדמית בעת צילום המסך.
 - **לעולם לא:** לא ייכלל דבר.

- **מקור שמע:** בחר את מקור השמע בין **מיקרופון** לבין **תוכן**.
- **רזולוציית הווידאו:** בחר את הרזולוציה לצילום המסך.

לצילום המסך

- 1 גרור את שורת המצב כלפי מטה כדי לפתוח רשימת סמלי גישה מהירה.
- 2 (במידת הצורך, החלק לשמאל מעל לאזור סמלי הגישה המהירה). הקש על .
- 3 קרא את הצהרת הסרת החבות והקש על **התחל**. ההקלטה תחל בתוך 3 שניות.
- 4 כדי לעצור את הצילום, הקש על  הנמצא בפינה הימנית התחתונה של המסך הסרטון המוקלט יישמר בגלריה.

• אם אתה מפר את זכויותיו של אדם אחר כגון זכות דיוקן או זכות קניין רוחני או משמץ את המוניטין של אדם אחר על ידי שימוש בפונקציות המסופקות לשירות הקלטת המסך, אתה עלול להיות אחראי לחובות אזרחיים, פליליים או מנהליים בהתאם לחוקים הרלוונטיים. LG Electronics אינה אחראית חוקית בשום דרך למעשים על ידי משתמשים.

יישום כפול

באפשרותך להתקין אפליקציות מסרים כפולות על המוצר ולהשתמש בשני חשבונות בו זמנית.

- 1 במסך ההגדרות, הקש על **הרחבות > יישום כפול**.
 - 2 לאחר קריאת כתב הוויתור, הקש על **אשר**.
 - 3 ברשימת האפליקציות הזמינות, הקש על **התקן** כדי להתקין עותק של אפליקציה רצויה ופעל לפי ההנחיות המופיעות על המסך.
- על המסך מוצגת רשימת היישומים הכפולים הזמינים. במהלך ההתקנה נוצרים סמלי אפליקציות במסך הבית.

הצעת יישום

ניתן לגשת ליישומים להם תזדקק בזמן מסוים במסך 'סקירה'.

Floating Bar

באפשרותך להפעיל תכונות שנמצאות בשימוש תכופ כולל קיצורי דרך, צילומי מסך, מוסיקה, אנשי קשר ועוד על-ידי נגיעה ב-Floating Bar ולאחר מכן החלקתו על המסך. ראה **סקירה כללית של ה-Floating Bar** לקבלת פרטים.

קיצורי דרך

באפשרותך להשתמש בלחצנים כגון נעילה / כוח, עוצמת קול ו-Google Assistant כדי להפעיל יישומים או פונקציות מסוימים מייד.

1 במסך ההגדרות, הקש על **הרחבות > קיצורי דרך**.

2 התאם אישית את ההגדרות הבאות:

- **פתח את המצלמה:** לחץ פעמיים על לחצן ההפעלה כדי לפתוח את 'מצלמה'.

- **פתח Capture+:** הקש פעמיים על מקש הגברת העוצמה כדי לפתוח את **Capture+** כאשר המסך נעול או כבוי.

- **פתח את המצלמה:** הקש פעמיים על מקש החלשת העוצמה כדי לפתוח את **מצלמה** כאשר המסך נעול או כבוי.

- **פתח Google עוזר:** לחץ על מקש Google Assistant בצד הטלפון.

- **דבר עם Google Assistant:** לחץ והחזק את המקש Google Assistant כדי לדבר במהירות עם Assistant שלך.

• Google Assistant אינו תומך בשפות מסוימות.



מחוות אוויר

הפעל אפשרות זו כדי לזהות את המיקום ואת הצורה של ידך כדי להפעיל תכונות או אפליקציות מסוימות מבלי לגעת במסך. הצג את ידך למצלמה הקדמית ולאחר מכן בצע תנועות יד כדי להפעיל התכונות או האפליקציות הרצויות. ראה **מחוות אוויר** לקבלת פרטים.

הפעל מסך

הקש פעמיים על המסך כדי להפעיל או להפסיק את המסך. ראה **הפעל מסך** לקבלת פרטים.

הגבר את הרגישות למגע

באפשרותך להגדיר את מסך המגע כך שיהיה רגיש יותר למגע שלך. מומלץ להפעיל תכונה זו בעת שימוש במגן מסך. במסך ההגדרות, הקש על **הרחבות > הגבר את הרגישות למגע**.

שימוש חכם בדיגיטל ובקרת חירום

באפשרותך להציג את זמן השימוש במוצר ולהגדיר את הטיימר עבור כל אפליקציה. כמו כן, ניתן לנהל את זמן השימוש בטלפון הנייד באמצעות מצב 'הכנה לשינה' ו'מצב מיקוד'. בחר ב **שימוש חכם בדיגיטל ובקרת חירום** במסך ההגדרות והגדר את הפונקציה הרצויה.

יישומים והודעות

ניתן לבדוק את רשימת היישומים המותקנים, ולקבוע הגדרות להתראות, להרשאות היישום ועוד.

1 במסך ההגדרות, הקש על **יישומים והודעות**.

2 התאם אישית את ההגדרות.

סוללה

תוכל להציג את פרטי הסוללה הנוכחית או להפעיל מצב חיסכון בחשמל.

- 1 במסך ההגדרות, הקש על **סוללה**.
 - 2 התאם אישית את ההגדרות הבאות:
 - 3 **ניצול סוללה**: הצג את פרטי השימוש בסוללה.
- **אחוז הסוללה בשורת המצב**: הצג את רמת טעינת הסוללה שנותרה כאחוז בשורת המצב.
 - **טעינה אופטימלית**: כוונן את מהירות הטעינה באופן אוטומטי בהתאם לאופן טעינת הסוללה כדי להקטין את החום ולהאריך את חיי הסוללה.
 - **סוללה הניתנת להתאמה**: מאפשר לשמור על הסוללה על ידי עצירת יישומים הפועלים ברקע.
 - **מגבלות רקע**: סמן אפשרות זו להגבלת אפליקציות ברקע לשמירת הסוללה בעת השימוש במכשיר. יישומים מוגבלים עקב חיסכון בחשמל עשויים שלא לפעול כהלכה או שלא לשלוח לך התראות.
 - **חיסכון בחשמל**: הקטן את צריכת הסוללה על-ידי ביטול הגדרות מכשיר מסוימות, כמו בהירות התצוגה, המהירות ועוצמת הרטט.
 - **אי הכללות בחיסכון בחשמל**: בחר יישומים שבהם תשתמש ללא כל הגבלה פונקציונלית, גם במצב חיסכון בחשמל או מיטוב הסוללה.

אחסון

תוכל להציג ולנהל את האחסון הפנימי במכשיר או בשטח האחסון של כרטיס הזיכרון.

1 במסך ההגדרות, הקש על **אחסון**.

2 התאם אישית את ההגדרות הבאות:

- **אחסון פנימי:** הצג את שטח האחסון הכולל ופנה שטח באחסון הפנימי של המכשיר. הצג רשימה של יישומים שנמצאים בשימוש ואת קיבולת האחסון עבור כל יישום.
- **כרטיס SD:** הצג את שטח האחסון הכולל ואת השטח הפנוי בכרטיס הזיכרון. אפשרות זו מופיעה רק כאשר הוכנס כרטיס זיכרון. כדי לבטל טעינה של כרטיס זיכרון, הקש על △.

חשבונות

תוכל להוסיף משתמשים שאתם תשתף את המכשיר שלך ולרשום חשבון ענן.

1 במסך ההגדרות, הקש על **חשבונות**.

2 התאם אישית את ההגדרות.

חיפוש

תוכל להשתמש בהגדרות Google לניהול יישומי Google שברשותך והגדרות החשבון שלך.

במסך ההגדרות, הקש על **חיפוש**.

המערכת

מרכז עדכונים

ניתן לבדוק קיום עדכונים חדשים של יישומים ותוכנות שמסופקים על-ידי LG ולהתקין אותם.

1 במסך ההגדרות, הקש על **המערכת > מרכז עדכונים**.

2 התאם אישית את ההגדרות הבאות:

- **עדכוני אפליקציות:** בדוק האם קיים עדכון יישום. אם זמין, תוכל להתקין את העדכון.

- **עדכון תוכנה:** בדוק האם קיים עדכון תוכנה. אם זמין, תוכל להתקין את העדכון.

שפה ומקלדת

תוכל להתאים אישית את הגדרות השפה והמקלדת עבור המכשיר שלך.

1 במסך ההגדרות, הקש על **המערכת > שפה ומקלדת**.

2 התאם אישית את ההגדרות הבאות:

- **שפה:** בחר שפה והחל אותה על המכשיר.

- **נהל מקלדות:** באפשרותך לשנות את הגדרת המקלדת הבסיסית של המוצר, להגדיר את סביבות השימוש במקלדת-LG או במקלדות מותקנות אחרות ולהגדיר את פונקציית זיהוי הדיבור עבור קלט Google Voice. כמו כן, ניתן לקבוע אם להציג את לחצן המקלדת בסרגל הניווט במסך הבית כך שתוכל לעבור במהירות למקלדת אחרת.

- **מקלדת פיזית:** בחר להשתמש במקלדת פיזית, או בדוק את מקשי קיצור הדרך.

- **בודק איות:** מאפשר לך לקבוע אפשרויות שונות של מאפיין בודק האיות של Google.

- **שירות מילוי אוטומטי:** אפשר אפשרות זו כדי להכניס את המידע שלך שנשמר בחשבון, כגון סיסמה, כתובת או מספר כרטיס אשראי בהקשה אחת. ניתן גם להשבית את האפשרות, להשתמש ב-Google Autocomplete או להוסיף חשבון שירות חדש.
- **פלט המרת טקסט לדיבור:** בחר את ההגדרות לפלט טקסט-לדיבור.
- **מהירות מצביע:** כוונן את מהירות המצביע של העכבר או של לוח המעקב.
- **הפוך את לחצני העכבר:** הגדר ביצוע פעולות ראשיות בתפעול ישיר דרך הלחצן הימני של העכבר.

תאריך ושעה

תוכל להתאים אישית את הגדרות התאריך והשעה עבור המכשיר שלך.

- 1 במסך ההגדרות, הקש על **המערכת > תאריך ושעה**.
- 2 התאם אישית את ההגדרות.

זיכרון

תוכל להציג את הסכום הממוצע של השימוש בזיכרון לאורך פרק זמן מסוים ואת הזיכרון שהיה בשימוש על-ידי היישום.

- 1 במסך ההגדרות, הקש על **המערכת > זיכרון**.
- 2 הקש על ▼ כדי להגדיר משבצת זמן לאחזור נתונים.

גיבוי

תוכל לגבות נתונים השמורים במכשיר שלך במכשיר או בטאבלט אחר של LG.

- 1 במסך ההגדרות, הקש על **המערכת > גיבוי**.
 - 2 התאם אישית את ההגדרות הבאות:
- **LG Mobile Switch:** כך תוכל להעביר נתונים ממכשיר LG ישן למכשיר LG חדש. ראה **LG Mobile Switch** לקבלת פרטים.

- **גיבוי ושחזור:** גבה את נתוני המכשיר שלך או שחזר נתונים למכשיר מגיבוי.

• איפוס המכשיר עלול להביא למחיקת קבצי גיבוי שנשמרו באחסון. הקפד להעתיק ולאחסן את קבצי הגיבוי החשובים במחשב שלך.



- **גיבוי Google:** שנה את הגדרות גיבוי הכונן של Google. תוכל גם לבדוק את חשבון הגיבוי הנמצא כעת בשימוש, או להוסיף חשבון גיבוי חדש.

הפעל מחדש ואיפוס

תוכל לאפס את המכשיר, כולל הגדרות הרשת והיישומים.

- 1 במסך ההגדרות, הקש על **המערכת > הפעל מחדש ואיפוס**.

- 2 התאם אישית את ההגדרות הבאות:

- **הפעלה מחדש אוטומטית:** הפעלה מחדש אוטומטית ומיטוב פעולת הטלפון בזמן קבוע. הקש על  כדי להפעיל תכונה זו. המכשיר יפעיל את עצמו מחדש אוטומטי וימטב את פעולתו. בחר יום ושעה להפעלה מחדש.

- ניתן להגדיר את המכשיר להפעלה מחדש עצמית פעם בשבוע. המכשיר יפעיל את עצמו מחדש בשעה מהזמן שנקבע מראש.
- לאחר שהמכשיר יופעל מחדש, ההודעות והתגים יימחקו. שמור נתונים חשובים לפני הזמן המוגדר מראש.
- מאפיין ההפעלה מחדש האוטומטית לא יופעל במצבים הבאים: כאשר המסך מופעל, כאשר המכשיר בשימוש, כאשר מפלס הסוללה הוא 30% ומטה, כאשר כרטיס USIM חסום, או כאשר נעילת המכשיר הופעלה בעת הפעלת המכשיר.
- בהתאם לספק התקשורת, פונקציית ההפעלה מחדש אוטומטית עשויה להיות זמינה או לא.



- **איפוס הגדרות רשת:** אפס את Wi-Fi, Bluetooth והגדרות רשת אחרות.

- **איפוס העדפות יישום:** אפס את ההגדרות של יישום. הנתונים השמורים ביישום לא יימחקו.
- **שחזור נתוני היצרן:** אפס את כל ההגדרות עבור המכשיר ומחק נתונים.

- ההפעלה מחדש והאיפוס מוחקת את כל הנתונים השמורים בו. הזן את שם המכשיר, את חשבון Google ופרטים התחלתיים אחרים פעם נוספת.
- לאחר אתחול נתונים, לא ניתן לשחזר את הנתונים.



אודות הטלפון

תוכל להציג מידע אודות המכשיר, כמו שם, הסטטוס, פרטי התוכנה ומידע משפטי.
במסך ההגדרות, הקש על **המערכת** < **אודות הטלפון** והצג מידע.

רגולציה ובטיחות

ניתן להציג סימוני תקינה ומידע הקשור אליהם במכשיר.
במסך ההגדרות, הקש על **המערכת** < **רגולציה ובטיחות**.

נגישות

תוכל לנהל יישומי Plug-in של נגישות המותקנים במכשיר שלך.

1 במסך ההגדרות, הקש על **נגישות**.

2 התאם אישית את ההגדרות הבאות:

- **ראייה** < **TalkBack**: הגדר את המכשיר כך שיודיע על סטטוס המסך או על פעולות באמצעות קול.

- **ראייה** < **התראה קולית**: הגדר את המכשיר כך שיקריא בקול את המידע.

- **ראייה** < **גופן**: שנה את גודל הגופן, ההדגשה או הסוג.

- **ראייה** < **גודל תצוגה**: הגדר את הפריטים במסך לגדול שתוכל לראות בקלות. ייתכן שחלק מהפריטים ישנו מיקום.

- **ראייה < שינוי גודל תצוגה במגע:** הגדל או הקטן את התצוגה על-ידי הקשה על המסך שלוש פעמים.
- **ראייה < חלון זום:** הגדל או הקטן תצוגה בתוך חלון והפוך את הצבעים.
- **ראייה < סמן עכבר גדול:** הגדל את סמן העכבר.
- **ראייה < מסך בעל ניגודיות גבוהה:** הפוך את צבע הרקע לשחור כדי להשיג מסד בניגודיות גבוהה.
- **ראייה < היפוך צבעי המסך:** הגבר את ניגודיות הצבע בתצוגה לטובת אנשים עם לקות ראייה.
- **ראייה < התאמה אישית של צבעי המסך:** כוונן את צבע התצוגה.
- **ראייה < שחור-לבן:** העבר את המסך למצב גווני אפור.
- **ראייה < סיים שיחות באמצעות מקש ההפעלה:** סיים שיחה על-ידי לחיצה על מקש הפעלה/נעילה.
- **שמיעה < כתובית:** הפעל את שירות הכתוביות בעת הקרנת סרטוני וידאו לאנשים כבדי שמיעה.
- **שמיעה < התראות פלש:** הגדר את המכשיר כך שייתן לך התראה בעזרת אור מהבהב עבור שיחות נכנסות, הודעות והתראות.
- **שמיעה < השתק את כל הצלילים:** השתק את כל הצלילים והנמך את עוצמת הקול במקלט.
- **שמיעה < ערוץ שמע:** בחר את סוג השמע.
- **שמיעה < איזון קול:** כוונן את איזון פלט השמע. השתמש במחוון כדי לשנות את האיזון.
- **תנועה ותודעה < Touch assistant:** הפעל את לוח המגע כדי להקל את השימוש בלחצנים ובמחוות.
- **תנועה ותודעה < קלט בנגיעה:** כדי להזין טקסט, הקש הקשה ממושכת על המסך או שנה אותו על-ידי נגיעה במסך.
- **תנועה ותודעה < מקלדת פיזית:** התאם אישית את הגדרות המקלדת.
- **תנועה ותודעה < לחיצת עכבר אוטומטי:** לחץ באופן אוטומטי על סמן העכבר במקרה שאין תנועה.

- **תנועה ותודעה < לחץ לחיצה ממושכת לשיחות:** השב לשיחות או דחה שיחות על-ידי הקשת הקשה ממושכת על לחצן השיחה במקום לגרור אותו.
- **תנועה ותודעה < כיבוי מסך אוטומטי:** כבה באופן אוטומטי את המסך כאשר המכשיר לא היה פעיל במשך פרק זמן שצוין.
- **תנועה ותודעה < אזורי בקרת מגע:** הגבל את אזור המגע כך שניתן יהיה לשלוט חלק מסוים של המסך בלבד באמצעות קלט המגע.
- **קיצור דרך לתכונות הנגישות:** גש במהירות לתפקוד הנמצא בשימוש תדיר בלחיצה בוזמנית על מקש ההפעלה ומקש הגברת עצמת הקול.
- **סיבוב מסך אוטומטי:** שנה באופן אוטומטי את כיוון המסך בהתאם למצב הפיזי של המכשיר.
- **הקראה:** תכונה זו מאפשרת לך לבחור פריטים כדי לשמוע משוב קולי.
- **גישה באמצעות מתג:** צור צירופי מקשים שיסייעו לך לשלוט במכשיר שלך.



05

נספח

הגדרות השפה של LG

בחר את השפה שתשמש במכשיר שלך.

- הקש על  < הגדרות < מערכת < שפה ומקלדת < שפה < הוספת שפה ובחר שפה.

- הקש הקשה ממושכת על  וגרור אותה לחלק העליון של רשימת השפות כדי להגדיר אותה כשפת ברירת מחדל.

LG Bridge

LG Bridge - סקירה כללית

LG Bridge הוא יישום המסייע לך בניהול נוח של תמונות, מוסיקה, סרטוני וידאו ומסמכים השמורים בטלפון החכם של LG דרך המחשב שלך. באמצעות היישום תוכל לגבות אנשי קשר, תמונות ופריטים נוספים במחשב ואף לעדכן את תוכנת המכשיר.

- לפרטים, עיין בעזרה של LG Bridge.
- זמינות של תכונות נתמכות אינה אחידה ותלויה במכשיר.
- מנהל התקן USB של LG נחוץ לך כדי לחבר טלפון חכם של LG אל המחשב והוא יותקן יחד עם LG Bridge.

הפונקציות הכלולות ביישום LG Bridge

- נהל דרך המחשב שלך את הקבצים השמורים במכשיר באמצעות חיבור Wi-Fi או חיבור נתונים ניידים.
- גבה נתונים מהמכשיר במחשב שלך או שחזר אותם מהמחשב באמצעות כבל USB.
- עדכן את תוכנת המכשיר דרך המחשב שלך באמצעות כבל USB.

התקנת LG Bridge במחשב

- 1 במחשב שלך, עבור אל www.lg-mobile.co.il.
 - 2 בחר את האזור שלך
 - 3 לחץ על **תמיכה > חומרה וקושחה**.
 - 4 הזן את שם המכשיר.
לחלופין
בחר לפי קטגוריית מוצר.
 - 5 עבור אל **סינכרון מחשב < LG Bridge** כדי להוריד את קובץ ההתקנה.
- עבור אל **פרטים** כדי להציג את דרישות המינימום להתקנת LG Bridge.

עדכון תוכנת הטלפון

עדכון תוכנת הטלפון הנייד של LG מהאינטרנט

למידע נוסף אודות השימוש בפונקציה זו, בקר בכתובת <http://www.lg.com/common/index.jsp> בחר את המדינה והשפה שלך.

תכונה זו מאפשרת לך לעדכן בנוחות את הקושחה של הטלפון לגרסה חדשה יותר מהאינטרנט, ללא צורך לבקר במרכז שירות. תכונה זו תהיה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהיה זמינה למכשיר שלך.

מאחר שעדכון הקושחה של הטלפון הנייד דורש את תשומת לבו המלאה של המשתמש במשך כל תהליך העדכון, הקפד לקרוא את כל ההוראות וההערות שיופיעו בכל שלב לפני שתתקדם הלאה. חשוב לזכור שניתוק כבל ה-USB במהלך השדרוג עלול לגרום נזק חמור לטלפון הנייד.

•  LG שומרת על זכותה, על פי שיקול דעתה הבלעדי, להפוך עדכוני קושחה לזמינים עבור דגמים נבחרים בלבד ואינה ערבה לזמינות הגרסה החדשה של הקושחה לכל דגמי הטלפון.

עדכון תוכנת הטלפון הנייד של LG באופן אלחוטי (OTA)

תכונה זו מאפשרת לך לעדכן בנוחות את תוכנת הטלפון לגרסה חדשה יותר בשיטת OTA, מבלי לחבר כבל USB. תכונה זו תהיה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהיה זמינה למכשיר שלך.

כדי לבצע את עדכון תוכנת הטלפון,

הגדרות > מערכת > מרכז עדכונים > עדכון תוכנה > חפש עדכונים כעת.

-  הנתונים האישיים שלך משטח האחסון הפנימי בטלפון—לרבות פרטי חשבון Google וכל חשבון אחר, נתונים והגדרות של המערכת/היישומים שלך, יישומים שהורדו ורישיון ה-DRM שלך—עשויים ללכת לאיבוד בתהליך עדכון התוכנה של הטלפון. לפיכך, LG ממליצה לך לגבות את הנתונים האישיים שלך לפני שתעדכן את תוכנת הטלפון. LG לא תישא באחריות לאובדן נתונים אישיים כלשהם.
- הזמינות של תכונה זו תלויה באזור ובספק השירות.

מדריך למניעת גניבה

הגדר את המכשיר שלך כך שאנשים אחרים לא יוכלו להשתמש בו אם הוא יאופס להגדרות היצרן ללא רשותך. לדוגמה, אם המכשיר אבד, נגנב או נמחק, רק אדם בעל חשבון Google או בעל פרטי נעילת מסך יוכל להשתמש במכשיר.

כל שעליך לעשות כדי לוודא שהמכשיר שלך מוגן הוא:

- להגדיר נעילת מסך: אם המכשיר אבד או נגנב, אך הגדרת נעילת מסך, לא תהיה אפשרות למחוק את המכשיר באמצעות תפריט 'הגדרות', כל עוד נעילת המסך לא תבוטל.
- הוסף את חשבון Google שלך למכשיר: אם המכשיר שלך נמחק אך הגדרת בו את חשבון Google שלך, לא תהיה אפשרות לסיים את תהליך ההגדרה של המכשיר עד שהפרטים של חשבון Google יוזנו שוב.

לאחר שהמכשיר יהיה מוגן, תצטרך לבטל את נעילת המסך או להזין את הסיסמה של חשבון Google אם עליך לבצע איפוס להגדרות היצרן. הדבר יבטיח שאתה או מישהו שאתה סומך עליו תבצעו את האיפוס.

- אל תשכח את חשבון Google והסיסמה שהוספת למכשיר לפני ביצוע האיפוס להגדרות היצרן. אם אינך יכול לספק את פרטי החשבון במשך תהליך ההגדרה, לא תוכל להשתמש כלל במכשיר לאחר ביצוע האיפוס להגדרות היצרן.



פרטי הודעה על תוכנת קוד פתוח

אנא בקרו באתר <http://opensource.lge.com> על מנת להשיג את קוד המקור תחת GPL, LGPL, MPL, קוד פתוח ורשיונות אחרים.

בנוסף לקוד המקור, זמינים להורדה תנאי הרשיון, אחריות, כתבי ויתור וזכויות יוצרים.

LG Electronics גם תספק לכם קוד מקור פתוח על גבי תקליטור בתמורה לתשלום המכסה את עלות ההפצה (כגון עלות המדיה, המשלוח והטיפול), בתגובה לבקשה בדואר האלקטרוני אל הכתובת opensource@lge.com.

הצעה זו תהיה תקפה למשך שלוש (3) שנים מתאריך המשלוח האחרון של מוצר זה על-ידנו. הצעה זו תקפה לכל מי שיקבל מידע זה.

מידע בנושאי תקינה (מספר הזיהוי של התקן, תיוג אלקטרוני וכולי)

לקבלת פרטים בנושאי תקינה, עבור להגדרות < מערכת > רגולציה ובטיחות.

סימנים מסחריים

- לפרטים על פטנטים של DTS, עבור אל <http://patents.dts.com>.
מיוצר ברישיון מטעם DTS Licensing Limited. הסמל, ו-DTS והסמל ביחד, DTS:X והלוגו DTS:X הם סימני מסחר רשומים או סימני מסחר של DTS, Inc. בארצות הברית ו/או במדינות אחרות. © DTS, Inc. כל הזכויות שמורות.



- Copyright© 2020 LG Electronics Inc. כל הזכויות שמורות.
LG והסמל של LG הם סימנים מסחריים רשומים של LG Group ושל החברות הקשורות אליה.
- G8S ThinQ הוא סימן מסחרי של LG Electronics Inc.
- Google, Google Duo, YouTube, Gmail, Google Maps, Google Play Protect, Google Photos, Chrome, Android, Play Google Sheets, Google Drive, Google Docs, Google Calendar וסימנים וסמלי לוגו קשורים אחרים הם סימני מסחר של Google LLC.
- Bluetooth® הוא סימן מסחרי רשום של Bluetooth SIG, Inc. ברחבי העולם.
- Wi-Fi® והלוגו של Wi-Fi הם סימנים מסחריים רשומים של Wi-Fi Alliance.
- כל יתר הסימנים המסחריים וזכויות היוצרים הם רכושם של בעליהם בהתאמה.



הצהרת בטיחות לייזר

זהירות!

מוצר זה עושה שימוש במערכת לייזר. כדי להבטיח שימוש נכון במוצר זה, קרא היטב את מדריך ההפעלה הזה ושמור אותו לעיון עתידי. אם תידרש תחזוקה ליחידה, פנה למרכז שירות מורשה.

שימוש בפקדים, פעולות כוונון או ביצוע הליכים אחרים מאלה שיצוינו להלן עלולים להביא לחשיפה מסוכנת לקרינה.

כדי למנוע חשיפה ישירה לקרן הלייזר, אל תנסה לפתוח את המארז או ליצור מגע ישיר עם הלייזר.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT
CLASSE 1	PRODUIT LASER

הצהרת תאימות

בזאת, **LG Electronics** מצהירה שהמוצר **LM-G810EA** תואם לדרישות היסודיות ולתנאים הרלוונטיים האחרים של הנחיה **2014/53/EU**.

ניתן למצוא עותק שלהצהרת התאימות בכתובת
<http://www.lg.com/global/declaration>

מידע נוסף

חלקי זכוכית מחוסמת

- חלקי הזכוכית המחוסמת במכשיר זה אינם קבועים ועשויים להתבלות עם הזמן.
- אם הפלת את המכשיר על משטח קשה או אם הוא נתון למכות חזקות, עלול להיגרם נזק לזכוכית המחוסמת. אם זה קורה, הפסק מיד להשתמש במכשיר ופנה למרכז שירות לקוחות של LG.
 - ניתן לרכוש בשוק כיסוי מגן כדי להגן על המכשיר מפני נזק. שים לב כי כיסויים אלה אינם כלולים במסגרת שירות האחריות שניתן על-ידי LG Electronics והבטיחות אינה מובטחת.

יחס גובה-רוחב

- מכשיר זה עושה שימוש ביחס גובה-רוחב של 18.7:9.
- ייתכן שחלק מהיישומים שהורדו אינם תומכים ביחס גובה-רוחב של 18.7:9.
- במקרה כזה, בחר ביחס המסך האופטימלי עבור היישום, או התייעץ עם ספק היישום לקבלת מידע נוסף.

מדריך להעברות נתונים

- למידע על הנתונים שאפשר להחליף בין מכשירי LG או בין מכשיר LG לבין מכשיר של צד שלישי, עיין בטבלה הבאה.

סוג	פרטים על הפריט	מכשיר LG ← מכשיר LG	מכשיר Android של צד שלישי ← מכשיר LG	מכשיר iOS ← מכשיר LG
נתונים אישיים	אנשי קשר, הודעות, יומני שיחות, לוח שנה, הקלטות קול	○	○	○
	תזכירים	○	X	○
	התראות	○	X	X
נתוני מדיה	תצלומים, סרטוני וידאו, שירים, מסמכים	○	○	○
הגדרות מסך	הגדרות מסך בית (תיקיות ווידג'טים)	○	X	X
	הגדרות מסך נעילה (לא כולל הגדרות נעילת מסך)	○	X	X
יישומים	יישומים שהורדו	○	○	-
	נתונים אישיים של היישום שהורד	○	X	-
אחרים	אישור ציבורי	○	○	X
	הגדרות Wi-Fi, Bluetooth, שיחות, צליל והתראה, נגישות, סוללה	○	X	X

- ייתכן שנתונים מסוימים לא ישודרו - הדבר תלוי בגרסת התוכנה, בגרסת היישום, במערכת ההפעלה ובמדיניות היצרן או ספק השירות.

שאלות נפוצות

בפרק זה מוצגות מספר בעיות שאתה עלול להיתקל בהן במהלך השימוש במכשיר. בעיות מסוימות יצריכו פנייה לספק השירות, אך את רובן תוכל לפתור בקלות בעצמך.

שגיאת כרטיס SIM

ודאו שכרטיס ה-SIM הוכנס כראוי.

אין חיבור לרשת או שהחיבור חלש

הקליטה חלשה. התקרב לחלון או צא לאזור פתוח.
אתה נמצא מחוץ לאזור הרשת של המפעיל הסלולרי. עבור למקום אחר ובדוק את הרשת.

שיחות אינן זמינות

רשת חדשה לא מאושרת.
ודא שלא הגדרת חסימת שיחות מהמספר הנכנס.
ודא שלא הגדרת חסימת שיחות למספר שאליו אתה מתקשר.

לא ניתן להפעיל את המכשיר

כשהסוללה ריקה לגמרי, המכשיר לא יופעל.
טען את הסוללה במלואה לפני שתפעיל את המכשיר.

שגיאת טעינה

ודא שהטלפון נטען בטמפרטורה רגילה.
בדוק את המטען ואת החיבור שלו למכשיר.
השתמש רק באביזרים הכלולים באריזה, שאושרו על ידי LG.

הסוללה מתרוקנת בקצב מהיר יותר מאשר כשקניית את המכשיר לראשונה

כשאתה חושף את המכשיר או את הסוללה לטמפרטורות קרות או חמות מאוד, חיי הסוללה עלולים להתקצר. צריכת הסוללה מתגברת בעת שימוש בתכונות או ביישומים מסוימים, כגון GPS, משחקים או אינטרנט. הסוללה מתכלה, וחיי הסוללה יתקצרו עם הזמן.

הודעות שגיאה מופיעות בעת הפעלת המצלמה

טען את הסוללה. שחרר זיכרון על ידי העברת קבצים למחשב או מחיקת קבצים מהמכשיר. הפעל מחדש את המכשיר. אם אתה עדיין נתקל בקשיים ביישום המצלמה לאחר שניסית טיפים אלה, פנה למרכז שירות של LG Electronics.

איכות התמונה גרועה

איכות התמונות עשויה להשתנות, בהתאם לתנאי הסביבה ולטכניקות הצילום שבהן אתה משתמש. אם אתה מצלם תמונות וסרטונים, האיכות של זווית רגילה טובה יותר מהאיכות של זווית רחבה. אם אתה מצלם תמונות במקומות חשוכים, בלילה או בפנים, עשוי להופיע רעש בתמונות או שהתמונות עשויות להיות לא ממוקדות. אם אתה נתקל בבעיות, אפס את האפשרויות.

מסך המגע מגיב באיטיות או באופן שגוי

אם אתה מחבר למסך המגע מגן מסך או אביזרים אופציונליים, ייתכן שמסך המגע לא יפעל באופן תקין.

אם אתה לובש כפפות, אם ידיך אינן נקיות כשאתה נוגע במסך המגע או אם אתה מקיש על המסך באמצעות אובייקטים חדים או בקצות אצבעותיך, ייתכן שמסך המגע לא יפעל באופן תקין. מסך המגע עשוי לא לפעול באופן תקין בתנאי לחות או בעת חשיפה למים.

הפעל מחדש את המכשיר כדי להעלים באגים זמניים בתוכנה. אם מסך המגע שרוט או פגום, בקר במרכז שירות של LG Electronics.

המכשיר נתקע או קופא

הפעל מחדש את המכשיר

- אם המכשיר קופא או נתקע, ייתכן שתצטרך לסגור יישומים או לכבות את המכשיר ואז להפעיל אותו מחדש.

בצע אתחול

- ניתן להשתמש באיפוס רך כדי לאפס את המכשיר אם המסך קופא, או אם הלחצנים, מסך המגע או המכשיר עצמו מפסיקים להגיב.
- כדי לבצע איפוס רך של המכשיר, פשוט לחץ לחיצה ארוכה על לחצן החלשת עוצמת הקול ועל לחצן ההפעלה עד שהמכשיר יופעל מחדש.

אפס את המכשיר

- אם השיטות שלמעלה אינן פותרות את הבעיה שלך, בצע שחזור של נתוני היצרן.
- במסך ההגדרות, הקש על **מערכת > הפעלה מחדש ואיפוס < שחזור נתוני היצרן**.
- שיטה זו מאפסת את כל ההגדרות עבור המכשיר ומוחקת את הנתונים. לפני שתבצע את איפוס נתוני היצרן, זכור ליצור עותקי גיבוי של כל הנתונים החשובים המאוחסנים במכשיר.
- אם רשמת חשבון Google במכשיר, עליך להיכנס לאותו חשבון Google לאחר איפוס המכשיר.

מכשיר Bluetooth אינו מאותר

- ודא שתכונת הקישור האלחוטי של Bluetooth מופעלת במכשיר.
- ודא שתכונת הקישור האלחוטי של Bluetooth מופעלת במכשיר שאליו אתה רוצה להתחבר.
- ודא שהמכשיר והתקן Bluetooth אחר נמצאים בטווח המרבי של Bluetooth (10 מטר).
- אם טיפים אלה אינם פותרים את הבעיה, פנה למרכז שירות של LG Electronics.

לא נוצר חיבור כשאתה מחבר את המכשיר למחשב

- ודא שכבל ה-USB שבו אתה משתמש תואם למכשיר שלך.
- ודא שמנהל ההתקן המתאים מותקן ומעודכן במחשב שלך.

יישום שהורדתי גורם לשגיאות רבות

- יש בעיות ביישום.
- הסר את היישום והתקן אותו מחדש.

About this user guide

Thank you for choosing this LG product. Please carefully read this user guide before using the device for the first time to ensure safe and proper use.

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- Descriptions are based on the device default settings.
- Default apps on the device are subject to updates, and support for these apps may be withdrawn without prior notice. If you have any questions about an app provided with the device, please contact an LG Service Centre. For user-installed apps, please contact the relevant service provider.
- Modifying the device's operating system or installing software from unofficial sources may damage the device and lead to data corruption or data loss. Such actions will violate your LG licence agreement and void your warranty.
- Some content and illustrations may differ from your device, depending on the area, service provider, software version, or OS version, and are subject to change without prior notice.
- Software, audio, wallpaper, images, and other media supplied with your device are licenced for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully responsible for the illegal use of media.
- Additional charges may incur for data services, such as messaging, uploading, downloading, auto-syncing and location services. To avoid additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

Instructional notices



WARNING: Situations that could cause injury to the user and third parties.



CAUTION: Situations that may cause minor injury or damage to the device.



NOTE: Notices or additional information.

Table of contents

6 Guidelines for safe and efficient use

01

Custom-designed Features

- 14 Air Motion
- 18 Camera features
- 31 Gallery features
- 37 Sound quality and effects features
- 37 Floating Bar
- 38 Google Assistant
- 40 Hand ID
- 43 Fingerprint recognition
- 46 Face Unlock
- 48 Multi-tasking feature
- 49 AOD (always-on display)
- 50 Quick Help
- 50 Notes on Water Resistant Properties

02

Basic Functions

- 54 Product components and accessories
- 55 Parts overview
- 59 Turning the power on or off
- 60 Installing the SIM card
- 63 Inserting the memory card
- 64 Removing the memory card
- 64 Battery
- 67 Touch screen
- 70 Home screen
- 79 Screen lock
- 83 Memory card encryption
- 84 Taking screenshots
- 85 Entering text
- 89 Content sharing
- 91 Do not disturb

03

Useful Apps

93	Installing and uninstalling apps
94	App trash
95	App Shortcuts
95	Phone
99	Messaging
100	Camera
118	Gallery
121	Contacts
124	QuickMemo+
126	Clock
127	Calendar
128	Tasks
128	Music
129	Calculator
129	LG ThinQ
130	Game Launcher
130	LG Health
132	E-mail
133	HD Audio Recorder
135	File Manager
135	Smart Doctor
136	LG Mobile Switch
136	App trash
136	SmartWorld
137	Cell Broadcast
138	Google apps

04

Settings

142	Settings
142	Network & internet
149	Connected devices
153	Sound
155	Display
157	Lock screen & security
158	Privacy
159	Location
160	Extensions
164	Digital Wellbeing & parental controls
164	Apps & notifications
164	Battery
165	Storage
166	Accounts
166	Google
166	System
170	Accessibility

Appendix

173	LG Language Settings
173	LG Bridge
174	Phone software update
176	Anti-Theft Guide
177	Open Source Software Notice Information
177	Regulatory information (Regulation ID number, E-labeling, etc.)
178	Trademarks
179	Laser safety statement
180	DECLARATION OF CONFORMITY
180	More information
183	FAQ

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This device has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the device transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG device models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model tested for use at the ear is 0.482 W/kg (10 g) and when worn on the body is 1.587 W/kg (10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 5 mm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 5 mm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

- Use only in-box accessories which are authorised by LG. LG does not guarantee any damage or failure which is caused by third party accessories.
- Some contents and illustrations may differ from your device without prior notice.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the device in any area where you are required to by special regulations. For example, do not use your device in hospitals as it may affect sensitive medical equipment.
- Do not handle the device with wet hands while it is being charged. It may cause an electric shock and can seriously damage your device.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the device when it is on soft furnishings.
- The device should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the device next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the device.
- Do not expose the device to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your device is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your device during or immediately after operation.
- If your device gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet device, changes the colour of the product label inside your device. Damage to your device as a result of exposure to liquid is not covered under your warranty.
- A mobile device requires proper air circulation in order to dissipate heat. Direct skin contact and inadequate circulation of air flow to the device may cause the device to overheat. The device must be at least 1.0cm from between the user's body.
- Prevent dust of any other foreign substances from getting into the Charger/USB cable port. It may cause heat or fire.
- Avoid exposing the device to low air pressure at high altitude.
- Do not expose the device to extremely low air pressure. Otherwise, it can cause explosion of the battery or leakage of flammable liquid or gas.

Efficient device operation

Electronics devices

All devices may receive interference, which could affect performance.

- Do not use your device near medical equipment without requesting permission. Please consult your doctor to determine if operation of your device may interfere with the operation of your medical device.
- Pacemaker manufacturers recommend that you leave at least 15 cm of space between other devices and a pacemaker to avoid potential interference with the pacemaker.
- This device may produce a bright or flashing light.
- Some hearing aids might be disturbed by devices.

- Minor interference may affect TVs, radios, PCs etc.
- Use your device in temperatures between 0 °C and 35 °C, if possible. Exposing your device to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of devices in the area when you drive.

- Do not use a hand-held device while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.



- Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your device are made of glass. This glass could break if your device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the device where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your device at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your device or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your device off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the device in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your device for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the device is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or claws, come into contact with the battery. This could cause a fire.

Securing personal information

- Make sure to protect your personal information to prevent data leakage or misuse of sensitive information.
- Always back up important data while using the device. LG is not responsible for any data loss.
- Make sure to back up all data and reset the device when disposing of the device to prevent any misuse of sensitive information.
- Read the permission screen carefully while downloading applications.
- Be cautious using the applications that have access to multiple functions or to your personal information.
- Check your personal accounts regularly. If you find any sign of misuse of your personal information, ask your service provider to delete or change your account information.
- If your device is lost or stolen, change the password of your account to secure your personal information.
- Do not use applications from unknown sources.



Notice for Battery replacement

- For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Li-Ion Battery is a hazardous component which can cause injury.
- Battery replacement by a non-qualified professional can cause damage to your device.



01


Custom-designed Features

Air Motion

Air Motion overview

The ToF sensor and IR illuminator located near the front camera can recognise the location and shape of your hand to launch certain apps without touching the screen.

Show your hand to the front camera and then perform hand gestures to launch desired apps.

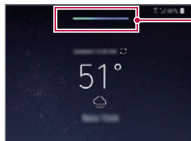

Air Motion bar

Air Motion feature activated



- This feature may not be available depending on some apps.
- Make sure that the ToF sensor and IR illuminator are not blocked by a sticker or any other foreign substances.
- Make sure not to move your hand too fast or bring it too far from or close to the device while using the Air Motion feature.
- If you are wearing gloves or the ToF sensor and IR illuminator are exposed to direct sunlight, the recognition accuracy may decrease.
- If you place an object which can reflect light well, the recognition accuracy may decrease or may not work properly.

Using Air Motion

You can launch the desired apps by using the Air Motion feature.




Shortcut and capture

While viewing the Home screen or using an app, you can swipe left or right in the air to open an app or pinch with all fingers to take a screenshot.

- 1 Tap  > **Settings** > **Extensions** > **Air Motion** > **Shortcut and capture**.
- 2 Tap  to activate this feature.
- 3 Select desired apps under **Swipe left** and **Swipe right** to use as shortcuts with Air Motion.


Hand gestures

- 1 To enable Air Motion, place your palm at a distance of 6 ~ 12 cm (2 ~ 5 inches) from the device.
- 2 When the Air Motion bar appears at the top of the screen, cup your hand in the air while lifting it to the distance of 15 ~ 20 cm (6 ~ 8 inches) from the device to launch the Swipe shortcuts controller.
- 3 Swipe your hand left or right to open the desired app.
Or, pinch with all fingers to take a screenshot.

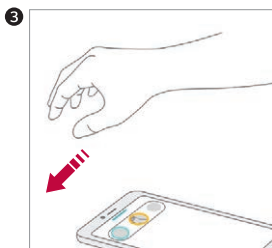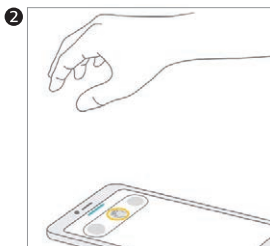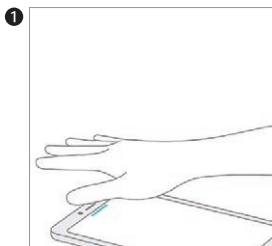

To open an app

or

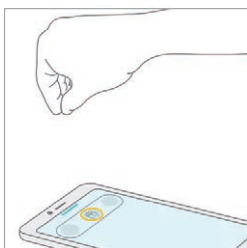


To take a screenshot


Control music and videos

While using the music app or video player, you can pause, play or adjust volumes with your hand gestures in the air.

- 1 Tap  > **Settings** > **Extensions** > **Air Motion** > **Control music and videos**.
- 2 Tap  to activate this feature.
- 3 Place your hand at a distance of 6 ~ 12 cm (2 ~ 5 inches) from the device to enable Air Motion.
 - When the Air Motion bar appears at the top of the screen, cup your hand in the air to launch the Player control controller.
- 4 Swipe your hand left or right to control the desired function.
 - To use the Shortcut and capture feature, swipe left. To pause or play, swipe right.

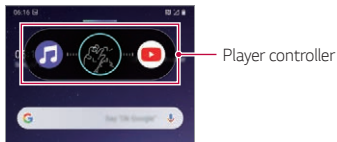

- To adjust the volume, cup your hand and wait until the volume controller appears. Then, turn left or right to decrease or increase the volume.

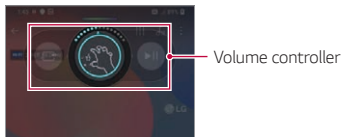


- If you move your hand too fast or perform hand gesture too big, the volume controller feature may not work properly.

Control calls and alarms

You can receive a call or turn off notifications by swiping your hand left or right in the air.

- 1 Tap  > **Settings** > **Extensions** > **Air Motion** > **Control calls and alarms**.
- 2 Tap  to activate this feature.
- 3 With Air Motion enabled, cup your hand at a distance of 15 ~ 20 cm (6 ~ 8 inches) from the device to launch the controller.
 - Air Motion is automatically enabled when a call is received or an alarm or timer rings.
- 4 Swipe your hand left or right to control as desired.

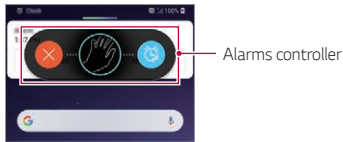

- You can end a call by using the Air Motion feature while turning on the speakerphone, or connecting earphones and headsets to the device.
- You cannot end a video call by using the Air Motion feature.

Show hand guide

Turn this on to preview your hand gesture.

Make sure your hand stays within the guide circle while you control the Air Motion controller.

- 1 Tap  > **Settings** > **Extensions** > **Air Motion** > **Show hand guide**.
- 2 Tap  to activate this feature.

Camera features

Triple cameras

The triple cameras, which are located on the back of the device, allow you to take photos or record videos with three different angles of view.

Tap , and select  /  /  while taking photos or recording videos with the rear camera.



Standard-Angle/
Telephoto/Super
Wide-Angle

Rear Camera

Triple shot

The triple cameras located on the back of the device take a series of photos with different angles of view and save as a video with slide effect.

- 1 Tap , then tap **More > Triple shot**.
- 2 Tap  to take a photo.
 - The triple cameras take photos automatically in sequence.



- A triple shot video is automatically saved in Gallery.




- While taking a photo, hold the device steady until all 3 photos have been taken.

Triple Preview

You can preview images of different angles taken by the triple cameras located on the back of the device and select a desired angle to take a photo or record a video.

Before taking a photo, touch and hold a camera view icon to display preview icons of three angles on the right.

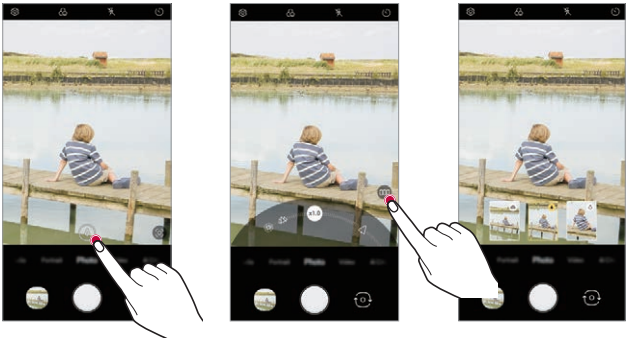

- The screen displays the preview image of the selected angle of view.
- After selecting a desired angle, tap  to take a photo.



Wide-Angle view



Standard-Angle view



Telephoto view

Select
preview
icon.



- This feature is available only in the Auto mode and AI Cam.


Studio

You can create studio level photos by using Spotlight and Backdrop features in the camera.

Spotlight

You can apply various lighting effects while taking photos.

- 1 Tap > , then tap **Studio**.
- 2 Tap to select a lighting effect.

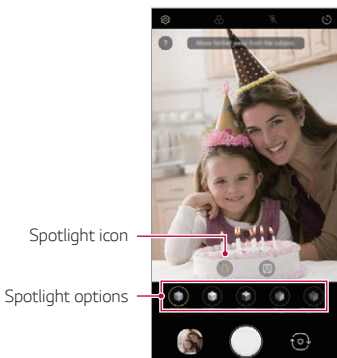


- 3 Tap the desired lighting effect icon.
- 4 When **Studio effect is available.** appears on the screen, tap to take a photo.
 - The Studio feature may not work if the camera cannot recognise the subject.

Backdrop

You can apply various effects for background while taking portrait photos.

- 1 Tap , then tap **Studio**.
- 2 Tap  to select a backdrop effect.
 - Various background colours appear at the bottom of the screen.
- 3 Select a background colour you want to apply.
 - You can apply the selected colours to the background apart from the subject.

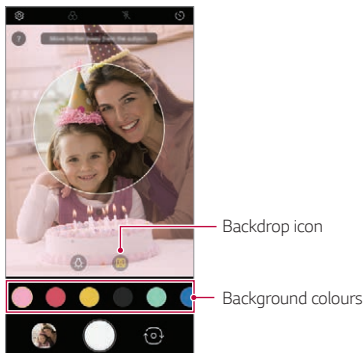

- 4 When you see the guiding message **Studio effect is available**, tap  to take a photograph.



- If the camera fails to recognise the subject, the studio function cannot be applied to the saved photograph.
- If the surrounding is dark, the camera cannot apply the studio effects.

Portrait

You can create an artistic portrait photo, whereby the subject is in focus and the background is blurred. You can also edit the image by applying lighting or colour effect to the background.



- While taking a photo, keep the distance to your subject to 1.3 ~ 5 feet.
- This feature is not available if the surroundings are too dark.

- 1 Tap , and tap **Portrait**.
- 2 Drag the slide bar to the left or right to adjust the blur strength.



Adjust blur strength.


- 3 When **Portrait is available.** appears on the screen, tap  or  to take a photo.
 - The Portrait feature may not work if the camera cannot recognise the subject.

Makeup Pro


While taking selfies, you can apply various makeup techniques.

When using the front camera, adjust the skin tone and apply eye and lip makeups.

- 1 Tap , switch to the front camera, then tap .
- 2 Select a desired makeup option, then drag the slide bar to the left or right to adjust the effect.
 - When you select **None**, the slide bar disappears.

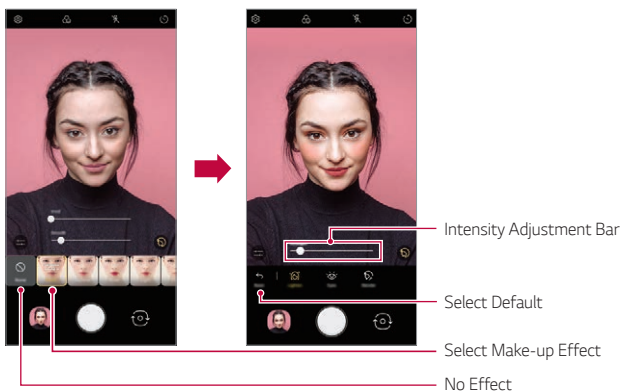

- 3 Select various makeup effects and apply them to the subject.
 - **Basic** or **Makeup Mode**, then touch the screen again to apply more detailed makeup effects.
 - Move the **Intensity Adjustment Bar** to adjust the **Strength** with which the effects are applied.

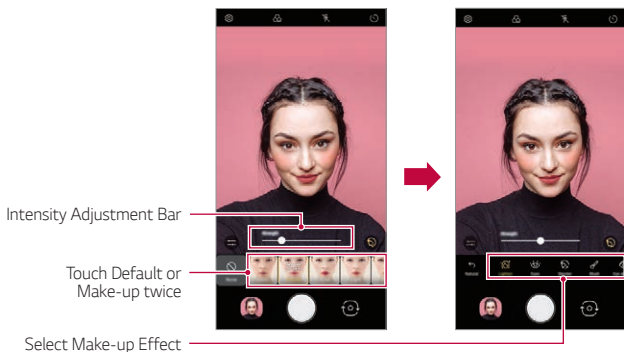

4 Tap  to take a photo.

Google Lens

You can get more information or take action on items around you using Google Lens, like landmarks, posters, restaurant menus, animals, flowers, or barcodes, directly in your device.

For example, when you use Google Lens on a:

- Business card: You can save the phone number or address to a contact.
- Book: You can get reviews and other details about it.
- Landmark or building: You can get more details about it.
- Painting in a museum: You can get details about it.
- A plant or animal: You can learn more about it.
- A flyer or event billboard: You can add that event to your calendar.



- Google Lens is available only when your device is connected to the internet. If you use mobile data, you may be charged for data usage, depending on your pricing plan.
- This function may be not supported, or the supported languages may differ depending on the service area.

Use Google Lens



- 1 Tap  > , then tap .
- 2 Point your camera at an item.
- 3 To get details or take action:
 - Tap the item on your screen.
 - To select text: Tap a word, then tap it again and drag the blue dots.

AR features


You can use various AR (Augmented Reality) features with the Camera app. You can create your own My Avatar, AR Emoji, or AR Sticker for rich content. My Avatar helps you create a cartoon version of yourself and customise it. AR Emoji help you create 3D animated animal emojis that mimic facial expression. AR Sticker allows you to choose from several different stickers to use on a photo or video while facing your camera.

Creating My Avatar

- 1 Tap  > , switch to the front camera, then tap  > .
- 2 Tap  >  to take a photo.
 - Follow the on-screen instructions to align your face on the screen.
 - To make My Avatar by using one of the saved photos from Gallery, tap .

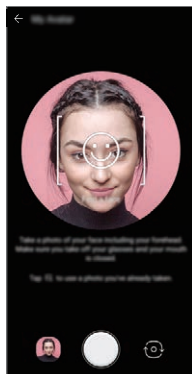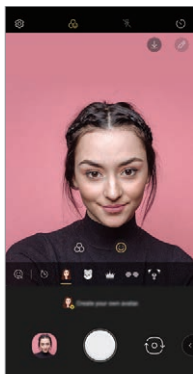


- 3 Select My Avatar's gender and select details including avatar type, skin tone, hairstyle, and clothes, then tap **OK**.
- Taken photos are saved in Gallery.

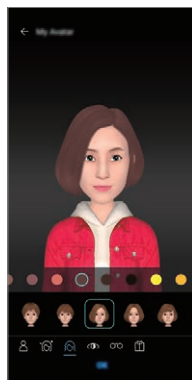


Using My Avatar, AR Emoji, AR Sticker


- 1 Tap  > , switch to the front camera, then tap  > .
- 2 Select an option you want to record.

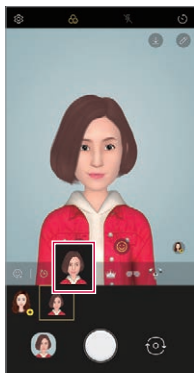

My Avatar

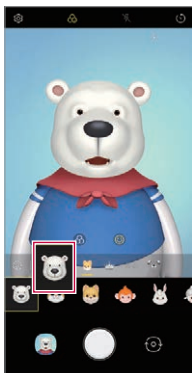

AR Emoji

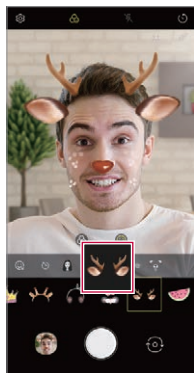


AR Sticker

- 3 To take a photo, tap .
- To record a video using My Avatar, AR Emojis or AR Stickers, select the video recording menu, and then tap  >  to select the desired item, and tap  to start shooting the video.
 - Taken photos are saved in Gallery.


Using Avatar Stickers

- 1 Tap  on the LG Keyboard.
- 2 Select the desired Avatar Sticker.

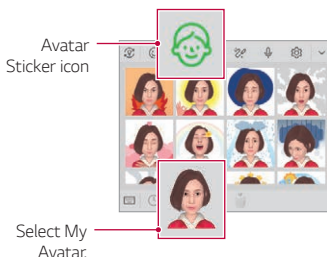

Using Ani Sticker

- 1 Tap  on the LG Keyboard.
- 2 Select the desired My Avatar.
- 3 Tap  to record voice and video, and then tap  to save.
 - Ani Stickers with various facial expressions, motions, and voices are created.
- 4 Tap  to upload Ani Sticker.
 - Tap  to preview the created Ani Sticker.

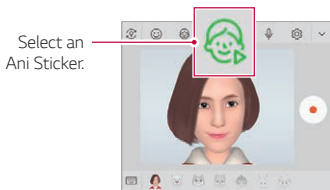

AI CAM

You can use the AI Cam feature to automatically recognise the object when taking a photo or recording a video for an optimal quality.

- 1 Tap  > , then tap **AI CAM**.
- 2 When the object is recognised, the best effect for the scene is applied.
 - To apply other effects, tap the scene icon.
 - A wide range of categories, such as portrait, animals, food, sunrise, sunset, landscape, sky, beach, babies, flowers and text, can be recognised automatically.



- The result of the scene recognition may differ depending on the illumination or the location of the subject while taking photos. Keywords do not appear on the actual photos or videos.

QLens

You can do shopping, search image, or scan QR code by taking a photo with **QLens**.

- 1 Tap  > , then tap .
- 2 Select the desired option among Visual Search or Scan QR code.
- 3 Tap the screen to take a photo of the object you want to search or focus the QR code.
 - The result will appear after a moment.



- This feature is available only when your device is connected to a network. If you use mobile data, you may be charged for data usage, depending on your pricing plan.
- For Visual Search features, you can select the desired area from the image that you have taken, and then search it again.
- This feature is available only when the rear camera is in the Auto mode.
- This function may not be supported depending on the area.

Cine shot

You can record a moment and make a video with only a part of the scene in motion.


While recording a video, hold the device steady. After recorded, rub the area in the video you want in motion. The selected area starts moving and the rest of the video remains still.

- 1 Tap  > , then tap **More** > .
- 2 Tap  to record a 3 second video.
 - Hold the device steady while recording the video.
- 3 Tap  and rub the area you want in motion with the cine shot effect.

- 2 Tap  to record a 3 second video.

- Hold the device steady while recording the video.

- 3 Tap  and rub the area you want in motion with the cine shot effect.

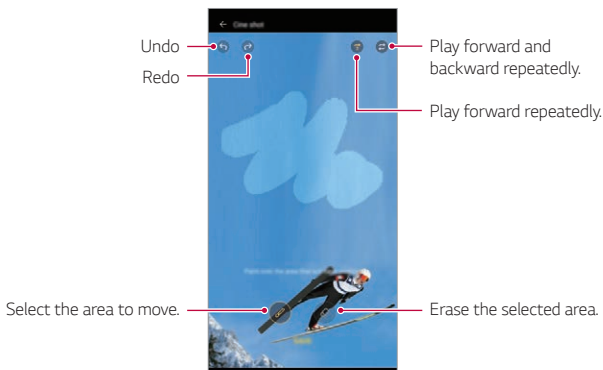

- Tap  to erase the selected area.
- Tap  to play the selected area in motion forward repeatedly.
- Tap  to play the selected area in motion forward and backward repeatedly.

- Tap  to play the selected area in motion forward repeatedly.

- Tap  to play the selected area in motion forward and backward repeatedly.

- 4 Tap **SAVE**.

- The selected area will be in motion.

Cine Video

You can record a movie-like video.

- 1 Tap .
- 2 Tap **More** > .
- 3 Tap  to record a video.
 - : Record a video by selecting the point zoom feature to zoom in/out around a specific area.
 - : Select an effect to apply to the recording. You can also adjust the vignette and strength for each Cine effect. This feature cannot be changed after you have started recording.



- The Point Zoom feature supports a zoom speed of up to 3x.
- This feature only supports video recordings in standard angle.

Gallery features

Related content

You can edit and customise related content in the Gallery.

- 1 While viewing a picture preview, tap .
- 2 When the icon related to the date or location where you took the photo appears, touch the screen.



- You can view the photos related to the date or location of your choice.
- Tap  to access additional options.

Making a GIF

You can create a GIF file from the Gallery.

- 1 While viewing an album, tap  > **Create GIF**.
- 2 Select the desired photos and videos to create a GIF file and then tap **Next**.
 - You can also add/delete a photograph, adjust the speed or screen ratio, set the photograph order, etc.
- 3 Tap **Save**.



- A maximum of 100 images can be used to create a GIF file.


Making a collage

You can make a collage from the associated content.

- 1 While viewing an album, tap **>** **Make collage**.
- 2 Select the desired images to add to the collage and then tap **Next**.
 - Select the desired layout from the bottom of the screen.
- 3 Tap **Make**.




• A maximum of 9 images can be used to create a collage.

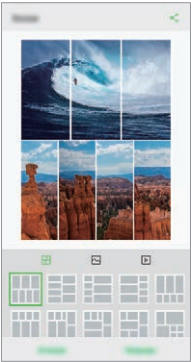

Creating a movie

You can create a new movie by putting images and videos together.

- 1 Run the Gallery app, select a desired folder in the album and tap **Create movie**.
- 2 Select images or videos for your movie and tap **Next**.
- 3 Edit the selected images and videos and then tap **Save**.

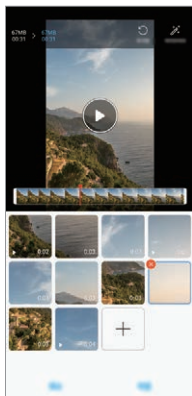

Deleting files

You can select images or videos to delete by tapping  at the top left corner of its thumbnail.

Adding files

You can select images or videos to add after tapping  at the bottom of the screen. You can also select the images or videos you have already added.



- Touch and hold a file, and then tap another file for multiple selection.

Rearranging files

To rearrange the images and videos, touch and hold the file you want to move, and then dragging it to the desired location.

Adding file effects

Tap  to add a theme or background music or change the font.

Resetting the movie edits

You can reset the edits made to the movie (e.g. play time) by tapping .

Previewing a file

Check your new video before saving it by tapping . After the playback time elapses, the next file is played automatically.




- A maximum of 50 images and videos can be used to create a video.
- The playback time for an image is 3 seconds by default and it cannot be changed. Videos can be trimmed down to a minimum of 1 second.
- This feature may not support some image or video formats.

Making a GIF

You can easily make a GIF file using recorded video.

Creating video

- 1 At the desired starting point while watching a video, tap .
- 2 Select the length of the GIF you want to create.
 - GIF is generated for the time selected from the specified starting point.
 - For videos that are less than 10 seconds, GIF images are automatically generated for the remaining time.

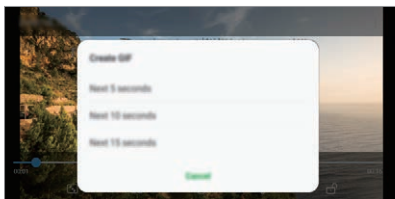

Creating GIF Photographs

- 1 In the photograph list in the Gallery, tap  > **Create GIF**.
- 2 Select a picture to turn into a GIF photograph, and then tap **Next**.
 - You can add/delete a photograph, adjust the speed or screen ratio, and set the photograph order.



- Creating GIF photographs is a function provided for the user to produce creative images. Violating rights such as intellectual property right or defaming the reputation of another person by using the creating GIF photographs function may lead to a civil or criminal liability in accordance with the related laws. Be cautious not to copy or transmit another person's work without authorization. LG Electronics is not liable in any way for such acts by users.
- You can select up to 100 photographs to produce when you create a GIF.

Sound quality and effects features

DTS:X 3D Surround

You can play a song or video in three-dimensional, immersive and vivid sound. To use this feature, connect earphones, speaker or other external audio devices to your device.

Tap  > **Settings** > **Sound** > **Sound quality and effects**, then tap **DTS:X 3D Surround**  to activate this feature.

Adjusting the sound direction

You can adjust the sound direction as desired.

- 1 Tap  > **Settings** > **Sound** > **Sound quality and effects** > **DTS:X 3D Surround**.
- 2 Select sound direction.

Floating Bar


Floating Bar overview

You can activate frequently used features, including shortcuts, screen capture, music player, and quick contacts, by touching and then swiping the Floating Bar on the screen.

To enable the Floating Bar feature, tap  > **Settings** > **Extensions** > **Floating Bar** .

Opening and closing the Floating Bar

- To open the Floating Bar: Tap  or .
- To close the Floating Bar: Tap  or .

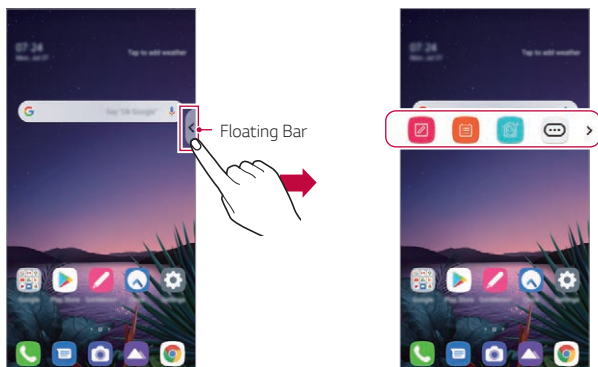

- To access the rest of the bar options, swipe left or right on the floating bar.

Moving the Floating Bar position

Touch and hold Floating Bar, then drag it to the desired location.

Either way, it can be moved to any direction.

Google Assistant

Google Assistant overview

Your device has the built-in Google Assistant feature. Find answers and get things done while on-the-go.



- To use this feature, first connect to the network and sign in to your Google Account.

Sign in

- 1 Touch and hold  from the Home screen to launch **Google Assistant** or press the Google Assistant key on the left side of the device.
- 2 Tap **GET STARTED**.
- 3 Follow the on-screen instructions and say **"Ok Google"** or **"Hey Google"**.
 - The device saves your voice data for recognition.
- 4 Set whether to use the voice match unlock function.
 - If you use the voice match unlock function, you can unlock the device even when the device screen is turned off or the device is charging by saying **"Ok Google"** or **"Hey Google"**.



- This feature may be more vulnerable to security than the other screen locks, such as Knock Code, Pattern, PIN, and Password.
When a similar voice or your recorded voice is used, the screen may be unlocked.
- You need to unlock the device by using the specified method if you fail to unlock the device with voice recognition. See [Setting a screen lock](#) for details.

- 5 Tap **Save**.

Accessing by Voice

- 1 When the home screen is turned off or locked, say **"OK Google"** or **"Hey Google"**.
- 2 When the Google Assistant screen appears, say a command or ask a question.

Accessing from Home Screen

- 1 Touch and hold  on the Home screen.
- 2 Say a command or question when you see  on the bottom of the screen.



- In an environment where Wi-Fi or mobile data connection is poor, the Google Assistant function may be restricted and the speech recognition accuracy rate may be lowered.
- If the speech is ambiguous, the microphone is covered, a media player is playing, or the surrounding is loud, the speech recognition accuracy rate may be lowered. When you are using the product via voice commands, say with accurate pronunciation in a quiet environment for better speech recognition accuracy.

Hand ID

Hand ID overview

You can unlock the screen with your hand by using the Hand ID feature. Place your device on a flat surface and bring your hand towards the front camera to unlock the screen.




- This feature uses the saved palm vein data on your device. The recognised palm vein data is securely stored in your device.
- The ToF sensor and IR illuminator located near the front camera can recognise your palm vein patterns.
- Hand ID is considered less secure than other lock types.

Precautions for Hand ID

Hand ID recognition accuracy may decrease in the following cases. To increase its accuracy, check the following before using the device.

- Make sure that the ToF sensor and IR illuminator are not blocked by a sticker or any other foreign substances while using the Hand ID feature.
- When water, dust or other foreign substance is on the ToF sensor, IR illuminator or your hand, the Hand ID recognition may not work. Clean and dry the sensor and your hand before having the hand recognised.
- If you bend your hand, Hand ID may not be recognised. Make sure to open your hand comfortable and flat while registering and recognising Hand ID.
- Make sure that the device is parallel with your hand while registering or recognising Hand ID. If you tilt the device or your hand, registering or recognising Hand ID may not work properly.
- Make sure that your device is placed on a flat surface or placed on a stable holder.
- While using the Hand ID feature, keep the distance to your palm to 10 cm (4 inch).

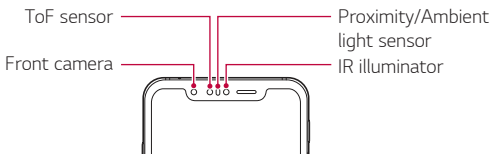

Registering Hand ID

Before using the Hand ID feature, register your palm vein data on your device.

- 1 Tap  > **Settings** > **Lock screen & security** > **Hand ID**.
- 2 Tap **Next** and unlock the screen according to the specified method.
- 3 Place the device on a flat surface and tap **Start**.
- 4 Register your palm by following the on-screen instructions.
 - Place your palm at a distance of 15 ~ 20 cm (6 ~ 8 inches) from the device.
 - When the device recognises your palm, slowly lower the palm towards the ToF sensor.
 - Tap **Continue** to register again with the device placed in a different position.
- 5 When the palm registration is done, tap **OK**.

Unlocking the screen with Hand ID

You can unlock the screen with your hand.

- 1 Tap  > **Settings** > **Lock screen & security** > **Hand ID**.
- 2 On the Hand ID settings screen, configure the following settings:
 - **Delete hand data:** You can delete the registered Hand ID data and register it again if the Hand ID does not work properly.
 - **Cover to wake for Hand ID:** You can wake your phone and then use the Hand ID by covering the screen when the screen is off.
 - **Swipe to unlock:** After your device recognises your Hand ID, you must swipe the screen to unlock it.

Fingerprint recognition

Fingerprint recognition overview

You must register your fingerprint on your device first before using the fingerprint recognition function.

You can use the fingerprint recognition function in the following cases:

- To unlock the screen.
- To view the locked content in the Gallery or QuickMemo+.
- Confirm a purchase by signing in to an app or identifying yourself with your fingerprint.



- Your fingerprint can be used by the device for user identification. Very similar fingerprints from different users may be recognised by the fingerprint sensor as the same fingerprint.
- If the device cannot detect your fingerprint, or you forgot the value specified for registration, visit the nearest LG Customer Service Centre with your device and ID card.

Precautions for fingerprint recognition

Fingerprint recognition accuracy may decrease due to a number of reasons. To maximise the recognition accuracy, check the following before using the device.

- The device has a fingerprint sensor. Ensure that the fingerprint sensor is not damaged by a metallic object, such as coin or key.
- When water, dust or other foreign substance is on the fingerprint sensor or your finger, the fingerprint registration or recognition may not work. Clean and dry your finger before having the fingerprint recognised.
- A fingerprint may not be recognised properly if the surface of your finger has a scar or is not smooth due to being soaked in water.
- If you bend your finger or use the fingertip only, your fingerprint may not be recognised. Make sure that your finger covers the entire surface of the fingerprint sensor.

- Scan only one finger for each registration. Scanning more than one finger may affect fingerprint registration and recognition.
- The device may generate static electricity if the surrounding air is dry. If the surrounding air is dry, avoid scanning fingerprints, or touch a metallic object such as a coin or a key before scanning fingerprints to remove static electricity.

Registering fingerprints

You can register and save your fingerprint on the device to use fingerprint identification.

1 Tap  > **Settings** > **Lock screen & security** > **Fingerprints**.




- A lock screen must be set in order to be able to use this feature.
- If the screen lock is not active, configure the lock screen by following the on-screen instructions. See [Setting a screen lock](#) for details.

2 Locate the fingerprint sensor on the back of the device and gently put your finger on it to register the fingerprint.



- Gently press the fingerprint sensor so that the sensor can recognise your fingerprint.
- Ensure that your finger covers the entire surface of the fingerprint sensor.

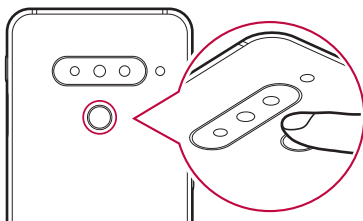

- 3 Follow the on-screen instructions.
 - Repeat scanning the fingerprint by moving your finger little by little until the fingerprint is registered.
- 4 When the fingerprint registration is done, tap **OK**.
 - Tap **Add more** to register another fingerprint. If you register only one fingerprint and the corresponding finger is not in a good condition, the fingerprint recognition may not work well. As the preventive measure against this kind of situation, register multiple fingerprints.

Managing fingerprints

You can edit or delete registered fingerprints.

- 1 Tap  > **Settings** > **Lock screen & security** > **Fingerprints**.
- 2 Unlock according to the specified lock method.
- 3 From the fingerprint list, tap a fingerprint to rename it. To delete it, tap .

Unlocking the screen with a fingerprint

You can unlock the screen or view the locked content by using your fingerprint. Activate the desired function:

- 1 Tap  > **Settings** > **Lock screen & security** > **Fingerprints**.
- 2 Unlock according to the specified lock method.
- 3 On the fingerprint settings screen, activate the desired function:
 - **Screen lock**: Unlock the screen with a fingerprint.
 - **Content lock**: Unlock content with a fingerprint. To do this, make sure that the content lock is set.

Face Unlock

Face unlock overview

You can unlock the screen lock by using the saved facial data.



- This feature may be more vulnerable to security than the other screen locks, such as Knock Code, Pattern, PIN, and Password.
- When a similar face such as a twin is used, the device may recognise it as the registered user and may be unlocked.
- The recognised facial data is securely stored in your device.
- If the device cannot detect your face, or you forgot the value specified for registration, visit the nearest LG Customer Service Centre with your device and ID card.

Precautions for Face Unlock

Face Unlock accuracy may decrease in the following cases. To increase its accuracy, check the following before using the device.

- When your face is covered with a hat, eyeglasses, sunglasses, or mask, or your face is significantly different due to heavy makeup or beard.
- When there are fingerprints or foreign substances on the front of the camera lens, or your device cannot detect your face due to too bright or dark light.

Registering facial data

Before using the Face Unlock feature, register your facial data on your device.

1 Tap > **Settings** > **Lock screen & security** > **Face Unlock**.



- To use this feature, the screen lock must be set with a Knock Code, Pattern, PIN, or Password.
- When the screen lock is not set, register the data by following the on-screen instructions. See [Setting a screen lock](#) for details.

- 2 Tap **Next** and unlock the device according to the specified method.
- 3 Tap **Start** and raise your device in the front of your eyes.
 - Register your face in a room that is not too bright or dark.
 - Hold the device in the distance of 25 ~ 51 cm (10 ~ 20 inches) from your face.
 - Position your entire face inside the guideline on the screen, and then move your head slowly in a circle while looking at the screen.
 - Keep still while registering your face. You can improve recognition rate by taking steady photos multiple times.



• Only one face can be registered at a time.

- 4 When the face registration is done, tap **OK**.

Unlocking the screen with your face

You can release the screen lock with your face instead of a Knock Code, Pattern, PIN, or Password.

- 1 Tap  > **Settings** > **Lock screen & security** > **Select screen lock**.
- 2 Unlock the screen according to the specified method.
- 3 Tap **Allow Face Unlock**  to allow you to unlock the screen using facial recognition.

Face Unlock options

You can customise Face Unlock options.

- 1 Tap  > **Settings** > **Lock screen & security** > **Face Unlock**.
- 2 Customise the following settings:
 - **Improve Face Unlock:** You can add facial data in various conditions to improve face unlock.
 - **Delete face:** You can delete the registered facial data and register it again if the face unlock does not work properly.

- **Raise to wake up for Face Unlock:** You can wake your phone and then use Face Unlock by raising the phone when the screen is off.
- **Swipe to unlock:** After your device recognises your face, you must swipe the screen to unlock it.
- **Content lock:** Allow you to show locked content in Gallery and QuickMemo+ with your face.

Multi-tasking feature

Multi window

- 1 Tap  on the navigation bar.
 - Recently-used apps appear.
 If you tap the app icon, the **App info**, **Multi window**, **Pop-up window**, **Pin app** menus appear.



- 2 Tap the app icon on the top left of the app to be displayed in the multi-window and tap **Multi window**.
 - The selected app appears on the upper half of the screen.
- 3 Swipe the recently used apps left or right and tap an app to display on the lower half of the screen.
 - The selected app appears on the lower half of the screen.



- The multi window feature is not supported in some LG apps or apps downloaded from the Play Store.

AOD (always-on display)

You can view the date, time or signature when the main screen is turned off.

Swipe the bottom of the Always-on display screen to activate features including Camera, Capture+, Wi-Fi, sound settings, **Bluetooth®**, Flash, Music and more.

- 1 Tap  > **Settings** > **Display** > **AOD (always-on display)**.
- 2 Select the image you want to display and tap **Save**.
 - Tap the desired image among **Digital clock**, **Analog clock**, **Dual clock**, **Signature**, **Calendar**, or **Image**.
 - Drag **Quick tools & music player**  to swipe over the status icons for Quick tools and the music player.
 - Tap **AI Pick**  to see useful information provided based on Context Awareness.
 - To set the time period not to activate Always-on display feature, tap **Daily timeout**.
 - To enhance brightness for the Always-on display feature, tap **Brighter display**.



- The battery may drain faster when you use Always-on display. Turn this feature off to save battery power.
- To deactivate Always-on display feature, tap  > **Settings** > **Display** > **AOD (always-on display)** and then tap .

Quick Help

You can view help information about the main features of the device, frequently asked questions or the user guide. Search for help information using keywords. You can solve your problems quickly by consulting one-on-one with a specialist.

- 1 Tap  > **Quick Help**.
- 2 Search for help information by entering keywords in the search field.



- This feature is periodically updated utilising user feedback.
- Available menu items may vary depending on the area or service provider.
- You can view the user manual online from the Quick Help app to view detailed information about the device's features.

Notes on Water Resistant Properties

This product is water and dust resistant in compliance with the Ingress Protection rating IP68.

Your product has undergone testing in a controlled environment and is proven to be water and dust resistant in certain circumstances (meets the requirements of classification IP68 as described by the international standard IEC 60529 - Degrees of Protection provided by Enclosures [IP Code]; test conditions: 15-35 °C, 86-106kPa, 1.5 meter, for 30 minutes). Do not expose the device in conditions that are different from the test conditions. Results may vary in actual use.



WARNING

Despite a rating of IP68, your device is not impervious to conditions not tested in LG's controlled environment. Please note that any damages that occur due to such causes changes the colour of the LDI (Liquid Damage Indicator). If the colour of LDI located inside the product changes, the product is to be considered ineligible for any free-of-charge repair services provided under the product's limited warranty.

Avoid exposing the product to environments with excessive dust or moisture. Do not use the product in the following environments.



Do not immerse the product in any liquid chemicals (soap, etc.) other than water.



Do not immerse the product in salt water, including seawater.



Do not immerse the product in a hot spring.



Do not swim with this product.



Do not place the product directly on sand (such as at a beach) or mud.



Do not immerse your product in water deeper than approximately 1.5 meters.

Do not immerse your product in water for longer than 30 minutes.

- If your product becomes wet be sure to wipe the microphone, speaker, and stereo jack with a dry cloth before use.
- Should your product or your hands become wet, dry them before handling the product.
- Do not use the product in places where it may be sprayed with high pressure water (e.g. near a faucet or shower head) or submerge it in water for extended periods of time, as the product is not designed to withstand high water pressure.

- This product is not resistant to shock. Do not drop the product or subject it to shock. Doing so might damage or deform the main unit, causing water leakage.
- The product's water and dust resistant features may be damaged by dropping or receiving an impact.
- If the product gets wet, use a clean, soft cloth to dry it thoroughly.
- The touch screen and other features may not work properly if the device is used while wet.
- Your product is water resistant only when the SIM/Memory card tray is properly inserted into the product.
- Do not open or close the SIM/Memory card tray while the product is wet or immersed in water. Exposing the open tray to water or moisture may damage the product.
- The SIM/Memory card tray contains rubber [packing] to help prevent dust, water, or moisture from entering the product. Do not damage the rubber [packing] as this may allow dust, water, or moisture to enter your product and cause damage.



- Failure to follow the provided instructions may invalidate your device's limited warranty.
- If the device is wet, the LDI located inside the device changes in colour. In this case, the device is ineligible for any free-of-charge repair services provided under the device's limited warranty.
- Despite a rating of IP68, your device is not completely impervious to water in any situation.



02

Basic Functions

Product components and accessories

The following items are included with your device.

- Device
- Stereo headset
- USB cable
- Ejection pin
- Charger
- Quick Start Guide
- Jelly Phone Case




- The items described above may be optional.
- The items supplied with the device and any available accessories may vary depending on the area and service provider.
- Always use genuine LG Electronics accessories. Using accessories made by other manufacturers may affect your device's call performance or cause malfunctions. This may not be covered by LG's repair service.
- Some of the device parts are made of tempered glass. If you drop your device on a hard surface or subject it to severe impact, the tempered glass may be damaged. If this happens, stop using your device immediately and contact an LG Customer Service Centre.



- If any of these basic items are missing, contact the dealer from which you purchased your device.
- To purchase additional items, contact an LG Customer Service Centre.
- Some items in the product box are subject to change without notice.
- The appearance and specifications of your device are subject to change without notice.
- Device specifications may vary depending on the area or service provider.
- Remove the protective film from the Fingerprint sensor before use of the fingerprint recognition feature.

Parts overview

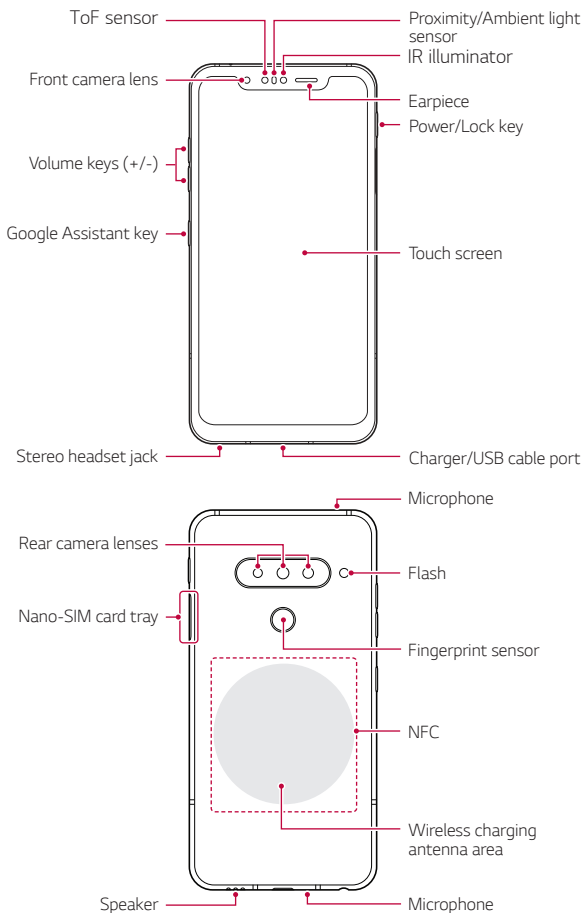




Do NOT attempt to remove the back cover by yourself.

Doing so may severely damage the battery and device, which could cause overheating, fire, and injury. This device's back cover and battery are not to be removed or replaced by a non-qualified professional.

- Z Camera

- Z Camera is composed of a ToF sensor and an IR illuminator to increase the recognition accuracy in a dark place or outdoors by three-dimensionally detecting the distance or depth between the device and an object.

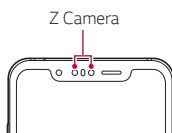

- ToF (Time-of-Flight) sensor

- Measure the accurate distance by detecting the infrared emitted from the IR illuminator.

- IR illuminator

- Emit the infrared light.

- Proximity/Ambient light sensor

- Proximity sensor: During a call, the proximity sensor turns off the screen and disables touch functionality when the device is in close proximity to the human body. It turns the screen back on and enables touch functionality when the device is outside a specific range.
- Ambient light sensor: The ambient light sensor analyses the ambient light intensity when the auto-brightness control mode is turned on.


- Volume keys
 - Adjust the volume for ringtones, calls or notifications.
 - While using the Camera, gently press a Volume key to take a photo. To take continuous photos, press and hold the Volume key.
 - Press the Volume Down key twice to launch the Camera app when the screen is locked or turned off. Press the Volume Up key twice to launch Capture+.
- Power/Lock key
 - Briefly press the key when you want to turn the screen on or off.
 - Press and hold the key when you want to select a power control option.
- Google Assistant key
 - Your device has the Google Assistant built-in. Find answers and get things done while on-the-go. To get started, just tap the Google Assistant key on the side of the phone. Press and hold the key to quickly talk to your Assistant. Press twice to open Visual Snapshot.
 - Activate Google Assistant. See the *Google Assistant* for details.
- Fingerprint sensor
 - Turn on the fingerprint recognition feature to simplify the process of unlocking the screen. See *Fingerprint recognition overview* for details.




- Some functions may be restricted for access, depending on the device specifications.
- The rear of the device includes a built-in NFC antenna. Be cautious when handling the device to avoid damaging or covering the NFC antenna.
- Do not put heavy objects on the device or sit on it. Failure to do so may damage the touch screen.
- Screen-protective film or accessories may interfere with the proximity sensor.
- If your device is wet or is being used in a humid place, the touch screen or buttons may not function properly.

Hold the device correctly as shown below. If you cover the microphone hole with a hand, finger, or protective case while using the device, you may sound unclear during a call.

Good example

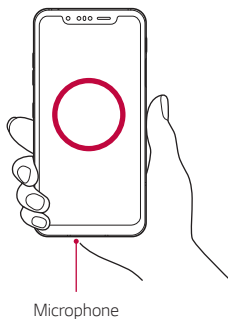

Bad example

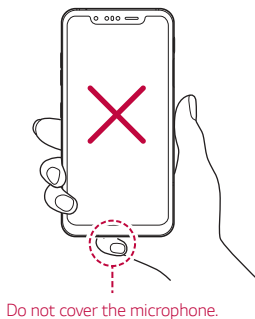

Turning the power on or off

Turning the power on

When the power is turned off, press and hold the Power/Lock key.



- When the device is turned on for the first time, initial configuration takes place. The first booting time for the smart phone may be longer than usual.

Turning the power off

Press and hold the Power/Lock key, then select Power off.

Restarting the device

When the device is not working properly or does not respond, restart it by following the instructions below.

- 1 Press and hold the Power/Lock key and the Volume Down key at the same time until the power is turned off.
- 2 When the device is restarted, release the key.

Power control options

Press and hold the Power/Lock key, then select an option.

- **Power off:** Turn the device off.
- **Power off and restart:** Restart the device.

Installing the SIM card

Insert the SIM (Subscriber Identity Module) card provided by your service provider to start using your device.




- Be careful with the ejection pin since it has a sharp edge.




- In order for the water-resistant and dust-resistant features to work effectively, the card tray must be inserted correctly.


- 1 Insert the ejection pin into the hole on the card tray.

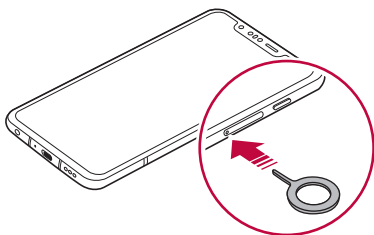


- 2 Pull out the card tray.

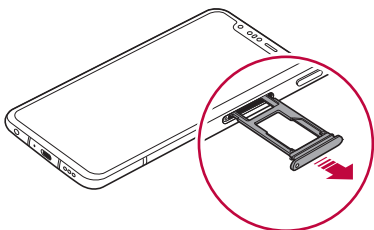

- 3 Put the SIM card on the card tray with the gold-coloured contacts facing downwards.

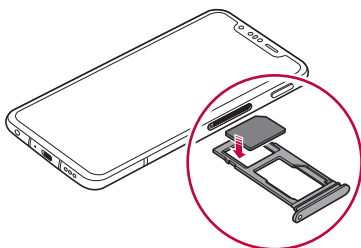

- 4 Insert the card tray back into the slot.

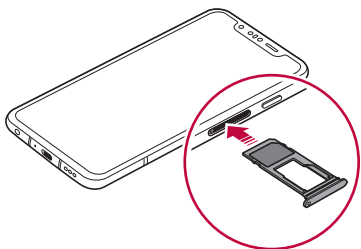



- This device supports only Nano SIM cards.



Micro



Standard




- For problem-free performance, it is recommended to use the device with the correct type of SIM card. Always use a factory-made SIM card supplied by the operator.
- Do not lose your SIM card. LG is not responsible for damage and other issues caused by loss or transfer of a SIM card.
- Be careful not to damage the SIM card when you insert or remove it.
- When you insert the SIM card or memory card, place it on the card tray correctly.
- When you insert the card tray back into the device, insert it horizontally in the direction of arrow as shown in the figure. Make sure that the card placed on the card tray does not move out of its position.
- Insert the SIM card with the gold-coloured contacts facing downwards.
- Be sure to insert the SIM card into the device by following the instructions in the user manual.
- If you insert to or remove the card tray from the device, be careful not to let water or other liquids enter into the card tray. If a wet card tray or card is inserted into the device, your device may get damaged.
- Memory card is an optional item.
- Frequent writing and erasing of data may shorten the memory card lifespan.
- Some memory cards may not be fully compatible with the device. If you use an incompatible card, it may damage the device or the memory card, or corrupt the data stored in it.

Inserting the memory card

Insert the memory card into your device.

The device can support up to a 2 TB microSD card. Depending on the memory card manufacturer and type, some memory card may not be compatible with your device.

- 1 Insert the ejection pin into the hole on the card tray.
- 2 Pull out the card tray.
- 3 Put the memory card on the card tray with the gold-coloured contacts facing downwards.

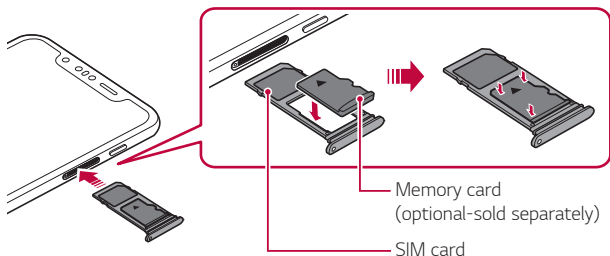

- 4 Insert the card tray back into the slot.



- Some memory cards may not be fully compatible with the device. If you use an incompatible card, it may damage the device or the memory card, or corrupt the data stored in it.



- Frequent writing and erasing of data may shorten the memory card lifespan.

Removing the memory card

Unmount the memory card before removing it for safety.

- 1 Tap  > **Settings** > **Storage** > .
- 2 Insert the ejection pin into the hole in the card tray and then pull out the card tray from the device.
- 3 Remove the memory card from the card tray.
- 4 Insert the card tray back into the slot.




- Do not remove the memory card while the device is transferring or accessing information. This may cause data to be lost or corrupted, or may damage the memory card or the device. LG is not responsible for losses that result from the abuse or improper use of memory cards, including the loss of data.

Battery

Charging the battery

Before using the device, fully charge the battery.

Charge the device with the USB Type-C cable.

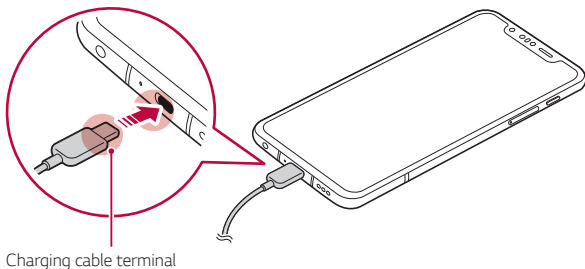



- Do not use the external terminal, charging cable or gender for the device in presence of moisture. This may cause fire, electric shock, injury, or device malfunction. If there is moisture, stop using the device immediately and remove the moisture completely.
- Make sure to use the USB cable provided with your device.
- Make sure to use an LG-approved charger and charging cable. Charging the battery with a third-party charger may cause the battery to explode or may damage the device.
- Your device has an internal rechargeable battery. For your safety, do not remove the embedded battery.
- Using the device when it is charging may cause electric shock. To use the device, stop charging it.



- Remove the charger from the power socket after the device is fully charged. This prevents unnecessary power consumption.
- A charging adapter that supports fast charging is included with the product.
- The fast charging feature may not work if a fast charging adapter other than the genuine adapter provided with the product is used.
- Another way to charge the battery is by connecting a USB cable between the device and a desktop or laptop computer. This may take a longer time than plugging the adapter to a wall outlet.
- Do not charge the battery by using a USB hub that is unable to maintain the rated voltage. Charging may fail or unintentionally stop.

Precautions when using the device

- Make sure to use the USB cable provided; do not use third party USB cables or chargers with your device. The LG limited warranty does not cover the use of third party accessories.
- Failure to follow the instructions in this guide and improper use may damage the device.

Wireless charging

This device supports wireless charging feature. Charge the device with a Qi certified wireless charger (optional, sold separately).

Charging the battery with a wireless charger

- 1 Place your device on the centre of the wireless charger aligned with the wireless charging antenna on the back of the device.
 - To check the wireless charging antenna area, see [Parts overview](#).
- 2 When the battery is fully charged, remove the device from the charger.



- When you charge the battery with a wireless charger, do not put a magnetic, metallic or conductive materials between the device and the charger. This may disturb charging or the device and the charger may become heated. In this case, the device, charger or SIM/Memory cards may be damaged.



- If the battery temperature exceeds a certain level while charging the device, charging may be stopped.
- If magnetic, metallic or conductive materials are attached on the back of the device or a protective case is inserted, the device may not charge properly.
- If you charge the battery with a wireless charger in areas where the network signal strength is weak, the network performance of your device may be further degraded.
- Charge the device with a Qi certified wireless charger (optional, sold separately). Because the LG limited warranty does not cover the use of third party accessories, contact the third party manufacturer.
- This product supports wireless charging. Use a Qi certified wireless charger (sold separately) to charge the product. Some coiled wireless chargers may not support wireless charging. Wireless chargers that support EPP (Extended Power Profile) allow high-speed wireless charging.

Using the battery efficiently

Battery lifespan may decrease if you keep many apps and functions running simultaneously and continuously.

Cancel background operations to increase battery life.

To minimise battery consumption, follow these tips:


- Turn off the Bluetooth or Wi-Fi network function when not using them.
- Set the screen timeout to as short a time as possible.
- Minimise the screen brightness.
- Set a screen lock when the device is not used.
- Check the battery level while using any downloaded apps.

Touch screen

You can familiarise yourself with how to control your device by using touch screen gestures.


Tapping

Lightly tap with your fingertip to select or run an app or option.

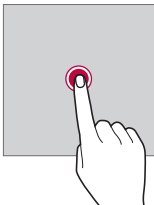


Touching and holding

Touch and hold for several seconds to display a menu with available options.

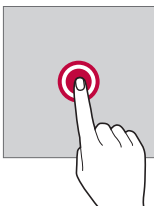


Double-tapping

Tap twice quickly to zoom in or out on a web page or map.

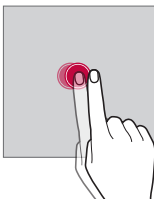


Dragging

Touch and hold an item, such as an app or widget, then move your finger to another location in a controlled motion. You can use this gesture to move an item.

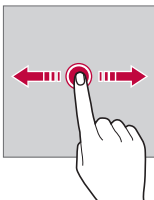



Swiping

Touch the screen with your finger and move it quickly without pausing. You can use this gesture to scroll through a list, a web page, photos, screens, and more.

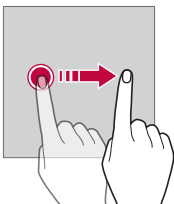

Pinching and spreading

Pinch two fingers to zoom out such as on a photo or map. To zoom in, spread your fingers apart.

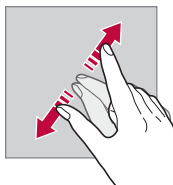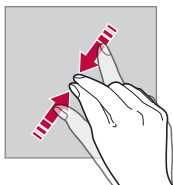

- Do not expose the touch screen to excessive physical shock. You might damage the touch sensor.



- A touch screen failure may occur if you use the device near a magnetic, metallic or conductive material.
- If you use the device under bright lights, such as direct sunlight, the screen may not be visible, depending on your position. Use the device in a shady location or a location with an ambient light that is not too bright and bright enough to read books.
- Do not press the screen with excessive force.
- Gently tap with your fingertip on the option you want.
- Touch control may not work properly if you tap while wearing a glove or by using the tip of your fingernail.
- Touch control may not work properly if the screen is moist or wet.
- The touch screen may not function properly if a screen-protective film or accessory purchased from a third party store is attached to the device.
- Displaying a static image for extended periods of time may result in after-images or screen burn-in. Turn off the screen or avoid displaying the same image for a long time when you do not use the device.

Home screen


Home screen overview

The Home screen is the starting point for accessing various functions and apps on your device. Tap  on any screen to directly go to the Home screen.

You can manage all apps and widgets on the Home screen. Swipe the screen left or right to view all installed apps at a glance.

Home screen layout

You can view all apps and organise widgets and folders on the Home screen.

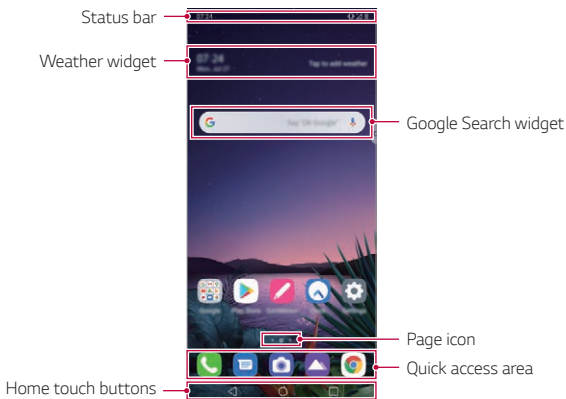

- The Home screen may differ depending on the manufacturer policy, user settings, software version or service provider.

- **Status bar**: View status icons, the time and the battery level.
- **Weather widget**: View the information of weather and time for a specific area.
- **Google Search widget**: Type or speak to pull open Google Search.
- **Page icon**: Display the total number of Home screen canvases. You can tap the desired page icon to go to the page you selected. The icon reflecting the current canvas will be highlighted.
- **Quick access area**: Fix main apps at the bottom of the screen so that they can be accessed from any Home screen canvas.

- **Home touch buttons**

- ◀: Return to the previous screen. Close the keypad or pop-up windows.
- ○: Tap to go to the Home screen. To launch Google Assistant, touch and hold.
- □: Tap to view a list of recently used apps or run an app from the list. To delete all the recently used apps, tap **Clear all**.

Changing the style of the Home touch buttons

You can change the style of the Home touch buttons.

- 1 Tap ○ > **Settings** > **Display** > **Navigation bar**.
- 2 Under **STYLE**, select **Gestures**, **Gesture and Buttons** or **Buttons only** to suit your preferences.
 - **Gestures**: To see recent apps, swipe the Home button — up.
 - **Gesture and buttons**: Back button ◀ and Home button ○ are available. To see recent apps, swipe the Home button ○ up.
 - **Buttons only**: ◀ / ○ / □ are available. Tap □ to see recent apps.

Editing the Home touch buttons

You can rearrange the Home touch buttons or add frequently used functions to the Home touch buttons area.

Tap ○ > **Settings** > **Display** > **Navigation bar** > **Button combination** and customise the settings.

- Several functions, including Notification and Capture+ are provided. A maximum of two additional items can be added.

Lock/hide icon

The icon to lock or hide the Home touch buttons appears at the bottom left of the screen.

If you want to lock the Home touch buttons while hiding the buttons, tap  on the left of the Home touch buttons.

To hide the Home touch buttons again, double-tap .



- Some features may not be supported while hiding the Home touch buttons.

Status icons

When there is a notification for an unread message, calendar event or alarm, the status bar displays the corresponding notification icon. Check your device's status by viewing notification icons displayed on the status bar.

	No signal
	Data is being transmitted over the network
	Alarm is set
	Vibrate mode is on
	Bluetooth is on
	Connected to a computer via USB
	Battery level
	Airplane mode is on
	Missed calls
	Wi-Fi is connected
	Mute mode is on
	GPS is on
	Hotspot is on

	No SIM card
	The NFC mode is on





- Some of these icons may appear differently or may not appear at all, depending on the device's status. Refer to the icons according to the actual environment and area in which you are using the device and your service provider.
- Displayed icons may vary, depending on the area or service provider.

Notifications panel

You can open the notifications panel by dragging the status bar downward on the main screen.

- You can drag down the notice window or tap the arrow icon to open the list of quick setting icons.
- You can tap  to add, delete or arrange icons in the notice window.
- If you touch and hold the icon, the settings screen for the corresponding function appears.

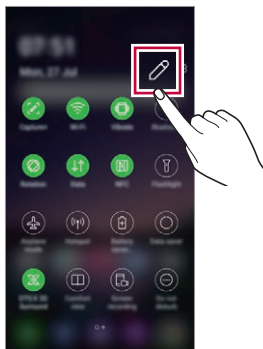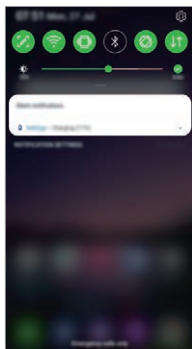



- You can use the notifications panel even on the lock screen. Drag the notifications panel while the screen is locked to quickly access the desired features.

Switching the screen orientation

You can set the screen orientation to automatically switch according to the device's physical orientation.

On the notification panel, tap **Rotation** from the quick access icon list.

You can also tap  > **Settings** > **Display** and activate **Auto-rotate screen**.




Editing the Home screen

On the Home screen, touch and hold on an empty space, then select the desired action from below.

- To rearrange the Home screen canvases, touch and hold on a canvas, then drag it to another location.
- To add a widget to the Home screen, touch and hold on a blank area of the Home screen, then select **Widgets**.

- To change wallpapers, themes, icons, and AOD, touch and hold on a blank area of the Home screen, then select **Wallpaper & theme**.
You can also tap  > **Settings** > **Display** > **Wallpaper & theme**, then select wallpapers, themes, icons, and AOD to apply to the device.
- To configure the Home screen settings, touch and hold on a blank area of the Home screen, then select **Home screen settings**. See *Home screen settings* for details.
- To view or reinstall the uninstalled apps, touch and hold on a blank area of the Home screen, then select **App trash**. See *App trash* for details.
- To change the default screen, touch and hold on a blank area of the Home screen, move to desired screen, tap , then tap the screen once more.

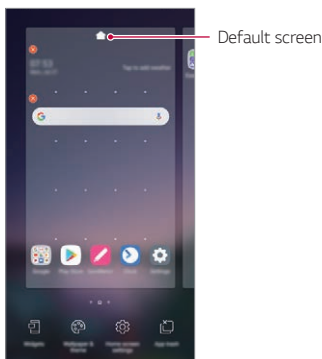


Viewing the background theme

You can view only the background image by hiding the apps and widgets on the Home screen.

Spread two fingers apart on the Home screen.

- To return to the original screen, which displays apps and widgets, pinch your fingers on the Home screen or tap .

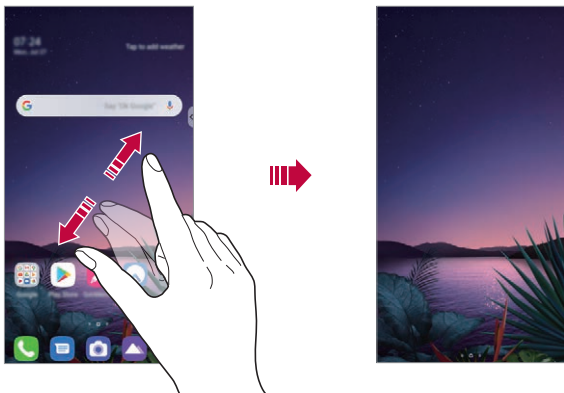

Moving apps on the Home screen

On the Home screen, touch and hold an app, then drag it to another location.

- To keep frequently used apps at the bottom of the Home screen, touch and hold an app, then drag it to the quick access area at the bottom.
- To remove an icon from the quick access area, drag the icon to the Home screen.

Using folders from the Home screen

Creating folders

On the Home screen, touch and hold an app, then drag it over another app.

- A new folder is created and the apps are added to the folder.

Editing folders

On the Home screen, tap a folder and do one of the following actions.

- To edit the folder name and colour, tap the folder name.

- To add apps, touch and hold an app, then drag it over the folder and release it.
- To remove an app from the folder, touch and hold the app and drag it to outside the folder. If the removed app is the only one app that existed in the folder, the folder is removed automatically.
- You can also add or remove apps after tapping  in the folder.



- You cannot change the folder colour while using downloaded theme.

Home screen settings

You can customise the Home screen settings.

- 1 Tap  > **Settings** > **Display** > **Home screen**.
- 2 Customise the following settings:
 - **Select Home:** Select a Home screen mode.
 - **Wallpaper:** Change the Home screen background wallpaper.
 - **Screen swipe effect:** Select an effect to apply when the Home screen canvas switches.
 - **Icon shape:** Choose if you want icons to have square or rounded corners.
 - **Left Home screen:** Select what to display on the screen located left to the main Home screen.
 - **Sort apps by:** Set how apps are sorted on the Home screen.
 - **Grid:** Change the app arrangement mode for the Home screen.
 - **Hide apps:** Select which apps you want to hide from the Home screen.
 - **Loop Home screen:** Enable to allow continuous Home screen scrolling (loop back to first screen after the last screen).



- This function is available when Google feed is enabled.

- **Search:** Search by swiping down on the Home screen.
- **Home screen lock:** Enable to prevent apps and widgets from being rearranged or removed.

Screen lock

Screen lock overview

Your device's screen turns off and locks itself if you press the Power/Lock key. This also happens after the device is left idle for a specified period of time.

If you press the Power/Lock key when a screen lock is not set, the Home screen appears immediately.

To ensure security and prevent unwanted access to your device, set a screen lock.



- A screen lock prevents unnecessary touch input on the device screen and reduces battery consumption. We recommend that you activate the screen lock while not using the device.

Setting a screen lock

There are several options available for configuring the screen lock settings.

- 1 Tap > **Settings** > **Lock screen & security** > **Select screen lock** and then select the method you prefer.
- 2 Customise the following settings:
 - **None:** Deactivate the screen lock function.
 - **Swipe:** Swipe on the screen to unlock the screen.
 - **Knock Code:** Tap the screen in a pattern to unlock the screen.
 - **Pattern:** Draw a pattern to unlock the screen.
 - **PIN:** Enter a numeric password to unlock the screen.
 - **Password:** Enter an alphanumeric password to unlock the screen.

- **Fingerprints:** Unlock the screen by using your fingerprint.
- **Allow Face Unlock:** Unlock the screen by allowing the device to recognise your face.
- **Allow Hand ID:** Unlock the screen by allowing the device to recognise your hand ID.



- If you incorrectly attempt to unlock the device 5 times, the screen is blocked for 30 seconds.

Secure start-up settings

When you select Knock Code, Pattern, PIN or Password as a screen lock method, you can configure your device to be locked whenever turning on the device in order to secure your data.

- You cannot use all functions, except for emergency calls until you unlock the device.
- If you forget your decryption password, you cannot restore encrypted data and personal information.

Precautions for the secure start-up feature

- If you forget your decryption password, you cannot restore encrypted data and personal information.
- Be sure to keep your screen lock passwords separately.
- If you enter the screen lock passwords incorrectly more than the specified times, the device automatically resets itself and the encrypted data and your personal information are deleted automatically and they cannot be restored.
- Be cautious not to enter incorrect screen lock passwords more than the specified times.
- When you turn on the device right after the device resets, encryption also starts. If you stop the encryption arbitrarily, the data may be damaged. Be sure to wait until the reset is completed.

Customise Lock screen

You can customise lock screen.

- 1 Tap  > **Settings** > **Lock screen & security** > **Customize Lock screen**.
- 2 Select a function you want to set.
 - **Wallpaper**: Allow you to set the background for your Lock screen.
 - **Clock**: Allow you to change the size of the clock on the Lock screen.
 - **Shortcuts**: Allow you to choose apps to run on your Lock screen. This setting appears only when a screen lock is set.
 - **Weather animation**: Enable this option to display weather animations for the current location on the Lock screen.
 - **Contact info for lost phone**: Allow you to set text to be displayed on the Lock screen to identify the phone's owner.

Secure lock settings

You can set secure lock settings.

- 1 Tap  > **Settings** > **Lock screen & security** > **Secure lock settings**.
- 2 Select a function you want to set.
 - **Make pattern visible**: Allow you to make pattern visible.
 - **Lock timer**: Allow you to set the amount of time before the screen automatically locks after the backlight turns off (time-out due to inactivity).
 - **Power key instantly locks**: Enable this option to instantly lock the screen when the Power/Lock button is pressed. This setting overrides the Security Lock timer setting.
 - **Show lockdown option**: Allow you to show power menu option to turn off Lock screen notifications, Smart Lock and biometric locks.
 - **Smart Lock**: Allow you to set trusted devices, places, voice, and/or on-body detection that will allow your phone to remain unlocked.



- Menus you can set may be different depending on lock screen methods you choose.

KnockON

You can turn the screen on or off by double-tapping the screen.



- This option is available only on the Home screen provided by LG. It may not function properly on a custom launcher or on the Home screen installed by the user.
- When tapping the screen, use your fingertip. Do not use a fingernail.
- To use the KnockON feature, make sure that the proximity/light sensor is not blocked by a sticker or any other foreign substance.

Turning the screen on

Double-tap the middle of the screen.

- Tapping the top or bottom of the screen may decrease the recognition rate.

Turning the screen off

Double-tap on an empty space on the Home screen and Lock screen.

You can also double-tap an empty space on the status bar.

Disable KnockON

If you don't want to use the KnockON function, set as follows:

Tap  > **Settings** > **Extensions** > **KnockON** and drag it to disable the function.

Knock Code

You can unlock the screen by creating your own Knock Code. When the screen is locked, you can directly access the Home screen by tapping the screen in a specified sequence.



- You can use your Knock Code together with the KnockON feature.
- Make sure to use your fingertip when tapping the screen.

Creating a Knock Code

- 1 Tap > **Settings** > **Lock screen & security** > **Select screen lock** > **Knock Code**.
- 2 Tap the squares in a pattern of your choice to create a Knock Code and tap **Next**.
- 3 Input the created Knock Code again for verification, then tap **Confirm**.

Unlocking the screen with a Knock Code

Unlock the screen by inputting the Knock Code you have created.

You can also input your Knock Code on the touch screen when the screen is turned off.

- It is also possible to enter a Knock Code when the lock screen is turned on.

Memory card encryption

You can encrypt and protect data saved on the memory card. The encrypted data in the memory card cannot be accessed from another device.

- 1 Tap > **Settings** > **Lock screen & security** > **Encryption & credentials** > **Encrypt SD card**.
- 2 Read the on-screen overview of memory card encryption and then tap **Continue** to continue.
- 3 Select an option and tap **Encrypt now**.
 - **New data encryption**: Encrypt only data that is saved on the memory card after encryption.
 - **Full encryption**: Encrypt all the data currently saved on the memory card.

- **Exclude media files:** Encrypt all files, except for media files such as music, photos and videos.



- Once memory card encryption starts, some functions are not available.
- If the device is turned off while encryption is underway, the encryption process will fail, and some data may be damaged. Therefore, be sure to check if the battery level is sufficient before starting encryption.
- Encrypted files are accessible only from the device where the files were encrypted.
- The encrypted memory card cannot be used on another LG device. To use the encrypted memory card on another mobile device, format the card.
- You can activate memory card encryption even when no memory card is installed into the device. Any memory card that is installed after encryption will automatically be encrypted.

Taking screenshots

You can take screenshots of the current screen you are viewing.

Via a shortcut

Press and hold the Power/Lock key and the Volume Down key at the same time for at least two seconds.

- Screenshots can be viewed from the **Screenshots** folder in the **Gallery**.

Via Capture+

On the screen where you want to take a screenshot, drag the status bar downwards, then tap .



- When the screen is turned off or locked, you can access **Capture+** by pressing the Volume Up key twice. To use this feature, tap **○ > Settings > Extensions > Shortcuts** and turn on **Open Capture+**.
- See *Writing notes on a screenshot* for details.


Entering text

Using the Smart toolbar

You can use various keyboard input methods in one place. You can select the desired input method from the top of the keyboard.

- 1 Select the desired keyboard input method from the Smart toolbar.
- 2 Tap  and select the input method you want to show on the Smart tool, or reorganise them.

Smart toolbar

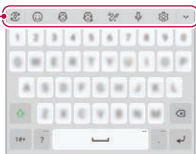

- LG keyboard is not default on your phone. You can change it from the keyboard settings.
- Some supporting input methods may differ depending on the device you have.
- You can turn on or off the Smart tool feature from the keyboard settings.
- You can also use the keyboard input methods by tapping .

-  : Add emojis.
-  : Add avatar stickers.
-  : Add ani-stickers.
-  : Tap  to enter text with your voice.
 - To maximise the voice command recognition, speak clearly.
 - To enter text with your voice, make sure that your device is connected to a network.
 - To select the language for voice recognition, tap  > **Languages** on the voice recognition screen.

- This function may not be supported, or the supported languages may differ depending on the service area.
-  : Access keyboard settings.
-  : Open the clip tray. See [Clip Tray](#) for details
-  : Activate floating keyboard when you use the Multi-window feature. You can also move the keyboard to the desired location.


Using the Smart keyboard

You can use the Smart keyboard to enter and edit text.

With the Smart keyboard, you can view text as you type without bothering to alternate between the screen and a conventional keyboard. This allows you to easily find and correct errors when typing.

Moving the cursor

With the Smart keyboard, you can move the cursor to the exact position you want. When typing text, touch and hold on the space bar and then drag left or right.

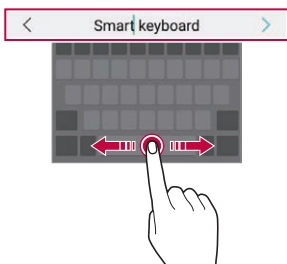


- This option is available only on the QWERTY keyboard.

Suggesting words

Smart keyboard automatically analyses your usage patterns to suggest frequently used words as you type. The longer you use your device, the more precise the suggestions are.

Enter text, then tap a suggested word or gently drag the left or right side of the keyboard upwards.

- The selected word is automatically entered. You do not need to manually type every letter of the word.

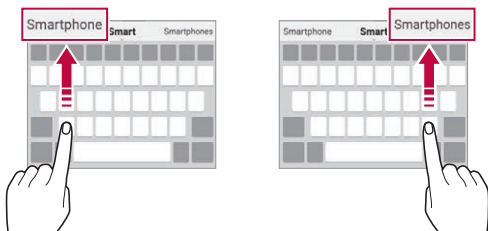

Adding languages to the keyboard

You can make additional languages available for keyboard input.

- 1 Tap  > **Settings** > **System** > **Language & keyboard** > **Manage > Keyboards** > **LG Keyboard** > **Language & keyboard layout** > **Select languages**.
- 2 Select the languages you want to make available.

Copy and Paste

You can cut or copy text from an app, and then paste the text into the same app. Or, you can run other apps and paste the text into them.

- 1 Touch and hold around the text you want to copy or cut.
- 2 Drag  to specify the area to copy or cut.
- 3 Select either **Cut** or **Copy**.
 - Cut or copied text is automatically added to the clip tray.
- 4 Touch and hold the text input window, then select **Paste**.



- If there is no item that has been copied or cut, the **Paste** option will not appear.

Clip Tray

If you copy or cut an image or text, it is automatically saved to the clip tray and can be pasted to any space at any time.

- 1 On the Smart tool, select .
You can also touch and hold the text input window, then select **Clip Tray**.
- 2 Select and paste an item from the clip tray.
 - A maximum of 20 items can be saved to the clip tray.
 - Tap  to lock saved items in order not to delete them, even when the maximum quantity is exceeded. A maximum of ten items can be locked. To delete locked items, unlock them first.
 - Tap  to delete the items saved to the clip tray.



- The clip tray may not be supported by some downloaded apps.

Content sharing

Playing content from another device

You can play photos, videos or songs saved on your device from a TV.

- 1 Connect the TV and your device to the same Wi-Fi network.
- 2 While viewing the items from the **Gallery** or **Music** app, tap  > **Play on other device**.
Or tap  > **Settings** > **Connected devices** > **Screen sharing** and then tap  to activate it.
- 3 Select the TV you want to connect to.



• For use with Chromecast, Google Play services should be up to date.

Viewing content from nearby devices

You can view content from various devices, such as a computer, NAS or mobile device, by using the Gallery or Music apps.

Tap  > **Settings** > **Connected devices** > **Media server** and then tap **Content sharing**  to activate it.

Connecting the devices

Connect both your device and another device that support DLNA function to the same wireless network.



• Make sure that File sharing (DLNA) is activated on both the device and the connected device.

Searching for nearby devices

You can view a list of DLNA devices on the same network by selecting the **Nearby devices** menu in each app.

Use content from nearby devices as if you were using it on your device.

Sending or receiving files

You can share files between your device and another LG device, or a tablet or computer.

Sending files

From the **Gallery** or **File Manager** app, tap  > **Share** or , then select a device on the file sharing list.

Receiving files

Drag the status bar downward and then tap **File sharing**.

If your device does not support the file sharing feature, tap  > **Settings** > **Connected devices** > **File sharing** > **SmartShare Beam** .



- Make sure that your device is connected to the same wireless network as the file transfer target device.
- Make sure that File sharing is activated on both the device and the target device.

Viewing content from your cloud

You can directly view the content saved on your cloud account, without downloading it to your device.

- 1 From the **Gallery** or **Music** app, select  > **Cloud**.
Or from the **File Manager** app, select  > **Cloud**.
- 2 Select a cloud account and sign in.
- 3 Save or play content in your cloud.

Do not disturb

You can limit or mute notifications to avoid disturbances for a specific period of time.

Tap  > **Settings** > **Sound** > **Do not disturb**.

- **Mode** and select the mode you want:
 - **Priority only**: Receive sound or vibrate notifications for the selected apps. Even when Priority only is turned on, alarms still sound.
 - **Total silence**: Disable both the sound and vibration.
- **Select priorities**: Receive alarms and the notifications for the selected apps.
 - **Calls from**: Set up a range of notifications when receiving a call.



- **Repeated calls**: Second call from same caller within 15 min is not silenced.

- **Messages from**: Set up a range of notifications when receiving a message.
- **Use Do not disturb**: Turn on the Do not disturb feature.
- **SCHEDULE**: Set the schedule for which you want to turn on the Do not disturb feature.
- **Help**: View the help for Do not disturb.



03

Useful Apps

Installing and uninstalling apps

Installing apps

Access an app store to search and download apps.

- You can use SmartWorld, Play Store or the app store provided by your service provider.



- Some app stores may require you to create an account and sign in.
- Some apps may charge fees.
- If you use mobile data, you may be charged for data usage, depending on your pricing plan.
- SmartWorld may not be supported depending on the area or service provider.

Uninstalling apps

Uninstall apps that you no longer use from your device.

Uninstalling with the touch and hold gesture

Press and hold any empty area on the screen, and then press  of the app you want to delete.

- If apps were uninstalled within 24 hours from now, you can reinstall them. See [App trash](#) for details.

Uninstalling by using the settings menu

Tap  > **Settings** > **Apps & notifications** > **App info**, select an app, then tap **Uninstall**.



- Some apps cannot be uninstalled by users.

Uninstalling apps from the app store

To uninstall an app, access the app store from which you download the app and uninstall it.

Installing and uninstalling apps during the setup

When you turn on the device for the first time, you can download recommended apps.

You can skip to the next step without installation.

App trash

You can view the uninstalled apps on the Home screen. You can also reinstall apps which were uninstalled within 24 hours from now.

1 Tap > **Management** > **App trash**.

You can also touch and hold an empty area of the Home screen, then tap **App trash**.

2 Activate the desired function:

- **Restore**: Reinstall the selected app.
-  : Remove the uninstalled apps permanently from the device.




- Uninstalled apps are automatically removed from the device 24 hours after they were uninstalled. If you want to reinstall the uninstalled apps, you must download them again from the app store.
- This feature is activated on the default Home screen only. If you uninstall apps while using the EasyHome screen or other launcher, they are immediately and permanently removed from the device.

App Shortcuts

On the Home screen, touch and hold an app icon such as Call, Message, Camera, Gallery and Settings to display a quick access menu. Use apps more easily through App Shortcuts.

- Tap ⓘ to check the app information.

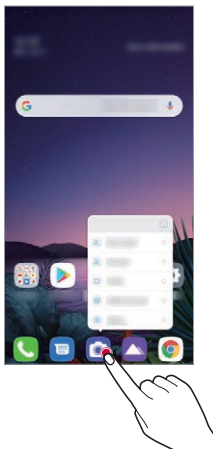

- This feature is available only on some apps.

Phone

Voice call

Make a phone call by using one of the available methods, such as manually entering a phone number and making a call from the contact list or the list of recent calls.

Making a call from the keypad

- 1 Tap  >  > **Dial**.
- 2 Make a call by using a method of your choice:
 - Enter a phone number and tap .
 - Touch and hold a speed dial number.
 - Search for a contact by tapping the initial letter of a contact name in the contact list, and then tap .



- To enter "+" when making an international call, touch and hold number 0.
- See *Adding contacts* for details on how to add phone numbers to the speed dial list.

Making Calls from Contacts

- 1  >  > **Contacts**.
- 2 After selecting the number you want to call from the list of contacts, tap .

Answering a call

To answer a call, drag  on the incoming call screen.

- When the stereo headset is connected, you can make calls by using the call/end button on the headset.
- To end a call without turning off the screen, tap  > **Settings** > **Network & internet** > **Call** > **Answer and end calls** and then activate **End call with the Power key**.
- If you enable **Settings** > **Network & internet** > **Call** > **Answer and end calls** > **End call with the Power key**, you can end a call by pressing the Lock/Power key while the call-in-process screen is turned on.

Rejecting a call

To reject an incoming call, drag  across the incoming call screen.

- To send a rejection message, drag the rejection message option  across the screen.
- To add or edit a rejection message, tap  > **Settings > Network & internet > Call > Call blocking & Decline with message > Decline with message**.
- When a call is coming in, press the Volume Up, Volume Down or Power/Lock key to mute ringtone or vibration, or to hold the call.

Checking an incoming call while using an app

When a call comes in while using an app, a pop-up notification can be displayed at the top of the screen. You can receive the call, reject the call, or send message from the pop-up screen.



- Tap  > **Settings > Network & internet > Call > Additional settings > Show voice calls while in an app** and then select the desired way you would like to display the incoming call while using an app.
- Floating bar must be enabled if you want to check the calls received using the floating bar while using an app. For more details, refer to the [*Floating Bar overview*](#).

Viewing missed calls

If there is a missed call, the status bar at the top of the screen displays .

To view missed call details, drag the status bar downwards. You can also tap  >  > **Call logs**.

Functions accessible during a call

During a call, you can access a variety of functions by tapping the on-screen buttons:

- **Contacts:** View the contact list during a call.
- **Hold:** Hold a call.
- **Dialpad:** Display or hide the dial pad.
- **Speaker:** Turn on the speakerphone function.
- **Mute:** Mute your voice so that your voice cannot be heard by the other party.
- **Bluetooth:** Switch the call to a Bluetooth device that is paired and connected.
- : End a call.
- : You can switch to video call from a voice call.
- : Access additional call options.



- Available settings items may vary depending on the area or service provider.

Making a three-way calling

You can make a call to another contact during a call.

- 1 During a call, tap  > **Add call**.
- 2 Enter a phone number and tap 
 - The two calls are displayed on the screen at the same time, and the first call is put on hold.
- 3 To start a conference call, tap **Merge calls**.



- You may be charged a fee for each call. Consult with your service provider for more information.

Viewing call records

To view recent call records, tap  > **Call logs**. Then, you can use the following functions:

- To view detailed call records, select a contact. To make a call to the selected contact, tap .
- To delete call records, tap  > **Delete**.



- The displayed call duration may differ from the call charge. Consult with your service provider for more information.
- The deleted call history can not be restored.
- Pinch two fingers or spread your fingers apart to adjust the font size of call logs or contacts.

Configuring call options

You can configure various call options.

- 1 Tap  > **Dial** or **Call logs**.
- 2 Tap  > **Call settings** and then configure the options to suit your preferences.

Messaging

Sending a message

You can create and send messages to your contacts using the Messaging app.



- Sending messages abroad may incur additional charges. Consult with your service provider for more information.

- 1 Tap  > .
- 2 Tap .
- 3 Specify a recipient and create a message.

- To use multimedia options, tap .
- To access optional menu items, tap .

4 Tap  to send the message.

Reading a message

You can view exchanged messages organised by contact.

- 1 Tap  .
- 2 Select a contact from the message list.

Configuring messaging settings

You can change messaging settings to suit your preferences.

- 1 Tap  .
- 2 Tap  **> Settings** from the message list.

Camera

Starting the camera

You can take a photo or record a video to cherish all of your memorable moments.

Tap  .




- Before taking a photo or recording a video, wipe the camera lens with a soft cloth.
- Be careful not to stain the camera lens with your fingers or other foreign substance.
- Images included in this user guide may be different from the actual device.
- Photos and videos can be viewed or edited from the Gallery. See [Gallery overview](#) for details.

Auto mode

You can take photos or record videos by selecting a variety of camera modes and options.

- 1 Tap  > , then tap **Photo**.
- 2 To take a photo, tap . To record a video, tap .

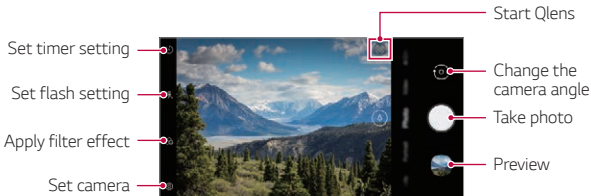

Taking a photo

- 1 Select a camera mode and tap the subject to focus the camera on.
- 2 Tap  to take a photo.
 - You can also press the Volume Down or Volume Up key to take a photo.



- When the screen is turned off or locked, start the camera by pressing the Volume Down key twice. Tap  > **Settings** > **Extensions** > **Shortcuts** and then tap **Open Camera**  to activate it.

Recording a video

- 1 Tap  >  > **Video** and tap the subject to focus on.
- 2 Tap  to record a video.
 - To take a photo while recording a video, tap .
 - To pause the video recording, tap . To resume the video recording, tap .

- While recording a video, you may spread or pinch two fingers to zoom in or out.
- While recording a video, you may tap the desired area to adjust the brightness.
- You can switch to and from the front camera and rear camera to record a video by pressing .

3 Tap  to end the video recording.

Customising the camera options

You can customise a variety of camera options to suit your preferences.

Tap  on the screen.



- Available options vary depending on the selected camera (front or rear camera) and the selected camera mode.

- : Take a photo in FullVision.
- : Select values for aspect ratio and size for taking photos.
- : Select values for resolution and size for recording videos.

Tips	Allow you to know when someone's eyes are closed or if a photo is blurry.
Vision search	When associated info is found in Auto mode, QLens or Google Lens will be used.
HDR	Obtain photos in vivid colours and get compensated effects even when they are taken against the light. These functions are provided by the high dynamic range (HDR) technology equipped in the camera.
Steady recording	Minimise motion blur while recording a video.
Live photo	Record the action before and after you take a photo.
Cheese shutter	Take photos with voice commands.
Tracking focus	Enable the camera to remain focused on the subject you touch on the screen, even if the subject is moving. (Available when the Standard camera is in use.)

Tag locations	Save the image with GPS location data.
Grid	Display guide grids so that you can take photos or record videos based on the horizontal and vertical reference lines.
Add signature	Display a personalised signature on the photos.
Storage	Select if you want to store the pictures and videos in the Internal storage or SD card. (Available when a memory card is inserted.)
Help	Provide Help for each camera menu.

Additional options on the front camera


Tips	Allow you to know when someone's eyes are closed or if a photo is blurry.
Selfie shot	Take a selfie by selecting its option between Gesture shot and Auto shot .
Save as flipped	Save as flipped images after taking selfies.

Mode Selection

You can conveniently select from the modes displayed on the screen which are selected to suit the shooting environment.

Tap  > , then tap **More**.

- You can change the order of the scene modes by moving the scene mode icon while pressing and holding the icon.

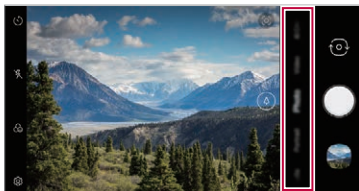

Night view

You can take vivid and clear night photos. While taking a photo, hold the device steady. You can adjust photo brightness by dragging the slide bar up or down.

- 1 Tap > , then tap **More** > .
- 2 To take a photo, tap .



Panorama

You can create a panoramic photo by moving the camera in one direction to photograph and stitch continuous shots of a wide view.

- 1 Tap > , then tap **More** > .
- 2 Tap and then slowly move the camera in one direction.
 - Move the device by following the direction of the arrow in the guideline.
- 3 Tap to stop capturing the panoramc.



Story Shot

You can immediately composite photos taken from the rear camera and the front camera.

- 1 Tap , then tap **More** > .
- 2 Tap  to take photos.
 - Take a photo that will serve as the background of the composite image.
 - After a short while, the front camera will automatically take a photo.




- You can also touch  and then select a photo saved in the Gallery for the background of the composite image.

Manual Video mode

User can manually set various functions for recording video. Adjust audio, white balance, focus, brightness, ISO, shutter speed, etc.

- 1 Tap , then tap **More** > .
- 2 Set the scene menu that is appropriate for the shooting environment.

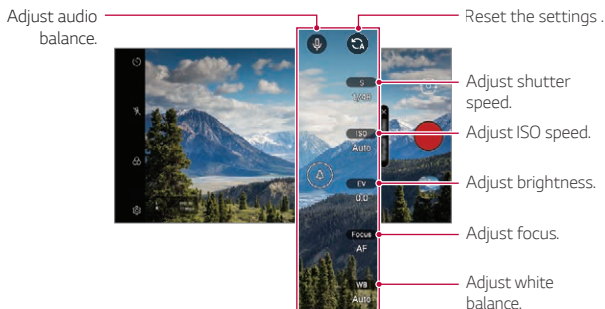

3 Press  to start recording.

Option Setting

You can set the camera option according to the desired environment.

Press  on the screen.

-  : Directly switch over to FullVision
-  : Select video resolution and size.

Frame rate	Select the frames per second value.
Bit rate	Select the image quality for videos.
Hi-Fi	Record a video with Hi-Fi quality sound.
Save as HDR10	Save a video in the HDR10 format for high definition and vivid colour.
Steady recording	Minimise motion blur while recording a video.
Tracking focus	Enable the camera to remain focused on the subject you touch on the screen, even if the subject is moving. (Available when the Standard camera is in use.)
Tag locations	Save the image with GPS location data.

Grid	Display guide grids so that you can take photos or record videos based on the horizontal and vertical reference lines.
Storage	Select if you want to store the pictures and videos in the Internal storage or SD card. (Available when a memory card is inserted.)
Help	Provide Help for each camera menu.

Slo-mo

Create a fun video by changing the speed of movement. This function is useful when you want to playback a video at a slower speed compared to the actual speed of the original clip.



- Slow motion for the entire video
 - Slow motion effect is applied to the entire video.
- Slow motion for sections
 - Slow motion effect is applied to certain sections of the video.

- 1 Tap > , then tap **More** > .
- 2 Tap to shoot video.
 - To pause the video recording, tap . To resume the video recording, tap .
- 3 If you want to finish shooting, press .



Flash Jump-Cut

Photos taken at a regular interval are saved as GIF files.

- 1 Tap  > , then tap **More** > .
- 2 Tap  to select how many copies of the photograph to take.
 - You can select one among 4, 8, 12, 16 and 20 copies.
- 3 Tap  to take a photo.
 - Photos are taken every 3 seconds and saved as a GIF file.
 - You can press  before taking the prescribed number of photos to stop the shooting.
 - Photos taken are saved as GIF files.
 - You can see the saved GIF files using the Gallery app.



- At the moment when the camera takes the photograph, a flash comes on.
- At the bottom of the screen, the total number of photographs taken as well as the number of copies are shown.
- The photographs taken are saved in the GIF format files only.

Triple shot

The triple cameras located on the back of the device take a series of photos with different angles of view and save as a video with slide effect.

See *Triple shot* for details.

Cine shot

You can record a moment and make a video with only a part of the scene in motion.

See *Cine shot* for details.

Cine video


You can record a movie-like video.

See *Cine Video* for details.

Food

You can take a photo or record a video with adjusting the colour slide bar and white balance.

- 1 Tap > , then tap **More** > .
- 2 To take a photo, tap .
 - Drag the colour slide bar on the screen to adjust the white balance and select the best colour.
 - If the slide bar is not displayed, tap to adjust the white balance.

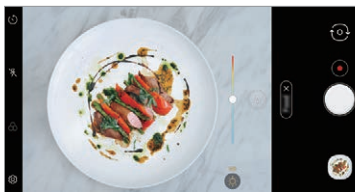

YouTube Live

You can record a video and directly upload to YouTube.

To use this feature, you need to verify your phone number.



- YouTube Live is available only when your device is connected to the Internet. If you use mobile data, you may be charged for data usage, depending on your pricing plan.

Portrait

You can take sharp portrait by applying camera lens blur effect.

See [Portrait](#) for details.

Google Lens

You can get more information or take action on items around you using Google Lens, like landmarks, posters, restaurant menus, animals, flowers, or barcodes, directly in the device.

AI CAM


You can effectively take photos or record videos since the camera recognises the object when taking a photo or recording a video.

See *AI CAM* for details.

Manual camera mode

You can create photos featuring professional touch by using a variety of advanced features. Adjust the white balance, focus, brightness, ISO, shutter speed and other options.

- 1 Tap > , then tap **Manual Camera**.
- 2 Customise the following camera settings.

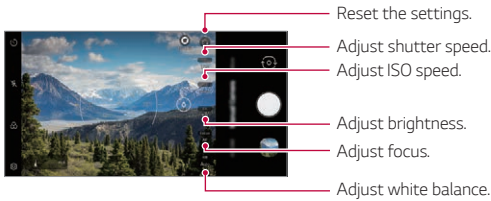

- 3 Tap to take the photo.

Customising the camera options

You can customise a variety of camera options to suit your preferences.

Tap on the screen.

- : Take a photo in FullVision.
- : Select values for aspect ratio and size for taking photos.


Graphy photos	Adjust the white balance, ISO and shutter speed for the recommended photo. See <i>Graphy</i> for details.
Save as RAW	The image is stored as a RAW file format so that you can modify it. The DNG and JPEG files are created while taking a photo, then saved as a non compressed high resolution image.

Cheese shutter	Take photos with voice commands.
Tracking focus	Enable the camera to remain focused on the subject you touch on the screen, even if the subject is moving. (Available when the Standard camera is in use.)
Tag locations	Save the image with GPS location data.
Guide	Display guide grids so that you can take photos based on the horizontal and vertical reference lines.
Add signature	Display a personalised signature on the photos.
Storage	Select if you want to store the pictures and videos in the Internal storage or SD card. (Available when a memory card is inserted.)
Help	Provide Help for each camera menu.

Graphy

You can apply the recommended values for the white balance, ISO and shutter speed as if taken by an expert.

- 1 Tap  > , then tap **Manual Camera**.
- 2 Tap  and select the desired scene from the recommended images.

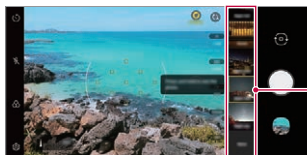

Recommended images

- 3 Tap  to take a photo.

- Photographs are taken under the same photograph settings selected in Graphy.



- This feature is available only in Manual camera mode.
- Tap , then tap  from the Graphy menu to deactivate this feature.


Focus peaking

You can adjust the focus on the subject with the focus peaking feature.

Access Focus peaking by tapping the Manual focus (MF) button. When Focus peaking is enabled, the subject you focus on appears yellow. Move the the toggle wheel up and down to focus on the desired area, then take the photo.




- This feature is only available in Manual camera mode and Manual video mode.
- Disable this feature by tapping the **Focus peaking** button once more.
- This feature is not available using the wide-angle camera.

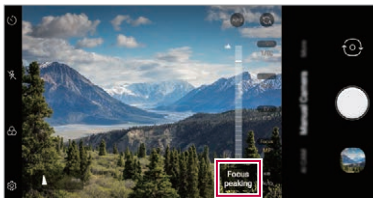

Other useful features in the Camera app

Auto-Exposure/Auto-Focus lock

You can fix the current exposure level and focus position by touching and holding the screen in the Auto mode. To turn off the feature, tap a blank area on the screen.

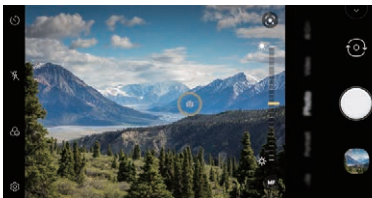

- This feature is available only in specific modes.

Using the Burst Shot

You can take consecutive photos and view them as moving pictures in the **Gallery**.

- 1 Run the camera app and select **Photo**.
- 2 Tap and hold 
 - Multiple, consecutive photos are taken while you are holding down .



- This feature is available only in specific modes.

Switching between cameras

You can switch between the front and rear cameras to suit your environment.

On the camera screen, tap  or drag the screen up or down to switch between the front and rear cameras.



- Use the front camera to take selfies. See *Selfie shot* for details.

Zoom in or out

You can use zoom in or out on the camera screen while taking a photo or recording a video.

- On the camera screen, pinch or spread two fingers to zoom in or out, then use the displayed slide bar.



- The zoom feature is not available when using the front camera in selfie mode.

Selfie shot

You can use the front camera to view your face on the screen and take selfies.


Gesture shot

You can take selfies by using gestures.

Show your palm to the front camera and then clench your fist.

You can also clench your fist and then open it towards the front camera.

- In three seconds, a photo is taken.

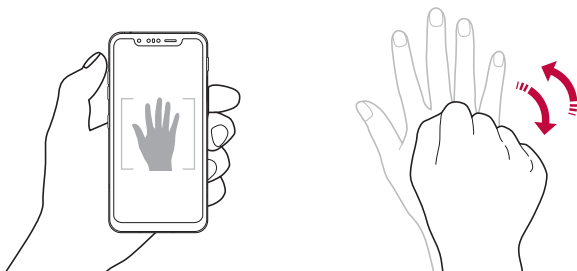


- To use this feature, switch to the front camera mode, then tap  > **Selfie shot > Gesture shot**.
- Make sure that your palm and fist are within the reference line so that the camera can detect them.
- This feature may not be available while using some of the camera features.

Auto shot

You can use the face detection feature to take selfies easily and conveniently. You can set the device so that, when you look at the screen, the front camera detects your face and takes a selfie automatically.

- The white coloured guide frame appears when the front camera detects your face. If the subject within the guide frame stops moving, the guide frame colour turns yellow, then the camera takes a photo.

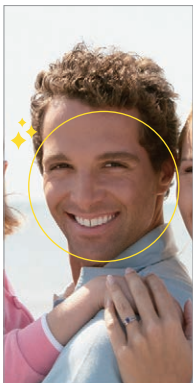

- Tap  > **Selfie shot** > **Auto shot** to enable the Auto shot feature.

Interval shot

You can take selfies at an interval.

While using the front camera, you can show your palm to the camera, then clench your fist twice quickly.

- Four photos are taken at regular intervals after a timer delay of three seconds.

Save as flipped

Before taking a photo with the front camera, tap  > **Save as flipped**. The image is flipped horizontally.



- When using the front camera, you can change how selfies are taken in the camera options. See *Customising the camera options* for details.

Signature

You can create a personalised photo by using your signature.

- 1 Tap , then tap  > **Add signature**.
- 2 Enter the signature as desired and tap **Add**.




• This feature is available only in specific modes.

quick share

You can share a photo or video to the app you want immediately after taking it.

- 1 Tap , then take a photo or record a video.
- 2 Tap the app icon that appears on the screen to share it using that app. You can also swipe the icon towards the opposite direction to see what other apps you can use to share your photos and videos.

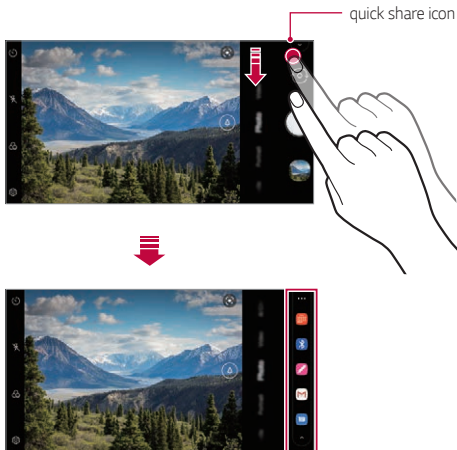



- The app displayed by the quick share icon may vary, depending on the type and frequency of access to the apps installed on the device.
- This feature is available only in specific modes.

Gallery

Gallery overview

You can view and manage photos and videos saved on your device.

1 Tap  > .

- Saved photos and videos are displayed by folder.


2 Tap a folder and select a file.

- View the selected file in full-screen mode.
- While viewing a photo, swipe left or right to view the previous or next photo.
- While viewing a video, swipe left or right to rewind or fast-forward the video.
- If you save the location information or use a scene mode when shooting, a sub folder is generated for each video.
- To view photos by location at which the photo was taken, tap  >  >  > **Tag locations**, then tap . The photos are automatically grouped by location under the Memory tab of the Gallery app.



- Some file formats may not be supported, depending on the installed software.
- Some files may not be opened due to encoding.
- Files that exceed the size limit may cause an error.
- You need to activate the GPS feature to create Memory albums.

Viewing photos

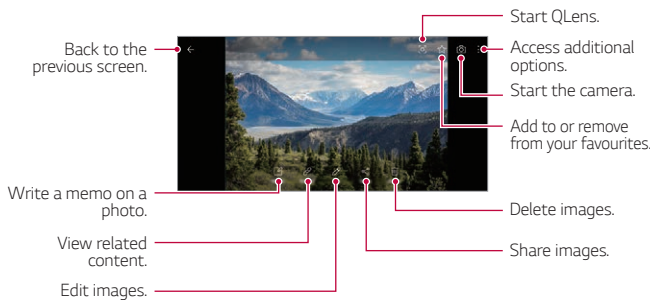

- Details menu appears when the screen is lightly touched. Touching the screen once again makes the menu disappear.

Writing memos on photos

- 1 While viewing a photo, tap .
- 2 Write a memo on the photo screen and tap **Save**.
 - The memo is applied to the photo.



- Memo function may not be available in some photo files.
- You can search for memos that have been added by pressing **Q** of the Gallery app.

View related contents


You can freely edit or configure the related photos in the Gallery.

For more details, refer to *Related content*.

Edit photos

- 1 While viewing a photo, tap .
- 2 Edit your photos using various effects and editing tools.
- 3 Once finished editing, tap **Save copy**.


Playing a video

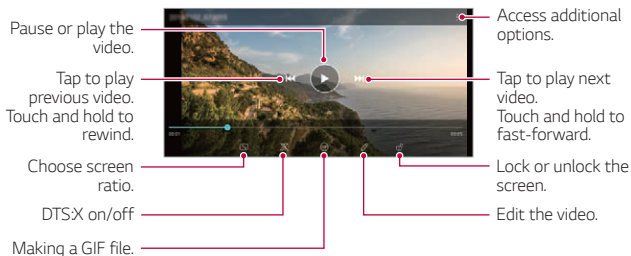

- To adjust the sound volume, drag the right side of the video screen up or down.
- To adjust the screen brightness, drag the left side of the screen up or down.
- Dragging the screen to the left on the video play screen allows you to rewind (REW) and dragging to the right allows you to fast forward (FF).

Editing videos

- 1 While viewing a video, tap .
- 2 Use a variety of effects and edit tools to edit the video.

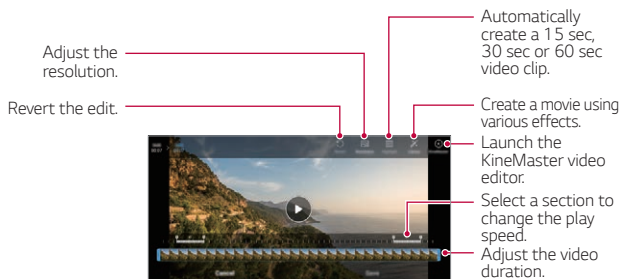

3 Tap **Save** to save changes.

Deleting files

You can delete files by using one of the following options:

- Touch and hold a file from the file list, then tap **Delete**.
- Tap  from the file list and delete the desired files.
- Deleted files are automatically moved to **Trash** and they can be restored to the Gallery within 7 days.
- Tap  to completely delete the files. In this case, the files cannot be restored.

Sharing files

You can share files by using one of the following options:

- While viewing a photo, tap  to share the file by using the method you want.
- While viewing a video, tap  > **Share** to share the file by using the method you want.
- Tap  from the file list to select files and share them using the method you want.

Contacts

Contacts overview

You can save and manage contacts.

Tap  > **Essentials** > **Contacts**.

Adding contacts

Adding new contacts

1 On the contact list screen, tap .

- A pop-up appears for selecting the saving location for contact. Select the location you want.

2 Enter contact details and tap **Save**.

Importing contacts

You can import contacts from another storage device.

- 1 On the contact list screen, tap  > **Manage contacts** > **Import**.
- 2 Select the source and target locations of the contact you want to import, and then tap **OK**.
- 3 Select the contacts and tap **Import**.

Adding contacts to the speed dial list

- 1 On the contact list screen, tap  > **Speed dial**.
- 2 Tap **Add contact** from a speed dial number.
- 3 Select a contact.



- While adding a new contact, tap  to add a speed dial number.

Searching for contacts

You can search for contacts by using one of the following options:

- Tap the search bar at the top of the Contacts screen and enter the desired contact or phone number you want to search for.
- Scroll the contact list up or down.
- From the index of the contact list screen, tap the initial letter of a contact.



- Pressing the search bar at the top of the Contacts screen and entering a contact or phone number brings up the integrated search results from the call history and contacts list saved onto the product.

Contacts list

Editing contacts

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap  and edit details.
- 3 Tap **Save** to save changes.

Deleting contacts

You can delete contacts by using one of the following options:

- On the contact list screen, touch and hold a contact you want to delete, then tap **Delete contact**.
- Tap  > **Delete** on the contact list screen.



• Deleted contacts may not be restored.

Adding favourites

You can register frequently used contacts as favourites.

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap .

Creating groups

- 1 On the contacts group list, tap .
- 2 Enter a new group name.
- 3 Tap **Add members**, select contacts, then tap **Add**.
- 4 Tap **Save** to save the new group.

QuickMemo+

QuickMemo+ overview

You can make creative notes by using a variety of options on this advanced notepad feature, such as image management and screenshots, which are not supported by the conventional notepad.

Creating a note

- 1 Tap  > **QuickMemo+**.
- 2 Tap  to create a note.
 -  : Save a note.
 -  : Undo the previous edit.
 -  : Redo the recently deleted edits.
 - **T** : Enter a note by using the keypad.
 -  : Write notes by hand.
 -  : Erase handwritten notes.
 -  : Zoom in or out, rotate or erase the parts of a handwritten note.
 -  : Access additional options.
- 3 Tap  to save the note.

Writing notes on a screenshot

- 1 While viewing the screen you want to capture, drag the status bar downwards and then tap .
 - The screenshot appears as the notepad background theme. Memo tools appear at the top of the screen.
- 2 Crop the image (if necessary) and take notes as desired.
 - Write notes by hand on the photo.
- 3 Tap  and save the notes to the location you want.
 - Saved notes can be viewed in either **QuickMemo+** or **Gallery**.

- To save notes in the same location all the time, select the **Use as default app** checkbox and select an app.



- You can capture the entire screen by using the scroll capture feature.
- While using an app such as Message and Chrome, drag the notifications panel downwards and then tap **Capture+ > Extended** to capture the entire screen you are currently viewing as a single file.
- This feature is available only on some apps that support the scroll capture feature.
- Pinch two fingers or spread your fingers apart to change the memo layout.

Managing folders

You organise and view memos according to the memo type.

- 1 Select  **QuickMemo+**.
- 2 Tap  on the top part of the screen and then select the desired function.
 - **All memos**: You can collectively view all memos saved in Qmemo+.
 - **My memos**: You can view the memos created in Qmemo+.
 - **Capture+**: You can view the memos created using Capture+.
 - **Trash**: You can view the deleted memos.
 - **New category**: You can add categories.
 -  : You can change the order of categories or add/delete categories. By pressing the category, you can change the category name.



- Some categories do not appear when the folder app initially started. Categories are additionally displayed only when relevant memos exist.
- Deleted memos are moved to the trash and can be recovered within 7 days from the day they were deleted. In the Qmemo+ app, you can change the display type by placing two fingers on the screen and either widening or narrowing the fingers.

Clock

Alarm

You can set an alarm to trigger it at a specified time.

- 1 Tap  > **Clock** > **Alarm**.
- 2 Tap  to add a new alarm.
- 3 Configure the alarm settings and tap **Save**.



- If you select a previously set alarm, you can edit the alarm.

World clock

You can view the current time in cities around the world.

- 1 Tap  > **Clock** > **World clock**.
- 2 Tap  and add a city.

Timer

You can set the timer to trigger an alarm after a specified period of time.

- 1 Tap  > **Clock** > **Timer**.
- 2 Set the time and tap **Start**.
 - To suspend the timer, tap **Pause**. To resume the timer, tap **Resume**.
- 3 Tap **Stop** to stop the timer alarm.

Stopwatch

You can use the stopwatch to record a lap time.

- 1 Tap  > **Clock** > **Stopwatch**.
- 2 Tap **Start** to initiate the stopwatch.
 - To record a lap time, tap **Lap**.
- 3 Tap **Pause** to suspend the stopwatch.
 - To resume the stopwatch, tap **Resume**.
 - To clear all the records and restart the stopwatch, tap **Reset**.

Calendar

Calendar overview

You can use the calendar to manage events and tasks.

Adding events

- 1 Tap  > **Essentials** > **Calendar**.
- 2 Select a date and then tap .
- 3 Enter event details and tap **Save**.

Syncing events

Tap  > **Calendars to sync**, and select a calendar to sync.



- When your events are saved from the device to your Google account, they are automatically synced with the Google Calendar, too. Then, you can sync other devices with the Google Calendar in order to make those devices have the same events that your device has and to manage your events on those devices.

Tasks


You can register tasks to your device to easily manage schedules.

- 1 Tap  > **Essentials** > **Tasks**.
- 2 Tap  to add a task.
- 3 Enter task details and then tap **Save**.

Music

You can play and manage songs or music albums.

- 1 Tap  > **Essentials** > **Music**.
- 2 Select a category.
- 3 Select a music file.

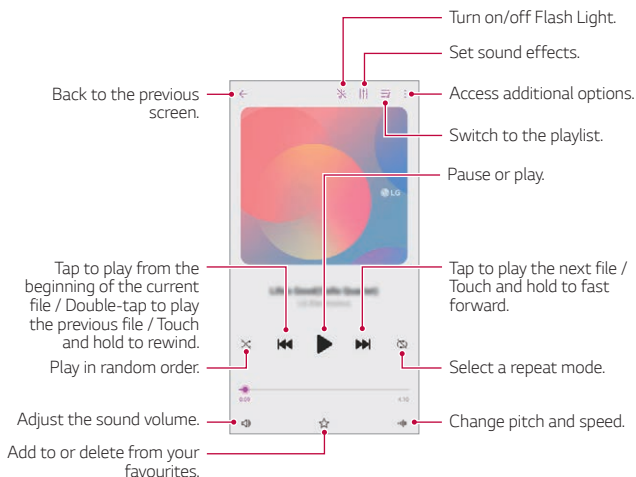



- Some file formats may not be supported, depending on the installed software.
- Files that exceed the size limit may cause an error.
- Music files may be protected by international copyright owners or copyright laws. You may have to obtain legal permission before copying a music file. To download or copy a music file, first check the copyright law for the relevant country.
- If you set the flashlight, flashlight blinks to fit the music being played.

Calculator

You can use two types of calculators: the simple calculator and the scientific calculator.

- 1 Tap > **Essentials** > **Calculator**.
- 2 Use the keypad to make a calculation.
 - If you want to calculate from the beginning, tap and hold .

LG ThinQ

You can easily connect the product with IoT appliances to monitor and conveniently use the appliances.

Select > **Essentials** > **LG ThinQ**.



- Washing machine, dryer, styler, dishwasher, oven, and robot cleaner can only be registered when the product is in the standby mode.
- Look for the LG ThinQ mark on the product to see if it can be connected to LG ThinQ app.
- Tap to check various function of the LG ThinQ app.

Game Launcher

You can use Game Launcher to view the entire list of installed games, or set the device to mute or prevent any notifications while playing games.

- 1 Tap  > **Essentials** > **Game Launcher**.
- 2 Select the desired option.

LG Health

LG Health overview

You can manage your health and maintain good exercise habits by keeping track of the exercises you do.

Getting started with LG Health


You can configure LG Health when launching the app for the first time or after resetting it.

- 1 Tap  > **Essentials** > **LG Health**.
- 2 Follow the on-screen instructions to complete configuration.

Using LG Health

You can view main information on LG Health and manage the amount of physical exercise and health information.

- 1 Tap  > **Essentials** > **LG Health**.
- 2 The following options are available.

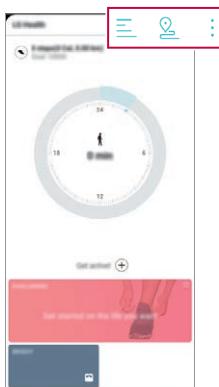

-  : View your exercise log on the day you want to check.
-  : Begin tracking an exercise. The route and amount of your physical exercise are recorded for each exercise type.
-  : Set your daily exercise goals including calories and steps, or set various LG Health settings.



- Health-related information provided by LG Health is designed for user convenience and cannot be used for purposes of disease prevention, treatment, diagnosis or other medical issues.
- LG Health may vary or may not be available, depending on the country and service provider. LG Health functions that are available and apps that can be added to LG Health may vary, depending on the country. This is due to differing laws and regulations.

E-mail

E-mail overview

You can register an email account to your device and then you can check and send emails from your device.



- If you use mobile data, you may be charged for data usage depending on your pricing plan. Consult with your service provider for more information.

Registering email accounts

When you use the email app for the first time, register your email account.

- 1 Tap > **Essentials** > **E-mail**.
- 2 Select an email service provider.
- 3 Enter your email address and password and then tap **Next** to register your account.
 - To manually register an email account, tap **Manual Setup** (if necessary).

Managing email accounts

To view or edit your email account settings, tap > **Settings**.

- To add an account, tap **Add account**.
- To delete an account, tap > **Remove account**.

Opening another email account

If several email accounts are registered and you want to view another account, tap and select another one from the account list.

Checking email

- 1 Tap  and select a mail box.
- 2 Select an email from the email list.
 - The email message appears.

Sending email

- 1 Tap .
- 2 Enter the recipient's email address.
- 3 Enter a subject and message.
 - To attach files, tap .
 - To access optional menu items, tap .
- 4 Tap  to send the email.



- Pinch two fingers or spread your fingers apart to adjust the font size of your email list.

HD Audio Recorder

The HD Audio Recorder allows you to configure the audio settings manually so that you can record audio based on your environment.

Recording modes

You can record a high definition audio file by selecting and configuring the desired audio mode to suit the recording environment.

Tap  > **Essentials** > **HD Audio Recorder** > .

Normal

You can record audio without extra settings.

Concert

You can record audio in a concert or other music event.

Custom

You can manually configure the desired settings to record audio.

Studio Mode

With Studio mode, you can play an audio file or music and record your voice at the same time, create a chord by recording your voice multiple times, and record your comments over the presenter's or speaker's original audio file.

- 1 Tap  > **Essentials** > **HD Audio Recorder** >  > **Custom**.
- 2 Tap .
- 3 Select an audio file to use as background music.
- 4 Tap  to record voice.
- 5 Tap  to save the recorded file.



- Background music can only be played through earphones. Make sure to plug in earphones before using this feature.

Other useful features for use of the HD Audio Recorder app

GAIN

You can adjust the sensitivity of the sound recorded by the microphone. The higher the GAIN value is set, the more sensitively the sound is recorded.

LCF

You can filter any low-pitched noises such as the low hum of the air conditioner.

The higher the LCF (Low Cut Filter) value is set, the better high-frequency noises are filtered.

LMT

It can prevent clipping of the recorded sound.

The higher the LMT (Limiter) value is set, the greater the likelihood that low frequency sounds will not get clipped.



- To change additional settings, tap **> Settings**, then customise the file type, bit depth, sampling rate and other settings.
- When you select the Concert or Custom mode with earphones connected,  appears. Tap  and then select the microphone to use.
- You can monitor the the sound quality with the connected earpiece while recording audio. While recording audio in Studio mode, sound monitoring is not supported. You can hear only the background music.

File Manager

You can view and manage files saved on your device or cloud.

- 1 Tap  **> Management > File Manager**.
- 2 Tap  and select the desired storage location.

Smart Doctor

You can use Smart Doctor to diagnose the device's condition and optimise it.

Tap  **> Management > Smart Doctor**.

LG Mobile Switch

Easily transfer data from a used device to a new device via LG Mobile Switch.

- 1 Tap  > **Management** > **LG Mobile Switch**.
You can also tap  > **Settings** > **System** > **Backup** > **LG Mobile Switch**.
- 2 Follow the on-screen instructions to select a desired method for transfer.



- Data in a Google Account will not be backed up. When you synchronise your Google Account, Google apps, Google contacts, Google Calendar, Google memo app data and apps downloaded from the Play Store are stored on the Drive app automatically.
- Fully charge the battery before transferring data to avoid unintentional powering off during the process.

App trash

You can see the list of apps deleted on the home screen. The app that was deleted within the last 24 hours can be recovered.

Tap  > **Management** > **App trash**.

For more details, refer to *App trash*.

SmartWorld

You can download a variety of games, audio content, apps and fonts provided by LG Electronics. Customise your device to suit your preferences by using Home themes and fonts.



- If you use mobile data, you may be charged for data usage depending on your pricing plan.
- This feature may not be supported depending on the area or service provider.

- 1 Tap  > **Services** > **SmartWorld**.
- 2 Tap  > **LG Account**, then sign in.
- 3 Select and download the desired content items.

Downloading SmartWorld app

If the SmartWorld app is not installed, follow these steps to download it.

- 1 Tap  > **Settings** > **System** > **Update centre** > **App Updates**.
- 2 From the list, select **SmartWorld** and tap **Download**.

Cell Broadcast

You can view real-time text broadcasts on emergency situations, such as typhoons, floods and earthquakes.

Tap  > **Services** > **Cell Broadcast**.

Google apps

You can use Google apps by setting a Google Account. The Google Account registration window appears automatically when you use a Google app for the first time. If you do not have a Google Account, create one from your device. For details on how to use an app, see the Help in the app.



- Some apps may not work depending on the area or service provider.

Chrome

A fast, simple, and secure web browser, built for the modern web.

Docs

Docs is a collaborative, word-processing tool that powers productivity. Use Docs to create, edit and work together in real-time.

Drive

Drive is a file storage and sharing app that makes it easy to find, share and collaborate on work projects from anywhere, instantly.

Duo

Make simple, high quality video calls to your friends and family on Android phones and iPhones.

Gmail

Gmail is an easy to use mail app that keeps your messages safe, makes your inbox smarter, and helps you stay organised.

Google

The Google app keeps you in the know about the things you care about. Find quick answers, explore your interests, and get a feed of stories and updates on topics that matter to you.

Maps

Going somewhere? Go with Maps, the app you can rely on for real-time GPS navigation, traffic, transit, and details about millions of places, such as reviews and popular times.

News

Comprehensive up-to-date news coverage, aggregated from sources all over the world by Google News.

Photos

Home for all your photos and videos, automatically organised so you can share and save what matters.

Play Movies & TV

Use your Google Account to rent or purchase movies. Purchase content and play it anywhere.

Play Music

Purchase music from the Play Store. Play music saved on your device.

Sheets

Sheets is a collaborative spreadsheet processing tool that powers productivity. Use Sheets to import, organise and analyse information together in real-time.

Slides

Google Slides is a collaborative presentation creation tool that powers productivity. Use Slides to organise information, present results, and make decisions together in real-time.

YouTube

Watch your favourite channels, listen to music you love, and upload videos to share with people around the world.

Keep notes

Create, edit, and share you text and photo notes with Google Account.

Assistant

Your device has the Google Assistant built-in. Find answers and get things done while on-the-go. To get started, just tap the Google Assistant key on the side of the phone or touch and hold the home button of the phone.



- The Google Assistant is not available in certain languages and countries.



04

Settings

Settings

You can customise the device settings in accordance with your preferences.

Tap  > **Settings**.



- If you enter a keyword on the search window at the top of the screen, you can conveniently run the items that need to be set.

Network & internet

Wi-Fi

You can connect to nearby devices over a Wi-Fi network.

Connecting to a Wi-Fi network

- 1 On the settings screen, tap **Network & internet** > **Wi-Fi**.
- 2 Tap  to activate it.
 - Available Wi-Fi networks appear automatically.
- 3 Select a network.
 - You may need to enter the network's Wi-Fi password.
 - The device skips this process for previously accessed Wi-Fi networks. If you do not want to automatically connect to a certain Wi-Fi network, tap the network and then tap **Forget**.

Wi-Fi network settings

On the settings screen, tap **Network & internet** > **Wi-Fi**.

- **Switch to mobile data:** If the mobile data connection function is activated but the device cannot connect to the Internet via Wi-Fi connection, the device automatically connects to the Internet via the mobile data connection.



- This feature depends on the service provider.

-  : Customise Wi-Fi network settings.


Wi-Fi Direct

You can connect your device to other devices that support Wi-Fi Direct to share data directly with them. You do not need an access point. You can connect with more than two devices by using Wi-Fi Direct.

- 1 On the settings screen, tap **Network & internet** > **Wi-Fi** >  > **Advanced Wi-Fi** > **Wi-Fi Direct**.
 - Nearby devices that support Wi-Fi Direct automatically appear.
- 2 Select a device.
 - Connection occurs when the device accepts the connection request.



- The battery may drain faster when using Wi-Fi Direct.

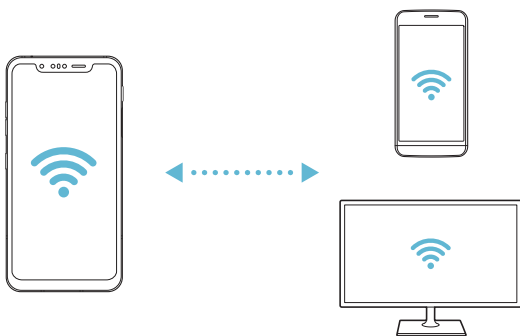

Mobile data

You can turn mobile data on and off. You can also manage mobile data usage.

Turning on mobile data

- 1 On the settings screen, tap **Network & internet** > **Mobile data**.
- 2 Tap  to activate it.

Customising mobile data settings

- 1 On the settings screen, tap **Network & internet** > **Mobile data**.
- 2 Customise the following settings:
 - **Mobile data:** Set to use data connections on mobile networks.
 - **Limit mobile data usage:** Set a limit for mobile data usage to block mobile data if the limit is reached.
 -  : Customise mobile data settings.
 - Data usage volume is measured based on the product, and the volume calculated by your mobile provider may be different.

Call

You can customise call settings, such as voice call and international call options.



- Some features may not be supported depending on the area or service provider.

- 1 On the settings screen, tap **Network & internet** > **Call**.
- 2 Customise the settings.

Tethering


USB tethering

You can connect the device to another device via USB and share mobile data.

- 1 Connect your device and other devices via USB cable.
- 2 On the settings screen, tap **Network & internet** > **Tethering** > **USB tethering** and then tap ☐ to activate it.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- When connecting to a computer, download the USB driver from www.lg-mobile.co.il and install it on the computer.
- You cannot send or receive files between your device and a computer while USB tethering is turned on. Turn off USB tethering to send or receive files.
- Operating systems that support tethering are Window XP or higher, or Linux.

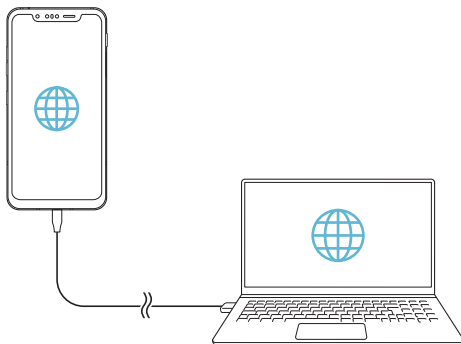


Wi-Fi hotspot

You can set the device as a wireless router so that other devices can connect to the Internet by using your device's mobile data.

- 1 On the settings screen, tap **Network & internet > Tethering > Wi-Fi hotspot** and then tap ☐ to activate it.
- 2 Tap **Set up Wi-Fi hotspot**, and enter the Wi-Fi name (SSID) and password.
- 3 Turn on Wi-Fi on the other device, and select the name of the device network on the Wi-Fi list.
- 4 Enter the network password.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- More information is available at this web site:
<http://www.android.com/tether#wifi>

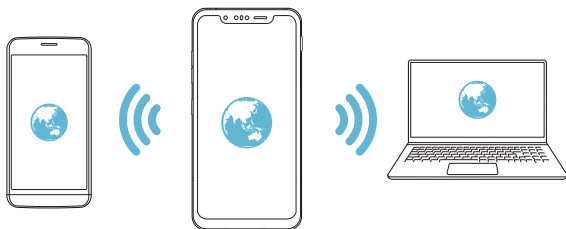

Wi-Fi hotspot turn off timer

When the Wi-Fi hotspot has not been used for a specific period of time, it is automatically disconnected. You can set the time for automatic disconnection.

Bluetooth tethering

A Bluetooth-connected device can connect to the Internet by using your device's mobile data.

- 1 On the settings screen, tap **Network & internet > Tethering > Bluetooth tethering** and then tap  to activate it.
- 2 Turn on Bluetooth on both devices and pair them.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- More information is available at this web site:
http://www.android.com/tether#Bluetooth_tethering

Help

You can view help on using tethering and hotspots.

On the settings screen, tap **Network & internet > Tethering > Help**.

Airplane mode

You can turn off the call and mobile data functions. When this mode is on, functions that do not involve data, such as games and music playback, remain available.

- 1 On the settings screen, tap **Network & internet** > **Airplane mode**.
- 2 Tap **Turn on** in the confirmation screen.

Mobile networks

You can customise the mobile networks settings.

- 1 On the settings screen, tap **Network & internet** > **Mobile networks**.
- 2 Customise the following settings:
 - **Data roaming**: Browse the web, use emails, multimedia messages and other data services overseas.
 - **Network mode**: Select a network type.
 - **Access Point Names**: View or change the access point for using mobile data services. To change the access point, select a choice from the access point list.
 - **Network operators**: Search for network operators and connect automatically to a network.

VPN

You can connect to a safe virtual network, such as an intranet. You can also manage connected virtual private networks.

Adding VPN

- 1 On the settings screen, tap **Network & internet** > **VPN**.
- 2 Tap **+**.



- This feature is available only when the screen lock is activated. If the screen lock is deactivated, a notification screen appears. Tap **Change** from the notification screen to activate the screen lock. See [Setting a screen lock](#) for details.

- 3 Enter VPN details and tap **Save**.

Configuring VPN settings

- 1 Tap a VPN from the **VPNS** list.
- 2 Enter the VPN user account details and tap **Connect**.
 - To save the account details, select the **Save account information** checkbox.

Private DNS

You can configure the Private DNS (Domain Name System) options.

- 1 On the settings screen, tap **Network & internet** > **Private DNS**.
- 2 Select the desired option and tap **Save**.

Connected devices

Bluetooth

You can connect your device to nearby devices that support Bluetooth to exchange data with them. Connect your device to a Bluetooth headset and a keyboard. This makes it easier to control the device.

Pairing with another device

- 1 On the settings screen, tap **Connected devices** > **Bluetooth**.
- 2 Tap ☐ to activate it.
 - Available devices appear automatically.
 - To refresh the device list, tap .



- Only devices set as visible are displayed on the list.

- 3 Select a device from the list.
- 4 Follow the on-screen instructions to perform authentication.



- This step is skipped for previously accessed devices.

Sending data via Bluetooth

- 1 Select a file.
 - You can send multimedia files or contacts.
- 2 Tap  **Bluetooth**.
- 3 Select a target device for the file.
 - The file is sent as soon as the target device accepts it.



- File sharing processes may differ, depending on the file.

Screen sharing

You can play the screen and sound of the device on a different device, such as a TV, that supports the Miracast function.

- 1 On the settings screen, tap **Connected devices** > **Screen sharing**.
- 2 Tap  to activate it.
- 3 Select a device from the list of nearby devices.
 - If the desired device does not appear, tap **Search** to refresh the list.
 - After connecting to the device, the device displays the screen of your device.



- Screen sharing turns off automatically if there is no sharing-compatible device in the vicinity.

NFC

You can use the device as a transportation card or credit card. You can also share data with the other device.

- 1 On the settings screen, tap **Connected devices** > **NFC**.
- 2 Tap ☐ to activate it.
 - Touch your device with other device that supports NFC to allow sharing data.



- NFC antenna may be located differently depending on the device type. See [Parts overview](#) for details about the NFC antenna area.

Android Beam

You can share files by touching the back of the device to other device. You can also share files including music, videos or contacts and open a web page or launch an app from the other device.

- 1 On the settings screen, tap **Connected devices** > **Android Beam**.
- 2 Touch the back of the device with another device.



- NFC antenna may be located differently depending on the device type. See [Parts overview](#) for details about the NFC antenna area.

Sharing panel

You can share contents from Gallery, Music and File Manager with nearby devices. Also you can share the content with specific people in apps that work with Google Direct Share.

- 1 On the settings screen, tap **Connected devices** > **Sharing panel**.
- 2 Tap ☒ to deactivate each option.
 - **Nearby devices:** You can display the nearby devices to which you can share contents on the Gallery, Music, and File Manager apps.

- **Direct share:** From an app which supports Google Direct Share, you can display an icon which allows you to share contents to specific people.

File sharing

You can send and receive files between your device and other LG devices or tablets.

- 1 On the settings screen, tap **Connected devices > File sharing**.
- 2 Customise the following settings:
 - **G8S ThinQ:** Change the device name.
 - **Save to:** Set the destination folder to save files sent from other devices in.
 - **File sharing:** Permit receipt of files sent from other devices.
 - **SmartShare Beam:** Share files with other devices via SmartShare Beam.
 - **Help:** You can view help on sharing files.

Media server

You can share media content on your device with nearby devices that support DLNA.

- 1 On the settings screen, tap **Connected devices > Media server**.
- 2 Customise the following settings:
 - **Content sharing:** Share content on your device with nearby devices.
 - **G8S ThinQ:** Set your device's name.



- Depending on the user's product, the menu names may appear differently.

- **Content to share:** Select the type of media content to share with other devices.

- **Allowed devices:** View a list of devices permitted to access content on your device.
- **Not-allowed devices:** View a list of devices not permitted to access content on your device.

Printing

You can connect your device to a Bluetooth printer and print photos or documents saved on the device.

On the settings screen, tap **Connected devices > Printing**.

- Tap **Default Print Service** to search for printers you can connect to. Or, tap **⋮ > Add printer** to manually add a printer.
- Tap **⊕ Add service** to download the printer app you want.



- This is available only when the mobile network or the Bluetooth function is turned on.
- To download the printer app in **⊕ Add service**, first log on to your Google account.

Sound

You can customise sound, vibrate and notification settings.

On the settings screen, tap **Sound** and customise the following settings:

- **Sound profile:** Change the sound mode to **Sound, Vibrate only**, or **Silent**.
- **Volume:** Adjust the sound volume for various items.
- **Ringtone:** Select a ringtone for incoming calls. Add or delete ringtones.
- **Notification sound:** Select a notification ringtone. Set music saved on the device as a notification ringtone.
- **Ring with vibration:** Set the device to vibrate and play a ringtone simultaneously.

- **Ringtone ID:** Create a ringtone for an incoming call from a particular contact.
- **Flash alert for incoming call:** Set the flash to blink according to LG ringtone.
- **Do not disturb:** Set the time, range and app type to receive notification messages. Receive notification messages only on particular days of the week.
- **Sound quality and effects:** Use the function to set the sound quality and effects while playing a song or video.
 - **Volume:** Adjust the sound volume for various items.
 - **Normalize volume:** Use the function to normalise the volumes of different sound sources.
 - **Equalizer:** Use the function to adjust the equaliser settings.
 - **DTS:X 3D Surround:** Use the function to play music or video in three-dimensional, immersive and vivid sound when earphones, speaker or other external audio devices are connected. See *DTS:X 3D Surround* for details.
- **Vibration strength:** Adjust the vibration intensity.
- **Vibration type:** You can select the type of vibration when receiving calls.
- **Vibrate on tap:** Set the device to vibrate when you tap certain items on the screen.
- **Dialing keypad sound:** Select the keypad sound effect.
- **LG Keyboard sound:** Select LG keyboard sound effect.
- **Touch sound:** Select a sound effect for tapping an item.
- **Screen lock sound:** Select a sound effect when the screen is locked or unlocked.

Display

You can customise detailed settings for each screen type.

On the settings screen, tap **Display** and customise the following settings:

- **Home screen:** Customise settings for the Home screen. See *Home screen settings* for details.
- **Wallpaper & theme:** Select a screen wallpaper, theme, icon, and AOD for your device.
- **Font:** Change the font size, bold text or type.
- **New Second Screen:** Select how the status bar and app corners will look.
- **Navigation bar:** Set the style of the navigation bar with Gestures, Gesture and Buttons, or Buttons only. you can also change the button combination when you set Buttons only as a style of the navigation bar.
- **AOD (always-on display):** Always display information, such as the date, time and notifications, even when the screen is turned off. For details, see *AOD (always-on display)*.
- **True View:** Allow you to adjust the screen brightness and colour depending on the light source.
- **Comfort view:** Set the device to reduce amount of blue light on screen to reduce eye strain.
- **Night mode:** You can apply a dimmed screen theme to avoid glare on the screen at night time.
- **Screen colour:** Adjust the colour, colour temperature, or RGB values for the desired screen.



• Tap  to reset the settings.

- **Video enhancement:** When playing back a video in full screen mode, you can change the settings for brighter and more dynamic colour display.
- **App scaling:** Adjust the screen size of apps.



Aspect ratio

- This device uses 18.7:9 aspect ratio.
 - Some downloaded apps may not support 18.7:9 aspect ratio. In this case, select the most optimal screen ratio for the app or consult the app provider for more information.
 - You can select the aspect ratio for individual apps by tapping  **Settings > Display > App scaling**. Select the desired aspect ratio from **Compatibility (16:9)**, **Standard (16.7:9)**, and **Full screen**.

- **Accent colour:** Change the point color for settings, menus, notification windows, etc.
- **Display size:** Set the items on the screen to a size easy for you to see. Some items may change position.
- **Brightness:** Use the slide bar to change the device's screen brightness.
- **Auto:** Set the device so that the screen brightness is automatically adjusted in accordance with the ambient light intensity.
- **Screen timeout:** Automatically turn off the screen when the device is left idle for a specified period of time.
- **Auto-rotate screen:** Automatically rotate the screen according to the device's orientation.
- **Screen saver:** Display a screen saver when the device is connected to the holder or charger. Select a screen saver type to display.
- **One-handed screen:** Make the screen size smaller to conveniently use the device with one hand. Drag the left/right edge to the middle and hold.

Lock screen & security

You can customise lock screen and security settings.

- 1 On the settings screen, tap **Lock screen & security**.
- 2 Customise the settings.
 - **Google Play Protect**: Scans your device daily for potentially harmful apps.
 - **Find My Device**: Remotely track the device location. You can also protect your data securely if you lost your device.
 - **Security update**: Check for software update and configure automatic installation settings.
 - **Select screen lock**: Select the desired screen lock method. See *Setting a screen lock* for details.
 - **Customize Lock screen**: Change the information displayed on the locked screen.
 - **Secure lock settings**: Change the secure lock settings.
 - **Fingerprints**: Use your fingerprint to unlock the screen or content. See *Fingerprint recognition overview* for details.
 - **Face Unlock**: Allow you to unlock the screen with your face. See *Face unlock overview* for details.
 - **Hand ID**: Allow you to unlock the screen with your hand. See *Hand ID overview* for details.
 - **Content lock**: Allow you to set a lock type (PIN or pattern) for your QuickMemo+ and Gallery files.
 - **Encryption & credentials**: Configure the settings for SD card encryption and credentials.
 - **Encrypt SD card**: Encrypt the memory card to prevent use on another device. See *Memory card encryption* for details.
 - **Secure start-up**: Protect your device with a lock when it powers on. See *Secure start-up settings* for details.
 - **Credential protection**: View the type of the storage where the security certificate will be saved.

- **Trusted credentials:** View your system's root CA certificates and user-installed CA certificates.
- **User credentials:** View and change secure certificate information stored on your device.
- **Install from storage:** Install a secure certificate from a storage.
- **Clear credentials:** Delete user-installed secure certificates and related credentials.
- **Set up SIM card lock:** Lock or unlock the USIM card, or change the password (PIN).
- **Phone administrators:** Allow privileges to restrict the control or use of the device to particular apps.
- **Trust agents:** View and use trust agents installed on the device.
- **Screen pin:** Fix the app screen so that only the currently active app can be used.
- **Usage access:** View details on usage of apps on the device.

Privacy

You can find and adjust all your privacy settings.

- 1 On the settings screen, tap **Privacy**.
- 2 Customise the settings.
 - **Permission manager:** Allows you to check and change the permissions granted to the apps.
 - **Lock screen:** Allows you to set notifications to show on the lock screen.
 - **Make passwords visible:** Enable this option to briefly show each character of the password as you type it so you can see what you've entered.

- **Autofill service from Google:** Enable this option to enter your information saved in your account such as password, address, or credit card number with a single tap. You can also disable this option, use the Google Autocomplete feature, or add a new service account.
- **Google location history:** Allows you to enable or disable Location History. When enabled, Google periodically stores and uses your phone's most recent location data in connection with your Google Account.
From the Location History screen, tap  to view and/or manage your location data.
- **Activity controls:** Select activities and information which you want Google to save.
- **Ads:** Allows you to check the advertising ID and set the personalised ads.
- **Usage and diagnostics:** Enable this option to help improve the Android experience by automatically sending diagnostic, device, and app usage data to Google.

Location

You can check how your location information is shared and configure the permission to access your location information.

On the settings screen, tap **Location** and set the desired function.

Extensions

Smart Doctor

You can use Smart Doctor to diagnose the device's condition and optimise it.

On the settings screen, tap **Extensions > Smart Doctor**.

Context Awareness

You can automatically change your device settings according to the usage pattern and location.

- 1 On the settings screen, tap **Extensions > Context Awareness**.
- 2 Activate items you want to automatically change settings for.
 - **Parking Assistant:** This option will store your parking locations. If you don't want to receive parking notifications around your home or work place, turn My places notifications off . The parking records are stored in QuickMemo+.
 - **AUTOMATED:** You can set the device to change the sound profile, Bluetooth and Wi-Fi options automatically in different environments, such as At home, Away from home, At work, and Off work. You can also set an app to open when earphones are plugged in or a Bluetooth device is connected.



- To use this feature, home or work location must be preset in My places. On the settings screen, tap **Location > My places** to set the locations.

Gaming

You can configure settings for game tools, graphics and battery saving feature.

- 1 On the settings screen, tap **Extensions > Gaming**.
- 2 Customise the following settings:

3 **Game Launcher:** Tap  to use the game launcher.

- **Game tools:** You can run the function while playing games by touching the game tools icon among the home touch buttons.
- **Game graphics:** Adjust the game graphics.



- When you change the resolutions on some games, the screen display feature may not work properly.
- This function may not be available in certain game apps.

- **Break time:** Reduce the screen brightness and performance whenever you leave the game running for more than 5 minutes.

Screen recording

You can configure the settings for screen recording.

- 1 On the settings screen, tap **Extensions > Screen recording**.
- 2 Customise the following settings:
 - **Include yourself in video by:** Select one from the following options and tap **Save**.
 - **Image:** Includes your profile image in video when recording. After selecting this, tap  and select a profile image. Then, adjust the size of the image using the slide bar.
 - **Front camera:** Includes yourself recorded using the front camera while recording the screen.
 - **Never:** Nothing is included.
 - **Audio source:** Choose the audio source between **Mic** and **Contents**.
 - **Video resolution:** Select the resolution for screen recording.

To record the screen

- 1 Drag the status bar downward to open the Quick access icons list.
- 2 (If necessary, swipe left over the Quick access icons area.) Tap .
- 3 Read the disclaimer and tap **Start**. It will start recording in 3 seconds.

- 4 To stop recording, tap  located at the top right of the screen. The recorded video will be saved in Gallery.



- If you violate another person's rights such as portrait right or intellectual property right or defame another person's reputation by using the functions provided for the screen recording service, you may be held liable to civil, criminal or administrative charges in accordance with the relevant laws. LG Electronics is not legally responsible in any way for the acts of users.

Dual App

You can install duplicate messenger apps on the product and use two accounts at the same time.

- 1 On the settings screen, tap **Extensions** > **Dual App**.
- 2 After reading the disclaimer, tap **Confirm**.
- 3 In the list of available apps, tap **Install** to install a copy of a desired app and follow the on-screen instructions.
 - On the screen, the list of available dual apps is shown. During installation, app icons are generated on the home screen.

App suggestion

You can quickly access apps that you may need at the moment on the Overview screen.

Floating Bar

You can activate frequently used features including shortcuts, screenshots, Music, Contacts and more by touching and then swiping the Floating Bar on the screen. See [*Floating Bar overview*](#) for details.

Shortcuts

You can use buttons such as the Lock/Power, Volume, and Google Assistant to run certain apps or functions right away.

- 1 On the settings screen, tap **Extensions > Shortcuts**.
- 2 Customise the following settings.
 - **View notification panel:** Swipe down/up on the fingerprint sensor for the notification panel.
 - **Open Camera:** Press Power key twice to open Camera.
 - **Open Capture+:** Press Volume Up key twice to open **Capture+** when the screen is locked or off.
 - **Open Camera:** Press Volume Down key twice to open **Camera** when the screen is locked or off.
 - **Open Google Assistant:** Press the Google Assistant key on the side of the phone.
 - **Talk to Google Assistant:** Press and hold the Google Assistant key to quickly talk to your Assistant.



- Google Assistant does not support certain languages.

Air Motion

Enable this option to recognise the location and shape of your hand to launch certain features or apps without touching the screen.

Show your hand to the front camera and then perform hand gestures to launch desired features or apps.

See [Air Motion](#) for details.

KnockON

Double-tap the screen to turn the screen on or off.

See [KnockON](#) for details.

Increase touch sensitivity

You can set the touch screen more sensitive to your touch. Recommended to turn this feature on when using a screen protector.

On the settings screen, tap **Extensions > Increase touch sensitivity**.

Digital Wellbeing & parental controls

You can view the product use time and set the timer for each app. Also, you can manage the mobile phone use time by using the Wind Down and Focus Mode.

Select **Digital Wellbeing & parental controls** on the settings screen and set the desired function.

Apps & notifications

You can check a list of installed apps, and configure the settings for notifications, app permissions, and more.

- 1 On the settings screen, tap **Apps & notifications**.
- 2 Customise the settings.

Battery

You can view the current battery information or turn on power-saving mode.

- 1 On the settings screen, tap **Battery**.
- 2 Customise the following settings:
 - **Battery usage**: View the battery usage details.
 - **Battery percentage on status bar**: Display the remaining battery level as a percentage on the status bar.

- **Optimized charging:** Automatically adjust charging speed according to how you charge to reduce heat and extend lifespan of battery.
- **Adaptive battery:** Allow you to save the battery by stopping apps running in the background.
- **Background restrictions:** Enable this option to restrict background apps to save the battery while using the device. Restricted apps for power saving may not work properly or may not send you notifications.
- **Battery saver:** Reduce battery consumption by cutting down some device settings, such as the display brightness, speed and vibration intensity.
- **Power saving exclusions:** Select apps to use without any functional limitation while in power saving or battery optimisation mode.

Storage

You can view and manage internal storage on the device or storage space of the memory card.

- 1 On the settings screen, tap **Storage**.
- 2 Customise the following settings:
 - **Internal storage:** View the total storage space and free space in the device's internal storage. View a list of apps in use and the storage capacity for each app.
 - **SD card:** View the total storage space and free space in the memory card. This option appears only when a memory card is inserted. To unmount the memory card, tap .

Accounts

You can add users to share your device and register a cloud account.

- 1 On the settings screen, tap **Accounts**.
- 2 Customise the settings.

Google

You can use Google settings to manage your Google apps and account settings.

On the settings screen, tap **Google**.

System

Update centre

You can check and install the latest version of the app or software provided by LG.

- 1 On the settings screen, tap **System > Update centre**.
- 2 Customise the following settings:
 - **App Updates:** Check if an app update is available. If available, you can install the update.
 - **Software Update:** Check if a software update is available. If available, you can install the update.

Language & keyboard

You can customise language and keyboard settings for your device.

- 1 On the settings screen, tap **System > Language & keyboard**.
- 2 Customise the following settings:
 - **Language:** Select a language to apply for the device.

- **Manage keyboards:** You can change the product's basic keyboard setting, set the use environments for LG Keyboard or other installed keyboards, and set the speech recognition function for Google Voice input. Also, you can set whether to display the keyboard button in the navigation bar on the home screen so that you can quickly switch to another keyboard.
- **Physical keyboard:** Select to use the physical keyboard, or check keyboard shortcut keys.
- **Autofill service:** Enable this option to enter your information saved in your account such as password, address, or credit card number with a single tap. You can also disable this option, use Google Autocomplete, or add a new service account.
- **Text-to-speech output:** Configure the settings for text-to-speech output.
- **Pointer speed:** Adjust the pointer speed of a mouse or trackpad.
- **Reverse mouse buttons:** Reverse the right mouse button to perform primary direct-manipulation actions.

Date & time

You can customise date and time settings for your device.

- 1 On the settings screen, tap **System > Date & time**.
- 2 Customise the settings.

Memory

You can view the average amount of memory usage over a certain period of time and the memory occupied by an app.

- 1 On the settings screen, tap **System > Memory**.
- 2 Tap ▼ to set a time slot to retrieve data.

Backup

You can back up data saved on your device to another device or account.

- 1 On the settings screen, tap **System > Backup**.
- 2 Customise the following settings:
 - **LG Mobile Switch:** Allow you to transfer data from an old LG device to your new LG device. See *LG Mobile Switch* for details.
 - **Backup & restore:** Back up your device data or restore data to your device from a backup.



- Resetting your device may delete backup files saved in storage. Make sure to copy and store the important backup files to your PC.

- **Google backup:** Change Google drive backup settings. You can also check the backup account currently used, or add a new backup account.

Restart & reset

You can reset the device including network and app settings.

- 1 On the settings screen, tap **System > Restart & reset**.
- 2 Customise the following settings:
 - **Auto-restart:** Automatically restart and optimise the phone at a set time. Tap ☐ to activate this feature. The device automatically restarts at a set time and optimise itself. Select a day and time for restart.



- You can set the device to restart itself once a week. The device automatically restarts in an hour from the preset time.
- Once the device restarts, notifications and badges are erased. Save important data before the preset time.
- The Auto-restart feature is not activated in the following situations:
When the screen is turned on, when the device is in use, when the battery level is 30% or less, when the USIM card is locked, or when the device lock is activated while turning on the device.
 - Depending on the telecommunication provider, the auto-restart function may or may not be available.

- **Network settings reset:** Reset Wi-Fi, Bluetooth and other network settings.
- **Reset app preferences:** Reset the settings for an app. The data saved in the app will not be deleted.
- **Factory data reset:** Reset all settings for the device and delete data.



- Resetting and resetting your device deletes all data on it. Enter your device name, Google Account and other initial information again.
- After data initialization, the data cannot be restored.

About phone

You can view information about your device, such as the name, status, software details and legal information.

On the settings screen, tap **System > About phone** and view information.

Regulatory & safety

You can view regulatory marks and related information on your device.

On the settings screen, tap **System > Regulatory & safety**.

Accessibility

You can manage accessibility plug-ins installed on your device.

- 1 On the settings screen, tap **Accessibility**.
- 2 Customise the following settings:
 - **Vision > TalkBack**: Set the device to notify screen status or actions via voice.
 - **Vision > Voice notifications**: Set the device to read the caller information via voice.
 - **Vision > Font**: Change the font size, bold text or type.
 - **Vision > Display size**: Set the items on the screen to a size easy for you to see. Some items may change position.
 - **Vision > Touch zoom**: Zoom in or out by tapping the screen three times.
 - **Vision > Window zoom**: Zoom in or out within a window and invert the colour.
 - **Vision > Large mouse pointer**: Magnify the mouse pointer.
 - **Vision > High contrast screen**: Turn the background colour into black for a high contrast screen.
 - **Vision > Screen colour inversion**: Increase the display colour contrast for people with low vision.
 - **Vision > Screen colour adjustment**: Adjust the display colour.
 - **Vision > Monochrome**: Switch the screen to grayscale mode.
 - **Vision > End call with the Power key**: End a call by pressing the Power/Lock key.
 - **Hearing > Captions**: Turn on the subtitle service when playing videos for the hearing impaired.
 - **Hearing > Flash alerts**: Set the device to notify you with a blinking light for incoming calls, messages and alarms.
 - **Hearing > Mute all sounds**: Mute all sounds and lower volume on the receiver.

- **Hearing > Audio channel:** Select the audio type.
- **Hearing > Sound balance:** Adjust the audio output balance. Use the slide bar to change the balance.
- **Motor & cognition > Touch assistant:** Turn on the touch board to make buttons and gestures easier to use.
- **Motor & cognition > Touch input:** Enter text by touching and holding the screen or modify it by simply touching the screen.
- **Motor & cognition > Physical keyboard:** Customise the keyboard settings.
- **Motor & cognition > Auto mouse click:** Automatically click the mouse pointer in case of no movement.
- **Motor & cognition > Touch and hold for calls:** Answer or decline calls by touching and holding the call button instead of dragging it.
- **Motor & cognition > Screen timeout:** Turn off the screen automatically when the device is left idle for a specified period of time.
- **Motor & cognition > Touch control areas:** Limit the touch area so that only a particular portion of the screen can be controlled by touch input.
- **Accessibility features shortcut:** Quickly access a frequently used function by pressing the Power key and the Volume Up key simultaneously.
- **Auto-rotate screen:** Automatically change the screen orientation according to the physical position of the device.
- **Select to Speak:** Allow you to tap items to hear spoken feedback.
- **Switch Access:** Create key combinations to control your device.



05

Appendix

LG Language Settings

Select a language to use on your device.

- Tap  > **Settings** > **System** > **Language & keyboard** > **Language** > **Add language**, and select a language.
 - Touch and hold  and drag it to the top of the language list to set it as a default language.

LG Bridge

LG Bridge overview

LG Bridge is an app that helps you manage the photos, music, videos and documents saved on your LG smartphone from your computer conveniently. You can back up contacts, photos and more to the computer or update the device software.



- See LG Bridge help for details.
- The supported features may vary depending on the device.
- LG USB driver is a necessary program to connect your LG smartphone with the computer and is installed when you install LG Bridge.

LG Bridge functions

- Manage the files on the device from a computer via Wi-Fi connection or mobile data connection.
- Back up data from the device to a computer or restore data from a computer to the device via USB cable connection.
- Update the device software from a computer via USB cable connection.

Installing LG Bridge on a computer

- 1 Go to www.lg-mobile.co.il from your computer.
- 2 Select your region.
- 3 Click **Support > Software & Firmware**.
- 4 Enter the name of your device.
OR
Select by the Product Category.
- 5 Go to **PC Sync > LG Bridge** to download the setup file.
 - Go to **Details** to view the minimum requirements for installing LG Bridge.

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp>, select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable during the upgrade may seriously damage your mobile phone.



- LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting a USB cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

To perform the phone software update,

Settings > System > Update centre > Software Update > Check now for update.



- Your personal data from internal phone storage—including information about your Google Account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.
- This feature depends on the area or service provider.

Anti-Theft Guide

Set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google Account or screen lock information can use the device.

All you need to make sure your device is protected is:

- Set a screen lock: If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- Add your Google Account on your device: If your device is wiped but you have your Google Account on it, the device can't finish the setup process until your Google Account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google Account password if you need to do a factory reset. This ensures that you or someone you trust is doing the reset.



- Do not forget your Google Account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

Regulatory information (Regulation ID number, E-labeling, etc.)

For regulatory details, go to **Settings > System > Regulatory & safety**.

Trademarks

- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.



- Copyright ©2020 LG Electronics Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.
- G8S ThinQ is a trademark of LG Electronics Inc.
- Google, Google Maps, Gmail, YouTube, Google Duo, Google Play, Android, Chrome, Google Photos, Google Play Protect, Google Calendar, Google Docs, Google Drive, Google Sheets and other related marks and logos are trademarks of Google LLC.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.




Laser safety statement

Caution!

This product employs a Laser system. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorised service centre.

Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure or make direct contact with the laser.

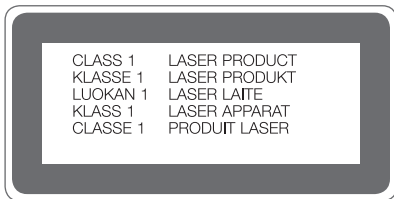

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LM-G810EA** product is in compliance with the essential requirements and other relevant provisions of Directive **2014/53/EU**.

A copy of the Declaration of Conformity can be found at
<http://www.lg.com/global/declaration>

More information

Tempered glass parts

Tempered glass parts of this device are not permanent and they may wear out over time.

- If you drop your device on a hard surface or subject it to severe impact, the tempered glass may be damaged.
If this happens, stop using your device immediately and contact an LG Customer Service Centre.
- You can purchase protective cases to protect your device from damage on the market.

Note that these protective cases are not covered under the warranty service provided by LG Electronics and safety is not guaranteed.

Aspect ratio

This device uses 18.7:9 aspect ratio.

- Some downloaded apps may not support 18.7:9 aspect ratio.
In this case, select the most optimal screen ratio for the app or consult the app provider for more information.

Guide to data transfers

- For the data that can be exchange between LG devices or between the LG device and a third party device, see the following table.

Type	Item details	LG device → LG device	Third party Android device → LG device	iOS device → LG device
Personal data	Contacts, messages, dial logs, calendar, voice recordings	○	○	○
	Memos	○	X	○
	Alarms	○	X	X
Media data	Photos, videos, songs, documents	○	○	○
Screen settings	Home screen settings (folders and widgets)	○	X	X
	Lock screen settings (screen lock settings excluded)	○	X	X
Apps	Downloaded apps	○	○	-
	Personal data of the downloaded app	○	X	
Others	Public certificate	○	○	X
	Settings (Wi-Fi, Bluetooth, Calls, sound & notification, accessibility, battery)	○	X	X

- 
- Some data may not be transmitted depending on the software version, app version, operating system, manufacturer or service provider's policy.

Disposal of your old appliance



1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. Waste electrical and electronic products should be delivered to collection points established by the municipalities or you should request your seller to take your waste electrical and electronic product when you buy a new model of the same product and when the seller delivers it to your address.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. The product bearing this symbol may include hazardous substances. Hazardous substances in the products may cause environmental pollution and injury/death.
4. EEE Complies with Directive.
5. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. (www.lg.com/global/recycling)

Disposal of waste batteries/accumulators



1. This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
2. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
4. For more detailed information about disposal of your old batteries/accumulators, please contact your city office, waste disposal service or the shop where you purchased the product.

FAQ

This chapter lists some problems you might encounter when using your device. Some problems require you to call your service provider, but most are easy to fix yourself.

SIM card error

Make sure the SIM card is correctly inserted.

No network connection or dropped network

Signal is weak. Move to a window or an open area.

You are outside the carrier network area. Move and check the network.

Calls are not available

New network not authorised.

Make sure you have not set call barring for the incoming number.

Make sure you have not set call barring for the number you are dialling.

Device cannot be turned on

When the battery is completely discharged, your device will not turn on.

Fully charge the battery before turning on the device.

Charging error

Make sure device is charging at a normal temperature.

Check the charger and its connection to the device.

Use only in-box accessories which are authorised by LG.

The battery depletes faster than when first purchased

When you expose the device or the battery to very cold or hot temperatures, the battery life may be reduced.

Battery consumption will increase when you use certain features or apps, such as GPS, games or the Internet.

The battery is consumable and the battery life will get shorter over time.

Error messages appear when launching the camera

Charge the battery.

Free some memory by transferring files to a computer or deleting files from your device.

Restart the device.

If you are still having trouble with the camera app after trying these tips, contact a LG Electronics Service Center.

The photo quality is poor

The quality of your photos may vary, depending on the surroundings and the photography techniques you use.

If you take photos and videos, standard angle quality is better than wide-angle.

If you take photos in dark areas, at night or indoors, image noise may occur or images may be out of focus.

If you have any problems, reset the options.

The touch screen responds slowly or incorrectly

If you attach a screen protector or optional accessories to the touch screen, the touch screen may not function properly.

If you are wearing gloves, if your hands are not clean while touching the touch screen or if you tap the screen with sharp objects or your fingertips, the touch screen may malfunction.

The touch screen may malfunction in humid conditions or when exposed to water.

Restart your device to clear any temporary software bugs.

If the touch screen is scratched or damaged, visit a LG Electronics Service Center.

Hangs or freezes

Restart the device

- If your device freezes or hangs, you may need to close apps or turn the device off and then on again.

Perform a boot-up

- A soft reset may be used to reset the device if the screen freezes, or the buttons, touch screen or device are no longer responding.
- To perform a soft reset of your device, simply press and hold the Volume Down and Power keys until the device restarts.

Reset the device

- If the methods above do not solve your problem, perform a factory data reset.
- On the settings screen, tap **System > Restart & reset > Factory data reset**.
 - This method resets all settings for the device and deletes data. Before performing the factory data reset, remember to make back-up copies of all important data stored in the device.
 - If you registered a Google Account to the device, you must sign in to the same Google Account after resetting the device.

Bluetooth device is not located

Make sure the Bluetooth wireless feature is activated on your device.

Make sure the Bluetooth wireless feature is activated on the device you wish to connect to.

Make sure your device and the other Bluetooth device are within the maximum Bluetooth range (10 m).

If the tips above do not solve your problem, contact a LG Electronics Service Center.

A connection is not established when you connect the device to a computer

Make sure the USB cable you are using is compatible with your device.

Make sure you have the proper driver installed and updated on your computer.

Downloaded application causes a lot of errors

Application has problems.

Remove and reinstall the application.

