

USER GUIDE
LM-K410ZMW

Copyright ©2021 LG Electronics Inc. All rights reserved.

אודות מדריך למשתמש זה

תודה שבחרת מוצר זה של LG. קרא בעיון מדריך למשתמש זה לפני השימוש במכשיר בפעם הראשונה, כדי להבטיח שימוש בטוח והולם.

- השתמש תמיד באביזרים מקוריים של LG. הפריטים שסופקו מיועדים למכשיר זה בלבד וייתכן שהם לא תואמים למכשירים אחרים.
- התיאורים מבוססים על הגדרות ברירת המחדל של המכשיר.
- יישומי ברירת המחדל במכשיר כפופים לעדכונים, וייתכן שהתמיכה ביישומים אלה תופסק ללא כל הודעה מראש. אם יש לך שאלות כלשהן על יישום שסופק עם המכשיר, פנה למרכז השירות של LG. עבור יישומים שהותקנו על-ידי המשתמש, פנה לספק השירות הרלוונטי.
- שינוי מערכת ההפעלה של המכשיר או התקנת תוכנה ממקורות לא רשמיים עלול לגרום נזק למכשיר ולגרום להרס נתונים או לאובדן נתונים. פעולות אלה יפרו את הסכם הרישיון של LG ויבטלו את האחריות שלך.
- תכנים ואיורים מסוימים עשויים להיראות שונים מאלה שבמכשיר, בהתאם לאזור, לספק השירות, לגרסת התוכנה ולגרסת מערכת ההפעלה, והם כפופים לשינוי ללא הודעה מוקדמת.
- תוכנות, שמע, טפטים, תמונות ופריטי מדיה אחרים שסופקו יחד עם המכשיר שלך מורשים לשימוש מוגבל. אם תחלץ חומר זה ותשתמש בו למטרות מסחריות או אחרות, אתה עלול להפר חוקי זכויות יוצרים. כמשתמש, אתה נושא באחריות מלאה לשימוש לא חוקי במדיה.
- ייתכן שיחולו חיובים נוספים תמורת שירותי נתונים, כגון שליחת הודעות, העלאה, הורדה, סנכרון אוטומטי ושירותי מיקום. כדי למנוע חיובים נוספים, בחר תוכנית נתונים מתאימה לצרכיך. פנה אל ספק השירות לקבלת פרטים נוספים.

הודעות מנחות

אזהרה: מצבים שעלולים לגרום לפציעה של המשתמש ושל גורמי צד שלישי.



זהירות: מצבים שעלולים לגרום לפציעה קלה או לנזק למכשיר.



הערה: הערות או מידע נוסף.



תוכן העניינים

6 הנחיות לשימוש בטוח ויעיל

01

תכונות הניתנות להתאמה אישית

תכונות המצלמה	14
תכונות גלריה	17
איכות הקול ואפקטים	20
Google Assistant	20
זיהוי טביעת אצבע	21
התכונה 'ריבוי משימות'	24

02

פונקציות בסיסיות

רכיבי מוצרים ואביזרים	26
סקירה כללית של החלקים	27
הדלקה או כיבוי	30
התקנת כרטיס ה-SIM	31
הכנסת כרטיס הזיכרון	33
הוצאת כרטיס הזיכרון	34
סוללה	35
מסך המגע	37
מסך ראשי	40
נעילת מסך	48
הצפנת כרטיס זיכרון	53
יצירת צילומי מסך	54
הזנת טקסט	54
שיתוף תוכן	59

יישומים שימושיים

התקנה והסרת התקנה של יישומים	62
יישום סל המיחזור	63
קיצורי דרך של יישומים	64
טלפון	65
Messages	69
מצלמה	70
גלריה	79
אנשי קשר	83
QuickMemo+	85
שעון	88
נגן מוסיקה	89
מחשבון	90
LG ThinQ	90
מפעיל המשחק	91
הקלטה קולית	91
רדיו FM	92
מרכז עדכונים	92
Smart Doctor	92
LG Mobile Switch	92
יישום סל המיחזור	93
SmartWorld	93
שירות התראות חירום	94
יישומי Google	94

הגדרות

הגדרות	98
רשת ואינטרנט	98
התקנים מחוברים	104
צליל	107
התראות	108
תצוגה	108
טפט וערכת נושא	109
מסך הנעילה ואבטחה	109
פרטיות	111
מיקום	112
הרחבות	112
יישומים	114
סוללה	114
אחסון	115
חשבונות	115
שימוש חכם בדיגיטל ובקרת הורים	115
חיפוש	116
מערכת	116
נגישות	119

הגדרות השפה של LG	123
LG Bridge	123
עדכון תוכנת הטלפון	124
מדריך למניעת גניבה	126
פרטי הודעה על תוכנת	127
קוד פתוח	
מידע בנושאי תקינה	127
(מספר הזיהוי של התקן, תיוג	
אלקטרוני וכולי)	
סימנים מסחריים	128
הצהרת תאימות	129
מידע נוסף	129
שאלות נפוצות	131

הנחיות לשימוש בטוח ויעיל

הקפד לקרוא הנחיות פשוטות אלה. אי עמידה בהנחיות אלו עלולה להיות מסוכנת או בלתי חוקית.

למקרה של תקלה, המכשיר שלך מכיל כלי תוכנה שיאסוף יומן תקלות. כלי זה אוסף רק נתונים ספציפיים לתקלה, כגון עוצמת אות, מיקום מזהה התא בעת ניתוק פתאומי של השיחה ויישומים שנטענו. היומן משמש רק לסיוע בזיהוי הגורם לתקלה. יומנים אלה מוצפנים, ורק מרכז תיקונים מוסמך של LG יוכל לגשת אליהם במקרה שתצטרך למסור את המכשיר לתיקון.

חשיפה לאנרגיית תדר רדיו

מידע על חשיפה לגלי רדיו ושיעור ספיגה סגולית (SAR).

מכשיר זה תוכנן לעמוד בדרישות הבטיחות הרלוונטיות לחשיפה לגלי רדיו. דרישות אלו מבוססות על קווים מנחים מדעיים, ואלה כוללים שולי בטיחות המיועדים להבטיח את בטיחותם של כל בני האדם, בלא קשר לגילם או למצב בריאותם.

- הנחיות החשיפה לגלי רדיו משתמשות ביחידת מידה הנקראת "שיעור ספיגה סגולית" (SAR). בדיקות SAR מבוצעות באמצעות שיטות מתוקננות, כאשר המכשיר משדר ברמת העוצמה המרבית המאושרת עבורו בכל תחומי התדרים שבשימוש.
- אף כי עשויים להיות הבדלים בין רמות ה-SAR של דגמי מכשירים שונים של LG, כולם מתוכננים לעמוד בהנחיות המתאימות של חשיפה לגלי רדיו.
- מגבלת ה-SAR המומלצת על-ידי הוועדה הבין-לאומית להגנה מפני קרינה בלתי מייננת (ICNIRP) היא ממוצע של 2 ואט/ק"ג על כל 10 גר' של רקמה.
- ערך ה-SAR הגבוה ביותר עבור דגם זה שנמדד לשימוש באוזן הוא 0.369 ואט/ק"ג (10 גר'), וכאשר הוא נישא על הגוף, ערך זה עומד על 1.455 ואט/ק"ג (10 גר').
- מכשיר זה עומד בהנחיות החשיפה ל-RF כשמשמשים בו בתנוחת השימוש הרגילה ליד האוזן או כשהוא ממוקם לפחות 5 מ"מ מהגוף. כאשר נעשה שימוש בנרתיק נשיאה או בתפס או מנשא לחגורה, אסור שתהיה בהם מתכת כלשהי, והמרחק בין המכשיר לגוף צריך להיות לפחות 5 מ"מ. כדי לשדר קובצי נתונים או הודעות, מכשיר זה מחייב חיבור איכותי לרשת. במקרים מסוימים עלול שידור קבצי נתונים או הודעות להיות מושהה עד שחיבור כזה יהיה זמין. הקפד על שמירת הוראות המרחק המינימלי המוזכרות לעיל עד לסיום השידור.

טיפול במוצר ותחזוקה

- השתמש רק באבזרים הכלולים באריזה, שאושרו על ידי LG. LG אינה מספקת אחריות לכל נזק או כשל שיגרמו כתוצאה משימוש באבזרים של חברות צד שלישי.
- חלק מהתוכן והאיוורים עשויים להיראות שונה מהמכשיר שברשותך, והם כפופים לשינוי ללא הודעה מראש.
- אין לפרק יחידה זו. כאשר נדרש תיקון, פנה לטכנאי שירות מוסמך.
- תיקונים במסגרת האחריות, לפי שיקול דעתה של LG, עשויים לכלול חלקים או לוחות חלופיים, חדשים או מחודשים, ובלבד שהם מצוידים בפונקציונליות זהה לזו של החלקים המוחלפים.
- אין לקרב את המכשיר למכשירים חשמליים כגון טלוויזיות, מכשירי רדיו ומחשבים אישיים.
- יש לשמור את היחידה הרחק ממקורות חום כדוגמת רדיאטורים או תנורי בישול.
- אין להפיל את היחידה.
- אין לאפשר זעזוע מכני או חבטה.
- יש לכבות את המכשיר בכל מקום שבו נדרש הדבר על-ידי תקנות מיוחדות. לדוגמה, אין להשתמש במכשיר בבתי חולים, שכן הפעלתו עלולה להשפיע על פעולת מכשור רפואי רגיש.
- אין לאחוז במכשיר בידיים רטובות בזמן טעינתו. אחיזה במצב כזה עלולה לגרום להתחשמלות ולהסב נזק כבד למכשיר.
- אין לטעון את הטלפון ליד חומר דליק, מכיוון שהמכשיר עלול להתחמם ולעלות באש.
- יש להשתמש במטלית יבשה לניקוי חלקו החיצוני של המכשיר (אין להשתמש בחומרים ממסים כגון בנזן, מדלל או אלכוהול).
- אין לטעון את המכשיר כאשר הוא נמצא על-גבי מצעים או ריפוד.
- יש לטעון את המכשיר באזור מאוורר היטב.
- אין לחשוף יחידה זו לכמות מוגזמת של עשן או אבק.
- אין להחזיק את המכשיר בסמוך לכרטיסי אשראי או כרטיסי נסיעה; הנתונים בפס המגנטי עלולים להיפגם.
- אין להקיש על המסך באמצעות חפצים חדים, שכן הדבר עלול לגרום נזק למכשיר.
- אין לחשוף את המכשיר לנוזלים או ללחות.

- יש לנקוט זהירות בשימוש באביזרים, כמו אוזניות. אין לגעת באנטנה שלא לצורך.
- אם זכוכית המכשיר שבורה או סדוקה, אל תיגע בה או תנסה להסיר אותה ואל תשתמש במכשיר. האחריות אינה מכסה נזקים שנגרמו לתצוגת הזכוכית כתוצאה מפגיעה ושימוש לרעה.
- המכשיר שלך הוא מכשיר אלקטרוני המייצר חום במהלך הפעלה רגילה. בהיעדר אוורור הולם, מגע ישיר וממושך מאוד של העור עלול לגרום לאי-נוחות או לכוויות קלות. לפיכך, יש לנקוט זהירות בהחזקת המכשיר במהלך ההפעלה או מיד אחריה.
- אם המכשיר נרטב, נתק אותו מיד והנח לו להתייבש לגמרי. אל תנסה להאיץ את תהליך הייבוש בעזרת מקור חום חיצוני, כמו תנור, מיקרוגל או מייבש שיער.
- הנזלים שחדרו למכשיר ישנו את צבע תווית המוצר שבתוך המכשיר. כתב האחריות אינו מכסה נזק למכשיר כתוצאה מחשיפה לנזלים.
- מכשיר נייד זקוק לזרימת אוויר תקינה כדי לפזר את החום. מגע ישיר עם העור וזרימת אוויר לא תקינה סביב המכשיר עלולים לגרום לחום-יתר של המכשיר. חייב להיות מרחק של לפחות סנטימטר אחד בין המכשיר לבין גוף המשתמש.
- מנע חדירת אבק של חומרים זרים כלשהם לכניסת המטען/כבל USB. הוא עלול לגרום להתחממות או לשרפה.
- הימנע מחשיפת ההתקן ללחץ אוויר נמוך ברום גבוה.
- אסור לחשוף את ההתקן ללחץ אוויר נמוך מאוד. אחרת, הוא עלול לגרום לפיצוץ הסוללה או למזילת נזלים או גזים דליקים.
- הקפד להרחיק את המוצר מנזלים. אין להשתמש במוצר או להטעין אותו כשהוא רטוב. אם המוצר נרטב, הצבע של המחווה המציין נזק שנגרם ממגע עם נזלים משתנה. לתשומת לבך, שינוי בצבע המחווה יגרום לכך שלא תוכל ליהנות משירותי תיקון חिנם הכלולים באחריות.

הפעלה יעילה של המכשיר

מכשירים אלקטרוניים

- כל המכשירים עלולים לספוג הפרעות שישפיעו לרעה על ביצועיהם.
- אין להשתמש במכשיר בסמוך לציוד רפואי ללא קבלת רשות. בדוק עם הרופא אם תפעול המכשיר עלול להפריע לתפעולו של ההתקן הרפואי.
- יצרנים של קוצבי לב ממליצים להשאיר רווח של 15 ס"מ בין קוצב הלב לבין התקנים אחרים כדי למנוע הפרעה אפשרית לקוצב הלב.
- התקן זה עשוי להפיק אור חזק או מהבהב.
- מכשירים עלולים להפריע לעזרי שמיעה מסוימים.
- הפרעה משנית עלולה להשפיע על מכשירי טלוויזיה, מכשירי רדיו, מחשבים וכולי.
- השתמש במכשיר שלך בטמפרטורות שבין 0°C ו- 40°C , אם ניתן. חשיפת המכשיר לטמפרטורות נמוכות או גבוהות באופן קיצוני עלולה לגרום נזק, תקלות ואפילו פיצוץ.

בטיחות בדרכים

- בדוק את החוקים והתקנות לגבי שימוש במכשירים באזורים שבהם אתה נהג.
- אין להחזיק את המכשיר ביד בזמן נהיגה.
- יש להפנות את מלוא תשומת הלב לנהיגה.
- רד לשול הדרך וחנה לפני ביצוע שיחה או מענה לשיחה, בהתאם לתנאי הדרך.
- אנרגיית תדר רדיו עשויה להשפיע על מערכות אלקטרוניות מסוימות בכלי רכב, כדוגמת מערכות סטריאו וציוד בטיחות.
- אם המכונית מצוידת בכרית אוויר מתנפחת, אין לחסום אותה על-ידי התקנה של ציוד אלחוטי נישא. הדבר עלול לגרום לכשל של הכרית או לפציעה חמורה עקב ביצועים לא נאותים שלה.
- אם אתה מאזין למוסיקה בעת תנועה, ודא שהעוצמה היא ברמה סבירה, כך שתמשיך להיות מודע לסביבתך. הדבר חשוב במיוחד בקרבת כבישים.

מנעו נזק לשמיעתכם

כדי למנוע נזק אפשרי לשמיעה, אל תאזין בעוצמות קול גבוהות לאורך זמן.



חשיפה לעוצמות קול גבוהות במשך פרקי זמן ארוכים עלולה להזיק לשמיעה. לכן אנו ממליצים שלא תדליק או תכבה את המכשיר סמוך לאוזןך. מומלץ גם להגדיר את עוצמת הקול של המוסיקה והשיחה לרמה סבירה.

- כאשר אתה משתמש באוזניות, הנמך את עוצמת הקול אם אינך מצליח לשמוע את האנשים שבסביבתך מדברים, או אם האדם שלצדך יכול לשמוע את מה שאתה שומע באוזניות.

- עוצמת קול מופרזת מאוזניות פנימיות ואוזניות חיצוניות עלולה לגרום לאובדן שמיעה.



חלקי זכוכית

חלקים מסוימים של המכשיר עשויים מזכוכית. זכוכית זו עלולה להישבר אם המכשיר ייפול על משטח קשה או יקבל מכה חזקה. אם הזכוכית נשברת, אל תנסה לגעת בה או להסיר אותה. יש להפסיק להשתמש במכשיר עד להחלפת הזכוכית על-ידי ספק שירות מורשה.

סביבה שבה מבוצעות עבודות עם חומרי נפץ

אל תשתמש במכשיר באזורים שבהם מתבצעות פעולות פיצוץ. שים לב להגבלות ועמוד בכל התקנות או הכללים.

סביבה שבה קיימת סבירות לפיצוץ

- אין להשתמש במכשיר באזורי תדלוק.
- אין להשתמש בו בסמוך לדלק או לכימיקלים.
- אין להוביל או לאחסן גז דליק, נוזלים דליקים או חומרי נפץ בתא הרכב המכיל את המכשיר או את אביזריו.

כלי טיס

- התקנים אלחוטיים עלולים לגרום להפרעה במטוס.
- יש לכבות את המכשיר לפני העלייה למטוס.
- אין להשתמש בו על הקרקע ללא קבלת רשות מאנשי הצוות.

הנחיות לשימוש בטוח ויעיל

ילדים

יש לשמור על המכשיר במקום בטוח, מחוץ להישג ידם של ילדים קטנים. המכשיר כולל חלקים זעירים העלולים להוות סכנת חנק אם ינותקו מהטלפון.

שיחות חירום

רק רשתות סלולריות מסוימות מאפשרות לבצע שיחות חירום. לפיכך, בשום מקרה אין לסמוך רק על המכשיר לביצוע שיחות חירום. בדוק את הנושא עם חברת הסלולר המקומית.

מידע לגבי הסוללה והטיפול בה

- אין צורך לפרוק את הסוללה במלואה לפני טעינתה מחדש. בניגוד למערכות סוללה אחרות, אין השפעת זיכרון שעלולה להשפיע על ביצועי הסוללה.
- יש להשתמש אך ורק בסוללות ובמטענים של LG. מטעני LG מיועדים למרב את חיי הסוללה.
- אין לפרק או לקצר את הסוללה.
- יש לשמור על ניקיון מגעי המתכת של הסוללה.
- יש להחליף את הסוללה כאשר היא אינה מפיקה עוד רמת ביצועים סבירה. ניתן לטעון מחדש את מארז הסוללה מאות פעמים לפני שיהיה צורך להחליפו.
- כדי למרב את שמישות הסוללה, טענו אותה מחדש אם לא הייתה בשימוש במשך זמן רב.
- אין לחשוף את מטען הסוללה לאור שמש ישיר או להשתמש בו בתנאי לחות גבוהה, כמו חדר אמבטיה.
- אין להשאיר את הסוללה במקומות חמים או קרים, שכן הדבר עלול לפגום בביצועיה.
- סכנת התפוצצות אם הסוללה הוחלפה בסוג סוללה שאינו מתאים. השלך סוללות משומשות בהתאם להוראות.
- אם עליך להחליף סוללה, קח אותה למרכז השירות המורשה הקרוב של LG Electronics או לספק לצורך קבלת סיוע.
- יש לנתק תמיד את המטען מהשקע לאחר שהמכשיר נטען במלואו כדי למנוע בזבז מיותר של חשמל מצד המטען.
- אורך חיי הסוללה בפועל תלוי בתצורת הרשת, בהגדרות המוצר, באופי השימוש, בתנאי הסוללה ובתנאים הסביבתיים.

- הקפד שלא ייווצר מגע בין הסוללה לבין פריטים חדים כגון שיניים או ציפורניים של בעל חיים. מגע כזה עלול לגרום לשריפה.

אבטחת הפרטים האישיים

- הקפד להגן על הפרטים האישיים שלך כדי למנוע דליפת נתונים או שימוש לרעה במידע רגיש.
- הקפד תמיד לגבות נתונים חשובים בזמן השימוש במכשיר. LG אינה נושאת באחריות לאובדן נתונים כלשהו.
- בעת השלכת המכשיר, הקפד לגבות את כל הנתונים ולאפס אותו כדי למנוע שימוש לרעה במידע רגיש.
- קרא בעיון את מסך ההרשאות במהלך הורדת יישומים.
- נקוט משנה זהירות כאשר אתה משתמש ביישומים שיש להם גישה לפונקציות מרובות או לפרטים האישיים שלך.
- בדוק באופן סדיר את החשבונות האישיים שלך. אם תגלה סימן כלשהו לשימוש לרעה בפרטים האישיים שלך, בקש מספק השירות למחוק או לשנות את פרטי החשבון שלך.
- אם המכשיר שלך אבד או נגנב, שנה את הסיסמה של החשבון כדי לאבטח את הפרטים האישיים שלך.
- אין להשתמש ביישומים שמקורם אינו ידוע.

הודעה לגבי החלפת סוללה



- למען בטיחותך, אל תסיר את הסוללה המשולבת במוצר. אם עליך להחליף סוללה, קח אותה לנקודת השירות הקרובה של LG Electronics או למפיץ לצורך קבלת עזרה.
- סוללת ליתיום-יון הינה רכיב מסוכן, העלול לגרום לפציעה.
- החלפת הסוללה על-ידי אדם שאינו מוסמך לכך עלולה לגרום נזק להתקן.



01


**תכונות
הניתנות
להתאמה
אישית**

תכונות המצלמה

מצלמה בזווית רחבה

ניתן לצלם תמונות או להקליט סרטוני וידאו עם טווח רחב יותר משדה הראייה שלך בפועל באמצעות הזווית הרחבה שבמצלמה האחורית.

הקש על  < , ולאחר מכן הקש על  /  כדי להחליף בין הזווית הרגילה לזווית הרחבה.

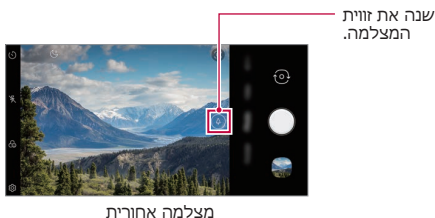

- ראה הפעלת המצלמה לקבלת פרטים.
- ניתן לעבור בין הזווית הרגילה לזווית הרחבה של עדשת המצלמה רק במצלמה האחורית.




דיוקן

ניתן לצלם דיוקן חד על-ידי יישום אפקט טשטוש עדשת המצלמה.

1 הקש על , ולאחר מכן הקש על **דיוקן**.

2 כדי לצלם תמונה, הקש על .

- כדי לכוונן את עצמת הטשטוש, גרור את פס המחוון לשמאל או לימין.

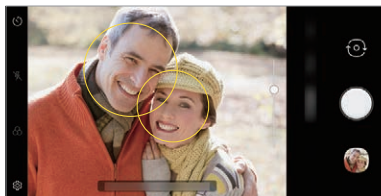

- שמור על מרחק של כ-40 ס"מ עד כ-1.5 מטר בינך ולבין אובייקט הצילום בעת השימוש במצלמה האחורית.
- תכונה זו אינה זמינה אם הסביבה חשוכה מדי.
- לאחר יישום תכונה זו, הקש על המיקום הרצוי במסך בתצוגה המקדימה כדי ליישם באופן אוטומטי את ערך החשיפה והמיקוד בעת שימוש במצלמה אחורית, או את ערך החשיפה בלבד בעת שימוש במצלמה הקדמית.


AI CAM

תוכל לצלם תמונות או סרטונים אפקטיביים מכיוון שהמצלמה מזהה את האובייקט בעת צילום התמונה או הסרטון.

1 הקש על  < , ולאחר מכן הקש על **AI CAM**.

2 כאשר האובייקט יזוהה, ייושם עליו האפקט הטוב ביותר לסצנה.

- כדי ליישם אפקטים אחרים, הקש על סמל הסצנה.
- חיות מחמד, עיר, פרחים, אוכל, נוף, אדם, שקיעה, אוטומטי, סה"כ 8 קטגוריות ניתן לזהות באופן אוטומטי.

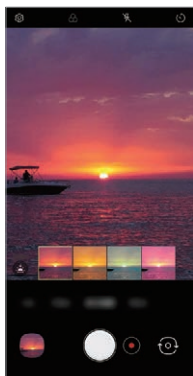

שקיעה



פרח

- התוצאה של זיהוי הסצנה עשויה להיות שונה, בהתאם לתאורה או למיקום של האובייקט בעת צילום התמונות. מילות המפתח לא יופיעו בתמונות או בסרטונים הממשיים.
- תכונה זו זמינה רק כאשר המצלמה הקדמית והאחורית במצב אוטומטי.




תכונות גלריה

יצירת סרט

באפשרותך ליצור סרט חדש על-ידי שילוב תמונות וסרטוני וידאו.

- 1 הקש על $\bigcirc$ < $\blacktriangle$ < הלשונית **תמונות**, ולאחר מכן הקש על $\vdots$ < **צור קובץ סרט**.
תוכל גם להקיש על $\bigcirc$ < $\blacktriangle$ < הלשונית **הצג**, ולאחר מכן הקש על $\vdots$ < **צור קובץ סרט**.
- 2 בחר תמונות או סרטוני וידאו עבור הסרט והקש על **הבא**.
- 3 ערוך את התמונות ואת סרטוני הווידאו שנבחרו ולאחר מכן הקש על **שמור**.

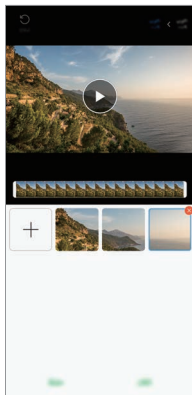

מחיקת קבצים

באפשרותך לבחור תמונות או סרטוני וידאו למחיקה מהסרטון שלך על ידי הקשה על ✕ התמונה הממוזערת שלו.

הוספת קבצים

באפשרותך לבחור תמונות או סרטוני וידאו להוספה לאחר הקשה על + בתחתית המסך. באפשרותך גם לבחור את התמונות ואת סרטוני הווידאו שכבר הוספת קודם לכן.

- גע והחזק בקובץ, ולאחר מכן הקש על קובץ נוסף לבחירת פריטים מרובים.

סידור מחדש של קבצים

כדי לסדר מחדש את התמונות ואת סרטוני הווידאו, גע והחזק בקובץ שברצונך להזיז ולאחר מכן גרור אותו למיקום הרצוי.

איפוס שינויי עריכה שבוצעו בסרט

תוכל לאפס את שינויי העריכה שבוצעו בסרט (כגון משך הפעלה) על-ידי הקשה על ↺.

הצגת תצוגה מקדימה של קובץ

כדי לשמור את הווידאו החדש שיצרת לפני שתשמור אותו, הקש על ▶. לאחר שמשך ההפעלה יסתיים, הקובץ הבא יופעל באופן אוטומטי.

- אפשר להשתמש לכל היותר ב-50 תמונות וסרטוני וידאו כדי ליצור וידאו.
- כברירת מחדל, משך ההפעלה של תמונה הוא 3 שניות, ולא ניתן לשנות אותו. אפשר לקצר סרטוני וידאו לשנייה אחת לכל הפחות.
- ייתכן שתכונה זו לא תתמוך בתבניות מסוימות של תמונה או וידאו.

יצירת GIF

ניתן ליצור בקלות קובץ GIF באמצעות סרטוני וידאו או תמונות.

יצירת GIF מסרטוני וידאו מוקלטים

- 1 בנקודת ההתחלה הרצויה בזמן צפייה בווידיאו, הקש על .
- 2 בחר את האורך של קובץ ה-GIF שברצונך ליצור.
 - קובץ GIF נוצר עבור משך הזמן החל מהשעה הנוכחית.
 - עבור סרטוני וידאו שאורכם קצר מ-5 שניות, תמונות GIF מופקות באופן אוטומטי עבור הזמן הנותר.

יצירת GIF מתמונות

- 1 כשאתה מציג אלבום, הקש על : < **צור קובץ GIF**.
- 2 בחר את התמונות הרצויות כדי ליצור קובץ GIF ולאחר מכן הקש על **הבא**.
 - ניתן להוסיף עוד תמונות ולכוון את המהירות, את יחס המסך ואת סדר הקבצים של קובץ ה-GIF.

-  ניתן להשתמש בתכונה זו אך ורק למטרות יצירה. השימוש בתכונה זו באופן שמפר זכויות של אדם כלשהו, כגון הפרת זכויות יוצרים או שימוש בהצהרות משמיות או פוגעניות, עשוי להיות כפוף לחבויות אזרחיות, פליליות או מנהליות ו/או לקנסות על-פי הדין החל. אין להעתיק, לשכפל או להפיץ חומרים כלשהם המוגנים בזכויות יוצרים או לעשות בהם שימוש בלתי חוקי אחר ללא רשות מהבעלים החוקיים או ממחזיקי זכויות היוצרים. במידה המלאה המותרת על-פי הדין החל, LG Electronics מתנעת מכל אחריות מפורשת ומשתמעת וכן מכל חבות המשויכת בזה.
- אפשר להשתמש לכל היותר ב-100 תמונות כדי ליצור קובץ GIF.

איכות הקול ואפקטים

DTS:X 3D Surround

ניתן להשמיע שיר או להציג סרטוני וידאו בצליל תלת-ממדי אופף וחי. כדי להשתמש במאפיין הזה, חבר אוזניות, רמקול או התקנים חיצוניים אחרים למכשיר שלך.

הקש על  < הגדרות < צליל < איכות הקול ואפקטים < **DTS:X 3D Surround**, ולאחר מכן הקש על  כדי להפעיל את המאפיין הזה.

כוונן כיוון הקול

ניתן לכוונן את כיוון הקול לפי הרצוי.

1 הקש על  < הגדרות < צליל < איכות הקול ואפקטים < **DTS:X 3D Surround**

2 בחר את כיוון הקול.

Google Assistant

סקירה של Google Assistant

ניתן להפעיל יישומים רצויים או להשתמש בהם באמצעות הקול שלך.

• כדי להשתמש במאפיין הזה, התחבר תחילה לרשת והיכנס לחשבון Google שלך.



זיהוי טביעת אצבע

סקירה כללית של זיהוי טביעת אצבע

כדי להשתמש בפונקציה לזיהוי טביעות אצבע, עליך לרשום תחילה טביעת אצבע במכשיר שלך.

תוכל להשתמש בפונקציה לזיהוי טביעות אצבע במקרים הבאים:

- לביטול נעילת המסך.
- להצגת תוכן נעול ב **QuickMemo+**.
- כדי לאשר רכישה, היכנס ליישום או זהה את עצמך באמצעות טביעת האצבע שלך.

- תוכל להשתמש בטביעות אצבע לזיהוי משתמשים במכשיר. ייתכן שטביעות אצבעות דומות מאוד של משתמשים שונים יזוהו על-ידי חיישן טביעת האצבע כאותה טביעת אצבע.
- אם המכשיר אינו מצליח לזהות את טביעת האצבע שלך, או אם שכחת את הערך שצוין לצורך הרישום, הבא את המכשיר למרכז שירות הלקוחות הקרוב ביותר של LG והצטייד בתעודת זהות שלך.

אמצעי זהירות לזיהוי טביעת אצבע

רמת הדיוק של זיהוי באמצעות טביעת אצבע עשויה לרדת בשל כמה סיבות. כדי להבטיח זיהוי ברמת דיוק מרבית, בדוק את הפריטים הבאים לפני השימוש במכשיר.

- למכשיר יש חיישן טביעת אצבע. ודא שלא נגרם נזק לחיישן טביעות האצבע על-ידי חפץ מתכתי, כמו מטבע או מפתח.
- כאשר מים, אבק או חומר זר אחר נמצאים על חיישן טביעות האצבע או על האצבע שלך, ייתכן שהרישום או הזיהוי של טביעות האצבע לא יפעל. הקפד להניח על החיישן אצבע נקייה ויבשה כדי לאפשר זיהוי טביעת אצבע.
- ייתכן שטביעת האצבע לא תזוהה כראוי אם יש צלקת על כרית האצבע או שהיא לא חלקה כתוצאה מהשריה במים.
- אם האצבע שלך מקופלת או שהנחת רק את קצה האצבע באופן חלקי בלבד, ייתכן שהזיהוי לא יצליח. ודא שהאצבע שלך מכסה את מלוא המשטח של חיישן טביעות האצבע.

- סרוק אצבע אחת בלבד בכל רישום. סריקה של יותר מאצבע אחת עשויה להשפיע על הרישום והזיהוי של טביעת האצבע.
- המכשיר עלול ליצור חשמל סטטי אם האוויר שמסביבו יבש. הימנע מסריקת טביעות אצבע בסביבה יבשה; לחלופין, גע בחפץ מתכתי (כמו מטבע או מפתח) לפני הסריקה, כדי לפרוק חשמל סטטי.

רישום טביעות אצבע


תוכל לרשום ולשמור את טביעת האצבע שלך במכשיר כדי להשתמש בזיהוי באמצעות טביעת אצבע.

1 הקש על הגדרות > מסך הנעילה ואבטחה > טביעות אצבע.

- יש להגדיר מסך נעילה כדי להשתמש בתכונה זו.
- אם נעילת המסך אינה פעילה, קבע את תצורת מסך הנעילה על-ידי ביצוע ההוראות המוצגות על המסך. ראה **הגדרת נעילת מסך** לקבלת פרטים.

2 אתר את חיישן טביעות האצבע בגב המכשיר והנח עליו בעדינות אצבע אחת כדי לרשום את טביעת האצבע.

- לחץ בעדינות על חיישן טביעת האצבע כדי לאפשר לחיישן לזהות את טביעת האצבע שלך.
- ודא שהאצבע שלך מכסה את מלוא המשטח של חיישן טביעות האצבע.

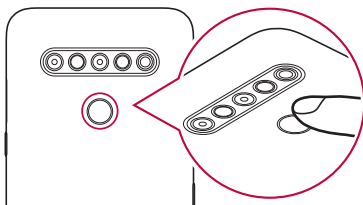

- 3 פעל בהתאם להוראות המוצגות על המסך.
 • חזור על סריקת טביעת האצבע על-ידי הזזת האצבע בקצב איטי ביותר עד שטביעת האצבע תירשם.
- 4 בסיום תהליך הרישום של טביעת האצבע, הקש על **אישור**.
 • הקש על **הוסף עוד** כדי לרשום טביעת אצבע נוספת. אם רשמת טביעת אצבע אחת בלבד ומצב האצבע לא תקין, ייתכן שהזיהוי לא יפעל היטב. כדי למנוע מצב כזה, עדיף לרשום מספר טביעות אצבע.

ניהול טביעות אצבע

תוכל לערוך או למחוק טביעות אצבע רשומות.

1 הקש על **○** < הגדרות < מסך הנעילה ואבטחה < **טביעות אצבע**.

2 בטל את הנעילה בהתאם לשיטת הנעילה שצוינה.

3 מרשימת טביעות האצבע, הקש על טביעת האצבע כדי לשנות את שמה. כדי למחוק אותה, הקש על **□**.

ביטול נעילת המסך עם טביעת אצבע

תוכל לבטל את נעילת המסך או להציג תוכן נעול בעזרת טביעת אצבע. הפעל את הפונקציה הרצויה:

1 הקש על **○** < הגדרות < מסך הנעילה ואבטחה < **טביעות אצבע**.

2 בטל את הנעילה בהתאם לשיטת הנעילה שצוינה.

3 במסך הגדרות טביעת אצבע, הפעל את הפונקציה הרצויה:

• **נעילת מסך**: בטל את נעילת המסך עם טביעת אצבע.

• **נעילת תוכן**: בטל את נעילת התוכן עם טביעת אצבע. לשם כך, ודא שמנעול התוכן מוגדר.

התכונה 'ריבוי משימות'

ריבוי-חלונות

ניתן להשתמש בשני יישומים במקביל על-ידי חלוקת המסך ריבוי-חלונות.

1 הקש על ☐ בסרגל הניווט.

- כעת יופיעו היישומים שהיו בשימוש לאחרונה.
- אם תקיש על סמל היישום, יופיעו התפריטים **פרטי יישום**, **ריבוי-חלונות**, **חלונות קופצים** ו**הצמד יישום**.



2 הקש על סמל היישום בפניה השמאלית העליונה של היישום להצגה בחלונות המרובים ובחר את **ריבוי-חלונות**.

- היישום שנבחר יופיע במחצית העליונה של המסך.

3 החלק את היישומים שהיו בשימוש לאחרונה לשמאל או לימין והקש על היישום להצגה במחצית התחתונה של המסך.

- היישום שנבחר יופיע במחצית התחתונה של המסך.

• התכונה ריבוי-חלונות אינה נתמכת על-ידי יישומים מסוימים של LG או יישומים שהורדת מה-Play Store.





02

פונקציות בסיסיות

רכיבי מוצרים ואביזרים

הפריטים הבאים נכללים במכשיר שלך.

- מכשיר
- כבל USB
- נרתיק טלפון Jelly
- מטען
- מדריך להתחלה מהירה
- פין שליפה




- הפריטים המתוארים לעיל עשויים להיות אופציונליים.
- הפריטים הכלולים באריזת המכשיר והזמינות של כל אביזר עשויים להשתנות בהתאם לאזור ולספק השירות.
- השתמש תמיד באביזרים מקוריים של LG Electronics. השימוש באביזרים המיוצרים על-ידי יצרנים אחרים עלול להשפיע על ביצועי השיחות של המכשיר או לגרום לתקלות. ייתכן ששירות התיקונים של LG אינו מכסה דבר זה.
- חלקים מסוימים של המכשיר עשויים מזכוכית מחוסמת. אם הפלת את המכשיר על משטח קשה או אם הוא נתון למכות חזקות, עלול להיגרם נזק לזכוכית המחוסמת. אם זה קורה, הפסק מיד להשתמש במכשיר ופנה למרכז שירות לקוחות של LG.



- אם אחד מהפריטים הבסיסיים הללו חסרים, פנה למשווק שממנו רכשת את המכשיר.
- כדי לרכוש פריטים נוספים, פנה למרכז שירות לקוחות של LG.
- פריטים מסוימים בקופסת המוצר כפופים לשינוי ללא הודעה מוקדמת.
- המראה והמפרטים של המכשיר כפופים לשינוי ללא הודעה מוקדמת.
- מפרט המכשיר עשוי להשתנות, בהתאם לאזור ולספק השירות.
- הסר את הסרט המגן מחיישן טביעת האצבע לפני שימוש בתכונה לזיהוי טביעת אצבע.

סקירה כללית של החלקים

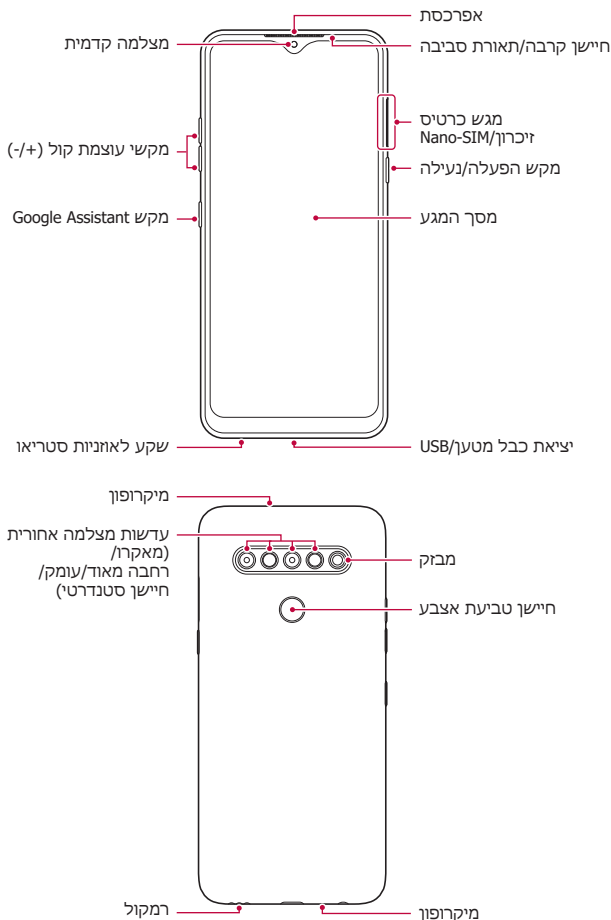



אל תנסה להסיר את המכסה האחורי בעצמך.

פעולה כזו עלולה לגרום נזק חמור לסוללה ולמכשיר, שעלול לגרום להתחממות יתר, שריפה ופציעה. אסור למי שאינו מוסמך לכך להסיר את המכסה האחורי והסוללה של המכשיר.

- חיישן קרבה/תאורת סביבה
 - חיישן קרבה: במהלך שיחה, חיישן הקרבה מכבה את המסך ומשבית את פונקציונליות המגע כאשר המכשיר צמוד לגוף. הוא מפעיל בחזרה את המסך והופך את פונקציונליות המגע לזמינה כאשר המכשיר נמצא מחוץ לטווח ספציפי.
 - חיישן תאורת הסביבה: חיישן תאורת הסביבה מנתח את עוצמת תאורת הסביבה כאשר מצב בקרת בהירות אוטומטית מופעל.
- מקשי עוצמת קול
 - כוונן את עוצמת הקול של רינגטונים, שיחות או התראות.
 - בזמן השימוש במצלמה, לחץ בעדינות על מקש עוצמת הקול כדי לצלם תמונה. כדי לצלם תצלומים מתמשכים, לחץ לחיצה ארוכה על מקש עוצמת הקול.
 - לחץ פעמיים על מקש החלשת עוצמת הקול (-) כדי להפעיל את היישום מצלמה כאשר המסך נעול או כבוי. לחץ פעמיים על מקש הגברת עוצמת הקול (+) כדי להפעיל את Capture+.
- מקש הפעלה/נעילה
 - לחץ לחיצה קצרה על המקש כאשר ברצונך להפעיל או לכבות את המסך.
 - לחץ לחיצה ארוכה על המקש כאשר ברצונך לבחור אפשרות בקרת צריכת חשמל.
- מקש Google Assistant
 - המכשיר שלך כולל את Google Assistant באופן מובנה. אתר תשובות ובצע פעולות כאשר תהיה מחוץ למשרד/לבית. כדי להתחיל, הקש על מקש Google Assistant בצד הטלפון.
 - הפעל את Google Assistant. ראה **Google Assistant** לקבלת פרטים.


• חיישן טביעת אצבע

- הפעל את תכונת הזיהוי באמצעות טביעת אצבע כדי לפשט את התהליך של ביטול נעילת המסך. ראה **סקירה כללית של זיהוי טביעת אצבע** לקבלת פרטים.


- ייתכן שהגישה לפונקציות מסוימות תהיה מוגבלת, בהתאם למפרטי המכשיר.
- אל תניח חפצים כבדים על המכשיר ואל תשב עליו. אחרת, עלול להיגרם נזק למסך המגע.
- כיסוי מגן למסך או אביזרים אחרים עלולים להפריע לפעולתו של חיישן הקרבה.
- אם המכשיר רטוב או שאתה משתמש בו במקום לח, ייתכן שמסך המגע או הלחצנים לא יפעלו כראוי.

החזק את המכשיר בצורה נכונה כפי שמוצג להלן. אם תכסה את פתח המיקרופון עם היד, עם האצבע או עם כיסוי מגן בעת שימוש במכשיר, ייתכן שבמהלך שיחה לא תישמע בבירור.

דוגמה להחזקה טובה

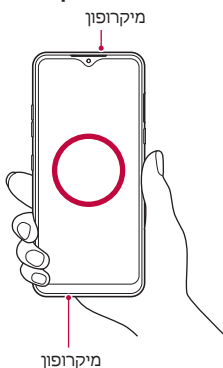

דוגמה להחזקה לא טובה

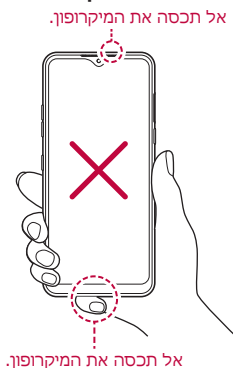

הדלקה או כיבוי

הדלקת המכשיר

כאשר המכשיר כבוי, לחץ לחיצה ארוכה על מקש ההפעלה/נעילה.

- כאשר תפעיל את המכשיר בפעם הראשונה, תתבצע קביעת תצורה ראשונית. זמן האתחול הראשון של הטלפון החכם עשוי להיות ארוך מן הרגיל.

כיבוי המכשיר

לחץ לחיצה ארוכה על מקש הפעלה/נעילה ולאחר מכן בחר כיבוי.

הפעלה מחדש של המכשיר

כאשר המכשיר אינו פועל כראוי או אינו מגיב, הפעל אותו מחדש על-פי ההוראות הבאות.

- 1 הקש הקשה ארוכה על מקש ההפעלה/נעילה ועל מקש הנמכת העוצמה (-) בו-זמנית עד שהמכשיר יכבה.
- 2 בעת הפעלה מחדש של המכשיר, שחרר את המקש.

אפשרויות בקרת צריכת חשמל

לחץ לחיצה ממושכת על מקש הפעלה/נעילה ולאחר מכן בחר אפשרות.


- **כיבוי:** כבה את המכשיר.
- **כיבוי והפעלה מחדש:** הפעל מחדש את המכשיר.

התקנת כרטיס ה-SIM


הכנס את כרטיס ה-SIM (Subscriber Identity Module) שסופק על-ידי ספק השירות כדי להתחיל להשתמש במכשיר.

• נהג בזהירות עם סיכת השליפה מכיוון שיש לה קצה חד. ⚠

1 הכנס את פין השליפה לתוך החור במגש הכרטיס.

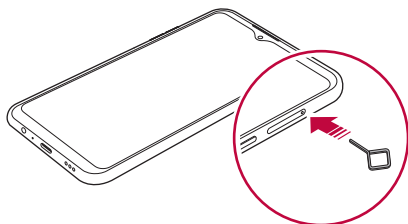


2 משוך החוצה את מגש הכרטיס.

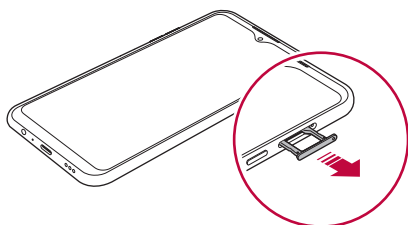


3 הנח את כרטיס ה-SIM על מגש הכרטיס כאשר המגעים המוזהבים פונים כלפי מטה.

שים את כרטיס ה-SIM העיקרי במגש של כרטיס ה-SIM 1 ואת כרטיס ה-SIM המשני במגש של כרטיס ה-SIM 2.

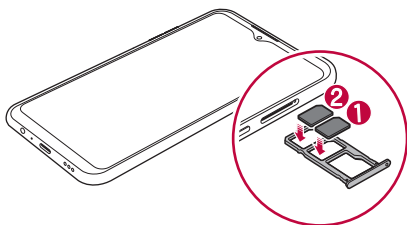

4 הכנס את מגש הכרטיס בחזרה לתוך החרץ.

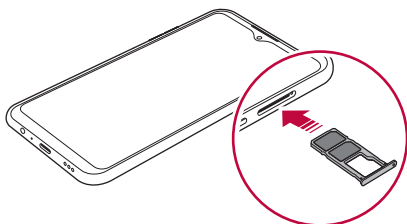

• מכשיר זה תומך בכרטיסי Nano SIM בלבד.



• לקבלת ביצועים ללא בעיות, מומלץ להשתמש במכשיר עם הסוג הנכון של כרטיס SIM. השתמש תמיד בכרטיס SIM מקורי שסופק על-ידי המפעיל.


• אם תכניס את מגש הכרטיס למכשיר בזמן שמגש הכרטיס רטוב, עלול להיגרם נזק למכשיר. תמיד ודא שמגש הכרטיס יבש.

אמצעי זהירות בעת שימוש בכרטיס ה-SIM

- אל תאבד את כרטיס ה-LG. SIM-אינה נושאת באחריות לנזקים ולבעיות שייגרמו כתוצאה מאובדן או העברה של כרטיס ה-SIM.
- הקפד שלא לגרום נזק לכרטיס ה-SIM כאשר אתה מכניס או מוציא אותו.

הכנסת כרטיס הזיכרון

- הכנס את כרטיס הזיכרון למכשיר.
בהתאם ליצרן ולסוג של כרטיס הזיכרון, ייתכן שכרטיסי זיכרון מסוימים לא יתאימו למכשיר שלך.
- 1 הכנס את פין השליפה לתוך החור במגש הכרטיס.
 - 2 משוך החוצה את מגש הכרטיס.
 - 3 הנח את כרטיס הזיכרון על מגש הכרטיס כאשר המגעים המוזהבים פונים כלפי מטה.

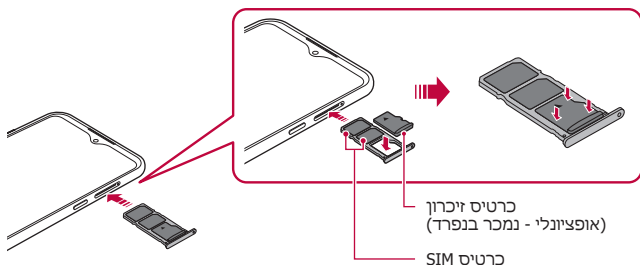

- 4 הכנס את מגש הכרטיס בחזרה לתוך החריץ.

• ייתכן שכרטיסי זיכרון מסוימים לא יהיו תואמים באופן מלא למכשיר. שימוש בכרטיס לא תואם עלול לגרום נזק למכשיר או לכרטיס הזיכרון או לשיבוש הנתונים המאוחסנים בו.



• כתיבה ומחיקה של נתונים בתכיפות גבוהה עלולות לקצר את חיי השירות של כרטיס הזיכרון.



הוצאת כרטיס הזיכרון

להוצאת כרטיס הזיכרון באופן בטוח, בטל תחילה את הטעינה שלו.

- 1 הקש על  < **הגדרות** < **אחסון** < .
- 2 הכנס את פין השליפה לתוך החור במגש הכרטיס ולאחר מכן הוצא את מגש הכרטיס מהמכשיר.
- 3 הסר את כרטיס הזיכרון ממגש הכרטיס.
- 4 הכנס את מגש הכרטיס בחזרה לתוך החריץ.


- אין להוציא את כרטיס הזיכרון בזמן שהמכשיר מעביר נתונים או ניגש למידע. אי הקפדה על כך עלולה לגרום לאובדן או לגרום לשיבוש הנתונים או לנזק לכרטיס הזיכרון או למכשיר עצמו. LG אינה אחראית להפסדים שייגרמו עקב שימוש לרעה או שימוש לא נאות בכרטיסי זיכרון, לרבות אובדן נתונים.



סוללה

טעינת הסוללה

לפני השימוש במכשיר, טען את הסוללה במלואה.
הטען את המכשיר בעזרת הכבל מסוג USB Type-C.

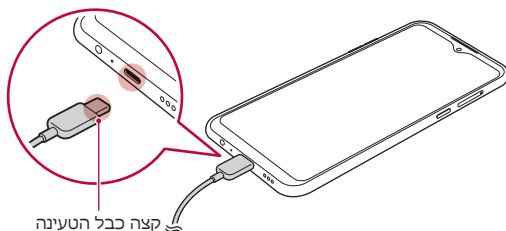

- אל תשתמש במסוף החיצוני, בכבל הטעינה או במגדר של המכשיר באיזור שיש בו לחות. הדבר עלול לגרום לשריפה, להתחשמלות, לפציעה או לנזק למכשיר. אם יש לחות, הפסק מיד להשתמש במכשיר והסר את הלחות במלואה.
- הקפד להשתמש בכבל ה-USB שסופק עם המכשיר.
- הקפד להשתמש במטען ובכבל טעינה המאושרים לשימוש על-ידי LG. טעינת הסוללה באמצעות מטען של צד שלישי עלולה לגרום להתפוצצות הסוללה או לנזק למכשיר.
- המכשיר כולל סוללה פנימית ניתנת לטעינה. כדי לשמור על בטיחות, אל תוציא את הסוללה המובנית.
- שימוש במכשיר כאשר הוא נטען עלול לגרום להתחשמלות. כדי להשתמש במכשיר, הפסק את טעינתו.





- הוצא את המטען משקע החשמל לאחר שהמכשיר נטען במלואו. הדבר ימנע צריכת חשמל מיותרת.
- ניתן לטעון את הסוללה בדרך נוספת, על-ידי חיבור כבל USB בין המכשיר לבין מחשב שולחני או מחשב נייד. זה עלול להימשך זמן רב יותר לעומת חיבור המתאם לשקע חשמל בקיר.
- אין לטעון את הסוללה באמצעות רכזת USB שאינה תומכת במתח הנקוב. הטעינה עלולה להיכשל או להיפסק באופן לא מכוון.

אמצעי זהירות בעת שימוש במכשיר

- הקפד להשתמש בכבל ה-USB המסופק עם המוצר, אל תחבר את המכשיר לכבלי USB או למטענים של חברות צד שלישי. האחריות המוגבלת של LG אינה מכסה שימוש באביזרים של צד שלישי.
- אם לא תפעל על-פי ההוראות המפורטות במדריך זה או אם תשתמש במכשיר לא כהלכה, הדבר עשוי לגרום לו נזק.

שימוש יעיל בסוללה


- חיי הסוללה עשויים להתקצר אם תשאיר מספר רב של יישומים ופונקציות במצב פעיל לאורך זמן.
- כבה את הפעולות ברקע כדי להאריך את חיי הסוללה.
- כדי למזער את צריכת הסוללה, פעל בהתאם לעצות הבאות:
- כבה את פונקציות ה-**Bluetooth®** או רשת ה-Wi-Fi כשאינך משתמש בהן.
- הגדר זמן קצוב קצר ככל האפשר לכיבוי המסך.
- מזער את בהירות המסך.
- הגדר נעילת מסך שתופעל כאשר המכשיר לא בשימוש.
- בדוק את רמת הסוללה בזמן שאתה משתמש ביישומים שהורדת.

מסך המגע

תוכל ללמוד כיצד לשלוט במכשיר שברשותך על-ידי שימוש במחוות מסך המגע.


הקשה

הקש קלות עם קצה האצבע כדי לבחור או להפעיל יישום או אפשרות.

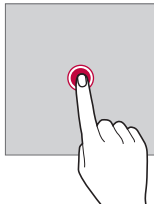


הקשת הקשה ממושכת

הקש הקשה ממושכת למשך כמה שניות כדי להציג תפריט עם אפשרויות זמינות.

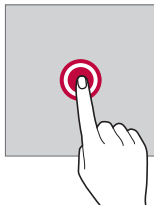


הקשה כפולה

הקש פעמיים במהירות כדי להגדיל או להקטין דף אינטרנט או מפה.

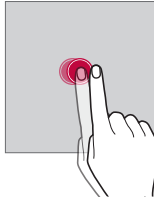


גרירה

גע והחזק פריט, כגון יישום או וידג'ט, ולאחר מכן הזז את האצבע למיקום אחר בתנועה מבוקרת. תוכל להשתמש במחוזה זו כדי להזיז פריט.

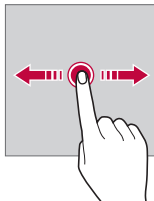



החלקה

גע במסך באצבעך והזז אותה במהירות מבלי לעצור. באפשרותך להשתמש במחוזה זו כדי לגלול ברשימה, בדף אינטרנט, בתמונות, במסכים ועוד.

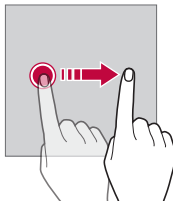

צביטה או פריסה

צבוט בשתי אצבעות כדי להקטין את התצוגה של תמונה או מפה.
כדי להגדיל, פרוס את האצבעות כדי להרחיקן זו מזו.

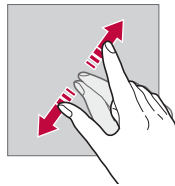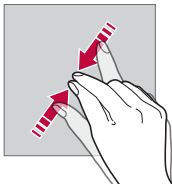

- אין לחשוף את מסך המגע לזעזוע פיזי קיצוני. הדבר עלול לגרום נזק לחיישן המגע.



- תקלה של מסך המגע עלולה להתרחש אם תשתמש במכשיר בקרבת חומרים מגנטיים, מתכתיים או מוליכים.
- אם אתה משתמש במכשיר בתנאי תאורה בוהקת, כגון אור שמש ישיר, ייתכן שהמסך לא יהיה גלוי, בהתאם למיקום שלך. השתמש במכשיר במיקום מוצל או במיקום עם תאורת סביבה שאינה בוהקת מדי אך מוארת במידה שמספיקה לקרוא ספרים.
- אל תפעיל כוח רב מדי בעת לחיצה על המסך.
- הקש בעדינות עם קצה האצבע על האפשרות הרצויה.
- ייתכן שבקרת המגע לא תפעל כראוי אם תקיש על המסך עם הציפורן או כשאתה לובש כפפות.
- ייתכן שבקרת המגע לא תפעל כראוי כאשר המסך לח או רטוב.
- ייתכן שמסך המגע לא יפעל כראוי אם יש על המסך ציפוי מגן או שחיברת אל המכשיר אביזר שנרכש בחנות מקוונת או פיזית שאינה מתמחה.
- הצגת תמונה סטטית לפרקי זמן ארוכים עלולה לגרום לדמויות גרר או לצריבת התמונה במסך. כבה את המסך או הימנע מלהציג את אותה תמונה למשך זמן רב כאשר אינך משתמש במכשיר.



מסך ראשי


סקירה כללית של המסך הראשי

המסך הראשי הוא נקודת המוצא שממנה ניתן לגשת לפונקציות וליישומים השונים במכשיר. הקש על  בכל מסך כדי לעבור היישר אל המסך הראשי.

תוכל לנהל את כל היישומים והווידג'טים במסך הראשי. החלק את המסך לשמאל או לימין כדי להציג במבט מהיר את כל היישומים המותקנים.

פריסת המסך הראשי

ניתן להציג את כל היישומים ולארגן וידג'טים ותיקיות במסך הראשי.

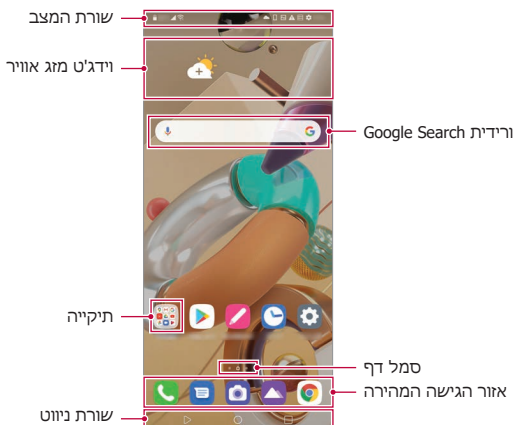

- מסך הבית עשוי להשתנות בהתאם למדיניות היצרן, להגדרות המשתמש, לגרסת התוכנה או לספק השירות.



- **שורת המצב:** הצג את סמלי המצב, השעה ורמת הטעינה של הסוללה.
- **וידג'ט מזג אוויר:** הצג את נתוני מזג האוויר והשעה עבור אזור מסוים.
- **וידג'ט Google Search:** הקש או דבר כדי לפתוח את Google Search.
- **סמל דף:** הצג את המספר הכולל של לוחות המסך הראשי. ניתן להקיש על סמל הדף הרצוי כדי לעבור לדף שבחרת. הסמל שמשקף את הלוח הנוכחי יסומן.
- **אזור הגישה המהירה:** קבע יישומים ראשיים בתחתית המסך כך שתוכל לגשת אליהם מכל אחד מהלוחות של המסך הראשי.
- **לחצני תצוגה**
 - ▷ : חזור למסך הקודם. סגור את לוח המקשים או את החלונות המוקפצים.
 - ○ : הקש כדי לעבור למסך הראשי. כדי להפעיל את Google Assistant, גע והחזק.
 - □ : הקש כדי להציג רשימה של היישומים שהיו בשימוש לאחרונה או הפעל יישום מתוך הרשימה. כדי למחוק את כל היישומים שהיו בשימוש לאחרונה, הקש על **נקה הכל**. כדי להשתמש בשני יישומים בו-זמנית עם תכונת החלונות המרובים, הקש הקשה ממושכת על הסמל בזמן השימוש ביישום.

שינוי הסגנון של לחצני התצוגה

ניתן לשנות את הסגנון של לחצני התצוגה.

- 1 הקש על ○ < הגדרות < תצוגה < **שורת ניווט**.
 - 2 תחת **סגנון**, בחר **מחוות**, **חיישן תנועה ולחצני** או **כפתורים בלבד** כדי להתאים להעדפותיך.
- **מחוות:** כדי לראות את היישומים האחרונים, החלק על לחצן הבית — כלפי מעלה.
 - **חיישן תנועה ולחצני:** לחצן "הקודם" < ולחצן "בית" ○ זמינים. כדי לראות את היישומים האחרונים, החלק על לחצן הבית ○ כלפי מעלה.

- **כפתורים בלבד:** ▷ / ○ / □ זמינים. הקש על □ כדי לראות את היישומים האחרונים.

סמלי מצב

כאשר מופעלת התראה על הודעה שלא נקראה, אירוע בלוח השנה או התראה של שעון מעורר, בשורת המצב מוצג סמל ההתראה התואם. בדוק את מצב המכשיר באמצעות סמלי ההתראות המוצגים בשורת המצב.



אין אות	
נתונים משודרים כרגע דרך הרשת	
התראה מוגדרת	
מצב רטט מופעל	
Bluetooth מופעל	
מחובר למחשב דרך USB	
רמת הסוללה	
מצב טיסה מופעל	
שיחות שלא נענו	
Wi-Fi מחובר	
מצב השתק מופעל	
GPS מופעל	
נקודה חמה מופעלת	
כרטיס SIM חסר	

- ייתכן שכמה מהסמלים הללו ייראו שונים או לא יופיעו כלל, בהתאם למצב המכשיר שלך. התייחס לסמלים בהתאם לסביבה האמתית ולאזור שבהם אתה משתמש במכשיר ובהתאם לספק השירות.
- הסמלים המוצגים עשויים להשתנות, בהתאם לאזור או לספק השירות.

חלונית ההתראות

תוכל לפתוח את לוח ההתראות על-ידי גרירת שורת המצב כלפי מטה במסך הראשי.

- באפשרותך לגרור את חלון ההודעה או להקיש על סמל החץ כדי לפתוח את רשימת סמלי ההגדרה המהירה.
- באפשרותך להקיש על  להוסיף, למחוק או לסדר סמלים בחלון ההודעה.
- אם תקיש הקשה ארוכה על הסמל, מסך ההגדרות של הפונקציה המתאימה יופיע.

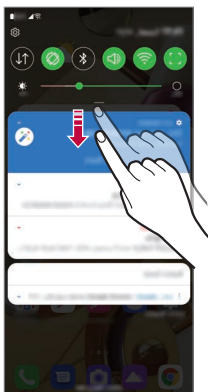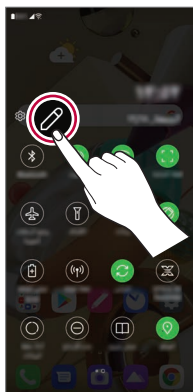



- ניתן להשתמש בלוח ההתראות גם במסך הנעילה. גרור את לוח ההתראות בזמן שהמסך נעול כדי לגשת במהירות לתכונות הרצויות.



שינוי כיוון המסך

תוכל להגדיר החלפה אוטומטית של כיוון המסך בהתאם למנח הפיזי של המכשיר.

בלוח ההתראות, הקש על **סיבוב** ברשימת סמלי הגישה המהירה. לחלופין, הקש על $\odot$ < **הגדרות** < **תצוגה** והפעל את **סיבוב מסך אוטומטי**.

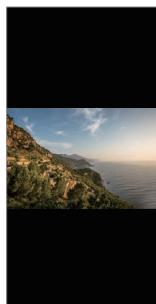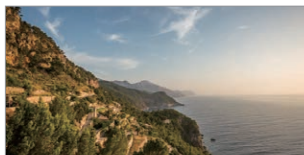


עריכת המסך הראשי

במסך הראשי, הקש הקשה ממושכת על אזור ריק ובחר את הפעולה הרצויה.

- כדי לסדר מחדש את הלוחות של המסך הראשי, הקש הקשה ארוכה על לוח ולאחר מכן גרור אותו למיקום אחר.
- כדי להוסיף וידג'ט למסך הראשי, הקש הקשה ממושכת על אזור ריק במסך הבית ולאחר מכן בחר **וידג'טים**.
- כדי לשנות טפטים, ערכות נושא וסמלים גע והחזק אזור ריק במסך הבית ולאחר מכן בחר **טפט וערכת נושא**. אתה יכול גם להקיש על $\odot$ < **הגדרות** < **טפט וערכת נושא**, ולאחר מכן לבחור טפטים, ערכות נושא, וסמלים להחלה על המכשיר.

- כדי לקבוע את תצורת ההגדרות של המסך הראשי, הקש הקשה ממושכת על אזור ריק במסך הבית ולאחר מכן בחר **הגדרות מסך בית**. ראה **הגדרות מסך בית** לקבלת פרטים.
- כדי להציג או להתקין מחדש את היישומים שהוסרו, גע והחזק אזור ריק במסך הראשי, ולאחר מכן בחר באפשרות **יישום סל המיחזור**. ראה **יישום סל המיחזור** לקבלת פרטים.
- כדי לשנות את מסך ברירת המחדל, גע והחזק אזור ריק במסך הראשי, עבור אל המסך הרצוי, הקש על , ולאחר מכן הקש על המסך פעם נוספת.

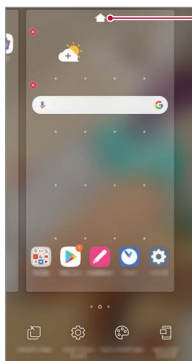



מסך ברירת מחדל

צפייה בערכת הנושא של הרקע

תוכל להציג את תמונת הרקע בלבד על-ידי הסתרת היישומים והווידג'טים במסך הראשי.

הרחק את שתי האצבעות על המסך הראשי.

- כדי לחזור אל מסך היישומים והווידג'טים המקורי, בצע תנועת צביטה במסך הראשי או הקש על .

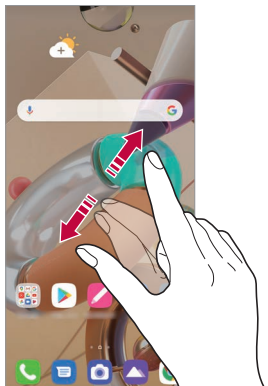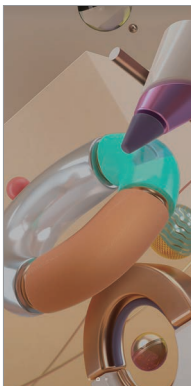

הזזת יישומים במסך הראשי

במסך הראשי, הקש הקשה ארוכה על יישום ולאחר מכן גרור אותו למיקום אחר.

- כדי להשאיר יישומים בשימוש נפוץ בתחתית המסך הראשי, לחץ לחיצה ארוכה על יישום וגרור אותו לאזור הגישה המהירה שבתחתית המסך.
- כדי להסיר סמל מאזור הגישה המהירה, גרור אותו אל המסך הראשי.

שימוש בתיקיות מתוך המסך הראשי

יצירת תיקיות

במסך הראשי, הקש הקשה ארוכה על יישום ולאחר מכן גרור אותו מעל יישום אחר.

- פעולה זו תיצור תיקייה חשה והיישום יתווסף אליה.

עריכת תיקיות

במסך הראשי, הקש על תיקייה ובצע אחת מהפעולות הבאות.

- כדי לערוך את שם וצבע התיקייה, הקש על שם התיקייה.
- כדי להוסיף יישומים, הקש הקשה ממושכת על יישום ולאחר מכן גרור אותו מעל התיקייה כדי לשחרר אותו.
- כדי להסיר יישום מהתיקייה, הקש הקשה ארוכה על היישום וגרור אל מחוץ לתיקייה. אם היישום שהסרת הוא היישום היחיד שהיה בתיקייה, התיקייה תוסר באופן אוטומטי.
- באפשרותך גם להוסיף או להסיר יישומים לאחר הקשה על ⊕ בתיקייה.

- לא ניתן לשנות את צבע התיקייה כאשר משתמשים בערכת נושא שהורדה.



הגדרות מסך בית

באפשרותך להתאים אישית את הגדרות מסך הבית.

1 הקש על ○ < הגדרות < תצוגה < מסך ראשי.

2 התאם אישית את ההגדרות הבאות:

- **בחר בית:** בחר מצב של המסך הראשי.
- **טפט:** שנה את טפט הרקע של המסך הראשי.
- **אפקט בהחלפת מסכים:** בחר אפקט שיוחל כאשר לוח המסך הראשי מתחלף.

- **צורות סמלים:** בחר אם ברצונך שלסמלים יהיו פינות מרובעות או מעוגלות.
- **Google feed:** אפשר ל-Google להציג בצד שמאל של מסך דף הבית.
- **מיון את היישומים לפי:** הגדר כיצד יתבצע מיון של יישומים במסך הראשי.
- **רשת:** שנה את מצב סידור היישומים עבור המסך הראשי.
- **הסתר יישומים:** בחר אילו יישומים ברצונך להסתיר ממסך הבית.
- **לאפשר לולאות מסך בית:** הפעל כדי לאפשר גלילה מתמשכת במסך הראשי (חזרה למסך הראשון לאחר המסך האחרון).
- **חפש:** חפש ע"י החלקת אצבע כלפי מטה במסך הבית.
- **נעילת מסך ראשי:** הפעל כדי למנוע הסרה או ארגון מחדש של אפליקציות ורכיבים גרפיים.

נעילת מסך

סקירה כללית של נעילת המסך

- לחיצה על מקש הפעלה/נעילה תכבה את מסך המכשיר ותנעל אותו. בנוסף, המסך נכבה וננעל לאחר שהמכשיר לא היה פעיל במשך פרק זמן שצוין.
- אם תלחץ על מקש הפעלה/נעילה כאשר לא מוגדרת נעילת מסך, המסך הראשי יופיע באופן מיידי.
- כדי להבטיח שהמכשיר יהיה מאובטח ולמנוע גישה לא רצויה למכשיר, הגדר נעילת מסך.

- נעילת מסך מונעת קלט מגע מיותר על מסך המכשיר ומצמצמת את צריכת הסוללה. אנו ממליצים להפעיל את נעילת המסך כאשר אינך משתמש במכשיר.



הגדרת נעילת מסך

לרשותך מספר אפשרויות שונות לנעילת המסך.

1 הקש על  < **הגדרות** < **מסך הנעילה ואבטחה** < **בחר נעילת מסך** ואז בחר את השיטה המועדפת עליך.

2 התאם אישית את ההגדרות הבאות:

- **ללא:** ביטול פונקציית נעילת המסך.
- **החלקה:** החלק על המסך כדי לבטל את נעילת המסך.
- **תבנית:** צייר תבנית לביטול נעילת המסך.
- **קוד PIN:** הזן סיסמה מספרית לביטול נעילת המסך.
- **סיסמה:** הזן סיסמה אלפאנומרית לביטול נעילת המסך.
- **טביעות אצבע:** בטל את נעילת המסך באמצעות טביעת האצבע.

• אם תנסה לבטל את נעילת המכשיר 5 פעמים באופן שגוי, המסך ייחסם למשך 30 שניות.



הגדרות אתחול מאובטח

כאשר אתה בוחר בתבנית, ב-PIN או בסיסמה כשיטה לנעילת מסך, אתה יכול להגדיר את המכשיר כך שיינעל בכל הפעלה שלו כדי לאבטח נתונים.

- לא תוכל להשתמש בכל הפונקציות, למעט שיחת החירום, עד אשר תבטל את נעילת המכשיר.
- אם תשכח את הסיסמה לביטול הצפנה, לא תוכל לשחזר נתונים מוצפנים ומידע אישי.

אמצעי זהירות עבור התכונה הפעלה מאובטחת

- אם תשכח את הסיסמה לביטול הצפנה, לא תוכל לשחזר נתונים מוצפנים ומידע אישי.
- הקפד לשמור את סיסמאות נעילת המסך שלך בנפרד.
- אם תזין את סיסמאות נעילת המסך באופן שגוי יותר ממספר הפעמים שצוין, המכשיר יאפס את עצמו באופן אוטומטי והנתונים המוצפנים והמידע האישי שלך יימחקו אוטומטית, ולא תהיה אפשרות לשחזר אותם.
- היזהר שלא להזין סיסמאות נעילת מסך שגויות יותר ממספר הפעמים שצוין.
- כשאתה מפעיל את המכשיר מיד לאחר שהמכשיר עבר איפוס, מופעלת גם הצפנה. אם תפסיק את ההצפנה באופן שרירותי, ייתכן שייגרם נזק לנתונים. המתן עד לסיום האיפוס.

התאמה אישית של מסך הנעילה

תוכל להתאים אישית את נעילת המסך.

1 הקש על הגדרות.  < הגדרות < מסך הנעילה ואבטחה < התאמה אישית של מסך הנעילה.

2 בחר את התפקוד שברצונך לקבוע.

- **טפט:** מאפשר לקבוע את הרקע של מסך הנעילה.
- **שעון:** מאפשר לקבוע את מיקום השעון במסך הנעילה.
- **קיצורי דרך:** מאפשר לבחור יישומים להפעלה במסך הנעילה שלך. הגדרה זו תופיע רק אם מוגדר מסך נעילה.
- **פרטי יצירת קשר עבור טלפון שאבד:** מאפשר לך לקבוע טקסט שיוצג במסך הנעילה כדי לזהות את בעלי הטלפון.

הגדרות נעילה מאובטחת

ניתן לקבוע את הגדרות הנעילה המאובטחת.

1 הקש על  < הגדרות < מסך הנעילה ואבטחה < הגדרות נעילה מאובטחת.

2 בחר את התפקוד שברצונך לקבוע.

- **הפוך את התבנית לגלויה:** מאפשרת לך להפוך את התבנית לגלויה.
- **זמן לנעילה:** מאפשר לך לקבוע את משך הזמן לפני נעילה אוטומטית לאחר שהתאורה האחורית כבית (גמר-זמן עקב אי-פעילות).
- **נעילה באמצעות לחצן ההפעלה:** אפשר אפשרות זו כדי לנעול באופן מידי את המסך בעת לחיצה על לחצן הפעלה/נעילה. הגדרה זו גוברת על ההגדרה טיימר נעילת אבטחה.
- **הצג נעילה:** מאפשר להציג את אפשרות תפריט ההפעלה כדי להפסיק את ההודעות במסך הנעילה, Smart Lock והנעילות הביומטריות.
- **Smart Lock:** מאפשר לך לקבוע מכשירים, מקומות, קולות ו/או זיהוי גוף מהימנים שיאפשר לטלפון שלך להישאר במצב לא נעול.

- התפריטים שתוכל להגדיר עשויים להיות שונים, בהתאם לשיטת נעילת המסך שתבחר.



הפעל מסך

ניתן להקיש הקשה כפולה על המסך כדי להפעיל או לכבות אותו.

- אפשרות זו זמינה אך ורק במסך הראשי שסופק על-ידי LG. היא לא תפעל כראוי במפעיל מותאם אישית או במסך ראשי שהותקן על-ידי המשתמש.
- בעת הקשה על המסך, השתמש בקצה האצבע. אל תשתמש בציפורן.
- כדי להשתמש בתכונה הפעל/מסך, ודא שחיישן הקרובה/תאורה לא נחסם על-ידי מדבקה או כל חומר זר אחר.

הדלקת המסך

הקש פעמיים באמצע המסך

- הקשה על החלק העליון או התחתון של המסך עשויה להקטין את שיעור זיהוי הפעולה.

כיבוי המסך

הקש פעמיים על שטח ריק במסך הראשי ובמסך הנעילה. לחלופין, הקש הקשה כפולה על שטח ריק בשורת המצב.

השבת את- הפעל מסך

אם אינך רוצה להשתמש בפונקציה הפעל מסך, הגדר באופן הבא:
הקש על ○ < הגדרות < הרחבות < **הפעל מסך** וגורור אותה כדי להשבית את הפונקציה.

הצפנת כרטיס זיכרון

ניתן להצפין את הנתונים השמורים בכרטיס הזיכרון כדי להגן עליהם. לא ניתן לגשת לנתונים המוצפנים בכרטיס הזיכרון ממכשיר אחר.

- 1 הקש על  < הגדרות < מסך הנעילה ואבטחה < הצפנה ואישורים < הצפן אחסון כרטיס SD.
- 2 קרא את הסקירה הכללית של הצפנת כרטיס הזיכרון המוצגת על המסך ולאחר מכן הקש על **המשך** כדי להמשיך.
- 3 בחר אפשרות והקש על **הצפנה**.
- **הצפנת קובץ חדש:** הצפן רק את הנתונים שנשמרו בכרטיס הזיכרון לאחר ההצפנה.
- **הצפנה מלאה:** הצפן את כל הנתונים השמורים כעת בכרטיס הזיכרון.
- **ללא קבצי מדיה:** הצפן את כל הקבצים, למעט קובצי מדיה כמו מוסיקה, תמונות וסרטוני וידאו.

- לאחר שיחל תהליך הצפנת כרטיס הזיכרון, פונקציות מסוימות לא יהיו זמינות.

- כיבוי המכשיר תוך כדי תהליך ההצפנה יגרום לכישלון התהליך ועלול לגרום נזק לנתונים מסוימים. לכן הקפד לוודא שהסוללה טעונה ברמה מספקת לפני שאתה מתחיל בתהליך ההצפנה.

- הקבצים המוצפנים יהיו נגישים רק מהמכשיר שבו הקבצים הוצפנו.

- לא ניתן להשתמש בכרטיס הזיכרון המוצפן במכשיר אחר של LG. כדי להשתמש בכרטיס הזיכרון המוצפן במכשיר נייד אחר, אתחל את הכרטיס.

- ניתן להפעיל הצפנת כרטיס זיכרון אפילו כאשר אין כרטיס זיכרון בתוך המכשיר. כל כרטיס זיכרון שיותקן לאחר ההצפנה יוצפן באופן אוטומטי.

יצירת צילומי מסך

באפשרותך לצלם תמונה של המסך הנוכחי שמוצג במכשיר.

באמצעות קיצור דרך

לחץ לחיצה ארוכה (לפחות שתי שניות) על מקש ההפעלה/נעילה ועל מקש החלשת עוצמת הקול (-) במקביל.

- תוכל לראות תמונות מסך דרך התיקייה **Screenshots** בגלריה.

באמצעות צילום מסך

במסך שבו ברצונך ליצור יישום מקליט מסך, גרור את שורת המצב כלפי מטה ולאחר מכן הקש על .

• ראה **כתיבת הערות על יישום מקליט מסך** לקבלת פרטים. 

הזנת טקסט

שימוש בסרגל הכלים החכם

- ניתן להשתמש במספר שיטות קלט מקלדת במקום אחד. ניתן לבחור את שיטת הקלט הרצויה מהחלק העליון של המקלדת.
- 1 בחר את שיטת קלט המקלדת הרצויה מסרגל הכלים החכם.
 - 2 הקש על ✓ ובחר את שיטת הקלט שברצונך להציג בסרגל הכלים החכם או סדר אותן מחדש.

סרגל כלים חכם



- מקלדת LG אינה מוגדרת כברירת מחדל בטלפון שלך. תוכל לשנות זאת ממסך הגדרות המקלדת.
- שיטות קלט נתמכות מסוימות עשויות להיות שונות, בהתאם למכשיר שברשותך.
- ניתן להפעיל את מאפיין סרגל הכלים החכם מהגדרות המקלדת.
- ניתן גם להשתמש בשיטות הקלט של המקלדת על-ידי הקשה על .


- 😊 : הוסף אמוג'יס.
- 🗣️ : הקש על  כדי להזין טקסט באמצעות קולך.
- כדי לאפשר זיהוי מיטבי של פקודות קוליות, דבר בצורה ברורה.
- כדי להזין טקסט בדיבור, ודא שהמכשיר מחובר לרשת.
- כדי לבחור את השפה שתוגדר לזיהוי קולי, הקש על  < **שפות** במסך הזיהוי הקולי.
- ייתכן שאין תמיכה בפונקציה זו, או שרשימת השפות הנתמכות תשתנה בהתאם לאזור השירות.
- ⚙️ : גישה להגדרות המקלדת.
- 📄 : פתיחת האחסון הזמני. ראה **אחסון זמני** לקבלת פרטים
- 🗣️ : הפעל את המקלדת הצפה בעת שימוש במאפיין חלונות מרובים. ניתן גם להעביר את המקלדת למיקום הרצוי.

שימוש במקלדת החכמה

תוכל להשתמש במקלדת Smart כדי להזין ולערוך טקסט. באמצעות מקלדת Smart, תוכל להציג טקסט תוך כדי הקלדה, בלי שתצטרך לעבור בין המסך למקלדת קונבנציונלית. הדבר יאפשר לך לאתר בקלות שגיאות ולתקן אותן תוך כדי הקלדה.

הזזת הסמן

מקלדת Smart מאפשרת לך להזיז את הסמן למיקום המדויק שאתה רוצה. בעת הקלדת טקסט, הקש הקשה ממושכת על מקש הרווח ולאחר מכן גרור שמאלה או ימינה.

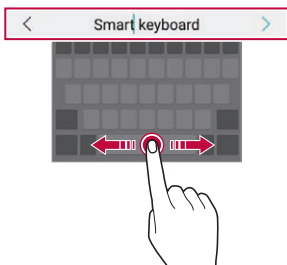

• אפשרות זו זמינה רק במקלדות QWERTY. 

הצעת מילים

מקלדת Smart מנתחת באופן אוטומטי את דפוסי השימוש שלך כדי להציע מילים בשימוש נפוץ תוך כדי הקלדה. ככל שתשתמש יותר במכשיר, כך ההצעות יהיו מדויקות יותר.

הזן טקסט ולאחר מכן הקש על מילה מוצעת או גרור בעדינות את הצד השמאלי או הימני של המקלדת כלפי מעלה.

- המילה שנבחרה תזון באופן אוטומטי. אינך צריך להקליד באופן ידני כל אות של המילה.



הוספת שפות למקלדת

באפשרותך להפוך שפות נוספות לזמינות לקלט המקלדת.

- 1 הקש על  < הגדרות < מערכת < שפה ומקלדת < נהל מקלדות < מקלדת LG < שפה ופריסת המקלדת < בחר שפה.

- 2 בחר את השפות שברצונך להפוך לזמינות.

העתקה והדבקה

באפשרותך להעתיק או לגזור טקסט מתוך יישום ולהדביק אותו באותו יישום. לחלופין, אתה יכול להפעיל יישומים אחרים ולהדביק את הטקסט בתוכם.

- 1 הקש הקשה ארוכה ליד הטקסט שברצונך להעתיק או לגזור.
- 2 גרור את  /  כדי לציין את האזור שברצונך להעתיק או לגזור.
- 3 בחר **חתוך** או **העתק**.
 - הטקסט שנגזר או הועתק נוסף באופן אוטומטי ללוח.
- 4 הקש הקשה ארוכה על חלון הזנת הקלט ולאחר מכן בחר **הדבק**.

 • אם אין פריט שהועתק או נגזר, האפשרות **הדבק** לא תופיע.

אחסון זמני

כאשר אתה מעתיק או גוזר תמונה או טקסט, הם נשמרים באופן אוטומטי במגש קליפים, וניתן להדביק אותם בכל שטח פנוי בכל עת.

- 1 בסרגל הכלים החכם, בחר את .
 - לחלופין, הקש הקשה ארוכה על חלון הזנת הקלט ולאחר מכן בחר **אחסון זמני**.
- 2 בחר והדבק פריט מתוך מגש הקליפים.
 - ניתן לשמור 20 פריטים לכל היותר במגש הקליפים.
 - הקש על  כדי לנעול פריטים שמורים על מנת להבטיח שהם לא יימחקו גם לאחר שבוצעה חריגה מהכמות המרבית המותרת. ניתן לנעול עשרה פריטים לכל היותר. כדי למחוק פריטים נעולים, תחילה בטל את נעילתם.
 - הקש על  כדי למחוק את הפריטים השמורים במגש הקליפים.

 • ייתכן שיישומים מסוימים שהורדת לא יתמכו במגש הזמני.

שיתוף תוכן

הפעלת תוכן ממכשיר אחר

תוכל להפעיל תמונות, סרטוני וידאו או שירים שנשמרו במכשיר באמצעות מכשיר טלוויזיה.

- 1 חבר את הטלוויזיה והמכשיר שלך לאותה רשת Wi-Fi.
- 2 בזמן הצגת הפריטים מהיישום **גלריה** או **נגן מוסיקה**, הקש על **< : נגן בהתקן אחר**.
- 3 בחר את הטלוויזיה שאתה מעוניין להתחבר אליה.

• לשימוש עם Chromecast, שירותי Google Play חייבים להיות עדכניים.



הצגת תוכן ממכשירים סמוכים

ניתן להציג תוכן ממכשירים שונים, כגון מחשב, NAS או מכשיר נייד, באמצעות הגלריה או יישום.

חיבור המכשירים

חבר את המכשיר שלך ומכשיר אחר, התומכים שניהם בפונקציה DLNA, לאותה רשת אלחוטית.

• ודא שהאפשרות (DLNA) File sharing מופעלת הן במכשיר והן במכשיר המחובר.



חיפוש מכשירים סמוכים

באפשרותך להציג רשימה של מכשירי DLNA באותה רשת על-ידי בחירה ב **< : מכשירים סמוכים** בכל יישום.

השתמש בתוכן ממכשירים סמוכים כאילו היית משתמש בו במכשיר שלך.

שליחה או קבלה של קבצים

באפשרותך לשתף קבצים בין המכשיר שלך ומכשיר LG אחר, או טאבלט או מחשב.

שליחת קבצים

מתוך **גלריה** או יישומים אחרים, הקש על : < **שתף** או , ובחר מכשיר ברשימת שיתוף הקבצים.

קבלת קבצים

גרור את שורת המצב כלפי מטה והקש על **שיתוף קבצים**.

אם המכשיר שלך אינו תומך בתכונת שיתוף הקבצים, הקש על <  < **הגדרות** < **התקנים מחוברים** < **שיתוף קבצים** <  **SmartShare Beam**.

• באפשרותך לשתף קבצים עם מכשירים מסוימים התומכים ב-DLNA.



03

יישומים שימושיים

התקנה והסרת התקנה של יישומים

התקנת יישומים

- היכנס לחנות יישומים כדי לחפש ולהוריד יישומים.
- תוכל להשתמש בחנויות כמו SmartWorld, חנות Play או חנות היישומים של ספק השירות שלך.

- ייתכן שחנויות יישומים מסוימות ידרשו ממך ליצור חשבון ולהיכנס לחשבון זה.
- יישומים מסוימים עשויים לגבות תשלום.
- אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך.
- התמיכה בפונקציה SmartWorld אינה מובטחת ותלויה באזור או בספק השירות.

הסרת התקנה של יישומים

הסר את ההתקנה של יישומים שאינך משתמש בהם עוד מהמכשיר שלך.

הסרת התקנה עם מחוות ההקשה הממושכת

- במסך הבית, גע והחזק ביישום כדי להסיר את התקנתו, ולאחר מכן גרור אותו מעל האפשרות **מחק** בחלק העליון של המסך.
- תוכל להתקין מחדש יישומים שהסרת אם חלפו מאז ההסרה פחות מ-24 שעות. ראה **יישום סל המיחזור** לקבלת פרטים.

הסרת התקנה באמצעות תפריט ההגדרות

הקש על  < **הגדרות** < **יישומים** < **פרטי יישום**, בחר ביישום, ואז הקש על **הסר התקנה**.

- יישומים מסוימים אינם ניתנים להסרה על-ידי המשתמשים.

הסרת התקנה של יישומים מחנות היישומים

כדי להסיר התקנה של יישום, עבור לחנות היישומים שממנה הורדת אותו, והסר את התקנתו.

התקנה והסרה של יישומים במהלך ההגדרה

כשתפעיל את המכשיר בפעם הראשונה, תוכל להוריד יישומים מומלצים.

תוכל לדלג לשלב הבא ללא התקנה.

יישום סל המיחזור

ניתן להציג רשימה של יישומים שהוסרו. באפשרותך גם להתקין מחדש יישומים שהסרת, אם חלפו מאז ההסרה פחות מ-24 שעות.

- 1 הקש על  < **כלי ניהול** > **יישום סל המיחזור**. אתה יכול גם לגעת ולהחזיק אזור ריק במסך הראשי, ולאחר מכן להקיש על **יישום סל המיחזור**.

- 2 הפעל את הפונקציה הרצויה:

- **שחזר:** התקן מחדש את היישום הרצוי.
-  : הסר מהמכשיר לצמיתות את היישומים שביטלת את התקנתם.


- יישומים שתסיר יימחקו מהמכשיר באופן אוטומטי 24 שעות לאחר הסרתם. אם תרצה להתקין מחדש יישומים שהוסרו, תצטרך להוריד אותם מחדש מחנות היישומים.
- תכונה זו מופעלת רק במסך הראשי שהוגדר כברירת מחדל. אם תסיר יישומים דרך מסך EasyHome או מפעיל יישומים אחר, הם יוסרו מהמכשיר באופן מיידי ולצמיתות.



קיצורי דרך של יישומים

במסך הבית, גע והחזק בסמל יישום כגון 'שיחות', 'הודעה', 'מצלמה', 'גלריה' ו'הגדרות' כדי להציג תפריט גישה מהירה. קיצורי דרך של יישומים מאפשרים לך להשתמש ביישומים בקלות רבה יותר.

- הקש על  כדי לקבוע את ההגדרות של הווידג'ט הרצוי של היישום.
- הקש על  כדי להציג את מידע היישום הרצוי.

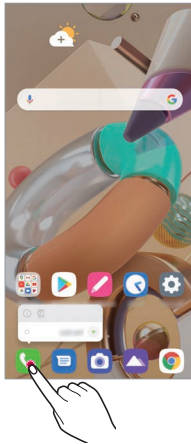

- תכונה זו זמינה רק ביישומים מסוימים. 

שיחה קולית

בצע שיחת טלפון על-ידי שימוש באחת השיטות הזמינות, כמו הזנה ידנית של מספר טלפון וביצוע שיחה מרשימת אנשי הקשר או מרשימת השיחות האחרונות.

ביצוע שיחה מהמקלדת

- 1 הקש על  <  **חייג**.
- 2 בצע שיחה באמצעות שיטה לבחירתך:
 - הזן מספר טלפון ולאחר מכן הקש על .
 - הקש הקשה ממושכת על מספר חיוג מהיר.
 - חפש איש קשר על-ידי הקשה על האות הראשונה בשמו ברשימת אנשי הקשר, ולאחר מכן הקש על .

- כדי להזין את התו "+" לצורך שיחה בינלאומית, הקש הקשה ממושכת על הספרה 0.
- ראה **הוספת אנשי קשר** למידע על אופן הוספת מספרי טלפון לרשימת מספרי החיוג המהיר.

ביצוע שיחה מרשימת אנשי הקשר

- 1 הקש על  < **אנשי קשר**.
- 2 ברשימת אנשי הקשר, בחר איש קשר והקש על .

מענה לשיחה

- כדי לענות לשיחה, גרור את  במסך השיחה הנכנסת.
- כאשר אוזניות סטריאו מחוברות, תוכל לבצע שיחת באמצעות הלחצן חייג/סיום באוזניות.
- כדי לסיים שיחה מבלי לכבות את המסך, הקש על  **הגדרות < רשת ואינטרנט < הגדרות שיחה < מענה וסיום שיחות** ולאחר מכן הפעל את האפשרות **סיים שיחות באמצעות מקש ההפעלה**.

דחיית שיחה

- כדי לדחות שיחה נכנסת, גרור את  על מסך השיחה הנכנסת.
- כדי לשלוח הודעת דחייה, גרור את אפשרות הודעת הדחייה  על המסך.
- כדי להוסיף או לערוך הודעת דחייה, הקש על  **הגדרות < רשת ואינטרנט < הגדרות שיחה < חסימת שיחה ודחייתה עם הודעה < דחה שיחה ושלח הודעה**.
- כאשר נכנסת שיחה, לחץ על לחצן הגברת העוצמה (+), על לחצן הנמכת העוצמה (-) או על לחצן ההפעלה/נעילה כדי להשתיק את הרינגטון או הרטט, או כדי להעביר את השיחה להמתנה.

בדיקת שיחה נכנסת בזמן שימוש ביישום

כאשר נכנסת שיחה בזמן שימוש ביישום, ניתן להציג התראה בחלון מוקפץ בקצה העליון של המסך. אתה יכול לקבל את השיחה, לדחות את השיחה או לשלוח הודעה מתוך המסך הקופץ.

- הקש על  **הגדרות < רשת ואינטרנט < הגדרות שיחה < הגדרות נוספות < חלונית שיחה נכנסת** ובחר את האופן שתרצה להציג את השיחה הנכנסת בעת שימוש ביישום.



צפייה בשיחות שלא נענו

במקרה של שיחה שלא נענתה, הסמל ☒ יופיע בשורת המצב, בחלק העליון של המסך.

כדי להציג את פרטי השיחה שלא נענתה, גרור את שורת המצב כלפי מטה. לחלופין, הקש על ○ <  < יומן שיחות.

הפונקציות הנגישות במהלך שיחה

במהלך שיחה, ניתן לגשת אל מגוון פונקציות על-ידי הקשה על הלחצנים במסך:

- **אנשי קשר:** הצג את רשימת אנשי הקשר במהלך שיחה.
- **החזק:** החזק שיחה.
- **מקשים:** הצג או הסר את מקשי החיוג.
- **רמקול:** הפעל את פונקציית הרמקול.
- **השתק:** השתק את הקול כדי שהצד השני לא ישמע את קולך.
- **Bluetooth:** העבר את השיחה למכשיר Bluetooth משויך ומחובר.
-  : סיים שיחה.
- :: : גישה לאפשרויות שיחה נוספות.

• פריטי ההגדרה הזמינים עשויים להשתנות בהתאם לאזור או לספק השירות. 

ביצוע שיחה בת שלושה משתתפים

במהלך שיחה, תוכל להתקשר לאיש קשר נוסף.

- 1 במהלך שיחה, הקש על **< הוסף שיחה**.
- 2 הזן מספר טלפון ולאחר מכן הקש על .
- שתי השיחות יוצגו במסך במקביל והשיחה הראשונה תעבור להמתנה.
- 3 כדי להתחיל שיחת ועידה, הקש על **מזג שיחות**.

• ייתכן שתחויב בתשלום עבור כל שיחה. לקבלת מידע נוסף, פנה לספק השירות שלך. 

צפייה ברשומות שיחה

- כדי להציג רשומות שיחה אחרונות, הקש על  **< יומן שיחות**. לאחר מכן, תוכל להשתמש בפונקציות הבאות:
- כדי להציג רשומות שיחה מפורטות, בחר איש קשר. כדי לבצע שיחה לאיש קשר שנבחר, הקש על .
 - כדי למחוק את כל רשומות השיחה, הקש על **< מחק**.

- משך השיחה המוצג עשוי להיות שונה ממשך השיחה המשמש לחיוב. לקבלת מידע נוסף, פנה לספק השירות שלך. 
- לא ניתן לשחזר היסטוריית שיחות שנמחקה.
- צבוט שתי אצבעות או הרחב את האצבעות כדי לכווץ את גודל הגופן עבור יומני השיחות או אנשי הקשר.

הגדרת אפשרויות שיחה

באפשרותך בחור באפשרויות שיחה שונות.

- 1 הקש על  **< חייג או על יומן שיחות**.
- 2 הקש על **< הגדרות שיחה** ובחר אפשרויות בהתאם להעדפותיך.

Messages

שליחת הודעה

באפשרותך ליצור ולשלוח הודעות לאנשי הקשר שלך באמצעות היישום 'הודעות'.

- שליחת הודעות לחו"ל עלולה להיות כרוכה בתשלום נוסף. לקבלת מידע נוסף, פנה לספק השירות שלך.



- 1 הקש על  < .
- 2 הקש על .
- 3 ציין נמען וצור הודעה.
- כדי להשתמש באפשרויות המולטימדיה, הקש על .
- כדי לגשת לפריטי תפריט אופציונליים, הקש על .
- 4 הקש על  כדי לשלוח את ההודעה.

קריאת הודעה

תוכל להציג את חליפת ההודעות שלך עם כל איש קשר.

- 1 הקש על  < .
- 2 בחר איש קשר מרשימת ההודעות.

קביעת הגדרות להעברת הודעות

באפשרותך לשנות את הגדרות העברת ההודעות בהתאם להעדפותיך.

- 1 הקש על  < .
- 2 הקש על  : < **הגדרות** ברשימת ההודעות.

הפעלת המצלמה

תוכל לצלם תמונה או סרטון וידאו כדי להנציח את כל הרגעים החשובים שלך.

הקש על  < 


- לפני שאתה מצלם תמונה או מקליט סרטון וידאו, נקה את עדשת המצלמה במטלית רכה.
- היזהר שלא להכתים את עדשת המצלמה באצבעותיך או באמצעות חומר זר אחר.
- התמונות הנכללות במדריך למשתמש זה עשויות להיות שונות מאלה שנמצאות במכשיר בפועל.
- ניתן לצפות בתמונות ובסרטוני וידאו ולערוך אותם בגלריה. ראה **סקירה כללית של הגלריה** לקבלת פרטים.

תכונות בסיסיות ביישום המצלמה

תוכל לצלם תמונות או להקליט סרטוני וידאו על-ידי בחירת מגוון מצבי מצלמה ואפשרויות.

1 הקש על  < 

2 הקש על  כדי לצלם תמונה או הקש על **וידאו** <  כדי להקליט סרטון וידאו.

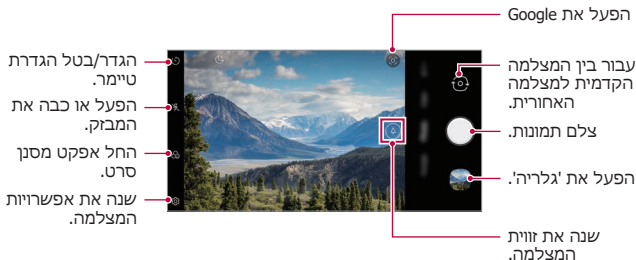

צילום תמונה

- 1 בחר מצב מצלמה והקש על העצם שבו ברצונך למקד את המצלמה.
- 2 כדי לצלם תמונה, הקש על .
 - תוכל גם ללחוץ על מקש הנמכת העוצמה או הגברת העוצמה כדי לצלם תמונה.
 - באפשרותך לצלם תמונה תוך כדי הקלטת וידאו על ידי לחיצה על  במסך.

- באפשרותך להפעיל את אפליקציית המצלמה על ידי לחיצה קצרה על מקש ההפעלה. הקש על  < **הגדרות** < **הרחבות** < **קיצורי דרך** ולאחר מכן הקש על **פתח את המצלמה** להפעיל אותה.
- כאשר המסך כבוי או נעול, הפעל את המצלמה בשתי לחיצות מהירות על מקש החלשת עוצמת הקול. הקש על  < **הגדרות** < **הרחבות** < **קיצורי דרך** ולאחר מכן הקש על **פתח את המצלמה** להפעיל אותה.

הקלטת סרטון וידאו

- 1 הקש על  < **וידאו** והקש על הנושא להתמקד.
- 2 הקש על  כדי להקליט סרטון וידאו.
 - | כדי לצלם תמונה תוך כדי צילום סרטון וידאו, הקש על .
 - כדי להשהות את הצילום של סרטון וידאו, הקש על . כדי לחדש את צילום הווידאו, הקש על .
 - בעת צילום סרטון וידאו, תוכל להרחיב את האצבעות או לצבט באצבעות כדי להגדיל או להקטין את גודל התצוגה.
 - בעת צילום סרטון וידאו, תוכל להקיש על האזור הרצוי כדי לכוון את הבהירות.
- 3 הקש על  כדי לסיים את צילום סרטון הווידאו.

התאמה אישית של אפשרויות המצלמה

תוכל להתאים אישית מגוון אפשרויות מצלמה כדי להתאימה לצרכיך.

הקש על  על המסך.

- האפשרויות הזמינות משתנות בהתאם למצלמה הנבחרת (מצלמה קדמית או אחורית) ולמצב המצלמה שנבחר.



-  : צלם תמונה ב-FullVision.
-  : בחר ערכים ליחס הרחב-גובה ולגודל בעת צילום תמונות.
-  : בחר ערכים לרזולוציה ולגודל בעת הקלטת סרטוני וידאו.

HDR	קבל תמונות בצבעים מלאי חיים ואפקטים של פיצוי אפילו אם הפריטים צולמו מול האור. תכונות אלה מסופקות בעזרת טכנולוגיית טווח דינמי רחב (HDR) שבה מצוידת המצלמה.
צמצם קולי	צלם תמונות עם פקודות קוליות.
תייג מיקומים	שמור את התמונה עם נתוני מיקום GPS.
רשת	הצג קווים מנחים כך שתוכל לצלם תמונות או סרטוני וידאו בהתבסס על קווי ייחוס אופקיים ואנכיים.
אחסון	בחר אם ברצונך לאחסן את התמונות וסרטוני הווידאו אחסון פנימי או כרטיס זיכרון. (אפשרות זו זמינה כאשר הוכנס כרטיס זיכרון.)
עזרה	הוסף עזרה לכל תפריט במצלמה.

אפשרויות נוספות במצלמה הקדמית


צילום סלפי	כדי לצלם סלפים, בחר באפשרות זו בין צילום בתנועת יד לבין צילום אוטומטי .
שמור הפוך	שמור תמונות הפוכות לאחר צילום תמונות סלפי.

החלפת מצב במצלמה

באפשרותך לבחור מצב מצלמה המתאים לסביבה שלך כדי לצלם תמונות וסרטונים בקלות ובנוחות.

הקש על $\bigcirc < \text{מצלמה}$ **עוד**, ולאחר מכן בחר את המצב הרצוי.

- באפשרותך לשנות את סדר מצבי הסצנה על ידי הזזת סמל מצב הסצנה תוך לחיצה ממושכת על הסמל.

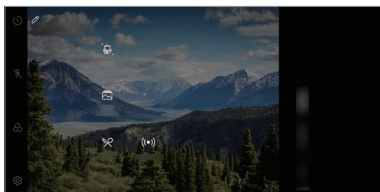

מצבי המצלמה השונים

מזון

תוכל לצלם תצלום או להקליט וידאו תוך כוונן פס מחוון הצבעים ואיזון הלבן.

1 הקש על $\bigcirc < \text{מצלמה}$, ולאחר מכן הקש על **עוד** $< \text{☰}$.

2 כדי לצלם תמונה, הקש על $\bigcirc$.

- גרור את מחוון הצבע במסך כדי לכוון את איזון הלבן, ובחר את הצבע הטוב ביותר.

- אם פס המחוון אינו מוצג, הקש על ☰ כדי לכוון את איזון הלבן.

פלאש Jump-Cut

תמונות שיצולמו במרווחי זמן סדירים יישמרו כקובצי GIF.

- 1 הקש על  < , ולאחר מכן הקש על **עוד** < .
- 2 כדי לצלם תמונה, הקש על .
- התמונות יצולמו במרווחי זמן של 3 שניות ויישמרו כקובץ GIF.
- הקש על  במסך כדי לבחור את מספר התמונות שברצונך לצלם.
- בעת צילום התמונות, הקש על  כדי ליצור קובצי GIF מהתמונות שצילמת.

-  המבזק יופעל באופן אוטומטי כדי לשמש כטיימר.
- התמונות שיצולמו בזמן זה והמספר הכולל של התמונות יוצגו בתחתית המסך.
- כל התמונות שיצולמו יישמרו כקובצי GIF בלבד.
- לא תוכל לשנות את מהירות ה-GIF או את סדר התמונות.

צילום רחב

ניתן לצלם צילום תקריב של אובייקט.

- 1 הקש על  < , ולאחר מכן הקש על **עוד** < .
- 2 כדי לצלם תמונה, הקש על .

YouTube Live

תוכל להקליט סרטון וידאו ולהעלות אותו ישירות ל-YouTube.

- 1 הקש על  < , ולאחר מכן הקש על **עוד** < .
- 2 הקש על  והקלט סרטון.
- כדי להשתמש בתכונה זו, עליך לאמת את מספר הטלפון שלך.

-  YouTube Live זמין רק כשהמכשיר שלך מחובר לאינטרנט. אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך.

דיוקן

ניתן לצלם דיוקן חד על-ידי יישום אפקט טשטוש עדשת המצלמה.
ראה **דיוקן** לקבלת פרטים.


AI CAM

תוכל לצלם תמונות או סרטונים אפקטיביים מכיוון שהמצלמה מזהה את האובייקט בעת צילום התמונה או הסרטון.
ראה **AI CAM** לקבלת פרטים.

תכונות שימושיות אחרות ביישום המצלמה

נעילת חשיפה אוטומטי/מיקוד אוטומטי

כדי לתקן את רמת החשיפה הנוכחית ואת מיקום המיקוד, גע והחזק במסך במצב אוטומטי. כדי לכבות את התכונה, הקש על האזור הריק של המסך.

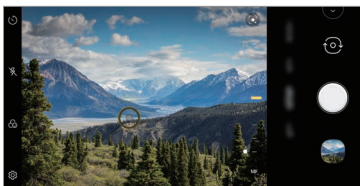

• תכונה זו זמינה רק במצבים מסוימים. 

צילום רציף

- תוכל לצלם צילומים רציפים של תמונות כדי ליצור תמונות נעות.
במסך המצב האוטומטי, לחץ לחיצה ארוכה על .
- צילומים רציפים מצולמים במהירות מהירה כאשר  מוחזק לחץ.

מעבר בין המצלמות

באפשרותך לעבור מהמצלמה הקדמית לאחורית וחזרה בהתאם לסביבה.

במסך המצלמה, הקש על  או גרור את המסך מעלה או מטה כדי לעבור בין המצלמה הקדמית למצלמה האחורית.



- השתמש במצלמה הקדמית לצילום תמונות סלפי. ראה **צילום סלפי** לקבלת פרטים.



זום להתקרבות או התרחקות מהאובייקט המצולם

באפשרותך להשתמש בתכונת ההגדלה או ההקטנה במסך המצלמה בעת צילום תמונה או הקלטת סרטון וידאו.

- במסך המצלמה, בצע באצבעותיך תנועת צביטה או פריסה כדי להתרחק או להתקרב אל האובייקט המצולם. או, באמצעות סרגל הכווןון המופיע בעת גרירת  /  כלפי מעלה, הגדל או הקטן את התצוגה ועבור בין זווית רגילה לרחבה.

- פונקציית זום התקרבות/התרחקות אינה זמינה במצב סלפי (מצלמה קדמית).
- פונקציה זו אינה נתמכת במספר מצבים.



צילום סלפי


תוכל להשתמש במצלמה הקדמית כדי להציג את פניך על המסך ולצלם סלפי.

צילום בתנועת יד

תוכל לצלם תמונות סלפי באמצעות מחוות.

הצג את כף ידך למצלמה הקדמית ולאחר מכן סגור אותה לאגרוף. תוכל גם לסגור אגרוף ולאחר מכן לפתוח אותו לכיוון המצלמה הקדמית.

- בתוך שלוש שניות תצולם תמונה.

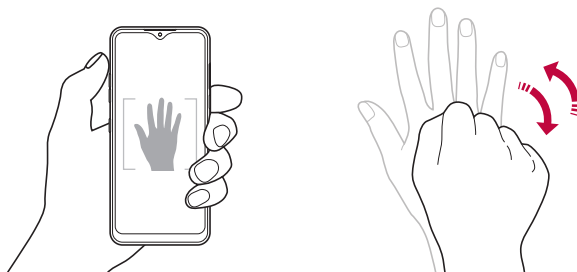

- כדי להשתמש בתכונה זו, עבור למצב המצלמה הקדמית ולאחר מכן הקש על  < **צילום סלפי** < **צילום בתנועת יד**.
- ודא שכף היד והאגרוף שלך נכללים בתוך קו הייחוס כך שהמצלמה תוכל לזהות אותם.
- ייתכן שתכונה זו לא תהיה זמינה בעת שימוש בחלק מתכונות המצלמה.

צילום אוטומטי

אתה יכול להיעזר בתכונת זיהוי הפנים כדי לצלם תמונות סלפי בקלות ובנוחות. ניתן להגדיר את המכשיר כך, שכאשר אתה מביט במסך המצלמה הקדמית מזהה את פרצופך ומצלמת סלפי באופן אוטומטי.

- המסגרת המנחה הלבנה מופיעה כאשר המצלמה הקדמית מזהה את פניך. אם הנושא בתוך המסגרת המנחה מפסיק לנוע, צבע המסגרת המנחה הופך לצהוב והמצלמה מצלמת את התמונה.

• הקש על  < **צילום סלפי** < **צילום אוטומטי** כדי להפעיל את התכונה 'צילום אוטומטי'.

צילום אינטרוולי

- תוכל לצלם תמונות סלפי במרווחי זמן קבועים. בעת השימוש במצלמה הקדמית, תוכל להציג את כף ידך למצלמה ולאחר מכן לכווץ אגרוף פעמיים במהירות.
- ארבע תמונות מצולמות במרווחים קבועים לאחר השהיית טיימר של שלוש שניות.

שמור הפוך



לפני שתצלם תמונה עם המצלמה הקדמית, הקש על  < **שמור הפוך**. התמונה תסתובב בכיוון ההופכי.

- בעת שימוש במצלמה הקדמית, תוכל לשנות את האופן שבו תמונות סלפי מצולמות באפשרויות המצלמה. ראה **התאמה אישית של אפשרויות המצלמה** לקבלת פרטים.

שיתוף מהיר

תוכל לשתף תמונה או סרטון וידאו עם היישום הרצוי מיד לאחר הצילום.

- 1 הקש על , ולאחר מכן צלם תמונה או הקלט סרטון וידאו.
 - 2 הקש על סמל היישום שמופיע במסך כדי לשתף אותו באמצעות יישום זה.
- באפשרותך גם להחליק את הסמל לכיוון ההפוך כדי לראות באילו יישומים אחרים תוכל להשתמש כדי לשתף את התמונות וסרטוני הווידאו שלך.

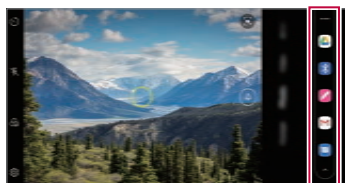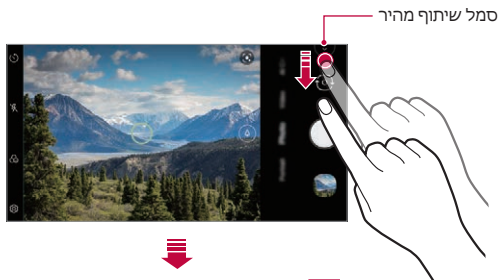

- היישום שסמל 'שיתוף מהיר' מציג עשוי להשתנות בהתאם לסוג ולתדירות הגישה שלך אל היישומים המותקנים במכשיר.
- תכונה זו זמינה רק במצבים מסוימים.

גלריה

סקירה כללית של הגלריה


תוכל להציג ולנהל תמונות וסרטוני וידאו שנשמרו במכשיר.

- 1 הקש על  < .
- 2 הקש על תיקייה ובחר קובץ.
 - הצג את הקובץ שנבחר במצב מסך מלא.
 - בעת צפייה בתמונה, החלק שמאלה או ימינה כדי להציג את התמונה הקודמת או התמונה הבאה.

- בעת צפייה בסרטון וידאו, החלק שמאלה או ימינה כדי להריץ אחורה או להריץ קדימה את הסרטון.
- ניתן להציג את התמונות או סרטוני הווידאו כשהם מסודרים לפי שנה, חודש או יום בלשונית 'תמונות'.
- כדי להציג את התמונות לפי המיקום בו צולמה התמונה, הקש על  <  <  < **תייג מיקומים**, ולאחר מכן הקש על . התמונות יקובצו באופן אוטומטי לפי מיקום בלשונית 'זיכרון' של היישום 'גלריה'.


- ייתכן שחלק מתבניות הקבצים אינן נתמכות, בהתאם לתוכנות המותקנות.
- ייתכן שקבצים מסוימים לא ייפתחו עקב קידוד.
- קבצים שחורגים ממגבלת הגודל עלולים לגרום לשגיאה.
- תצטרך להפעיל את מאפיין ה-GPS כדי ליצור אלבומי 'זיכרון'.

הצגת תמונות

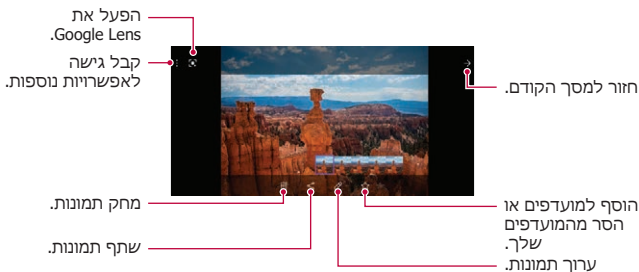

- כדי להציג את פריטי התפריט, הקש בעדינות על המסך. כדי להסתיר את פריטי התפריט, הקש שוב על המסך.

הפעלת קובץ וידאו

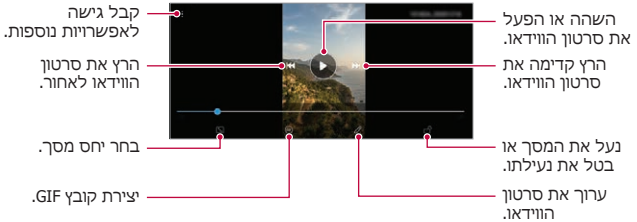

- כדי לכווון את עוצמת הקול, גרור את הצד הימני של מסך הווידאו למעלה או למטה.
- כדי לכווון את בהירות המסך, גרור את הצד השמאלי של המסך מעלה או מטה.

עריכת סרטוני וידאו

- 1 תוך כדי הצגת סרטון וידאו, הקש על ✎.
- 2 השתמש במגוון אפקטים וכלי עריכה כדי לערוך את סרטון הווידאו.



- 3 הקש על **שמור** כדי לשמור שינויים.

יצירת סרט

באפשרותך ליצור סרט חדש על-ידי שילוב תמונות וסרטוני וידאו.
ראה **יצירת סרט** לקבלת פרטים.

יצירת GIF

ניתן ליצור בקלות קובץ GIF באמצעות סרטון וידאו מוקלט.
ראה **יצירת GIF** לקבלת פרטים.

מחיקת קבצים

- תוכל למחוק קבצים באמצעות אחת משתי האפשרויות הבאות:
- הקש הקשה ממושכת על קובץ ברשימה, ולאחר מכן הקש על **מחק**.
 - הקש על  ברשימת הקבצים ומחק את הקבצים הרצויים.
 - קבצים שנמחקו מועברים באוסל **מיחזור** לפח האשפה וניתן לשחזר אותם לגלריה בתוך 7 ימים.
 - הקש על  כדי למחוק לחלוטין את הקבצים. במקרה זה, לא ניתן לשחזר את הקבצים.

שיתוף קבצים

- תוכל לשתף קבצים באמצעות אחת משתי האפשרויות הבאות:
- בעת הצגת תמונה, הקש על  כדי לשתף את הקובץ בשיטה הרצויה.
 - תוך כדי הצגת סרטון וידאו, הקש על **< שתף** כדי לשתף את הקובץ בשיטה הרצויה.
 - ברשימת הקבצים, הקש על  כדי לבחור קובץ ולשתף אותו בשיטה הרצויה.

אנשי קשר

סקירה כללית של אנשי קשר

באפשרותך לשמור ולנהל אנשי קשר.
הקש על $\bigcirc$ < חיוניים < אנשי קשר.

הוספת אנשי קשר

הוספת אנשי קשר חדשים

- 1 במסך של רשימת אנשי הקשר, הקש על $+$.
 - מופיע חלון קופץ לבחירת מיקום שמירת אנשי הקשר. בחר במיקום שאתה רוצה.
- 2 הזן פרטי איש קשר והקש על **שמור**.

ייבוא אנשי קשר

תוכל לייבא אנשי קשר מהתקן אחסון אחר.

- 1 במסך של רשימת אנשי הקשר, הקש על $:$ < **ניהול אנשי קשר** < **ייבוא**.
- 2 בחר את מיקומי המקור והיעד של איש הקשר שברצונך לייבא ולאחר מכן הקש על **אישור**.
- 3 בחר את אנשי הקשר והקש על **ייבוא**.

הוספת אנשי קשר לרשימת מספרי החיוג המהיר

- 1 במסך של רשימת אנשי הקשר, הקש על $:$ < **חיוג מהיר**.
- 2 הקש על **הוסף איש קשר** ממספר חיוג מהיר.
- 3 בחר איש קשר.

• בעת הוספת איש קשר חדש, הקש על $\begin{smallmatrix} 1 & 2 \\ 3 & 4 \end{smallmatrix}$ כדי להוסיף מספר לחיוג מהיר.



חיפוש אנשי קשר

תוכל לחפש אנשי קשר באמצעות אחת משתי האפשרויות הבאות:

- הקש על סרגל החיפוש בחלק העליון של מסך אנשי הקשר והזן את איש הקשר או מספר הטלפון הרצוי שאותו תרצה לחפש.
- גלול מעלה או מטה ברשימת אנשי הקשר.
- באינדקס של מסך רשימת אנשי הקשר, הקש על האות הראשונה של איש קשר.

• לחיצה על סרגל החיפוש בחלק העליון של מסך אנשי הקשר והזנת איש קשר או מספר טלפון מעלה את תוצאות החיפוש המשולבות מהיסטוריית השיחות ורשימת אנשי הקשר שנשמרו במוצר. 

רשימת אנשי קשר

עריכת אנשי קשר

- 1 במסך רשימת אנשי הקשר, בחר באיש הקשר הרצוי.
- 2 במסך פרטי איש הקשר, הקש על  וערוך את הפרטים.
- 3 הקש על **שמור** כדי לשמור שינויים.

מחיקת אנשי קשר

תוכל למחוק אנשי קשר באמצעות אחת משתי האפשרויות הבאות:

- במסך רשימת אנשי הקשר, הקש הקשה ממושכת על איש קשר שברצונך למחוק ולאחר מכן הקש על .
- הקש על **< מחק** במסך של רשימת אנשי הקשר.

• לא ניתן לשחזר אנשי קשר שנמחקו. 

הוספת מועדפים

באפשרותך לרשום אנשי קשר בשימוש נפוץ כמועדפים.

- 1 במסך רשימת אנשי הקשר, בחר באיש הקשר הרצוי.
- 2 במסך פרטי איש הקשר, הקש על ☆.

יצירת קבוצות

- 1 ברשימה של קבוצות אנשי הקשר, הקש על +.
- 2 הזן שם קבוצה חדשה.
- 3 הקש על **הוסף חברים**, בחר אנשי קשר ולאחר מכן הקש על **הוסף**.
- 4 הקש על **שמור** כדי לשמור את הקבוצה החדשה.

QuickMemo+

סקירה כללית של QuickMemo+

תוכל להוסיף הערות יצירתיות על-ידי שימוש במגוון אפשרויות בתכונות מתקדמות אלה של פנקס רשימות, כגון ניהול תמונות וצילומי מסך, שאינה נתמכת על-ידי פנקס הרשימות הקונבנציונלי.

יצירת הערה

- 1 במסך הראשי, הקש על **QuickMemo+**.
- 2 הקש על + כדי ליצור הערה.
 - ✓ : שמור הערה.
 - ↶ : בטל את העריכה הקודמת.
 - ↷ : בצע שוב את שינויי העריכה שנמחקו לאחרונה.
 - T : הזן הערה על-ידי שימוש בלוח המקשים.
 - ★ : שומר את סוגי העט המועדפים עליך.
 - ✍ : כתוב הערות באופן ידני.
 - 📱 : מחק הערות שנכתבו בכתב יד.

• :: : קבל גישה לאפשרויות נוספות.

3 הקש על ✓ כדי לשמור את ההערה.

כתיבת הערות על יישום מקליט מסך

1 תוך הצגת המסך שברצונך לצלם, גרור את שורת המצב כלפי מטה והקש על .

• המסך יצולם ויוצג כתמונה ממוזערת בפינה הימנית התחתונה של המסך.

2 כדי לכתוב הערות במסך, הקש על .

3 רשום הערות באמצעות הכלים.

•  : בצע הגדלה או הקטנה של התצוגה, או כוונן את האזור ללכידה.

•  : כתוב הערות באופן ידני.

•  : מחק הערות שנכתבו בכתב יד.

•  : בטל את העריכה הקודמת.


•  : בצע שוב את שינויי העריכה שנמחקו לאחרונה.

•  : חתוך את המסך כנדרש.

4 הקש על ✓ ושמור את ההערה.

• ניתן להציג הערות שמורות בגלריה.

תכונות נוספות לאחר צילום מסך

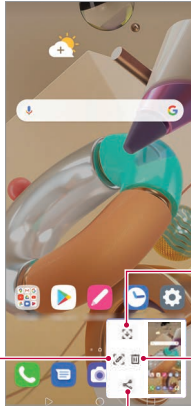

הקש כדי לצלם את המסך כולו באמצעות התכונה 'צילום בגלילה'.

הקש כדי למחוק צילום מסך שבוצע.

הקש כדי לרשום הערות על המסך שצילמת.

הקש כדי לשתף צילום מסך שבוצע.

- באפשרותך לצלם את המסך כולו באמצעות התכונה 'צילום בגלילה'.
- בעת שימוש ביישום כגון 'הודעות' או Chrome, גרור את לוח ההתראות כלפי מטה והקש על . כעת, הקש על  כדי לצלם את כל המסך בו אתה צופה כקובץ יחיד.
- תכונה זו זמינה רק ביישומים מסוימים שתומכים בתכונה צילום בגלילה.
- צבוט שתי אצבעות או הרחב את האצבעות כדי לשנות את פריסת התזכיר.

שעון

התראה

תוכל להגדיר התראה שתופעל במועד שצוין.

- 1 הקש על $\bigcirc$ < **שעון** < **התראה**.
- 2 הקש על $+$ כדי להוסיף התראה חדשה.
- 3 קבע את הגדרות ההתראה והקש על **שמור**.

- אם תבחר התראה שהוגדרה בעבר, תוכל לערוך אותה.
- כדי למחוק התראה, הקש על $:$ < **מחק** בראש המסך. לחלופין, הקש הקשה ארוכה על ההתראה.

שעון עולמי

תוכל להציג את השעה הנוכחית בערים ברחבי העולם.

- 1 הקש על $\bigcirc$ < **שעון** < **שעון עולמי**.
- 2 הקש על $+$ והוסף עיר.

טיימר

תוכל להגדיר טיימר כדי להפעיל התראה לאחר פרק זמן שצוין.

- 1 הקש על $\bigcirc$ < **שעון** < **טיימר**.
- 2 הגדר את הזמן והקש על **התחל**.
 - כדי להשהות את הטיימר, הקש על **השהה**. כדי לחדש את פעולת הטיימר, הקש על **המשך**.
- 3 הקש על **הפסק** כדי להפסיק את התראת הטיימר.

שעון עצר

תוכל להשתמש בשעון העצר כדי לתעד את משך הזמן שחלף.

- 1 הקש על $\bigcirc$ < **שעון** < **שעון עצר**.
- 2 הקש על **התחל** כדי להפעיל את שעון העצר.

- כדי לתעד זמן הקפה, הקש על **הקפה**.
- 3 **הקש על השהה** כדי להשהות את שעון העצר.
- כדי לחדש את פעולת שעון העצר, הקש על **המשך**.
- כדי לנקות את כל הרשומות ולהפעיל מחדש את שעון העצר, הקש על **איפוס**.


נגן מוסיקה

תוכל להשמיע ולנהל שירים או אלבומי מוסיקה.

1 הקש על  < **חיוניים** < **נגן מוסיקה**.

2 בחר קטגוריה.

3 בחר קובץ מוסיקה.

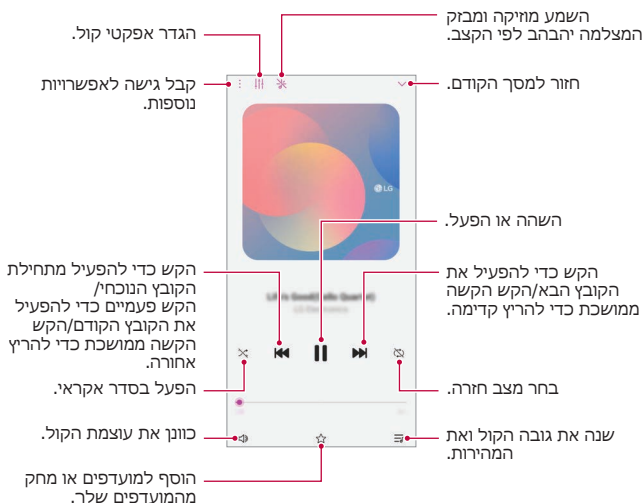

- ייתכן שחלק מתבניות הקבצים אינן נתמכות, בהתאם לתוכנות המותקנות. 
- קבצים שחורגים ממגבלת הגודל עלולים לגרום לשגיאה.
- קובצי מוסיקה עשויים להיות מוגנים על-ידי בעלים בינלאומיים של זכויות יוצרים או חוקי זכויות יוצרים. ייתכן שתצטרך להשיג אישור משפטי לפני העתקת קובץ מוסיקה. כדי להוריד או להעתיק קובץ מוסיקה, תחילה בדוק את חוק זכויות היוצרים עבור המדינה הרלוונטית.

מחשבון

לרשותך מחשבון משני סוגים: פשוט ומדעי.

- 1 הקש על  < **חיוניים** < **מחשבון**.
 - 2 השתמש בלוח המקשים כדי לבצע חישוב.
- כדי להפעיל מחדש את החישוב, גע והחזק את  הלחצן.

LG ThinQ

באפשרותך לחבר את המוצר בקלות עם מכשירי IoT כדי לפקח ולהשתמש בנוחות במכשירים.

הקש על  < **חיוניים** < **LG ThinQ**.

- ניתן לרשום מכונת כביסה, מייבש, סטיילינג, מדיח כלים, תנור ומנקה רובוטים רק כאשר המוצר במצב המתנה. 
- חפש את סימן LG ThinQ במוצר כדי לראות אם ניתן לחבר אותו לאפליקציית LG ThinQ.
- הקש על  כדי לבדוק פונקציות שונות של אפליקציית LG ThinQ.

מפעיל המשחק

באפשרותך לקבוע אם להשתמש במפעיל המשחק שבו אתה יכול להציג את רשימת המשחקים המותקנים במוצר ולבחור הגדרות משחק כגון השתקת נפח מדיה, הגבלת התראות וכו'.

1 לחץ על  < **חיוניים** < **מפעיל המשחק**.

2 בחר את האפשרות הרצויה.

הקלטה קולית

תוכל להקליט ולשמור את קולך או קולות של אחרים באירועים חשובים. קובצי הקול המוקלטים יופעלו או ישותפו.

1 הקש על  < **חיוניים** < **הקלטה קולית**.

- כדי להוסיף אירוע, הקש על **:** < **הוסף תגים** < **הוסף** תחת **אירוע**. כעת, הוסף אירוע בתאריך הרצוי.

- כדי לשמור את פרטי המיקום של ההקלטה, הקש על **:** < **הוסף תגים** < **הוסף** תחת **מיקום**.

2 הקש על .

- כדי להשהות הקלטה, הקש על .

3 הקש על  כדי לסיים את ההקלטה.

- הקובץ נשמר באופן אוטומטי ומוצג מסך הקבצים המוקלטים.

4 הקש על  כדי להפעיל את הקול המוקלט.

• הקש על  כדי להציג את הקבצים המוקלטים. תוכל להפעיל קובץ קול מוקלט מהרשימה.

רדיו FM

תוכל להאזין לרדיו FM.

הקש על  < **חיוניים** < **רדיו FM**.

- כדי להשתמש ביישום זה, תחילה חבר אונייה למכשיר. האונייה הופלת לאנטנת הרדיו.
- התמיכה באפשרות זו תלויה באזור.

מרכז עדכונים

ניתן לבדוק קיום עדכונים חדשים של יישומים ותוכנות שמסופקים על-ידי LG ולהתקין אותם.

הקש על  < **כלי ניהול** < **מרכז עדכונים**.

Smart Doctor

תוכל להשתמש ב-Smart Doctor כדי לאבחן את מצב המכשיר ולמטב אותו.

הקש על  < **כלי ניהול** < **Smart Doctor**.

LG Mobile Switch

העבר בקלות נתונים ממכשיר משומש למכשיר חדש באמצעות LG Mobile Switch.

- 1 הקש על  < **כלי ניהול** < **LG Mobile Switch**.
באפשרותך גם להקיש על  < **הגדרות** < **מערכת** < **גיבוי** < **LG Mobile Switch**.

- 2 פעל בהתאם להוראות המופיעות במסך כדי לבחור שיטת העברה רצויה.

- הנתונים בחשבון Google לא יגובו. כאשר אתה מסנכרן את חשבון Google שלך, יישומי Google, אנשי הקשר של Google, Google Calendar, נתוני יישום התזכורות של Google ויישומים שהורדו מחנות Play יאוחסנו ביישום Drive באופן אוטומטי.
- טען את הסוללה באופן מלא לפני העברת נתונים כדי למנוע כיבוי שלא בכוונה בזמן התהליך.

יישום סל המיחזור

באפשרותך לראות את רשימת היישומים שנמחקו על מסך הבית. ניתן לשחזר את האפליקציה שנמחקה במהלך 24 השעות האחרונות. הקש על  < **כלי ניהול** < **יישום סל המיחזור**.
לפרטים נוספים עיין ב **יישום סל המיחזור**.

SmartWorld

תוכל להוריד מגוון משחקים, תכני שמע, יישומים וגופנים המסופקים על-ידי LG Electronics. התאם אישית את המכשיר שלך כדי להתאימו להעדפותיך באמצעות ערכות הנושא והגופנים של המסך הראשי.

- אם אתה משתמש בנתונים לנייד, ייתכן שתחויב בתשלום בגין השימוש בנתונים, בהתאם לתוכנית המחירים שלך.
- ייתכן שלא תהיה תמיכה בתכונה זו, התמיכה נקבעת בהתאם לאזור או לספק השירות.

- 1 הקש על  < **שירותים** < **SmartWorld**.
- 2 הקש על **:** < **כניסה** כדי להיכנס.
- 3 בחר והורד את פריטי התוכן הרצויים.

שירות התראות חירום

תוכל להציג שידורי טקסט בזמן במצבי חירום, כגון סופות טיפון, שיטפונות ורעידות אדמה.

הקש על  < שירותים < שירות התראות חירום.

יישומי Google

ניתן להשתמש ביישומי Google על-ידי הגדרת חשבון Google. חלון הרישום של חשבון Google יופיע באופן אוטומטי כאשר תשתמש ביישום של Google בפעם הראשונה. אם אין לך חשבון Google, צור חשבון במכשיר שלך. לפרטים בנוגע לאופן השימוש ביישום, עיין בעזרה שסופקה ביישום.

• ייתכן שיישומים מסוימים לא יפעלו, בהתאם לאזור ולספק השירות. 

Chrome

דפדפן מהיר, פשוט ומאובטח לאינטרנט המודרנית.

Docs

Docs הוא כלי עיבוד תמלילים בשיתוף פעולה המרחיב את הפרודוקטיביות. השתמש ב-Docs כדי ליצור, לערוך ולעבוד יחד בזמן אמת.

Drive

Drive הוא יישום אחסון קבצים ושיתוף המקל עליך לאתר, לשתף ולשתף פעולה על פרויקטי עבודה מכל מקום שהוא, באופן מדי.

Duo

צור שיחות וידאו פשוטות ובאיכות גבוהה עם חברים ובני משפחה מטלפוני iPhone ו-Android.

Gmail

Gmail הוא יישום דואר אלקטרוני קל לשימוש השומר על ההודעות שלך מאובטחות, הופך את תיבת הדואר הנכנס לחכמה יותר, ומסייע לך לשמור על הסדר.

Google

יישום Google מעדכן אותך בדברים בהם אתה מעוניין. אתר תשובות במהירות, סקור את תחומי העניין שלך וקבל הזנה של חדשות ועדכונים בנושאים שמעניינים אותך.

הערות ב-Keep

צור, ערוך ושתף את הערות הטקסט והתמונות באמצעות חשבון Google.

מפות

נוסף למקום כלשהו? עבור אל Maps, היישום הנשען על ניווט GPS בזמן אמת, מידע תנועה, תעבורה ופרטים על מיליוני מקומות, כגון סקירות וזמנים פופולריים.

תמונות

הבית של כל התמונות והווידאו שלך, מסודר באופן אוטומטי כדי שתוכל לשתף ולשמור את מה שחשוב לך.

סרטים Play

השתמש בחשבון Google כדי לשכור או לרכוש סרטים. קנה תוכן והפעל אותו בכל מקום.

YT Music

קנה קובצי מוסיקה מ-Play Store. הפעל מוסיקה שנשמרה במכשיר שלך.

Sheets

Sheets הוא כלי גיליון אלקטרוני בשיתוף פעולה המרחיב את הפרודוקטיביות. השתמש ב-Sheets כדי לייבא, לארגן ולנתח מידע ביחד בזמן אמת.

Slides

Google Slides הוא כלי מצגות בשיתוף פעולה המרחיב את הפרודוקטיביות. השתמש ב-Slides כדי לארגן מידע, להציג תוצאות ולקבל החלטות ביחד בזמן אמת.

YouTube

צפה בערוצים המועדפים שלך, האזן למוסיקה שאתה אוהב, והעלה סרטוני וידאו כדי לשתף אותם עם אנשים ברחבי העולם.

Assistant

המכשיר שלך כולל את Google Assistant באופן מובנה. אתר תשובות ובצע פעולות כאשר תהיה מחוץ למשרד/לבית. כדי להתחיל, פשוט הקש על מקש Google Assistant בצד המכשיר או גע והחזק בלחצן הבית של הטלפון.

Google Assistant אינו זמין במדינות ושפות מסוימות. 

יומן

אפליקציית לוח השנה מאפשרת לך לעקוב אחר לוח הזמנים של האירועים שלך (שיצרת), מאורגן לפי יום, 3 ימים, שבוע או חודש.

Files

יש לך אפשרות להציג ולנהל קבצים השמורים במכשיר שלך.



04

הגדרות

הגדרות

תוכל להתאים אישית את הגדרות המכשיר על פי העדפותיך.
הקש על  < **הגדרות**.

- אם אתה מזין מילת מפתח בחלון החיפוש שבראש המסך, תוכל להפעיל בנוחות את הפריטים שצריך להגדיר. 

רשת ואינטרנט

כרטיס SIM כפול

ניתן לקבוע את הגדרות SIM כפול.

1 רשת ואינטרנט **רשת ואינטרנט** < **כרטיס SIM כפול**.

2 התאם אישית את הפונקציות הבאות:

- **כרטיס 1 SIM**: שנה את השם והסמל של כרטיס 1 SIM.
- **כרטיס 2 SIM**: שנה את השם והסמל של כרטיס 2 SIM.
- **צבע נושא לכרטיס SIM**: שנה את ערכות הנושא לצבעים עבור כרטיסי ה-SIM.
- **מצב חסכון בעלויות**: הפעל או בטל את ההפעלה של מצב חסכון בעלויות. במצב חסכון בעלויות, אם אתה מבצע שיחה אל איש קשר שהוקצה לו SIM ספציפי, SIM זה ישמש עבור השיחה אפילו אם ה-SIM השני פעיל; לדוגמה, הוא עושה שימוש בנתונים ניידים.
- **נתונים ניידים**: בחר בכרטיס SIM שבו ברצונך להשתמש עבור שירות נתונים ניידים. אתה יכול גם לכבות פונקציה זו.
- **נדידת נתונים**: בחר באפשרות זו כדי לאפשר למכשיר להשתמש בנתונים ניידים כאשר אתה בנדידה אל מחוץ לאזור הרשת הביתית שלך.
- **נתונים ניידים במהלך שיחות**: גש לנתונים הניידים באמצעות כרטיס ה-SIM של נתוני ה-default non באופן זמני במהלך שיחה קולית HD עם אותו כרטיס.

תוכל להתחבר למכשירים סמוכים או באמצעות רשת Wi-Fi.

התחברות לרשת Wi-Fi

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט < Wi-Fi**.
- 2 הקש על  כדי להפעיל אותו.
 - רשתות ה-Wi-Fi הזמינות יופיעו באופן אוטומטי.
- 3 בחר רשת.
 - ייתכן שתצטרך להזין את סיסמת ה-Wi-Fi של הרשת.
 - המכשיר מדלג על תהליך זה עבור רשתות Wi-Fi שבוצעה אליהם גישה בעבר. אם אינך רוצה להתחבר באופן אוטומטי לרשת Wi-Fi מסוימת, הקש על הרשת ולאחר מכן הקש על **שכח**.

הגדרות רשת Wi-Fi

- במסך ההגדרות, הקש על **רשת ואינטרנט < Wi-Fi**.
- **עבור לנתונים ניידים:** אם תופעל פונקציית הנתונים הניידים אך המכשיר לא יצליח להתחבר לאינטרנט באמצעות Wi-Fi, המכשיר יתחבר לאינטרנט באופן אוטומטי באמצעות פונקציית הנתונים הניידים.

•  הזמינות של תכונה זו תלויה בספק השירות.

- :: : התאם אישית את ההגדרות של רשת Wi-Fi

Wi-Fi Direct

תוכל לחבר את ההתקן שלך להתקנים אחרים שתומכים ב-Wi-Fi Direct כדי לשתף נתונים ישירות איתם. אינך צריך נקודת גישה. תוכל להתחבר עם יותר משני מכשירים באמצעות Wi-Fi Direct.

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט < Wi-Fi < ::**
- מדקתם < Wi-Fi Direct < Wi-Fi**.

- מכשירים סמוכים שתומכים ב-Wi-Fi Direct יופיעו באופן אוטומטי.

- החיבור מתרחש כאשר המכשיר מקבל את בקשת החיבור.

• בעת שימוש ב-Wi-Fi Direct, הסוללה עשויה להתרוקן מהר יותר. 

נתונים ניידים

באפשרותך להפעיל ולכבות את הנתונים הניידים. תוכל גם לנהל את השימוש בנתונים לנייד.

הפעלת נתונים לנייד

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט > נתונים ניידים**.
- 2 הקש על  כדי להפעיל אותו.

התאמה אישית של הגדרות הנתונים לנייד

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט > נתונים ניידים**.
 - 2 התאם אישית את ההגדרות הבאות:
- **נתונים ניידים:** הגדר שימוש ברשתות סלולריות לצורך חיבורי נתונים.
 - **הגבל שימוש בנתונים ניידים:** הגדר מגבלה לשימוש בנתונים לנייד כדי לחסום נתונים לנייד אם הגעת למגבלה.
 - **⋮ :** התאם אישית את ההגדרות הנתונים לנייד.
 - **נפח השימוש בנתונים נמדד על סמך המוצר, והנפח המחושב על ידי ספק הסלולר שלך עשוי להיות שונה.**

הגדרות שיחה

תוכל להתאים אישית את הגדרות השיחה, כגון אפשרויות שיחה קולית ושיחה בינלאומית.

• ייתכן שחלק מהפונקציות אינן נתמכות, בהתאם לאזור ולספק השירות. 

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט > הגדרות שיחה**.

שיתוף אינטרנט

שיתוף באמצעות USB

תוכל לחבר את המכשיר למכשיר אחר דרך USB ולשתף נתונים לנייד.

1 חבר את המכשיר והמכשירים האחרים באמצעות כבל USB.

2 במסך ההגדרות, הקש על **רשת ואינטרנט** < **שיתוף אינטרנט** < **שיתוף באמצעות USB** ולאחר מכן הקש על  כדי להפעיל אותו.

- אפשרות זו משתמשת בנתונים לנייד, ועשויה להיות כרוכה בתשלום, בהתאם לתוכנית המחירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.
- בעת התחברות למחשב, הורד את מנהל התקן ה-USB מהאתר www.lg-mobile.co.il והתקן אותו במחשב.
- לא ניתן להעביר קבצים בין המכשיר למחשב כאשר חיבור לאינטרנט באמצעות USB מופעל. כבה את החיבור לאינטרנט באמצעות USB כדי לשלוח או לקבל קבצים.
- מערכות הפעלה שתומכות בחיבור לאינטרנט הן Windows XP ואילך, או Linux.

נקודה חמה ניידת ב- Wi-Fi

תוכל להגדיר את המכשיר כנתב אלחוטי כך שהמכשירים האחרים יוכלו להתחבר לאינטרנט באמצעות חיבור הנתונים לנייד של המכשיר.

1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **שיתוף אינטרנט** < **נקודה חמה ניידת ב- Wi-Fi** ולאחר מכן הקש על  כדי להפעיל אותו.

2 הקש על **הגדרת נקודה חמה של Wi-Fi**, ולאחר מכן הזן את שם (SSID) Wi-Fi והסיסמה.

3 הפעל את Wi-Fi במכשיר השני ובחר את השם של רשת המכשיר ברשימת ה-Wi-Fi.

- אפשרות זו משתמשת בנתונים לנייד, ועשויה להיות כרוכה בתשלום, בהתאם לתוכנית המחירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.
- לרשותך מידע נוסף באתר אינטרנט זה:
<http://www.android.com/tether#wifi>

טיימר לכיבוי נקודה חמה ניידת ב-Wi-Fi

לאחר תקופה מסוימת שבה הנקודה החמה הניידת ב-Wi-Fi אינה בשימוש, היא מנותקת באופן אוטומטי. באפשרותך להגדיר את הזמן שבו יתבצע ניתוק אוטומטי.

שיתוף אינטרנט ב-Bluetooth

ניתן לחבר מכשיר עם חיבור Bluetooth לאינטרנט דרך חיבור הנתונים לנייד במכשיר שלך.

1 במסך ההגדרות, הקש על **רשת ואינטרנט > שיתוף אינטרנט > שיתוף אינטרנט ב-Bluetooth** ולאחר מכן הקש על  כדי להפעיל אותו.

2 הפעל את ה-Bluetooth בשני המכשירים והתאם ביניהם.

- אפשרות זו משתמשת בנתונים לנייד, ועשויה להיות כרוכה בתשלום, בהתאם לתוכנית המחירים שלך. לקבלת מידע נוסף, פנה לספק השירות שלך.
- לרשותך מידע נוסף באתר אינטרנט זה:
http://www.android.com/tether#Bluetooth_tethering

עזרה

תוכל להציג את העזרה בנושא קשירה ונקודות חמות.

במסך ההגדרות, הקש על **רשת ואינטרנט > שיתוף אינטרנט > עזרה**.

מצב טיסה

תוכל לכבות את פונקציות השיחה והנתונים לנייד. כאשר מצב זה מופעל, פונקציות שאינן כוללות נתונים, כמו הפעלת משחקים ומוסיקה, הופכות ללא זמינות.

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **מצב טיסה**.
- 2 הקש על **הפעל** במסך האישור.

רשתות ניידות

אתה יכול להתאים אישית את הגדרות הרשת הניידת.

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **רשתות ניידות**.
- 2 התאם אישית את ההגדרות הבאות:
 - **סוג רשת**: בחרו סוג רשת.
 - **שמות נקודות גישה**: הצג או שנה את נקודת הגישה לשימוש בשירותי נתונים לנייד. כדי לשנות את נקודת הגישה, בחר אפשרות מתוך רשימת נקודות הגישה.
 - **מפעילי רשת סלולרית**: חפש מפעילי רשת סלולרית והתחבר באופן אוטומטי לרשת.

VPN

תוכל להתחבר לרשת וירטואלית בטוחה, כמו אינטראנט. תוכל גם לנהל רשתות פרטיות וירטואליות מחוברות.

הוספת VPN

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט** < **VPN**.
- 2 הקש על **+**.

• תכונה זו זמינה רק כאשר נעילת המסך מופעלת. אם נעילת המסך מבוטלת, מופיע מסך התראות. הקש על **שנה** במסך ההתראה כדי להפעיל את נעילת המסך. ראה **הגדרת נעילת מסך** לקבלת פרטים.

- 3 הזן פרטי VPN והקש על **שמור**.

קביעת ההגדרות של VPN

- 1 הקש על VPN ברשימה **VPNS**.
- 2 הזן את פרטי חשבון המשתמש של VPN והקש על **התחבר**.
 - כדי לשמור את פרטי החשבון, סמן את התיבה **שמור פרטי חשבון**.

DNS פרטי

באפשרותך להגדיר את אפשרויות ה-DNS (מערכת שמות מתחם) הפרטי.

- 1 במסך ההגדרות, הקש על **רשת ואינטרנט < DNS פרטי**.
- 2 בחר את האפשרות הרצויה ולחץ על **שמור**.

התקנים מחוברים

Bluetooth

תוכל לחבר את המכשיר שלך למכשירים סמוכים שתומכים ב-Bluetooth כדי להחליף איתם נתונים. חבר את המכשיר לאזוניית Bluetooth ולמקלדת. בדרך זו תוכל לשלוט בקלות רבה יותר במכשיר.

שיוך עם מכשיר אחר

- 1 במסך ההגדרות, הקש על **התקנים מחוברים < Bluetooth**.
- 2 הקש על  כדי להפעיל אותו.
 - המכשירים הזמינים מופיעים באופן אוטומטי.
 - כדי לרענן את רשימת המכשירים, הקש על .

רק מכשירים שמוגדרים כגלויים מוצגים ברשימה. 

- 3 בחר מכשיר מהרשימה.
- 4 פעל לפי ההוראות שעל המסך כדי לבצע את האימות.

- המערכת מדלגת על שלב זה עבור מכשירים שבוצעה אליהם גישה בעבר.



שליחת נתונים דרך חיבור Bluetooth

- 1 בחר קובץ.
 - תוכל לשלוח קובצי מולטימדיה או אנשי קשר.
- 2 הקש על  > **Bluetooth**.
- 3 בחר מכשיר יעד עבור הקובץ.
 - הקובץ ישלח ברגע שמכשיר היעד יקבל אותו.

- תהליכי שיתוף הקבצים עשויים להשתנות, בהתאם לקובץ.



לוח השיתוף

תוכל לשתף תוכן מ'גלריה', מ'מוסיקה' ומ'מנהל הקבצים' עם מכשירים סמוכים. תוכל גם לשתף תוכן עם אנשים מסוימים ביישומים הפועלים עם Google Direct Share.

- 1 במסך ההגדרות, הקש על **התקנים מחוברים** < **לוח השיתוף**.
- 2 הקש על  כדי לבטל פעולה של כל אחת מהאפשרויות.
 - **מכשירים סמוכים**: ניתן להציג את המכשירים הקרובים אליהם תוכל לשתף תוכן ביישומים 'גלריה' ו'מוסיקה'.
 - **שיתוף ישיר**: מאפליקציה התומכת ב-Google Direct Share, אתה יכול להציג סמל המאפשר לשתף תוכן לאנשים ספציפיים.

שיתוף קבצים

תוכל לשלוח ולקבל קבצים בין המכשיר שלך למכשירים או טאבלטים אחרים של LG.

1 במסך ההגדרות, הקש על **התקנים מחוברים** < **שיתוף קבצים**.

2 התאם אישית את ההגדרות הבאות:

• **K41S**: שנה את שם המכשיר.

• **שמור ב**: הגדר את תיקיית היעד שבה יישמרו קבצים שנשלחו ממכשירים אחרים.

• **שיתוף קבצים**: אפשר קבלה של קבצים שנשלחו ממכשירים אחרים.

• **SmartShare Beam**: שתף קבצים עם מכשירים אחרים דרך SmartShare Beam.

• **עזרה**: באפשרותך להציג עזרה על שיתוף קבצים.

הדפסה

תוכל לחבר את המכשיר למדפסת Bluetooth ולהדפיס תמונות או מסמכים השמורים במכשיר.

במסך ההגדרות, הקש על **התקנים מחוברים** < **הדפסה**.

• הקש על **שירות ההדפסה המוגדר כברירת מחדל** לחפש מדפסות שאליהן תוכל להתחבר. או, הקש על **+** **הוסף מדפסת** להוסיף מדפסת ידנית.

• הקש על **+** **הוסף שירות** להוריד את אפליקציית המדפסת הרצויה.

• זה זמין רק כאשר הרשת הסלולרית או פונקציית Bluetooth מופעלת 

• כדי להוריד את אפליקציית המדפסת ב **+** **הוסף שירות**, התחבר תחילה לחשבון Google שלך.

תוכל להתאים אישית את הגדרות הקול, הרטט וההתראות. במסך ההגדרות, הקש על **צליל** והתאם אישית את ההגדרות הבאות:

- **פרופילי צליל:** שנה את מצב הצליל ל**צליל**, **רטט בלבד** או **השתק**.
- **עוצמה:** התאם את עוצמת הצליל של פריטים שונים.
- **צלצול:** בחר רינגטון לשיחות נכנסות. הוסף או מחק רינגטונים.
- **צליל התראה:** בחר רינגטון להתראה. הגדר מוסיקה שנשמרה במכשיר כרינגטון להתראה.
- **צלצול עם רטט:** קבע כי המכשיר יפעיל רטט וישמיע רינגטון בו-זמנית.
- **צלצול מותאם:** צור רינגטון לשיחה נכנסת מאיש קשר מסוים.
- **התראה בפלאש בעת קבלת שיחה:** הגדר שהמבזק יהבהב לפי הרינגטון של LG.
- **נא לא להפריע:** הגדר את השעה, הטווח וסוג היישום לקבלת הודעות של התראות. קבל הודעות של התראות בימים מסוימים בשבוע בלבד.
- **איכות הקול ואפקטים:** השתמש בתפקוד זה כדי לקבוע את איכות הקול והאפקטים בעת הפעלת שיר או סרטון וידאו.
- **סוג רטט:** אתה יכול לבחור את סוג הרטט כשאתה מקבל שיחות.
- **צליל לוח המקשים:** אפשר את האפקט של צליל לוח מקשי החיוג.
- **צליל המקלדת LG:** אפשר את האפקט של צליל מקלדת LG.
- **צליל מגע:** אפשר את אפקט הצליל של הקשה על פריט.
- **צליל נעילת מסך:** אפשר את אפקט הצליל שיושמע בעת נעילה או שחרור נעילה של המסך.

התראות

ניתן לבדוק את רשימת היישומים המותקנים, ולקבוע הגדרות להתראות.

1 במסך ההגדרות, הקש על **התראות**.

2 התאמה אישית של ההגדרות כנדרש.

תצוגה

תוכל להתאים אישית הגדרות מפורטות לכל סוג מסך.

במסך ההגדרות, הקש על **תצוגה** והתאם אישית את ההגדרות הבאות:

- **מסך ראשי:** התאם אישית את הגדרות מסך בית. ראה **הגדרות מסך בית** לקבלת פרטים.
- **יצירת מסך משני חדש:** בחר כיצד ייראו שורת המצב ופינות היישומים.
- **שורת ניווט:** קבע את הסגנון של סרגל הניווט באמצעות 'מחוות' או 'לחצנים בלבד'. ניתן גם לשנות את שילוב הלחצנים כאשר תגדיר את 'לחצנים בלבד' כסגנון סרגל הניווט. לפרטים, ראה **שינוי הסגנון של לחצני התצוגה**.
- **תצוגה נוחה:** הגדר את המכשיר להפחתת כמות האור הכחול על המסך כדי לצמצם את מאמץ העיניים.
- **מצב לילה:** באפשרותך להחיל נושא מסך מעומעם כדי להימנע מבוהק על המסך בשעות הלילה.
- **צבע מבטא:** שנה את צבע הנקודה עבור הגדרות, תפריטים, חלונות התראה וכו'.
- **גופן:** שנה את גודל הגופן, ההדגשה או הסוג.
- **גודל תצוגה:** הגדר את הפריטים במסך לגדול שתוכל לראות בקלות. ייתכן שחלק מהפריטים ישנו מיקום.
- **התאמת הצגת יישום לגודל המסך:** כוונן את גודל פריסת היישומים במסך.
- **בהירות:** השתמש במחוון כדי לשנות את בהירות המסך של המכשיר.

- **אוטומטי:** הגדר את המכשיר כך שבהירות המסך תותאם באופן אוטומטי לעוצמת התאורה בסביבה.
- **כיבוי מסך אוטומטי:** כבה באופן אוטומטי את המסך כאשר המכשיר לא היה פעיל במשך פרק זמן שצוין.
- **סיבוב מסך אוטומטי:** סובב באופן אוטומטי את המסך בהתאם לכיוון המכשיר.
- **שומר מסך:** הצג שומר מסך כאשר המכשיר מחובר למחזיק או למטען. בחר את סוג שומר המסך שיוצג.
- **שליטה על המסך ביד אחת:** לנוחותך, הקטן את גודל המסך כדי להשתמש במכשיר ביד אחת. גרור את לחצני המגע במסך הבית שמופיעים בתחתית המסך שמאלה או ימינה.

טפט וערכת נושא

אתה יכול לבחור טפט, נושא מסך או סגנון אייקון למכשיר שלך.

- 1 במסך ההגדרות, הקש על **טפט וערכת נושא**.
- 2 הקש על **טפט**, **ערכת נושא** או אייקון כדי להתאים אישית את ההגדרות.

מסך הנעילה ואבטחה

תוכל להתאים אישית את הגדרות נעילת המסך והאבטחה.

- 1 במסך ההגדרות, הקש על **מסך הנעילה ואבטחה**.
 - 2 התאם אישית את ההגדרות.
- **Google Play Protect:** סורק את המכשיר מדי יום לאיתור יישומים שעלולים להזיק.
 - **איפה המכשיר שלי?:** עקוב מרחוק אחר מיקום המכשיר. תוכל גם להגן על אבטחת הנתונים שלך אם איבדת את המכשיר שלך.
 - **עדכון אבטחה:** בדוק לעדכוני אבטחה וקבע את התצורה של הגדרות ההתקנה האוטומטית.

- **בחר נעילת מסך:** בחר את השיטה הרצויה לנעילת המסך. ראה **הגדרת נעילת מסך** לקבלת פרטים.
- **התאמה אישית של מסך הנעילה:** שנה את המידע המוצג במסך נעילה.
- **הגדרות נעילה מאובטחת:** שנה את הגדרות הנעילה המאובטחת.
- **טביעות אצבע:** השתמש בטביעת אצבע כדי לבטל נעילת המסך או התוכן. ראה **סקירה כללית של זיהוי טביעת אצבע** לקבלת פרטים.
- **נעילת תוכן:** מאפשר לך לקבוע שיטת נעילה (סיסמה או תבנית) עבור קובצי QuickMemo+ ותזכירים.
- **הצפנה ואישורים:** קבע את ההגדרות של ההצפנה והאישורים עבור כרטיס SD.
- **הצפן אחסון כרטיס SD:** הצפן את כרטיס הזיכרון כדי למנוע שימוש במכשיר אחר. ראה **הצפנת כרטיס זיכרון** לקבלת פרטים.
- **אתחול מאובטח:** הגן על המכשיר שלך בעזרת מנעול בעת שהוא מופעל. ראה **הגדרות אתחול מאובטח** לקבלת פרטים.
- **הגנה על אישורים:** הצג את סוג האחסון שבו אישור האבטחה יישמר.
- **אישורים מהימנים:** הצג את אישורי רשות אישורים (CA) עליונה ואישורי CA בהתקנת משתמש.
- **תעודות המשתמש:** הצג ושנה את מידע אישורי האבטחה המאוחסנים במכשיר שלך.
- **התקן מהאחסון:** התקן אישור אבטחה מהתקן אחסון.
- **נקה אישורים:** מחק אישורי אבטחה בהתקנת משתמש ואישורים קשורים.
- **הגדר נעילת כרטיס SIM:** נעל או בטל נעילה של כרטיס ה-USIM, או שנה את הסיסמה (PIN).
- **מנהלי התקנים:** אפשר הרשאות להגבלת השליטה או השימוש במכשיר עבור יישומים מסוימים.

- **Trust agents:** הצג והשתמש בסוכנים אמינים המותקנים במחשב.
- **קביעת מסך:** תקן את מסך היישום כדי לאפשר שימוש ביישום הפעיל כעת בלבד.
- **גישה לשימוש:** הצג פרטים על השימוש ביישומים במכשיר.

פרטיות

ניתן לחפש ולכוון את כל הגדרות הפרטיות שלך.

- 1 במסך ההגדרות, הקש על **פרטיות**.
 - 2 התאם אישית את ההגדרות.
- **מנהל הרשאה:** מאפשר לבדוק ולשנות את ההרשאות המוענקות ליישומים.
 - **מסך נעילה:** מאפשר לקבוע את התראות להצגה במסך הנעילה.
 - **הפוך את הסיסמאות לגלויות:** אפשר אפשרות זו כדי להציג לזמן קצר את כל אחד מתווי הסיסמה בעת ההקלדה, כדי שתוכל לראות מה הזנת.
 - **שירות מילוי אוטומטי מאת Google:** אפשר אפשרות זו כדי להכניס את המידע שלך שנשמר בחשבון, כגון סיסמה, כתובת או מספר כרטיס אשראי בהקשה אחת. ניתן גם להשבית את האפשרות, להשתמש בתכונת Google Autocomplete או להוסיף חשבון שירות חדש.
 - **היסטוריית מיקומים ב-Google:** מאפשר לך לאפשר או להשבית את היסטוריית המיקומים. כאשר מאפשר, Google מאחסנת ומשתמשת באופן תקופתי בנתוני המיקום האחרון ביותר של הטלפון שלך בהקשר לחשבון Google. ממסך 'היסטוריית מיקומים', הקש על : כדי להציג ו/או לנהל את נתוני המיקום שלך.
 - **בחירת פעילויות:** בחר פעילויות ומידע שתמצה ש-Google תשמור.
 - **מודעות:** מאפשר לך לבדוק את מזהה הפרסום ולקבוע את הפרסומות המותאמות אישית.

- **שימוש ואבחון:** אפשר את האפשרות הזו כדי לסייע בשיפור חוויית Android על-ידי שליחה אוטומטית של נתוני אבחון, מכשיר ויישום אל Google.

מיקום

ניתן לבדוק איך מידע המיקום שלך ישותף ולקבוע את תצורת ההרשאה כדי לגשת למידע המיקום. במסך ההגדרות, הקש על **מיקום** וקבע את התפקוד הרצוי.

הרחבות

Smart Doctor

תוכל להשתמש ב-Smart Doctor כדי לאבחן את מצב המכשיר ולמטב אותו.

במסך ההגדרות, הקש על **הרחבות < Smart Doctor**.

משחקים

באפשרותך להגדיר את התצורה של כלי משחק, של גרפיקה ושל תכונת חיסכון הסוללה.

1 במסך ההגדרות, הקש על **הרחבות < משחקים**.

2 התאם אישית את ההגדרות הבאות:

- **מפעיל המשחק:** הקש  כדי להשתמש במשגר המשחק.
- **כלי משחק:** באפשרותך להפעיל את הפונקציה תוך כדי משחק על ידי נגיעה בסמל כלי המשחק בין כפתורי המגע הראשיים.
- **גרפיקת המשחקים:** כוונן את גרפיקת המשחק.

- כשאתה משנה את הרזולוציות במשחקים מסוימים, תכונת התצוגה של המכשיר עשויה שלא לפעול כראוי.
- ייתכן שתכונה זו לא תהיה זמינה בהתאם לאפליקציות משחקים מסוימות.



- **הפסקה:** הפחת את בהירות המסך ואת הביצועים בכל פעם שאתה משאיר את המשחק פועל למשך יותר מ-5 דקות.

יישום כפול

באפשרותך להתקין אפליקציות מסרים כפולות על המוצר ולהשתמש בשני חשבונות בו זמנית.

1 במסך ההגדרות, הקש על **הרחבות** < **יישום כפול**.

2 לאחר קריאת כתב הוויתור, הקש על **אשר**.

3 ברשימת האפליקציות הזמינות, הקש על **התקן** כדי להתקין עותק של אפליקציה רצויה ופעל לפי ההנחיות המופיעות על המסך.

- על המסך מוצגת רשימת היישומים הכפולים הזמינים. במהלך ההתקנה נוצרים סמלי אפליקציות במסך הבית.

קיצורי דרך

באפשרותך להשתמש בלחצנים כגון נעילה / כיבוי, עוצמת קול ו-Google Assistant כדי להפעיל יישומים או פונקציות מסוימות מייד.

1 במסך ההגדרות, הקש על **הרחבות** < **קיצורי דרך**.

2 התאם אישית את ההגדרות הבאות:

- **הצגת לוח ההודעות:** החלק את האצבע מעלה/מטה על חיישן טביעות האצבע להצגת לוח ההודעות.

- **פתח את המצלמה:** לחץ פעמיים על לחצן ההפעלה כדי לפתוח את 'מצלמה'.

- **פתח תזכיר מחוץ למסך:** הקש פעמיים על מקש הגברת עוצמת הקול כדי לפתוח תזכורת במצב מסך נעול כאשר המסך נעול או כבוי.

- **פתח את המצלמה:** הקש פעמיים על מקש החלשת העוצמה כדי לפתוח את **מצלמה** כאשר המסך נעול או כבוי.

- **פתח Google Assistant:** לחץ על מקש Google Assistant בצד הטלפון.

- **דבר עם Google Assistant:** לחץ והחזק את המקש Google Assistant כדי לדבר במהירות עם Assistant שלך.

הפעל מסך

הקש פעמיים על המסך כדי להפעיל או להפסיק את המסך.
ראה **הפעל מסך** לקבלת פרטים.

יישומים

ניתן לבדוק את רשימת היישומים המותקנים, ולקבוע הגדרות להתראות, להרשאות היישום ועוד.

- 1 במסך ההגדרות, הקש על **יישומים**.
- 2 התאם אישית את ההגדרות.

סוללה

תוכל להציג את פרטי הסוללה הנוכחית או להפעיל מצב חיסכון בחשמל.

- 1 במסך ההגדרות, הקש על **סוללה**.
 - 2 התאם אישית את ההגדרות הבאות:
- **ניצול סוללה:** הצג את פרטי השימוש בסוללה.
 - **אחוז הסוללה בשורת המצב:** הצג את רמת טעינת הסוללה שנותרה כאחוז בשורת המצב.
 - **סוללה הניתנת להתאמה:** מאפשר לשמור על הסוללה על ידי עצירת יישומים הפועלים ברקע.
 - **הגבלות רקע:** סמן אפשרות זו להגבלת אפליקציות ברקע לשמירת הסוללה בעת השימוש במכשיר. יישומים מוגבלים עקב חיסכון בחשמל עשויים שלא לפעול כהלכה או שלא לשלוח לך התראות.
 - **חיסכון בחשמל:** הקטן את צריכת הסוללה על-ידי ביטול הגדרות מכשיר מסוימות, כמו בהירות התצוגה, המהירות ועוצמת הרטט.

- **אי הכללות בחיסכון בחשמל:** בחר יישומים שבהם תשתמש ללא כל הגבלה פונקציונלית, גם במצב חיסכון בחשמל או מיטוב הסוללה.

אחסון

תוכל להציג ולנהל את האחסון הפנימי במכשיר או בשטח האחסון של כרטיס הזיכרון.

1 במסך ההגדרות, הקש על **אחסון**.

2 התאם אישית את ההגדרות הבאות:

- **אחסון פנימי:** הצג את שטח האחסון הכולל ופנה שטח באחסון הפנימי של המכשיר. הצג רשימה של יישומים שנמצאים בשימוש ואת קיבולת האחסון עבור כל יישום.
- **כרטיס SD:** הצג את שטח האחסון הכולל ואת השטח הפנוי בכרטיס הזיכרון. אפשרות זו מופיעה רק כאשר הוכנס כרטיס זיכרון. כדי לבטל טעינה של כרטיס זיכרון, הקש על .

חשבונות

אתה יכול להוסיף משתמשים כדי לשתף את המכשיר שלך.

1 במסך ההגדרות, הקש על **חשבונות**.

2 התאם אישית את ההגדרות.

שימוש חכם בדיגיטל ובקרת הורים

באפשרותך להציג את זמן השימוש במוצר ולהגדיר את הטיימר עבור כל אפליקציה. כמו כן, באפשרותך לנהל את זמן השימוש בטלפון הנייד באמצעות מצב הכנת שינה ומצב מיקוד.

בחר ב **שימוש חכם בדיגיטל ובקרת הורים** במסך ההגדרות והגדר את הפונקציה הרצויה.

חיפוש

תוכל להשתמש בהגדרות Google לניהול יישומי Google שברשותך והגדרות החשבון שלך. במסך ההגדרות, הקש על **חיפוש**.

מערכת

מרכז עדכונים

ניתן לבדוק קיום עדכונים חדשים של יישומים ותוכנות שמסופקים על-ידי LG ולהתקין אותם.

1 במסך ההגדרות, הקש על **מערכת** < **מרכז עדכונים**.

2 התאם אישית את ההגדרות הבאות:

- **עדכוני אפליקציות:** בדוק האם קיים עדכון יישום. אם זמין, תוכל להתקין את העדכון.

- **עדכון תוכנה:** בדוק האם קיים עדכון תוכנה. אם זמין, תוכל להתקין את העדכון.

שפה ומקלדת

תוכל להתאים אישית את הגדרות השפה והמקלדת עבור המכשיר שלך.

1 במסך ההגדרות, הקש על **מערכת** < **שפה ומקלדת**.

2 התאם אישית את ההגדרות הבאות:

- **שפה:** בחר שפה והחל אותה על המכשיר.

- **נהל מקלדות:** באפשרותך לשנות את הגדרת המקלדת הבסיסית של המוצר, להגדיר את סביבות השימוש במקלדת-LG או במקלדות מותקנות אחרות ולהגדיר את פונקציית זיהוי הדיבור עבור קלט Google Voice. כמו כן, באפשרותך לקבוע אם להציג את לחצן המקלדת באזור לחצן המגע במסך הבית כך שתוכל לעבור במהירות למקלדת אחרת.

- **מקלדת פיזית:** בחר להשתמש במקלדת פיזית, או בדוק את מקשי קיצור הדרך.

- **שירות מילוי אוטומטי:** אפשר אפשרות זו כדי להכניס את המידע שלך שנשמר בחשבון, כגון סיסמה, כתובת או מספר כרטיס אשראי בהקשה אחת. ניתן גם להשבית את האפשרות, להשתמש ב-Google Autocomplete או להוסיף חשבון שירות חדש.
- **פלט המרת טקסט לדיבור:** בחר את ההגדרות לפלט טקסט-לדיבור.
- **מהירות מצביע:** כוונן את מהירות המצביע של העכבר או של לוח המעקב.
- **הפוך את לחצני העכבר:** הגדר ביצוע פעולות ראשיות בתפעול ישיר דרך הלחצן הימני של העכבר.

תאריך ושעה

תוכל להתאים אישית את הגדרות התאריך והשעה עבור המכשיר שלך.

- 1 במסך ההגדרות, הקש על **מערכת > תאריך ושעה**.
- 2 התאם אישית את ההגדרות.

זיכרון

תוכל להציג את הסכום הממוצע של השימוש בזיכרון לאורך פרק זמן מסוים ואת הזיכרון שהיה בשימוש על-ידי היישום.

- 1 במסך ההגדרות, הקש על **מערכת > זיכרון**.
- 2 הקש על ▼ כדי להגדיר משבצת זמן לאחזור נתונים.

גיבוי

תוכל לגבות נתונים השמורים במכשיר שלך במכשיר או בטאבלט אחר של LG.

- 1 במסך ההגדרות, הקש על **מערכת > גיבוי**.
 - 2 התאם אישית את ההגדרות הבאות:
- **LG Mobile Switch:** כך תוכל להעביר נתונים ממכשיר LG ישן למכשיר LG חדש. ראה **LG Mobile Switch** לקבלת פרטים.

- **גיבוי ושחזור:** גבה את נתוני המכשיר שלך או שחזר נתונים למכשיר מגיבוי.

• איפוס המכשיר עלול להביא למחיקת קבצי גיבוי שנשמרו באחסון. הקפד להעתיק ולאחסן את קבצי הגיבוי החשובים במחשב שלך.



- **גיבוי Google:** שנה את הגדרות גיבוי הכונן של Google. תוכל גם לבדוק את חשבון הגיבוי הנמצא כעת בשימוש, או להוסיף חשבון גיבוי חדש.

הפעל מחדש ואיפוס

תוכל לאפס את המכשיר, כולל הגדרות הרשת והיישומים.

- 1 במסך ההגדרות, הקש על **מערכת > הפעל מחדש ואיפוס**.

- 2 התאם אישית את ההגדרות הבאות:

- **הפעלה מחדש אוטומטית:** הפעלה מחדש אוטומטית ומיטוב פעולת הטלפון בזמן קבוע. הקש על  כדי להפעיל תכונה זו. המכשיר יפעיל את עצמו מחדש אוטומטי וימטב את פעולתו. בחר תאריך ושעה להפעלה מחדש.

- ניתן להגדיר את המכשיר להפעלה מחדש עצמית פעם בשבוע. המכשיר יפעיל את עצמו מחדש בשעה מהזמן שנקבע מראש.
- לאחר שהמכשיר יופעל מחדש, ההודעות והתגים יימחקו. שמור נתונים חשובים לפני הזמן המוגדר מראש.
- מאפיין ההפעלה מחדש האוטומטית לא יופעל במצבים הבאים: כאשר המסך מופעל, כאשר המכשיר בשימוש, כאשר מפלס הסוללה הוא 30% ומטה, כאשר כרטיס USIM חסום, או כאשר נעילת המכשיר הופעלה בעת הפעלת המכשיר.
- בהתאם לספק התקשורת, פונקציית ההפעלה מחדש אוטומטית עשויה להיות זמינה או לא.



- **איפוס הגדרות רשת:** אפס את Wi-Fi, Bluetooth והגדרות רשת אחרות.

- **איפוס העדפות יישום:** אפס את ההגדרות של יישום. הנתונים השמורים ביישום לא יימחקו.
- **שחזור נתוני היצרן:** אפס את כל ההגדרות עבור המכשיר ומחק נתונים.

- ההפעלה מחדש והאיפוס מוחקת את כל הנתונים השמורים בו. הזן את שם המכשיר, את חשבון Google ופרטים התחלתיים אחרים פעם נוספת.
- לאחר אתחול נתונים, לא ניתן לשחזר את הנתונים.



אודות הטלפון

תוכל להציג מידע אודות המכשיר, כמו שם, הסטטוס, פרטי התוכנה ומידע משפטי.

במסך ההגדרות, הקש על **מערכת** < **אודות הטלפון** והצג מידע.

רגולציה ובטיחות

ניתן להציג סימוני תקינה ומידע הקשור אליהם במכשיר.

במסך ההגדרות, הקש על **מערכת** < **רגולציה ובטיחות**.

נגישות

תוכל לנהל יישומי Plug-in של נגישות המותקנים במכשיר שלך.

1 במסך ההגדרות, הקש על **נגישות**.

2 התאם אישית את ההגדרות הבאות:

- **ראייה** < **TalkBack**: הגדר את המכשיר כך שיודיע על סטטוס המסך או על פעולות באמצעות קול.

- **ראייה** < **התראה קולית**: הגדר את המכשיר כך שיקריא בקול את המידע.

- **ראייה** < **גופן**: שנה את גודל הגופן, ההדגשה או הסוג.

- **ראייה** < **גודל תצוגה**: הגדר את הפריטים במסך לגודל שתוכל לראות בקלות. ייתכן שחלק מהפריטים ישנו מיקום.

- **ראייה < שינוי גודל תצוגה במגע:** הגדל או הקטן את התצוגה על-ידי הקשה על המסך שלוש פעמים.
- **ראייה < חלון זום:** הגדל או הקטן תצוגה בתוך חלון והפוך את הצבעים.
- **ראייה < סמן עכבר גדול:** הגדל את סמן העכבר.
- **ראייה < מסך בעל ניגודיות גבוהה:** הפוך את צבע הרקע לשחור כדי להשיג מסד בניגודיות גבוהה.
- **ראייה < היפוך צבעי המסך:** הגבר את ניגודיות הצבע בתצוגה לטובת אנשים עם לקות ראייה.
- **ראייה < התאמה אישית של צבעי המסך:** כוונן את צבע התצוגה.
- **ראייה < שחור-לבן:** העבר את המסך למצב גווני אפור.
- **ראייה < סיים שיחות באמצעות מקש ההפעלה:** סיים שיחה על-ידי לחיצה על מקש הפעלה/נעילה.
- **שמיעה < העדפות כיתוב:** הפעל את שירות הכתוביות בעת הקרנת סרטוני וידאו לאנשים כבדי שמיעה.
- **שמיעה < התראות פלש:** הגדר את המכשיר כך שייתן לך התראה בעזרת אור מהבהב עבור שיחות נכנסות, הודעות והתראות.
- **שמיעה < השתק את כל הצלילים:** השתק את כל הצלילים והנמך את עוצמת הקול במקלט.
- **שמיעה < ערוץ שמע:** בחר את סוג השמע.
- **שמיעה < איזון קול:** כוונן את איזון פלט השמע. השתמש במחוון כדי לשנות את האיזון.
- **תנועה ותודעה < Touch assistant:** הפעל את לוח המגע כדי להקל את השימוש בלחצנים ובמחוות.
- **תנועה ותודעה < קלט בנגיעה:** כדי להזין טקסט, הקש הקשה ממושכת על המסך או שנה אותו על-ידי נגיעה במסך.
- **תנועה ותודעה < מקלדת פיזית:** התאם אישית את הגדרות המקלדת.
- **תנועה ותודעה < לחיצת עכבר אוטומטי:** לחץ באופן אוטומטי על סמן העכבר במקרה שאין תנועה.

- **תנועה ותודעה < לחץ לחיצה ממושכת לשיחות:** השב לשיחות או דחה שיחות על-ידי הקשת הקשה ממושכת על לחצן השיחה במקום לגרור אותו.
- **תנועה ותודעה < כיבוי מסך אוטומטי:** כבה באופן אוטומטי את המסך כאשר המכשיר לא היה פעיל במשך פרק זמן שצוין.
- **תנועה ותודעה < אזורי בקרת מגע:** הגבל את אזור המגע כך שניתן יהיה לשלוט חלק מסוים של המסך בלבד באמצעות קלט המגע.
- **קיצור דרך לתכונות הנגישות:** גש במהי תור לתפק דו הנמצא בשימוש דתיר בלחיצה בויזמנית על מקש ההפעלה ומקש הגברת עצמת הקול.
- **סיבוב מסך אוטומטי:** שנה באופן אוטומטי את כיוון המסך בהתאם למצב הפיזי של המכשיר.
- **הקראה:** תכונה זו מאפשרת לך לבחור פריטים כדי לשמוע משוב קולי.
- **גישה באמצעות מתג:** צור צירופי מקשים שיסייעו לך לשלוט במכשיר שלך.

05

נספח

הגדרות השפה של LG

בחר את השפה שתשמש במכשיר שלך.

- הקש על  < **הגדרות** < **מערכת** < **שפה ומקלדת** < **שפה** < **הוספת שפה** ובחר שפה.

- הקש הקשה ממושכת על  וגרור אותה לחלק העליון של רשימת השפות כדי להגדיר אותה כשפת ברירת מחדל.

LG Bridge

LG Bridge - סקירה כללית

LG Bridge הוא יישום המסייע לך בניהול נוח של תמונות, מוסיקה, סרטוני וידאו ומסמכים השמורים בטלפון החכם של LG דרך המחשב שלך. באמצעות היישום תוכל לגבות אנשי קשר, תמונות ופריטים נוספים במחשב ואף לעדכן את תוכנת המכשיר.

- לפרטים, עיין בעזרה של LG Bridge.
- זמינות של תכונות נתמכות אינה אחידה ותלויה במכשיר.
- מנהל התקן USB של LG נחוץ לך כדי לחבר טלפון חכם של LG אל המחשב והוא יותקן יחד עם LG Bridge.



הפונקציות הכלולות ביישום LG Bridge

- נהל דרך המחשב שלך את הקבצים השמורים במכשיר באמצעות חיבור Wi-Fi או חיבור נתונים ניידים.
- גבה נתונים מהמכשיר במחשב שלך או שחזר אותם מהמחשב באמצעות כבל USB.
- עדכן את תוכנת המכשיר דרך המחשב שלך באמצעות כבל USB.

התקנת LG Bridge במחשב

- 1 במחשב שלך, עבור אל www.lg-mobile.co.il.
 - 2 בחר את האזור שלך
 - 3 לחץ על **תמיכה > חומרה וקושחה**.
 - 4 הזן את שם המכשיר.
לחלופין
בחר לפי קטגוריית מוצר.
 - 5 עבור אל **סינכרון מחשב < LG Bridge** כדי להוריד את קובץ ההתקנה.
- עבור אל **פרטים** כדי להציג את דרישות המינימום להתקנת LG Bridge.

עדכון תוכנת הטלפון

עדכון תוכנת הטלפון הנייד של LG מהאינטרנט

למידע נוסף אודות השימוש בפונקציה זו, בקר בכתובת <http://www.lg-mobile.co.il/common/index.jsp> בחר את המדינה והשפה שלך.

תכונה זו מאפשרת לך לעדכן בנוחות את הקושחה של הטלפון לגרסה חדשה יותר מהאינטרנט, ללא צורך לבקר במרכז שירות. תכונה זו תהיה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהיה זמינה למכשיר שלך.

מאחר שעדכון הקושחה של הטלפון הנייד דורש את תשומת לבו המלאה של המשתמש במשך כל תהליך העדכון, הקפד לקרוא את כל ההוראות וההערות שיופיעו בכל שלב לפני שתתקדם הלאה. חשוב לזכור שניתוק כבל ה-USB במהלך השדרוג עלול לגרום נזק חמור לטלפון הנייד.

- LG שומרת על זכותה, על פי שיקול דעתה הבלעדי, להפוך עדכוני קושחה לזמינים עבור דגמים נבחרים בלבד ואינה ערבה לזמינות הגרסה החדשה של הקושחה לכל דגמי הטלפון.



עדכון תוכנת הטלפון הנייד של LG באופן אלחוטי (OTA)

תכונה זו מאפשרת לך לעדכן בנוחות את תוכנת הטלפון לגרסה חדשה יותר בשיטת OTA, מבלי לחבר כבל USB. תכונה זו תהיה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהיה זמינה למכשיר שלך.

כדי לבצע את עדכון תוכנת הטלפון,

הגדרות > מערכת > מרכז עדכונים > עדכון תוכנה > חפש עדכונים כעת.

-  הנתונים האישיים שלך משטח האחסון הפנימי בטלפון—לרבות פרטי חשבון Google וכל חשבון אחר, נתונים והגדרות של המערכת/היישומים שלך, יישומים שהורדו ורישיון ה-DRM שלך—עשויים ללכת לאיבוד בתהליך עדכון התוכנה של הטלפון. לפיכך, LG ממליצה לך לגבות את הנתונים האישיים שלך לפני שתעדכן את תוכנת הטלפון. LG לא תישא באחריות לאובדן נתונים אישיים כלשהם.
- הזמינות של תכונה זו תלויה באזור ובספק השירות.

מדריך למניעת גניבה

הגדר את המכשיר שלך כך שאנשים אחרים לא יוכלו להשתמש בו אם הוא יאופס להגדרות היצרן ללא רשותך. לדוגמה, אם המכשיר אבד, נגנב או נמחק, רק אדם בעל חשבון Google או בעל פרטי נעילת מסך יוכל להשתמש במכשיר.

כל שעליך לעשות כדי לוודא שהמכשיר שלך מוגן הוא:

- להגדיר נעילת מסך: אם המכשיר אבד או נגנב, אך הגדרת נעילת מסך, לא תהיה אפשרות למחוק את המכשיר באמצעות תפריט 'הגדרות', כל עוד נעילת המסך לא תבוטל.
- הוסף את חשבון Google שלך למכשיר: אם המכשיר שלך נמחק אך הגדרת בו את חשבון Google שלך, לא תהיה אפשרות לסיים את תהליך ההגדרה של המכשיר עד שהפרטים של חשבון Google יוזנו שוב.

לאחר שהמכשיר יהיה מוגן, תצטרך לבטל את נעילת המסך או להזין את הסיסמה של חשבון Google אם עליך לבצע איפוס להגדרות היצרן. הדבר יבטיח שאתה או מישהו שאתה סומך עליו תבצעו את האיפוס.

- אל תשכח את חשבון Google והסיסמה שהוספת למכשיר לפני ביצוע האיפוס להגדרות היצרן. אם אינך יכול לספק את פרטי החשבון במשך תהליך ההגדרה, לא תוכל להשתמש כלל במכשיר לאחר ביצוע האיפוס להגדרות היצרן.



פרטי הודעה על תוכנת קוד פתוח

אנא בקרו באתר <http://opensource.lge.com> על מנת להשיג את קוד המקור תחת GPL, LGPL, MPL, קוד פתוח ורשיונות אחרים.

בנוסף לקוד המקור, זמינים להורדה תנאי הרשיון, אחריות, כתבי ויתור וזכויות יוצרים.

LG Electronics גם תספק לכם קוד מקור פתוח על גבי תקליטור בתמורה לתשלום המכסה את עלות ההפצה (כגון עלות המדיה, המשלוח והטיפול), בתגובה לבקשה בדואר האלקטרוני אל הכתובת opensource@lge.com.

הצעה זו תהיה תקפה למשך שלוש (3) שנים מתאריך המשלוח האחרון של מוצר זה על-ידנו. הצעה זו תקפה לכל מי שיקבל מידע זה.

מידע בנושאי תקינה (מספר הזיהוי של התקן, תיוג אלקטרוני וכולי)

לקבלת פרטים בנושאי תקינה, עבור להגדרות < מערכת > רגולציה ובטיחות.

סימנים מסחריים

- לפרטים על פטנטים של DTS, עבור אל <http://patents.dts.com>. מיוצר ברישיון מטעם DTS Licensing Limited. הסמל, ו-DTS:X והסמל ביחד, DTS:X והלוגו DTS:X הם סימני מסחר רשומים או סימני מסחר של DTS, Inc. בארצות הברית ו/או במדינות אחרות. © DTS, Inc. כל הזכויות שמורות.



- Copyright© 2021 LG Electronics Inc. כל הזכויות שמורות. LG והסמל של LG הם סימנים מסחריים רשומים של LG Group ושל החברות הקשורות אליה.
- Google ,Google Duo ,YouTube ,Gmail ,Google Maps ,Google ,Google Play Protect ,Google Photos ,Chrome ,Android ,Play Google Sheets ,Google Drive ,Google Docs ,Google Calendar וסימנים וסמלי לוגו קשורים אחרים הם סימני מסחר של Google LLC.
- Bluetooth® הוא סימן מסחרי רשום של Bluetooth SIG, Inc. ברחבי העולם.
- Wi-Fi® והלוגו של Wi-Fi הם סימנים מסחריים רשומים של Wi-Fi Alliance.
- כל יתר הסימנים המסחריים וזכויות היוצרים הם רכושם של בעליהם בהתאמה.



הצהרת תאימות

בזאת, **LG Electronics** מצהירה שהמוצר **LM-K410ZMW** תואם לדרישות היסודיות ולתנאים הרלוונטיים האחרים של הנחיה **2014/53/EU**.
ניתן למצוא עותק שלהצהרת התאימות בכתובת
<http://www.lg.com/global/declaration>

מידע נוסף

חלקי זכוכית מחוסמת

חלקי הזכוכית המחוסמת במכשיר זה אינם קבועים ועשויים להתבלות עם הזמן.

- אם הפלת את המכשיר על משטח קשה או אם הוא נתון למכות חזקות, עלול להיגרם נזק לזכוכית המחוסמת.
אם זה קורה, הפסק מיד להשתמש במכשיר ופנה למרכז שירות לקוחות של LG.
- ניתן לרכוש בשוק כיסוי מגן כדי להגן על המכשיר מפני נזק.
שים לב כי כיסויים אלה אינם כלולים במסגרת שירות האחריות שניתן על-ידי LG Electronics והבטיחות אינה מובטחת.

יחס גובה-רוחב

ייתכן ששישומים מסוימים שהורדו אינם תומכים ביחס גובה-רוחב ספציפי.

במקרה כזה, בחר ביחס המסך האופטימלי עבור היישום, או התייעץ עם ספק היישום לקבלת מידע נוסף.

מדריך להעברות נתונים

- למידע על הנתונים שאפשר להחליף בין מכשירי LG או בין מכשיר LG לבין מכשיר של צד שלישי, עיין בטבלה הבאה.

סוג	פרטים על הפריט	מכשיר LG ← מכשיר LG	מכשיר Android של צד שלישי ← מכשיר LG	מכשיר iOS ← מכשיר LG
נתונים אישיים	אנשי קשר, הודעות, יומני שיחות, לוח שנה, הקלטות קול	○	○	○
	תזכירים	○	X	○
	התראות	○	X	X
נתוני מדיה	תצלומים, סרטוני וידאו, שירים, מסמכים	○	○	○
הגדרות מסך	הגדרות מסך בית (תיקיות ווידג'טים)	○	X	X
	הגדרות מסך נעילה (לא כולל הגדרות נעילת מסך)	○	X	X
יישומים	יישומים שהורדו	○	○	-
	נתונים אישיים של היישום שהורד	○	X	-
אחרים	אישור ציבורי	○	○	X
	הגדרות Wi-Fi, Bluetooth, שיחות, צליל והתראה, נגישות, סוללה	○	X	X

- ייתכן שנתונים מסוימים לא ישודרו - הדבר תלוי בגרסת התוכנה, בגרסת היישום, במערכת ההפעלה ובמדיניות היצרן או ספק השירות.



שאלות נפוצות

בפרק זה מוצגות מספר בעיות שאתה עלול להיתקל בהן במהלך השימוש במכשיר. בעיות מסוימות יצריכו פנייה לספק השירות, אך את רובן תוכל לפתור בקלות בעצמך.

המכשיר מגיע לחום-יתר

המכשיר מגיע לחום-יתר כאשר הוא נמצא בשימוש.

במקרים הבאים, צריכת הסוללה עולה והמכשיר עלול להגיע לחום-יתר:

- כשתפעיל את המכשיר בפעם הראשונה או תגבה את הנתונים
- בעת הפעלת יישומים רבים בו-זמנית
 - כאשר יישומים רבים פועלים ברקע
 - בעת הורדת קבצים גדולים בעת ביצוע שיחת וידאו או צילום סרטון וידאו
- בעת שימוש במאפיינים הדורשים הספק גבוה
 - בעת צפייה בהזרמת וידאו דרך האינטרנט, או צילום סרטון וידאו ארוך
 - בעת משחק במשחקים ברמה גבוהה למשך פרק זמן ארוך
 - בעת שימוש במכשיר בבהירות מסך מרבית למשך פרק זמן ארוך
- בעת שימוש רב בנתונים סלולריים
 - בעת שימוש בנקודה חמה Wi-Fi או בשיתוף אינטרנט
 - בעת סנכרון נתונים של מספר חשבונות גדול בו-זמנית
- מקרים אחרים
 - בעת נדידה בחו"ל
 - בעת שימוש במכשיר באזורים בהם הקליטה חלשה או אין קליטה
 - בעת טעינת המכשיר באמצעות מטען/שקע כבל USB פגומים או המזהמים בחומר זר

- ייתכן שחלק מהמקרים לעיל אינם ישימים, בהתאם למאפיינים וליישומים.



המכשיר מגיע לחום-יתר בעת טעינה.

- המכשיר והמטען עלולים להתחמם בעת טעינה. בעת טעינה אלחוטית או טעינה מהירה, המכשיר עלול להתחמם אף יותר. אם טמפרטורת הסוללה עולה מעבר לרמה מסוימת, ייתכן שטעינת המכשיר תיפסק.
- נתק את המטען מהמכשיר וסגור יישומים פעילים כלשהם.
- הנח למכשיר להתקרר לפני טעינת המכשיר או הפעלת יישום.
- הפסק את הטעינה אם המטען/שקע כבל USB בחלק התחתון של המכשיר מגיעים לחום יתר, ופנה למרכז שירות לקוחות קרוב של LG.

כיצד לפתור מצב של חום-יתר של המכשיר

- סגור יישומים או מאפיינים פעילים כלשהם, והנח למכשיר להתקרר.
- עדכן תמיד את התוכנה לגרסה העדכנית ביותר.
- הפסק את מאפייני Wi-Fi, Bluetooth, או GPS כאשר אינך משתמש בהם.
- סגור יישומים שאינם בשימוש.
- אם אתה מפעיל את המכשיר ברמת בהירות המסך המרבית, הפחת את רמת הבהירות.
- אם המכשיר מגיע לחום יתר במשך תקופה ממושכת, הפסק להשתמש בו לזמן מה. אם המכשיר ממשיך להגיע לחום-יתר, פנה למרכז שירות לקוחות של LG.

מגבלות שימוש במכשיר בעת חום-יתר

- אם המכשיר מגיע לחום יתר בעת השימוש בו או במהלך טעינה, חלק מהמאפיינים, היישומים או אף המכשיר עצמו עשויים להפסיק לפעול. זוהי פעולה רגילה של מכשירים התומכים במאפיין זה.
- אם טמפרטורת המכשיר עולה מעבר לרמה מסוימת, תופיע הודעת אזהרה.
 - אם אתה משחק במשחקים ברמה גבוהה, מצלם סרטון וידאו או מעלה קבצים גדולים, המכשיר עלול להגיע לחום-יתר למשך פרק זמן ממושך. במקרה זה, עלולה להופיע הודעת אזהרה המתריעה על כיבוי אוטומטי.
- כבה את המכשיר או סגור יישומים או מאפיינים פעילים כלשהם, והנח למכשיר להתקרר.

- בהירות המסך ומהירות הפעולה עלולים להיות מוגבלים, כדי לאפשר למכשיר להתקרב. יישומים או מאפיינים פעילים עשויים להאט את פעולתם או אף להיסגר. טעינת המכשיר עשויה להיפסק.

שגיאת כרטיס SIM

ודאו שכרטיס ה-SIM הוכנס כראוי.

אין חיבור לרשת או שהחיבור חלש

הקליטה חלשה. התקרב לחלון או צא לאזור פתוח. אתה נמצא מחוץ לאזור הרשת של המפעיל הסלולרי. עבור למקום אחר ובדוק את הרשת.

שיחות אינן זמינות

רשת חדשה לא מאושרת. ודא שלא הגדרת חסימת שיחות מהמספר הנכנס. ודא שלא הגדרת חסימת שיחות למספר שאליו אתה מתקשר.

לא ניתן להפעיל את המכשיר

כשהסוללה ריקה לגמרי, המכשיר לא יופעל. טען את הסוללה במלואה לפני שתפעיל את המכשיר.

שגיאת טעינה

ודא שהטלפון נטען בטמפרטורה רגילה. בדוק את המטען ואת החיבור שלו למכשיר. השתמש רק באביזרים הכלולים באריזה, שאושרו על ידי LG.

הסוללה מתרוקנת בקצב מהיר יותר מאשר כשקניית את המכשיר לראשונה

כשאתה חושף את המכשיר או את הסוללה לטמפרטורות קרות או חמות מאוד, חיי הסוללה עלולים להתקצר. צריכת הסוללה מתגברת בעת שימוש בתכונות או ביישומים מסוימים, כגון GPS, משחקים או אינטרנט. הסוללה מתכלה, וחיי הסוללה יתקצרו עם הזמן.

הודעות שגיאה מופיעות בעת הפעלת המצלמה

טען את הסוללה.

שחרר זיכרון על ידי העברת קבצים למחשב או מחיקת קבצים מהמכשיר.

הפעל מחדש את המכשיר.

אם אתה עדיין נתקל בקשיים ביישום המצלמה לאחר שניסית טיפים אלה, פנה למרכז שירות של LG Electronics.

איכות התמונה גרועה

איכות התמונות עשויה להשתנות, בהתאם לתנאי הסביבה ולטכניקות הצילום שבהן אתה משתמש.

אם אתה מצלם תמונות וסרטונים, האיכות של זווית רגילה טובה יותר מהאיכות של זווית רחבה.

אם אתה מצלם תמונות במקומות חשוכים, בלילה או בפנים, עשוי להופיע רעש בתמונות או שהתמונות עשויות להיות לא ממוקדות.

אם אתה נתקל בבעיות, אפס את האפשרויות.

מסך המגע מגיב באיטיות או באופן שגוי

אם אתה מחבר למסך המגע מגן מסך או אביזרים אופציונליים, ייתכן שמסך המגע לא יפעל באופן תקין.

אם אתה לובש כפפות, אם ידך אינן נקיות כשאתה נוגע במסך המגע או אם אתה מקיש על המסך באמצעות אובייקטים חדים או בקצות אצבעותיך, ייתכן שמסך המגע לא יפעל באופן תקין.

מסך המגע עשוי לא לפעול באופן תקין בתנאי לחות או בעת חשיפה למים.

הפעל מחדש את המכשיר כדי להעלים באגים זמניים בתוכנה.

אם מסך המגע שרוט או פגום, בקר במרכז שירות של LG Electronics.

המכשיר נתקע או קופא

הפעל מחדש את המכשיר

- אם המכשיר קופא או נתקע, ייתכן שתצטרך לסגור יישומים או לכבות את המכשיר ואז להפעיל אותו מחדש.

בצע אתחול

- ניתן להשתמש באיפוס רך כדי לאפס את המכשיר אם המסך קופא, או אם הלחצנים, מסך המגע או המכשיר עצמו מפסיקים להגיב.
- כדי לבצע איפוס רך של המכשיר, פשוט לחץ לחיצה ארוכה על לחצן החלשת עוצמת הקול ועל לחצן ההפעלה עד שהמכשיר יופעל מחדש.

אפס את המכשיר

- אם השיטות שלמעלה אינן פותרות את הבעיה שלך, בצע שחזור של נתוני היצרן.
- במסך ההגדרות, הקש על **מערכת > הפעל מחדש ואיפוס > שחזור נתוני היצרן**.

- שיטה זו מאפסת את כל ההגדרות עבור המכשיר ומוחקת את הנתונים. לפני שתבצע את איפוס נתוני היצרן, זכור ליצור עותקי גיבוי של כל הנתונים החשובים המאוחסנים במכשיר.
- אם רשמת חשבון Google במכשיר, עליך להיכנס לאותו חשבון Google לאחר איפוס המכשיר.

מכשיר Bluetooth אינו מאותר

- ודא שתכונת הקישור האלחוטי של Bluetooth מופעלת במכשיר.
- ודא שתכונת הקישור האלחוטי של Bluetooth מופעלת במכשיר שאליו אתה רוצה להתחבר.
- ודא שהמכשיר והתקן Bluetooth אחר נמצאים בטווח המרבי של Bluetooth (10 מטר).
- אם טיפים אלה אינם פותרים את הבעיה, פנה למרכז שירות של LG Electronics.

לא נוצר חיבור כשאתה מחבר את המכשיר למחשב

- ודא שכבל ה-USB שבו אתה משתמש תואם למכשיר שלך.
- ודא שמנהל ההתקן המתאים מותקן ומעודכן במחשב שלך.

יישום שהורדתי גורם לשגיאות רבות

- יש בעיות ביישום.
- הסר את היישום והתקן אותו מחדש.

About this user guide

Thank you for choosing this LG product. Please carefully read this user guide before using the device for the first time to ensure safe and proper use.

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- Descriptions are based on the device default settings.
- Default apps on the device are subject to updates, and support for these apps may be withdrawn without prior notice. If you have any questions about an app provided with the device, please contact an LG Service Centre. For user-installed apps, please contact the relevant service provider.
- Modifying the device's operating system or installing software from unofficial sources may damage the device and lead to data corruption or data loss. Such actions will violate your LG licence agreement and void your warranty.
- Some content and illustrations may differ from your device, depending on the area, service provider, software version, or OS version, and are subject to change without prior notice.
- Software, audio, wallpaper, images, and other media supplied with your device are licenced for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully responsible for the illegal use of media.
- Additional charges may incur for data services, such as messaging, uploading, downloading, auto-syncing and location services. To avoid additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

Instructional notices



WARNING: Situations that could cause injury to the user and third parties.



CAUTION: Situations that may cause minor injury or damage to the device.



NOTE: Notices or additional information.

Table of contents

6 Guidelines for safe and efficient use

01

Custom-designed Features

- 14 Camera features
- 16 Gallery features
- 18 Sound quality and effects features
- 19 Google Assistant
- 19 Fingerprint recognition
- 22 Multi-tasking feature

02

Basic Functions

- 24 Product components and accessories
- 25 Parts overview
- 28 Turning the power on or off
- 29 Installing the SIM card
- 31 Inserting the memory card
- 32 Removing the memory card
- 32 Battery
- 35 Touch screen
- 38 Home screen
- 45 Screen lock
- 49 Memory card encryption
- 50 Taking screenshots
- 50 Entering text
- 54 Content sharing

03

Useful Apps

57	Installing and uninstalling apps
58	App trash
58	App Shortcuts
59	Phone
63	Messaging
64	Camera
73	Gallery
76	Contacts
79	QuickMemo+
81	Clock
82	Music
83	Calculator
83	LG ThinQ
84	Game Launcher
84	Audio Recorder
85	FM Radio
85	Update centre
85	Smart Doctor
86	LG Mobile Switch
86	App trash
87	SmartWorld
87	Cell Broadcast
88	Google apps

04

Settings

92	Settings
92	Network & internet
98	Connected devices
101	Sound
102	Notifications
102	Display
103	Wallpaper & theme
103	Lock screen & security
105	Privacy
106	Location
106	Extensions
108	Apps
108	Battery
109	Storage
109	Accounts
109	Digital Wellbeing & parental controls
109	Google
110	System
113	Accessibility

Appendix

117	Language Settings
117	LG Bridge
118	Phone software update
120	Anti-Theft Guide
121	Open Source Software Notice Information
121	Regulatory information (Regulation ID number, E-labeling, etc.)
122	Trademarks
123	DECLARATION OF CONFORMITY
123	More information
125	FAQ

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This device has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the device transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG device models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model tested for use at the ear is 0.369 W/kg (10 g) and when worn on the body is 1.455 W/kg (10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 5 mm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 5 mm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

- Use only in-box accessories which are authorised by LG. LG does not guarantee any damage or failure which is caused by third party accessories.
- Some contents and illustrations may differ from your device without prior notice.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the device in any area where you are required to by special regulations. For example, do not use your device in hospitals as it may affect sensitive medical equipment.
- Do not handle the device with wet hands while it is being charged. It may cause an electric shock and can seriously damage your device.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the device when it is on soft furnishings.
- The device should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the device next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the device.
- Do not expose the device to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your device is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your device during or immediately after operation.
- If your device gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet device, changes the colour of the product label inside your device. Damage to your device as a result of exposure to liquid is not covered under your warranty.
- A mobile device requires proper air circulation in order to dissipate heat. Direct skin contact and inadequate circulation of air flow to the device may cause the device to overheat. The device must be at least 1.0cm from between the user's body.
- Prevent dust of any other foreign substances from getting into the Charger/USB cable port. It may cause heat or fire.
- Avoid exposing the device to low air pressure at high altitude.
- Do not expose the device to extremely low air pressure. Otherwise, it can cause explosion of the battery or leakage of flammable liquid or gas.
- Please ensure that the product does not get in contact with liquid. Do not use or recharge the product if it is wet. Once the product becomes wet, the liquid damage indicator changes color. Please note that this will limit you from receiving any free-of-charge repair services provided under warranty.

Efficient device operation

Electronics devices

All devices may receive interference, which could affect performance.

- Do not use your device near medical equipment without requesting permission. Please consult your doctor to determine if operation of your device may interfere with the operation of your medical device.
- Pacemaker manufacturers recommend that you leave at least 15 cm of space between other devices and a pacemaker to avoid potential interference with the pacemaker.
- This device may produce a bright or flashing light.
- Some hearing aids might be disturbed by devices.
- Minor interference may affect TVs, radios, PCs etc.
- Use your device in temperatures between 0 °C and 40 °C, if possible. Exposing your device to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of devices in the area when you drive.

- Do not use a hand-held device while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.



- Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your device are made of glass. This glass could break if your device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the device where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your device at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your device or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your device off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the device in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your device for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.

- Always unplug the charger from the wall socket after the device is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or claws, come into contact with the battery. This could cause a fire.

Securing personal information

- Make sure to protect your personal information to prevent data leakage or misuse of sensitive information.
- Always back up important data while using the device. LG is not responsible for any data loss.
- Make sure to back up all data and reset the device when disposing of the device to prevent any misuse of sensitive information.
- Read the permission screen carefully while downloading applications.
- Be cautious using the applications that have access to multiple functions or to your personal information.
- Check your personal accounts regularly. If you find any sign of misuse of your personal information, ask your service provider to delete or change your account information.
- If your device is lost or stolen, change the password of your account to secure your personal information.
- Do not use applications from unknown sources.



Notice for Battery replacement

- For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Li-Ion Battery is a hazardous component which can cause injury.
- Battery replacement by a non-qualified professional can cause damage to your device..



01


Custom-designed Features

Camera features

Wide-angle camera

You can take photos or record videos with a wider range than your actual field of vision by using the wide-angle on the rear camera.

Tap , then tap  /  to switch between the standard and wide-angle.

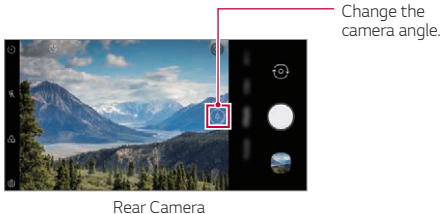


- See *Starting the camera* for details.
- You can switch between the standard and wide-angle camera lenses on the rear camera only.

Portrait

You can take a sharp portrait by applying the camera lens blur effect.

- 1 Tap , then tap **Portrait**.
- 2 Tap  to take a photo.
 - To adjust blur strength, drag the slide bar to the left or right.

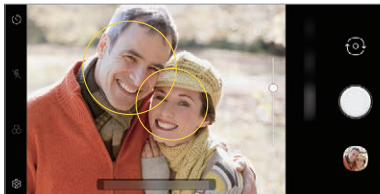




- Keep the distance to your subject within 1.3 ~ 5.0 feet when using the rear camera.
- This feature is not available if the surroundings are too dark.
- After applying this feature, tap the desired position on the preview screen to automatically apply the exposure value and focus when using the rear camera, or exposure value only when using the front camera.

AI CAM

You can effectively take photos or record videos since the camera recognises the object when taking a photo or recording a video.

- 1 Tap  then tap **AI CAM**.
- 2 When the object is recognised, the best effect for the scene is applied.
 - To apply other effects, tap the scene icon.
 - Pet, city, flower, food, landscape, person, sunset, auto, total 8 categories can be recognised automatically.

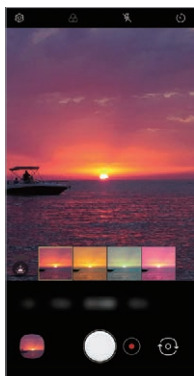

Sunset



Flower




- The result of the scene recognition may differ depending on the illumination or the location of the subject while taking photos. Keywords do not appear on the actual photos or videos.
- This feature is available only when the front and rear cameras are in the specific mode.

Gallery features

Creating a movie

You can create a new movie by putting images and videos together.

- 1 Tap > > **Photos** tab, then tap > **Create movie**.
- 2 Select images or videos for your movie and tap **Next**.
- 3 Edit the selected images and videos and then tap **Save**.

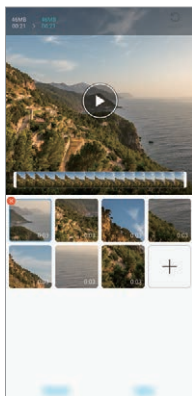

Deleting files

You can select images or videos to delete from your video by tapping at its thumbnail.

Adding files

You can select images or videos to add after tapping **+** at the bottom of the screen. You can also select the images or videos you have already previously added.



- Touch and hold a file, and then tap another file for multiple selection.

Rearranging files

To rearrange the images and videos, touch and hold the file you want to move, then dragging it to the desired location.

Resetting the movie edits

You can reset the edits made to the movie (e.g. play time) by tapping

Previewing a file

Check your new video before saving it by tapping . After the playback time elapses, the next file is played automatically.



- A maximum of 50 images and videos can be used to create a video.
- The playback time for an image is 3 seconds by default and it cannot be changed. Videos can be trimmed down to a minimum of 1 second.
- This feature may not support some image or video formats.

Making a GIF

You can easily make a GIF file using recorded videos or photos.

Making a GIF by using recorded videos

- 1 At the desired starting point while watching a video, tap
- 2 Select the length of the GIF you want to create.
 - GIF is generated for the time selected from the current time.
 - For videos less than 5 seconds, GIF images are automatically generated for the remaining time.

Making a GIF by using photos

- 1 While viewing an album, tap  > **Create GIF**.
- 2 Select the desired photos to create a GIF file and then tap **Next**.
 - You can add more images and adjust the GIF speed, screen ratio, and file order.



- You may use this feature solely for creative purposes. The use of this feature involving infringement of any other person's rights, such as copyright or defamatory or offensive statements, may be subject to civil, criminal, or administrative liabilities and/or penalties under applicable laws. You shall not copy, reproduce, distribute, or otherwise make illegal use of any copyrighted materials without permission of the rightful owner or copyright holder. To the fullest extent permitted by applicable law, LG Electronics disclaims all expressed and implied warranties as well as liabilities associated thereto.
- A maximum of 100 images can be used to create a GIF file.

Sound quality and effects features

DTS:X 3D Surround

You can play a song or video in three-dimensional, immersive and vivid sound. To use this feature, connect earphones, speaker or other external audio devices to your device.

Tap  > **Settings** > **Sound** > **Sound quality and effects** > **DTS:X 3D Surround**, then tap  to activate this feature.

Adjusting the sound direction

You can adjust the sound direction as desired.

- 1 Tap  > **Settings** > **Sound** > **Sound quality and effects** > **DTS:X 3D Surround**.
- 2 Select sound direction.

Google Assistant

Google Assistant overview

Your device has the built-in Google Assistant feature. Find answers and get things done while on-the-go.



- To use this feature, first connect to the network and sign in to your Google Account.

Fingerprint recognition

Fingerprint recognition overview

You must register your fingerprint on your device first before using the fingerprint recognition function.

You can use the fingerprint recognition function in the following cases:

- To unlock the screen.
- To view the locked content in the **QuickMemo+**.
- Confirm a purchase by signing in to an app or identifying yourself with your fingerprint.



- Your fingerprint can be used by the device for user identification. Very similar fingerprints from different users may be recognised by the fingerprint sensor as the same fingerprint.
- If the device cannot detect your fingerprint, or you forgot the value specified for registration, visit the nearest LG Customer Service Centre with your device and ID card.

Precautions for fingerprint recognition

Fingerprint recognition accuracy may decrease due to a number of reasons. To maximise the recognition accuracy, check the following before using the device.

- The device has a fingerprint sensor. Ensure that the fingerprint sensor is not damaged by a metallic object, such as coin or key.
- When water, dust or other foreign substance is on the fingerprint sensor or your finger, the fingerprint registration or recognition may not work. Clean and dry your finger before having the fingerprint recognised.
- A fingerprint may not be recognised properly if the surface of your finger has a scar or is not smooth due to being soaked in water.
- If you bend your finger or use the fingertip only, your fingerprint may not be recognised. Make sure that your finger covers the entire surface of the fingerprint sensor.
- Scan only one finger for each registration. Scanning more than one finger may affect fingerprint registration and recognition.
- The device may generate static electricity if the surrounding air is dry. If the surrounding air is dry, avoid scanning fingerprints, or touch a metallic object such as coin or key before scanning fingerprints to remove static electricity.

Registering fingerprints

You can register and save your fingerprint on the device to use fingerprint identification.

1 Tap > **Settings** > **Lock screen & security** > **Fingerprints**.




- A lock screen must be set to use this feature.
- If the screen lock is not active, configure the lock screen by following the on-screen instructions. See [Setting a screen lock](#) for details.

2 Locate the fingerprint sensor on the back of the device and gently put your finger on it to register the fingerprint.



- Gently press the fingerprint sensor so that the sensor can recognise your fingerprint.
- Ensure that your fingertip covers the entire surface of the fingerprint sensor.

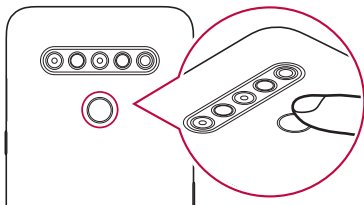

- 3 Follow the on-screen instructions.
 - Repeat scanning the fingerprint by moving your finger little by little until the fingerprint registers.
- 4 When the fingerprint registration is done, tap **OK**.
 - Tap **Add more** to register another fingerprint. If you register only one fingerprint and the corresponding finger is not in a good condition, the fingerprint recognition may not work well. As the preventive measure against this kind of situation, register multiple fingerprints.

Managing fingerprints

You can edit or delete registered fingerprints.

- 1 Tap ○ > **Settings** > **Lock screen & security** > **Fingerprints**.
- 2 Unlock according to the specified lock method.
- 3 From the fingerprint list, tap a fingerprint to rename it. To delete it, tap .

Unlocking the screen with a fingerprint

You can unlock the screen or view the locked content by using your fingerprint. Activate the desired function:

- 1 Tap ○ > **Settings** > **Lock screen & security** > **Fingerprints**.
- 2 Unlock according to the specified lock method.
- 3 On the fingerprint settings screen, activate the desired function:

- **Screen lock:** Unlock the screen with a fingerprint.
- **Content lock:** Unlock content with a fingerprint. To do this, make sure that the content lock is set.

Multi-tasking feature

Multi window

You can use two apps at the same time by separating the screen into the multiple windows.

- 1 Tap  on the navigation bar.
 - Recently-used apps appear.
 If you tap the app icon, the **App info**, **Multi window**, **Pop-up window**, **Pin app** menus appear.



- 2 Tap the app icon on the top left of the app to be displayed in the multi-window and tap **Multi window**.
 - The selected app appears on the upper half of the screen.
- 3 Swipe the recently used apps left or right and tap an app to display on the lower half of the screen.
 - The selected app appears on the lower half of the screen.



- The multi window feature is not supported in some LG apps or apps downloaded from the Play Store.



02

Basic Functions

Product components and accessories

The following items are included with your device.

- Device
- USB cable
- Jelly Phone Case
- Charger
- Quick Start Guide
- Ejection pin




- The items described above may be optional.
- The items supplied with the device and any available accessories may vary depending on the area and service provider.
- Always use genuine LG Electronics accessories. Using accessories made by other manufacturers may affect your device's call performance or cause malfunctions. This may not be covered by LG's repair service.
- Some of the device parts are made of tempered glass. If you drop your device on a hard surface or subject it to severe impact, the tempered glass may be damaged. If this happens, stop using your device immediately and contact an LG Customer Service Centre.



- If any of these basic items are missing, contact the dealer from which you purchased your device.
- To purchase additional items, contact an LG Customer Service Centre.
- Some items in the product box are subject to change without notice.
- The appearance and specifications of your device are subject to change without notice.
- Device specifications may vary depending on the area or service provider.
- Remove the protective film from the Fingerprint sensor before use of the fingerprint recognition feature.

Parts overview

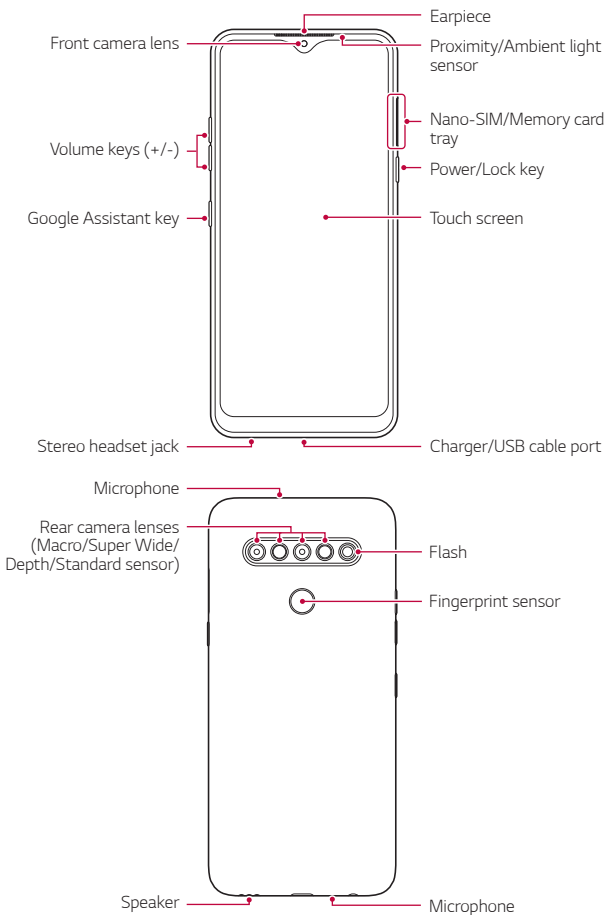



Do NOT attempt to remove the back cover.

This device has a non-removable battery. Do not attempt to remove the back cover. Doing so may severely damage the battery and device, which could cause overheating, fire, and injury.


- Proximity/Ambient light sensor
 - Proximity sensor: During a call, the proximity sensor turns off the screen and disables touch functionality when the device is in close proximity to the human body. It turns the screen back on and enables touch functionality when the device is outside a specific range.
 - Ambient light sensor: The ambient light sensor analyses the ambient light intensity when the auto-brightness control mode is turned on.
- Volume keys
 - Adjust the volume for ringtones, calls or notifications.
 - While using the Camera, gently press a Volume key to take a photo. To take continuous photos, press and hold the Volume key.
 - Press the Volume Down (-) key twice to launch the Camera app when the screen is locked or turned off. Press the Volume Up (+) key twice to launch Screen-off memo.
- Power/Lock key
 - Briefly press the key when you want to turn the screen on or off.
 - Press and hold the key when you want to select a power control option.
- Google Assistant key
 - Your device has the Google Assistant built-in. Find answers and get things done while on-the-go. To get started, just tap the Google Assistant key on the side of the phone.
 - Activate Google Assistant. See the *Google Assistant* for details.
- Fingerprint sensor
 - Turn on the fingerprint recognition feature to simplify the process of unlocking the screen. See *Fingerprint recognition overview* for details.




- Some functions may be restricted for access, depending on the device specifications.
- Screen-protective film or accessories may interfere with the proximity sensor.
- If your device is wet or is being used in a humid place, the touch screen or buttons may not function properly.

Hold the device correctly as shown below. If you cover the microphone hole with a hand, finger, or protective case while using the device, you may sound unclear during a call.

Good example

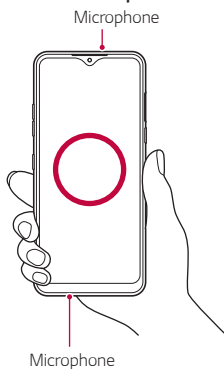

Bad example

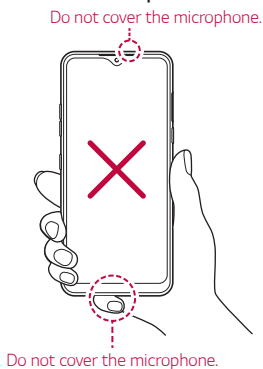

Turning the power on or off

Turning the power on

When the power is turned off, press and hold the Power/Lock key.



- When the device is turned on for the first time, initial configuration takes place. The first booting time for the smart phone may be longer than usual.

Turning the power off

Press and hold the Power/Lock key, then select Power off.

Restarting the device

When the device is not working properly or does not respond, restart it by following the instructions below.

- 1 Press and hold the Power/Lock key and the Volume Down (-) key at the same time until the power is turned off.
- 2 When the device is restarted, release the key.

Power control options

Press and hold the Power/Lock key, then select an option.

- **Power off:** Turn the device off.
- **Power off and restart:** Restart the device.


Installing the SIM card

Insert the SIM (Subscriber Identity Module) card provided by your service provider to start using your device.




- Be careful with the ejection pin since it has a sharp edge.


- 1 Insert the ejection pin into the hole on the card tray.

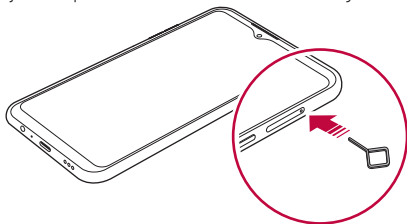


- 2 Pull out the card tray.

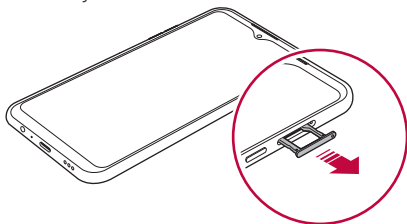

- 3 Put the SIM card on the card tray with the gold-coloured contacts facing downwards.
Put the primary SIM card on the SIM card tray 1 and the secondary SIM card on the SIM card tray 2.

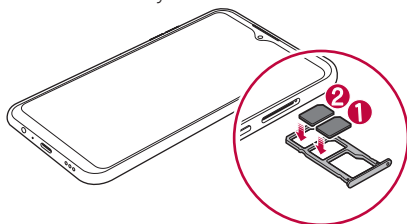

- 4 Insert the card tray back into the slot.

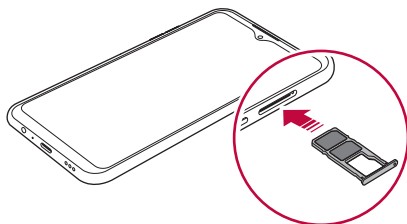

- This device supports only Nano SIM cards.



Nano

Micro



Standard



- For problem-free performance, it is recommended to use the device with the correct type of SIM card. Always use a factory-made SIM card supplied by the operator.
- If you insert the card tray into your device while the card tray is wet, your device may be damaged. Always make sure the card tray is dry.

Precautions when using the SIM card


- Do not lose your SIM card. LG is not responsible for damage and other issues caused by loss or transfer of a SIM card.
- Be careful not to damage the SIM card when you insert or remove it.

Inserting the memory card

Insert the memory card into your device.

Depending on the memory card manufacturer and type, some memory card may not be compatible with your device.

- 1 Insert the ejection pin into the hole on the card tray.
- 2 Pull out the card tray.
- 3 Put the memory card on the card tray with the gold-coloured contacts facing downwards.

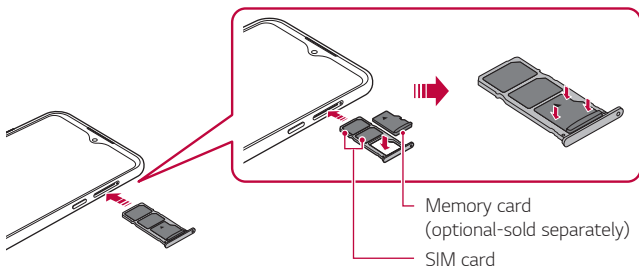

- 4 Insert the card tray back into the slot.



- Some memory cards may not be fully compatible with the device. If you use an incompatible card, it may damage the device or the memory card, or corrupt the data stored in it.



- Frequent writing and erasing of data may shorten the memory card lifespan.

Removing the memory card

Unmount the memory card before removing it for safety.

- 1 Tap  > **Settings** > **Storage** > .
- 2 Insert the ejection pin into the hole in the card tray and then pull out the card tray from the device.
- 3 Remove the memory card from the card tray.
- 4 Insert the card tray back into the slot.




- Do not remove the memory card while the device is transferring or accessing information. This may cause data to be lost or corrupted, or may damage the memory card or the device. LG is not responsible for losses that result from the abuse or improper use of memory cards, including the loss of data.

Battery

Charging the battery

Before using the device, fully charge the battery.

Charge the device with the USB Type-C cable.

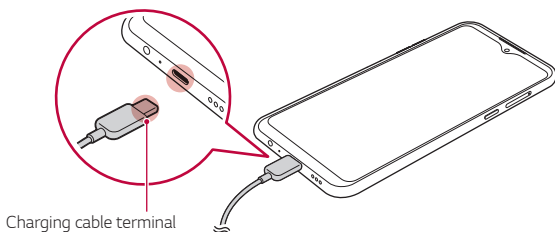



- Do not use the external terminal, charging cable or gender for the device in presence of moisture. This may cause fire, electric shock, injury, or device malfunction. If there is moisture, stop using the device immediately and remove the moisture completely.
- Make sure to use the USB cable provided with your device.
- Make sure to use an LG-approved charger and charging cable. Charging the battery with a third-party charger may cause the battery to explode or may damage the device.
- Your device has an internal rechargeable battery. For your safety, do not remove the embedded battery.
- Using the device when it is charging may cause electric shock. To use the device, stop charging it.



- Remove the charger from the power socket after the device is fully charged. This prevents unnecessary power consumption.
- Another way to charge the battery is by connecting a USB cable between the device and a desktop or laptop computer. This may take a longer time than plugging the adapter to a wall outlet.
- Do not charge the battery by using a USB hub that is unable to maintain the rated voltage. Charging may fail or unintentionally stop.

Precautions when using the device

- Make sure to use the USB cable provided; do not use third party USB cables or chargers with your device. The LG limited warranty does not cover the use of third party accessories.
- Failure to follow the instructions in this guide and improper use may damage the device.



- If the battery temperature exceeds a certain level while charging the device, charging may be stopped.
- If magnetic, metallic or conductive materials are attached on the back of the device or a protective case is inserted, the device may not charge properly.
- LG Electronics is not responsible for any issues concerning accessories of other brands. For such issues, contact the manufacturer of the accessory product.

Using the battery efficiently

Battery lifespan may decrease if you keep many apps and functions running simultaneously and continuously.

Cancel background operations to increase battery life.

To minimise battery consumption, follow these tips:


- Turn off the **Bluetooth®** or Wi-Fi network function when not using them.
- Set the screen timeout to as short a time as possible.
- Minimise the screen brightness.
- Set a screen lock when the device is not used.
- Check the battery level while using any downloaded apps.

Touch screen

You can familiarise yourself with how to control your device by using touch screen gestures.

Tapping

Lightly tap with your fingertip to select or run an app or option.

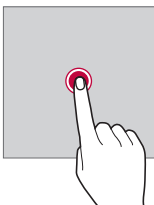


Touching and holding

Touch and hold for several seconds to display a menu with available options.




Double-tapping

Tap twice quickly to zoom in or out on a web page or map.

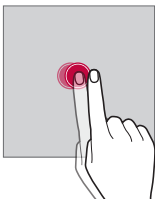


Dragging

Touch and hold an item, such as an app or widget, then move your finger to another location in a controlled motion. You can use this gesture to move an item.

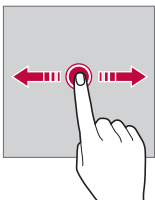



Swiping

Touch the screen with your finger and move it quickly without pausing. You can use this gesture to scroll through a list, a web page, photos, screens, and more.

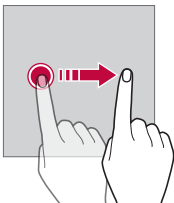

Pinching and spreading

Pinch two fingers to zoom out such as on a photo or map. To zoom in, spread your fingers apart.

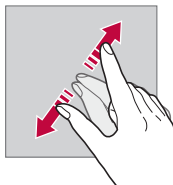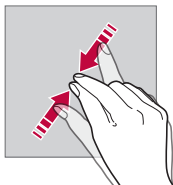

- Do not expose the touch screen to excessive physical shock. You might damage the touch sensor.



- A touch screen failure may occur if you use the device near a magnetic, metallic or conductive material.
- If you use the device under bright lights, such as direct sunlight, the screen may not be visible, depending on your position. Use the device in a shady location or a location with an ambient light that is not too bright and bright enough to read books.
- Do not press the screen with excessive force.
- Gently tap with your fingertip on the option you want.
- Touch control may not work properly if you tap while wearing a glove or by using the tip of your fingernail.
- Touch control may not work properly if the screen is moist or wet.
- The touch screen may not function properly if a screen-protective film or accessory purchased from a third party store is attached to the device.
- Displaying a static image for extended periods of time may result in after-images or screen burn-in. Turn off the screen or avoid displaying the same image for a long time when you do not use the device.

Home screen


Home screen overview

The Home screen is the starting point for accessing various functions and apps on your device. Tap  on any screen to directly go to the Home screen.

You can manage all apps and widgets on the Home screen. Swipe the screen left or right to view all installed apps at a glance.

Home screen layout

You can view all apps and organise widgets and folders on the Home screen.

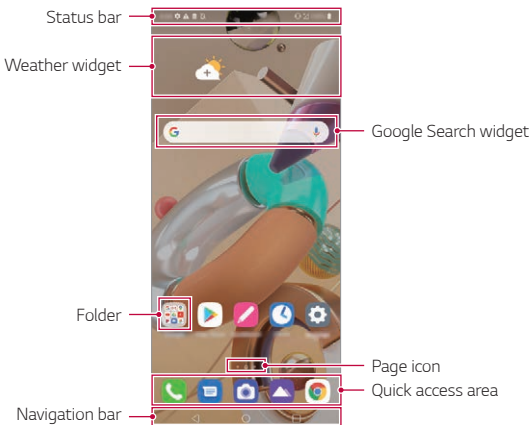

- The Home screen may differ depending on the manufacturer policy, user settings, software version or service provider.

- **Status bar:** View status icons, the time and the battery level.
- **Weather widget:** View the information of weather and time for a specific area.
- **Google Search widget:** Type or speak to open Google Search.
- **Folder:** You can create folders to classify the app based on desired criteria.
- **Page icon:** Display the total number of Home screen canvases. You can tap the desired page icon to go to the page you selected. The icon reflecting the current canvas will be highlighted.
- **Quick access area:** Fix main apps at the bottom of the screen so that they can be accessed from any Home screen canvas.
- **Navigation bar**
 - ◀: Return to the previous screen. Close the keypad or pop-up windows.
 - ○: Tap to go to the Home screen. To launch Google Assistant, touch and hold.
 - □: Tap to view a list of recently used apps or run an app from the list. To delete all the recently used apps, tap **CLEAR ALL**. To use two apps at the same time with the Multi window feature, touch and hold the button while using an app.

Changing the style of the Navigation bar

You can change the style of the Home touch buttons.

- 1 Tap ○ > **Settings** > **Display** > **Navigation bar**.
- 2 Under **STYLE**, select **Gestures**, **Gesture and Buttons** or **Buttons only** to suit your preferences.
 - **Gestures:** To see recent apps, swipe the Home button — up.
 - **Gesture and Buttons:** Back button ◀ and Home button ○ are available. To see recent apps, swipe the Home button ○ up.
 - **Buttons only:** ◀ / ○ / □ are available. Tap □ to see recent apps.

Status icons

When there is a notification for an unread message, calendar event or alarm, the status bar displays the corresponding notification icon. Check your device's status by viewing notification icons displayed on the status bar.

	No signal
	Data is being transmitted over the network
	Alarm is set
	Vibrate mode is on
	Bluetooth is on
	Connected to a computer via USB
	Battery level
	Airplane mode is on
	Missed calls
	Wi-Fi is connected
	Mute mode is on
	GPS is on
	Hotspot is on
	No SIM card




- Some of these icons may appear differently or may not appear at all, depending on the device's status. Refer to the icons according to the actual environment and area in which you are using the device and your service provider.
- Displayed icons may vary, depending on the area or service provider.

Notifications panel

You can open the notifications panel by dragging the status bar downward on the main screen.

- You can drag down the notice window or tap the arrow icon to open the list of quick setting icons.
- You can tap  to add, delete or arrange icons in the notice window.
- If you touch and hold the icon, the settings screen for the corresponding function appears.

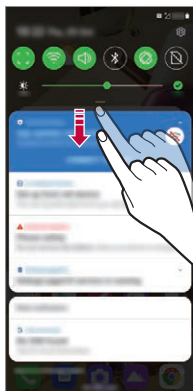

- You can use the notifications panel even on the lock screen. Drag the notifications panel while the screen is locked to quickly access the desired features.

Switching the screen orientation

You can set the screen orientation to automatically switch according to the device's physical orientation.

On the notification panel, tap **Rotation** from the quick access icon list.

You can also tap  > **Settings** > **Display** and activate **Auto-rotate screen**.




Editing the Home screen

On the Home screen, touch and hold on an empty space, then select the desired action from below.

- To rearrange the Home screen canvases, touch and hold on a canvas, then drag it to another location.
- To add a widget to the Home screen, touch and hold on a blank area of the Home screen, then select **Widgets**.
- To change wallpapers, themes, and icons, touch and hold on a blank area of the Home screen, then select **Wallpaper & theme**.

You can also tap  > **Settings** > **Wallpaper & theme**, then select wallpapers, themes, and icons to apply to the device.

- To configure the Home screen settings, touch and hold on a blank area of the Home screen, then select **Home screen settings**. See *Home screen settings* for details.
- To view or reinstall the uninstalled apps, touch and hold on a blank area of the Home screen, then select **App trash**. See *App trash* for details.
- To change the default screen, touch and hold on a blank area of the Home screen, move to desired screen, tap , then tap the screen once more.

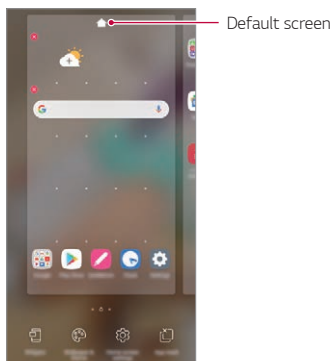


Viewing the background theme

You can view only the background image by hiding the apps and widgets on the Home screen.

Spread two fingers apart on the Home screen.

- To return to the original screen, which displays apps and widgets, pinch your fingers on the Home screen or tap ◀.

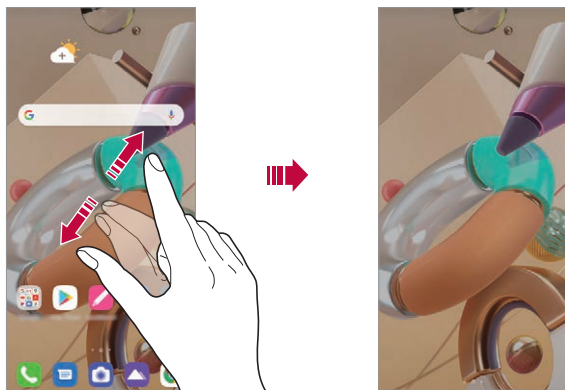

Moving apps on the Home screen

On the Home screen, touch and hold an app, then drag it to another location.

- To keep frequently used apps at the bottom of the Home screen, touch and hold an app, then drag it to the quick access area at the bottom.
- To remove an icon from the quick access area, drag the icon to the Home screen.

Using folders from the Home screen

Creating folders

On the Home screen, touch and hold an app, then drag it over another app.

- A new folder is created and the apps are added to the folder.

Editing folders

On the Home screen, tap a folder and do one of the following actions.

- To edit the folder name and colour, tap the folder name.
- To add apps, touch and hold an app, then drag it over the folder and release it.
- To remove an app from the folder, touch and hold the app and drag it to outside the folder. If the removed app is the only one app that existed in the folder, the folder is removed automatically.
- You can also add or remove apps after tapping  in the folder.



- You cannot change the folder colour while using downloaded theme.

Home screen settings

You can customise the Home screen settings.

- 1 Tap  > **Settings** > **Display** > **Home screen**.
- 2 Customise the following settings:

- **Select Home:** Select a Home screen mode.
- **Wallpaper:** Change the Home screen background wallpaper.
- **Screen swipe effect:** Select an effect to apply when the Home screen canvas switches.
- **Icon shape:** Choose if you want icons to have square or rounded corners.
- **Google feed:** Enable Google feed to show to the left of Home screen.
- **Sort apps by:** Set how apps are sorted on the Home screen.
- **Grid:** Change the app arrangement mode for the Home screen.
- **Hide apps:** Select which apps you want to hide from the Home screen.
- **Loop Home screen:** Enable to allow continuous Home screen scrolling (loop back to first screen after the last screen).
- **Search:** Search by swiping down on the Home screen.
- **Home screen lock:** Turn on to prevent apps and widgets from being rearranged or removed.

Screen lock

Screen lock overview

Your device's screen turns off and locks itself if you press the Power/Lock key. This also happens after the device is left idle for a specified period of time.

If you press the Power/Lock key when a screen lock is not set, the Home screen appears immediately.

To ensure security and prevent unwanted access to your device, set a screen lock.



- A screen lock prevents unnecessary touch input on the device screen and reduces battery consumption. We recommend that you activate the screen lock while not using the device.

Setting a screen lock

There are several options available for configuring the screen lock settings.

- 1 Tap  > **Settings** > **Lock screen & security** > **Select screen lock** and then select the method you prefer.
- 2 Customise the following settings:
 - **None:** Deactivate the screen lock function.
 - **Swipe:** Swipe on the screen to unlock the screen.
 - **Pattern:** Draw a pattern to unlock the screen.
 - **PIN:** Enter a numeric password to unlock the screen.
 - **Password:** Enter an alphanumeric password to unlock the screen.
 - **Fingerprints:** Unlock the screen by using your fingerprint.



- If you incorrectly attempt to unlock the device 5 times, the screen is blocked for 30 seconds.

Secure start-up settings

When you select Pattern, PIN or Password as a screen lock method, you can configure your device to be locked whenever turning on the device in order to secure your data.

- You cannot use all functions, except for emergency calls until you unlock the device.
- If you forget your decryption password, you cannot restore encrypted data and personal information.

Precautions for the secure start-up feature

- If you forget your decryption password, you cannot restore encrypted data and personal information.
- Be sure to keep your screen lock passwords separately.
- If you enter the screen lock passwords incorrectly more than the specified times, the device automatically resets itself and the encrypted data and your personal information are deleted automatically and they cannot be restored.

- Be cautious not to enter incorrect screen lock passwords more than the specified times.
- When you turn on the device right after the device resets, encryption also starts. If you stop the encryption arbitrarily, the data may be damaged. Be sure to wait until the reset is completed.

Customize Lock screen

You can customise lock screen.

- 1 Tap  > **Settings** > **Lock screen & security** > **Customize Lock screen**.
- 2 Select a function you want to set.
 - **Wallpaper**: Allows you to set the background for your Lock screen.
 - **Clock**: Allows you to set the clock size on the Lock screen.
 - **Shortcuts**: Allows you to choose apps to run on your Lock screen. This setting appears only when a screen lock is set.
 - **Contact info for lost phone**: Allows you to set text to be displayed on the Lock screen to identify the phone's owner.

Secure lock settings

You can set secure lock settings.

- 1 Tap  > **Settings** > **Lock screen & security** > **Secure lock settings**.
- 2 Select a function you want to set.
 - **Make pattern visible**: Allow you to make pattern visible.
 - **Lock timer**: Allows you to set the amount of time before the screen automatically locks after the backlight turns off (time-out due to inactivity).
 - **Power key instantly locks**: Enable this option to instantly lock the screen when the Power/Lock key is pressed. This setting overrides the Security Lock timer setting.
 - **Show lockdown option**: Allow you to show power menu option to turn off Lock screen notifications, Smart Lock and biometric locks.

- **Smart Lock:** Allows you to set trusted devices, places, voice, and/or on-body detection that will allow your phone to remain unlocked.



- Menus you can set may be different depending on lock screen methods you choose.

KnockON

You can turn the screen on or off by double-tapping the screen.



- This option is available only on the Home screen provided by LG. It may not function properly on a custom launcher or on the Home screen installed by the user.
- When tapping the screen, use your fingertip. Do not use a fingernail.
- To use the KnockON feature, make sure that the proximity/light sensor is not blocked by a sticker or any other foreign substance.

Turning the screen on

Double-tap the middle of the screen.

- Tapping the top or bottom of the screen may decrease the recognition rate.

Turning the screen off

Double-tap on an empty space on the Home screen and Lock screen.

You can also double-tap an empty space on the status bar.

Disable KnockON

If you don't want to use the KnockON function, set as follows:

Tap  > **Settings** > **Extensions** > **KnockON** and drag it to disable the function.

Memory card encryption

You can encrypt and protect data saved on the memory card. The encrypted data in the memory card cannot be accessed from another device.

- 1 Tap  > **Settings** > **Lock screen & security** > **Encryption & credentials** > **Encrypt SD card**.
- 2 Read the on-screen overview of memory card encryption and then tap **Continue** to continue.
- 3 Select an option and tap **Encrypt now**.
 - **New data encryption:** Encrypt only data that is saved on the memory card after encryption.
 - **Full encryption:** Encrypt all the data currently saved on the memory card.
 - **Exclude media files:** Encrypt all files, except for media files such as music, photos and videos.



- Once memory card encryption starts, some functions are not available.
- If the device is turned off while encryption is underway, the encryption process will fail, and some data may be damaged. Therefore, be sure to check if the battery level is sufficient before starting encryption.
- Encrypted files are accessible only from the device where the files were encrypted.
- The encrypted memory card cannot be used on another LG device. To use the encrypted memory card on another mobile device, format the card.
- You can activate memory card encryption even when no memory card is installed into the device. Any memory card that is installed after encryption will automatically be encrypted.

Taking screenshots

You can take screenshots of the current screen you are viewing.

Via a shortcut

Press and hold the Power/Lock key and the Volume Down (-) key at the same time for at least two seconds.

- Screenshots can be viewed from the **Screenshots** folder in the **Gallery**.

Via Screenshot

On the screen where you want to take a screenshot, drag the status bar downwards, then tap .



- See *Writing notes on a screenshot* for details.

Entering text

Using the Smart toolbar

You can use various keyboard input methods in one place. You can select the desired input method from the top of the keyboard.

- 1 Select the desired keyboard input method from the Smart toolbar.
- 2 Tap  and select the input method you want to show on the Smart tool, or reorganise them.

Smart toolbar





- LG keyboard is not default on your phone. You can change it from the keyboard settings.
 - Some supporting input methods may differ depending on the device you have.
 - You can turn on or off the Smart tool feature from the keyboard settings.
 - You can also use the keyboard input methods by tapping .
-
-  : Add emojis.
 -  : Tap  to enter text with your voice.
 - To maximise the voice command recognition, speak clearly.
 - To enter text with your voice, make sure that your device is connected to a network.
 - To select the language for voice recognition, tap  > **Languages** on the voice recognition screen.
 - This function may not be supported, or the supported languages may differ depending on the service area.
 -  : Access keyboard settings.
 -  : Open the clip tray. See *Clip Tray* for details.
 -  : Activate floating keyboard when you use the Multi-window feature. You can also move the keyboard to the desired location.


Using the Smart keyboard

You can use the Smart keyboard to enter and edit text.

With the Smart keyboard, you can view text as you type without bothering to alternate between the screen and a conventional keyboard. This allows you to easily find and correct errors when typing.

Moving the cursor

With the Smart keyboard, you can move the cursor to the exact position you want. When typing text, touch and hold on the space bar and then drag left or right.

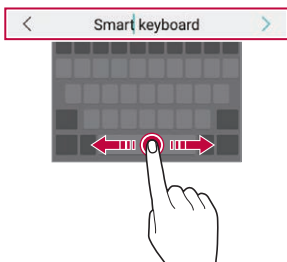


- This option is available only on the QWERTY keyboard.

Suggesting words

Smart keyboard automatically analyses your usage patterns to suggest frequently used words as you type. The longer you use your device, the more precise the suggestions are.

Enter text, then tap a suggested word or gently drag the left or right side of the keyboard upwards.

- The selected word is automatically entered. You do not need to manually type every letter of the word.

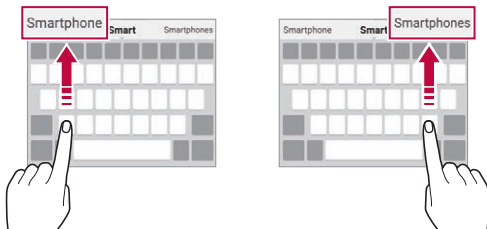

Adding languages to the keyboard

You can make additional languages available for keyboard input.

- 1 Tap  > **Settings** > **System** > **Language & keyboard** > **Manage keyboards** > **LG Keyboard** > **Language & keyboard layout** > **Select languages**.
- 2 Select the languages you want to make available.

Copy and Paste

You can cut or copy text from an app, and then paste the text into the same app. Or, you can run other apps and paste the text into them.

- 1 Touch and hold around the text you want to copy or cut.
- 2 Drag  /  to specify the area to copy or cut.
- 3 Select either **Cut** or **Copy**.
 - Cut or copied text is automatically added to the clip tray.
- 4 Touch and hold the text input window, then select **Paste**.



- If there is no item that has been copied or cut, the **Paste** option will not appear.

Clip Tray

If you copy or cut an image or text, it is automatically saved to the clip tray and can be pasted to any space at any time.

- 1 On the Smart tool, select .
You can also touch and hold the text input window, then select **Clip Tray**.
- 2 Select and paste an item from the clip tray.
 - A maximum of 20 items can be saved to the clip tray.
 - Tap  to lock saved items in order not to delete them, even when the maximum quantity is exceeded. A maximum of ten items can be locked. To delete locked items, unlock them first.

- Tap  to delete the items saved to the clip tray.



- The clip tray may not be supported by some downloaded apps.

Content sharing

Playing content from another device

You can play photos, videos or songs saved on your device from a TV.

- 1 Connect the TV and your device to the same Wi-Fi network.
- 2 While viewing an item in the **Gallery** or **Music** app, tap  > **Play on other device**.
- 3 Select the TV you want to connect to.



- For use with Chromecast, Google Play services should be up to date.

Viewing content from nearby devices

You can view content from various devices, such as a computer, NAS or mobile device, by using the Gallery or Music app.

Connecting the devices

Connect both your device and another device that support DLNA function to the same wireless network.



- Make sure that File sharing (DLNA) is activated on both the device and the connected device.

Searching for nearby devices

You can view a list of DLNA devices on the same network by selecting the  > **Nearby devices** menu in each app.

Use content from nearby devices as if you were using it on your device.

Sending or receiving files

You can share files between your device and another LG device, or a tablet or computer.

Sending files

From the **Gallery** or other apps, tap **:** > **Share** or  then select a device on the file sharing list.

Receiving files

Drag the status bar downward and then tap **File sharing**.

If your device does not support the file sharing feature, tap  > **Settings** > **Connected devices** > **File sharing** > **SmartShare Beam** .



- Make sure that your device is connected to the same wireless network as the file transfer target device.
- Make sure that File sharing is activated on both devices.



03

Useful Apps

Installing and uninstalling apps

Installing apps

Access an app store to search and download apps.

- You can use SmartWorld, Play Store or the app store provided by your service provider.



- Some app stores may require you to create an account and sign in.
- Some apps may charge fees.
- If you use mobile data, you may be charged for data usage, depending on your pricing plan.
- SmartWorld may not be supported depending on the area or service provider.

Uninstalling apps

Uninstall apps that you no longer use from your device.

Uninstalling with the touch and hold gesture

Press and hold any empty area on the screen, and then press  of the app you want to delete.

- If apps were uninstalled within 24 hours from now, you can reinstall them. See [App trash](#) for details.

Uninstalling by using the settings menu

Tap  > **Settings** > **Apps** > **App info**, select an app, then tap **Uninstall**.



- Some apps cannot be uninstalled by users.

Uninstalling apps from the app store

To uninstall an app, access the app store from which you download the app and uninstall it.

Installing and uninstalling apps during the setup

When you turn on the device for the first time, you can download recommended apps.

You can skip to the next step without installation.

App trash

You can view the uninstalled apps. You can also reinstall apps which were uninstalled within 24 hours from now.

1 Tap > **Management** > **App trash**.

You can also touch and hold an empty area of the Home screen, then tap **App trash**.

2 Activate the desired function:

- **Restore:** Reinstall the selected app.
-  : Remove the uninstalled apps permanently from the device.




- Uninstalled apps are automatically removed from the device 24 hours after they were uninstalled. If you want to reinstall the uninstalled apps, you must download them again from the app store.
- This feature is activated on the default Home screen only. If you uninstall apps while using the EasyHome screen or other launcher, they are immediately and permanently removed from the device.

App Shortcuts

On the Home screen, touch and hold an app icon such as Call, Message, Camera, Gallery and Settings to display a quick access menu. Use apps more easily through App Shortcuts.

- Tap  to configure the settings for the desired app's widget.
- Tap  to view the information for the desired app.

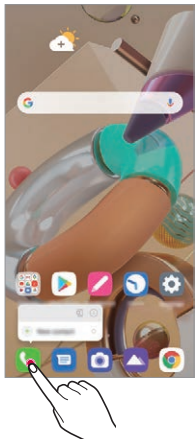

- This feature is available only on some apps.

Phone

Voice call

Make a phone call by using one of the available methods, such as manually entering a phone number and making a call from the contact list or the list of recent calls.

Making a call from the keypad

- 1 Tap  >  > **Dial**.
- 2 Make a call by using a method of your choice:
 - Enter a phone number and tap .
 - Touch and hold a speed dial number.

- Search for a contact by tapping the initial letter of a contact name in the contact list, and then tap .



- To enter "+" when making an international call, touch and hold number 0.
- See *Adding contacts* for details on how to add phone numbers to the speed dial list.

Making a call from the contact list

- 1 Tap  >  > **Contacts**.
- 2 From the contact list, select a contact and tap .

Answering a call

To answer a call, drag  on the incoming call screen.

- When the stereo headset is connected, you can make calls by using the call/end button on the headset.
- To end a call without turning off the screen, tap  > **Settings** > **Network & internet** > **Call** > **Answer and end calls** and then activate **End call with the Power key**.

Rejecting a call

To reject an incoming call, drag  across the incoming call screen.

- To send a rejection message, drag the rejection message option  across the screen.
- To add or edit a rejection message, tap  > **Settings** > **Network & internet** > **Call** > **Call blocking & Decline with message** > **Decline with message**.
- When a call is coming in, press the Volume Up (+), Volume Down (-) or Power/Lock key to mute ringtone or vibration, or to hold the call.

Checking an incoming call while using an app

When a call comes in while using an app, a pop-up notification can be displayed at the top of the screen. You can receive the call, reject the call, or send message from the pop-up screen.



- Tap > **Settings** > **Network & internet** > **Call** > **Additional settings** > **Incoming voice call pop-up** and then select the desired way you would like to display the incoming call while using an app.

Viewing missed calls

If there is a missed call, the status bar at the top of the screen displays

To view missed call details, drag the status bar downwards. You can also tap > > **Call logs**.

Functions accessible during a call

During a call, you can access a variety of functions by tapping the on-screen buttons:

- **Contacts**: View the contact list during a call.
- **Hold**: Hold a call.
- **Dialpad**: Display or hide the dial pad.
- **Speaker**: Turn on the speakerphone function.
- **Mute**: Mute your voice so that your voice cannot be heard by the other party.
- **Bluetooth**: Switch the call to a Bluetooth device that is paired and connected.
- : End a call.
- : Access additional call options.



- Available settings items may vary depending on the area or service provider.

Making a three-way calling

You can make a call to another contact during a call.

- 1 During a call, tap  > **Add call**.
- 2 Enter a phone number and tap .
 - The two calls are displayed on the screen at the same time, and the first call is put on hold.
- 3 To start a conference call, tap **Merge calls**.



- You may be charged a fee for each call. Consult with your service provider for more information.

Viewing call records

To view recent call records, tap  >  > **Call logs**. Then, you can use the following functions:

- To view detailed call records, select a contact. To make a call to the selected contact, tap .
- To delete call records, tap  > **Delete**.



- The displayed call duration may differ from the call charge. Consult with your service provider for more information.
- The deleted call history can not be restored.
- Pinch two fingers or spread your fingers apart to adjust the font size of call logs or contacts.

Configuring call options

You can configure various call options.

- 1 Tap  >  > **Dial** or **Call logs**.
- 2 Tap  > **Call settings** and then configure the options to suit your preferences.

Messaging

Sending a message

You can create and send messages to your contacts using the Messaging app.



- Sending messages abroad may incur additional charges. Consult with your service provider for more information.

- 1 Tap > .
- 2 Tap .
- 3 Specify a recipient and create a message.
 - To use multimedia options, tap .
 - To access optional menu items, tap .
- 4 Tap to send the message.

Reading a message

You can view exchanged messages organised by contact.

- 1 Tap > .
- 2 Select a contact from the message list.

Configuring messaging settings

You can change messaging settings to suit your preferences.

- 1 Tap > .
- 2 Tap > **Settings** from the message list.

Camera

Starting the camera

You can take a photo or record a video to cherish all of your memorable moments.

Tap  .




- Before taking a photo or recording a video, wipe the camera lens with a soft cloth.
- Be careful not to stain the camera lens with your fingers or other foreign substance.
- Images included in this user guide may be different from the actual device.
- Photos and videos can be viewed or edited from the Gallery. See [Gallery overview](#) for details.

Basic features in the Camera app

You can take photos or record videos by selecting a variety of camera modes and options.

1 Tap  .

2 Tap  to take a photo, or tap **Video** >  to record a video.

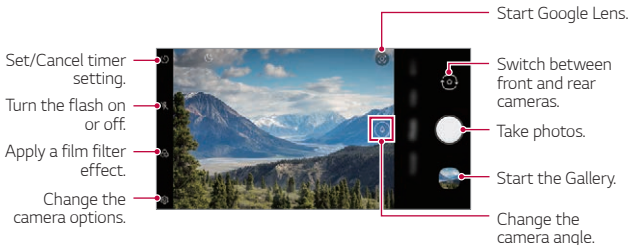

Taking a photo

- 1 Select a camera mode and tap the subject to focus the camera on.
- 2 Tap  to take a photo.
 - You can also press the Volume Down or Volume Up key to take a photo.
 - You can take a photo while recording a video by pressing  on the screen.



- You can run the camera app by short-pressing the power key twice. Tap  > **Settings** > **Extensions** > **Shortcuts** and then tap **Open Camera** to activate it.
- When the screen is turned off or locked, start the camera by pressing the Volume Down key twice. Tap  > **Settings** > **Extensions** > **Shortcuts** and then tap **Open Camera**  to activate it.

Recording a video

- 1 Tap  >  > **Video** and tap the subject to focus on.
- 2 Tap  to record a video.
 - To take a photo while recording a video, tap .
 - To pause the video recording, tap . To resume the video recording, tap .
 - While recording a video, you may spread or pinch two fingers to zoom in or out.
 - While recording a video, you may tap the desired area to adjust the brightness.
- 3 Tap  to end the video recording.

Customising the camera options

You can customise a variety of camera options to suit your preferences. Tap  on the screen.



- Available options vary depending on the selected camera (front or rear camera) and the selected camera mode.

- : Take a photo in FullVision.
- : Select values for aspect ratio and size for taking photos.
- : Select values for resolution and size for recording videos.

HDR	Obtain photos in vivid colours and get compensated effects even when they are taken against the light. These functions are provided by the high dynamic range (HDR) technology equipped in the camera.
Cheese shutter	Take photos with voice commands.
Tag locations	Save the image with GPS location data.
Grid	Display guide grids so that you can take photos or record videos based on the horizontal and vertical reference lines.
Storage	Select if you want to store the pictures and videos in the Internal storage or SD card. (Available when a memory card is inserted.)
Help	Provide Help for each camera menu.

Additional options on the front camera


Selfie shot	Take a selfie by selecting its option between Gesture shot and Auto shot .
Save as flipped	Save as flipped images after taking selfies.

Changing the camera mode

You can select a camera mode that suits your environment to take a photo or record a video easily and conveniently.

Tap  >  > **More**, then select the desired mode.

- You can change the order of the scene modes by moving the scene mode icon while pressing and holding the icon.

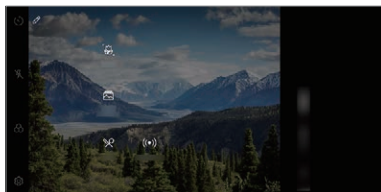

Various camera modes

Food

You can take a photo or record a video with adjusting the colour slide bar and white balance.

- 1 Tap > , then tap **More** > .
- 2 Tap to take a photo.
 - Drag the colour slide bar on the screen to adjust the white balance and select the best colour.
 - If the slide bar is not displayed, tap to adjust the white balance.

Flash Jump-Cut

Photos taken at a regular interval are saved as GIF files.

- 1 Tap > , then tap **More** > .
- 2 Tap to take a photo.
 - Photos are taken every 3 seconds and saved as a GIF file.
 - Tap on the screen to select the number of photos you want to take.
 - While taking photos, tap to create GIF files with previously taken photos.



- The flash automatically turns on to act as a timer.
- The shots taken this time and the total number of shots are displayed at the bottom of the screen.
- All taken photos are saved as GIF files only.
- You may not change the GIF speed nor image order.

Macro

You can take a close-up of a subject.

- 1 Tap > , then tap **More** > .
- 2 Tap to take a photo.

YouTube Live

You can record a video and directly upload to YouTube.

- 1 Tap > , then tap **More** > .
- 2 Tap and record a video.
 - To use this feature, you need to verify your phone number.



- YouTube Live is available only when your device is connected to the Internet. If you use mobile data, you may be charged for data usage, depending on your pricing plan.

Portrait

You can take sharp portrait by applying camera lens blur effect.

See *Portrait* for details.

AI CAM


You can effectively take photos or record videos since the camera recognises the object when taking a photo or recording a video.

See *AI CAM* for details.

Other useful features in the Camera app

Auto-Exposure/Auto-Focus lock

You can fix the current exposure level and focus position by touching and holding the screen in the Auto mode. To turn off the feature, tap a blank area on the screen.

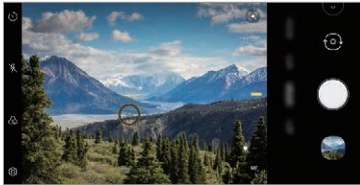

- This feature is available only in specific modes.

Burst shot

You can take continuous shots of photos to create moving pictures.

In the Auto mode, touch and hold .

- Continuous shots are taken at a fast speed while  is held down.

Switching between cameras

You can switch between the front and rear cameras to suit your environment.

On the camera screen, tap  or drag the screen up or down to switch between the front and rear cameras.



- Use the front camera to take selfies. See *Selfie shot* for details.

Zoom in or out

You can use zoom in or out on the camera screen while taking a photo or recording a video.

- On the camera screen, pinch or spread two fingers to zoom in or out. Or using the adjustment bar which appears when drag  /  upwards, zoom in or out and switch between the standard and wide angle.



- Zoom in/out function is not available in the selfie mode (front camera).
- This function is not supported in a number of modes.

Selfie shot

You can use the front camera to view your face on the screen and take selfies.


Gesture shot

You can take selfies by using gestures.

Show your palm to the front camera and then clench your fist.

You can also clench your fist and then open it towards the front camera.

- In three seconds, a photo is taken.

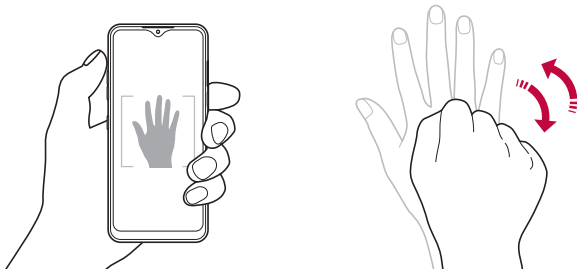

- To use this feature, switch to the front camera mode, then tap  > **Selfie shot > Gesture shot**.
- Make sure that your palm and fist are within the reference line so that the camera can detect them.
- This feature may not be available while using some of the camera features.

Auto shot

You can use the face detection feature to take selfies easily and conveniently. You can set the device so that, when you look at the screen, the front camera detects your face and takes a selfie automatically.

- The white coloured guide frame appears when the front camera detects your face. If the subject within the guide frame stops moving, the guide frame colour turns yellow, then the camera takes a photo.



- Tap  > **Selfie shot > Auto shot** to enable the Auto shot feature.

Interval shot

You can take selfies at an interval.

While using the front camera, you can show your palm to the camera, then clench your fist twice quickly.

- Four photos are taken at regular intervals after a timer delay of three seconds.

Save as flipped

Before taking a photo with the front camera, tap  > **Save as flipped**. The image is flipped horizontally.




- When using the front camera, you can change how selfies are taken in the camera options. See *Customising the camera options* for details.

quick share

You can share a photo or video to the app you want immediately after taking it.

- 1 Tap  > , then take a photo or record a video.
- 2 Tap the app icon that appears on the screen to share it using that app. You can also swipe the icon towards the opposite direction to see what other apps you can use to share your photos and videos.

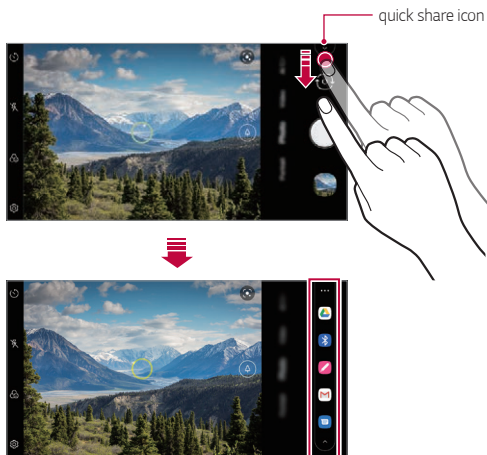

- The app displayed by the quick share icon may vary, depending on the type and frequency of access to the apps installed on the device.
- This feature is available only in specific modes.

Gallery

Gallery overview

You can view and manage photos and videos saved on your device.


- 1 Tap  > .
- Saved photos and videos are displayed by folder.
- 2 Tap a folder and select a file.
- View the selected file in full-screen mode.
- While viewing a photo, swipe left or right to view the previous or next photo.

- While viewing a video, swipe left or right to rewind or fast-forward the video.
- You can view the photos or videos organised by year, month or day in the Photos tab.
- To view photos by location at which the photo was taken, tap  >  > **Tag locations**, then tap . The photos are automatically grouped by location under the Memory tab of the Gallery app.




- Some file formats may not be supported, depending on the installed software.
- Some files may not be opened due to encoding.
- Files that exceed the size limit may cause an error.
- You need to activate the GPS feature to create Memory albums.

Viewing photos

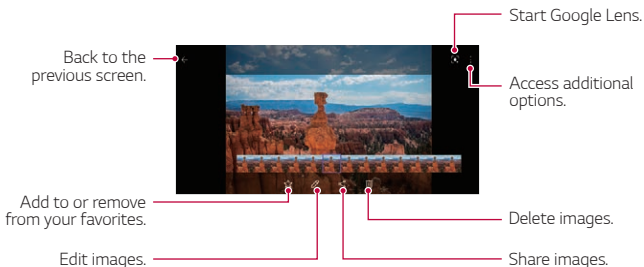

- To display the menu items, gently tap the screen. To hide the menu items, tap the screen again.


Playing a video

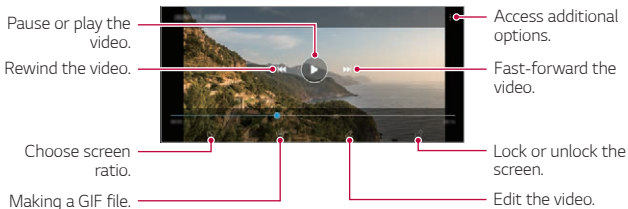

- To adjust the sound volume, drag the right side of the video screen up or down.
- To adjust the screen brightness, drag the left side of the screen up or down.

Editing videos

- 1 While viewing a video, tap .
- 2 Use a variety of effects and edit tools to edit the video.

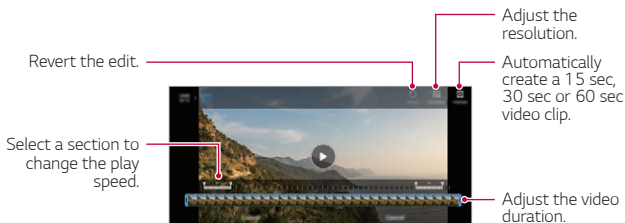

- 3 Tap **Save** to save changes.

Creating a movie

You can create a new movie by putting images and videos together.
See [Creating a movie](#) for details.

Making a GIF

You can easily make a GIF file using recorded video.

See *Making a GIF* for details.

Deleting files

You can delete files by using one of the following options:

- Touch and hold a file from the file list, then tap **Delete**.
- Tap  from the file list and delete the desired files.
- Deleted files are automatically moved to **Trash** and they can be restored to the Gallery within 7 days.
- Tap  to completely delete the files. In this case, the files cannot be restored.

Sharing files

You can share files by using one of the following options:

- Tap  from the file list to select files and share them using the method you want.
- While viewing a video,  > **Share** to share the file by using the method you want.

Contacts

Contacts overview

You can save and manage contacts.

Tap  > **Essentials** > **Contacts**.

Adding contacts

Adding new contacts

- 1 On the contact list screen, tap .

- A pop-up appears for selecting the saving location for contact. Select the location you want.

2 Enter contact details and tap **Save**.

Importing contacts

You can import contacts from another storage device.

- 1 On the contact list screen, tap  > **Manage contacts** > **Import**.
- 2 Select the source and target locations of the contact you want to import, and then tap **OK**.
- 3 Select the contacts and tap **Import**.

Adding contacts to the speed dial list

- 1 On the contact list screen, tap  > **Speed dial**.
- 2 Tap **Add contact** from a speed dial number.
- 3 Select a contact.



- While adding a new contact, tap  to add a speed dial number.

Searching for contacts

You can search for contacts by using one of the following options:

- Tap the search bar at the top of the Contacts screen and enter the desired contact or phone number you want to search for.
- Scroll the contact list up or down.
- From the index of the contact list screen, tap the initial letter of a contact.



- Pressing the search bar at the top of the Contacts screen and entering a contact or phone number brings up the integrated search results from the call history and contacts list saved onto the product.

Contacts list

Editing contacts

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap  and edit details.
- 3 Tap **Save** to save changes.

Deleting contacts

You can delete contacts by using one of the following options:

- On the contact list screen, touch and hold a contact you want to delete, then tap .
- Tap  > **Delete** on the contact list screen.



- Deleted contacts may not be restored.

Adding favourites

You can register frequently used contacts as favourites.

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap .

Creating groups

- 1 On the contacts group list, tap .
- 2 Enter a new group name.
- 3 Tap **Add members**, select contacts, then tap **Add**.
- 4 Tap **Save** to save the new group.

QuickMemo+

QuickMemo+ overview

You can make creative notes by using a variety of options on this advanced notepad feature, such as image management and screenshots, which are not supported by the conventional notepad.

Creating a note

- 1 On the home screen, tap **QuickMemo+**.
- 2 Tap  to create a note.
 -  : Save a note.
 -  : Undo the previous edit.
 -  : Redo the recently deleted edits.
 -  : Enter a note by using the keypad.
 -  : Save your favorite pen types.
 -  : Write notes by hand.
 -  : Erase handwritten notes.
 -  : Access additional options.
- 3 Tap  to save the note.

Writing notes on a screenshot


- 1 While viewing the screen you want to capture, drag the status bar downwards and then tap .
 - The screen is captured and displayed as a thumbnail on the right bottom of the screen.
- 2 To write notes on the screen, tap .
- 3 Write notes using the tools.
 -  : Zoom in or out, or adjust the area to capture.
 -  : Write notes by hand.
 -  : Erase handwritten notes.

- ⬅️ : Undo the previous edit.
- ➡️ : Redo the recently deleted edits.
- ✂️ : Crop the screen as you desire.

4 Tap ✓ and save the notes.

- Saved notes can be viewed in **Gallery**.

Additional features after capturing a screenshot

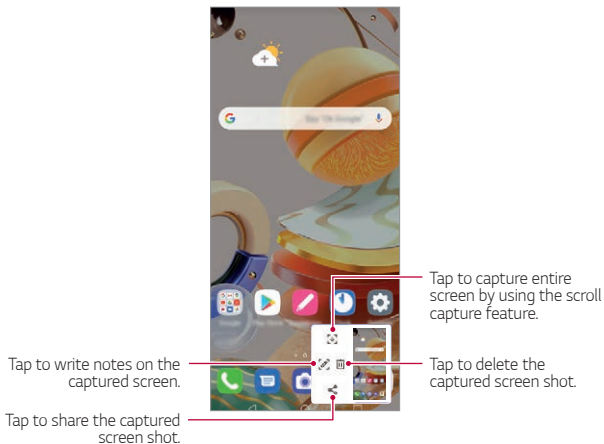

- You can capture the entire screen by using the scroll capture feature.
- While using an app such as Messaging and Chrome, drag the notifications panel downwards and then tap 🟢. Then, tap ⏮️ to capture the entire screen you are currently viewing as a single file.
- This feature is available only on some apps that support the scroll capture feature.
- Pinch two fingers or spread your fingers apart to change the memo layout.

Clock

Alarm

You can set an alarm to trigger it at a specified time.

- 1 Tap  > **Clock** > **Alarm**.
- 2 Tap  to add a new alarm.
- 3 Configure the alarm settings and tap **Save**.



- If you select a previously set alarm, you can edit the alarm.
- To delete an alarm, tap  > **Delete** at the top of the screen. You can also touch and hold the alarm.

World clock

You can view the current time in cities around the world.

- 1 Tap  > **Clock** > **World clock**.
- 2 Tap  and add a city.

Timer

You can set the timer to trigger an alarm after a specified period of time.

- 1 Tap  > **Clock** > **Timer**.
- 2 Set the time and tap **Start**.
 - To suspend the timer, tap **Pause**. To resume the timer, tap **Resume**.
- 3 Tap **Stop** to stop the timer alarm.

Stopwatch

You can use the stopwatch to record a lap time.

- 1 Tap  > **Clock** > **Stopwatch**.
- 2 Tap **Start** to initiate the stopwatch.
 - To record a lap time, tap **Lap**.

- 3 Tap **Pause** to suspend the stopwatch.
 - To resume the stopwatch, tap **Resume**.
 - To clear all the records and restart the stopwatch, tap **Reset**.


Music

You can play and manage songs or music albums.

- 1 Tap  > **Essentials** > **Music**.

- 2 Select a category.

- 3 Select a music file.

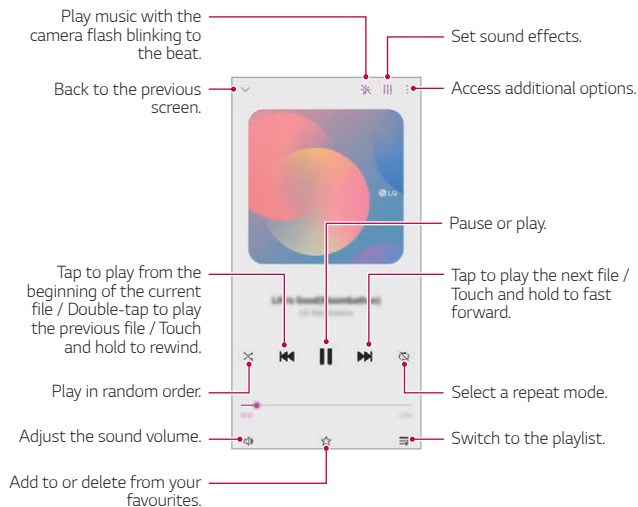



- Some file formats may not be supported, depending on the installed software.
- Files that exceed the size limit may cause an error.
- Music files may be protected by international copyright owners or copyright laws. You may have to obtain legal permission before copying a music file. To download or copy a music file, first check the copyright law for the relevant country.

Calculator

You can use two types of calculators: the simple calculator and the scientific calculator.

- 1 Tap > **Essentials** > **Calculator**.
- 2 Use the keypad to make a calculation.
 - To restart a calculation, touch and hold the button.

LG ThinQ

You can easily connect the product with IoT appliances to monitor and conveniently use the appliances.

Tap > **Essentials** > **LG ThinQ**.



- Washing machine, dryer, styler, dishwasher, oven, and robot cleaner can only be registered when the product is in the standby mode.
- Look for the LG ThinQ mark on the product to see if it can be connected to LG ThinQ app.
- Tap to check various function of the LG ThinQ app.

Game Launcher

You can set whether to use the game launcher where you can view the list of games installed on the product and select game settings such as muting media volume, limiting alerts, etc.

- 1 Tap  > **Essentials** > **Game Launcher**.
- 2 Select the desired option.

Audio Recorder

You can record and save your voice or others' voices from important events. Recorded voice files can be played back or shared.

- 1 Tap  > **Essentials** > **Audio Recorder**.
 - To add an event, tap  > **Add tags** > **Add** under **Event**. Then, add an event to the desired date.
 - To save the recording's location details, tap  > **Add tags** > **Add** under **Location**.
- 2 Tap .
 - To pause recording, tap .
- 3 Tap  to end the recording.
 - The file is saved automatically and the recorded files screen appears.
- 4 Tap  to play the recorded voice.



- Tap  to view the recorded files. You can play a recorded voice file from the list.

FM Radio

You can listen to FM radio.

Tap  > **Essentials** > **FM Radio**.



- To use this app, first connect earphones to the device. The earphones function as the radio antenna.
- This function may not be supported depending on the area.

Update centre

You can check and install the latest version of the app or software provided by LG.

Tap  > **Management** > **Update centre**.

Smart Doctor

You can use Smart Doctor to diagnose the device's condition and optimise it.

Tap  > **Management** > **Smart Doctor**.

LG Mobile Switch

Easily transfer data from a used device to a new device via LG Mobile Switch.

- 1 Tap  > **Management** > **LG Mobile Switch**.
You can also tap  > **Settings** > **System** > **Backup** > **LG Mobile Switch**.
- 2 Follow the on-screen instructions to select a desired method for transfer.



- Data in a Google Account will not be backed up. When you synchronise your Google Account, Google apps, Google contacts, Google Calendar, Google memo app data and apps downloaded from the Play Store are stored on the Drive app automatically.
- Fully charge the battery before transferring data to avoid unintentional powering off during the process.

App trash

You can see the list of apps deleted on the home screen. The app that was deleted within the last 24 hours can be recovered.

Tap  > **Management** > **App trash**.

For more details, refer to *App trash*.

SmartWorld

You can download a variety of games, audio content, apps and fonts provided by LG Electronics. Customise your device to suit your preferences by using Home themes and fonts.



- If you use mobile data, you may be charged for data usage depending on your pricing plan.
- This feature may not be supported depending on the area or service provider.

- 1 Tap  > **Services** > **SmartWorld**.
- 2 Tap  > **Sign in**, then sign in.
- 3 Select and download the desired content items.

Cell Broadcast

You can view real-time text broadcasts on emergency situations, such as typhoons, floods and earthquakes.

Tap  > **Services** > **Cell Broadcast**.

Google apps

You can use Google apps by setting a Google Account. The Google Account registration window appears automatically when you use a Google app for the first time. If you do not have a Google Account, create one from your device. For details on how to use an app, see the Help in the app.



- Some apps may not work depending on the area or service provider.

Chrome

A fast, simple, and secure web browser, built for the modern web.

Docs

Docs is a collaborative, word-processing tool that powers productivity. Use Docs to create, edit and work together in real-time.

Drive

Drive is a file storage and sharing app that makes it easy to find, share and collaborate on work projects from anywhere, instantly.

Duo

Make simple, high quality video calls to your friends and family on Android phones and iPhones.

Gmail

Gmail is an easy to use mail app that keeps your messages safe, makes your inbox smarter, and helps you stay organised.

Google

The Google app keeps you in the know about the things you care about. Find quick answers, explore your interests, and get a feed of stories and updates on topics that matter to you.

Keep notes

Create, edit, and share you text and photo notes with Google Account.

Maps

Going somewhere? Go with Maps, the app you can rely on for real-time GPS navigation, traffic, transit, and details about millions of places, such as reviews and popular times.

Photos

Home for all your photos and videos, automatically organised so you can share and save what matters.

Play Movies & TV

Use your Google Account to rent or purchase movies. Purchase content and play it anywhere.

YT Music

Purchase music from the Play Store. Play music saved on your device.

Sheets

Sheets is a collaborative spreadsheet processing tool that powers productivity. Use Sheets to import, organise and analyse information together in real-time.

Slides

Google Slides is a collaborative presentation creation tool that powers productivity. Use Slides to organise information, present results, and make decisions together in real-time.

YouTube

Watch your favorite channels, listen to music you love, and upload videos to share with people around the world.

Assistant

Your device has the Google Assistant built-in. Find answers and get things done while on-the-go. To get started, just tap the Google Assistant key on the side of the phone or touch and hold the home button of the phone.



- The Google Assistant is not available in certain languages and countries.

Calendar

The Calendar app allows you to track your schedule of events (that you created), organised by Day, 3-day, Week or Month.

Files

You can view and manage files saved on your device.



04

Settings

Settings

You can customise the device settings in accordance with your preferences.

Tap  > **Settings**.



- If you enter a keyword on the search window at the top of the screen, you can conveniently run the items that need to be set.

Network & internet

Dual SIM Card

You can configure Dual SIM settings.

- 1 On the settings screen, tap **Network & internet** > **Dual SIM Card**.
- 2 Customise the following functions:
 - **SIM card 1**: Change the name and icon of the SIM card 1.
 - **SIM card 2**: Change the name and icon of the SIM card 2.
 - **SIM card colour theme**: Change the colour themes for the SIM cards.
 - **Cost save mode**: Activate or deactivate the cost save mode. In the cost save mode, if you make a call to a contact to which a specific SIM is assigned, this SIM is used for the call even if the other SIM is active, for example, it is using mobile data.
 - **Mobile data**: Select a SIM card you want to use for mobile data service. You can also turn off this function.
 - **Data roaming**: Select this option to enable the device to use mobile data when you are roaming outside your home network area.
 - **Mobile data during calls**: Access mobile data using the nondefault data SIM card temporarily during an HD voice call with the same card.

Wi-Fi

You can connect to nearby devices over a Wi-Fi network.

Connecting to a Wi-Fi network

- 1 On the settings screen, tap **Network & internet** > **Wi-Fi**.
- 2 Tap  to activate it.
 - Available Wi-Fi networks appear automatically.
- 3 Select a network.
 - You may need to enter the network's Wi-Fi password.
 - The device skips this process for previously accessed Wi-Fi networks. If you do not want to automatically connect to a certain Wi-Fi network, tap the network and then tap **Forget**.

Wi-Fi network settings

On the settings screen, tap **Network & internet** > **Wi-Fi**.

- **Switch to mobile data:** If the mobile data connection function is activated but the device cannot connect to the Internet via Wi-Fi connection, the device automatically connects to the Internet via the mobile data connection.



- This feature depends on the service provider.

-  : Customise Wi-Fi network settings.

Wi-Fi Direct

You can connect your device to other devices that support Wi-Fi Direct to share data directly with them. You do not need an access point. You can connect with more than two devices by using Wi-Fi Direct.

- 1 On the settings screen, tap **Network & internet** > **Wi-Fi** >  > **Advanced Wi-Fi** > **Wi-Fi Direct**.
 - Nearby devices that support Wi-Fi Direct automatically appear.

2 Select a device.

- Connection occurs when the device accepts the connection request.



- The battery may drain faster when using Wi-Fi Direct.

Mobile data

You can turn mobile data on and off. You can also manage mobile data usage.

Turning on mobile data

- 1 On the settings screen, tap **Network & internet** > **Mobile data**.
- 2 Tap  to activate it.

Customising mobile data settings

- 1 On the settings screen, tap **Network & internet** > **Mobile data**.
- 2 Customise the following settings:
 - **Mobile data**: Set to use data connections on mobile networks.
 - **Limit mobile data usage**: Set a limit for mobile data usage to block mobile data if the limit is reached.
 - : Customise mobile data settings.
 - Data usage volume is measured based on the product, and the volume calculated by your mobile provider may be different.

Call

You can customise call settings, such as voice call and international call options.



- Some features may not be supported depending on the area or service provider.

- 1 On the settings screen, tap **Network & internet** > **Call**.
- 2 Customise the settings.

Tethering

USB tethering

You can connect the device to another device via USB and share mobile data.

- 1 Connect your device and other devices via USB cable.
- 2 On the settings screen, tap **Network & internet > Tethering > USB tethering** and then tap  to activate it.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- When connecting to a computer, download the USB driver from www.lg-mobile.co.il and install it on the computer.
- You cannot send or receive files between your device and a computer while USB tethering is turned on. Turn off USB tethering to send or receive files.
- Operating systems that support tethering are Window XP or higher, or Linux.

Wi-Fi hotspot

You can set the device as a wireless router so that other devices can connect to the Internet by using your device's mobile data.

- 1 On the settings screen, tap **Network & internet > Tethering > Wi-Fi hotspot** and then tap  to activate it.
- 2 Tap **Set up Wi-Fi hotspot**, and enter the Wi-Fi name (SSID) and password.
- 3 Turn on Wi-Fi on the other device, and select the name of the device network on the Wi-Fi list.
- 4 Enter the network password.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- More information is available at this web site:
<http://www.android.com/tether#wifi>

Wi-Fi hotspot turn off timer

When the Wi-Fi hotspot has not been used for a specific period of time, it is automatically disconnected. You can set the time for automatic disconnection.

Bluetooth tethering

A Bluetooth-connected device can connect to the Internet by using your device's mobile data.

- 1 On the settings screen, tap **Network & internet > Tethering > Bluetooth tethering** and then tap  to activate it.
- 2 Turn on Bluetooth on both devices and pair them.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- More information is available at this web site:
http://www.android.com/tether#Bluetooth_tethering

Help

You can view help on using tethering and hotspots.

On the settings screen, tap **Network & internet > Tethering > Help**.

Airplane mode

You can turn off the call and mobile data functions. When this mode is on, functions that do not involve data, such as games and music playback, remain available.

- 1 On the settings screen, tap **Network & internet** > **Airplane mode**.
- 2 Tap **Turn on** in the confirmation screen.

Mobile networks

You can customise the mobile networks settings.

- 1 On the settings screen, tap **Network & internet** > **Mobile networks**.
- 2 Customise the following settings:
 - **Network mode**: Select a network type.
 - **Access Point Names**: View or change the access point for using mobile data services. To change the access point, select a choice from the access point list.
 - **Network operators**: Search for network operators and connect automatically to a network.

VPN

You can connect to a safe virtual network, such as an intranet. You can also manage connected virtual private networks.

Adding VPN

- 1 On the settings screen, tap **Network & internet** > **VPN**.
- 2 Tap **+**.



- This feature is available only when the screen lock is activated. If the screen lock is deactivated, a notification screen appears. Tap **Change** from the notification screen to activate the screen lock. See [Setting a screen lock](#) for details.

- 3 Enter VPN details and tap **Save**.

Configuring VPN settings

- 1 Tap a VPN from the **VPNS** list.
- 2 Enter the VPN user account details and tap **Connect**.
 - To save the account details, select the **Save account information** checkbox.

Private DNS

You can configure the Private DNS (Domain Name System) options.

- 1 On the settings screen, tap **Network & internet** > **Private DNS**.
- 2 Select the desired option and tap **Save**.

Connected devices

Bluetooth

You can connect your device to nearby devices that support Bluetooth to exchange data with them. Connect your device to a Bluetooth headset and a keyboard. This makes it easier to control the device.

Pairing with another device

- 1 On the settings screen, tap **Connected devices** > **Bluetooth**.
- 2 Tap  to activate it.
 - Available devices appear automatically.
 - To refresh the device list, tap .



- Only devices set as visible are displayed on the list.

- 3 Select a device from the list.
- 4 Follow the on-screen instructions to perform authentication.



- This step is skipped for previously accessed devices.

Sending data via Bluetooth

- 1 Select a file.
 - You can send multimedia files or contacts.
- 2 Tap  > **Bluetooth**.
- 3 Select a target device for the file.
 - The file is sent as soon as the target device accepts it.



- File sharing processes may differ, depending on the file.

Sharing panel

You can share contents from Gallery, Music and File Manager with nearby devices. Also you can share the content with specific people in apps that work with Google Direct Share.

- 1 On the settings screen, tap **Connected devices** > **Sharing panel**.
- 2 Tap  to deactivate each option.
 - **Nearby devices:** You can display the nearby devices to which you can share contents on the Gallery and Music apps.
 - **Direct share:** From an app which supports Google Direct Share, you can display an icon which allows you to share contents to specific people.

File sharing

You can send and receive files between your device and other LG devices or tablets.

- 1 On the settings screen, tap **Connected devices** > **File sharing**.
- 2 Customise the following settings:
 - **K41S**: Change the device name.
 - **Save to**: Set the destination folder to save files sent from other devices in.
 - **File sharing**: Permit receipt of files sent from other devices.
 - **SmartShare Beam**: Share files with other devices via SmartShare Beam.
 - **Help**: You can view help on sharing files.

Printing

You can connect your device to a Bluetooth printer and print photos or documents saved on the device.

On the settings screen, tap **Connected devices** > **Printing**.

- Tap **Default print service** to search for printers you can connect to. Or, tap **:** > **Add printer** to manually add a printer.
- Tap **⊕ Add service** to download the printer app you want.



- This is available only when the mobile network or the Bluetooth function is turned on.
- To down the printer app in **⊕ Add service**, first log on to your Google account.

Sound

You can customise sound, vibrate and notification settings.

On the settings screen, tap **Sound** and customise the following settings:

- **Sound profile:** Change the sound mode to **Sound, Vibrate only**, or **Silent**.
- **Volume:** Adjust the sound volume for various items.
- **Ringtone:** Select a ringtone for incoming calls. Add or delete ringtones.
- **Notification sound:** Select a notification ringtone. Set music saved on the device as a notification ringtone.
- **Ring with vibration:** Set the device to vibrate and play a ringtone simultaneously.
- **Ringtone ID:** Create a ringtone for an incoming call from a particular contact.
- **Flash alert for incoming call:** Set the flash to blink according to LG ringtone.
- **Do not disturb:** Set the time, range and app type to receive notification messages. Receive notification messages only on particular days of the week.
- **Sound quality and effects:** Use the function to set the sound quality and effects while playing a song or video.
- **Vibration type:** You can select the type of vibration when receiving calls.
- **Dialing keypad sound:** Enable the keypad sound effect.
- **LG Keyboard sound:** Enable LG keyboard sound effect.
- **Touch sound:** Enable a sound effect for tapping an item.
- **Screen lock sound:** Enable a sound effect when the screen is locked or unlocked.

Notifications

You can check a list of installed apps, and configure the settings for notifications.

- 1 On the settings screen, tap **Notifications**.
- 2 Customise the settings as desired.

Display

You can customise detailed settings for each screen type.

On the settings screen, tap **Display** and customise the following settings:

- **Home screen:** Customise settings for the Home screen. See *Home screen settings* for details.
- **New Second Screen:** Select how the status bar and app corners will look.
- **Navigation bar:** Set the style of the navigation bar with Gestures or Buttons only. you can also change the button combination when you set Buttons only as a style of the navigation bar. For details, see *Navigation bar*.
- **Comfort view:** Set the device to reduce amount of blue light on screen to reduce eye strain.
- **Night mode:** You can apply a dimmed screen theme to avoid glare on the screen at night time.
- **Accent colour:** Change the point colour for settings, menus, notification windows, etc.
- **Font:** Change the font size, bold text or type.
- **Display size:** Set the items on the screen to a size easy for you to see. Some items may change position.
- **App scaling:** Adjust the screen size of apps.
- **Brightness:** Use the slide bar to change the device's screen brightness.
- **Auto:** Set the device so that the screen brightness is automatically adjusted in accordance with the ambient light intensity.

- **Screen timeout:** Automatically turn off the screen when the device is left idle for a specified period of time.
- **Auto-rotate screen:** Automatically rotate the screen according to the device's orientation.
- **Screen saver:** Display a screen saver when the device is connected to the holder or charger. Select a screen saver type to display.
- **One-handed screen:** Make the screen size smaller to conveniently use the device with one hand. Drag the Home touch button at the bottom of the screen to the left or right.

Wallpaper & theme

You can select wallpaper, screen theme or icon style for your device.

- 1 On the settings screen, tap **Wallpaper & theme**.
- 2 Tap **Wallpaper**, **Theme** or **Icon** to customise the settings.

Lock screen & security

You can customise lock screen and security settings.

- 1 On the settings screen, tap **Lock screen & security**.
- 2 Customise the settings.
 - **Google Play Protect:** Scans your device daily for potentially harmful apps.
 - **Find My Device:** Remotely track the device location. You can also protect your data securely if you lost your device.
 - **Security update:** Check for software update and configure automatic installation settings.
 - **Select screen lock:** Select the desired screen lock method. See *Setting a screen lock* for details.
 - **Customise Lock screen:** Change the information displayed on the locked screen.
 - **Secure lock settings:** Change the secure lock settings.

- **Fingerprints:** Use your fingerprint to unlock the screen or content. See *Fingerprint recognition overview* for details.
- **Content lock:** Allow you to set a lock type (password or pattern) for your QuickMemo+ memos.
- **Encryption & credentials:** Configure the settings for SD card encryption and credentials.
 - **Encrypt SD card:** Encrypt the memory card to prevent use on another device. See *Memory card encryption* for details.
 - **Secure start-up:** Protect your device with a lock when it powers on. See *Secure start-up settings* for details.
 - **Credential protection:** View the type of the storage where the security certificate will be saved.
 - **Trusted credentials:** View your system's root CA certificates and user-installed CA certificates.
 - **User credentials:** View and change secure certificate information stored on your device.
 - **Install from storage:** Install a secure certificate from a storage.
 - **Clear credentials:** Delete user-installed secure certificates and related credentials.
- **Set up SIM card lock:** Lock or unlock the USIM card, or change the password (PIN).
- **Phone administrators:** Allow privileges to restrict the control or use of the device to particular apps.
- **Trust agents:** View and use trust agents installed on the device.
- **Screen pin:** Fix the app screen so that only the currently active app can be used.
- **Usage access:** View details on usage of apps on the device.

Privacy

You can find and adjust all your privacy settings.

- 1 On the settings screen, tap **Privacy**.
- 2 Customise the settings.
 - **Permission manager**: Allows you to check and change the permissions granted to the apps.
 - **Lock screen**: Allows you to set notifications to show on the lock screen.
 - **Make passwords visible**: Enable this option to briefly show each character of the password as you type it so you can see what you've entered.
 - **Autofill service from Google**: Enable this option to enter your information saved in your account such as password, address, or credit card number with a single tap. You can also disable this option, use the Google Autocomplete feature, or add a new service account.
 - **Google location history**: Allows you to enable or disable Location History. When enabled, Google periodically stores and uses your phone's most recent location data in connection with your Google Account.
From the Location History screen, tap  to view and/or manage your location data.
 - **Activity controls**: Select activities and information which you want Google to save.
 - **Ads**: Allows you to check the advertising ID and set the personalised ads.
 - **Usage & diagnostics**: Enable this option to help improve the Android experience by automatically sending diagnostic, device, and app usage data to Google.

Location

You can check how your location information is shared and configure the permission to access your location information.

On the settings screen, tap **Location** and set the desired function.

Extensions

Smart Doctor

You can use Smart Doctor to diagnose the device's condition and optimise it.

On the settings screen, tap **Extensions > Smart Doctor**.

Gaming

You can configure settings for game tools, graphics and battery saving feature.

- 1 On the settings screen, tap **Extensions > Gaming**.
- 2 Customise the following settings:
 - **Game Launcher:** Tap  to use the game launcher.
 - **Game tools:** You can run the function while playing games by touching the game tools icon among the home touch buttons.
 - **Game graphics:** Adjust the game graphics.



- When you change the resolutions on some games, the screen display feature may not work properly.
 - This function may not be available in certain game apps.
-
- **Break time:** Reduce the screen brightness and performance whenever you leave the game running for more than 5 minutes.

Dual App

You can install duplicate messenger apps on the product and use two accounts at the same time.

- 1 On the settings screen, tap **Extensions > Dual App**.
- 2 After reading the disclaimer, tap **Confirm**.
- 3 In the list of available apps, tap **Install** to install a copy of a desired app and follow the on-screen instructions.
 - On the screen, the list of available dual apps is shown. During installation, app icons are generated on the home screen.

Shortcuts

You can use buttons such as the Lock/Power, Volume, and Google Assistant to run certain apps or functions right away.

- 1 On the settings screen, tap **Extensions > Shortcuts**.
- 2 Customise the following settings.
 - **View notification panel:** Swipe down/up on the fingerprint sensor for the notification panel.
 - **Open Camera:** Press Power key twice to open Camera.
 - **Open Screen-off memo:** Press Volume Up key twice to open Screen-off memo when the screen is locked or off.
 - **Open Camera:** Press Volume Down key twice to open **Camera** when the screen is locked or off.
 - **Open Google Assistant:** Press the Google Assistant key on the side of the phone.
 - **Talk to Google Assistant:** Press and hold the Google Assistant key to quickly talk to your Assistant.



• Google Assistant does not support certain languages.

KnockON

Double-tap the screen to turn the screen on or off.

See *KnockON* for details.

Apps

You can check a list of installed apps, and configure the settings for notifications, app permissions, and more.

- 1 On the settings screen, tap **Apps**.
- 2 Customise the settings.

Battery

You can view the current battery information or turn on power-saving mode.

- 1 On the settings screen, tap **Battery**.
- 2 Customise the following settings:
 - **Battery usage**: View the battery usage details.
 - **Battery percentage on status bar**: Display the remaining battery level as a percentage on the status bar.
 - **Adaptive battery**: Allow you to save the battery by stopping apps running in the background.
 - **Background restrictions**: Enable this option to restrict background apps to save the battery while using the device. Restricted apps for power saving may not work properly or may not send you notifications.
 - **Battery saver**: Reduce battery consumption by cutting down some device settings, such as the display brightness, speed and vibration intensity.
 - **Power saving exclusions**: Select apps to use without any functional limitation while in power saving or battery optimisation mode.

Storage

You can view and manage internal storage on the device or storage space of the memory card.

- 1 On the settings screen, tap **Storage**.
- 2 Customise the following settings:
 - **Internal storage**: View the total storage space and free space in the device's internal storage. View a list of apps in use and the storage capacity for each app.
 - **SD card**: View the total storage space and free space in the memory card. This option appears only when a memory card is inserted. To unmount the memory card, tap .

Accounts

You can add users to share your device.

- 1 On the settings screen, tap **Accounts**.
- 2 Customise the settings.

Digital Wellbeing & parental controls

You can view the product use time and set the timer for each app. Also, you can manage the mobile phone use time by using the Sleep Preparation Mode and Focus Mode.

Select **Digital Wellbeing & parental controls** on the settings screen and set the desired function.

Google

You can use Google settings to manage your Google apps and account settings.

On the settings screen, tap **Google**.

System

Update centre

You can check and install the latest version of the app or software provided by LG.

- 1 On the settings screen, tap **System > Update centre**.
- 2 Customise the following settings:
 - **App Updates:** Check if an app update is available. If available, you can install the update.
 - **Software Update:** Check if a software update is available. If available, you can install the update.

Language & keyboard

You can customise language and keyboard settings for your device.

- 1 On the settings screen, tap **System > Language & keyboard**.
- 2 Customise the following settings:
 - **Language:** Select a language to apply for the device.
 - **Manage keyboards:** You can change the product's basic keyboard setting, set the use environments for LG Keyboard or other installed keyboards, and set the speech recognition function for Google Voice input. Also, you can set whether to display the keyboard button in the touch button area on the home screen so that you can quickly switch to another keyboard.
 - **Physical keyboard:** Select to use the physical keyboard, or check keyboard shortcut keys.
 - **Autofill service:** Enable this option to enter your information saved in your account such as password, address, or credit card number with a single tap. You can also disable this option, use Google Autocomplete, or add a new service account.

- **Text-to-speech output:** Configure the settings for text-to-speech output.
- **Pointer speed:** Adjust the pointer speed of a mouse or trackpad.
- **Reverse mouse buttons:** Reverse the right mouse button to perform primary direct-manipulation actions.

Date & time

You can customise date and time settings for your device.

- 1 On the settings screen, tap **System > Date & time**.
- 2 Customise the settings.

Memory

You can view the average amount of memory usage over a certain period of time and the memory occupied by an app.

- 1 On the settings screen, tap **System > Memory**.
- 2 Tap ▼ to set a time slot to retrieve data.

Backup

You can back up data saved on your device to another device or account.

- 1 On the settings screen, tap **System > Backup**.
- 2 Customise the following settings:
 - **LG Mobile Switch:** Allow you to transfer data from an old LG device to your new LG device. See *LG Mobile Switch* for details.
 - **Backup & restore:** Back up your device data or restore data to your device from a backup.



- Resetting your device may delete backup files saved in storage. Make sure to copy and store the important backup files to your PC.

- **Google backup:** Change Google drive backup settings. You can also check the backup account currently used, or add a new backup account.

Restart & reset

You can reset the device including network and app settings.

1 On the settings screen, tap **System > Restart & reset**.

2 Customise the following settings:

- **Auto-restart:** Automatically restart and optimise the phone at a set time. Tap  to activate this feature. The device automatically restarts at a set time and optimise itself. Select a date and time for restart.



- You can set the device to restart itself once a week. The device automatically restarts in an hour from the preset time.
 - Once the device restarts, notifications and badges are erased. Save important data before the preset time.
 - The Auto-restart feature is not activated in the following situations:
When the screen is turned on, when the device is in use, when the battery level is 30% or less, when the USIM card is locked, or when the device lock is activated while turning on the device.
 - Depending on the telecommunication provider, the auto-restart function may or may not be available.
-
- **Network settings reset:** Reset Wi-Fi, Bluetooth and other network settings.
 - **Reset app preferences:** Reset the settings for an app. The data saved in the app will not be deleted.
 - **Factory data reset:** Reset all settings for the device and delete data.



- Restarting and resetting your device deletes all data on it. Enter your device name, Google Account and other initial information again.
- After data initialisation, the data cannot be restored.

About phone

You can view information about your device, such as the name, status, software details and legal information.

On the settings screen, tap **System > About phone** and view information.

Regulatory & safety

You can view regulatory marks and related information on your device.

On the settings screen, tap **System > Regulatory & safety**.

Accessibility

You can manage accessibility plug-ins installed on your device.

- 1 On the settings screen, tap **Accessibility**.
- 2 Customise the following settings:
 - **Vision > TalkBack**: Set the device to notify screen status or actions via voice.
 - **Vision > Voice notifications**: Set the device to read the caller information via voice.
 - **Vision > Font**: Change the font size, bold text or type.
 - **Vision > Display size**: Set the items on the screen to a size easy for you to see. Some items may change position.
 - **Vision > Touch zoom**: Zoom in or out by tapping the screen three times.
 - **Vision > Window zoom**: Zoom in or out within a window and invert the colour.
 - **Vision > Large mouse pointer**: Magnify the mouse pointer.
 - **Vision > High contrast screen**: Turn the background colour into black for a high contrast screen.
 - **Vision > Screen colour inversion**: Increase the display colour contrast for people with low vision.
 - **Vision > Screen colour adjustment**: Adjust the display colour.

- **Vision > Monochrome:** Switch the screen to grayscale mode.
- **Vision > End call with the Power key:** End a call by pressing the Power/Lock key.
- **Hearing > Caption preferences:** Turn on the subtitle service when playing videos for the hearing impaired.
- **Hearing > Flash alerts:** Set the device to notify you with a blinking light for incoming calls, messages and alarms.
- **Hearing > Mute all sounds:** Mute all sounds and lower volume on the receiver.
- **Hearing > Audio channel:** Select the audio type.
- **Hearing > Sound balance:** Adjust the audio output balance. Use the slide bar to change the balance.
- **Motor & cognition > Touch assistant:** Turn on the touch board to make buttons and gestures easier to use.
- **Motor & cognition > Touch input:** Enter text by touching and holding the screen or modify it by simply touching the screen.
- **Motor & cognition > Physical keyboard:** Customise the keyboard settings.
- **Motor & cognition > Auto mouse click:** Automatically click the mouse pointer in case of no movement.
- **Motor & cognition > Touch and hold for calls:** Answer or decline calls by touching and holding the call button instead of dragging it.
- **Motor & cognition > Screen timeout:** Turn off the screen automatically when the device is left idle for a specified period of time.
- **Motor & cognition > Touch control areas:** Limit the touch area so that only a particular portion of the screen can be controlled by touch input.
- **Accessibility features shortcut:** Quickly access a frequently used function by pressing the Power key and the Volume Up key simultaneously.

- **Auto-rotate screen:** Automatically change the screen orientation according to the physical position of the device.
- **Select to Speak:** Allow you to tap items to hear spoken feedback.
- **Switch Access:** Create key combinations to control your device.



05

Appendix

Language Settings

Select a language to use on your device.

- Tap  > **Settings** > **System** > **Language & keyboard** > **Language** > **Add language**, and select a language.
 - Touch and hold  and drag it to the top of the language list to set it as a default language.

LG Bridge

LG Bridge overview

LG Bridge is an app that helps you manage the photos, music, videos and documents saved on your LG smartphone from your computer conveniently. You can back up contacts, photos and more to the computer or update the device software.



- See LG Bridge help for details.
- The supported features may vary depending on the device.
- LG USB driver is a necessary program to connect your LG smartphone with the computer and is installed when you install LG Bridge.

LG Bridge functions

- Manage the files on the device from a computer via Wi-Fi connection or mobile data connection.
- Back up data from the device to a computer or restore data from a computer to the device via USB cable connection.
- Update the device software from a computer via USB cable connection.

Installing LG Bridge on a computer

- 1 Go to www.lg-mobile.co.il from your computer.
- 2 Select your region.
- 3 Click **Support > Software & Firmware**.
- 4 Enter the name of your device.
OR
Select by the Product Category.
- 5 Go to **PC Sync > LG Bridge** to download the setup file.
 - Go to **Details** to view the minimum requirements for installing LG Bridge.

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp>, select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable during the upgrade may seriously damage your mobile phone.



- LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting a USB cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

To perform the phone software update,

Settings > System > Update centre > Software Update > Check now for update.



- Your personal data from internal phone storage—including information about your Google Account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.
- This feature depends on the area or service provider.

Anti-Theft Guide

Set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google Account or screen lock information can use the device.

All you need to make sure your device is protected is:

- Set a screen lock: If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- Add your Google Account on your device: If your device is wiped but you have your Google Account on it, the device can't finish the setup process until your Google Account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google Account password if you need to do a factory reset. This ensures that you or someone you trust is doing the reset.



- Do not forget your Google Account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

Regulatory information (Regulation ID number, E-labeling, etc.)

For regulatory details, go to **Settings > System > Regulatory & safety**.

Trademarks

- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.



- Copyright ©2021 LG Electronics Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.
- Google, Google Maps, Gmail, YouTube, Google Duo, Google Play, Android, Chrome, Google Photos, Google Play Protect, Google Calendar, Google Docs, Google Drive, Google Sheets and other related marks and logos are trademarks of Google LLC.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.



DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LM-K410ZMW** product is in compliance with the essential requirements and other relevant provisions of Directive **2014/53/EU**.

A copy of the Declaration of Conformity can be found at
<http://www.lg.com/global/declaration>

More information

Tempered glass parts

Tempered glass parts of this device are not permanent and they may wear out over time.

- If you drop your device on a hard surface or subject it to severe impact, the tempered glass may be damaged.
If this happens, stop using your device immediately and contact an LG Customer Service Centre.
- You can purchase protective cases to protect your device from damage on the market.

Note that these protective cases are not covered under the warranty service provided by LG Electronics and safety is not guaranteed.

Aspect ratio

Some downloaded apps may not support specific aspect ratio.

In this case, select the most optimal screen ratio for the app or consult the app provider for more information.

Guide to data transfers

- For the data that can be exchange between LG devices or between the LG device and a third party device, see the following table.

Type	Item details	LG device → LG device	Third party Android device → LG device	iOS device → LG device
Personal data	Contacts, messages, dial logs, calendar, voice recordings	○	○	○
	Memos	○	X	○
	Alarms	○	X	X
Media data	Photos, videos, songs, documents	○	○	○
Screen settings	Home screen settings (folders and widgets)	○	X	X
	Lock screen settings (screen lock settings excluded)	○	X	X
Apps	Downloaded apps	○	○	-
	Personal data of the downloaded app	○	X	
Others	Public certificate	○	○	X
	Settings (Wi-Fi, Bluetooth, Calls, sound & notification, accessibility, battery)	○	X	X



- Some data may not be transmitted depending on the software version, app version, operating system, manufacturer or service provider's policy.

FAQ

This chapter lists some problems you might encounter when using your device. Some problems require you to call your service provider, but most are easy to fix yourself.

Device overheats

Device overheats while it is used.

In the following cases, the battery consumption increases and the device may overheat:

- When you turn on the device for the first time or back up the data
- When running multiple apps simultaneously
 - When multiple apps are running in the background
 - When downloading large files while making a video call or recording a video
- When using features that require high power
 - When watching video streaming on the internet, or recording a long video
 - When playing high-end games for long time
 - When using the device with maximum screen brightness for a long time
- When using lots of mobile data
 - When using Wi-Fi hotspot or tethering
 - When synchronising the data for multiple accounts simultaneously
- Other cases
 - When roaming overseas
 - When using the device in areas with weak signals or no reception
 - When charging the device with the charger/USB cable port that is damaged or contaminated with foreign substance



- Some of the above cases may not apply depending on the features and apps.

Device overheats while charging.

- The device and the charger may become hot while charging. If the battery temperature rises above a certain level, the device may stop charging.
 - Disconnect the charger from the device and close any running apps. Let the device cool down before charging the device or running an app again.
 - Stop charging if the charger/USB cable port at the lower part of the device overheats, and visit the nearest LG Customer Service Centre.

How to solve overheating of the device

- Close any running apps or features, and let the device cool down.
- Always update the software to the latest version.
- Turn off Wi-Fi, Bluetooth, or GPS features while not using them.
- Close apps you don't use.
- If you are using the device with maximum screen brightness, decrease the brightness.
- If the device overheats for a prolonged period, stop using it for a while. If the device continues to overheat, visit the LG Customer Service Centre.

Usage limitations when the device overheats

If the device overheats while using it or charging, some features, apps, or even the device may be turned off.

This is a normal operation for the devices that support this feature.

- If the device temperature rises above a certain level, a warning message appears.
 - If you play high-end games, record videos, or upload large files, the device may overheat for a prolonged period. In this case, a warning message may appear to notify automatic shutdown.
Turn off the device or close any running apps or features, and let the device cool down.

- The screen brightness and the operating speed may be limited to cool down the device. Any running apps or features may slow down or stop. The device may stop charging.

SIM card error

Make sure the SIM card is correctly inserted.

No network connection or dropped network

Signal is weak. Move to a window or an open area.

You are outside the carrier network area. Move and check the network.

Calls are not available

New network not authorised.

Make sure you have not set call barring for the incoming number.

Make sure you have not set call barring for the number you are dialing.

Device cannot be turned on

When the battery is completely discharged, your device will not turn on.

Fully charge the battery before turning on the device.

Charging error

Make sure device is charging at a normal temperature.

Check the charger and its connection to the device.

Use only in-box accessories which are authorised by LG.

The battery depletes faster than when first purchased

When you expose the device or the battery to very cold or hot temperatures, the battery life may be reduced.

Battery consumption will increase when you use certain features or apps, such as GPS, games or the Internet.

The battery is consumable and the battery life will get shorter over time.

Error messages appear when launching the camera

Charge the battery.

Free some memory by transferring files to a computer or deleting files from your device.

Restart the device.

If you are still having trouble with the camera app after trying these tips, contact a LG Electronics Service Centre.

The photo quality is poor

The quality of your photos may vary, depending on the surroundings and the photography techniques you use.

If you take photos and videos, standard angle quality is better than wide-angle.

If you take photos in dark areas, at night or indoors, image noise may occur or images may be out of focus.

If you have any problems, reset the options.

The touch screen responds slowly or incorrectly

If you attach a screen protector or optional accessories to the touch screen, the touch screen may not function properly.

If you are wearing gloves, if your hands are not clean while touching the touch screen or if you tap the screen with sharp objects or your fingertips, the touch screen may malfunction.

The touch screen may malfunction in humid conditions or when exposed to water.

Restart your device to clear any temporary software bugs.

If the touch screen is scratched or damaged, visit a LG Electronics Service Centre.

Hangs or freezes

Restart the device

- If your device freezes or hangs, you may need to close apps or turn the device off and then on again.

Perform a boot-up

- A soft reset may be used to reset the device if the screen freezes, or the buttons, touch screen or device are no longer responding.
- To perform a soft reset of your device, simply press and hold the Volume Down and Power keys until the device restarts.

Reset the device

- If the methods above do not solve your problem, perform a factory data reset.
- On the settings screen, tap **System > Restart & reset > Factory data reset**.
 - This method resets all settings for the device and deletes data. Before performing the factory data reset, remember to make back-up copies of all important data stored in the device.
 - If you registered a Google Account to the device, you must sign in to the same Google Account after resetting the device.

Bluetooth device is not located

Make sure the Bluetooth wireless feature is activated on your device.

Make sure the Bluetooth wireless feature is activated on the device you wish to connect to.

Make sure your device and the other Bluetooth device are within the maximum Bluetooth range (10 m).

If the tips above do not solve your problem, contact a LG Electronics Service Centre.

A connection is not established when you connect the device to a computer

Make sure the USB cable you are using is compatible with your device.

Make sure you have the proper driver installed and updated on your computer.

Downloaded application causes a lot of errors

Application has problems.

Remove and reinstall the application.

