

SIMPLE MANUAL

Wireless
Speaker

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
AJ7




www.lg.com
Copyright © 2018 LG Electronics Inc. All Rights Reserved.
1807_Rev01

ENGLISH




Top / Front panel

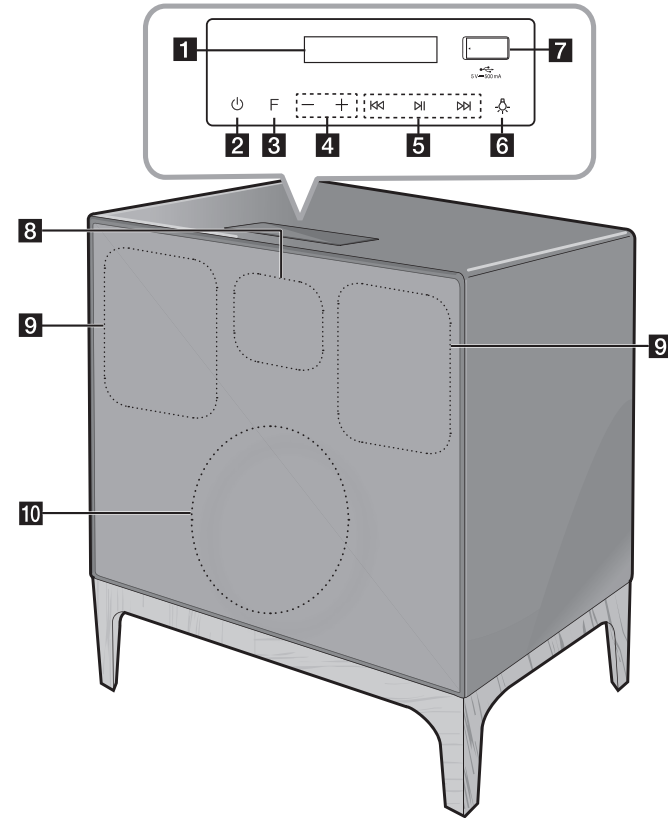

- 1** Display window
- 2** ⏻ (Standby)
Turns the power on or off.
- 3** F (Function)
Selects the function and input source.
- 4** —/+ (Volume)
Adjusts speaker volume.
- 5** ⏮/ ⏭ (Skip/Search)
 - Skips backward or forward.
 - Searches for a section within a file.
 - Selects the radio stations.
- 6** ⏸ (Play/Pause)
 - Starts or pauses playback. (USB)
 - To store programme of Radio, press. (FM)
 - To delete the saved stations, press and hold. (FM)
- 7** USB Port
You can play sound files by connecting the USB device.
- 8** Remote sensor
- 9** Speaker
- 10** Woofer

Rear panel

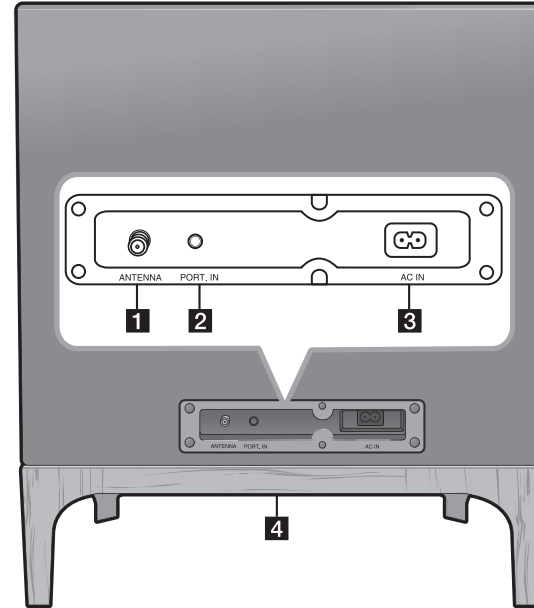

- 1** ANTENNA : Connect a FM antenna.
- 2** PORT (Portable).IN : Connect a portable device.
- 3** AC IN socket : Connect an AC power cord.
- 4** Mood light

Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 510.0 mm x 605.0 mm x 300.0 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	160 W RMS

Design and specifications are subject to change without notice.


Note

- Hard wood leg parts are made by cutting and attaching original wood, so there are various colors and patterns. And it is normal condition.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

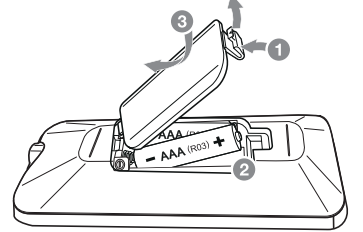

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type Wireless Speaker is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm

EENVOUDIGE HANDLEIDING

Draadloze
luidspreker

Lees deze handleiding zorgvuldig door voordat u uw set in gebruik neemt en bewaar het voor toekomstige naslag.

Bezoek <http://www.lg.com> en download de Gebruikershandleiding om de instructies van geavanceerde functies te bekijken. Bepaalde inhoud in deze handleiding kan afwijken van uw toestel.

MODEL
AJ7




www.lg.com
Copyright © 2018 LG Electronics Inc. Alle rechten voorbehouden.
1807_Rev01

NEDERLANDS




Boven-/Voorpaneel

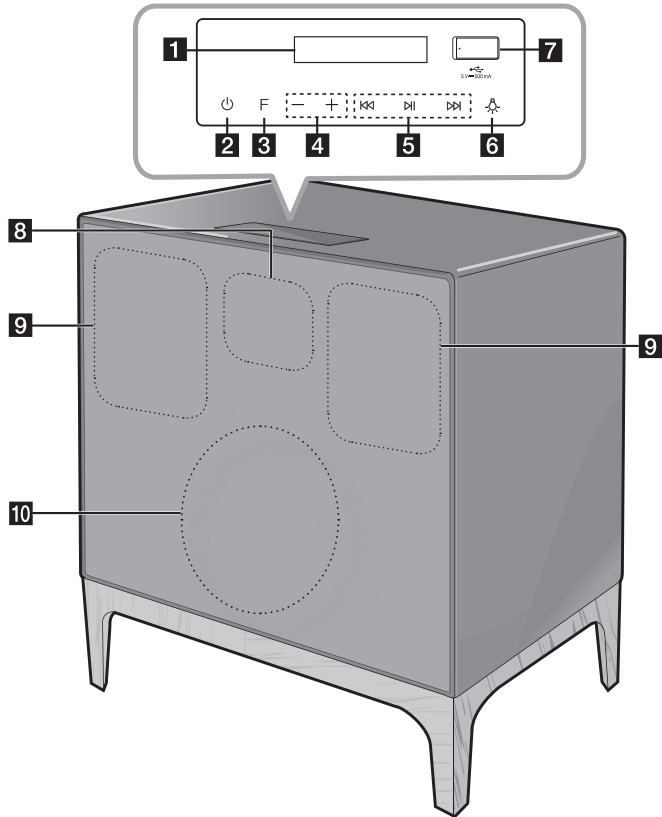

- 1** Display-scherm
- 2** (Stand-by)
Schakelt de stroom in of uit.
- 3** **F** (Functie)
Selecteert de functie en de invoerbron.
- 4** (Volume)
Stelt het volume van de luidspreker af.
- 5** (Spoel en/Zoeken)
 - Terug- of vooruitspoelen.
 - Zoekt naar een deel binnen een bestand.
 - Selecteert de radiostations.
- (Afspelen/Pauze)
 - Start of pauzeert het afspelen. (USB)
 - Om de programmering van de radio op te slaan, druk op. (FM)
 - Om de opgeslagen zenders te verwijderen, houdt ingedrukt. (FM)
- 6** (Sfeerlicht)
Stelt het sfeerlicht af.
- 7** USB-poort
U kunt geluidsbestanden afspelen door een USB-apparaat te verbinden.
- 8** Afstandsbedieningssensor
- 9** Luidspreker
- 10** Woofer

Achterpaneel

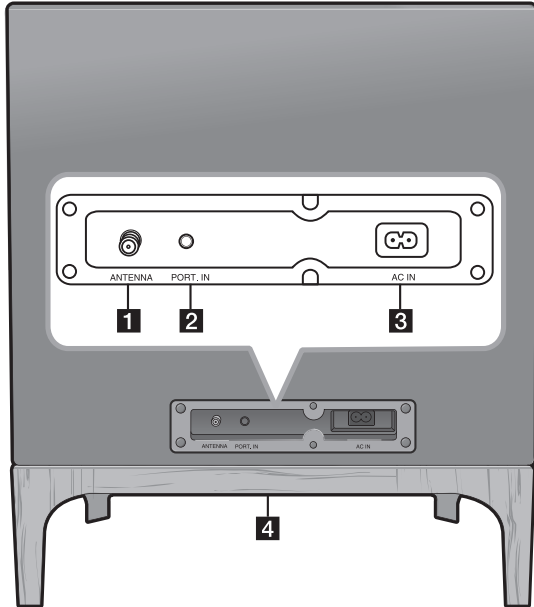

- 1** **ANTENNA** : Verbind een FM-antenne.
- 2** **PORT** (Draagbaar).**IN** : Verbind een draagbaar apparaat.
- 3** **AC IN**-aansluiting : Verbind een stroomsnoer.
- 4** Sfeerlicht

Afstandsbediening app



Download de app **Music Flow Bluetooth** naar uw apparaat. (Alleen Android)

Aanvullende informatie

Specificaties

Stroomvereisten	Raadpleeg de sticker op het toestel.
Stroomverbruik	Raadpleeg de sticker op het toestel.
Afmetingen (B x H x D)	Netwerk stand-by : 0,5 W (Als alle netwerkpoorten zijn geactiveerd.)
Bus-stroomtoevoer (USB)	Ongeveer 510,0 mm x 605,0 mm x 300,0 mm
Versterker (Totaal RMS uitgangsvermogen)	5 V 500 mA
	160 W RMS

Ontwerp en specificaties kunnen zonder voorafgaande kennisgeving worden gewijzigd.


Opmerking

- Hardhouten voeten worden vervaardigd door het snijden en bevestigen van echt hout, derhalve zijn er verschillende kleuren en derhalve zijn er verschillen in kleur en patroon mogelijk.

Hoe u de draadloze netwerkverbinding of het draadloze apparaat kunt ontkoppelen

Zet de unit uit door langer dan 5 seconden op de aan/uit-knop te drukken.

Vervanging van batterij

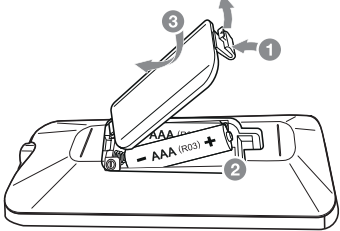

Conformiteitsverklaring



Hierbij verklaart LG Electronics dat de radioapparatuur type Draadloze Luidspreker in overeenstemming is met richtlijn 2014/53/EU. De volledige tekst van de EU Richtlijn is beschikbaar op het volgende internet adres:

<http://www.lg.com/global/support/cedoc/cedoc#>

Ter overweging van de gebruiker, moet dit apparaat worden geïnstalleerd en bediend met een minimale afstand van 20 cm tussen het apparaat en het lichaam.

Frequentiebereik	Uitgangsvermogen (Max.)
2402 tot 2480 MHz	10 dBm