



LG
Life's Good

SIMPLE MANUAL Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
SJ2



MFL70585626

www.lg.com


Copyright © 2018 LG Electronics Inc. All Rights Reserved.
1809_Rev01

ENGLISH



Front Panel

The buttons are located on the rear.



Rear Panel



USB (PORT IN) Connect to a USB device.
PORT. IN (Portable) Connect to a Portable device.
OPT. IN (Optical) Connect to an Optical device.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- 1 Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
- 2 Turn on the sound bar.
- 3 The sound bar and wireless subwoofer will be automatically connected. The subwoofer's green LED turns on.

Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.


- 1 Press **Pairing** button on the rear of the wireless subwoofer.
 - The green LED on the rear of the wireless subwoofer blinks quickly. (If the green LED does not blink, press and hold the **Pairing** button.)
- 2 Turn on the sound bar.
- 3 Pairing is completed.
 - The green LED on the rear of the wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.




TV Connection

- 1 Connect the sound bar to the TV using an Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

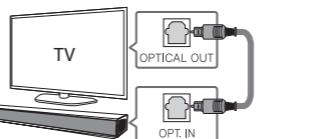


Additional Device Connection

- 1 Connect to the external device as follows.

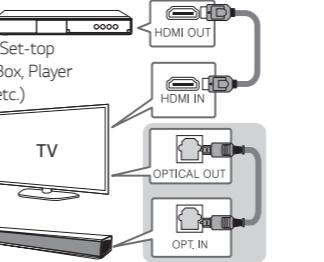

- 2 Set the input source by pressing **OPTICAL** on the remote control or pressing **F** repeatedly.

Remote control

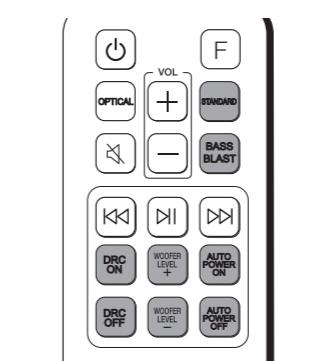

Additional Information

Specification

Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	Approx. 660.0 mm x 56.0 mm x 99.0 mm With foot
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS Output power)	160 W RMS

Design and specifications are subject to change without notice.



MFL70585626

www.lg.com

حقوق النشر والتأليف © لعام ٢٠١٨ LG Electronics Inc. جميع الحقوق محفوظة.
1809_Rev01

دليل بسيط المكبر الصوتي اللوحي اللاسلكي

يرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز الذي يحوزتك واحفظ به للرجوع إليه في المستقبل.
لعرض تعليمات الخصائص المتقدمة، تفضل بزيارة موقعنا الإلكتروني <http://www.lg.com>
وقم بتحميل دليل المالك.
قد تختلف بعض المحتويات الواردة في هذا الدليل عن مكونات وحدتك.


معلومات إضافية

المواصفات

ارجع إلى الملصق الرئيسي.	متطلبات الطاقة
ارجع إلى الملصق الرئيسي.	استهلاك الطاقة
تقريباً ٦٦٠,٠ مم × ٥٦,٠ مم × ٩٩,٠ مم	الأبعاد (عرض × الارتفاع × العمق)
٥ فولت ٥٠٠ مللي أمبير	مصدر طاقة النقل (USB)
RMS ١٦٠ وات	مضخم الصوت (جمالي طاقة مخرج) (RMS)

يخص التصميم والمواصفات للتغيير دون إخطار مسبق.

جهاز التحكم عن بعد

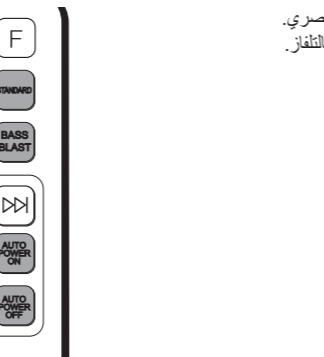

STANDARD/BASS BLAST: لتحديد المؤثر الصوتي.

DRC ON/OFF: يحسن التحكم بالمدى الديناميكي (DRC) (مستوى صوت محتوى ذونبي الرق المتفاوت).

+/- WOOFER LEVEL: يعدل مستوى الصوت لمكبر الصوت.

AUTO POWER ON/F OFF: يشغل تلقائياً بمصدر مدخل.

استبدال البطارية




توصيل التلفاز

- ١ قم بتوصيل المكبر الصوتي اللوحي بالتلفاز باستخدام كبل بصري.
- ٢ قم بإعداد [السماعة الخارجية (بصري)] في قائمة الضبط بالتلفاز.



وصلة جهاز إضافي

قم بالتوصيل بجهاز خارجي على النحو التالي.

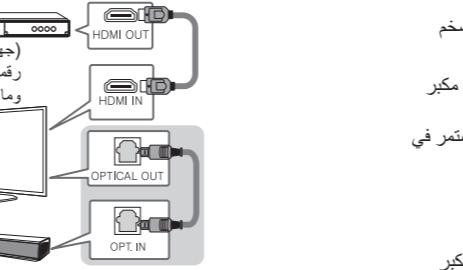

- ١ اضبط مصدر الإدخال من خلال الضغط على **OPTICAL** (جهاز استقبال رقمي، مشغل وما إلى ذلك) وما إلى ذلك.
- ٢ الضغط بشكل متكرر على **F**.

أبعد النظام الصوتي sound bar ومضخم الصوت عن الجهاز (مثل، الموجة اللاسلكي، فرن الميكرويف، وما إلى ذلك) مسافة تزيد عن ١ م لمنع التداخل اللاسلكي.



توصيل المكبر الصوتي الفرعى

- ١ ضع مضخم الصوت بالقرب من مكبر الصوت واتبع الخطوات الواردة أدناه.
- ٢ ومن ثم ملك الطاقة لمكبر الصوت ومضخم الصوت اللاسلكي بمأخذ التيار الكهربائي.

قم بتشغيل مكبر الصوت.

٣ سيم توصيل السماعة الوجهية ومضخم الصوت اللاسلكي

تلقيانياً، يعمل الضوء الأخضر لمكبر الصوت.

توصيل مكبر الصوت يدوياً

إذا لم يصدر مضخم صوت فحاول التوصيل يدوياً.

١ اضغط على زر **Pairing** في الجانب الخلفي لمضخم الصوت اللاسلكي.

٢ يومض المصباح الأخضر على الجانب الخلفي من مكبر الصوت بالاتصال اللاسلكي بسرعة.

إذا كان المصباح الأخضر لا يومض، اضغط واستمر في الضغط على زر **Pairing**.

٣ قم بتشغيل مكبر الصوت.

٤ اكتب الإفران.


٥ يعمل المصباح الأخضر على الجانب الخلفي من مكبر الصوت بالاتصال اللاسلكي.

٦ يُستخدم للتوصيل بجهاز USB (محول).

٧ يُستخدم للتوصيل بجهاز محمول (Portable).

٨ يُستخدم للتوصيل بجهاز بصري (Optical).

اللوحة الخلفية

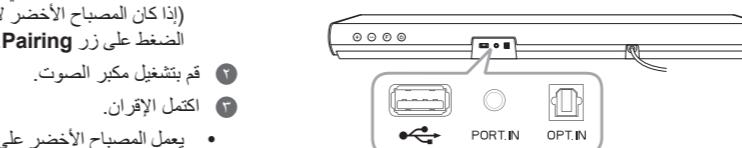

- يُستخدم للتوصيل بجهاز USB (محول).
- يُستخدم للتوصيل بجهاز محمول (Portable).
- يُستخدم للتوصيل بجهاز بصري (Optical).