





Front Panel




- MIC 1/2 Connect a microphone.
- PORT. IN Connect to a Portable device.
- USB Port Connect a USB device.
- △ Disc Tray Open / Close
- >|| Starts / Pauses playback.
- Stops playback.
- F Changes the input source or function.
- / + Adjusts volume.
- ⏻ / ⏻ Power On / Off

1 Speaker Connection

! Speaker design and connection method may be different according to models.

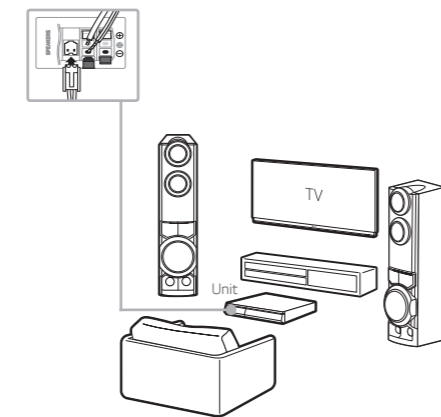

Rear Panel




- SPEAKERS Connect to speakers.
- HDMI OUT TO TV Connect to TV.
- AUX (L/R) INPUT Connect to analogue device.
- VIDEO OUT Connect to TV.
- OPTICAL IN Connect to digital device.
- ANTENNA FM Connect to radio antenna.

! Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

2 TV Connection

HDMI & Optical Connection

- 1 Connect the Unit to the TV using HDMI & Optical cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Set up [External Speaker (Optical)] on your TV setting menu.
- 4 Follow the instructions on the TV screen using remote control.

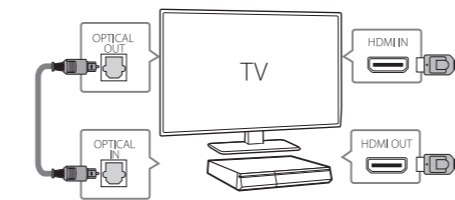

3 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the unit.



Additional Information

Specification

Power requirements	Refer to main label.
Power consumption	Refer to main label.
Dimensions (W x H x D)	Approx. 360 mm x 58 mm x 298.5 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	1,250 W RMS

Design and specifications are subject to change without notice.

POWER: This unit operates on a mains supply of 200 - 240 V ~ 50 / 60 Hz


Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Replacement of battery

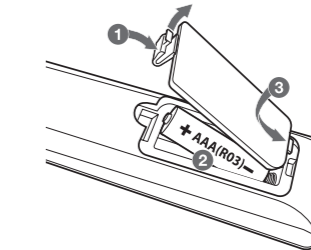

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

SIMPLE MANUAL

DVD Home Theater System

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
LHD687



www.lg.com
Copyright © 2022 LG Electronics Inc. All Rights Reserved.



دليل بسيط نظام DVD المسرح المنزلي

يُرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز الذي بحوزتك واحتفظ به للرجوع إليه في المستقبل.

لعرض تعليمات الخصائص المتقدمة، تفضل بزيارة موقعنا <http://www.lg.com> وقم بتحميل دليل المالك.

يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

الطراز

LHD687




MFL71688108
2201_Rev01

www.lg.com

حقوق النشر والتأليف © لعام ٢٠٢٢ لـ LG Electronics Inc. جميع الحقوق محفوظة.




اللوحة الأمامية




- MIC 1/2 PORT. IN
- اوصل ميكروفون
- اوصل بجهاز محمول
- يُستخدم للتوصيل بجهاز USB.
- منفذ USB
- فتح / غلق درج الأقراص
- بدء التشغيل / إيقاف المؤقت.
- إيقاف التشغيل.
- تغيير مصدر أو وظيفة الإدخال.
- F
- يضيظ مستوى الصوت.
- تشغيل/إيقاف تشغيل الطاقة
- +/ -
- ⏻ / ⏪

توصيل السماعة

يختلف تصميم السماعة وطريقة توصيلها حسب الطرز.

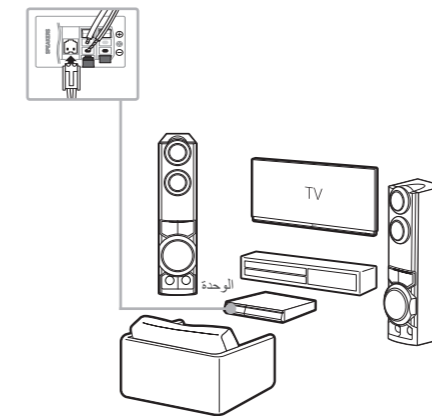

اللوحة الخلفية



- SPEAKERS
- الاتصال بالسماعات.
- HDMI OUT TO TV
- الاتصال بالتلفاز.
- AUX (L/R) INPUT
- الاتصال بجهاز تناظري.
- VIDEO OUT
- الاتصال بالتلفاز.
- OPTICAL IN
- الاتصال بجهاز رقمي.
- ANTENNA FM
- الاتصال بهوائي اللاسلكي.

إذا لم يوصل الكابل البصري بالاتجاه الصحيح، عندها قد يسبب التلف للمقيس البصري.

٢

توصيل التلفاز

HDMI والاتصال البصري

- 1 وصل الوحدة بجهاز التلفزيون باستخدام كابل HDMI والكابل البصري.
- 2 اضبط زر تحديد الإدخالات على HDMI في التلفاز.
- 3 قم بإعداد [External Speaker (Optical)] في قائمة الضبط بالتلفاز.
- 4 اتبع التعليمات التي تظهر على شاشة التلفاز باستخدام جهاز التحكم عن بُعد.



مزامن صوت LG
(لاسلكي)



للمزيد من المعلومات، قم بتنزيل دليل المالك عبر شبكة الإنترنت. <http://www.lg.com>

٣ القائمة الرئيسية

تظهر القائمة الرئيسية على شاشة التلفاز. استمتع بالخصائص المتنوعة للوحدة




معلومات إضافية

المواصفات

متطلبات الطاقة	ارجع إلى الملصق الرئيسي
استهلاك الطاقة	ارجع إلى الملصق الرئيسي
الأبعاد الخارجية (العرض x الارتفاع x العمق)	حوالي ٣٦٠ مم x ٥٨ مم x ٢٩٨.٥ مم
وحدة التغذية بالطاقة الناقلة (USB)	٥ فولت ٥٠٠ مللي أمبير
مضخم الصوت (إجمالي طاقة مخرج RMS)	١,٢٥٠ وات RMS

التصميمات والمواصفات عرضة للتغيير دون إشعار مسبق.

استبدال البطارية

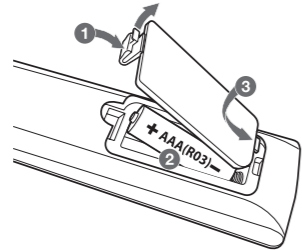

الطاقة: يتم تشغيل هذه الوحدة باستخدام مصدر تيار كهربى بجهد ٢٤٠-٢٠٠ فولت، ٥٠ / ٦٠ هرتز.

توصيلات الأسلاك: يتم تزويد هذه الوحدة بقبابن تيار BS 1363 معتمد. عند استبدال المصهر، استخدم دائمًا مصهرًا له نفس المعاييرة المقننة المعتمدة في قابن BS 1362. لا تستخدم هذا القابن مطلقًا بدون وجود غطاء المصاهر. للحصول على غطاء مصاهر بديل، يرجى الاتصال بالموزع الذي تتعامل معه. إذا كان نوع القابن المرفق غير مناسب لمقابن التيار الموجودة بمنزلك، يجب خلع القابن وتركيب نوع مناسب. يرجى الرجوع إلى التعليمات الخاصة بتوصيل الأسلاك الموضحة أدناه:

تحذير: يجب تدمير القابن الذي يتم خلعه من سلك التيار الكهربى الخاص بهذه الوحدة. قابن التيار الذي توجد به أسلاك عارية يمثل خطورة في حالة إدخاله في مقببب التيار الكهربى. لا تقم بتوصيل أي من الأسلاك بالطرف الأرضى، المميز بالحرف (E) أو رمز الأرض على أو الملون باللون الأخضر أو اللونين الأخضر والأصفر. في حالة تركيب أي قابن آخر، استخدم نفس المعاييرة المقننة في مصهر القابن.

ملاحظة هامة: الأسلاك الموجودة في كبل التيار الكهربى مميزة بالألوان وفقاً للرموز التالية:

- الأزرق: محايد، البنى: يسرى فيه التيار - في حالة عدم توافق ألوان أسلاك التيار الكهربى الخاص بهذه الوحدة مع الألوان التي تميز أطراف التوصيل في القابن، يرجى إتباع ما يلي: يجب توصيل السلك المميز باللون الأزرق مع الطرف المميز بالحرف (N) أو المميز باللون الأسود. يجب توصيل السلك المميز باللون البنى مع طرف التوصيل المميز بالحرف (L) أو المميز باللون الأحمر.