

사용설명서

태블릿

제품의 안전하고 편리한 사용을 위해 반드시 제품을 사용하기 전에 사용설명서를 읽어주세요.

10A30Q Series



자세한 사용 방법은 LG전자 홈페이지를
참조하세요. 스마트 기기로 QR코드를 인식하면
빠르게 찾을 수 있습니다.

사용하기 전에 1

 제품 사용 1

 사용설명서 1

안전을 위해 주의하기 2

기본 기능 4

 기본 구성물 4

 스타일러스 펜 사용하기 6

 전원 켜기/끄기 10

 메모리 카드 장착하기 11

 메모리 카드 분리하기 12

 메모리 카드 포맷하기 12

 배터리 사용하기 13

 터치 화면 사용하기 14

 홈 화면 사용하기 16

 알림창 18

 화면 방향 전환하기 20

 앱 및 폴더 이동 20

 잠금 화면 사용하기 21

 멀티 태스킹 기능 22

 화면 캡처 23

 문자 입력하기 23

 무선 화면 전송 24

 콘텐츠 공유하기 25

앱 26

 앱 설치/삭제하기 26

 앱 기능 바로가기 26

 카메라 기능 27

 Google 포토 29

 캘린더 31

 인터넷 31

 연락처 32

 시계/알람 33

 계산기 33

 음성 녹음 33

 태블릿 관리 34

 데이터 이전 방법 34

 Google 35

설정 37

 네트워크 및 인터넷 37

 연결된 기기 40

 앱 40

 알림 40

 배터리 40

 저장용량 40

 소리 41

 디스플레이 41

 배경화면 41

 편리한 기능 41

 접근성 42

 보안 42

 개인 정보 보호 42

 위치 42

 안전 및 긴급 상황 43

 비밀번호 및 계정 43

 디지털 웰빙 및 자녀 보호 기능 43

 Google 43

 시스템 43

 태블릿 정보 44

부록 45

 고객 안내 45

 자주 물어보는 질문 살펴보기 49

 제품 규격 및 특성 52

사용하기 전에

제품 사용

- 제품에서 제공하는 앱이나 서비스들은 해당 앱의 사정에 따라 예고 없이 변경되거나 중단될 수 있습니다.
- 제품에 저장된 데이터는 백업하여 저장 기기 또는 이동 매체에 따로 보관하세요.
- 다운로드한 일부 앱에서 외장 메모리 쓰기 동작이 정상적으로 동작하지 않을 수 있습니다.
이는 Google의 새로운 보안 정책으로 쓰기 동작이 가능한 앱을 이용하거나 해당 앱 제조사에 문의하세요.
- 기본 구성품으로 제공하는 정품 액세서리를 사용하세요. 미인증 제품이나 소프트웨어를 사용하면 제품 오동작 및 손상을 줄 수 있으며, 이 경우에는 무료 서비스를 받을 수 없습니다.
- 본 제품은 일체형 배터리를 사용합니다.
임의로 배터리 커버 및 배터리를 직접 분리하거나 교체하지 마세요.
- 제품의 충전 단자나 외부 노출 단자, 충전 케이블, 젠더 등을 수분이 있는 상태에서 사용하거나 충전하지 마세요. 제품이 오동작하거나 파손, 손상될 수 있으며, 감전, 화상, 화재, 과열, 폭발 등으로 인한 상해의 위험이 있습니다. 수분이 있는 경우, 사용 또는 충전을 즉시 중단하고 수분을 완전히 제거하세요.


사용설명서


- 사용설명서의 내용은 소프트웨어 버전, 앱 업데이트, 사용자의 이용 환경 및 사용 국가 및 지역, 제조사의 서비스 정책 등에 따라 일부 달라질 수 있습니다.
- LG전자 홈페이지(<http://www.lge.co.kr>)에서 이 제품 또는 원하는 제품군의 상세 사용설명서를 다운로드할 수 있습니다. PC, 태블릿, 모바일 등 네트워크를 지원하는 환경에서 LG전자 홈페이지에 접속하세요.

안전을 위해 주의하기

다음의 '안전을 위해 주의하기'는 예상하지 못한 위험이나 손해를 미리 방지하기 위한 것이니 반드시 확인해 주세요.

'안전을 위해 주의하기'는 '경고'와 '주의' 두 가지로 구분되어 있습니다.

 **경고:** 지시 사항을 위반하면 심각한 상해나 사망에 이를 수 있습니다.

 **주의:** 지시 사항을 위반하면 경미한 상해가 발생하거나 제품이 손상될 수 있습니다.

제품 취급 주의

 **경고**

- 신용카드, 전화카드, 통장, 승차권 등 자성을 이용한 물건 가까이에 두거나, 차량용 자석 거치대를 사용할 경우 제품 정보가 훼손되거나 정상 동작하지 않을 수 있습니다.
- 제품의 일부는 강화 유리로 제작되어 있습니다. 제품을 단단한 표면에 떨어뜨리거나 강한 충격을 주면 강화 유리가 손상될 수 있습니다. 이 경우에는 즉시 제품 사용을 중지하고 가까운 LG전자 서비스 센터에 방문하여 수리를 받으세요.
- 직사광선이 드는 자동차 유리창 부근, 이불, 전기장판, 난로, 카펫 위에 제품이나 배터리를 장시간 올려 두지 마세요. 외관이 변형되거나 고장 또는 폭발이 일어날 수 있습니다.
- 찜질방과 같은 고온 다습한 환경이나, 이불 속, 수영장, 화장실 등의 습한 장소에 제품을 두지 마세요. 고온이나 습한 환경에서 제품이 손상될 수 있습니다.
- 제품이 물에 젖었을 경우 건조하기 위해 온풍기, 드라이어 등으로 말리거나 전자레인지, 밥솥, 난로 등에 넣지 마세요. 제품이 폭발하거나 변형 또는 고장의 원인이 될 수 있습니다.

 **주의**

- LG전자에서 제공하는 정품 액세서리를 사용하세요. 정품이 아닌 제품을 사용하면 성능, 기기 오작동을 유발할 수 있습니다. 이 경우 LG전자에서 제공하는 서비스를 받지 못할 수 있습니다.
- LG전자 정품이 아닌 케이스를 사용할 경우 제품에서 제공하는 버튼이나 센서, 렌즈 등의 기능이 제한될 수 있습니다.

배터리 사용 주의

 **경고**

- 배터리를 직접 분리하거나 교체하지 마세요. 반드시 LG가 승인한 서비스 제공자를 통해 배터리를 교체해야 합니다.
- 배터리를 교체해야 하는 경우 가까운 공인 LG전자 서비스 센터로 가져가 도움을 받으세요.
- 배터리는 부상의 원인이 될 수 있는 위험한 부품입니다.

 **주의**

- 당사에서 승인한 정품 배터리와 충전 액세서리를 사용하세요.
- 배터리를 장시간 방치 후에 다시 사용하려면 완전히 충전한 후 사용하세요.
- 배터리 문제로 서비스 센터를 방문 시에는 제품, 충전기를 지참하세요.

어린이 및 애완동물 취급 주의

경고

- 제품, 부품 등을 어린이나 애완동물이 접근할 수 없는 곳에 보관하세요. 감전, 전자파 노출, 화재, 폭발 등의 위험이 있습니다.
- 어린이나 애완동물이 제품, 부품 등을 입안에 넣거나 삼키지 않도록 주의하세요. 질식, 화재, 폭발 등의 위험이 있습니다.
- 애완동물이 이빨로 제품을 물지 않도록 주의하세요. 배터리 연소 및 화재와 폭발의 원인이 될 수 있습니다.

제품 사용 주의

경고

- 운전, 보행이나 이동 중에는 제품 사용에 주의하세요. 교통 법규, 도로 안전 수칙 위반이나 인명 사고의 우려가 있습니다.
- 충전 중에는 젖은 상태로 제품을 만지거나 충전 기기에 닿지 않도록 하세요. 감전 및 화상 등의 위험이 있습니다.
- 제품을 욕실이나 수영장 등의 습기가 있는 환경에서 충전하면서 사용하지 마세요. 감전의 위험이 있습니다.
- 제품이나 배터리, 부품을 분해 및 훼손하거나, 파손된 상태에서 사용하지 마세요. 문제가 있는 경우 당사 고객센터에 문의하세요.
- 신체의 일부가 오랜 시간 제품, 배터리, 충전기에 닿지 않도록 주의하세요. 오랜 시간 피부에 접촉 시 저온 화상의 우려가 있습니다.
- 콘센트에 플러그 삽입 시 끝까지 삽입하세요. 완전히 삽입되지 않아 접촉이 불안정할 경우 발열 또는 발화의 원인이 발생할 수 있습니다.
- 충전 단자나 외부 접속 단자에 이물이 들어가지 않도록 해주세요. 외부 이물로 인해 발열 또는 발화의 원인이 될 수 있습니다.

주의

- 사용설명서에 표기되지 않은 방법으로 제품을 다른 장비에 연결하지 마세요.
- 제품 위에 무거운 물건을 올려놓거나 깔고 앉지 마세요. 제품이 손상될 수 있습니다.
- 제품을 바닥에 떨어뜨리거나, 주머니에 넣거나, 허리에 차거나, 강하게 누르거나 휘는 등, 심한 충격을 가하지 마세요. 상해나 파손의 위험이 있습니다.
- 제품의 액정이 깨진 경우 손을 베거나 상해를 입지 않도록 주의하고, 즉시 고객센터에 문의하세요. 실명이나 피부 상해를 일으키는 원인이 될 수 있습니다.
- 이어폰이나 헤드셋의 볼륨을 크게 한 상태로 장시간 사용하거나 제품을 귀에 직접 대고 사용하지 마세요. 청각 장애 및 사고의 원인이 될 수 있습니다.
- 제품의 충전 단자나 외부 노출 단자, 충전 케이블, 젠더 등이 액체류에 닿은 경우, LG전자 서비스 센터를 방문하여 안전을 확인한 후 사용하세요.
- 제품의 고장 수리 또는 업그레이드 시, 제품에 저장된 중요한 번호 및 데이터는 PC나 이동 매체에 미리 백업하거나 메모해 두세요. 제품에 저장된 주요 내용이나 설정이 지워질 우려가 있습니다. 데이터 유실로 인한 피해는 제조사가 책임지지 않으니 주의하세요.
- 장시간 고정된 화면으로 제품을 사용하면 화면 잔상 또는 얼룩이 발생할 수 있습니다. 오랜 시간 제품을 사용하지 않을 경우 화면을 꺼주세요.

메모리 카드 사용 주의 (별매품)

주의

- 메모리 카드를 삽입할 때는 방향을 확인하세요. 잘못된 방향으로 삽입할 경우 메모리 카드가 손상되거나 고장 날 수 있습니다.

기본 기능

기본 구성물

제품을 구입하면 제공되는 기본 구성물입니다.

제품 구성물은 모델에 따라 다를 수 있습니다.

- 태블릿 본체
- 간단 사용설명서
- 충전기
- 펜
- USB 케이블
- 스타일러스 펜
- 북커버



주의



- LG전자 정품이 아닌 케이스를 사용할 경우 제품에서 제공하는 버튼이나 센서, 렌즈 등의 기능이 제한될 수 있습니다.



알아두기

- 누락된 기본 구성품이 있을 경우 제품 구입처에 문의하세요.
- 기본 구성품을 추가로 구입하고 싶은 경우 LG전자 고객 상담실(T.1544-7777)로 문의하거나 LG전자 서비스 홈페이지 (<http://www.lge.co.kr>)의 소모품 샵에서 확인하세요.
- 기본 구성품으로 제공하지 않는 별도 판매품을 구입하고 싶은 경우 LG전자 고객 상담실(T.1544-7777)에 구입 가능한 판매처를 문의하세요.
- 지역 사정에 따라 일부 품목이 사전 통보 없이 변경될 수 있습니다. 제품의 외관과 규격은 성능 개선을 위해 예고 없이 변경될 수 있습니다.

제품 둘러보기

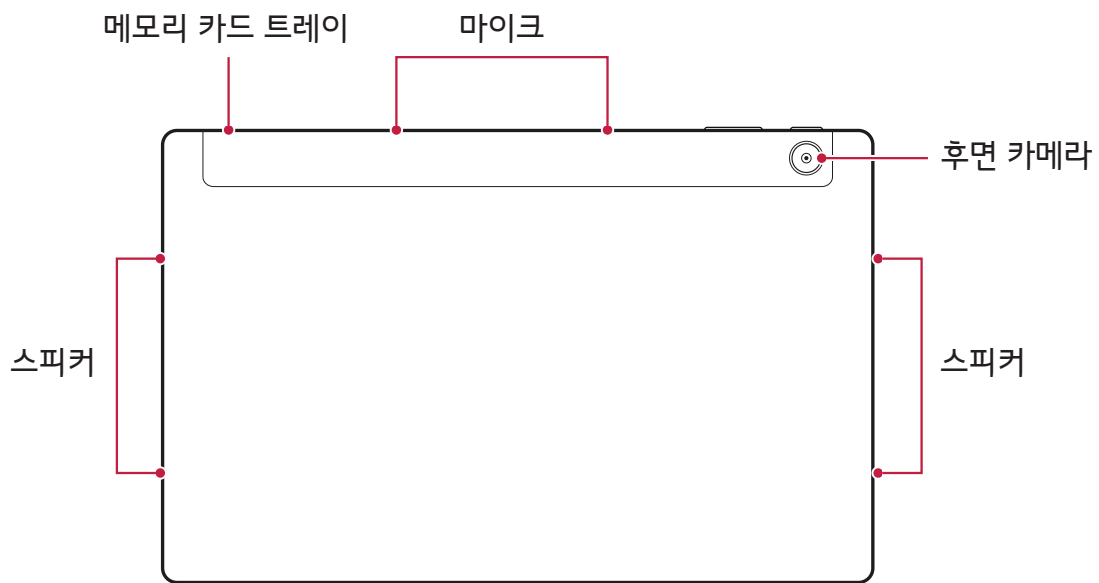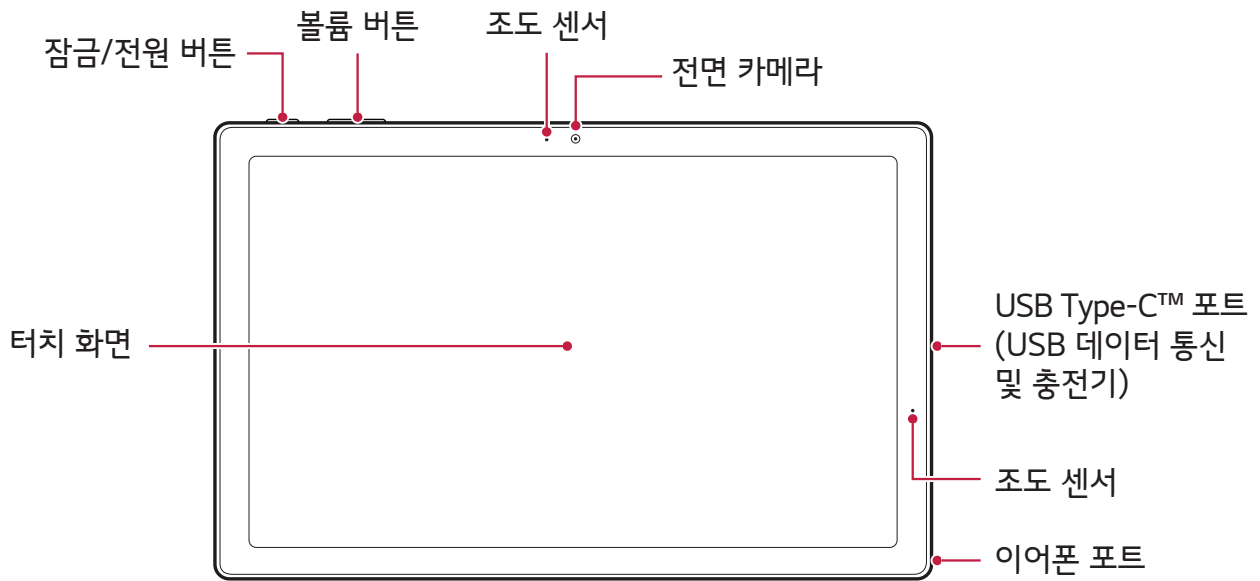

- 조도 센서
 - 자동 밝기 조절 사용 시 주변 빛의 양을 분석합니다.
- 볼륨 버튼
 - 알림음 등 상황에 따라 볼륨을 조절할 수 있습니다.
- 잠금/전원 버튼
 - 짧게 누르면, 화면을 켜거나 끌 수 있습니다.
 - 길게 누르면, 전원 메뉴가 실행됩니다.

✓ 알아두기

- 지역별 제품 사양에 따라 일부 기능이 제한될 수 있습니다.

스타일러스 펜 사용하기

10A30Q 모델 전용 스타일러스 펜을 사용하면 손가락으로 조정하기 어려운 세밀한 터치 조작을 할 수 있습니다.

각 부위 명칭



- 1 펜 팁
- 2 왼쪽 버튼
 - 선택 및 실행 시 사용합니다.
- 3 오른쪽 버튼
 - 선택 및 실행 시 사용합니다.
- 4 펜 캡

기본 사용 방법


스타일러스 펜의 버튼은 사용하는 프로그램에 따라 기능이 달라질 수 있습니다.

“펜 버튼 바로가기”로 앱 또는 기능을 선택하여 사용 가능합니다.


✓ 알아두기

- 스타일러스 펜에 과도한 힘을 주어 사용할 경우 펜 팁 또는 펜 고장의 원인이 됩니다.
- 스타일러스 펜을 10분 이상 사용하지 않거나 펜 팁이 눌려진 상태로 약 4분 이상 경과되면, 배터리 소모를 줄이기 위해 절전 모드로 전환됩니다.
- 절전 모드를 해제하려면, 스타일러스 펜 팁을 화면에 접촉하거나 왼쪽 또는 오른쪽 버튼을 누르세요.

- 1 한 번 터치: 스타일러스 펜으로 화면을 한 번 누르면, 선택 및 실행 기능을 합니다.

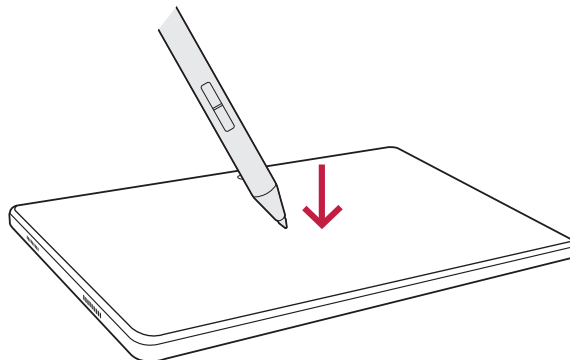


2 드래그: 스타일러스 펜으로 화면을 누른 상태로 움직이면, 마우스 드래그와 같은 동작으로 인식합니다.

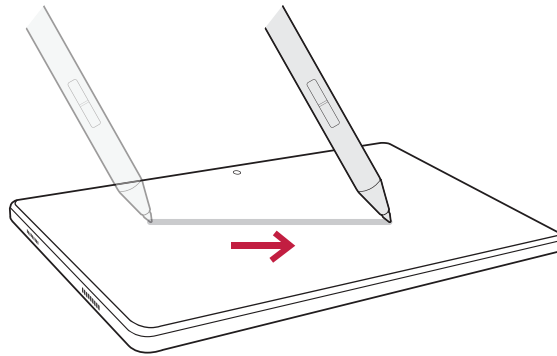

스타일러스 펜 보관하기

스타일러스 펜을 북커버의 펜꽂이에 장착한 후 이동/보관해 주세요.

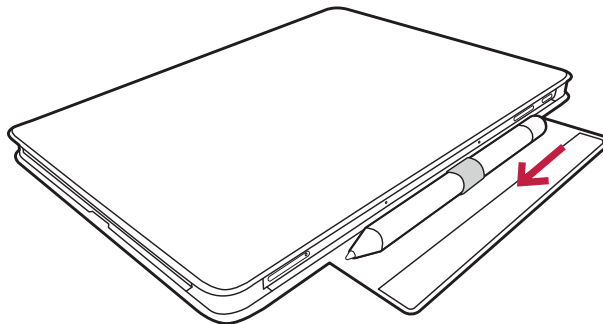

배터리 삽입 및 교체하기

제품 구매 시 AAAA 규격 1.5 V 배터리가 제공되며, 다음과 같은 방법으로 배터리를 장착하여 사용하세요.

⚠ 경고

- 배터리를 올바르게 넣지 않은 유형으로 교체하면 화재나 폭발의 위험이 있습니다.

⚠ 주의


- 정상 규격 이외의 배터리 또는 충전지를 사용할 경우 정상 동작을 보증하지 않습니다.
- 장기간 사용하지 않을 경우 배터리를 분리하여 보관하세요. 배터리 누액이 발생하여 제품 고장의 원인이 될 수 있습니다.
- 배터리 삽입 또는 펜 캡 분리/장착 시 무리한 힘을 가할 경우 제품이 손상될 수 있습니다.
- 펜 팁이 눌린 상태로 보관하거나 이동할 경우 배터리 소모의 원인이 됩니다.
- 제품에 무리한 충격을 가하거나 떨어뜨리면 고장의 원인이 됩니다.

✔ 알아두기


- 배터리가 부족할 경우 펜 동작이 끊기거나 펜이 인식되지 않을 수 있습니다.
- 장기간 배터리를 교체하지 않은 상태라면 배터리를 교체해서 사용하세요.
- AAAA 배터리는 온라인 쇼핑몰을 통해 구매할 수 있습니다.

8 기본 기능

1 펜을 수평으로 한 뒤, 펜 캡을 오른손으로 잡고 아래쪽 방향으로 돌려 분리하세요.

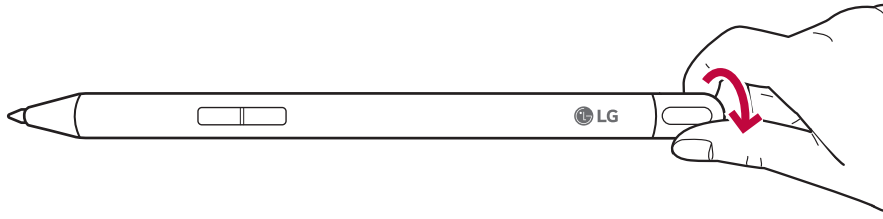

2 배터리를 + / - 방향에 맞게 삽입한 후 펜 캡을 위쪽 방향으로 돌려 닫으세요.

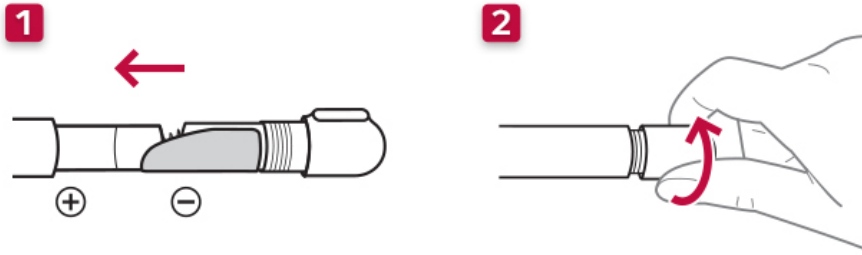

• 배터리 교체 시 기존 배터리를 제거한 후 위와 같은 방법으로 교체하세요.

⚠ 주의

- 펜 캡 분리/장착 시 나사선에 이물질이 들어가지 않도록 주의하세요.
- 펜과 펜 캡의 수평이 맞지 않은 상태로 장착할 경우 고장의 원인이 됩니다.
- 배터리 삽입 시 펜 캡에 부착된 라벨이 배터리 또는 스프링을 가리지 않도록 주의하세요.




펜 팁 교체하기

펜 팁의 촉이 마모되면, 다음과 같은 방법으로 펜 팁을 교체해서 사용하세요.

✓ 알아두기

- 펜 팁은 소모품으로 교체 필요시 별도로 구매하여 교체해야 합니다.
- 펜 팁의 구매 관련 사항은 LG전자 서비스 센터를 통해 문의하세요.


1 트위저를 사용하여 펜 팁을 잡고, 바깥쪽 방향으로 당겨 스타일러스 펜에서 분리하세요.

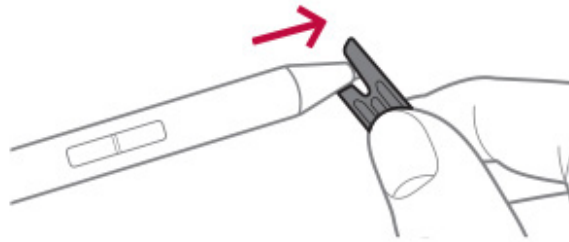

2 교체용 펜 팁을 스타일러스 펜에 결합하세요.

⚠ 주의

- 펜 팁 교체 시 무리한 힘으로 눌러 끼우거나 반대 방향으로 삽입하면 고장의 원인이 됩니다.

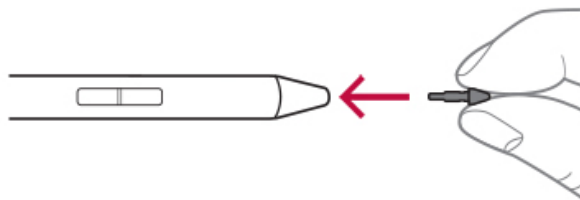

전원 켜기/끄기

전원 켜기

전원이 꺼진 상태에서 [잠금/전원] 버튼을 길게 누르세요.

✔️ 알아두기

- 개봉 후 처음 전원을 켜면 초기 설정으로 인해 부팅 시간이 다소 길 수 있습니다.

전원 끄기

[잠금/전원] 버튼을 길게 누른 후 [전원 끄기]를 선택하세요.

제품 다시 시작하기

제품이 정상 동작하지 않거나 아무런 반응이 없는 경우 제품이 다시 시작될 때까지 [볼륨 하단] 버튼과 [잠금/전원] 버튼을 동시에 누르세요.

전원 메뉴 알아두기


[잠금/전원] 버튼을 길게 누른 후 원하는 기능을 실행하세요.

- 전원 끄기: 제품의 전원이 꺼집니다.
- 다시 시작: 제품의 전원이 꺼졌다 자동으로 다시 켜집니다.


메모리 카드 장착하기

별매품으로 구입한 메모리 카드를 올바르게 삽입하세요.

- 1 메모리 카드 트레이의 홈을 핀으로 살짝 누른 후, 분리된 부분을 손으로 잡아당겨 제품에서 완전히 빼내세요.

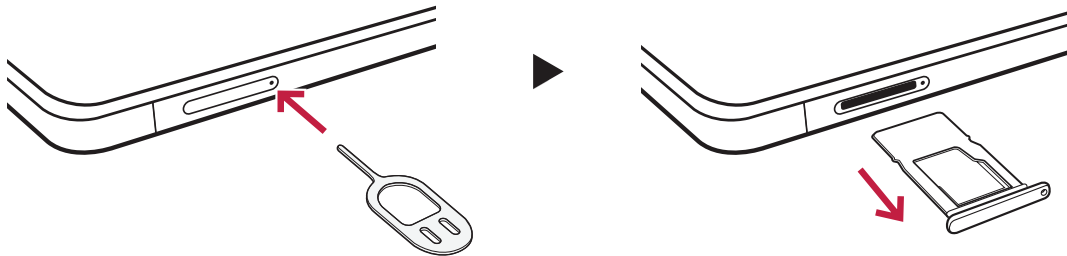

- 2 메모리 카드 트레이 위에 메모리 카드를 올리고 화살표 방향으로 제품에 끼우세요.

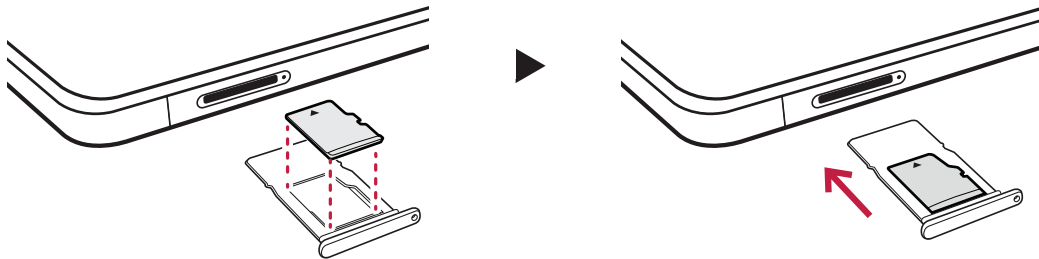

! 주의

- 메모리 카드 트레이의 홈 부분을 열 때 손톱이 끼이지 않도록 주의하세요. 손톱이 손상될 수 있습니다.
- 메모리 카드 트레이를 제품에 넣거나 뺄 때는 반드시 제품과 트레이의 수평을 맞추어 넣으세요. 이때 메모리 카드 트레이 위에 얹힌 카드가 흔들려서 트레이 위치에서 벗어나지 않도록 주의하세요.
- 메모리 카드 트레이를 끼우거나 분리할 때 물이나 액체, 이물질이 들어가지 않도록 주의하세요.
- 메모리 카드 트레이나 카드 등이 젖은 상태에서 제품에 삽입될 경우 제품이 손상될 수 있습니다.


✓ 알아두기

- 메모리 카드는 별매품입니다.
- 데이터를 저장했다가 지우기를 자주 반복하면 메모리 카드의 수명이 짧아질 수 있습니다.
- 일부 메모리 카드는 제품과 호환이 되지 않을 수 있으며, 메모리 카드 내의 데이터가 손상될 수도 있습니다.
- 메모리 카드 불량, 호환 가능 여부, 고장 및 수리 문의는 메모리 카드 제조사에 문의하세요.

메모리 카드 분리하기

메모리 카드의 데이터를 보호하기 위해 메모리 카드를 분리하기 전에 마운트를 해제하세요.

- 1 앱스 화면에서 [설정] > [저장용량]을 누르세요.
- 2 기기 선택 항목에서 메모리 카드를 선택한 후 [⋮] > [꺼내기]를 누르세요.

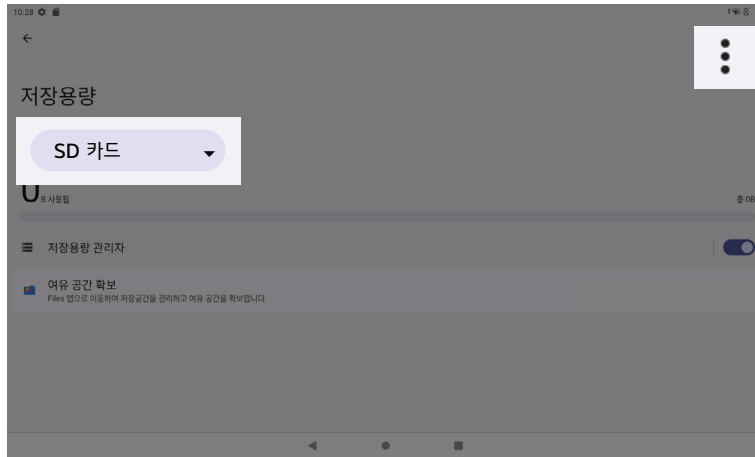

- 3 메모리 카드 트레이의 홈을 핀으로 살짝 누른 후, 분리된 부분을 손으로 잡아당겨 제품에서 완전히 빼내세요.
- 4 메모리 카드를 제거한 후 메모리 카드 트레이를 제품에 다시 끼우세요.

! 주의

- 파일 전송 중에 메모리 카드를 분리하지 마세요. 데이터가 손상 또는 유실되거나 메모리 카드 및 제품이 고장 날 수 있습니다. 메모리 카드를 잘못 사용하여 발생한 데이터 유실 등의 피해에 대해서는 LG전자가 책임지지 않습니다.

메모리 카드 포맷하기

메모리 카드는 반드시 태블릿에서 포맷하여 사용하여 주세요.

- 1 앱스 화면에서 [설정] > [저장용량]을 누르세요.
- 2 기기 선택 항목에서 메모리 카드를 선택한 후 [⋮] > [포맷]을 누르세요.

! 주의


- 메모리 카드를 포맷하기 전에 중요한 데이터는 반드시 백업하여 주시기 바랍니다.
- 메모리 카드 포맷으로 인한 데이터 유실은 LG전자에서 책임지지 않습니다.

배터리 사용하기

배터리 충전하기

제품을 사용하기 전에 배터리를 충분히 충전하여 사용하세요.

USB Type-C™ 케이블을 이용하여 제품을 충전하세요.

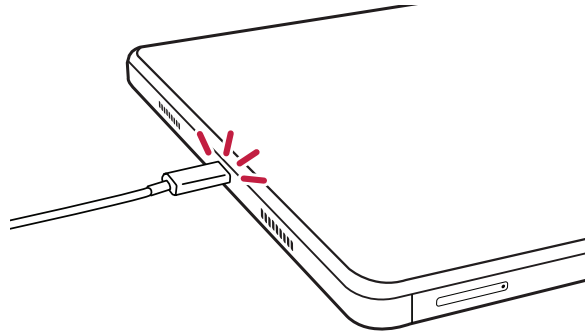

⚠ 주의

- 기본 구성품으로 제공되는 USB 케이블을 사용하세요.
- LG전자에서 승인한 충전기와 케이블을 사용하세요.
- 충전 중에 제품을 사용하면 감전의 우려가 있습니다. 제품을 사용할 때는 충전을 중단하세요.

✔ 알아두기

- 제품 충전이 완료되면 콘센트에서 충전기를 빼세요. 불필요한 전력 소비를 막을 수 있습니다.
- USB 케이블을 PC에 연결하여 충전할 수 있으나 충전 시간이 오래 걸릴 수 있습니다.
- 정격 전압이 유지되지 않는 USB 허브는 충전이 되지 않거나 중단될 수 있습니다.
- KC 인증을 획득한 표준형 충전기를 사용하세요.
- 충전 중에 충전기 또는 제품에 이상이 발생하면 즉시 충전을 중단하세요.
- 충전기에서 사용 가능한 전압은 100 V에서 240 V 입니다. 해외에서 사용할 경우 해당 지역에 맞는 AC 전원 플러그 어댑터를 연결하여 사용하세요.
- 배터리 문제로 서비스 센터를 방문할 때는 제품과 충전기를 지참해 주세요.
- 배터리는 소모품이므로 구입했을 때보다 제품의 사용 시간이 점차적으로 짧아질 수 있습니다.

배터리 효율적으로 사용하기

제품에서 실행 중인 프로그램 개수가 많거나, 다양한 부가 기능을 사용할 경우 배터리 사용 시간이 짧아질 수 있습니다.

백그라운드에서 실행 중인 기능 및 앱을 중지하면 배터리 사용 시간을 늘릴 수 있습니다.


배터리를 절약하려면 아래 방법을 참고하세요.

- 블루투스 또는 Wi-Fi 네트워크를 사용하지 않을 때에는 해당 기능을 꺼주세요.
- [화면 자동 잠금 시간]을 최대한 짧게 설정하세요.
- 화면 밝기를 최저로 낮추세요.
- 제품을 사용하지 않을 때에는 잠금 화면으로 전환하세요.
- 다운로드한 앱을 사용하는 경우 배터리 충전 레벨을 확인하세요.

터치 화면 사용하기


누르기

원하는 앱 또는 항목을 손가락 끝으로 가볍게 눌러 기능을 선택하거나 실행할 수 있습니다.

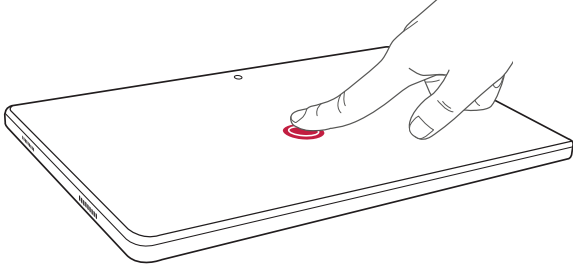


길게 누르기

화면을 몇 초간 길게 눌러 특정 화면에서 숨은 기능을 실행할 수 있습니다.

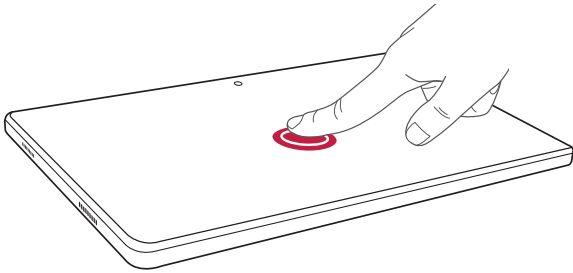


두 번 누르기

화면을 빠르게 두 번 두드리려 지도를 확대하거나 웹 페이지를 확대 또는 축소할 수 있습니다.

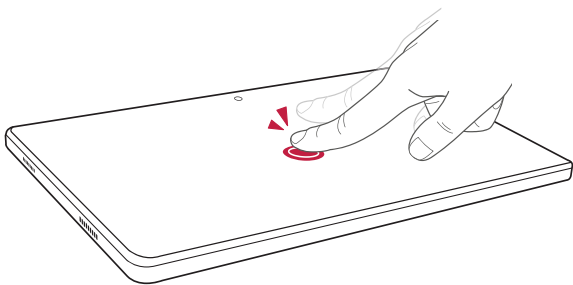


드래그하기

앱이나 위젯 등 이동할 항목을 길게 누른 채 원하는 위치로 드래그해 위치를 이동시킬 수 있습니다.

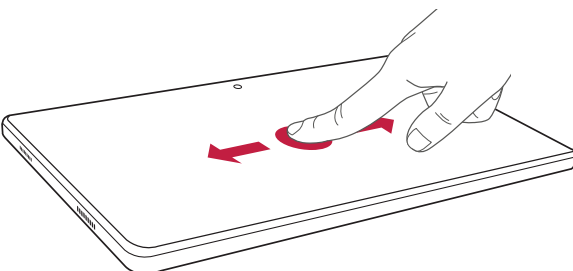


스크롤하기

손가락으로 화면을 누른 채 멈추지 말고 빠르게 움직여 목록, 웹 페이지, 사진, 화면 등을 스크롤할 수 있습니다.

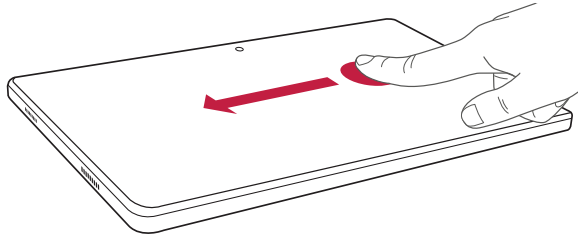

확대/축소하기

화면에 손가락 두 개를 누른 채 벌리거나 오므려 갤러리, 지도 등 특정 앱에서 화면을 확대 또는 축소할 수 있습니다.

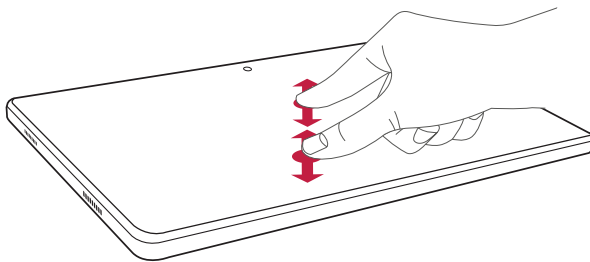

! 주의

- 터치 화면에 심한 충격을 주지 마세요. 터치 센서가 손상될 수 있습니다.


✓ 알아두기

- 제품과 함께 제공된 스타일러스 펜을 사용하세요.
다른 터치펜을 사용하면, 터치 기능이 제대로 동작하지 않을 수 있습니다.
- 제품을 자석, 금속, 전도성 물질 등에 가까이 두면 터치 화면을 조작할 때 작동 오류를 일으킬 수 있습니다.
- 화면을 밝은 곳(직사광선, 햇볕 등)에서 사용하면 보는 위치에 따라 잘 보이지 않을 수 있습니다.
그늘진 곳이나 책을 읽을 수 있을 정도로 밝은 곳에서 사용하세요.
- 화면을 너무 세게 누르지 마세요.
- 장갑을 끼거나 손톱 끝으로 터치하면 제대로 작동하지 않을 수 있습니다.
- 화면에 습기가 많거나 물기가 있는 경우 터치가 올바르게 동작하지 않을 수 있습니다.
- 일반 온라인/오프라인에서 판매하는 화면 보호 필름이나 액세서리를 부착하는 경우 터치 화면이 올바르게 동작하지 않을 수 있습니다.

홈 화면 사용하기

둘러보기

홈 화면에서는 앱 바로가기, 위젯, 폴더 구성하여 사용할 수 있습니다.

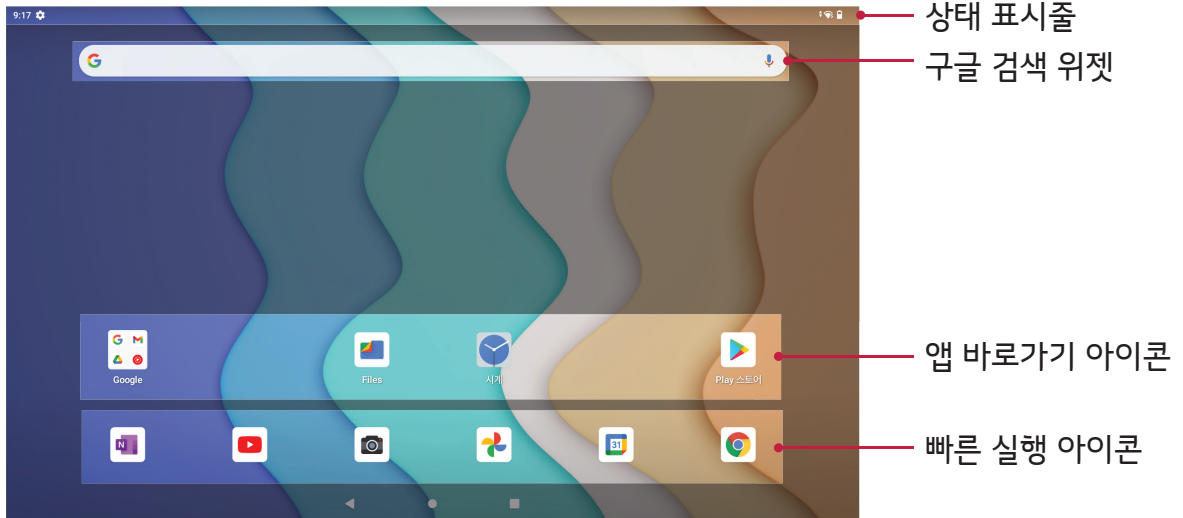


- 상태 표시줄: 시간, 알림, 제품 상태, 배터리 정보 등이 표시됩니다.
- 구글 검색 위젯: 구글에서 원하는 내용을 검색하세요.
- 앱 바로가기 아이콘: 앱을 바로 실행할 수 있는 아이콘입니다.
- 빠른 실행 아이콘: 모든 홈 화면에서 공통적으로 표시되는 빠른 실행 아이콘입니다.

내비게이션 버튼

화면 하단에 표시되는 내비게이션 버튼은 뒤로 가기, 홈, 최근 실행 앱 기능을 지원합니다.

알아두기

- 앱에 따라 버튼의 기능이 다르게 동작할 수 있습니다.

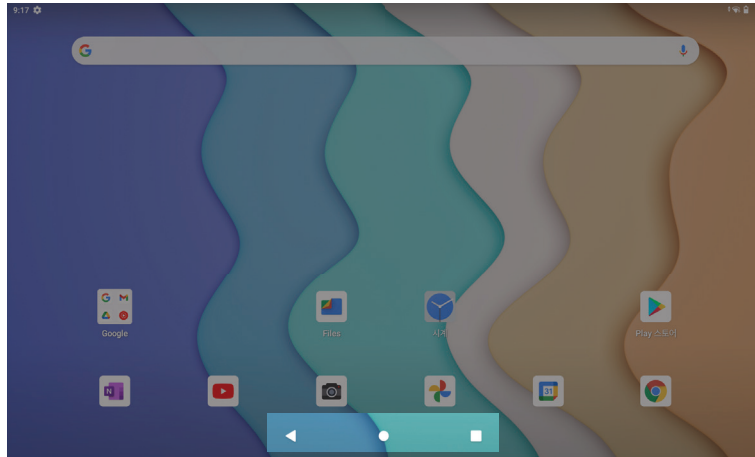


버튼	기능
◀	이전 화면으로 이동할 수 있습니다. 실행된 키패드나 팝업 창을 닫을 수 있습니다.
●	짧게 누르면, 홈 화면으로 이동할 수 있습니다. 길게 누르면, Google 어시스턴트 기능이 실행됩니다.
■	최근 실행한 앱 목록이 나타나며, 앱을 선택하여 전환할 수 있습니다.

앱스 화면

앱스 화면에는 제품에 설치된 모든 앱이 표시되며, 원하는 앱을 선택하여 실행할 수 있습니다.

- 1 홈 화면에서 위로 드래그하면, 앱스 화면이 나타납니다.
- 2 앱스 화면에서 아래로 드래그하면, 앱스 화면이 닫힙니다.

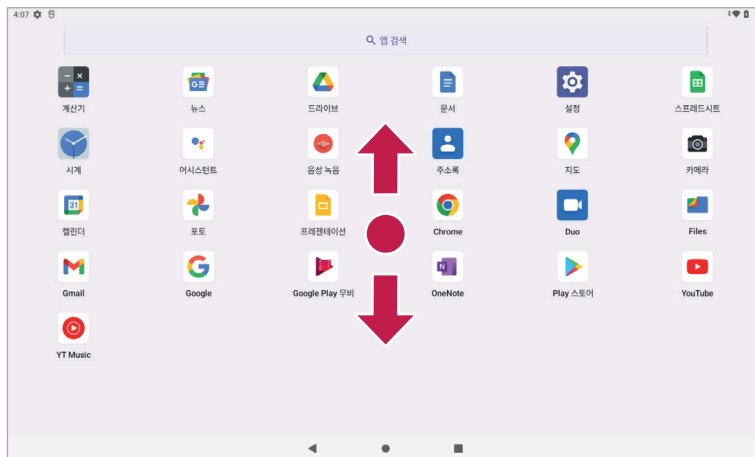






알아두기

- 앱스 화면에서 앱을 길게 눌러 홈 화면에 앱 바로가기를 추가할 수 있습니다.

상태 아이콘 알아두기

일정, 알람 등의 알림이 있을 때 상태 표시줄에 해당 알림 아이콘이 나타납니다. 상태 표시줄에 나타나는 아이콘을 통해 제품의 상태를 확인할 수 있습니다.


	알람이 설정된 상태
	블루투스가 연결된 상태
	배터리 잔량 표시
	비행기 모드 상태
	Wi-Fi가 연결된 상태

알아두기

- 제품 상태에 따라 아이콘이 다르거나 보이지 않을 수 있습니다. 실제 사용 환경에 따라 참고하세요.
- 지역에 따라 아이콘이 다를 수 있습니다.

알림창

알림창에서는 새로운 알림 메시지가 표시되며, 화면 밝기 조절, 빠른 설정 등을 사용할 수 있습니다. 상태 표시줄을 아래로 드래그하면, 알림창이 열리고 알림 메시지를 확인할 수 있습니다. 알림창을 위로 드래그하면, 알림창을 닫을 수 있습니다.

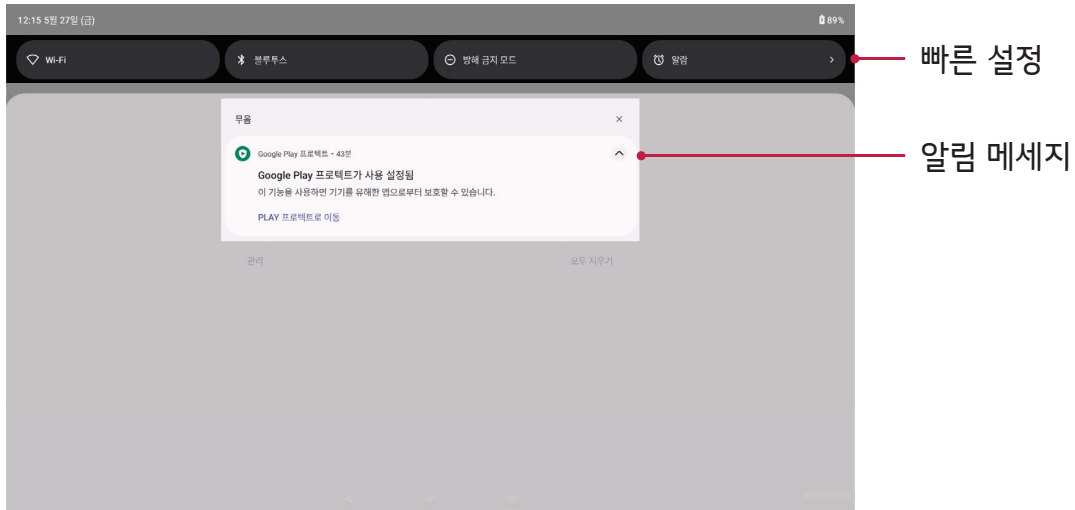

알아두기


- 알림창의 [관리]를 누르면, 알림 설정을 변경할 수 있습니다.

빠른 설정

알림창을 아래로 드래그하면, 빠른 설정이 확장됩니다.

알아두기

- 빠른 설정 타일을 길게 누르면, 해당 기능에 대한 설정 화면이 나타납니다.

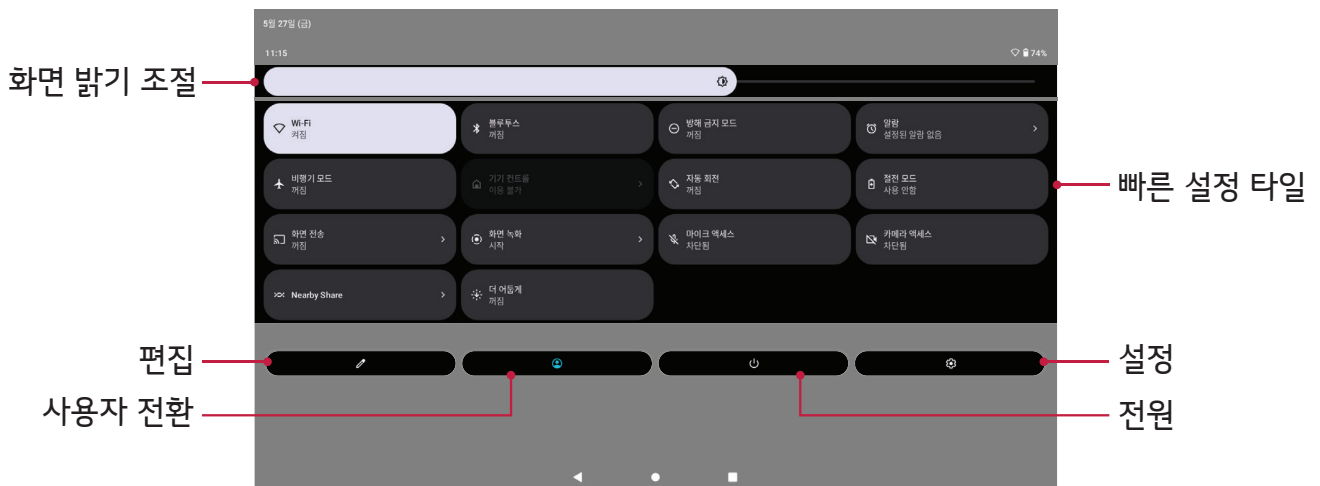

- 화면 밝기 조절: 화면 밝기를 조절할 수 있습니다.
- 빠른 설정 타일: 원하는 기능을 켜거나 끌 수 있습니다.
- 편집: 빠른 설정 메뉴에 원하는 기능을 추가하거나 제거할 수 있습니다.
- 사용자 전환: 사용자 또는 게스트로 사용자를 전환할 수 있습니다.
- 전원: [전원 끄기], [다시 시작] 메뉴가 제공됩니다.
- 설정: [설정] 메뉴를 실행합니다.


화면 방향 전환하기

제품의 방향에 따라 화면 방향을 자동으로 전환하도록 설정할 수 있습니다.

- 1 상태 표시줄을 아래로 드래그하여 알림창을 여세요.
- 2 알림창을 아래로 드래그하여, 빠른 설정에서 [자동 회전] 타일을 누르세요.

✔️ 알아두기

- 앱스 화면에서 [설정] > [디스플레이] > [화면 자동 회전] 메뉴에서도 설정할 수 있습니다.

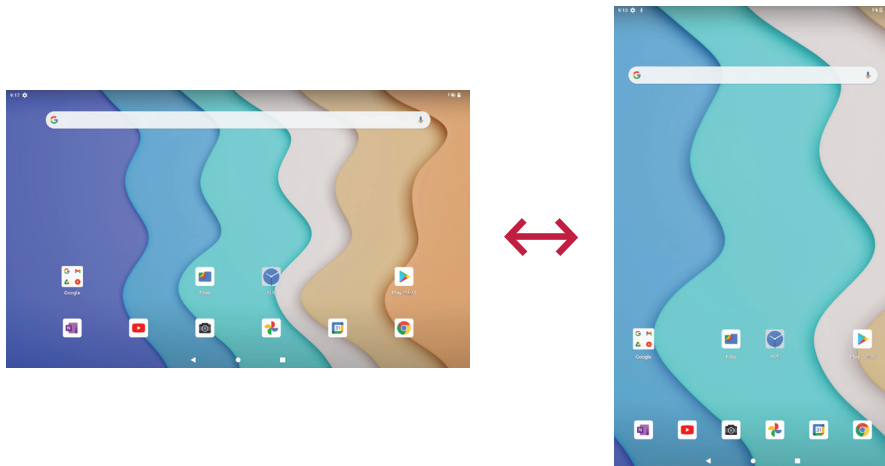

앱 및 폴더 이동

홈 화면에서 이동할 앱이나 폴더 아이콘을 길게 누른 상태에서 원하는 위치로 드래그하세요. 화면 끝으로 드래그하면, 다른 페이지 이동 및 새로운 페이지를 추가할 수 있습니다.

홈 화면 하단에 고정하기

자주 실행하는 앱을 홈 화면 하단에 고정하려면, 원하는 앱을 길게 누른 채 홈 화면 하단의 빠른 실행 아이콘 영역으로 드래그하세요.

폴더 만들기

홈 화면에서 앱을 길게 누른 채 다른 앱 위에 겹쳐 놓으세요.

- 자동으로 새 폴더가 생성되며, 해당 앱들이 폴더에 추가됩니다.

폴더 관리하기

홈 화면에서 폴더를 누른 후 원하는 기능을 실행하세요.

- 폴더 이름 입력란을 눌러 폴더의 이름을 변경할 수 있습니다.
- 폴더 안의 앱을 길게 누른 채 폴더 밖으로 드래그하면 폴더에서 앱을 제거할 수 있습니다. 폴더 안에 앱이 하나만 남을 경우 폴더가 자동으로 삭제됩니다.

잠금 화면 사용하기

잠금 화면 살펴보기

[잠금/전원] 버튼을 누르거나 제품을 일정 시간 동안 사용하지 않으면, 제품의 화면이 꺼지면서 잠금 화면으로 전환합니다.

잠금 화면이 설정되어 있지 않은 상태에서 [잠금/전원] 버튼을 누르면 잠금 화면이 해제됩니다.

다른 사람이 사용할 수 없도록 보안을 설정하려면 [화면 잠금]을 설정하세요.



알아두기

- 잠금 화면은 제품의 화면이 불필요하게 터치되는 것을 방지하고 제품의 배터리가 절전될 수 있도록 도와줍니다. 제품을 사용하지 않을 때에는 [화면 잠금]을 설정하기를 권장합니다.

화면 잠금 설정하기

다양한 방법으로 화면 잠금을 설정할 수 있습니다.

앱스 화면에서 [설정] > [보안] > [화면 잠금]에서 원하는 기능을 선택하세요.

- 없음: 화면 잠금을 사용하지 않습니다.
- 스와이프: 화면을 드래그하여 잠금 화면을 해제할 수 있습니다.
- 패턴: 패턴을 그려 잠금 화면을 해제할 수 있습니다.
- PIN: 숫자를 입력하여 잠금 화면을 해제할 수 있습니다.
- 비밀번호: 숫자와 문자를 입력하여 잠금 화면을 해제할 수 있습니다.




주의

- 비밀번호와 패턴 등의 잠금 설정은 신중하게 지정하고, 절대 잊어버리지 않도록 주의하세요.
- 비밀번호와 패턴 등을 잊어버릴 경우 LG전자 서비스 센터에 방문하더라도 복구할 수 없습니다.
- 잠금 설정을 잊어버린 경우 제품을 초기화해야 하며, 이로 인해 발생하는 문제는 LG전자에서 책임지지 않습니다.

멀티 태스킹 기능

최근 사용 기록 화면

최근에 사용한 앱 화면을 미리 보기로 열어 볼 수 있습니다.

최근에 사용한 앱 목록을 보려면 [] 버튼을 누르세요.

화면 분할

제품 화면을 분할하여 앱을 동시에 사용할 수 있습니다.

1 [] 버튼을 누르면, 최근 사용한 앱 목록이 나타납니다.

2 앱 목록에서 사용할 앱 상단의 앱 아이콘을 누르세요.






3 [화면 분할]을 누른 후 다른 앱을 선택하세요.

4 화면 가운데의 비율 조정바를 움직여 비율을 조정하세요.

5 비율 조정바를 화면 밖으로 밀면 앱 화면 분할이 종료됩니다.

✓ **알아두기**

- 일부 앱은 화면 분할 기능을 지원하지 않을 수 있습니다.
- 화면 분할 사용 중에는 [] 버튼이 [] 모양으로 변경됩니다.
- [] 버튼을 누르면, 다른 앱을 선택하여 화면 분할 기능을 사용할 수 있습니다.

화면 캡처

제품 화면을 캡처하여 이미지 파일로 저장할 수 있습니다.

알아두기

- 캡처된 화면은 [포토] 앱에서 확인할 수 있습니다.

단축키로 캡처하기

[잠금/전원] 버튼과 [볼륨 하단] 버튼을 동시에 누르세요.

최근 사용한 앱 목록에서 캡처하기

- 1 [■] 버튼을 짧게 누르면, 최근 사용한 앱 목록이 나타납니다.
- 2 스크린샷하려는 앱으로 드래그한 후, [스크린샷]을 누르세요.


문자 입력하기

문자 입력이 필요한 화면에서 자동으로 키보드가 나타납니다.

알아두기



- 키보드가 나타나지 않으면, 문자 입력이 필요한 부분을 눌러주세요.

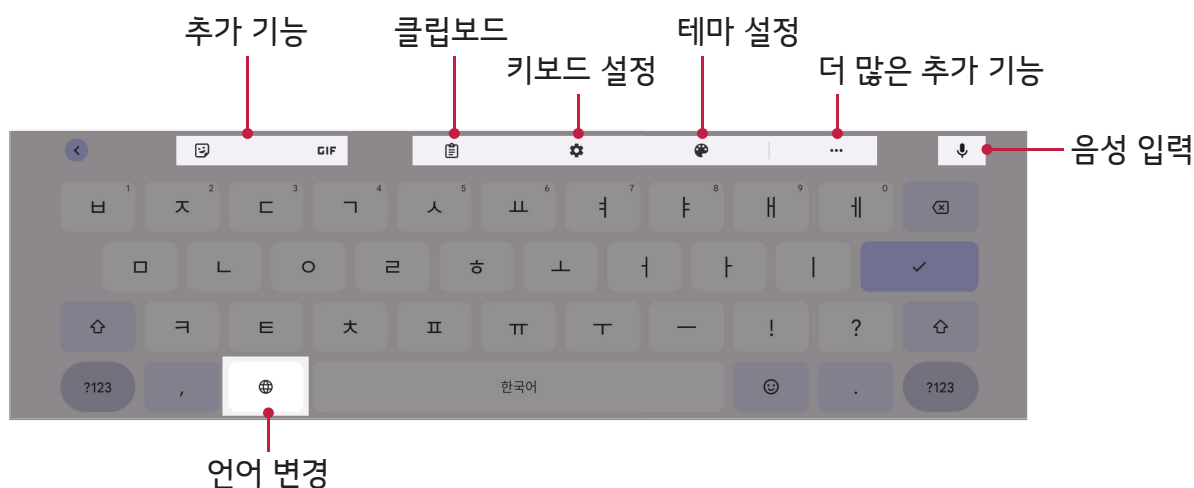키보드 둘러보기



문자 복사/붙여넣기

문자를 복사하거나 잘라내서 실행 중인 앱이나 다른 앱으로 붙여 넣을 수 있습니다.


- 1 잘라내거나 복사할 내용을 길게 누르세요.
- 2 [ / ]을 드래그하여 원하는 영역을 설정하세요.
- 3 [잘라내기] 또는 [복사]를 선택하세요.
 - 문자를 잘라내거나 복사할 경우 클립보드에 자동으로 추가됩니다.
- 4 문자 입력 창을 길게 누른 후 [붙여넣기]를 선택하세요.

✓ 알아두기

- [복사] 또는 [잘라내기] 한 내용이 없을 경우 [붙여넣기]가 나타나지 않습니다.

클립보드

문자, 이미지 등을 잘라내기 또는 복사할 경우 클립보드에 자동으로 항목이 저장되며, 언제든지 원하는 공간에 붙여 넣을 수 있습니다.


- 1 [] 버튼을 누르세요.
- 2 [클립보드]에서 원하는 항목을 선택하여 붙여 넣으세요.

✓ 알아두기

- 사용자가 다운로드한 앱에서는 클립보드 기능이 동작하지 않을 수 있습니다.
- 삭제한 클립보드 항목은 복원할 수 없습니다.


키보드 설정

키보드 설정에서는 입력 언어 변경 및 세부 설정을 변경할 수 있습니다.

- 1 [] 버튼을 누르세요.
- 2 원하는 설정을 변경하여 사용하세요.

무선 화면 전송

스크린 미러링을 지원하는 무선 디스플레이(TV, 모니터 등)에 화면을 전송할 수 있습니다.

- 1 알림창을 열고 아래로 드래그하여 빠른 설정을 확장하세요.
- 2 [화면 전송] > [설정] > [] > [무선 디스플레이 사용]을 누르세요.
- 3 연결하려는 무선 디스플레이를 선택하여 연결하세요.

콘텐츠 공유하기

이메일, 앱 등으로 공유하기

파일, 문서, 이미지 등을 다른 장치나 이메일 등으로 공유할 수 있습니다.

- 1 파일, 문서, 이미지 등을 선택하세요.
- 2 [🔗]를 눌러 공유 옵션을 선택한 후 공유하세요.

Nearby Share 공유하기

Nearby Share는 블루투스나 무선 네트워크를 사용하여 안드로이드 장치 간에 파일, 문서, 이미지 등을 간편하게 공유할 수 있는 기능입니다.



알아두기

- 공유할 장치의 검색 범위 설정이 공개 안 함으로 되어 있으면, 장치가 검색되지 않습니다.
- 무선 네트워크를 사용하여 공유하려면, 공유할 장치가 동일한 무선 네트워크에 연결되어 있어야 합니다.

- 1 파일, 문서, 이미지 등을 선택하세요.
- 2 [🔗]를 누른 후 [Nearby Share]를 선택하세요.
- 3 주변 기기 목록에서 공유할 장치를 선택하여 공유하세요

Nearby Share 검색 범위 설정

Nearby Share를 통해 다른 안드로이드 장치가 내 장치를 검색하고 공유할 수 있도록 설정할 수 있습니다.

- 1 알림창을 열고 아래로 드래그하여 빠른 설정을 확장하세요.
- 2 [Nearby Share]를 누르세요.
- 3 검색 허용 범위를 선택하고 [완료]를 누르세요.
 - 모든 사용자: 주변에 있는 모든 사용자가 내 장치를 검색하고 공유할 수 있도록 합니다.
 - 주소록: 주소록에 있는 사용자만 내 장치를 검색하고 공유할 수 있도록 합니다.
 - 공개 안함: 내 장치를 검색하거나 공유할 수 없도록 합니다.

앱

앱 설치/삭제하기

앱 설치하기

Play 스토어에 접속한 후 앱을 검색하여 다운로드하세요.



알아두기

- 일부 앱은 사용자가 삭제하거나 사용을 중지할 수 없습니다.
- 앱에 따라 요금이 부과될 수 있습니다.

앱 삭제하기

홈 화면에서 삭제 또는 제거

- 1 앱 아이콘을 길게 눌러 다른 위치로 드래그하세요.
- 2 [제거] 또는 [삭제] 위치로 드래그한 후 손가락을 떼세요.

설정에서 앱 제거

앱스 화면에서 [설정] > [앱]에서 제거하려는 앱을 선택한 후, [설치 제거]를 누르세요.

앱 사용 중지

불필요한 앱의 사용을 중지하여 홈 화면과 앱스 화면에서 아이콘이 보이지 않도록 할 수 있습니다.

앱스 화면에서 [설정] > [앱]에서 사용 중지하려는 앱을 선택한 후 [사용 안함]을 누르세요.

다시 앱을 사용하려면, [사용]을 누르세요.

앱 기능 바로가기

홈 화면에서 앱 아이콘을 길게 누르면 빠른 동작 메뉴가 나타납니다.

앱 기능 바로가기를 통해 좀 더 편리하게 앱을 사용하세요.



알아두기

- 이 기능은 일부 앱에서만 사용할 수 있습니다.

카메라 기능

카메라 실행하기

사진이나 동영상을 촬영하여 간직하고 싶은 순간을 제품에 담을 수 있습니다.
 앱스 화면에서 [카메라]를 누르세요.

알아두기

- 사진이나 동영상을 촬영하기 전에 먼저 부드러운 천으로 카메라 렌즈를 닦으세요.
- 카메라 렌즈에 손가락이 닿거나, 지문 자국이 묻지 않도록 주의하세요.
- 무음으로 설정한 경우에도 촬영 시 촬영음이 동작합니다.
- 사용설명서에 사용된 이미지는 실제와 다를 수 있습니다.
- 촬영한 사진이나 동영상은 Google 포토에서 확인하거나 편집할 수 있습니다. 자세한 내용은 Google 포토 살펴보기를 참조하세요.
- 카메라 앱을 실행한 후 대기 상태에서 2분이 지나면 자동으로 카메라 앱이 종료됩니다.

촬영 화면 둘러보기



화면에 표시되는 설정과 모드를 선택하여 사진을 촬영할 수 있습니다.

알아두기

- 줌 기능은 후면 카메라 사용 시에만 활성화 됩니다.
- 플래시, 얼굴 보정 기능은 전면 카메라를 사용할 때에만 활성화 됩니다.



촬영하기

- 1 앱스 화면에서 [카메라]를 누르세요.
- 2 촬영 화면을 눌러 촬영할 대상에 초점을 맞추세요.
- 3 []를 눌러 사진을 촬영하세요.
 - []를 길게 누르면 연속으로 촬영할 수 있습니다.
 - 촬영 모드를 드래그하여 비디오를 선택하면, 동영상을 촬영할 수 있습니다.

AE/AF 고정

촬영 화면에서 화면을 길게 누르면 AE(노출)와 AF(초점)가 누른 위치에 고정됩니다.
AE/AF 고정을 해제하려면, 촬영 화면의 다른 위치를 선택하세요.




✓ 알아두기

- 일부 모드에서는 지원되지 않습니다.

Google 포토

Google 포토에는 계정과 동기화된 사진과 기기에서 촬영한 사진, 동영상을 확인하고 관리할 수 있습니다. 앱스 화면에서 [포토]를 누르세요.

Google 포토 둘러보기

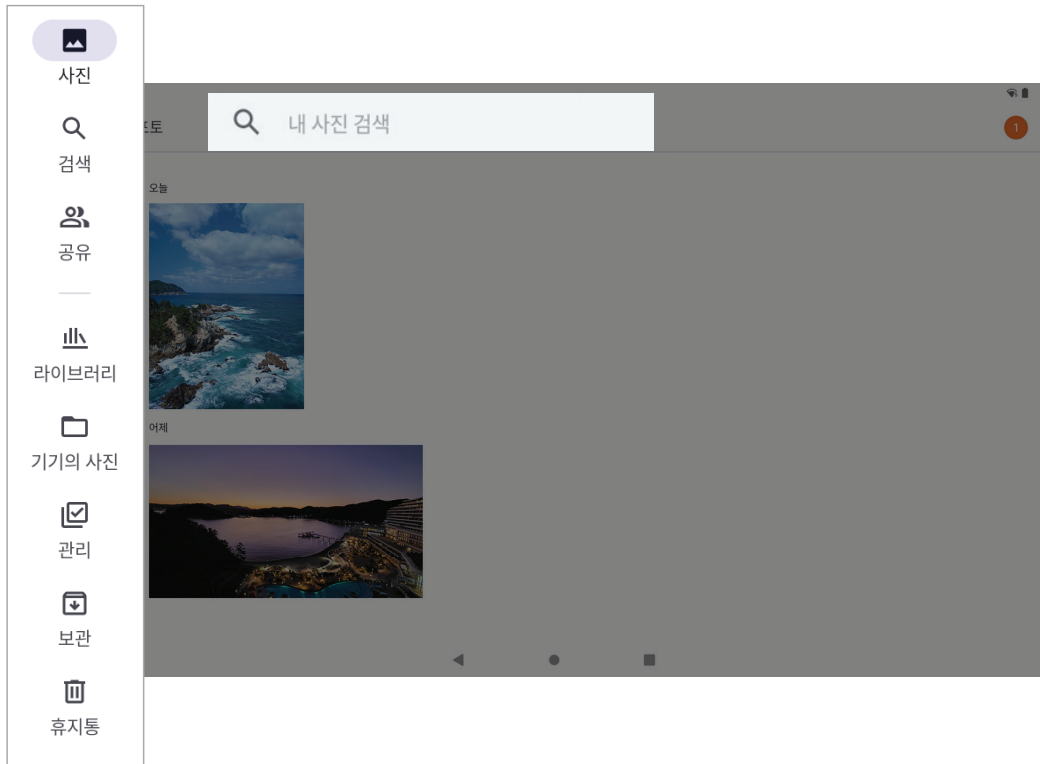

- 내 사진 검색: 텍스트를 입력하여 사진을 검색합니다.
- 사진: 모든 사진이 표시됩니다.
- 검색: 사진을 빠르게 찾을 수 있도록 자동 분류하여 표시합니다.
- 공유: 공유 앨범을 만들고 파트너와 공유할 수 있습니다.
- 라이브러리: 즐겨찾기한 사진/동영상과 사용자가 분류한 라이브러리 항목이 표시됩니다.
- 기기의 사진: 기기에서 직접 촬영한 사진만 표시됩니다.
- 관리: 폴더, 라이브러리 관리 기능과 애니메이션, 콜라주, 영화 만들기 기능 등을 제공합니다.
- 보관: 포토 뷰에서 사진을 숨기고 보관 항목으로 이동할 수 있습니다.
- 휴지통: 삭제된 사진이 보관됩니다.

사진/동영상 보기

Google 포토에서 사진이나 동영상을 선택하세요.

좌우로 화면을 드래그하면, 다른 사진과 동영상을 볼 수 있습니다.

사진이나 동영상의 화면을 누르면, 메뉴가 표시됩니다.

✓ 알아두기

- [수정] 메뉴에서 사진과 동영상을 편집할 수 있습니다.



애니메이션(GIF), 콜라주, 영화 만들기

- 1 앱스 화면에서 [포토]를 누르세요.
- 2 [관리] > [새로 만들기]에서 원하는 항목을 선택하세요.
- 3 안내에 따라 재미있는 애니메이션, 콜라주, 영화를 만들어 보세요.

캘린더

캘린더 살펴보기

캘린더를 이용하여 일정 및 할 일을 관리할 수 있습니다.

일정 추가하기

- 1 앱스 화면에서 [캘린더]를 누르세요.
- 2 일정을 등록할 날짜를 선택하세요.
- 3 [+] 버튼을 눌러 목표, 알림, 할 일, 일정 등을 추가하세요.

✔ 알아두기

- Google 계정에 자동으로 동기화되어, 다른 기기에서도 동일하게 일정을 관리할 수 있습니다.


인터넷

크롬 브라우저를 사용하여 인터넷을 사용할 수 있습니다.

앱스 화면에서 [Chrome]을 누르세요.

✔ 알아두기

- Google 계정에 자동으로 동기화 되어, 다른 기기에서도 동일하게 즐겨찾기를 사용할 수 있습니다.

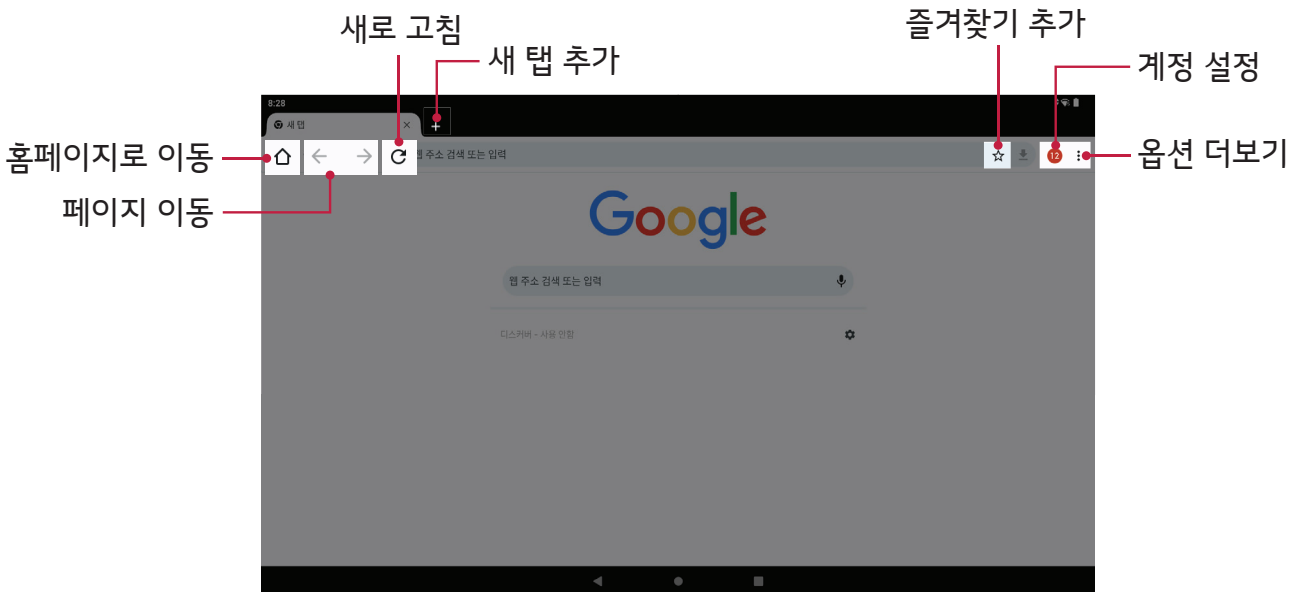

즐거찾기

- 1 [옵션 더보기] > [북마크]를 누르세요.
- 2 [북마크]에 추가된 즐겨찾기 항목 중 원하는 항목을 선택하세요.

시크릿 탭

인터넷 사용 기록이 다른 사람에게 노출되지 않도록 사용할 수 있습니다.
[옵션 더보기] > [새 시크릿 탭]을 선택하면 시크릿 모드로 전환됩니다.

✔ 알아두기

- 시크릿 모드에서는 일부 기능이 제한될 수 있습니다.

연락처

연락처를 저장하고 관리할 수 있습니다.

✔ 알아두기

- Google 계정에 자동으로 동기화 되어, 다른 기기에서도 동일하게 연락처를 사용할 수 있습니다.

연락처 추가

- 1 앱스 화면에서 [주소록]을 누르세요.
- 2 연락처 만들기 [+] 버튼을 누르세요.
- 3 연락처 정보를 입력하고 [저장]을 누르세요.

연락처 삭제

- 1 앱스 화면에서 [주소록]을 누르세요.
- 2 연락처를 선택한 후 [⋮] > [삭제]를 누르세요.

연락처 공유

- 1 앱스 화면에서 [주소록]을 누르세요.
- 2 연락처를 선택한 후 [⋮] > [공유]를 누르세요.
- 3 원하는 공유 방법을 선택하여 공유하세요.

그룹 생성

- 1 앱스 화면에서 [주소록]을 누르세요.
- 2 [≡] 버튼 > [+ 라벨 만들기]를 누르세요.
- 3 안내에 따라 라벨을 만들고 연락처를 추가하세요.

수정 및 관리

[수정 및 관리] 메뉴를 통해 연락처를 관리할 수 있습니다.



- 병합 및 정리하기: 중복 연락처를 병합하거나 정리합니다.
- 연락처 복원: Google 계정에 백업된 연락처를 복원합니다.
- 파일에서 가져오기: 연락처 파일을 가져와서 복원합니다.
- 파일로 내보내기: 연락처를 파일로 만들어 내보냅니다.
- 휴지통: 삭제된 연락처가 보관됩니다.
- 설정: 연락처 백업, 동기화 테마 등의 설정이 가능합니다.


시계/알람

앱스 화면에서 [시계]를 눌러 알람, 시계, 타이머, 스톱워치, 취침 시간 등을 확인하고 설정할 수 있습니다.

계산기

앱스 화면에서 [계산기]를 눌러 일반 계산기 및 공학용 계산기를 사용할 수 있습니다.

음성 녹음

- 1 앱스 화면에서 [음성 녹음]을 누르세요.
- 2 [] 버튼을 눌러 녹음을 시작하세요.

태블릿 관리

시스템 업데이트

제품의 소프트웨어를 무선 인터넷을 통해 빠르고 편리하게 업데이트할 수 있습니다.

- 1 앱스 화면에서 [설정]을 누르세요.
- 2 [시스템] > [시스템 업데이트]를 선택하세요.
- 3 [업데이트 확인] 버튼을 눌러 안내에 따라 시스템 업데이트를 진행하세요.

주의

- 제품 소프트웨어 업데이트 도중 데이터 유실이 일어날 수 있습니다. 이를 대비하여 미리 데이터를 백업하여 두면 데이터 유실로 인한 피해를 최소화할 수 있습니다. 단, 제조사는 데이터 유실에 대한 피해를 책임지지 않으니 주의하세요. 일부 앱은 최신 버전의 소프트웨어에서 정상적으로 동작하지 않을 수 있으며, 로그인 정보나 사용자가 설정한 세팅 값 등 데이터가 삭제 또는 초기화될 수 있으니 주의하세요.

알아두기

- 최신 버전의 소프트웨어 업데이트는 LG전자가 고객의 제품을 위한 최신 버전의 소프트웨어를 개발한 경우에만 한하여 제공됩니다.
- 소프트웨어 업데이트 시 배터리는 완전히 충전된 상태에서 업데이트를 진행하세요.
- 자세한 이용 방법은 LG전자 고객 상담실(T.1544-7777)로 문의하세요.

데이터 이전 방법

Google 계정으로 콘텐츠, 데이터, 설정을 백업 및 복원할 수 있습니다. 백업한 정보를 원래 기기 또는 다른 Android 기기로 복원할 수 있습니다.

계정에 백업한 데이터를 초기화된 기기에서 복원하려면 초기 설정 화면에 표시되는 단계를 따릅니다.

알아두기

- 높은 Android 버전의 백업을 낮은 Android 버전을 실행하는 기기에 복원하는데 제약이 있을 수 있습니다.

Google

Google 살펴보기

Google과 관련된 기능을 사용하려면 먼저 Google 계정을 설정해야 합니다. Google 계정 등록 창은 Google 관련 기능을 처음 실행할 때 자동으로 나타나며, Google 계정이 없으면 제품에서 새롭게 등록할 수 있습니다. 각 앱의 도움말 메뉴를 선택하면 사용 방법을 확인할 수 있습니다.

✓ 알아두기

- 지역에 따라 일부 앱은 작동하지 않을 수 있습니다.

Google

Google에서 제공하는 검색 기능을 이용하여 검색어를 입력하거나 음성으로 검색하여 원하는 웹 사이트뿐 아니라 날씨, 이미지, 뉴스 등을 찾을 수 있습니다.

어시스턴트

음성 인식을 통해 사용자가 원하는 기능을 실행하거나 정보를 표시합니다.

지도

지도에서 원하는 장소의 위치를 검색하거나 지역 정보 및 내 위치를 확인할 수 있습니다.

YouTube

원하는 동영상을 검색해 감상하고, 직접 촬영한 동영상을 YouTube에 올려 전 세계인들과 공유할 수 있습니다.

드라이브

제품에서 직접 새 파일을 업로드하고 저장하며, 파일을 보거나 공유하고 정리할 수 있습니다. 앱에서 사용 가능한 모든 파일은 웹에서도 사용 가능하므로 어디서든 파일에 쉽게 접근할 수 있으며, 오프라인에서도 확인할 수 있습니다.

YT Music

기기 파일에 있는 음악을 들을 수 있습니다. Youtube Premium 계정으로 구글이 제공하는 음악 서비스를 이용할 수 있습니다.

Google Play 무비/TV

Google 계정으로 영화를 대여/구매하여, 그 콘텐츠를 어디서든 감상할 수 있습니다.

Duo

Duo를 사용하여 음성통화 및 화상 통화를 할 수 있습니다.

포토

제품에 저장된 사진 및 앨범을 보거나 공유할 수 있습니다.

문서

새 문서를 만들거나 웹 또는 다른 기기에서 만든 문서를 수정할 수 있습니다. 문서를 공유하여 다른 사람들과 동시에 작업할 수도 있습니다.

스프레드시트

새 스프레드시트를 만들거나 웹 또는 다른 기기에서 만든 스프레드시트를 수정할 수 있습니다. 스프레드시트를 공유하여 다른 사람들과 동시에 작업할 수도 있습니다.

프레젠테이션

새 프레젠테이션을 만들거나 웹 또는 다른 기기에서 만든 프레젠테이션을 수정할 수 있습니다. 프레젠테이션을 공유하여 다른 사람들과 동시에 작업할 수도 있습니다.

뉴스

Google에서 제공하는 최신 뉴스를 볼 수 있습니다.

설정

사용자의 편의에 따라 제품 사용 환경을 설정할 수 있습니다.

앱스 화면에서 [설정]을 누르세요.

알아두기

- [설정 검색]에 키워드를 입력하면 설정할 항목을 간편하게 실행할 수 있습니다.

네트워크 및 인터넷

Wi-Fi

주변의 Wi-Fi 네트워크에 접속하여 주변 기기와 네트워크를 연결하고 사용할 수 있습니다.

Wi-Fi 네트워크 연결하기


- 1 앱스 화면에서 [설정] > [네트워크 및 인터넷] > [Wi-Fi]를 누르세요.
- 2 [Wi-Fi]를 활성화하세요.
 - 연결할 수 있는 Wi-Fi 네트워크가 자동으로 검색됩니다.
- 3 연결할 네트워크를 선택하세요.
 - 보안이 설정된 Wi-Fi 네트워크의 경우 비밀번호를 입력해야 연결할 수 있습니다.
 - 이전에 연결했던 Wi-Fi의 경우 연결 정보를 기억하여 인증 과정 없이 자동으로 연결됩니다. 자동 연결을 해제하려면 해당 Wi-Fi를 누른 후 저장 안 함을 누르거나 해당 Wi-Fi를 길게 누른 후 저장 안 함을 누르세요.

Wi-Fi 네트워크 환경 설정하기

- 1 앱스 화면에서 [설정] > [네트워크 및 인터넷]을 누르세요.
- 2 [Wi-Fi] > [Wi-Fi 환경설정]을 누르세요.

Wi-Fi Direct

접속 포인트(Access Point) 없이 Wi-Fi Direct를 지원하는 다른 기기와 직접 연결하여 빠르고 간편하게 파일을 주고받을 수 있습니다. Wi-Fi Direct로 여러 대의 기기를 연결할 수 있습니다.

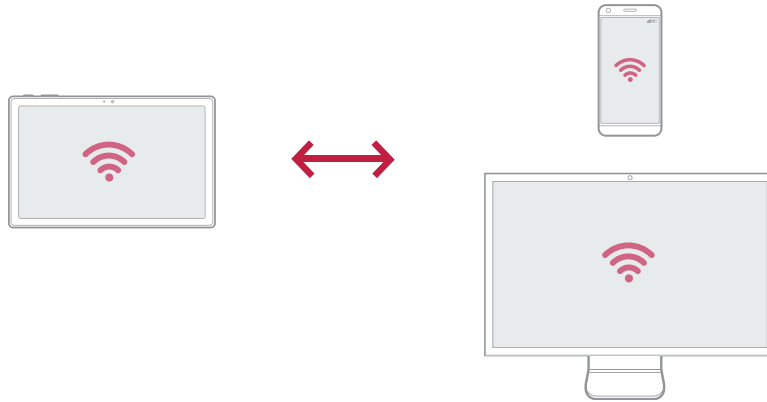

- 1 앱스 화면에서 [설정] > [네트워크 및 인터넷]을 누르세요.
- 2 [Wi-Fi] > [Wi-Fi 환경설정] > [Wi-Fi Direct]를 누르세요.
 - 주변에 있는 Wi-Fi Direct 지원 기기가 자동으로 검색됩니다.
- 3 연결할 기기를 선택하세요.
 - 상대 기기에서 연결 요청을 수락하면 기기가 연결됩니다.

✓ 알아두기

- Wi-Fi Direct 사용 시 배터리가 빨리 소모될 수 있습니다.

비행기 모드

비행기 탑승 시 기능 및 무선 데이터 연결 기능을 모두 해제할 수 있습니다. 비행기 모드를 실행해도 데이터를 사용하지 않는 게임 및 음악 등 제품 자체 기능은 사용할 수 있습니다.

- 1 앱스 화면에서 [설정] > [네트워크 및 인터넷]을 누르세요.
- 2 [비행기 모드]를 활성화하세요. 비행기 모드가 켜지고 네트워크 사용이 중지됩니다.
- 3 다시 [비행기 모드]를 누르면, 비행기 모드가 꺼집니다.

테더링

다른 기기에서 내 Wi-Fi 연결을 통해 인터넷을 사용할 수 있습니다.

VPN

사내 네트워크와 같이 안전한 가상 네트워크에 접속할 수 있도록 설정하거나 연결된 가상 보안 네트워크를 관리할 수 있습니다.

VPN 추가하기

- 1 앱스 화면에서 [설정] > [네트워크 및 인터넷]을 누르세요.
- 2 [VPN] > [+]를 누르세요.

✓ 알아두기

- 이 기능을 사용하려면 화면 잠금이 보안 잠금으로 설정되어 있어야 합니다. 화면 잠금이 보안 잠금으로 설정 되어 있지 않을 경우 알림 화면이 나타나며, 안내에 따라 보안 잠금을 설정하세요. 자세한 내용은 화면 잠금의 내용을 참고하세요.

- 3 VPN 정보를 입력한 후 [저장]을 누르세요.

VPN 설정하기

- 1 VPN 목록에서 원하는 VPN을 누르세요.
- 2 VPN을 사용할 사용자의 계정 정보를 입력한 후 [연결]을 누르세요.
 - 입력한 계정 정보를 저장하려면 [계정 정보 저장]에 체크하세요.

비공개 DNS

- 1 앱스 화면에서 [설정] > [네트워크 및 인터넷]을 누르세요.
- 2 [비공개 DNS]를 눌러 DNS 비공개 여부를 설정하세요.

연결된 기기

다양한 블루투스 지원 기기(블루투스 헤드셋, 키보드 등)와 연결하여 제품을 편리하게 사용할 수 있습니다.

새 기기와 페어링

- 1 앱스 화면에서 [설정] > [연결된 기기]를 누르세요.
- 2 [새 기기와 페어링]을 누르세요.
 - 화면을 아래로 드래그하면 기기 목록이 업데이트됩니다.

알아두기

- 상대 기기에서도 기기를 검색할 수 있도록 설정된 상태여야 목록에 나타납니다.

- 3 목록에서 연결할 기기를 선택하세요.
- 4 화면의 안내에 따라 인증 과정을 진행하세요.

알아두기

- 이전에 페어링했던 기기의 경우 연결 정보를 기억하여 인증 과정을 거치지 않고 바로 연결됩니다.

앱

최근 실행한 앱 목록과 기본 앱, 앱별 사용 시간, 사용하지 않는 앱 등을 확인하고 설정을 변경할 수 있습니다.

알림

앱별 알림 설정과 기록을 확인할 수 있으며, 잠금 화면 알림, 방해 금지 모드 등을 설정할 수 있습니다.

배터리

사용 중인 배터리의 정보를 확인하거나 절전 모드를 설정할 수 있습니다.

- 배터리 사용량: 배터리 사용 세부 정보를 볼 수 있습니다.
- 절전 모드: 절전 모드 사용 여부와 세부 설정을 변경할 수 있습니다.
- 배터리 관리: 배터리 관리 기능을 켜거나 끌 수 있습니다.
- 배터리 잔량 비율: 상태 표시줄에 배터리 잔량 비율(%)로 표시하도록 설정할 수 있습니다.

저장용량

제품의 내부 저장 용량 또는 메모리 카드의 저장 공간을 확인하고 관리할 수 있습니다.

소리

소리 크기 및 시스템 알림음 등의 설정을 변경할 수 있습니다.

- 1 앱스 화면에서 [설정]을 누르세요.
- 2 [소리]를 눌러 [미디어 볼륨], [알람 볼륨], [알림 볼륨]을 설정하세요.
 - 방해 금지 모드: 알림을 수신할 시간 및 범위, 앱 종류를 설정하거나 특정 요일에만 알림을 받도록 설정할 수 있습니다.
 - 미디어: 미디어 플레이어 고정 및 표시 설정을 할 수 있습니다.
 - 기본 알림 소리: 알림음을 변경할 수 있습니다.
 - 기본 알람 소리: 알람음을 변경할 수 있습니다.
 - 화면 잠금 소리: 화면 잠금 소리를 켜거나 끕니다.
 - 충전 소리: 충전 소리를 켜거나 끕니다.
 - 터치음: 터치음을 켜거나 끕니다.

디스플레이

화면과 관련된 설정을 세부적으로 조정하거나 변경할 수 있습니다.

- 1 앱스 화면에서 [설정]을 누르세요.
- 2 [디스플레이]를 눌러 원하는 기능을 선택하여 설정하세요.
 - 밝기 수준: 슬라이드 바를 조절하여 제품의 화면 밝기를 설정할 수 있습니다.
 - 밝기 자동 조절: 주변의 빛에 따라 화면 밝기를 자동으로 조절합니다.
 - 잠금 화면: 잠금 화면에 대한 세부 설정이 제공됩니다.
 - 화면 자동 잠금 시간: 동작이 없을 때 화면 잠금 상태로 전환되는 시간을 설정합니다.
 - 어두운 테마: 어두운 테마 사용 여부를 설정할 수 있습니다.
 - 글꼴 크기: 글꼴의 크기를 변경할 수 있습니다.
 - 디스플레이 크기: 화면에 표시되는 항목들의 크기를 조절할 수 있습니다.
 - 야간 조명: 야간 조명 모드를 켜거나 끕니다.
 - 색상: 야간 조명의 색상을 변경할 수 있습니다.
 - 화면 자동 회전: 화면 자동 회전 기능을 켜거나 끕니다.
 - 화면 보호기: 화면 보호기 사용 여부와 설정을 변경할 수 있습니다.

배경화면

홈 화면 및 잠금 화면의 배경화면을 설정할 수 있습니다.

편리한 기능

- 1 앱스 화면에서 [설정]을 누르세요.
- 2 [편리한 기능]을 눌러 원하는 기능을 선택하여 설정하세요.
 - 펜: 스타일러스 펜 기능을 설정할 수 있습니다.
 - 노크온: 제품의 화면을 손가락으로 두 번 두드려 화면을 켜거나 끌 수 있습니다.

접근성

제품에 설치된 접근성 관련 설정을 사용할 수 있습니다.

1 앱스 화면에서 [설정]을 누르세요.

2 [접근성]을 눌러 원하는 기능을 선택하여 설정하세요.

- TalkBack: 음성으로 화면의 상태나 동작을 알려 주도록 설정할 수 있습니다.
- 텍스트 읽어주기: 화면의 텍스트를 음성으로 읽어주는 기능입니다.
- 텍스트 및 디스플레이: 텍스트 및 화면과 관련된 설정을 변경합니다.
- 더 어둡게: 화면 밝기를 더 어둡게 설정할 수 있습니다.
- 어두운 테마: 일부 화면을 검은색 배경으로 사용할 수 있습니다.
- 확대: 화면을 확대하여 콘텐츠를 더 크게 표시할 수 있습니다.
- 스위치 제어: 특정 키 조합을 설정하여 제품을 편리하게 제어하도록 맞춤 설정할 수 있습니다.
- 접근성 메뉴: 화면 잠금, 볼륨 및 밝기 조절, 스크린샷 찍기 등을 간편하게 사용할 수 있습니다.
- 타이밍 제어: 터치 타이밍, 메시지 표시 시간, 자동클릭 설정을 변경할 수 있습니다.
- 시스템 제어 기능: 시스템 탐색 및 화면 자동 회전 기능을 설정할 수 있습니다.
- 자막 환경설정: 자막 관련 설정을 변경할 수 있습니다.
- 오디오 조정: 오디오 채널과 밸런스를 변경할 수 있습니다.
- 접근성 단축키: 접근성 버튼의 위치, 크기, 투명도 등을 설정할 수 있습니다.
- TTS 출력: 텍스트를 음성으로 읽어주는 TTS 기능을 설정할 수 있습니다.

보안

1 앱스 화면에서 [설정]을 누르세요.

2 [보안]을 눌러 원하는 기능을 선택하여 설정하세요.

- Google Play 프로텍트: 앱과 제품의 유해성을 정기적으로 확인하여 보안 위험을 스캔하는 기능입니다.
- 내 기기 찾기: 원격으로 제품의 위치를 확인할 수 있으며, 제품을 잃어버린 경우 데이터를 안전하게 보호할 수 있습니다.
- 보안 업데이트: 보안 업데이트를 확인하고 설치할 수 있습니다.
- Google Play 시스템 업데이트: 시스템 업데이트 및 보안 패치를 확인하고 설치할 수 있습니다.
- 화면 잠금: 다양한 방법으로 화면 잠금을 설정할 수 있습니다.
- Smart Lock: 신뢰할 수 있는 장소 또는 기기가 인식되면 잠금이 자동으로 풀리도록 설정할 수 있습니다.
- 기기 관리자 앱: 기기 관리자 앱 사용 여부를 설정할 수 있습니다.
- 암호화 및 사용자 인증 정보: 태블릿 암호화 및 기타 인증 설정을 변경할 수 있습니다.
- Trust Agents: 제품에 설치된 Trust Agents를 확인하고 사용할 수 있습니다.
- 앱 고정: 앱을 고정하여 고정 해제하기 전까지 화면에 계속 표시되도록 설정할 수 있습니다.

개인 정보 보호

개인 정보 보호 설정 상태와 기록을 확인하고 관련 기능 설정을 변경할 수 있습니다.

위치

위치 사용 여부와 앱 별로 위치 정보 액세스 권한을 확인 및 변경할 수 있습니다.

안전 및 긴급 상황

안전 및 긴급 상황 발생 시에 도움을 받을 수 있도록 기능을 설정할 수 있습니다.

- 1 앱스 화면에서 [설정]을 누르세요.
- 2 [안전 및 긴급 상황]을 눌러 원하는 기능을 선택하여 설정하세요.
 - 긴급 상황 정보 열기: 소유자, 질병, 비상 연락처 정보를 추가할 수 있습니다.
 - 긴급 위치 서비스(ELS): 긴급 상황 발생 시 위치 정보를 보내도록 설정할 수 있습니다.
 - 재난 문자: 재난 문자 수신 및 경보를 설정할 수 있습니다.

알아두기

- 제품에 따라 일부 기능이 동작하지 않거나 사용에 제한이 있을 수 있습니다.

비밀번호 및 계정

Google 및 다른 계정을 추가하거나 관리할 수 있으며, 특정 앱이나 사용자 정보를 자동으로 동기화할 수 있도록 설정할 수 있습니다.

디지털 웰빙 및 자녀 보호 기능

제품의 사용 시간 확인 및 앱 별로 타이머를 설정할 수 있습니다. 또한 취침 모드, 집중 모드 등으로 사용 시간을 관리할 수 있습니다.

Google

Google 설정을 사용하여 Google 앱과 계정 설정을 관리할 수 있습니다.

시스템

언어 및 입력

제품에 적용할 언어 및 입력 방법을 설정할 수 있습니다.

- 1 앱스 화면에서 [설정]을 누르세요.
- 2 [언어 및 입력]을 눌러 원하는 기능을 선택하여 설정하세요.
 - 언어: 제품에 적용할 언어를 설정할 수 있습니다.
 - 터치 키보드: 터치 키보드 및 음성 입력 설정을 변경할 수 있습니다.
 - 물리적 키보드: 외부 키보드 장치의 설정을 변경할 수 있습니다.
 - 맞춤법 검사기: 맞춤법 검사기 사용 여부와 설정을 변경할 수 있습니다.
 - 개인 사전: 맞춤법 검사기 등에 사용되는 개인 단어를 추가할 수 있습니다.
 - 포인터 속도: 마우스 또는 트랙패드의 포인터 이동 속도를 조절할 수 있습니다.
 - TTS 출력: 텍스트를 음성으로 읽어주는 TTS 기능을 설정할 수 있습니다.

동작

빠르게 카메라 열기, 시스템 탐색 방법을 설정할 수 있습니다.

날짜 및 시간

제품에 적용할 날짜와 시간을 설정할 수 있습니다.

백업

Google 계정에 백업 여부를 설정하거나 변경할 수 있습니다.

시스템 업데이트

최신 소프트웨어 업데이트를 확인하고 설치할 수 있습니다.

여러 사용자

멀티 사용자 사용 여부와 사용자 및 프로필 등을 설정할 수 있습니다.

옵션 초기화

제품의 네트워크 설정, 앱 설정 및 제품 초기화를 할 수 있습니다.

- Wi-Fi, 블루투스 초기화: 네트워크 관련 설정을 초기화 합니다.
- 앱 환경설정 초기화: 앱에 적용된 설정을 초기화할 수 있습니다. 앱에 저장된 데이터는 삭제되지 않습니다.
- 모든 데이터 삭제(초기화): 모든 설정 값과 데이터를 삭제하고 초기화합니다.



알아두기

- 모든 데이터 삭제(초기화)를 실행하면 모든 사용자 정보와 데이터가 삭제되며, 초기화된 데이터는 복원할 수 없습니다.

하드웨어 피드백

성능 개선을 위해 제품 정보를 Qualcomm에 보내도록 설정할 수 있습니다.

태블릿 정보

제품의 이름과 상태, 소프트웨어 정보, 법률 정보 등을 볼 수 있습니다.

부록

고객 안내

규제 및 안전정보

- 본 제품의 인증정보는 전자적 표시 방법으로 구현되어 있습니다.
- 정보를 확인하려면 [설정] 앱을 실행하여 [태블릿 정보] > [규제 정보]를 선택하세요.

제품 주의 사항

- 메모리 카드를 잘못 끼울 경우 제품이 정상적으로 켜지지 않거나 손상될 수 있으니 주의하세요.
- 장시간 고정된 화면으로 제품을 사용하면 화면 잔상 또는 얼룩이 발생할 수 있습니다. 오랜 시간 제품을 사용하지 않을 경우 화면을 꺼두세요.
- 제품이 물이나 액체 등에 젖거나 잠기면 제품 내부에 부착된 침수 라벨의 색상이 바뀝니다. 이 경우 당사에서 보증하는 무료 서비스 혜택을 받을 수 없습니다.

배터리 사용 시간에 대한 안내

- 배터리는 소모품이므로 구입했을 때보다 시간이 지날수록 점차 배터리 사용 시간이 짧아집니다.
- 사용 시간이 구입 시보다 반 이상으로 떨어지면 가까운 LG전자 서비스 센터에서 새 배터리로 교체하세요. (보증 기간 이후 유상 교체)

강화유리 재질에 대한 안내

- 본 제품의 강화유리 재질은 영구적인 것이 아니며 일반적으로 시간이 지나면서 미세한 마모가 발생할 수 있습니다.
 - 제품을 단단한 표면 위에 떨어뜨리거나 강한 충격을 주면 강화유리가 손상될 수 있습니다. 이 경우 즉시 제품 사용을 중지하고 가까운 LG전자 서비스 센터에 방문하여 수리하세요.
 - 시중에서 판매하는 보호 케이스를 사용하는 것도 제품을 보호하는 방법 중 하나가 될 수 있습니다. 단, 이러한 보호 케이스는 LG전자에서 제공하는 보증 서비스를 제공하지 않으며 안전성을 보장하지 않습니다.

오픈 안내 정보

- 본 제품에 탑재된 GPL, LGPL, MPL 및 그 외 소스 코드 공개 의무가 있는 오픈소스 라이선스로 배포된 소스 코드를 얻거나 오픈소스의 라이선스 내용, 저작권 고지 등을 확인하려면 <https://opensource.lge.com>을 방문하세요. 또한 소비자가 opensource@lge.com으로 e-mail을 보내 본 제품에 탑재된 소프트웨어의 오픈 소스 코드를 요청할 경우, LG전자는 매체 비용과 운반비 등 제공에 필요한 최소한의 비용을 받고 저장 매체에 담아 제공합니다. 이 제안은 본 제품을 판매한 후 3년 동안 이 정보를 받은 모든 사람에게 유효합니다.

폐가전제품 처리 절차

- 신제품을 구입했을 때
LG전자 제품 판매점에서 신제품을 구입한 경우, 신제품 배달 시 기존 제품을 무상으로 처리해 드립니다.
- 사용하던 제품을 버릴 때
가전제품을 버릴 때는 관할 행정복지센터 또는 폐가전제품 배출예약시스템으로 연락하여 폐기해야 합니다.
(전화번호: 1599-0903, 인터넷 주소: <http://www.15990903.or.kr>)

전자파 흡수율(SAR:Specific Absorption Rate)

- 본 제품은 전자파 인체보호기준을 만족하는 제품으로 제품이 사용하는 모든 송신 주파수 대역의 최고 전력 레벨에서 국부 노출에 대한 전자파 흡수율 기준 1.6 [W/kg]을 초과하지 않도록 설계 및 생산되고 있으며 시중에 유통되기 전에 상기의 기준에 대한 적합성을 인증받은 제품입니다. 본 제품의 전자파 흡수율은 LG전자 홈페이지(<http://www.lge.co.kr>) 해당 제품의 상세 페이지에서 확인할 수 있습니다.

사용 중 신체와의 거리

- 본 제품은 제품이 몸통과 1.5 cm 떨어진 상태에서 일반적인 사용법으로 시험되었습니다. 자사 정품 액세서리 이외에 타사 액세서리 사용시 전자파 인체보호기준을 만족하지 않을 수 있습니다.

MPEG-4

- 본 제품은 MPEG-4 시스템 기준에 따라 특허권 사용 허가를 받았으며, 다음과 같은 상황에서만 사용이 가능합니다. 대가성 없고, 비상업적이며 개인적인 사용에 국한되거나 암호화된 데이터나 정보 사용 시 다음의 상황에서는 별도의 허가나 로열티 지불이 필요합니다.
 - 별도의 공간에 데이터 저장/복제 또는 영구적 저장이나 영구적으로 사용하려는 타 사용자에게로 전송 시 별도의 허가는 MPEG LA에서 제공 받을 수 있으며, 자세한 사항은 홈페이지(www.mpegla.com)를 참조하시기 바랍니다.

정품(액세서리 및 소프트웨어) 사용

- 정품이 아닌 액세서리 사용 시 수명이 단축하거나 폭발할 위험이 있으며, 불법 소프트웨어 사용 시 제품에 손상을 줄 수 있습니다. 이 경우 무료 서비스를 받을 수 없으니 주의하시기 바랍니다.
 - 정품이 아닌 액세서리와 연결, 임의 개조로 인한 고장
 - 정품이 아닌 소프트웨어의 설치, 임의 변경으로 인한 고장

상표권

- Covered by one or more claims of the patents listed at patentlist.hevcadvance.com.
본 제품은 patentlist.hevcadvance.com. 에 등재된 한 개 이상의 특허 청구항을 적용하고 있습니다.



- Google, Android, Android 마켓, Gmail, Google Calendar, Google Maps, Duo, YouTube, Google Play Store는 Google Inc.의 상표 또는 등록상표입니다.
- USB Type-C™ 및 USB-C™는 USB Implementers forum의 트레이드 마크입니다.
- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.
- Wi-Fi®는 Wi-Fi Alliance Corporation의 등록상표입니다.
- Copyright © 2022 LG Electronics Inc. All Rights Reserved.
사용설명서의 내용은 LG전자의 저작권을 준수합니다. 사전 동의 없이 사용설명서를 무단 사용하거나 발췌 또는 배포할 수 없습니다.

파일 보내기 장치 인식에 대한 주의 사항

- Windows 운영체제에서의 파일 보내기를 사용하기 위해서는 Windows Media Player 10 이상 (11 권장) 설치가 필요합니다.

제품 사용 온도

- 0 °C ~ 35 °C의 적정 온도에서 사용하세요.
적정 온도 범위를 벗어나는 경우 제품의 효율적인 사용을 위해 기능과 성능에 제약이 있을 수 있으며 비정상적인 종료, 손상 및 배터리 수명이 단축될 수 있습니다.

저온에서의 동작 제한

- 제품이 장시간 낮은 온도에 노출되어 배터리 온도가 일정 수준 이하로 낮아지는 경우, 갑작스러운 전원 꺼짐 현상을 방지하기 위하여 실행 중인 앱이나 기능이 일시적으로 동작 제한되어 속도가 느려질 수 있습니다.

메모리 카드(별매품)

- 메모리 카드는 별도 구매품으로서, 제조사 사양에 따라 본 제품과 호환이 되지 않을 수 있습니다.
- 메모리 카드 불량, 고장 및 수리 문의는 메모리 카드 제조사에 문의하세요.

전자파 영향을 줄이는 방법

- 어린이는 가능한 제품을 사용하지 않는 것이 좋습니다.
- 제품 사용 시 스테레오 이어 마이크를 사용하세요.
- 잠 잘 때는 제품을 머리맡에 두지 마세요.
- 시중에 판매되고 있는 제품 전자파 차단 제품을 믿지 마세요.

제품 애프터서비스

- 제품 사용 중 오류 및 불량으로 인해 애프터서비스를 받는 경우의 자사 서비스 대응력 향상을 위해, 제품 내부에는 오류, 상태 로그 정보가 저장됩니다. 해당 로그에 개인 정보는 포함되어 있지 않으며 LG전자 공식 서비스 센터를 고객이 직접 방문하여 수리 의뢰하는 경우에만 추출/수집되어 서비스 대응력 향상 및 품질 개선의 목적에 사용됩니다.

모바일 파밍(Mobile Pharming) 관련 주의

악성 앱에 감염된 제품에 가짜 인터넷 뱅킹 앱을 설치하여 사용자에게 금융 정보를 입력하도록 유도한 후 금융 정보를 빼내는 전자금융 사기 수법으로 피해를 입을 수 있습니다.

피해를 막기 위해서는 반드시 아래 예방 수칙을 지켜주세요.

- 뱅킹 앱에서 절대 전체 보안카드 번호를 입력 않기
- 보안카드 사진을 제품에 저장해 두지 않기
- OTP(일회성 비밀번호 생성기), 보안 토큰(비밀번호 복사 방지) 등을 사용하고, 공인인증서 PC 지정 등의 전자금융 사기 예방서비스 사용
- 제품에 2개 이상의 백신 프로그램을 설치해 두고, 최신 버전으로 실시간 감시 상태 유지
- 파밍 등이 의심될 때에는 신속히 경찰청 112 센터나 금융기관 콜 센터를 통해 지급 정지 요청

스파이 앱 관련 주의

제품 사용자의 위치 정보 등을 실시간 수집하고, 음성 녹음을 통한 도·감청, 데이터 삭제 및 접근 제한까지 할 수 있는 태블릿 앱으로, 피해를 입을 수 있습니다.

피해를 막기 위해서는 반드시 아래 예방 수칙을 지켜주세요.

- 패턴이나 비밀번호와 같은 보안 잠금 설정 기능을 이용하고 정기적으로 변경
- 제품에 알 수 없는 출처의 앱을 설치하지 않도록 설정하여 악성 스파이 앱이 자동으로 설치되지 않도록 하기
- 제품에 2개 이상의 백신 프로그램을 설치해 두고, 최신 버전으로 실시간 감시 상태 유지
- 사용자가 임의로 제조사나 운영 체제 소프트웨어를 수정하지 않기

자주 물어보는 질문 살펴보기

제품에서 발열이 심한 경우 해결 방법을 알려주세요.

제품 사용 중 발열이 발생하는 경우

아래의 경우 배터리 소모량이 많아져 제품에서 열이 발생할 수 있습니다.

- 제품 구입 후 초기 설정을 진행하거나, 제품의 데이터를 백업하는 경우
- 동시에 여러 가지 앱을 사용하는 경우
 - 백그라운드에 실행 중인 앱이 많은 경우
 - 동영상 촬영 중에 대용량 파일을 다운로드 받는 경우
- 전력 소비가 높은 고사양의 기능을 장시간 사용하는 경우
 - 장시간 동영상을 촬영하거나 인터넷으로 동영상 스트리밍을 시청하는 경우
 - 장시간 고사양의 게임을 하는 경우
 - 장시간 화면 밝기를 최대한으로 사용하는 경우
- 데이터 사용량이 많은 경우
 - 동시에 여러 계정의 데이터 동기화가 진행되는 경우
- 그 외의 경우
 - 제품의 충전기나 외부 커넥터 연결부에 이물이 묻어 있거나 손상된 상태로 충전을 하는 경우

✓ **알아두기**

- 위의 예시들은 제품의 기능 및 앱에 따라 해당하지 않을 수 있습니다.

제품 충전 중 발열이 발생하는 경우

- 충전 중에는 제품과 충전기에서 열이 발생할 수 있습니다. 배터리의 온도가 일정 수준 이상 높아지는 경우 안전을 위해 충전이 중지 될 수 있습니다.
 - 충전 중인 제품과 충전기를 분리하고 실행 중인 앱을 종료하세요. 제품을 식힌 후에 충전 또는 앱을 실행하세요.
 - 제품 하단의 충전 연결부에 발열이 심한 경우 충전을 중단하시고, 가까운 서비스 센터를 방문하세요.

제품에서 발열이 발생하는 경우의 해결 방법

- 실행 중인 앱이나 기능을 종료한 후 제품 사용을 잠시 중단하세요.
- 소프트웨어 업데이트를 통해 최신 상태로 유지하세요.
- Wi-Fi, Bluetooth 등의 기능들을 사용하지 않을 때는 꺼두세요.
- 사용하지 않는 앱은 실행을 종료하세요.
- 최대 밝기로 사용 중인 경우 화면 밝기를 낮추어 사용하세요.
- 제품이 심하게 뜨겁거나 장시간 발열이 지속되는 경우 제품 사용을 잠시 중단하세요. 온도가 내려가지 않으면 LG전자 서비스 센터에 문의하세요.

제품에서 발열이 발생하는 경우의 사용 제한

제품 사용 중이나 충전 중에 발열이 발생하는 경우, 열을 낮추기 위해 제품의 동작제한 또는 실행 중 앱이 종료되거나 전원이 꺼질 수 있습니다.

이는 고객 안전을 위한 정상동작이며, 해당 동작을 지원하는 모델에만 해당합니다.

- 제품의 온도가 일정 수준 이상 높아지는 경우, 발열에 대한 팝업 메시지가 나타날 수 있습니다.
 - 장시간 고사양의 게임을 하거나 동영상 촬영, 대용량 파일을 업로드 하는 경우 제품에서 발열이 심하거나 오래 지속될 경우에는 자동 전원 종료를 알리는 메시지가 나타날 수 있습니다. 이 경우 제품의 전원을 끄거나 사용 중인 기능을 종료하고, 제품의 온도가 내려갈 때까지 기다렸다가 다시 사용하세요.
- 제품의 열을 낮추기 위해 화면 밝기와 동작 속도가 제한될 수 있으며, 실행 중인 기능이나 앱의 속도가 느려지거나 종료될 수 있습니다. 또한 충전 중인 경우 충전이 중지될 수 있습니다.

PC에 저장된 데이터 파일을 제품에 저장하는 방법을 알려주세요.

- 1 PC와 제품을 USB 케이블로 연결하세요.
- 2 제품의 상태 표시줄을 아래로 드래그한 후 [이 기기를 USB로 충전 중]을 누르세요.
- 3 USB 사용 용도에서 [파일 전송]을 선택하세요.
- 4 PC에 저장된 음악, 사진, 동영상 등의 데이터 파일을 태블릿의 내장 메모리 또는 메모리 카드에 저장하세요.



주의

- 음악이나 동영상 파일은 반드시 저작권을 준수하시기 바랍니다. 손상되거나 잘못된 형식의 파일을 사용하면 기기 고장을 일으킬 수 있으므로 주의하세요.

앱 설치 후 제품에서 오류가 발생하는데 원인을 알려주세요.

다운로드한 앱으로 인하여 문제가 될 수 있습니다. 그중 무료 앱(별점 만족도 낮은 것), 블랙마켓, My Market 등 검증되지 않은 앱으로 인하여 태블릿 오동작 및 멈추는 현상이 발생할 수 있습니다.

- 태블릿의 대표적인 오류 현상
 - 예상치 않은 팝업 오류 발생의 원인은 자바 프로그램 오류로 인한 것이며, 버그 발생은 전적으로 앱 문제로서 개선이 가능합니다. Google을 검색하면 앱에 대한 정보를 알 수 있습니다.
 - 앱 실행 시 계속 튕겨져 나오거나 오동작 및 멈춤으로 사용이 어려울 경우에는 제품이 다시 시작될 때까지 [볼륨 하단] 버튼과 [잠금/전원] 버튼을 길게 누르세요. 그리고 특정 앱의 문제일 수 있으므로 그 앱을 삭제해 보세요. (앱 다운로드 시 개인 정보 등의 권한이 허용되므로 개인 데이터가 유출될 수 있습니다.) 그래도 변함이 없다면 LG전자 고객 상담실 (T.1544-7777)로 문의 후 가까운 LG전자 서비스 센터에서 태블릿을 점검 받으세요.

대기 중 전원이 꺼지는 원인을 알려주세요.

- 특정 위젯 구동 중 오류 발생 및 앱을 동시에 너무 많이(20~30개) 설치하는 경우 Lockup 및 전원 꺼짐 증상의 원인이 될 수 있습니다. (앱 다운로드 시 별점 높은 것 권유)
- 배터리의 온도가 60 °C 이상일 경우 전원 꺼짐 증상의 원인이 될 수 있습니다.
- 동작하는 프로세서들이 일정 시간 응답이 없으면 폰을 원활하게 구동하기 위해 전원을 리셋하는 경우가 있습니다. 또한 블랙마켓, 다운로드한 앱, 별점이 낮은 앱 사용 시 전원이 꺼지는 경우가 발생할 수 있습니다.

- 전원이 꺼지는 증상이 지속되는 경우, [잠금/전원] 버튼을 누르거나 제품을 껐다가 다시 켜보세요. 그리고 특정 앱의 문제일 수 있으므로 그 앱을 삭제해 보세요. (앱 다운로드 시 개인 정보 등의 권한이 허용되므로 개인 데이터가 유출될 수 있습니다.)
그래도 변함이 없다면 LG전자 고객 상담실(T.1544-7777)로 문의 후 가까운 LG전자 서비스 센터에서 태블릿을 점검 받으세요.

앱 오동작으로 인해 제품이 켜지지 않거나, 앱이 삭제되지 않을 경우 해결 방법을 알려주세요.

Play 스토어에서 앱을 다운로드하여 사용할 경우, 설치된 앱이 오동작할 수 있습니다. 이로 인해 제품이 켜지지 않거나 앱이 삭제되지 않을 경우에는 안전 모드로 진입하세요.

안전 모드 진입 방법

- 1 전원이 켜진 상태에서 [잠금/전원] 버튼을 길게 누르세요.
- 2 [전원 끄기]를 길게 누른 후 [확인]을 선택하여 안전 모드로 진입하세요.
 - 안전 모드로 진입한 후, 앱스 화면에서 [설정] > [앱]에서 오동작하는 앱을 관리할 수 있습니다.

✓ **알아두기**

- 안전 모드로 진입한 경우 화면 하단에 안전 모드라고 표시됩니다.
- 안전 모드에서 나오려면 전원을 종료한 후 다시 켜세요.

제품 루팅에 대해 알려주세요.

제조사나 운영체제에서 지원하지 않는 기능을 추가하거나 삭제하려는 목적으로 사용자가 운영체제를 해킹하여 관리자 권한을 얻는 행위입니다.

루팅의 주요 부작용

- 태블릿 오작동, 리셋, 멈춤, 전원 꺼짐, 발열, 배터리 소모 등

✓ **알아두기**

- 루팅으로 인한 서비스 센터 방문 시, 무료 서비스를 받으실 수 없습니다.



이 제품은 대한민국 전용입니다. 전압, 주파수, 전원이 다른 해외에서는 사용할 수 없습니다.

LG전자 서비스 센터 대표 전화번호

사용 불편 및 고장 접수는 (전국 어디서나)

1544-7777

- 전화를 하기 전
제품 모델명과 고장 상태, 전화번호, 주소를 정확히 알고 있으면 더욱 빠르게 서비스를 받을 수 있습니다.
- 전화가 연결되었을 때
ARS 안내에 따라 제품의 상태를 정확하게 선택하면 전문 상담원에게 최고의 서비스를 받을 수 있습니다.

제안하고 싶은 내용이나 불만 사항을 접수할 때는 고객 상담실(080-023-7777)로 문의하세요.

편리한 제품 사용을 위한 안내

www.lge.com

제품 사용 시 불편사항을 자가 진단을 통해 원인 파악과 해결이 가능하며, 고객센터와 통화 없이 직접 서비스를 접수할 수 있습니다.

앱 다운로드로 편리하게 LG전자의 혜택을 누리 보세요. 아래 QR을 스캔하시면 쉽게 다운로드할 수 있습니다.



고객을 위해 우수한 품질의 서비스를 제공하는 기업에게 사단법인 한국서비스진흥협회에서 서비스 품질을 인증하는 마크로 LG전자는 서비스 품질 우수기업입니다.



OWNER'S MANUAL

TABLET

For the safe and convenient use of the product, please read this owner's manual before use.

10A30Q Series



For details on how to use the product, visit the LG Electronics website. Scan the QR code with your smart device for faster access.

www.lge.co.kr

Before Use 1

Product Use.....	1
User's Guide	1

Important Safety Precautions 2

Basic Features 5

Basic Components.....	5
Using Stylus Pen.....	7
Turning on/off the Power.....	11
Inserting Memory Card.....	12
Removing Memory Card.....	13
Formatting Memory Card.....	13
Using Battery.....	14
Using Touchscreen.....	15
Using Home Screen.....	17
Notification Window	19
Screen Rotation.....	21
Moving App Icons and Folders.....	21
Using the Lock Screen.....	22
Multi-tasking.....	23
Screen Capture.....	24
Entering Text.....	24
Wireless Screen Transfer.....	25
Sharing Contents.....	26

Apps 27

Installing/Deleting Apps.....	27
Shortcuts to Apps.....	27
Camera Features	28
Google Photos.....	30
Calendar.....	32
Internet.....	32
Contact.....	33
Clock/Alarm.....	34
Calculator.....	34
Sound Recorder.....	34

Managing Tablet.....	35
Data Relocation.....	35
Google.....	36

Settings..... 38

Network & internet.....	38
Connected devices.....	41
Apps.....	41
Notifications.....	41
Battery.....	41
Storage.....	41
Sound	42
Display	42
Wallpaper.....	42
Extensions.....	42
Accessibility.....	43
Security.....	43
Privacy	43
Location.....	44
Safety & emergency.....	44
Password & accounts.....	44
Digital Wellbeing & Parental controls.....	44
Google.....	44
System.....	44
About tablet.....	45

Appendix 46

Customer Guide	46
Frequently Asked Questions.....	50
Product Specifications and Properties.....	53

Before Use

Product Use

- The apps and services provided on the device are subject to change or discontinuation without prior notice according to the circumstances.
- Make sure to back up the data saved in the device to store them separately in a storage device or removable media.
- Features such as writing to external memory may not work properly on some of the downloaded apps.
This is due to a new security policy of Google. In this case, use an app that supports the writing operation or contact the app manufacturer.
- Only use the genuine accessories provided as the basic components. Using a non-authorized product or software may cause device malfunctioning or damage. In this case, free service may not be provided.
- This product uses an embedded battery.
Do not remove the battery cover or try to pull out or replace the battery.
- Do not use the charging terminal, external connector, charging cable or gender or charge the device in a moist or wet environment. Doing so may cause device malfunctioning or damage or injury due to electric shock, burn, fire, overheating, or explosion. If there is any moisture on the device or components, immediately stop using or charging the device and completely remove the moisture.

User's Guide

- The contents of the User's Guide may differ depending on the software version; app update; user's environment, country or region; and the manufacturer's service policy.
- You can download detailed guides on this product and different product categories on the official website of LG Electronics (<http://www.lge.co.kr>). Visit the LG Electronics website on a PC, tablet, or mobile device connected to the network.

Important Safety Precautions

Check the following 'Important Safety Precautions' to prevent unexpected danger or damage in advance.

'Important Safety Precautions' is divided into 'Warning' and 'Caution.'

 **Warning:** Noncompliance with the instruction may cause serious injury or death.

 **Caution:** Noncompliance with the instruction may cause minor damage to the body or the machine.

Precautions in Handling Product

 **Warning**

- Placing magnetic objects such as credit card, phone card, bankbook, and passenger ticket near the device or using a magnetic car mount may damage the product information or cause malfunctioning.
- Part of the device is made of reinforced glass. Dropping the device on a hard surface or exposing it to a strong impact may damage the reinforced glass. In this case, stop using the device immediately and visit a nearby LG Electronics Service Center to receive repair.
- Do not put the device or the battery near a car window or on a blanket, electric blanket, heater or carpet under direct sunlight for a prolonged period of time. Doing so may cause exterior deformation, breakdown, or explosion.
- Do not leave the device in a place with high temperature and high humidity like sauna or other humid places such as under a blanket, swimming pool, and bathroom. High temperature or humidity may damage the device.
- When the device is wet with water, do not try to dry it by using a fan heater or dryer or putting it in a microwave, rice cooker, or stove. Doing so may cause explosion, deformation or breakdown of the device.

 **Caution**

- Only use the genuine accessories provided by LG Electronics. Using a non-genuine product may cause lowered performance or malfunctioning. LG Electronics may not provide service for such issues.
- If you use a case that is not a genuine LG Electronics product, you may experience difficulties in using the buttons, sensors, or lens.

Precautions in Using Battery

 **Warning**

- Do not remove or replace the battery on your own. The battery must only be replaced by a service provider authorized by LG Electronics.
- If the battery needs replacement, take the device to a nearby official LG Electronics Service Center to get help.
- The battery can pose danger and cause injury if handled inappropriately.

 **Caution**

- Only use the genuine battery and charging accessories authorized by LG Electronics.
- If you have not used the battery for a long time, charge it fully before using it again.
- If you are visiting the Service Center for a battery issue, make sure to take the charger with you.

Precautions Related to Children and Pets

 **Warning**

- Keep the device and the components away from children and pets. Otherwise, electric shock, exposure to electromagnetic waves, fire, or explosion may occur.
- Be cautious that children or pets do not put the device or components in the mouth or swallow them. Otherwise, suffocation, fire, or explosion may occur.
- Be cautious that pets do not bite the device. There is a risk of battery combustion, fire, or explosion.

Precautions in Using Product

 **Warning**

- Be cautious using the device if you are driving, walking, or on the move. Failure to do so may lead to violation of traffic rules or road safety rules and even death.
- Do not touch the device or charger with a wet hand while charging the device. Doing so may cause electric shock or burn.
- Do not use the device while charging it in a humid place such as bathroom or swimming pool. Otherwise, an electric shock may occur.
- Do not disassemble or damage the device, battery or components or use them when they are damaged. If there is a problem, contact the Customer Center.
- Be cautious not to let any part of your body contact the device, battery, or charger for a prolonged period of time. Prolonged contact may cause low-temperature burn.
- When plugging the power cable into a power outlet, make sure to fully insert the plug. Loose plug may cause unstable connection and lead to heat generation or fire.
- Be cautious not to let foreign substances into the charging terminal or the external connectors. Failure to do so may lead to heat generation or fire.

 **Caution**

- Do not connect the device to other devices by any other method than those specified in the User's Guide.
- Do not place a heavy object or sit on the device. Otherwise, the product may get damaged.
- Do not cause strong impact on the device by dropping it or pressing or bending it with force or expose the device to possible impact by putting it into a pants pocket or wearing it on the waist. There is a risk of injury or device damage.
- If the LCD is broken, handle the device cautiously not to hurt your hand or other body parts and immediately contact the Customer Center. Failure to do so may lead to loss of sight or skin damage.
- Do not use the device for a prolonged period of time with the earphones or headset volume turned up too high or with the device put right on an ear. Doing so may lead to hearing impairment or accident.
- If the charging terminal, external connector, charging cable, or gender comes in contact with a liquid, visit the LG Electronics Service Center to check the device for safety before using it again.
- Before device repair or upgrade, make sure to back up important data saved in the device into a PC or removable media or write them down separately. There is a risk that data or settings saved in the device may get deleted. Please be cautious as LG Electronics is not responsible for any loss of data.
- Using the device on the same screen for a prolonged period of time may lead to ghosting or smudges. If you are not using the device for a long time, make sure to turn off the screen.

Precautions in Using Memory Card (sold separately)

 **Caution**

- Check the direction when inserting the memory card. Inserting the memory card in the wrong direction may damage the card or cause malfunctioning.

Basic Features

Basic Components

Below are the basic components provided when you purchase the product.

The components may differ by model.

- Tablet main body
- Simple Owner's Manual
- Charger
- Pin
- USB cable
- Stylus Pen
- Book cover



Caution

- If you use a case that is not a genuine LG Electronics product, you may experience difficulties in using the buttons, sensors, or lens.





NOTE

- If any of the basic components is missing, contact the place of purchase.
- If you would like to purchase more of the basic components, contact the LG Electronics Customer Center (T.1544-7777) or visit the Consumables Shop in the LG Electronics website (<http://www.lge.co.kr>).
- If you would like to purchase items other than the basic components, contact the LG Electronics Customer Center (T.1544-7777) to find out where you can buy them.
- Some of the basic components may be changed without prior notice according to the local circumstances. The product appearance and specifications are subject to change without prior notice for performance improvement.

Product Tour

English

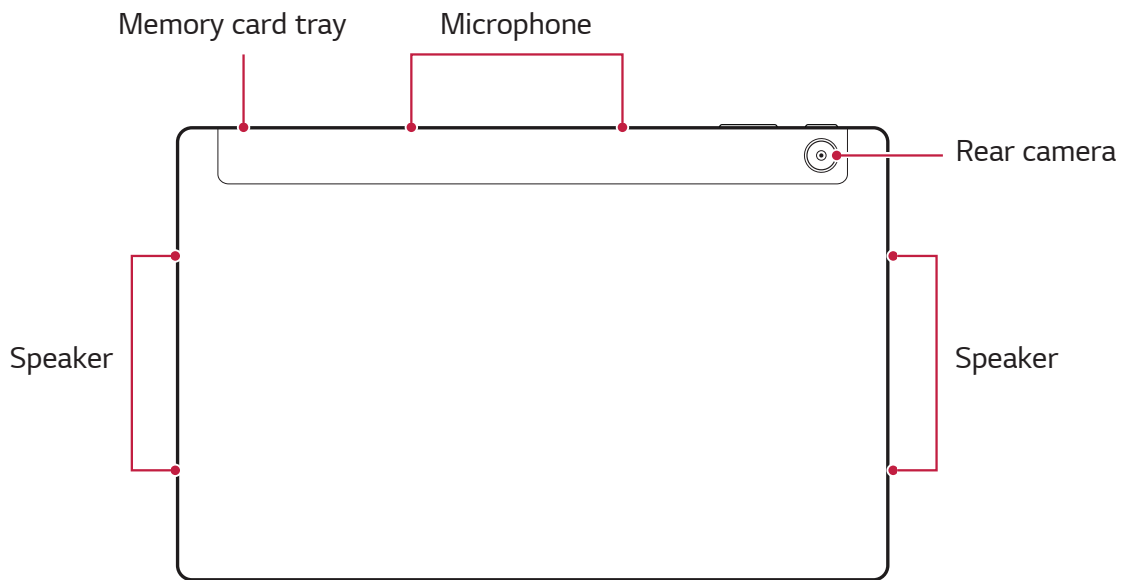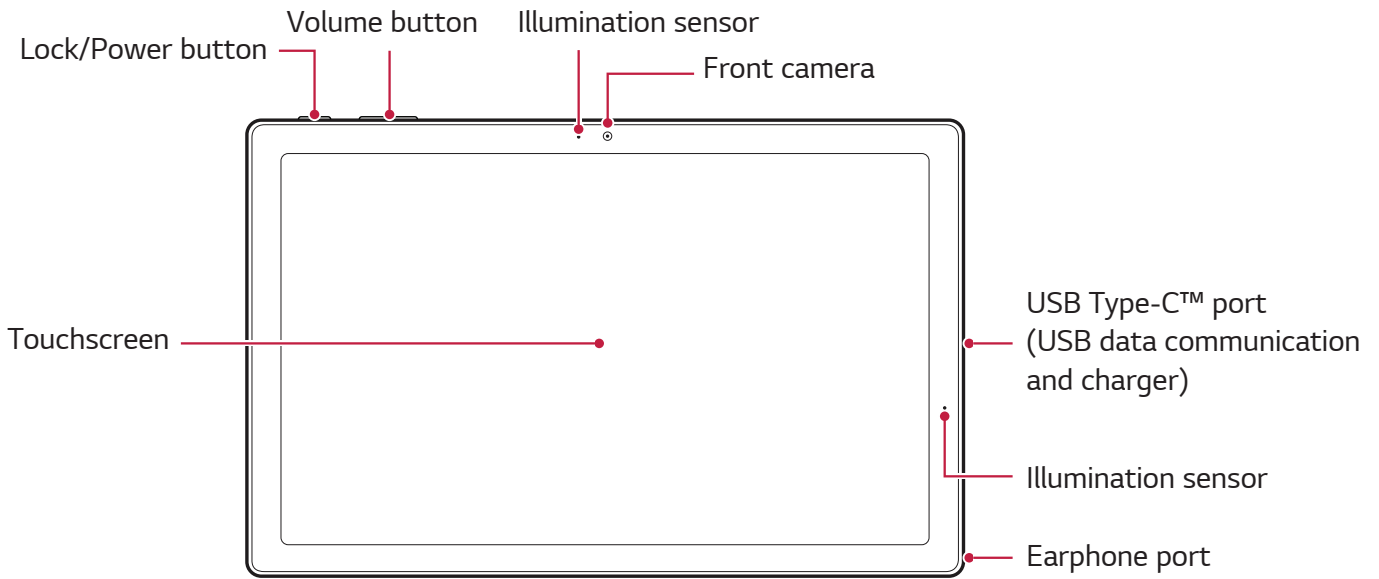

- Illumination sensor
 - Allows you to analyze the amount of ambient light when automatic brightness adjustment is enabled.
- Volume Button
 - Allows you to adjust the volume by situation such as a notification sound.
- Lock/Power Button
 - If you press briefly, you can turn on or off the screen.
 - If you press and hold, you can turn on the device.

NOTE

- Some of the features may not be available depending on the product specifications for different regions.

Using Stylus Pen

The Stylus Pen for 10A30Q gives you the ability to make fine touch inputs that are difficult with fingers.

Parts Names



- 1 Pen Tip
- 2 Left Button
 - Use to select or execute programs.
- 3 Right Button
 - Use to select or execute programs.
- 4 Pen Cap

Basic Usage


The Stylus Pen buttons may serve different functions in different programs.

Press “Go to pen buttons” to select the app and functions for the buttons.


✓ NOTE

- Do not apply excessive force on the Stylus Pen. Doing so may cause the pen tip or the pen to fail.
- The Stylus Pen automatically enters standby mode if the pen is not used for more than 10 minutes or the tip is pressed for more than 4 minutes.
- To leave the standby mode, simply touch the screen with the Stylus Pen or click the left or right button on the pen.

- 1 Touching Once: Touch the screen once with the Stylus Pen for selection or execution.

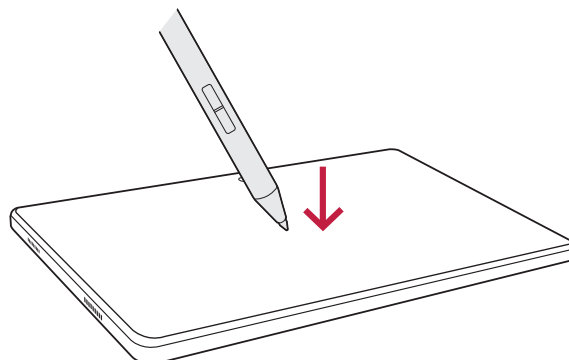


- 2 Drag: Move the Stylus Pen with its tip pressed on the screen to bring the same effect as dragging the mouse.

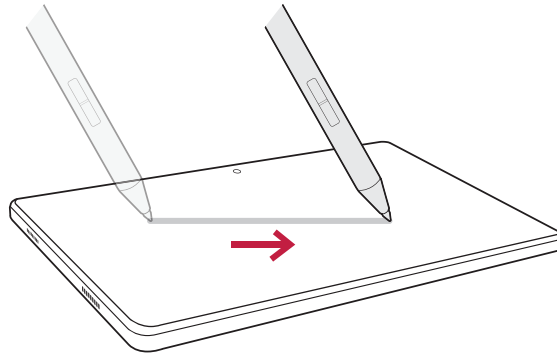

Storing Stylus Pen

Put the Stylus Pen into the pen holder on the book cover to carry or store it.

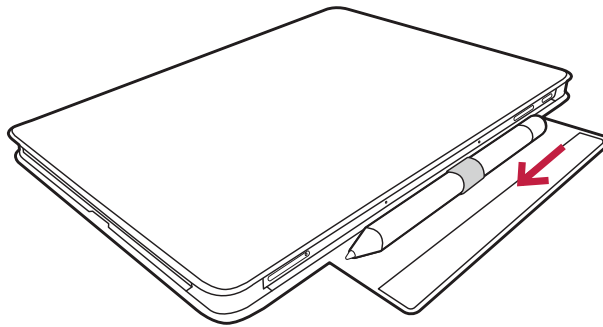

Inserting and Replacing Battery

1.5V AAAA batteries are included in the product purchase. Insert them in the following way.

Warning

- If the battery is replaced with an incorrect type, there is a risk of fire or explosion.


Caution

- If you use a non-standard battery or a rechargeable battery, the pen may not work.
- Keep the battery removed if you are not using the pen for a long time. Otherwise, the battery may leak, causing the product to fail.
- Do not use excessive force to insert the battery or to remove or fit the pen cap. Doing so may damage the product.
- Storing or carrying the pen with the tip pressed consumes the battery.
- Be careful not to cause an excessive impact on the product or drop it. The product may fail.


NOTE

- If the battery power is low, the pen operation may be interrupted, or the pen may not be recognized.
- If you have not replaced the battery for a long time, replace the battery.
- AAAA batteries are available from online shopping malls.

- 1 To separate the pen cap, position the pen horizontally, hold the pen cap with your right hand, and turn it downward.

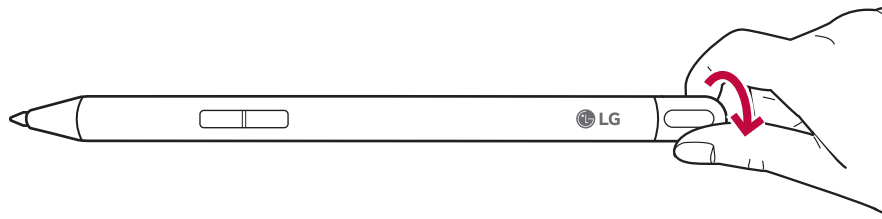

- 2 Insert the battery in the correct +/- direction, and turn the pen cap upward to close it.

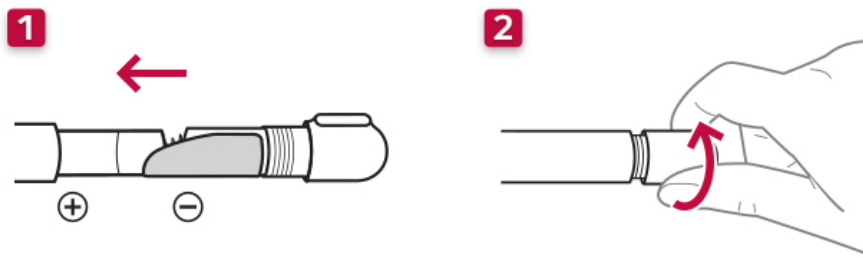

- When replacing the battery, remove the existing one first and insert the new one as described above.

 **Caution**

- When removing or fitting the pen cap, take care not to introduce foreign substances into the spiral groove of the cap.
- Be careful not to fit the pen cap with the pen and the pen cap misaligned. The product may fail.
- When inserting the battery, make sure that the label attached to the pen cap does not hide the battery or spring.




Replacing the Pen Tip

If the nib of the pen tip is worn out, replace the pen tip in the following way.

NOTE

- A pen tip is a consumable, and if necessary, it should be purchased separately for replacement.
- To purchase a pen tip, contact the LG Electronics Service Center.


1 Use a tweezer to hold the pen tip and pull it outward to remove it from the Stylus Pen.

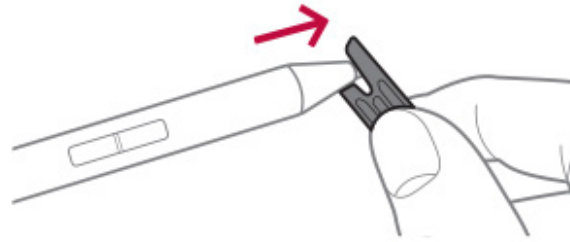

2 Insert the new pen tip into the Stylus Pen.

Caution

- Do not insert the replacement pen tip with excessive force or in the opposite direction. The product may fail.

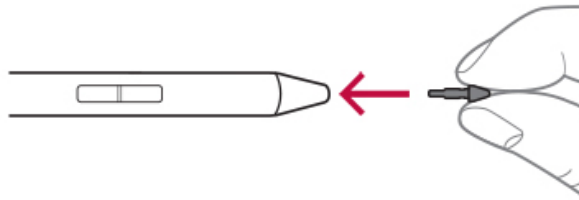

Turning on/off the Power

Turning on the System

While the power is off, press and hold the [Lock/Power] button.

 NOTE

- When you turn on the power for the first time, it may take a while to boot because the device needs to make initial setup.

Turning off the System

Press and hold the [Lock/Power] button and select [Power off].

Restarting the Device

If the device malfunctions or is unresponsive, press the [Volume down] and [Lock/Power] buttons at the same time to restart the device.

Power Menu


Press and hold the [Lock/Power] button and run the desired option.

- Power off: The device is turned off.
- Restart: The device turns off and back on again.


Inserting Memory Card

You can insert the separately purchased memory card in the following way.

- 1 Use the pin to press into the hole on the memory card tray, and pull it out completely with a hand to eject the tray.

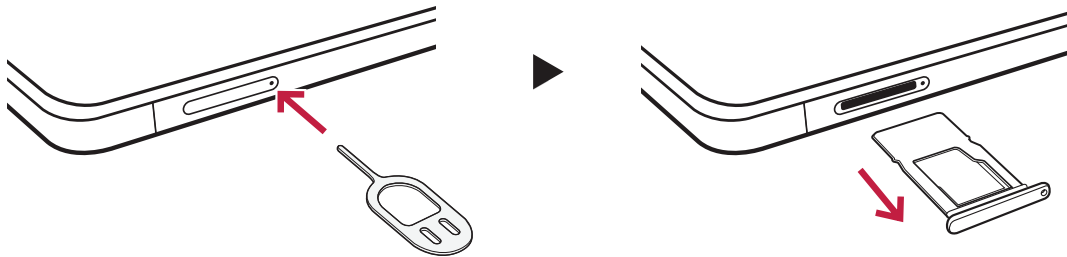

- 2 Put the memory card on the memory card tray and insert the tray into the device in the direction shown below.

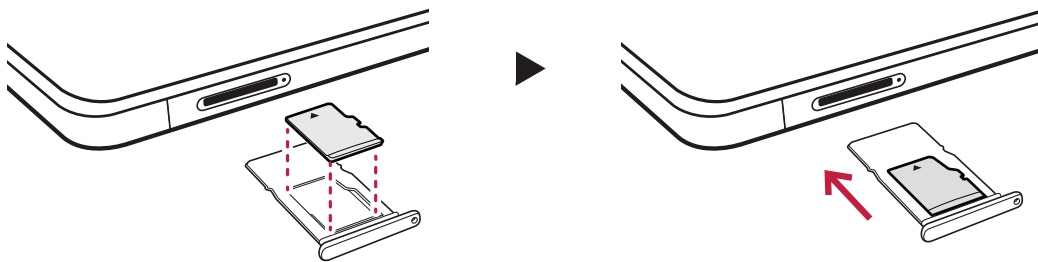

⚠ Caution

- When you open the socket cover on the memory card tray, be cautious not to get your fingernail stuck. Otherwise, your fingernail may get damaged.
- When you insert or remove the memory card tray, make sure to keep it horizontally aligned with the device. At the same time, hold the tray stably not to dislodge the card from the tray.
- When you insert or remove the memory card tray, be cautious not to introduce any liquid or foreign substances inside.
- Do not insert a wet memory card tray or memory card. Otherwise, the product may get damaged.


✔ NOTE

- Memory cards are sold separately.
- Saving and deleting data repeatedly may shorten the memory card life.
- Some memory cards may not be compatible with the product, and using such a memory card with the device may damage the data inside the card.
- If you have any question about memory card faults, compatibility, failure or repair, contact the manufacturer of the memory card.

Removing Memory Card

Make sure to disable the card before removing it from the device to protect the data.

- 1 On the apps screen, press [Settings] > [Storage].
- 2 Select the memory card on the Select device field and press [⋮] > [Eject].

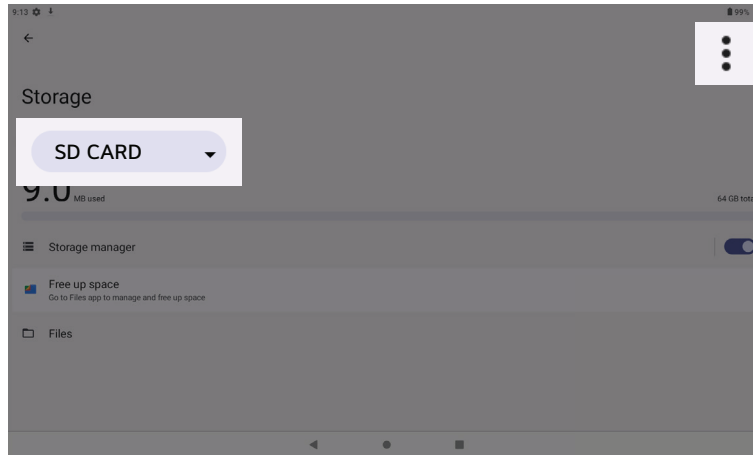

- 3 Use the pin to press into the hole on the memory card tray, and pull it out completely with a hand to eject the tray.
- 4 Remove the memory card from the tray and insert the tray back into the device.

Caution

- Do not remove the memory card while transferring a file. Doing so may cause data corruption or loss or damage the memory card or the device. LG Electronics is not responsible for any data loss or other damages caused by incorrect use of the memory card.

Formatting Memory Card

Make sure to format the memory card on the tablet.

- 1 On the apps screen, press [Settings] > [Storage].
- 2 Select the memory card on the Select device field and press [⋮] > [Format].


Caution

- Before formatting the memory card, make sure to back up important data.
- LG Electronics is not responsible for any data loss due to memory card formatting.

Using Battery

Charging a Battery

Charge the battery sufficiently before using the device.
Use the USB Type-C™ cable to charge the device.

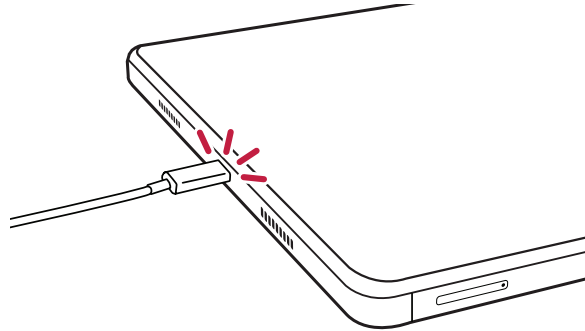

⚠ Caution

- Only use the USB cable provided as a basic component.
- Only use the charger and the cables authorized by LG Electronics.
- If you use the device while charging, there is a risk of electric shock. If you use the device, stop charging it.

✔ NOTE

- When the device is fully charged, unplug the charger from the outlet. By doing so, you can prevent unnecessary power consumption.
- Although you can charge the device by connecting it to a PC via the USB cable, this may take longer.
- If you attempt to charge the device using a USB hub incapable of maintaining the rated voltage, charging may not start or become interrupted.
- Use a standard charger that has the KC certification.
- If the charger or the device shows signs of abnormality during charging, stop the charging immediately.
- The available voltage range of the charger is 100-240 V. If you are using the device overseas, connect the device to an AC power plug adapter appropriate for the region.
- If you are visiting the Service Center for a battery issue, make sure to take the device and the charger with you.
- Since the battery is a consumable item, battery runtime may gradually shorten over time as you continue to use the device.

Using Battery Efficiently

If the device is running multiple programs or using various additional features, the battery may run out faster.

You can lengthen the battery runtime by exiting the features and apps running in the background.


You can also do the following to save the battery runtime.

- When you are not using Bluetooth or Wi-Fi, turn off these features.
- Set the [Screen timeout] to the shortest possible time.
- Lower screen brightness to the lowest level.
- Lock the screen when you are not using the device.
- Check the battery level when you are using a downloaded app.

Using Touchscreen


Pressing

You can press an app icon or another item lightly with a fingertip to select or run the option.

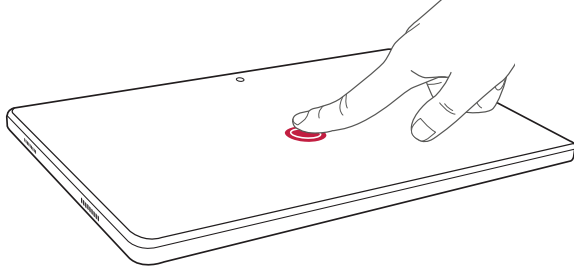


Pressing and Holding

You can press and hold on the screen for a few seconds to run a hidden option on certain screens.

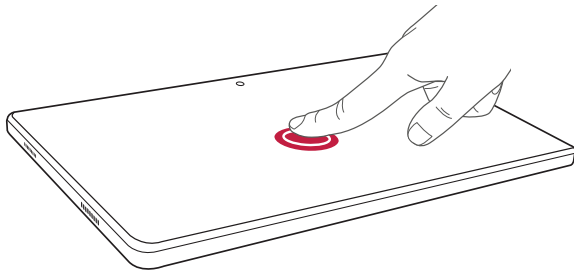


Pressing Twice

You can press the screen twice quickly to expand or reduce the map or the web page.

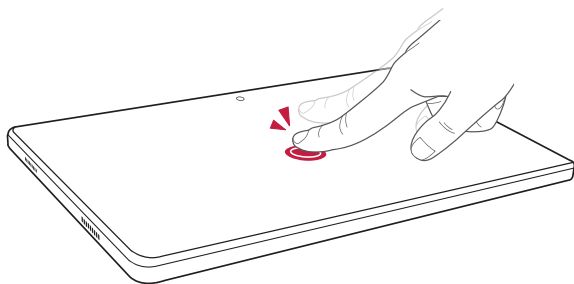


Dragging

You can press and hold an app icon, widget, or another item, and drag it to move it to a desired position.

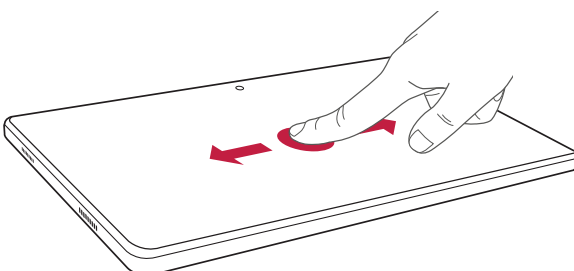


Scrolling

You can press the screen with a fingertip and immediately move it up or down to scroll up or down a list, web page, image, or screen.

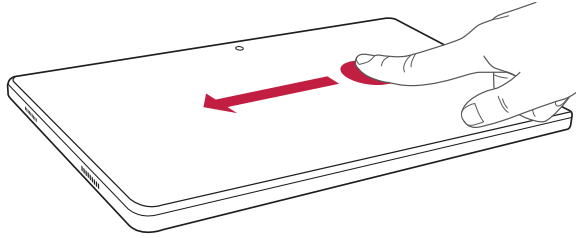

Zoom-in/zoom-out

You can touch the screen with two fingers and move them apart or together to expand or reduce the page on certain apps like Gallery or Map.

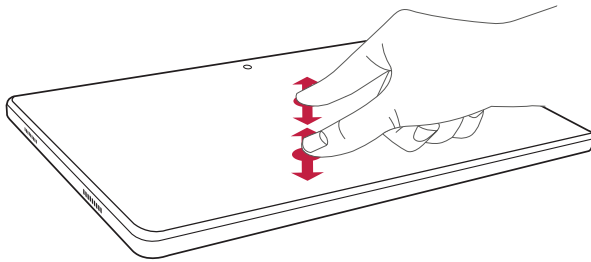

⚠ Caution

- Do not give an excessive impact on the touchscreen. Otherwise, the touch sensor may damage.


✓ NOTE

- Only use the Stylus Pen provided with the product.
If you use a different touch pen, the touchscreen may not work properly.
- If you put the device near a magnetic object such as a magnet or metal, the touchscreen may display an error in operation.
- If you use the device in a bright place (under direct sunlight, etc.), the screen may be invisible depending on the angle.
Use the device in a shade or where it is just bright enough to read a book.
- Do not press on the screen too hard.
- The touchscreen may not work properly if you touch it with a gloved hand or the tip of a fingernail.
- If the screen has much moist or water on it, the touchscreen may not work properly.
- If you apply a screen protection film or accessory purchased from a regular online/offline store on the screen, the touchscreen may not work properly.

Using Home Screen

Tour

On the home screen, you can arrange the app shortcuts, widgets, and folders as desired.

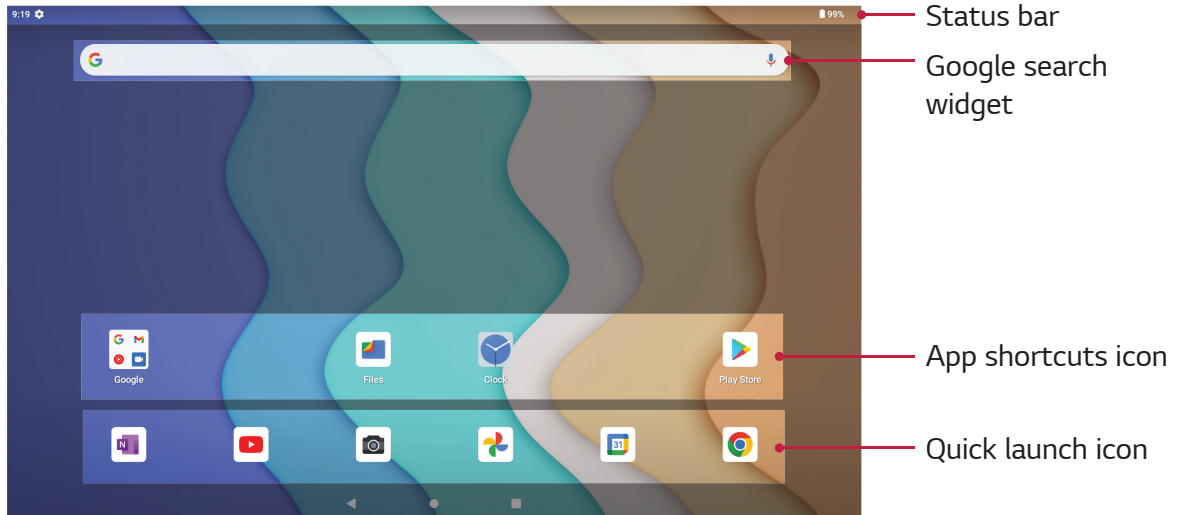


- Status bar: Displays the current time, notifications, device status, battery level, etc.
- Google search widget: Search a desired content on Google.
- App shortcut icon: This is an icon where you can immediately run an app.
- Quick launch icon: This is an icon that is displayed on all home screens in common.




Navigation Buttons

At the bottom of the screen, there are the navigation buttons which you can use to go back to the previous page, go to the home screen, or view the recently run apps.

NOTE

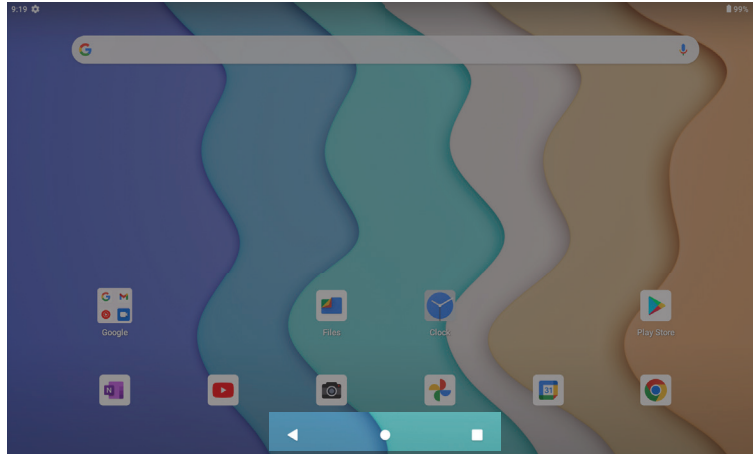- The buttons may function differently on different apps.




Button	Function
	You can go back to the previous screen. You can close the keypad or pop-up window that is running.
	You can go to the home screen when pressing it briefly. Google Assistant is executed when pressing and holding.
	The list of recently run apps appears, and you can select an app from the list to open it.

Apps Screen

All the apps installed on the product are displayed on the apps screen. You can select and run an app.

- If you drag up the home screen, the apps screen appears.
- If you drag down on the apps screen, the apps screen is closed.

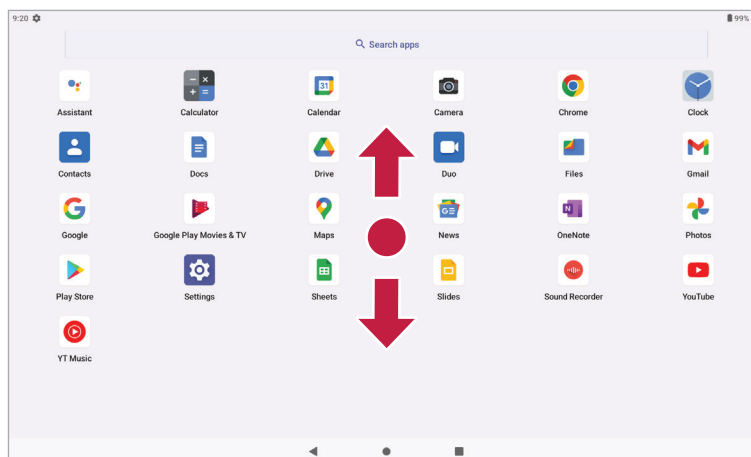






NOTE

- You can press and hold an app on the apps screen to add its shortcut on the home screen.

Status Icons

The status bar displays icons when there is a new notification for an event or alarm. The status bar also displays icons that inform you of the device status.

	Alarm set
	Bluetooth connected
	Current battery level
	Airplane Mode on
	Wi-Fi connected

NOTE


- Icons may differ or not be shown depending on product status. Refer to the manual according to an actual use environment.
- The icons may also differ by region.

Notification Window

The notification window displays new notification messages and also allows you to adjust screen brightness, make quick settings, and more.

If you drag down the status bar, you can open the notification window and check the notification messages.

If you drag up the notification window, you can close the window.

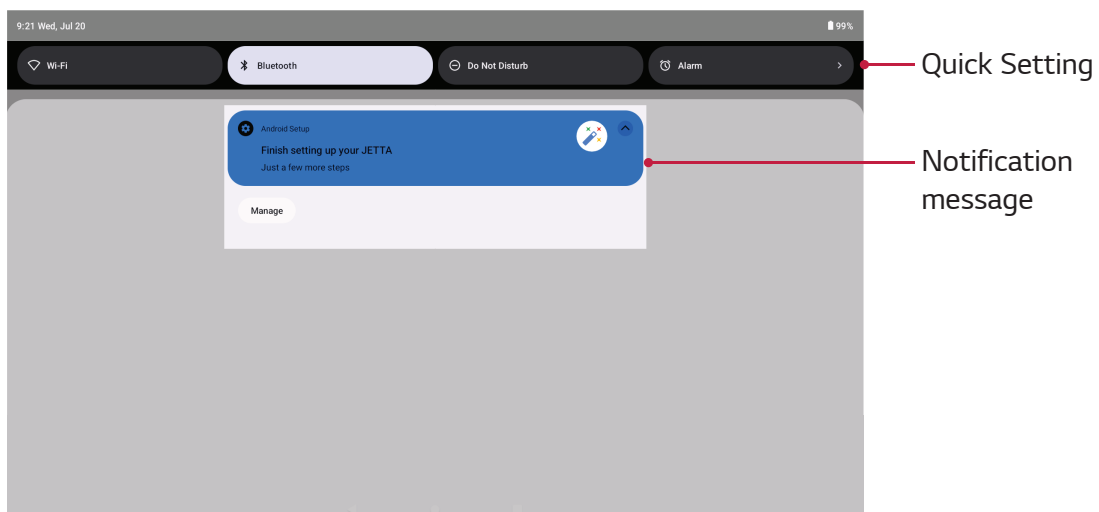

NOTE


- If you press [Manage] on the notification window, you can change the notification settings.

Quick Setting

If you drag down the notification window, you can expand Quick Setting.

✔ NOTE

- If you press and hold a Quick Setting tile, you can open the setting screen for the feature.

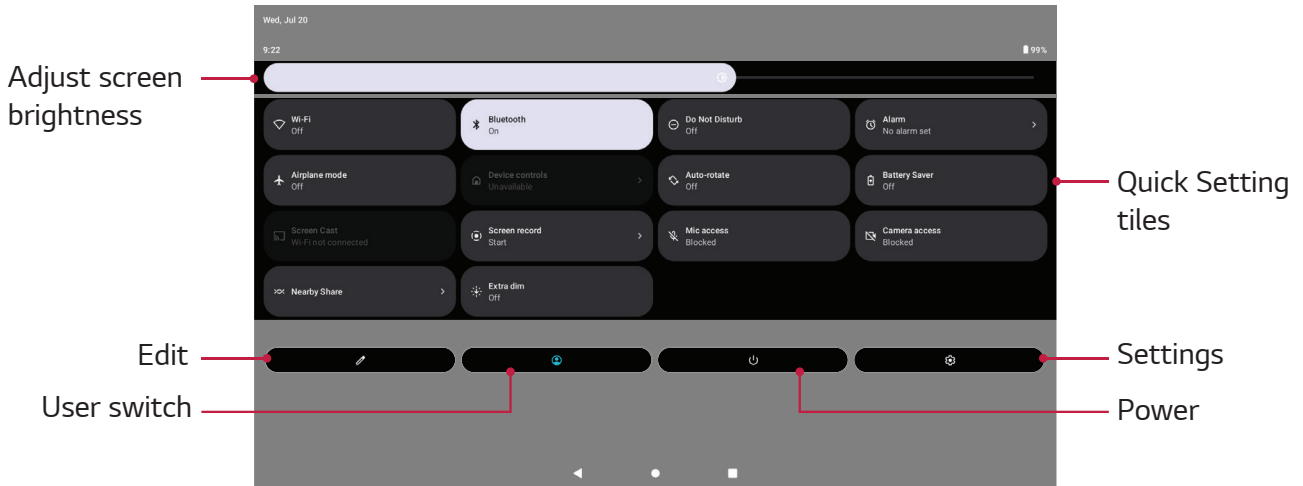

- Adjust screen brightness: Allows you to adjust the system brightness.
- Quick Setting tiles: Allows you to turn on or off a desired feature.
- Edit: Allows you to add or remove a feature to or from the Quick Settings menu.
- User switch: Allows you to switch between user and guest.
- Power: [Power off] and [Restart] menus are provided.
- Settings: Run the [Settings] menu.


Screen Rotation

You can enable auto-rotation so that the screen rotates automatically when you change the device position.

- 1 Drag down the status bar to open the notification window.
- 2 Drag down the notification window to expand the quick settings. On Quick Settings, press [Auto-rotate].

NOTE

- Alternately, you can go to [Settings] > [Display] > [Auto-rotate Screen] to set the setting.

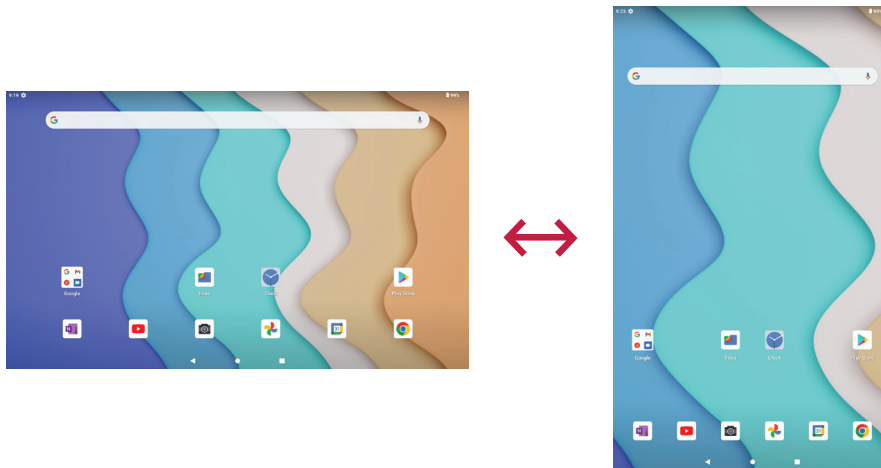

Moving App Icons and Folders

On the home screen, press and hold an app icon or folder and drag it to move to a desired position. Drag it as far as an edge of the screen to move it to a different or new page.

Fixing App Icons at the Bottom of Home Screen

To fix the icon of a frequently used app in the quick launch area at the bottom of the home screen, press and hold the desired app icon and drag it down into the area.

Creating Folder

On the home screen, press and hold an app icon and move it over another app icon.

- A new folder will be automatically created, and the apps will be added into the folder.

Managing Folder

On the home screen, press a folder and run a desired feature.

- Press the folder name field to change the folder name.
- Inside a folder, you can press and hold an app icon and drag it out of the folder to remove it. If the folder is left with only one app, it will be automatically deleted.

Using the Lock Screen

Lock Screen Overview

If you press the [Lock/Power] button or do not use the device for a certain amount of time, the device screen will turn off and be locked.

While the screen is locked, you can press [Lock/Power] to unlock the screen.

If you want to prevent other people from using your device, you can enable [Screen Lock].

NOTE

- Screen lock prevents unnecessary touching of the device screen and also saves the battery. It is recommended to enable [Screen Lock] to protect the device while not in use.
-

Screen Lock Settings

You can set screen lock in various ways.

On the apps screen, press [Settings] > [Security] > [Screen Lock] and select the desired option.

- None: It disables screen lock.
- Swipe: You can swipe the screen to unlock the screen.
- Pattern: You can draw a pattern to unlock the screen.
- PIN: You can enter numbers to unlock the screen.
- Password: You can enter numbers and letters to unlock the screen.


Caution

- Set the unlock code such as password or pattern with caution and be careful not to forget it.
- If you forget the unlock code, you will not be able to recover it even if you visit the LG Electronics Service Center.
- If you forget the unlock code, you have to reset the device to the default, in which case LG Electronics is not responsible any issues that may arise.

Multi-tasking


Recently Opened App Screen


You can view the recently opened app screen on the preview screen.

To see the list of recently opened apps, press [].

Screen Split




You can split the device screen to use multiple apps at the same time.

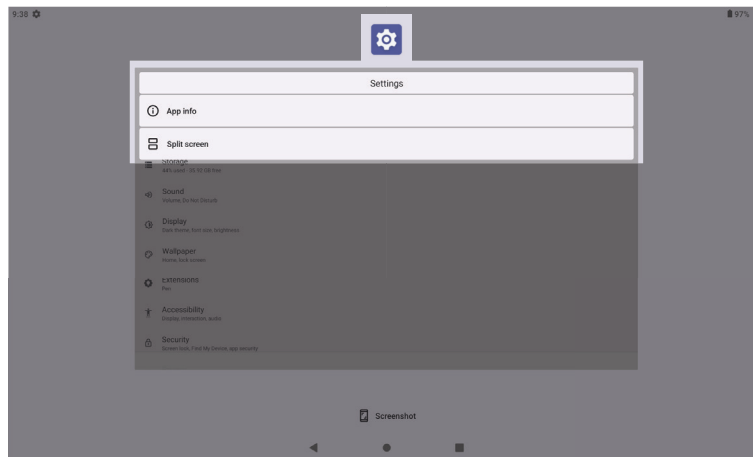- 1 Press [] to bring up the list of recently used apps.
- 2 On the apps list, press the icon of an app to use at the top of the page.



- 3 Press [Split screen] and select another app in the same way.
- 4 Adjust the ratio adjustment bar at the center of the screen to adjust the ratio.
- 5 Drag the ratio adjustment bar out of the screen to close split screen.

NOTE

- Some apps may not support the screen split function.
- While split screen is in use, [] is changed to [].
- Press the [] button to select a different app to open on the split screen.

Screen Capture

You can capture the device screen and save it as an image file.

✔ NOTE

- You can see the captured image in the [Photos] app.

Screen Capture Using Shortcut Keys

Press the [Lock/Power] and [Volume down] buttons at the same time.

Screen Capture on List of Recently Used Apps

- 1 Press [] briefly to bring up the list of recently used apps.
- 2 Drag to a desired app and press [Screenshot] to capture the screen.


Entering Text

The keyboard appears automatically on any screen that requires text input.

✔ NOTE



- If the keyboard does not appear, press the area where text input is necessary.

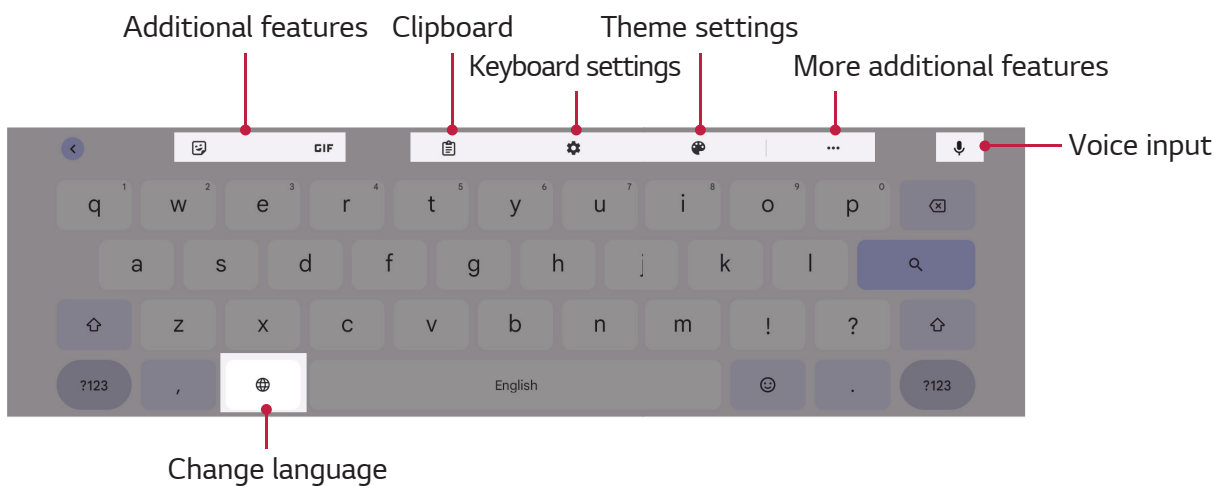Keyboard Parts



Copying/Pasting Text

You can copy or cut text and paste it into the currently running app or another app.


- 1 Press and hold the text to copy or cut.
- 2 Drag [ / ] to select the text.
- 3 Select [Cut] or [Copy].
 - When you cut or copy the text, it is automatically added to the clipboard.
- 4 Press and hold the text input field and select [Paste].

NOTE

- If there is no text with [Copy] or [Cut], [Paste] will not appear.

Clipboard

If you cut or copy text, image, etc., it is automatically saved in the clipboard and can be pasted into a desired spot anytime.


- 1 Press the [] button.
- 2 On [Clipboard], select a desired item and paste it.

NOTE

- The clipboard feature may not work on a downloaded app.
- Items deleted from the clipboard cannot be recovered.


Keyboard Settings

In keyboard settings, you can change the language and other settings.

- 1 Press the [] button.
- 2 Make changes to the settings as desired.

Wireless Screen Transfer


You can transfer the screen onto a wireless display (TV, monitor, etc.) that supports screen mirroring.

- 1 Open the notification window and drag it down to expand the quick settings.
- 2 Press [Screen Cast] > [Settings] > [] > [Enable wireless display].
- 3 Select a wireless display to use and make the connection.

Sharing Contents

Sharing via Email, App, etc.

You can share files, documents, images, etc. with other devices via email and other methods.


- 1 Select files, documents, or images to share.
- 2 Press [] to share the selected items.

Nearby Share

Nearby Share is a feature to conveniently share files, documents, images, etc. between Android devices using Bluetooth or wireless network.

NOTE

- If the search range setting of the target device is set to “Hide from the public,” the device will not appear in the search result.
 - To use Nearby Share via a wireless network, the target device must be connected to the same wireless network.
-

- 1 Select files, documents, or images to share.
- 2 Press [] and select [Nearby Share].
- 3 Select a target device from the nearby devices list and share the selected items.

Setting Nearby Share Search Range

You can set the device so that it can be found through search by other android devices for Nearby Share.

- 1 Open the notification window and drag it down to expand the quick settings.
- 2 Press [Nearby Share].
- 3 Select the search range and press [Done].
 - Everyone: It allows all nearby users to find my device through search for Nearby Share.
 - Contacts: It allows only the users in the contact list to find my device through search for Nearby Share.
 - Hidden: It does not allow my device to be found through search.

Apps

Installing/Deleting Apps

Installing Apps

In Play Store, find a desired app through search and download it.

 NOTE

- Some apps cannot be deleted or disabled by the user.
 - Some apps may charge a fee.
-

Deleting Apps

Deleting or Uninstalling Apps from Home Screen

- 1 Press and hold an app icon and drag it to a different position.
- 2 Drag it to the [Remove] or [Uninstall] area and remove the finger.

Uninstalling Apps in Settings

On the apps screen, press [Settings] > [Apps]. Select an app to uninstall and press [Uninstall].

Disabling Apps

You can disable unnecessary apps to hide them on the home and apps screens.

On the apps screen, press [Settings] > [Apps]. Select an app to disable and press [Disable].

To use the app again, press [Enable].

Shortcuts to Apps

You can press and hold an app icon on the home screen to create a shortcut to the app.

Use the shortcuts to use the apps more conveniently.

 NOTE

- Some apps do not support this feature.
-

Camera Features

Using Camera

You can take photos or videos to store cherishable moments in the device.

On the apps screen, press [Camera].

NOTE


- Before taking a photo or video, clean the camera lens with a soft cloth.
- Be careful not to touch the camera lens with fingers so it is not smeared with fingerprints.
- Even if the device is muted, there is still a sound when taking photos or videos.
- The images in the User’s Guide may differ from the actual appearance.
- You can view or edit the photos and videos taken in Google Photos. For details, see Google Photos Overview.
- If two minutes pass by without any activity after opening the Camera app, the app will close automatically.

Camera Screen Tour



You can select the settings and modes on the camera screen to take a photo.

NOTE

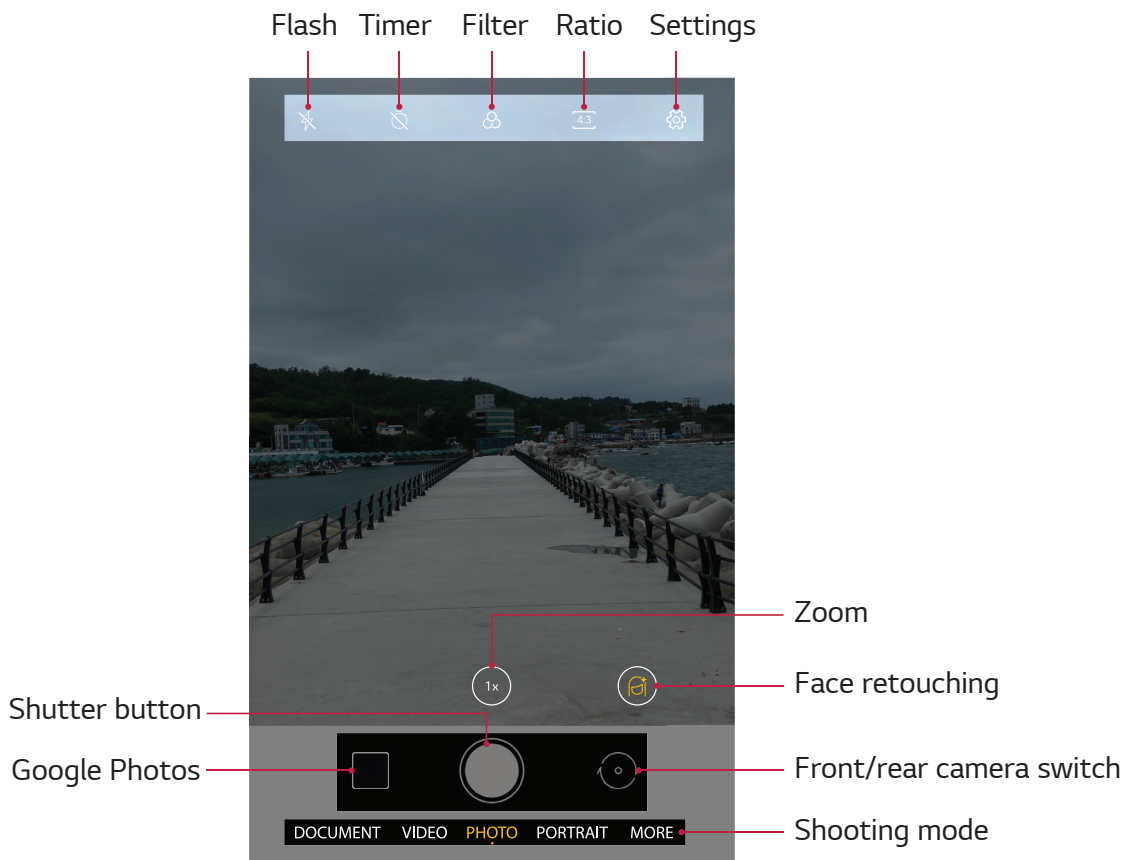- The zooming option is enabled only for the rear-facing camera.
- The flash and face retouching features are enabled only for the front-facing camera.



Taking Photos

- 1 On the apps screen, press [Camera].
- 2 Press on the screen to focus on the target.
- 3 Press [] to take the photo.
 - Press and hold [] to use continuous shooting.
 - You can drag on the shooting mode and select Video to shoot a video.

AE/AF Lock

On the camera screen, press and hold on a spot. AE (exposure) and AF (focus) will be locked on this spot. To unlock AE/AF, select another spot on the camera screen.



✓ NOTE


- This feature is not supported in some modes.

Google Photos

In Google Photos, you can view and manage the photos synchronized with the account and the photos and videos shot using the device.

On the apps screen, press [Photos].

Google Photos Tour

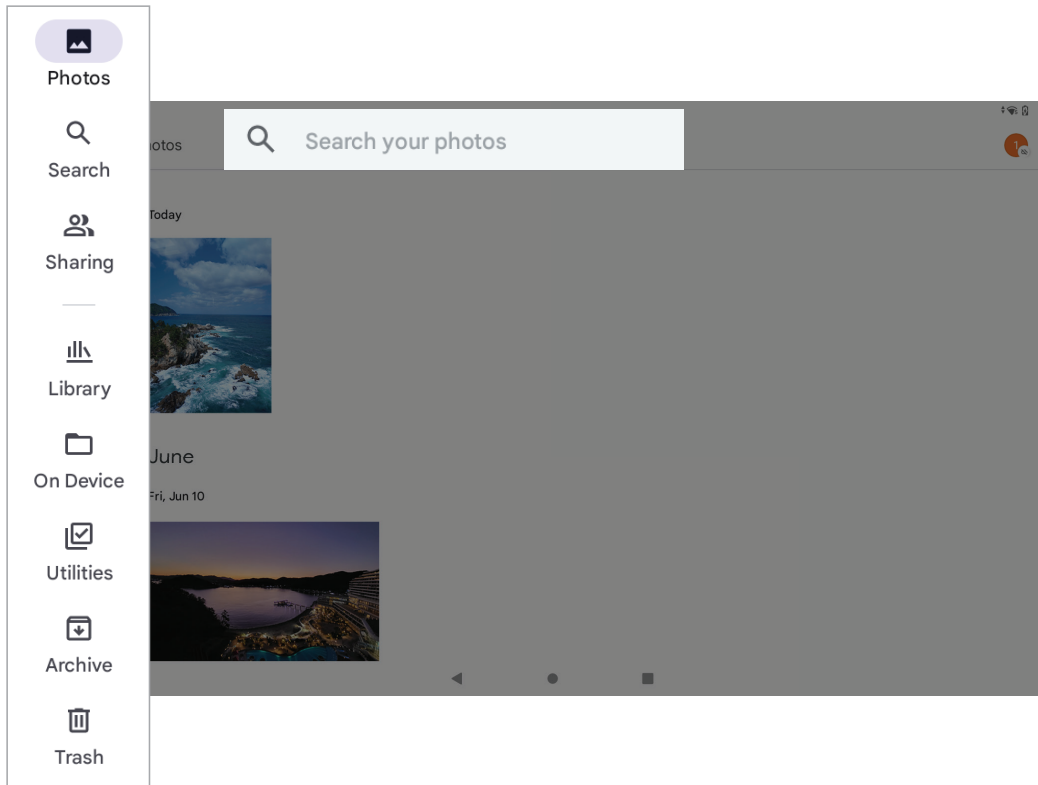

- Search your photos: Search the photos by keyword.
- Photos: All photos are displayed.
- Search: It groups the photos automatically for quicker search.
- Sharing: You can create albums to share photos with partners.
- Library: It displays the favorite photos and videos and the library groups created by the user.
- On Device: It displays the photos shot using the device.
- Utilities: You can manage folders and library, and create animations, collages and movies.
- Archive: You can hide photos in the photo view and move them to the storage.
- Trash: It stores the deleted photos.

Viewing Photos and Videos

Select a photo or video in Google Photos.

Drag the screen left or right to see the previous or next photo or video.

Press on the photo or video to bring up a menu.

NOTE

- You can edit the photos and videos by selecting [Edit].



Creating Animations (GIF), Collages, and Movies

- 1 On the apps screen, press [Photos].
- 2 Select [Utilities] > [CREATE NEW] and select a desired item.
- 3 Follow the guide to create a fun animation, collage, or movie.

Calendar

Calendar Overview

You can use the calendar to manage the schedule and to-do list.

Adding Event

- 1 On the apps screen, press [Calendar].
- 2 Select a date to which to add an event.
- 3 Press [+] and add a goal, notification, to-do item, or event.

✓ NOTE

- The calendar is automatically synchronized to your Google account, so you can manage the same schedule on other devices.


Internet

You can use the internet on the Chrome browser.

On the apps screen, press [Chrome].

✓ NOTE

- The Chrome browser is automatically synchronized via your Google account, so you can use the bookmarks on other devices.

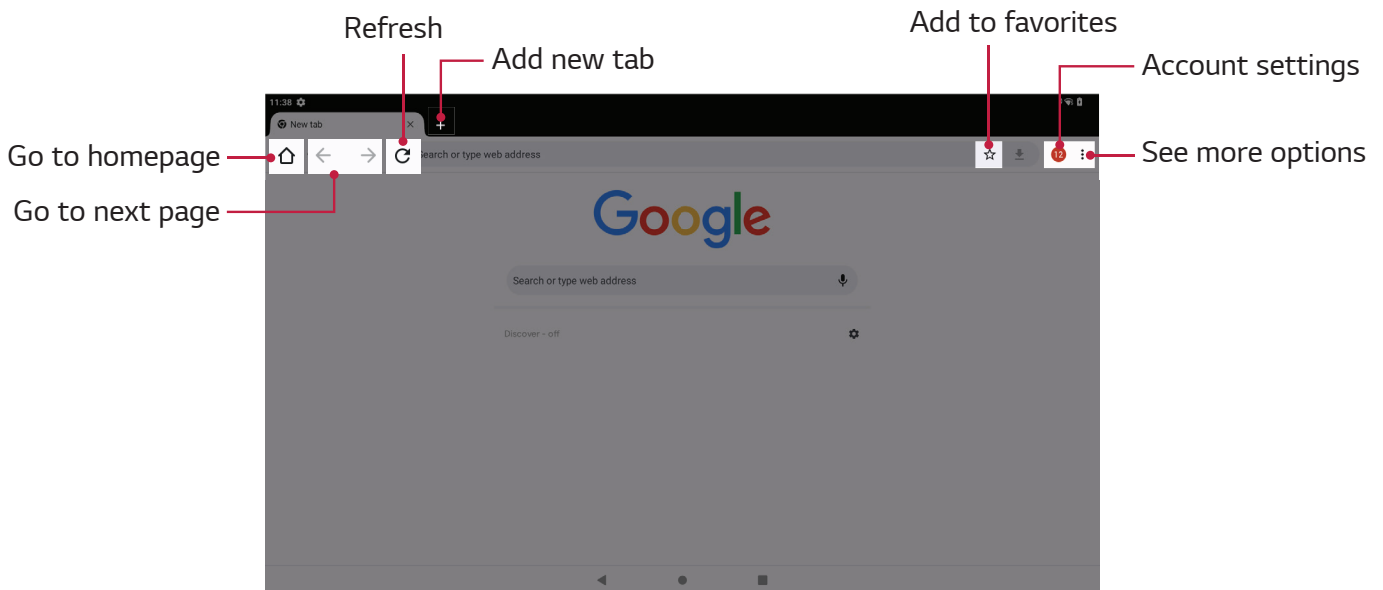

Bookmarks

- 1 Press [See more options] > [Bookmarks].
- 2 Select and use the bookmarked sites as desired.

Secret Tab

You can hide your browsing data from others.

Select [See more options] > [New Incognito tab] to switch to secret mode.

✓ NOTE

- Some features may not be available in secret mode.

Contact

You can store and manage contact information.

✓ NOTE

- The contact list is automatically synchronized to your Google account, so you can use the contacts on other devices.

Adding Contact

- 1 On the apps screen, press [Contacts].
- 2 Press [+] to create a contact.
- 3 Enter the contact information and press [Save].

Deleting Contact

- 1 On the apps screen, press [Contacts].
- 2 Select a contact and press [⋮] > [Delete].

Sharing Contact


- 1 On the apps screen, press [Contacts].
- 2 Select a contact and press [⋮] > [Share].
- 3 Select a desired sharing method and share the contact.

Creating Group

- 1 On the apps screen, press [Contacts].
- 2 Press [≡] > [+ Create label].
- 3 Follow the guide to create a label and add the contact.

Editing and Managing Contacts

You can use the [Fix & manage] option to manage your contacts.

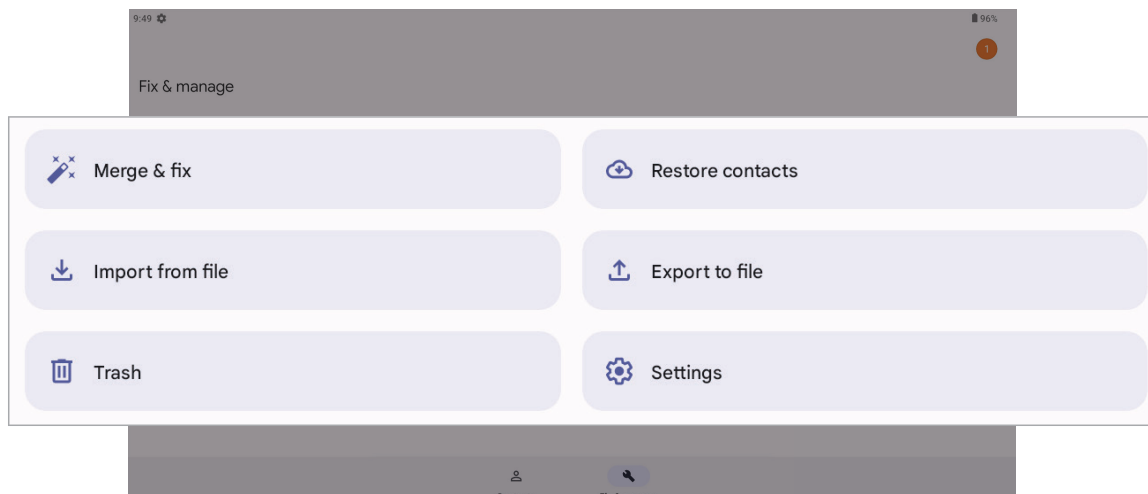

- Merge & fix: Merge or organize duplicate contacts.
- Restore contacts: Restore contacts backed up in your Google account.
- Import from file: Import contacts from a file.
- Export to file: Export contacts as a file.
- Trash: Stores the deleted contacts.
- Settings: Set contact backup, synchronization theme, etc.


Clock/Alarm

On the apps screen, press [Clock] to see the time, set the alarm or bedtime or use the timer or stopwatch.

Calculator

On the apps screen, press [Calculator] to use a regular or engineering calculator.

Sound Recorder

- 1 On the apps screen, press [Sound Recorder].
- 2 Press [] and start recording.

Managing Tablet

System Updates

You can update the device software quickly and conveniently through wireless internet.

- 1 On the apps screen, press [Settings].
- 2 Select [System] > [System update].
- 3 Press [Check for update] and follow the guide to run system updates.

 **Caution**

- Data may be lost while the device software is being updated. To prevent this, back up the data before running an update to minimize damage due to data loss. However, note that the manufacturer is not responsible for any damage due to data loss. Some apps may not operate properly on the latest version software. Also, note that data such as the login information or custom settings may be deleted or reset after updates.

 **NOTE**

- The latest software update is provided only when LG Electronics has developed the newest version for the relevant product.
- Make sure to fully charge the battery before updating the software.
- For more details on system update, contact the LG Electronics Customer Center (T.1544-7777).

Data Relocation

You can back up contents, data, or settings to your Google account. You can also retrieve the backup into the original device or a different Android device.

To retrieve data backed up to your account into the reset device, follow the stages displayed on the initial setup screen.

 **NOTE**

- There may be limitations if you are retrieving a backup of a higher android version into a device that runs on a lower android version.
-

Google

Google Overview

To use the features related to Google, you need to set up your Google account first. The Registering Google Account window appears when you first run a Google-related feature. If you do not have a Google account, you can create one on the device. You can select the Help menu in each app to learn more details.

 **NOTE**

- Some apps may not support Google-related features depending on the region.
-

Google

Use the search function provided by Google to type or speak keywords to search for websites as well as weather, images, news and more.

Assistant

Google Assistant recognizes speech to run a desired feature or display information.

Maps

On the map, you can search for a desired location, view regional information or check your current location.

YouTube

You can search for and enjoy videos you are looking for and upload your own videos to YouTube to share with people around the world.

Drive

You can upload and save files from the device to the drive or open, share, or organize the files. All files available in the apps are also available on the web, so you can access the files from anywhere even when offline.

YT Music

You can listen to the music tracks stored in the device. If you have a Youtube Premium account, you can use the music service provided by Google.

Google Play Movies & TV

You can rent or purchase movies on your Google account and enjoy the contents from anywhere.

Duo

With Duo, you can make voice or video phone calls.

Photos

You can view or share photos and albums stored on the device.

Docs

You can create new documents or edit documents created on the web or different devices. You can also share and collaborate on documents with other people.

Sheets

You can create new spreadsheets or edit spreadsheets created on the web or different devices. You can also share and collaborate on spreadsheets with other people.

Slides

You can create new presentations or edit presentations created on the web or different devices. You can also share and collaborate on presentations with other people.

News

You can see the latest news provided by Google.

Settings

You can set the device preferences to your convenience.

On the apps screen, press [Settings].

NOTE

- You can enter a keyword into [Search settings] to get to the desired setting more quickly.

Network & internet

Wi-Fi

You can connect the device to a Wi-Fi network in vicinity and also to other devices via the network.

Connecting Device to Wi-Fi Network


- 1 On the apps screen, press [Settings] > [Network & internet] > [Wi-Fi].
- 2 Enable [Wi-Fi].
 - Available Wi-Fi networks will be automatically listed.
- 3 Select a network to connect to.
 - Some Wi-Fi networks may require password input for security.
 - If the selected Wi-Fi network has been used in the past, it will remember the connection data and will be accessed automatically without authentication.
To disable automatic connection, press or press and hold the Wi-Fi network and select "Do not save."

Setting Wi-Fi Network Environment

- 1 On the apps screen, press [Settings] > [Network & internet].
- 2 Select [Wi-Fi] > [Wi-Fi Preferences].

Wi-Fi Direct

You can connect the device directly to other devices that support Wi-Fi Direct without any access point to exchange files more quickly and conveniently. Wi-Fi Direct allows you to connect the device to multiple devices at the same time.

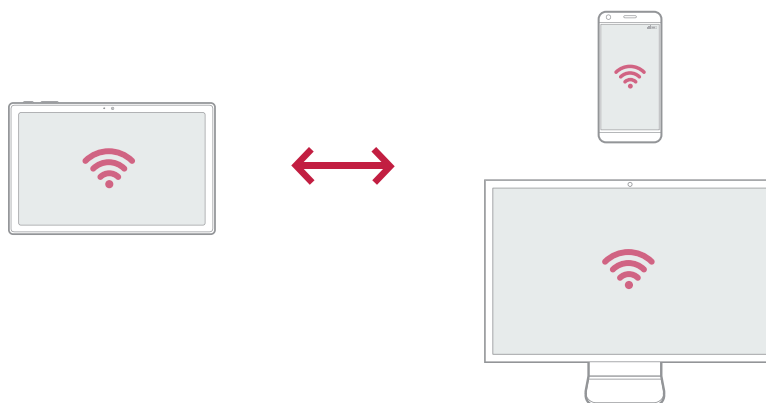

- 1 On the apps screen, press [Settings] > [Network and Internet].
- 2 Select [Wi-Fi] > [Wi-Fi Preferences] > [Wi-Fi Direct].
 - Nearby devices supporting Wi-Fi Direct are automatically searched.
- 3 Select the device to connect to.
 - When a selected device accepts the connection request, the device is connected.

✓ NOTE

- The battery may run out faster if you use Wi-Fi Direct.

Airplane Mode

When you are in an airplane, you can disable all of the wireless data connection features. In Airplane Mode, you can still use the basic features of the device that use no data such as games and music.

- 1 On the apps screen, press [Settings] > [Network & internet].
- 2 Enable [Airplane mode]. Airplane Mode will turn on, and network use will be disabled.
- 3 To exit Airplane Mode, select [Airplane mode] again.

Tethering

You can use the internet on another device by linking it to the device with Wi-Fi connection.

VPN

You can set the device to allow access to safe virtual networks such as a company network and also manage the connected virtual security network.

Adding VPN

- 1 On the apps screen, press [Settings] > [Network & internet].
- 2 Select [VPN] > [+].

 **NOTE**

- To use this feature, you need to set screen lock to secure lock. If screen lock is not set to secure lock, a notification screen will open when you try to use the feature. You can follow the guide on the screen to enable secure lock.
For details, see Screen Lock.
-

- 3 Enter the VPN information and press [SAVE].

Setting VPN

- 1 On the VPN list, select a desired VPN.
- 2 Enter account information of the user to use VPN and select [Connect].
 - To save the entered account information, check [Save account information].

Private DNS

- 1 On the apps screen, press [Settings] > [Network & internet].
- 2 Select [Private DNS] to enable private DNS.

Connected devices

You can connect the device to other various Bluetooth-supporting devices (Bluetooth headset, keyboard, etc.) for more convenient use.

Pair new device

- 1 On the apps screen, press [Settings] > [Connected devices].
- 2 Select [Pair new device].
 - Drag down on the screen to update the device list.

✓ NOTE

- Only the devices set to allow device search can appear on the list.

- 3 Select a device to connect from the list.
- 4 Follow the guide on the screen to complete the authentication process.

✓ NOTE

- If the selected device has been used in pairing in the past, it will remember the connection data and thus be connected immediately without an authentication step.
-

Apps

You can change the settings after viewing the lists of recently used apps, basic apps, use time per app, and unused apps.

Notifications

You can view the notification settings and history of each app and set the screen lock notification, Do Not Disturb mode, etc.

Battery

You can view information of the battery being used or set power-saving mode.

- Battery Usage: Allows you to view the details of battery use.
- Battery Saver: Allows you to set whether to use power-saving mode and change the detailed settings.
- Battery Manager: Allows you to turn on or off battery management.
- Battery Percentage: Allows you to set the battery level display on the status bar to the percentage format.

Storage

You can view and manage storage capacity of the device and the memory card.

Sound

You can change the settings such as the sound volume and system notification volume.

- 1 On the apps screen, press [Settings].
- 2 Select [Sound] and set [Media volume], [Alarm volume], and [Notification volume].
 - Do Not Disturb: Allows you to set the time periods, apps, or days of week that allow notifications.
 - Media: Allows you to fix the default media player on the screen and set the player display settings.
 - Default notification sound: Allows you to change the notification sound.
 - Default alarm sound: Allows you to change the alarm sound.
 - Screen locking sound: Allows you to turn on or off the screen lock sound.
 - Charging sound: Allows you to turn on or off the charging sound.
 - Touch sounds: Allows you to turn on or off the touch sound.

Display

You can adjust or change the detailed screen settings.

- 1 On the apps screen, press [Settings].
- 2 Select [Display] and set the settings as desired.
 - Brightness level: Adjust the slide bar to set the screen brightness of the device.
 - Adaptive brightness: Screen brightness is automatically adjusted according to the surrounding light.
 - Lock screen: The detailed settings for lock screen are provided.
 - Screen timeout: Allows you to set the amount of time until the screen is automatically locked due to inactivity.
 - Dark theme: Allows you to set whether to use the dark theme.
 - Font size: Allows you to change the font size.
 - Display size: Allows you to resize the items displayed on the screen.
 - Night Light: Allows you to turn on or off night lighting mode.
 - Colors: Allows you to change the night lighting color.
 - Auto-rotate screen: Allows you to set whether to use screen auto-rotation.
 - Screen saver: Allows you to set whether to use screensaver and change the settings.

Wallpaper

You can set the background of the home screen and the locked screen.

Extensions

- 1 On the apps screen, press [Settings].
- 2 Select [Extensions] and set the settings as desired.
 - Pen: Allows you to set the Stylus Pen settings.
 - KnockON: You can turn on or off the screen by knocking on it twice with your finger.

Accessibility

You can set the accessibility settings.

- 1 On the apps screen, press [Settings].
- 2 Select [Accessibility] and set the settings as desired.
 - TalkBack: Allows you to set voice notifications of screen status and operation.
 - Select to Speak: It is a function that reads text on the screen.
 - Text and display: Allows you to change the text and screen settings.
 - Extra dim: Allows you to lower the screen brightness.
 - Dark theme: Allows you to apply a black background to part of the screen.
 - Magnification: Allows you to enlarge the contents on the screen.
 - Switch Access: Allows you to set custom key combinations to control the device more conveniently.
 - Accessibility Menu: Allows you to set screen lock, volume and brightness levels, screenshot, and more.
 - Timing controls: Allows you to set touch timing, message display time, and auto-click.
 - System controls: Allows you to set system search and screen auto-rotation.
 - Caption preferences: Allows you to change the caption-related settings.
 - Audio adjustment: Allows you to change the audio channel and balance.
 - Accessibility shortcuts: Allows you to set the position, size, transparency, etc. of the accessibility keys.
 - Text-to-speech output: Allows you to set whether to use TTS (text-to-speech).

Security

- 1 On the apps screen, press [Settings].
- 2 Select [Security] and set the settings as desired.
 - Google Play Protect: This is a feature to scan security risks by periodically checking potential harms of apps and products.
 - Find My Device: You can check the device location remotely and safely protect the data when the device is lost.
 - Security update: You can view and run the security updates.
 - Google Play system update: You can view and run system updates and security patches.
 - Screen lock: You can set screen lock in various ways.
 - Smart Lock: You can set to unlock the screen automatically when a reliable location or device is recognized.
 - Device admin apps: You can set whether to use the device manager app.
 - Encryption & credentials: You can change the tablet encryption and other authentication settings.
 - Trust agents: You can view and use the Trust Agents installed on the device.
 - App pinning: You can fix the apps on the screen so that they are displayed until being released.

Privacy

You can view the privacy protection settings and history and change the relevant settings.

Location

You can set whether to use location and view or change the access permissions to location information for each app.

Safety & emergency

You can set the safety and emergency settings to receive help in an emergency situation.

- 1 On the apps screen, press [Settings].
- 2 Select [Safety & emergency] and set the settings as desired.
 - OPEN EMERGENCY INFORMATION: Add information such as owner, disease, and emergency contact.
 - Emergency Location Service: Set to send location information in an emergency situation.
 - Wireless emergency alerts: Enable emergency text message and alarm.

NOTE

- Some of the features may not be available or limited depending on the product.

Password & accounts

You can add and manage your Google or other accounts and enable auto-synchronization of certain app or user information.

Digital Wellbeing & Parental controls

You can check the device use times and set the timer for each app. Also, you can manage the device use time with sleep mode, focus mode and others.

Google

You can use the Google settings to manage the Google app and account.

System

Language and Input

You can set the device language and input method.

- 1 On the apps screen, press [Settings].
- 2 Press [Languages & input] and set the settings as desired.
 - Languages: Allows you to set the language to use on the device.
 - On-screen keyboard: Allows you to change the touch keyboard and voice input settings.
 - Physical keyboard: Allows you to change the external keyboard device settings.

- Spell checker: Allows you to set whether to use spell checker and change the settings.
- Personal dictionary: Allows you to add words to the custom dictionary to use for spell check, etc.
- Pointer speed: Allows you to adjust the movement speed of mouse or trackpad pointer.
- Text-to-speech output: Allows you to set whether to use TTS (text-to-speech).

Gestures

You can set camera quick launch and system search method.

Date & time

You can set the date and time displayed on the device.

Backup

You can set whether to use backup to the Google account and change the settings.

System Update

You can view and run the latest software updates.

Multiple users

You can set whether to use multi-user as well as the user and profile settings.

Reset options

You can initialize the network, app, or product settings.

- Reset Wi-Fi & Bluetooth: Allows you to initialize the network settings.
- Reset app preference: Allows you to initialize the preferences set in the app. Data saved in the app remain undeleted.
- Erase all data (factory reset): Allows you to delete all settings and data and reset the device to the default.

NOTE

- If you run "Erase all data (factory reset)," it deletes all user information and data irrecoverably.

Hardware Feedback

You can enable this feature to send product information to Qualcomm for performance enhancement.

About tablet

You can view the name, status, software information, legal information, etc. of the product.

Appendix

Customer Guide

Regulation and safety information

- Authentication information of this product is implemented in an electronic display method.
- To check information, run the [Settings] app and select [About tablet] > [Regulatory Information].

Product Cautions

- If you insert the memory card incorrectly, the device may not turn on properly or get damaged.
- Using the device on the same screen for a prolonged period of time may lead to ghosting or smudges. If you are not using the device for a long time, make sure to turn off the screen.
- If the device is wet or soaked in water or liquid, the water indicating label inside the device changes its color. In this case, a free warranty service of LG Electronics cannot be covered.

Regarding Battery Runtime

- Since the battery is a consumable item, battery runtime is shortened gradually over time as you continue to use the device.
- When the runtime is reduced by half or more, visit a nearby LG Electronics Service Center to have the battery replaced. (After the warranty period, replacement service is provided at a fee.)

Regarding Reinforced Glass Material

- The reinforced glass used on this product is not a permanent material and thus can usually be slightly worn over time.
 - Dropping the device on a hard surface or exposing it to a strong impact may damage the reinforced glass. If such a damage occurs, stop using the device immediately and visit a nearby LG Electronics Service Center to receive repair.
 - A good way to protect the device is to use a common protective case available in the market. However, a common protective case cannot be covered by warranty provided by LG Electronics and does not guarantee safety.

Open Source Software Notice Information

- To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents please visit <https://opensource.lge.com>. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

Home Electronics Disposal Procedure

- When you purchased a new product
If you purchase a new product from an LG Electronics retailer, we can dispose of your old product for free when we deliver the new product.
- When you dispose of a used product
When disposing of a home appliance, you must contact the local community service center or the home appliance disposal reservation system.
(Telephone: 1599-0903, Website: <http://www.15990903.or.kr>)

Specific Absorption Rate (SAR)

- This product satisfies the technical requirements for human exposure to electromagnetic waves and is designed not to exceed the specific absorption rate from partial exposure, 1.6 [W/kg], at the maximum power level across all transmission frequency bands that it uses. The product has been certified of the above standards before being distributed into the market. You can see the specific absorption rate of this product on the product details page on the LG Electronics website (<http://www.lge.co.kr>).

Distance from Body during Use

- This product has been tested for its usual operations at a distance of 1.5 cm from the user's body. If non-genuine accessories are used, the product may fail to meet the technical requirements for human exposure to electromagnetic waves.

MPEG-4

- According to the MPEG-4 system standards, this product has acquired a patent license which can be used in the following situations. If use of data or information is limited to non-compensational, non-commercial, and personal purposes or if the data used is encrypted, a separate permit or royalty payment is required in the following cases.
 - A separate permit for saving/duplicating data in a separate space or sending data to another user intending to save or use such data permanently can be obtained from MPEG LA. For more details on this, please visit the MPEG LA website (www.mpegla.com).

Using Licensed Product (accessories and software)

- Using a non-genuine accessory with the device may shorten the device life and poses a risk of explosion. Using illegal software may damage the device. Note that the free service does not cover issues arising from such use, including the following.
 - Failure caused by connecting the device to a non-genuine accessory or arbitrarily modifying the device
 - Failure caused by installing or arbitrarily making changes to non-genuine software on the device

Trademark Right

- Covered by one or more claims of the patents listed at patentlist.hevcadvance.com. This product applies one or more patent claims registered on patentlist.hevcadvance.com.



- Google, Android, Android Market, Gmail, Google Calendar, Google Maps, Duo, YouTube and Google Play Store are trademarks or registered trademarks of Google Inc.
- USB Type-C™ and USB-C™ are the trademarks of USB Implementers Forum.
- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance Corporation.
- Copyright © 2022 LG Electronics Inc. All Rights Reserved. This User's Guide complies with the copyrights of LG Electronics. Unauthorized use, exception, or distribution of this User's Guide without prior consent is not allowed.

Cautions Regarding File Transmission Device Recognition

- To use file transmission on an Windows OS, it is necessary to install Windows Media Player 10 or higher (11 recommended).

Product Use Temperature

- Use the device at temperatures of between 0 and 35 °C. Using the device out of this temperature range may limit its functioning and performance, hindering efficient use and resulting in abnormal shutdown, device damage, or shortened battery life.

Operational Restraints at Low Temperatures

- If the device is exposed to low temperatures for a prolonged period of time, causing the battery temperature to go below a certain level, operations of some apps or features may be restrained temporarily to prevent abrupt power shutdown, which may lead to lowered speed.

Memory Card (sold separately)

- The memory card is a separately sold product and thus may not be compatible with this product depending on the manufacturer's specifications.
- If you have any question about memory card faults, failure, or repair, contact the manufacturer of the memory card.

How to Reduce Impacts of Electromagnetic Waves

- It is best to keep children from using this product.
- When using the device, use a stereo ear mic.
- Do not put the device near you head when you sleep.
- Do not trust the products purporting to block electromagnetic waves in the market.

After-sale Service

- When you receive after-sale service due to a device error or failure during use, error and status logs are saved in the device for the purpose of improving LG Electronics' service quality. Such logs do not include any personal information and are extracted/collected for the purpose of improving service and device quality only when the customer visits an official LG Electronics Service Center for a repair request.

Cautions Regarding Mobile Pharming

Users need to be wary of e-finance frauds such as stealing financial information by inducing the user to install a bogus internet banking app on a device infected with a malicious app.

To prevent being a victim of such a fraud, make sure to observe the below rules.

- Never enter the entire security card number into a banking app.
- Do not save the security card photo in the device.
- Use one-time password (OTP), security token (to prevent password copying), etc. and also use e-finance fraud prevention services such as PC designation for public certificates.
- Install two or more vaccine programs on the device and maintain real-time monitoring using the latest versions.
- If in suspicion of pharming, etc., promptly request payment suspension through the 112 Center of National Police Agency or the call center of a financial institution.

Cautions Regarding Spy Apps

Users need to be wary of tablet apps capable of collecting user's location information in real time, pressing and intercepting conversations through voice recording, deleting data, and even restricting access.

To prevent being a victim of such a fraud, make sure to observe the below rules.

- Use a security lock such as pattern or password and change it regularly.
- Set the device to block installation of apps with unknown source to prevent automatic installation of malicious spy apps.
- Install two or more vaccine programs on the device and maintain real-time monitoring using the latest versions.
- Do not arbitrarily modify the manufacturer's or OS software.

Frequently Asked Questions

What should I do if the device is overheated?

When the device is overheated

The device may generate heat due to high battery consumption in the following cases.

- During the initial setting process after purchase or during data backup
- If multiple apps are being used at the same time
 - If there are many apps running in the background
 - If a large file is being downloaded during video filming
- If a high-spec feature with high power consumption is being used for a long time
 - If video filming or video streaming on the internet is lasting for a long time
 - If a high-spec game is being played for a long time
 - If the device is being used at the maximum screen brightness for a long time
- If data usage is high
 - If data synchronization is in progress simultaneously between multiple accounts
- Other cases
 - If the device is being charged with the charger or external connector stained or damaged

NOTE

- Some of the above cases may not be applicable depending on the product features or apps.

When the device is overheated during charging

- During charging, the device and the charger may generate heat. If the battery temperature goes up above a certain level, charging may be halted for safety.
 - Separate the device and the charger and close all the apps that are running. Cool the device down before resuming charging or reopening the apps.
 - If heat generation is concentrated on the charger connector area at the bottom of the device, stop charging and take the device to a nearby Service Center.

Troubleshooting heat generation problem

- Exit all apps and features that are running and stop using the device for a while.
- Update the software to the latest.
- Turn off features like Wi-Fi, Bluetooth if they are not being used.
- Close all apps that are not in use.
- Reduce the screen brightness if it is set to the maximum.
- If the device is severely hot or the heat generation continues for a long time, stop using the device for a while. If the device is still hot, contact the LG Electronics Service Center.

Restraints when the device is overheated

If the device generates heat during use or charging, operations may be restrained, apps may be closed, and power may shut down in order to lower the heat.

All of these are normal phenomena for the user's safety and will occur only in the models that support such operations.

- If the device temperature goes up above a certain level, a pop-up message on heat generation may appear.
 - If high-spec game playing, video filming, or uploading of large files lasts for a long time, the device may generate severe heat. If this continues, a message may appear notifying of automatic power shutdown. In this case, you can shut down the power or exit all features in use and wait until the device cools down before using them again.
- To cool down the temperature, the device may reduce the screen brightness, restrict its operation, or slow down or exit the features and apps in use. Also, it may halt charging if being charged.

How do I save data files from the PC into the device?

- 1 Connect the device to the PC via a USB cable.
- 2 Drag down the status bar on the device and press [Charging this device via USB].
- 3 In USB use purpose, select [File Transfer].
- 4 Save data files such as music tracks, photos, and videos from the PC into the internal memory or memory card of the tablet.



Caution

- Be sure to comply with the copyrights for music or video files. Note that using a file that is damaged or of a wrong format may result in device failure.

What is the reason for the error occurring on the device after installing an app?

There may be a problem with the downloaded app. Free apps (with low star rating) or unauthorized apps from the black market or My Market may cause malfunctioning or freezing of the tablet.

- Typical tablet errors
 - Unexpected pop-up errors are due to Java program errors, and bugs are entirely due to app problems and can thus be fixed. You can search Google to find information about the app.
 - If an app keeps closing itself, malfunctions or halts during use, press and hold the [Volume down] and [Lock/Power] buttons together until the device starts rebooting. Also, since this may be due to a problem in the app itself, try deleting the app. (During app download, there is a risk of personal information leakage since personal information permissions are granted.)
If the problem persists, contact the LG Electronics Customer Center (T.1544-7777) and then take the tablet to a nearby LG Electronics Service Center.

Why does the device keep turning off during stand-by?

- If an error occurs during widget operation or if too many apps (20-30) are installed simultaneously, the device may be locked up or powered off. (It is recommended to download apps with a high star rating.)
- The battery temperature going up above 60 °C may be another reason for the device turning off.
- If the processors in operation do not respond for a certain amount of time, the device may sometimes reset the power to keep the phone operation smooth. Also, power also may turn off when a black market app, downloaded app, or low-rating app is in use.
- If power still keeps turning off, try pressing the [Lock/Power] button or rebooting the device. Also, since this may be due to a problem in the app itself, try deleting the app. (During app download, there is a risk of personal information leakage since personal information permissions are granted.)
If the problem persists, contact the LG Electronics Customer Center (T.1544-7777) and then take the tablet to a nearby LG Electronics Service Center.

What should I do if the device does not turn on due to a malfunctioning app or if an app cannot be deleted?

Apps downloaded and installed from Play Store may malfunction. If the device does not turn on because of this or if such an app cannot be deleted, enable safety mode.

How to enable safety mode

1. While the power is on, press and hold the [Lock/Power] button.
2. Press and hold [Power off] and select [OK] to enable safety mode.
 - After enabling safety mode, you can press [Settings] > [Apps] to manage the malfunctioning app.

NOTE

- If safety mode is enabled, the screen will display "Safety mode" at the bottom.
- To disable safety mode, reboot the device.

What is product rooting?

Rooting refers to an illicit user act where the user hacks the OS with the aim to add to the device a function not supported by the manufacturer or the OS and acquire the administrator permission.

Main negative effects of rooting

- Tablet malfunctioning, reset, halting, power-off, heat generation, battery draining

NOTE

- If you visit the Service Center with a problem due to rooting, you will not be able to receive service free of charge.

Product Specifications and Properties

10A30Q

Bluetooth	Use frequency	2402-2480 MHz
	Frequency stability	Within ± 50 PPM of the allocated frequency
	Antenna supply power	3mW or lower
WLAN	Use frequency	Transmission/reception: 2412-2472 MHz (802.11 b/g/n) Transmission/reception: 5180-5825 MHz (802.11 a/n/ac)
	Frequency stability	Within ± 50 , ± 20 PPM of the allocated frequency
	Antenna supply power density	10 mW/MHz, 5 mW/MHz, 2.5 mW/MHz
Properties	Device name	Specific low-output wireless device (wireless device for wireless communication data system)
	Operating temperature	0 °C - 35 °C
	Rated voltage	3.85 Vd.c.

You can find the manufacturer/importer, country of manufacture, maker and model name on the box label or the rear label on the device (inside the software in the case of models that display authentication information electronically).

