


SEC. WORK	적용모델	재 질	인쇄방법	인쇄도수		PAGE	REMARK
				표 지	내 지		
13	KVA 이란향	모조지 80g OFFSET 인쇄	OFFSET 인쇄	1도	1도	40, A5	이란향

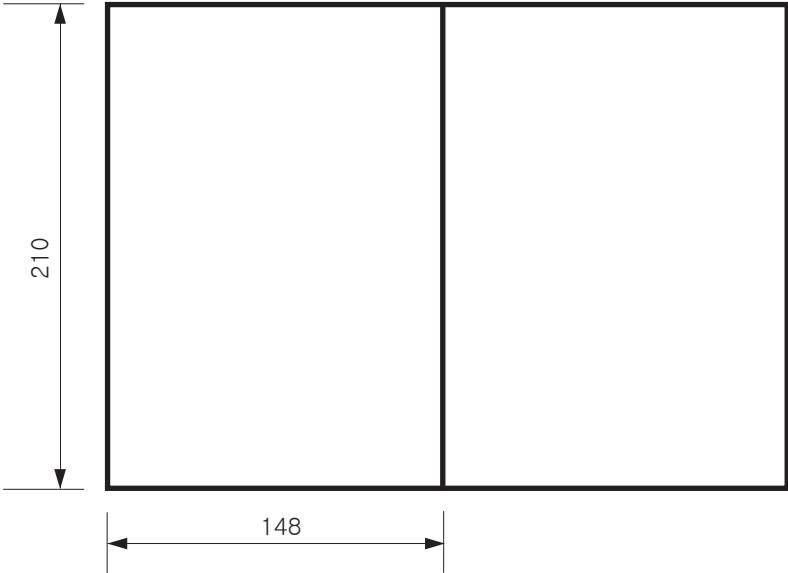

<< 주기 >>

1. 재질, 인쇄방법, 인쇄도수, 외곽치수등은 작업표에 준한다.
2. 인쇄내용, 문자크기 및 형상, 선의 굵기 등은 설계에서 제시된 도면에 준함.
3. 외곽치수는 절단후 치수임.
4. 양산전에 설계 한도를 득할 것.
5. 본 부품에 금지물질이 포함되지 않도록 하고, 상세내용은 LG(63)-A-5501-34를 만족할 것.

<< NOTES >>

1. Material, printing and exterior size are refer to work tables.
2. Printing, text size and line are based on LG design drawing.
3. Exterior size on the drawing is cutting line.
4. Before product controlled by criteria sample.
5. The part should not contain prohibited substances(Pb,Cd,Hg,Cr+6,PBB, PBDE) and details should comply with LG standard of LG(63)-A-5501-34

△					
△					
△					
△					
△					
△					
△					
△					
REV. NO. 기호	REVISION DESCRIPTION 변경 사항	REF. NO. 시방 번호	DATE 년/월/일	PREPARED 시방자	APPROVED 승인자

PDF
ILLUSTRATOR

DR COMPLETED
도면 DR 완료
완료일: 16.09.19

TRIG.	UNIT	mm	SCALE	1/1	T I T L E	MANUAL, OWNER'S	
MODELING	DESIGNED	REVIEWED	CHECKED	APPROVED		KVA 이란향	1/1
	서범교 16.11.04			이창훈 16.11.04		MFL680000013	
LG 전자 (주) LG Electronics Inc.			RELATED DWG.		DWG. No.		



OWNER'S MANUAL

NEW TYPE CYCLONE VACUUM CLEANER

This information contains important instructions for the safe use and maintenance of the vacuum cleaner. Especially, please read all of the information on page 3, 4, 5 for your safety. Please keep this manual in an easily accessible place and refer to it anytime.

VB-8520HRF

VB-8520HTS



MFL68000013

www.lg.com

Table of contents

Important safety instructions	3~5
How to use	6~14
Assembling vacuum cleaner	6
Operating vacuum cleaner	8
Using carpet and floor nozzle / Corner free nozzle	9
Using accessory nozzles	10
Emptying dust tank	11
Cleaning dust tank	12
Cleaning dust separator	13
Cleaning exhaust filter	14
What to do if your vacuum cleaner does not work	15
What to do when suction power decreases	15

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electric shock, personal injury, or damage when using the vacuum cleaner. This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION."

These words mean:



WARNING

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



CAUTION

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.




WARNING

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by LG Electronics Service Agent in order to avoid a hazard
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- **Do not plug in if control knob is not in OFF position.**
Personal injury or product damage could result.
- **Keep children away and beware of obstructions when rewinding the cord to prevent personal injury**
The cord moves rapidly when rewinding.
- **Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in use.**
Failure to do so could result in electrical shock or personal injury.
- **Do not use vacuum cleaner to pick up anything that is burning or smoking such as cigarettes, or hot ashes.**
Doing so could result in death, fire or electrical shock.
- **Do not vacuum flammable or explosive substances such as gasoline, benzene, thinners, propane (liquids or gases).**
The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.
- **Do not handle plug or vacuum cleaner with wet hands.**
Doing so could result in death or electrical shock.
- **Do not unplug by pulling on cord.**
Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.
- **Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.**
Failure to do so could result in electrical shock or personal injury.
- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.**
Failure to do so could result in electrical shock or personal injury or fire or product damage.
- **The hose contains electrical wires. Do not use it if it is damaged, cut punctured.**
Failure to do so could result in death, or electrical shock.
- **Do not allow to be used as toy. Close attention is necessary when used by or near children.**
Personal injury or product damage could result.
- **Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use vacuum cleaner if it has been under water.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not continue to vacuum if any parts appear missing or damaged.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use an extension cord with this vacuum cleaner.**
Fire hazard or product damage could result.
- **Using proper voltage.**
Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the bottom of vacuum cleaner.
- **Turn off all controls before unplugging.**
Failure to do so could result in electrical shock or personal injury.
- **Do not change the plug in any way.**
Failure to do so could result in electrical shock or personal injury or product damage. Doing so result in death. If plug does not fit, contact a qualified electrician to install the proper outlet. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **Repairs to electrical appliances may only be performed by qualified service engineers.**
Improper repairs may lead to serious hazards for the user.
- **Do not put fingers near the gear.**
Failure to do so could result in personal injury.

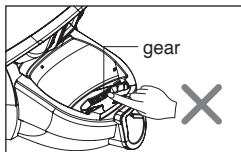

IMPORTANT SAFETY INSTRUCTIONS


CAUTION

- **Do not put any objects into openings.**
Failure to do so could result in product damage.
- **Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.**
Failure to do so could result in product damage.
- **Do not use vacuum cleaner without the dust tank and/or filters in place.**
Failure to do so could result in product damage.
- **Always clean the dust bin after vacuuming carpet cleaners or fresheners, powders and fine dust.**
These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner.
- **Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc.**
They may damage the cleaner or dust bin.
- **Store the vacuum cleaner indoors.**
Put the vacuum cleaner away after use to prevent tripping over it.
- **The vacuum cleaner is not intended to use by young children or infirm people without supervision.**
Failure to do so could result in personal injury or product damage.
- **Only use parts produced or recommended by LG Electronics Service Agents.**
Failure to do so could result in product damage.
- **Use only as described in this manual. Use only with LG recommended or approved attachments and accessories.**
Failure to do so could result in personal injury or product damage.
- **To avoid personal injury and to prevent the machine from falling when cleaning stairs, always place it at the bottom of stairs.**
Failure to do so could result in personal injury or product damage.
- **Use accessory nozzles in sofa mode.**
Failure to do so could result in product damage.
- **Don't grasp the tank handle when you are moving the vacuum cleaner.**
The vacuum cleaner's body may fall when separating tank and body. Personal injury or product damage could result. You should grasp the carrier handle when you are moving the vacuum cleaner. (Page 11)
- **Make sure the filters (exhaust filter and motor safety filter) are completely dry before replacing in the machine.**
Failure to do so could result in product damage.
- **Do not dry the filter in an oven or microwave.**
Failure to do so could result in fire hazard.
- **Do not dry the filter in a clothes dryer.**
Failure to do so could result in fire hazard.
- **Do not dry near an open flame.**
Failure to do so could result in fire hazard.
- **Do not use filters that is not dried.**
- **If the power cord is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard.**
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
Children should be supervised to ensure that they do not play with the appliance.
- **All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.**
- **For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.**

Thermal protector :

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch. If the vacuum cleaner still does not run, contact a qualified electrician.


How to use Assembling vacuum cleaner

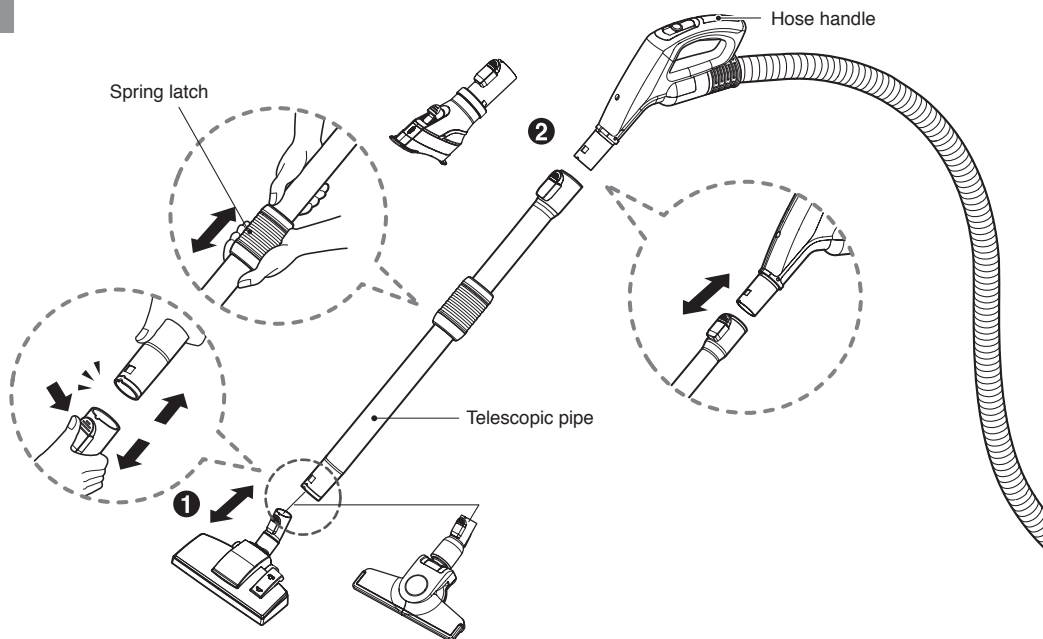

① Carpet and floor nozzle (depend on model) ② Telescopic pipe

Push the nozzle into the telescopic pipe.


- Push the hose handle firmly into the telescopic pipe.
- Grasp the spring latch to expand.
- Pull out the pipe to desired length.

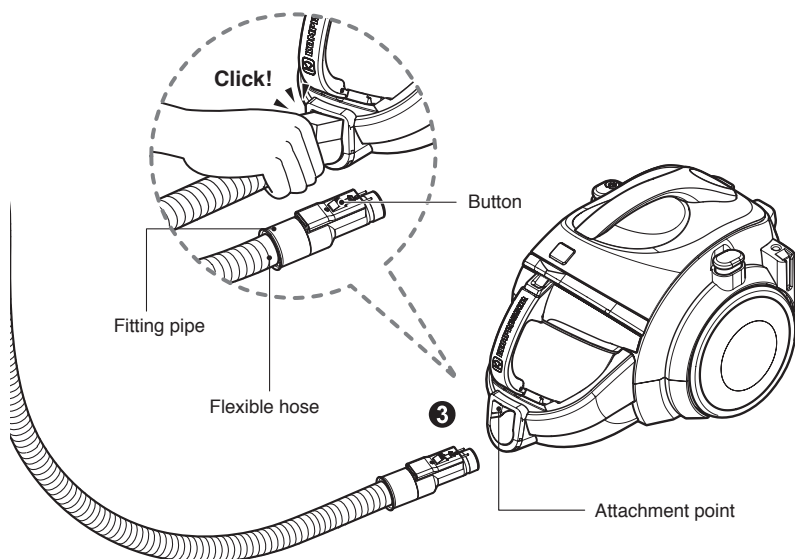

3 Connecting the hose to the vacuum cleaner

Push the fitting pipe on the flexible hose into the attachment point on the vacuum cleaner.
To remove the flexible hose from the vacuum cleaner, press the button situated on the fitting pipe, then pull the fitting pipe out of the vacuum cleaner.

How to use Operating vacuum cleaner

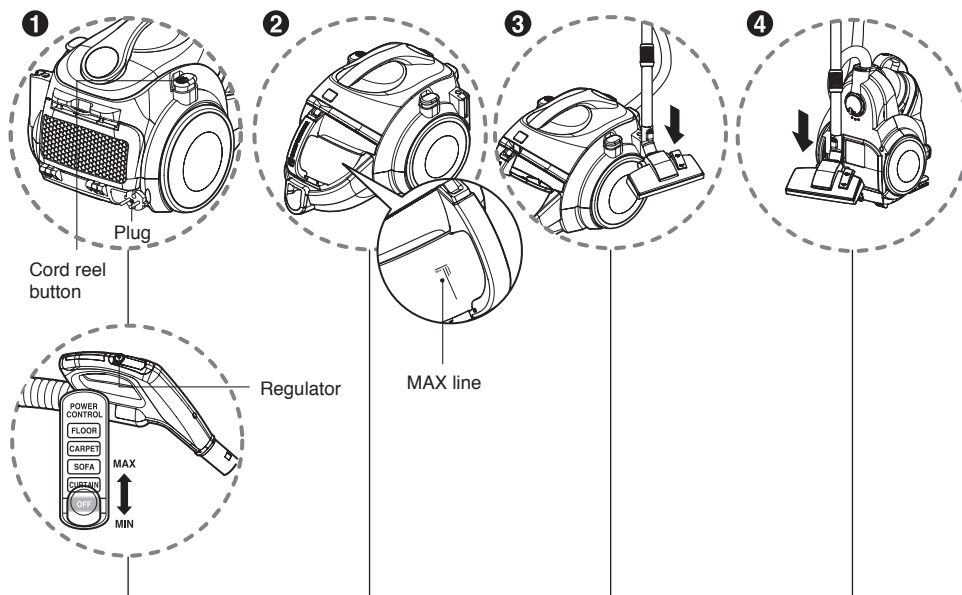

1 How to operate

- Pull out the power cord to the desired length and plug into the socket.
- Place the control knob of the hose handle to the required position.
- To turn off, slide control knob to OFF position.
- Press the cord reel button to rewind the power cord after use.

2 Emptying the dust tank 3 Park mode

- Always empty the dust tank when the dust tank level reaches the MAX line.

- To store during vacuuming, for example to move a small piece of furniture or a rug, use park mode to support the flexible hose and nozzle.
- Slide the hook on the nozzle into the slot on the side of vacuum cleaner.

4 Storage


- When you have switched off and unplugged the vacuum cleaner, press the cord reel button to automatically rewind the cord.
- You can store your vacuum cleaner in a vertical position by sliding the hook on the nozzle into the slot on the underside of the vacuum cleaner.



WARNING

No liquid suction.
Liquid suction can cause defects.

How to use Using carpet and floor nozzle / Corner free nozzle

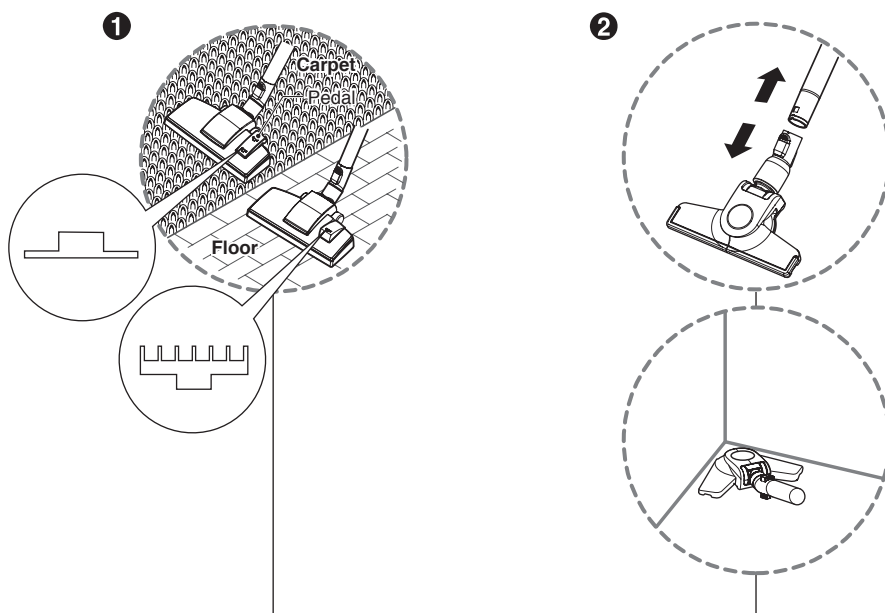

① Carpet and floor nozzle(depend on model)

• The 2 position nozzle

This is equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.

• Carpet or rug position

Press the pedal () to lower brush.


• Hard floor position (tiles, parquets floor)

Press the pedal () to lift the brush up.

② Corner free nozzle (depend on model)




- You can perform cleaning at any place such as corner or narrow crack by utilizing the structure that both sides of the suction hole are leaned back.

• Cleaning carpet and floor nozzle

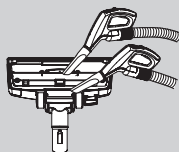

- Clean the hole and the brush of the nozzle.

How to use Using accessory nozzles

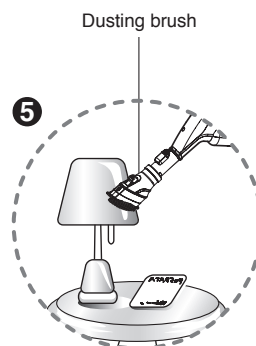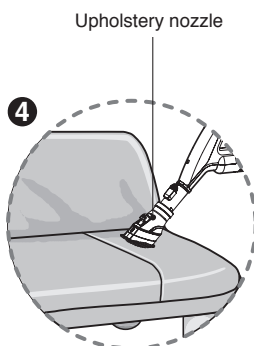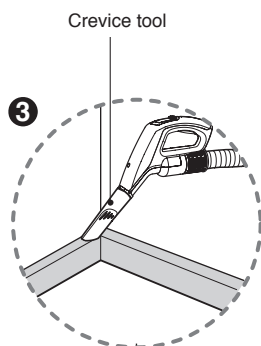

③ Crevice tool (depend on model)

Crevice tool is for vacuuming in those nomally hard-to-reach place such as reaching cobwebs or between the cushios of sofa.

④ Upholstery nozzle (depend on model)

Upholstery nozzle is for vacuuming upholstery, mattresses etc.

⑤ Dusting brush (depend on model)


Dusting brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces.

NOTICE

Use accessory in the sofa mode.




Push the button

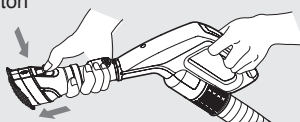


< Upholstery nozzle mode >

Pull the cover




< Dusting brush mode >

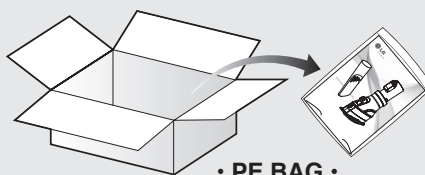

• Accessory nozzles included in the "PE BAG" with owner's manual (depend on model)


How to use Emptying dust tank

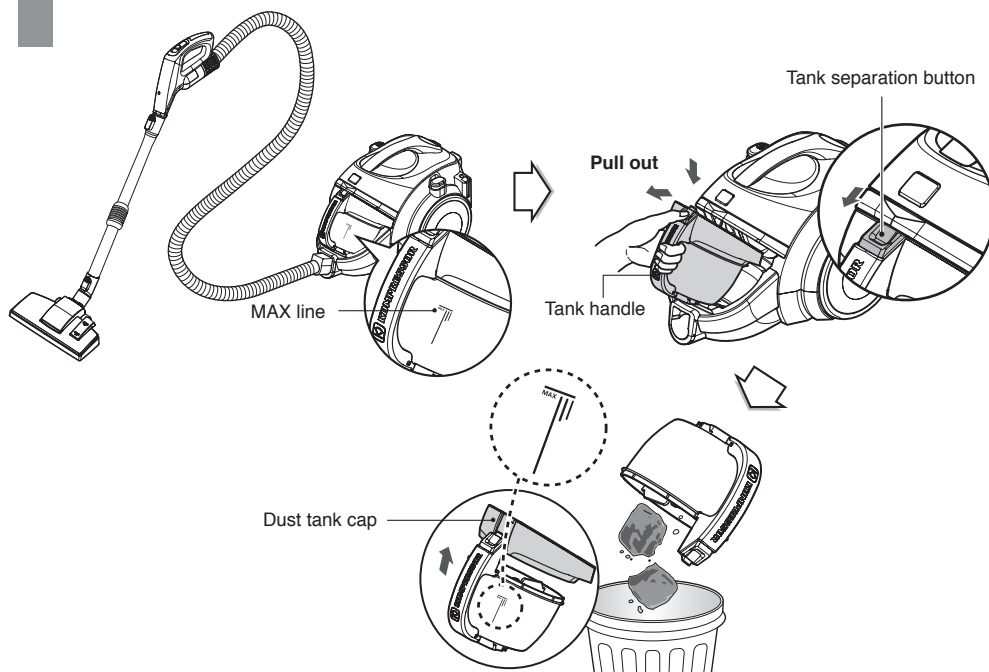

The dust tank needs emptying when the dust tank level reaches the MAX line.

- Turn off the vacuum cleaner and unplug it.
- Grasp the handle of the tank and then press the tank separation button.
- Pull out the dust tank.
- Empty the tank and then assemble the dust tank as shown.

Assembling the dust tank

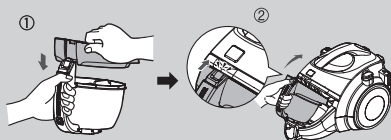

NOTICE

- If suction power decreases after emptying the dust tank, clean the dust tank ➔ next page

Moving the vacuum cleaner


- Don't grasp the tank handle when you are moving the vacuum cleaner.

The vacuum cleaner's body may fall when separating tank and body.

You should grasp the carrier handle when you are moving the vacuum cleaner.



How to use Cleaning dust tank

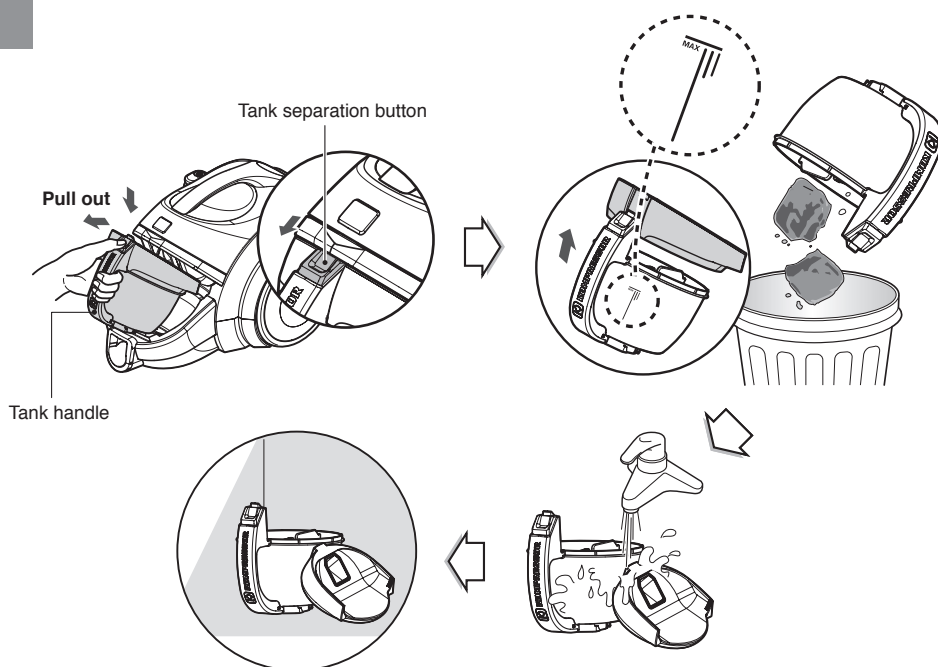


- Press tank separation button and pull out the dust tank.
- Raise the dust tank cap.
- Wash the dust tank.
- Dry fully in shade so that moisture is entirely removed.

NOTICE

If suction power decreases after cleaning the dust tank, clean the air filter and the motor safety filter. ➔ Next page

How to use Cleaning dust separator

- Inside of dust separator, air filter, motor safety filter

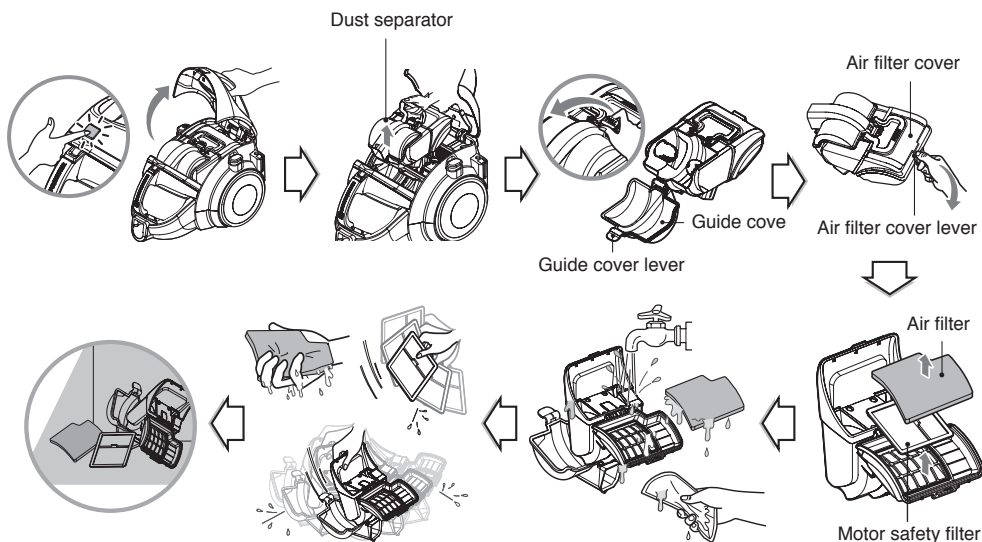

If suction power decreases after cleaning the dust tank, clean the air filter and the motor safety filter.

The air filter and the motor safety filter are located on the top of the vacuum cleaner as above the figure.

- Open the vacuum cleaner cover by pushing the button.
- Grasp the handle of the dust separator and take out it.
- Open the guide cover by pulling the guide cover lever and remove the dust.
- Open the air filter cover by pushing the air filter cover lever and take out the air filter.
- Separate the motor safety filter from the dust separator.
- Wash the air filter and the motor safety filter.
- Do not wash filters with hot water.
- Dry fully in shade so that moisture is entirely removed.
- The air filter and the motor safety filter should be cleaned as above the figure.


WARNING

Dry fully for more than 24 hours in shade.

NOTICE

If filters are damaged, do not use them.
In this cases, contact LG Electronics Service Agent. Wash filters at least Once a month.

How to use Cleaning exhaust filter

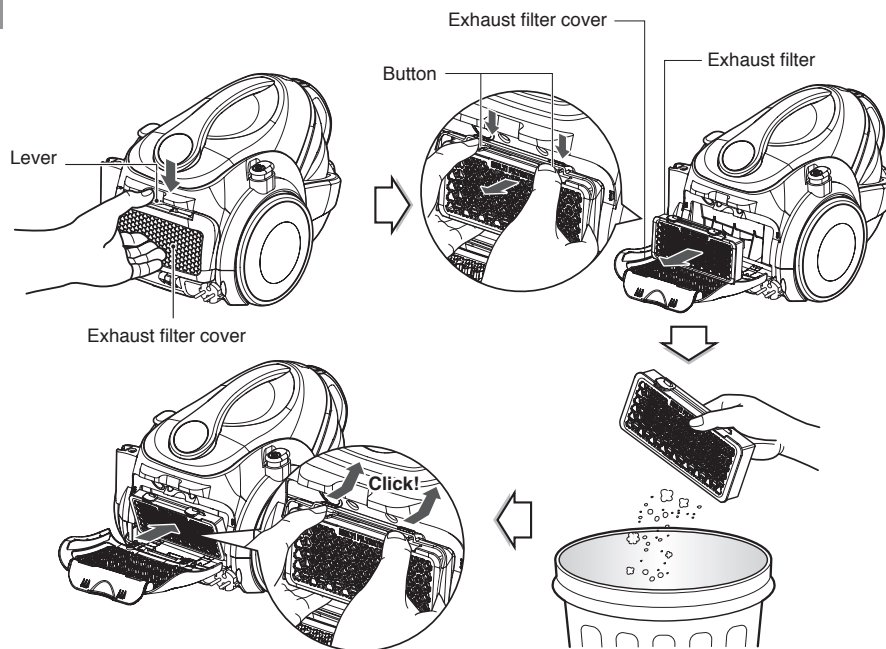

- The exhaust filter is a reuseable filter.
- To clean the exhaust filter, open the exhaust filter cover by pushing the button.
- Separate the exhaust filter by pushing the lever.
- Dust off the exhaust filter.(Do not wash the exhaust filter with water.)
- Insert the projection of exhaust filter into the grooves on the body and push up the exhaust filter button certainly until you hear sound "click".
- The exhaust filter should be cleaned at least a year.

What to do if your vacuum cleaner does not work

Check that the vacuum cleaner is plugged in correctly and that the electrical socket is working.

What to do when suction power decreases

- Turn off the vacuum cleaner and unplug it.
- Check the telescopic pipe, flexible hose and cleaning tool for blockages or obstructions.
- Check that the dust tank is not full. Empty if necessary.
- Check that the exhaust filter is not clogged. Clean the exhaust filter if necessary.
- Check that the air filter and the motor safety filter are not clogged. Clean them if necessary.
- Check the inside of the dust separator. Clean the inside of the dust separator if necessary.

Note



راهنمای مصرف کنندگان نوع جدید جارو برقی سایکلون

این راهنمای مصرف کنندگان، حاوی دستورالعمل های مهم در خصوص استفاده ایمن و همچنین نحوه نگه داری دستگاه جارو برقی می باشد.
خصوصاً کلیه اطلاعات صفحات 3 و 4 و 5 را جهت تامین ایمنی کامل مطالعه فرمایید.
لطفاً این راهنما را همیشه در دسترس قرار داده و در زمان نیاز به آن مراجعه کنید.

VB-8520HRF

VB-8520HTS



دستورالعمل های مهم ایمنی	۵-۳
روش استفاده.....	۱۴-۶
روش اتصال اجزای دستگاه جاروبرقی	۶
روش کارکرد از جاروبرقی.....	۸
استفاده از نازل فرش و کفپوش/ پارویی باقابلیت خم شدن ۹۰ درجه.....	۹
روش استفاده از نازل های جانبی.....	۱۰
روش تخلیه محفظه آشغال	۱۱
روش تمیز کردن محفظه آشغال.....	۱۲
روش تمیز کردن جدا ساز آشغال	۱۳
روش تمیز کردن فیلتر هوا و فیلتر ایمنی موتور	۱۴
در زمان کار نکردن دستگاه جاروبرقی، چه کارهائی باید انجام داد	۱۵
در زمان کاهش کارآئی مکش، چه کارهائی باید انجام داد	۱۵

دستورالعمل های مهم ایمنی

بمنظور جلوگیری از خطرات آتش سوزی، برق گرفتگی، بروز جراحت و یا آسیب دیدگی دستگاه جاروبرقی در هنگام استفاده، این راهنما را قبل از مورد استفاده قرار دادن دستگاه، مطالعه و دستورالعمل های آن را مورد دقت قرار دهید. این دفترچه راهنما شامل کلیه شرایط احتمالی پیش آمده نمی باشد. همیشه در برخورد با ایزداتی که در مورد آنها آگاهی ندارید، با نماینده سرویس و یا کارخانه سازنده تماس حاصل بفرمائید. این دستگاه بر اساس قوانین و استانداردهای زیر ساخته شده است.

این سمبل نشاندهنده هشدار ایمنی می باشد.
این سمبل به شما درخصوص خطرات احتمالی که منجر به مرگ یا جراحت شما و دیگران می گردند، هشدار می دهد.
پس از کلیه پیام های ایمنی، نشانه های هشدار ایمنی و یا کلمات "هشدار" و یا "احتیاط" خواهند آمد.
معنای این کلمات بدین شرح می باشند:



این سمبل مواردی را به شما خبر می دهد که انجام آن ها خطرناک و غیر ایمن بوده و می تواند منجر به بروز سوانح جدی بدنی و یا حتی مرگ گردد.

هشدار !

این سمبل مواردی را به شما خبر می دهد که انجام آن ها خطرناک و غیر ایمن بوده و می تواند منجر به بروز جراحت بدنی و یا آسیب دیدگی دستگاه گردد.

احتیاط !

هشدار !

۱. این وسیله نباید توسط افرادی (شامل کودکان) استفاده شود که توانایی جسمی، ذهنی یا حسی کافی نداشته و یا فاقد تجربه و دانش می باشند، مگر اینکه تحت نظر یا راهنمایی افرادی که مسئول حفظ ایمنی آنها هستند از این وسیله استفاده کنند.
۲. کودکان باید تحت نظر و مراقبت باشند تا با این وسیله بازی نکنند.
۳. اگر سیم برق آسیب دید، باید توسط سرویسکار مجاز خدمات گلدیران تعویض شود تا باعث بروز خطر نشود.
۴. این وسیله باید توسط کودکان ۸ سال به بالا استفاده شود و افرادی که توانایی جسمی، ذهنی یا حسی کافی نداشته یا فاقد تجربه و دانش کافی هستند، در صورتی که در مورد استفاده از دستگاه به صورت ایمن و همراه با درك خطرات، تحت نظر یا راهنمایی باشند می توانند از دستگاه استفاده کنند. کودکان نباید با این وسیله بازی کنند. کودکان نباید بدون نظارت این دستگاه را تمیز کرده و یا تعمیر کنند.

دستورالعمل های مهم ایمنی

⚠ هشدار

- در صورت خرابی و یا آسیب دیدگی سیم برق و یا دوشاخه، از دستگاه جاروبرقی استفاده نفرمائید.
حاصل این عمل جراحات فردی و یا آسیب دیدگی دستگاه خواهد بود.
در این موارد، بمنظور جلوگیری از خطر با سرویسکار مجاز خدمات گذیران تماس حاصل فرمائید.
 - در صورتیکه روی دستگاه آب ریخته باشد، از آن استفاده نکنید.
حاصل این عمل جراحات فردی و یا آسیب دیدگی دستگاه خواهد بود.
در این موارد، بمنظور جلوگیری از خطر با سرویسکار مجاز خدمات گذیران تماس حاصل فرمائید.
 - در صورتیکه بنظر می رسد هر کدام از قطعات دستگاه مفقود و یا معیوب است، از آن استفاده نفرمائید.
حاصل این عمل جراحات فردی و یا آسیب دیدگی دستگاه خواهد بود.
در این موارد، بمنظور جلوگیری از خطر با سرویسکار مجاز خدمات گذیران تماس حاصل فرمائید.
 - در موقع کارکردن با دستگاه جاروبرقی، از سیم رابط استفاده ننمائید.
حاصل این عمل احتمال آتش سوزی یا آسیب دیدگی دستگاه خواهد بود.
 - از ولتاژ مناسب استفاده شود.
استفاده از ولتاژ نامناسب باعث خرابی موتور و امکان بروز جراحات برای فرد مصرف کننده خواهد بود. نوع ولتاژ مناسب در قسمت کف دستگاه جاروبرقی درج شده است.
 - قبل از خارج کردن دوشاخه از پریز، کلیه کنترل ها را در وضعیت خاموش قرار دهید.
عدم انجام چنین کاری باعث بروز برق گرفتگی و یا جراحات افراد خواهد شد.
 - به هیچ وجه دوشاخه دستگاه را عوض نکنید.
عدم رعایت انجام چنین کاری احتمال برق گرفتگی و یا جراحات فردی و یا آسیب دیدگی دستگاه را به همراه خواهد داشت. انجام این کار خطر مرگ را به همراه دارد، چنانچه نوع دوشاخه، مناسب پریز شما نیست، از يك متخصص برقکار مجرب کمک بخواهید تا پریز مناسب را برای شما نصب کند، در صورت آسیب دیدگی سیم برق دستگاه، می بایست نسبت به تعویض آن توسط شرکت تولید کننده، مرکز مجاز سرویس و خدمات و یا يك برقکار مجرب اقدام فرمائید تا از بروز خطر جلوگیری شود.
 - انجام امور تعمیراتی بر روی دستگاه های برقی می باید صرفاً توسط مهندسین کارآمد سرویس و خدمات انجام شود.
تعمیرات غیراصولی منجر به بروز خطرات جدی برای مصرف کننده خواهد شد.
 - انگشتان خود را در مجاورت چرخ نده قرار ندهید.
عدم رعایت انجام چنین کاری بروز جراحات فردی را به همراه خواهد داشت.
- چرخ نده
- در صورت قرار نداشتن دکمه کنترل بر روی وضعیت خاموش، دوشاخه دستگاه را به برق وصل نکنید.
حاصل این عمل جراحات فردی و یا آسیب دیدگی دستگاه خواهد بود.
 - بمنظور جلوگیری از بروز جراحات بر افراد، در هنگام جمع کردن کابل برق به موانع موجود توجه داشته باشید و در عین حال کودکان را از دستگاه دور نگه دارید.
حرکت کابل در هنگام جمع شدن سریع است.
 - در زمانی که از دستگاه جاروبرقی استفاده نمی نمائید و یا در هنگام سرویس و تمیزکاری آن، دوشاخه را از پریز برق خارج فرمائید.
عدم رعایت انجام چنین کاری احتمال برق گرفتگی و یا جراحات فردی را به همراه خواهد داشت.
 - از دستگاه جاروبرقی برای مکش و برداشتن مواد در حال اشتعال و یا دودزا همانند سیگار روشن و یا خاکستر داغ استفاده نفرمائید.
انجام چنین کاری احتمال خطر مرگ، آتش سوزی و یا برق گرفتگی را به همراه خواهد داشت.
 - از مکش مواد اشتعال زا و یا قابل انفجار همانند گازونیل، بنزین، تیر پروپان (بصورت مایع و یا گاز) خودداری فرمائید.
بخار حاصل از این مواد قابلیت ایجاد خطر آتش سوزی و یا انفجار را دارا می باشد. انجام چنین عملی امکان بروز مرگ و یا جراحات افراد را به همراه خواهد داشت.
 - از تماس دستان خیس با دوشاخه یا بدنه دستگاه جاروبرقی پرهیز فرمائید.
انجام چنین کاری احتمال خطر مرگ و یا برق گرفتگی را به همراه خواهد داشت.
 - از خارج کردن دوشاخه از پریز بوسیله کشیدن سیم، خودداری شود.
انجام چنین کاری احتمال آسیب دیدگی دستگاه و یا برق گرفتگی را به همراه خواهد داشت. جهت خارج کردن دوشاخه، خود آن و نه سیم، را محکم بگیرید.
 - مو، لباس گشاد، انگشتان دست و کلیه قسمت های بدن را از منافذ و اجزای متحرک دستگاه دور نگاه دارید.
عدم رعایت انجام چنین کاری احتمال برق گرفتگی و یا جراحات فردی را به همراه خواهد داشت.
 - از کشیدن یا حمل دستگاه بوسیله سیم آن و یا استفاده از سیم بعنوان دسته خودداری شود. همچنین از بستن درب بر روی سیم و کشیده شدن سیم بر روی لبه ها و گوشه های تیز پرهیز گردد. از حرکت دادن دستگاه جارو برقی بر روی سیم آن خودداری شود. سیم را از سطوح داغ دور نگه دارید.
عدم رعایت انجام چنین کاری احتمال برق گرفتگی و یا جراحات فردی همچنین آتش سوزی و خرابی دستگاه را به همراه خواهد داشت.
 - لوله کابل حاوی سیم های برق می باشد. در هنگام آسیب دیدگی بریدگی و یا سوراخ شدن آن، از استفاده بپرهیزید.
عدم رعایت انجام چنین کاری احتمال مرگ و یا برق گرفتگی را به همراه خواهد داشت.
 - اجازه ندهید که از دستگاه بعنوان بازیچه استفاده شود. در هنگامیکه از دستگاه در نزدیکی کودکان استفاده می کنید، توجه دقیق لازم است. حاصل این عمل جراحات فردی و یا آسیب دیدگی دستگاه خواهد بود.

دستورالعمل های مهم ایمنی


⚠ احتیاط

- از فرو کردن اجسام در منافذ دستگاه خودداری کنید.
عدم رعایت انجام چنین کاری احتمال آسیب دیدگی دستگاه را به همراه خواهد داشت.
- در هنگام انسداد هریک از منافذ دستگاه، استفاده از آن خودداری شود.
کلیه منافذ را از وجود گرد و خاک، کرک پارچه و هر آنچه که مانع جریان هوا می شود، پاک نگاه دارید.
عدم رعایت انجام چنین موردی، احتمال آسیب دیدگی دستگاه را به همراه خواهد داشت.
- در صورت عدم نصب محفظه اشغال و/ یا فیلترها در محل های خود، از دستگاه جاروبرقی استفاده ننمایید.
عدم رعایت انجام چنین موردی، احتمال آسیب دیدگی دستگاه را به همراه خواهد داشت.
- همیشه پس از جارو کردن مواد تمیز کننده فرش، نرم کننده ها، پودرها و گرد و غبار، محفظه اشغال دستگاه را تمیز کنید.
وجود این مواد باعث گرفتگی فیلترها شده و جریان هوا را کاهش می دهد که متقابلاً باعث خرابی دستگاه جاروبرقی می گردد. عدم تمیزکاری محفظه اشغال نیز می تواند آسیب های جبران ناپذیری را به دستگاه وارد کند.
- از دستگاه جاروبرقی جهت مکش اشیاء تیز و سخت، اسباب بازی های کوچک، سنجاق، گیره های کاغذ و امثالهم استفاده نکنید.
وجود این اشیاء باعث خرابی دستگاه جاروبرقی و یا محفظه اشغال می گردد.
- دستگاه جاروبرقی را در مکان مسقف نگه داری ننمایید.
بمنظور جلوگیری از افتادن بر روی دستگاه، آن را پس از استفاده در مکانی به دور از رفت و آمد قرار دهید.
- طراحی کاربر این دستگاه جهت استفاده کودکان و یا افراد معلول بدون نظارت افراد عادی، نمی باشد.
عدم رعایت انجام چنین موردی، احتمال بروز جراحت شخصی و یا آسیب دیدگی دستگاه را به همراه خواهد داشت.
- فقط قطعات تولیدی توسط شرکت ال جی الکترونیکس و یا توصیه شده نمایندگان سرویس آن شرکت را مورد بهره برداری قرار دهید.
عدم رعایت انجام چنین موردی، احتمال آسیب دیدگی دستگاه را به همراه خواهد داشت.
- دستگاه جاروبرقی را تنها بر اساس نکات ذکر شده در این دفترچه راهنما مورد استفاده قرار دهید. تنها از لوازم جانبی و ملزومات مورد تایید و توصیه شرکت ال جی استفاده فرمایند.
عدم رعایت انجام چنین موردی، احتمال بروز جراحت شخصی و یا آسیب دیدگی دستگاه را به همراه خواهد داشت.
- بمنظور جلوگیری از بروز جراحت فردی و همچنین جهت پرهیز از افتادن دستگاه در هنگام جارو کشی پلکان، همیشه دستگاه را در پایین پله ها قرار دهید.
عدم رعایت انجام چنین موردی، احتمال بروز جراحت شخصی و یا آسیب دیدگی دستگاه را به همراه خواهد داشت.

محافظ حرارتی :

این دستگاه جاروبرقی دارای يك محافظ حرارتی مخصوص می باشد كه دستگاه را در مواقعی كه دمای موتور آن به بیش از حد مجاز برسد، محافظت می نماید. در صورتیکه دستگاه جاروبرقی بطور ناگهانی خاموش شد، دكمه را در وضعیت خاموش قرار داده و دوشاخه را از پریز برق خارج کنید. دستگاه جاروبرقی را از جهت عوامل احتمالی افزایش دمای موتور از قبیل پر بودن محفظه اشغال، انسداد لوله و یا گرفتگی فیلتر مورد بررسی قرار دهید. در صورت وجود چنین مواردی، آن ها را برطرف نموده و پیش از استفاده مجدد از دستگاه جاروبرقی، حداقل ۳۰ دقیقه صبر نمایید. پس از گذشت زمان ۳۰ دقیقه ای، دوشاخه دستگاه جاروبرقی را به پریز وصل نموده و دكمه آن را در وضعیت روشن قرار دهید. چنانچه باز هم دستگاه جاروبرقی کار نکرد، با يك متخصص بر فكار مجرب تماس بگیرید.

روش استفاده روش اتصال اجزای دستگاه جاروبرقی

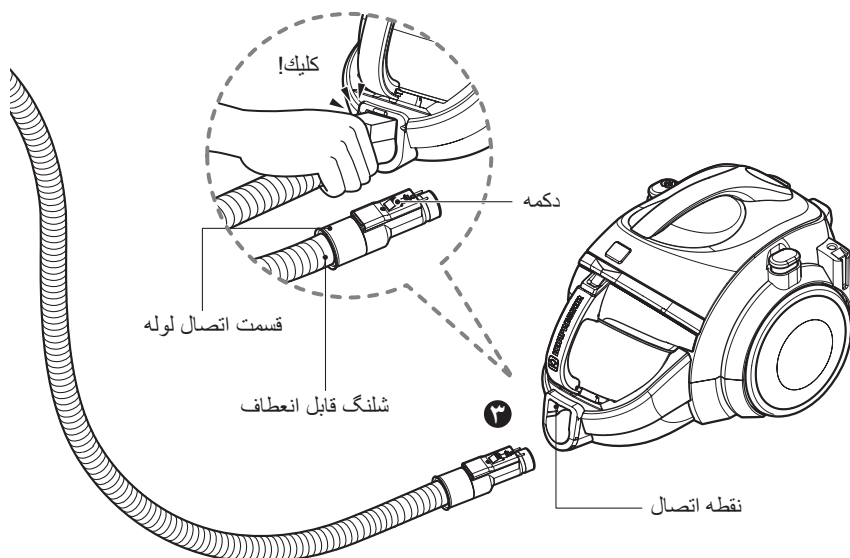


۲ لوله تلسکوپی

- لوله تلسکوپی را بطور محکم در داخل دسته لوله خرطومی فشار دهید.
- خار قفل کننده را فشار دهید تا لوله باز شود.
- لوله را به اندازه دلخواه بیرون بکشید.

۱ نازل فرش و کف زمین


نازل را در داخل لوله تلسکوپی فشار دهید.

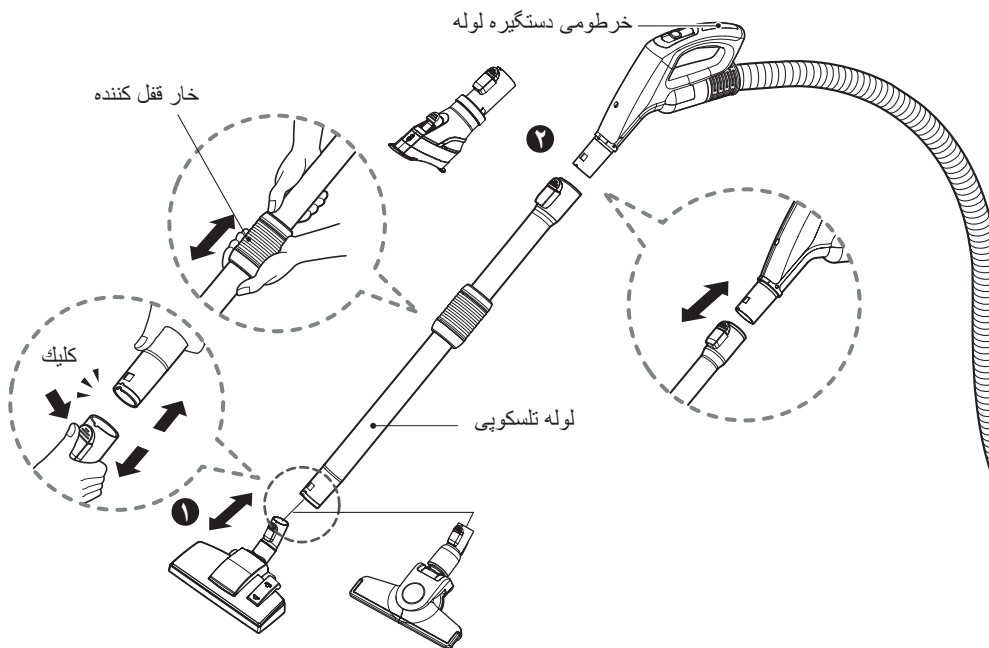

۲ روش اتصال شلنگ خرطومی به دستگاه جاروبرقی

قسمت اتصال لوله موجود بر روی شلنگ قابل انعطاف را در داخل نقطه اتصال دستگاه جاروبرقی فشار دهید.
برای بیرون آوردن شلنگ قابل انعطاف زائده ی روی لوله رابط را فشار دهید و سپس لوله رابط را از داخل دستگاه بیرون بکشید.

روش استفاده روش کارکرد از جاروبرقی

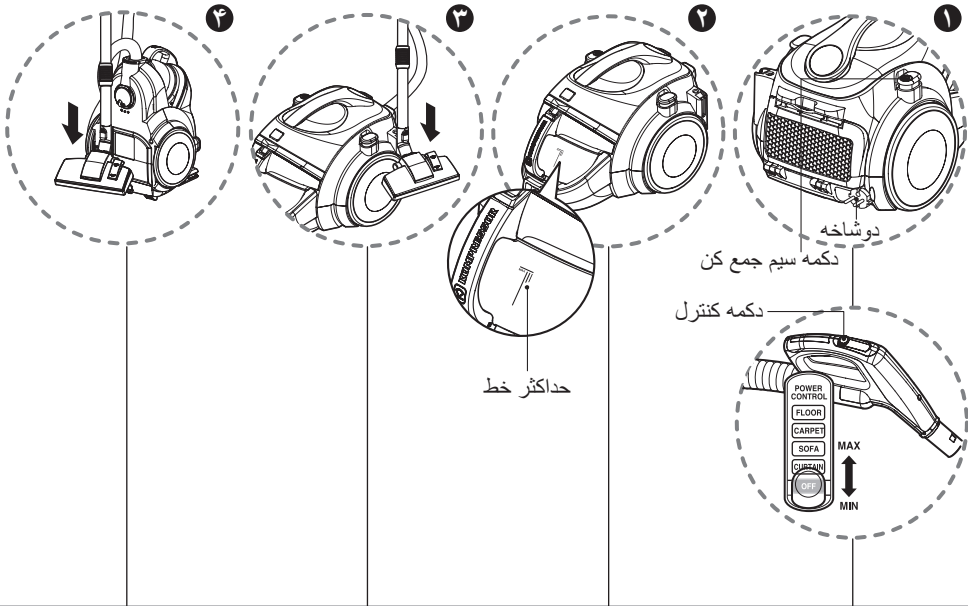


۱ روش کارکرد دستگاه جاروبرقی ۲ خالی کردن مخزن گرد و خاک ۳ حالت پارک دستگاه ۴ نحوه نگهداری دستگاه در هنگام عدم استفاده

- سیم برق را به میزان دلخواه بیرون کشیده و سپس دوشاخه را به پریز متصل کنید.
- جهت بکار اندازی دستگاه جاروبرقی، دکمه کنترل روی دسته لوله خرطومی را حرکت دهید.
- جهت خاموش کردن دستگاه جاروبرقی، دکمه کنترل را روی وضعیت خاموش قرار دهید.
- بعد از استفاده، دکمه سیم جمع کن را فشار دهید تا سیم برق را به داخل بکشند.
- همواره مخزن گرد و خاک را پس از رسیدن سطح مخزن گرد و خاک به خط MAX خالی کنید.
- در هنگام توقف های کوتاه مدت جارو کشی، به عنوان مثال جابجا کردن قطعات کوچک اثاثیه و قابلیچه، از حالت پارک جهت نگه داری لوله خرطومی و نازل استفاده فرمایند.
- قلاب روی نازل را در شکاف کنار بدنه دستگاه جاروبرقی قرار داده و فشار دهید.
- زمانی که دستگاه را خاموش نموده و دوشاخه آن را از پریز خارج کردید، دکمه سیم جمع کن را فشار دهید تا سیم برق را بطور خودکار جمع کند.
- شما می توانید دستگاه جاروبرقی خود را در وضعیت عمودی نگه داری نمایند. بدین منظور قلاب روی نازل را در شکاف کنار بدنه دستگاه جاروبرقی قرار داده و فشار دهید.

⚠ هشدار

عدم مکش مایعات.
مکش مایعات می تواند باعث خرابی شود.

روش استفاده / استفاده از نازل فرش و کفپوش / پارویی باقابلیت خم شدن ۹۰ درجه

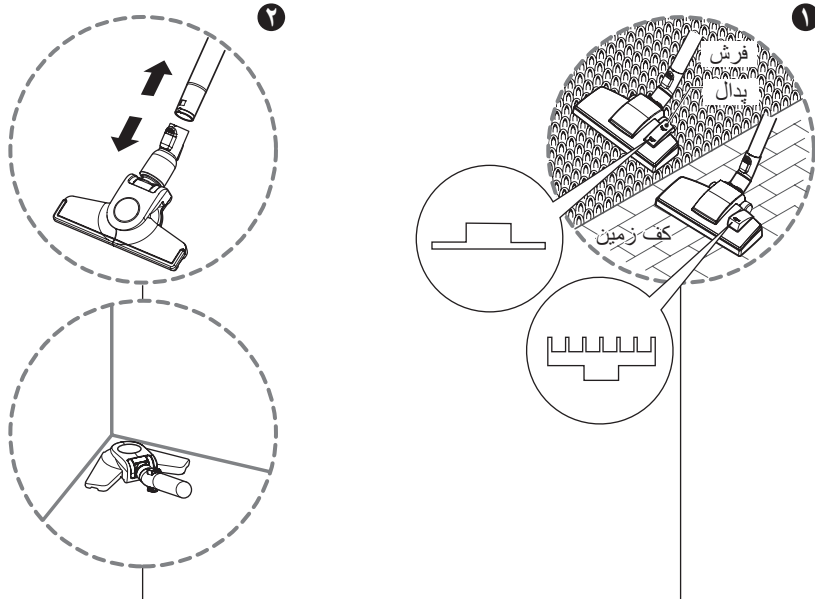

۱ نازل فرش و کفپوش (به مدل بستگی دارد) ۲ پارویی باقابلیت خم شدن ۹۰ درجه (به مدل بستگی دارد)

• شما میتوانید هر جایی مانند گوشه ها یا شکاف های
باریک را با استفاده از ساختاری که هر دو طرف سوراخ
مکنده خم میشود، تمیز کنید.

• نازل دو حالتی

روی این نازل پدالی قرار گرفته است که به شما
امکان می دهد بر حسب نوع کف محل، وضعیت
را تغییر دهید.

• حالت فرش یا قالیچه


پدال () را فشار دهید تا برس پایین برود.

• حالت سطوح سخت (کاشی، پارکت)


پدال () را فشار دهید تا برس بالا برود.

• نازل تمیز کننده فرش و کف

• روزانه و برس نازل را تمیز کنید.

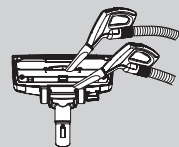


روش استفاده روش استفاده از نازل های جانبی

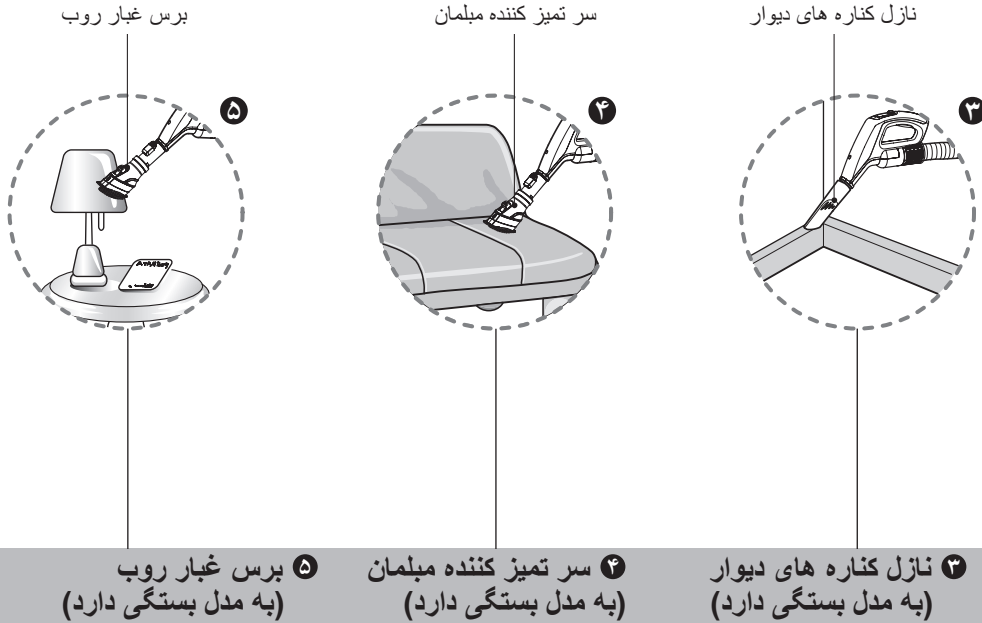

کاربرد برس غبار روب در تمیز کاری قاب های عکس، چهار چوب اثاثیه، کتاب ها و دیگر سطوح غیر هموار می باشد.


درپوش را بکشید



<حالت برس غبار روب>

کاربرد سر تمیز کننده مبلمان، جهت تمیزکاری مبلمان، لحاف و غیره می باشد.

دکمه را فشار دهید




<حالت سر تمیز کننده مبلمان>

کاربرد نازل کناره ها در هنگام نیاز به تمیز کردن مکان هایی است که بطور عادی دست به آنها نمی رسد. مانند تار عنکبوت های سقف و یا لایه های کوسن های کاناپه.

توجه

در هنگام تمیز کننده کاناپه، از لوازم جانبی مربوطه استفاده فرمایید.

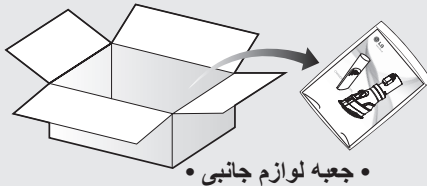


• جعبه لوازم جانبی •

• نازل های جانبی در کیسه PE BAG

همراه راهنمای مصرف کنندگان ارائه می شوند.

روش استفاده روش تخلیه محفظه آشغال

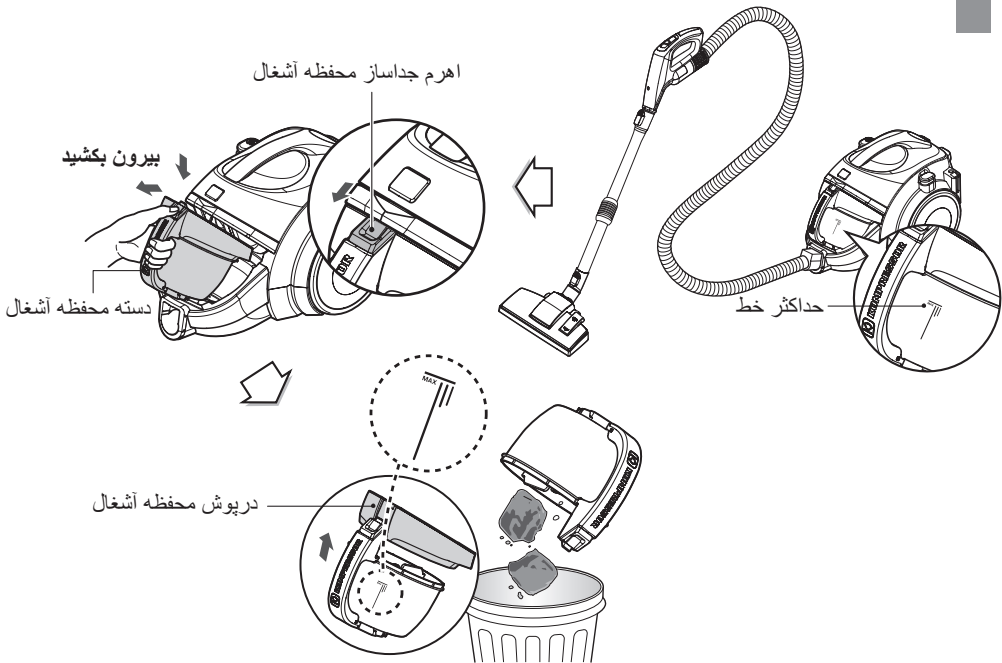

توجه

- در صورتیکه پس از تخلیه محفظه آشغال باز هم قدرت مکش کم بود، می بایست مطابق دستورالعمل صفحه بعد، محفظه ◀ صفحه بعد

روش حمل و نقل دستگاه جاروبرقی


- در هنگام جابجایی دستگاه، دسته محفظه آشغال را در دست نگیرید.
- امکان دارد در هنگام جدا شدن محفظه از بدنه، قسمت بدنه جاروبرقی به زمین بیفتد.
- شما می بایست در هنگام حمل و نقل دستگاه جاروبرقی، دسته مخصوص حمل آن را در دست بگیرید.



مخزن گرد و خاک پس از رسیدن سطح مخزن گرد و خاک به خط MAX باید خالی شود.


- دستگاه را خاموش کرده و دوشاخه آن را از پریز برق بکشید.
- دسته محفظه را در دست گرفته و آنگاه اهرم جداکننده محفظه را فشار دهید.
- محفظه آشغال را بیرون بیاورید.
- محفظه آشغال را خالی نموده و سپس مطابق شکل زیر آن را مجدداً به دستگاه وصل کنید.

روش اتصال محفظه آشغال به بدنه دستگاه

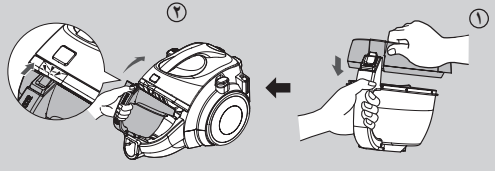

روش استفاده روش تمیز کردن جدا ساز آشغال

- داخل جدا ساز آشغال، فیلتر هوا، فیلتر ایمنی موتور

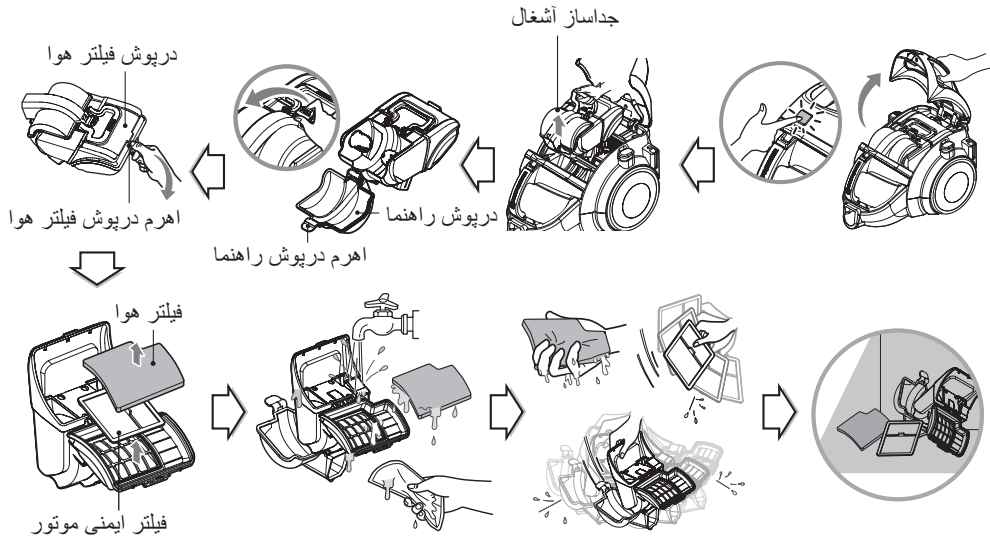

هشدار ⚠


بیش از ۲۴ ساعت در سایه به طور کامل خشک کنید.

توجه

در صورت آسیب دیدگی فیلترها، از استفاده مجدد پرهیز نموده و با سرویسکار مجاز خدمات گلدیران تماس حاصل بفرمایید. فیلترها را حداقل یک بار در ماه بشویید.

- در شکل بالا محل قرار گرفتن فیلتر هوا و فیلتر ایمنی موتور در قسمت بالای دستگاه جارو برقی نشان داده شده است.
- با فشار دکمه، درپوش روی دستگاه جارو برقی را باز نمایید.
- دسته جدا ساز آشغال را در دست گرفته و آن را به سمت بیرون بکشید.
- با کشیدن اهرم درپوش راهنما، آن را باز نموده و گرد و خاک را تخلیه کنید.
- با فشار دادن اهرم درپوش فیلتر هوا، آن را باز نموده و فیلتر هوا را خارج کنید.
- فیلتر ایمنی موتور را از جدا ساز آشغال جدا کنید.
- فیلتر هوا و فیلتر ایمنی موتور را بشوئید.
- از شستشوی فیلتر با آب داغ پرهیز شود.
- فیلترها را در سایه بنحوی خشک کنید که اثری از رطوبت در آن ها باقی نماند.
- فیلتر هوا و فیلتر ایمنی موتور می بایست بنحوی که در شکل بالا نشان داده شده است، تمیز گردند.

روش استفاده روش تمیز کردن فیلتر هوا و فیلتر ایمنی موتور

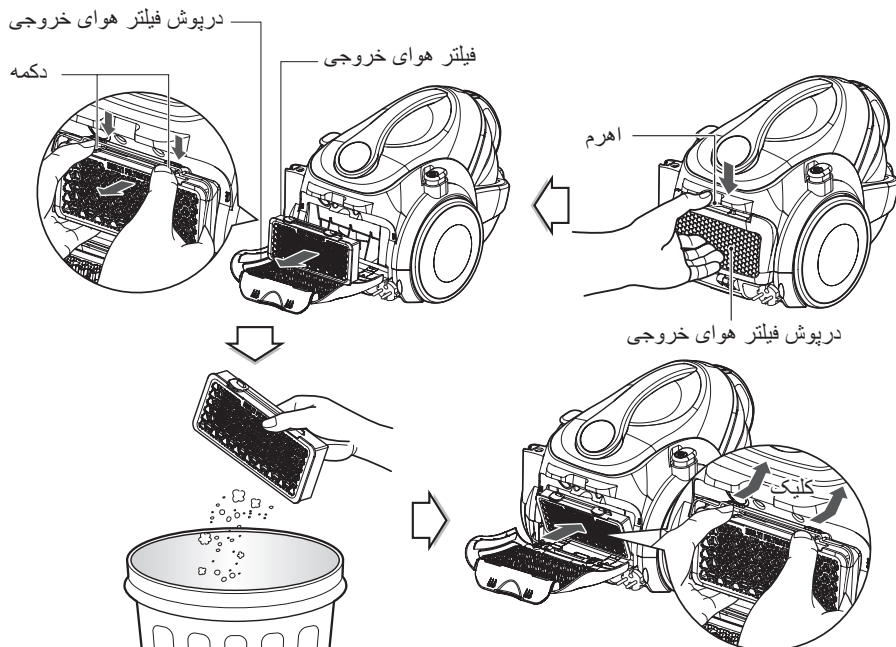

- فیلتر هوای خروجی قابلیت استفاده مجدد را دارد.
- بمنظور تمیز کردن فیلتر هوای خروجی، با فشار دادن دکمه مربوطه، درپوش این فیلتر را باز کنید.
- با فشار دادن اهرم، فیلتر هوای خروجی را جدا سازید.
- گرد و خاک فیلتر هوای خروجی را بتکانید. (از شستشوی فیلتر هوای خروجی با آب پرهیز شود).
- قلاب های فیلتر هوای خروجی را در داخل شیار های بدنه موتور دستگاه جارو برقی قرار داده و فیلتر را فشار دهید.
- فیلتر هوای خروجی می بایست حداقل سالی یک بار تمیز گردد.

در زمان کار نکردن دستگاه جاروبرقی، چه کارهایی باید انجام داد

ابتدا چك كنيد كه دوشاخه دستگاه جاروبرقی بطور صحیح در داخل دوشاخه قرار گرفته و پریز نیز برق داشته باشد.

در زمان کاهش کارائی مکش، چه کارهایی باید انجام داد

- دستگاه جاروبرقی را خاموش نموده و دوشاخه را از پریز خارج نمائید.
- لوله تلسکوپی، شلنگ خرطومی و نازل را از لحاظ گرفتگی و انسداد مجاری چك نمائید.
- محفظه اشغال را چك كنيد كه پر نشده باشد. در صورت لزوم آن را خالی كنید.
- جداساز گرد و غبار را از لحاظ گرفتگی و انسداد مجاری چك كنید. انسداد را برطرف كنید.
- فیلتر هوای خروجی را از لحاظ گرفتگی چك كنید. در صورت لزوم آن را تمیز كنید.
- فیلتر جدا ساز گرد و غبار را از لحاظ گرفتگی چك كنید. در صورت لزوم فیلتر هوا را تمیز كنید.

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۴۴۳۳۸۵۹۹	آباده
۳۳۶۲۳۶۷۹	آبدانان
۴۴۴۶۳۳۲۳	آبش احمد
۳۲۸۲۴۷۰۵	آبیک
۳۴۲۲۳۸۸۲	آذر شهر
۵۴۷۳۶۶۱۵	آران و بیدگل
۳۵۷۳۹۳۷۰	آزادشهر
۴۴۸۱۲۶۲۳	آستارا
۴۲۱۲۴۳۹۱	آستانه اشرفیه
۳۲۹۲۵۶۵۵	آشخانه
۳۴۵۲۸۷۲۰	آق قلا
۴۳۲۹۲۷۰۷ ۴۴۲۲۳۳۶۸	آمل
۰۲۱-۸۴۷۳۳	بابل
۳۵۲۵۶۶۲۰	بابلسر
۴۳۷۲۱۹۴۴	باغملک
۴۲۴۲۴۴۴۰	بافت
۳۲۲۲۷۰۲۲ ۳۲۲۶۳۵۹۷	بجنورد
۳۴۲۲۱۸۴۴	برازجان
۵۵۴۲۰۲۸۱	بردسکن
۴۲۶۲۵۹۴۵ ۴۲۴۶۰۹۲۲ ۴۲۶۲۳۵۷۵	بروجرد
۳۴۲۳۸۹۲۴	بروجن
۳۲۷۷۶۶۶۰	بشرویه
۴۲۲۱۴۷۸۴	بم
۴۴۴۲۶۱۳۵ ۴۴۵۳۲۰۵ ۴۴۵۴۵۰۲۶	بندر انزلی
۳۴۴۸۰۰۶۳	بندر ترکمن
۳۳۳۵۴۰۰۲	بندر عباس

۳۲۸۲۹۲۸۸	ابركوه
۳۵۲۷۷۷۱۱	ابهر
۳۲۲۲۵۸۲۴ ۳۳۶۸۸۴۴۰	اراك
۳۳۶۱۷۸۱۴ ۳۳۷۱۰۰۹۴ ۳۳۴۴۰۰۴۲	اردبیل
۳۲۳۱۶۱۷	اردكان
۴۳۵۲۵۷۷۵	ارسنجان
۳۲۲۴۰۹۲۰ ۳۳۴۴۷۳۹۵	ارومیه
۳۳۲۲۴۱۶۱	اسدآباد
۳۷۲۲۲۶۶۹	اسفراین
۴۵۲۲۲۱۸۲	اسلام آباد غرب
۵۶۳۶۶۸۷۷ ۵۶۳۴۱۲۶۷	اسلامشهر
۳۷۷۲۳۴۹۰	استهارد
۰۲۱-۸۴۷۳۳	اصفهان
۴۴۵۲۲۹۵۳	اقلید
۴۳۳۳۱۳۵۵	الیگودرز
۴۲۷۲۴۹۹۵	املش
۵۴۶۵۹۸۸۷	امیدیه
۳۲۳۵۵۰۲۵	امیرکلا
۳۴۳۸۲۴۵۶	انار
۴۲۶۲۸۱۲۴ ۴۲۶۲۰۸۱۴	اندیمشك
۳۵۲۲۵۴۷۴	اهرم
۰۲۱-۸۴۷۳۳	اهواز
۴۳۶۳۱۲۱۱ ۴۳۶۳۳۸۸۶	ایذه
۳۷۲۳۰۱۳۷	ایران شهر
۳۳۳۶۷۳۰ ۳۳۳۴۱۲۳۴	ایلام
۳۳۲۳۹۷۱۱	ایوان
۵۳۳۲۱۲۰۵ ۵۳۳۳۳۲۱۲	آبادان

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۵۴۲۲۵۳۸۲ ۵۴۲۳۷۳۳۲ ۵۴۲۲۹۹۷۸ ۵۴۲۳۴۳۶۴	تنکابن
۰۲۱-۸۴۷۳۳	تهران
۳۴۹۲۴۳۸	تویسرکان
۳۲۲۷۵۵۵۳	جاجرم
۵۴۴۴۵۷۴۷ ۵۴۲۶۲۷۵۷	جهرم
۴۶۲۲۲۵۱۲	جوانرود
۴۲۵۴۵۴۱۱	جویبار
۴۵۲۲۱۳۳۶	جوین
۳۲۳۱۶۶۳۱	جیرفت
۴۲۶۶۳۶۶۴	چابکسر
۳۵۳۸۷۵۱۷	چابهار
۵۲۲۲۴۰۲۶	چالوس
۴۴۶۶۹۲۷۳	چمستان
۴۶۱۲۶۴۴۶	چناران
۳۵۴۲۴۲۵۰	حاجی اباد
۳۴۲۲۰۹۰۷	خداآبنده (قیدار)
۳۳۳۰۲۷۵۲ ۳۳۲۳۲۶۱۳	خرم آباد
۴۴۴۵۱۳۰۸	خرم بید
۳۵۵۲۳۷۳۵	خرمدره
۵۳۵۴۰۳۸۲	خرمشهر
۳۲۴۴۳۷۵۰	خسروشهر
۳۴۴۶۱۲۸۴	خشکبیجار
۳۲۴۴۱۴۲۰	خلخال
۵۷۷۲۳۲۵۲	خلیل آباد
۳۴۴۲۳۵۵۵ ۳۴۴۲۰۸۷۱ ۳۴۴۲۶۴۴۰	خمام
۴۶۲۲۴۴۱۰	خمین

۴۲۸۲۷۶۶۶	بندر کیشهر
۳۳۱۲۰۰۰۵	بندر گناوه
۵۲۷۲۴۴۳۵ ۵۲۷۲۴۴۳۵ ۵۲۸۲۳۳۱۱	بهبهان
۳۴۵۲۷۸۱۷ ۳۴۵۶۳۳۸۷	بهبهر
۳۲۵۳۰۰۱۳ ۳۳۵۶۲۱۷۸	بوشهر
۴۶۲۲۴۶۲۰	بوکان
۳۴۲۲۵۲۳۵	بوئین زهرا
۳۲۸۲۵۰۰۱	بيله سوار
۳۸۱۲۳۰۰۰	بیجار
۳۲۴۴۵۸۳۷ ۳۲۴۴۴۴۴۰	بیرجند
۳۶۷۹۵۲۹۰	بیضاء
۳۲۷۳۰۰۰۱ ۳۲۷۸۵۶۶۲	پارس آباد مغان
۳۶۰۴۴۴۵۰	پاکدشت
۷۶۲۹۳۴۳۲	پردیس
۳۲۲۲۴۴۰۲	پلدختر
۴۴۲۲۹۹۱۸	پیرانشهر
۳۵۲۲۸۲۳۹	تاکستان
۴۴۲۳۱۶۱۷ ۴۴۲۳۹۸۸۱	تالش
۵۴۵۳۰۵۶۹ ۵۴۵۳۲۹۰۰	تایباد
۰۲۱-۸۴۷۳۳	تبریز
۵۲۵۲۴۲۱۱	تربت جام
۵۲۳۱۳۴۷۷ ۵۲۳۳۰۰۰۱	تربت حیدریه
۴۵۵۲۴۳۱۰	تکاب

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۴۲۶۲۷۸۴۴ ۴۲۶۳۲۴۵۰	رودسر
۴۴۵۴۵۱۹۵	رویان
۳۲۲۲۵۹۱۹	زابل
۳۳۲۳۱۸۵۰	زاهدان
۳۳۴۳۶۴۷۹ ۳۳۴۲۱۵۶۸	زرنند
۴۵۲۲۰۵۸۹	زرنندیه
۳۳۷۷۵۹۲۲ ۳۳۴۶۷۶۰۸	زنجان
۵۴۳۴۰۶۱	زواره
۳۳۳۶۳۵۳۵ ۳۳۲۱۳۰۴۸ ۳۳۳۵۹۴۰۴	ساری
۴۲۲۲۴۶۵۴ ۴۲۴۷۱۵۸۰	ساوه
۴۴۲۲۵۸۵۵ ۴۴۲۲۹۵۶۰	سبزوار
۴۳۲۲۴۴۹۹ ۴۳۲۳۲۶۷۰	سراب
۳۴۲۲۳۸۰۰ ۳۴۲۲۵۵۸۳	سرابله
۳۷۵۴۴۱۹۸	سراوان
۴۲۲۲۱۴۰۶	سرپل ذهاب
۴۴۸۸۶۲۵۲	سرخرود
۳۴۵۲۳۵۹۲	سرخس
۳۶۲۳۸۸۱۲	سقز
۳۵۲۳۳۷۵۸	سلماس
۳۳۳۳۸۵۱۴	سمنان
۳۳۲۳۷۷۰۶ ۳۳۱۶۷۰۳۵ ۳۳۲۴۱۴۹۲	سندج
۴۲۴۲۱۶۰۰	سوادکوه
۴۲۳۲۱۵۱۴	سیاهکل

۵۲۶۲۳۴۹۵	خنج
۵۴۲۲۷۳۶۳ ۵۴۲۳۱۳۸۴	خواف
۵۷۲۳۳۶۶۵	خوانسار
۳۵۲۲۱۲۱۳	خورموج
۳۶۴۴۴۵۰۸	خوی
۵۳۵۴۴۵۶۲ ۵۳۵۴۸۲۵۹	داراب
۵۷۲۲۸۴۲۱	داران
۳۵۲۴۳۶۱۵	دامغان
۳۴۵۳۳۴۶۲	دانسفهان
۴۶۲۲۶۰۱۵	درگز
۳۵۲۲۵۵۵۸	دره شهر
۴۲۲۴۲۲۲۰ ۴۲۲۳۷۳۹۹	دزفول
۴۴۲۲۸۱۹۰	دلیجان
۳۲۲۶۳۸۳۳	دهدشت
۳۳۷۲۹۶۶۸	دهلران
۴۳۲۲۹۸۳۱	دورود
۵۵۲۵۹۹۵۸	رامسر
۴۳۵۲۰۴۱۵ ۴۳۵۳۹۲۵۸	رامهرمز
۵۶۴۳۷۰۵۵	رباط کریم
۳۴۶۷۳۴۲۴	رستم آباد رودبار
۰۲۱-۸۴۷۳۳	رشت
۴۴۶۲۰۹۴۴ ۴۴۶۲۸۴۰۰	رضوانشهر
۳۴۲۵۸۴۶۹ ۳۴۲۵۰۹۵۹ ۳۴۲۲۶۳۷۷	رفسنجان
۴۶۵۲۳۲۹۲	روانسر
۴۲۸۸۷۰۵۲	رودان
۳۴۶۲۲۹۹۸	رودبار

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۳۸۷۵۲۱۴۳	فراشیند
۳۲۷۲۱۱۰۱	فردوس
۳۵۶۵۱۴۵۰ ۳۵۶۵۴۳۰۹	فریدونکنار
۳۴۶۲۲۶۷۹	فریمان
۵۳۳۳۶۰۱۰ ۵۳۳۱۵۴۲۱	فسا
۳۴۷۲۰۳۱۰ ۳۴۷۳۶۹۸۱	فومن
۳۸۷۳۲۱۸۳	فیروز آباد
۷۶۴۰۲۹۹۱	فیروز کوه
۴۲۰۷۲۷۲۹	قائم شهر
۳۶۷۲۶۶۸۶	قره ضیاء الدین
۳۵۲۲۸۴۵۱	قروه
۳۳۶۶۷۰۷۵ ۳۳۲۲۸۴۶ ۳۳۳۵۶۴۶	قزوین
۳۵۲۵۹۰۴۷	قشم
۳۲۹۲۶۰۰۴ ۳۸۱۹۳۵۶	قم
۴۷۲۴۳۵۱۵	قوچان
۵۴۵۲۳۹۳۶	قیرو کارزین
۴۲۲۵۲۴۳	کازرون
۵۵۳۳۱۳۱۰	کاشان
۵۵۲۳۸۵۵	کاشمر
۳۵۵۲۲۸۶۸	کامیاران
۳۵۲۲۶۹۹۶	کیبدر آهنگ
۳۲۲۳۴۴۲	کرج
۳۴۴۶۶۷۱	کرد کوی
۳۲۵۲۱۸۴۶ ۳۲۷۴۹۳۹	کرمان

۴۲۲۰۱۶۹۸	سیرجان
۵۳۷۲۰۰۶۸	شادگان
۳۲۳۳۴۷۱۷ ۳۲۲۴۰۹۶۷	شاهرود
۴۶۳۲۲۱۳۳	شاهین دژ
۴۵۳۰۳۰۰۸	شاهین شهر
۴۲۴۲۰۲۰۲	شبستر
۳۴۷۸۴۸۵۲	شفت
۳۴۱۱۱۰۰۸	شهر بابک
۴۶۸۸۸۹۹۶	شهر قدس
۳۴۵۷۳۵۹۰	شهرستانک
۵۳۲۲۰۶۱۹	شهرضا
۴۶۸۳۳۱۷۴	شهر قدس
۳۳۳۵۱۶۶۶ ۳۳۳۳۹۰۴۲	شهر کرد
۶۵۲۷۶۴۵۲	شهریار
۴۲۸۲۷۱۲۱	شوش دانیال
۳۶۲۰۵۲۰۷ ۳۶۲۱۱۳۲۱	شوستر
۰۲۱-۸۴۷۳۳	شیراز
۳۶۲۲۷۸۵۴ ۳۶۲۲۲۷۰۰	شیروان
۳۵۶۲۳۵۲۰	صائین قلعه
۴۸۳۲۷۰۳۲	صحنه
۴۴۳۴۴۳۱ ۴۴۳۲۷۰۷۷	صومعه سرا
۳۲۸۳۴۰۴۶	طبس
۵۴۶۲۶۶۱۵	عباس آباد
۳۷۶۲۳۸۱۵ ۳۷۶۳۴۴۵۲	عجبشیر
۳۵۲۳۰۰۰۴	علی آباد کتول
۳۶۴۲۶۲۱۷	فاروج

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۴۲۲۸۲۴۵ ۴۲۲۷۷۲۶ ۴۲۳۴۲۶۹ ۴۲۲۶۷۳۰	لاهیجان
۳۴۴۰۲۶۵۱	لشت نشاء
۴۲۵۴۴۲۳۶ ۴۲۵۵۳۷۷۹	لنگرود
۴۴۶۶۴۹۵۶	ماسال
۳۴۲۴۵۹۰۰	ماکو
۵۲۳۳۳۵۳۰ ۵۲۳۲۳۷۲۸ ۵۲۳۴۲۴۴۵	ماهشهر
۵۲۴۱۵۰۰۰	مبارکه
۴۳۲۲۲۶۶۲	محلات
۴۴۷۴۶۰۸۳ ۴۴۷۴۴۵۹۵	محمود آباد
۳۷۲۲۰۰۶۶ ۳۷۲۳۹۲۴۱	مراغه
۴۲۳۳۱۲۲۳	مرند
۴۳۲۳۰۳۵۲	مرودشت
۳۴۵۲۱۹۴۸	مریوان
۳۲۵۴۰۸۸۸	مشکین شهر
۰۲۱-۸۴۷۳۳	مشهد
۳۲۲۲۸۹۰۰	ملایر
۳۷۸۲۳۶۶۵	ملکان
۴۲۲۴۰۳۸۱ ۴۲۳۳۱۱۷۸	مهاباد
۳۳۶۲۵۹۹۶	مهدیشهر
۳۲۵۲۹۳۹۹	مهریز
۴۵۲۴۸۰۵۰	میاندوآب
۵۲۲۲۲۰۲۲ ۵۲۳۳۸۱۵۳	میانه

۳۷۲۵۶۲۷ ۳۸۱۲۰۰۰ ۳۷۲۲۷۱۰۳ ۳۸۲۱۲۲۴۰	کرمانشاه
۴۲۶۸۵۰۶۶	کلاچای
۵۲۶۲۰۰۵۵ ۵۲۶۲۹۰۸۴	کلاردشت
۳۵۴۴۸۲۱۴	کلاله
۴۴۴۰۴۴۷	کلبر
۳۴۷۱۳۷۲۳	کمالشهر
۴۸۲۲۴۴۰۳	کنگاور
۴۳۲۰۶۵۱۱	کهنوج
۴۶۴۲۲۱۶۶	کوهپایه
۳۲۶۳۸۳۱۰	کوهدشت
۴۴۴۶۲۶۷۴	کیش
۳۲۳۲۶۵۵۶	گچساران
۳۲۲۶۱۴۱۰ ۳۲۲۴۹۵۰۹ ۳۲۲۲۹۷۹۵	گرگان
۳۴۲۲۵۷۶۷	گرمسار
۳۲۵۰۳۹۹۰	گره
۳۲۶۴۱۸۶۴	گرمی
۵۳۲۲۸۹۸۹ ۵۷۴۵۰۰۰۳	گلپایگان
۳۴۶۶۲۷۹۳	گلوگاه
۳۴۴۶۲۱۲۲	گمیشان
۵۷۲۲۱۶۶۲ ۵۷۲۵۱۸۶۲	گناباد
۳۳۲۲۲۹۵۳	گنبد کاووس
۵۲۴۴۶۰۲۲ ۵۲۳۳۶۶۶۷	لار
۵۲۷۲۴۰۵۴	لامرد

فهرست نمایندگان جاروبرقی شرکت مشتریان گلدیران

۳۲۳۳۰۹۱۳	مبید
۳۵۲۲۸۱۷۷	مینو دشت
۴۶۲۵۱۳۲۷	نائین
۴۲۷۴۷۰۰۷	نجف آباد
۳۵۶۳۱۳۳۲	نقده
۳۴۷۲۴۲۲۰ ۳۴۷۲۵۷۲۲	نکاء
۳۳۲۴۶۰۶۷ ۳۳۲۲۰۷۰۴	نهایوند
۳۲۶۲۲۵۷۰	نهبندان
۴۴۶۵۳۳۶۶	نور
۴۲۵۲۳۷۸۷	نور آباد ممسنی
۵۲۳۳۶۲۲۱ ۵۲۳۳۷۱۱۷	نوشهر
۵۳۸۳۱۵۸۸	نیریز
۴۳۳۳۰۳۰۰ ۴۲۲۲۴۹۵۰	نیشابور
۳۲۵۷۲۰۰۹	هرات
۴۴۲۳۹۵۰۰	هشتگرد
۳۲۵۶۲۶۷ ۳۴۴۲۵۲۱۸ ۳۸۲۴۴۴۴۴	همدان
۳۷۶۲۳۹۰۲	ولایت جم
۳۳۲۳۰۶۲۱	یاسوج
۳۸۲۸۹۰۷۵ ۳۷۲۴۹۹۱۴ ۳۵۲۱۶۲۹۵	یزد

مرکز ارتباط مشتریان (۲۴ ساعته)

خط ویژه ۸۴۷۳۳-۰۲۱





