

## OWNER'S MANUAL

# DRYER

---



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

EN ENGLISH TR TÜRKÇE

RH80T1AP6R

**Thank you for choosing this product.**

This User Manual contains important safety information and instructions on the operation and maintenance of your appliance.

Please take the time to read this User Manual before using your appliance and keep this book for future reference.

| Icon                                                                                | Caption                       | Description                                    |
|-------------------------------------------------------------------------------------|-------------------------------|------------------------------------------------|
|  | <b>WARNING</b>                | Risk of serious injury or death                |
|  | <b>RISK OF ELECTRIC SHOCK</b> | Dangerous voltage                              |
|  | <b>FIRE</b>                   | Risk of fire                                   |
|  | <b>ATTENTION</b>              | Risk of injury or material damage              |
|  | <b>IMPORTANT/NOTE</b>         | Information on correct operation of the system |
|  | Read the instructions.        |                                                |
|  | Hot surface                   |                                                |

# CONTENTS

|                                                                  |           |
|------------------------------------------------------------------|-----------|
| <b>1. SAFETY INSTRUCTIONS .....</b>                              | <b>5</b>  |
| 1.1. Electrical Safety .....                                     | 5         |
| 1.2. Children's Safety .....                                     | 6         |
| 1.3. Product Safety .....                                        | 7         |
| 1.4. Correct Use .....                                           | 8         |
| 1.5. Installing On Top Of a Washing Machine.....                 | 9         |
| <b>2. INSTALLATION .....</b>                                     | <b>11</b> |
| 2.1. Connection to Water Outlet (with optional drain hose) ..... | 11        |
| 2.2. Connecting the Water Discharge Hose .....                   | 11        |
| 2.3. Adjusting the Feet.....                                     | 11        |
| 2.4. Electrical Connection.....                                  | 11        |
| 2.5. Under Counter Installation.....                             | 11        |
| <b>3. OVERVIEW .....</b>                                         | <b>12</b> |
| <b>4. PREPARING THE LAUNDRY .....</b>                            | <b>13</b> |
| 4.1. Sorting the Laundry to be Dried.....                        | 13        |
| 4.2. Preparing the Laundry to be Dried .....                     | 14        |
| 4.3. Load Capacity.....                                          | 14        |
| <b>5. USING THE TUMBLE DRYER .....</b>                           | <b>15</b> |
| 5.1. Control Panel.....                                          | 15        |
| 5.1.1. Programme Selection Knob.....                             | 15        |
| 5.1.2. Electronic Indicator and Additional Functions.....        | 15        |
| 5.1.3. Programme Selection and Consumption Table .....           | 17        |
| 5.1.4. Auxiliary Functions.....                                  | 18        |
| 5.1.5. Starting the Programme .....                              | 19        |
| 5.1.6. Programme Progress .....                                  | 20        |
| 5.2. Drum Light Information .....                                | 20        |
| <b>6. CLEANING AND CARE .....</b>                                | <b>22</b> |
| 6.1. Cleaning the Lint Filters.....                              | 22        |
| 6.2. Emptying the Water Tank.....                                | 22        |
| 6.3. Cleaning the Heat Exchanger.....                            | 23        |
| 6.4. Cleaning the Humidity Sensor .....                          | 23        |
| 6.5. Cleaning the Inner Surface of the Loading Door .....        | 24        |
| <b>7. TECHNICAL SPECIFICATIONS .....</b>                         | <b>25</b> |

**8. TROUBLESHOOTING ..... 26**

**9. AUTOMATIC FAULT WARNINGS AND WHAT TO DO ..... 28**

**10. ENVIRONMENTAL PROTECTION AND PACKAGING INFORMATION ..... 29**

10.1. Packaging Information..... 29

**11. DESCRIBING THE ENERGY LABEL AND SAVING ENERGY..... 29**

11.1. Energy Labelling ..... 29

11.2. Energy Efficiency ..... 30

**12. Warranty Card ..... 32**

## PRIMARY CONSIDERATIONS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.
- This tumble dryer is intended only for household and indoor use. The warranty will be void in case of commercial use.
- Use this product only for laundry with a label that indicates it is suitable for drying.
- The manufacturer will not accept responsibility for damages resulting from incorrect use or transport.
- The service life time of your tumble dryer is 10 years. This is the period during which the spare parts required for the tumble dryer to operate properly will be commercially available.
- Do not allow floor coverings to obstruct the ventilation openings.
- Installation and repair of the machine should only be made by an authorised repair agent. The manufacturer cannot be held responsible for damages resulting from un-authorised repairs.

 **WARNING:** Never spray or pour water onto the dryer to wash it! There is risk of electric shock!

- Leave at least 3 cm of space between the side and rear walls of the product and above if you plan on placing your appliance under a worktop.
- Assembly / disassembly for under-counter installation if necessary must be done by an authorised service agent.

- Before installation, check the product for visible damage. Never install or operate a damaged product.
- Keep pets away from the dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, if it prevents the door from being fully opened.

**⚠WARNING:** In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.

- Before contacting the local Authorised Service Provider for the installation of the dryer, check the information in the user manual to make sure that the electrical installation and water outlet is suitable. If they are not, call a qualified electrician and a plumber to have the necessary adjustments made.
- It is the customer's responsibility to prepare the dryer's installation place, as well as the electricity and waste water installation. Before installation, check the dryer for damage. If damaged, do not have it installed. Damaged products may endanger your health.
- Install the dryer on a stable and flat surface.
- Run the dryer in a dust-free environment where the air ventilation is good.
- The clearance between the dryer and the floor **should not be** reduced with objects such as carpets, wood or tape.

- **Do not block the ventilation grills** found on the plinth of the tumble dryer.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side of the tumble dryer, in such a way that blocks the full opening of the tumble dryer door.
- Once the dryer has been installed, the connections must remain stable. When installing the dryer, make sure that the rear surface is not leaning on anything (e.g. tap, socket).
- The operating temperature of the dryer is +5°C to +35°C. If operated out of this temperature range, the performance of the dryer will be affected negatively and the product will be damaged.
- Be careful when carrying the product since it is heavy. Always wear safety gloves.
- Always install the product should be placed against a wall.
- The rear surface of the product should be placed against the wall.
- When the product is placed on a stable surface, use a water level to check if it is fully stable. If not, adjust the feet until it becomes steady. Repeat this process every time you relocate the product.
- Do not place the dryer onto the power cable.

## Disposal of Your Old Appliance



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. Waste electrical and electronic products should be delivered to collection points established by the municipalities or you should request your seller to take your waste electrical and electronic product when you buy a new model of the same product and when the seller delivers it to your address.

The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

The product bearing this symbol may include hazardous substances. Hazardous substances in the products may cause environmental pollution and injury/death.

### EEE Complies with Directive

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. ([www.lg.com/global/recycling](http://www.lg.com/global/recycling))

# 1. SAFETY INSTRUCTIONS

This section contains safety instructions that will help protect you from risk of personal injury or property damage. Failure to follow these instructions will void any warranty.

## 1.1. Electrical Safety

- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Do not touch the power plug with wet hands. Always pull the plug to unplug the product, otherwise, there will be risk of an electric shock.
- Connect the dryer to a grounded socket with fuse protection. The earth connection must be installed by a qualified electrician. Our company cannot be held responsible for damages/losses resulting from using the dryer without an earth connection as required by local regulations.
- The voltage and the allowable fuse protection are indicated on the type plate.**(For the type plate, please see Overview)**
- Voltage and frequency values indicated on the type plate must be equal to the mains voltage and frequency value in your house.
- Unplug the dryer when it is not used for an extended period, and before installation, maintenance, cleaning and repair, otherwise, the dryer may get damaged.
- The plug socket must be freely accessible at all times after installation.

 To avoid the risk of fire or electric shock, do not use extension cords, multi sockets or adapters to connect the dryer to mains power.

## **1.2. Children's Safety**

- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children of less than 3 years should be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.
- Do not leave children unattended near the machine.
- Children might lock themselves in the machine resulting in risk of death.
- Do not allow children to touch the glass door during operation. The surface becomes extremely hot and may cause skin damage.
- Keep packaging material away from children.
- Poisoning and irritation may occur if detergent and cleaning materials are consumed or come into contact with the skin and eyes.
- Keep cleaning materials out of the reach of children
- Electrical products are dangerous for children.
- Keep children away from the product while it is running.

- To prevent children from interrupting the dryer cycle, you can use the child lock to avoid any changes in the running programme.
- Do not allow children to sit/climb on or climb inside the product.
- Children of less than 3 years should be kept away unless continuously supervised.

### 1.3. Product Safety



**Due to risk of fire, the following laundry items and products should NEVER be dried in the dryer:**

- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Cleaning cloths and mats that have residues of flammable cleaning agents or acetone, gas, petrol, stain remover, turpentine, candle, wax, wax remover or chemicals.
- Laundry that has residues of hair sprays, nail polish remover and similar substances.
- Laundry on which industrial chemicals have been used for cleaning (such as chemical cleaning).
- Laundry that has any kind of foam, sponge, rubber or rubber-like parts or accessories. These include latex foam sponge, shower caps, waterproof fabrics, fitted clothes, and foam pillows.
- Items with filling and damaged (parts or jackets). Foam protruding from these items might catch fire during the drying process.
- Operating the dryer in environments that contain flour or coal dust may cause explosion.

 **ATTENTION:** Underwear that contains metal reinforcements should not be put in the dryer. The dryer may be damaged if metal reinforcements come loose and break off during drying.

 **FIRE:**R290

## **Risk of fire and damage!**

This product contains environmental friendly but flammable R290 gas. Keep open flame and fire sources away from the product.

### **1.4. Correct Use**

 **ATTENTION:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

 **ATTENTION:** Make sure that pets do not enter the dryer. Check the inside of the dryer before using it.

 **ATTENTION:** Superheating of clothes inside the dryer can occur if you cancel the programme or in the event of a power failure whilst the dryer is running. This concentration of heat can cause self-combustion so always activate the Refresh programme to cool down or quickly remove all laundry from the dryer in order to hang them up and dissipate the heat.

- Use the dryer only for household drying and to dry fabrics with a label that indicates they are suitable for drying. All other uses are out of the scope of intended use and are prohibited.
- The warranty will be void in case of any commercial use.

- This appliance is designed to be used inside domestic residences only, and should be placed on a straight and stable surface.
- Do not lean against or sit on the door of the dryer. The dryer may tip over.
- To maintain a temperature that will not harm the laundry (e.g. to prevent the laundry from catching fire), a cooling process starts after the heating process. After this, the programme ends. At the end of the programme, always remove the laundry promptly.

 **ATTENTION:** Never use the dryer without a lint filter or with a damaged lint filter.

- Lint filters must be cleaned **after each use** as indicated in **Cleaning the Lint Filter**.
- Lint filters must be dried after wet cleaning. Wet filters might cause malfunction during the drying process.
- Lint accumulation must not to be allowed around the tumble dryer (not applicable for appliances intended to be vented to the exterior of the building)

 **IMPORTANT:** The clearance between the dryer and the floor should not be reduced with objects such as carpets, wood or panel, otherwise, sufficient air intake cannot be ensured for the machine.

- Do not install the dryer in rooms where there is risk of freezing. Freezing temperatures negatively affect the dryers performance. Condensed water that freezes in the pump and hose may cause damage.

## 1.5. Installing On Top Of a Washing Machine

 **ATTENTION:** A washing machine cannot be placed on the dryer. Pay attention to the warnings below when installing the dryer on a washing machine.

 **ATTENTION:** The dryer can only be placed on washing machines that have a same capacity and above.

- To use the dryer on the washing machine, a fixing part must be used between the two products. The fixing part must be attached by an Authorised Service Provider.
- When the dryer is placed on the washing machine, the total weight of these products may reach almost 150 kilograms (when loaded). Place the products on a solid floor that has a load bearing capacity!

| Appropriate Installation Table for Washing Machine and Tumble Dryer |                 |       |       |       |       |       |
|---------------------------------------------------------------------|-----------------|-------|-------|-------|-------|-------|
| Tumble Dryer<br>(Depth)                                             | Washing Machine |       |       |       |       |       |
|                                                                     | 37 cm           | 42 cm | 53 cm | 56 cm | 59 cm | 85 cm |
| 56 cm                                                               | X               | X     | ✓     | ✓     | ✓     | ✓     |
| 61 cm                                                               | X               | X     | X     | ✓     | ✓     | ✓     |

(For the depth information, please see 7. Technical Specifications)

In order to put the dryer machine onto the washing machine, a special stacking kit is required as an optional extra. Please contact LG Electronics Customer Information Centre or visit the LG Website at <http://www.lg.com> for purchase. The assembly instruction will be served together with the stacking kit.

#### CE Declaration of conformity

We declare that our products meet the applicable European Directives, Decisions and Regulations and the requirements listed in the standards referenced.


## 2. INSTALLATION

### 2.1. Connection to Water Outlet (with optional drain hose)

In products with a heat pump unit, water accumulates in the water tank during the drying process. You must empty the accumulated water **after each drying process**. Instead of periodically emptying the water tank, you can also use the water drain hose. Please contact LG Electronics Customer Information Centre or visit the LG Website at <http://www.lg.com> for purchase.

### 2.2. Connecting the Water Discharge Hose

1. Pull and take out the end of the hose at the back of the dryer. Do not use any tools to take out the hose.
2. Fit one end of the water discharge hose, which is provided with the product, to the slot from which you have removed the hose.
3. Fix the other end of the water discharge hose directly to the water outlet or sink.

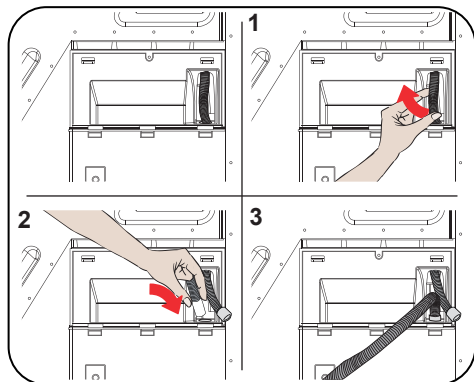

**⚠ ATTENTION:** The hose must be connected in a manner that it cannot be displaced. If the hose comes out during water discharge, there might be flooding in your house.

**✋ IMPORTANT:** The water discharge house must be installed at a height of 80 cm maximum.

**✋ IMPORTANT:** The water discharge hose must not be bent between the outlet and the product, folded or stepped over.

### 2.3. Adjusting the Feet

- For the dryer to work with less noise and vibration, it must be stable and balanced on its feet. Adjust the feed to ensure that the product is balanced.
- Rotate the feet to the right and to the left until the dryer is even and stable.

**✋ IMPORTANT:** Never remove the adjustable feet.

### 2.4. Electrical Connection


**⚠ ATTENTION:** There is risk of fire and electric shock.

- Your dryer is set to 220-240 V and 50 Hz.
  - The mains cable of the dryer is equipped with a special plug. This plug must be connected to an earthed socket protected by a fuse of 16 Amperes as indicated on the type plate. The fuse current rating of the power line where the outlet is connected must also be 16 amperes. Consult a qualified electrician if you do not have such an outlet or fuse.
  - Our company cannot be held responsible for damages resulting from usage without earthing.
- ✋ IMPORTANT:** Operating your machine at low voltage values will shorten the service life and decrease the performance of your machine.

### 2.5. Under Counter Installation

- Leave at least 3 cm of space between the side and rear walls of the product and the underside of the worktop when installing your product under a counter.
- Assembly / disassembly under the counter if necessary must be done by authorized service.

### 3. OVERVIEW

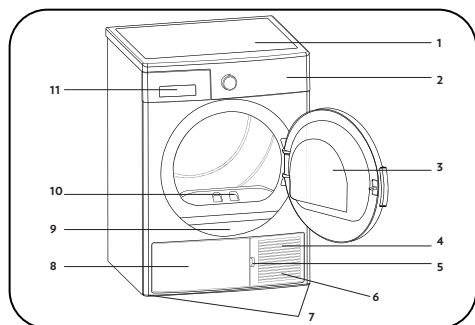

- 1. Upper tray
- 2. Control panel
- 3. Loading door
- 4. Plinth
- 5. Plinth opening slot
- 6. Ventilation grills
- 7. Adjustable feet
- 8. Plinth cover
- 9. Type plate
- 10. Lint filter
- 11. Drawer Cover

## 4. PREPARING THE LAUNDRY

### 4.1. Sorting the Laundry to be Dried

Follow the instructions on the labels of the laundry to be dried. Only dry items that have a statement/symbol that indicates "they can be dried in a dryer".

- Do not operate the product with load amounts and laundry types other than those given in 4.3. Load Capacity.

|                                                                                                                         |                                                                                                                |                                                                                                                    |                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
|  <p>Suitable for drying in a dryer</p> |  <p>Does not need ironing</p> |  <p>Sensitive/Delicate drying</p> |  <p>Not suitable for drying in a dryer</p> |
|  <p>No drying</p>                      |  <p>Do not dry-clean</p>      |  <p>At any temperature</p>        |  <p>At high temperatures</p>               |
|  <p>At medium temperatures</p>         |  <p>At low temperatures</p>   |  <p>Heatless</p>                  |  <p>Hang to dry</p>                        |
|  <p>Spread to dry</p>                |  <p>Hang wet to dry</p>     |  <p>Spread in shadow to dry</p> |  <p>Suitable for dry cleaning</p>        |

Do not dry thin, multi-layer or thick-layer fabrics together as they dry at different levels. For this reason, dry clothes together that have the same structure and fabric type. This way, you can get an even drying result. If you think that the laundry is still wet, you can select a time programme for additional drying.

Please dry your big (like duvets) and small sizes of laundries separately in order to not to have a damp laundries.

**⚠ IMPORTANT:** Delicate fabrics, embroidered fabrics, woolen/silk fabrics, clothes made of delicate and expensive fabrics, airtight clothes and tulle curtains are not suitable for drying in the dryer.

## 4.2. Preparing the Laundry to be Dried



### Risk of explosion and fire!

Remove all objects from pockets such as lighters and matches.



**ATTENTION:** The drum of the dryer and the fabrics may get damaged.

- The clothes may have become entangled during the washing process. Separate them from each other before placing them in the dryer.
- Remove all objects in the pockets of the clothes and apply the following:
- Tie fabric belts, apron laces etc. to each other or use a laundry bag.
- Lock the zips, clasps and fasteners, do up the buttons of covers.
- To get the best drying result, sort the laundry according to the textile type and drying programme.
- Remove clips and similar metal parts from the clothes.
- Woven goods such as t-shirts and knit clothes **generally shrink in the first drying**. Use a protective programme.
- **Do not over-dry synthetics. This will cause creases.**
- When washing the laundry to be dried, adjust the amount of softener according to the data from the manufacturer of the washing machine.

## 4.3. Load Capacity

Follow the instructions in the "Programme selection and consumption table". (**See: 5.2 Programme selection and consumption table**). Do not load the product with more laundry than the capacity values specified in the table.




**IMPORTANT:** It is not recommended to load the dryer with more laundry than the amount shown in the figure. When overloaded, the drying performance of the dryer will decrease and the dryer and laundry might be damaged.

| Laundry                     | Dry load weight (gr) |
|-----------------------------|----------------------|
| Bedsheet (double)           | 725                  |
| Pillowcase                  | 240                  |
| Bath Towel                  | 700                  |
| Hand Towel                  | 225                  |
| Shirt                       | 190                  |
| Cotton Shirt                | 200                  |
| Jean                        | 650                  |
| Fabric - Gabardine Trousers | 400                  |
| T-shirt                     | 120                  |

## 5. USING THE TUMBLE DRYER

### 5.1. Control Panel

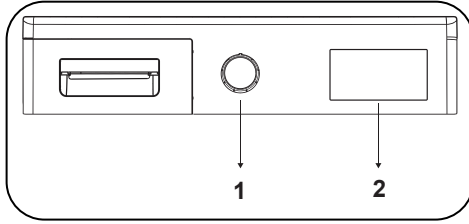


#### 1. Programme Selection Knob


#### 2. Electronic indicator and additional functions

##### 5.1.1. Programme Selection Knob

Use the programme selection knob to select the desired drying programme

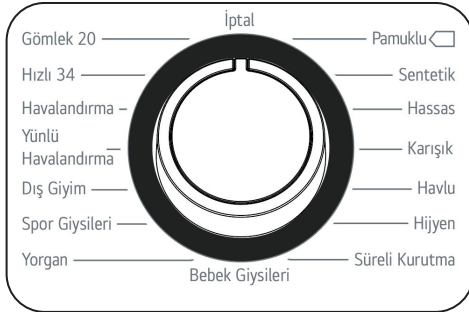

### 5.1.2. Electronic Indicator and Additional Functions

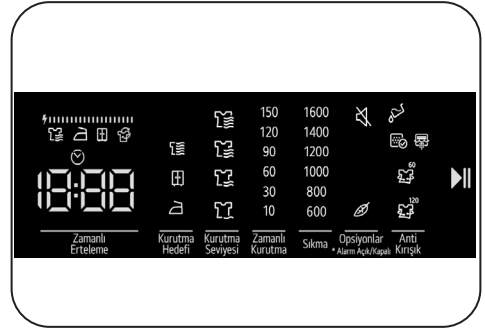

#### Display symbols:

|                                           |  |
|-------------------------------------------|--|
| Water tank warning indicator              |  |
| Lint filter cleaning warning indicator    |  |
| Heat exchanger cleaning warning indicator |  |
| Extra Dry                                 |  |
| Cupboard Dry                              |  |
| Iron Dry                                  |  |
| Drying level 1                            |  |
| Drying level 2                            |  |
| Drying level 3                            |  |
| Drying level 4                            |  |
| Delay Timer                               |  |
| Anti-crease 60'                           |  |
| Anti-crease 120'                          |  |

|                                                                                                                                                                                                                                                                                                                   |                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Delicate                                                                                                                                                                                                                                                                                                          |   |
| Buzzer Cancel                                                                                                                                                                                                                                                                                                     |  |
| Start and pause                                                                                                                                                                                                                                                                                                   |  |
| <b>Drying Step Display:</b>                                                                                                                                                                                                                                                                                       |                                                                                   |
| Drying                                                                                                                                                                                                                                                                                                            |  |
| Iron dry                                                                                                                                                                                                                                                                                                          |  |
| Cupboard dry                                                                                                                                                                                                                                                                                                      |  |
| End                                                                                                                                                                                                                                                                                                               |  |
| <p>The electronic display shows the drying steps throughout the program. Every time a program step starts, the relevant drying step light turns on. Once the drying step is complete, the relevant drying step light turns off.</p>                                                                               |                                                                                   |
| <b>Energy Consumption Display</b><br>                                                                                                                                                                                             |                                                                                   |
| <p>The energy consumption display shows the energy consumption of the selected program. The bigger the display, the more the energy consumption. The energy consumption level increases or decreases depending on the fabric type, duration of the selected program, the drying level and the spinning speed.</p> |                                                                                   |

### 5.1.3. Programme Selection and Consumption Table

Press the Start/Pause button to start the programme. The Start/Pause LED that indicates that the programme has started and the remaining time of the program is seen on the display.

| Programme                         | Load (kg) | Washing machine spin speed | Approximate amount of remaining humidity | Duration (minutes) |
|-----------------------------------|-----------|----------------------------|------------------------------------------|--------------------|
| *Pamuklu (Cotton)                 | 8         | 1000                       | 60%                                      | 174                |
| Sentetik (Synthetics)             | 4         | 800                        | 40%                                      | 74                 |
| Narin (Delicates)                 | 2         | 600                        | 50%                                      | 55                 |
| Karışık (Mixed Fabrics)           | 4         | 1000                       | 60%                                      | 112                |
| Havlular (Towel)                  | 3         | 1000                       | 60%                                      | 90                 |
| Hijyen (Hygiene)                  | 3         | 1000                       | 60%                                      | 95                 |
| Sürekli Kurutma (Time Dry)        | -         | -                          | -                                        | -                  |
| Bebek Giysileri (Babywear)        | 3         | 1000                       | 60%                                      | 78                 |
| Yorgan (Duvet)                    | 2,5       | 800                        | 60%                                      | 140                |
| Spor (Sportswear)                 | 4         | 800                        | 40%                                      | 103                |
| Dış giyim (Outdoor)               | 2         | 800                        | 40%                                      | 53                 |
| Yünlü Havalandırma (Wool Refresh) | -         | -                          | -                                        | 5                  |
| Havalandırma (Refresh)            | -         | -                          | -                                        | 10                 |
| Hızlı 34 (Quick 34)               | 1         | 1200                       | 50%                                      | 34                 |
| Gömlek 20 (Shirt 20)              | 0,5       | 1200                       | 50%                                      | 20                 |

| Energy consumption values                              |           |                            |                                          |                                 |
|--------------------------------------------------------|-----------|----------------------------|------------------------------------------|---------------------------------|
| Programme                                              | Load (kg) | Washing machine spin speed | Approximate amount of remaining humidity | Energy consumption values (kWh) |
| Cottons + Cupboard Dry                                 | 8         | 1000                       | 60%                                      | 1,88                            |
| Cottons + Iron Dry                                     | 8         | 1000                       | 60%                                      | 1,55                            |
| Synthetics + Cupboard Dry                              | 4         | 800                        | 40%                                      | 0,93                            |
| Power consumption in the "off mode" P <sub>o</sub> (W) |           |                            |                                          | 0,5                             |
| Power consumption in the "on mode" P <sub>L</sub> (W)  |           |                            |                                          | 1                               |



Cupboard  programme is the standard drying programme that can be run with a full or half load and for which the information is given on the label and product receipt. This programme is the most energy efficient programme to dry normal wet cotton clothes.

\*Energy labelling standard programme (EN 61121:2013)

All values in the table were determined in accordance with the EN 61121:2013 standard. Consumption values may vary from the values in the table depending on the fabric type, spin speed, environment conditions and voltage values.

### 5.1.4. Auxiliary Functions

The table that summarises the options that can be selected in programmes is given below.

| Option                                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Dry Target                               | Select the drying target suitable for your laundry to be dried. Select Extra Dry for thick and multilayer laundry that takes time to dry. Select Closet Dry for regular, single-layer laundry. Select Iron Dry for laundry that you wish to leave damp, ready for ironing.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Dry Level                                | The dampness level obtained after drying can be increased by another 3 levels in addition to the standard setting. This way, it is ensured that the laundry is drier. Levels that can be selected apart from the standard setting (Level 1) 2 (low), 3 (medium), 4 (high). After selection, light of the relevant drying level turns on.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Delicate Drying                          | Delicate fabrics are dried in a longer time at low temperatures.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Delay                                    | You can delay the start of the program by selecting a time between 1 and 23 hours. You can press Start/Pause to activate the desired delay time. When this time is up, the selected program will start automatically. During the delay time, options compatible with the program can be activated/deactivated. If you long press the Delayed Start button, the delay time will change continuously.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Cancel Audible Warning                   | The drying machine will give an audio warning when the buttons are pressed, when the program selection knob is turned and when the program ends. To cancel audio warnings, press and hold the "Anti-Crease Option" for 3 seconds. When you press this button, you will hear an audible warning that indicates that the option has been activated and the audible warnings stated will be cancelled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Time Dry                                 | If the program knob is turned to Time Drying, you can press the Time Drying option button to select it and press Start/Pause to start the program.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Child Lock                               | There is a child lock option to avoid changes in the programme flow when keys are pressed during the programme. To activate the child lock, press and hold the "Options" and "Anticrease" keys simultaneously for 3 seconds. When the child lock is active, all keys will be deactivated. Child lock will be deactivated automatically at the end of the programme. When activating/deactivating the child lock, "CL" will visualize on display for 2 sec and then becomes off; and an audible warning will be heard. Warning: when the product is running or the child lock is active, if you turn the programme selection knob, you will hear an audible warning and "CL" will visualize on display for 2 sec and then becomes off. Even if you set the programme knob to another programme, the previous programme will continue running. To select a new programme, you need to deactivate the child lock and then set the programme selection knob to "Off" position. Then, you can select and start the desired programme. |
| Anti-crease                              | If you do not open the door of the machine at the end of the program, the anti-crease option will be active for 60 minutes. When the anti-crease option is selected, anti-crease will be active for 120 minutes.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Spin                                     | For the laundry to be dried, set the spin speed on the washing machine where you washed the laundry. This way, it is ensured that the estimated drying time is more accurately displayed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>*Options vary depending on model.</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

### 5.1.5. Starting the Programme

The Start/Pause LED will flash during programme selection. Press the Start/Pause button to start the programme. The Start/Pause LED that indicates that the programme has started and the drying LED will come on.

| Programme                         | Description                                                                                                                                                                              |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| *Pamuklu (Cotton)                 | This programme dries cotton laundry including bedsheets, pillowcases, pyjamas, underwear, tablecloths etc.                                                                               |
| Sentetik (Synthetics)             | This programme dries synthetics, such as shirts, t-shirts, blouses, at a lower temperature compared to the cottons programme.                                                            |
| Narin (Delicates)                 | This programme dries thin clothes like shirts, blouses and silk garments at a low temperature to make them ready to wear.                                                                |
| Karışık (Mixed Fabrics)           | This programme dries cotton-synthetic mixed garments that do not discolour to make them ready to wear.                                                                                   |
| Havlular (Towel)                  | This programme dries thick cotton laundry such as towels, bathrobe, etc.                                                                                                                 |
| Hijyen (Hygiene)                  | "This programme is suitable for the fabrics which need hygiene requirements."                                                                                                            |
| Sürekli Kurutma (Time Dry)        | To reach the required drying level at a low temperature, you can use the time programmes of 10 min. to 150 min. Regardless of the drying level, the programme stops at the desired time. |
| Bebek Giysileri (Babywear)        | This programme provides hygienic drying for delicate infant clothes at a low temperature.                                                                                                |
| Yorgan (Duvet)                    | This programme is used to dry single duvet with feather, down or synthetic fillings.                                                                                                     |
| Spor (Sportswear)                 | Sport program is used for synthetic sport laundries like shorts, t-shirts at low temperature.                                                                                            |
| Dış giyim (Outdoor)               | This programme is suitable for outdoor clothing, waterproof jackets, jackets with inner insulation, etc.                                                                                 |
| Yünlü Havalandırma (Wool Refresh) | Wool refresh helps wool textiles to remove excess water after washing by applying low temperature and gentle movements of drum.                                                          |
| Havalandırma (Refresh)            | Time drying option is selected from 10 minutes to 120 minutes without providing hot air, refresh is done and bad odors can be eliminated.                                                |
| Hızlı 34 (Quick 34)               | 1 kg of synthetics spun at a high speed in the washing machine are dried in 34 minutes.                                                                                                  |
| Gömlek 20 (Shirt 20)              | 2 to 3 shirts are ready for to be ironed in 20 minutes.                                                                                                                                  |

 **IMPORTANT:** Do not open the loading door while the programme is running. If you have to open the door, do not keep it open for a long time.

### 5.1.6. Programme Progress

#### During the Programme

If you open the door when the programme is running, the product will switch to standby mode. Once the door has been closed, press the Start/Pause key to resume the programme.

Do not open the loading door when the programme is running. If you have to open the door, do not keep it open for a long time.

#### Programme End

Once the programme is over, the warning LEDs for Start/Pause, water tank level, filter cleaning and heat exchanger cleaning will turn on. Additionally, an audible warning will be given at the end of the programme. You can remove the laundry to make the machine ready for a new load.

 **IMPORTANT:** Clean the lint filter after every programme. Empty the water tank after every programme.

 **IMPORTANT:** If you do not take out the laundry after the programme has ended, the 1-hour Anti Crease phase will automatically be activated. This programme rotates the drum at regular intervals to prevent creases.

### 5.2. Drum Light Information

- This product includes LED Drum Light.
- The light works automatically when you open the door. And closes itself after a while automatically.
- It is not an adjustable option for user to open or close it.
- Please do not try to replace or modify the LED Light.

| Programme                         | Optionen       |       |               |            |                |          |           |            |      |
|-----------------------------------|----------------|-------|---------------|------------|----------------|----------|-----------|------------|------|
|                                   | Dry Target     | Delay | Buzzer Cancel | Child Lock | Delicate       | Time Dry | Dry Level | Anticrease | Spin |
| *Pamuklu (Cotton)                 | ✓              | ✓     | ✓             | ✓          | ✓              | X        | ✓         | ✓          | ✓    |
| Sentetik (Synthetics)             | ✓              | ✓     | ✓             | ✓          | ✓              | X        | ✓         | ✓          | ✓    |
| Narin (Delicates)                 | ✓              | ✓     | ✓             | ✓          | ✓<br>(default) | X        | X         | ✓          | ✓    |
| Karışık (Mixed Fabrics)           | ✓              | ✓     | ✓             | ✓          | ✓              | X        | ✓         | ✓          | ✓    |
| Havlular (Towel)                  | ✓              | ✓     | ✓             | ✓          | ✓              | X        | ✓         | ✓          | ✓    |
| Hijyen (Hygiene)                  | ✓              | ✓     | ✓             | ✓          | ✓              | X        | ✓         | ✓          | ✓    |
| Sürekli Kurutma (Time Dry)        | X              | ✓     | ✓             | ✓          | X              | ✓        | X         | ✓          | X    |
| Bebek Giysileri (Babywear)        | ✓              | ✓     | ✓             | ✓          | ✓              | X        | ✓         | ✓          | ✓    |
| Yorgan (Duvet)                    | ✓              | ✓     | ✓             | ✓          | ✓              | X        | ✓         | ✓          | ✓    |
| Spor (Sportswear)                 | ✓              | ✓     | ✓             | ✓          | ✓              | X        | ✓         | ✓          | ✓    |
| Dış giyim (Outdoor)               | ✓              | ✓     | ✓             | ✓          | ✓              | X        | ✓         | ✓          | ✓    |
| Yünlü Havalandırma (Wool Refresh) | X              | ✓     | ✓             | ✓          | X              | X        | X         | ✓          | X    |
| Havalandırma (Refresh)            | X              | ✓     | ✓             | ✓          | X              | ✓        | X         | ✓          | X    |
| Hızlı 34 (Quick 34)               | ✓              | ✓     | ✓             | ✓          | X              | X        | X         | ✓          | X    |
| Gömlek 20 (Shirt 20)              | ✓              | ✓     | ✓             | ✓          | X              | X        | X         | ✓          | X    |
| X                                 | Not selectable |       |               |            |                |          |           |            |      |
| ✓                                 | Selectable     |       |               |            |                |          |           |            |      |


## 6. CLEANING AND CARE

**⚠ IMPORTANT:** Do not use industrial chemicals to clean your dryer. Do not use a dryer that has been cleaned with industrial chemicals.

### 6.1. Cleaning the Lint Filters

**⚠ IMPORTANT:** DO NOT FORGET TO CLEAN THE LINT FILTERS AFTER EACH USE.


To clean the lint filters:

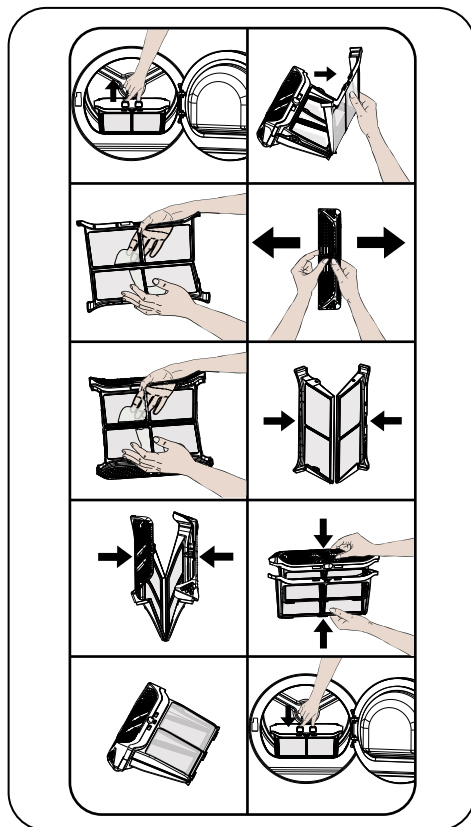


1. Open the loading door.
2. Pull up the lint filters to remove it.
3. Open the outer filter
4. Clean the outer filter by your hands or using a soft cloth.
5. Open the inner filter
6. Clean the inner filter by your hands or using a soft cloth

7. Close the filters and fit the hooks
8. Place inner filter inside of outer filter
9. Refit the Lint filter

After the dryer has been used for a certain period of time, if you encounter a layer that will cause obstruction on the filter surface, wash the filter with warm water to clean the layer. Dry the filter thoroughly before reinstalling it again.

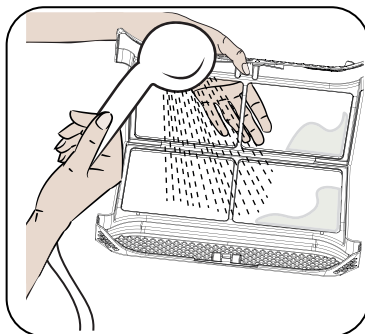

### 6.2. Emptying the Water Tank

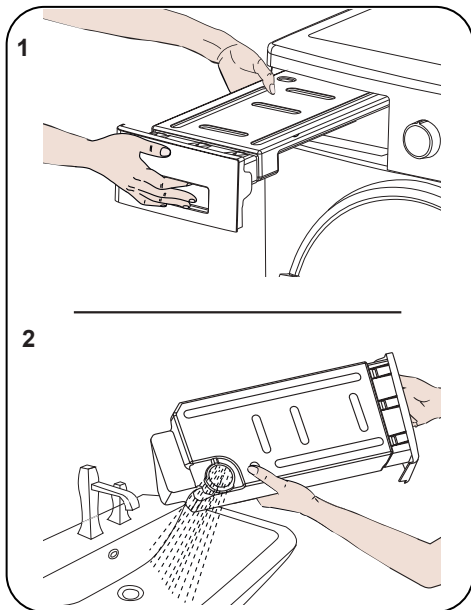

1. Pull the drawer cover and carefully take out the tank.
2. Empty the water in the tank.
3. If there is lint accumulated on the discharge cap in the tank, clean it with water.

4. Refit the water tank.


**ⓘ IMPORTANT:** Never remove the water tank when the programme is running. The water condensed in the water tank is not suitable for human consumption.

**ⓘ IMPORTANT:** DO NOT FORGET TO EMPTY THE WATER TANK AFTER EACH USE.

### 6.3. Cleaning the Heat Exchanger

**ⓘ IMPORTANT:** Clean the heat exchanger when you see the warning "Heat Exchanger cleaning".

**ⓘ IMPORTANT:** EVEN IF THE "HEAT EXCHANGER CLEANING WARNING LED" IS NOT ON: CLEAN THE HEAT EXCHANGER AFTER EVERY 30 DRYING PROCESSES OR THREE TIMES A MONTH.

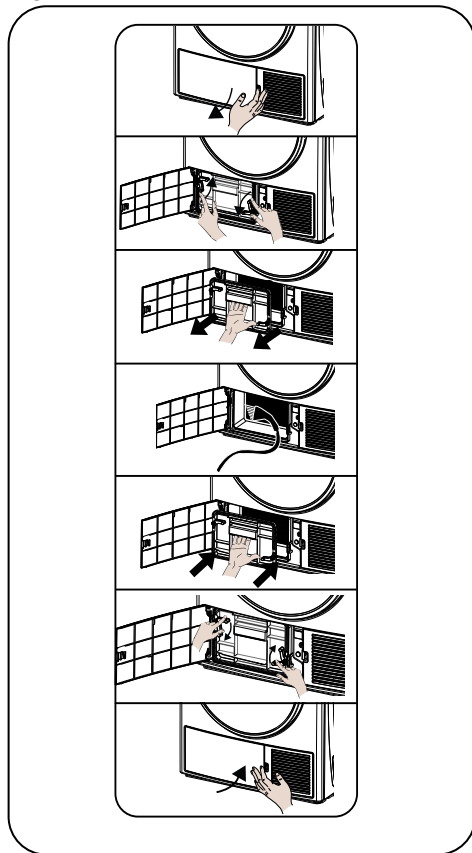


If the drying process is completed, open the loading door and wait for it to cool down.

1. Open the kick plate cover as shown.
2. Unlock the exchanger cover by turning in the direction shown with arrows.
3. Take out the exchanger cover as shown.
4. Clean the front surface of the exchanger as shown.
5. Fit the exchanger cover as shown.
6. Lock the exchanger cover by turning in the direction shown with arrows.
7. Close the kick plate cover as shown.

**⚠ WARNING:** DO NOT CLEAN WITH BARE HANDS SINCE THE EXCHANGER FINS ARE SHARP. THEY MAY HURT YOUR HANDS

### 6.4. Cleaning the Humidity Sensor

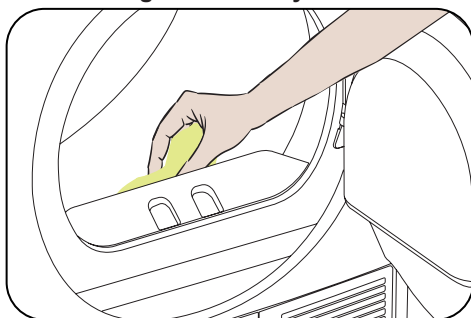

Inside the machine, there are humidity sensors that detect whether the laundry is dry or not.

To clean the sensors:

1. Open the loading door of the machine.
2. If the machine is still hot due to the drying process, wait for it to cool down.
3. Using a soft cloth soaked in vinegar, wipe the metal surfaces of the sensor and dry them.

**ⓘ IMPORTANT:** CLEAN THE METAL SURFACES OF THE SENSOR 4 TIMES A YEAR.


**ⓘ IMPORTANT:** Do not use metal tools to clean the metal surfaces of the sensor.

**⚠ WARNING:** Due to the risk of fire and explosion, do not use solution agents, cleaning agents or similar products when cleaning the sensors.

## 6.5. Cleaning the Inner Surface of the Loading Door

**⚠ IMPORTANT:** DO NOT FORGET TO CLEAN THE INNER SURFACE OF THE LOADING DOOR AFTER EACH DRYING PROCESS.

Open the loading door of the dryer and clean all of the inner surfaces and the gasket with a soft, damp cloth.

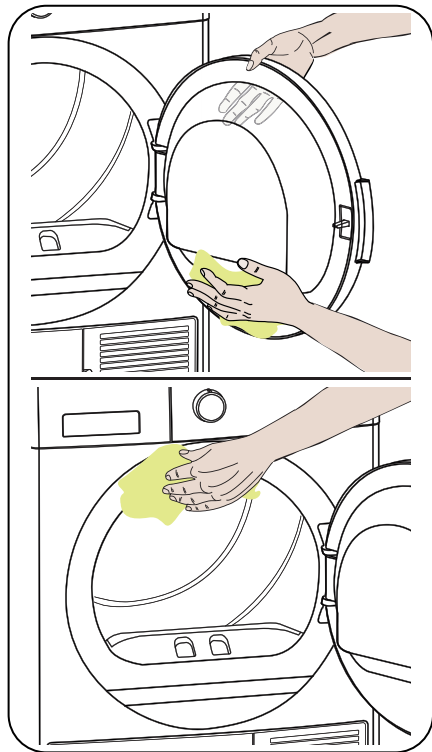

## 7. TECHNICAL SPECIFICATIONS

|                                |                            |
|--------------------------------|----------------------------|
| Brand                          | LG                         |
| Model name                     | RH80T1AP6R                 |
| Height                         | Min: 845 mm / Max: 855 mm* |
| Width                          | 600 mm                     |
| Depth                          | 610 mm                     |
| Capacity (max.)                | 8 kg**                     |
| Net weight (with plastic door) | 45,4 kg                    |
| Net weight (with glass door)   | 47,8 kg                    |
| Voltage                        | 220-240 V                  |
| Power                          | 1000 W                     |

\*Min. height: Height with the adjustable feet not used. Max. height: Height with the adjustable feet extended to the maximum.

\*\*Dry laundry weight before washing.



**IMPORTANT:** To improve the quality of the dryer, technical specifications are subject to change without prior notice.



**IMPORTANT:** The values declared have been obtained in a laboratory environment according to the relevant standards. These values may change depending on the environmental conditions and use of the dryer.



### **ATTENTION:**

1. Due to safety reasons, legislation forces a room of at least 1 m<sup>3</sup> per 8 g refrigerant for such equipment. For 110 g propane, the minimum allowed room size would be 13.75 m<sup>3</sup>.

2. Coolant :Risk of fire/risk of poisoning/risk of material damage and damage to the appliance. The appliance contains refrigerant which, although it is environmentally friendly, is flammable R290. Failure to dispose of it properly may result in a fire or poisoning. Dispose of the appliance properly and do not damage the pipes in the refrigerant circuit.

- Type of refrigerant : R290
- Quantity of gas : 110 g
- ODP (Ozone Depletion Potential) : 0
- GWP (Global Warming Potential) : 3

3. Risk of explosion or fire. Remove any cigarette lighters and matches from pockets.

4. Do not place the dryer near open fires and ignition sources.

## 8. TROUBLESHOOTING

Your dryer is fitted with systems that continuously perform checks during the drying process to take the necessary measures and warn you in case of any malfunction.

**⚠ WARNING:** If the problem persists even if you have applied the steps in this section, please contact the your dealer or an Authorised Service Provider. Never try to repair a nonfunctional product.

| PROBLEM                                                                                                        | REASON                                                                                        | SOLUTION                                                                                                                                   |
|----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| The drying process takes a long time.                                                                          | The surface of the lint filter might be clogged.                                              | Wash the filter with lukewarm water.                                                                                                       |
|                                                                                                                | The heat exchanger might be clogged.                                                          | Clean the heat exchanger                                                                                                                   |
|                                                                                                                | The ventilation grills in front of the machine might be closed.                               | Open the doors/windows to prevent the room temperature from rising too much.                                                               |
|                                                                                                                | There might be a layer of limescale on the humidity sensor.                                   | Clean the humidity sensor.                                                                                                                 |
|                                                                                                                | The dryer might be overloaded with laundry.                                                   | Do not overload the dryer.                                                                                                                 |
|                                                                                                                | The laundry might be insufficiently spun.                                                     | Select a higher spin speed on your washing machine.                                                                                        |
| Laundry comes out damp at the end of the drying process.                                                       | ⚠ The laundry that comes out hot at the end of the drying process generally feels more humid. |                                                                                                                                            |
|                                                                                                                | The programme used might not be suitable for the type of laundry.                             | Check the care labels on the laundry items, select a suitable programme for the type of laundry and additionally, use the time programmes. |
|                                                                                                                | The surface of the lint filter might be clogged.                                              | Wash the filter with lukewarm water.                                                                                                       |
|                                                                                                                | The heat exchanger might be clogged.                                                          | Clean the heat exchanger                                                                                                                   |
|                                                                                                                | The dryer might be overloaded with laundry.                                                   | Do not overload the dryer.                                                                                                                 |
|                                                                                                                | The laundry might be insufficiently spun.                                                     | Select a higher spin speed on your washing machine.                                                                                        |
| The dryer cannot be opened or the programme cannot be started. The dryer does not get activated when adjusted. | The dryer might not be plugged in.                                                            | Make sure that the plug is fitted in the socket.                                                                                           |
|                                                                                                                | The loading door might be open.                                                               | Make sure that the loading door is properly closed.                                                                                        |
|                                                                                                                | You might not have set a programme or pressed the Start/Pause key.                            | Make sure that the programme has been set and the dryer is not in the Standby (Pause) mode.                                                |
|                                                                                                                | Child lock might be active.                                                                   | Deactivate the child lock.                                                                                                                 |
| The programme has been interrupted for no reason.                                                              | The loading door might not be closed properly.                                                | Make sure that the loading door is properly closed.                                                                                        |
|                                                                                                                | There might have been a power failure.                                                        | Press the Start/Pause key to start the programme.                                                                                          |
|                                                                                                                | The water tank might be full.                                                                 | Empty the water tank.                                                                                                                      |

| PROBLEM                                                                | REASON                                                                                                                           | SOLUTION                                                                                         |
|------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| Clothes have shrunk, felted or deteriorated.                           | The programme used might not be suitable for the type of laundry.                                                                | Check the care labels on the laundry items, select a suitable programme for the type of laundry. |
| Water leaking from the loading door.                                   | There might be lint accumulated on the inner surfaces of the loading door and on the surfaces of the gasket of the loading door. | Clean the inner surfaces of the loading door and the surfaces of the gasket of the loading door. |
| The loading door opens on its own.                                     | The loading door might not be closed properly.                                                                                   | Push the loading door until you hear the closing sound.                                          |
| The water tank warning symbol is on/flashing.                          | The water tank might be full.                                                                                                    | Empty the water tank.                                                                            |
|                                                                        | The water discharge hose might be bent.                                                                                          | If the product is connected directly to the water outlet, check the water discharge hose.        |
| The filter cleaning warning symbol is on.                              | The lint filter might be unclean.                                                                                                | Clean the filter.                                                                                |
|                                                                        | The filter seat might be clogged by lint.                                                                                        | Clean the filter seat.                                                                           |
|                                                                        | There might be a layer that causes obstruction on the surface of the lint filter.                                                | Wash the filter with lukewarm water.                                                             |
| The heat exchanger cleaning warning symbol is on.                      | The heat exchanger might be unclean.                                                                                             | Clean the heat exchanger.                                                                        |
| The filter and heat exchanger cleaning warning symbol are flashing.    | The filter seat might be clogged by lint.                                                                                        | Clean the filter seat.                                                                           |
|                                                                        | There might be a layer that causes obstruction on the surface of the lint filter.                                                | Wash the filter with lukewarm water.                                                             |
|                                                                        | The heat exchanger might be clogged.                                                                                             | Clean the heat exchanger.                                                                        |
| The program can not be started and the filter warning led is blinking. | The filter may not be placed.                                                                                                    | Replace the filter.                                                                              |
|                                                                        | The filter warning led is blinking even though the filter is placed.                                                             | Call technical service.                                                                          |

## 9. AUTOMATIC FAULT WARNINGS AND WHAT TO DO

Your tumble dryer is equipped with a built-in fault detection system, indicated by a combination of flashing operation lights. The most common failure codes are shown below.

| ERROR CODE                                                                              | SOLUTION                                                                                        |
|-----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| E00                                                                                     | Contact the nearest authorised service agent.                                                   |
| E03 /  | Empty the water tank, if problem does not solved, contact the nearest authorised service agent. |
| E04                                                                                     | Contact the nearest authorised service agent.                                                   |
| E05                                                                                     | Contact the nearest authorised service agent.                                                   |
| E06                                                                                     | Contact the nearest authorised service agent.                                                   |
| E07                                                                                     | Contact the nearest authorised service agent.                                                   |
| E08                                                                                     | There may be voltage fluctuation in mains. Wait until voltage is appropriate for working range. |


10. ENVIRONMENTAL  
PROTECTION AND PACKAGING  
INFORMATION

10.1. Packaging Information

The packaging of this product is made of recyclable materials. Do not dispose of the packaging, waste together with household or other waste. Instead, take it to a packaging collection point defined by your local authority.

11. DESCRIBING THE ENERGY  
LABEL AND SAVING ENERGY

11.1. Energy Labelling

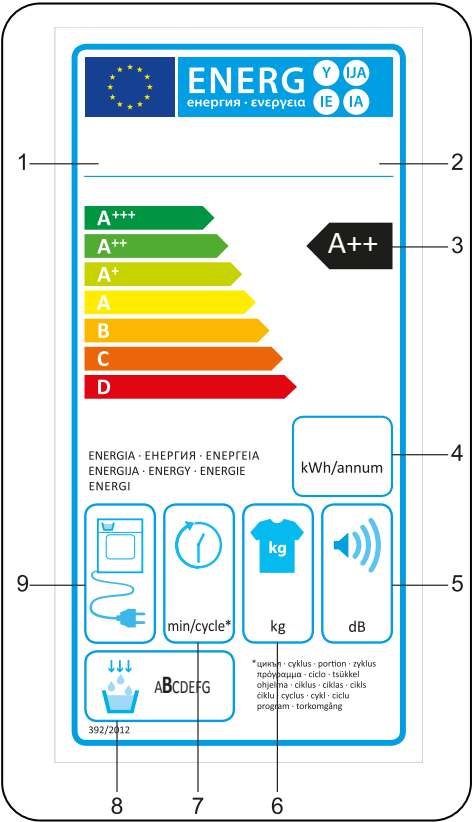

- 1. Trademark
- 2. Model
- 3. Energy Class
- 4. Annual Power Consumption
- 5. Noise During Drying
- 6. Dry Laundry Capacity
- 7. Cotton Cupboard Dry Cycle Time
- 8. Condensing Efficiency Class
- 9. Machine Technology

## 11.2. Energy Efficiency

- You should operate the dryer to full capacity, but make sure that it is not overloaded.
- When the laundry is being washed, the spin speed should be at the highest level possible. This will shorten the drying time and reduce energy consumption.
- Make sure that the same kinds of laundry are dried together.
- Please follow the recommendations in the user manual for programme selection.
- For air circulation, leave an appropriate clearance on the front and back sides of the dryer. Do not cover the grills on the front side of the machine.
- Unless necessary, do not open the door of the machine when drying. If you have to open it, do not keep it open for a long time.
- Do not add new (wet) laundry during the drying process.
- Hairs and lint that detach from the laundry and merge in the air are collected by the "Lint Filters". Please make sure that the filters are cleaned before and after each use.
- For models with a heat pump, make sure that the heat exchanger is cleaned at least three times a month or after each 30 uses.
- During the drying process, the environment where the dryer is installed must be well ventilated.

| PRODUCT FICHE                                                                                             |                |
|-----------------------------------------------------------------------------------------------------------|----------------|
| Complying Commission Delegated Regulation (EU) No 392/2012                                                |                |
| Supplier name or trademark                                                                                | LG Electronics |
| Model name                                                                                                | RH80T1AP6R     |
| Rated capacity (kg)                                                                                       | 8              |
| Type of Tumble Dryer                                                                                      | Heat Pump      |
| Energy efficiency class <sup>(1)</sup>                                                                    | A++            |
| Annual Energy Consumption (kWh) <sup>(2)</sup>                                                            | 235            |
| Automatic or Non-automatic                                                                                | Automatic      |
| Energy Consumption of the standard cotton programme at full load (kWh)                                    | 1,88           |
| Energy Consumption of the standard cotton programme at partial load (kWh)                                 | 1,10           |
| Power consumption of the off-mode for the standard cotton programme at full load PO (W)                   | 0,50           |
| Power consumption of the left-on mode for the standard cotton programme at full load PL (W)               | 1,00           |
| The duration of the left mode on (min.)                                                                   | n/a            |
| Standard cotton programme <sup>(3)</sup>                                                                  | -              |
| Programme time of the standard cotton programme at full load , $T_{dry}$ (min.)                           | 179            |
| Programme time of the standard cotton programme at partial load , $T_{dry1/2}$ (min.)                     | 107            |
| Weighted programme time of the standard cotton programme at full and partial load (Tt) (min.)             | 138            |
| Condensation efficiency class <sup>(4)</sup>                                                              | B              |
| Average condensation efficiency of the standard cotton programme at full load $C_{dry}$ (%)               | 81             |
| Average condensation efficiency of the standard cotton programme at partial load $C_{dry1/2}$ (%)         | 81             |
| Weighted condensation efficiency of the standard cotton programme at full load and partial load $C_t$ (%) | 81             |
| Sound power level for the standard cotton programme at full load <sup>(5)</sup> (dB)                      | 65             |
| Built-in                                                                                                  | No             |

(1) Scale from A+++ (most efficient) to D (least efficient)

(2) Energy consumption based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

(3) "Cotton + Cupboard Dry  " used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton

(4) Scale from G (least efficient) to A (most efficient)

(5) Weighted average value - L wA expressed in dB(A) re 1 pW

## 12. WARRANTY CARD

### 12. 1 Warranty

## Warranty

### Warranty Information

1. The warranty period is as follows from the delivery date of the product.

#### Warranty Period and Lifetime Table\*1

| Products                  | Warranty Period | Lifetime |
|---------------------------|-----------------|----------|
| Washing Machine,<br>Dryer | 3 Years         | 10 Years |

\*1 The lifetimes stated in this table are taken from the AFTER SALES SERVICES REGULATION published in the Official Gazette dated 13.06.2014 and numbered 29029, organized by the Ministry of Customs and Trade.

2. All of the goods, including all parts are covered by our company warranty.
3. If the goods fail within the warranty period, the period spent in repair is added to the warranty period. The repair time of the goods is a maximum of 20 working days. This period starts from the date of notification to the service station of the malfunction related to the goods, in the absence of the service station, to one of the goods seller, dealer, agent, representative, importer or manufacturer of the manufacturer. If the malfunction of the industrial goods is not resolved within 10 working days, the manufacturer-manufacturer or importer; until the repair of the goods is completed, another property with similar characteristics shall be allocated to the use of the consumer.
4. In the event that the goods fail within the warranty period due to both material and workmanship and assembly errors, the repair shall be made under no charge, under the cost of labour, replacement part cost or any other name.
5. For warranty problems, T.C. The Ministry of Customs and Trade, General Directorate of Consumer Protection and Market Surveillance can be applied.
6. If the goods are found to be defective, the consumer;
  - Returning from the contract, stating that it is ready to return the sold person,
  - Retain the sold and ask for a discount on the sale price at the rate of shame,
  - Requesting the repair of the sold person free of charge, with all costs at the seller, unless excessive costs are required;
  - If there is a possibility, it may use one of its optional rights to request that the sale be replaced with an undamaged amount. The seller is obliged to fulfil this demand which is preferred by the consumer. The right to free repair or replacement of the goods without defect can also be used against the manufacturer or importer. The seller, manufacturer and importer are jointly responsible for the fulfilment of these rights.

## 12. 2 Service Information

The manufacturer or importer shall not be held liable if the proof proves that a defect has arisen after the goods have been placed on the market by him. In the event that the free repair or replacement of the goods with disproportionate doubts brings disproportionate difficulties for the seller, the consumer may use one of the rights to return from the contract or deduct the price of the defect are considered. A maximum of twenty business days from the date of receipt of this request to the seller, manufacturer or importer if one of the rights to free repair or replacement of the goods by defect is selected. However, the consumer's free repair request for the goods listed in the supplementary list pursuant to Article 58 of this Law is fulfilled within the maximum repair period specified in the regulation. Otherwise, the consumer is free to exercise his other elective rights. In the event that the consumer chooses the right to deduct from the contract or return at the rate of defect, the whole amount paid or the amount deducted from the price is immediately returned to the consumer. The consumer may demand compensation in accordance with the provisions of the Turkish Code of Obligations dated 11/1/2011 and numbered 6098 together with one of these optional rights.

### 7. Information on operating errors.

- Malfunctions caused by the consumer's use of the goods contrary to the information contained in the user manual are excluded from the warranty. If there is an error in the use of faults, authorized service stations, if there is no authorized service station, respectively; the seller, importer or one of the goods by the manufacturer of the maximum repair time related to the goods issued by the report and a copy of this report must be given to the consumer.

### 8. In case the authorized service stations do not exist, if there is no usage error in the faults, if the authorized service station does not exist, then the consumer arbitration committee shall take into account the monetary value of the dispute taking into account the value of the dispute by the expert or apply to the consumer court.

## Service Information

### Our Dear Customer

- The LG Call Management Centre is open 7 days/24 hours on the phone number 444 6 543 (LGE). When you call outside these hours, you will be contacted during the first working hours if you leave your name, surname and phone number with the area code. You can call the nearest Authorized Service phone directly by dialling this number or request the service you require.

**Çağrı Merkezi**

**444 6 543 (LGE)**

**+90 530 918 65 43 (WhatsApp only) [www.lg.com](http://www.lg.com)**

**ÇAĞRI MERKEZİMİZİ SABİT TELEFONLARDAN**

**VEYA CEP TELEFONLARINDAN ALAN KODU**

**ÇEVİRMEKSİZİN ARAYABİLİRSİNİZ**

- This product has been imported by LG Electronics Turkey. Warranty conditions is valid in Turkey and provided by LG Electronics Turkey
- Message or share media for easy communication Add "+90 530 918 65 43" to your phonebook and connect to LG Customer Service.
- As the services may change from time to time, you can confirm the service you are calling from the call center.
- You can find the nearest authorized service center information on the LG website ([www.lg.com/en](http://www.lg.com/en)).

### Customer Information

- Customer Name: \_\_\_\_\_
- Customer Address: \_\_\_\_\_
- Tel: \_\_\_\_\_
- Customer Signature: \_\_\_\_\_

### Product Information

- Product Type: \_\_\_\_\_
- Model Number: \_\_\_\_\_
- Serial Number: \_\_\_\_\_
- Date of Delivery: \_\_\_\_\_
- Date of Invoice: \_\_\_\_\_
- Invoice Number: \_\_\_\_\_

### Dealer Information

- Dealer Name: \_\_\_\_\_
- Dealer Address: \_\_\_\_\_
- Tel / Fax: \_\_\_\_\_
- Dealer Signature: \_\_\_\_\_

### Importer's Information

#### İTHALATÇI FİRMA

LG Electronics Ticaret A.Ş.  
Kaptanpaşa Mah. Piyalepaşa Bulvarı No: 73  
Ortadoğu Plaza Kat: 7 ve 8  
Okmeydanı/ Şişli/ İstanbul  
Posta Kodu: 34384  
Telefon: (0 212) 314 52 52  
Fax: (0 212) 222 61 44



LG ELECTRONICS TİCARET ANONİM ŞİRKETİ  
Kaptanpaşa Mah. Piyalepaşa Bulvarı No: 73  
Ortadoğu Plaza Kat: 7  
Okmeydanı/ Şişli/ İstanbul  
Telefon: (0212) 314 52 52 Fax: (0212) 222 61 44  
Vergi No: 6080 467 738  
Vergi Dairesi: Boğaziçi Kurumlar

## KULLANICI EL KİTABI

# KURUTUCU

---



Kurulumdan önce talimatları dikkatli bir şekilde okuyun. Bu talimatları okumanız kurulumu kolaylaştıracak ve ürünün doğru ve güvenli şekilde kurulmasını sağlayacaktır. İleride başvurmak üzere bu talimatları kurulumdan sonra ürünün yanında bulundurun.

RH80T1AP6R

**Bu ürünü seçtiğiniz için teşekkür ederiz.**

Bu Kullanıcı Kılavuzu, cihazınızın kullanımı ve bakımı ile ilgili önemli güvenlik bilgileri ve talimatlar içerir. Lütfen cihazınızı kullanmadan önce bu Kullanım Kılavuzunu okumak için zaman ayırın ve bu kitabı ileride incelemek üzere saklayın.

| İkon                                                                                | Altyazı                       | Açıklama                                |
|-------------------------------------------------------------------------------------|-------------------------------|-----------------------------------------|
|  | <b>UYARI</b>                  | Ciddi yaralanma veya ölüm riski         |
|  | <b>ELEKTRİK ÇARPMA RİSKİ</b>  | Tehlikeli voltaj                        |
|  | <b>ATEŞ</b>                   | Yangın riski                            |
|  | <b>DİKKAT</b>                 | Yaralanma veya mülk hasar riski         |
|  | <b>ÖNEMLİ / NOT</b>           | Sistemi doğru çalıştırma hakkında bilgi |
|  | Kullanım kılavuzunu okuyunuz. |                                         |
|  | Sıcak Yüzey                   |                                         |

# İÇİNDEKİLER

|                                                                |           |
|----------------------------------------------------------------|-----------|
| <b>1. GÜVENLİK UYARILARI.....</b>                              | <b>5</b>  |
| 1.1. Elektrik Güvenliği.....                                   | 5         |
| <b>1.2. Çocuk Güvenliği .....</b>                              | <b>6</b>  |
| <b>1.3. Ürün Güvenliği.....</b>                                | <b>7</b>  |
| <b>1.4. Doğru Kullanım.....</b>                                | <b>8</b>  |
| <b>1.5. Çamaşır Makinesi Üzerine Kurulum .....</b>             | <b>10</b> |
| <b>2. KURULUM .....</b>                                        | <b>11</b> |
| 2.1. Su Çıkışına Bağlama (opsiyonel tahliye hortumu ile) ..... | 11        |
| 2.2. Su Tahliye Hortumunun Bağlanması.....                     | 11        |
| 2.3. Ayakların Ayarlanması .....                               | 11        |
| 2.4. Elektrik Bağlantısı .....                                 | 11        |
| 2.5. Tezgah Altına Montaj.....                                 | 11        |
| <b>3. GENEL BİLGİ.....</b>                                     | <b>12</b> |
| <b>4. ÇAMAŞIRLARIN HAZIRLANMASI .....</b>                      | <b>13</b> |
| 4.1. Kurutulacak Çamaşırların Ayrılması .....                  | 13        |
| 4.2. Kurutulacak Çamaşırların Hazırlanması.....                | 14        |
| 4.3. Yük Dolum Kapasitesi.....                                 | 14        |
| <b>5. KURUTMA MAKİNASININ KULLANILMASI .....</b>               | <b>15</b> |
| 5.1. Kontrol Paneli .....                                      | 15        |
| 5.1.1. Program Seçim Düğmesi .....                             | 15        |
| 5.1.2. Elektronik Gösterge ve Ek Fonksiyonlar.....             | 15        |
| 5.1.3. Program Seçimi ve Tüketim Tablosu.....                  | 17        |
| 5.1.4. Yardımcı Fonksiyonlar .....                             | 18        |
| 5.1.5. Programın Başlatılması.....                             | 19        |
| 5.1.6. Program İlerleme Göstergesi .....                       | 20        |
| 5.2. Tambur Aydınlatması Bilgilendirmesi .....                 | 20        |
| <b>6. TEMİZLİK VE BAKIM .....</b>                              | <b>22</b> |
| 6.1. Su Tankının Boşaltılması .....                            | 22        |
| 6.2. Eşanjör Temizliği .....                                   | 23        |
| 6.3. Nem Sensörü Temizliği.....                                | 23        |
| 6.4. Yükleme Kapağı İç Yüzey Temizliği .....                   | 24        |
| <b>7. TEKNİK ÖZELLİKLER.....</b>                               | <b>25</b> |
| <b>8. SORUN GİDERME.....</b>                                   | <b>26</b> |
| <b>9. HATA KODLARI VE YAPILMASI GEREKENLER.....</b>            | <b>28</b> |

|                                                                   |           |
|-------------------------------------------------------------------|-----------|
| <b>10. ÇEVRE KORUMA VE AMBALAJ BİLGİSİ.....</b>                   | <b>29</b> |
| <b>10.1. Ambalaj Bilgisi.....</b>                                 | <b>29</b> |
| <b>11. ENERJİ ETİKETİNİN AÇIKLANMASI VE ENERJİ TASARRUFU.....</b> | <b>29</b> |
| <b>11.1. Enerji Etiketi.....</b>                                  | <b>29</b> |
| <b>11.2. Enerji Verimliliği .....</b>                             | <b>30</b> |
| <b>12. Garanti Kartı.....</b>                                     | <b>32</b> |

## CİHAZI KULLANIRKEN DİKKAT EDİLMESİ GEREKEN GÜVENLİK BİLGİLERİ

- Kurutma makinesi, ürünün güvenli bir şekilde kullanımı ve tehlikeleri hakkında denetlendikleri veya eğitim verildikleri sürece 8 yaş ve üstü çocuklar ile fiziksel, duyuşal veya zihinsel yetenekleri tam gelişmemiş veya tecrübe ve bilgi eksiğı bulunan insanlar tarafından kullanılabilir. Çocuklar cihaz ile oynamamalıdır. Temizleme ve kullanıcı bakım işlemleri kendilerini denetleyen biri olmadığı sürece çocuklar tarafından gerçekleştirilmemelidir.
- Makineniz ev ortamında kullanılmak üzere tasarlanmıştır. Ticari amaçlar için kullanmanız garantinizin iptaline neden olacaktır. Use this product only for laundry with a label that indicates it is suitable for drying.
- Sadece bakım etiketinde kurutmaya uygun olduğu belirtilen çamaşırları kurutmak için kullanınız.
- 3 yaşından küçük çocuklar kurutma makinesinden uzak tutulmalıdır.
- Üretici, hatalı kullanım veya taşıma nedeniyle oluşan herhangi bir zarardan dolayı sorumluluk kabul etmez.
- Ayarlanabilir ayaklar çıkartılmamalıdır. Kurutma makinesi ile zemin arasındaki boşluk; halı, tahta ve bant gibi malzemelerle azaltılmamalıdır. Bu durum kurutma makinesinin arızalanmasına neden olabilir. Kurulum ve tamir işlemlerini her zaman Yetkili Servise yaptırın. Yetkili olmayan kişiler tarafından yapılan işlemler nedeniyle doğabilecek zararlardan üretici firma sorumlu tutulamaz.

**! UYARI:** Kurutma makinesini üzerine su püskürterek veya su dökerek kesinlikle yıkamayın! Elektrik çarpma riski vardır!


- Ürününüzü bir tezgah altına monte ederken, ürünün yan ve arkası ile tezgah arasında en az 3 cm boşluk bırakın.
- Tezgah altı montajı / sökülmesi mutlaka yetkili servisler tarafından yapılmalıdır.
- Makineyi kurmadan önce dıştan görülebilir bir hasarın olup olmadığını kontrol ediniz. Hasarlı bir makineyi asla kurmayınız ve çalıştırmayınız.
- Evcil hayvanları kurutma makinesinden uzak tutunuz.
- Kumaş yumuşatıcılar ya da benzer ürünler kumaş yumuşatıcı talimatlarına uygun şekilde kullanılmalıdır.
- Çakmakları ve kibritleri çamaşırların ceplerinden çıkartınız.
- Kurutma makinesinin kurulumunun yapılacağı alanda yükleme kapağının açılmasına engel olacak kilitlenebilir, sürgülü veya menteşeli kapı bulunmamalıdır.

**! UYARI:** Cihaz muhafazasında veya dahili yapıda havalandırma açıklıklarını tıkanıklıktan uzak tutun.

- Kurutma makinesinin kurulumu için size en yakın Yetkili Servise başvurmadan önce, kullanma kılavuzundaki bilgilere bakarak elektrik tesisatı ve su giderinin uygun olmasına dikkat edin. Uygun değilse ehliyetli bir elektrikçi ve tesisatçı çağırarak gerekli düzenlemeleri yaptırın.
- Kurutma makinesinin yerleştirileceği yerin ve ayrıca elektrik ve atık su tesisatının hazırlanması müşteriye aittir. Kurutma makinesini kurmadan önce üründe herhangi bir hasar olup olmadığını kontrol edin. Kurutma makinesi hasarlıysa kurulumunu yaptırmayın. Hasarlı ürünler güvenliğinizi için tehlike oluşturur.
- Kurutma makinesini sabit ve düz bir zemine kurun.

- Kurutma makinesini havalandırması iyi olan tozsuz bir ortamda çalıştırın.
- Kurutma makinesi ile zemin arasındaki boşluk; halı, tahta ve bant gibi malzemelerle **azaltılmamalıdır.**
- Kurutma makinesinin tekmeliği üzerinde bulunan **havalandırma ızgaralarının önünü kapatmayın.**
- Kurutma makinesinin kurulumunun yapılacağı alanda yükleme kapağının açılmasına engel olacak kilitlenebilir, sürgülü veya menteşeli kapı bulunmamalıdır.
- Kurutma makinesi bir kez kurulduktan sonra, bağlantıların sabit kalması gerekir. Kurutma makinesini yerleştirirken arka yüzeyin herhangi bir yere (musluğa, prize vb.) dayanmamasına dikkat edin.
- Kurutma makineniz +5°C ile +35°C arasında çalışmaya uygundur. Bu sıcaklık aralığı dışında çalışması durumunda kurutma makinenizin çalışması olumsuz yönde etkilenir ve zarar görür.
- Ağır olduğundan, cihazı taşıırken daima dikkat edin. Her zaman güvenlik eldivenleri kullanın.
- Cihazı her zaman dikey olarak hareket ettirin.
- Cihazın arka yüzeyi duvara dönük olmalıdır.
- Cihaz sabit bir konuma alındığında, bir su terazisi kullanarak tam olarak düzgün olup olmadığını kontrol edin. Düzgün değilse, bu hale gelene dek ayakları ayarlayın. Cihazın konumu her değiştirildiğinde bu işlemi tekrarlayın.
- Kurutma makinesini elektrik kablosunun üzerine koymayın.

## Eski Cihazınızın Atılması

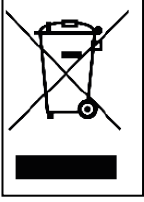

Tüm elektrikli ve elektronik atıklar, devlet ya da yerel yetkililer tarafından belirlenen toplama merkezlerinde ayrı olarak imha edilmelidir. Atık elektrikli ve elektronik aletler belediyeler tarafından kurulan toplama noktalarına teslim edilmeli veya aldığınız yeni ürünü satıcınız adresinize teslim ederken, satıcınızdan atık elektrikli ve elektronik aletinizi teslim almasını istemelisiniz.

Atık ürünün doğru imhası çevre ve insan sağlığı üzerindeki potansiyel olumsuz sonuçların engellenmesine yardımcı olacaktır.

Bu işareti içeren ürünler tehlikeli madde içerebilir. Ürünler içerisindeki tehlikeli maddeler çevre kirlenmesine veya yaralanma/ölüme sebebiyet verebilir.

AEEE Yönetmeliğine Uygundur.

Eski ürününüzün imhası hakkında daha fazla bilgi için lütfen belediyeniz ya da ürünü aldığınız mağaza ile iletişime geçiniz. ([www.lg.com/global/recycling](http://www.lg.com/global/recycling))

# 1. GÜVENLİK UYARILARI

Bu bölümde, yaralanma ya da maddi hasar tehlikelerini önlemeye yardımcı olacak güvenlik talimatları yer almaktadır. Bu talimatlara uyulmaması halinde her türlü garanti geçersiz hale gelir.

## 1.1. Elektrik Güvenliği

- Cihaza, zamanlayıcı gibi harici bir anahtarlama cihazından güç beslemesi yapılmamalıdır veya düzenli olarak tesisat tarafından açılan ve kapatılan bir devreye bağlanmamalıdır.
- Elektrik fişini ıslak ellerle tutmayınız. Elektrik kablosunu her zaman fişten tutup çekiniz. Aksi takdirde elektrik çarpması riski vardır.
- Kurutucuyu sigorta korumalı topraklı bir sokete bağlayın. Topraklama bağlantısı yetkili bir elektrikçi tarafından yapılmalıdır. Şirketimiz, yerel yönetmeliklerin gerektirdiği şekilde, toprak bağlantısı olmaksızın kurutucunun kullanılmasından kaynaklanan zararlardan / kayıplardan sorumlu tutulamaz.
- Voltaj ve izin verilen sigorta koruması plaket etiketinde belirtilmiştir. **(Plaket etiketi için bkz. Genel Görünüm)**
- Plaket etiketinde belirtilen voltaj ve frekans değerleri, şebeke voltajınıza ve frekans değerine eş değer olmalıdır.
- Kurutma makinesi kullanılmadığı zamanlarda ve kurulum, bakım, temizlik ve tamir işlemleri sırasında kurutma makinesinin fişini prizden çekin. Aksi takdirde kurutma makineniz hasar görebilir.
- Elektrik kablosunun fişi kurulumdan sonra kolay erişilebilir olmalıdır.

⚠️ Hasarlı bir güç kablosu / fişi yangına neden olabilir veya size elektrik çarpması verebilir. Hasarlı olduğunda değiştirilmesi gerekiyor, bu sadece yetkili personel tarafından yapılmalıdır.

⚠️ Yangın veya elektrik çarpması riskine karşın, kurutma makinesini şebeke elektriğine bağlamak için uzatma kabloları, çoklu prizler veya adaptör kullanmayın.

## 1.2. Çocuk Güvenliği

- Bu cihaz, güvenliklerinden sorumlu bir kişi tarafından cihazın kullanımıyla ilgili gözetim veya talimat verilmedikçe, fiziksel, duyuşsal veya zihinsel yetenekleri düşük veya deneyim ve bilgi eksikliği olan kişiler tarafından (çocuklar dahil) kullanılmak üzere tasarlanmamıştır.
- 8 yaşından küçük çocuklar devamlı kontrol altında olsalar bile kurutma makinesinden uzak tutulmalıdır.
- Çocuklar oyun oynarken ambalajlara veya folyolara dolanabilir veya bu parçaları kafalarına geçirebilir ve boğulabilirler. Ambalajları, folyoları ve ambalaj parçalarını çocuklardan uzak tutunuz.
- Çocuklar kendilerini kurutma makinesi içine kapatabilir. Bu nedenle kullanımda olan makinenizin kapağını kapalı tutunuz, kullanım dışı kalmış makinelerin ise elektrik fişini çekiniz, elektrik kablosunu ayırınız ve kurutma makinesi kapı mandalını kırınız.
- Elektrikli ürünler çocuklar için tehlikelidir. Ürün çalışırken çocukları üründen uzak tutun. Çocukların kurutma makinesine müdahale etmesini önlemek için çocuk kilidini kullanarak devam eden bir programda değişiklik yapılmasını engelleyebilirsiniz.
- Kurutma makinesini kullanmadığınız zamanlarda bile kapağını kapalı tutunuz.

### 1.3. Ürün Güvenliği



**Yangın tehlikesi nedeniyle aşağıda sıralanan çamaşırlar veya ürünler ASLA makinede kurutulmamalıdır:**

- Yıkanmamış çamaşırlar.
- Yeterli derecede temizlenmemiş ve üzerinde yağ ve diğer kirlerin (örn.: üzerinde yemek yağları kalan mutfak bezleri, veya krem artıkları olan kozmetik örtüleri gibi) bulunduğu çamaşırlar. İyi yıkanmamış çamaşırların kendi kendine tutuşma ve hatta kurutma bittikten sonra kurutma makinesinin dışında bile tutuşma olasılığı vardır.
- Yangın çıkarabilecek temizleme maddeleri veya aseton, alkol, benzin, petrol, leke ilaçları, terebentin, mum ve mum sökücüler veya kimyasallar; temizlik bezleri veya paspasların üzerinde kalmışsa.
- Üzerinde saç spreyleri, aseton veya benzeri kalıntılar bulunan çamaşırlar.
- Temizlenmesi için üzerinde sanayi kimyasalları kullanılmış olan çamaşırlar (kimyasal temizleme gibi).
- Üzerinde çok miktarda köpük, sünger, lastik veya lastik benzeri parçalar veya aksesuarlar bulunan çamaşırlar. Bunlar örneğin lateks köpük sünger, duş boneleri, su geçirmez tekstiller, lastikli elbiseler ve süngerli yastıklardır.
- Dolgulu ve hasarlı parçalar (yastık veya ceketler). Bu dolgulardan dışarı sarkan sünger parçaları kurutma işlemi sırasında alev alabilir.
- Un veya kömür tozunun bulunduğu ortamlarda kurutma makinesini çalıştırmak patlamaya neden olabilir.

 **DİKKAT:** Metal desteklere sahip iç çamaşırları kurutma makinesinde kurutulmamalıdır. Bu metal destekler kurutma esnasında gevşeyerek koparsa, kurutma makinesinde hasara yol açabilir.

 **ATEŞ:R290**

## **Yangın/malzeme hasarı/cihaz hasar riski!**

Cihaz çevre dostu ancak alev alabilen R290 soğutucu kullanılır. Açık alev ve ateş kaynaklarını cihazdan uzak tutun.

### **1.4. Doğru Kullanım**

 **DİKKAT:** Tüm parçalar hızlı bir şekilde çıkarılmadan ve dağıtılmadan, kurutma döngüsünün bitiminden önce çamaşır kurutma makinesini asla durdurmayın.

 **DİKKAT:** Ev hayvanlarının kurutma makinesinin içine girmemesine dikkat edin. Kullanımdan önce kurutma makinesinin içini kontrol edin.

 **DİKKAT:** Kurutucuyu çalıştırırken elektrik kesintisi durumunda veya programı iptal ederseniz, kurutucunun içindeki çamaşırların aşırı ısınması meydana gelebilir. Bu ısı konsantrasyonu, kendiliğinden yanmaya neden olabilir, bu nedenle, tüm çamaşırları kurutmak ve ısıyı dağıtmak için tüm çamaşırları soğutmak veya hızlı bir şekilde çıkarmak için Refresh programını her zaman etkinleştirin.

- Kurutma makinesini sadece evde kurutma işlemi için ve sadece bakım etiketinde kurutmaya uygun olduğu gösterilen kumaşları kurutmak için kullanınız. Tüm diğer kullanımlar amaç dışı kullanımdır ve yasaktır.

- Ürün, ticari kullanım durumunda garanti kapsamı dışına çıkacaktır.
- Ev dışında bir yerde (örn.: balkonlarda, teknelerde), eğik yüzeylerde ya da sarsıntılı yerlerde çalıştırılmaz.
- Kurutma makinesi kapağına yaslanmayınız ve kapak üzerine oturmayınız. Kurutma makinesi devrilebilir.
- Çamaşırların zarar görmeyeceği bir ısı derecesinde kalabilmeleri için ısınma sürecinden sonra soğutma süreci başlar (örn.: çamaşırın kendi kendine tutuşmasını önlemek için). Ancak bundan sonra program biter. Programın sonunda çamaşırları her zaman doğrudan ve tam olarak dışarı alınız.

 **DİKKAT:** Kurutucuyu hiçbir zaman tiftik filtresi veya hasarlı tiftik filtresi olmadan kullanmayın.

- **Hav filtreleri her kullanımdan sonra** belirtilen şekilde temizlenmelidir.
- Islak temizlemeden sonra hav filtreleri kurutulmalıdır. Islak filtreler kurutma işlemi sırasında arızaya neden olabilir.
- Çamaşır kurutma makinesinin etrafında tüy bırakmayan birikmeye izin verilmemelidir (binanın dış kısmına havalandırılması amaçlanan cihazlar için geçerli değildir).

 **ÖNEMLİ:** Kurutma makinesi ile zemin arasındaki boşluk; halı, tahta, panel gibi malzemelerle küçültülmemelidir. Aksi halde makine için yeterli hava girişi sağlanamaz.

- Kurutma makinesini donma tehlikesi bulunan odalarda kurmayın. Donma sıcaklıkları kurutucu performansını olumsuz yönde etkiler. Pompada ve hortumda donmuş sular zarar görebilir.

## 1.5. amařır Makinesi Üzerine Kurulum

**! DİKKAT:** amařır makinesi, kurutma makinesinin üzerine yerleřtirilemez. amařır makinesi üzerine kurulum sırasında ařağıdaki uyarılara dikkat edin.

**! DİKKAT:** Sadece eřit kg ve üzeri amařır makinelerinin üzerine kurutma makinesi konulabilir.

- amařır kurutma makinesinin amařır makinesi üzerinde kullanımı için, iki makine arasında sabitleme parası kullanılmalıdır. Sabitleme parasının Yetkili Servis tarafından monte edilmesi gerekir.
- Kurutma makinesi, amařır makinesinin üzerine yerleřtirildiğinde toplam ağırlıkları -dolul halde- yaklaşık 150 kilogramı bulur. Ürünleri yeterli yük taşıma kapasitesine sahip sağlam bir zemin üzerine yerleřtirin!

| amařır Makinesi ve Kurutma Makinesi için Uygun Kurulum Tablosu |                  |       |       |       |       |       |
|-----------------------------------------------------------------|------------------|-------|-------|-------|-------|-------|
| Kurutma Makinesi (Derinlik)                                     | amařır Makinesi |       |       |       |       |       |
|                                                                 | 37 mm            | 42 mm | 53 mm | 56 mm | 59 mm | 85 mm |
| 56 cm                                                           | X                | X     | ✓     | ✓     | ✓     | ✓     |
| 61 cm                                                           | X                | X     | X     | ✓     | ✓     | ✓     |

(Derinlik bilgisi için bkz: 7. Teknik Özellikler)

Kurutma makinesini amařır makinesi üzerine yerleřtirmek için bir ekstra olarak özel bir istifleme kiti gereklidir. Lütfen satın almak için LG Electronics Müřteri Bilgi Merkezi ile iletişim kurun veya <http://www.lg.com> adresinden LG Web sitesini ziyaret edin.Montaj talimatı istifleme kiti ile birlikte sunulacaktır.

### CE Uygunluk Beyanı

Ürünlerimizin yürürlükteki Avrupa Direktifleri, Kararları ve Düzenlemeleri ile başvurulana standartlarda listelenen řartları karřıladığını beyan ederiz.

## 2. KURULUM

### 2.1. Su Çıkışına Bağlama (opsiyonel tahliye hortumu ile)


Bir ısı pompası ünitesine sahip ürünlerde, su, kurutma işlemi sırasında su deposunda birikir. Her kurutma işleminden sonra birikmiş suyu boşaltmalısınız. Su tankını periyodik olarak boşaltmak yerine su tahliye hortumunu da kullanabilirsiniz. Lütfen satın almak için LG Electronics Müşteri Bilgi Merkezi ile iletişim kurun veya <http://www.lg.com> adresinden LG Web sitesini ziyaret edin.

### 2.2. Su Tahliye Hortumunun Bağlanması

1. Kurutma makinesinin arkasındaki hortumun ucunu bağlı olduğu yerden elle çekerek çıkarın. Hortumu çıkarmak için herhangi bir alet kullanmayın.

2. Makineyle birlikte verilen su tahliye hortumunun bir ucunu kurutma makinesindeki hortumu çıkardığınız yere takın.

3. Su tahliye hortumunun diğer ucunu doğrudan kirli su giderine ya da lavaboya bağlayın.

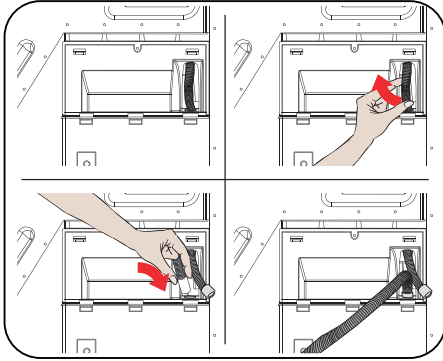

**⚠ DİKKAT:** Hortum bağlantısı yerinden çıkmayacak şekilde yapılmalıdır. Su tahliyesi sırasında hortum yerinden çıkarsa evinizi su basma riski oluşmaktadır.

**👉 ÖNEMLİ:** Su tahliye hortumu en fazla 80 cm yüksekliğe takılmalıdır.

**👉 ÖNEMLİ:** Su tahliye hortumunun giderle makine arasında kıvrılmaması, katlanmaması ve üzerine basılmamasına dikkat edilmelidir.

### 2.3. Ayakların Ayarlanması

- Kurutma makinesinin daha sessiz ve titreşimsiz çalışabilmesi için ayakları üzerinde düzgün ve dengede durması gerekir. Ayakları ayarlayarak bu dengeyi sağlayın.
- Kurutma makinesi düz ve sağlam bir şekilde durana kadar ayakları sağa ve sola çevirerek ayarlayın

**👉 ÖNEMLİ:** Ayarlanabilir ayakları kesinlikle yerinden sökmeyin.

### 2.4. Elektrik Bağlantısı

**⚠ DİKKAT:** Yangın ve elektrik çarpması riski vardır.


- Kurutma makineniz 220-240V ve 50Hz' e göre ayarlıdır.
- Kurutma makinenizin şebeke kablosuna topraklı özel bir fiş takılmıştır. Bu fiş mutlaka plaket etiketinde belirtilen 16 amper değerinde bir sigorta tarafından korunan topraklı bir prize takılmalıdır. Buna bağlı bulunan elektrik hattının sigorta akım değeride 16 amper olmalıdır. Eğer evinizde böyle bir priz ve sigorta yok ise ehliyetli bir elektrikçiye yaptırınız.
- Topraklama yapılmadan kullanma sonucu meydana gelebilecek zararlardan firmamız sorumlu olmayacaktır.

**👉 ÖNEMLİ:** Makinenizin düşük voltajda çalışması hem makinenizin ömrünün kısalmasına hem de performansının düşmesine neden olacaktır.

### 2.5. Tezgah Altına Montaj

- Ürününüzü bir tezgah altına monte ederken, ürünün yan ve arkası ile tezgah arasında en az 3 cm boşluk bırakın.
- Tezgah altı montajı / sökülmesi mutlaka yetkili servisler tarafından yapılmalıdır.

### 3. GENEL BİLGİ

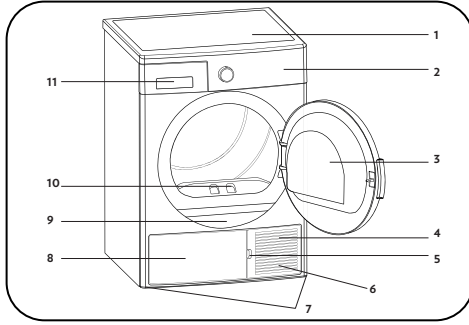

1. Üst Tabla
2. Kontrol Paneli
3. Yükleme Kapağı
4. Tekmelik
5. Tekmelik Açma Yuvası
6. Havalandırma ızgaraları
7. Ayarlanabilir Ayaklar
8. Tekmelik Kapağı
9. Plaket Etiketi
10. Hav Filtresi
11. Su Tankı Çekmecesi

## 4. ÇAMAŞIRLARIN HAZIRLANMASI

### 4.1. Kurutulacak Çamaşırların Ayrılması

Kurutulacak çamaşırların etiketlerinde yer alan talimatlara mutlaka uyunuz. Sadece etiketlerinde “kurutma makinesinde kurutulabilir” sembolü olan/yazan çamaşırları kurutunuz.

- Kurutma makinesini bölüm 4.3. Yük Dolum Kapasitesi bölümünde yer alan yük miktarlarından ve çamaşır türlerinden farklı yüklerle çalıştırmayınız.

|                                                                                                               |                                                                                                              |                                                                                                                |                                                                                                                     |
|---------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| <br>Kurutucuda kurutulabilir | <br>Ütü istemez             | <br>Hassas / Narin kurutma    | <br>Kurutucuda kurutulamazdryer    |
| <br>Kurutma yapılmaz         | <br>Kuru temizleme yapılmaz | <br>Herhangi bir sıcaklıkta   | <br>Yüksek sıcaklıkta              |
| <br>Orta sıcaklıkta          | <br>Düşük sıcaklıkta        | <br>Isı olmadan               | <br>Asarak kurutun                 |
| <br>Sererek kurutun        | <br>Islak asarak kurutun  | <br>Gölgede sererek kurutun | <br>Kuru temizlemeye verilebilir |

İnce, çok katmanlı veya kalın katmanlı kumaşları birlikte kurutmayınız, çünkü bunlar farklı düzeyde kururlar. Bu nedenle sadece aynı yapıdaki ve kumaş türündeki çamaşırları birlikte kurutunuz, ancak bu şekilde eşit bir kurutma sonucu elde edebilirsiniz. Size göre çamaşırlar hala fazla nemliyse, ek kurutma için bir süreli program seçebilirsiniz. Nevresim, çarşaf gibi büyük parçalar ile küçük parçaların beraber makineye atılması durumunda küçük parçalar büyük parçaların arasında kalabilir ve bu durum sonucunda çamaşırlarınız nemli çıkabilir. Bu nedenle büyük ve küçük parçaları ayrı kurutunuz.

**ÖNEMLİ:** Narin, nakış işli kumaşlar, yünlü, ipekli çamaşırlar, hassas ve değerli kumaşlardan üretilmiş çamaşırlar, hava geçirmeyen çamaşırlar ve tül perdeler kurutma makinesinde kurutulmaya uygun değildir

#### 4.2. Kurutulacak Çamaşırların Hazırlanması



##### Patlama ve yangın tehlikesi!

Çakmakları ve kibritleri çamaşırların ceplerinden çıkartınız.



**DİKKAT:** Makinenin tamburu ya da çamaşırlar zarar görebilir.

- Çamaşırlar yıkama sırasında iç içe geçmiş, birbirine dolanmış olabilir. Çamaşırların kurutma makinesine koymadan önce birbirlerinden ayırın.
- Çamaşırların ceplerindeki tüm cisimleri çıkartınız ve aşağıdakilere dikkat ediniz:
- Kumaş kemerleri, önlük bağları vb. birbirine bağlayınız veya bir çamaşır torbası kullanınız.
- Fermuarları, kancaları ve kopçaları kapatınız, kılıfların düğmelerini ilikleyiniz.
- Muntazam kurutma sonucu için, çamaşırları tekstil türüne göre ve kurutma programına göre ayırınız.
- Ataçlar ve benzeri metal parçaları çamaşırlardan çıkartınız.
- Tişörtler ve triko çamaşırlar gibi dokuma kumaşlar **ilk kurutmada çoğu kez çekerler**. Koruyucu bir program kullanınız.
- **Sentetik çamaşırları aşırı kurutmayınız. Bu durum çamaşırların kırışmasına yol açar.**
- Kumaş yumuşatıcılar veya benzeri ürünler, kumaş yumuşatıcı talimatlarında belirtildiği gibi kullanılmalıdır

#### 4.3. Yük Dolum Kapasitesi

Program seçimi ve tüketim tablosu"ndaki talimatlara uyun. (bkz: 5.2. Program seçimi ve tüketim tablosu) Tabloda belirtilen kapasite değerlerinden fazla çamaşır yüklemeyin.




**ÖNEMLİ:** Kurutma makinesine, şekilde gösterilen seviyeden fazla çamaşır yüklenmesi önerilmez. Aşırı yükleme yapıldığında, makinenin kurutma performansı düşecektir. Ayrıca kurutma makinesi ve çamaşırlar hasar görebilir.

| Çamaşır                   | Kuru yük ağırlığı (gr) |
|---------------------------|------------------------|
| Çarşaf (çift)             | 725                    |
| Yastık Kılıfı             | 240                    |
| Banyo Havlusu             | 700                    |
| El Havlusu                | 225                    |
| Gömlek                    | 190                    |
| Pamuklu Gömlek            | 200                    |
| Kot Pantolon              | 650                    |
| Kumaş - Gabardin Pantolon | 400                    |
| Tişört                    | 120                    |

## 5. KURUTMA MAKİNASININ KULLANILMASI


### 5.1. Kontrol Paneli

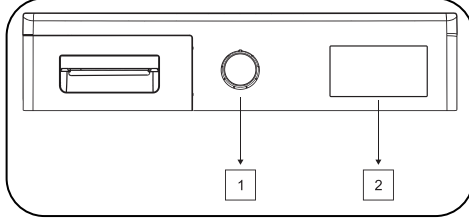

1. Program seçim düğmesi
2. Elektronik gösterge ve ek fonksiyonlar

#### 5.1.1. Program Seçim Düğmesi

Program seçim düğmesinden istediğiniz kurutma programını seçiniz

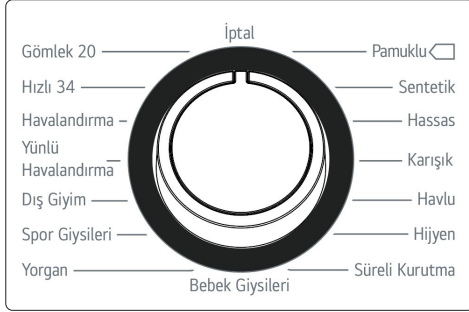

### 5.1.2. Elektronik Gösterge ve Ek Fonksiyonlar



#### Ekran sembolleri:

|                                         |  |
|-----------------------------------------|--|
| Su tankı uyarı göstergesi               |  |
| Hav filtresi temizliği uyarı göstergesi |  |
| Eşanjör temizliği uyarı göstergesi      |  |
| Ekstra kurutma                          |  |
| Dolap kuruluğu                          |  |
| Ütü kuruluğu                            |  |
| Kurutma seviyesi 1                      |  |
| Kurutma seviyesi 2                      |  |
| Kurutma seviyesi 3                      |  |
| Kurutma seviyesi 4                      |  |
| Gecikmeli başlatma                      |  |
| Kırışıklık önleme 60                    |  |
| Kırışıklık önleme 120                   |  |

|                                                                                                                                                                                                                                                                                                        |  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Narin                                                                                                                                                                                                                                                                                                  |  |
| Sesli Uyarı İptal                                                                                                                                                                                                                                                                                      |  |
| Başlat/ Beklet                                                                                                                                                                                                                                                                                         |  |
| <b>Kurutma Adım Göstergesi</b>                                                                                                                                                                                                                                                                         |  |
| Kurutma                                                                                                                                                                                                                                                                                                |  |
| Ütü Kuruluşu                                                                                                                                                                                                                                                                                           |  |
| Dolap Kuruluşu                                                                                                                                                                                                                                                                                         |  |
| Bitti                                                                                                                                                                                                                                                                                                  |  |
| Elektronik gösterge program boyunca kurutma adımlarını gösterir. Her program adımı başladığında ilgili kurutma adımının ışığı yanar. Kurutma adımı tamamlandığında ilgili kurutma adımı ışığı söner.                                                                                                   |  |
| <b>Enerji Tüketimi Göstergesi</b><br>                                                                                                                                                                                                                                                                  |  |
| Enerji Tüketimi Göstergesi, seçilen programın enerji tüketimini gösterir. Gösterge ne kadar büyük olursa, o kadar fazla enerji tüketimini ifade eder. Enerji Tüketimi Göstergesi kumaş türüne, seçilen programın süresine, kurutma seviyesine ve çamaşır sıkma devrine bağlı olarak artar veya azalır. |  |

### 5.1.3. Program Seçimi ve Tüketim Tablosu

Başla/Beklet düğmesine basarak programı başlatın. Programın başladığını belirten Başla/Beklet ışığı ve Kurutma ışığı yanar.

| Program            | Yük Beyanı (kg) | Çamaşır makinesindeki sıkma devri | Yaklaşık kalan nem miktarı | Süre (dk) |
|--------------------|-----------------|-----------------------------------|----------------------------|-----------|
| *Pamuklu           | 8               | 1000                              | 60%                        | 174       |
| Sentetik           | 4               | 800                               | 40%                        | 74        |
| Narin              | 2               | 600                               | 50%                        | 55        |
| Karışık            | 4               | 1000                              | 60%                        | 112       |
| Havlular           | 3               | 1000                              | 60%                        | 90        |
| Hijyen             | 3               | 1000                              | 60%                        | 95        |
| Sürekli Kurutma    | -               | -                                 | -                          | -         |
| Bebek Giysileri    | 3               | 1000                              | 60%                        | 78        |
| Yorgan             | 2,5             | 800                               | 60%                        | 140       |
| Spor               | 4               | 800                               | 40%                        | 103       |
| Dış giyim          | 2               | 800                               | 40%                        | 53        |
| Yünlü Havalandırma | -               | -                                 | -                          | 5         |
| Havalandırma       | -               | -                                 | -                          | 10        |
| Hızlı 34           | 1               | 1200                              | 50%                        | 34        |
| Gömlek 20          | 0,5             | 1200                              | 50%                        | 20        |

| Enerji tüketim değerleri                        |                 |                                   |                            |                                |
|-------------------------------------------------|-----------------|-----------------------------------|----------------------------|--------------------------------|
| Program                                         | Yük Beyanı (kg) | Çamaşır makinesindeki sıkma devri | Yaklaşık kalan nem miktarı | Enerji tüketim değerleri (kWh) |
| Pamuklular + Dolap Kuruluşu*                    | 8               | 1000                              | 60%                        | 1,88                           |
| Pamuklu Ütü Kuruluşu                            | 8               | 1000                              | 60%                        | 1,55                           |
| Sentetik Dolap Kuruluşu                         | 4               | 800                               | 40%                        | 0,93                           |
| "Kapalı modda" elektrik tüketimi PO (W)         |                 |                                   |                            | 0,5                            |
| "Açık Bırakma" modunda elektrik tüketimi PL (W) |                 |                                   |                            | 1,0                            |



Dolap Kuru ☐ programı etikette ve ürün fişinde bilgilerin verildiği, tam ve yarım yükte kullanılabilecek standart kurutma programıdır. Bu program, normal ıslak pamuklu yüklerin kurutulmasında kullanılan enerji tüketimi açısından en verimli programdır.

\*Enerji Etiket standardı programı (EN 61121:2013))

Tablodaki tüm değerler EN 61121:2013 standardına göre tespit edilmiştir. Tüketim değerleri çamaşır cinsi, sıkma devri, ortam şartları ve voltaj değerlerindeki değişimlere bağlı olarak tablodaki değerlerden farklılık gösterebilir.

### 5.1.4. Yardımcı Fonksiyonlar

Programlarda seçilebilecek olan opsiyonların özetlendiği tablo aşağıdadır

| Seçenek            | Açıklama                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Kurutma Hedefi     | Kurutulacak çamaşırınıza uygun olan kurutma hedefi seçilir. Zor kuruyan, kalın ve çok katlı kumaşlar için Extra Kuru hedefi seçilir. Normal, tek katlı kumaşlar için Dolap Kuruluğu hedefi seçilir. Ütölemeye hazır, nemli kalması istenilen kumaşlar için Ütü Kuruluğu seçilir.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Kurutma Seviyesi   | Kurutma sonrasında elde edilen nemlilik derecesi standart ayara ek olarak 3 kademe daha artırılabilir. Bu şekilde çamaşırlar daha kuru olur. Standart ayar (Seviye 1) dışında seçilebilecek seviyeler: 2(düşük), 3(orta), 4 (yüksek). Seçim sonrasında ilgili kurutma seviyesinin ikon ışığı yanar.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Zaman Programları  | Program düğmesi Zaman Kurutma programına alındığında, Zaman Kurutma seçeneği düğmesine basılarak seçenek seçilebilir ve Başlat/Duraklat düğmesine basılarak program başlatılır.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Gecikmeli Başlat   | 1 saatten 23 saate kadar seçeneği seçerek programın başlangıç zamanını geciktirebilirsiniz. İstenilen gecikme süresini Başlat / Beklet düğmesine basarak etkinleştirilebilirsiniz. Süre dolduğunda, seçilen program otomatik olarak başlayacaktır. Gecikme süresi boyunca, programla uyumlu seçenekler etkinleştirilebilir / devre dışı bırakılabilir. Gecikmeli Başlatma düğmesine uzun basıldığında gecikme süresi sürekli olarak değişir                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Sesli Uyarı İptal  | Kurutma makinesi, butonlara basıldığında, program seçim düğmesi çevrildiğinde ve program sona erdiğinde sesli uyarıda bulunur. Uyarı seslerini iptal etmek için "Kırışık Önleme Opsiyonu" tuşuna 3 saniye basınız. Tuşa bastığınızda opsiyonun aktif edildiğine dair sesli uyarı verilir ve belirtilen sesli uyarılar iptal olur.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Hassas             | Hassas kumaşlar düşük sıcaklıkta daha uzun süre kurutulur.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| *Kırışık Önleme    | Program sonunda kapı açılmazsa 60 dakika boyunca kırışık önleme opsiyonu aktif olur. Kırışık önleme opsiyonu seçildiğinde ise 120 dakika boyunca kırışık önleme aktif olur.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Sıkma Devri Seçimi | Kurutulacak çamaşırınızın, yıkamış olduğunuz çamaşır makinesindeki sıkma devir sayısını ayarlayın. Böylelikle, tahmini kurutma süresinin daha hassas bir şekilde görüntülenmesi sağlanır.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Çocuk Kilidi       | Program esnasında tuşlara basıldığında makinenin program akışının bozulmaması için çocuk kilidi opsiyonu mevcuttur. Çocuk kilidini aktif hale getirmek için 'Kırışık Önleme' ve 'Opsiyon' tuşlarına aynı anda 3 saniye boyunca basınız. Çocuk kilidi aktif olduğunda tüm tuşlar devre dışı kalır. Program sonunda çocuk kilidi otomatik olarak deaktif olur. Çocuk kilidi aktif/deaktif edilirken ekranda ÇL ifadesi 2 saniye boyunca yanıp söner ve sesli uyarı verilir. Uyarı: makine çalışırken veya çocuk kilidi aktifken, program seçim düğmesi çevrildiğinde sesli uyarı verilir. Program düğmesi başka bir programa getirilse dahi bir önceki seçili program çalışmaya devam eder. Yeni program seçimi için çocuk kilidi deaktif edildikten sonra program seçim düğmesi "İptal" pozisyonuna getirilir. Daha sonra istenilen program seçilerek program başlatılabilir. |

### 5.1.5. Programın Başlatılması

Başla/Beklet düğmesine basarak programı başlatın. Programın başladığını belirten Başla/Beklet ışığı ve Kurutma ışığı yanar.

| Program            | Açıklama                                                                                                                                                                                                     |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pamuklu            | Bu program çarşaf, yastık kılıfı, pijama, iç çamaşırı, masa örtüsü vb. pamuklu çamaşırları kurutur.                                                                                                          |
| Sentetik           | Bu program gömlek, tişört, bluz gibi sentetik ürünleri pamuklu programına göre daha düşük bir sıcaklıkta kurutur.                                                                                            |
| Narin              | Bu program gömlek, bluz ve ipek gibi giysileri düşük sıcaklıkta kurutarak giyime hazır hale getirir.                                                                                                         |
| Karışık            | Bu program, renk atmayan pamuklu-sentetik karışımı giysileri kurutarak giyime hazır hale getirir.                                                                                                            |
| Havlular           | Bu program havlu, bornoz vb. kalın pamuklu çamaşırları kurutur.                                                                                                                                              |
| Hijyen             | Bu program, hijyen ihtiyacı olan kumaşlar için uygundur.                                                                                                                                                     |
| Sürelili Kurutma   | Düşük sıcaklıkta istenilen kurutma seviyesine ulaşmak için 10 dakikadan 150 dakikaya kadar olan zaman programlarını kullanabilirsiniz. Kurutma seviyesinden bağımsız olarak program istenilen zamanda durur. |
| Bebek Giysileri    | Bu program, hassas bebek giysileri için düşük sıcaklıkta hijyenik kurutma sağlar.                                                                                                                            |
| Yorgan             | Bu program kuş tüyü, kuş tüyü veya sentetik dolgulu tek yorgani kurutmak için kullanılır.                                                                                                                    |
| Spor               | Bu program şort, tişört gibi sentetik içerikli spor kıyafetleri düşük sıcaklıkta kurutur.                                                                                                                    |
| Dış giyim          | Bu program dış giyim, su geçirmez ceketler, içten yalıtımlı ceketler vb. için uygundur.                                                                                                                      |
| Yünlü Havalandırma | Yünlü tazeleme, yünlü giysilerin yıkama sonrası fazla suyu, düşük sıcaklık ve tamburun hafif hareketleriyle gidermesine yardımcı olur.                                                                       |
| Havalandırma       | Zamanlı kurutma seçeneği 10 dakikadan 150 dakikaya kadar sıcak hava sağlanmadan seçilir, tazeleme yapılır ve kötü kokular giderilebilir.                                                                     |
| Hızlı 34           | Çamaşır makinesinde yüksek devirde sıkıştırılan 1 kg pamuklu gömlek 34 dakikada kurutulur.                                                                                                                   |
| Gömlek 20          | 20 dakikada 2 ila 3 gömlek ütülenmeye hazır hale gelir.                                                                                                                                                      |



**ÖNEMLİ:** Program çalışırken yükleme kapağını açmayın. Kapağı açmak zorunda kalırsanız, uzun süre açık bırakmayın.

## 5.1.6. Program İlerleme Göstergesi

### Program süresince

Program devam ederken kapı açılması durumunda makine bekle konumuna geçecektir. Kapı kapatıldıktan sonra Başlat/Beklet butonuna basılarak programın devam etmesi sağlanır.

Program devam ederken yükleme kapağını açmayınız. Eğer mutlaka açmanız gerekiyorsa uzun süre açık tutmayınız.

### Program Sonu

Program sona erdiğinde Başlat/Beklet, su tankı seviyesi, filtre temizliği ve eşanjör temizliği uyarı ışıkları yanacaktır. Ek olarak program bitiminde sesli uyarı verilecektir. Çamaşırları alıp makineyi yeni bir program için hazır hale getirebilirsiniz.

 **ÖNEMLİ:** Her program sonrası hav filtresini temizleyiniz. Her program sonrası su tankını boşaltınız.

 **ÖNEMLİ:** Program bittikten sonra çamaşırlar alınmazsa 1 saat sürecek olan kırıksıklık önleme programı otomatik olarak devreye girecektir. Belirli aralıklarla tambur döndürülerek çamaşırlarda kırıksıklık oluşması engellenir.

## 5.2. Tambur Aydınlatması Bilgilendirmesi

- Bu ürün LED tambur aydınlatması içerir.
- Aydınlatma, ürün kapısı açıldığında otomatik olarak aktif olur ve Bir süre sonra kendiliğinden kapanır.
- Ayarlanabilir, tercihen açılıp kapatılabilir bir özellik değildir.
- Lütfen LED ışığı değiştirmeye ya da çıkarmaya çalışmayınız.

| PROGRAMLAR         | OPSİYONLAR     |                  |                   |              |        |                |                  |                     |       |
|--------------------|----------------|------------------|-------------------|--------------|--------|----------------|------------------|---------------------|-------|
|                    | Kurutma Hedefi | Gecikmeli Başlat | Sesli Uyarı İptal | Çocuk Kilidi | Hassas | Kurutma Zamanı | Kurutma Seviyesi | Kırışıklık Önleyici | Devir |
| *Pamuklu           | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | ✓                | ✓                   | ✓     |
| Sentetik           | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | ✓                | ✓                   | ✓     |
| Narin              | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | X                | ✓                   | ✓     |
| Karışık            | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | ✓                | ✓                   | ✓     |
| Havlular           | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | ✓                | ✓                   | ✓     |
| Hijyen             | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | ✓                | ✓                   | ✓     |
| Sürekli Kurutma    | X              | ✓                | ✓                 | ✓            | X      | ✓              | X                | ✓                   | X     |
| Bebek Giysileri    | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | ✓                | ✓                   | ✓     |
| Yorgan             | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | ✓                | ✓                   | ✓     |
| Spor               | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | ✓                | ✓                   | X     |
| Dış giyim          | ✓              | ✓                | ✓                 | ✓            | ✓      | X              | ✓                | ✓                   | ✓     |
| Yünlü Havalandırma | X              | ✓                | ✓                 | ✓            | X      | X              | X                | ✓                   | X     |
| Havalandırma       | X              | ✓                | ✓                 | ✓            | X      | ✓              | X                | ✓                   | X     |
| Hızlı 34           | ✓              | ✓                | ✓                 | ✓            | X      | X              | X                | ✓                   | X     |
| Gömlek 20          | ✓              | ✓                | ✓                 | ✓            | X      | X              | X                | ✓                   | X     |
| X                  | Seçilemez      |                  |                   |              |        |                |                  |                     |       |
| ✓                  | Seçilebilir    |                  |                   |              |        |                |                  |                     |       |


## 6. TEMİZLİK VE BAKIM

**ÖNEMLİ:** Kurutma makinenizi endüstriyel kimyasallarla temizlemeyiniz. Endüstriyel kimyasallarla temizlenmiş makineyi kullanmayınız.

### Hav Filtreleri Temizliği

**ÖNEMLİ:** HAV FİLTRELERİNİ HER KURUTMA İŞLEMİNDEN SONRA MUTLAKA TEMİZLEYİNİZ.

Hav filtresini temizlemek için:

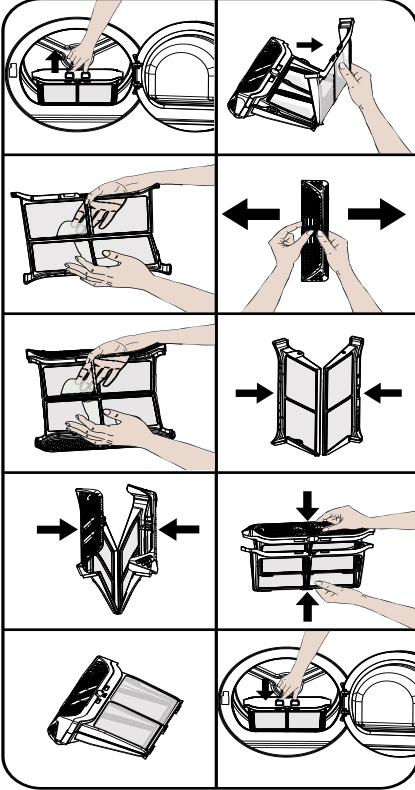


1. Yükleme kapağını açın.
2. Yukarıya doğru çekerek hav filtrelerinin gösterildiği şekilde çıkartın.
3. Dış filtreyi çıkartın.
4. Dış filtreyi elle ya da yumuşak bir bez yardımıyla temizleyin.
5. İç filtreyi açın.
6. İç filtreyi elle ya da yumuşak bir bez yardımıyla temizleyin.

7. İç ve dış filtreleri tırnaklara oturacak şekilde kapatın.


8. Kapatılan iç filtreyi dış filtrenin içine geçecek şekilde oturtun.

9. Hav filtrelerini yerine yerleştirin.

Kurutma makinesi belirli bir süre kullanıldıktan sonra filtre gözeneklerinde tıkanıklığa neden olacak bir tabaka oluşursa, bu tabakayı temizlemek için filtreyi ılık suyla yıkayınız. Filtreyi yerine takmadan önce iyice kurulayınız.

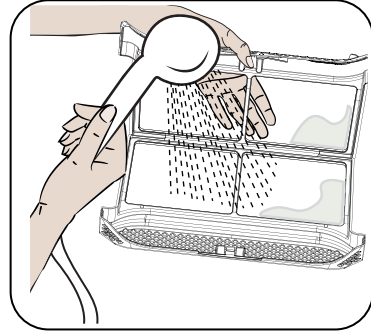

### 6.1. Su Tankının Boşaltılması

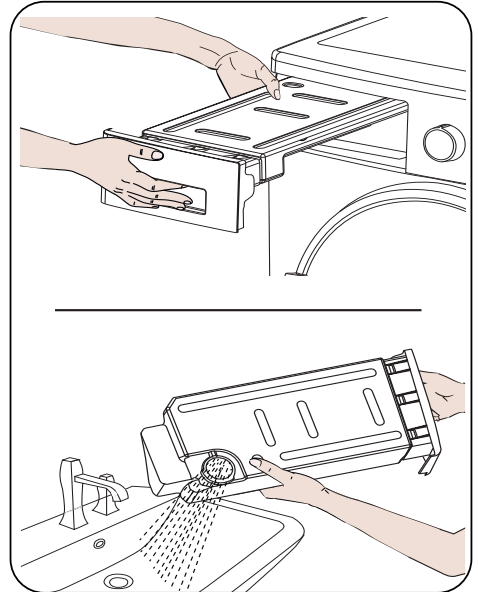

1. Su tankı çekmecesini çekerek tankı dikkatlice çıkarın.

2. Tanktaki suyu dökün.
3. Tanktaki boşaltma kapağında hav birikmiş ise su tutarak temizleyin.
4. Su tankını yerine yerleştirin.


**ÖNEMLİ:** Su tankını program devam ediyorken kesinlikle çıkarmayınız. Su tankında yoğunlaştırulan su içme suyu değildir.

**ÖNEMLİ:** SU TANKINI HER KULLANIM SONRASI MUTLAKA BOŞALTINIZ.

## 6.2. Eşanjör Temizliği

**ÖNEMLİ:** “Eşanjör Temizliği” uyarısını gördüğünüzde eşanjörü temizleyiniz.


**ÖNEMLİ:** “EŞANJÖR TEMİZLİĞİ” UYARI IŞIĞI YANMASA DAHİ: EŞANJÖRÜ HER 30 KURUTMA İŞLEMİNDEN SONRA VEYA AYDA BİR TEMİZLEYİNİZ.

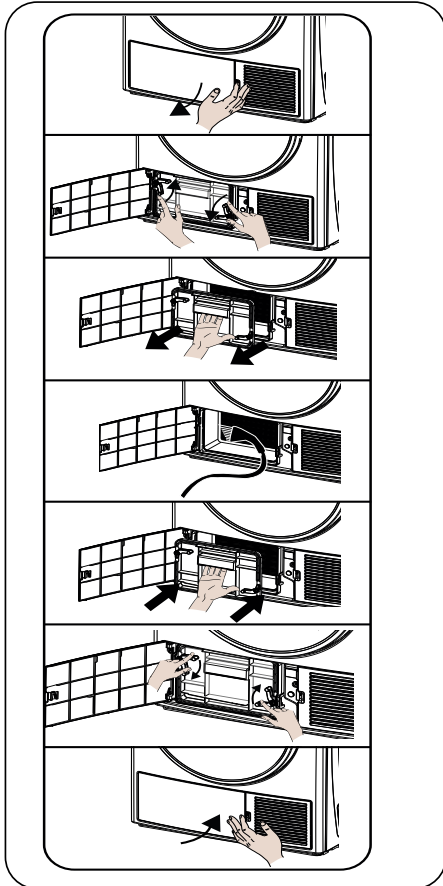

1. Tekmelik kapağını gösterildiği şekilde açın.
2. Eşanjör kapağı kilitlerini oklarla belirtilen yönde çevirerek açın.
3. Eşanjör kapağını gösterildiği şekilde yerinden çıkartın.
4. Eşanjörün ön yüzeyini süpürge yardımıyla temizleyin.
5. Eşanjörün kapağını gösterildiği şekilde yerine oturtun.
6. Eşanjör kapağı kilitlerini oklarla belirtilen yönde çevirerek kapatın.
7. Tekmelik kapağını gösterildiği şekilde kapatın.

**UYARI:** EŞANJÖR KANATÇIKLARI KESKİN OLDUĞU İÇİN ÇIPLAK ELLE TEMİZLEMİYİ DENEMEYİN. KANATÇIKLAR ELİNİZE ZARAR VEREBİLİR.

## 6.3. Nem Sensörü Temizliği

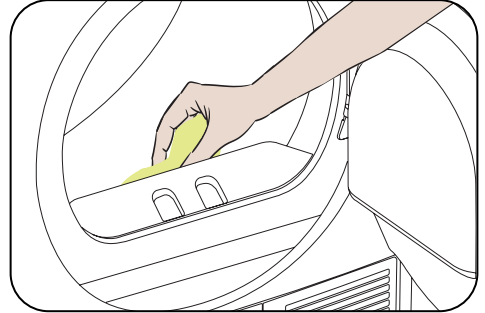

Makinenin içinde, çamaşırın kuru olup olmadığını algılayan nem sensörleri bulunmaktadır.

Sensörleri temizlemek için:

1. Makinenin yükleme kapağını açın.
2. Kurutma işleminden dolayı makine hala sıcaksa soğumasını bekleyin.
3. Sensörün metal yüzeylerini ıslatılmış yumuşak bir bezle silin ve kurulaştırın.

**ÖNEMLİ:** SENSÖRÜN METAL YÜZEYLERİNİ YILDA 4 KEZ TEMİZLEYİN.


**ÖNEMLİ:** Sensörün metal yüzeylerini temizlerken metal aletler kullanmayın.

**! UYARI:** Yangın ve patlama tehlikesi nedeniyle, sensörleri temizlerken çözelti maddesi, temizleme maddesi veya benzeri maddeler kullanmayın.

#### 6.4. Yükleme Kapağı İç Yüzey Temizliği

**! ÖNEMLİ:** YÜKLEME KAPAĞI İÇ YÜZEYİNİ HER KURUTMA İŞLEMİNDEN SONRA MUTLAKA TEMİZLEYİNİZ.

Kurutma makinesinin yükleme kapağını açıp, tüm iç yüzeylerini ve contasını yumuşak nemli bir bezle siliniz.

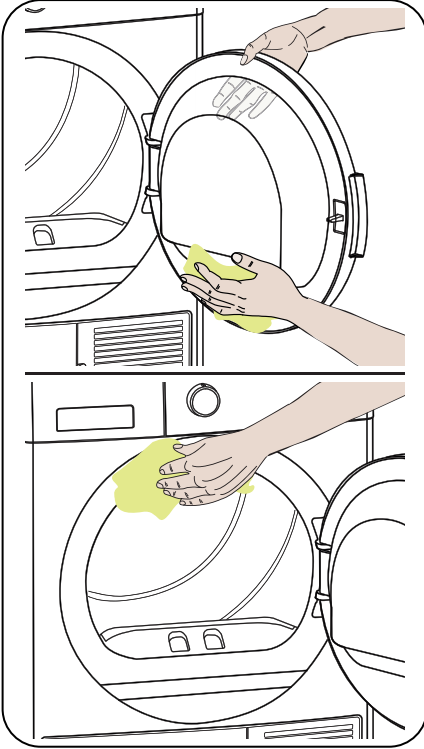

## 7. TEKNİK ÖZELLİKLER

|                                |                            |
|--------------------------------|----------------------------|
| Marka                          | LG                         |
| Model adı                      | RH80T1AP6R                 |
| Yükseklik                      | Min: 845 mm / Max: 855 mm* |
| Genişlik                       | 600 mm                     |
| Derinlik                       | 610 mm                     |
| Kapasite (max.)                | 8 kg**                     |
| Net ağırlık (plastik kapı ile) | 45,4 kg                    |
| Net ağırlık (cam kapılı)       | 47,8 kg                    |
| Voltaj                         | 220-240 V                  |
| Güç                            | 1000 W                     |

\* Min. yükseklik: Ayarlanabilir ayakların yüksekliği kullanılmaz. Maks. yükseklik: Ayarlanabilir ayakların yüksekliği, maksimum genişliğe kadar uzatılmıştır.

\*\* Yıkamadan önce kuru çamaşır ağırlığı.

 **ÖNEMLİ:** Kurutucunun kalitesini iyileştirmek için teknik özellikler önceden haber vermeksizin değiştirilebilir.

 **ÖNEMLİ:** Bildirilen değerler ilgili standartlara göre laboratuvar ortamında elde edilmiştir. Bu değerler çevre koşullarına ve kurutucunun kullanımına bağlı olarak değişebilir.

 **DİKKAT:**

1. Güvenlik nedenlerinden ötürü, mevzuat, bu tür ekipmanlar için 8 g'lık en az 1 m<sup>3</sup>'lik bir odayı zorlar. 110 g propan için izin verilen minimum oda büyüklüğü 13.75 m<sup>3</sup> olacaktır.
2. Soğutma sıvısı: Yangın / zehirlenme riski / maddi hasar riski ve cihaza zarar verme riski. Cihaz çevre dostu olmasına rağmen yanıcı R290 olan soğutucu akışkan içerir. Uygun şekilde imha edilmemesi yangın veya zehirlenme ile sonuçlanabilir. Cihazı uygun şekilde atın ve soğutucu akışkan devresindeki borulara zarar vermeyin.
  - Soğutucu tipi: R290
  - Gaz miktarı: 110g
  - ODP (Ozon Tüketimi Potansiyeli): 0
  - GWP (Küresel Uyarı Potansiyeli): 3
3. Patlama veya yangın riski. Sigara çakmağını çıkarın ve cepler ile eşleştirin.
4. Kurutucuyu açık ateşlerin ve ateşleme kaynaklarının yanına koymayın.

## 8. SORUN GİDERME

Kurutma makineniz kurutma işlemleri sırasında devamlı olarak kendisini kontrol ederek herhangi bir arıza oluşması durumunda hem gerekli önlemleri alacak, hem de sizi uyaracak sistemlerle donatılmıştır.

**⚠ UYARI:** Bu bölümdeki talimatları uygulamanıza rağmen sorunu gideremezseniz ürünün satın aldığınız bayi ya da Yetkili Servise başvurun. Çalışmayan ürünü kendiniz onarmayı asla denemeyin.

| SORUN                                                                                    | SEBEBİ                                                                                       | ÇÖZÜM                                                                                                                                           |
|------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Kurutma işlemi uzun sürüyor                                                              | Hava filtresinin yüzeyi tıkanmış olabilir.                                                   | Filtreyi ılık suyla yıkayın.                                                                                                                    |
|                                                                                          | Isı eşanjörü tıkanmış olabilir.                                                              | Eşanjörü temizleyin.                                                                                                                            |
|                                                                                          | Makinenin önündeki havalandırma ızgaraları kapalı olabilir.                                  | Oda sıcaklığının çok yükselmesini önlemek için kapıları / pencereleri açın.                                                                     |
|                                                                                          | Nem sensöründe bir kireç tabakası olabilir.                                                  | Nem sensörünü temizleyiniz.                                                                                                                     |
|                                                                                          | Kurutucu çamaşırlarla aşırı yüklenebilir.                                                    | Kurutma makinesini aşırı yüklemeyin.                                                                                                            |
|                                                                                          | Çamaşırlar yeterince bükülmüş olabilir.                                                      | Çamaşır makinenizde daha yüksek bir sıkma hızı seçin.                                                                                           |
| Kurutma işleminin sonunda çamaşır nemi çıkıyor.                                          | <b>⚠</b> Kurutma işleminin sonunda sıcak çıkan çamaşırlar genellikle daha nemli hissettirir. |                                                                                                                                                 |
|                                                                                          | Kullanılan program çamaşır tipi için uygun olmayabilir.                                      | Çamaşır kalemleri üzerindeki bakım etiketlerini kontrol edin, çamaşır tipi için uygun bir program seçin ve ayrıca zaman programlarını kullanın. |
|                                                                                          | Hava filtresinin yüzeyi tıkanmış olabilir.                                                   | Filtreyi ılık suyla yıkayın.                                                                                                                    |
|                                                                                          | Isı eşanjörü tıkanmış olabilir.                                                              | Eşanjörü temizleyin.                                                                                                                            |
|                                                                                          | Kurutucu çamaşırlarla aşırı yüklenebilir.                                                    | Kurutma makinesini aşırı yüklemeyin.                                                                                                            |
|                                                                                          | Çamaşırlar yeterince bükülmüş olabilir.                                                      | Çamaşır makinenizde daha yüksek bir sıkma hızı seçin.                                                                                           |
| Kurutucu açılmıyor veya program başlatılmıyor. Kurutucu ayarlandığında etkinleştirilmez. | Kurutucu takılı olmayabilir.                                                                 | Fişin sokete takılı olduğundan emin olun.                                                                                                       |
|                                                                                          | Yükleme kapağı açık olabilir.                                                                | Yükleme kapağının düzgün şekilde kapatıldığından emin olun.                                                                                     |
|                                                                                          | Bir program ayarlamış veya Start / Pause tuşuna basmamış olabilirsiniz.                      | Programın ayarlandığından ve kurutucunun Bekleme (Duraklama) modunda olmadığından emin olun.                                                    |
|                                                                                          | Çocuk kilidi aktif olabilir.                                                                 | Çocuk kilidini devre dışı bırakın.                                                                                                              |
| Program hiçbir sebepten dolayı kesintiye uğradı.                                         | Yükleme kapağı düzgün kapatılmamış olabilir.                                                 | Yükleme kapağının düzgün şekilde kapatıldığından emin olun.                                                                                     |
|                                                                                          | Bir elektrik kesintisi olmuş olabilir.                                                       | Programı başlatmak için Başla / Bekle tuşuna basın.                                                                                             |
|                                                                                          | Su deposu dolu olabilir.                                                                     | Su haznesini boşaltın.                                                                                                                          |

| SORUN                                                      | SEBEBİ                                                                                                   | ÇÖZÜM                                                                                           |
|------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Kıyafetler büzülmüş, keçeli veya bozulmuştur.              | Kullanılan program çamaşır tipi için uygun olmayabilir.                                                  | Çamaşır kalemindeki bakım etiketlerini kontrol edin, çamaşır tipi için uygun bir program seçin. |
| Yükleme kapısından sızan su.                               | Yükleme kapağının iç yüzeylerinde ve yükleme kapağının contasının yüzeylerinde lif birikintisi olabilir. | Yükleme kapağının iç yüzeylerini ve yükleme kapağının contasının yüzeylerini temizleyin.        |
| Yükleme kapağı kendi kendine açılır.                       | Yükleme kapağı düzgün kapatılmamış olabilir.                                                             | Kapanış sesini duyana kadar yükleme kapağını itin.                                              |
| Su haznesi uyarı sembolü yanıyor / yanıp sönüyor.          | Su deposu dolu olabilir.                                                                                 | Su haznesini boşaltın.                                                                          |
|                                                            | Su tahliye hortumu bükülmüş olabilir.                                                                    | Ürün doğrudan su çıkışına bağlıysa, su tahliye hortumunu kontrol edin.                          |
| Filtre ve ısı eşanjörü temizlik uyarı sembolü yanıyor.     | Filtre yuvası tiftik tarafından tıkanmış olabilir.                                                       | Filtre yuvasını temizleyiniz.                                                                   |
|                                                            | Tiftik filtresinin yüzeyinde tıkanmaya neden olan bir tabaka olabilir.                                   | Filtreyi ılık su ile yıkayın.                                                                   |
|                                                            | Isı eşanjörü kirli olabilir.                                                                             | Isı eşanjörünü temizleyin.                                                                      |
| Program başlatılamıyor ve filtre uyarı ledi yanıp sönüyor. | Filtre yerine takılmamış olabilir.                                                                       | Filtreyi yerine takın.                                                                          |
|                                                            | Filtre yerine takılı olduğu halde filtre uyarı ledi yanıp sönüyorsa filtre sensöründe arıza olabilir.    | Teknik servisi arayın.                                                                          |

## 9. HATA KODLARI VE YAPILMASI GEREKENLER

Kurutma makinenizde, yanıp sönen çalışma ışıklarının bir kombinasyonu ile gösterilen yerleşik bir arıza tespit sistemi bulunur. En yaygın arıza kodları aşağıda gösterilmiştir.

| HATA KODU                                                                               | ÇÖZÜM                                                                                                                        |
|-----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| E00                                                                                     | Teknik servisi arayın.                                                                                                       |
| E03 /  | Su haznesini boşaltın, sorun çözülmezse, en yakın yetkili servis temsilcisiyle görüşün.                                      |
| E04                                                                                     | Teknik servisi arayın.                                                                                                       |
| E05                                                                                     | Teknik servisi arayın.                                                                                                       |
| E06                                                                                     | Teknik servisi arayın.                                                                                                       |
| E07                                                                                     | Teknik servisi arayın.                                                                                                       |
| E08                                                                                     | Şehir şebekesinde voltaj dalgalanması olabilir. Voltaj değeri makinenin çalışmasına uygun olduğunda çalışmaya başlayacaktır. |


## 10. ÇEVRE KORUMA VE AMBALAJ BİLGİSİ

### 10.1. Ambalaj Bilgisi

Ürünün ambalajı, geri dönüştürülebilir malzemelerden üretilmiştir. Ambalaj atığını evsel veya diğer atıklarla birlikte atmayın, yerel yönetimin belirttiği ambalaj toplama noktalarına atın.

## 11. ENERJİ ETİKETİNİN AÇIKLANMASI VE ENERJİ TASARRUFU

### 11.1. Enerji Etiketi

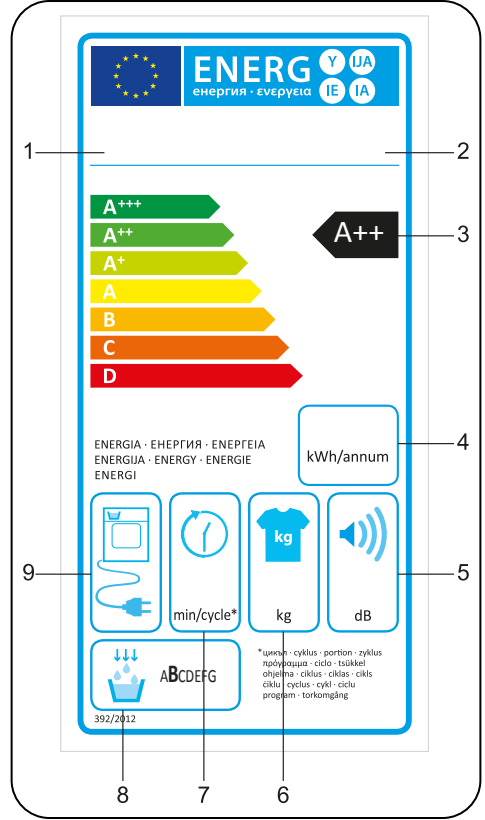

1. Marka
2. Model
3. Enerji Sınıfı
4. Yıllık Enerji Tüketimi
5. Kurutma Sırasındaki Gürültü Değeri
6. Kuru Çamaşır Kapasitesi
7. Pamuklu Dolap Kuruluşu Çevrim Süresi
8. Yoğuşma Verimliliği Sınıfı
9. Makine Teknolojisi

## 11.2. Enerji Verimliliği

- Kurutma makinesini tam kapasite ile çalıştırmalı, ancak kapasitesinden fazla da yüklememeye dikkat edilmelidir.
- Çamaşırlar yıkanırken mümkün olan en yüksek devirde sıkma yapılmalıdır. Bu, kurutma süresini kısaltarak enerji tüketimini azaltır.
- Aynı cins çamaşırların birlikte kurutulmasına özen gösterilmelidir.
- Program seçimi için kullanma kılavuzundaki tavsiyelere uyulmalıdır.
- Kurutma Makinesi önünde ve arkasında hava dolaşımı için uygun mesafe bırakılmalıdır. Makinenin ön tarafındaki ızgaraların üzerleri örtülmemelidir.
- Kurutma işlemi sırasında gerek duyulmadıkça makinenin kapısı açılmamalıdır. Makinenin kapısını açma ihtiyacı varsa uzun süreli olmamalıdır.
- Kurutma işlemi sırasında yeni (ıslak) çamaşır eklenmemelidir.
- Kurutma işlemi boyunca çamaşırdan ayrılıp havaya karışan tüy ve lifler "Hav Filtreleri" tarafından toplanır. Filtrelerin her kurutma öncesi veya sonrası temizlenmesine dikkat edilmelidir.
- Isı pompalı modellerde, eşanjörün en az ayda bir veya her 30 kurutmadan sonra düzenli olarak temizlenmesine dikkat edilmelidir.
- Kurutma işlemi sırasında kurutma makinesinin bulunduğu ortam iyi havalandırılmalıdır.

| ÜRÜN FİŞİ                                                                           |                |
|-------------------------------------------------------------------------------------|----------------|
| Kanun Hükmünde Komisyon Yönetmeliği (EU) No 392/2012 ile uyumludur.                 |                |
| Tedarikçi adı veya ticari marka                                                     | LG Electronics |
| Model adı                                                                           | RH80T1AP6R     |
| Nominal kapasite (kg)                                                               | 8              |
| Kurutma Makinesi tipi                                                               | Isı Pompalı    |
| Enerji verim sınıfı <sup>(1)</sup>                                                  | A++            |
| Yıllık Enerji Tüketimi (kWh) <sup>(2)</sup>                                         | 235            |
| Kontrol tipi                                                                        | Otomatik       |
| Tam yükte standart pamuklu programda enerji tüketimi (kWh)                          | 1,88           |
| Kısmi yükte standart pamuklu programda enerji tüketimi (kWh)                        | 1,10           |
| Tam yükte standart pamuk programı için kapalı modun güç tüketimi $P_o$ (W)          | 0,50           |
| “Açık Bırakma” modunda elektrik tüketimi $P_L$ (W)                                  | 1,00           |
| “Açık Bırakma” modu süresi (dak.)                                                   | Yok            |
| Standart Pamuklu programı <sup>(3)</sup>                                            | -              |
| Tam yükte standart pamuklu programının süresi, $T_{dry}$ (dak.)                     | 179            |
| Kısmi yükte standart pamuklu programının süresi, $T_{dry1/2}$ (dak.)                | 107            |
| Kısmi ve tam yükte standart pamuklu programın ağırlıklı süresi ( $T_i$ ) (dak.)     | 138            |
| Yoğuşurma verim sınıfı <sup>(4)</sup>                                               | B              |
| Tam yükte standart pamuklu programın ortalama yoğuşurma verimi, $C_{dry}$ (%)       | 81             |
| Kısmi yükte standart pamuklu programın ortalama yoğuşurma verimi, $C_{dry1/2}$ (%)  | 81             |
| Tam ve kısmi yükte standart pamuklu programın ağırlıklı yoğuşurma verimi, $C_i$ (%) | 81             |
| Ürün ses gücü seviyesi <sup>(5)</sup> (dB)                                          | 65             |
| Ankastr kullanımı                                                                   | Yok            |

(1) Verim sınıfı A+++ (en yüksek verim)’ dan D (en düşük verim)’ ye kadar

(2) Standart pamuklu dolap programında, tam ve yarım yük koşulunda 160 kurutma çevrimine dayanan, düşük güç modları da dikkate alınarak hesaplanan enerji tüketim değeridir. Gerçek çevrim başına düşen enerji tüketim değeri, kurutma makinesinin kullanımına bağlıdır.

(3) “Pamuklu dolap programı” etikette ve ürün fişinde bilgilerin verildiği, tam ve yarım yükte kullanılabilecek standart kurutma programıdır. Bu program, normal ıslak pamuklu yüklerin kurutulmasında kullanılan enerji tüketimi açısından en verimli programdır.

(4) Verim sınıfı G (en düşük verim)’ den A (en yüksek verim)’ ya kadar

(5) Ağırlıklı ortalama değeri — L WA birimi dB(A) re 1 pW ile ifade edilmiştir.

## 12. GARANTİ KARTI

### 12. 1 Garanti

## Garanti

### Garanti Bilgileri

1. Garanti süresi, ürünün teslim tarihinden itibaren başlar ve aşağıdaki tablodaki gibidir.

#### Ürünlerin Garanti Süreleri ve Kullanım Ömrü Tablosu<sup>\*1</sup>

| Ürün                                              | Garanti Süresi | Kullanım Ömrü |
|---------------------------------------------------|----------------|---------------|
| Çamaşır Makineleri,<br>Çamaşır Kurutma Makineleri | 3 Yıl          | 10 Yıl        |

\*1 Bu tablodaki belirtilen kullanım ömrü süreleri Gümrük ve Ticaret Bakanlığı tarafından düzenlenen 13.06.2014 tarih ve 29029 sayılı Resmi Gazetede yayınlanan SATIŞ SONRASI HİZMETLER YÖNETMELİĞİ'nden alınmıştır.

2. Malın bütün parçaları dahil olmak üzere tamamı firmamızın garantisi kapsamındadır.
3. Malın garanti süresi içerisinde arızalanması durumunda, tamirde geçen süre garanti süresine eklenir. Malın tamir süresi en fazla 20 iş günüdür. Bu süre, mala ilişkin arızanın servis istasyonuna, servis istasyonunun olmaması durumunda, malın satıcısı, bayi, acentesi, temsilciliği, ithalatçısı veya imalatçısından üreticisinden birisine bildirim tarihinden itibaren başlar. Sanayi malının arızasının 10 iş günü içerisinde giderilmemesi halinde, imalatçı-üretici veya ithalatçı; malın tamiri tamamlanıncaya kadar, benzer özelliklere sahip başka bir malını tüketicinin kullanımına tahsis etmek zorundadır.
4. Malın garanti süresi içerisinde, gerek malzeme ve işçilik, gerekse montaj hatalarından dolayı arızalanması halinde, işçilik masrafı, değiştirilen parça bedeli ya da başka herhangi bir ad altında hiçbir ücret talep etmeksizin tamiri yapılacaktır.
5. Garanti belgesi ile ilgili olarak çıkabilecek sorunlar için T.C. Gümrük ve Ticaret Bakanlığı, Tüketicinin Korunması ve Piyasa Gözetim Genel Müdürlüğü'ne başvurulabilir.
6. Malın ayıplı olduğunun anlaşılması durumunda tüketici;
- Satılanı geri vermeye hazır olduğunu bildirerek sözleşmeden dönme,
  - Satılanı alıkoymup ayıp oranında satış bedelinden indirim isteme,
  - Aşırı bir masraf gerektirmediği takdirde, bütün masrafları satıcıya ait olmak üzere satılanın ücretsiz onarılmasını isteme,
  - İmkân varsa, satılanın ayıpsız bir misli ile değiştirilmesini isteme, seçimlik haklarından birini kullanabilir. Satıcı, tüketicinin tercih ettiği bu talebi yerine getirmekle yükümlüdür. Ücretsiz onarım veya malın ayıpsız misli ile değiştirilmesi hakları üretici veya ithalatçıya karşı da kullanılabilir. Bu hakların yerine getirilmesi konusunda satıcı, üretici ve ithalatçı müteselsilen sorumludur.

## 12. 2 Hizmet Bilgisi

Üretici veya ithalatçı, malın kendisi tarafından piyasaya sürülmesinden sonra ayıbın doğduğunu ispat ettiği takdirde sorumlu tutulmaz. Ücretsiz onarım veya malın ayıpsız misli ile değiştirilmesinin satıcı için orantısız güçlükleri beraberinde getirecek olması halinde tüketici, sözleşmeden dönme veya ayıp oranında bedelden indirim haklarından birini kullanabilir. Orantısızlığın tayininde malın ayıpsız değeri, ayıbın önemi ve diğer seçimlik haklara başvurma hakkının tüketici açısından sorun teşkil edip etmeyeceği gibi hususlar dikkate alınır. Ücretsiz onarım veya malın ayıpsız misli ile değiştirilmesi haklarından birinin seçilmesi durumunda bu talebin satıcıya, üreticiye veya ithalatçıya yöneltilmesinden itibaren azami yirmi iş günü . Ancak, bu Kanunun 58 inci maddesi uyarınca çıkarılan yönetmelik eki listede yer alan mallara ilişkin, tüketicinin ücretsiz onarım talebi, yönetmelikte belirlenen azami tamir süresi içinde yerine getirilir. Aksi halde tüketici diğer seçimlik haklarını kullanmakta serbesttir. Tüketicinin sözleşmeden dönme veya ayıp oranında bedelden indirim hakkını seçtiği durumlarda, ödemiş olduğu bedelin tümü veya bedelden yapılan indirim tutarı derhal tüketiciye iade edilir. Seçimlik hakların kullanılması nedeniyle ortaya çıkan tüm masraflar, tüketicinin seçtiği hakkı yerine getiren tarafa karşılanır. Tüketici bu seçimlik haklarından biri ile birlikte 11/1/2011 tarihli ve 6098 sayılı Türk Borçlar Kanunu hükümleri uyarınca tazminat da talep edebilir.

### 7. Kullanım hatalarına ilişkin bilgi.

- Tüketicinin malı tanıtmaya ve kullanma kılavuzunda yer alan hususlara aykırı olarak kullanmasından kaynaklanan arızalar garanti kapsamı dışındadır. Arızalarda kullanım hatasının bulunup bulunmadığının, yetkili servis istasyonları, yetkili servis istasyonunun mevcut olmaması halinde sırasıyla; malın satıcısı, ithalatçısı veya üreticisinden birisi tarafından mala ilişkin azami tamir süresi içerisinde düzenlenen raporla belirlenmesi ve bu raporun bir nüshasının tüketiciye verilmesi zorunludur.

### 8. Arızalarda kullanım hatasının bulunup bulunmadığının, yetkili servis istasyonları, yetkili servis istasyonunun mevcut olmaması halinde sırasıyla; malın satıcısı, ithalatçısı veya üreticisinden birisi tarafından mala ilişkin azami tamir süresi içerisinde düzenlenen rapora ilişkin olarak bilirkişi tarafından tespit yapılması talebiyle uyuşmazlığın parasal değerini dikkate alarak tüketici hakem heyetine veya tüketici mahkemesine başvurulabilir.

## Hizmet Bilgisi

### Değerli Müşterimiz

- LG Çağrı Yönetim Merkezi 444 6 543 (LGE) numaralı telefon numarası üzerinden 7 gün/24 saat hizmet vermektedir (Saat 20:00 ile 09:00 arasında otomatik kayıt sistemiyle hizmet verilir). Bu saatler dışında aradığınızda adınızı, soyadınızı ve telefon numaranızı alan kodu ile bıraktığınızda ilk mesai saatinde sizinle irtibata geçilecektir. Doğrudan bu numarayı çevirerek size en yakın Yetkili Servis telefonunu alabilir veya arzu ettiğiniz hizmeti talep edebilirsiniz.

## Çağrı Merkezi

**444 6 543 (LGE)**

**+90 530 918 65 43 (Sadece WhatsApp İletişimi İçin) [www.lg.com/tr](http://www.lg.com/tr)**

**ÇAĞRI MERKEZİMİZİ SABİT TELEFONLARDAN  
VEYA CEP TELEFONLARINDAN ALAN KODU  
ÇEVİRMEKSİZİN ARAYABİLİRSİNİZ**

- Bu ürün LG Electronics Türkiye tarafından ithal edilmiştir. Garanti şartları Türkiye’de geçerlidir ve LG Electronics Türkiye tarafından sağlanmaktadır.
- Kolayca iletişime geçmek için mesajlaşın veya medya paylaşın. Telefon rehberinize “+90 530 918 65 43” ekleyin ve LG Müşteri Hizmetlerine bağlanın.
- Servisler zaman zaman değişebileceği için çağrı merkezinden aradığınız servisi teyit edebilirsiniz.
- Size en yakın yetkili servis merkezi bilgilerini LG Web sayfasında ([www.lg.com/tr](http://www.lg.com/tr)) bulabilirsiniz.

### Tüketici Bilgileri

- Tüketici Adı: \_\_\_\_\_
- Tüketici Adresi: \_\_\_\_\_
- Telefon: \_\_\_\_\_
- Tüketici İmzası: \_\_\_\_\_

### Ürün Bilgileri

- Ürün Sınıfı: \_\_\_\_\_
- Model Kodu: \_\_\_\_\_
- Seri Numarası: \_\_\_\_\_
- Teslim Tarihi: \_\_\_\_\_
- Fatura Tarihi: \_\_\_\_\_
- Fatura Numarası: \_\_\_\_\_

### Satıcı Firma Bilgileri

- Bayi Adı: \_\_\_\_\_
- Bayi Adresi: \_\_\_\_\_
- Telefon / Fax: \_\_\_\_\_
- Bayi İmzası: \_\_\_\_\_

### İthalatçı Firma Bilgileri

#### İTHALATÇI FİRMA

LG Electronics Ticaret A.Ş.  
Kaptanpaşa Mah. Piyalepaşa Bulvarı No: 73  
Ortadoğu Plaza Kat: 7 ve 8  
Okmeydanı/ Şişli/ İstanbul  
Posta Kodu: 34384  
Telefon: (0 212) 314 52 52  
Fax: (0 212) 222 61 44



LG ELECTRONICS TİCARET ANONİM ŞİRKETİ  
Kaptanpaşa Mah. Piyalepaşa Bulvarı No: 73  
Ortadoğu Plaza Kat: 7  
Okmeydanı/ Şişli/ İstanbul  
Telefon: (0212) 314 52 52 Fax: (0212) 222 61 44  
Vergi No: 6080 467 738  
Vergi Dairesi: Boğaziçi Kurumlar



## İTHALATÇI FİRMA

**LG Electronics Ticaret A.Ş.**  
**Kaptanpaşa Mah. Piyalepaşa**  
**Bulvarı No: 73**  
**Ortadoğu Plaza Kat:7 ve 8**  
**Okmeydanı / Şişli İSTANBUL 34384**  
**Tel : (0 212) 314 52 52**  
**Fax : (0 212) 222 61 44**

## ÜRETİCİ FİRMA:

**LG Electronics Ticaret A.Ş.**  
**Kaptanpaşa Mah. Piyalepaşa**  
**Bulvarı No: 73**  
**Ortadoğu Plaza Kat:7 ve 8**  
**Okmeydanı / Şişli İSTANBUL 34384**  
**Tel : (0 212) 314 52 52**  
**Fax : (0 212) 222 61 44**

**Çağrı Merkezi Telefonu : 44-6-543**

**Çağrı Merkezi Adresi :**  
**Kaptanpaşa Mah. Piyalepaşa**  
**Bulvarı No:73**  
**Ortadoğu Plaza Kat:8**  
**Okmeydanı / Şişli / İstanbul 34384**  
**Tel : (0 212) 314 52 52**  
**Fax : (0 212) 222 61 44**

**LG Çağrı Merkezi**