

**Specification**  
**Power requirements**  
• Refer to the main label.  
**Power consumption**  
• Refer to the main label.  
Soundbar Dimensions (W x H x D): Approx. 850.0 mm x 63.0 mm x 87.0 mm  
Rear Speaker Dimensions (W x H x D): Approx. 100.0 mm x 176.5 mm x 120.0 mm  
Bus Power Supply (USB): 5 V  500 mA  
Amplifier (Total RMS Output power):  
440 W (Rated, THD 10 %)  
\* 600 W (Reference, THD 30 %)

**Open Source Software Notice Information**  
To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices, please visit <https://opensource.lge.com>.  
LG Electronics will also provide open source code to you for a charge covering the cost of performing such distribution upon email request to [opensource@lge.com](mailto:opensource@lge.com).  
This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

**מפרט**  
דרישות חשמל  
• עיין בתווית הראשית.  
צריכת חשמל  
• עיין בתווית הראשית.  
• מידות הסאונד בר (רוחב x גובה x עומק): 850.0 מ"מ x 63.0 מ"מ x 87.0 מ"מ (בקירוב)  
• מידות רמקול אחורי (רוחב x גובה x עומק): 100.0 מ"מ x 176.5 מ"מ x 120.0 מ"מ (בקירוב)  
אפיק אספקת חשמל (USB): 5 V  500 mA  
מגבר (סה"כ עוצמת הספק RMS):  
440 W (התייחסות, THD 10 %)  
\* 600 W (התייחסות, THD 30 %)  
**פרטי הודעה על תוכנת קוד פתוח**  
כדי לקבל את קוד המקור תחת GPL, LGPL, MPL ורישיונות קוד פתוח אחרים שיש להם חובה לחשוף את קוד המקור הכלול במוצר זה, ולגשת לכל תנאי הרישיון המופנים ולהודעות זכויות יוצרים, אנא בקר ב- <https://opensource.lge.com>.  
LG Electronics גם תספק לכם קוד מקור פתוח בתמורה לתשלום המכסה את עלות ההפצה, בתגובה לבקשה בדואר האלקטרוני אל [opensource@lge.com](mailto:opensource@lge.com).  
הצעה זו תקפה לכל מי שמקבל מידע זה לתקופה של שלוש שנים לאחר המשלוח האחרון של מוצר זה.



מדריך מהיר

# מקרון קול אלחוטי

Wireless Soundbar

(SPT8-SPK ,SPT8-S) S65TR



COV30235518  
2605\_Rev01

[www.lg.com](http://www.lg.com)  
זכויות יוצרים © כל ה זכויות שמורות לחברת  
LG ELECTRONICS INC 2026

ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- A

Soundbar
- B

Remote Control Receiver
- C

Status LED (123)
- D

Rear Speakers
- E

Wireless Subwoofer - Install it close to the soundbar.
- F

External Device - (Blu-ray player, game console, etc.)

| ○ : On / ● : Off / ⚡ : Blink |                 |           |                       |        |
|------------------------------|-----------------|-----------|-----------------------|--------|
|                              |                 |           |                       |        |
| Red blinking                 | White blinking  | White     | White                 | Purple |
| Power on<br>Power off        | Bluetooth ready | Bluetooth | OPTICAL /<br>HDMI ARC | USB    |

- 1 Connect the soundbar to your TV via an optical cable or an HDMI cable.
- 2 If you are using an external device (ex. Set-top box, Blu-ray player, game console, etc.), connect it to the TV via an HDMI cable.

1 If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the soundbar.
- 3 Connect the rear speakers via a speaker cable. When connecting the rear speakers, connect the black striped cable to the negative terminal of each speaker and the remaining cable to the positive terminal of each speaker.
- 4 Connect to power in the following order: wireless subwoofer → rear speakers → soundbar. Then, turn on the soundbar. When the connection is automatically established with the soundbar, the LEDs on the wireless subwoofer and the rear speakers will light up green.
- 5 Connecting the product to your smartphone via Bluetooth

1 Tap the **Settings** button on your smartphone and select **Bluetooth**. Turn on the **Bluetooth** function. (Off > On)

2 Press the **Bluetooth pair** button. After a moment, LED1 and LED2 blink white.

3 Find and tap the product on your smartphone. The product appears as "LG S65TR(XX)".

4 When the product is connected to your smartphone via **Bluetooth**, LED1 and LED2 light up white.
- 6 Connecting to the LG ThinQ app

1 Find and install the **LG ThinQ app** on Google Play or App Store from your smartphone.

2 You can get more information regarding its use by selecting [Help] in [Setting].



If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

1 Press the **Power** button on the soundbar to turn it off.

2 Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.

- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.

3 Press the **Power** button on the soundbar to turn it on.

4 When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.

Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

Some speakers may not make sound depend on the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

- Actual features, functionality, and other product specifications may differ and are subject to change without notice.
- Google Play is a trademark of Google LLC.

עברית התקנה ושימוש במוצר



- A

מקרן קול
- B

שלט רחוק של רסיבר
- C

סטטוס לד (123)
- D

רמקולים אחוריים
- E

סאבוופר אלחוטי - התקן קרוב למקרן הקול.
- F

מכשיר חיצוני - (נגן Blu-ray, קונסולת משחקים, וכדומה)

| ○ : מופעל / ● : כבוי / ⚡ : הבהוב |                     |           |                |                |
|----------------------------------|---------------------|-----------|----------------|----------------|
|                                  |                     |           |                |                |
| סגול                             | לבן                 | לבן       | לבן (מהבהב)    | אדום מהבהב     |
| USB                              | אופטי /<br>HDMI ARC | Bluetooth | Bluetooth מוכן | הפעלה<br>כיבוי |

- 1 חבר את מקרן הקול לסטלויזיה דרך כבל אופטי או כבל HDMI.
- 2 אם אתה משתמש במכשיר חיצוני (לדוגמה, ממיר, נגן Blu-ray, קונסולת משחקים וכו'), חבר אותו לסטלויזיה באמצעות כבל HDMI. אם נדרש, רכוש כבלי HDMI, כבל אופטי, או כבל הרחבת USB לחיבור אל מקרן הקול.

1
- 3 חבר את הרמקולים האחוריים באמצעות כבל הרמקול. בעת חיבור הרמקולים האחוריים, חבר את הכבל עם הפסים השחורים למסוף השלילי של כל רמקול ואת הכבל הנותר למסוף החיובי של כל רמקול.
- 4 חברו לחשמל לפי הסדר הבא: סאב וופר אלחוטי ← רמקולים אחוריים ← מקרן קול. לאחר מכן, הפעילו את מקרן הקול. כאשר החיבור נוצר אוטומטית עם מקרן הקול, נוריות ה-LED בסאבוופר האלחוטי והרמקול האחורי יידלקו בירוק.
- 5 חיבור המוצר לסלפון נייד דרך Bluetooth

1 הקש על לחצן הגדרות בטלפון הנייד ובחר Bluetooth. הפעל את פונקציית Bluetooth. (כבוי > מופעל)

2 לחצו על כפתור קישור Bluetooth. לאחר רגע, LED1 ו-LED2 יבהבו בלבן.

3 מצאו את שם הדגם בטלפון החכם שלכם ובחרו אותו. המוצר מופיע בשם "LG S65TR(XX)".

4 כאשר המוצר מחובר לסמארטפון שלך באמצעות Bluetooth, LED1 ו-LED2 ידלקים בלבן.
- 6 מתחבר לאפליקציית LG ThinQ

1 מצאו והתקינו את אפליקציית LG ThinQ ב-Google Play או ב-App Store בסמארטפון שלכם.

2 תוכלו לקבל מידע נוסף לגבי השימוש בו על ידי בחירה ב-[עזרה] ב-[הגדרות].



במידה ונדלקת נורת LED אדומה בסאב-וופר האלחוטי או הרמקול האחורי, זה אומר שמקרן הקול אינו מחובר לרמקולים. במקרה זה, חבר אותם בסדר הבא:

1 לחץ על לחצן הפעלה/כיבוי במקרן הקול כדי לכבות אותו.

2 יש לחוץ על לחצן PAIRING בגב הסאב-וופר האלחוטי או הרמקול האחורי. בדוק באם כל לד מהבהב בירוק.

- אם עדיין מוצג לד אדום בסאבוופר האלחוטי, לחץ והחזק שוב את הלחצן בגב הסאבוופר.



3 לחץ על לחצן הפעלה/כיבוי במקרן הקול כדי להפעיל אותו.

4 כאשר החיבור נוצר, נורת LED תדלק בירוק בסאב-וופר האלחוטי או ברמקולים אחוריים אלחוטיים.

יש להרחיק את מקרן הקול, הסאבוופר והרמקולים האחוריים מהמכשיר (למשל נתב אלחוטי, מיקרוגל וכו') מעל ל-1 מטר כדי למנוע הפרעות אלחוטיות.

רמקולים מסוימים לא יפיקו צליל בהתאם למקור הכניסה. בחר מצב קול BASS BLAST (BASS BLAST+) להאזנה דרך כל הרמקולים.

- תכונות בפועל, הפונקציונליות ומפרטי המוצר האחרים עשויים להיות שונים וכפופים לשינויים ללא הודעה מוקדמת.
- Google Play הוא סימן מסחרי של Google LLC.

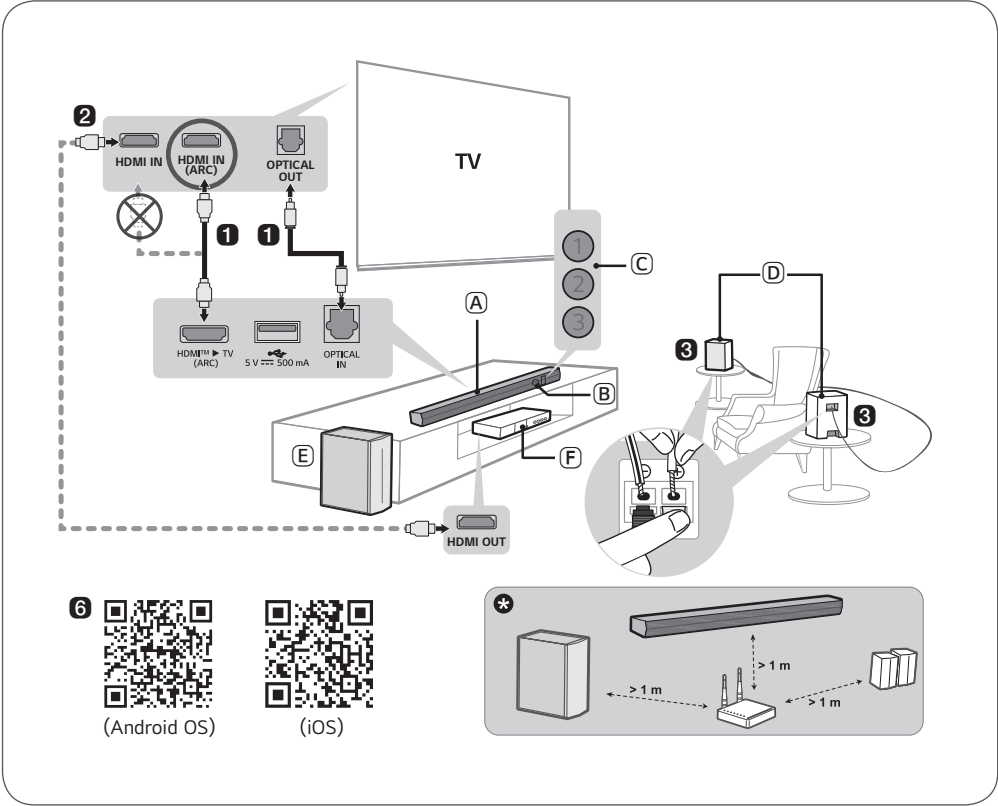

החלפת הסוללה  
Replacement of Battery

