LG
Life's Good

SIMPLE MANUAL

Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL


SL4

MFL71380172
2105_Rev02


www.lg.com

Copyright © 2019-2021 LG Electronics Inc. All Rights Reserved.

ENGLISH




Front Panel



⏻ (Standby) ····· Switches the unit ON or OFF.
F (Function) ····· Selects function.
—/+ (Volume) ····· Adjusts volume.

Rear Panel

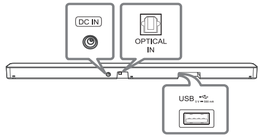

DC IN ····· Connect to the AC adapter.
OPTICAL IN ····· Connect to an optical device.
USB Port ····· Connect to a USB device.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.


1. Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
2. Turn on the sound bar.
   - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's yellow - green LED turns on.

Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.


1. Press **PAIRING** on the rear of the wireless subwoofer.
   - The yellow - green LED on the front of the wireless subwoofer blinks quickly. (If the yellow - green LED does not blink, press and hold the **PAIRING**.)
2. Turn on the sound bar.
   - Pairing is completed. The yellow - green LED on the front of the wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.




TV Connection

1. Connect the sound bar to the TV using Optical cable.
2. Set up [External Speaker (Optical)] on your TV setting menu.



Additional Device Connection

1. Connect to the external device like as follow.

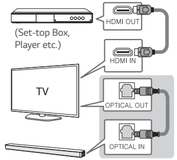


2. Set the input source by pressing **F** repeatedly.

Remote control



Replacement of Battery



⏮/⏭: Skip/Search
⏯: Play/Pause
- **Bluetooth connection lock (BT LOCK):** Select the **Bluetooth** function by pressing **F** repeatedly. Long press ⏯ and press it again to limit Bluetooth connection to only BT and LG TV.

SOUND EFFECT: Selects a sound effect mode.
- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

FOLDER ∧/∨: Searches a folder.
⏻**:** Displays the information of a file, an input source or connected **Bluetooth** device name.
- **Auto Power ON/OFF:** Long press ⏻ and press it again.

: Adjusts sound level of each speaker.
REPEAT: Listens to your files repeatedly or randomly.

Additional Information

Specification

Power consumption	Refer to the main label.
AC adapter	• Model : DA-38A25 • Manufacturer : Asian Power Devices Inc. • Input : 100 - 240 V ~ 50 - 60 Hz • Output : 25 V ⎓ 1.52 A
	• Model : MS-Z1520R250-038A0-P • Manufacturer : MOSO POWER SUPPLY TECHNOLOGY CO., LTD. • Input : 100 - 240 V ~ 50/60 Hz • Output : 25 V ⎓ 1.52 A
Dimensions (W x H x D)	Approx. 890.0 mm X 57.0 mm X 85.0 mm With foot
Bus Power Supply (USB)	5 V ⎓ 500 mA
Amplifier (Total RMS Output power)	300 W RMS

Design and specifications are subject to change without notice.

LG
Life's Good

TIẾNG VIỆT

HƯỚNG DẪN SỬ DỤNG ĐƠN GIẢN

LOA THANH KHÔNG DÂY


Vui lòng đọc kỹ tài liệu hướng dẫn này trước khi vận hành bộ thiết bị của bạn và giữ lại để tham khảo sau.
Để xem hướng dẫn về các tính năng nâng cao, hãy truy cập http://www.lg.com và sau đó tải về Tài liệu Hướng dẫn Sử dụng.
Một số nội dung trong tài liệu hướng dẫn này có thể khác với thiết bị của bạn.

Sản phẩm

SL4

MFL71380172
2105_Rev02

www.lg.com
Bản quyền © 2019-2021 LG Electronics Inc.
Bảo lưu mọi quyền.




Bảng mặt trước



⏻ (Chế độ Chờ) · · Công tắc ON (BẬT) hoặc OFF (TẮT).
F (Chức năng) · · · · · · · · · · Chọn chức năng.
—/+ (Âm lượng) · · · · · Điều chỉnh âm lượng.

Bảng mặt sau

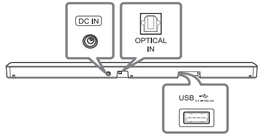

DC IN · · · · · · · · · · · Kết nối với adapter AC.
OPTICAL IN · · · · · Kết nối với thiết bị quang.
Cổng USB · · · · · · · · Kết nối với thiết bị USB.

Kết nối loa siêu trầm

Đặt loa siêu trầm gần loa thanh và thực hiện theo các bước sau.

❶ Kết nối dây nguồn của loa thanh và loa siêu trầm không dây với ổ cắm.

❷ Bật loa thanh.
- Loa thanh và loa siêu trầm không dây sẽ được **tự động** kết nối. Đèn LED vàng - xanh lá của loa siêu trầm sẽ bật.


Kết nối Loa siêu trầm Bằng tay

Nếu loa siêu trầm không phát ra âm thanh, thử kết nối bằng tay.

❶ Nhấn nút **PAIRING** ở phía sau của loa siêu trầm không dây.
- Đèn LED vàng - xanh lá ở phía trước của loa siêu trầm không dây sẽ nhấp nháy nhanh.
(Nếu đèn LED màu vàng - xanh lá không nhấp nháy, hãy nhấn và giữ nút **PAIRING**.)

❷ Bật loa thanh.
- Hoàn tất ghép. Đèn LED vàng - xanh lá ở phía trước của loa siêu trầm không dây sẽ bật.


Giữ khoảng cách giữa loa thanh và loa siêu trầm cách xa các thiết bị (như bộ định tuyến không dây, lò vi sóng, v.v.) trên 1 m để tránh nhiễu tín hiệu không dây.



Kết nối TV


❶ Kết nối loa thanh với TV sử dụng cáp quang.

❷ Cài đặt [External Speaker (Optical)] trên trình đơn cài đặt TV của bạn.



Kết nối Thiết bị Phụ

❶ Kết nối với thiết bị ngoại vi như sau.

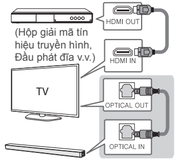


❷ Cài đặt nguồn đầu vào bằng cách nhấn **F** nhiều lần.

Bộ điều khiển từ xa



Thay pin



⏮/⏭: Bỏ Qua/Tìm Kiếm
⏯: Phát/Tạm Dừng

- **Khóa kết nối Bluetooth (BT Lock):** Chọn chức năng **Bluetooth** bằng cách nhấn **F** nhiều lần. Nhấn lâu nút ⏯ và nhấn lại để giới hạn kết nối Bluetooth chỉ ở BT và LG TV.

SOUND EFFECT: Chọn một chế độ hiệu ứng âm thanh.
- **Thiết bị điều khiển từ xa của TV:** Nhấn lâu **SOUND EFFECT** và nhấn lại để sử dụng thiết bị điều khiển từ xa của TV.

FOLDER ∧/∨: Tìm kiếm một thư mục.
ⓘ: Hiển thị thông tin về một tập tin, nguồn đầu vào hoặc tên thiết bị **Bluetooth** đã kết nối.
- **Tự Động BẬT/TẮT Nguồn:** Nhấn lâu ⓘ và nhấn một lần nữa.

🔉: Điều chỉnh mức âm thanh của từng loa.
REPEAT: Nghe các tập tin của bạn lặp đi lặp lại hoặc ngẫu nhiên.

Thông tin bổ sung

Thông số kỹ thuật

Mức tiêu thụ điện	Tham khảo nhãn chính.
Bộ nguồn AC	• Dòng máy : DA-38A25 • Nhà sản xuất : Asian Power Devices Inc. • Nguồn vào : 100 - 240 V ~ 50 - 60 Hz • Nguồn ra : 25 V ⎓ 1,52 A
	• Dòng máy : MS-Z1520R250-038A0-P • Nhà sản xuất : MOSO POWER SUPPLY TECHNOLOGY CO., LTD. • Nguồn vào : 100 - 240 V ~ 50/60 Hz • Nguồn ra : 25 V ⎓ 1,52 A
Kích thước (Rộng x Cao x Sâu)	Xấp xỉ. 890.0 mm X 57.0 mm X 85.0 mm Có chân
Bộ Nguồn Bus (USB)	5 V ⎓ 500 mA
Âm lí (Tổng công suất Đầu ra RMS)	300 W RMS

Thiết kế và các thông số kỹ thuật có thể thay đổi mà không cần thông báo.