

عربي

ENGLISH



USER GUIDE



LG V10

LG-H960
LG-H960A

حول دليل المستخدم هذا

- شكرًا لاختيارك منتجات LG. يرجى قراءة دليل المستخدم هذا بعناية قبل استخدام الجهاز للمرة الأولى لضمان استخدامه بشكل آمن وصحيح.
- استخدم دائمًا ملحقات LG الأصلية. تم تصميم العناصر المتوفرة لاستخدامها مع هذا الجهاز فقط وقد تكون غير متوافقة مع أجهزة أخرى.
 - لا يناسب هذا الجهاز الأشخاص الضعفاء البصر نظرًا لاحتوائه على لوحة مفاتيح تعمل باللمس.
 - تستند المواصفات إلى إعدادات الجهاز الافتراضية.
 - قد تخضع التطبيقات الافتراضية على الجهاز لتحديثات وقد يتم سحب دعم هذه التطبيقات من دون إشعار مسبق. إذا كان لديك أي سؤال حول تطبيق متوفر على الجهاز، يرجى الاتصال بمركز خدمة LG للتطبيقات التي يبتئها المستخدم، يرجى الاتصال بموفر الخدمة المناسب.
 - قد يؤدي تعديل نظام تشغيل الجهاز أو تثبيت برنامج من موارد غير رسمية إلى إلحاق ضرر بالجهاز وتلف البيانات أو فقدانها. يؤدي القيام بإجراءات مماثلة إلى انتهاك اتفاقية ترخيص LG وإبطال الكفالة.
 - قد تختلف بعض المحتويات والأشكال التوضيحية عن الجهاز وفقًا للمنطقة أو موفر الخدمة أو إصدار البرنامج أو إصدار برنامج التشغيل (OS) وتخضع للتغيير من دون إشعار مسبق.
 - البرنامج والصوت وخلفية الشاشة والصور والوسائط الأخرى المتوفرة مع الهاتف مرخصة للاستخدام المحدود. إذا قمت باقتباس هذه المواد واستخدامها لأغراض تجارية أو أغراض أخرى، قد تنتهك قوانين حقوق النشر. كمستخدم، تتحمل المسؤولية كاملة عن الاستخدام غير القانوني للوسائط.
 - قد تُفرض رسوم إضافية لخدمات البيانات، مثل الرسائل والتحميل والتنزيل والمزامنة التلقائية وخدمات تحديد الموقع. لتجنب الرسوم الإضافية، حدد خطة بيانات مناسبة لاحتياجاتك. اتصل بموفر الخدمة للحصول على تفاصيل إضافية.

الإشعارات التعليمية

<p>يُحذَر من الحالات التي قد تتسبب في إصابتك أو إصابة الآخرين بأذى، أو إلحاق ضرر بالهاتف أو ملكيات أخرى.</p>	<p>تحذير </p>
<p>يُرجى الاطلاع على الإشعارات والمعلومات الإضافية</p>	<p>ملاحظة </p>

جدول المحتويات

- 24..... تركيب بطاقة Nano SIM والبطارية
- 26..... شحن البطارية
- 26..... تحسين عمر البطارية
- 27..... إدخال بطاقة الذاكرة
- 28..... إزالة بطاقة الذاكرة
- 28..... تلمیحات شاشة اللمس
- 28..... الضغط أو اللمس
- 29..... اللمس باستمرار
- 29..... السحب
- 29..... التمرير أو التحريك
- 30..... الضغط المزدوج
- 30..... التصغير والتكبير باستخدام الإصبعين
- 31..... إعداد حساب Google
- 31..... إنشاء حساب Google
- 31..... تسجيل الدخول إلى حساب Google
- 32..... إقفال الجهاز وإلغاء قفله
- 32..... بصمة الإصبع
- 32..... ضبط تشغيل/إيقاف الشاشة
- 32..... Knock Code
- 33..... تغيير طريقة قفل الشاشة
- 33..... Smart Lock
- 34..... الشاشة الرئيسية
- 34..... التعرف على الشاشة الرئيسية
- 35..... العودة إلى التطبيقات المستخدمة مؤخرًا
- 36..... تخصيص الشاشة الرئيسية
- 37..... لوحة الإشعارات
- 39..... النقاط لقطة شاشة
- 40..... لوحة المفاتيح على الشاشة
- 40..... استخدام لوحة المفاتيح وإدخال النصوص
- 40..... إدخال حروف مميزة
- 40..... تقسيم لوحة المفاتيح أو دمجها
- 5..... إرشادات لاستخدام آمن وفعال
- 10..... الميزات التي ستعشقها
- 11..... نافذة مزدوجة
- 11..... تنشيط النافذة المزدوجة
- 11..... استخدام النافذة المزدوجة
- 12..... بصمة الإصبع
- 12..... تسجيل بصمة الإصبع
- 13..... LG Health
- 13..... العرض المصغر
- 14..... الشاشة الثانوية
- 14..... ميزة الشاشة الثانوية
- 15..... تشغيل ميزة الشاشة الثانوية وإيقاف تشغيلها
- 15..... Smart Notice
- 15..... Snap Video
- 16..... QSlide
- 16..... استخدام QSlide
- 17..... Capture+
- 17..... عرض المذكرة المحفوظة
- 18..... QuickRemote
- 18..... إعداد QuickRemote
- 18..... التحكم عن بُعد الشامل
- 18..... استخدام QuickRemote
- 19..... المشاركة السريعة
- 20..... الأساسيات
- 21..... الملحقات
- 22..... تخطيط الهاتف
- 24..... تشغيل الهاتف وإيقاف تشغيله

- 55..... وضع الفيديو اليدوي في محدد المنظر
- 55..... وضع Snap Video في محدد المنظر
- 56..... لقطات تسلسلية مع فواصل زمنية
- 56..... لقطات متلاحقة
- 56..... التقاط الصورة عن طريق الإيماءة
- 57..... عرض الإيماءة
- 57..... التركيز التلقائي المتعدد النقاط
- 57..... التكبير/التصغير بمعدل 8 أضعاف
- 57..... بعد التقاط الصورة
- 58..... تسجيل ملف فيديو
- 58..... بعد تسجيل فيديو
- 59..... المعرض**
- 59..... عرض الصور
- 59..... تحرير الصور
- 59..... ضبط خلفية الشاشة
- 60..... التكبير والتصغير
- 60..... تشغيل فيديو
- 61..... تحرير مقاطع الفيديو
- 61..... حذف الصور/ملفات الفيديو
- 62..... البريد الإلكتروني**
- 62..... إضافة حساب
- 62..... العمل مع مجلدات الحسابات
- 62..... إنشاء بريد إلكتروني وإرساله
- 63..... تغيير الإعدادات العامة لبريد إلكتروني
- 63..... حذف حساب بريد إلكتروني
- 63..... موسيقى**
- 63..... تشغيل أغنية
- 64..... خيارات مشغل الموسيقى
- 65..... الساعة**
- 65..... تنبيهات
- 65..... المؤقت
- 65..... الساعة العالمية
- 66..... ساعة الإيقاف
- 66..... الحاسبة**
- 66..... التقويم**
- 67..... مسجل الصوت**
- 41..... نقل البيانات بين الكمبيوتر الشخصي والجهاز**
- 41..... إرسال بيانات باستخدام اتصال USB
- 41..... إرسال بيانات باستخدام اتصال لاسلكي
- 42..... تطبيق LG Bridge**
- 42..... ميزات LG Bridge
- 42..... تنزيل برنامج LG Bridge
- 43..... SmartShare**
- 43..... استخدام SmartShare
- 43..... الاستمتاع بتشغيل المحتويات من الأجهزة القريبة من هاتفك
- 44..... التطبيقات**
- 45..... تثبيت التطبيقات أو إلغاء تثبيتها**
- 45..... لفتح تطبيق متجر Play
- 45..... لفتح شاشة مع تفاصيل حول تطبيق ما
- 45..... لإلغاء تثبيت التطبيقات
- 46..... المكالمات**
- 46..... إجراء مكالمة
- 46..... الاتصال بالأسماء
- 46..... الرد على مكالمة ورفضها
- 47..... إجراء مكالمة ثانية
- 47..... عرض سجلات المكالمات
- 47..... تغيير إعدادات المكالمات
- 48..... الأسماء**
- 48..... البحث عن اسم
- 48..... إضافة اسم جديد
- 49..... الأسماء المفضلة
- 49..... إنشاء مجموعة
- 50..... الرسائل**
- 50..... إرسال رسالة
- 50..... عرض المحادثات
- 50..... تغيير إعدادات الرسائل
- 51..... الكاميرا**
- 51..... التقاط صورة
- 52..... الوضع التلقائي في محدد المنظر
- 54..... وضع الكاميرا اليدوية في محدد المنظر

83.....	عدادات عامة	67.....	تسجيل ملف صوتي أو صوت
83.....	اللغة ولوحة المفاتيح	67.....	تنزيلات
84.....	الموقع	67.....	راديو FM
84.....	الحسابات والمزامنة	68.....	LG Backup
84.....	Cloud	68.....	حول النسخ الاحتياطي لبيانات الجهاز واستعادتها
85.....	المستخدمون	68.....	لنسخ بيانات الهاتف احتياطيًا
85.....	إمكانية الوصول	69.....	تطبيقات Google
86.....	العرض المصغر	71.....	الإعدادات
86.....	مفتاح الاختصار	72.....	الوصول إلى قائمة الإعدادات
87.....	Google	72.....	إعدادات الشبكات
87.....	بصمات الأصبع والحماية	72.....	Wi-Fi
88.....	Smart settings	73.....	Wi-Fi Direct
88.....	Quick Cover	73.....	Bluetooth
88.....	نافذة مزدوجة	74.....	بيانات الهاتف المحمول
88.....	التاريخ والوقت	75.....	إعدادات المكالمات
88.....	التخزين و USB	76.....	NFC
89.....	البطارية وتوفير الطاقة	76.....	Android Beam
89.....	الذاكرة	77.....	برنامج SmartShare Beam
89.....	Smart cleaning	77.....	خادم الوسائط
89.....	التطبيقات	77.....	Miracast
90.....	تطبيق الرسائل الاقتراضي	78.....	LG AirDrive
90.....	نسخ احتياطي وإعادة الضبط	78.....	طباعة
90.....	حول الهاتف	78.....	اتصال USB
91.....	ملحق	78.....	نقطة Wi-Fi المحمولة
92.....	تحديث برنامج الهاتف	79.....	ربط Bluetooth
93.....	الأسئلة الشائعة	79.....	وضع الرحلات الجوية
95.....	دليل مكافحة السرقة	79.....	شبكات الهاتف
96.....	المزيد من المعلومات	79.....	VPN
96.....	معلومات حول إشعار البرامج المقترحة المصدر	80.....	إعدادات الصوت والإشعار
96.....	علامات تجارية	81.....	إعدادات الشاشة
97.....	DivX HD	81.....	الشاشة الثانوية
97.....	Dolby Digital Plus	81.....	الشاشة الرئيسية
98.....	بيان سلامة الليزر	82.....	تأمين الشاشة
98.....	بيان التوافق	82.....	أزرار اللمس في الشاشة الرئيسية
		83.....	المزيد من إعدادات الشاشة

إرشادات لاستخدام آمن وفعال

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

في حال حدوث خطأ، تم تضمين أداة برنامج في الجهاز من شأنها تجميع سجل الخطأ. تجمع هذه الأداة البيانات الخاصة بالخطأ فقط، مثل قوة الإشارة وموضع معرف الخلية لدى انقطاع المكالمات المفاجئ والتطبيقات التي تم تحميلها. يستخدم السجل فقط للمساعدة في تحديد سبب الخطأ. تجدر الإشارة إلى أن هذه السجلات مشفرة ويمكن الوصول إليها من قبل مركز تصليح معتمد من LG فقط في حال احتجت إلى إعادة جهازك لتصليحه.

التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR).

لقد تم تصميم طراز الهاتف المحمول LG-H960/LG-H960A هذا بحيث يفي بمتطلبات السلامة المتبعة المتعلقة بالتعرض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص، دون أخذ العمر والصحة بعين الاعتبار.

- تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد (SAR). وتجري اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.
- وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.
- حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين International Commission on Non-Ionizing Radiation Protection (ICNIRP) هو 2 واط/كجم وهو حد مقسم على نحو متناسب إلى 10 جرامات من النسيج العضوي.
- أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختياره للاستخدام على الأذن تعادل 0.590 واط/كيلوجرام (10 جرام) وعند الحمل على الجسد تكون 0.297 واط/كيلوجرام (10 جرام).

- يفي هذا الجهاز بإرشادات التعرض للتردد اللاسلكي (RF) عند استخدامه في موضع الاستخدام العادي على الأذن أو عند وضعه على بعد 1.5 سم على الأقل من الجسم. عند استخدام علبة حمل أو مشبك للحزام أو حامل لتشغيل الجهاز أثناء حمله على الجسم، يجب ألا تحتوي على أي معدن ويجب وضع المنتج على بعد 1.5 سم على الأقل من الجسم. ومن أجل إرسال ملفات البيانات أو الرسائل، يتطلب هذا الجهاز اتصالاً نوعياً عالي الجودة بالشبكة. في بعض الحالات، يجوز أن يتم تأخير إرسال ملفات البيانات أو الرسائل إلى أن يصبح هذا الاتصال متاحاً. احرص على اتباع التعليمات المتعلقة بالمسافات

الفاصلة المشار إليها أعلاه إلى أن يتم اكتمال الإرسال.

العناية بالمنتج وصيانته

- استخدم دائماً بطاريات وشواحن وملحقات من LG معتمدة لاستخدامها مع طراز الهاتف هذا فقط. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي كفالة أو موافقة تنطبق على الهاتف المحمول، وقد يكون خطيراً.
- قد تختلف بعض المحتويات والصور عن جهازك من دون إشعار مسبق.
- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى إصلاحها.
- قد تتضمن الإصلاحات المشمولة بالكفالة، وفقاً لـ LG، لوحات أو قطع الغيار سواء كانت جديدة أو مجددة، على أن تتمتع بوظائف موازية لوظائف الأجزاء التي تم استبدالها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل أجهزة التدفئة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيثما تطالب القوانين الخاصة بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين أثناء شحنه. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات مثل سماعات الأذن بحذر. لا تلمس الهوائي من دون وجود سبب يدعوك إلى ذلك.

- لا تستخدم الزجاج المكسور أو تلمسه أو تحاول إزالته أو إصلاحه إذا كان مكسورًا أو متحولاً إلى شظايا أو متحطماً. لا تشمل الكفالة تلف الشاشة الزجاجية نتيجة سوء الاستخدام.
- هذا الهاتف عبارة عن جهاز إلكتروني يولد الحرارة أثناء الاستخدام العادي. قد يؤدي احتكاك المنتج بالبشرة مباشرة ولفترة طويلة في غياب التهوية المناسبة إلى عدم الشعور بالراحة أو التسبب بحروق طفيفة. لذا، استخدم الهاتف بعناية أثناء التشغيل أو بعده مباشرة.
- في حال تعرض الهاتف للبلل، افصله على الفور ليجف بالكامل. لا تحاول تسريع عملية التجفيف باستخدام مصدر تجفيف خارجي مثل الفرن أو المايكروويف أو مجفف الشعر.
- يتسبب السائل الموجود في الهاتف المبلل بتغيير لون تسمية المنتج داخل الهاتف. لا تشمل الكفالة الضرر الناتج عن تعرض الجهاز للسوائل.

تشغيل فعّال للهاتف

الأجهزة الإلكترونية

- قد تتعرض كل الهواتف المحمولة للتشويش، مما قد يؤثر على أدائها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية من دون طلب الإذن للقيام بذلك.
- تجنّب وضع الهاتف على أجهزة ضبط النبض، مثلاً، في الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.
- استخدم الهاتف في مكان تتراوح فيه درجة الحرارة بين 0 و 40 درجة مئوية، إذا أمكن.
- قد يؤدي تعريض الهاتف إلى درجات حرارة مرتفعة أو منخفضة جداً إلى إلحاق ضرر بالمنتج أو تعطله أو حتى إلى حدوث انفجار.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل أجهزة الستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.

- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملحاً خصوصاً بالقرب من الطرقات.

تجنّب إلحاق الضرر بسمعك

لتفادي إلحاق الضرر بالسمع، لا تستمع إلى مستويات صوت عالية لفترات طويلة.



قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بالألا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط صوت الموسيقى والمكالمات على مستوى معقول.

- عند استخدام سماعات الرأس، اخفض مستوى الصوت إذا كنت لا تسمع الأشخاص الذين يتحدثون بالقرب منك أو في حالة تمكّن الشخص الجالس بجوارك من سماع ما تنصت إليه.

ملاحظة

- قد يؤدي ضغط الصوت المرتفع من سماعات الأذن وسماعات الرأس إلى فقدان السمع.

القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقف عن استخدام الجهاز المحمول إلى أن يتم استبدال الزجاج من قِبل موفر خدمة معتمد.

مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود، واتبع الأنظمة أو القوانين.

مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في محطة لإعادة التزود بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول أو ملحقاته.

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قِبل طاقم الطائرة.

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرةً على جميع شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد على هاتفك المحمول فقط لإجراء مكالمات الطوارئ. راجع موثر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها





- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى، ليس هناك من تأثير للذاكرة من شأنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. فمن الممكن إعادة شحن حزمة البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية في حال عدم استخدامها لفترة طويلة وذلك لزيادة فترة صلاحية استخدامها.
- لا تعرض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة، فقد يؤدي ذلك إلى تراجع في أداء البطارية.
- هناك خطر الانفجار إذا ما تمّ استبدال البطارية بنوع خاطئ. يجب التخلص من البطاريات المستخدمة وفقاً للإرشادات.
- إذا كنت بحاجة إلى استبدال البطارية، خذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للحصول على المساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة و إعدادات المنتج وأنماط الاستخدام والبطارية والأوضاع البيئية.
- احرص على عدم احتكاك البطارية بأغراض حادة الأطراف كأنياب الحيوانات أو الأظافر. فقد يسبب هذا الأمر حريقاً.

الميزات التي ستعشقها

نافذة مزدوجة

تقوم النافذة المزدوجة بتقسيم الشاشة لتمكين ميزة المهام المتعددة، وتفاعل السحب والإفلات، والربط التلقائي، والتطبيقات المستخدمة مؤخراً.



تنشيط النافذة المزدوجة

- 1 اضغط على  <  <  < علامة التبويب عامة < نافذة مزدوجة.
 - 2 اضغط على  لتشغيلها.
- ضع علامة اختيار على مربع الاختيار **الفتح التلقائي** لفتح وظيفة النافذة المزدوجة تلقائياً عند الضغط على ارتباط في ملء الشاشة أو الضغط على مرفق صورة البريد الإلكتروني.

استخدام النافذة المزدوجة

- 1 اضغط على  <  < نافذة مزدوجة.



ملاحظة


- أثناء عرض أحد التطبيقات، يمكنك الضغط على  < نافذة مزدوجة لتعيين التطبيق تلقائياً في النافذة العليا، ثم تحديد التطبيق الثاني.
- 2 اضغط على رمز التطبيق الذي تريد استخدامه. يفتح أول تطبيق تضغط عليه في إطار في أعلى الشاشة. يفتح التطبيق الثاني في الإطار السفلي.
 - 3 اضغط على إطار لتحديده واستخدامه.
- يظهر مربع أزرق حول الإطار المحدد مع مقبض نصف دائري أزرق بين الإطارين.
 - اسحب المقبض الأزرق لتغيير حجم الإطار (إطار أكبر والأخر أصغر).
- 4 اضغط على  للوصول إلى خيارات النافذة المزدوجة.

بصمة الإصبع

تتيح لك ميزة بصمة الإصبع وضع إصبع واحد على مفتاح الطاقة/القفل لإلغاء قفل الشاشة أو الاطلاع على المحتوى المقفل.

تسجيل بصمة الإصبع

- 1 اضغط على  <  < علامة التبويب عامة < بصمات الأصبع والحماية < بصمات الأصابع.
- 2 عليك تعيين قفل الشاشة الآمن قبل تسجيل بصمة الإصبع. سيتم استخدام القفل كطريقة بديلة لبصمات الأصابع.
- 3 ضع إصبعك على مفتاح الطاقة/القفل.

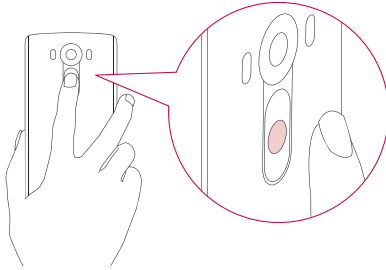

- 4 ارفع إصبعك عندما يهتز الجهاز، ثم ضع إصبعك مجددًا على مفتاح الطاقة/القفل. كرر هذا الإجراء باستخدام الإصبع نفسه حتى يتم تسجيل بصمة الإصبع.

ملاحظة

- احرص على أن تكون أصابعك نظيفة وجافة، وهذا ينطبق على مفتاح الطاقة/القفل أيضًا.
- فقد تؤثر الرطوبة أو المستحضرات أو العرق أو الزيوت أو البشرة الجافة أو المشققة على عملية التعرف على بصمة الإصبع. قد يكون لبعض النشاطات أيضًا تأثير مؤقت على عملية التعرف على بصمة الإصبع منها ممارسة الرياضة أو الاستحمام أو السباحة أو الطهو أو أوضاع أو عوامل أخرى تغير بصمة الإصبع.
- قم بتغطية مفتاح الطاقة/القفل بالكامل. لا تضغط بسرعة، لا بل بالكاد حرّك إصبعك بينما يتم المسح.
- عند استخدام ميزة بصمة الإصبع، ستواصل فهم عملية التعرف على بصمة إصبعك وتحسينها.

LG Health

يساعدك التطبيق LG Health في الحفاظ على صحتك وممارسة تمارين جيدة عبر تعقب السجلات ومناقشة أشخاص آخرين.

1 اضغط على  <  < .

2 قراءة البنود والشروط والموافقة عليها.

3 على صفحة الملف الشخصي والهدف، أدخل معلومات الملف الشخصي واضغط على **حفظ**.

4 استخدم الخيارات أدناه لبدء التعقب.



 ملاحظة

• تتوفر هذه الوظيفة لتسهيل الاستخدام. يرجى استخدامها كمرجع فقط.

العرض المصغر

لتقليص الشاشة لاستخدامها بيد واحدة، مرر إلى اليسار أو اليمين على أزرار اللمس في الشاشة الرئيسية.

لإغلاق العرض المصغر، اضغط على .

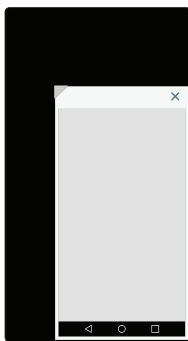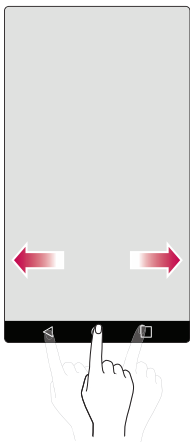

الشاشة الثانوية



يمكنك الاطلاع على المعلومات المفيدة مثل الطقس والتاريخ والوقت وحالة البطارية والإشعارات حتى بعد إيقاف تشغيل الشاشة الرئيسية.

ميزة الشاشة الثانوية

- يمكنك تعيين الوظيفة على ميزة الشاشة الثانوية عندما تكون الشاشة الرئيسية قيد التشغيل. (التطبيقات الحديثة، اختصارات التطبيقات، مشغل الموسيقى، الأسماء السريعة، الخطط القادمة، التوقيع)
- يمكنك مشاهدة الإشعارات واستخدام الوظيفة عبر الشاشة الثانوية أثناء استخدام تطبيقات ملء الشاشة.
- يمكنك استخدام لوحة التحكم أثناء التقاط صورة أو التسجيل.
- لتشغيل/إيقاف تشغيل ميزة الشاشة الثانوية، اقلب الجهاز.



تشغيل ميزة الشاشة الثانوية وإيقاف تشغيلها

يمكنك تشغيل ميزة الشاشة الثانوية وإيقاف تشغيلها وتحديد ما تريد عرضه.
• اضغط على  <  < علامة التبويب إعدادات الشاشة < الشاشة الثانوية.

إظهار عند تشغيل الشاشة الرئيسية	تتيح الوظائف المفيدة للقيام بمهام متعددة.
إظهار عند إيقاف تشغيل الشاشة الرئيسية	تعرض دائماً المعلومات المفيدة وتوفر تشغيلاً سريعاً للوظائف الأكثر استخداماً.




Smart Notice


حسن نمط عيشك بفضل بطاقات Smart Notice.
توفر هذه البطاقات اقتراحات مخصصة مستندة إلى توقيت اليوم وموقعك وكيفية استخدامك للهاتف.

• المس باستمرار الجزء الفارغ من الشاشة الرئيسية < عناصر واجهة الاستخدام < Smart Notice

Snap Video

يمكنك إعداد فيلم بنمط قصة من مقاطع فيديو قصيرة.

1 اضغط على  <  < 

اضغط على  لتسجيل مشهد مدته ثلاث ثواني.
أو

المس باستمرار  للتسجيل لمدة من اختيارك.

2 كرر هذا الإجراء.

 ملاحظة

• يمكن تخزين الأفلام لغاية دقيقة واحدة.

3 بعد الانتهاء من تنفيذ المشهد، اضغط على **حفظ**.

 ملاحظة

• يمكنك التحرير باستخدام تأثيرات فيديو متنوعة وموسيقى الخلفية المتوفرة في المعرض.

QSlide

من أي شاشة، استخدم لوحة الإشعارات للوصول بسهولة إلى المفكرة والتقويم والحاسبة والمزيد مع QSlide.

استخدام QSlide

1 اضغط على شريط الحالة ومرره للأسفل < اضغط على QSlide.



• أثناء استخدام التطبيقات التي تدعم QSlide، اضغط على **QSlide <** ستظهر الوظيفة كنافذة صغيرة على الشاشة.

2 استخدام الخيارات التالية.

1		اضغط لتوسيع النافذة حتى تبلغ الحجم الكامل.
2		اضغط لضبط مستوى شفافية النافذة.
3		اضغط لإغلاق نافذة QSlide.
4		اسحب لضبط حجم نافذة QSlide.


3 يمكنك استخدام الشاشة والضغط عليها ضمن نوافذ QSlide عندما يكون شريط الشفافية غير كامل .



• يمكن لميزة QSlide أن تدعم ما يصل إلى نافذتين في الوقت نفسه.

Capture+

يمكنك استخدام وظيفة Capture+ لإنشاء مذكرات بشكل سهل وفعال باستخدام صورة محفوظة أو على شاشة الهاتف الحالية.

- 1 اضغط على شريط الحالة ومرره لأسفل واضغط على .
- 2 أنشئ مذكرة باستخدام الخيارات التالية:

اضغط لحفظ المذكرة التي أنشأتها.	
اضغط لتحديد نوع القلم واللون.	
اضغط لاستخدام الممحاة لمسح علامات القلم على المذكرة.	
اضغط لاقتصاص صورة المذكرة.	
اضغط لمشاركة المذكرة.	
اضغط لتحديد التراجع أو الإعادة أو النص أو نمط الورقة.	

ملاحظة

يرجى استخدام طرف الإصبع أثناء استخدام ميزة QuickMemo+. لا تستخدم أظافرك.

- 3 اضغط على  لحفظ المذكرة الحالية في QuickMemo+ أو المعرض.








عرض المذكرة المحفوظة

اضغط على  <  <  وحدد ألبوم Capture+.





QuickRemote

تحوّل QuickRemote هاتفك إلى جهاز تحكم عن بُعد شامل للتلفاز المنزلي وجهاز الإستقبال ونظام الصوت وغيرها.

إعداد QuickRemote

- 1 المس شريط الحالة ومزّره للأسفل واضغط على  < أضف جهاز تحكم عن بُعد. إذا لم تظهر , اضغط على , وضع علامة اختيار على QuickRemote للتمكين. أو
اضغط على  <  <  < اضغط على .
- 2 حدد نوع الجهاز وعلامته التجارية ثم اتبع الإرشادات التي تظهر على الشاشة لتكوين الجهاز.

التحكم عن بُعد الشامل

- يمكنك إنشاء وحدة تحكم عن بُعد شاملة ومخصّصة واختيار أمكنة الأزرار كافة.
- 1 اضغط على  <  <  <  < التحكم عن بعد الشامل.
 - 2 أدخل اسم وحدة التحكم عن بُعد.
 - 3 ضع الأزرار التي تريدها على وحدة التحكم عن بُعد في الأمكنة التي تختارها.
 - 4 اتبع الخطوة التالية واطلع على الإرشادات.

استخدام QuickRemote

عند الانتهاء من الإعداد الأولي، يمكنك بسهولة الوصول إلى QuickRemote من لوحة الإشعارات. افتح لوحة الإشعارات واستخدم وظائف QuickRemote.


ملاحظة

- تعمل وظيفة QuickRemote بالطريقة نفسها التي تعمل بها الإشارات ما دون الحمراء (IR) لجهاز تحكم عن بُعد. احرص على عدم تغطية مؤشر الأشعة ما دون الحمراء الموجود في أعلى الهاتف عند استخدام وظيفة QuickRemote. قد تكون هذه الوظيفة غير مدعومة حسب الطراز أو الشركة المصنعة أو شركة الخدمة.

المشاركة السريعة

بعد التقاط صورة أو تسجيل فيديو، يمكنك مشاركتها. اضغط على رمز العناصر الظاهرة أو المس التطبيق ومرّره لليساار. ثم حدّد التطبيقات المطلوبة.

• اضغط على  <  <  < الوضع التلقائي

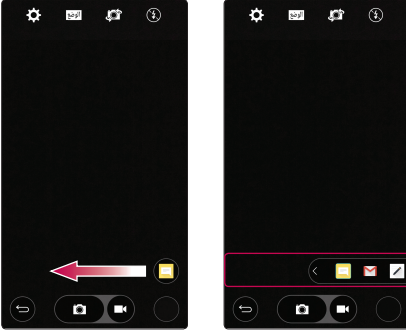

ملاحظة

• يظهر التطبيق للمستخدم بترتيب مشاركة سريعة، وفقاً للنوع والتردد.

الأساسيات

الملحقات



تتوفر هذه الملحقات للاستخدام مع الهاتف.

- محول السفر
- دليل البدء السريع
- سماعة هاتف استريو
- كيبيل USB
- البطارية

ملاحظة

- قد تكون العناصر المذكورة أدناه اختيارية.
- استخدم دائمًا ملحقات LG الأصلية. تم تصميم العناصر المتوفرة لاستخدامها مع هذا الجهاز فقط وقد تكون غير متوافقة مع أجهزة أخرى.
- قد تختلف العناصر المتوفرة مع الجهاز وأي ملحقات متوفرة بحسب المنطقة أو موفر الخدمة.

تخطيط الهاتف

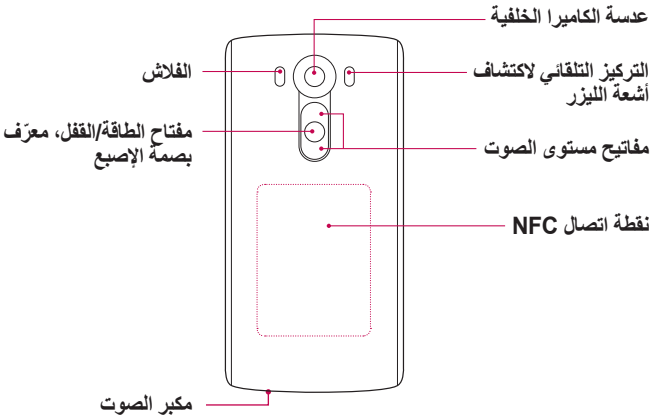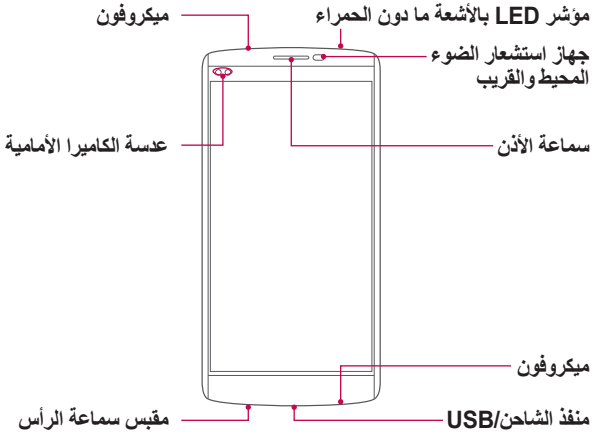

<ul style="list-style-type: none"> • قم بتشغيل الهاتف أو إيقاف تشغيله بالضغط باستمرار على هذا المفتاح. • اضغط ضغطة قصيرة لتشغيل/إيقاف تشغيل الشاشة. 	<p>مفتاح الطاقة/القفل</p>
<p>عندما تكون الشاشة متوقفة عن التشغيل:</p> <ul style="list-style-type: none"> • اضغط مرتين على مفتاح رفع مستوى الصوت لتشغيل Capture+. • اضغط مرتين على مفتاح خفض مستوى الصوت لتشغيل الكاميرا والنقاط صورة. <p>على الشاشة الرئيسية:</p> <ul style="list-style-type: none"> • للتحكم في مستوى صوت الرنين. <p>أثناء مكالمة:</p> <ul style="list-style-type: none"> • للتحكم بمستوى صوت سماعة الأذن. عند تشغيل الصوت/الفيديو. • للتحكم بمستوى الصوت باستمرار. 	<p>مفاتيح مستوى الصوت</p>

ملاحظة: جهاز استشعار الأشياء القريبة

- عند تلقي مكالمة أو إجرائها، يقوم جهاز استشعار الأشياء القريبة تلقائيًا بإيقاف تشغيل الإضاءة الخلفية وإفقال شاشة اللمس من خلال تحسس اقتراب الهاتف من الأذن. وهذا الإجراء يطيل من عمر البطارية ويمنعك من تنشيط شاشة اللمس من دون قصد أثناء المكالمات.

تحذير

- إن هوائي NFC لهذا الطراز موجود على الغطاء الخلفي. احرص على عدم تلف نقطة توصيل NFC بالهاتف، والتي تعد جزءًا من هوائي NFC.

تحذير

- قد يؤدي وضع غرض ثقيل الوزن على الهاتف أو الجلوس عليه إلى إلحاق ضرر بوظائف الشاشة وشاشة اللمس. لا تغطي جهاز استشعار الأشياء القريبة بأغلفة حماية الشاشة أو أي نوع آخر من الطبقات الواقية. فقد يتسبب هذا في تعطل جهاز الاستشعار.

تشغيل الهاتف وإيقاف تشغيله

تشغيل الهاتف

اضغط باستمرار على مفتاح الطاقة/القفل في الجهة الخلفية من الهاتف لمدة ثانيتين حتى يتم تشغيل الشاشة.

إيقاف تشغيل الهاتف

- 1 اضغط باستمرار على مفتاح الطاقة/القفل في الجهة الخلفية من الهاتف لمدة ثانيتين حتى تظهر قائمة خيارات الهاتف.
- 2 اضغط على إيقاف التشغيل ضمن قائمة خيارات الهاتف.
- 3 اضغط على موافق لتأكيد رغبتك في إيقاف تشغيل الهاتف.


تركيب بطاقة Nano SIM والبطارية

أدخل بطاقة Nano SIM التي يزودك بها موفر خدمة الهاتف المحمول والبطارية المضمّنة.




• لا تدخل بطاقة ذاكرة في فتحة بطاقة Nano SIM. إذا تم وضع بطاقة ذاكرة في فتحة بطاقة Nano SIM، فخذ الهاتف إلى مركز خدمة LG لإخراج بطاقة الذاكرة.


- 1 لإزالة الغطاء الخلفي، امسك الهاتف بيد واحدة بقوة. وباليد الأخرى، ارفع الغطاء الخلفي باستخدام الإبهام كما هو مبين في الصورة أدناه.

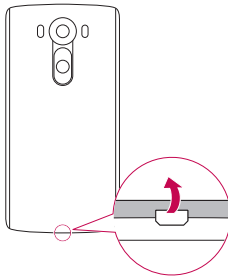


2 أدخل بطاقة Nano SIM في فتحة بطاقة Nano SIM كما هو مبين في الصورة. تأكد من أن ناحية الموصلات الذهبية على البطاقة موجهة نحو الأسفل.

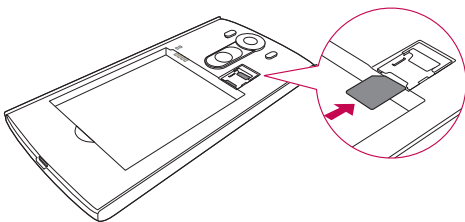

3 أدخل البطارية.

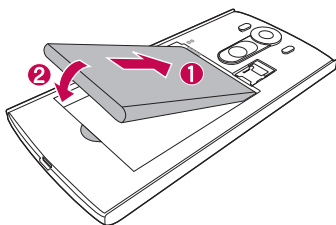

4 لإعادة تثبيت الغطاء على الجهاز، قم بمحاذاة الغطاء الخلفي مع حجرة البطارية واضغط عليه للأسفل حتى يستقر في مكانه.

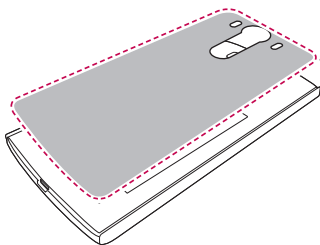


شحن البطارية

اشحن البطارية قبل استخدامها للمرة الأولى. استخدم الشاحن لشحن البطارية. يمكن أيضًا استخدام الكمبيوتر لشحن البطارية عبر توصيل الهاتف بالكمبيوتر باستخدام كابل USB.



- استخدم الشواحن والبطاريات والكيبلات المعتمدة من قبل LG فقط. إذا استخدمت شواحن أو بطاريات أو كيبلات غير معتمدة، فقد يؤدي ذلك إلى بطء في شحن البطارية. أو قد يؤدي أيضًا إلى انفجار البطارية أو إلحاق الضرر بالجهاز، وهي أضرار لا تشملها الكفالة.
- يقع موصل الشاحن في الجهة السفلى من الهاتف. أدخل الشاحن وقم بتوصيله بمقبس كهربائي.

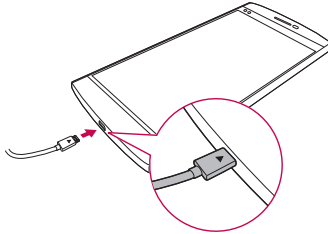

- لا تفتح الغطاء الخلفي أثناء شحن الهاتف.

تحسين عمر البطارية

يمكنك تمديد فترة عمل البطارية عن طريق إيقاف تشغيل الميزات التي لا تحتاج إلى تشغيلها بصورة مستمرة في الخلفية. كما يمكنك مراقبة كيفية استهلاك التطبيقات وموارد النظام لطاقة البطارية.

إطالة عمر بطارية الهاتف:

- قم بإيقاف تشغيل الاتصالات اللاسلكية التي لا تستخدمها. أوقف تشغيل Wi-Fi أو Bluetooth® أو GPS، إذا كنت لا تستخدمها.
- قلل سطوع الشاشة وعين مهلة أقصر لإضاءة الشاشة.

- أوقف تشغيل المزامنة التلقائية لـ Google Mail والتقويم والأسماء والتطبيقات الأخرى.
- قد تستهلك بعض التطبيقات التي قمت بتنزيلها طاقة البطارية.
- أثناء استخدام التطبيقات التي تم تنزيلها، تحقق من مستوى شحن البطارية.

إدخال بطاقة الذاكرة.

يدعم الجهاز بطاقة microSD تصل سعتها إلى 2 تيرابايت. قد تكون بعض بطاقات الذاكرة غير متوافقة مع جهازك وذلك وفقاً للشركة المصنعة لبطاقة الذاكرة ونوعها.



تحذير

- قد لا تكون بعض بطاقات الذاكرة متوافقة بشكل كامل مع الجهاز. وقد يؤدي استخدام بطاقة غير متوافقة إلى إلحاق ضرر بالجهاز أو بطاقة الذاكرة أو إتلاف البيانات المخزنة على البطاقة.




ملاحظة

- تؤدي كتابة البيانات ومحوها بشكل متكرر إلى تخفيض عمر بطاقات الذاكرة.

1 انزع الغطاء الخلفي.

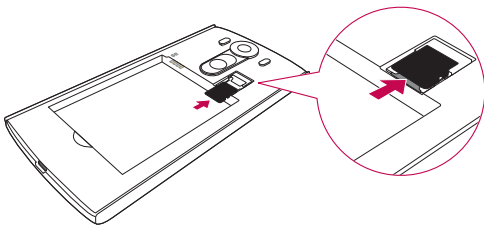


2 أدخل بطاقة ذاكرة ووجه الموصّلات الذهبية نحو الأسفل.



3 أعد الغطاء الخلفي إلى مكانه.

إزالة بطاقة الذاكرة

قبل إزالة بطاقة الذاكرة، افصلها أولاً لإزالتها بشكل آمن.

- 1 اضغط على  <  < علامة التبويب عامة < التخزين و USB < .
- 2 أزل الغطاء الخلفي واسحب بطاقة الذاكرة إلى الخارج.

تحذير 

- لا تزل بطاقة الذاكرة أثناء قيام الجهاز بنقل المعلومات أو الوصول إليها. فقد يؤدي ذلك إلى فقدان البيانات أو تلفها أو إلحاق ضرر ببطاقة الذاكرة أو الجهاز. لا يتم تحمل مسؤولية الخسارة الناتجة عن سوء استخدام بطاقات ذاكرة تالفة بما في ذلك فقدان البيانات.

تلميحات شاشة اللمس


في ما يلي بعض التلميحات حول كيفية التنقل على الهاتف.

ملاحظة 

- لا تضغط بقوة، فشاشة الضغط حساسة بشكل كافٍ يتيح لها التعرف على ضغطة خفيفة ولكن ثابتة.
- استخدم طرف إصبعك للضغط على الخيار المطلوب. احرص على عدم الضغط على أي مفاتيح أخرى.


الضغط أو اللمس

يمكنك الضغط بإصبع واحد لتحديد عناصر وارتباطات واختصارات وأحرف على لوحة المفاتيح على الشاشة.

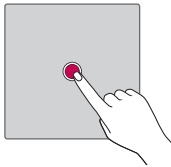


اللمس باستمرار

المس باستمرار عنصراً على الشاشة عبر الضغط عليه من دون رفع إصبعك إلى حين إتمام الإجراء.

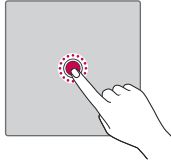


السحب

المس باستمرار عنصراً ما لفترة وجيزة مع تحريك إصبعك على الشاشة من دون رفعه حتى تصل إلى الموضع الهدف. يمكنك سحب عناصر على الشاشة الرئيسية لتغيير موضعها.

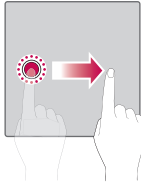


التمرير أو التحريك

للتمرير أو التحريك، مرّر إصبعك بسرعة على سطح الشاشة من دون توقف عند الضغط عليها للمرة الأولى (لتجنّب سحب عنصر).

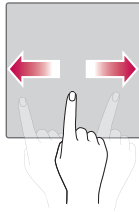



الضغط المزدوج

اضغط مرتين لتكبير/تصغير صفحة ويب أو خريطة.

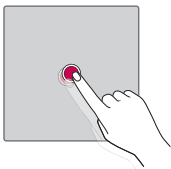

التصغير والتكبير باستخدام الإصبعين

استخدم إصبعي السبابة والإبهام في حركة تقريب أو توسيع للتكبير أو التصغير عند استخدام المتصفح أو الخرائط أو عند عرض صور.

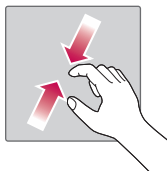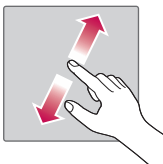

إعداد حساب Google

عند فتح تطبيق Google للمرة الأولى على الهاتف، سيطلب منك تسجيل الدخول بحساب Google الموجود. سيطلب منك إنشاء حساب Google إذا لم يكن لديك واحدًا.

إنشاء حساب Google

- 1 اضغط على  <  < علامة التبويب عامة < الحسابات والمزامنة.
- 2 اضغط على إضافة حساب < Google < أو أنشئ حسابًا جديدًا.
- 3 أدخل الاسم الأول والعائلة، ثم اضغط على التالي.
- 4 اتبع الإرشادات وأدخل معلومات الحساب المطلوبة والاختيارية. انتظر حتى يقوم الخادم بإنشاء حسابك.

تسجيل الدخول إلى حساب Google

- 1 اضغط على  <  < علامة التبويب عامة < الحسابات والمزامنة.
 - 2 اضغط على إضافة حساب < Google.
 - 3 أدخل عنوان البريد الإلكتروني الخاص بك واضغط على التالي.
 - 4 أدخل كلمة المرور الخاصة بك واضغط على التالي.
 - 5 بعد تسجيل الدخول، يمكنك استخدام Gmail والاستفادة من خدمات Google على الهاتف.
 - 6 بعد إعداد حساب Google، سيقوم الهاتف بالمزامنة تلقائيًا مع حساب Google على الويب (إذا كان اتصال البيانات متوفرًا).
- بعد تسجيل الدخول، سيقوم الهاتف بالمزامنة مع خدمات Google، مثل Gmail والأسماء وتقويم Google. كما يمكنك استخدام الخرائط وتنزيل تطبيقات من متجر Play وإجراء نسخ احتياطي لإعداداتك في خوادم Google والاستفادة من خدمات Google الأخرى على هاتفك.

إيقاف الجهاز وإلغاء قفله

يؤدي الضغط على مفتاح الطاقة/القفل إلى إيقاف تشغيل الشاشة وإدخال الهاتف في وضع القفل. يقفل الجهاز تلقائياً إذا لم يتم استخدامه لفترة محددة. يساعد هذا في منع الضغط على الهاتف عن طريق الخطأ وتوفير طاقة البطارية. لإلغاء قفل الجهاز، اضغط على مفتاح الطاقة/القفل ومرّر الشاشة بأي اتجاه.

بصمة الإصبع

تتيح لك ميزة بصمة الإصبع وضع إصبع واحد على مفتاح الطاقة/القفل لإلغاء قفل الشاشة. راجع بصمة الإصبع في الميزات التي ستعشقها.

ضبط تشغيل/إيقاف الشاشة

تسمح لك ميزة تشغيل/إيقاف الشاشة بالضغط مرتين على الشاشة لتسهيل تشغيلها أو إيقاف تشغيلها.

تشغيل الشاشة

- 1 اضغط مرتين في وسط شاشة القفل لتشغيلها.
- 2 ألغ قفل الشاشة أو الوصول إلى اختصارات أو عناصر واجهة الاستخدام المتوفرة.

إيقاف تشغيل الشاشة

- 1 اضغط مرتين على مساحة فارغة في الشاشة الرئيسية أو شريط الحالة.
- 2 ستتوقف الشاشة عن التشغيل.

ملاحظة

- اضغط في وسط الشاشة. إذا ضغطت على الجهة العليا أو السفلى من الشاشة، فسينخفض معدل التعرف.



Knock Code

تسمح لك ميزة Knock Code بإنشاء رمز إلغاء القفل الخاص بك باستخدام مجموعة من الضغوط على الشاشة. يمكنك الوصول إلى الشاشة الرئيسية مباشرة عندما تتوقف الشاشة عن التشغيل عبر الضغط بالتسلسل نفسه على الشاشة.

ملاحظة

- إذا أدخلت Knock Code خاطئاً 6مرات، فسيتم نقلك إلزاماً إلى صفحة تسجيل الدخول إلى حساب google/الرمز PIN الاحتياطي.
- استخدم طرف الإصبع بدلاً من الظفر للضغط على الشاشة لتشغيلها أو إيقاف تشغيلها.

إعداد ميزة Knock Code

1 اضغط على  <  < علامة التبويب إعدادات الشاشة < تأمين الشاشة < اختر قفل الشاشة < Knock Code.



2 اضغط على المربعات في نقش ما لضبط Knock Code الخاص بك. يمكن أن يكون نقش Knock Code مؤلفاً من 6 إلى 8 ضغطات.

إلغاء قفل الشاشة باستخدام Knock Code

يمكنك إلغاء قفل الشاشة عبر الضغط على نقش Knock Code الذي عيّنته مسبقاً عندما تتوقف الشاشة عن التشغيل.

تغيير طريقة قفل الشاشة

يمكنك تغيير طريقة قفل الشاشة لمنع الآخرين من الوصول إلى معلوماتك الشخصية.

1 اضغط على  <  < علامة التبويب إعدادات الشاشة < تأمين الشاشة < اختر قفل الشاشة.

2 حدد قفل الشاشة المطلوب من بلا أو مسح أو Knock Code أو النقر أو رمز PIN أو كلمة المرور.



ملاحظة

• أنشئ حساب Google قبل ضبط نقش لإلغاء القفل وتذكّر رمز PIN الاحتياطي الذي أنشأته أثناء إنشاء نقش القفل.


Smart Lock

يمكنك استخدام ميزة Smart Lock لتسهيل عملية إلغاء قفل الهاتف. يمكنك ضبطها لإبقاء الهاتف غير مقفل عندما يكون متصلاً بجهاز Bluetooth موثوق به أو عندما تكون متواجداً في موقع مألوف مثل المنزل أو مكان العمل أو عندما يتعرّف على وجهك.

إعداد ميزة Smart Lock

- 1 اضغط على  <  < علامة التبويب إعدادات الشاشة < تأمين الشاشة < Smart Lock.
- 2 قبل إضافة أي أجهزة أو أماكن موثوق بها أو وجه موثوق به، عليك إعداد قفل شاشة (Knock Code أو رمز PIN أو كلمة مرور).

الشاشة الرئيسية

الشاشة الرئيسية هي نقطة البداية للعديد من التطبيقات والوظائف. وتتيح لك إضافة عناصر مثل اختصارات التطبيقات أو عناصر واجهة الاستخدام الخاصة بـ Google لتمنحك وصولاً فورياً إلى المعلومات والتطبيقات. هذه هي المساحة المحيطة الافتراضية والتي يمكن الوصول إليها من أي قائمة عبر الضغط على .

التعرف على الشاشة الرئيسية



- 1 **الشاشة الثانوية** - تتوفر شاشة ثانية في الجزء الأعلى من الشاشة تتيح للمستخدم تكوين التطبيقات المطلوبة. حاول تشغيل التطبيق المفضل لديك بسرعة وسهولة عبر إعداد ميزة الشاشة الثانوية.
- 2 **شريط الحالة** - لعرض معلومات عن حالة الجهاز، بما في ذلك الوقت وقوة الإشارة وحالة البطارية ورموز الإشعارات.
- 3 **عنصر واجهة الاستخدام** - تُعد عناصر واجهة الاستخدام تطبيقات مضمّنة يمكن الوصول إليها عبر إطار التطبيقات أو الشاشة الرئيسية. وبخلاف الاختصار، يمكن لعنصر واجهة استخدام أن يعمل كتطبيق على الشاشة.

- 4 رموز التطبيقات - اضغط على رمز (تطبيق، مجلد، إلخ) لفتحه واستخدامه.
- 5 مؤشر الموقع - يشير إلى أي مساحة محيطة للشاشة الرئيسية تستعرضها حاليًا على الشاشة.
- 6 مساحة المقطع السريع - لتوفير الوصول بلمسة واحدة إلى الوظيفة في أي مساحة محيطة للشاشة الرئيسية.
- 7 أضرار اللمس في الشاشة الرئيسية

◀ زر الرجوع	للعودة إلى الشاشة السابقة. ولإغلاق العناصر المنبثقة مثل القوائم ومربعات الحوار ولوحة المفاتيح التي تظهر على الشاشة.
○ زر الشاشة الرئيسية	للعودة إلى الشاشة الرئيسية من أي شاشة.
□ زر المعاينة	لعرض التطبيقات المستخدمة حديثًا. يؤدي لمس هذا الزر باستمرار إلى فتح قائمة الخيارات المتوفرة.

لعرض لوحات شاشة رئيسية أخرى

يوفر نظام التشغيل مساحات محيطة متعددة للشاشة الرئيسية بهدف توفير مساحة أكبر لإضافة رموز وعناصر واجهة استخدام والمزيد غيرها.

• مرّر إصبعك إلى اليسار أو اليمين على الشاشة الرئيسية للوصول إلى مساحات محيطة إضافية.

العودة إلى التطبيقات المستخدمة مؤخرًا

يعدّ تعدد المهام أمرًا سهلاً مع نظام التشغيل Android نظرًا لإمكانية تشغيل أكثر من تطبيق واحد في الوقت نفسه. لا حاجة لإنهاء تطبيق قبل فتح تطبيق آخر. يمكنك استخدام العديد من التطبيقات المفتوحة والتنقل فيما بينها.

يدير نظام التشغيل Android كل تطبيق ويوقف تشغيله ويقوم بتشغيله عند الحاجة للتأكد من أن التطبيقات الخاملة لا تستهلك الموارد بشكل غير ضروري.

1 اضغط على □. ستظهر قائمة بالتطبيقات المستخدمة مؤخرًا.

2 اضغط على التطبيق الذي تريد الوصول إليه. لا يؤدي ذلك إلى إيقاف تشغيل التطبيق السابق في الخلفية. احرص على الضغط للخروج من تطبيق ما بعد استخدامه.

• لإغلاق تطبيق من قائمة التطبيقات الحديثة، مرّر معاينة التطبيق إلى اليسار أو اليمين.

لمسح التطبيقات كافة، اضغط على مسح الكل.

تخصيص الشاشة الرئيسية

يمكنك تخصيص الشاشة الرئيسية عبر إضافة تطبيقات وعناصر واجهة استخدام وتغيير خلفيات الشاشة.


إضافة عناصر إلى الشاشة الرئيسية

- 1 المس باستمرار الجزء الفارغ من الشاشة الرئيسية.
- 2 في القائمة وضع الإضافة، حدد العنصر الذي تريد إضافته. عندئذٍ سترى العنصر الذي تمت إضافته على الشاشة الرئيسية.
- 3 اسحبه إلى الموضع المطلوب وارفع إصبعك.

ملاحظة

- لإضافة رمز تطبيق إلى الشاشة الرئيسية من شاشة التطبيقات، المس باستمرار التطبيق الذي تريد إضافته.

إزالة عنصر عن الشاشة الرئيسية

على الشاشة الرئيسية، المس باستمرار الرمز الذي تريد إزالته < اسحبه إلى .

إضافة تطبيق إلى مساحة المفاتيح السريع

من شاشة التطبيقات أو على الشاشة الرئيسية، المس باستمرار رمز تطبيق واسحبه إلى مساحة المفاتيح السريع. ثم حرّره في الموقع المطلوب.


إزالة تطبيق من مساحة المفاتيح السريع

المس باستمرار المفاتيح السريع المطلوب واسحبه إلى .

ملاحظة

- لا يمكن إزالة  زر التطبيقات.

تخصيص رموز التطبيق على الشاشة الرئيسية



- 1 المس رمز تطبيق باستمرار حتى تتمكن من تحريكه من موقعه الحالي ثم حرّره. يظهر رمز التحرير  في الزاوية اليمنى العليا من التطبيق.
- 2 اضغط على رمز التطبيق مجدداً وحدد تصميم الرمز والحجم المطلوبين.
- 3 اضغط على موافق لحفظ التغيير.

لوحة الإشعارات

تُعلمك الإشعارات بوصول رسائل جديدة وأحداث تقويم وتنبهات بالإضافة إلى أنها تعلمك أيضًا بالأحداث الجارية أثناء إجرائك مكالمة مثلاً.

فتح لوحة الإشعارات

مرر لأسفل من شريط الحالة لفتح لوحة الإشعارات. لإغلاق لوحة الإشعارات، مرر الشاشة لأعلى أو اضغط على <.

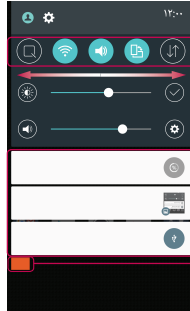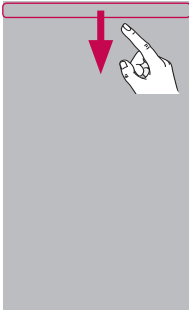

1 مساحة الإعدادات السريعة

2 الإشعارات

3 مسح

- 1 اضغط على كل زر إعداد سريع للتبديل بين تشغيل/إيقاف التشغيل. المس باستمرار الزر المطلوب للوصول مباشرة إلى قائمة الإعدادات الخاصة بالوظيفة. لعرض المزيد من أزرار التبديل، مرر إصبعك على الشاشة إلى اليسار أو اليمين. اضغط على ☰ لإزالة أزرار الإعدادات السريعة أو إضافتها أو إعادة ترتيبها.
- 2 تم إدخال كل من الإشعارات الحالية مع وصف موجز. اضغط على إشعار لعرضه.

3 اضغط لمسح الإشعارات كافة.

عند وصول إشعار، يظهر رمزه عند أعلى الشاشة. تظهر رموز الإشعارات المعلقة على اليسار ورموز النظام مثل Wi-Fi وقوة البطارية على اليمين.

رموز المؤشر على شريط الحالة

تظهر رموز المؤشر على شريط الحالة في أعلى الشاشة للإبلاغ عن المكالمات التي لم يرد عليها والرسائل الجديدة وأحداث التقويم وحالة الشريط والمزيد.



توفر الرموز المعروضة في أعلى الشاشة معلومات حول حالة الجهاز. الرموز المدرجة في الجدول أدناه هي بعض أشهر الرموز.

الوصف	الرمز	الوصف	الرمز
يتم تشغيل أغنية حاليًا	▶	لم يتم إدخال بطاقة SIM	📶❌
عدم الإزعاج - الصمت الكامل	⊖	لا يوجد إشارة شبكة متوفرة	📶❌
وضع الاهتزاز قيد التشغيل	📱🔊	وضع الرحلات الجوية قيد التشغيل	✈️
البطارية مشحونة بشكل كامل	🔋	متصل بشبكة Wi-Fi	📶
جاري شحن البطارية	🔌	سماعة الرأس السلكية متصلة	🎧
الهاتف متصل بالكمبيوتر الشخصي عبر كابل USB	📱🔌	مكالمة جارية	☎️
تنزيل البيانات	⬇️	مكالمات لم يرد عليها	📞❌
تحميل البيانات	⬆️	Bluetooth قيد التشغيل	📶🔌
GPS قيد التشغيل	📍	تحذير النظام	⚠️
تتم مزامنة البيانات	🔄	تم تعيين منبه	🕒
اختيار أسلوب الإدخال	📝	يتوفر بريد صوتي جديد	📞
نقطة Wi-Fi المحملة نشطة	📶	رسالة نصية أو وسائط متعددة جديدة	📧




متصل LG AirDrive		NFC قيد التشغيل	
		متصل Miracast	

ملاحظة

- قد يختلف موقع الرمز في شريط الحالة وفقاً للوظيفة أو الخدمة.
- قد تختلف الخيارات المتوفرة وفقاً للمنطقة أو موفر الخدمة.

التقاط لقطة شاشة



اضغط باستمرار على مفتاح خفض مستوى الصوت ومفتاح الطاقة/القفل في الوقت نفسه لمدة ثانيتين لالتقاط لقطة شاشة للشاشة الحالية.

لعرض الصورة التي تم التقاطها، اضغط على  <  <  < مجلد Screenshots.

لوحة المفاتيح على الشاشة

يمكنك إدخال نص باستخدام لوحة المفاتيح على الشاشة. تظهر لوحة المفاتيح على الشاشة عند الضغط على حقل إدخال نص متوفر.

استخدام لوحة المفاتيح وإدخال النصوص

الوصف	الرمز
اضغط مرة واحدة لكتابة الحرف التالي بالأحرف الكبيرة. اضغط مرتين للكتابة بأحرف كبيرة.	
اضغط للانتقال إلى إعدادات لوحة المفاتيح. المس باستمرار لتغيير أسلوب إدخال النص.	
اضغط لإدخال مسافة.	
اضغط لإدخال سطر جديد.	
اضغط لحذف الحرف السابق.	

إدخال حروف مميزة



تتيح لك لوحة المفاتيح على الشاشة إدخال أحرف مميزة. على سبيل المثال، لإدخال الحرف "á"، المس باستمرار زر الحرف "a" حتى يظهر الإطار المنبثق ويعرض الأحرف المميزة ذات الصلة. ثم اسحب إصبعك من دون رفعه إلى الحرف المميز المطلوب. عندما يتم تمييزه، ارفع إصبعك.

ملاحظة

يشير الرمز الموجود في الزاوية العليا اليمنى من المفتاح إلى توفر حروف إضافية لهذا المفتاح.

تقسيم لوحة المفاتيح أو دمجها

يمكنك تقسيم لوحة المفاتيح في النصف عبر فصل إصبعين أفقيًا على لوحة المفاتيح في الوضع الأفقي. يسهل ذلك الكتابة باستخدام الأصابع. تأكد من تمكين إعداد تقسيم لوحة المفاتيح لاستخدام هذه الميزة.

• اضغط على  <  < علامة التبويب عامة < اللغة ولوحة المفاتيح < لوحة مفاتيح LG < ارتفاع وتخطيط لوحة المفاتيح < تقسيم لوحة المفاتيح.



نقل البيانات بين الكمبيوتر الشخصي والجهاز

يمكنك نسخ بيانات أو نقلها بين الكمبيوتر الشخصي والجهاز.

إرسال بيانات باستخدام اتصال USB.

- 1 قم بتوصيل الجهاز بالكمبيوتر الشخصي باستخدام كابل USB المتوفر مع الهاتف.
- 2 افتح لوحة الإشعارات واضغط على نوع الاتصال الحالي وحدد جهاز الوسائط (بروتكول نقل الوسائط).
- 3 ستظهر نافذة منبثقة على الكمبيوتر الشخصي، ما يسمح لك بنقل البيانات المطلوبة.

ملاحظة

- يلزم تثبيت برنامج التشغيل LG Android Platform Driver على الكمبيوتر الشخصي للتمكن من اكتشاف الهاتف.
- تحقق من متطلبات استخدام جهاز الوسائط (MTP).

العناصر	المطلب
برنامج التشغيل	Microsoft Windows XP SP3 أو Vista أو أعلى
إصدار Window Media Player	Windows Media Player 10 أو إصدار أعلى

إرسال بيانات باستخدام اتصال لاسلكي

يمكنك مشاركة محتوى هاتفك أو إدارته على الكمبيوتر الشخصي عبر Wi-Fi أو بيانات الهاتف المحمول باستخدام وظيفة **LG AirDrive**.

ملاحظة

- إذا أردت استخدام LG AirDrive، يرجى مراجعة قسم **LG AirDrive** في الإعدادات.

تطبيق LG Bridge

LG Bridge هو تطبيق يساعدك في إدارة الصور والموسيقى ومقاطع الفيديو والمستندات الخ. المحفوظة في جهاز LG المحمول على جهاز الكمبيوتر الشخصي بطريقة سهلة. يمكنك كذلك نسخ ملفاتك احتياطيًا مثل الأسماء والصور على الكمبيوتر الشخصي أو تحديث برنامج جهاز محمول.

ملاحظة

- يمكنك رؤية إرشادات مفصلة حول كيفية استخدام LG Bridge في قائمة التعليمات بعد تثبيت البرنامج وفتحه.
- قد تختلف الميزات المدعومة بحسب الجهاز.
- إن LG unified USB driver هو برنامج مطلوب لتوصيل هاتف محمول من LG بجهاز كمبيوتر شخصي. يتم تثبيته تلقائيًا عند تثبيت LG Bridge.

مميزات LG Bridge

- إدارة بيانات الجهاز المحمول أو المحتويات من هاتفك على الكمبيوتر الشخصي عبر Wi-Fi.
- نسخ بيانات الجهاز المحمول احتياطيًا واستعادتها عبر USB.
- تحديث برنامج جهاز محمول على الكمبيوتر الشخصي عبر USB.


تنزيل برنامج LG Bridge

- 1 انتقل إلى www.lg.com.
- 2 اضغط على زر البحث وادخل اسم الطراز للبحث عن الطراز.
- 3 حدد معلومات الطراز وانقر فوق **انتقال**.
- 4 مرر للأسفل وحدد علامة التبويب **مزامنة الكمبيوتر الشخصي** < Windows أو Mac OS < تنزيل لتنزيل LG Bridge.

SmartShare

تتيح لك SmartShare مشاركة محتويات الوسائط باستخدام تطبيقَي المعرض والموسيقى.

استخدام SmartShare

- 1 أثناء عرض المحتوى الذي تريد مشاركته، اضغط على **SmartShare** أو .
- 2 اضغط على الجهاز الذي تريد مشاركة المحتويات معه من القائمة.
• في حال لم يكن الجهاز مدرجاً في القائمة، احرص على تشغيل Wi-Fi أو Wi-Fi Direct أو Bluetooth. ثم اضغط على إعادة المسح.

الاستمتاع بتشغيل المحتويات من الأجهزة القريبة من هاتفك

- 1 لإنشاء اتصال بين الأجهزة القريبة والهاتف، اضغط على خيار الأجهزة المجاورة في تطبيقَي المعرض والموسيقى.
• احرص على توصيل هاتفك والأجهزة القريبة بشبكة Wi-Fi نفسها وتشغيل خدمة DLNA على الجهاز القريب.
- 2 اضغط على الجهاز الذي تريد الاتصال به. إذا لم يكن الجهاز مدرجاً في القائمة، اضغط على بحث عن الأجهزة القريبة.
- 3 بعد إنشاء اتصال، يمكنك الاستمتاع بتشغيل المحتوى على الهاتف.

التطبيقات

تثبيت التطبيقات أو إلغاء تثبيتها

يتيح لك متجر Play تصفح التطبيقات المجانية والمدفوعة والبحث عنها.

لفتح تطبيق متجر Play




اضغط على  <  <  < .

لفتح شاشة مع تفاصيل حول تطبيق ما

في أي وقت أثناء التصفح في متجر Play، اضغط على تطبيق ما لفتح شاشة التفاصيل الخاصة به.

تحتوي شاشة تفاصيل التطبيق على وصف وتصنيفات وتعليقات ومعلومات ذات صلة حول التطبيق. من هذه الشاشة، يمكنك تنزيل التطبيق وتثبيته وإلغاء تثبيته وتصنيفه وغيرها.

لإلغاء تثبيت التطبيقات:

- 1 اضغط على  <  <  < علامة التبويب عامة < التطبيقات.
- 2 بمجرد ظهور جميع التطبيقات، قم بالتمرير وحدد التطبيق الذي تريد إلغاء تثبيته.
- 3 اضغط على إلغاء التثبيت.

المكالمات

يمكنك الاستمتاع بإجراء مكالمات واضحة في أرجاء المنطقة كافة.




إجراء مكالمة

- 1 اضغط على  < .
- 2 أدخل الرقم باستخدام لوحة الطلب. لحذف رقم، اضغط على .
- 3 بعد إدخال الرقم المطلوب، اضغط على  لإجراء المكالمة.
- 4 لإنهاء المكالمة، اضغط على .



ملاحظة

• لإدخال علامة "+" لإجراء مكالمات دولية، المس باستمرار .

الاتصال بالأسماء

- 1 اضغط على  < .
- 2 مرّر عبر قائمة الأسماء. يمكنك أيضًا إدخال الاسم في حقل البحث أو تمرير شريط الأحرف الأبجدية في الجانب الأيسر من الشاشة.
- 3 في القائمة التي تظهر، اضغط على  للاتصال.





الرد على مكالمة ورفضها

- مرّر  في أي اتجاه للرد على مكالمة واردة.
- مرّر  في أي اتجاه لرفض مكالمة واردة.

ملاحظة

• مرّر  إذا أردت رفض مكالمة وإرسال رسالة إلى المتصل.



إجراء مكالمة ثانية

- 1 أثناء المكالمة الأولى، اضغط على  > إضافة مكالمة وأدخل الرقم.
- 2 اضغط على .
- 3 يتم عرض المكالمتين معاً على شاشة المكالمات. يتم إقفال المكالمة الأولية ووضعها في حالة الانتظار.
- 4 اضغط على الرقم المعروض للتبديل بين المكالمات. أو اضغط على  لبدء مكالمة جماعية.
- 5 لإنهاء كل المكالمات، اضغط على .



ملاحظة

- ستُعرض عليك رسوم مقابل كل مكالمة تجريها.

عرض سجلات المكالمات

- 1 اضغط على  >  > علامة التبويب السجلات.
- 2 يتم عرض قائمة بكل المكالمات الصادرة والمستلمة والتي لم يرد عليها.

ملاحظة

- اضغط على أي إدخال في سجل المكالمات لعرض تاريخ المكالمة ووقتها ومدتها.
- اضغط على  >  > حذف الكل لحذف كل العناصر المسجلة.

تغيير إعدادات المكالمات

يمكنك تكوين إعدادات المكالمات الهاتفية، مثل إعادة توجيه المكالمات بالإضافة إلى الميزات المميزة الأخرى التي تقدمها شركة الاتصالات.

- 1 اضغط على  > .
- 2 اضغط على  > إعدادات المكالمات وقم بتكوين الخيارات المطلوبة.



الأسماء

يمكنك إضافة أسماء إلى الهاتف ومزامنتها مع الأسماء الموجودة في حساب Google أو الحسابات الأخرى التي تدعم مزامنة الأسماء.

البحث عن اسم

- 1 اضغط على  < .
- 2 اضغط على **بحث في الأسماء** وأدخل الاسم باستخدام لوحة المفاتيح. يتم عرض النتائج المطابقة عندما تبدأ بالكتابة.



إضافة اسم جديد

- 1 اضغط على  < .
- 2 أدخل رقم الاسم الجديد.
- 3 اضغط على  < **إضافة إلى الأسماء** < اسم جديد.
- 4 إذا أردت إضافة صورة إلى الاسم الجديد، اضغط على رمز الصورة. اختر بين النقاط صورة أو اختر من المعرض.
- 5 أدخل معلومات الاسم المطلوبة.
- 6 اضغط على **حفظ**.



الأسماء المفضلة

يمكنك تصنيف الأسماء التي تطلبها بشكل متكرر كمفضلة.




إضافة اسم إلى المفضلة

- 1 اضغط على  < .
- 2 اضغط على اسم لعرض تفاصيله.
- 3 اضغط على النجمة في الجهة العليا اليسرى من الشاشة. يتغير لون النجمة إلى اللون الأصفر.

إزالة اسم من قائمة المفضلة

- 1 اضغط على  <  < علامة التبويب المفضلة.
- 2 المس أحد الأسماء لعرض تفاصيله.
- 3 اضغط على النجمة الصفراء في الجهة العليا اليسرى من الشاشة. يتغير لون النجمة إلى لون داكن وتتم إزالة الاسم من المفضلة.

إنشاء مجموعة

- 1 اضغط على  <  < علامة التبويب المجموعات.
- 2 اضغط على  < مجموعة جديدة.
- 3 أدخل اسماً للمجموعة الجديدة. يمكنك أيضاً ضبط نغمة رنين مميزة للمجموعة التي تم إنشاؤها حديثاً.
- 4 اضغط على إضافة أعضاء لإضافة أسماء إلى المجموعة واضغط على إضافة.
- 5 اضغط على حفظ لحفظ المجموعة.

ملاحظة

- إذا قمت بحذف مجموعة، فلن تفقد الأسماء التي تعيينها إلى تلك المجموعة، بل ستبقى موجودة في قائمة الأسماء.







الرسائل

يجمع الهاتف بين ميزة إرسال رسائل نصية ورسائل وسائط متعددة في قائمة واحدة بديهية وسهلة الاستخدام.

ملاحظة

• قد تُفرض عليك رسوم مقابل كل رسالة ترسلها. يرجى استشارة موفر الخدمة لديك.

إرسال رسالة

- 1 اضغط على  <  <  .
- 2 اضغط على  ، ثم حدّد إدخال أو أكثر من قائمة الأسماء.
أو
- أدخل اسماً أو رقم اسم في الحقل إلى. بمجرد إدخال اسم، تظهر الأسماء المطابقة. يمكنك الضغط على مستلم مقترح وإضافة أكثر من اسم واحد.
- 3 اضغط على حقل النص وابدأ بإدخال الرسالة.
- 4 اضغط على  لفتح قائمة الخيارات. اختر أيًا من الخيارات المتوفرة.
- 5 اضغط على  لإرفاق الملف الذي تريد مشاركته في الرسالة.
- 6 اضغط على إرسال لإرسال الرسالة.

عرض المحادثات



تظهر الرسائل التي تم تبادلها مع طرف آخر بترتيب زمني لتتمكن من رؤية محادثاتك والعثور عليها بسهولة.

تغيير إعدادات الرسائل


يتم تحديد إعدادات الرسائل الخاصة بالهاتف مسبقًا للسماح لك بإرسال الرسائل على الفور. يمكنك تغيير الإعدادات وفقًا لتفضيلاتك.

• اضغط على  <  <  < الإعدادات.

الكاميرا

يمكنك استخدام الكاميرا أو كاميرا الفيديو لالتقاط الصور ومقاطع الفيديو ومشاركتها.
• اضغط على  <  <  .

التقاط صورة

- 1 حدد إطار الهدف على شاشتك.
- 2 يشير المربع الذي يظهر حول هدف الصورة إلى تركيز الكاميرا على هذا الهدف.
- 3 اضغط على  لالتقاط صورة. سيتم حفظ صورتك تلقائيًا في المعرض.

خيارات وضع الكاميرا



1	Snap Video – يتيح لك إعداد فيلم بنمط قصة.
2	وضع الفيديو اليدوي – يتيح لك تسجيل فيديو كذلك. يمكنك التحكم يدويًا بخيار كل تفصيل.
3	وضع الكاميرا اليدوية – يتيح لك استخدام إعدادات احترافية لالتقاط اللقطة كما تريد. يمكنك التحكم يدويًا بخيار كل تفصيل.
4	الوضع التلقائي – يتيح لك تطبيق إعدادات شائعة الاستخدام على الصور ومقاطع الفيديو.
5	الوضع العادي – يتيح لك التقاط صور عادية وسريعة. لا تتوفر إعدادات إضافية ولا إمكانية التقاط الفيديو في هذا الوضع.

الوضع التلقائي في محدد المنظر



1		يُتيح لك إدارة فلاش الكاميرا.
2		اضغط للتبديل بين عدسة الكاميرا الخلفية و عدسة الكاميرا الأمامية.
3		يُتيح لك تحديد وضع اللقطة للصورة.
4		اضغط على هذا الرمز لفتح قائمة إعدادات الكاميرا.
5		اضغط لعرض آخر صورة التقطتها أو آخر فيديو سجلته.
6		اضغط لبدء التسجيل.
7		اضغط لالتقاط صورة.
8		اضغط للخروج من تطبيق الكاميرا.

ملاحظة

- احرص على تنظيف غطاء العدسة الواقي بواسطة قطعة قماش من الألياف الدقيقة قبل التقاط الصور. يمكن أن يؤدي تلخ العدسة ببصمات الأصابع إلى الحصول على صور ضبابية مع تأثير "الهالة".

استخدام إعدادات الوضع

في محدد المنظر الخاص بالكاميرا، اضغط على **[الوضع]** لعرض خيارات الوضع. اضغط على كل رمز لاستخدام إعدادات الوضع التالية.


التقاط صور أو تسجيل فيديو من مناظير مختلفة بواسطة الكاميرا الأمامية والخلفية.	
يسمح لك هذا الخيار بالتقاط صورة بانورامية.	
تسجيل فيديو لعرضه بالحركة البطيئة.	
تسجيل فيديو لعرضه بالحركة السريعة.	



استخدام الإعدادات المتقدمة

في محدد المنظر الخاص بالكاميرا، اضغط على **[⚙️]** لعرض الخيارات المتقدمة. اضغط على كل رمز لضبط إعدادات الكاميرا التالية.


لجمع الصور التي تم التقاطها في حالات التعرض المختلفة في صورة واحدة مثالية للحصول على صورة أفضل في ظروف الإضاءة الصعبة.	
لتعيين نسبة عرض إلى طول الصورة وجودة الفيديو.	
يسمح لك هذا الخيار بالتقاط الصور بواسطة أوامر صوتية. عند تشغيل هذه الميزة، ما عليك سوى قول "Cheese" أو "Smile" أو "LG" وما إلى ذلك للالتقاط صورة.	
ضبط مؤقت الكاميرا. هذا خيار مثالي إن أردت أن تظهر في الصورة أو الفيديو.	
يسمح لك هذا الخيار بالتقاط صور أفضل وتسجيل مقاطع فيديو بشكل أفضل عبر عرض خطوط شبكة للمساعدة في المحاذا.	
اضغط لإزالة غشاوة الحركة لاسيما عندما تمشي أو تتحرك كثيراً.	
عين موقع تخزين الصور والفيديو. اختر من بين IN (الذاكرة الداخلية) و SD (بطاقة الذاكرة). تظهر هذه القائمة فقط عند إدخال بطاقة SD.	
يسمح لك هذا الخيار بمعرفة كيفية عمل وظيفة. سيوفر لك هذا الرمز دليل للتعليمات.	

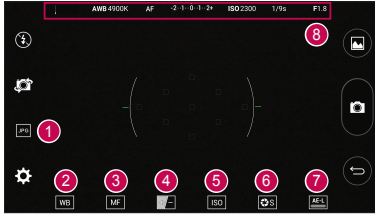



وضع الكاميرا اليدوية في محدد المنظر

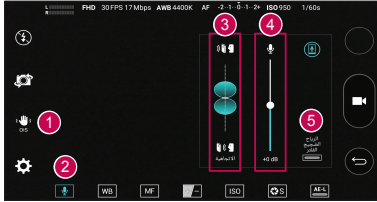


اضغط لتحديد تنسيق للملف من بين JPEG و DNG.		1
اضغط لتحسين جودة الألوان في ظروف إضاءة مختلفة.		2
اضغط لاستخدام وضع التركيز اليدوي.		3
اضغط لضبط السطوع.		4
اضغط لضبط ISO.		5
اضغط لضبط سرعة اللاقط.		6
اضغط لاستخدام قفل التعريض التلقائي.		7
لعرض قيم الإعدادات المتقدمة الحالية.		8



وضع الفيديو اليدوي في محدد المنظر




اضغط لإزالة غشاوة الحركة لاسيما عندما تمشي أو تتحرك كثيراً.	1 
<p>اضغط لتعيين إعدادات التسجيل.</p> <p>3 اضغط لضبط اتجاه الصوت.</p> <p>4 اضغط لضبط دسبيل.</p> <p>5 اضغط لضبط اتجاه الرياح.</p> <p> : يمكنك استخدام هذه الوظيفة بعد توصيل سماعات الأذن.</p> <p>اضغط على ، حتى تتمكن من سماع صوت التسجيل أثناء التسجيل.</p>	<p>2 </p>

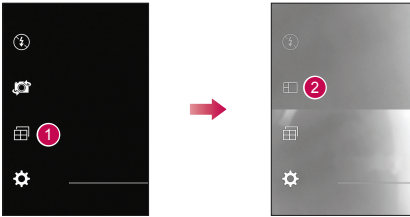وضع Snap Video في محدد المنظر





اضغط لتغيير وضع العرض المتعدد.	1 
لجمع الصور ومقاطع الفيديو في التخطيط الذي تختاره. للتبديل بين كل عرض للكاميرا، قم بالتمرير وصولاً إلى العرض.	2 

لقطات تسلسلية مع فواصل زمنية

يمكنك التقاط لقطات بفواصل زمنية في الوضع التلقائي باستخدام عدسة الكاميرا الأمامية. المس باستمرار  لالتقاط 4 صور ذاتية على التوالي.

لقطات متلاحقة

يمكنك التقاط لقطات متلاحقة في وضع الكاميرا التلقائية باستخدام عدسة الكاميرا الخلفية. المس باستمرار  لالتقاط كمية كبيرة من الصور على التوالي لغاية ما يتم تحرير زر الالتقاط. يعرض محدد المنظر عدد اللقطات التي تم التقاطها. عند عرض اللقطات اللاحقة في المعرض، اضغط على  لعرض كل لقطة في التسلسل (مماثل لعرض flipbook).

التقاط الصورة عن طريق الإيماءة

تسمح ميزة لقطة الإيماءة بالتقاط صورة بواسطة إيماءة يد باستخدام الكاميرا الأمامية.


التقاط صور بواسطة إيماءة

هناك طريقتان لاستخدام ميزة لقطة الإيماءة.

• ارفع يدك وافتحها حتى تكتشفها الكاميرا الأمامية، عندها سيظهر مربع على الشاشة. ثم أغلق يدك بشكل قبضة لبدء المؤقت، مما يتيح لك الوقت للاستعداد.

أو

• ارفع يدك وشدّ القبضة حتى تكتشفها الكاميرا الأمامية، عندها سيظهر مربع على الشاشة. ثم أرخ يدك لبدء المؤقت، مما يتيح لك الوقت للاستعداد.

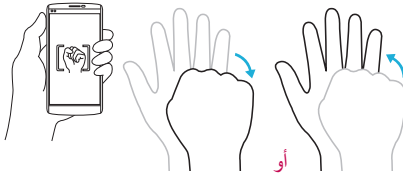

- كاميرا الصور الذاتية 
- كاميرا الصور الجماعية 

ملاحظة

• قد لا تكون هذه الوظيفة معتمدة في التسجيل ذي المشاهد المتعددة.

عرض الإيماءة

بعد التقاط صورة بواسطة عدسة الكاميرا الأمامية، يمكنك التحقق تلقائيًا من الصورة التي التقطتها بواسطة هذه الإيماءة.

1 اضغط على  <  < .

2 التقط صورة باستخدام الكاميرا الأمامية.

3 بعد التقاط الصورة، قَرِّب الهاتف من وجهك. سيتم عرض الصورة التي تم التقاطها.

ملاحظة

- قد لا تعمل هذه الميزة بشكل صحيح وفقًا لسرعة الإيماءة والزوايا التي تم القيام بالإيماءة منها.
- عند تغيير الزاوية بعد المعاينة السريعة، ستعود إلى وضع الكاميرا. عليك الانتقال إلى المعرض لعرض الصورة مرة أخرى.

التركيز التلقائي المتعدد النقاط

عند التقاط صورة، تعمل وظيفة التركيز التلقائي المتعدد النقاط (AF) تلقائيًا وستسمح لك برؤية صورة واضحة.

التكبير/التصغير بمعدل 8 أضعاف

عند استخدام عدسة الكاميرا الخلفية، يمكنك التكبير أو التصغير بمعدل 8 أضعاف.

ملاحظة

- يجب أن تكون يدك ثابتة. لا تعمل هذه الميزة مع بعض الوظائف. قد تظهر بعض الكائنات متراكبة عند التقاط صورة لأهداف تتحرك بسرعة.

بعد التقاط الصورة

اضغط على الصورة المصغرة للصورة على الشاشة لعرض آخر صورة التقطتها.

اضغط لتحرير الصورة.	
اضغط لالتقاط صورة أخرى على الفور.	
اضغط لفتح خيارات المشاركة المتوفرة.	
اضغط لحذف الصورة.	
اضغط للوصول إلى الخيارات الإضافية.	



تسجيل ملف فيديو

1 اضغط على < < .

2 حدد إطار الهدف على شاشتك.

3 اضغط على لبدء تسجيل الفيديو.

4 يُعرض طول التسجيل في أعلى الشاشة.

ملاحظة

• اضغط على لالتقاط صور أثناء تسجيل فيديو.

5 اضغط على لإيقاف تسجيل الفيديو مؤقتًا. يمكنك استئناف التسجيل مجددًا عبر الضغط

على .

أو

اضغط على لإيقاف التسجيل. سيتم حفظ الفيديو تلقائيًا في المعرض.

بعد تسجيل فيديو

اضغط على الصورة المصغرة للفيديو على الشاشة لعرض آخر مقطع فيديو سجّلته.

اضغط لتحرير الفيديو.



اضغط لتسجيل فيديو آخر على الفور.



اضغط لفتح خيارات المشاركة المتوفرة (مثل الرسائل أو Bluetooth) للمشاركة.



اضغط لحذف الفيديو.



اضغط للوصول إلى الخيارات الإضافية.





اضغط لإضافة الفيديو إلى المفضلة



المعرض

يظهر تطبيق المعرض الصور ومقاطع الفيديو الموجودة في وحدة التخزين، بما في ذلك تلك التي التقطتها بواسطة تطبيق الكاميرا وتلك التي قمت بتنزيلها من الويب أو مواقع أخرى.

- 1 اضغط على  <  .
- 2 اضغط على ألبوم لفتحه وعرض محتوياته. (تظهر الصور وملفات الفيديو في الألبوم بالترتيب الزمني).
- 3 اضغط على صورة في ألبوم لعرضها.


ملاحظة

- قد تكون بعض تنسيقات الملفات غير مدعومة وفقاً للبرنامج المثبت.
- قد لا تعمل بعض الملفات بشكل صحيح بسبب الترميز.


عرض الصور

يعرض المعرض صورك ضمن مجلدات. عندما يقوم تطبيق، مثل البريد الإلكتروني، بحفظ صورة، يتم إنشاء مجلد download تلقائياً لاحتواء الصورة. وبطريقة مماثلة، يؤدي التقاط لقطة شاشة تلقائياً إلى إنشاء مجلد Screenshots. يتم عرض الصور بحسب تاريخ إنشائها. حدد صورة لعرضها بملء الشاشة. مرر إلى اليسار أو اليمين لعرض الصورة التالية أو السابقة.

تحرير الصور

عند عرض صورة، اضغط على  .

ضبط خلفية الشاشة

عند عرض صورة، اضغط على  > لضبط الصورة كخلفية شاشة أو تعيينها إلى اسم.

ملاحظة

- قد تكون بعض تنسيقات الملفات غير مدعومة وفقاً للبرنامج المثبت.
- إذا تجاوز الملف حجم الذاكرة المتاحة، فقد يحدث خطأ عند فتح الملفات.

التكبير والتصغير


استخدم إحدى الطرق التالية لتكبير صورة معينة:

- اضغط مرتين في أي مكان للتكبير.
- أبعد إصبعين عن بعضهما في أي مكان لتكبير الصورة. ضمّ إصبعين إلى بعضهما أو اضغط مرتين على الصورة لتصغيرها.

تشغيل فيديو

- 1 اضغط على  <  < .
- 2 حدد الفيديو الذي تريد مشاهدته.

خيارات الفيديو

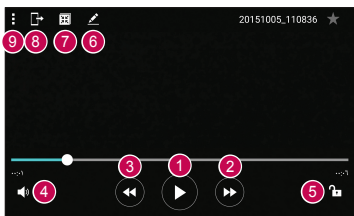


المس لاستئناف تشغيل الفيديو أو إيقاف تشغيله مؤقتًا.		1
المس باستمرار للتقديم السريع تدريجيًا. اضغط للتقديم السريع 10 ثواني.		2
المس باستمرار لإرجاع التشغيل تدريجيًا. اضغط للإرجاع 10 ثواني.		3
اضغط للتحكم بمستوى صوت الفيديو.		4
اضغط لقفّل/إلغاء قفل الشاشة.		5
اضغط لتعيين التأثيرات المتعددة.		6
اضغط لاستخدام QSlide لتطبيق الفيديو.		7
اضغط لمشاركة الفيديو باستخدام وظيفة SmartShare.		8
اضغط للوصول إلى الخيارات الإضافية.		9

ملاحظة

- عند تشغيل فيديو، مرّر الجهة اليمنى من الشاشة إلى الأعلى أو الأسفل لضبط مستوى الصوت.
- عند تشغيل فيديو، مرّر الجهة اليسرى من الشاشة إلى الأعلى أو الأسفل لضبط درجة السطوع.
- عند تشغيل فيديو، مرّر إصبعك من اليسار إلى اليمين (أو العكس) للتقديم أو الإرجاع بسرعة.

تحرير مقاطع الفيديو

اضغط على  لتحرير التأثيرات المتعددة.

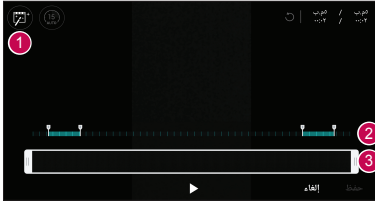

1 اضغط لتعيين موسيقى الخلفية أو العنوان أو المؤلف.

2 اضغط لضبط سرعة الفيديو.

3 اضغط لتحرير الإطار.

حذف الصور/ملفات الفيديو

استخدم إحدى الطرق التالية:

- في مجلد، اضغط على ، وحدد الصور/مقاطع الفيديو، ثم اضغط على حذف.
- عند عرض صورة، اضغط على .




البريد الإلكتروني

يمكنك استخدام تطبيق البريد الإلكتروني لقراءة رسائل البريد الإلكتروني من موفري خدمة غير Gmail. يدعم تطبيق البريد الإلكتروني أنواع الحسابات التالية: POP3 وIMAP وMicrosoft Exchange (لمستخدمي Enterprise) وغيرها.

• اضغط على  <  < .

إضافة حساب

في المرة الأولى التي تقوم فيها بفتح تطبيق البريد الإلكتروني، يفتح معالج الإعداد لمساعدتك في إضافة حساب بريد إلكتروني. يمكنك أيضاً إضافة حساب البريد الإلكتروني باستخدام تطبيق الإعدادات.




• اضغط على  <  < الإعدادات < .

العمل مع مجلدات الحسابات

• اضغط على  < عرض جميع المجلدات.

يتوفر في كل حساب مجلد صندوق واردة وهامة والرسائل المرسله والمسودات وعرض جميع المجلدات. قد تتوفر لديك مجلدات إضافية، ويتوقف ذلك على الميزات التي يعتمدها موفر خدمة الحسابات.

إنشاء بريد إلكتروني وإرساله

- 1 اضغط على .
- 2 أدخل عنواناً للمستلم المراد إرسال الرسالة إليه. أثناء قيامك بإدخال النص، تظهر العناوين المطابقة من قائمة الأسماء الخاصة بك. قم بفصل العناوين المتعددة بفواصل منقوطة.
- 3 اضغط على حقل **نسخة/نسخة مخفية** لإرسال نسخة أو نسخة مخفية إلى أسماء/عناوين بريد إلكتروني أخرى.
- 4 اضغط على حقل النص وأدخل الرسالة.
- 5 اضغط مطوئاً على حقل النص لتحرير الكلمات المحددة (عريض/مائل/مسطر/ملون).
- 6 اضغط على  لإرفاق الملف الذي تريد إرساله مع الرسالة.
- 7 اضغط على  لإرسال الرسالة.

تغيير الإعدادات العامة لبريد إلكتروني
• اضغط على **>** > الإعدادات > الإعدادات العامة.

حذف حساب بريد إلكتروني
• اضغط على **>** > الإعدادات > **>** إزالة الحساب > حدد الحساب الذي تريد حذفه > إزالة > نعم.

موسيقى

يتوفر في الهاتف مشغل موسيقى يتيح لك تشغيل جميع المسارات المفضلة لديك.


ملاحظة

- قد تكون بعض تنسيقات الملفات غير مدعومة وفقاً للبرنامج المثبت.
- إذا تجاوز الملف حجم الذاكرة المتاحة، فقد يحدث خطأ عند فتح الملفات.
- قد تخضع حقوق تأليف ونشر ملفات الموسيقى لحماية المعاهدات الدولية وقوانين حقوق النشر الوطنية. ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. تمنع القوانين الوطنية في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر. قبل تحميل الملف أو نسخه، يرجى التحقق من القوانين الوطنية للبلد المعني والمتعلقة باستخدام مثل هذه المواد.

تشغيل أغنية

- 1 اضغط على **○** < **⋮** < **🎵**.
- 2 اضغط على علامة التبويب **الأغاني**.
- 3 حدد الأغنية التي تريد تشغيلها.
- 4 تتوفر الخيارات التالية.

خيارات مشغل الموسيقى

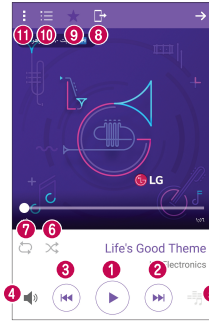

اضغط لإيقاف التشغيل مؤقتًا.	⏸	1
اضغط لاستئناف التشغيل.	▶	
اضغط للانتقال إلى المسار التالي في الألبوم أو قائمة التشغيل أو قائمة مزج المسارات. المس باستمرار للتقديم السريع.	⏭	2
اضغط لإعادة تشغيل المسار الحالي أو التخطي إلى المسار السابق في الألبوم أو قائمة التشغيل أو قائمة مزج المسارات. المس باستمرار لإرجاع التشغيل.	⏮	3
اضغط لضبط مستوى الصوت.	🔊	4
اضغط لتعيين التأثيرات الصوتية.	🔊	5
اضغط لتشغيل قائمة التشغيل الحالية في وضع مزج المسارات (يتم تشغيل المسارات في ترتيب عشوائي).	🔀	6
اضغط للتبديل بين تكرار كل الأغاني أو تكرار الأغنية الحالية أو إيقاف تشغيل التكرار.	🔄	7
اضغط لمشاركة الموسيقى باستخدام وظيفة SmartShare.	📁	8
اضغط لإضافة الأغنية إلى المفضلة.	★	9
اضغط لفتح قائمة التشغيل الحالية.	☰	10


الساعة

يوفر لك تطبيق الساعة إمكانية الوصول إلى وظائف التنبيهات والمؤقت والساعة العالمية وساعة الإيقاف. يمكنك الوصول إلى هذه الوظائف عبر الضغط على علامات التبويب في أعلى الشاشة أو التمرير أفقيًا عبر الشاشة.

• اضغط على  <  < .

تنبيهات

يسمح لك تطبيق التنبيهات بضبط تلك الأخيرة.

- 1 اضغط على علامة التبويب **تنبيهات**.
- 2 اضغط  لإضافة تنبيه جديد.
- 3 اضبط الإعدادات كما تقتضي الحاجة واضغط على **حفظ**.

ملاحظة

• يمكنك أيضًا الضغط على تنبيه لتحريره.

المؤقت

يمكن أن تعلمك علامة التبويب المؤقت بإصدار إشارة صوتية بعد مرور فترة زمنية محددة.

- 1 اضغط على علامة التبويب **المؤقت**.
- 2 عيّن الوقت المطلوب على المؤقت.
- 3 اضغط على **بدء** لتشغيل المؤقت.
- 4 اضغط على **إيقاف** لإيقاف تشغيل المؤقت.

الساعة العالمية

تسمح لك علامة التبويب الساعة العالمية بالتحقق بسهولة من الوقت الحالي في مدن أخرى حول العالم.

- 1 اضغط على علامة التبويب **الساعة العالمية**.
- 2 اضغط على  وحدد المدينة المطلوبة.

ساعة الإيقاف

تسمح لك علامة التبويب ساعة الإيقاف باستخدام الهاتف كساعة إيقاف.

- 1 اضغط على علامة التبويب ساعة الإيقاف.
- 2 اضغط على بدء لبدء تشغيل ساعة الإيقاف.
- 3 اضغط على إيقاف لإيقاف ساعة الإيقاف.

الحاسبة

يسمح لك تطبيق الحاسبة بإجراء العمليات الحسابية باستخدام حاسبة عادية أو علمية.

- 1 اضغط على $\odot < \odot \odot < \odot \oplus \ominus$.
- 2 اضغط على أزرار الأرقام لإدخال الأرقام.
- 3 بالنسبة للعمليات الحسابية البسيطة، اضغط على الوظيفة التي تريدها لإجراء العمليات التالية (+ أو - أو \times أو \div)، يتبعها =.

ملاحظة

بالنسبة إلى العمليات الحسابية الأكثر تعقيدًا، اضغط على \vdots .

التقويم

يسمح لك تطبيق التقويم بتعقب جدول الأحداث.

- 1 اضغط على $\odot < \odot \odot < \text{التمس}$.
- 2 اضغط على التاريخ الذي تريد إضافة حدث إليه. ثم اضغط على \oplus .


مسجّل الصوت

يسجّل تطبيق مسجّل الصوت ملفات صوتية لتستخدمها بطرق مختلفة.

تسجيل ملف صوتي أو صوت

- 1 اضغط على  <  < .
- 2 اضغط على  لبدء التسجيل.
- 3 اضغط على  لإنهاء التسجيل.
- 4 اضغط على  للاستماع إلى التسجيل.

ملاحظة

• اضغط على  للوصول إلى التسجيلات. يمكنك الاستماع إلى التسجيلات المحفوظة.

تنزيلات

استخدم هذا التطبيق لمشاهدة الملفات التي تم تنزيلها عبر التطبيقات.

• اضغط على  <  < .

راديو FM

يأتي الهاتف مزودًا براديو FM مضمّن لتتمكّن من ضبط محطاتك المفضّلة والاستماع إليها أثناء التنقل.

• اضغط على  <  < .

ملاحظة

• عليك توصيل سماعات الأذن لاستخدامها كهوائي.

LG Backup

حول النسخ الاحتياطي لبيانات الجهاز واستعادتها

ننصحك بإنشاء ملف نسخة احتياطية للبيانات بشكل دوري وحفظها في وحدة التخزين الداخلية، وخاصة قبل تحديث أي برنامج. حيث قد يتيح لك الاحتفاظ بملف نسخ احتياطي حديث على ذاكرة التخزين استعادة بيانات الجهاز في حالة فقدانه أو سرقة أو تلفه لسبب غير متوقع. إن تطبيق LG Backup هذا معتمد في ما بين هواتف LG الذكية والأجهزة اللوحية وبرامج أو إصدارات نظام تشغيل أخرى. لذا، عند شراء هواتف LG الذكية والأجهزة اللوحية الجديدة، يمكنك إجراء نسخ احتياطي لبيانات الجهاز الحالي إلى الجهاز الجديد.

في حال كنت تملك تطبيق LG Backup تم تحميله مسبقاً على هاتفك الذكي وجهازك اللوحي، يمكنك إذاً نسخ معظم البيانات احتياطياً واستعادتها بما في ذلك التطبيقات التي تم تنزيلها والمثبتة مسبقاً والإشارات المرجعية وإدخالات التقويم والأسماء وإعدادات الشاشة الرئيسية وإعدادات النظام.



تحذير

- للحماية ضد إيقاف التشغيل غير المتوقع أثناء عمليات النسخ الاحتياطي أو الاستعادة بسبب انخفاض الطاقة في البطارية، ينبغي المحافظة على البطارية مشحونة بالكامل.



ملاحظة

- يتم حذف كل الملفات المخزنة على الجهاز قبل استعادة ملف النسخ الاحتياطي. احرص على نسخ ملف النسخ الاحتياطي على موقع آخر.
- تجدر الإشارة إلى أن محتويات ملف النسخ الاحتياطي ستحل محل بيانات الجهاز.

لنسخ بيانات الهاتف احتياطياً

1 اضغط على  <  < .

2 حدد الخيارات المطلوبة.

- نسخ البيانات بين الأجهزة – لنسخ البيانات من الجهاز القديم إلى الجهاز الجديد.
- النسخ الاحتياطي والاستعادة – لنسخ البيانات احتياطياً أو استعادتها.

تطبيقات Google

توفر Google تطبيقات ترفيهية وتطبيقات شبكة التواصل الاجتماعي وتطبيقات العمل. قد يُطلب منك حساب Google للوصول إلى بعض التطبيقات. لعرض المزيد من المعلومات حول التطبيق، اطّلع على قائمة التعليمات في كل تطبيق.



• قد لا تتوفر بعض التطبيقات وفقاً للمنطقة أو موقر الخدمة.

Google

ابحث بسرعة عن عناصر على الإنترنت أو الجهاز.

Chrome

ابحث عن المعلومات وتصفح صفحات ويب.

Gmail

أرسل رسائل بريد إلكتروني أو استلمها عبر خدمة Google Mail.

خرائط

اعثر على موقعك في الخريطة وابحث عن مواقع واعرض معلومات الموقع لأمكنة متنوعة.

YouTube

شاهد مقاطع فيديو أو أنشئها وشاركها مع الآخرين.

Drive

خزّن المحتويات على cloud واستخدمها أينما كنت وشاركها مع الآخرين.

موسيقى Play

تعرف على الموسيقى واستمع إليها وشاركها على جهازك.

أفلام و تليفزيون Play

شاهد مقاطع الفيديو المخزّنة على جهازك وقم بتنزيل محتويات متنوّعة للمشاهدة من متجر Play.

Hangouts

تحدّث مع أصدقائك بشكل فردي أو ضمن مجموعات واستخدم الصور والرموز التعبيرية ومكالمات الفيديو أثناء المحادثة.

صور

قم بإدارة الصور والألبومات ومقاطع الفيديو التي تم حفظها على الجهاز وتحميلها إلى Google+.

إعدادات Google

قم بتكوين إعدادات لبعض الميزات التي يوفرها Google.

البحث الصوتي

ابحث بسرعة عن عناصر عبر قول كلمة أو جملة أساسية.

الإعدادات


الوصول إلى قائمة الإعدادات

يُتيح لك تطبيق الإعدادات تخصيص هاتفك.

فتح تطبيق الإعدادات

- اضغط على  < المس باستمرار  < إعدادات النظام.
- أو
- اضغط على  <  < .

إعدادات العرض


- اضغط على  لتبديل وضع العرض.
- عرض القائمة – مرر للأعلى والأسفل عبر القائمة.
- عرض التبويب – مرر لليساار أو اليمين أو اضغط على علامة التبويب التي تريدها.

ملاحظة

- تستند إرشادات تنفيذ المهام في هذا الدليل إلى إعداد العرض الافتراضي.

إعدادات الشبكات

Wi-Fi

- يمكنك الوصول إلى الإنترنت بسرعة عالية ضمن تغطية نقطة الوصول اللاسلكية (AP).
- على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < **Wi-Fi**.
- 1 اضغط على  لتشغيل Wi-Fi وبدء البحث عن شبكات Wi-Fi المتوفرة.
- 2 اضغط على شبكة للاتصال بها.
- إذا كانت الشبكة محمية برمز قفل، ستحتاج إلى إدخال مفتاح حماية أو كلمة مرور.
- 3 يعرض شريط الحالة رموز تشير إلى حالة Wi-Fi.

ملاحظة

- إذا كنت متواجدًا خارج منطقة تغطية شبكة Wi-Fi أو عيّنت Wi-Fi إلى إيقاف التشغيل، قد يتصل الجهاز تلقائيًا بالويب باستخدام بيانات المحمول، الأمر الذي يؤدي إلى فرض رسوم بيانات.

Wi-Fi Direct

يوفر Wi-Fi Direct اتصالاً مباشراً بين الأجهزة الممكنة لاستخدام Wi-Fi من دون الحاجة إلى نقطة وصول.

• اضغط على  > خيارات Wi-Fi المتقدمة < Wi-Fi Direct.

ملاحظة

• في هذه القائمة، يكون الجهاز مرئياً لأجهزة Wi-Fi Direct الأخرى المرئية والقريبة.

Bluetooth

إن Bluetooth عبارة عن تقنية اتصالات قصيرة المدى تسمح لك بالاتصال لاسلكياً بعدد من أجهزة Bluetooth، مثل سماعات الرأس والأجهزة اللايوية التي تُستخدم في السيارات والأجهزة المحمولة المزودة بتقنية Bluetooth وأجهزة الكمبيوتر والطابعات والأجهزة اللاسلكية.

ملاحظة

- لا تتحمل شركة LG مسؤولية فقدان البيانات التي يتم إرسالها أو استقبالها عبر ميزة Bluetooth أو اعتراضها أو إساءة استخدامها.
- تأكد دائماً من مشاركة البيانات وتلقيها من أجهزة موثوق بها ومحمية بطريقة صحيحة.
- وفي حالة وجود عوائق بين الأجهزة، قد تقل مسافة التشغيل.
- قد تكون بعض الأجهزة غير متوافقة مع الجهاز لديك وبخاصة تلك الأجهزة التي لم تختبرها Bluetooth SIG أو لم تعتمد عليها.

إقران الهاتف بجهاز Bluetooth آخر

- 1 على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < Bluetooth.
- 2 اضغط على  لتشغيل Bluetooth وبدء البحث عن أجهزة Bluetooth المتوفرة. إذا أردت أيضاً اكتشاف الأجهزة المرئية في النطاق، اضغط على بحث.
- 3 اختر الجهاز الذي تريد الاقتران به من القائمة. بعد نجاح عملية الاقتران، يتصل هاتفك بالجهاز الآخر.

ملاحظة

- إقران جهازين مزوّدين بتقنية Bluetooth هو عملية يتم إجراؤها مرة واحدة. بعد انتهاء الاقتران، تستمر الأجهزة بالتعرف على علاقة الشراكة بينها وتبادل المعلومات.
- يرجى مراجعة الوثائق المرفقة بجهاز Bluetooth للحصول على معلومات حول وضع الاقتران ورمز المرور (نموذجياً 0000، أربعة أصفار).

إرسال البيانات عبر Bluetooth

- 1 حدد ملفًا أو عنصرًا مثل اسم أو ملف وسائط.
- 2 حدد خيارًا لإرسال البيانات عبر Bluetooth.
- 3 البحث عن جهاز مزود بتقنية Bluetooth والاقتران به.

ملاحظة


• نظرًا لاختلاف مواصفات الأجهزة الأخرى المتوافقة مع تقنية Bluetooth وميزاتها، قد تختلف شاشة العرض والعمليات وقد يكون إجراء بعض الوظائف مثل النقل أو التبادل غير ممكن مع كل الأجهزة المتوافقة مع تقنية Bluetooth.

تلقي البيانات عبر Bluetooth

- 1 على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < Bluetooth.
- 2 اضغط على  لتشغيل Bluetooth.
- 3 ستلقى طلبًا لقبول محاولة الاقتران من الجهاز المرسل. احرص على تحديد قبول.

بيانات الهاتف المحمول

لعرض استخدام البيانات وحدّ استخدام بيانات الهاتف المحمول.

• اضغط على  لتشغيل بيانات الهاتف المحمول أو إيقاف تشغيله. يتيح لك ذلك إدارة استخدام بيانات المحمول. يمكنك استخدام اتصال شبكة Wi-Fi للبيانات بدلًا من ذلك.

إعدادات المكالمات

تتيح لك تكوين إعدادات متنوّعة للمكالمات.

على شاشة الإعدادات، اضغط على علامة التبويب **الشبكات** < إعدادات المكالمات.

- **البريد الصوتي** – يسمح لك هذا الخيار بتحديد خدمة البريد الصوتي الخاصة بشركة المحمول.
- **إظهار المكالمات الصوتية أثناء التواجد في التطبيق** – لعرض نافذة منبثقة للمكالمة الواردة عند استخدام تطبيق.
- **أرقام الاتصال الثابت** – يسمح لك هذا الخيار بإدارة قائمة بالأرقام التي يمكن الاتصال بها من هاتفك وتجميعها. ستحتاج إلى رمز PIN2 الذي يوفره المشغل. إذا تم تنشيطه، فستتمكن من الاتصال بالأرقام المدرجة في قائمة أرقام الاتصال الثابت فقط من هاتفك.
- **رفض المكالمة** – يسمح لك هذا الخيار بتعيين وظيفة رفض المكالمة.
- **الرفض برسالة** – عندما تريد رفض مكالمة، يمكنك إرسال رسالة سريعة باستخدام هذه الوظيفة. ويعتبر هذا الأمر مفيداً إذا أردت رفض مكالمة أثناء اجتماع.
- **إعادة توجيه المكالمة** – يسمح لك هذا الخيار باختيار متى تريد إعادة توجيه المكالمات.
- **رد آلي** – لتعيين الوقت قبل أن يجيب جهاز لاسلكي متصل على مكالمة واردة تلقائياً.
- **اهتزاز عند الاتصال** – ليهتز الهاتف عندما يردّ الطرف الآخر على المكالمة.
- **إيقاف الضوضاء** – يقوم بإيقاف الضوضاء في خلفية المكالمة من جهتك.
- **نقاء الصوت** – يسمح بتحسين نقاء الصوت لتتمكن من السماع بشكل أوضح.
- **حفظ الأرقام غير المعروفة** – يسمح لك هذا الخيار بإضافة أرقام غير معروفة إلى الأسماء بعد مكالمة.
- **مفتاح التشغيل يُنهى المكالمة** – يسمح لك هذا الخيار باستخدام مفتاح التشغيل لإنهاء المكالمات.
- **الرد على مكالمة واردة** – أثناء مكالمة واردة، ضع الهاتف على أذنك للرد على المكالمة الواردة.
- **كتم صوت المكالمات الواردة** – يتيح لك هذا الخيار قلب الهاتف لكتم صوت المكالمة الواردة.
- **حظر المكالمات** – لحظر المكالمات الواردة أو الصادرة أو الدولية.
- **مدة المكالمة** – يسمح لك هذا الخيار بعرض مدة المكالمة لأنواع مختلفة من المكالمات.
- **إعدادات إضافية** – يتيح لك هذا الخيار تغيير الإعدادات التالية مثل **هوية المتصل** أو **انتظار المكالمات** أو غيرها.

هذا الهاتف المحمول ممكّن لاستخدام تقنية NFC. تشير NFC (الاتصالات القريبة المدى) إلى تقنية اتصال تسمح بالاتصال ذي الاتجاهين بين الأجهزة الإلكترونية. وهي تعمل على مسافة بضعة سنتيمترات. يمكنك مشاركة المحتوى مع علامة NFC أو جهاز آخر يدعم NFC بمجرد جعل جهازك يلمس العلامة. إذا جعلت الجهاز يلمس علامة NFC، ستظهر محتويات العلامة على جهازك.

على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المشاركة والاتصال > NFC.

1 اضغط على  لتشغيل تقنية NFC.

2 يتيح لك هذا الخيار إرسال ملفات واستلامها ببساطة عبر جمع هاتفك وجهاز متوافق البيانات آخر (عادةً ضمن مسافة 20 ملم بينهما) عند نقطة تلامس تقنية NFC.

• **الضغط والدفع** – عند تشغيل تقنية NFC، يمكنك استخدام ميزة الضغط والدفع بمجرد جعل الهاتف يتلامس مع قارئ عند صندوق الدفع. إذا كان الهاتف لا يملك تطبيقًا افتراضيًا، فيمكنك تصفح متجر Google Play لتطبيقات دفع أخرى.

Android Beam

عندما تكون هذه الميزة قيد التشغيل، يمكنك إرسال محتوى تطبيق إلى جهاز آخر ممكّن لاستخدام تقنية NFC عبر إبقاء الأجهزة قريبة من بعضها. ما عليك سوى وضع الجهازين بالقرب من بعضهما (نموذجيًا ظهرًا إلى ظهر) ثم اضغط على الشاشة. يحدد التطبيق ما يتم إرساله.

على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المشاركة والاتصال >

Android Beam

1 اضغط على  لتشغيل Android Beam (تشغيل Android Beam على كل من الجهازين).

2 حدد الشاشة أو الملفات التي تريد مشاركتها (على سبيل المثال، الصور في المعرض).

3 ضع الجهازين بالقرب من بعضهما.

4 اضغط على الشاشة التي تريد إرسالها بعد تقليص الشاشة (يحدد كل تطبيق ما تم إرساله أو استلامه).

برنامج SmartShare Beam

يتيح لك برنامج SmartShare Beam إرسال ملفات واستلامها من وإلى هواتف LG وأجهزتها اللوحية بسرعة.

استلام بيانات عبر SmartShare Beam

- 1 على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المشاركة والاتصال > برنامج SmartShare Beam.
- 2 اضغط على  لتشغيل SmartShare Beam. سيتم تشغيل Wi-Fi تلقائياً على الهاتف بالتالي يصبح جاهزاً لاستلام الملفات.

إرسال بيانات عبر SmartShare Beam

- 1 حدد ملفاً أو عنصراً مثل ملف وسائط.
- 2 حدد خياراً لإرسال البيانات عبر SmartShare Beam.
- 3 اختر الجهاز الذي تريد الاقتتران به من القائمة.


خادم الوسائط

يتيح لك مشاركة محتوى وسائط الهاتف مع أجهزة قريبة متوافقة مع DLNA. على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المشاركة والاتصال > خادم الوسائط.

• قم بتمكين خيار مشاركة المحتوى للسماح للأجهزة القريبة بالوصول إلى محتواك.

Miracast

يتيح لك هذا الخيار عكس شاشة الهاتف وصوته لاسلكياً على Miracast dongle أو التلفزيون. على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المشاركة والاتصال > Miracast.

• اضغط على  لتشغيل Miracast وبدء مسح أجهزة Miracast المتوفرة. يعرض هاتفك كافة الأجهزة التي يمكنها إسقاط محتواك عبر Miracast.

LG AirDrive

تتيح لك هذه الوظيفة الاتصال بجهاز كمبيوتر شخصي لإدارة هاتفك. قم بإعداد LG Bridge من موقع LG Electronics الإلكتروني على جهاز كمبيوتر شخصي قبل الاستخدام. عند تسجيل الدخول إلى حساب LG نفسه من الهاتف وجهاز الكمبيوتر الشخصي، يمكنك استخدام وظيفة LG AirDrive.

- 1 سجّل الدخول إلى حساب LG نفسه من الأجهزة المحمولة وجهاز كمبيوتر شخصي.
- 2 على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المشاركة والاتصال > LG AirDrive.
- 3 قم بتشغيل تطبيق LG Bridge على جهاز الكمبيوتر الشخصي وحدد LG AirDrive.


ملاحظة

• إذا احتجت لإعداد LG Bridge، يرجى مراجعة قسم LG Bridge في الأساسيات.

طباعة

للسماح لك بطباعة محتوى بعض الشاشات (مثل صفحات الويب المعروضة في متصفح Chrome) باستخدام طابعة متصلة بشبكة Wi-Fi نفسها كجهاز Android. على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المشاركة والاتصال > طباعة.

اتصال USB

- يُتيح لك هذا الخيار مشاركة اتصال الإنترنت مع الكمبيوتر بواسطة كابل USB.
- 1 قم بتوصيل هاتفك بجهاز الكمبيوتر الشخصي باستخدام كابل USB.
 - 2 على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < الربط.
 - 3 اضغط على  لتشغيل اتصال USB.

نقطة Wi-Fi المحمولة

يمكنك أيضًا استخدام الهاتف لتوفير اتصال ذي نطاق ترددي عريض للجهاز المحمول. أنشئ نقطة اتصال فعالة وشارك اتصالك.

على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < الربط.

- 1 اضغط على  لتشغيل نقطة Wi-Fi المحمولة.
- 2 اضغط على قم بضبط نقطة الاتصال Wi-Fi لتغيير SSID ونوع الحماية وكلمة المرور وخيارات أخرى للنقطة المحمولة.

ربط Bluetooth

يتيح لك هذا الخيار الاتصال بأجهزة أخرى عبر Bluetooth.

• على شاشة الإعدادات، اضغط على علامة التبويب الشبكات < الربط.

• اضغط على  لتشغيل ربط Bluetooth ومشاركة اتصالاتك عبر ربط Bluetooth.

وضع الرحلات الجوية

يتيح لك هذا الوضع استخدام عدد كبير من ميزات هاتفك، مثل الألعاب والموسيقى عندما تكون في مكان يُمنع فيه إجراء مكالمات أو تلقيها فضلاً عن تلقي البيانات وإرسالها. عند ضبط هاتفك على وضع الرحلات الجوية، لا يمكنك إجراء مكالمات أو تلقيها، كما لا يمكنك الوصول إلى البيانات عبر الإنترنت.

في شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المزيد < وضع الرحلات الجوية.

شبكات الهاتف

تتيح لك هذه القائمة تكوين إعدادات مختلفة لشبكة الهاتف المحمول مثل بيانات الهاتف المحمول وبيانات التجوال وغيرها.

في شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المزيد < شبكات الهاتف.

VPN

يمكنك من هاتفك إضافة شبكات خاصة ظاهرية (VPNs) وإعدادها وإدارتها. تسمح لك هذه الشبكات بالاتصال بالموارد الموجودة داخل شبكة محلية محمية، مثل شبكة شركتك، والوصول إليها.

في شاشة الإعدادات، اضغط على علامة التبويب الشبكات < المزيد < VPN.

إعدادات الصوت والإشعار

- تتيح لك تغيير إعدادات صوتية متنوّعة على الجهاز.
- على شاشة الإعدادات، اضغط على علامة التبويب الصوت و الإشعار.
- **أوضاع الصوت** – يتيح لك هذا الخيار تعيين وضع الصوت الخاص بالهاتف.
- **مستوى الصوت** – يسمح لك هذا الخيار بضبط إعدادات مستوى صوت الهاتف لملاءمة احتياجاتك وبيئتك.
- **نغمة رنين** – يتيح لك هذا الخيار تعيين نغمات رنين للمكالمات. يمكنك أيضًا إضافة نغمات رنين أو حذفها.
- **معرفة الرنين** – يتيح لك هذا الخيار إنشاء نغمات رنين استنادًا إلى رقم هاتف المكالمات الواردة.
- **قوة الاهتزاز** – يتيح لك هذا الخيار تعيين قوة اهتزاز الهاتف عند تلقي مكالمات وإشعارات وعند الضغط.
- **صوت مع اهتزاز** – يتيح لك هذا الخيار تعيين الهاتف على الاهتزاز ليهتّز ويصدر نغمة رنين عند تلقّيك مكالمات.
- **نوع الاهتزاز** – يتيح لك هذا الخيار اختيار نوع الاهتزاز.
- **عدم الإزعاج** – يتيح لك هذا الخيار تعيين جدول يضمّ الأوقات التي تريد فيها منع تلقي الإشعارات. يمكنك ضبط السماح بتشغيل بعض الميزات عند ضبط الأولوية فقط.
- **تأمين الشاشة** – يتيح لك هذا الخيار اختيار ما إذا كنت تريد عرض الإشعارات أو إخفائها على شاشة القفل.
- **تطبيقات** – يتيح لك هذا الخيار تعيين إشعارات لتطبيقات فردية ومنعها عرض الإشعارات وإعداد الأولوية.
- **Hi-Fi DAC** **سعة ٣٢ بت** – يتيح لك تمكين هذه الميزة زيادة جودة الصوت مع سماعات الرأس المعتمدة.
- **صوت الإشعارات** – يتيح لك هذا الخيار تعيين صوت للإشعار. يمكنك أيضًا إضافة أصوات للإشعارات أو حذفها.
- **الاهتزاز عند الضغط** – يتيح لك تمكين هذا الخيار اهتزاز الهاتف عند الضغط على أزرار اللمس في الشاشة الرئيسية وأثناء عمليات واجهة الاستخدام الأخرى.
- **تأثيرات الصوت** – تسمح لك هذه القائمة بتحديد ما إذا كنت تريد سماع نغمات عند الضغط على الأرقام على لوحة الاتصال وعند تحديد خيارات على الشاشة والمزيد غيرها.
- **إشعارات الرسائل/المكالمات الصوتية** – يتيح هذا الخيار لجهازك قراءة المكالمات الواردة وأحداث الرسائل تلقائيًا.

إعدادات الشاشة

الشاشة الثانوية

على شاشة الإعدادات، اضغط على علامة التبويب إعدادات الشاشة < الشاشة الثانوية. إذا أردت المزيد من المعلومات، يرجى الاطلاع على الشاشة الثانوية في الميزات التي ستعشقها.

الشاشة الرئيسية

تتيح لك تعيين إعدادات الشاشة الرئيسية.

على شاشة الإعدادات، اضغط على علامة التبويب إعدادات الشاشة < الشاشة الرئيسية.

• **تحديد الشاشة الرئيسية** – لتحديد السمة المطلوبة للشاشة الرئيسية.

• **Smart Bulletin** – يتيح لك تمكين هذا الخيار استخدام شاشة رئيسية إضافية تعرض معلومات مخصصة.

• **سمة** – لتعيين سمة الشاشة على جهازك. يمكنك تنزيل سمات جديدة من

LG SmartWorld.

• **خلفية الشاشة** – لضبط خلفية الشاشة التي تريد استخدامها على الشاشة الرئيسية.

• **تأثيرات الشاشة** – يتيح لك هذا الخيار تحديد نوع التأثير المطلوب عرضه عند التمرير من مساحة محيطية للشاشة الرئيسية إلى التالية.

• **السماح بالتكرار الحلقي للشاشة الرئيسية** – يتيح لك تمكين هذا الخيار تمرير الشاشة الرئيسية بشكل مستمر (الرجوع إلى الشاشة الأولى بعد الشاشة الأخيرة).

• **مساعدة** – لعرض معلومات حول الشاشة الرئيسية.

تأمين الشاشة

تتيح لك تعيين إعدادات تأمين الشاشة.

على شاشة الإعدادات، اضغط على علامة التبويب إعدادات الشاشة < تأمين الشاشة.

• اختر قفل الشاشة – يتيح لك هذا الخيار تعيين نوع قفل الشاشة لحماية هاتفك.

• **Smart Lock** – يسمح لك بإبقاء الهاتف غير مقفل لدى اقترانه بجهاز أو في مكان موثوق به. إذا أردت الحصول على المزيد من المعلومات، يرجى مراجعة قسم **Smart Lock** في الأساسيات.

• تأثيرات الشاشة – لتعيين التأثير المستخدم عند تمرير شاشة القفل.

• خلفية الشاشة – لتحديد خلفية الشاشة المطلوب عرضها على شاشة القفل.

• الساعة – حدد وضع عرض الساعة لعرضها على شاشة القفل.

• اختصارات – يسمح لك هذا الخيار باختيار الاختصارات المتوفرة على شاشة القفل.

• رسوم حالة الطقس – يتيح لك هذا الخيار عرض رسوم حالة الطقس في موقعك الحالي على شاشة القفل.

• معلومات الاتصال للهاتف المفقود – يسمح لك هذا الخيار بعرض معلومات المالك على شاشة القفل في حال فقدان الهاتف.

• مؤقت الإغلاق – يتيح لك هذا الخيار تعيين مدة الوقت قبل أن تقفل الشاشة تلقائيًا بعد انقضاء مهلة الشاشة.

• يقفل زر الطاقة على الفور – ضع علامة اختيار على هذا الخيار لإقفال الشاشة على الفور عند الضغط على مفتاح الطاقة/الإقفال. يمنع هذا الإعداد تعيين إعداد مؤقت القفل.

أزرار اللمس في الشاشة الرئيسية

لضبط أزرار اللمس في الشاشة الرئيسية التي تظهر في أسفل كل الشاشات. لاختيار الأزرار التي تريدها أن تظهر وتحديد موقعها على الشريط وشكلها.

على شاشة الإعدادات، اضغط على علامة التبويب إعدادات الشاشة < أزرار اللمس في الشاشة الرئيسية.

المزيد من إعدادات الشاشة

- يتيح لك هذا الخيار تعيين إعدادات أخرى للشاشة.
- على شاشة الإعدادات، اضغط على علامة التبويب إعدادات الشاشة.
- نوع الخط – لاختيار نوع الخط المطلوب.
- حجم الخط – لاختيار حجم الخط المطلوب.
- السطوع – لضبط سطوع الشاشة باستخدام شريط التمرير.
- تدوير الشاشة تلقائياً – يتيح تعيين هذا الخيار تبديل اتجاه الشاشة تلقائياً عند تدوير الهاتف.
- مهلة الشاشة – يسمح هذا الخيار بضبط الفترة الزمنية الفاصلة قبل إيقاف تشغيل الشاشة تلقائياً.
- حلم اليقظة – لتحديد شاشة التوقف لعرضها عندما يكون الهاتف في وضع السكون أثناء وضعه على قاعدة الإرساء و/أو الشحن.
- معايرة استشعار الحركة – يسمح لك هذا الخيار بتحسين دقة إمالة جهاز الاستشعار وسرعته.

إعدادات عامة

اللغة ولوحة المفاتيح

- لتغيير إعدادات إدخال النص.
- حدد لغة للكتابة على هاتفك ولتكوين لوحة المفاتيح التي تظهر على الشاشة، بما في ذلك الكلمات التي أضفتها إلى القاموس.
- على شاشة الإعدادات، اضغط على علامة التبويب عامة < اللغة ولوحة المفاتيح.
- اللغة – لاختيار لغة لاستخدامها على الهاتف.
- لوحة المفاتيح الحالية – لتحديد نوع لوحة المفاتيح الأخرى.
- لوحة مفاتيح LG – لتغيير إعدادات لوحة مفاتيح LG.
- الكتابة بالصوت من Google – يتيح لك تمكين هذا الخيار تحديد الكتابة بالصوت من Google لإدخال البيانات. اضغط على الرمز إعدادات لتغيير إعدادات الصوت من Google.
- تحويل النص إلى الكلام – اضغط لضبط المحرك المفضل أو الإعدادات العامة لتحويل النص إلى الكلام.
- سرعة المؤشر – اضبط سرعة المؤشر.
- عكس الأزرار – عكس أزرار الفأرة لاستخدام الرز الأساسي لجهة اليمين.

الموقع

قم بتنشغيل خدمة تحديد الموقع، وسيحدد الهاتف موقعك التقريبي باستخدام Wi-Fi وشبكات الجهاز المحمول. عند تحديد هذا الخيار، يتم سؤالك إذا كنت توافق على السماح لـ Google استخدام الموقع عند توفير هذه الخدمات.

على شاشة الإعدادات، اضغط على علامة التبويب عامة < الموقع.

- **الوضع** – لضبط كيفية تحديد معلومات موقعك الحالي.
- **مواقعي** – يتيح لك تمكين هذا الخيار تحديد موقع منزلك لـ smart settings.
- **طاقة منخفضة لتقدير الموقع** – يتيح لك تمكين هذا الخيار استخدام تسريع الأجهزة.
- **الكاميرا** – يتيح لك تمكين هذا الخيار وضع علامة على الصور أو مقاطع الفيديو مع المواقع التي التقطت فيها.
- **سجل المواقع في Google** – يتيح لك هذا الخيار اختيار إعدادات معلومات الموقع كما يتم الوصول إليها من Google ومنتجاته.

الحسابات والمزامنة

تتيح لك هذه القائمة إضافة حسابات Google والحسابات الأخرى المعتمدة وإزالتها وإدارتها. كما يمكنك استخدام هذه الإعدادات للتحكم بالطريقة التي ترسل بها كل التطبيقات البيانات وتلقاها وتجري مزامنة لها وما إذا كنت تجري ذلك بحسب جداولها الخاصة، وما إذا كان باستطاعة كل التطبيقات مزامنة بيانات المستخدم تلقائيًا.

كما قد يكون للتطبيقات Gmail™ والتقويم والتطبيقات الأخرى إعدادات خاصة بها للتحكم في كيفية مزامنة البيانات؛ راجع الأقسام حول تلك التطبيقات لمعرفة التفاصيل.

على شاشة الإعدادات، اضغط على علامة التبويب عامة < الحسابات والمزامنة.

- **مزامنة البيانات تلقائياً** – يتيح لك تمكين هذا الخيار مزامنة كافة الحسابات التي أضفتها إلى هاتفك تلقائياً.
- **الحسابات** – لعرض كافة الحسابات التي أضفتها. اضغط على واحد لعرضه و/أو إدارته.
- **إضافة حساب** – اضغط لإضافة حساب جديد.

Cloud

يسمح لك هذا الخيار بإضافة حساب Cloud لاستخدام خدمة Cloud بسرعة وسهولة. على شاشة الإعدادات، اضغط على علامة التبويب عامة < Cloud.

المستخدمون

أضيف مستخدمًا لمشاركة الهاتف مع أشخاص آخرين. يمكن لكل مستخدم أن يحصل على تطبيقاته ومحتوياته الخاصة في مساحة خاصة. يُطلب الإعداد الأولي للمستخدمين الجدد ليتمكنوا من استخدام الهاتف.

على شاشة الإعدادات، اضغط على علامة التبويب عامة < المستخدمون.

• إضافة مستخدم – لإضافة مستخدم جديد للجهاز وتكوينه.

إمكانية الوصول

استخدم إعدادات إمكانية الوصول لتكوين أي وظائف إضافية خاصة بإمكانية الوصول فمت بتثبيتها على هاتفك.

على شاشة الإعدادات، اضغط على علامة التبويب عامة < إمكانية الوصول.

• الرؤية – لتعيين خيارات للأشخاص الضعيفي البصر.

- **TalkBack** – يتيح لك هذا الخيار إعداد وظيفة TalkBack التي تساعد الأشخاص الضعيفي البصر عن طريق توفير تعليقات صوتية.

- إشعارات الرسائل/المكالمات الصوتية – يتيح لك تمكين هذا الخيار سماع التنبيهات الكلامية التلقائية للمكالمات والرسائل الواردة.

- ظلال الشاشة – يتيح لك تمكين هذا الخيار تعيين تباين أعمق للشاشة.

- حجم الخط – لضبط حجم الخط.

- التكبير/التصغير باللمس – تسمح لك بالتكبير والتصغير من خلال النقر ثلاث مرات على الشاشة.

- عكس لون الشاشة – يتيح لك هذا الخيار عكس ألوان الشاشة والمحتوى.

- ضبط لون الشاشة – لضبط ألوان الشاشة والمحتوى.

- مفتاح التشغيل يُنهي المكالمة – يتيح لك تمكين هذا الخيار إنهاء المكالمات الصوتية بالضغط على مفتاح الطاقة/القفل.

• سماع – لتعيين خيارات للأشخاص الضعيفي السمع.

- الشرح – يسمح لك هذا الخيار بتخصيص إعدادات الشرح لمن يعاني ضعفًا في السمع.

- تنبيهات الفلاش – يتيح لك تمكين هذا الخيار تعيين الفلاش ليومض عند تلقي مكالمات واردة وصدور إشعارات.

- إيقاف تشغيل جميع الأصوات – يتيح لك تمكين هذا الخيار إيقاف تشغيل كل أصوات الهاتف.

- نوع الصوت – لضبط نوع الصوت.

- ضبط اتزان الصوت – لضبط مسار الصوت. حرّك المفتاح المنزلق على شريط التمرير لتعيينه.

- الإعاقة الحركية والصعوبات المعرفية – لتعيين خيارات للأشخاص ذوي المهارات الحركية الضعيفة.
- لمس وقت التعليق – لتعيين لمس وقت التعليق.
- **Touch assistant** – لعرض لوحة لمس مع الوصول السهل إلى الإجراءات العامة.
- مهلة الشاشة – لضبط المدة الزمنية قبل انطفاء الإضاءة الخلفية تلقائياً.
- لمس مناطق التحكم – يتيح لك هذا الخيار تحديد منطقة على الشاشة لوضع حد لتنشيط اللمس لتلك المنطقة فقط من الشاشة.
- اختصار لمزايا إمكانية الوصول – يسمح لك هذا الخيار بالوصول إلى الميزات المحددة بشكل سريع عند الضغط 3 مرات على زر الشاشة الرئيسية.
- تدوير الشاشة تلقائياً – يتيح لك تمكين هذا الخيار تدوير الشاشة بحسب اتجاه الهاتف (عمودي أو أفقي).
- الوصول عبر مفتاح التحويل – يسمح لك هذا الخيار بالتفاعل مع الجهاز باستخدام مفتاح واحد أو أكثر تعمل مثل مفاتيح لوحة المفاتيح. يمكن أن تكون هذه القائمة مفيدة للمستخدمين الذين لديهم صعوبة في الحركة تمنعهم من التفاعل مع الهاتف بشكل مباشر.

العرض المصغر

- قم بتشغيل هذه القائمة لتقليص الشاشة لاستخدامها بيد واحدة، عبر التمرير إلى اليسار أو اليمين بأزرار اللمس في الشاشة الرئيسية. إذا أردت الحصول على المزيد من المعلومات، يرجى الاطلاع على العرض المصغر في الميزات التي ستعشقها.
- على شاشة الإعدادات، اضغط على علامة التبويب عامة < العرض المصغر.

مفتاح الاختصار

- حصل على إمكانية الوصول بسرعة إلى التطبيقات عبر الضغط مرتين على مفاتيح مستوى الصوت عندما تكون الشاشة متوقفة عن التشغيل أو مغلقة.
- على شاشة الإعدادات، اضغط على علامة التبويب عامة < مفتاح الاختصار.
- اضغط مرتين على مفتاح رفع مستوى الصوت لفتح تطبيق Capture+.
- اضغط مرتين على مفتاح خفض مستوى الصوت لتشغيل تطبيق الكاميرا.
- لقطة سريعة – يتيح لك تمكين هذا الخيار التقاط صور فورية عند الضغط مرتين على مفتاح خفض مستوى الصوت.

استخدم إعدادات Google لإدارة تطبيقات Google وإعدادات الحساب.
على شاشة الإعدادات، اضغط على علامة التبويب عامة < Google.

بصمات الأصبع والحماية

استخدم هذه القائمة لتكوين كيفية المساعدة في حماية الهاتف والبيانات.

على شاشة الإعدادات، اضغط على علامة التبويب عامة < بصمات الأصبع والحماية.

- **بصمات الأصابع** – لإلغاء قفل الشاشة أو الاطلاع على المحتويات المحمية بواسطة بصمة الإصبع. إذا أردت الحصول على المزيد من المعلومات، يرجى مراجعة قسم **بصمات الإصبع** ضمن الميزات التي ستعشقها.
- **قفل المحتويات** – لتحديد أنواع القفل لإقفال المذكرات لـ QuickMemo+.
- **تشفير الهاتف** – يسمح لك هذا الخيار تشفير البيانات على الهاتف من أجل الأمان. سيطلب منك إدخال رمز PIN أو كلمة المرور لفك تشفير هاتفك كل مرة تقوم فيها بتشغيل الهاتف.
- **تشفير وحدة تخزين بطاقة SD** – لتشفير وحدة تخزين بطاقة SD والحفاظ على عدم توفر البيانات للأجهزة الأخرى.
- **إعداد قفل بطاقة SIM** – لتعيين رمز PIN لإقفال بطاقة SIM والسماح لك بتغيير رمز PIN.
- **كتابة كلمة المرور مرئية** – يتيح لك تمكين هذا الخيار عرض كل حرف من كلمات المرور بشكل سريع أثناء إدخالها بحيث يمكنك رؤية الأحرف التي تدخلها.
- **مديرو الهاتف** – لعرض المسؤولين عن الهاتف أو إلغاء تنشيطهم.
- **مصادر غير معروفة** – يسمح لك هذا الخيار بتنصيب تطبيقات من خارج متجر Play.
- **التحقق من التطبيقات** – لعدم السماح بتنصيب التطبيقات التي قد تسبب بحدوث ضرر أو التحذير قبل ذلك.
- **نوع التخزين** – لعرض نوع التخزين الحالي.
- **إدارة الشهادة** – لإدارة شهادات الحماية.
- **Trust agents** – حدد التطبيقات التي تريد استخدامها من دون إلغاء قفل الشاشة.
- **تنبيت الشاشة** – يمكنك تمكين الجهاز لعرض شاشة تطبيق معين فقط باستخدام تنبيت الشاشة.
- **الوصول إلى الاستخدام الخاص بالتطبيقات** – يتيح لك هذا الخيار عرض معلومات استخدام التطبيقات على الهاتف.

Smart settings

يتيح لك هذا الخيار تشغيل/إيقاف تشغيل أو فتح خيار أو تغييره مثل Wi-Fi أو الموسيقى أو أوضاع الصوت وفقاً لموقعك وللمهام التي تقوم بها. على شاشة الإعدادات، اضغط على علامة التبويب عامة < Smart settings.

غطاء Quick Cover

بواسطة غطاء Quick Cover، يمكنك التحقق من المكالمات الواردة وإيقاف المنبه/الموقت عند إغلاق الغطاء. لإلغاء القفل مع الغطاء، يجب تعيين قفل الشاشة على مسح. على شاشة الإعدادات، اضغط على علامة التبويب عامة < غطاء Quick Cover.

نافذة مزدوجة

يسمح لك هذا الخيار بتكوين ميزة النافذة المزدوجة.

على شاشة الإعدادات، اضغط على علامة التبويب عامة < نافذة مزدوجة.

• **الفتح التلقائي** – ضع علامة اختيار على هذا الخيار لتتمكن من الضغط على ارتباط على ملء الشاشة أو من الضغط على المرفقات من رسائل البريد الإلكتروني لفتح نافذة مزدوجة.

• **مساعدة** – لعرض مساعدة حول استخدام النافذة المزدوجة.

إذا أردت الحصول على المزيد من المعلومات، يرجى مراجعة قسم نافذة مزدوجة ضمن الميزات التي ستعشقها.

التاريخ والوقت

عَيِّن تفضيلاتك لكيفية عرض التاريخ والوقت.

على شاشة الإعدادات، اضغط على علامة التبويب عامة < التاريخ والوقت.

التخزين و USB

يمكنك مراقبة الذاكرة الداخلية المتوفرة والمستخدم في الجهاز.

على شاشة الإعدادات، اضغط على علامة التبويب عامة < التخزين و USB.

وحدة تخزين داخلية

• **المساحة الإجمالية** – لعرض إجمالي المساحة والمساحة المتوفرة في ذاكرة وحدة التخزين

الداخلية في هاتفك على شكل نص ورسم بياني خطي مرّم بالألوان (المساحة غير

المستخدمة باللون الرمادي). يتم إدراج التطبيقات المناسبة والمساحة المستخدمة تحت كل

مستخدم جهاز.

بطاقة SD

• المساحة الإجمالية – لعرض إجمالي المساحة والمساحة المتبقية المتوفرة في بطاقة الذاكرة.

البطارية وتوفير الطاقة

- لعرض حالة البطارية الحالية بما في ذلك نسبة مستوى الشحن المتبقي وحالة الشحن. على شاشة الإعدادات، اضغط على علامة التبويب عامة < البطارية وتوفير الطاقة.
- استخدام البطارية – لعرض مستوى استهلاك البطارية وتفاصيل الاستخدام. اضغط على أحد العناصر لرؤية المزيد من المعلومات المفصلة.
- النسبة المئوية للبطارية موجودة على شريط الحالة – ضع علامة اختيار على هذا الخيار لعرض مستوى شحن البطارية على شريط الحالة إلى جانب رمز البطارية.
- توفير الطاقة – اضغط على المفتاح توفير الطاقة للتبديل بين تشغيل أو إيقاف التشغيل. لضبط مستوى شحن البطارية الذي يؤدي تلقائيًا إلى تشغيل توفير الطاقة.
- تحسين الأداء في الألعاب – لضبط جودة الفيديو في الألعاب وتوفير طاقة البطارية.

الذاكرة

يمكنك مراقبة الذاكرة المستخدمة بشكل متوسط والذاكرة التي تستخدمها تطبيقات الجهاز. على شاشة الإعدادات، اضغط على علامة التبويب عامة < الذاكرة.

Smart cleaning

- لعرض المساحة المستخدمة والمساحة المتوفرة في هاتفك وتنظيف ملفاتك بشكل إنتقائي. على شاشة الإعدادات، اضغط على علامة التبويب عامة < Smart cleaning.
- 1 اضغط على موقع مجلد، ثم عيّن الخانات المناسبة.
 - 2 اضغط على التنظيف < نعم.

التطبيقات

يسمح لك هذا الخيار بعرض التفاصيل حول التطبيقات المثبتة على الهاتف وإدارة بياناتها وإجبارها على التوقف. على شاشة الإعدادات، اضغط على علامة التبويب عامة < التطبيقات.

تطبيق الرسائل الافتراضي

تسمح لك هذه القائمة باختيار تطبيق الرسائل الذي تريد استخدامه كتطبيق رسائل افتراضي. على شاشة الإعدادات، اضغط على علامة التبويب العامة < تطبيق الرسائل الافتراضي.

نسخ احتياطي وإعادة الضبط

غيّر الإعدادات لإدارة إعداداتك وبياناتك.

- على شاشة الإعدادات، اضغط على علامة التبويب عامة < نسخ احتياطي وإعادة الضبط.
- LG Backup** – يتيح لك هذا الخيار نسخ جميع المعلومات الموجودة على الجهاز احتياطيًا واستعادتها، وذلك في حال فقدان البيانات أو استبدالها. إذا أردت الحصول على المزيد من المعلومات، يرجى مراجعة قسم **LG Backup** في التطبيقات.
- نسخ احتياطي لبياناتي** – لإجراء نسخ احتياطي لبيانات التطبيقات وكلمات مرور Wi-Fi وإعدادات أخرى إلى خوادم Google.
- الحساب الاحتياطي** - لعرض الحساب الذي يتم استخدامه حاليًا لنسخ المعلومات احتياطيًا.
- استعادة تلقائية** - لاستعادة الإعدادات والبيانات التي تم نسخها احتياطيًا عند إعادة تثبيت أحد التطبيقات.
- إعادة ضبط إعدادات الشبكة** – إعادة ضبط كل إعدادات الشبكة.
- إعادة ضبط بيانات الشركة المصنعة** – إعادة ضبط الإعدادات إلى القيم الافتراضية للشركة المصنعة وحذف جميع البيانات لديك. إذا أعدت ضبط الهاتف بهذه الطريقة، فسيطلب منك مجددًا إدخال المعلومات نفسها التي استخدمتها عند تشغيل Android في المرة الأولى.

حول الهاتف

لعرض المعلومات القانونية والتحقق من حالة الهاتف وإصدارات البرامج وإجراء تحديث للبرنامج.

على شاشة الإعدادات، اضغط على علامة التبويب عامة < حول الهاتف.

ملحق

تحديث برنامج الهاتف

تحديث برنامج الهاتف النقال LG من الإنترنت

لمزيد من المعلومات حول استخدام هذه الوظيفة، يرجى زيارة <http://www.lg.com/common/index.jsp> ← وتحديد البلد واللغة. تسمح لك هذه الميزة بتحديث برامج الهاتف الثابتة بسهولة إلى إصدار أحدث من الإنترنت من دون الحاجة إلى زيارة مركز الخدمة. ستكون هذه الميزة متوفرة عندما تصدر LG إصدار برنامج ثابت أحدث للجهاز لديك.

بما أن تحديث برنامج الهاتف المحمول الثابت يتطلب انتباه المستخدم الكامل طوال مدة عملية التحديث، فيرجى التحقق من كل التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. يرجى الانتباه إلى أن إزالة كيبول بيانات USB أثناء الترقية قد يتسبب في إلحاق ضرر بالغ بهاتفك المحمول.

ملاحظة

- تحتفظ شركة LG بحق توفير تحديثات برامج ثابتة لطرزات معينة فقط وفق ما تراه مناسباً ولا تضمن توفر إصدار برامج ثابتة أحدث لكافة طرازات الهاتف.

تحديث برنامج الهاتف المحمول من LG لاسلكياً (OTA)

تتيح لك هذه الميزة تحديث برنامج الهاتف إلى إصدار أحدث بشكل ملائم عبر OTA، من دون التوصيل بكيبول بيانات USB. ستكون هذه الميزة متوفرة عندما تصدر LG إصدار برنامج ثابت أحدث للجهاز لديك.

عليك أولاً التحقق من إصدار البرنامج على الهاتف المحمول: الإعدادات > علامة التبويب عامة > حول الهاتف > مركز التحديث > تحديث البرنامج > تحقق الآن من التحديث.

ملاحظة

- قد تفقد بياناتك الشخصية من وحدة التخزين الداخلية للهاتف-بما فيها معلومات حساب Google وأي حساب آخر وبيانات النظام/التطبيق والإعدادات وأي تطبيقات تم تنزيلها وترخيص-DRM-أثناء عملية تحديث برنامج الهاتف. لذا، توصي LG بإجراء نسخة احتياطية من البيانات الشخصية قبل تحديث برنامج الهاتف. ولا تعتبر LG مسؤولة عن أي فقد للبيانات الشخصية.
- تعتمد هذه الميزة على موفر خدمة الشبكة والمنطقة والبلد.

الأسئلة الشائعة

يسرد هذا الفصل بعض المشكلات التي قد تصادفها أثناء استخدام الهاتف. بعض المشاكل يتطلب منك الاتصال بموفر الخدمة، ولكن معظم المشاكل سهلة ويمكنك تصحيحها بنفسك.

الرسالة	الأسباب المحتملة	التدابير التصحيحية الممكنة
خطأ في بطاقة SIM	لا يوجد بطاقة SIM في الهاتف أو ربما قمت بإدخالها بشكل غير صحيح.	تأكد من إدخال بطاقة SIM بالطريقة الصحيحة.
لا يوجد اتصال بالشبكة/ فقدان الشبكة	الإشارة ضعيفة أو أنك خارج نطاق شبكة مزود الخدمة.	توجه نحو نافذة أو نحو مكان مفتوح. تحقق من خريطة تغطية مشغل الشبكة.
لا يوجد اتصال بالشبكة/ فقدان الشبكة	قام المشغل بتطبيق خدمات جديدة.	تحقق مما إذا كانت بطاقة SIM أقدم من 6 إلى 12 شهرًا. في هذه الحالة، غير بطاقة SIM أو USIM لدى أقرب فرع لموفر الشبكة. اتصل بموفر الخدمة لديك.
الرموز غير متطابقة	لتغيير رمز الأمان، عليك تأكيد الرمز الجديد وذلك بإدخاله مرة أخرى. إن الرمزین الذین أدخلتهما لا يتطابقان.	إذا فقدت الرمز، فاتصل بموفر الخدمة.
لا توجد تطبيقات يمكن تعيينها	غير معتمد من قبل موفر الخدمة أو أن التسجيل مطلوب.	اتصل بموفر الخدمة لديك.
قمت بتنزيل أحد التطبيقات مما تسبب في حدوث الكثير من الأخطاء.	قم بإزالة التطبيق.	<ol style="list-style-type: none"> 1 اضغط على  <  <  . 2 اضغط على علامة التبويب عامة < التطبيقات. 3 اضغط على التطبيق < إلغاء التثبيت.

الرسالة	الأسباب المحتملة	التدابير التصحيحية الممكنة
المكالمات غير متوفرة	خطأ في الطلب	شبكة جديدة غير مصرّح لها.
	تم إدخال بطاقة SIM جديدة.	تحقق من القيود الجديدة.
	تم الوصول إلى حد الشحن المدفوع مقدّمًا.	اتصل بموفر الخدمة أو أعد تعيين الحد بواسطة PIN2.
يتعذّر تشغيل الهاتف	تم ضغط مفتاح التشغيل/إيقاف التشغيل لبرهة قصيرة جدًا.	اضغط على مفتاح التشغيل/إيقاف التشغيل لثانيتين على الأقل.
	لم يتم شحن البطارية.	اشحن البطارية. تحقق من مؤشر الشحن على الشاشة.
خطأ في الشحن	لم يتم شحن البطارية.	اشحن البطارية.
	إنّ درجة الحرارة في الخارج عالية جدًا أو متدنية جدًا.	تأكد أنه يجري شحن الهاتف في درجة الحرارة العادية.
	مشكلة في الاتصال	تحقق من الشاحن واتصاله بالهاتف.
	لا يوجد فولتية	قم بتوصيل الشاحن بمقبس مختلف.
	خلل في الشاحن	استبدل الشاحن.
	الشاحن غير مناسب	استخدم ملحقات LG الأصلية فقط.
رقم غير مسموح به.	وظيفة أرقام الاتصال الثابت قيد التشغيل.	تحقق من قائمة الإعدادات وقم بإيقاف تشغيل الوظيفة.
لا يمكن استلام / إرسال رسائل SMS وصور	ذاكرة ممتلئة	احذف بعض البيانات مثل التطبيقات أو الرسائل من الهاتف لتوفير المزيد من المساحة في الذاكرة.
الملفات لا تفتح	تنسيق الملف غير معتمد	تحقق من تنسيقات الملف المعتمدة.

الرسالة	الأسباب المحتملة	التدابير التصحيحية الممكنة
لا تعمل الشاشة عندما أتلقى مكالمة.	مشكلة في جهاز استشعار الأشياء القريبة	إذا استخدمت شريطاً واقياً أو غلبة واقية، تأكد من عدم تغطية المنطقة حول جهاز استشعار الأشياء القريبة. تأكد من أن الناحية حول جهاز استشعار الأشياء القريبة نظيفة.
لا أصوات	وضع الاهتزاز	تحقق من حالة الإعدادات في قائمة الصوت للتأكد من عدم تعيين الهاتف إلى وضع الاهتزاز أو منع المقاطعات.
تعليق أو تجميد	مشكلة متقطعة في البرنامج	إذا تجمدت الشاشة أو توقف الهاتف عن الاستجابة عند محاولة تشغيله، فاعمد إلى إزالة البطارية وإعادة إدخالها. ثم أعد تشغيل الهاتف. أو حاول تحديث برنامج عبر موقع الويب.

دليل مكافحة السرقة

يمكنك إعداد جهازك لمنع الآخرين من استخدامه إذا تمت إعادة ضبطه على إعدادات الشركة المصنعة من دون إذن منك. على سبيل المثال، في حال فقدان جهازك أو سرقة أو الوصول إليه، يستطيع فقط شخص يملك تفاصيل حساب Google أو معلومات قفل الشاشة أن يستخدم الجهاز.

كل ما عليك فعله لضمان حماية الجهاز هو:

- **تعيين قفل الشاشة:** إذا فقدت جهازك أو تمت سرقة ولكنك عيّنت قفل شاشة له، لا يمكن محو الجهاز باستخدام قائمة الإعدادات إلا إذا تم إلغاء قفل الشاشة.
- **إضافة حساب Google على الجهاز:** إذا تم الوصول إلى جهازك مع توفر حساب Google عليه، لا ينهي الجهاز عملية الإعداد لغاية ما يتم إدخال معلومات حساب Google مجدداً.

بعد حماية جهازك، عليك إما أن تلغي قفل الشاشة أو إدخال كلمة المرور الخاصة بحساب Google إذا توجب عليك تنفيذ إعادة الضبط على إعدادات الشركة المصنعة. يضمن ذلك أنك تقوم بنفسك أو شخص موثوق بإعادة الضبط.

- لا تنسَ حساب Google وكلمة المرور التي أضقتها على جهازك قبل تنفيذ إعادة الضبط على إعدادات الشركة المصنعة. إذا لم تتمكن من توفير معلومات الحساب أثناء عملية الضبط، لن تستطيع استخدام الجهاز أبداً بعد تنفيذ إعادة الضبط على إعدادات الشركة المصنعة.

المزيد من المعلومات

معلومات حول إشعار البرامج المفتوحة المصدر

للحصول على التعليمات البرمجية المصدر بموجب GPL و LGPL و MPL وتراخيص مفتوحة المصدر أخرى يتضمنها هذا المنتج، يرجى زيارة الموقع <http://opensource.lge.com>.

بالإضافة إلى التعليمات البرمجية المصدر، تتوفر كل أحكام الترخيص وإشعارات إخلاء المسؤولية وإشعارات حقوق النشر للتنزيل.

ستوفر LG Electronics أيضاً التعليمات البرمجية المصدر على قرص مضغوط بتكلفة تغطي هذا التوزيع (مثل تكلفة الوسائط والشحن والاستخدام) عند طلبها بارسال بريد إلكتروني إلى opensource@lge.com. إن هذا العرض صالح لمدة ثلاث (3) سنوات اعتباراً من تاريخ شراء المنتج.

علامات تجارية

- حقوق النشر © 2016 LG Electronics، Inc. جميع الحقوق محفوظة. LG وشعار LG هما علامتان تجاريتان مسجلتان لمجموعة LG Group والكيانات التابعة. كل العلامات التجارية الأخرى تعود إلى مالكيها.
- إن Google™ و Google Maps™ و Gmail™ و YouTube™ و Hangouts™ و متجر Play Store™ هي علامات تجارية لشركة Google، Inc.
- Bluetooth® هي علامة تجارية مسجلة لشركة Bluetooth SIG, Inc. عالمياً.
- Wi-Fi® وشعار Wi-Fi هما علامتان تجاريتان مسجلتان لـ Wi-Fi Alliance.
- تعود كافة العلامات التجارية وحقوق النشر الأخرى إلى مالكيها.

DivX HD

اجتاز جهاز DivX Certified® هذا اختبارات شديدة الدقة للتحقق من إمكانية تشغيله لفيديو DivX®.

لتشغيل أفلام DivX التي تم شراؤها، سجّل أولاً الجهاز على vod.divx.com. اعثر على رمز التسجيل في قسم DivX VOD من قائمة إعداد الجهاز. DivX Certified® لتشغيل فيديو DivX® حتى درجة الاستبانة العالية 720P، بما في ذلك المحتوى المميز.

DivX® و DivX Certified® والشعارات المقترنة هي علامات تجارية لشركة DivX, LLC وتستخدم بموجب ترخيص.

DOLBY DIGITAL PLUS **Dolby Digital Plus**

تم تصنيعه بموجب ترخيص من Dolby و Dolby Laboratories. Digital Plus ورمز العلامة التجارية حرفا D هي علامات تجارية لـ Dolby Laboratories.


بيان سلامة الليزر

تنبيه!

يعمل هذا المنتج بنظام ليزر. لضمان الاستخدام الصحيح لهذا المنتج، يرجى قراءة دليل المالك هذا بعناية والاحتفاظ به للرجوع إليه في المستقبل. في حال كانت الوحدة بحاجة إلى الصيانة، اتصل بمركز خدمة معتمد.

قد يؤدي استخدام عناصر التحكم أو الضبط أو القيام بإجراءات غير تلك المذكورة هنا إلى التعرّض للأشعة الخطيرة.

لتجنب التعرّض المباشر لأشعة الليزر، لا تحاول فتح الغطاء أو تجنب التعرّض مباشرة لأشعة الليزر.

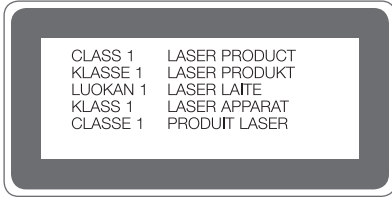

بيان التوافق

تعلن **LG Electronics** بموجبه أن المنتج **LG-H960/LG-H960A** يتوافق مع المتطلبات الأساسية والأحكام الأخرى ذات الصلة الخاصة بالتوجيه **1999/5/EC**. يمكن العثور على نسخة من إعلان التوافق على العنوان التالي <http://www.lg.com/global/declaration>

التخلص من الأجهزة القديمة الخاصة بك




- 1 جميع الأجهزة الكهربائية والإلكترونية يجب التخلص منها بشكل منفصل عن النفايات المنزلية عبر منشآت التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
- 2 سيساعد التخلص من جهازك القديم بشكل صحيح في الحد من التبعات السلبية المحتملة للبيئة وصحة الإنسان.
- 3 لمزيد من المعلومات المفصلة حول التخلص من جهازك القديم، يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بالمحل الذي اشتريته منه المنتج.

التخلص من البطاريات/المراكم التالفة



- 1 قد يتحد هذا الرمز مع الرموز الكيميائية مثل الزئبق (Hg) أو الكاديوم (Cd) أو الرصاص (Pb) إذا كانت البطارية تحتوي على أكثر من 0.0005% زئبق أو 0.002% كاديوم أو رصاص 0.004%.
- 2 يجب التخلص من جميع البطاريات/المراكم بشكل منفصل عن النفايات المنزلية عبر منشآت التجميع المخصصة والمحددة من قبل الحكومة أو السلطات المحلية.
- 3 سيساعد التخلص من البطاريات/المراكم القديمة بشكل صحيح في الحد من التبعات السلبية المحتملة للبيئة وصحة الإنسان والحيوان.
- 4 لمزيد من المعلومات المفصلة حول التخلص من البطاريات/المراكم القديمة يرجى الاتصال بمكتب الشركة في مدينتك أو خدمة التخلص من النفايات أو بالمحل الذي اشتريته منه المنتج.

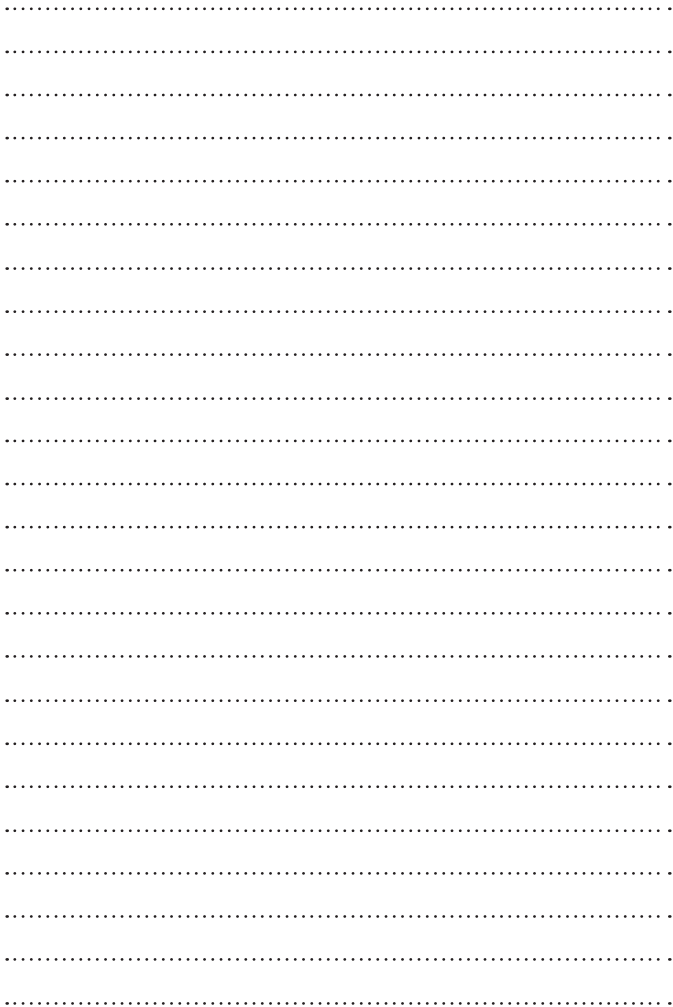

About this user guide

ENGLISH

Thank you for choosing LG. Please carefully read this user guide before using the device for the first time to ensure safe and proper use.

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- This device is not suitable for people who have a visual impairment due to the touchscreen keyboard.
- Descriptions are based on the device default settings.
- Default apps on the device are subject to updates and support for these apps may be withdrawn without prior notice. If you have any questions about an app provided with the device, please contact a LG Service Centre. For user-installed apps, please contact the relevant service provider.
- Modifying the device's operating system or installing software from unofficial sources may damage the device and lead to data corruption or data loss. Such actions will violate your LG licence agreement and void your warranty.
- Some contents and illustrations may differ from your device depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may apply for data services, such as messaging, uploading, downloading, auto-syncing and location services. To avoid additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

Instructional notices



WARNING

Situations that could cause injury to yourself and others, or damage to phone or other property.



NOTE

Notices or additional information.

Table of contents

Guidelines for safe and efficient use.....	5	Charging the battery	29
Features you will love	12	Optimizing battery life.....	29
Dual window.....	13	Inserting the memory card	30
Activating the Dual window.....	13	Removing the memory card	31
Using the Dual window	13	Touch screen tips	31
Fingerprint	14	Tap or touch	31
Registering your fingerprint.....	14	Touch and hold.....	32
LG Health	15	Drag.....	32
Mini view	15	Swipe or slide.....	32
Second screen	16	Double-tap.....	33
Feature of Second screen.....	16	Pinch-to-Zoom.....	33
Turning on and off Second screen feature..	17	Google account setup	34
Smart Notice.....	17	Creating your Google account.....	34
Snap video	18	Signing into your Google account.....	34
QSlide	19	Locking and unlocking the device.....	35
Using QSlide.....	19	Fingerprint.....	35
Capture+	20	KnockON.....	35
Viewing the saved memo.....	20	Knock Code	35
QuickRemote.....	21	Changing the screen lock method.....	36
Set up QuickRemote.....	21	Smart Lock.....	36
Universal remote.....	21	Home screen	37
Using QuickRemote.....	21	Getting to Know the Home Screen.....	37
Quick Share	22	Returning to recently-used applications	38
Basics	23	Customizing the Home screen	39
Accessories	24	Notifications panel.....	40
Phone layout	25	Capturing a screenshot.....	42
Turning Your Phone On and Off	27	On-screen keyboard	43
Installing the Nano SIM card and battery. 27		Using the keypad and entering text.....	43
		Entering special characters.....	43
		To split or merge the keyboard.....	44
		Transferring data between a PC and the device	44

Transferring data using USB connection.....	44	Snap Video Mode on the viewfinder.....	58
Transferring data using wireless connection.	45	Interval shot.....	59
LG Bridge.....	45	Burst shot.....	59
Features of LG Bridge	45	Gesture shot.....	59
To download the LG Bridge software.....	46	Gesture view.....	60
SmartShare	46	Multi-point Auto Focus.....	60
Using SmartShare	46	8X Zooming.....	60
Enjoying content from nearby devices on your phone.....	46	Once you have taken a photo.....	60
Apps	47	Recording a video.....	61
Installing or uninstalling apps.....	48	After recording a video.....	61
To open the Play Store app.....	48	Gallery	62
To open a screen with details about an app.	48	Viewing pictures.....	62
To uninstall applications.....	48	Editing photos	62
Calls	49	Setting wallpaper.....	62
Making a call.....	49	Zooming in and out	63
Calling your contacts.....	49	Playing a video.....	63
Answering and rejecting a call.....	49	Editing videos.....	64
Making a second call.....	50	Deleting photos/videos.....	64
Viewing your call logs.....	50	E-mail.....	65
Change your call settings	50	Adding an account.....	65
Contacts.....	51	Working with account folders.....	65
Searching for a contact.....	51	Composing and sending email.....	65
Adding a new contact.....	51	Changing an email general settings.....	66
Favourites contacts.....	52	Deleting an email account.....	66
Creating a group.....	52	Music	67
Messaging	53	Playing a song.....	67
Sending a message.....	53	Music player options.....	67
Conversation view.....	53	Clock.....	69
Changing your messaging settings.....	53	Alarms	69
Camera	54	Timer.....	69
Taking a photo	54	World clock.....	69
Auto Mode on the viewfinder.....	55	Stopwatch.....	70
Manual Camera Mode on the viewfinder.....	57	Calculator	70
Manual Video Mode on the viewfinder	58	Calendar	70
		Voice Recorder	71
		Recording a sound or voice.....	71

Downloads	71	General settings	87
FM Radio	71	Language & keyboard.....	87
LG Backup	72	Location.....	88
About backing up and restoring device		Accounts & sync.....	88
data.....	72	Cloud.....	89
To backup your device data	72	Users.....	89
Google apps	73	Accessibility.....	89
Settings	75	Mini view.....	90
Access the Settings menu	76	Shortcut key.....	91
Networks Settings	76	Google.....	91
Wi-Fi.....	76	Fingerprints & security.....	91
Wi-Fi Direct.....	77	Smart settings.....	92
Bluetooth.....	77	Quick Cover case.....	92
Mobile data.....	78	Dual window.....	92
Call.....	79	Date & time.....	92
NFC.....	80	Storage & USB.....	93
Android Beam.....	80	Battery & power saving.....	93
SmartShare Beam.....	81	Memory.....	93
Media server.....	81	Smart cleaning	94
Miracast.....	82	Apps.....	94
LG AirDrive.....	82	Default message app	94
Printing.....	82	Backup & reset.....	94
USB tethering.....	83	About phone.....	95
Wi-Fi hotspot.....	83	Appendix	96
Bluetooth tethering.....	83	Phone software update	97
Airplane mode.....	83	FAQ	98
Mobile networks.....	84	Anti-Theft Guide	101
VPN.....	84	More information	102
Sound & notification settings	84	Open source software notice information..	102
Display settings	85	Trademarks.....	102
Second screen.....	85	DivX HD	103
Home screen.....	85	Dolby Digital Plus.....	103
Lock screen.....	86	Laser safety statement.....	104
Home touch buttons.....	86	Declaration of conformity.....	104
More display settings.....	87		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-H960/LG-H960A has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.590 W/kg (10 g) and when worn on the body is 0.297 W/Kg (10 g).

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

- Always use genuine LG batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.
- Some contents and illustrations may differ from your device without prior notice.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.

- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the colour of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0 °C and 40 °C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE

- Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.

- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.







Features you will love

Dual window

The Dual window function splits the screen to enable multi-tasking, drag and drop interaction, auto-linking, and recently used apps.



Activating the Dual window

- 1 Tap  >  >  > **General** tab > **Dual window**.
- 2 Tap  to toggle it On.
 - Checkmark the **Auto-open** checkbox to automatically open the Dual window function when you tap a link on the full screen or tap an email image attachment.

Using the Dual window

- 1 Tap  >  > **Dual window**.




NOTE


- While viewing an app, you can tap the  > **Dual window** to automatically set that app in the top window, then select the second app.
- 2 Tap the app icon you want to use. The first app you tap opens in a window at the top of the screen. The second app opens in the bottom window.
 - 3 Tap a window to select and use it.
 - A blue box appears around the selected window with a blue semicircle handle between the windows.
 - Drag the blue handle to change the window sizes (one larger and one smaller).
 - 4 Tap  to access the Dual window options.

Fingerprint

The Fingerprint feature allows you to place a finger on the **Power/Lock Key** to unlock screen or see locked content.

Registering your fingerprint

- 1 Tap  >  >  > **General tab** > **Fingerprints & security** > **Fingerprints.**
- 2 You need to set the secure screen lock before registering fingerprint. The lock will be used as an alternative method for fingerprints.
- 3 Place your finger on the **Power/Lock Key**.

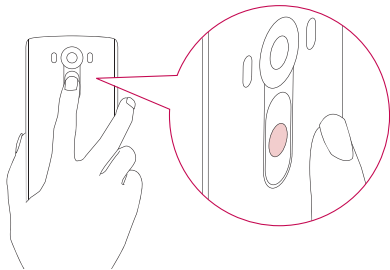




- 4 Lift your finger when the device vibrates and then place it on the **Power/Lock Key** again. Repeat this action using the same finger until the fingerprint is registered.

NOTE

- Make sure that your fingers and the Power/Lock Key are clean and dry.
- Moisture, lotions, sweat, oils, cut or dry skin might affect fingerprint recognition. Certain activities can also temporarily affect fingerprint recognition, including exercising, showering, swimming, cooking or other conditions or changes that affect your fingerprint.
- Cover the Power/lock Key completely. don't press too quickly, hardly move your finger while finger is scanning.
- As you use the fingerprint, it will continue to learn and improve recognition of your fingerprint.

LG Health

The LG Health helps you manage your health and maintain good exercise habits by tracking logs and competing with people.

- 1 Tap  >  > .
- 2 Read and agree to the terms and conditions.
- 3 On the Profile and goal page, enter your profile information and tap **SAVE**.
- 4 Use the options below to begin tracking activity.



NOTE

- This feature is provided for user convenience. Please use for reference only.

Mini view

To shrink the screen for use with one hand, swipe left or right across the Home touch buttons.

To close the Mini view, tap .

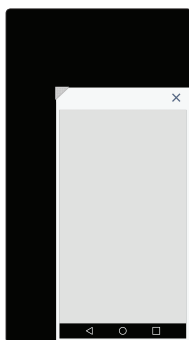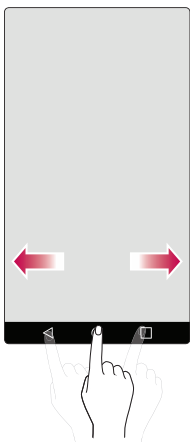


Second screen

When the main screen is turned off, you can see the useful information such as weather, date, time, battery status and notifications.

Feature of Second screen

- You can set the function on the second screen when main screen is turned on. (Recent apps, App shortcuts, Music Player, Quick contacts, Upcoming plans and Signature)
- You can see notifications and use the function via second screen while you are use the entire screen apps.
- You can use the control panel during take a picture or recording.
- To turn on/off the second screen, filp over the device.

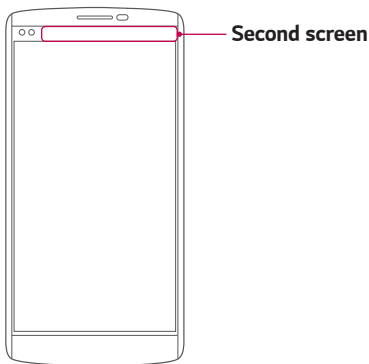

Turning on and off Second screen feature

You can turn on and off the Second screen feature and select what to display.

- Tap  >  >  > **Display** tab > **Second screen**.

Main screen is ON	Provide the useful function for multi tasking.
Main screen is OFF	Always show the useful information and provide quick launch of frequently used functions.

Smart Notice

Improve your lifestyle with Smart Notice cards.

These cards provide customized suggestions based on the time of day, your location, and how you use your phone.

- Touch and hold the empty part of the Home screen > **Widgets** > **Smart Notice**.

Snap video

You can make a story movie using short videos.

1 Tap  >  >  > 

2 Tap  to record for three seconds scene.

OR

Touch and hold  to record for desired time.

3 Repeat this action.

NOTE

- Movies can be stored for up to one minute.

4 After you are done scene, tap **SAVE**.

NOTE

- You can edit for various video effects and background music in Gallery.


QSlide

From any screen, use the Notification panel to easily access and use the Notepad, Calendar, Calculator, and more with QSlide.





Using QSlide

1 Touch and slide the status bar downward > tap **QSlide**.

NOTE

- While using applications that support QSlide, tap  > QSlide. The function is displayed as a small window on your screen.

2 Using the following options.

1		Tap to expand the window to full window size.
2		Tap to adjust the window's transparency.
3		Tap to close the QSlide window.
4		Drag to adjust the size of the QSlide window.


3 You can use and tap the screen under the **QSlide** windows when the transparency bar is not full .







NOTE

- QSlide can support up to two windows at the same time.


Capture+

You can use Capture+ function to easily and efficiently create memos, with a saved picture or on the current phone screen.

- 1 Touch and slide the status bar downward and tap .
- 2 Create a memo using the following options:

	Tap to save the memo you've created.
	Tap to select the pen type and colour.
	Tap to use the eraser to erase the pen marks on the memo.
	Tap to crop the image of memo.
	Tap to share the memo.
	Tap to select the undo, redo, text or paper style.

NOTE

- Please use a fingertip while using the QuickMemo+ feature. Do not use your fingernail.
- 3 Tap  to save the current memo to the **QuickMemo+** or the **Gallery**.




Viewing the saved memo

Tap  >  >  and select the **Capture+** album.

QuickRemote

QuickRemote turns your phone into a Universal Remote for your home TV, set-top box and audio system, and more.

Set up QuickRemote

- 1 Touch and slide the status bar downward and tap  > **ADD REMOTE**.
If you can not see , tap  > checkmark **QuickRemote** to enable.





OR

Tap  >  >  > tap .

- 2 Select the type and brand of the device, then follow the on-screen instructions to configure the device.

Universal remote

You can create your own personalized universal remote and choose where to place all of the buttons.

- 1 Tap  >  >  >  > **Universal remote**.
- 2 Enter the remote name.
- 3 Place the buttons you want on the remote at the desired location.
- 4 Follow the next step and learn the instructions.

Using QuickRemote

Once you have completed the initial set up, you can easily access the QuickRemote from the Notification panel. Open the Notification panel and use the QuickRemote functions.



NOTE

- The QuickRemote operates the same way as an ordinary remote control infrared (IR) signals. Be careful not to cover the infrared sensor at the top of the phone when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.

Quick Share

After take a photo or recroding a video, you can share photos and videos. Tap the appears icon or touch and slide to left the app. Then select the desired apps.

- Tap  >  >  > **AUTO mode**

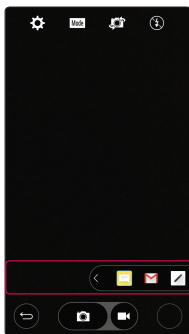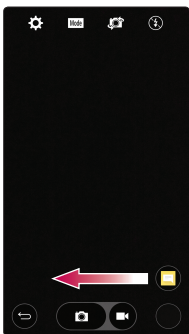

NOTE

- The app appears to the user, arranged as a quick share, depending on the type and frequency.



Basics

Accessories



These accessories are available for use with the your phone.

- Travel Adaptor
- Quick Start Guide
- Stereo Headset
- USB Cable
- Battery

NOTE

- Items described below may be optional.
- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- The items supplied with the device and any available accessories may vary depending on the region or service provider.

Phone layout

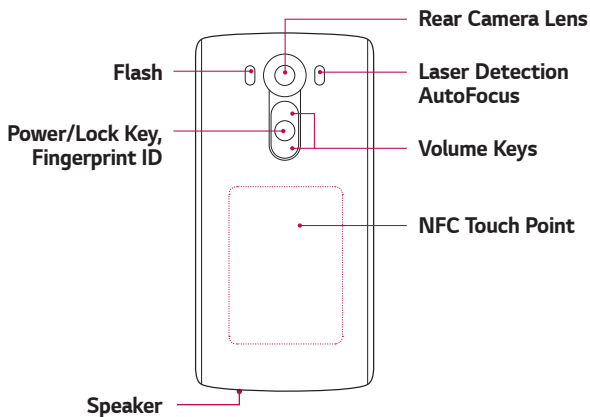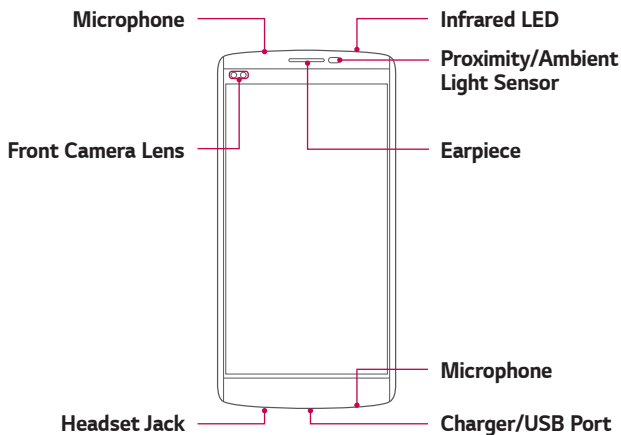

Power/Lock Key	<ul style="list-style-type: none">· Turn your phone on/off by pressing and holding this key.· Short press to turn on/off the screen.
Volume Keys	<p>While screen is off:</p> <ul style="list-style-type: none">· Press Volume Up Key twice to launch Capture+.· Press Volume Down Key twice to launch Camera and take a picture. <p>On the Home screen:</p> <ul style="list-style-type: none">· Control ringer volume. <p>During a call:</p> <ul style="list-style-type: none">· Control your earpiece volume when playing audio/video.· Control volume continuously.

 **NOTE : Proximity Sensor**

- When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

 **WARNING**

- The NFC antenna for this model is on the back cover. Be careful not to damage the NFC touch point on the phone, which is part of the NFC antenna.

 **WARNING**

- Placing a heavy object on the phone or sitting on it can damage the display and touch screen functions. Do not cover the proximity sensor with screen protectors or any other type of protective film. This could cause the sensor to malfunction.

Turning Your Phone On and Off

Turning your phone on

Press and hold the **Power/Lock Key** on the back of the phone for a couple of seconds until the screen turns on.

Turning your phone off


- 1 Press and hold the **Power/Lock Key** on the back of the phone until the Phone options menu appears.
- 2 Tap **Power off** in the Phone options menu.
- 3 Tap **OK** to confirm that you want to turn off the phone.

Installing the Nano SIM card and battery


Insert the Nano SIM card provided by the mobile telephone service provider, and the included battery.

WARNING


- Do not insert a memory card into the Nano SIM card slot. If a memory card happens to be lodged in the Nano SIM card slot, take the device to a LG Service Centre to remove the memory card.
- 1 To remove the back cover, hold the phone firmly in one hand. With your other hand, lift off the back cover with your thumbnail as shown in the figure below.

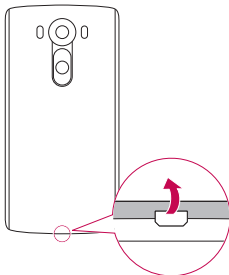


- 2 Slide the Nano SIM card into the Nano SIM card slot as shown in the figure. Make sure the gold contact area on the card is facing downward.

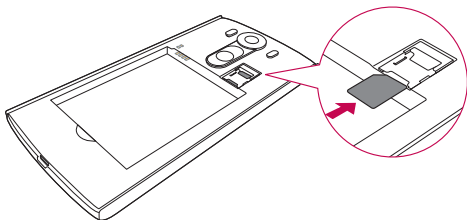

- 3 Insert the battery.

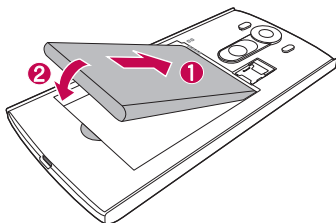

- 4 To replace the cover onto the device, align the back cover over the battery compartment and press it down until it clicks into place.

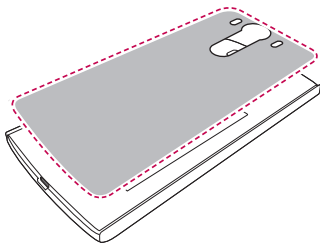


Charging the battery

Charge the battery before using it for first time. Use the charger to charge the battery. A computer can also be used to charge the battery by connecting the phone to it using the USB cable.

WARNING

- Use only LG-approved chargers, batteries and cables. If you use unapproved chargers, batteries or cables, it may cause battery charging delay. Or this can cause the battery to explode or damage the device, which are not covered by the warranty.

The charger connector is located at the bottom of the phone. Insert the charger and plug it into a power outlet.

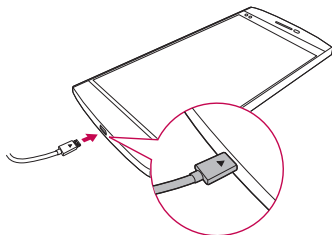

NOTE

- Do not open the back cover while your phone is charging.

Optimizing battery life

Extend your battery's power by turning off features that you do not need to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth® or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.

- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you download may consume battery power.
- While using downloaded applications, check the battery charge level.

Inserting the memory card

Your device supports up to a 2TB microSD card. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.


WARNING

- Some memory cards may not be fully compatible with the device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored in it.

NOTE

- Frequent writing and erasing of data shortens the lifespan of memory cards.

- 1 Remove the back cover.
- 2 Insert a memory card with the gold-coloured contacts facing downwards.

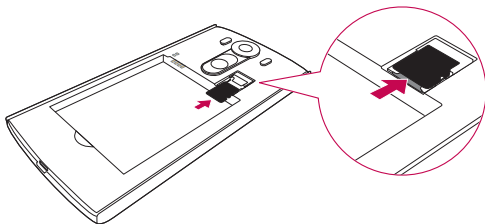

- 3 Replace the back cover.

Removing the memory card

Before removing the memory card, first unmount it for safe removal.

1 Tap  >  >  > **General tab** > **Storage & USB** > .

2 Remove the back cover and pull out the memory card.

WARNING

- Do not remove the memory card while the device is transferring or accessing information. Doing so can cause data to be lost or corrupted or damage to the memory card or device. It is not responsible for losses that result from the misuse of damaged memory cards, including the loss of data.

Touch screen tips


Here are some tips on how to navigate on your phone.

NOTE

- Do not press too hard; the tap screen is sensitive enough to pick up a light, yet firm tap.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other buttons.


Tap or touch

A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

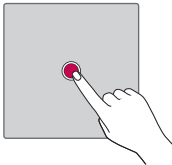


Touch and hold

Touch and hold an item on the screen by tapping it and not lifting your finger until an action occurs.

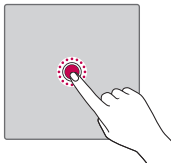


Drag

Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

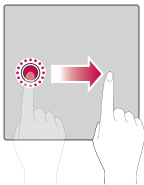


Swipe or slide

To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead).

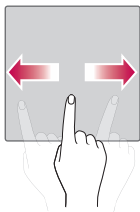


Double-tap

Double-tap to zoom on a webpage or a map.

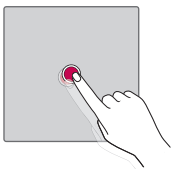

Pinch-to-Zoom

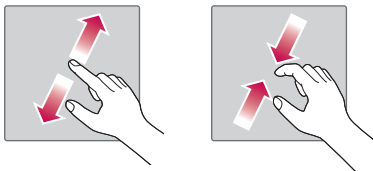


Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser, Maps, or when viewing pictures.






Google account setup

The first time you open a Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

Creating your Google account

- 1 Tap  >  >  > **General tab** > **Accounts & sync.**
- 2 Tap **ADD ACCOUNT** > **Google** > **Or create a new account.**
- 3 Enter your first and last name, then tap **NEXT.**
- 4 Follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing into your Google account

- 1 Tap  >  >  > **General tab** > **Accounts & sync.**
- 2 Tap **ADD ACCOUNT** > **Google.**
- 3 Enter your email address and tap **NEXT.**
- 4 Enter your password and tap **NEXT.**
- 5 After signing in, you can use Gmail and take advantage of Google services on your phone.
- 6 Once you have set up your Google account, your phone will automatically synchronise with your Google account on the web (if a data connection is available).

After signing in, your phone will sync with your Google services, such as Gmail, Contacts, and Google Calendar. You can also use Maps, download applications from Play Store, back up your settings to Google servers, and take advantage of other Google services on your phone.

Locking and unlocking the device

Pressing the Power/Lock Key turns off the screen and puts the device into lock mode. The device automatically gets locked if it is not used for a specified period. This helps to prevent accidental taps and saves battery power.

To unlock the device, press the Power/Lock Key and swipe the screen in any direction.

Fingerprint

The Fingerprint feature allows you to place a finger on the **Power/Lock Key** to unlock screen. Refer to **Fingerprint** in **Features you will love**.

KnockON

The KnockON feature allows you to double-tap the screen to easily turn it on or off.

Turning the screen on

- 1 Double-tap the centre of the Lock screen to turn the screen on.
- 2 Unlock the screen or access any of the available shortcuts or widgets.

Turning the screen off

- 1 Double-tap an empty area of the Home screen or the status bar.
- 2 The screen will turn off.

NOTE

- Tap on the centre area of the screen. If you tap on the bottom or the top area, the recognition rate may decrease.




Knock Code

The Knock Code feature allows you to create your own unlock code using a combination of knocks on the screen. You can access the Home screen directly when the screen is off by tapping the same sequence on the screen.

NOTE

- If you enter the wrong Knock Code 6 times, it will compulsorily take you to your Google account log in/backup PIN.
- Use the fingertip instead of finger nail to tap the screen for turning it on or off.

Setting up the Knock Code feature




- 1 Tap  >  >  > **Display** tab > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 Tap the squares in a pattern to set your Knock Code. Your Knock Code pattern can be 6 to 8 taps.

Unlocking the screen using the Knock Code

You can unlock the screen by tapping the Knock Code pattern you already set, when the screen turns off.

Changing the screen lock method

You can change the way that you lock the screen to prevent others accessing your personal information.

- 1 Tap  >  >  > **Display** tab > **Lock screen** > **Select screen lock**.
- 2 Select a desired screen lock from None, Swipe, Knock Code, Pattern, PIN and Password.




NOTE

- Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.


Smart Lock

You can use Smart Lock to make unlocking your phone easier. You can set it to keep your phone unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognises your face.


Setting up Smart Lock feature

- 1 Tap  >  >  > **Display** tab > **Lock screen** > **Smart Lock**.
- 2 Before you add any trusted devices, trusted places, or trusted face, you need to set up a screen lock (Knock Code, Pattern, PIN or Password).

Home screen

The Home screen is the starting point for many applications and functions. It allows you to add items like app shortcuts and Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .

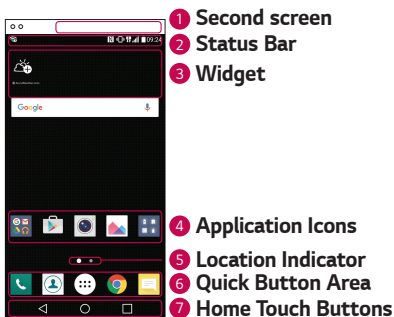


Getting to Know the Home Screen



- 1 **Second screen** - Second screen at the top of the screen the user can configure the desired app. Try to quickly and easily run your favorite app by setting the second screen.
- 2 **Status Bar** - Shows the phone's status information, including the time, signal strength, battery status and notification icons.
- 3 **Widget** - Widgets are self-contained applications that can be accessed through the Apps drawer or on the Home screen. Unlike a shortcut, a Widget can function as an on-screen application.

- 4 **Application Icons** - Tap an icon (application, folder, etc.) to open and use it.
- 5 **Location Indicator** - Indicates which Home screen canvas you are currently viewing.
- 6 **Quick Button Area** - Provides one-touch access to the function in any Home screen canvas.

7 **Home Touch Buttons**

 Back Button	Returns to the previous screen. Also closes pop-up items, such as menus, dialog boxes and the on-screen keyboard.
 Home Button	Return to the Home screen from any screen.
 Overview Button	Displays recently used applications. If you touch and hold this button, it opens a menu of available options.

To view other Home screen panels


The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets and more.

- Slide your finger left or right across the Home screen to access additional canvases.

Returning to recently-used applications

Multitasking is easy with Android; you can keep more than one application running at the same time. There is no need to quit an application before opening another. Use and switch between several open applications.

Android manages each application, stopping and starting them as needed to make sure that idle applications don't consume resources unnecessarily.

- 1 Tap . A list of recently used applications will be displayed.
- 2 Tap the application you want to access. This does not stop the previous app from running in the background. Make sure to tap to back out of an app after using it.

- To close an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.

Customizing the Home screen

You can customise your Home screen by adding apps and widgets and changing wallpapers.


Adding items on your Home screen

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you want to add. You then see this added item on the Home screen.
- 3 Drag it to the desired location and lift your finger.

NOTE

- To add an application icon to the Home screen from the Apps screen, touch and hold the application you want to add.


Removing an item from the Home screen

While on the Home screen, touch and hold the icon you want to remove > drag it to .

Adding an app to the Quick Button Area

From the Apps screen or on the Home screen, touch and hold an application icon and drag it to the Quick Button Area. Then release it in the desired location.


Removing an app from the Quick Button Area

Touch and hold the desired Quick Button, drag it to .

NOTE

- The **Apps Button**  cannot be removed.

Customizing app icons on the Home screen

- 1 Touch and hold an application icon until it unlocks from its current position, then release it. The editing icon  appears in the upper-right corner of the application.


- 2 Tap the application icon again and select the desired icon design and size.
- 3 Tap **OK** to save the change.

Notifications panel

Notifications alert you to the arrival of new messages, calendar events and alarms, as well as ongoing events, such as when you are on a call.

Opening the notifications panel

Swipe down from the status bar to open the notifications panel. To close the notifications panel, swipe the screen upwards or tap \triangleleft .

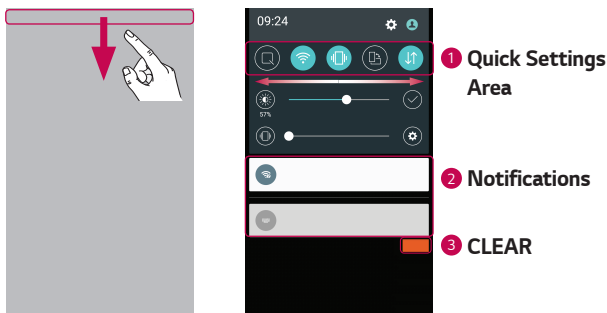

- 1 Tap each quick setting button to toggle it on/off. Touch and hold the desired button to directly access the settings menu for the function. To see more toggle buttons, swipe left or right. Tap ☰ to remove, add or rearrange quick setting buttons.
- 2 Current notifications are listed, each with a brief description. Tap a notification to view it.
- 3 Tap to clear all the notifications.

When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons, such as Wi-Fi and battery strength are shown on the right.

Indicator icons on the Status Bar












Indicator icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.












Notification icons






Status icons



The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description
	No SIM card inserted
	No network signal available
	Airplane mode is on
	Connected to a Wi-Fi network
	Wired headset connected
	Call in progress
	Missed call
	Bluetooth is on
	System warning
	An alarm is set
	New voicemail available




Icon	Description
	A song is currently playing
	Do not disturb - Total silence
	Vibrate mode is on
	Battery fully charged
	Battery is charging
	The phone is connected to a PC via a USB cable
	Downloading data
	Uploading data
	GPS is on
	Data is synchronizing
	Choose input method

	New text or multimedia message		Wi-Fi hotspot is active
	NFC is on		LG AirDrive connected
	Miracast connected		

NOTE

- The icon's location in the status bar may differ according to the function or service.
- The available options may vary depending on the region or service provider.






Capturing a screenshot

Press and hold the **Volume Down Key** and the **Power/Lock Key** at the same time for 2 seconds to capture a screenshot of the current screen. To view the captured image, tap the  >  >  > the **Screenshots** folder.

On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears on the screen when you tap an available text entry field.

Using the keypad and entering text

Icon	Description
	Tap once to capitalise the next letter you type. Double-tap for all caps.
	Tap to go to the keyboard settings. Touch and hold to change entering text method.
	Tap to enter a space.
	Tap to create a new line.
	Tap to delete the previous character.

Entering special characters

The on-screen keyboard allows you to enter special characters.




For example, to input "á", touch and hold the "a" button until the pop-up appears and displays related special characters. Without lifting the finger, drag your finger to the desired special character. Once it's highlighted, lift your finger.


NOTE

- A symbol at the top right corner of a key indicates that additional characters are available for that key.

To split or merge the keyboard

You can split the keyboard in half by spreading two fingers horizontally on the landscape keyboard. This makes it easier to type using your thumbs. Make sure the Split keyboard setting is enabled to use this feature.

- Tap  >  >  > **General** tab > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Split keyboard**.



Transferring data between a PC and the device

You can copy or move data between a PC and the device.

Transferring data using USB connection

- 1 Connect your device to a PC using the USB cable that came with your phone.
- 2 Open the Notifications panel, tap the current connection type, and select **Media device (MTP)**.
- 3 A window will pop-up on your PC, allowing you to transfer the desired data.

NOTE

- The LG Android Platform Driver is required to be installed on your PC to be able to detect the phone.
- Check the requirements for using **Media device (MTP)**.

Items	Requirement
OS	Microsoft Windows XP SP3, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

Transferring data using wireless connection

You can share or manage content from your phone on PC via Wi-Fi or mobile data using **LG AirDrive** function.

NOTE

- If you want to use the LG AirDrive, please refer to **LG AirDrive** section in **Settings**.

LG Bridge

LG Bridge is an application that helps you conveniently manage images, music, videos, documents, etc. saved on a LG mobile device on your PC. Also, you can back up your files such as contacts and images to your PC or update software of a mobile device.

NOTE

- You can see detailed instructions on how to use LG Bridge in Help menu after installing and opening the program.
- Supported features may vary depending on the device.
- The LG unified USB driver is a program required to connect an LG mobile phone to a PC. It is automatically installed when installing LG Bridge.

Features of LG Bridge

- Manage contents from your phone on PC via Wi-Fi or mobile data.
- Back up and restore the data of your mobile device via USB.
- Update software of a mobile device on your PC via USB.



To download the LG Bridge software

- 1 Go to www.lg.com.
- 2 Tap the Search button and enter the model name to search for the model.
- 3 Select the model information and click **GO**.
- 4 Scroll down, select the **PC SYNC** tab > **Windows** or **Mac OS** > **DOWNLOAD** to download LG Bridge.

SmartShare

SmartShare allows you to share multimedia content using Gallery and Music Apps.

Using SmartShare

- 1 While viewing the content you want to share, tap  > **SmartShare** or .
- 2 Tap the device you want to share from the list.
 - If the device is not displayed on the list, make sure that Wi-Fi, Wi-Fi Direct, or Bluetooth is turned on. Then tap **RESCAN**.

Enjoying content from nearby devices on your phone

- 1 To connect nearby devices to your device, tap the **Nearby devices** option on the **Gallery** and **Music** apps.
 - Make sure that your device and nearby devices are connected to the same Wi-Fi network and that the DLNA service on the nearby device is turned on.
- 2 Tap the device you wish to connect to.
If the device is not listed, tap **Search nearby devices**.
- 3 After a connection is established, you can enjoy the content on your device.

Apps

Installing or uninstalling apps

Play Store allows you to browse and search for free and paid applications.

To open the Play Store app




Tap  >  > .

To open a screen with details about an app

At any time while browsing in Play Store, tap an app to open its details screen.

The App details screen includes a description, ratings, comments, and related information about the app. From this screen, you can download, install, uninstall, rate the app, and more.






To uninstall applications

- 1 Tap  >  >  > **General** tab > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap **Uninstall**.

Calls

You can enjoy clear calling across the region.




Making a call

- 1 Tap  > .
- 2 Enter the number using the dialer. To delete a digit, tap .
- 3 After entering the desired number, tap  to place the call.
- 4 To end the call, tap .



NOTE

- To enter "+" to make international calls, touch and hold .


Calling your contacts

- 1 Tap  > .
- 2 Scroll through the contact list. You can also enter the contact's name in the Search field or scroll along the alphabet letters on the right edge of the screen.
- 3 In the list that is displayed, tap  to call.





Answering and rejecting a call

- Swipe  in any direction to answer an incoming call.
- Swipe  in any direction to decline an incoming call.

NOTE

- Swipe  if you want to decline a call and send a message to the caller.



Making a second call

- 1 During your first call, tap  > **Add call** and enter the number.
- 2 Tap .
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Tap the displayed number to toggle between calls. Or tap  to start a conference call.
- 5 To end all calls, tap .


NOTE

- You are charged for each call you make.

Viewing your call logs




- 1 Tap  >  > **Call logs** tab.
- 2 View a list of all dialed, received and missed calls.

NOTE

- Tap any call log entry to view the date, time and duration of the call.
- Tap  > **Delete all** to delete all of the recorded items.

Change your call settings



You can configure phone call settings, such as call forwarding, as well as other special features offered by your carrier.

- 1 Tap  > .
- 2 Tap  > **Call settings** and configure the desired options.




Contacts

You can add contacts on your phone and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

- 1 Tap  > .
- 2 Tap **Search contacts** and enter the contact name using the keyboard. Matches are displayed as you begin to type.



Adding a new contact

- 1 Tap  > .
- 2 Enter the new contact's number.
- 3 Tap  > **Add to Contacts** > **New contact**.
- 4 If you want to add a picture to the new contact, tap the image icon. Choose **Take photo** or **Select from Gallery**.
- 5 Enter the desired information for the contact.
- 6 Tap **SAVE**.



Favourites contacts

You can classify frequently called contacts as favourites.




Adding a contact to your favourites

- 1 Tap  > .
- 2 Tap a contact to view its details.
- 3 Tap the star at the top right of the screen. The star turns yellow.

Removing a contact from your favourites list

- 1 Tap  >  > **Favourites** tab.
- 2 Choose a contact to view its details.
- 3 Tap the yellow star at the top right of the screen. The star turns a dark colour and the contact is removed from your favourites.

Creating a group

- 1 Tap  >  > **Groups** tab.
- 2 Tap  > **New group**.
- 3 Enter a name for the new group. You can also set a distinct ringtone for the newly created group.
- 4 Tap **Add members** to add contacts to the group and tap **ADD**.
- 5 Tap **SAVE** to save the group.

NOTE

- If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contact list.

Messaging

Your phone combines text and multimedia messaging into one intuitive, easy to use menu.

NOTE

- You may be charged for each message you send. Please consult with your service provider.

Sending a message


1 Tap  >  > .


2 Tap , then select one or more entries from your Contacts list.

OR

Enter a contact name or contact number into the **To** field. As you enter the contact name, matching contacts appear. You can tap a suggested recipient and add more than one contact.

3 Tap the text field and start entering your message.

4 Tap  to open the options menu. Choose from any of the available options.

5 Tap  to attach the file that you want to share with message.

6 Tap **Send** to send your message.

Conversation view

Messages exchanged with another party are displayed in chronological order so that you can conveniently see and find your conversations.




Changing your messaging settings

Your phone's messaging settings are predefined to allow you to send messages immediately. You can change the settings based on your preferences.


- Tap  >  >  > **Settings**.

Camera

You can use the camera or camcorder to take and share pictures and videos.

- Tap  >  > .

Taking a photo


- 1 Frame your subject on the screen.
- 2 A square around the subject indicates that the camera has focused.
- 3 Tap  to take a photo. Your picture will be automatically saved to the Gallery.







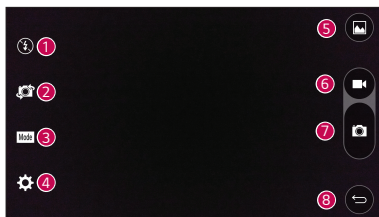

Camera mode options



- | | |
|---|---|
| 1 | Snap Video mode – Allows you to make a story video. |
| 2 | Manual Video Mode – Allows you to record video as well. You can control every detail option manually. |
| 3 | Manual Camera Mode – Allows you to use professional-type settings to capture exactly the shot. You can control every detail option manually. |
| 4 | Auto Mode – Allows you to apply commonly-used settings for your photos and videos. |
| 5 | Simple Mode – Allows you to take simple, quick photos. There are no additional settings and video capture is not available in this mode. |

Auto Mode on the viewfinder








1		Allows you to manage the camera's flash.
2		Tap to swap between the rear camera lens and the front camera lens.
3		Allows you to select the shot mode for the picture.
4		Tap this icon to open the camera settings menu.
5		Tap to view the last photo or video you recorded.
6		Tap to start recording.
7		Tap to take a photo.
8		Tap to exit the camera.

NOTE


- Be sure to clean the protective lens cover with a microfiber cloth before taking pictures. A lens cover with smudges from fingers can cause blurry pictures with a "halo" effect.








Using the mode settings

In the camera viewfinder, tap  to show the mode options. Tap each icon to use the following mode settings.

	Taking photos or videos in different views with the front and rear cameras.
	Allows you to take a panoramic picture.
	Recording a video for viewing it in slow motion.
	Recording a video for viewing it in fast motion.

Using the advanced settings


In the camera viewfinder, tap  to show the advanced options. Tap each icon to adjust the following camera settings.

	Combines photos taken at multiple exposures into one optimal photo to get a better photo in difficult lighting situations.
	Set the ratio of your picture and the quality of video.
	Allows you to take pictures with voice commands. When on, you just say " Cheese ", " Smile ", " LG ", etc. to take a picture.
	Set your camera's timer. This is ideal if you want to be a part of the picture or video.
	Allows you to take better pictures and record better videos by displaying a grid line for help with alignment.
	Tap to remove motion blur especially when you are walking or moving a lot.
	Set the storage location for your pictures and videos. Choose from IN (internal memory) and SD (memory card). This menu appears only when the SD card is inserted.




Allows you to learn how a function works. This icon will provide you with a help guide.

Manual Camera Mode on the viewfinder

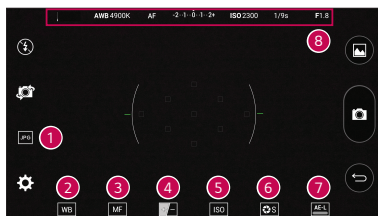


1		Tap to select a file format between the JPEG and the DNG.
2		Tap to improve colour quality in various lighting conditions.
3		Tap to use the manual focus mode.
4		Tap to adjust the brightness.
5		Tap to adjust the ISO.
6		Tap to adjust the shutter speed.
7		Tap to use the auto expose lock.
8		Displays the current Advanced settings values.

Manual Video Mode on the viewfinder

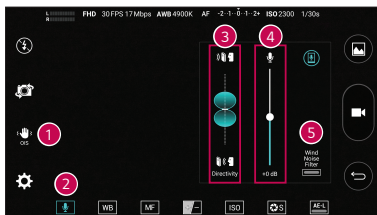


1		Tap to remove motion blur especially when you are walking or moving a lot.
2		Tap to set the recording settings. 3 Tap to adjust the sound direction. 4 Tap to adjust the decibel. 5 Tap to adjust the wind sound. : You can use this function after connected the earphone. Tap , you can hear the recording sound during a record.

Snap Video Mode on the viewfinder

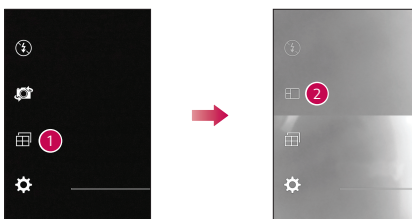



1		Tap to change the Multi-View mode.
2		Photos and videos are assembled into the layout you choose. To switch the each camera view, swipe the view.

Interval shot

You can take Interval shots from the Auto mode using the front camera lens. Touch and hold  to automatically take 4 selfies in a row.

Burst shot

You can take Burst shots from the Auto camera mode using the rear camera lens. Touch and hold  to take a barrage of photos in a row until the Capture button is released. The viewfinder displays the number of shots taken. When viewing Burst shots in the Gallery, tap  to display each shot in sequence (similar to a viewing flipbook).

Gesture shot

The Gesture shot feature allows you to take a picture with a hand gesture using the front camera.


Taking the photos with a gesture

There are two methods for using the Gesture shot feature.

- Raise your hand, with an open palm, until the front camera detects it and a box appears on the screen. Then close your hand into a fist to start the timer, allowing you time to get ready.

OR

- Raise your hand, in a clenched fist, until the front camera detects it and a box appears on the screen. Then unclench your fist to start the timer, allowing you time to get ready.

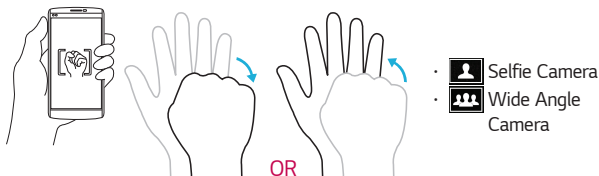

NOTE

- This function may not be supported in Multi-View Recording.

Gesture view

After taking a photo with the front camera lens, you can automatically check the captured photo with this gesture.

1 Tap  >  > .

2 Take a picture with the front camera.

3 After taking the picture, bring the phone close to your face. The captured photo will be displayed.

NOTE

- Depends on the speed and angle of the gesture, this feature may not work properly.
- When the angle is changed after Quick preview, it will go back to the camera mode. You should go to Gallery to view the picture again.

Multi-point Auto Focus

When you take a picture, the Multi-point Auto Focus (AF) function operates automatically and will allow you to see a clear image.

8X Zooming





When using the rear camera lens, you can zoom in or out to 8x.



NOTE

- Use a steady hand. This feature does not work with some functions. Objects may be overlapped when taking a picture of fast-moving subjects.





Once you have taken a photo

Tap the image thumbnail on the screen to view the last photo you took.




	Tap to edit the photo.
	Tap to take another photo immediately.
	Tap to open the available sharing options.
	Tap to delete the photo.

	Tap to access additional options.
	Tap to add the photo to your favourites.


Recording a video

- 1 Tap  >  > .
- 2 Frame your subject on the screen.
- 3 Tap  to start recording the video.
- 4 The length of the recording is displayed on the top of the screen.

NOTE







- Tap  to take pictures while recording video.
- 5 Tap  to pause recording video. You can resume recording again by tapping .

OR

Tap  to stop recording. Your video will be automatically saved to the Gallery.




After recording a video

Tap the video thumbnail on the screen to view the last video you recorded.

	Tap to edit the video.
	Tap to record another video immediately.
	Tap to open the available sharing options (such as Messaging or Bluetooth) to share.
	Tap to delete the video.
	Tap to access additional options.
	Tap to add the video to your favourites

Gallery

The Gallery application presents the pictures and videos in your storage, including those you've taken with the Camera application and those you downloaded from the web or other locations.

- 1 Tap  >  > .
- 2 Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
- 3 Tap a picture in an album to view it.

NOTE

- Depending on the software installed, some file formats may not be supported.
- Some files may not play properly due to their encoding.

Viewing pictures


The Gallery displays your pictures in folders. When an application, such as E-mail, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder.

Pictures are displayed by the date they were created. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

Editing photos

While viewing a photo, tap .

Setting wallpaper

While viewing a photo, tap  > **Set image as** to set the image as wallpaper or assign it to a contact.

NOTE

- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.

Zooming in and out


Use one of the following methods to zoom in on an image:







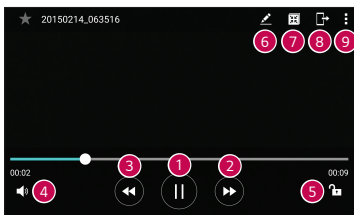


- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place in the picture zoom in. Pinch in or double-tap the image to zoom out.

Playing a video

- 1 Tap  >  > .
- 2 Select the video you want to watch.

Video options




1		Tap to pause/resume video playback.
2		Touch and hold to fast-forward incrementally. Tap to fast-forward 10 seconds.
3		Touch and hold to rewind incrementally. Tap to rewind 10 seconds.
4		Tap to adjust the video volume.
5		Tap to lock/unlock the screen.
6		Tap to set the various effects.
7		Tap to use QSlide for the Video app.
8		Tap to share your video using the SmartShare function.
9		Tap to access additional options.

NOTE

- While playing a video, slide the right side of the screen up or down to adjust the sound.
- While playing a video, slide the left side of the screen up or down to adjust the brightness.
- While playing a video, slide your finger from left to right (or vice versa) to fast-forward and rewind.

Editing videos

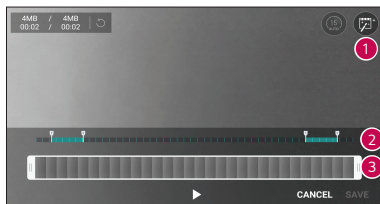

Tap , to edit the various effects.



- | | |
|---|---|
| 1 | Tap to set the background music, title or author. |
| 2 | Tap to adjust the video speed. |
| 3 | Tap to edit the frame. |




Deleting photos/videos

Use one of the following methods:

- While in a folder, tap , select the photos/videos and then tap **DELETE**.
- While viewing a photo, tap .

E-mail

You can use the Email application to read email from providers other than Gmail. The Email application supports the following account types: POP3, IMAP, Microsoft Exchange (for Enterprise users) and other accounts.

- Tap  >  > .

Adding an account

The first time you open the Email application, a setup wizard opens to help you add an email account. You can also add your email account using the **Settings** app.




- Tap  > **Settings** > .

Working with account folders

- Tap  > **Show all folders**.

Each account has Inbox, VIP, Sent, Drafts and Show all folders. Depending on the features supported by your account's service provider, you may have additional folders.



Composing and sending email

- 1 Tap .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be offered from your contacts. Separate multiple addresses with semicolons.
- 3 Tap the **Cc/Bcc** field to copy or blind copy to other contacts/email addresses.
- 4 Tap the text field and enter your message.
- 5 Longpress the text field to edit selected words (**Bold/Italic/Underline/Color**).
- 6 Tap  to attach the file you want to send with your message.
- 7 Tap  to send the message.

Changing an email general settings

- Tap  > **Settings** > **General settings**.

Deleting an email account

- Tap  > **Settings** >  > **Remove account** > Select the account to delete > **REMOVE** > **YES**.




Music

Your phone has a music player that lets you play all your favourite tracks.


NOTE







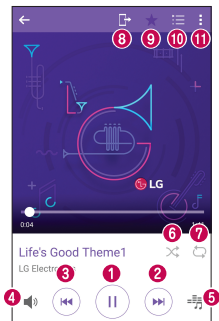





- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.
- Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Playing a song

- 1 Tap  >  > .
- 2 Tap the **Songs** tab.
- 3 Select the song you want to play.
- 4 The following options are available.


Music player options



1		Tap to pause playback.
		Tap to resume playback.
2		Tap to skip to the next track in the album, playlist or shuffle list. Touch and hold to fast-forward.
3		Tap to restart the current track or skip to the previous track in the album, playlist or shuffle list. Touch and hold to rewind.
4		Tap to adjust the volume.
5		Tap to set audio effects.
6		Tap to play the current playlist in shuffle mode (tracks are played in random order).
7		Tap to toggle through repeat all songs, repeat current song and repeat off.
8		Tap to share your music using the SmartShare function.
9		Tap to add the song to your favourites.
10		Tap to open the current playlist.
11		Tap to access additional options.


Clock

The Clock app gives you access to the Alarms, Timer, World clock and Stopwatch functions. Access these functions by tapping the tabs across the top of the screen or swiping horizontally across the screen.

- Tap  >  > .

Alarms

The Alarms tab allows you to set alarms.

- 1 Tap **Alarms** tab.
- 2 Tap  to add a new alarm.
- 3 Adjust the settings as necessary and tap **SAVE**.

NOTE

- You can also tap an existing alarm to edit it.


Timer

The Timer tab can alert you with an audible signal when a set amount of time has passed.

- 1 Tap **Timer** tab.
- 2 Set the desired time on the timer.
- 3 Tap **Start** to start the timer.
- 4 Tap **Stop** to stop the timer.

World clock

The World clock tab allows you to easily check the current time in other cities around the world.

- 1 Tap **World clock** tab.
- 2 Tap  and select the desired city.




Stopwatch

The Stopwatch tab allows you to use your phone as a stopwatch.


- 1 Tap **Stopwatch** tab.
- 2 Tap **Start** to initiate the stopwatch.
 - Tap **Lap** to record lap times.
- 3 Tap **Stop** to stop stopwatch.

Calculator

The Calculator app allows you to perform mathematical calculations using a standard or scientific calculator.





- 1 Tap  >  > .
- 2 Tap the number buttons to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, x or ÷) followed by =.

NOTE

- For more complex calculations, tap .

Calendar







The Calendar app allows you to track your schedule of events.

- 1 Tap  >  > .
- 2 Tap the date you want to add an event to. Then tap .


Voice Recorder

The Voice Recorder app records audible files for you to use in a variety of ways.

Recording a sound or voice




- 1 Tap  >  > .
- 2 Tap  to begin recording.
- 3 Tap  to end the recording.
- 4 Tap  to listen to the recording.

NOTE

- Tap  to access your recordings. You can listen to your saved recordings.




Downloads

Use this application to see what files have been downloaded through the applications.

- Tap  >  > .

FM Radio

Your phone has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.

- Tap  >  > .

NOTE

- You must plug in your earphones in order to use them as an antenna.

LG Backup

About backing up and restoring device data

It is recommended that you regularly create and save a backup file on the internal storage, especially before updating any software. Maintaining a current backup file in storage memory may allow you to recover device data if your device is lost, stolen, or corrupted by an unforeseen issue.

This LG Backup application is supported between LG smartphones and tablets, other software or operating system versions. As a result, when you buy the new LG smartphones and tablets, you can backup the current device data to your new device.

If you have the LG Backup application preloaded on your smartphones and tablets, you can backup and restore most of your data, including downloaded and pre-installed applications, bookmarks, calendar entries, contacts, home screen settings, and system settings.

WARNING

- To protect against an unexpected power off during backup or restore operations, due to insufficient battery power, you should always keep your battery fully charged.

NOTE

- All files that are stored on your device are deleted before the backup file is restored. Make sure to copy the backup file to another location.
- Please note that your device data will be overwritten with the content of your backup.

To backup your device data

1 Tap  >  > .

2 Select the desired options.

- **Copy data between devices** – Copy data from old device to new device.
- **Back up & restore** – Back up data or restore from backup.

Google apps

Google provides entertainment, social network, and business apps. You may require a Google account to access some apps.

To view more app information, access each app's help menu.

NOTE

- Some apps may not be available depending on the region or service provider.

Google

Search quickly for items on the Internet or your device.

Chrome

Search for information and browse webpages.

Gmail

Send or receive emails via the Google Mail service.

Maps

Find your location on the map, search for locations, and view location information for various places.

YouTube

Watch or create videos and share them with others.

Drive

Store your content on the cloud, access it from anywhere, and share it with others.

Play Music

Discover, listen to, and share music on your device.

Play Movies & TV

Watch videos stored on your device and download various content to watch from the Play Store.

Hangouts

Chat with your friends individually or in groups and use images, emoticons, and video calls while you are chatting.

Photos

Manage photos, albums, and videos that you have saved on the device and uploaded to Google+.

Google Settings

Configure settings for some features provided by Google.

Voice Search

Search quickly for items by saying a keyword or phrase.

A decorative graphic consisting of several groups of horizontal white lines of varying lengths, arranged in a descending staircase pattern from the top left towards the bottom right. The background is a solid, vibrant red color.

Settings




Access the Settings menu

The Settings app allows you to customize and personalize your phone.

Opening the settings app

- Tap  > touch and hold  > **System settings**.

OR

- Tap  >  > .

Viewing settings

Tap  to switch the view mode.

- **List view** – Scroll up and down through the list.
- **Tab view** – Swipe left and right or tap the tab you want.

NOTE


- The instructions to perform tasks in this guide are based on the default view setting.

Networks Settings

Wi-Fi

You can use high-speed Internet access while within the coverage of the wireless access point (AP).

On the **Settings** screen, tap **Networks** tab > **Wi-Fi**.

- 1 Tap  to turn Wi-Fi on and start scanning for available Wi-Fi networks.
- 2 Tap a network to connect to it.
 - If the network is secured with a lock icon, you will need to enter a security key or password.
- 3 The status bar displays icons that indicate Wi-Fi status.

NOTE

- If you are out of the Wi-Fi zone or have set Wi-Fi to Off, the device may automatically connect to the Web using mobile data, which may incur data charges.

Wi-Fi Direct

Wi-Fi Direct provides a direct connection between Wi-Fi enabled devices without requiring an access point.

- Tap  > **Advanced Wi-Fi** > **Wi-Fi Direct**.

NOTE

- When in this menu, your device is visible to other visible Wi-Fi Direct devices nearby.


Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices.

NOTE

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth feature.
- Always make sure that you share and receive data with devices that are trusted and properly secured.
- If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Pairing your phone with another Bluetooth device

- 1 On the **Settings** screen, tap **Networks** tab > **Bluetooth**.
- 2 Tap  to turn Bluetooth on and start scanning for available Bluetooth devices.
 - If you want to detect the visible devices in range additionally, tap **SEARCH**.
- 3 Choose the device you want to pair with from the list. Once the pairing is successful, your phone connects to the other device.

NOTE

- Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognise their partnership and exchange information.
- Please consult documentation included with Bluetooth device for information on pairing mode and passcode (typically 0 0 0 0 – four zeroes).


Sending data via Bluetooth

- 1 Select a file or item such as a contact or media file.
- 2 Select the option for sending data via Bluetooth.
- 3 Search for and pair with a Bluetooth-enabled device.

NOTE


- Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Receiving data via Bluetooth

- 1 On the **Settings** screen, tap **Networks** tab > **Bluetooth**.
- 2 Tap  to turn Bluetooth on.
- 3 You will receive a request to accept a pairing attempt from the sending device. Be sure to select **ACCEPT**.

Mobile data

Displays the data usage and mobile data usage limit.

- Tap  to toggle your mobile data connection On or Off. This allows you to manage your mobile data usage. You can use a Wi-Fi network connection for data instead.

Call

Allows you to configure various call settings.

On the **Settings** screen, tap **Networks** tab > **Call**.


- **Voicemail** – Allows you to select your carrier's voicemail service.
- **Show voice calls while in an app** – Display incoming voice call pop-up when an app is in use.
- **Fixed dialing numbers** – Allows you to manage and compile a list of numbers that can be called from your phone. You need your PIN2, which is available from your operator. If activated, only numbers in the fixed dial list can be called from your phone.
- **Call reject** – Allows you to set the call decline function.
- **Decline with message** – When you want to decline a call, you can send a quick message using this function. This is useful if you need to decline a call during a meeting.
- **Call forwarding** – Allows you to choose when to forward calls.
- **Auto answer** – Set the time before a connected hands-free device automatically answers an incoming call.
- **Connection vibration** – Vibrates your phone when the other party answers the call.
- **Noise suppression** – Suppress background noise on my end during a call.
- **Voice clarity** – Enhance voice clarity to hear more clearly.
- **Save unknown numbers** – Allows you to add unknown numbers to contacts after a call.
- **Power key ends call** – Allows you to use the Power key to end calls.
- **Answer an incoming call** – During an incoming call, bring the phone to your ear to answer the call.
- **Silence incoming calls** – Enable to allow you to flip the device to silence incoming calls.
- **Call barring** – Locks incoming, outgoing or international calls.
- **Call duration** – Allows you to view the call duration for various types of calls.

- **Additional settings** – Allows you to change the following settings such as **Caller ID** or **Call waiting**, etc.

NFC

Your phone is an NFC-enabled cell mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimetres. You can share your content with an NFC tag or another NFC support device by simply tapping it with your device. If you tap an NFC tag with your device, it displays the tag content on your device.


On the **Settings** screen, tap **Networks** tab > **Share & connect** > **NFC**

- 1 Tap  to turn NFC on.
- 2 Allows you to send or receive files simply by bringing your phone and another data compatible device together (typically within 20mm of each other) at the NFC touchpoint.
 - **Tap & pay** – When NFC is turned on, you can use the Tap & pay feature to pay for items just by touching your phone to a reader at a register. If your phone doesn't have a default app, you can browse Google Play Store for other payment apps.

Android Beam

When this feature is turned on, you can transfer app content to another NFC-capable device by holding the devices close together. Just bring the device together (typically back to back) and then tap your screen. The app determines what gets beamed.

On the **Settings** screen, tap **Networks** tab > **Share & connect** > **Android Beam**


- 1 Tap  to turn Android Beam on (Turn on Android Beam on each device).
- 2 Select the screen or files to share (e.g. images from Gallery).
- 3 Hold devices together.

- 4 Tap the screen that you want to send after shrinking the screen (Each app determines what is sent or received).

SmartShare Beam

SmartShare Beam lets you send and receive files between LG phones or tablets quickly.

Receiving data via SmartShare Beam

- 1 On the **Settings** screen, tap **Networks** tab > **Share & connect** > **SmartShare Beam**.
- 2 Tap  to turn SmartShare Beam on. Wi-Fi will be turned on automatically on your phone and it's ready to receive files.

Sending data via SmartShare Beam

- 1 Select a file or item such as a media file.
- 2 Select the option for sending data via SmartShare Beam.
- 3 Choose the device you want to pair with from the list.

Media server

Allows you to share the phone's multimedia content with nearby DLNA-compatible devices.

On the **Settings** screen, tap **Networks** tab > **Share & connect** > **Media server**


- Enable **Content sharing** option to allow nearby devices to access your content.

Miracast

Allows you to wirelessly mirror the phone screen and sound onto a Miracast dongle or TV.

On the **Settings** screen, tap **Networks** tab > **Share & connect** >

Miracast

- Tap  to turn Miracast on and start scanning for available Miracast devices. Your phone displays all of the devices that can project your content via Miracast.

LG AirDrive

Allows you to connect to PC to manage your phone. Set up LG Bridge from LG Electronics website on a PC before use. When you sign in to the same LG Account on your phone and PC, you can use the LG AirDrive function.

- 1 Log in to the same LG account on a mobile devices and a PC.
- 2 On the **Settings** screen, tap **Networks** tab > **Share & connect** > **LG AirDrive**.
- 3 Run the LG Bridge application on your PC and select **LG AirDrive**.

NOTE

- If you need to set up **LG Bridge**, please refer to **LG Bridge** section in **Basics**.


Printing

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

On the **Settings** screen, tap **Networks** tab > **Share & connect** > **Printing**.

USB tethering


Allows you to share the internet connection with your computer via a USB cable.

- 1 Connect your phone to your PC with a USB cable.
- 2 On the **Settings** screen, tap **Networks** tab > **Tethering**.
- 3 Tap  to turn USB tethering on.

Wi-Fi hotspot


You can also use your phone to provide a mobile broadband connection. Create a hotspot and share your connection.

On the **Settings** screen, tap **Networks** tab > **Tethering**

- 1 Tap  to turn Wi-Fi hotspot on.
- 2 Tap Set up Wi-Fi hotspot to change the SSID, security type, password, and other hotspot options.

Bluetooth tethering

Allows you to connect to other devices via Bluetooth.

- On the **Settings** screen, tap **Networks** tab > **Tethering**.
- Tap  to turn Bluetooth tethering on to share your connection via Bluetooth tethering.

Airplane mode

Allows you to use many of your phone's features, such as games, and music, when you are in an area where making or receiving calls or data use is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online data.

On the **Settings** screen, tap **Networks** tab > **More** > **Airplane mode**.

Mobile networks

This menu allows you to configure various mobile network settings such as **Mobile data**, **Data roaming**, etc.

On the **Settings** screen, tap **Networks** tab > **More** > **Mobile networks**.

VPN

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

On the **Settings** screen, tap **Networks** tab > **More** > **VPN**.

Sound & notification settings

Allows you to change settings for various sounds on the device.

On the **Settings** screen, tap **Sound & notification** tab.

- **Sound profile** – Allows you to set your phone's sound profile.
- **Volume** – Adjust the phone's volume settings to suit your needs and environment.
- **Ringtone** – Allows you to set the ringtones for calls. You can also add and delete ringtones.
- **Ringtone ID** – Allows you to compose ringtones based on phone number of incoming call.
- **Vibration strength** – Allows you to set the vibration strength for calls, notifications and touch feedback.
- **Sound with vibration** – Enable to set the phone to vibrate in addition to the ringtone when you receive calls.
- **Vibration type** – Allows you to choose the type of vibration.
- **Do not disturb** – Allows you to set a schedule when to prevent interruptions from notifications. You can set to allow certain features to interrupt when Priority only is set.
- **Lock screen** – Allows you to choose if you want to show or hide notifications on the lock screen.

- **Apps** – Allows you to set notifications for individual apps including preventing them from displaying notifications and setting priority.
- **32 bit Hi-Fi DAC** – Enable this feature increase audio quality with supported headphone.
- **Notification sound** – Allows you to set the notification sound. You can also add and delete notification sounds.
- **Vibrate on tap** – Enable to vibrate when tapping the Home touch buttons and during other UI interactions.
- **Sound effects** – This menu lets you select whether you hear tones when tapping numbers on the dial pad, selecting on-screen options, and more.
- **Message/call voice notifications** – Allows your device to read out incoming calls and message events automatically.

Display settings

Second screen

On the **Settings** screen, tap **Display** tab > **Second screen**.

If you need more information, please refer to **Second screen** in **Features you will love**.

Home screen

Allows you to set your home screen settings.

On the **Settings** screen, tap **Display** tab > **Home screen**.

- **Select Home** – Select the desired Home theme.
- **Smart Bulletin** – Enable to use an additional Home screen showing customised information.
- **Theme** – Sets the screen theme for your device. You can download new themes from LG SmartWorld.
- **Wallpaper** – Sets the wallpaper to use on your Home screen.
- **Screen swipe effect** – Choose the desired type of effect to display when you swipe from one Home screen canvas to the next.

- **Allow Home screen looping** – Enable to allow continuous Home screen scrolling (loop back to first screen after last screen).
- **Help** – Displays help information for the Home screen.

Lock screen

Allows you to set your lock screen settings.

On the **Settings** screen, tap **Display** tab > **Lock screen**.

- **Select screen lock** – Allows you to set a screen lock type to secure your phone.
- **Smart Lock** – Sets to keep your phone unlocked with trusted device or a place. If you need more information, please refer to **Smart Lock** section in **Basics**.
- **Screen swipe effect** – Sets the effect used when swiping the lock screen.
- **Wallpaper** – Select the wallpaper to display for your lock screen.
- **Clock** – Select the clock view mode to display for your lock screen.
- **Shortcuts** – Allows you to choose the shortcuts available on the lock screen.
- **Weather animation** – Enable to show weather animation on the lock screen for the current location.
- **Contact info for lost phone** – Allows you to display the owner information on the lock screen in case the phone is lost.
- **Lock timer** – Allows you to set the amount of time before the screen automatically locks after the screen has timed-out.
- **Power key instantly locks** – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the lock timer setting.

Home touch buttons

Set the Home touch buttons displayed at the bottom of all screens. Set which buttons are displayed, their position on the bar and what they look like.

On the **Settings** screen, tap **Display** tab > **Home touch buttons**.

More display settings

Allows you to set other display settings.

On the **Settings** screen, tap **Display** tab.

- **Font type** – Select the desired font type.
- **Font size** – Select the desired font size.
- **Brightness** – Adjust the screen brightness by using the slider.
- **Auto-rotate screen** – Set to switch orientation automatically when you rotate the phone.
- **Screen timeout** – Set the time delay before the screen automatically turns off.
- **Daydream** – Select the screen saver to be displayed when the phone is sleeping while docked and/or charging.
- **Motion sensor calibration** – Allows you to improve the accuracy of the tilt and speed of the sensor.

General settings

Language & keyboard

Allows you to change the text input settings.

Select the language for the text on your phone and for configuring the on-screen keyboard, including words that you've added to its dictionary.

On the **Settings** screen, tap **General** tab > **Language & keyboard**.

- **Language** – Choose a language to use on your phone.
- **Current keyboard** – Allows you to select the other keyboard type.
- **LG Keyboard** – Change the LG Keyboard settings.
- **Google voice typing** – Enable to select Google voice typing to enter data. Tap the Settings icon to change the Google voice settings.
- **Text-to-speech output** – Tap to set the preferred engine or general settings for text-to-speech output.
- **Pointer speed** – Adjust the pointer speed.

- **Reverse buttons** – Reverse the mouse buttons to use primary button on right.

Location

Turn on location service, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

On the **Settings** screen, tap **General** tab > **Location**.

- **Mode** – Sets the how your current location information is determined.
- **My place** – Enable to locate your home for smart settings.
- **Low power location estimation** – Enable to use hardware acceleration.
- **Camera** – Enable to tag photos or videos with their locations.
- **Google Location History** – Allows you to choose your location information settings as accessed by Google and its products.

Accounts & sync

Use this menu to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules and whether all applications can synchronize user data automatically.

Gmail™, Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

On the **Settings** screen, tap **General** tab > **Accounts & sync**.

- **Auto-sync data** – Enable this option to automatically sync all accounts you've added on your phone.
- **ACCOUNTS** – Displays all of your added accounts. Tap one to view and/ or manage it.
- **ADD ACCOUNT** – Tap to add new account.

Cloud

Allows you to add a cloud account to quickly and easily use a cloud service.

On the **Settings** screen, tap **General** tab > **Cloud**.

Users

Add user to share the phone with other people. Each user can have their own apps and content in their own space. Initial setup is required for new users to use phone.

On the **Settings** screen, tap **General** tab > **Users**.

- **ADD USER** – Allows you to add and configure a new user for the device.

Accessibility

Use the Accessibility settings to configure accessibility plug-ins you have installed on your phone.

On the **Settings** screen, tap **General** tab > **Accessibility**.

- **Vision** – Sets options for people with impaired sight.
 - **TalkBack** – Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback.
 - **Message/call voice notifications** – Enable to allows you to hear automatic spoken alerts for incoming calls and messages.
 - **Screen shade** – Enable to set the screen to a darker contrast.
 - **Font size** – Sets the font size.
 - **Touch zoom** – Allows you to zoom in and out by triple-tapping the screen.
 - **Screen colour inversion** – Enable to invert the colours of the screen and content.
 - **Screen colour adjustment** – Allows you to adjust the colours of screen and content.
 - **Power key ends call** – Enable so that you can end voice calls by pressing the Power/Lock Key.
- **Hearing** – Sets options for people with impaired hearing.

- **Captions** – Allows you to customise caption settings for those with hearing impairments.
- **Flash alerts** – Enable to set the flash to blink for incoming calls and notifications.
- **Turn off all sounds** – Enable to turn off all device sounds.
- **Audio type** – Sets the audio type.
- **Sound balance** – Sets the audio route. Move the slider on the slide bar to set it.
- **Motor & cognition** – Sets options for people with impaired motor skills.
 - **Touch feedback time** – Sets the touch feedback time.
 - **Touch assistant** – Show a touch board with easy access to common actions.
 - **Screen timeout** – Sets the amount of time before the backlight turns off automatically.
 - **Touch control areas** – Allows you to select an area of the screen to limit touch activation to just that area of the screen.
- **Accessibility features shortcut** – Allow you to access selected features quickly when triple-tapping the Home button.
- **Auto-rotate screen** – Enable to allow the phone to rotate the screen depending on the physical phone orientation (portrait or landscape).
- **Switch Access** – Allows you to interact with your device using one or more switches that work like keyboard keys. This menu can be helpful for users with mobility limitations that prevent them from interacting directly with the your device.

Mini view

Turn on this menu to shrink the screen for use with one hand by swiping left or right across the Home touch buttons. If you need more information, please refer to **Mini view** section in **Features you will love**.

On the **Settings** screen, tap **General** tab > **Mini view**.

Shortcut key

Get quick access to apps by pressing the **Volume Keys** twice when the screen is off or locked.

On the **Settings** screen, tap **General** tab > **Shortcut key**.

- Press the **Volume Up Key** twice to open the Capture+ app.
- Press the **Volume Down Key** twice to launch the Camera app.
- **Quick shot** – Enable this option to immediately take a photo when the Volume Down Key is pressed twice.

Google

Use Google Settings to manage your Google apps and account settings.

On the **Settings** screen, tap **General** tab > **Google**.

Fingerprints & security

Use this menu to configure how to help secure your phone and its data.

On the **Settings** screen, tap **General** tab > **Fingerprints & security**.

- **Fingerprints** – Unlock screen or see locked content with your fingerprint. If you need more information, please refer to **Fingerprints** section in **Features you will love**.
- **Content lock** – Select lock types to lock memos for QuickMemo+.
- **Encrypt phone** – Allows you to encrypt data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.
- **Encrypt SD card storage** – Encrypt SD card storage and keep data unavailable for other devices.
- **Set up SIM card lock** – Sets the PIN to lock your SIM card and allows you to change the PIN.
- **Password typing visible** – Enable to briefly show each character of passwords as you enter them so that you can see what you enter.
- **Phone administrators** – View or deactivate phone administrators.
- **Unknown sources** – Allow installation of non-Play Store applications.
- **Verify apps** – Disallow or warn before installation of apps that may cause harm.

- **Storage type** – Displays the current storage type.
- **Certificate management** – Allows you to manage your security certificates.
- **Trust agents** – Select apps to use without unlocking screen.
- **Screen pin** – You can enable your device to only show a certain app's screen using screen pin.
- **App usage access** – Allows you to view usage information of apps on your phone.

Smart settings

Allows you to turn on/off, open or change something such as Wi-Fi, Music, Sound profile according to where you are or what you do.

On the **Settings** screen, tap **General** tab > **Smart settings**.

Quick Cover case

With Quick Cover case, you can check incoming calls and stop alarm/timer when the cover is closed. To unlock with the cover, screen lock must be set to Swipe.

On the **Settings** screen, tap **General** tab > **Quick Cover case**.

Dual window

Allows you to configure the Dual Window feature.

On the **Settings** screen, tap **General** tab > **Dual window**.

- **Auto-open** – Checkmark to allow you to tap a link on the full screen or attachments from emails to open Dual window.
- **Help** – Display tips for using Dual window.

If you need more information, please refer to **Dual window** section in **Features you will love**.

Date & time

Set your preferences for how the date and time is displayed.

On the **Settings** screen, tap **General** tab > **Date & time**.

Storage & USB

You can monitor the used and available internal memory in the device. On the **Settings** screen, tap **General** tab > **Storage & USB**.

INTERNAL STORAGE

- **Total space** – Displays the total amount of space and the available space in your phone's internal memory in text and with a color-coded bar graph (unused space is gray). Corresponding apps and the amount of space they use is listed under each device user.

SD CARD

- **Total space** – Displays the total amount of space and the remaining available space in your memory card.

Battery & power saving

Displays the current battery status including the percentage of remaining charge and charging state.

On the **Settings** screen, tap **General** tab > **Battery & power saving**.

- **Battery usage** – Displays the battery usage level and battery use details. Tap one of the items to see more detailed information.
- **Battery percentage on status bar** – Checkmark to display the battery level percentage on the status bar next to the Battery icon.
- **Battery saver** – Tap the Battery Saver switch to toggle it on or off. Sets the battery charge percent level that automatically turns on Battery Saver.
- **Game optimizer** – Adjusts the video quality in games to save battery.

Memory

You can monitor the memory used averagely and the memory used by apps in the device.

On the **Settings** screen, tap **General** tab > **Memory**.

Smart cleaning

Displays the space in use and free space in your phone and allows you to selectively clean up your files.

On the **Settings** screen, tap **General** tab > **Smart cleaning**.

- 1 Tap a folder location, then set the appropriate boxes.
- 2 Tap **CLEAN** > **YES**.

Apps

Allows you to view details about the apps installed on your phone, manage their data, and force them to stop.

On the **Settings** screen, tap **General** tab > **Apps**.

Default message app

This menu allows you to choose what messaging app to use as your default messaging app.

On the **Settings** screen, tap **General** tab > **Default message app**.

Backup & reset

Change the settings for managing your settings and data.

On the **Settings** screen, tap **General** tab > **Backup & reset**.

- **LG Backup** – Backs up all information on the device and restores it in the event of data loss or replacement. If you need more information, please refer to **LG Backup** section in **Apps**.
- **Back up my data** – Back up app data, Wi-Fi passwords, and other settings to Google servers.
- **Backup account** – Displays the account that is currently being used to back up information.
- **Automatic restore** – When reinstalling an app, restore backed up settings and data.
- **Network settings reset** – Reset all network settings.

- **Factory data reset** – Reset your settings to the factory default values and delete all your data. If you reset the phone this way, you are prompted to re-enter the same information as when you first started Android.

About phone

View legal information, check phone status and software versions, and perform a software update.

On the **Settings** screen, tap **General** tab > **About phone**.

Appendix

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp> → select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your mobile phone.

NOTE

- LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

You should first check the software version on your mobile phone:

Settings > **General** tab > **About phone** > **Update Center** > **Software Update** > **Check now for update.**




NOTE

- Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.
- This feature depends on your network service provider, region and country.

FAQ

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM card error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6-12 months old. If so, change your SIM or USIM card at your network provider's nearest branch. Contact your service provider.

Message	Possible causes	Possible corrective measures
Codes do not match	To change a security code, must need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you entered do not match.	
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Downloaded application causes a lot of errors.	Remove the application.	<ol style="list-style-type: none"> 1 Tap  >  > . 2 Tap General tab > Apps. 3 Tap the app > Uninstall.
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be turned on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different outlet.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed.	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive/send SMS & photos	Memory full	Delete some data, such as applications or messages from your phone to make more memory available.
Files do not open	Unsupported file format	Check the supported file formats.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or no interruptions mode.

Message	Possible causes	Possible corrective measures
Hangs up or freezes	Intermittent software problem	<p>If the screen freezes or the phone does not respond when you try to operate it, remove the battery and reinsert it. Then power the phone back on.</p> <p>OR</p> <p>Try to perform a software update through the website.</p>

Anti-Theft Guide

You can set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google account or screen lock information can use the device.

All you need to make sure your device is protected is:

- **Set a screen lock:** If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- **Add your Google account on your device:** If your device is wiped but you have your Google account on it, the device can't finish the setup process until your Google account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google account password if you need to do a factory reset. This ensures that you or someone you trust is doing the reset.

NOTE

- Do not forget your Google account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.

More information

Open source software notice information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Trademarks

- Copyright ©2016 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.

DivX HD

This DivX Certified® device has passed rigorous testing to ensure it plays DivX® video.

To play purchased DivX movies, first register your device at vod.divx.com. Find your registration code in the DivX VOD section of your device setup menu.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.


Dolby Digital Plus DOLBY DIGITAL PLUS

Manufactured under license from Dolby Laboratories. Dolby, Dolby Digital Plus, and the double-D symbol are trademarks of Dolby Laboratories.

Laser safety statement

Caution!

This product employs a laser system. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorised service centre. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure or make direct contact with the laser.

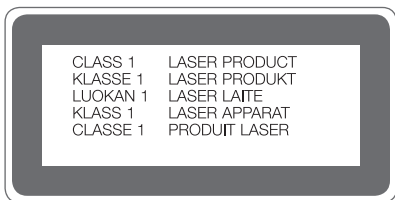

Declaration of conformity

Hereby, **LG Electronics** declares that this **LG-H960/LG-H960A** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>



Disposal of your old appliance

- 1 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 2 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 3 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Disposal of waste batteries/accumulators

- 1 This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
- 2 All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
- 4 For more detailed information about disposal of your old batteries/ accumulators, please contact your city office, waste disposal service or the shop where you purchased the product.



CE0168ⓘ