



Owner's Manual

Wearable Air Purifier

Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

ENGLISH

AP300A Series



MFL71724106
Rev.03_012821

www.lg.com
Copyright © 2020 - 2021 LG Electronics Inc. All rights reserved.

TABLE OF CONTENTS

SAFETY PRECAUTIONS

- 03 Using the Product
- 05 Storing the Product
- 05 Battery Safety

UNPACKING

- 06 Components
- 07 Appliance Overview

ASSEMBLY

- 08 Installing the PuriCare Filters
- 09 Assembling the Face Guard
- 10 Installing the Inner Cover

CHARGING

- 11 Charging the Battery
- 11 Checking Remaining Battery Level

OPERATION

- 13 Turning Product On and Adjusting Fan Speed
- 14 Wearing and Using the Product

MAINTENANCE

- 15 Filter Replacement
- 16 Maintaining the Face Guard
- 17 Cleaning the Product
- 17 Cleaning the Exhaust Unit
- 18 Maintaining the Ear Straps
- 18 Washing the Portable Pouch

TROUBLESHOOTING

- 19 Before Calling for Service

APPENDIX

- 20 Product Specifications

This manual may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY PRECAUTIONS

Please make sure to read the following safety precautions as they are designed to prevent unexpected danger and damage.

These safety precautions are divided into two sections, Warning statements and Caution statements.

⚠ WARNING: Failure to follow the instructions laid down in this manual may cause serious injury or death.

⚠ CAUTION: Failure to follow the instructions laid down in this manual may cause minor injury or product damage.

Using the Product

⚠ WARNING

- This product is an Air Purifier that protects the respiratory organs from harmful particulate substances such as yellow dust and fine dust. Do not use this product for other purposes.
- Do not use the product in a poorly ventilated area where oxygen is not continually supplied.
- To avoid the risk of infection, do not share the product with other users or transfer use to another person.
- Do not use or charge the product when it is wet. If the product has been submerged, stop using the product and contact an LG Electronics Customer Information Center.
- Do not use or store firearms, combustibles or inflammables near the product.
- Do not disassemble or damage the product, battery or parts. Do not use the product if the product, battery or any part has been damaged.
- Do not use disinfectants and/or sterilizers on any part of the product.
- Do not exercise strenuously while wearing the product.
- If you experience respiratory discomfort while using the product, discontinue use and consult a physician, if needed.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate this product while driving.
- If you detect a strange sound, a chemical or burning smell, or smoke coming from the appliance, discontinue use immediately, and contact an LG Electronics Customer Information Center.
- Repair or immediately replace all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- Do not allow foreign substances such as water, coffee, or soft drinks to enter the product.
- Dispose of the packing materials safely so as to keep them out of the reach of children.



CAUTION

- Do not use strong detergents or solvents to clean the product.
- Do not wear the product in the rain.
- Do not apply excessive impact to the product.
- Do not place obstacles around the air inlet of the product.
- If you experience skin problems while using the product, stop using it and consult a doctor.

Storing the Product

WARNING

- Do not place the product near a car window where it is exposed to direct sunlight or on top of an electric pad or heater.
- Do not place the product near humid areas such as saunas, swimming pools, or bathrooms.
- Do not store the product in a place where there is a lot of salt.

Battery Safety

WARNING

- This product uses an integrated battery. Do not separate or replace the battery. If the battery is faulty, the product and charging accessories should be replaced by an authorized LG service provider.

Disposal of your old appliance

- The symbol indicating separate collection for electrical and electronic equipment consists of the crossed-out wheeled bin.

Disposal of waste batteries

- 1 All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 2 The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health.
- 3 For more detail information about disposal of your old batteries, please contact your city office, waste disposal service or the shop where you purchased the product. Also You can contact our LG Support Representative Call center from below Link https://www.lg.com/sa_en/support/contact/telephon.

UNPACKING


Components



Main unit



Face guard

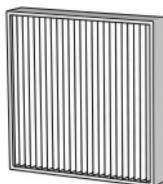

PuriCare Filters(2EA)




Inner cover(10EA)



Strap Extender




Charging cable

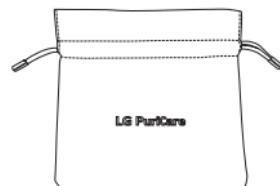

Portable pouch

Appliance Overview

Front View

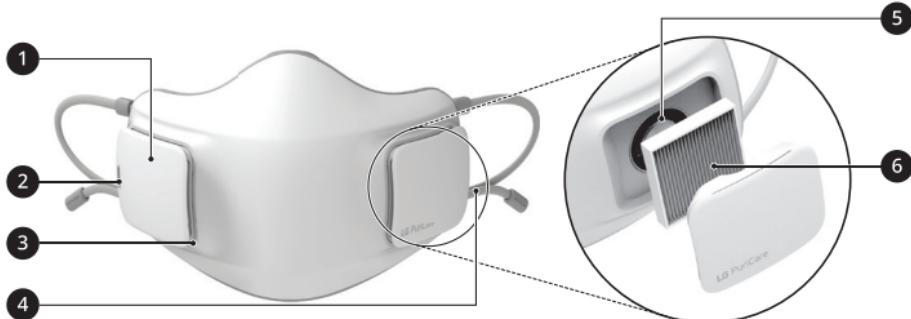

① Filter case

④ Ear strap


② Power button/battery indicator light

⑤ Suction fan

③ Air inlet

⑥ PuriCare filter

Rear View

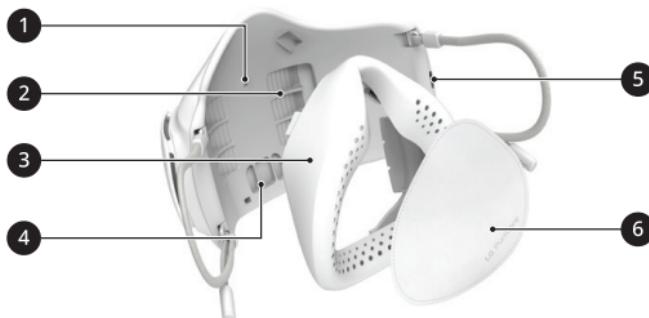

① Respiratory sensor

④ Exhaust unit

② Air inlet


⑤ Charging unit

③ Face guard

⑥ Inner Cover

ASSEMBLY

Installing the PuriCare Filters

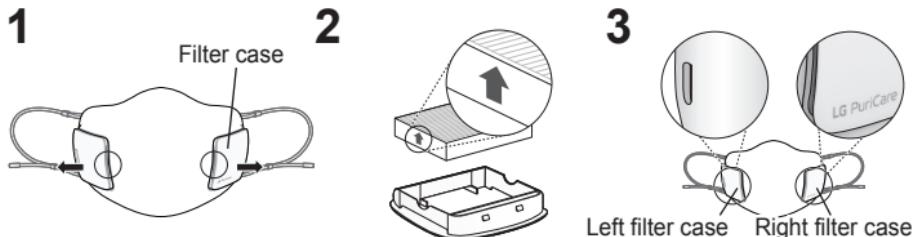


- 1 Separate the filter cases from the product.
 - Pull the filter cases at the spots marked in Figure 1 above to separate the cases from the product.
- 2 Insert the PuriCare Filters into the filter cases with the arrow on the PuriCare Filters facing up.
- 3 Align the filter cases with the grooves at the front of the product and press the cases in until they click into place.
 - Make sure to align the filter cases correctly before reassembling. The LG PuriCare logo is on the right filter case.

NOTE


- Do not press the center of the PuriCare Filter too hard when installing the filter. Doing so may lead to the filter blocking the air inlet.
- Pay attention to the direction indicated by the arrow on the filter when installing the PuriCare Filter. Otherwise, product performance may be degraded.
 - The horizontal or vertical direction of the PuriCare Filter does not affect product performance.
- Ensure the product is turned off before replacing the filter.
- Make sure that the PuriCare Filters are installed before using the product. Do not use the product without the filters in place.

Assembling the Face Guard


- 1 Slide the 2 hooks at the bottom of the face guard into the slots at the bottom of the product and press to secure.

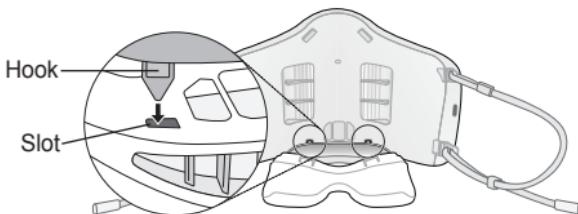

- 2 Attach the 2 metal pieces at the top of the face guard to the magnets at the top of the product.

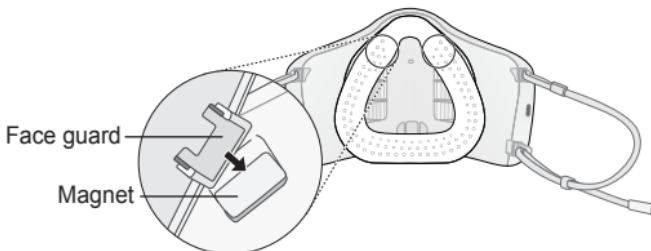


- 3 Ensure that the face guard and the product are assembled correctly.

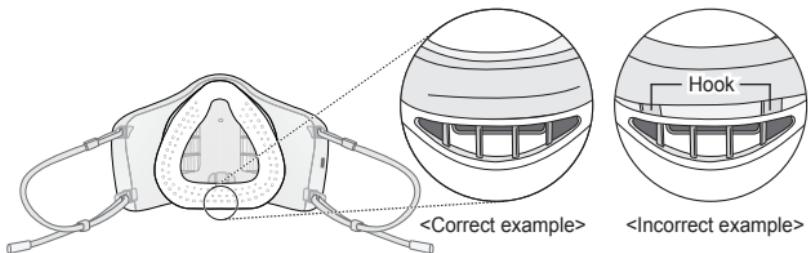

CAUTION

If the face guard and the product are not assembled correctly, product performance may be affected due to air leakage.

Installing the Inner Cover

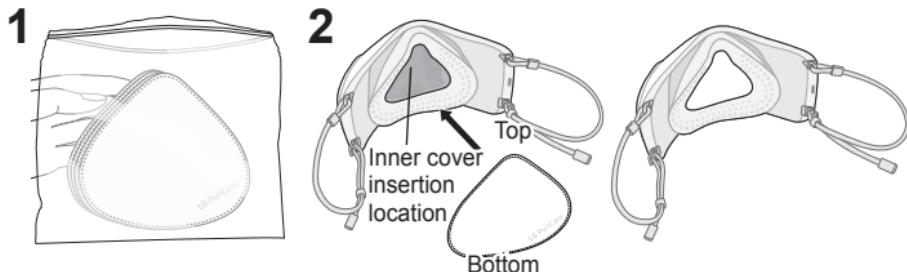

- 1 Remove 1 inner cover from the inner cover packaging.
- 2 Align the inner cover with the top and bottom as shown, and insert it into the face guard.


CAUTION

Do not use the Air Purifier without the inner cover installed. Without the inner cover installed, moisture from your breath could enter the Air Purifier and cause it to fail.

CHARGING

Charging the Battery

This product has a built-in battery. Charge the battery fully before using the Air Purifier by connecting the USB cable to an AC adapter.

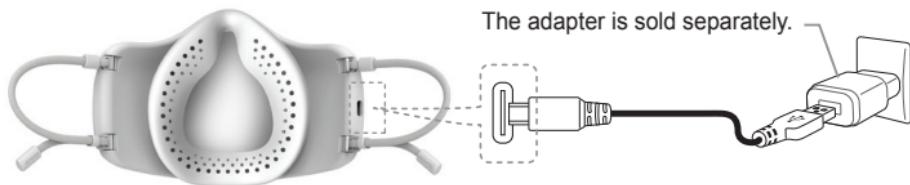

- The battery will begin charging when the USB cable is connected from the product to an electrical outlet. The charging status indicator is located on the Power button.

Indicator light color/status	Description
Green/On	Charging completed
Red/On	Charging in progress

Checking Remaining Battery Level

The LED indicators on the Power button show the remaining battery level.

Indicator light color/status	Remaining battery level
Green/On	More than 70 %
Orange/On	Over 15 % ~ Below 70 %
Red/Blinking	Below 15 %

- When the battery level is at 15 %, the product will chime 3 times twice.
 - If the fan speed indicator alarm coincides with the battery alarm, the fan speed alarm will sound first, followed by the battery alarm.
- Only the charging status can be checked during charging.



CAUTION


- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance from an AC adapter (5 V, 1.8 A).The AC adapter should be purchased separately. Using an unapproved charger may cause failure or variation in the charging time.
- This appliance contains batteries that are non-replaceable.
- Charge the battery at temperatures ranging between 10 °C~ 40 °C. Charging the battery at temperatures outside this range may reduce battery life or increase the charging time, and charging may be suspended for safety reasons.
- The recommended temperature range for operation is -20 °C ~ 50 °C. Operating outside of this range may shorten the run time and the battery life.
- Charging from the USB port in a vehicle or computer may be slower or cause product failure.

NOTE

- It takes approximately 2 hours for a full charge.
- With a fully charged battery, the run time for the product is approximately 4 hours in High, 6 hours in Medium, and 8 hours in Low.
- Charging times and run times may vary depending on the condition of the battery and the product.
- The run time of the product will decrease gradually over the useful life of the battery.
- The product ships with the battery not fully charged. Charge the battery fully before using the product for the first time.

OPERATION

Turning Product On and Adjusting Fan Speed

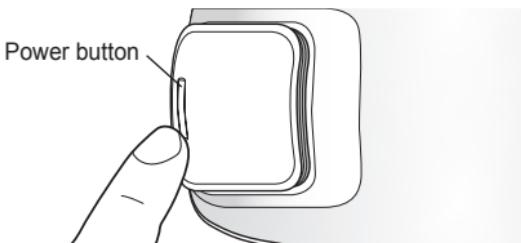


Press the Power button to turn the product on. Change the fan speed to suit your requirements.

- Press the Power button once to turn the product on with the fan speed set to Low. Press the Power button repeatedly to adjust the fan speed from Low > Medium > High > Off.
- When the fan speed is changed, chimes sound to indicate each level.
 - Low (1 chime): Use while seated.
 - Medium (2 chimes): Use while walking at a normal rate.
 - High (3 chimes): Use while walking quickly.
 - Off (long chime)

NOTE

- If the product is not being used, it will turn off automatically after 30 seconds.

Wearing and Using the Product

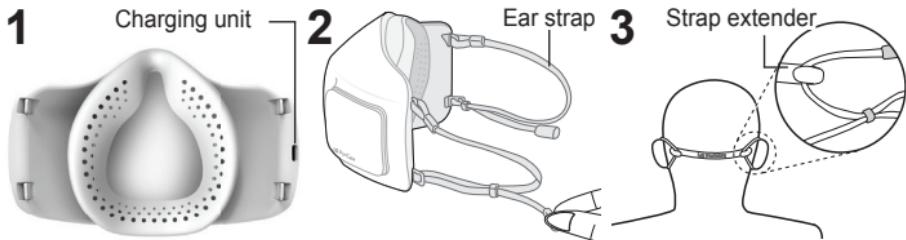


- 1** With the inside of the product facing you, the charging unit should be on the right side.
- 2** Holding the product in place, slide the ear straps around your ears. Pull on the ends of the ear straps to adjust the length and keep the product in place over your nose and mouth.
- 3** If you find the ear straps uncomfortable, use the strap extender to reduce the tension around your ears.
 - Attach the strap extender so that the LG PuriCare logo and the hooks face out.
 - Adjust the ear straps as needed to keep the Air Purifier comfortably in place.
- 4** Press the Power button to operate the Air Purifier.

NOTE

- Before wearing the Air Purifier, check the battery status. Refer to Checking Remaining Battery Level for details.
- If the inner cover is dirty, replace it with a new one. Refer to Installing the Inner Cover for details.
- If the face guard is dirty, wash it. Refer to Maintaining the Face Guard for details.
- When you are not using the product, store it in the portable pouch.
- If you are not going to use the product for an extended period of time, separate the charging cable from the product before storing.
- Replacement face guard, strap extender, and ear straps are available by calling an LG Electronics Customer Information Center or by visiting the LG Electronics website at www.lg.com.

MAINTENANCE

Filter Replacement

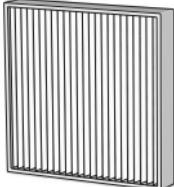
Component	Replacement Period and Method
 PuriCare Filter	<p>Replacement period: 1 month (Based on 10 hours use per day)</p> <p>Replace the filters when they become dirty. See the Installing the PuriCare Filters section.</p>
 Inner cover	<p>Replacement period: Disposable (Varies depending on level of activity.)</p> <p>Replace the inner cover when it becomes dirty. See the Installing the Inner Cover section.</p>

NOTE

- Do not wash the filter with water. Doing so damages the filter.
- The filter replacement period may vary depending on the operating environment.
- Purchase new filters by calling an LG Electronics Customer Information Center or visiting the www.lg.com website.

Maintaining the Face Guard

Separating the Face Guard

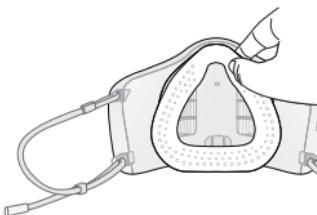

Separate the face guard from the product by pulling on the top of the face guard.

Cleaning the Face Guard

- 1** After removing the face guard from the product, clean it with a swab or soft cloth moistened with alcohol or clean water.
 - Use a mild detergent if needed for stubborn soil.
- 2** Dry the face guard completely after cleaning and reassemble it on the Air Purifier.

CAUTION


If the face guard becomes stained by cosmetics, wipe it with a tissue and wash it with clean water immediately after use.

- Stains from some cosmetics may be difficult or impossible to remove even if the face guard is washed immediately after use.

NOTE

- For best results, clean the face guard after each use.

Cleaning the Product

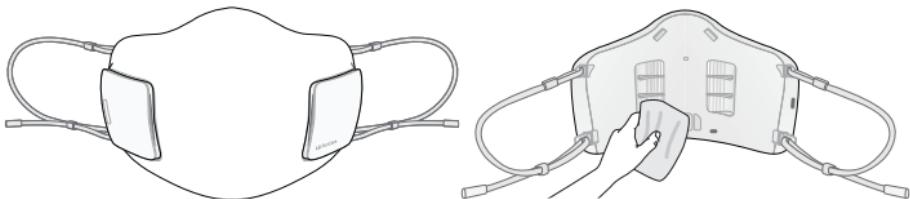


Use a soft, damp cloth to wipe the surface of the product clean.

! CAUTION

Do not allow water to get inside the product. Doing so could cause product failure, fire, or electric shock.

Cleaning the Exhaust Unit

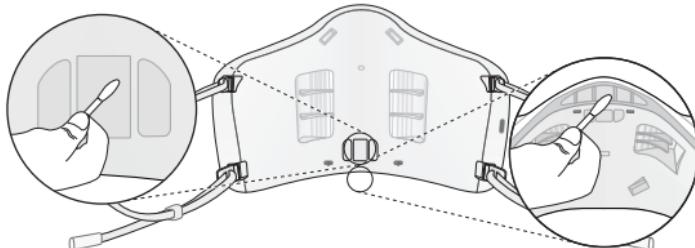

Wipe the exhaust unit with a cotton swab soaked with water or alcohol and then wipe it dry using a dry cotton swab.

✓ NOTE

- For best results, clean the exhaust unit after each use.
-


Maintaining the Ear Straps

Replacing the Ear Straps

1



2

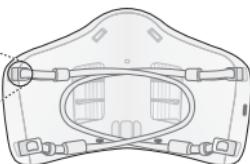

- 1 Fold the ear straps and ear strap hooks toward the inside of the product. Lift one side of the ear strap hook up to separate the ear strap.
- 2 To assemble new ear straps, fold the ear strap hooks toward the inside of the product and slide the ends of the ear straps into the grooves in the ear strap hooks.

Cleaning the Ear Straps

- 1 If the ear straps become dirty, separate them from the product and wash them in water and a mild detergent.
- 2 Allow the ear straps to dry completely before reassembling.

CAUTION

Do not expose the ear straps to direct sunlight for long periods (over 72 hours) or they can become discolored.

Washing the Portable Pouch

If the portable pouch becomes dirty, have it dry cleaned.

CAUTION

Washing the portable pouch with water may damage its surface and cause deformation.

TROUBLESHOOTING

Before Calling for Service

If a failure occurs in the product, check the following before contacting the Service Center.

Symptoms	Solution
The appliance does not operate.	<ul style="list-style-type: none">The battery is discharged or needs to be replaced. See Charging the Battery.The ambient temperature is too high or too low. Check the ambient temperature.
Fan is noisy even on the lowest speed.	<ul style="list-style-type: none">The PuriCare Filters are clogged with dirt and need to be replaced. The filter replacement period may vary depending on the nature of particular operating environments.
The appliance does not charge.	<ul style="list-style-type: none">The charger and the charging terminal are not connected. Reconnect the charger to the charging terminal.There is foreign material on the charging terminal. Clean off the foreign material with a soft, dry cloth.
The product turns off earlier than expected.	<ul style="list-style-type: none">The battery is not fully charged. See Charging the Battery for instructions.
Abnormal smells emanate from the product.	<ul style="list-style-type: none">The PuriCare Filters are dirty and need to be replaced. The frequency of filter replacement depends on the usage environment.The inner cover is dirty and needs to be replaced.The face guard needs to be cleaned.

APPENDIX

Product Specifications

Appearance and specifications may vary without notice in order to improve the quality of this product.

Product	
Power	5 V \equiv 1.8 A (AC adapter) Built-in rechargeable battery
Power Input	1.8 W
Dimensions (W*D*H)	156 mm × 63 mm × 110 mm
Recommended operating temperature range	-20 °C ~ 50 °C
Recommended operating humidity range	5 % ~ 95 %

Battery		
Capacity	(Typ) 860 mAh, 3.182 Wh	
	(Min) 820 mAh, 3.034 Wh	
Operating time (with a fully charged battery)	High	Approximately 4 hours
	Medium	Approximately 6 hours
	Low	Approximately 8 hours
Charging time	Approximately 2 hours	
Recommended charging temperature	10 °C ~ 40 °C	

- The charging and operating times of the product may vary depending on the operating status of the battery or the product.

مواصفات المنتج

يمكن تغيير الشكل والمواصفات دون اخطار لتحسين جودة هذا المنتج.

المنتج	
5 فولت 1.8 أمبير (محول التيار المتردد) بطارية داخلية قابلة لإعادة الشحن	الطاقة
1.8 واط	مدخلات الطاقة
156 مم × 63 مم × 110 مم	الأبعاد (العرض*العمق*الارتفاع)
°C 50 ~ -20 °C	نطاق درجة حرارة التشغيل الموصى بها
% 95 ~ % 5	نطاق رطوبة التشغيل الموصى به

البطارية	
(النوع) 860 ملي أمبير، 3.182 واط ساعي	السعة
(الحد الأدنى) 820 ملي أمبير، 3.034 واط ساعي	
حوالي 4 ساعات	مرتفع
حوالي 6 ساعات	متوسط
حوالي 8 ساعات	منخفض
حوالي ساعتين	وقت الشحن
°C 40 ~ 10 °C	درجة حرارة الشحن الموصى بها


- قد تختلف أوقات شحن وتشغيل المنتج حسب حالة تشغيل البطارية أو المنتج.

قبل طلب الخدمة

في حالة حدوث عطل في المنتج، تحقق مما يلي قبل الاتصال بمركز الخدمة.

الحل	الأعراض
<ul style="list-style-type: none"> • البطارية فارغة أو يلزم استبدالها. راجع "شحن البطارية". 	الجهاز لا يعمل.
<ul style="list-style-type: none"> • درجة الحرارة المحيطة مرتفعة جداً أو منخفضة جداً. تحقق من درجة الحرارة المحيطة. 	
<ul style="list-style-type: none"> • إن PuriCare فلتر مسدودة بالأوساخ ويلزم استبدالها. قد تختلف فترة استبدال المرشح حسب طبيعة بيئة التشغيل الخاصة. 	تتسرب المروحة بضوضاء حتى مع السرعات الأقل.
<ul style="list-style-type: none"> • لم يتم توصيل الشاحن والوحدة الطرفية للشحن. أعد توصيل الشاحن بالوحدة الطرفية للشحن. 	الجهاز لا يشحن.
<ul style="list-style-type: none"> • ثمة مواد غريبة على الوحدة الطرفية للشحن. نظف المواد الغريبة بقطعة قماش ناعمة وجافة. 	
<ul style="list-style-type: none"> • لا يتم شحن البطارية بالكامل. راجع "شحن البطارية" لاطلاع على الإرشادات. 	يتم إيقاف تشغيل المنتج في وقت مبكر مما هو متوقع.
<ul style="list-style-type: none"> • إن PuriCare فلتر متسخة ويلزم استبدالها. يعتمد مدى تكرار استبدال الفلتر على بيئة الاستخدام. 	
<ul style="list-style-type: none"> • الغطاء الداخلي متسخ ويلزم استبداله. 	تتبث رواح غير طبيعية من المنتج.
<ul style="list-style-type: none"> • يحتاج واقي الوجه إلى التنظيف. 	

الحافظ على أشرطة الأذنين استبدال أشرطة الأذنين

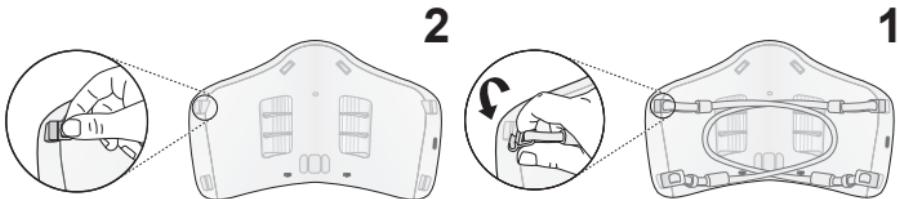

1 قم بطي أشرطة الأذنين وخطافات أشرطة الأذنين إلى داخل المنتج. ارفع أحد جانبي خطاف أشرطة الأذنين لأعلى لفصل شريط الأن.

2 تجميع أشرطة الأذنين الجديدة، قم بطي خطافات أشرطة الأذنين إلى داخل المنتج وحرك طرف في أشرطة الأذنين في التجاويف الموجودة في خطافات أشرطة الأذنين.

تنظيف أشرطة الأذنين

- 1 إذا اتسخت أشرطة الأذنين، يرجى حيننٌ فصلها عن المنتج وغسلها بالماء ومنظف معتمد.
- 2 اترك أشرطة الأذنين تجف تماماً قبل إعادة التجميع.

تنبيه !

لا تعرّض أشرطة الأذنين لأشعة الشمس المباشرة لفترات طويلة (أكثر من 72 ساعة) وإلا فقد يتغير لونها.


غسل الحقيبة المحمولة

إذا اتسخت الحقيبة المحمولة، فقم بتنظيفها تنظيفاً جافاً.

تنبيه !

قد يؤدي غسل الحقيبة المحمولة بالماء إلى إتلاف سطحها والتسبب في تغيير شكلها.

تنظيف المنتج

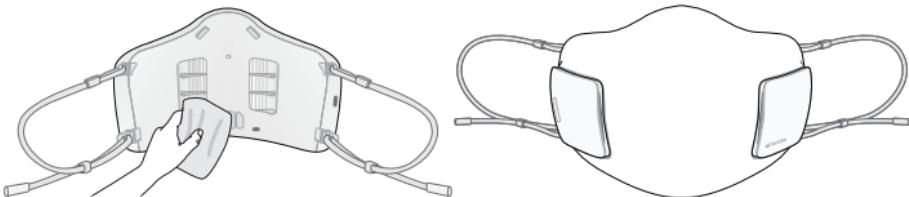


استخدم قطعة قماش ناعمة ومبلاة لمسح سطح المنتج وإيقائه نظيفاً.

تنبيه !

لا تسمح للماء بالتلغلل إلى المنتج. فقد يؤدي القيام بذلك إلى تعطل المنتج أو نشوب حريق أو حدوث صدمة كهربائية.

تنظيف وحدة تفريغ الهواء

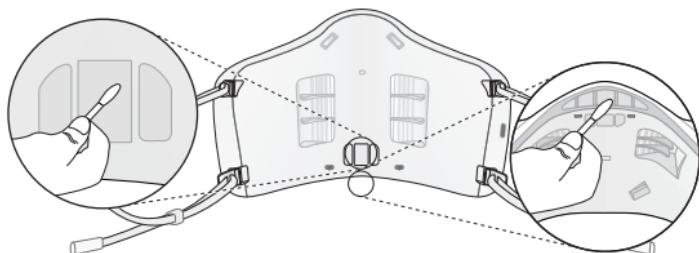


امسح وحدة تفريغ الهواء بقطعة قطن مبللة بالماء أو الكحول ثم امسحها حتى تجف باستخدام قطن جافة.

ملاحظة ✓

- للحصول على أفضل النتائج، نطف وحدة تفريغ الهواء بعد كل استخدام.

الحافظ على واقي الوجه

فصل واقي الوجه

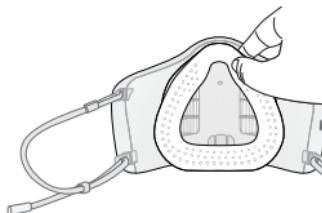

افصل الواقي الأمامي عن المنتج عن طريق سحب الجزء العلوي من الواقي الأمامي.

تنظيف واقي الوجه

1 بعد إزالة واقي الوجه من المنتج، نظفه بقطعة قماش ناعمة أو قطعة قماش مبللة بالكحول أو بالماء النظيف.

- استخدم منظف رملاً مزلاً إذا، قد شب فخستملاً از جلال لادتعن.

2 جفف واقي الوجه تماماً بعد التنظيف وأعد تركيبه على منقى الهواء.

تنبيه !


إذا أصبح واقي الوجه متسبحاً بمستحضرات التجميل، امسحه بمنديل واغسله بالماء النظيف مباشرةً بعد الاستخدام.

- قد يتعدّر أو من المستحيل إزالة البقع الناتجة عن استخدام بعض مستحضرات التجميل حتى لو تم غسل واقي الوجه مباشرةً بعد الاستخدام.

ملاحظة ✓

- للحصول على أفضل النتائج، نظف واقي الوجه بعد كل استخدام.

استبدال المرشح

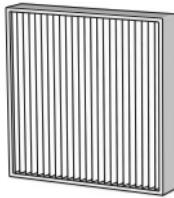فترة الاستبدال وطريقته	المكون
<p>فترة الاستبدال: شهر واحد (على أساس 10 ساعات من الاستخدام كل يوم)</p> <p>استبدل المرشحات عندما يصبح متسخة. راجع قسم "تركيب PuriCare فلتر".</p>	 <p>PuriCare فلتر</p>
<p>فترة الاستبدال: للاستعمال مرة واحدة (يختلف حسب مستوى النشاط).</p> <p>استبدل الغطاء الداخلي عندما يصبح متسخاً. راجع قسم "تركيب الغطاء الداخلي".</p>	 <p>الغطاء الداخلي</p>

ملاحظة ✓

- لا تغسل المرشح بالماء؛ حيث من الممكن أن يتعرض للتلف.
- قد تختلف فترة استبدال المرشح حسب بيئة التشغيل.
- يمكنك شراء مرشحات جديدة عن طريق الاتصال بمركز معلومات عملاء LG Electronics أو زيارة موقع الويب www.lg.com

ارتداء المنتج واستخدامه




- 1 يجب أن تكون وحدة الشحن على الجانب الأيمن مع توجيه الجزء الداخلي من المنتج إليك.
- 2 ضع المنتج في مكانه المخصص، وحرّك شرانت الأذنين حول أذنيك. اسحب طرف شرانت الأذنين لضبط الطول ووضع المنتج في مكانه على أنفك وفمك.
- 3 إذا شعرت بالضيق من أشرطة الأذنين، يمكنك استخدام موسع أشرطة لتخفيف مستوى الشد حول أذنيك.
 - أرق موسع الأشرطة بحيث يكون شعار LG PuriCare والخطافات متوجهة للخارج.
 - اضبط شرانت الأذنين حسب الحاجة للشعور بالراحة أثناء ارتداء منقى الهواء.
- 4 اضغط على زر الطاقة لتشغيل منقى الهواء.

● ملاحظة

- تحقق من حالة البطارية قبل ارتداء منقى الهواء. راجع "التحقق من مستوى البطارية المتبقية" للاطلاع على التفاصيل.
- إذا كان الغطاء الداخلي متسخاً، فاستبدل بقطاء جديد. راجع "تركيب الغطاء الداخلي" للاطلاع على التفاصيل.
- إذا كان واقي الوجه متسخاً، يرجى حبيث غسله. راجع "الحفظ على واقي الوجه" للاطلاع على التفاصيل.
- خزن المنتج في حقيبة محمولة إذا كنت لا تستخدمه.
- إذا كنت تتوى عدم استخدام المنتج لفترة طويلة من الوقت، فافصل كابل الشحن عن المنتج قبل التخزين.
- يتوفر واقي الوجه البديل وموسع أشرطة وشرانت الأذنين طريق الاتصال بمركز معلومات علام LG أو من خلال زيارة موقع LG Electronics على الرابط www.lg.com

تشغيل المنتج وضبط سرعة المروحة

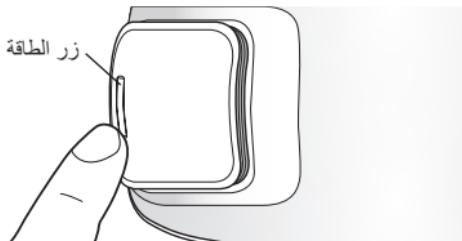

اضغط على زر الطاقة لتشغيل المنتج. قم بتغيير سرعة المروحة بما ينلأ عم مع متطلباتك.

- اضغط على زر الطاقة مرة واحدة لتشغيل المنتج مع ضبط سرعة المروحة على منخفضة. اضغط على زر الطاقة بشكل متكرر لضبط سرعة المروحة من منخفضة > متوسطة > مرتفعة > إيقاف.
- عندما يتم تغيير سرعة المروحة، يتم إصدار صوت للإشارة إلى كل مستوى.
- منخفضة (صوت واحد): استخدم هذه السرعة أثناء الجلوس.
- متوسطة (صوتان): استخدم هذه السرعة أثناء السير بمعدل طبيعي.
- مرتفعة (3 أصوات): استخدم هذه السرعة أثناء السير مسرعاً.
- إيقاف (صوت طويل)

ملاحظة ✓

- إذا لم يتم استخدام المنتج، فسيتم إيقاف تشغيله تلقائياً بعد 30 ثانية.

تنبيه !


- يجب شراء محول الكهرباء بشكل منفصل. يجب أن يكون محول الكهرباء معتمد 5 فولت ، 1.8 أمبير) والذي يجب أن يتم توفيره بأمان إضافي منخفض الجهد يتافق مع العلامات الموجودة على المنتج. قد يتسبب استخدام شاحن غير معتمد في حدوث عطل أو اختلاف في وقت الشحن.
- يحتوي هذا الجهاز على بطاريات غير قابلة للاستبدال.
- اشحن البطارية في درجات حرارة تتراوح بين 10 درجات مئوية إلى 40 درجة مئوية. قد يؤدي شحن البطارية في درجات حرارة تتجاوز هذا النطاق إلى تقليل عمر البطارية أو زيادة وقت الشحن، وقد يتم إيقاف الشحن لأسباب تتعلق بالسلامة.
- إن نطاق درجة الحرارة الموصى به للتشغيل هو 20- درجات مئوية إلى 50 درجة مئوية. قد يؤدي التشغيل في درجات تتجاوز النطاق المحدد إلى تقصير وقت التشغيل وعمر البطارية.
- من الممكن أن يكون الشحن منفذ USB في السيارة أو الكمبيوتر أبطأ أو يتسبب في إتلاف المنتج.

ملاحظة ✓

- يستغرق الشحن الكامل حوالي ساعتين.
- يبلغ وقت تشغيل المنتج عند شحن البطارية بالكامل حوالي 4 ساعات في وضع الاستخدام المرتفع و 6 ساعات في وضع الاستخدام المتوسط و 8 ساعات في وضع الاستخدام المنخفض.
- قد تختلف أوقات الشحن وأوقات التشغيل حسب حالة البطارية والمنتج.
- سينخفض وقت تشغيل المنتج تدريجياً طوال فترة استخدام البطارية.
- يتم شحن المنتج مع بطارية غير مشحونة بالكامل. اشحن البطارية بالكامل قبل استخدام المنتج لأول مرة.

شحن البطارية

يحتوي هذا المنتج على بطارية مدمجة. اشحن البطارية بالكامل قبل استخدام منقى الهواء عن طريق توصيل كابل USB بمحول تيار متعدد.

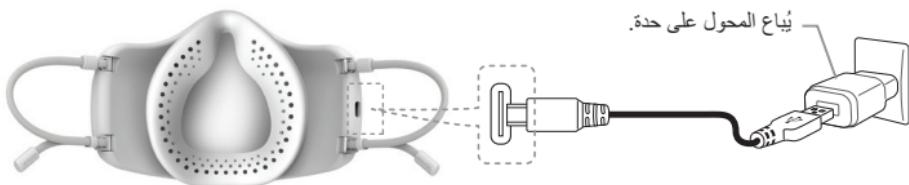

- سيبدأ شحن البطارية عند توصيل كابل USB من المنتج بمقبس كهربائي. يوجد مؤشر حالة الشحن على زر الطاقة.

الوصف	حالة/لون ضوء المؤشر
اكتمل الشحن	الضوء الأخضر / الإضاءة
جارٍ الشحن	ضوء أحمر / الإضاءة


التحقق من مستوى البطارية المتبقى

تعرض مؤشرات LED الموجودة على زر الطاقة مستوى البطارية المتبقى.

مستوى البطارية المتبقى	حالة/لون ضوء المؤشر
أكثر من 70 %	الضوء الأخضر / الإضاءة
أكثر من 15 % ~ أقل من 70 %	الضوء البرتقالي / الإضاءة
أقل من 15 %	ضوء أحمر / امض

- عندما يصل مستوى البطارية إلى 15 %، سيصدر المنتج صوتاً 3 مرات متتالية على مدار فترتين.
- إذا تزامن إنذار مؤشر سرعة المروحة مع إنذار البطارية، فسيصدر صوت إنذار سرعة المروحة أولاً، يليه إنذار البطارية.
- يمكن التحقق من حالة الشحن فقط أثناء الشحن.

تركيب الغطاء الداخلي

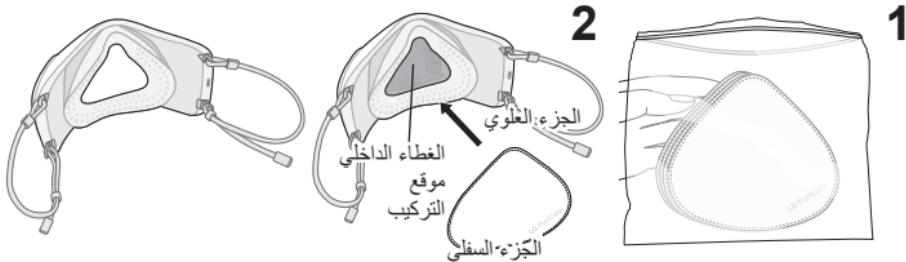


- 1 أزل غطاء داخلي واحد من عبوة الغطاء الداخلي.
- 2 قم بمحاذاة الغطاء الداخلي مع الجزء العلوي والسفلي كما هو موضح، وقم بتركيبيه في واقي الوجه.

تنبيه !


لا تستخدم منقى الهواء بدون تركيب الغطاء الداخلي؛ حيث من الممكن أن يمتص منقى الهواء الرطوبة من أنفاسك ومن ثم إتلافه إذا لم يتم تركيب الغطاء الداخلي.

تجميع وaci الوجه


1 حرك الخطافين الموجودين في الجزء السفلي من وaci الوجه في الفتحات الموجودة أسفل المنتج واضغط للثبيت.

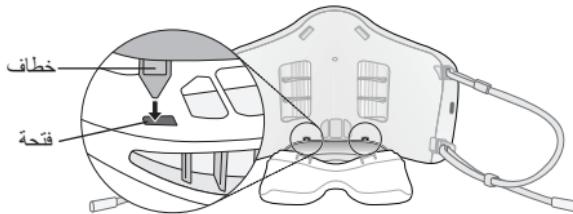

2 قم بتوصيل القطعتين المعدنيتين أعلى وaci الوجه بالمغناطيس الموجود أعلى المنتج.

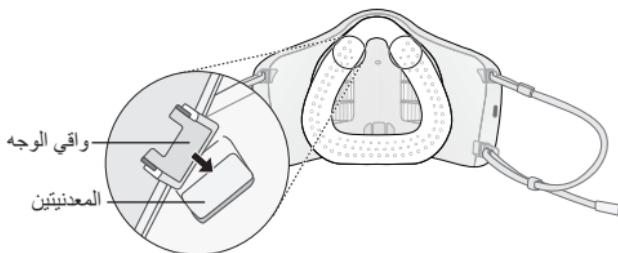


3 تأكّد من تجميع وaci الوجه والمنتج بشكل صحيح.

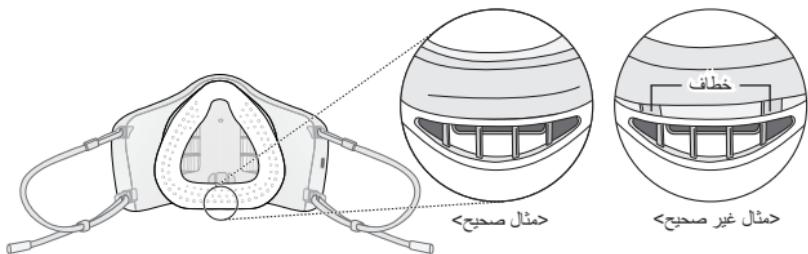

تنبيه !

إذا لم يتم تجميع وaci الوجه والمنتج بشكلٍ صحيح، فقد يتأثر أداء المنتج بسبب تسرب الهواء.

تركيب PuriCare فلتر

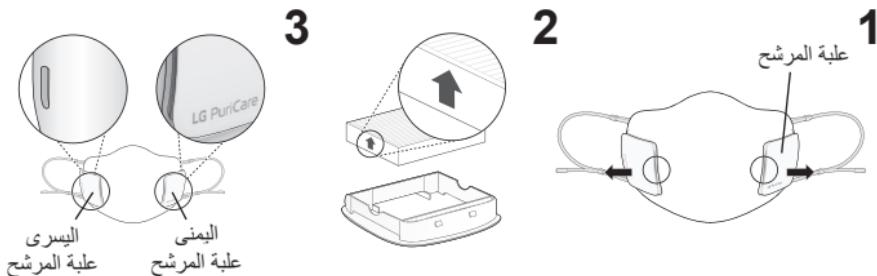

- 1 افصل علب المرشح من المنتج.
- اسحب علب المرشح حسب المواقع المحددة في الشكل 1 أعلاه لفصل العلب عن المنتج.
- 2 أدخل PuriCare فلتر في علب المرشح مع توجيه السهم الموجود على PuriCare فلتر لأعلى.


- 3 قم بمحاذاة علب المرشح مع التجاويف الموجودة في الجزء الأمامي من المنتج واضغط على العلب حتى تستقر في مكانها.
- تأكيد من محاذاة علب المرشح بشكل صحيح قبل إعادة التجمیع. يوجد شعار LG PuriCare على علبة المرشح اليمني.

ملاحظة ✓

- لا تضغط على الجزء الأوسط من PuriCare فلتر بقوة مفرطة عند تركيب المرشح. قد يؤدي استخدام القوة المفرطة إلى انسداد المرشح لمدخل الهواء.
- احرص على الانتباه إلى الاتجاه المشار إليه بالسهم الموجود على المرشح عند تثبيت PuriCare فلتر الكاملة. بخلاف ذلك، قد يتراجع أداء المنتج.
- لا يؤثر الاتجاه الأفقي أو الرأسي PuriCare فلتر على أداء المنتج.
- تأكيد من إيقاف تشغيل المنتج قبل استبدال المرشح.
- تأكيد من تركيب PuriCare فلتر قبل استخدام المنتج. لا تستخدم المنتج دون وجود المرشحات.

عرض عام للجهاز

المنظور الأمامي

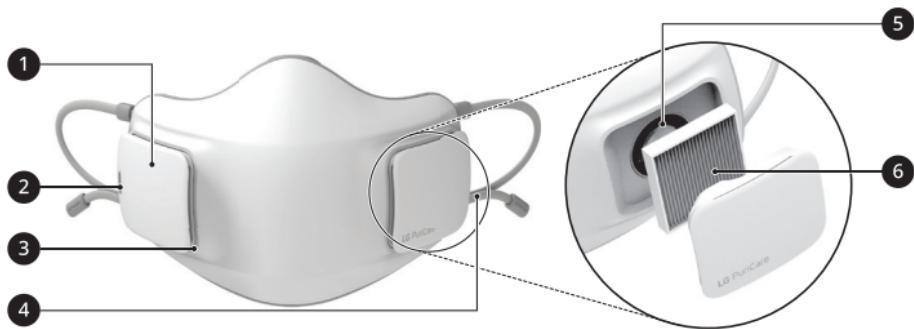

٤ شريط أذن

٥ مروحة الشفط


٦ فلتر PuriCare

١ علبة المرشح

٢ زر الطاقة/ضوء مؤشر البطارية

٣ مدخل الهواء

المنظور الخلفي

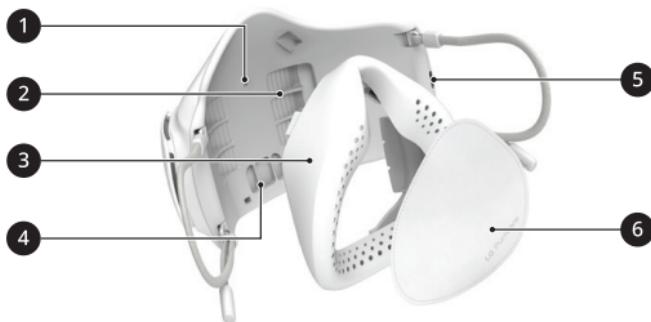

٤ وحدة تغريب الهواء

٥ وحدة الشحن

٦ الغطاء الداخلي

١ مسندعر الجهاز التنفسى

٢ مدخل الهواء


٣ واقي الوجه



الوحدة الرئيسية




الغطاء الداخلي (10EA)

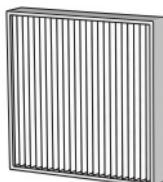

فلتر (2EA) PuriCare



واقي الوجه

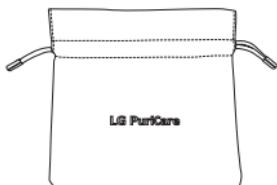

حقيبة محمولة



كابل الشحن



موسّع أشرطة

تخزين المنتج

تحذير !

- لا تضع المنتج بالقرب من نافذة السيارة حيث يتعرض لأشعة الشمس المباشرة أو أعلى وسادة كهربائية أو مدفأة.
- لا تضع المنتج بالقرب من المناطق الرطبة مثل حمامات الساونا أو حمامات السباحة أو الحمامات.
- لا تُخزن المنتج في مكان يحتوي على نسبة كبيرة من الملح.

سلامة البطارية

تحذير !

- يستخدم هذا المنتج بطارية متكاملة. لا تفصل البطارية أو تستبدلها. إذا كانت البطارية معيبة، فيجب استبدال المنتج وملحقات الشحن بواسطة مقدم خدمة LG معتمد.

التخلص من الأجهزة القديمة الخاصة بك

- الرمز الذي يشير إلى مجموعة منفصلة من المعدات الإلكترونية والكهربائية هو عبارة عن صندوق قمامنة بعجلات ومشطوب.

التخلص من البطاريات المستهلكة

1 يجب التخلص من جميع البطاريات بشكل منفصل عن مجاري النفايات البلدية عن طريق مرافق الجمع المعينة التي تعينها الحكومة أو السلطات المحلية.

2 يساعد التخلص الصحيح من البطاريات القديمة في منع الآثار السلبية المحتملة على البيئة وصحة الحيوان والبشر.

3 لمزيد من المعلومات التفصيلية حول التخلص من البطاريات القديمة ، يرجى الاتصال بمكتب خدمة التخلص من النفايات في مدينتك أو المتجر الذي اشتريت منه المنتج.

كما يمكنك الاتصال بمركز اتصال ممثل دعم LG عن طريق الدخول على الرابط التالي

https://www.lg.com/sa_en/support/contact/telephone

تنبيه !

• هذا الجهاز غير مخصص لاستخدام الأفراد(بما في ذلك الأطفال) الذين يعانون من نقص في قدراتهم البدنية أو الحسية أو العقلية، أو ليس لديهم خبرة ومعرفة، ما لم يتم الإشراف عليهم أو تقدم لهم الإرشادات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم.

• كذلك يجب الإشراف على الأطفال للتأكد من عدم عيّنهم بالجهاز.

• لا تعهد إلى تشغيل هذا المنتج أثناءقيادة.

• إذا اكتشفت صوًتاً غريباً أو مادة كيميائية أو رائحة احتراق أو دخان يتتصاعد من الجهاز، فتوقف عن استخدامه على الفور واتصل بمركز معلومات عملاء **.LG Electronics**

• قم بإصلاح جميع أسلاك الطاقة المتهيئة أو التالفة أو استبدلها على الفور. لا تستخدم سلكًا يظهر عليه علامات شقوق أو ثفاف ناتج عن السحب بطول السلك أو عند أي من طرفيه.

• استخدم جهاً كهربائياً منخفضاً للغاية لهذا المنتج فقط.

• لا تسمح بتغطيل المواد الغريبة مثل الماء أو القهوة أو المشروبات الغازية إلى المنتج.

• تخلص من مواد التغليف بأمان لتبقى بعيدة عن متناول الأطفال.

• لا تستخدم المنظفات أو المذيبات القوية لتنظيف المنتج.

• لا تعهد إلى ارتداء المنتج تحت المطر.

• لا تضغط بشكلٍ مفرط على المنتج.

• تجنب وضع عوانق حول مدخل الهواء للمنتج.

• إذا عانيت من مشاكل جلدية أثناء استخدام المنتج، فتوقف عن استخدامه واستشر الطبيب.

يُرجى الحرص على قراءة احتياطات السلامة التالية حيث تم إعدادها تفاديًّا للخطر ومنع حدوث الأضرار غير المتوقعة. تقسم احتياطات السلامة هذه إلى قسمين، بيانات التحذير وبيانات التنبية.

تحذير : قد يؤدي عدم اتباع الإرشادات الموضحة في هذا الدليل إلى حدوث إصابة خطيرة أو الوفاة. !

تنبيه : قد يؤدي عدم اتباع الإرشادات الموضحة في هذا الدليل إلى حدوث إصابة طفيفة أو تلف المنتج. !

استخدام المنتج

• إن هذا المنتج عبارة عن منقى الهواء الذي يحمي أعضاء الجهاز التنفسى من الجسيمات الضارة مثل الغبار الأصفر والغبار الناعم. لا تستخدم هذا المنتج لأغراض أخرى.

تحذير !

• لا تستخدم المنتج في منطقة سينية التهوية حيث لا يتدفق الهواء الغني بالأكسجين بشكل مستمر.

• لتجنب خطر العدوى، لا تشارك المنتج مع مستخدمين آخرين أو تُعيد استخدامه مع شخص آخر.

• لا تستخدم المنتج أو تعهد إلى شحنه وهو مبئث. إذا تم غمر المنتج في الماء، فتوقف عن استخدام المنتج واتصل بمركز معلومات عملاء LG Electronics.

• لا تستخدم الأسلحة النارية أو المواد القابلة للاحتراق أو المواد القابلة للاشتعال أو تخزنها بالقرب من المنتج.

• لا تقم بفك المنتج أو البطارية أو الأجزاء أو إتلافها. لا تستخدم المنتج في حالة تلف المنتج أو البطارية أو أي جزء منها.

• لا تستخدم المطهرات وأو المعقمات على أي جزء من المنتج.

• لا تُقرط في ممارسة التمارين أثناء ارتداء المنتج.

• إذا شعرت بعدم راحة الجهاز التنفسى أثناء استخدام المنتج، فتوقف عن الاستخدام واستشر الطبيب، إذا لزم الأمر.

جدول المحتويات

الصياغة	احتياطيات السلامة
استبدال المرشح 15	استخدام المنتج 03
الحفاظ على واقي الوجه 16	تخزين المنتج 05
تنظيف المنتج 17	سلامة البطارية 05
تنظيف وحدة تفريغ الهواء 17	
الحفاظ على أشرطة الأذنين 18	
غسل الحقيبة محمولة 18	
استكشاف المشاكل وحلها	التقريع
قبل طلب الخدمة 19	المكونات 06
ملحق	عرض عام للجهاز 07
مواصفات المنتج 20	
التجمع	
	تركيب PuriCare فلتر 08
	تجمیع واقی الوجه 09
	تركيب الغطاء الداخلي 10
الشحن	
	شحن البطارية 11
	التحقق من مستوى البطارية المتبقى 11
التشغيل	
	تشغيل المنتج وضبط سرعة المروحة 13
	ارتداء المنتج واستخدامه 14

قد يتضمن هذا الدليل صوراً أو محتوى يختلف عن الطراز الذي اشتريته.

يخضع هذا الدليل لإجراءات التعديل التي تبادرها الشركة المصنعة.



دليل المالك

أجهزة تنقية الهواء القابلة للارتداء

يرجى قراءة دليل المالك هذا بالكامل قبل تشغيل الجهاز والاحتفاظ به في متناول اليد للرجوع إليه في جميع الأوقات.

العربية

AP300A Series

www.lg.com

حقوق النشر © 2020 - 2021 جميع الحقوق محفوظة لشركة LG Electronics



MFL71724106
Rev.03_012821