คู่มือผู้ใช้

เครื่องอบผ้า



ก่อนเริ่มต้นการติดตั้ง โปรดอ่านคำแนะนำเหล่านี้โดยละเอียด ซึ่งจะช่วยทำให้การติดตั้งง่ายขึ้นและทำให้แน่ใจว่าผลิตภัณฑ์ได้รับการติดตั้งอย่างถูกต้องและปลอดภัย และกรุณาเก็บคำแนะนำเหล่านี้ไว้ใกล้กับผลิตภัณฑ์หลังจากการติดตั้งสำหรับการอ้างอิงในอนาคต

TH ภาษาไทย **EN** ENGLISH

RC09VHP2W

มอก.1389-2559



MFL70442610
Rev.02_032019

www.lg.com

Copyright © 2019 LG Electronics Inc. All Rights Reserved

สารบัญ

คู่มือฉบับนี้อาจมีรูปภาพหรือเนื้อหาที่แตกต่างจากรุ่นที่คุณซื้อ
คู่มือนี้อาจถูกแก้ไขเปลี่ยนแปลงโดยผู้ผลิต

คำแนะนำด้านความปลอดภัย 3
คำแนะนำเพื่อความปลอดภัยที่สำคัญ 3

การติดตั้ง 8
ข้อมูลจำเพาะ 8
อุปกรณ์เสริม (ทางเลือก) 8
ข้อกำหนดสำหรับสถานที่ติดตั้ง 9
คำแนะนำในการติดตั้งแบบซ้อน 10
การสลับด้านประตู 13

การใช้งาน 15
การใช้งานเครื่องใช้ 15
คัดแยกเสื้อผ้าที่ซัก 16
แผงควบคุม 17
ตารางโปรแกรม 18
โปรแกรมตัวเลือก 20
Rack Dry (อบโดยใช้ชั้นวาง) 21

ฟังก์ชันสมาร์ท 23
การใช้แอพพลิเคชั่น LG SmartThinQ 23
การใช้ Smart Diagnosis™ 26

การบำรุงรักษา 27
ทำความสะอาดตัวกรองผ้าสำลี 27
การเทน้ำในช่องเก็บน้ำ 28
การทำความสะอาดตะแกรงช่องอากาศเย็นเข้า 28
การเช็ดเซ็นเซอร์วัดความชื้น 28

การบำรุงรักษา 29
การวินิจฉัยปัญหา 29
รหัสข้อผิดพลาด 32

การรับประกัน 33

คำแนะนำด้านความปลอดภัย

แนวทางปฏิบัติเพื่อความปลอดภัยต่อไปนี้มีจุดมุ่งหมายเพื่อป้องกันความเสี่ยงที่ไม่คาดหมายหรือความเสียหายจากการใช้งานผลิตภัณฑ์ที่ไม่ปลอดภัยหรือไม่ถูกต้อง

แนวทางปฏิบัติได้แยกส่วนเป็น 'คำเตือน' และ 'ข้อควรระวัง' ดังคำอธิบายด้านล่าง

⚠ สัญลักษณ์ถูกแสดงสำหรับบ่งบอกรายการหรือการดำเนินการที่สามารถทำให้เกิดความเสี่ยงได้ กรุณาอ่านทำความเข้าใจส่วนของสัญลักษณ์นี้อย่างระมัดระวังและปฏิบัติตามคำแนะนำเพื่อหลีกเลี่ยงความเสี่ยง

⚠ **คำเตือน**

บ่งบอกว่าการไม่ปฏิบัติตามคำแนะนำสามารถทำให้ได้รับบาดเจ็บสาหัสหรือเสียชีวิตได้

⚠ **ข้อควรระวัง**

บ่งบอกว่าการไม่ปฏิบัติตามคำแนะนำสามารถทำให้ได้รับบาดเจ็บเล็กน้อยหรือเกิดความเสียหายต่อผลิตภัณฑ์ได้

คำแนะนำเพื่อความปลอดภัยที่สำคัญ

⚠ **คำเตือน**

สำหรับการลดความเสี่ยงของการระเบิด ไฟไหม้ การเสียชีวิต ไฟฟ้าช็อต การได้รับบาดเจ็บหรือการถูกไอน้ำลวกต่อบุคคลเมื่อใช้งานผลิตภัณฑ์นี้ กรุณาปฏิบัติตามข้อควรระวังเบื้องต้น รวมไปถึงรายการต่อไปนี้:

เด็กเล็กในบ้าน

เครื่องใช้ไฟฟ้าไม่ได้ออกแบบมาสำหรับการใช้งานโดยบุคคล (รวมไปถึงเด็กเล็ก) ที่มีทักษะทางกายภาพ การรับรู้ หรือทางจิตใจที่บกพร่อง หรือขาดความรู้และประสบการณ์ ยกเว้นแต่ได้รับการควบคุมดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานเครื่องใช้นี้โดยบุคคลที่รับผิดชอบความปลอดภัยของพวกเขา เด็กเล็กจะต้องได้รับการควบคุมดูแลเพื่อให้มั่นใจว่าพวกเขาจะไม่เล่นกับเครื่องใช้นี้

สำหรับการใช้งานในยุโรป:

เครื่องใช้นี้สามารถใช้งานโดยเด็กเล็กอายุตั้งแต่ 8 ปีขึ้นไปและบุคคลที่มีทักษะทางกายภาพ การรับรู้ และทางจิตใจที่บกพร่อง หรือขาดความรู้และประสบการณ์ หากว่าพวกเขาได้รับการควบคุมดูแลหรือได้รับคำแนะนำในการใช้งานเครื่องใช้นี้ในลักษณะที่ปลอดภัยและเข้าใจในอันตรายที่เกี่ยวข้อง จะต้องไม่ให้เด็กเล็กเล่นกับเครื่องใช้นี้ การทำความสะอาดและการบำรุงรักษาโดยผู้ใช้จะต้องไม่กระทำโดยเด็กเล็กโดยปราศจากการควบคุมดูแล

ควรกันเด็กอายุต่ำกว่า 3 ปีให้อยู่ห่างๆ เว้นแต่จะได้รับการกำกับดูแลตลอดเวลา

การติดตั้ง

- ตรวจสอบให้แน่ใจว่าผลิตภัณฑ์ได้รับการติดตั้ง ต่อสายดิน และปรับตั้งอย่างถูกต้องโดยบุคลากรผู้ให้บริการที่มีคุณวุฒิตามคำแนะนำในการติดตั้ง
- หากเครื่องใช้ได้รับความเสียหาย ชำรุด ถูกถอดชิ้นส่วนบางส่วน หรือมีชิ้นส่วนแตกหักหรือสูญหาย รวมทั้งสายไฟหรือปลั๊กที่ชำรุด อย่าพยายามใช้งานเครื่องใช้
- เครื่องใช้ไฟฟ้านี้ควรถูกขนย้ายโดยคนสองคนหรือมากกว่าที่จับเครื่องใช้ไฟฟ้าอย่างมั่นคง
- อย่าติดตั้งเครื่องใช้ไฟฟ้าในสถานที่ชื้นหรือมีฝุ่น ห้ามติดตั้งหรือเก็บอุปกรณ์ในพื้นที่กลางแจ้งใด ๆ หรือในพื้นที่ใด ๆ ที่อยู่ภายใต้เงื่อนไขด้านสภาพภูมิอากาศ เช่น ถูกแสงแดด ลม หรือฝนโดยตรงหรืออุณหภูมิที่ต่ำกว่าจุดเยือกแข็ง
- ยึดท่อระบายให้แน่นเพื่อหลีกเลี่ยงการหลุด
- หากสายไฟได้รับความเสียหายหรือช่องของเต้ารับซอคเก็ตหลวม อย่าใช้งานสายไฟและติดต่อศูนย์บริการที่ได้รับอนุญาต
- อย่าเสียบปลั๊กกับเต้ารับที่มีหลายซ็อคเก็ต สายไฟต่อพ่วง หรืออะแดปเตอร์กับเครื่องใช้ไฟฟ้านี้
- สิ่งของ เช่น โฟมยาง (โฟมลาเท็กซ์) หมวกคลุมผมอาบน้ำ ผ้ากันน้ำ สิ่งของที่บุด้วยยาง และเสื้อผ้าหรือหมอนที่มีแผ่นโฟมยางภายใน ไม่ควรนำมาอบในผลิตภัณฑ์
- ต้องไม่ติดตั้งเครื่องใช้นี้ที่ด้านหลังของประตูที่ล็อคได้ ประตูเลื่อนหรือประตูที่มีบานพับที่อยู่ตรงกันข้ามกับของเครื่องใช้ ในลักษณะที่จำกัดการเปิดประตูเครื่องใช้ได้อย่างเต็มที่เต็มที่
- เครื่องใช้ไฟฟ้านี้จะต้องได้รับการต่อสายดิน ในกรณีที่มีการทำงานผิดปกติหรือล้มเหลว การต่อสายดินจะช่วยลดความเสี่ยงต่อการเกิดไฟฟ้าช็อตโดยการให้เส้นทางที่มีความต้านทานต่ำที่สุดสำหรับกระแสไฟฟ้า

- เครื่องใช้ไฟฟ้านี้ได้รับการติดตั้งสายไฟที่มีตัวนำที่ต่อสายดินให้อุปกรณ์และปลั๊กไฟแบบต่อสายดิน สายไฟจะต้องถูกเสียบเข้าในเต้ารับซอคเก็ตที่เหมาะสมซึ่งถูกติดตั้งและต่อสายดินโดยสอดคล้องกับกฎหมายและข้อบัญญัติท้องถิ่นทั้งหมด
- การต่อตัวนำสายดินกับอุปกรณ์ที่ไม่เหมาะสมสามารถส่งผลให้มีความเสี่ยงต่อการเกิดไฟฟ้าช็อตได้ ตรวจสอบกับช่างไฟฟ้าหรือพนักงานบริการที่ได้รับการรับรอง หากท่านมีข้อสงสัยว่าเครื่องใช้ได้รับการต่อสายดินอย่างเหมาะสมหรือไม่
- ห้ามดัดแปลงปลั๊กไฟที่ให้มาพร้อมกับอุปกรณ์ หากปลั๊กไม่พอดีกับเต้ารับ ให้ติดตั้งเต้ารับที่เหมาะสมโดยช่างไฟที่มีคุณวุฒิ
- ผลิตภัณฑ์ไม่ควรได้รับการจ่ายไฟผ่านอุปกรณ์สวิตช์ภายนอก เช่น เครื่องตั้งเวลา หรือเชื่อมต่อกับวงจรที่สลับเปิดปิดเป็นประจำโดยยูทิลิตี้

การใช้งาน

- อย่าพยายามแยกชิ้นแผงหน้าปัดต่าง ๆ หรือถอดประกอบเครื่องใช้ไฟฟ้า อย่าใช้วัตถุมีคมกับแผงควบคุมเพื่อใช้งานเครื่องใช้ไฟฟ้า
- ห้ามซ่อมแซมหรือเปลี่ยนชิ้นส่วนใด ๆ ของอุปกรณ์ การซ่อมแซมหรือการให้บริการทั้งหมดต้องดำเนินการโดยพนักงานบริการที่ได้รับการรับรอง เว้นเสียแต่ว่าได้รับคำแนะนำโดยเฉพาะในคู่มือสำหรับเจ้าของนี้ ใช้ชิ้นส่วนของโรงงานที่ได้รับอนุญาตเท่านั้น
- รักษาพื้นที่ภายใต้และรอบ ๆ อุปกรณ์ให้ปราศจากจากวัสดุที่ติดไฟต่างๆ เช่น ผ้าสำลี กระดาษ เศษผ้า สารเคมี อื่นๆ
- ห้ามใส่สัตว์เข้าไป เช่น สัตว์เลี้ยงเข้าในเครื่อง
- ห้ามเปิดประตูเครื่องใช้ทิ้งไว้ เด็กอาจโหนฝาหรือคลานเข้าไปในเครื่อง ทำให้เกิดความเสียหายหรือบาดเจ็บ
- อย่ายื่นอวัยวะใดๆ เข้าไปภายในเครื่องใช้ในขณะที่กำลังทำงาน รอจนถังซักผ้าหยุดสนิท
- อย่าใส่ ซักหรืออบแห้งวัสดุที่ทำความสะอาด ซัก จุ่มหรือพ่นด้วยสารที่ติดไฟได้หรือระเบิดได้ (เช่น แวกซ์ น้ำมัน สี น้ำมันเบนซิน สารล้างน้ำมัน สารละลายซักแห้ง เคโรซีน น้ำมันพืช น้ำมันปรุงอาหาร ฯลฯ) การใช้งานที่ไม่เหมาะสมสามารถทำให้เกิดไฟไหม้หรือการระเบิดได้
- ในกรณีน้ำท่วม ให้ถอดปลั๊กไฟและติดต่อศูนย์ข้อมูลของลูกค้าของ LG Electronics
- อย่าออกแรงกดฝามากเกินไป เมื่อฝาเครื่องเปิดอยู่

- ใช้ท่อใหม่หรือชุดท่อที่ให้มาพร้อมกับเครื่องใช้นี้ การนำท่อเก่ากลับมาใช้สามารถทำให้เกิดน้ำรั่วและความเสียหายของทรัพย์สินตามมา
- ห้ามสัมผัสประตูในช่วงโปรแกรมที่มีอุณหภูมิสูง
- ห้ามใช้ก๊าซไวไฟและสารที่ติดไฟ (เบนซิน ก๊าซโซลีน ทินเนอร์, น้ำมัน, แอลกอฮอล์ อื่น ๆ) ใกล้กับเครื่องใช้
- หากท่อระบายหรือท่อน้ำเข้าเป็นน้ำแข็งในช่วงฤดูหนาว ใช้งานหลังจากทำการละลายน้ำแข็งแล้วเท่านั้น
- เก็บน้ำยาซักผ้า น้ำยาปรับผ้านุ่มและน้ำยาฟอกขาวทั้งหมดให้ห่างจากมือเด็ก
- ห้ามสัมผัสปลั๊กไฟหรือชุดควบคุมเครื่องใช้ด้วยมือที่เปียก
- ห้ามงอสายไฟมากเกินไปหรือวางสิ่งของหนักบนสายไฟ

การบำรุงรักษา

- เสียบปลั๊กไฟในเต้ารับหลังจากที่ขจัดสิ่งสกปรกและความชื้นหมดแล้ว
- ตัดการเชื่อมต่อของเครื่องใช้ไฟฟ้าจากแหล่งจ่ายไฟก่อนการทำความสะอาดเครื่องใช้ไฟฟ้า การตั้งค่าการควบคุมให้อยู่ในตำแหน่ง ปิด หรือสแตนด์บายไม่ใช่เป็นการตัดการเชื่อมต่อของเครื่องใช้ไฟฟ้าจากแหล่งจ่ายไฟ
- ห้ามสเปรย์น้ำข้างในหรือข้างนอกเครื่องใช้เพื่อทำความสะอาด
- ห้ามถอดปลั๊กเครื่องใช้ไฟฟ้าโดยการดึงที่สายไฟเคเบิล จับที่ปลั๊กไฟให้มั่นและดึงออกตรง ๆ จากเต้ารับซอคเก็ตเสมอ

ความปลอดภัยทางเทคนิคสำหรับการใช้งานเครื่องอบผ้า


- อย่าอบแห้งเสื้อผ้าที่ยังไม่ได้ซักในเครื่อง
- ควรใช้งานน้ำยาปรับผ้านุ่ม หรือผลิตภัณฑ์ที่คล้ายคลึงกัน ตามที่กำหนดในคำแนะนำของน้ำยาปรับผ้านุ่ม
- เอาสิ่งของทั้งหมด เช่น ไฟแช็กและไม้ขีดไฟ ออกจากกระเป๋า
- อย่าหยุดผลิตภัณฑ์ก่อนสิ้นสุดโปรแกรมการอบเว้นแต่ผ้าทั้งหมดจะถูกนำออกมาอย่างรวดเร็วและผึ่งออกเพื่อกระจายความร้อน
- ไม่ควรใช้ผลิตภัณฑ์หากใช้สารเคมีทางอุตสาหกรรมในการทำความสะอาด
- เสื้อผ้าที่เปื้อนสาร เช่น น้ำมันปรุงอาหาร น้ำมันพืช อะซีโตน แอลกอฮอล์ น้ำมันปิโตรเลียม เคโรซีน สารขจัดคราบ น้ำมันสน แวกซ์หรือสารขจัดแวกซ์ ควรได้รับการซักในน้ำร้อนโดยใช้น้ำยาซักผ้าในปริมาณที่มากขึ้นก่อนทำการอบแห้งในเครื่อง

- อย่าดื่มน้ำที่เกิดจากการควบแน่น การไม่ปฏิบัติตามอาจส่งผลให้เกิดอาการเจ็บป่วยจากอาหารเป็นพิษได้
- หากสายไฟที่ให้มาด้วยเสียหาย จะต้องได้รับการเปลี่ยนโดยผู้ผลิตหรือตัวแทนผู้ให้บริการหรือบุคคลที่มีคุณวุฒิที่คล้ายคลึงกันเพื่อหลีกเลี่ยงอันตราย
- ตัวดักใยผ้าต้องได้รับการทำความสะอาดเป็นประจำ
- จะต้องไม่ปล่อยให้ใยผ้าสะสมในผลิตภัณฑ์
- อย่าฉีดน้ำยาซักแห้งเข้าในผลิตภัณฑ์โดยตรง หรือใช้ผลิตภัณฑ์ในการอบเสื้อผ้าที่มีน้ำยาซักแห้งตกค้างอยู่
- อย่าอบเสื้อผ้าที่เปื้อนน้ำมัน น้ำมัน (รวมไปถึงน้ำมันที่รับประทานได้) ที่เปื้อนเสื้อผ้าไม่สามารถขจัดออกได้อย่างหมดจดแม้หลังการซักด้วยน้ำ
- ผลิตภัณฑ์ไม่ควรได้รับการจ่ายไฟผ่านอุปกรณ์สวิตช์ภายนอก เช่น เครื่องตั้งเวลา หรือเชื่อมต่อกับวงจรที่สลับเปิดปิดเป็นประจำโดยยูทิลิตี้
- นำเสื้อผ้าออกจากผลิตภัณฑ์ทันทีเมื่อการอบเสร็จสมบูรณ์หรือมีการปิดเครื่องในระหว่างกระบวนการอบ การปล่อยเสื้อผ้าที่ผ่านการอบแล้วไว้ในผลิตภัณฑ์โดยไม่ดูแลสามารถส่งผลให้เกิดไฟไหม้ได้ เสื้อผ้าที่นำออกมาจากผลิตภัณฑ์หลังการอบสามารถส่งผลให้เกิดไฟไหม้ได้ นำเสื้อผ้าออกโดยทันทีหลังการอบ และจากนั้นแขวนหรือผึ่งเสื้อผ้าบนพื้นราบเพื่อทำให้เย็นลง

การกำจัด

- ก่อนทำการทิ้งเครื่องใช้ไฟฟ้าเก่า ให้ถอดปลั๊กก่อน ตัดสายไฟตรงด้านหลังเครื่องใช้ไฟฟ้าเพื่อป้องกันการใช้ที่ผิด
- ทิ้งวัสดุหีบห่อทั้งหมด (เช่น ถุงพลาสติกและสไตโรโฟม) ให้ห่างจากเด็ก วัสดุบรรจุภัณฑ์สามารถทำให้เกิดการหายใจไม่ออก
- เอาฝาออกก่อนกำจัดหรือทิ้งเครื่องใช้นี้เพื่อหลีกเลี่ยงอันตรายกับเด็กหรือสัตว์ตัวเล็กที่อาจเข้าไปติดอยู่ข้างใน

ข้อมูลจำเพาะ

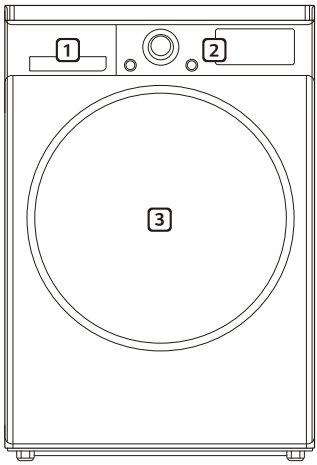

1 ช่องใส่น้ำ

2 แผงควบคุม

3 ฝา

รุ่น	RC09VHP2W
แหล่งจ่ายไฟ	220 โวลต์~, 50 เฮิรตซ์
ขนาด	600 มม. (ก.) x 690 มม. (ล.) x 850 มม. (ส.)
น้ำหนักผลิตภัณฑ์	56 กก.
อุณหภูมิที่อนุญาต	5 - 35 °C
ความจุสูงสุด	**9 กก.**


- รูปลักษณ์และข้อมูลรายละเอียดอาจแตกต่างออกไปโดยไม่มีการแจ้งให้ทราบเพื่อปรับปรุงคุณภาพของผลิตภัณฑ์

อุปกรณ์เสริม (ทางเลือก)


โปรดติดต่อศูนย์ข้อมูลลูกค้าของ LG Electronics สำหรับการสั่งซื้อ



สายท่อระบายน้ำควบแน่นและตัวยึดท่อ

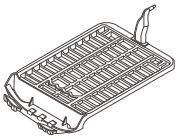


ชั้นอบแห้ง

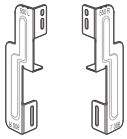

ชุดวางซ้อน

ข้อกำหนดสำหรับสถานที่ติดตั้ง

สถานที่

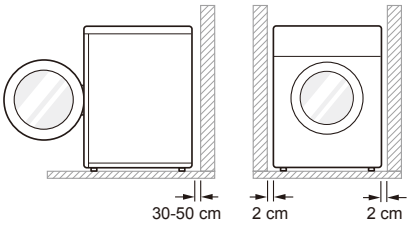

พื้นได้ระดับ: ความลาดชันใต้ตัวเครื่องใช้ทั้งหมดที่ยอมได้เป็น 1°

เต้ารับจ่ายไฟ: ต้องอยู่ภายใน 1.5 เมตรของด้านใดด้านหนึ่งของตำแหน่งที่ตั้งของเครื่องใช้

- อย่าทำให้เต้ารับเกิดกระแสไฟฟ้าสูงด้วยเครื่องใช้ไฟฟ้ามากกว่าหนึ่งเครื่อง

การเว้นระยะห่างเพิ่มเติม : สำหรับผนัง 30 – 50 ซม.: ด้านหลัง /2 ซม.: ด้านซ้ายและขวา

- ห้ามวางหรือเก็บผลิตภัณฑ์ซักผ้าด้านบนของเครื่องใช้ไม่ว่าเวลาใดก็ตาม ผลิตภัณฑ์เหล่านี้อาจสร้างความเสียหายให้กับผิวเคลือบหรือแผงควบคุม

หมายเหตุ

- เพื่อประสิทธิภาพการอบที่ดีขึ้น โปรดเว้นด้านหลังของผลิตภัณฑ์ให้ห่างจากผนัง
- อย่าติดตั้งผลิตภัณฑ์ในสถานที่ซึ่งมีความเสี่ยงของการเกิดน้ำแข็งหรือฝุ่น
- ผลิตภัณฑ์อาจไม่สามารถทำงานได้อย่างถูกต้องหรืออาจได้รับความเสียหายจากการเป็นน้ำแข็งของน้ำที่ควบแน่นในเครื่องปั๊มหรือสายท่อระบาย
- อย่าติดตั้งผลิตภัณฑ์ติดกับผลิตภัณฑ์ที่มีอุณหภูมิสูง เช่น ตู้เย็น เตาอบ หรือเตาทำอาหาร ฯลฯ ซึ่งอาจก่อให้เกิดประสิทธิภาพการอบและระยะเวลาของโปรแกรมที่ไม่ดี และส่งผลเสียต่อการทำงานอย่างถูกต้องของคอมเพรสเซอร์ ผลิตภัณฑ์ทำงานได้ดีที่สุดที่อุณหภูมิห้อง 23 °C

การจัดตำแหน่ง

- ติดตั้งเครื่องใช้บนพื้นเรียบแข็ง
- ตรวจสอบให้มั่นใจว่าการไหลเวียนของอากาศรอบ ๆ เครื่องใช้ไม่ได้ถูกขัดขวางโดยพรมปูพื้น พรมผืนเล็ก ฯลฯ
- อย่าพยายามแก้ไขความไม่ได้ระดับบนพื้นด้วยชิ้นไม้ กระดาษแข็งหรือวัสดุที่คล้ายกันโดยการใส่ใต้เครื่องใช้เป็นอันขาด
- ห้ามติดตั้งเครื่องใช้ในห้องที่อาจมีอุณหภูมิที่จุดเยือกแข็งเกิดขึ้น ท่อน้ำที่แข็งตัวอาจแตก เนื่องจากแรงดัน ความน่าเชื่อถือของหน่วยควบคุมอิเล็กทรอนิกส์อาจด้อยลงที่อุณหภูมิต่ำกว่าจุดเยือกแข็ง
- หากเครื่องใช้ถูกจัดส่งในฤดูหนาวและมีอุณหภูมิต่ำกว่าจุดเยือกแข็ง ให้วางเครื่องใช้ไว้ที่ที่อุณหภูมิห้องสองถึงสามชั่วโมงก่อนที่จะนำไปใช้งาน
- โปรดตรวจสอบให้แน่ใจว่าติดตั้งผลิตภัณฑ์ให้วิศวกรเข้าถึงได้ง่ายในกรณีที่มีการชำรุด
- เมื่อเครื่องใช้การติดตั้งแล้ว ให้ทำการปรับขาทั้งสี่โดยใช้ประแจเพื่อให้มั่นใจว่าติดตั้งเครื่องใช้ไฟฟ้านี้อย่างมั่นคงและควรให้มีระยะห่างประมาณ 20 มม. ระหว่างด้านบนของเครื่องใช้ไฟฟ้าและด้านล่างแผ่นท็อปเคาน์เตอร์

ข้อกำหนดในการระบายอากาศ

- มุมห้องหรือใต้เคาน์เตอร์
  - ตรวจดูให้แน่ใจว่าอัตราการไหลของอากาศอยู่ที่ 3.17 $ม^3$/นาที ผ่านเครื่องใช้ไฟฟ้า
- ตู้
  - ตู้จะต้องมีช่องระบายอากาศ 2 ช่อง โดยที่แต่ละช่องจะต้องมีขนาดอย่างน้อย 387 $ซม^2$ และตั้งอยู่ห่างจากด้านบนและด้านล่าง 8 ซม.

⚠ คำเตือน

- หลีกเลี่ยงการติดตั้งผลิตภัณฑ์รอบแหล่งความร้อน ด้านหลังของผลิตภัณฑ์จะต้องมีการระบายอากาศที่ดี การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจส่งผลให้เกิดปัญหา
- ไม่ควรติดตั้งผลิตภัณฑ์ติดกับผลิตภัณฑ์ที่ทำความเย็น
- ผลิตภัณฑ์ไม่ได้รับการออกแบบมาสำหรับการใช้งานในเรือ หรือสำหรับใช้งานในการติดตั้งแบบเคลื่อนที่ เช่น ขบวนรถ อากาศยาน ฯลฯ

การเชื่อมต่อทางไฟฟ้า

- อย่าใช้สายไฟที่ต่อพ่วงหรืออะแด็ปเตอร์สองตัว
- ถอดปลั๊กผลิตภัณฑ์หลังการใช้งานเสมอ
- เชื่อมต่อเครื่องใช้เข้ากับซ็อกเก็ตสายดินให้สอดคล้องกับกฎระเบียบการเดินสายไฟฟ้ากระแส
- เครื่องใช้ต้องได้รับการจัดวางให้เข้าถึงปลั๊กได้ง่าย


คำแนะนำในการติดตั้งแบบซ้อน

เครื่องอบผ้าของคุณสามารถตั้งไว้บนเครื่องซักผ้าของ LG และยึดไว้อย่างแน่นหนาด้วยชุดวางซ้อนได้ การติดตั้งนี้จะต้องดำเนินการโดยบุคลากรผู้ให้บริการที่มีคุณวุฒิเพื่อให้แน่ใจว่าได้รับการติดตั้งอย่างถูกต้อง



บุคลากรผู้ให้บริการที่มีคุณวุฒิจะตรวจสอบให้แน่ใจว่าคุณมีชุดวางซ้อนที่ถูกต้องสำหรับรุ่นของเครื่องซักผ้าของคุณและจะตรวจสอบให้แน่ใจว่าได้รับการยึดอย่างแน่นหนา ด้วยเหตุผลเหล่านี้ การประกอบที่มีความชำนาญเป็นสิ่งจำเป็น

ชุดวางซ้อน

เพื่อวางซ้อนเครื่องอบผ้านี้ จำเป็นต้องใช้ชุดวางซ้อนของ LG

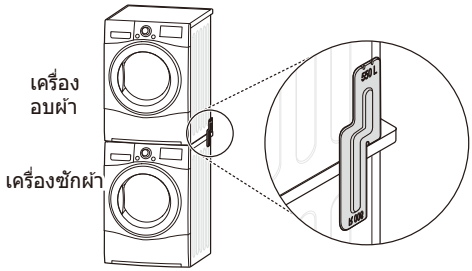


เครื่องอบผ้านี้สามารถวางซ้อนได้บนเครื่องซักผ้าของ LG เท่านั้น อย่าพยายามซ้อนเครื่องอบผ้านี้บนเครื่องซักผ้าอื่น เนื่องจากสามารถส่งผลให้เกิดความเสียหาย การบาดเจ็บ หรือความเสียหายของทรัพย์สินได้

	ขนาดของแผ่นด้านบนเครื่องซักผ้า	
	550 มม.	600 มม.
รูปร่างและทิศทางการประกอบ		

กระบวนการติดตั้ง


1 วางเครื่องอบผ้า LG บนเครื่องซักผ้า LG

2 นำสกรูสองตัวที่ด้านล่างของฝาหลังแต่ละอย่างออกจากภาพด้านล่าง

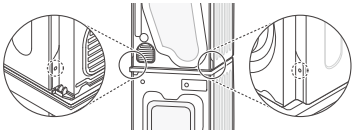


3 จัดตำแหน่งรูของชุดวางซ้อนและรูฝาหลังให้ตรงกัน

- 3-1) 600 มม.

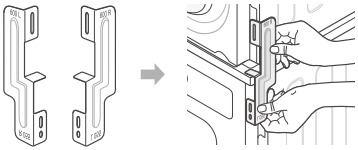

- 3-1) 550 มม.

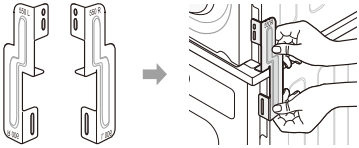

4 ขันสกรูสองตัวที่นำออกไปจากเครื่องอบผ้าก่อนหน้านี้เข้าในชุดวางซ้อน

5 ใช้สกรูสี่ตัวในกล่องอุปกรณ์เสริม (16 มม.) เพื่อประกอบฝาหลังของเครื่องซักผ้าและชุดวางซ้อน

6 กระบวนการสำหรับอีกฝั่งหนึ่งจะเหมือนกัน


⚠ คำเตือน

- การติดตั้งที่ไม่ถูกต้องอาจก่อให้เกิดอุบัติเหตุร้ายแรงได้
- น้ำหนักของผลิตภัณฑ์และความสูงของการติดตั้งทำให้กระบวนการวางซ้อนมีความเสี่ยงเกินไปสำหรับคนเดียว กระบวนการนี้ควรดำเนินการโดยบุคลากรผู้ให้บริการที่มีคุณวุฒิสองคนหรือมากกว่า
- ผลิตภัณฑ์ไม่เหมาะสมสำหรับการติดตั้งแบบบิวท์อิน โปรดอย่าติดตั้งเป็นผลิตภัณฑ์บิวท์อิน
- อย่าใช้งานหากผลิตภัณฑ์ไม่วางซ้อนอย่างถูกต้อง


การระบายน้ำที่ควบแน่นออก

โดยปกติ น้ำที่ควบแน่นจะถูกปั๊มไปยังช่องเก็บน้ำซึ่งจะรวบรวมน้ำไว้จนกระทั่งเทออกด้วยมือ น้ำยังสามารถระบายออกไปยังทางระบายน้ำหลักได้โดยตรง โดยเฉพาะเมื่อเครื่องอบผ้าวางซ้อนด้านบนเครื่องซักผ้าด้วยชุดเชื่อมต่อสำหรับสายท่อระบายน้ำหลัก เพียงทำการเปลี่ยนเส้นทางของน้ำและส่งไปยังทางระบายสาธารณูปโภคดังนี้:

1 แยกฝาปิดกันไหลย้อน(❶) กับท่อของถังเก็บน้ำ(❷) ออกจากชุดอุปกรณ์เชื่อมต่อ

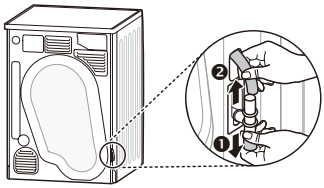

2 ประกอบฝาปิดกันไหลย้อน(❶) เข้ากับหัวของชุดอุปกรณ์เชื่อมต่อ จากนั้นให้ต่อท่อระบาย(❸) ที่ผึ่งตรงข้ามของชุดอุปกรณ์เชื่อมต่อ

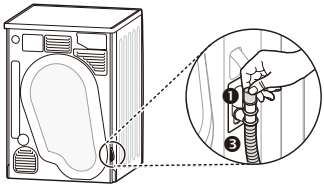

⚠ ข้อควรระวัง


- หากติดตั้งท่อโดยที่ท่อพับหรือถูกหนีบ การระบายน้ำอาจทำงานได้ไม่สะดวก


การขยับผลิตภัณฑ์ให้ได้ระดับ

การขยับผลิตภัณฑ์ให้ได้ระดับป้องกันเสียงรบกวนและการสั่นที่ไม่จำเป็น ตั้งผลิตภัณฑ์บนพื้นที่แข็งแรงได้ระดับ

หากผลิตภัณฑ์ไม่ได้ระดับอย่างถูกต้อง ปรับขาตั้งระดับด้านหน้าตามความจำเป็น

หมุนตามเข็มนาฬิกาเพื่อยกให้สูงขึ้นและทวนเข็มนาฬิกาเพื่อลดให้ต่ำลงจนผลิตภัณฑ์ไม่โยกไปมา ทั้งแบบด้านหน้าหลังและด้านข้างและระหว่างมุม

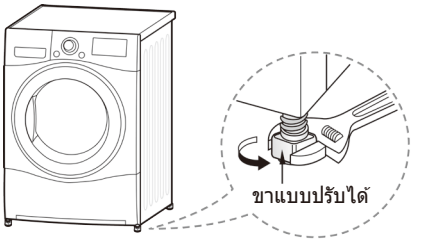

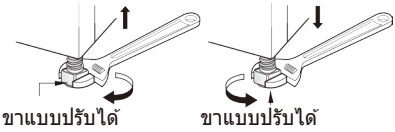

การตรวจสอบแนวทแยง

- เมื่อทำการกดขอบของแผ่นด้านบนในแนวทแยง ผลิตภัณฑ์ไม่ควรขยับขึ้นลงแม้แต่นิดเดียว (ตรวจสอบทุกทิศทาง) หากผลิตภัณฑ์โยกเมื่อทำการกดแผ่นด้านบนในแนวทแยง ปรับขาตั้งอีกครั้ง

การสลับด้านประตู

คุณสามารถสลับด้านประตูเพื่อความสะดวกของคุณ


⚠ คำเตือน

- อย่าสลับด้านประตูในขณะที่เครื่องใช้ไฟฟ้าวางซ้อนอยู่ข้างบน เครื่องซักผ้า
- ก่อนที่จะถอดสกรูบานพับ ให้ผู้ช่วยประคองน้ำหนักของประตู ประตูอาจร่วงลงมาบนพื้นเนื่องจากน้ำหนักของประตู
- เพื่อความปลอดภัย จำเป็นต้องใช้คนสองคนร่วมกันในการสลับด้านประตู

หมายเหตุ

- รูปทรงของสกรูจะแตกต่างกัน จึงต้องใช้วิธีใส่สกรูที่แตกต่างกันโดยขึ้นอยู่กับตำแหน่งของมัน ตรวจดูให้แน่ใจว่าเลือกสกรูได้ถูกต้องก่อนที่ขันให้แน่น

1 เปิดประตูแล้วถอดสกรู 2 ตัวออกจากบานพับประตู หลังจากถอดสกรูแล้ว ให้วางประตูลงอย่างระมัดระวังโดยวางด้านหน้าของประตูลงบนพื้น

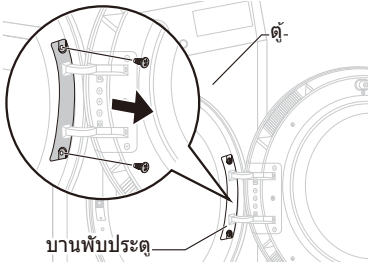


⚠ คำเตือน


- ถอดสกรูด้านล่างก่อน ประตูอาจร่วงลงมาบนพื้นเนื่องจากมีน้ำหนักมาก ซึ่งอาจทำให้ประตูเสียหาย

2 ถอดสกรู 8 ตัวออกจากอุปกรณ์บานพับของประตู

- มีสกรูอยู่ด้านหน้า 6 ตัว และมีสกรู 2 ตัวที่ด้านข้าง

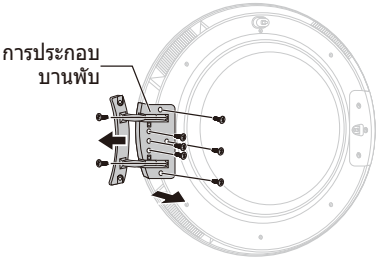


3 ถอดสกรู 3 ตัวออกจากกลอนประตูซึ่งจะอยู่ระหว่างบานประตูและชุดอุปกรณ์บานพับ จากนั้นให้ถอดสกรูที่ยึดอยู่บนตะขอของประตู

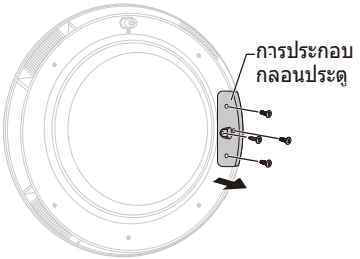


4 สลับตำแหน่งของอุปกรณ์บานพับและกลอนประตู จากนั้นจึงขันสกรูให้แน่นตามลำดับย้อนหลัง


- ขันสกรูให้แน่นในตำแหน่งที่ถูกต้องตามขั้นตอน 2 ถึง 4

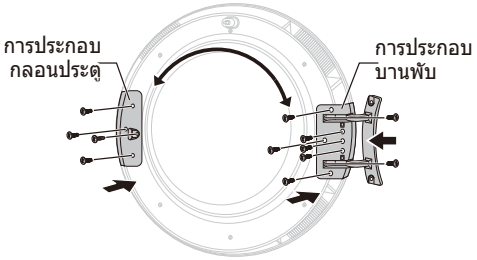


5 ถอดตัวจับประตูออกจากโครงเครื่องใช้ไฟฟ้าโดยการถอดสกรู 2 ตัว จากนั้นให้นำไปประกอบที่ฝั่งตรงข้าม

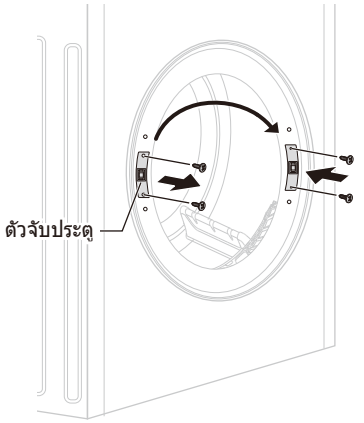

6 ถอดสกรูประดับ 2 ตัวออกจากโครงของเครื่องใช้ไฟฟ้า จากนั้นให้นำไปประกอบที่ฝั่งตรงข้าม

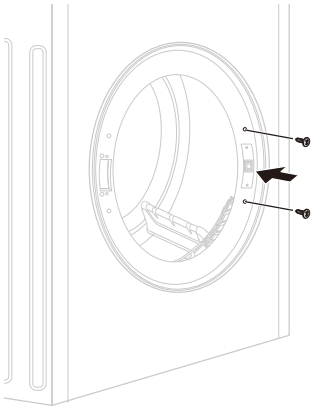

7 ติดตั้งประตูด้วยสกรูที่ถอดออกมาในขั้นตอนที่ 1 แล้วจึงตรวจสอบดูว่าประตูปิดสนิทดีหรือไม่

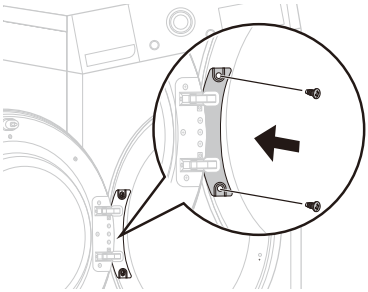

การใช้งานเครื่องใช้


ก่อนเริ่มโปรแกรมการอบครั้งแรก ตั้งให้ผลิตภัณฑ์ทำการอบเป็นเวลาห้านาทีเพื่ออุ่นถังใส่ผ้า เปิดฝาไว้ในระหว่างการอบแรก ๆ สองสามครั้งที่คุณใช้งานผลิตภัณฑ์เพื่อให้กลิ่นจากภายในผลิตภัณฑ์กระจายออกไป

1 ตรวจสอบให้แน่ใจว่าตัวดักใยผ้าและช่องเก็บน้ำสะอาด

- ตัวดักใยผ้าอยู่ด้านในของฝา จำเป็นต้องได้รับการทำความสะอาดก่อนโปรแกรมการอบแต่ละครั้ง
- เปิดฝาและตรวจสอบให้แน่ใจว่าตัวดักใยผ้าสะอาด หากไม่สะอาด โปรดทำความสะอาดตัวดักใยผ้า



- ตรวจสอบด้วยว่าช่องเก็บน้ำจำเป็นต้องเทน้ำทิ้งเพื่อผลการอบที่เหมาะสมที่สุดหรือไม่

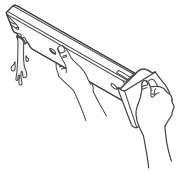

⚠ คำเตือน

- อย่าดื่มน้ำที่เกิดจากการควบแน่น

หมายเหตุ

- ในบางกรณี หน้าต่าง LED อาจแสดง (สัญลักษณ์เทน้ำทิ้ง) และผลิตภัณฑ์อาจหยุดเพราะช่องเก็บน้ำเต็ม

2 ใส่เสื้อผ้าในถังอบผ้าหลังทำการคัดแยก

- เสื้อผ้าควรได้รับการคัดแยกตามประเภทของผ้าและระดับความแห้ง และเชือกและเข็มขัดของเสื้อผ้าทั้งหมดควรได้รับการผูกและยึดไว้อย่างดีก่อนใส่ในถังอบผ้า ดันเสื้อผ้าไปด้านหลังเพื่อให้ห่างจากซีลของฝา ไม่เช่นนั้น ซีลของฝาและเสื้อผ้าอาจได้รับความเสียหายได้ แล้วจึงทำการปิดฝา

⚠ ข้อควรระวัง

- ระวังอย่าให้เสื้อผ้าถูกหนีบไว้ระหว่างฝาและซีลยาง


3 เปิดเครื่อง

- กดปุ่ม **Power (เปิด/ปิด)** ไอคอนบ่งชี้เหนือปุ่มจะสว่างขึ้น เพื่อแสดงว่าผลิตภัณฑ์พร้อมที่จะทำงานแล้ว



4 เลือกโปรแกรมการอบที่คุณต้องการ

- คุณสามารถเลือกโปรแกรมได้โดยการหมุนลูกบิดเลือกโปรแกรมจนโปรแกรมที่ต้องการถูกแสดงขึ้นมา
- หากคุณกดปุ่ม **Start/Pause (เริ่มต้น/หยุด)** โดยไม่ทำการเลือกโปรแกรม ผลิตภัณฑ์จะเริ่มทำงานด้วยโปรแกรม **Cotton (ผ้าฝ้าย)** โปรดอ้างอิงตารางโปรแกรมสำหรับข้อมูลโดยละเอียด

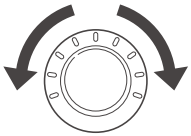

5 กดปุ่ม **Start/Pause (เริ่มต้น/หยุด)**



6 หลังจากโปรแกรมเสร็จสิ้น เปิดฝาและนำเสื้อผ้าออก

7 ปิดผลิตภัณฑ์

- กดปุ่ม **Power (เปิด/ปิด)**

⚠ ข้อควรระวัง

- ระวัง! ถังอบผ้าด้านในอาจยังร้อนอยู่
- ห้ามใช้ผลิตภัณฑ์เพื่อวัตถุประสงค์อื่นนอกเหนือจากที่ได้รับการออกแบบให้ใช้งาน

หมายเหตุ

- ส่วนสุดท้ายของโปรแกรมเครื่องอบผ้าจะดำเนินการโดยไม่มีความร้อน (โปรแกรมทำให้เย็น) เพื่อให้แน่ใจว่าเสื้อผ้าถูกปล่อยไว้ที่อุณหภูมิซึ่งมั่นใจได้ว่าไม่ทำให้เสื้อผ้าเสียหาย
- อุณหภูมิแวดล้อมที่สูงและห้องขนาดเล็กอาจเพิ่มทั้งเวลาในการอบ รวมถึงการใช้พลังงาน

คัดแยกเสื้อผ้าที่ซัก

เสื้อผ้ามีฉลากการดูแลในการซักของตัวเอง ดังนั้นแนะนำให้ทำการอบโดยสอดคล้องกับฉลากการดูแลในการซัก

ไม่เพียงเท่านั้น เสื้อผ้าจะต้องได้รับการคัดแยกตามขนาดและประเภทของผ้า

เพื่อประสิทธิภาพการอบที่ดีที่สุดและการใช้พลังงานที่มีประสิทธิภาพสูงสุด อย่าใช้ผลิตภัณฑ์ด้วยปริมาณน้ำหนักในการอบที่มากเกินไป

ผ้าขนสัตว์

- อบผ้าขนสัตว์ด้วยโปรแกรมอบผ้าขนสัตว์ ให้แน่ใจว่าปฏิบัติตามสัญลักษณ์บนฉลากการดูแลผ้าก่อน ผ้าขนสัตว์อาจไม่แห้งโดยสมบูรณ์จากโปรแกรมการอบ ดังนั้นอย่าอบซ้ำ กางผ้าขนสัตว์ออกตามรูปร่างเดิมและผึ่งให้แห้งบนพื้นราบ

วัสดุทอและถัก

- วัสดุทอและถักเป็นวงบางชนิดอาจหด โดยขึ้นกับคุณภาพ

ผ้ากันยับและผ้าใยสังเคราะห์

- อย่าใช้ผลิตภัณฑ์ด้วยปริมาณน้ำหนักในการอบที่มากเกินไป นำสิ่งที่เป็นผ้ารีดเรียบถาวรออกจากผลิตภัณฑ์ให้เร็วที่สุดเพื่อลดรอยย่น

เสื้อผ้าเด็กและชุดคลุมนอน

- ตรวจสอบฉลากการดูแลผ้าเสมอ

ยางและพลาสติก


- อย่าอบสิ่งของใด ๆ ที่ทำจากหรือมียางหรือพลาสติก เช่น:
  - ผ้ากันเปื้อน ผ้ากันเปื้อนของเด็ก และผ้าคลุมเก้าอี้
  - ผ้าม่านและผ้าปูโต๊ะ
  - พรมปูห้องน้ำ

ไฟเบอร์กลาส

- อย่าอบสิ่งของที่เป็นไฟเบอร์กลาสในผลิตภัณฑ์ เศษแก้วที่ตกค้างในผลิตภัณฑ์อาจติดไปกับเสื้อผ้าของคุณในภายหลังในโปรแกรมการอบถัดไป

ไอคอน	คำอธิบาย
	Dry (อบแห้ง)
	ปั่นแห้ง
	รีดเรียบถาวร / กันยับ
	อ่อนโยน / ผ้าบอบบาง
	อย่าปั่นแห้ง
	อย่าอบแห้ง
	ความร้อนสูง
	ความร้อนปานกลาง
	ความร้อนต่ำ
	ไม่ใช้ความร้อน / ลม
	ตากให้แห้ง / แขวนให้แห้ง
	แห้งโดยไม่ยับ
	ผึ่งให้แห้งบนพื้นราบ
	ในร่ม

แผงควบคุม

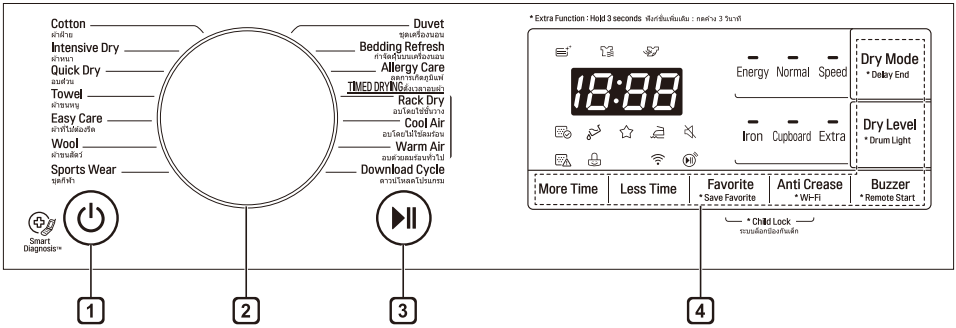

1 ปุ่ม เปิด/ปิด

- กดปุ่ม **Power (เปิด/ปิด)** เพื่อเปิดหรือปิดเครื่อง
- กดปุ่ม **Power (เปิด/ปิด)** เพื่อยกเลิกฟังก์ชันตั้งเวลาหยุด

2 ตัวเลือกโปรแกรม

- โปรแกรมสามารถเลือกใช้ได้โดยขึ้นกับประเภทของผ้า
- ไฟจะสว่างขึ้นเพื่อแสดงโปรแกรมที่ถูกเลือก

3 ปุ่ม เริ่มต้น/หยุด

- ปุ่ม **Start/Pause (เริ่มต้น/หยุด)** นี้ใช้เพื่อเริ่มต้นหรือหยุดโปรแกรมการอบ
- ในขณะที่กำหลังพัก เครื่องจะปิดโดยอัตโนมัติหลังผ่านไป 14 นาที

4 ปุ่มโปรแกรมเพิ่มเติม

- ใช้ปุ่มเหล่านี้เพื่อเลือกตัวเลือกที่ต้องการสำหรับโปรแกรมที่เลือก
- พื่อที่จะใช้งานฟังก์ชัน Remote Start อ้างอิง '**SMART FUNCTIONS**'.

จอแสดงผล

- : ไอคอนนี้แสดงว่าตัวดักใยผ้าควรได้รับการทำความสะอาดหรืออุดตัน
  - การแจ้งเตือนการทำความสะอาด: เมื่อคุณกดปุ่ม **Power (เปิด/ปิด)** ไอคอนจะแสดงขึ้นมา
- : ไอคอนนี้แสดงว่าช่องเก็บน้ำจำเป็นต้องได้รับการเททิ้งหรือเต็ม
  - การแจ้งเตือนการเทน้ำ: เมื่อคุณกดปุ่ม **Power (เปิด/ปิด)** ไอคอนจะแสดงขึ้นมา
  - การแจ้งเตือนน้ำเต็ม: ไอคอนนี้จะแสดงขึ้นมาและมีเสียงเตือนในขณะที่ผลิตภัณฑ์กำลังทำงาน
- : ไอคอนนี้จะระบุสถานะการใส่แผ่นกรองใยผ้า หากไม่ได้ใส่แผ่นกรองใยผ้า เครื่องใช้ไฟฟ้าจะไม่ทำงานและไอคอนนี้จะแสดงขึ้น
- : ไอคอนนี้จะระบุสถานะการทำความสะอาดคอนเดนเซอร์โดยอัตโนมัติ ไอคอนนี้จะแสดงขึ้นในขณะที่กำลังฉีดน้ำไปที่คอนเดนเซอร์

ตารางโปรแกรม

โปรแกรมการอบ

โปรแกรมการอบของเซ็นเซอร์				
โปรแกรม	**ประเภทผ้า**	**รายละเอียด**	**ระดับการอบ**	**ความจุ 9 กก.**
Cotton (ผ้าฝ้าย)	ผ้าขนหนู เสื้อคลุม และผ้าปูที่นอน	สำหรับผ้าที่เป็นนวมหนา	**Extra (แห้งพิเศษสำหรับผ้าหนา)**	9 กก.
	ผ้าเช็ดตัว ผ้าเช็ดมือ ชุดชั้นใน และถุงเท้าผ้าฝ้าย	สำหรับผ้าที่ไม่จำเป็นต้องรีด	**Cupboard (แห้งพร้อมสวมใส่)**	9 กก.
	ผ้าปูที่นอน ผ้าปูโต๊ะ ผ้าขนหนู เสื้อยืด เสื้อโปโล และเสื้อผ้าทำงาน	สำหรับผ้าที่จำเป็นต้องรีด	**Iron (ลดการหดตัวของใยผ้า)**	9 กก.
Intensive Dry (ผ้าหนา)	เสื้อผ้าธรรมดา ชุดชั้นใน ถุงเท้า ผ้าฝ้าย ผ้าปูเตียง และเสื้อยืด	สำหรับผ้าฝ้ายหนาที่ต้องอบแห้งด้วยอุณหภูมิสูง	-	9 กก.
Quick Dry (อบด่วน)	โปรแกรมผ้าลินินและผ้าขนหนู (ไม่รวมผ้าบอบบาง) ชุดกีฬา ผ้าชิ้นใหญ่/หนา	สำหรับปริมาณน้ำหนักในการอบที่เล็กน้อยสำหรับผ้าที่เหมาะสมโดยมีเวลาในการอบสั้น	-	1,5 กก,
Towel (ผ้าขนหนู)	ผ้าเช็ดตัว ปลอกหมอน	สำหรับผ้าฝ้ายที่ไม่จำเป็นต้องรีด	-	4.5 กก.
Easy Care (ผ้าที่ไม่ต้องรีด)	เสื้อเชิ้ต เสื้อยืด กางเกงขายาว ชุดชั้นใน และถุงเท้า	สำหรับโพลีอะไมด์ อะคริลิค และโพลีเยสเตอร์ที่ไม่จำเป็นต้องรีด	**Cupboard (แห้งพร้อมสวมใส่)**	3.5 กก.
	เสื้อเชิ้ต เสื้อยืด กางเกงขายาว เสื้อกันหนาวแบบมีหมวก และถุงเท้า	สำหรับโพลีอะไมด์ อะคริลิค โพลีเยสเตอร์ที่ไม่จำเป็นต้องรีด	**Iron (ลดการหดตัวของใยผ้า)**	
Wool (ผ้าขนสัตว์)	ผ้าขนสัตว์	สำหรับผ้าขนสัตว์	-	1 กก.
Sports Wear (ชุดกีฬา)	ชุดนักฟุตบอลและชุดฝึกซ้อม	สำหรับวัสดุโพลีเยสเตอร์	-	2 กก.
Duvet (ชุดเครื่องนอน)	เครื่องนอน ผ้าปูที่นอน	สำหรับผ้าชิ้นใหญ่/หนา	-	2.5 กก.
Bedding Refresh (กำจัดฝุ่นบนเครื่องนอน)	ผ้าคลุมเตียง ผ้าห่ม	กำจัดฝุ่นออกจากชุดเครื่องนอน เช่น ผ้าคลุมเตียง หรือผ้าห่ม โดยใช้อากาศเท่านั้นและไม่ซักด้วยน้ำ	-	3 กก.
Allergy Care (ลดการเกิดภูมิแพ้)	ผ้าฝ้าย ชุดชั้นใน ผ้าปูที่นอน และเสื้อผ้าเด็กอ่อน	ช่วยกำจัด สารก่อภูมิแพ้เช่น ไรฝุ่น	-	4.5 กก.

โปรแกรมการอบของเซ็นเซอร์				
โปรแกรม	ประเภทผ้า	รายละเอียด	ระดับการอบ	ความจุ
				9 กก.
Rack Dry (อบโดยใช้ชั้นวาง)	ผ้าไหม ผ้าขนสัตว์ ชุดชั้นใน สตรีที่บอบบาง	ทำให้เสื้อผ้าสะอาดเหมือนใหม่ โดยไม่ทำการปั่นแห้ง	-	-
Cool Air (อบโดยไม่ใช้ลมร้อน)	ผ้าทุกชนิดที่ต้องการทำให้สะอาดเหมือนใหม่	ปั่นโดยไม่ใช้ความร้อน	-	-
Warm Air (อบด้วยลมร้อนทั่วไป)	ผ้าเช็ดตัว ชุดคลุมอาบน้ำ ผ้าเช็ดจาน และผ้าบุอะคริลิค	ผ้าชิ้นเล็กและผ้าเปียก ผ้าในชีวิตประจำวันที่เหมาะสำหรับการอบด้วยความร้อน	-	-

⚠ ข้อควรระวัง

- หากปริมาณน้ำหนักในการอบน้อยกว่า 1 กก. โปรดใช้โปรแกรม **Warm Air (อบด้วยลมร้อนทั่วไป)** ในโปรแกรมตั้งเวลาอบผ้า ผ้าขนสัตว์ควรอบโดยใช้โปรแกรม **Wool (ผ้าขนสัตว์)** โปรดปฏิบัติตามปริมาณน้ำหนักการอบผ้าที่แนะนำเมื่อคุณเลือกโปรแกรมที่ต้องการของคุณ ไม่เช่นนั้น เสื้อผ้าของคุณอาจได้รับความเสียหาย

หมายเหตุ

- ผลการทดสอบขึ้นกับอุณหภูมิห้อง ประเภทและปริมาณของภาระการอบ ความกระด้างของน้ำ และอุณหภูมิของน้ำขาเข้า
- หากผลิตภัณฑ์ได้รับการติดตั้งเป็นแบบติดยึดด้านล่าง อาจทำให้เกิดการเสื่อมของประสิทธิภาพการทำงานได้
- หากผ้าไม่ถูกปั่นที่ความเร็วสูงในระหว่างการซัก การใช้พลังงานและเวลาในการอบแห้งจะเพิ่มขึ้น

โปรแกรมตัวเลือก

Delay End (ตั้งเวลาล่วงหน้า)

คุณสามารถใช้ตัวเลือกการตั้งเวลาเสร็จเพื่อชะลอเวลาการสิ้นสุดของโปรแกรมการอบได้ ตั้งเวลาเสร็จได้นานที่สุด 19 ชั่วโมง ตั้งเวลาเสร็จได้สั้นที่สุด 3 ชั่วโมง

1 เปิดเครื่องใช้

2 เลือกโปรแกรม

3 กดปุ่ม **Dry Mode (ฟังก์ชั่นอบแห้ง)** ค้างไว้ 3 วินาทีเพื่อเปิดใช้งานฟังก์ชันนี้

4 ตั้งเวลาเสร็จในหน่วยชั่วโมงโดยการกดปุ่ม **More Time (เพิ่มเวลา)**, **Less Time (ลดเวลา)**

5 กดปุ่ม **Start/Pause (เริ่มต้น/หยุด)**

Anti Crease (ลดรอยยับ)

ตัวเลือกการกันยับป้องกันรอยยับที่จะเกิดขึ้นเมื่อเสื้อผ้าไม่ถูกนำออกในทันทีที่สิ้นสุดโปรแกรมการอบ เมื่อเลือก **Anti Crease (ลดรอยยับ)** ผลิตภัณฑ์จะทำงานและหยุดซ้ำหลายครั้ง ให้เวลาคุณสองชั่วโมงเพื่อนำเสื้อผ้าออก หากเปิดฝาในระหว่างตัวเลือกการกันยับ ตัวเลือกจะถูกยกเลิก

Favorite (โปรแกรมที่ใช้บ่อย) ☆

ตัวเลือกรายการโปรดอนุญาตให้คุณเก็บโปรแกรมการอบแบบกำหนดเองไว้สำหรับการใช้งานในอนาคต

1 เปิดเครื่องใช้

2 เลือกโปรแกรม

3 เลือกตัวเลือกหรือโปรแกรมเพิ่มเติม (**Anti Crease (ลดรอยยับ)**, **Dry Mode (ฟังก์ชั่นอบแห้ง)** เป็นต้น)

4 กดปุ่มตัวเลือก **Favorite (โปรแกรมที่ใช้บ่อย)** เป็นเวลาสามวินาที

ตัวเลือกรายการโปรด เพื่อใช้งานโปรแกรมที่เก็บไว้ เลือกตัวเลือก **Favorite (โปรแกรมที่ใช้บ่อย)**และกดปุ่ม **Start/Pause (เริ่มต้น/หยุด)**

Drum Light (ไฟภายในถัง)

ในขณะที่ผลิตภัณฑ์กำลังทำงาน คุณสามารถมองเห็นภายในถังอบผ้าได้หากคุณเลือกฟังก์ชัน **Drum Light (ไฟภายในถัง)**

- กดปุ่ม **Dry Level (ระดับความแห้ง)** ค้างไว้ 3 วินาที เพื่อเปิดฟังก์ชันแสงสว่างภายในถังอบผ้า
- ไฟเปิด : ฝาเปิด
- ไฟปิด : ฝาปิด ไฟจะปิดโดยอัตโนมัติ

Dry Level (ระดับความแห้ง)

ใช้ปุ่มนี้เพื่อเลือกระดับความแห้งสำหรับโปรแกรมอบผ้า

1 เปิดเครื่องใช้

2 เลือกโปรแกรม

3 เลือกระดับความแห้งโดยการกดปุ่ม **Dry Level (ระดับความแห้ง)** ซ้ำหลาย ๆ ครั้ง

Child Lock (ระบบล็อกป้องกันเด็ก)

ใช้ตัวเลือกนี้เพื่อปิดการใช้งานการควบคุม คุณลักษณะนี้สามารถป้องกันเด็กจากการเปลี่ยนแปลงรอบหรือการทำงานของเครื่องใช้

การล็อคแผงควบคุม

1 กดปุ่ม **Favorite (โปรแกรมที่ใช้บ่อย)** และ **Anti Crease (ลดรอยยับ)** พร้อมกันค้างไว้เป็นเวลาสามวินาที

2 เสียงปี๊บจะดังขึ้นและ CL จะปรากฏบนหน้าจอ เมื่อตั้งค่า **Child Lock (ระบบล็อกป้องกันเด็ก)** แล้ว ปุ่มทั้งหมดจะถูกล็อคยกเว้นปุ่ม **Power (เปิด/ปิด)**

หมายเหตุ

- การปิดเครื่องหรือจบรอบทั้งหมดจะไม่รีเซ็ตฟังก์ชันการล็อคเพื่อให้ปลอดภัยจากเด็ก คุณจะต้องปิดการทำงานฟังก์ชันล็อคป้องกันเด็กก่อนที่คุณจะสามารถเข้าถึงฟังก์ชันอื่นๆ ได้

การคลายล็อคแผงควบคุม

กดปุ่ม **Favorite (โปรแกรมที่ใช้บ่อย)** และ **Anti Crease (ลดรอยยับ)** พร้อมกันค้างไว้เป็นเวลาสามวินาที

- เสียงปี๊บจะดังขึ้นและเวลาคงเหลือสำหรับโปรแกรมปัจจุบันจะปรากฏขึ้นบนหน้าจออีกครั้ง

Buzzer (เสียงเตือน)

ตัวเลือกนี้ช่วยให้คุณสามารถเปิดและปิดเสียงเตือน

More Time (เพิ่มเวลา) / Less Time (ลดเวลา)

ใช้ปุ่มเหล่านี้กับโปรแกรมอบแบบกำหนดเองเพื่อเพิ่มลดเวลาการอบผ้า

กดปุ่ม **More Time (เพิ่มเวลา)** เพื่อเพิ่มเวลาของโปรแกรมห้านาที

กดปุ่ม **Less Time (ลดเวลา)** เพื่อลดเวลาของโปรแกรมห้านาที


Rack Dry (อบโดยใช้ชั้นวาง)

ชั้นวางสำหรับอบจะใส่ไว้ภายในผลิตภัณฑ์ ตามภาพด้านล่าง ถอดและทิ้งบรรจุภัณฑ์ก่อนการใช้งาน


โปรแกรมการอบแห้งนี้ได้รับการออกแบบสำหรับใช้งานกับเสื้อผ้าที่ต้องตากให้แห้ง โดยไม่มีการปั่น รวมถึงเสื้อกันหนาวและผ้าบอบบาง

1 เปิดฝา


2 ใส่ตะขอที่กลางถังอบผ้า

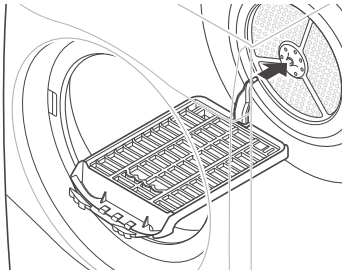

3 ติดชั้นวางสำหรับอบกับโครงสร้างเหนือแผ่นกรองใยผ้าและกดเพื่อประกอบให้สมบูรณ์

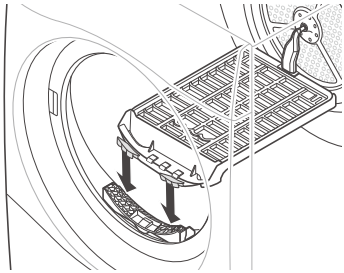

4 วางเสื้อผ้าเปียกบนชั้นวาง ทำให้มีที่ว่างรอบเสื้อผ้า เพื่อให้อากาศหมุนเวียน
- ชั้นวางจะไม่เคลื่อนไหว แต่ถังอบผ้าจะหมุน

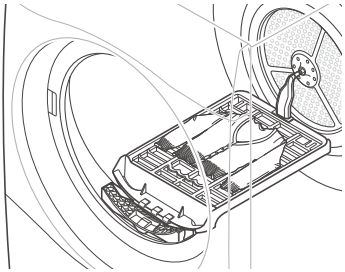

5 ปิดฝา

6 เปิดเครื่องและเลือก **Rack Dry (อบโดยใช้ชั้นวาง)**.

7 กดปุ่ม **Start/Pause (เริ่มต้น/หยุด)**

หมายเหตุ
- ตรวจสอบแผ่นกรองใยผ้าและนำใยผ้าที่สะสมจากเสื้อผ้าที่อบแห้งออก
- สามารถใช้ปุ่ม **More Time (เพิ่มเวลา)** / **Less Time (ลดเวลา)** เพื่อปรับเวลาการอบผ้าได้

การใช้แอพพลิเคชั่น LG SmartThinQ

สิ่งที่ต้องตรวจสอบก่อนใช้งาน LG SmartThinQ


- สำหรับเครื่องใช้ไฟฟ้าที่มีโลโก้ หรือ

1 ตรวจสอบระยะห่างระหว่างเครื่องใช้ไฟฟ้ากับเราเตอร์ไวร์เลส (เครือข่าย Wi-Fi)


- หากเครื่องใช้ไฟฟ้าอยู่ห่างเกินไปจะทำให้สัญญาณอ่อน ซึ่งอาจทำให้ใช้เวลานานในการลงทะเบียนและการติดตั้งอาจล้มเหลว

2 ปิด**ข้อมูลมือถือ**หรือ**ข้อมูลเซลลูลาร์**ของสมาร์ทโฟนของคุณ

- สำหรับ iPhones ปิดดาต้าโดยการไปที่ **การตั้งค่า** → **เซลลูลาร์** → **ข้อมูลเซลลูลาร์**

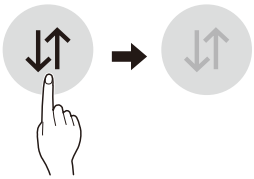

3 เชื่อมต่อสมาร์ทโฟนของคุณเข้ากับไวร์เลสเราเตอร์

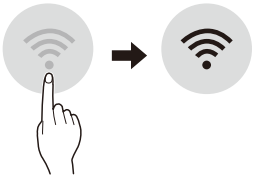

หมายเหตุ

- เพื่อยืนยันการเชื่อมต่อ Wi-Fi ดูที่ไอคอน **Wi-Fi** ที่แผงควบคุมว่ามีไฟขึ้นหรือไม่
- เครื่องใช้ไฟฟ้านี้รองรับเครือข่าย Wi-Fi 2.4 GHz เท่านั้น ตรวจสอบความถี่ของเครือข่ายของคุณได้โดยการติดต่อสอบถามผู้ให้บริการอินเตอร์เน็ตของคุณหรืออ้างอิงคู่มือเราเตอร์ไร้สายของคุณ
- LG SmartThinQ ไม่รับผิดชอบปัญหาใดๆ เกี่ยวกับปัญหาในการเชื่อมต่อเครือข่าย หรือความผิดพลาดการทำงานผิดพลาด หรือข้อผิดพลาดใดๆ ที่เกิดจากการเชื่อมต่อเครือข่าย
- หากเครื่องใช้ไฟฟ้ามีปัญหาในการเชื่อมต่อเครือข่าย Wi-Fi อาจเป็นเพราะว่าอยู่ห่างจากเราเตอร์มากเกินไป
- การเชื่อมต่อ Wi-Fi อาจจะไม่เกิดขึ้นหรือติดขัดเนื่องจากสภาพแวดล้อมของเครือข่ายในบ้าน
- การเชื่อมต่อเครือข่ายอาจทำงานไม่ถูกต้อง ทั้งนี้ขึ้นอยู่กับผู้ให้บริการอินเตอร์เน็ต
- สภาวะแวดล้อมของระบบสัญญาณไร้สายอาจทำให้บริการเครือข่ายไร้สายทำงานช้า
- ไม่สามารถลงทะเบียนเครื่องใช้ไฟฟ้าได้เนื่องจากการส่งสัญญาณไวร์เลส ถอดปลั๊กเครื่องใช้ไฟฟ้าแล้วรอหนึ่งนาทีก่อนลองอีกครั้ง
- หากเราเตอร์ของคุณเปิดไฟร์วอลอยู่ ปิดไฟร์วอลหรือเพิ่มข้อยกเว้น
- ชื่อของเครือข่ายไร้สาย (SSID) ควรเป็นตัวอักษรภาษาอังกฤษและตัวเลข (อย่าใช้ตัวอักษรพิเศษ)
- ยูสเซอร์อินเตอร์เฟส (UI) ของสมาร์ทโฟนอาจแตกต่างกันไปตามระบบปฏิบัติการ (OS) และผู้ผลิต
- หากโปรโตคอลการรักษาความปลอดภัยของเราเตอร์ถูกตั้งเป็น **WEP** คุณอาจไม่สามารถตั้งค่าเครือข่ายได้ โปรดใช้โปรโตคอลการรักษาความปลอดภัยอื่น (แนะนำให้ใช้ **WPA2**) แล้วลงทะเบียนผลิตภัณฑ์อีกครั้ง

การติดตั้ง LG SmartThinQ

ค้นหาแอปพลิเคชัน LG SmartThinQ จาก Google Play Store & Apple App Store ในสมาร์ทโฟน ทำตามคำแนะนำเพื่อดาวน์โหลดและติดตั้งแอปพลิเคชัน

ฟังก์ชัน Wi-Fi

- สำหรับเครื่องใช้ไฟฟ้าที่มีโลโก้ หรือ

สื่อสารกับเครื่องใช้ไฟฟ้าได้จากสมาร์ทโฟนโดยใช้ฟีเจอร์อัจฉริยะที่แสนสะดวก

โปรแกรมอบผ้า (เริ่มทางไกล ดาวน์โหลดโปรแกรม)

ตั้งค่าหรือดาวน์โหลดโปรแกรมซักที่ต้องการและสั่งงานผ่านรีโมทคอนโทรล

Smart Diagnosis™

ฟังก์ชันนี้ให้ข้อมูลที่มีประโยชน์สำหรับการวินิจฉัยและการแก้ไขปัญหาที่เกิดกับเครื่องใช้ตามแบบแผนการใช้งาน

การแจ้งเตือนแบบพุช

เมื่อโปรแกรมเสร็จสิ้นหรือเกิดปัญหากับเครื่องใช้ไฟฟ้า คุณสามารถเลือกที่จะรับการแจ้งเตือนผ่านสมาร์ทโฟนได้

การตรวจตราด้านพลังงาน

การใช้พลังงานของเครื่องอบผ้าจะแตกต่างกันตามโปรแกรมและตัวเลือกที่ใช้ ดังนั้นคุณจะเป็นความแตกต่างในระดับการใช้พลังงานของโปรแกรมต่างๆ

การตั้งค่า

ตั้งชื่อเล่นสินค้าและลบสินค้า.

หมายเหตุ

- หากคุณเปลี่ยนเราเตอร์ไร้สาย ผู้ให้บริการอินเตอร์เน็ต หรือรหัสผ่านของคุณ ให้ลบเครื่องใช้ไฟฟ้าที่ลงทะเบียนออกจากแอปพลิเคชัน LG SmartThinQ แล้วลงทะเบียนใหม่อีกครั้ง
- เพื่อการพัฒนาเครื่องใช้ไฟฟ้าแอปพลีเคชันอาจเปลี่ยนแปลงโดยไม่มีการแจ้งให้ผู้ใช้ทราบ
- คุณสมบัติอาจแตกต่างกันในแต่ละรุ่น

การใช้งานโปรแกรมอบผ้า

Remote Start (เริ่มจากระยะไกล)

ใช้สมาร์ทโฟนเพื่อควบคุมเครื่องใช้ของคุณจากระยะไกล นอกจากนี้คุณยังสามารถเฝ้าตรวจตราการทำงานของโปรแกรมเพื่อให้คุณทราบระยะเวลาที่เหลือของโปรแกรมได้อีกด้วย

การใช้ควบคุมระยะไกล:

1. กดปุ่ม **Power (เปิด/ปิด)**
2. ใส่เสื้อผ้าลงไปในถังซัก
3. กดปุ่ม **Buzzer (เสียงเตือน)** ค้างไว้ 3 วินาที เพื่อเปิดฟังก์ชันเริ่มทางไกล
4. เริ่มต้นโปรแกรมซักจากแอปพลิเคชั่น LG SmartThinQ บนสมาร์ทโฟนของคุณ

หมายเหตุ

- เมื่อเปิดใช้งานโหมดรีโมทสตาร์ท คุณสามารถเริ่มโปรแกรมซักได้จากแอปพลิเคชัน LG SmartThinQ หากโปรแกรมไม่เริ่มต้น เครื่องซักผ้าจะรอจนกว่าจะปิดผ่านรีโมทในแอปพลิเคชัน หรือเมื่อปิดใช้งานโหมดรีโมทสตาร์ท
- หากฝาเครื่องถูกเปิดไว้ ฟังก์ชันการเริ่มทางไกลจะถูกปิดใช้งาน

การปิดใช้งานควบคุมระยะไกล:

เมื่อเปิดฟังก์ชันเริ่มทางไกลแล้ว ให้กดปุ่ม **Buzzer (เสียงเตือน)** ค้างไว้ 3 วินาที

Download Cycle (ดาวน์โหลดโปรแกรม)

ดาวน์โหลดโปรแกรมซักผ้าใหม่ที่ไม่รวมอยู่ในโปรแกรมซักผ้าพื้นฐานของเครื่องใช้ไฟฟ้า

เครื่องใช้ไฟฟ้าที่ลงทะเบียนเรียบร้อยแล้วจะสามารถดาวน์โหลดโปรแกรมซักผ้าพิเศษต่างๆ ลงในเครื่องใช้ไฟฟ้านั้น

สามารถเก็บโปรแกรมซักผ้าไว้ในเครื่องใช้ไฟฟ้าครั้งละหนึ่งโปรแกรมเท่านั้น

เมื่อการดาวน์โหลดโปรแกรมซักผ้าเข้าในเครื่องใช้ไฟฟ้าเสร็จสิ้นแล้ว ผลิตภัณฑ์จะเก็บโปรแกรมที่ดาวน์โหลดไว้จนกว่าจะดาวน์โหลดโปรแกรมใหม่

ข้อมูลประกาศของซอฟต์แวร์โอเพ่นซอร์ส

หากต้องการรับซอร์สโค้ดภายใต้ข้อตกลงโอเพนซอร์ส GPL, LGPL, MPL และข้อตกลงโอเพนซอร์สอื่นๆ ที่มีอยู่ในผลิตภัณฑ์นี้ โปรดไปที่ http://opensource.lge.com

นอกเหนือจากซอร์สโค้ดแล้ว เงื่อนไข การปฏิเสธการรับประกัน และการประกาศเกี่ยวกับลิขสิทธิ์ทั้งหมดที่อ้างถึงนั้นสามารถดาวน์โหลดได้

LG Electronics มีบริการจัดเตรียมซอร์สโค้ดให้กับคุณทาง CD-ROM โดยคิดค่าใช้จ่ายในการดำเนินการแจกจ่ายดังกล่าว (เช่นค่าสื่อบันทึกข้อมูล ค่าจัดส่งและดูแลพัสดุ) โดยคุณสามารถขอรับซอร์สโค้ดได้โดยส่งอีเมลไปที่ opensource@lge.com ข้อเสนอนี้มีผลใช้ได้เป็นเวลา 3 ปี หลังจากการจัดส่งผลิตภัณฑ์ครั้งล่าสุด ข้อเสนอนี้มีผลกับทุกบุคคลที่ได้รับข้อมูลนี้

Smart Diagnosis™ การใช้สมาร์ทโฟน

- สำหรับเครื่องใช้ไฟฟ้าที่มีโลโก้ หรือ

ใช้งานฟังก์ชันนี้หากคุณต้องการการวินิจฉัยที่แม่นยำโดยศูนย์ข้อมูลลูกค้าของ LG Electronics เมื่อผลิตภัณฑ์ทำงานผิดปกติหรือล้มเหลว

Smart Diagnosis™ ไม่สามารถเปิดใช้งานได้เว้นแต่ผลิตภัณฑ์จะเชื่อมต่อกับแหล่งจ่ายไฟ หากผลิตภัณฑ์ไม่สามารถเปิดเครื่องได้ การแก้ไขปัญหาเบื้องต้นจะต้องกระทำโดยไม่ใช้ Smart Diagnosis™


การใช้ Smart Diagnosis™

Smart Diagnosis™ ผ่านศูนย์บริการข้อมูลลูกค้า

ใช้ฟังก์ชันนี้หากคุณต้องการการวินิจฉัยที่แม่นยำโดยศูนย์บริการข้อมูลลูกค้า LG Electronics เมื่อเครื่องใช้ไฟฟ้าทำงานผิดปกติหรือล้มเหลว ใช้ฟังก์ชันนี้เพื่อติดต่อตัวแทนบริการเท่านั้น ไม่ใช่ในระหว่างการใช้งานปกติ

1 กดปุ่ม **Power (เปิด/ปิด)** เพื่อเปิดใช้งานเครื่องใช้ไฟฟ้านี้ อย่ากดปุ่มอื่นหรือหมุนลูกบิดเลือกโปรแกรม

2 เมื่อตัวแทนศูนย์บริการลูกค้าได้บอกให้ทำเช่นนั้น ให้ถือที่พูดโทรศัพท์ของคุณบนโลโก้ Smart Diagnosis™

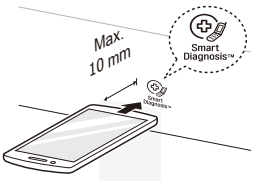

3 กดปุ่ม **More Time (เพิ่มเวลา)** ค้างไว้เป็นเวลาสามวินาที ในขณะที่ถือส่วนที่ใช้พูดของโทรศัพท์ไว้ใกล้สัญลักษณ์หรือปุ่ม **Power (เปิด/ปิด)**

4 ให้โทรศัพท์อยู่กับที่จนกว่าสัญญาณเสียงจะจบ เวลาคงเหลือสำหรับการส่งข้อมูลจะแสดงขึ้นมา

- เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด อย่าขยับโทรศัพท์ในขณะที่กำลังส่งเสียง
- หากตัวแทนศูนย์บริการไม่สามารถทำการบันทึกข้อมูลที่แม่นยำได้ อาจขอให้คุณลองทำอีกครั้ง

5 เมื่อการนับถอยหลังจบลงและเสียงสัญญาณหยุด ให้ทำการสนทนาของคุณต่อกับตัวแทนศูนย์บริการที่จะสามารถช่วยเหลือคุณได้โดยใช้ข้อมูลที่ส่งไปเพื่อการวิเคราะห์

หมายเหตุ

- ฟังก์ชัน Smart Diagnosis™ ขึ้นอยู่กับคุณภาพการโทรในพื้นที่
- ประสิทธิภาพในการสื่อสารจะดีขึ้นและคุณสามารถรับบริการที่ดีขึ้นได้หากคุณใช้โทรศัพท์บ้าน
- หากการส่งข้อมูล Smart Diagnosis™ ไม่ดีเนื่องจากคุณภาพการโทรที่แย่ คุณอาจไม่ได้รับบริการ Smart Diagnosis™ ที่ดีที่สุด

⚠ คำเตือน

- ถอดปลั๊กไปเมื่อคุณทำความสะอาดผลิตภัณฑ์ การไม่ถอดปลั๊กอาจส่งผลให้เกิดไฟฟ้าช็อต


ทำความสะอาดตัวกรองผ้าสำลี

ทำความสะอาดแผ่นกรองใยผ้าก่อนใช้โปรแกรมการอบแต่ละครั้ง ควรทำความสะอาดหากไอคอน สว่าง และเสียงเตือนดังขึ้นในขณะที่ผลิตภัณฑ์กำลังทำงาน


การทำความสะอาดแผ่นกรองใยผ้าจะลดเวลาในการอบและการใช้พลังงาน

1 เปิดฝา

2 ถอดแผ่นกรองใยผ้าออก

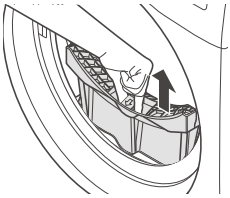


3 ถอดแผ่นกรองใยผ้าอันที่สองออก

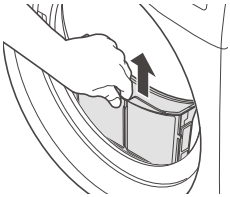


4 เปิดแผ่นกรองใยผ้าทั้งคู่แล้วนำใยผ้าทั้งหมดออก


- เปิดแผ่นกรองใยผ้าอันแรก

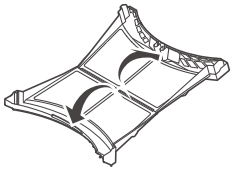


- เปิดแผ่นกรองใยผ้าอันที่สอง

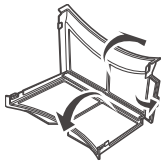

5 ล้างแผ่นกรองใยผ้าใต้น้ำอุ่นที่ไหลผ่าน

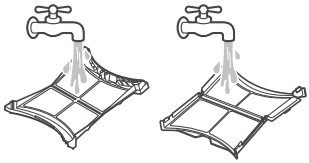

6 ทำให้แผ่นกรองใยผ้าแห้งสนิทแล้วปิด จากนั้นให้ใส่แผ่นกรองใยผ้าทั้งคู่กลับเข้าที่

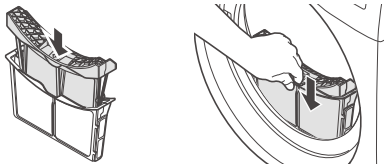

หมายเหตุ

- ขจัดความชื้นออกจากตาข่าย ไม่เช่นนั้น แผ่นกรองใยผ้าอาจอุดตันเนื่องจากฟิล์มที่เกิดจากน้ำและผลิตภัณฑ์อาจไม่ทำงาน
- หากแผ่นกรองใยผ้าไม่อยู่ในผลิตภัณฑ์ คุณจะไม่สามารถใช้งานผลิตภัณฑ์ได้


การเทน้ำในช่องเก็บน้ำ

น้ำที่ควบแน่นจะสะสมอยู่ในช่องเก็บน้ำ


เทน้ำในช่องเก็บน้ำหลังการใช้งานทุกครั้ง การไม่ปฏิบัติตามจะส่งผลกับประสิทธิภาพในการอบ

หากช่องเก็บน้ำเต็ม ไอคอน จะสว่างและเสียงเตือนจะดังในขณะที่ผลิตภัณฑ์กำลังทำงาน หากเกิดเหตุการณ์เช่นนี้ขึ้น จำเป็นจะต้องเทน้ำในช่องเก็บน้ำออกภายในหนึ่งชั่วโมง

1 ดึงช่องเก็บน้ำออกมา

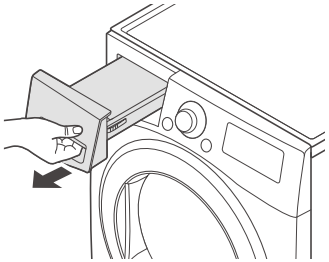

2 เทน้ำในช่องเก็บน้ำลงในอ่างซิงค์

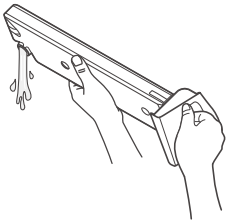


3 ใส่กลับเข้าไปในผลิตภัณฑ์

4 กดปุ่ม **Start/Pause (เริ่มต้น/หยุด)**

การทำความสะอาดตะแกรงช่องอากาศเย็นเข้า

ดูดฝุ่นตะแกรงช่องอากาศเย็นเข้า 3 – 4 ต่อปีเพื่อทำให้แน่ใจว่าไม่มีการสะสมของใยผ้าหรือสิ่งสกปรกที่อาจทำให้การหมุนเวียนอากาศไม่เหมาะสม

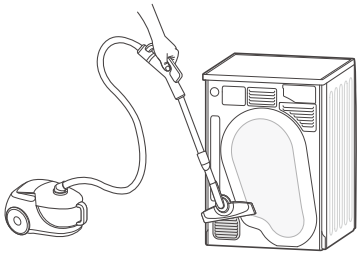


หมายเหตุ

- ลมอุ่นจะถูกปล่อยออกผ่านตะแกรงระบายอากาศ
- ควรทำให้มีการหมุนเวียนที่เพียงพอเพื่อหลีกเลี่ยงการไหลย้อนของก๊าซจากการเผาไหม้เชื้อเพลิงอื่น ๆ เช่น กองไฟ เข้าสู่ห้อง

การเช็ดเซ็นเซอร์วัดความชื้น

อุปกรณ์นี้ตรวจวัดระดับความชื้นของเสื้อผ้าในระหว่างการทำงาน ซึ่งหมายความว่าจะต้องได้รับการทำความสะอาดเป็นประจำเพื่อขจัดการสะสมของตะกรันหินปูนบนผิวหน้าของเซ็นเซอร์

เช็ดเซ็นเซอร์ภายในถังอบผ้า

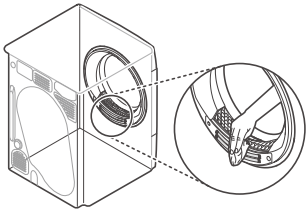

⚠ ข้อควรระวัง

- อย่าเช็ดเซ็นเซอร์วัดความชื้นด้วยวัสดุขัดถู ทำความสะอาดเซ็นเซอร์ด้วยฟองน้ำหยาบเสมอ

การบำรุงรักษา

เครื่องใช้มีระบบการตรวจสอบข้อผิดพลาดโดยอัตโนมัติในการตรวจสอบและวินิจฉัยปัญหาในระยะเริ่มต้น ถ้าเครื่องใช้ไม่สามารถทำงานได้อย่างเหมาะสมหรือไม่สามารถทำงานได้เลย ก่อนที่ท่านจะเรียกใช้บริการให้ทำการตรวจสอบต่อไปนี้:

การวินิจฉัยปัญหา

อาการ	สาเหตุ	การแก้ไข
ผลิตภัณฑ์ไม่เปิดทำงาน	**ไม่ได้เสียบปลั๊กไฟอย่างถูกต้อง**	• ตรวจสอบให้แน่ใจว่าปลั๊กเสียบไว้อย่างแน่นหนากับเต้ารับที่ต่อสายดินซึ่งตรงกับแผ่นป้ายอัตรากำหนดของผลิตภัณฑ์
	ฟิวส์ของไฟฟ้าในบ้านขาด อุปกรณ์ตัดวงจรสับหรือไฟฟ้าดับ	• สับเบรคเกอร์หรือเปลี่ยนฟิวส์ อย่าเพิ่มขนาดของฟิวส์ หากปัญหาคือการโอเวอร์โหลดของวงจรไฟฟ้า ให้ทำการแก้ไขโดยช่างไฟฟ้าที่มีคุณวุฒิ
ผลิตภัณฑ์ไม่ทำความร้อน	**ฟิวส์ของไฟฟ้าในบ้านขาด อุปกรณ์ตัดวงจรสับหรือไฟฟ้าดับ**	• สับเบรคเกอร์หรือเปลี่ยนฟิวส์ อย่าเพิ่มขนาดของฟิวส์ หากปัญหาคือการโอเวอร์โหลดของวงจรไฟฟ้า ให้ทำการแก้ไขโดยช่างไฟฟ้าที่มีคุณวุฒิ
เสื้อผ้าใช้เวลาในการอบนานเกินไป	**ปริมาณน้ำหนักในการอบไม่ได้รับการคัดแยกอย่างถูกต้อง**	• แยกเสื้อผ้าที่หนาออกจากเสื้อผ้าที่มีน้ำหนักเบา เสื้อผ้าที่ใหญ่ขึ้นและหนาขึ้นใช้เวลานานขึ้นในการอบ เสื้อผ้าที่บางที่อยู่กับเสื้อผ้าที่หนาอาจหลอกเซ็นเซอร์เนื่องจากเสื้อผ้าที่บางแห้งไวกว่า
	ปริมาณน้ำหนักในการอบที่มากสำหรับผ้าที่หนา	• ผ้าที่หนาใช้เวลาในการอบนานขึ้นเพราะมักจะเก็บความชื้นไว้มากกว่า เพื่อช่วยลดและคงเวลาในการอบที่สม่ำเสมอสำหรับเสื้อผ้าที่ใหญ่ขึ้นและหนาขึ้น แยกเสื้อผ้าเหล่านี้ออกในปริมาณที่น้อยลงด้วยระดับที่ใกล้เคียงกัน
	การควบคุมผลิตภัณฑ์ไม่ได้กำหนดไว้อย่างถูกต้อง	• ใช้การตั้งค่าควบคุมที่เหมาะสมสำหรับประเภทของปริมาณน้ำหนักในการอบที่คุณกำลังทำการอบ การอบบางอย่างอาจจำเป็นต้องทำการปรับการตั้งค่าระดับการอบเพื่อการอบที่เหมาะสม
	จำเป็นต้องทำความสะอาดแผ่นกรองใยผ้า	• ขจัดใยผ้าออกจากแผ่นกรองใยผ้าก่อนทุกโปรแกรมการอบ เมื่อขจัดใยผ้าออก ถือแผ่นกรองใยผ้าส่องกับแสงเพื่อดูว่าสกปรกหรืออุดตันหรือไม่ ด้วยการอบบางอย่างที่ทำให้เกิดใยผ้าจำนวนมาก เช่น ผ้าเช็ดตัวใหม่ อาจจำเป็นต้องหยุดโปรแกรมการอบและทำความสะอาดแผ่นกรองในระหว่างโปรแกรมการอบ
เสื้อผ้าใช้เวลาในการอบนานเกินไป	**ฟิวส์ของไฟฟ้าในบ้านขาด อุปกรณ์ตัดวงจรสับหรือไฟฟ้าดับ**	• สับเบรคเกอร์หรือเปลี่ยนฟิวส์ อย่าเพิ่มขนาดของฟิวส์ หากปัญหาคือการโอเวอร์โหลดของวงจรไฟฟ้า ให้ทำการแก้ไขโดยช่างไฟฟ้าที่มีคุณวุฒิ
	ผลิตภัณฑ์รับน้ำหนักมากเกินไป	• แบ่งปริมาณน้ำหนักในการอบที่มากเป็นพิเศษให้มีปริมาณที่น้อยลงเพื่อสมรรถนะการอบและประสิทธิภาพที่ดีกว่า
	ผลิตภัณฑ์รับน้ำหนักน้อยเกินไป	• หากคุณทำการอบที่มีปริมาณน้ำหนักน้อยมาก เพิ่มเสื้อผ้าเข้าไปเพื่อให้แน่ใจว่าจะมีการปั่นที่เหมาะสม หากปริมาณน้ำหนักในการอบน้อยมากและคุณใช้โปรแกรมการอบแบบใช้เซ็นเซอร์ ตัวควบคุมอิเล็กทรอนิกส์จะไม่สามารถตรวจวัดระดับความแห้งได้อย่างถูกต้องและอาจปิดทำงานเร็วเกินไป ใช้โปรแกรมตั้งเวลาอบผ้าหรือใส่ผ้าเปียกเพิ่มในปริมาณน้ำหนักในการอบ

อาการ	สาเหตุ	การแก้ไข
เวลาในการอบไม่สม่ำเสมอ	**การตั้งค่าความร้อน ขนาดของปริมาณน้ำหนัก หรือความชื้นของเสื้อผ้าไม่สม่ำเสมอ**	• เวลาในการอบสำหรับปริมาณน้ำหนักจะแตกต่างกันไปโดยขึ้นกับประเภทของความร้อนที่ใช้ (ไฟฟ้า) ขนาดของปริมาณน้ำหนัก ประเภทของเสื้อผ้า ความเปียกของเสื้อผ้า และแผ่นกรองใยผ้า ด้วยปริมาณน้ำหนักในการอบที่ไม่สมดุลในผลิตภัณฑ์สามารถทำให้เกิดการปั่นที่ไม่ดี ซึ่งส่งผลเสื้อผ้าที่เปียกกว่าต้องใช้เวลานานขึ้นในการอบ
มีจุดที่เป็นคราบหรือสกปรกหลงเหลือบนเสื้อผ้า	**ใช้งานน้ำยาปรับผ้านุ่มอย่างไม่ถูกต้อง**	• เมื่อทำการซักเสื้อผ้าที่จะอบในผลิตภัณฑ์ ใช้น้ำยาปรับผ้านุ่มในปริมาณที่ถูกต้องตามการแนะนำโดยผู้ผลิตน้ำยาปรับผ้านุ่ม
	เสื้อผ้าที่สะอาดและสกปรกถูกนำมาอบร่วมกัน	• ใช้ผลิตภัณฑ์เพื่ออบผ้าสะอาดเท่านั้น สิ่งสกปรกจากเสื้อผ้าที่ไม่สะอาดอาจย้ายไปติดเสื้อผ้าสะอาดในการอบครั้งเดียวกันหรือหลังจากนั้นได้
	เสื้อผ้าไม่ได้รับการทำความสะอาดหรือซักน้ำอย่างถูกต้องก่อนนำมาใส่ในผลิตภัณฑ์	• รอยเปื้อนบนผ้าที่ถูกอบอาจเป็นรอยเปื้อนที่ไม่ถูกขจัดออกในระหว่างกระบวนการซัก ตรวจสอบให้แน่ใจว่าได้รับการทำความสะอาดหรือซักน้ำอย่างหมดจดตามคำแนะนำสำหรับเครื่องซักผ้าและผงซักฟอกของคุณ สิ่งสกปรกที่ขจัดได้ยากบางอย่างอาจจำเป็นต้องได้รับการจัดการก่อนการซัก
เสื้อผ้ายับ	**เสื้อผ้าถูกอบจนแห้งนานเกินไป (แห้งเกินไป)**	• เวลาในการอบที่นานเกินไปอาจนำไปสู่การยับของเสื้อผ้า ลองใช้เวลาในการอบที่สั้นลง
	เสื้อผ้าถูกทิ้งไว้ในผลิตภัณฑ์เป็นเวลานานเกินไปหลังสิ้นสุดโปรแกรมการอบ	• ใช้ฟังก์ชันการกันยับ
เสื้อผ้าหด	**ไม่ปฏิบัติตามคำแนะนำในการดูแลเสื้อผ้า**	• เพื่อหลีกเลี่ยงการหดของเสื้อผ้าของคุณ อ้างอิงและปฏิบัติตามคำแนะนำในการดูแลผ้าเสมอ ผ้าบางชนิดจะหดตามธรรมชาติเมื่อซัก ผ้าชนิดอื่น ๆ สามารถซักได้แต่จะหดเมื่ออบในผลิตภัณฑ์ ใช้การตั้งค่าความร้อนต่ำหรือไม่ใช้ความร้อน
ใยผ้าตกค้างบนเสื้อผ้า	**แผ่นกรองใยผ้าไม่ได้รับการทำความสะอาดอย่างถูกต้อง**	• ขจัดใยผ้าออกจากแผ่นกรองใยผ้าก่อนทุกโปรแกรมการอบ เมื่อขจัดใยผ้าออก ถือแผ่นกรองใยผ้าส่องกับแสงเพื่อดูว่าสกปรกหรืออุดตันหรือไม่ หากดูแล้วสกปรกทำตามคำแนะนำในการทำความสะอาด ด้วยการอบบางอย่างที่ทำให้เกิดใยผ้าจำนวนมาก อาจจำเป็นต้องหยุดโปรแกรมการอบและทำความสะอาดแผ่นกรองในระหว่างโปรแกรมการอบ
	เสื้อผ้าไม่ได้รับการคัดแยกอย่างถูกต้อง	• ผ้าบางชนิดจะทำให้เกิดใยผ้า (เช่น ผ้าขนหนู ผ้าฝ้ายสีขาวฟู) และควรอบแยกจากเสื้อผ้าที่จับกับใยผ้า (เช่น กางเกงลินินสีดำ)
	ผลิตภัณฑ์รับน้ำหนักมากเกินไป	• แบ่งปริมาณน้ำหนักการอบที่มากเป็นพิเศษให้มีปริมาณที่น้อยลงสำหรับการอบ
	มี ทิชชู่ กระดาษ ฯลฯ ค้างอยู่ในกระเป๋า	• ตรวจดูกระเป๋าให้ทั่วก่อนการอบเสื้อผ้า
มีไฟฟ้าสถิตในเสื้อผ้ามากเกินไปหลังการอบ	**เสื้อผ้าถูกอบจนแห้งนานเกินไป (แห้งเกินไป)**	• เวลาในการอบเสื้อผ้าที่มากเกินไปอาจทำให้เกิดการสะสมของไฟฟ้าสถิตได้ ปรับการตั้งค่าและใช้เวลาในการอบที่สั้นลง หรือใช้โปรแกรมการอบแบบใช้เซ็นเซอร์

อาการ	สาเหตุ	การแก้ไข
มีไฟฟ้าสถิตในเสื้อผ้ามากเกินไปหลังการอบ	**ทำการอบผ้าใยสังเคราะห์ ผ้ารีดเรียบถาวร หรือผ้าผสมใยสังเคราะห์**	• ผ้าเหล่านี้จะมีการสะสมของไฟฟ้าสถิตโดยธรรมชาติ ลองใช้น้ำยาปรับผ้านุ่ม หรือใช้การตั้งค่าเวลาในการตั้งเวลาอบผ้าที่สั้นลง
น้ำรั่ว	**สายท่อช่องเก็บน้ำหรือสายท่อระบายไม่ได้รับการต่ออย่างถูกต้อง**	• ต่อสายท่อช่องเก็บน้ำหรือสายท่อระบายอย่างถูกต้อง
	ปิดฝาในขณะที่เสื้อผ้าหรือวัตถุแปลกปลอมถูกหนีบไว้ในฝา	• ตรวจสอบว่าเสื้อผ้าหรือวัตถุแปลกปลอมถูกหนีบไว้ในฝาหรือไม่ก่อนในงานผลิตภัณฑ์ หากน้ำรั่วอย่างต่อเนื่อง ติดต่อศูนย์ข้อมูลลูกค้าของ LG Electronics
เสื้อผ้ามีจุดที่เปียกหลังโปรแกรมการอบแบบใช้เซ็นเซอร์	**ปริมาณน้ำหนักในการอบที่หนักมากหรือน้อยมาก ผ้าขนาดใหญ่ชิ้นเดียว เช่น ผ้าห่มหรือผ้าคลุมเตียง**	• หากเสื้อผ้าเกาะกันแน่นเกินไปหรือน้อยเกินไป เซ็นเซอร์อาจมีปัญหาในการอ่านระดับความแห้งของการอบ ใช้โปรแกรมตั้งเวลาอบผ้าสำหรับการอบผ้าที่มีปริมาณน้ำหนักน้อย • หากเสื้อผ้าเกาะกันแน่นเกินไปหรือน้อยเกินไป เซ็นเซอร์อาจมีปัญหาในการอ่านระดับความแห้งของการอบ ใช้โปรแกรมตั้งเวลาอบผ้าสำหรับปริมาณน้ำหนักในการอบที่น้อยมาก ผ้าขนาดใหญ่และหนา เช่น ผ้าห่มหรือผ้าคลุมเตียง อาจขดพันเป็นก้อนแน่นเองได้ในบางครั้ง ชั้นนอกจะแห้งและถูกตรวจพบโดยเซ็นเซอร์ ในขณะที่ส่วนด้านในยังคงเปียกอยู่ เมื่อทำการอบผ้าชิ้นใหญ่/หนาเพียงชิ้นเดียว อาจช่วยได้โดยทำการหยุดโปรแกรมการอบหนึ่งหรือสองครั้งและจัดผ้าให้คลายออกและนำส่วนที่เปียกออกมาเพื่อทำการอบผ้าที่ยังคงเปียกบางชิ้นเนื่องจากปริมาณน้ำหนักในการอบที่หนักมากหรือมีจุดที่ยังเปียกสองสามจุดบนผ้าชิ้นใหญ่หลังโปรแกรมการอบแบบใช้เซ็นเซอร์เสร็จสมบูรณ์แล้ว ทำความสะอาดตัวตักใยผ้า จากนั้นตั้งโปรแกรมตั้งเวลาอบผ้าเพื่อทำการอบผ้าจนเสร็จสิ้น • ในการอบผ้าเปียกที่เหลืออยู่สองสามชิ้นให้แห้งจากผ้าจำนวนมาก หรือมีจุดที่ยังเปียกสองสามจุดบนผ้าชิ้นใหญ่หลังจากโปรแกรมการอบแบบใช้เซ็นเซอร์เสร็จสมบูรณ์แล้ว ให้ทำความสะอาดตัวตักใยผ้า จากนั้นตั้งโปรแกรมตั้งเวลาอบผ้าเพื่อทำการอบผ้าจนเสร็จสิ้น
เครื่องใช้ไฟฟ้าและสมาร์ทโฟนของคุณไม่เชื่อมต่อกับเครือข่ายWi-Fi	**รหัสผ่าน Wi-Fi ที่คุณพยายามจะเชื่อมต่อไม่ถูกต้อง**	• ค้นหาเครือข่าย Wi-Fi ที่เชื่อมต่อกับสมาร์ทโฟนของคุณแล้วลบมันออกจากนั้นจึงลงทะเบียนเครื่องใช้ไฟฟ้าของคุณใน LG SmartThinQ
	ข้อมูลโมไบล์ของสมาร์ทโฟนของคุณเปิดอยู่	• ปิด ข้อมูลโมไบล์ ของสมาร์ทโฟนของคุณแล้วลงทะเบียนเครื่องใช้ไฟฟ้าผ่านเครือข่าย Wi-Fi
	ตั้งค่าชื่อเครือข่ายไร้สาย (SSID) ไม่ถูกต้อง	• ชื่อของเครือข่ายไร้สาย (SSID) ควรเป็นตัวอักษรภาษาอังกฤษและตัวเลข (อย่าใช้ตัวอักษรพิเศษ)
	ความถี่ของเราเตอร์ไม่ใช่ 2.4 GHz.	• รองรับความถี่ 2.4 GHz เท่านั้น ตั้งค่าไวร์เลสเราเตอร์เป็น 2.4 GHz แล้วเชื่อมต่อเครื่องใช้ไฟฟ้ากับเราเตอร์ไวร์เลส ตรวจสอบความถี่ของเราเตอร์ของคุณโดยการถามผู้ให้บริการอินเตอร์เน็ตของคุณหรือผู้ผลิตเราเตอร์
	เครื่องใช้ไฟฟ้าอยู่ห่างเราเตอร์มากเกินไป	• หากเครื่องใช้ไฟฟ้าอยู่ห่างเราเตอร์เกินไปจะทำให้สัญญาณอ่อน ซึ่งอาจทำให้ไม่สามารถการเชื่อมต่อได้อย่างถูกต้อง ย้ายตำแหน่งเราเตอร์ให้ใกล้กับเครื่องใช้ไฟฟ้ามากขึ้น


รหัสข้อผิดพลาด

อาการ	สาเหตุ	การแก้ไข
dE	**ฝาถูกเปิดในขณะที่ผลิตภัณฑ์กำลังทำงานหรือผลิตภัณฑ์กำลังทำงานโดยที่ฝาไม่ได้ปิดอย่างถูกต้อง**	• ปิดฝาให้สนิท • หาก dE ไม่หายไป ติดต่อขอรับการซ่อมบำรุง
dE4	**การตรวจจับสวิตช์ประตูทำงานผิดพลาด**	• ถอดปลั๊กไฟและติดต่อขอรับบริการ
tE1	**เซ็นเซอร์วัดอุณหภูมิทำงานผิดปกติ**	• ถอดปลั๊กไฟและติดต่อขอรับบริการ
tE2		
F1	**อุณหภูมิภายในถังซักเพิ่มขึ้นอย่างฉับพลัน**	• ถอดปลั๊กไฟและติดต่อขอรับบริการ
LE1	**มอเตอร์หยุดอย่างฉับพลัน**	• ตรวจสอบว่าปริมาณผ้าเกินปริมาณโหลดสูงสุดหรือไม่ • ถอดปลั๊กไฟและติดต่อขอรับบริการ
LE2	**คอมเพรสเซอร์หยุดอย่างฉับพลัน**	• ถอดปลั๊กไฟและติดต่อขอรับบริการ
AE		
OE	**มอเตอร์ปั๊มระบายน้ำทำงานผิดพลาด**	• ถอดปลั๊กไฟและติดต่อขอรับบริการ
	อุณหภูมิแวดล้อมของสถานที่ติดตั้งต่ำกว่าศูนย์องศา	• อุณหภูมิแวดล้อมในการติดตั้งที่แนะนำคือ 5 - 35 °C.

การรับประกัน

การรับประกันแบบจำกัดนี้ไม่ครอบคลุม:

- การเดินทางให้บริการเพื่อจัดส่ง รับ หรือติดตั้งหรือซ่อมแซมผลิตภัณฑ์ คำแนะนำสำหรับลูกค้าเกี่ยวกับการใช้งานผลิตภัณฑ์ ซ่อมแซมหรือเปลี่ยนฟิวส์ หรือแก้ไขการเดินสายไฟหรือการเดินท่อน้ำ หรือการแก้ไขการซ่อมแซม/การติดตั้งที่ไม่ได้รับอนุญาต
- ความล้มเหลวของผลิตภัณฑ์ที่จะทำงานในระหว่างไฟฟ้าดับและการขัดจังหวะ หรือการดูแลรักษาทางไฟฟ้าที่ไม่เพียงพอ
- ความเสียหายที่เกิดจากท่อน้ำรั่วหรือแตก ท่อน้ำที่เป็นน้ำแข็ง ทางระบายน้ำที่จำกัด การจ่ายน้ำที่ไม่เพียงพอหรือถูกขัดจังหวะ หรือการให้อากาศที่ไม่เพียงพอ
- ความเสียหายที่เป็นผลจากการใช้งานผลิตภัณฑ์สภาพอากาศที่เกิดการกัดกร่อนหรือขัดกับคำแนะนำที่กำหนดในคู่มือผู้ใช้ของผลิตภัณฑ์
- ความเสียหายต่อผลิตภัณฑ์ที่เกิดจากอุบัติเหตุ แมลงและสัตว์รบกวน ฟ้าผ่า ลม ไฟไหม้ น้ำท่วม หรือเหตุทางธรรมชาติอื่นๆ
- ความเสียหายหรือความล้มเหลวที่เกิดจากการแก้ไขหรือดัดแปลงที่ไม่ได้รับอนุญาต หรือหากถูกนำไปใช้งานอื่นๆ นอกเหนือจากจุดประสงค์การใช้งานที่มุ่งหมาย หรือการรั่วของน้ำเมื่อผลิตภัณฑ์ไม่ได้รับการติดตั้งอย่างเหมาะสม
- ความเสียหายหรือความล้มเหลวที่เกิดจากกระแสไฟฟ้าหรือศักย์ไฟฟ้า หรือการเดินท่อที่ไม่ถูกต้อง การใช้งานเชิงพาณิชย์หรือทางอุตสาหกรรม หรือการใช้งานอุปกรณ์เสริม ชิ้นส่วน หรือผลิตภัณฑ์ทำความสะอาดที่ใช้แล้วหมดที่ไม่ได้รับอนุญาตโดย LG
- ความเสียหายที่เกิดจากการขนส่งหรือการดูแล รวมไปถึงรอยถลอก รอยบุบ การกระเทาะ และ/หรือความเสียหายอื่นต่อผิวเคลือบของผลิตภัณฑ์ของคุณ เว้นต่อความเสียหายดังกล่าวเป็นผลจากข้อบกพร่องในวัสดุหรือคุณภาพของงาน
- ความเสียหายหรือการขาดชิ้นส่วนในสินค้าจัดแสดง ที่เปิดแล้ว ลดราคาหรือแก้ไขใหม่
- ผลิตภัณฑ์ที่มีหมายเลขซีเรียลดั้งเดิมที่ถูกถอด เปลี่ยน หรือไม่สามารถระบุได้ทันที รุ่นและหมายเลขซีเรียล พร้อมด้วยใบเสร็จรับเงินของร้านค้าปลีก จำเป็นสำหรับการยืนยันความถูกต้องของการรับประกัน
- การเพิ่มขึ้นของค่าสาธารณูปโภคและค่าใช้จ่ายสาธารณูปโภคเพิ่มเติม
- การซ่อมแซมเมื่อผลิตภัณฑ์ของคุณถูกใช้งานนอกเหนือจากการใช้งานในบ้านตามปกติ หรือขัดกับคำแนะนำที่กำหนดในคู่มือผู้ใช้ของผลิตภัณฑ์
- ค่าใช้จ่ายที่เกี่ยวข้องกับการขนย้ายผลิตภัณฑ์ของคุณออกจากบ้านของคุณเพื่อซ่อมแซม
- การถอดและการติดตั้งผลิตภัณฑ์ใหม่ หากถูกติดตั้งไว้ในตำแหน่งที่ไม่สามารถเข้าถึงได้หรือถูกติดตั้งโดยไม่สอดคล้องกับคำแนะนำในการติดตั้งที่พิมพ์เป็นรูปเล่ม รวมไปถึงคู่มือผู้ใช้และคู่มือการติดตั้งของ LG
- ความเสียหายที่เป็นผลจากการใช้ที่ผิด การใช้งานมากเกินไป การติดตั้ง การซ่อมแซมหรือการบำรุงรักษาที่ไม่เหมาะสม การซ่อมแซมที่ไม่เหมาะสมรวมถึงการใช้ชิ้นส่วนที่ไม่ได้รับอนุญาตหรือกำหนดโดย LG
- เสียงหรือการสั่นที่ถือว่าปกติ ตัวอย่างเช่น เสียงระบายน้ำ เสียงการปั่น หรือเสียงสัญญาณเตือน

แผ่นกรองอุดตัน – ไม่มีการทำความร้อน ใช้เวลานานในการอบ		ทำความสะอาดแผ่นกรองใยผ้า
การต่อปลั๊กไฟอย่างไม่เหมาะสมหรือปัญหาของเต้ารับ – ไม่มีไฟเข้า – ไม่มีการทำความร้อน		ต่อปลั๊กไฟใหม่ ปล่อยฟิวส์ไฟฟ้าในบ้านหรือสับอุปกรณ์ตัดไฟ หากเต้ารับมีปัญหา อาจจำเป็นต้องเรียกช่างไฟฟ้า

บันทึก

บันทึก

บันทึก

บันทึก

บันทึก

LG
Life's Good

OWNER'S MANUAL

DRYER



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

www.lg.com

Copyright © 2019 LG Electronics Inc. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased. This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS 3
- IMPORTANT SAFETY INSTRUCTIONS 3

INSTALLATION 9
- Specifications 9
- Accessories (Optional) 9
- Installation Place Requirements 10
- Stacking Installation Instructions 11
- Reversing the door 14

OPERATION 16
- Using the Appliance 16
- Sorting Laundry 17
- Control Panel 18
- Programme Table 19
- Option Programme 21
- Rack Dry 22

SMART FUNCTIONS 24
- Using LG SmartThinQ Application 24
- Using Smart Diagnosis™ 27

MAINTENANCE 28
- Cleaning the Lint Filter 28
- Emptying the Water Container 29
- Cleaning the Cool Air Inlet Grill 29
- Wiping the Moisture Sensor 29

MAINTENANCE 30
- Diagnosing Problems 30
- Error Codes 34

WARRANTY 35

SAFETY INSTRUCTIONS

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into ‘WARNING’ and ‘CAUTION’ as described below.

⚠ This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

⚠ **WARNING**

This indicates that the failure to follow the instructions can cause serious injury or death.

⚠ **CAUTION**

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

IMPORTANT SAFETY INSTRUCTIONS

⚠ **WARNING**

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Children in the Household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

For use in Europe:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

Installation

- Make sure the appliance is properly installed, grounded, and adjusted by qualified service personnel according to the installation instructions.
- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, rain, or temperatures below freezing.
- Tighten the drain hose to avoid separation.
- If the power cord is damaged or the hole of the socket outlet is loose, do not use the power cord and contact an authorized service centre.
- Do not plug multiple socket outlets, an extension power cable or adapter with this appliance.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance.

- This appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate socket outlet that is installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the power plug provided with the appliance. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

Operation

- Do not attempt to separate any panels or disassemble the appliance. Do not apply any sharp objects to the control panel in order to operate the appliance.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.
- Keep the area underneath and around the appliance free of combustible materials such as lint, paper, rags, chemicals, etc.
- Do not put animals, such as pets into the appliance.
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.

- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, vegetable oil, cooking oil, etc.). Improper use can cause fire or explosion.
- In case of flood, disconnect the power plug and contact the LG Electronics customer information centre.
- Do not push down the door excessively, when the appliance door is open.
- Use new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- Do not touch the door during a high temperature programme.
- Do not use flammable gas and combustible substances (benzene, gasoline, thinner, petroleum, alcohol, etc.) near the appliance.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.
- Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.

Maintenance

- Securely plug the power plug in the socket outlet after completely removing any moisture and dust.
- Disconnect the appliance from the power supply before cleaning the appliance. Setting the controls to the OFF or stand by position does not disconnect this appliance from the power supply.
- Do not spray water inside or outside the appliance to clean it.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the socket outlet.

Technical Safety for Using the Dryer


- Do not dry unwashed items in the appliance.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The appliance is not to be used if industrial chemicals have been used for cleaning.
- Items that have been soiled with substances such as cooking oil, vegetable oil, acetone, alcohol, petroleum, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.
- Do not drink the condensed water. Failure to do so may result in food-borne illnesses.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.
- The lint trap has to be cleaned frequently.
- Lint must not to be allowed to accumulate around the appliance.
- Do not spray dry cleaning detergent directly onto the appliance or use the appliance to dry clothes left with dry cleaning detergent.
- Do not dry clothes stained with oil substances. Oil substances (including edible oils) stained on clothes cannot be completely removed even after washing with water.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

- Remove clothes from the product immediately when drying is complete or the power is turned off during the drying process. Leaving clothes that has been dried in the appliance unattended could result in fire. Clothes removed from the appliance after drying could result in fire. Remove clothes immediately after drying, and then hang or lay the clothes flat to cool.

Disposal

- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Remove the door before disposing of or discarding this appliance to avoid the danger of children or small animals getting trapped inside.

Specifications

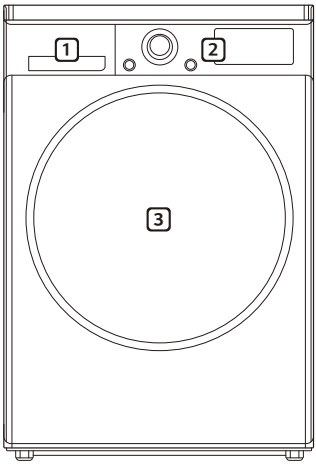

1 Water container

2 Control panel

3 Door

Model	RC09VHP2W
Power supply	220 V~, 50 Hz
Size	600 mm (W) X 690 mm (D) X 850 mm (H)
Product weight	56 kg
Allowable temperature	5 - 35 °C
Max. capacity	**9 kg**


- Appearance and specifications may vary without notice to improve the quality of the appliance.

Accessories (Optional)


Please contact the LG Electronics Customer Information Centre for purchase.



Condensing Drain Hose and Hose Holder

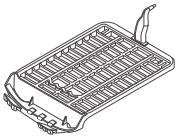


Dry Rack

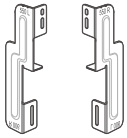

Stacking Kit

Installation Place Requirements

Location

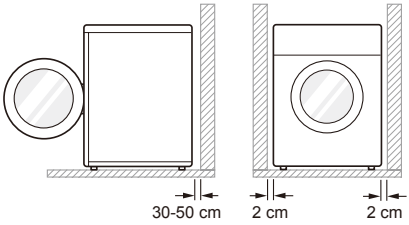

Level floor : Allowable slope under the entire appliance is 1°.

Power outlet : Must be within 1.5 meters of either side of the location of the appliance.

- Do not overload the outlet with more than one appliance.

Additional Clearance : For the wall, 30 - 50 cm: rear /2 cm: right & left side

- Do not place or store laundry products on top of the appliance at any time. These products may damage the finish or controls.

NOTE

- For better drying performance, please keep the rear of the appliance away from wall.
- Do not install the appliance where there is a risk of frost or dust.
- The appliance may not be able to operate properly or may be damaged by freezing of condensed water in the pump and drain hose.
- Do not install the appliance next to a high-temperature appliance like refrigerator, oven or stove etc, which can cause poor drying performance and programme duration, and adversely affect the proper functioning of the compressor. The appliance performs best at a room temperature of 23 °C.

Positioning

- Install the appliance on a flat hard floor.
- Make sure that air circulation around the appliance is not impeded by carpets, rugs, etc.
- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the appliance.
- Do not install the appliance in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
- If the appliance is delivered in winter and temperatures are below freezing, place the appliance at room temperature for a few hours before putting it into operation.
- Please ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.
- With the appliance installed, adjust all four feet using a spanner to ensure the appliance is stable, and a clearance of approximately 20 mm is left between the top of the appliance and the underside of any work-top.

Ventilation Requirement

- Alcove or under counter
  - Ensure air flow of 3.17 m^3/min through the appliance
- Closet
  - Closet door must have 2 (louvered) openings, each having a minimum area of 387 cm^2, located 8 cm from bottom and top of door.

⚠ WARNING

- Avoid installing the appliance around a heat source.The rear side of the appliance must be well ventilated. Failure to follow these instructions may result in problems.
- The appliance should not be installed next to a refrigeration appliance.
- The appliance is not designed for maritime use or for use in mobile installations such as caravans, aircraft etc.

Electrical Connection

- Do not use an extension cord or double adapter.
- Always unplug the appliance after use.
- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned so that the plug is easily accessible.


Stacking Installation Instructions

Your dryer can be placed on top of an LG washing machine and securely fixed with a stacking kit. This installation must be conducted by qualified service personnel to ensure it has been installed correctly.



The qualified service personnel will ensure you have the correct stacking kit for your model of washing machine and will ensure it is firmly fixed. For these reasons, expert fitting is essential.

Stacking Kit

In order to stack this dryer an LG stacking kit is required.

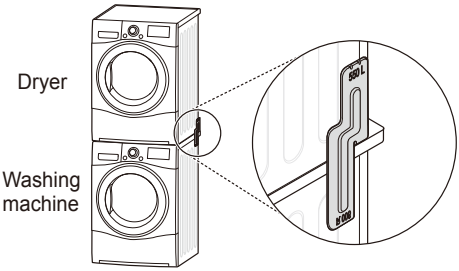


This dryer may only be stacked on top of an LG washing machine. Do not attempt to stack this dryer on any other washing machine, as damage, injury or property damage could result.

	Washing Machine Top plate size	
	550 mm	600 mm
Shape and assembly direction		

Installation Procedure


1 Place the LG dryer on the LG washing machine.

2 Remove the two screws from the bottom of the rear cover on each side as illustrated below.

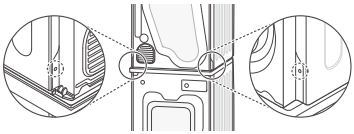


3 Align the stacking kit holes and the rear cover holes.

- 3-1) 600 mm

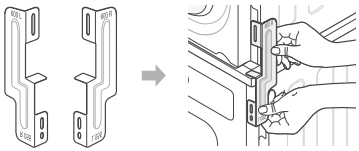

- 3-1) 550 mm

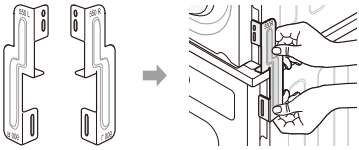

4 Fasten the two screws that were removed earlier from the dryer to the stacking kit.

5 Use the four screws in the accessory box (16 mm) to assemble the washing machine rear cover and stacking kit.

6 The procedure for the opposite side will be the same.


⚠ WARNING

- Incorrect installation can cause serious accidents.
- The weight of the appliance and the height of installation make the stacking procedure too risky for one person. This procedure should be performed by two or more qualified service personnel.
- The appliance is not suitable for a built-in installation. Please do not install as a built-in appliance.
- Do not operate if the appliance is not properly stacked.


Condensed Water Drain-out

Normally, condensed water is pumped up to the water container where water is collected until manually emptied. Water can also be drained out directly to a mains drain, especially when the dryer is stacked on top of a washing machine. With a connecting kit for the mains drain hose, simply change the water path and re-route to the drainage facility as below:

1 Separate the anti-backflow lid(❶) and the water container hose(❷) from the connecting kit.

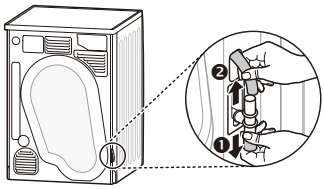

2 Attach the anti-backflow lid(❶) to the head of the connecting kit and then connect the drain hose(❸) to the opposite side of the connecting kit.

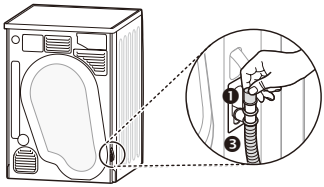

⚠ CAUTION


- If the hose is installed in a way that leaves it bent or pinched, drainage may not function properly.

Leveling the appliance

Leveling the appliance prevents unnecessary noise and vibration. Place the appliance on a solid, level floor.

If the appliance is not properly level, adjust the front leveling feet as necessary.

Turn them clockwise to raise and counter-clockwise to lower until the appliance no longer wobbles, both front-to-back and side-to-side and corner-to-corner.

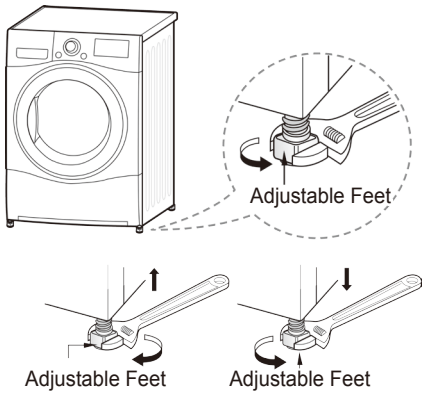

Diagonal Check

- When pushing down the edges of the top plate diagonally, the appliance should not move up and down at all (Check both directions). If the appliance rocks when pushing the top plate diagonally, adjust the feet again.

Reversing the door

You can reverse the door for your convenience.


⚠ WARNING

- Do not reverse the door while the appliance is stacked on a washing machine.
- Before removing the hinge screws, have an assistant support the weight of the door. The door could fall on the floor due to the weight of the door.
- For safety reasons, two or more people need to work together to reverse the door.

NOTE

- The appearance of the screws varies and the screws must be inserted differently depending on the position. Make sure the screw is properly selected before tightening.

1 Open the door and remove 2 screws on the door hinge. After removing the screws, put the door down carefully with the front side facing down to the floor.

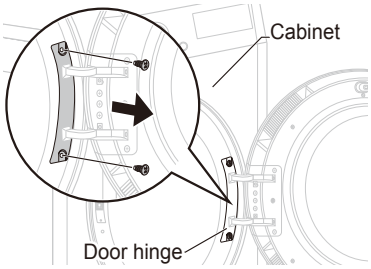


⚠ WARNING


- Remove the lower screw first. The door may fall on to the floor due to its weight and the door can be damaged.

2 Remove 8 screws on the hinge assembly from the door.

- There are 6 screws on the front and 2 screws on the side.

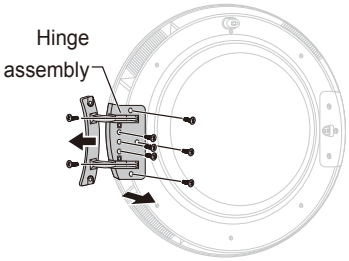


3 Remove the 3 screws from the door latch assembly which is fixed between the door and the hinge assembly and then remove the screw which is fixed on the door hook.

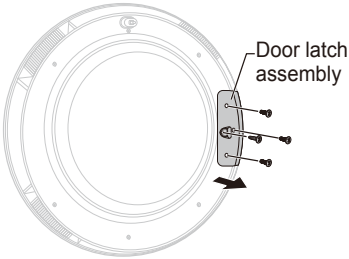


4 Switch between the position the hinge assembly and door latch assembly and then tighten the screws in reverse order.


- Tighten the screw in proper position referring from 2 to 4 steps.

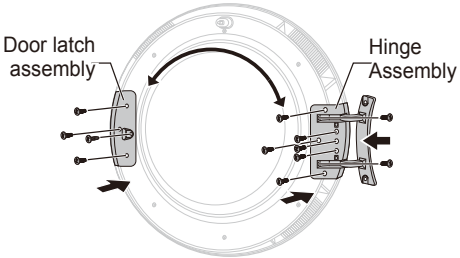


5 Remove the door catch from the appliance frame by removing 2 screws and then assemble them on the opposite side.

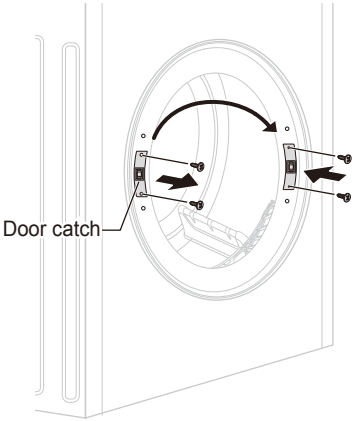

6 Remove the 2 decorative screws from the appliance frame and then assemble them on opposite side.

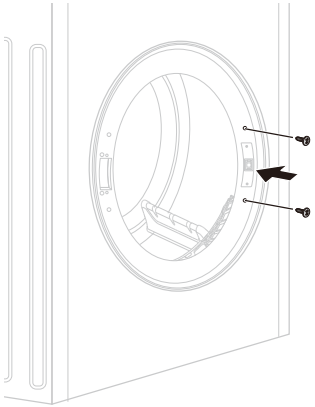

7 Install the door with the screws removed in step 1 and then check the door closes properly.

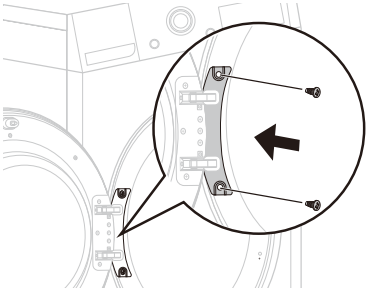

Using the Appliance


Before the first cycle, set the appliance to dry for five minutes to warm up the drum. Open the door between loads the first few times you use the appliance to allow any odours from the interior of the appliance to disperse.

1 Ensure the lint filter and water container are clean.

- The lint filter is inside the door rim. It needs to be cleaned before each drying cycle.
- Open the door and ensure the lint filter is clean. If it is not, please clean the lint filter.



- Also check if the water container needs to be emptied for optimum drying results.

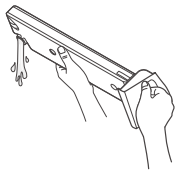

⚠ WARNING

- Do not drink the condensed water.

NOTE

- In some instances, LED window may display (Empty water symbol) and the appliance may stop because the water container is full.

2 Place laundry into the drum after sorting.

- The clothes should be sorted by fabric type and dryness level and all the strings and belts of clothes should be well tied and fixed before being put into the drum. Push the laundry to the back to keep it away from the door seal. Otherwise, the door seal and clothes may be damaged. Close the door.

⚠ CAUTION

- Be careful not to trap laundry between the door and rubber seal.


3 Turn the power on.

- Press the **Power** button. The indicator icon above the button will become illuminated, indicating that the appliance is all set to run.



4 Select the drying programme you want.

- You can choose a programme by turning the programme selector knob until the required programme is indicated.
- If you press the **Start/Pause** button without choosing a programme, the appliance will proceed with the **Cotton** programme. Please refer to the programme table for the detailed information.

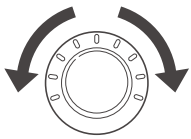

5 Press the **Start/Pause** button.



6 After the cycle has finished, open the door and remove the laundry.

7 Turn off the appliance.
- Press the **Power** button.

⚠ CAUTION

- Be careful! The drum inside may still be hot.
- The appliance must not be used for purposes other than those for which it was designed.

NOTE

- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that laundry is left at a temperature that ensures the laundry will not be damaged.
- A high atmospheric temperature and a small room may both increase drying time as well as energy consumption.

Sorting Laundry

Clothes have their own wash care labels, so drying according to the wash care label is recommended.

Not only that, the laundry must be sorted according to size and type of fabric.

For the best drying performance and most efficient energy usage, do not overload the appliance.

Woollens

- Dry woollens on the Wool programme. Be sure to follow fabric care label symbols first. Wool may not be completely dried from the cycle, so do not repeat drying. Pull woollens to their original shape and dry them flat.

Woven and Loopknit Materials

- Some woven and loopknit materials may shrink, depending on quality.

Permanent Press and Synthetics

- Do not overload the appliance. Take out permanent press items as soon as the appliance stops to reduce creases.

Baby Clothes and Night Gowns

- Always check fabric care labels.

Rubber and Plastics


- Do not dry any items made from or containing rubber or plastics such as:
  - Aprons, Bibs and Chair Covers
  - Curtains and Table Clothes
  - Bathmats

Fiberglass

- Do not dry fiberglass items in the appliance. Glass particles left in the appliance may be subsequently picked up by your clothes in later cycles.

Icon	Description
	Dry
	Tumble dry
	Permanent Press / Crease resistant
	Gentle / Delicate
	Do not tumble dry
	Do not dry
	High heating
	Medium heating
	Low heating
	No Heating / Air
	Line dry / Hang to dry
	Drip dry
	Dry flat
	In the shade

Control Panel

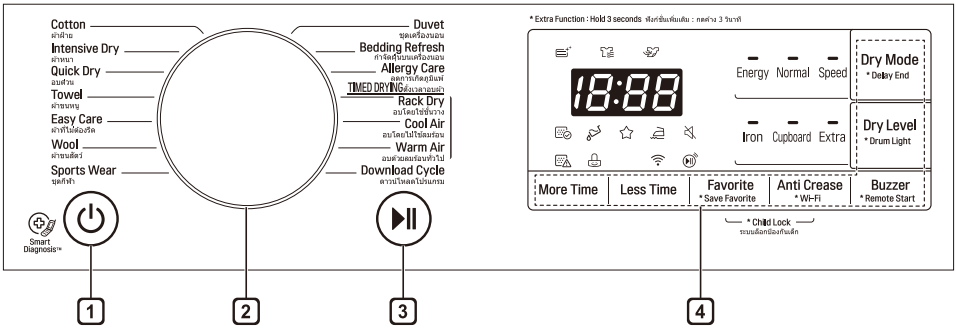

1 Power Button

- Press the **Power** button to turn power on and off.
- Press the **Power** button to cancel the Delay End function.

2 Programme Selector

- Programmes are available according to the laundry type.
- The lamp will light up to indicate the selected programme.

3 Start/Pause Button

- This **Start/Pause** button is used to start or pause a dry cycle.
- When in Pause, the power is turned off automatically after 14 minutes.

4 Additional Programme Buttons

- Use these buttons to select the desired options for the selected programme.
- In order to use the Remote Start function, refer to **SMART FUNCTIONS**.

Display

- : This icon indicates that the lint filter should be cleaned or is clogged.
  - Cleaning notice: When you press the **Power** button, the icon will become displayed.
- : This icon indicates that the water container needs to be emptied or is full.
  - Emptying notice: When you press the **Power** button, this icon will become displayed.
  - Full water notice: The icon will become displayed and a buzzer will sound while the appliance is in operation.
- : This icon indicates the lint filter insertion status. If the lint filter is not inserted, the appliance will not operate and the icon will become displayed.
- : This icon indicates the condenser auto cleaning status. The icon will be displayed during water sprays to the condenser.

Programme Table

Drying Programme

Sensor Dry Programmes				
Programme	**Laundry Type**	**Detail**	**Drying Level**	**Capacity**
				9 kg
Cotton	Towels, dressing gowns and bed linen	For thick and quilted fabrics	**Extra**	9 kg
	Bath towels, tea towels, underwear and cotton socks	For fabrics that do not need to be ironed	**Cupboard**	9 kg
	Bed linen, table linen, towels, T-shirts, polo shirts and work clothes	For fabrics that need to be ironed	**Iron**	9 kg
Intensive Dry	Ordinary clothes, underwear, cotton socks, bed linen, and T-shirt	For thick cotton clothes which need to be dried with high temperature	-	9 kg
Quick Dry	Linen and towels (excluding delicate fabrics) sports wear, bulky Item cycle.	For small loads of suitable fabrics with short drying times	-	1.5 kg
Towel	Towels, Pillowcases	For cotton fabrics which do not need to be ironed	-	4.5 kg
Easy Care	Shirts, T-shirts, trousers, under-wear and sock	For polyamide, acrylic, and polyester that do not need to be ironed	**Cupboard**	3.5 kg
	Shirts, T-shirts, under-wear, anoraks and socks	For polyamide, acrylic, polyester that do need to be ironed	**Iron**	
Wool	Wool	For wool fabrics	-	1 kg
Sports Wear	Soccer kit and training wear	For polyester material	-	2 kg
Duvet	Beddings, bed sheets	For bulky items	-	2.5 kg
Bedding Refresh	Bed clothes, blanket	Removes dust from bedclothes such quilt or blanket using only air without water washing	-	3 kg
Allergy Care	Cotton, underwear, bed sheets and baby clothes	Helps to remove allergens such as house mites	-	4.5 kg

Sensor Dry Programmes				
Programme	Laundry Type	Detail	Drying Level	Capacity
				9 kg
Rack Dry	Silk, wool, delicate lingerie	Refreshes clothes without tumble drying	-	-
Cool Air	All fabrics that need refreshing	Tumbles without heat	-	-
Warm Air	Bath towels, bath robes, dishclothes and acrylic quilted fabrics	Small Items & damp clothing, Everyday items suitable for heat drying	-	-

⚠ CAUTION

- If the load is less than 1 kg, please use the **Warm Air** programme in Timed Drying programmes. Wool items should be dried using the **Wool** programme. Please comply with the recommended laundry load when you select your desired programme. Otherwise, your clothes may be damaged.

NOTE

- The test results depend on room temperature, type and amount of load, water hardness and water inlet temperature.
- If the appliance is installed as built under, it may cause performance degradation.
- If the laundry is not spun at a high speed during washing, energy consumption and drying time will increase.

Option Programme

Delay End

You can use the Delay End option to delay the finishing time of the drying cycle. Maximum Delay End is 19 hours. Minimum Delay End is 3 hours.

1 Turn the appliance on.

2 Select a programme.

3 Press and hold the **Dry Mode** button for 3 seconds to activate the Delay End function.

4 Set time delay hour(s) by pressing the **More Time**, **Less Time** button.

5 Press the **Start/Pause** button.

Anti Crease

The Anti Crease option prevents creases that are formed when the laundry is not unloaded promptly at the end of the drying cycle. When **Anti Crease** is selected, the appliance repeatedly runs and pauses, giving you two hours to unload the laundry. If the door is opened during the Anti Crease option, the option is cancelled.

Favorite ☆

The Favorite option allows you to store a customized dry programme for future use.

1 Turn the appliance on.

2 Select a programme.

3 Select the option or additional programme. (**Anti Crease**, **Dry Mode** etc.)

4 Press and hold the **Favorite** option button for three seconds.

The Favorite option is now stored for future use. To reuse the stored programme, select the **Favorite** option and press the **Start/Pause** button.

Drum Light

Whilst the appliance is running it is possible to see inside the drum if you select the **Drum Light** function.

- Press and hold the **Dry Level** button for 3 seconds to activate the Drum Light function.
- Light on : Door is opened.
- Light off : Door is closed. The light is turned off automatically.

Dry Level

Use this button to select a dryness level for the drying programme.

1 Turn the appliance on.

2 Select a programme.

3 Select a dryness level by pressing the **Dry Level** button repeatedly.

Child Lock

Use this option to disable the controls. This feature can prevent children from changing cycles or operating the appliance.

Locking the Control Panel

1 Press and hold the **Favorite** and **Anti Crease** button simultenesouly for three seconds.

2 A beeper will sound, and CL will appear on the display.
When the **Child Lock** is set, all buttons are locked except the **Power** button.

NOTE

- Turning off the power or completing all cycles will not reset the child lock function. You must deactivate child lock before you can access any other functions.

Unlocking the Control Panel

Press and hold the **Favorite** and **Anti Crease** button simultenesouly for three seconds.

- A beeper will sound and the remaining time for the current programme will reappear on the display.

Buzzer

This option enables you to turn the buzzer sound on and off.

More Time / Less Time

Use these buttons with the Manual Dry programmes to manually increase or reduce the drying time.

Press the **More Time** button to increase the selected programme time by five minutes.

Press the **Less Time** button to decrease the selected programme time by five minutes.


Rack Dry

The dryer rack is placed inside the appliance, as in the picture below. Remove and discard packing material before use.


This programme is designed for use with laundry that must be dried flat, without tumbling, including sweaters and delicate fabrics.

1 Open the door.


2 Insert the hook to the drum centre.

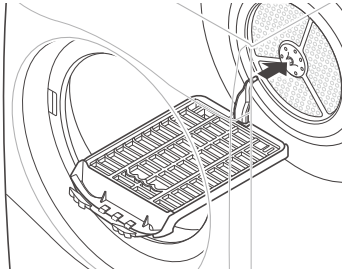

3 Place the dryer rack on the structure above the lint filter and press it to complete assembly.

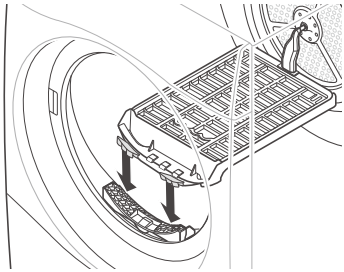

4 Place wet items on top of the rack. Allow space around items for air to circulate.
   - The rack does not move, but the drum will rotate.

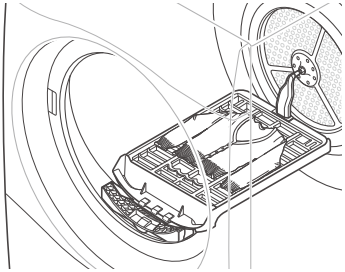

5 Close the door.

6 Turn power on and select **Rack Dry**.

7 Press the **Start/Pause** button.

NOTE

- Check the lint filter and remove any lint accumulated from items dried on the rack.
- The **More Time** / **Less Time** keys can be used to finely adjust the drying time.

Using LG SmartThinQ Application

Things to check before using LG SmartThinQ


- For appliances with the or logo

1 Check the distance between the appliance and the wireless router (Wi-Fi network).


- If the distance between the appliance and the wireless router is too far, the signal strength becomes weak. It may take a long time to register or installation may fail.

2 Turn off the **Mobile data** or **Cellular Data** on your smartphone.

- For iPhones, turn data off by going to **Settings** → **Cellular** → **Cellular Data**.

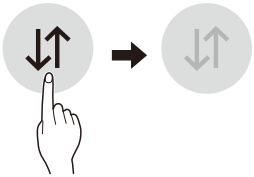

3 Connect your smartphone to the wireless router.

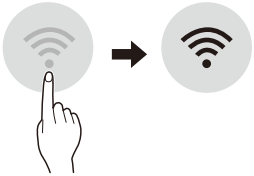

NOTE

- To verify the Wi-Fi connection, check that **Wi-Fi** icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- LG SmartThinQ is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- The appliance cannot be registered due to problems with the wireless signal transmission. Unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to **WEP**, you may fail to set up the network. Please change it to other security protocols **(WPA2** is recommended) and register the product again.

Installing LG SmartThinQ

Search for the LG SmartThinQ application from the Google Play Store or Apple App Store on a smart phone. Follow instructions to download and install the application.

Wi-Fi Function

- For appliances with the or logo

Communicate with the appliance from a smart phone using the convenient smart features.

Dryer Cycle (Remote Start, Download Cycle)

Set or download any preferred cycle and operate by remote control.

Smart Diagnosis™

This function provides useful information for diagnosing and solving issues with the appliance based on the pattern of use.

Push Alert

When the cycle is complete or the appliance has problems, you have the option of receiving push notifications on a smart phone.

Energy Monitoring

The dryer energy usage is affected by the cycle and options so you may see some changes in energy usage from one cycle to another.

Settings

Set the product nickname and delete product.

NOTE

- If you change your wireless router, Internet service provider, or password, delete the registered appliance from the LG SmartThinQ application and register it again.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.

Using Dryer Cycle

Remote Start

Use a smart phone to control your appliance remotely. You can also monitor your cycle operation so you know how much time is left in the cycle.

To Use Remote Start:

1. Press the **Power** button.
2. Put the laundry in drum.
3. Press and hold the **Buzzer** button for 3 seconds to enable the Remote Start function.
4. Start a cycle from the LG SmartThinQ application on your smart phone.

NOTE

- Once the Remote Start mode is enabled, you can start a cycle from the LG SmartThinQ smartphone application. If the cycle is not started, the machine will wait to start the cycle until it is turned off remotely from the application or the Remote Start mode is disabled.
- If the door is open, Remote Start is disabled.

To Disable Remote Start:

When Remote Start is activated, press and hold the **Buzzer** button for 3 seconds.

Download Cycle

Download new and special cycles that are not included in the basic cycles on the appliance.

Appliances that have been successfully registered can download a variety of specialty cycles specific to the appliance.

Only one cycle can be stored on the appliance at a time.

Once cycle download is completed in the appliance, the product keeps the downloaded cycle until a new cycle is downloaded.

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

Smart Diagnosis™ Using a Smart Phone

- For appliances with the or logo

Use this function if you need an accurate diagnosis by an LG Electronics customer information centre when the appliance malfunctions or fails.

Smart Diagnosis™ can not be activated unless the appliance is connected to power. If the appliance is unable to turn on, then troubleshooting must be done without using Smart Diagnosis™.


Using Smart Diagnosis™

Smart Diagnosis™ Through the Customer Information Centre

Use this function if you need an accurate diagnosis by an LG Electronics customer information center when the appliance malfunctions or fails. Use this function only to contact the service representative, not during normal operation.

1 Press the **Power** button to turn on the appliance. Do not press any other buttons or turn the programme selector knob.

2 When instructed to do so by the call centre, place the mouthpiece of your phone close to the Smart Diagnosis™ icon.

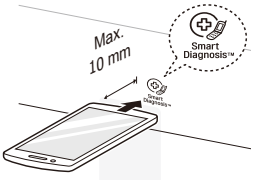

3 Press and hold the **More Time** button for three seconds, while holding the phone mouthpiece to the icon and **Power** button.

4 Keep the phone in place until the tone transmission has finished. Time remaining for data transfer is displayed.

- For best results, do not move the phone while the tones are being transmitted.
- If the call centre agent is not able to get an accurate recording of the data, you may be asked to try again.

5 Once the countdown is over and the tones have stopped, resume your conversation with the call centre agent, who will then be able to assist you using the information transmitted for analysis.

NOTE

- The Smart Diagnosis™ function depends on the local call quality.
- The communication performance will improve and you can receive better service if you use the home phone.
- If the Smart Diagnosis™ data transfer is poor due to poor call quality, you may not receive the best Smart Diagnosis™ service.

⚠ WARNING

- Remove the power plug when you clean the appliance. Not removing the plug may result in electric shock.


Cleaning the Lint Filter

Clean the lint filter before each drying cycle. It should also be cleaned if the icon becomes illuminated and the buzzer sounds while the appliance is in operation.


Cleaning the lint filter will reduce drying time and energy consumption.

1 Open the door.

2 Remove the first lint filter.

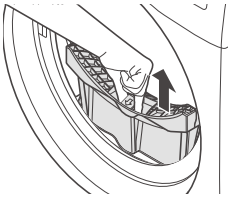


3 Remove the second lint filter.

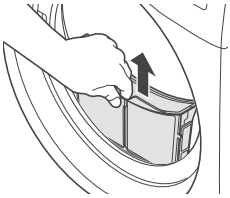


4 Open both lint filters and remove all the lint.


- Open the first lint filter.

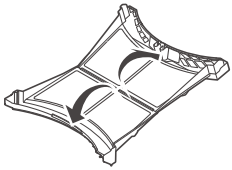


- Open the second lint filter.

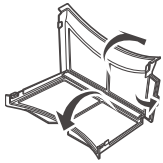

5 Rinse away the lint under warm, running water.

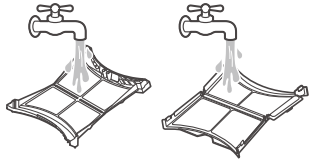

6 Dry the lint filters completely, close them and reinsert both lint filters.

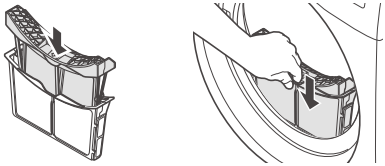

NOTE

- Remove moisture from the mesh. Otherwise, the lint filter may be clogged due to water film and the appliance may not operate.
- If the lint filter is not in the appliance, you can not operate the appliance.


Emptying the Water Container

Condensed water is collected in the water container.


Empty the water container after every use. Not doing so will affect the drying performance.

If the water container is full, the icon glows and the buzzer sounds while the appliance is operating. If this should occur, the water container needs to be emptied within the next hour.

1 Pull out the water container.

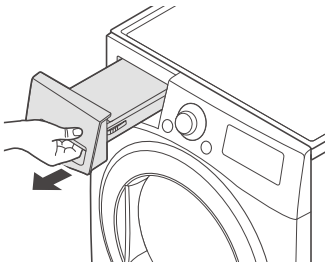

2 Empty the water container in the sink.

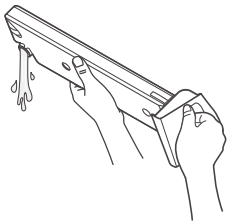


3 Push it back into the appliance.

4 Press the **Start/Pause** button.

Cleaning the Cool Air Inlet Grill

Vacuum the Cool Air Inlet grill 3 – 4 times a year to make sure there is no build up of lint or dirt that may cause improper air flow.

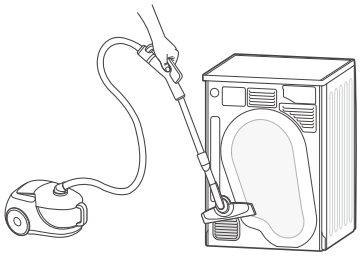


NOTE

- Warm air is exhausted through the ventilation grill.
- Adequate ventilation should be provided to avoid the back flow of gases into the room from units burning other fuels, such as open fires.

Wiping the Moisture Sensor

This device senses the moisture level of the laundry during operation, which means it must be cleaned regularly to remove any build up of lime scale on the surface of the sensor.

Wipe the sensors inside the drum.

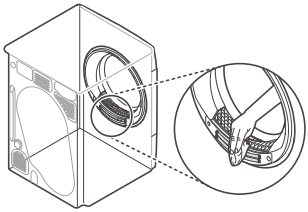

⚠ CAUTION

- Do not wipe the moisture sensor with abrasive materials. Always clean the sensor with a rough sponge.

The appliance is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If the appliance does not function properly or does not function at all, check the following before you call for service:

Diagnosing Problems

Symptoms	Reason	Solution
Appliance will not turn on.	**Power cord is not properly plugged in.**	• Make sure that the plug is securely plugged into a grounded outlet matching the appliance's rating plate.
	House fuse is blown, circuit breaker has tripped, or power outage has occurred.	• Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician.
Appliance does not heat.	**House fuse is blown, circuit breaker has tripped, or power outage has occurred.**	• Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician.
Clothes take too long to dry.	**Load is not properly sorted.**	• Separate heavy items from lightweight items. Larger and heavier items take longer to dry. Light items in a load with heavy items can fool the sensor because the light items dry faster.
	Large load of heavy fabrics.	• Heavy fabrics take longer to dry because they tend to retain more moisture. To help reduce and maintain more consistent drying times for large and heavy fabrics, separate these items into smaller loads of a consistent size.
	Appliance controls are not set properly.	• Use the appropriate control settings for the type of load you are drying. Some loads may require an adjustment of the dry level setting for proper drying.
	Lint filter needs to be cleaned.	• Remove the lint from the lint filter before every cycle. With the lint removed, hold the lint filter up to a light to see if it is dirty or clogged. With some loads that produce high amounts of lint, such as new bath towels, it may be necessary to pause the cycle and clean the filter during the cycle.

Symptoms	Reason	Solution
Clothes take too long to dry.	**House fuse is blown, circuit breaker has tripped, or power outage has occurred.**	• Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician.
	Appliance is overloaded.	• Divide extra large loads into smaller loads for better drying performance and efficiency.
	Appliance is underloaded.	• If you are drying a very small load, add a few extra items to ensure proper tumbling action. If the load is very small and you are using Sensor Dry programmes, the electronic control cannot properly sense the dryness of the load and may shut off too soon. Use Timed Drying programmes or add some extra wet clothes to the load.
Drying time is not consistent.	**Heat settings, load size, or dampness of clothing is not consistent.**	• The drying time for a load will vary depending on the type of heat used (electric), the size of the load, the type of fabrics, the wetness of the clothes, and lint filter. Even an unbalanced load in the appliance can cause poor spinning, resulting in wetter clothes which will take longer to dry.
Greasy or dirty spots are left on clothes.	**Fabric softener is used incorrectly.**	• When washing laundry that is to be dried in the appliance, use the correct amount of fabric softener as recommended by the manufacturer of the fabric softener.
	Clean and dirty clothes are being dried together.	• Use the appliance to dry only clean items. Soil from dirty clothes can transfer to the clean clothes in the same or later loads.
	Clothes were not properly cleaned or rinsed before being placed in the appliance.	• Stains on dried clothes could be stains that were not removed during the washing process. Make sure that clothes are being completely cleaned or rinsed according to the instructions for your washing machine and detergent. Some difficult soils may require pre-treating prior to washing.
Clothes are wrinkled.	**Clothes have dried too long (overdried).**	• Over drying a load of laundry can lead to wrinkled clothes. Try a shorter drying time.
	Clothes have been left in the appliance for too long after cycle ends.	• Use the Anti crease option.
Clothes are shrinking.	**Garment care instructions are not being followed.**	• To avoid shrinking your clothes, always consult and follow fabric care instructions. Some fabrics will naturally shrink when washed. Other fabrics can be washed but will shrink when dried in the appliance. Use a low or no heat setting.

Symptoms	Reason	Solution
Lint is left on clothes.	**Lint filter has not been cleaned properly.**	• Remove the lint from the lint filter before every cycle. With the lint removed, hold the lint filter up to a light to see if it is dirty or clogged. If it looks dirty, follow the cleaning instructions. With some loads that produce high amounts of lint, it may be necessary to clean the lint filter during the cycle.
	Laundry has not been sorted properly.	• Some fabrics are lint producers (i.e., a fuzzy white cotton towel) and should be dried separately from clothes that are lint trappers (i.e., a pair of black linen pants).
	Appliance is overloaded.	• Divide extra large loads into smaller loads for drying.
	Tissue, paper, etc., has been left in pockets.	• Check pockets thoroughly before drying clothes.
Excess static in clothes after drying.	**Clothes have dried for too long (overdried).**	• Overdrying a load of laundry can cause a buildup of static electricity. Adjust settings and use a shorter drying time, or use Sensor Dry programmes.
	Drying synthetics, permanent press, or synthetic blends.	• These fabrics are naturally more prone to static buildup. Try using fabric softener, or use shorter Timed Drying time settings.
Water leaks.	**The water container hose or the drain hose is not connected correctly.**	• Connect the water container hose or the drain hose correctly.
	The door is closed while laundry or foreign substance is caught in the door.	• Check if laundry or foreign substance is caught in the door before using the appliance. If water leaks continuously, contact the LG Electronics Customer Information Centre.
Clothes have damp spots after a Sensor Dry programme.	**Very large load or very small load. Single large item such as a blanket or comforter.**	• If items are too tightly packed or too sparse the sensor may have trouble reading the dryness level of the load. Use a Timed Drying programme for very small loads. • Large, bulky items such as blankets or comforters can sometimes wrap themselves into a tight ball of fabric. The outside layers will dry and register on the sensors, while the inner core remains damp. When drying a single bulky item, it may help to pause the cycle once or twice and rearrange the item to unwrap and expose any damp areas. • To dry a few remaining damp items from a very large load or a few damp spots on a large item after a Sensor Dry programme has completed, empty the lint trap, then set a Timed Drying programme to finish drying the item(s).


Symptoms	Reason	Solution
Your home appliance and smartphone is not connected to the Wi-Fi network.	**The password for the Wi-Fi that you are trying to connect to is incorrect.**	• Find the Wi-Fi network connected to your smartphone and remove it, then register your appliance on LG SmartThinQ.
	Mobile data for your smartphone is turned on.	• Turn off the Mobile data of your smartphone and register the appliance using the Wi-Fi network.
	The wireless network name (SSID) is set incorrectly.	• The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
	The router frequency is not 2.4 GHz.	• Only a 2.4 GHz router frequency is supported. Set the wireless router to 2.4 GHz and connect the appliance to the wireless router. To check the router frequency, check with your Internet service provider or the router manufacturer.
	The distance between the appliance and the router is too far.	• If the distance between the appliance and the router is too far, the signal may be weak and the connection may not be configured correctly. Move the location of the router so that it is closer to the appliance.

Error Codes

Symptoms	Reason	Solution
dE	**The door has been opened while the appliance is in operation or the appliance is being operated without the door being closed properly.**	• Close the door completely. • If dE is not released, call for service.
dE4	**Door switch detection is not working properly.**	• Unplug the power plug and call for service.
tE1	**Temperature Sensor has malfunctioned.**	• Unplug the power plug and call for service.
tE2		
F1	**The temperature inside the drum has risen suddenly.**	• Unplug the power plug and call for service.
LE1	**The motor has stopped suddenly.**	• Check if the amount of laundry exceeds the maximum load. • Unplug the power plug and call for service.
LE2	**The compressor has stopped suddenly.**	• Unplug the power plug and call for service.
AE		
OE	**The drain pump motor has malfunctioned.**	• Unplug the power plug and call for service.
	The surrounding temperature for installation is below zero.	• The recommended surrounding temperature for installation is 5 - 35 °C.

THIS LIMITED WARRANTY DOES NOT COVER:

- Service trips to deliver, pick up, or install or repair the product; instruction to the customer on operation of the product; repair or replacement of fuses or correction of wiring or plumbing, or correction of unauthorized repairs/installation.
- Failure of the product to perform during power failures and interruptions or inadequate electrical service.
- Damage caused by leaky or broken water pipes, frozen water pipes, restricted drain lines, inadequate or interrupted water supply or inadequate supply of air.
- Damage resulting from operating the Product in a corrosive atmosphere or contrary to the instructions outlined in the Product's owner's manual.
- Damage to the Product caused by accidents, pests and vermin, lightning, wind, fire, floods, or acts of God.
- Damage or failure caused by unauthorized modification or alteration, or if it is used for other than the intended purpose, or any water leakage where the product was not properly installed.
- Damage or failure caused by incorrect electrical current, voltage, or plumbing codes, commercial or industrial use, or use of accessories, components, or consumable cleaning products that are not approved by LG.
- Damage caused by transportation and handling, including scratches, dents, chips, and/or other damage to the finish of your product, unless such damage results from defects in materials or workmanship.
- Damage or missing items to any display, open box, discounted, or refurbished Product.
- Products with original serial numbers that have been removed, altered, or cannot be readily determined. Model and Serial numbers, along with original retail sales receipt, are required for warranty validation.
- Increases in utility costs and additional utility expenses.
- Repairs when your Product is used in other than normal and usual household use or contrary to the instructions outlined in the Product's owner's manual.
- Costs associated with removal of your Product from your home for repairs.
- The removal and reinstallation of the Product if it is installed in an inaccessible location or is not installed in accordance with published installation instructions, including LG's owner's and installation manuals.
- Damage resulting from misuse, abuse, improper installation, repair, or maintenance. Improper repair includes use of parts not approved or specified by LG.
- Noise or vibration that is considered normal, for example, water drain sound, spin sound or warning beeps.

Filter is clogged. – Not heating, long dry time		Clean the lint filter.
Improperly connected power cord or electrical outlet issue. – No power – Not heating		Reconnect power cord, replace house fuse or reset breaker. If outlet is issue, electrician may be required.

Memo

Memo


LG
Life's Good