
Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350 mm x 163 mm x 251 mm
Bus Power Supply (USB)	5 V ⎓ 500 mA
Amplifier (Total RMS output power)	720 W RMS

Design and specifications are subject to change without notice.

Replacement of battery

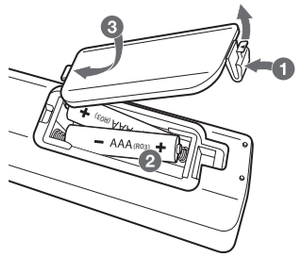

ENGLISH

SIMPLE MANUAL

Mini Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
CJ45

This product has no disc drive.


COV32127031
2407_Rev01

www.lg.com

Copyright © 2026 LG Electronics Inc. All Rights Reserved.



Front Panel

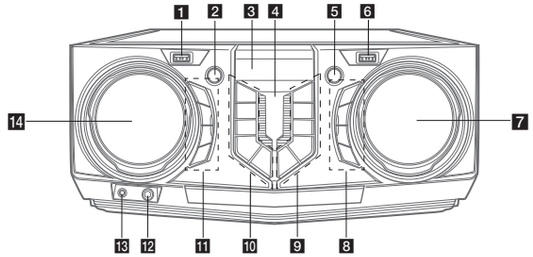

1 USB 1 Port
You can play sound files by connecting the USB device.

2 ⏻ (Standby)
Turns the power on or off.

3 Display window

4 (Remote sensor)

5 **WIRELESS LINK**
- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.

6 USB 2 Port
You can play sound files by connecting the USB device.

7 **VOLUME**
Adjust speaker volume.

8 **MIC** (Microphone) **+/-**
Adjust microphone volume.

VOICE CANCELLER
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.

ECHO
Selects ECHO mode.

9 **F** (Function)
Selects the function and input source.

>II (Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.

>>I (Skip/Search)
- Skips forward.
- Searches for a section within a file.
- Selects the radio stations.

KEY CHANGER (# / ♭)
Changes the key to suit your vocal range.

10 **USB REC / DEMO**
- Records to USB.
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.

□ (Stop)
Stops playback or cancels DELETE function.

I<< (Skip/Search)
- Skips backward.
- Searches for a section within a file.
- Selects the radio stations.

ⓘ (Information)
- Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees **Bluetooth** device name of the unit in BT READY.
- Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- When these units are successfully connected each other in WIRELESS PARTY LINK mode, each of connected device names appears in the each unit.

AUTO DJ
Selects the AUTO DJ mode.

11 **EQ**
Chooses sound impressions.

SPECIAL EQ / BASS BLAST
- Chooses special equalizer.
- Press and hold to select BASS effect directly.

SEARCH
Moves to folder or file in selection mode.


OK
Selects a folder when searching a file.

12 **MIC** (Microphone) jack

13 **PORT.** (Portable) **IN** jack

14 **SEARCH**
- Searches a folder or a file.
- Turns clockwise or counterclockwise to control the EQ, SPECIAL EQ mode.

Rear Panel

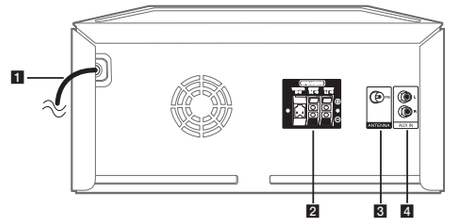


1 Power cord

2 **SPEAKERS** connector/terminals

3 **ANTENNA** (FM)

4 **AUX IN** (L/R)
Connect an auxiliary device.

Speaker Connection

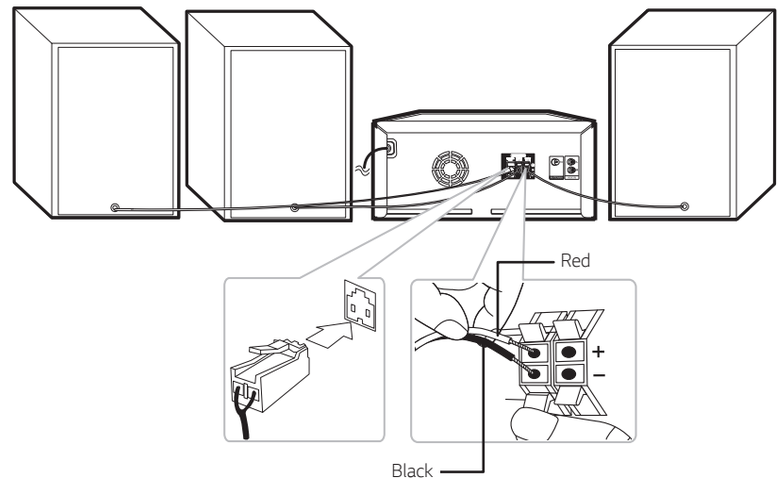

Controller App

Download the **LG XBOOM** App to your device. (Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. **http://www.lg.com**